









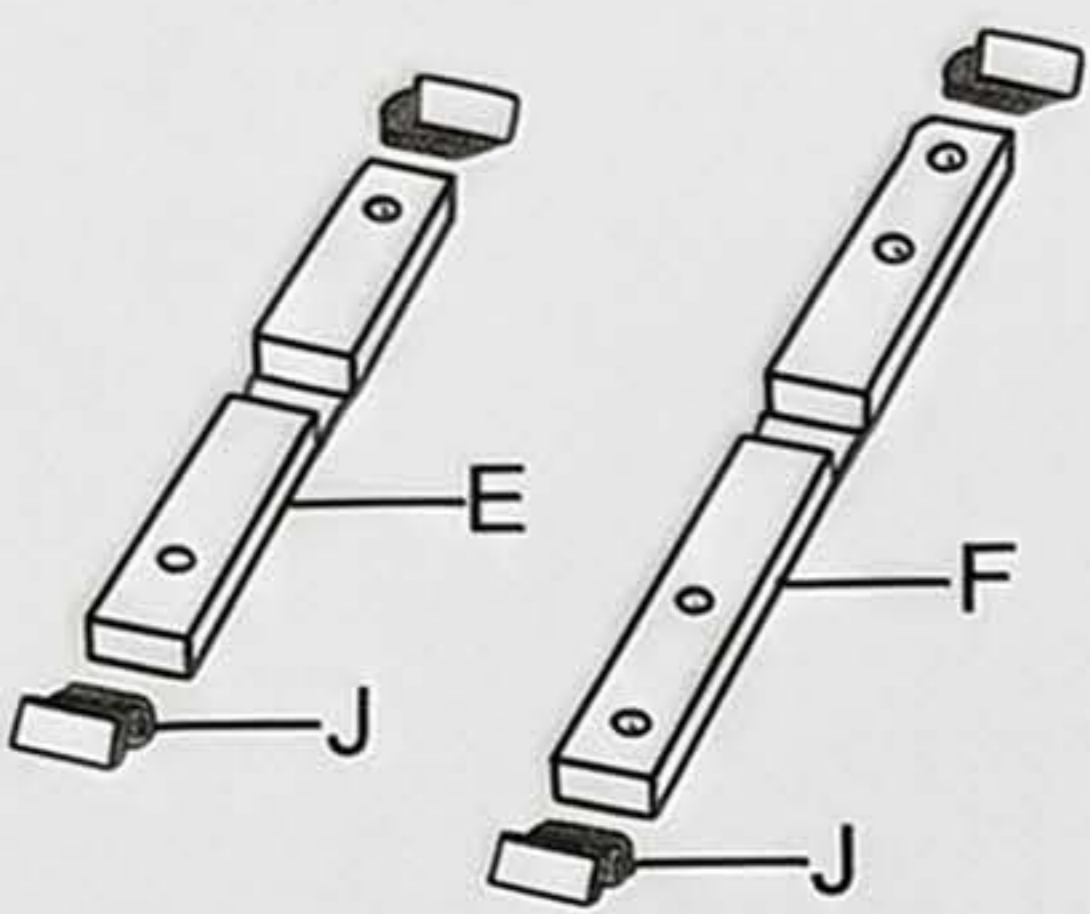
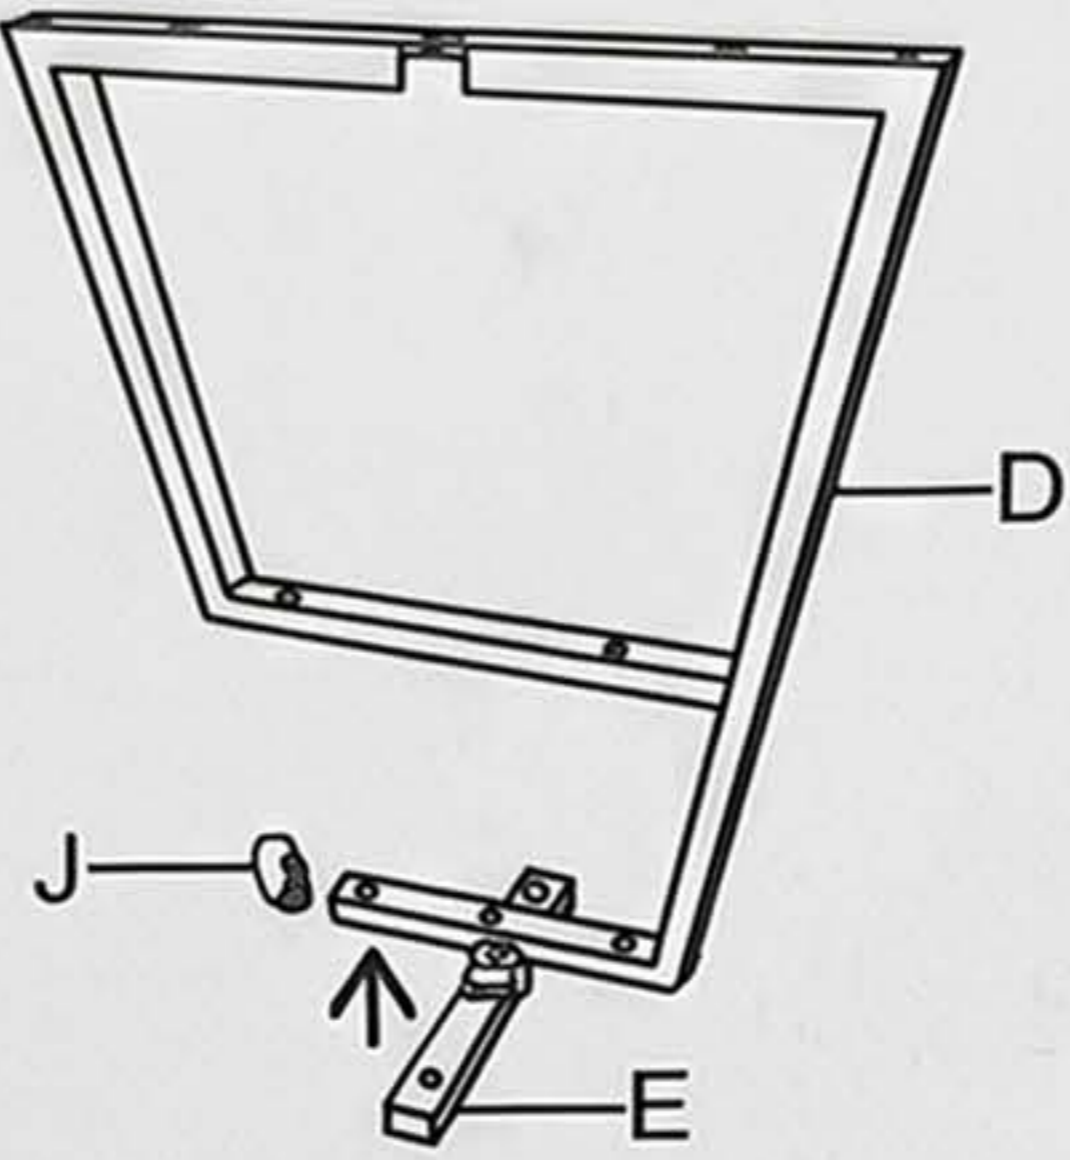
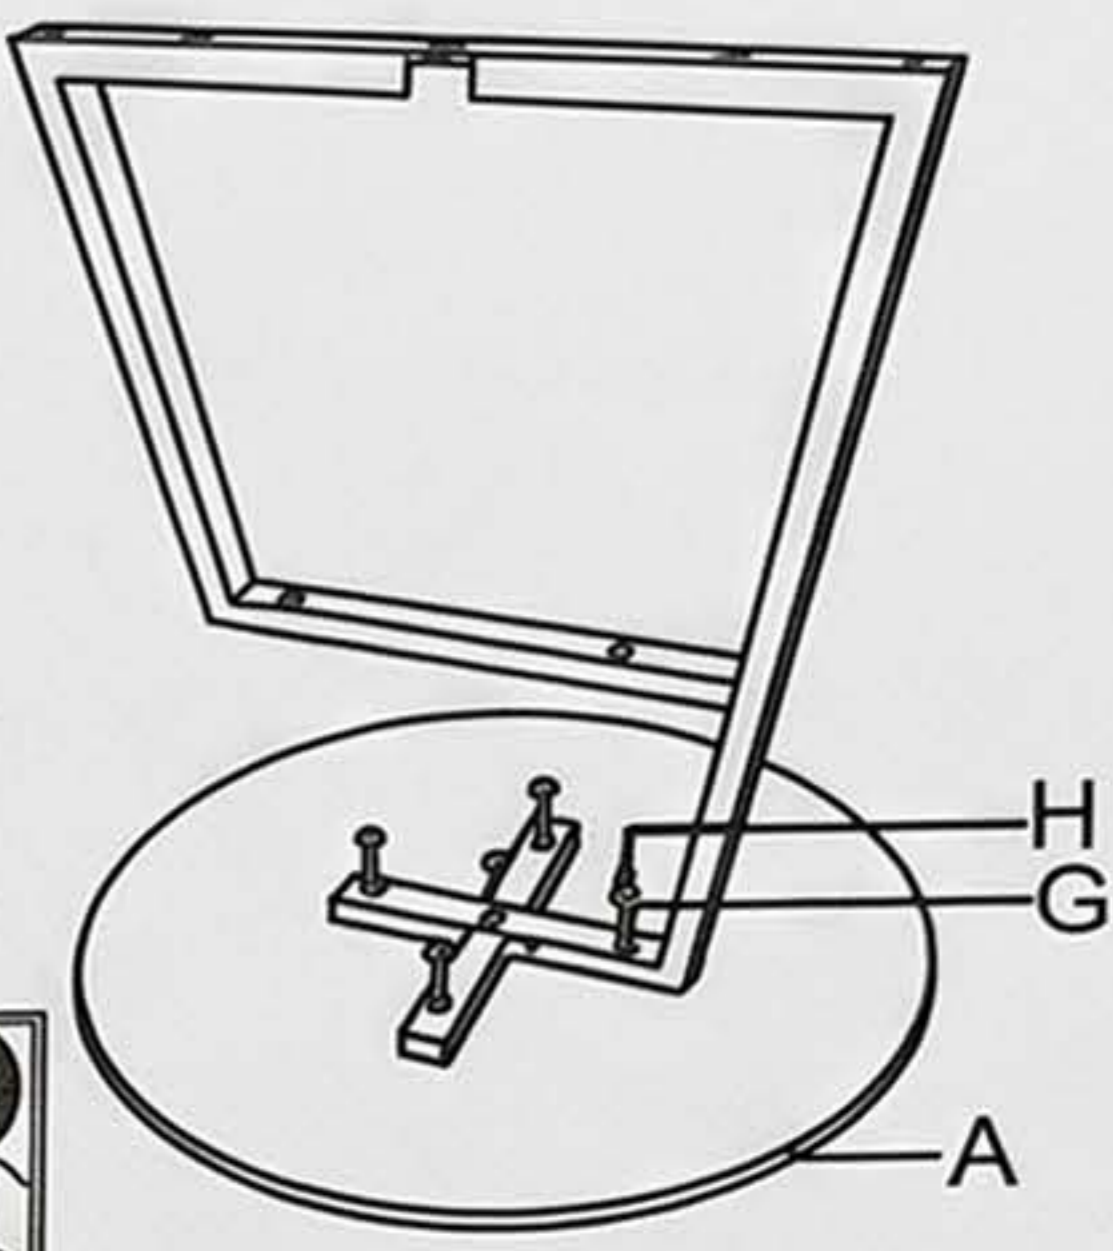
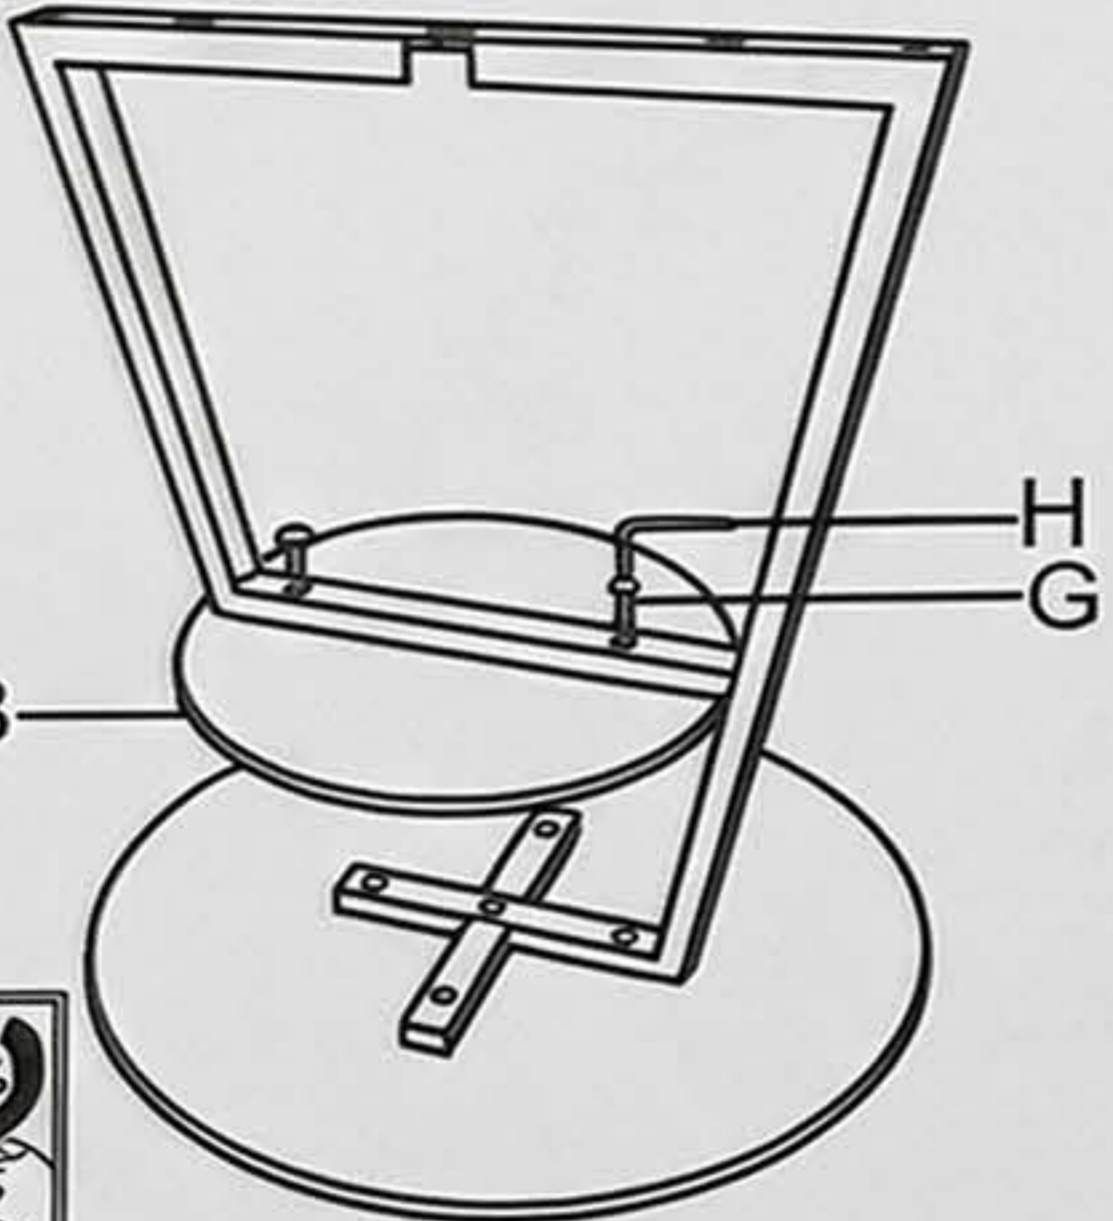
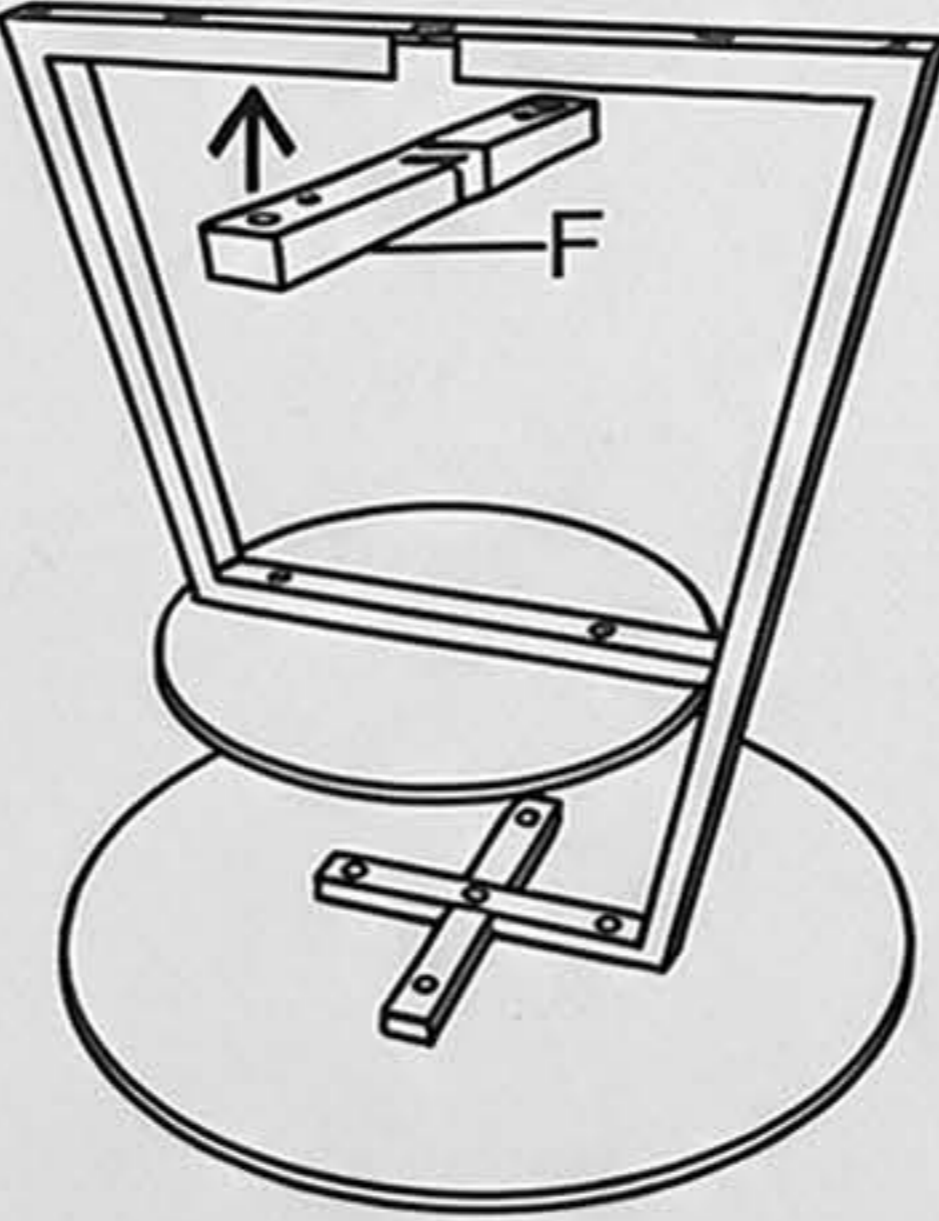

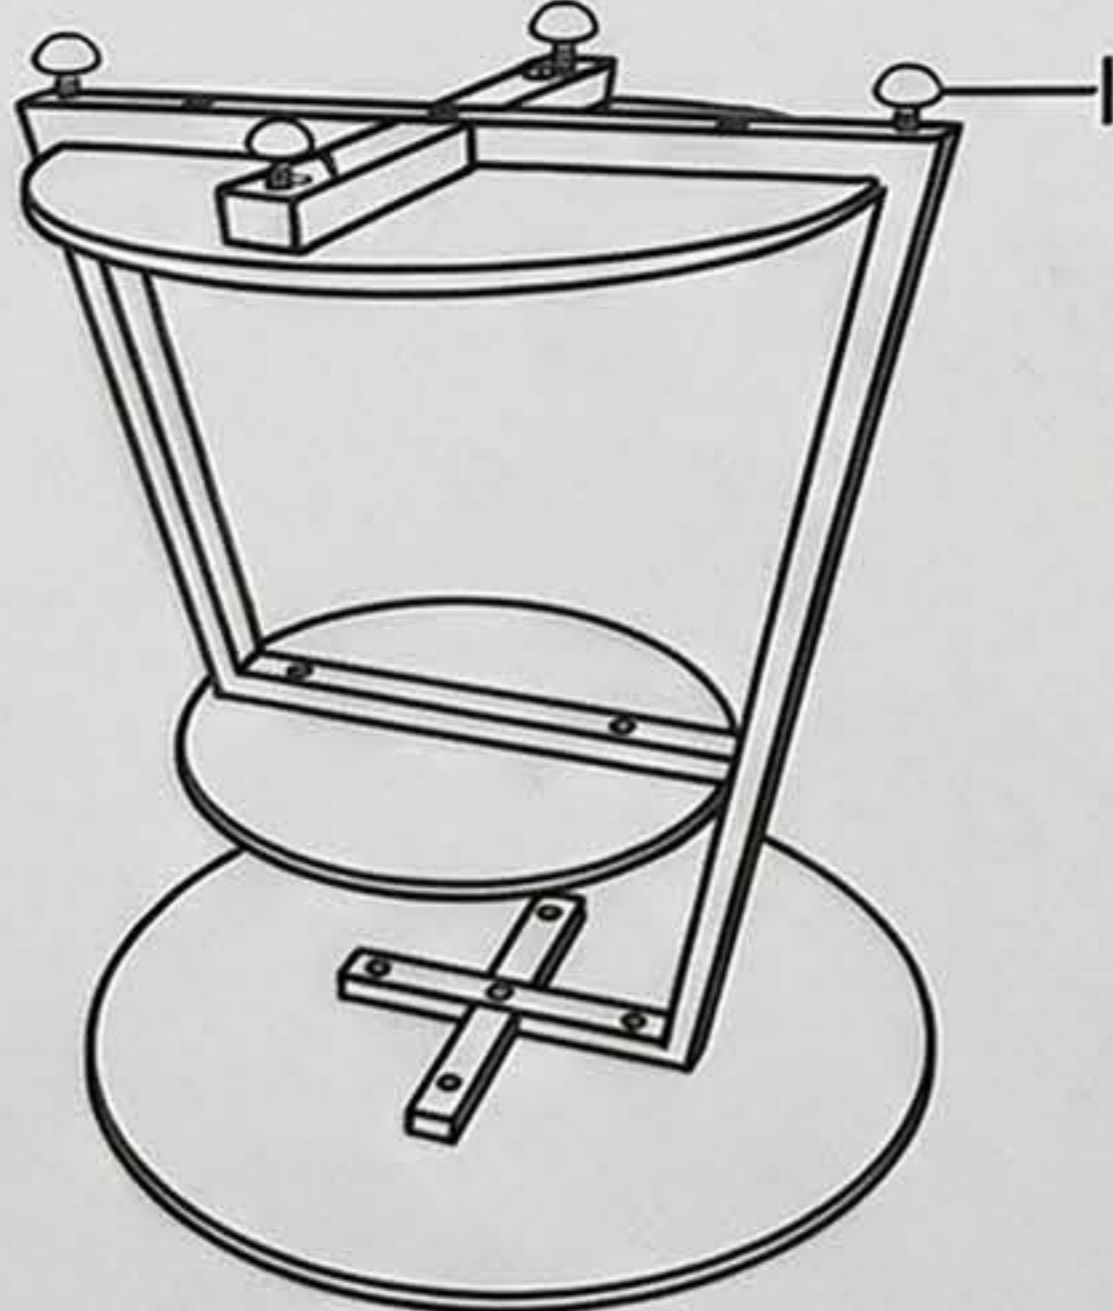


ST014 Installation Instruction

<p>Ax1</p> 	<p>Bx1</p> 	<p>Cx1</p> 	<p>Dx1</p> 	<p>Ex1</p> 	<p>Fx1</p> 
<p>Gx12</p> 	<p>Hx1</p> 	<p>Ix4</p> 	<p>Jx5</p> 		
<p>1.</p> 	<p>2.</p> 	<p>3.</p> 			
<p>4.</p> 	<p>5.</p> 	<p>6.</p> 			
<p>7.</p> 	<p>8.</p> 