
SOCE049-106CM Installation Instruction



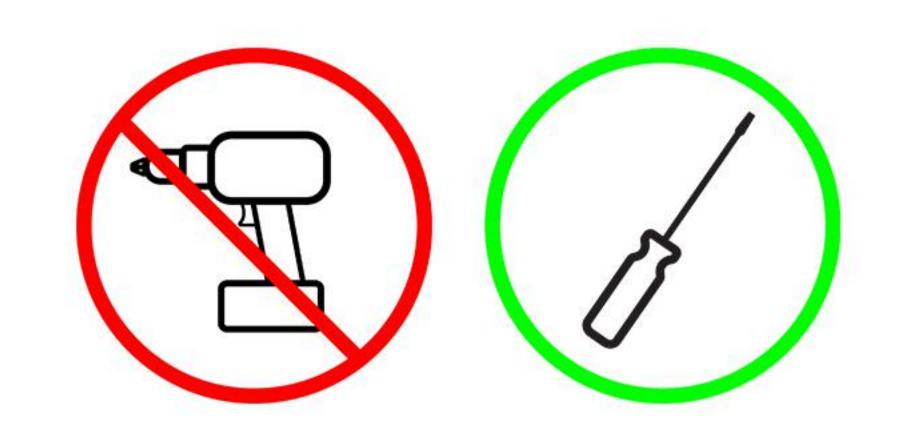

Please read this instruction manual carefully before installation and use.

Assembly notes:

- 1. First, make sure that all panels and parts are not damaged or missing.
- 2. During the installation process, be careful not to bump or scratch the panel surface.
- 3. Please read the instructions carefully before installation and install in order.
- 4. Please use each screw accessory strictly according to the instructions.
- 5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
- 6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:

- 1. After installation, check whether all parts are installed and the locks are locked.
- 2. Check the overall stability of the cabinet to see if there is any vibration.
- 3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

Please be sure to use a manual screwdriver and refrain from using an electric drill.


Hardware List													
Accessory Appearance	Code	Dimensions	Numbers	Unit	Accessory Appearance	Code	Dimensions	Numbers	Unit				
	A	ø15*12mm	63	Piece		J	ø7*38mm	3	Piece				
	В	ø7*40mm	59	Piece		K	ø8*40mm	36	Piece				
	С	Thickness 12mm	2	Piece		L	ø6*40mm	4	Piece				
	D	ø12*10mm	16	Piece	60.00	M	ø10*22mm	24	Piece				
	Ę	ø5*15mm	16	Piece	9	Ν	Height 120mm	4	Piece				
	F	ø3.5*12mm	24	Piece	9	0	120mm	1	Piece				
VITATE TRANSPORT	G	ø3.5*40mm	12	_Piece _		P	Different Large hinge angles	4	Piece				
	Н	ø3.5*14mm	36	Piece		Q	Different Medium	2	Piece				
		ø6*40mm	9	Piece	The state of the s	R	240mm Length	3	Pair				
						S	ø6*80mm	2	Piece				

BoardMaterial List


Code	Code Dimensions Nun		Code	Dimensions	Numbers	Code	Dimensions	Numbers
0	987.5*43*24	2	9	686*292.5*15	1	7	277.5*88*15	2
2	795*43*24	2	10	667. 5*281. 5*12	3	18	268.5*88*15	1
3	341*38*38	4	1	330.5*281.5*12	3	19	288.5*244*4	2
4	986. 5*296. 5*23	1	12	335. 5*545. 5*15	2	20	279.5*244*4	1
5	986. 5*296. 5*23	1	13	335. 5*534. 5*15	1	4	1014. 5*274. 5*12	3
6	794*296.5*23	2	4	335. 5*151. 5*15	2	22	1014. 5*292. 5*15	1
•	1014.5*61.5*15	1	1 5	335.5*140.5*15	1	23	122*276.5*15	1
8	122*292.5*15	1	16	250*88*15	6			

Detailed description of the main components, please read carefully

P / Q (Hinge) Installation Instructions Install the hinge with screw H

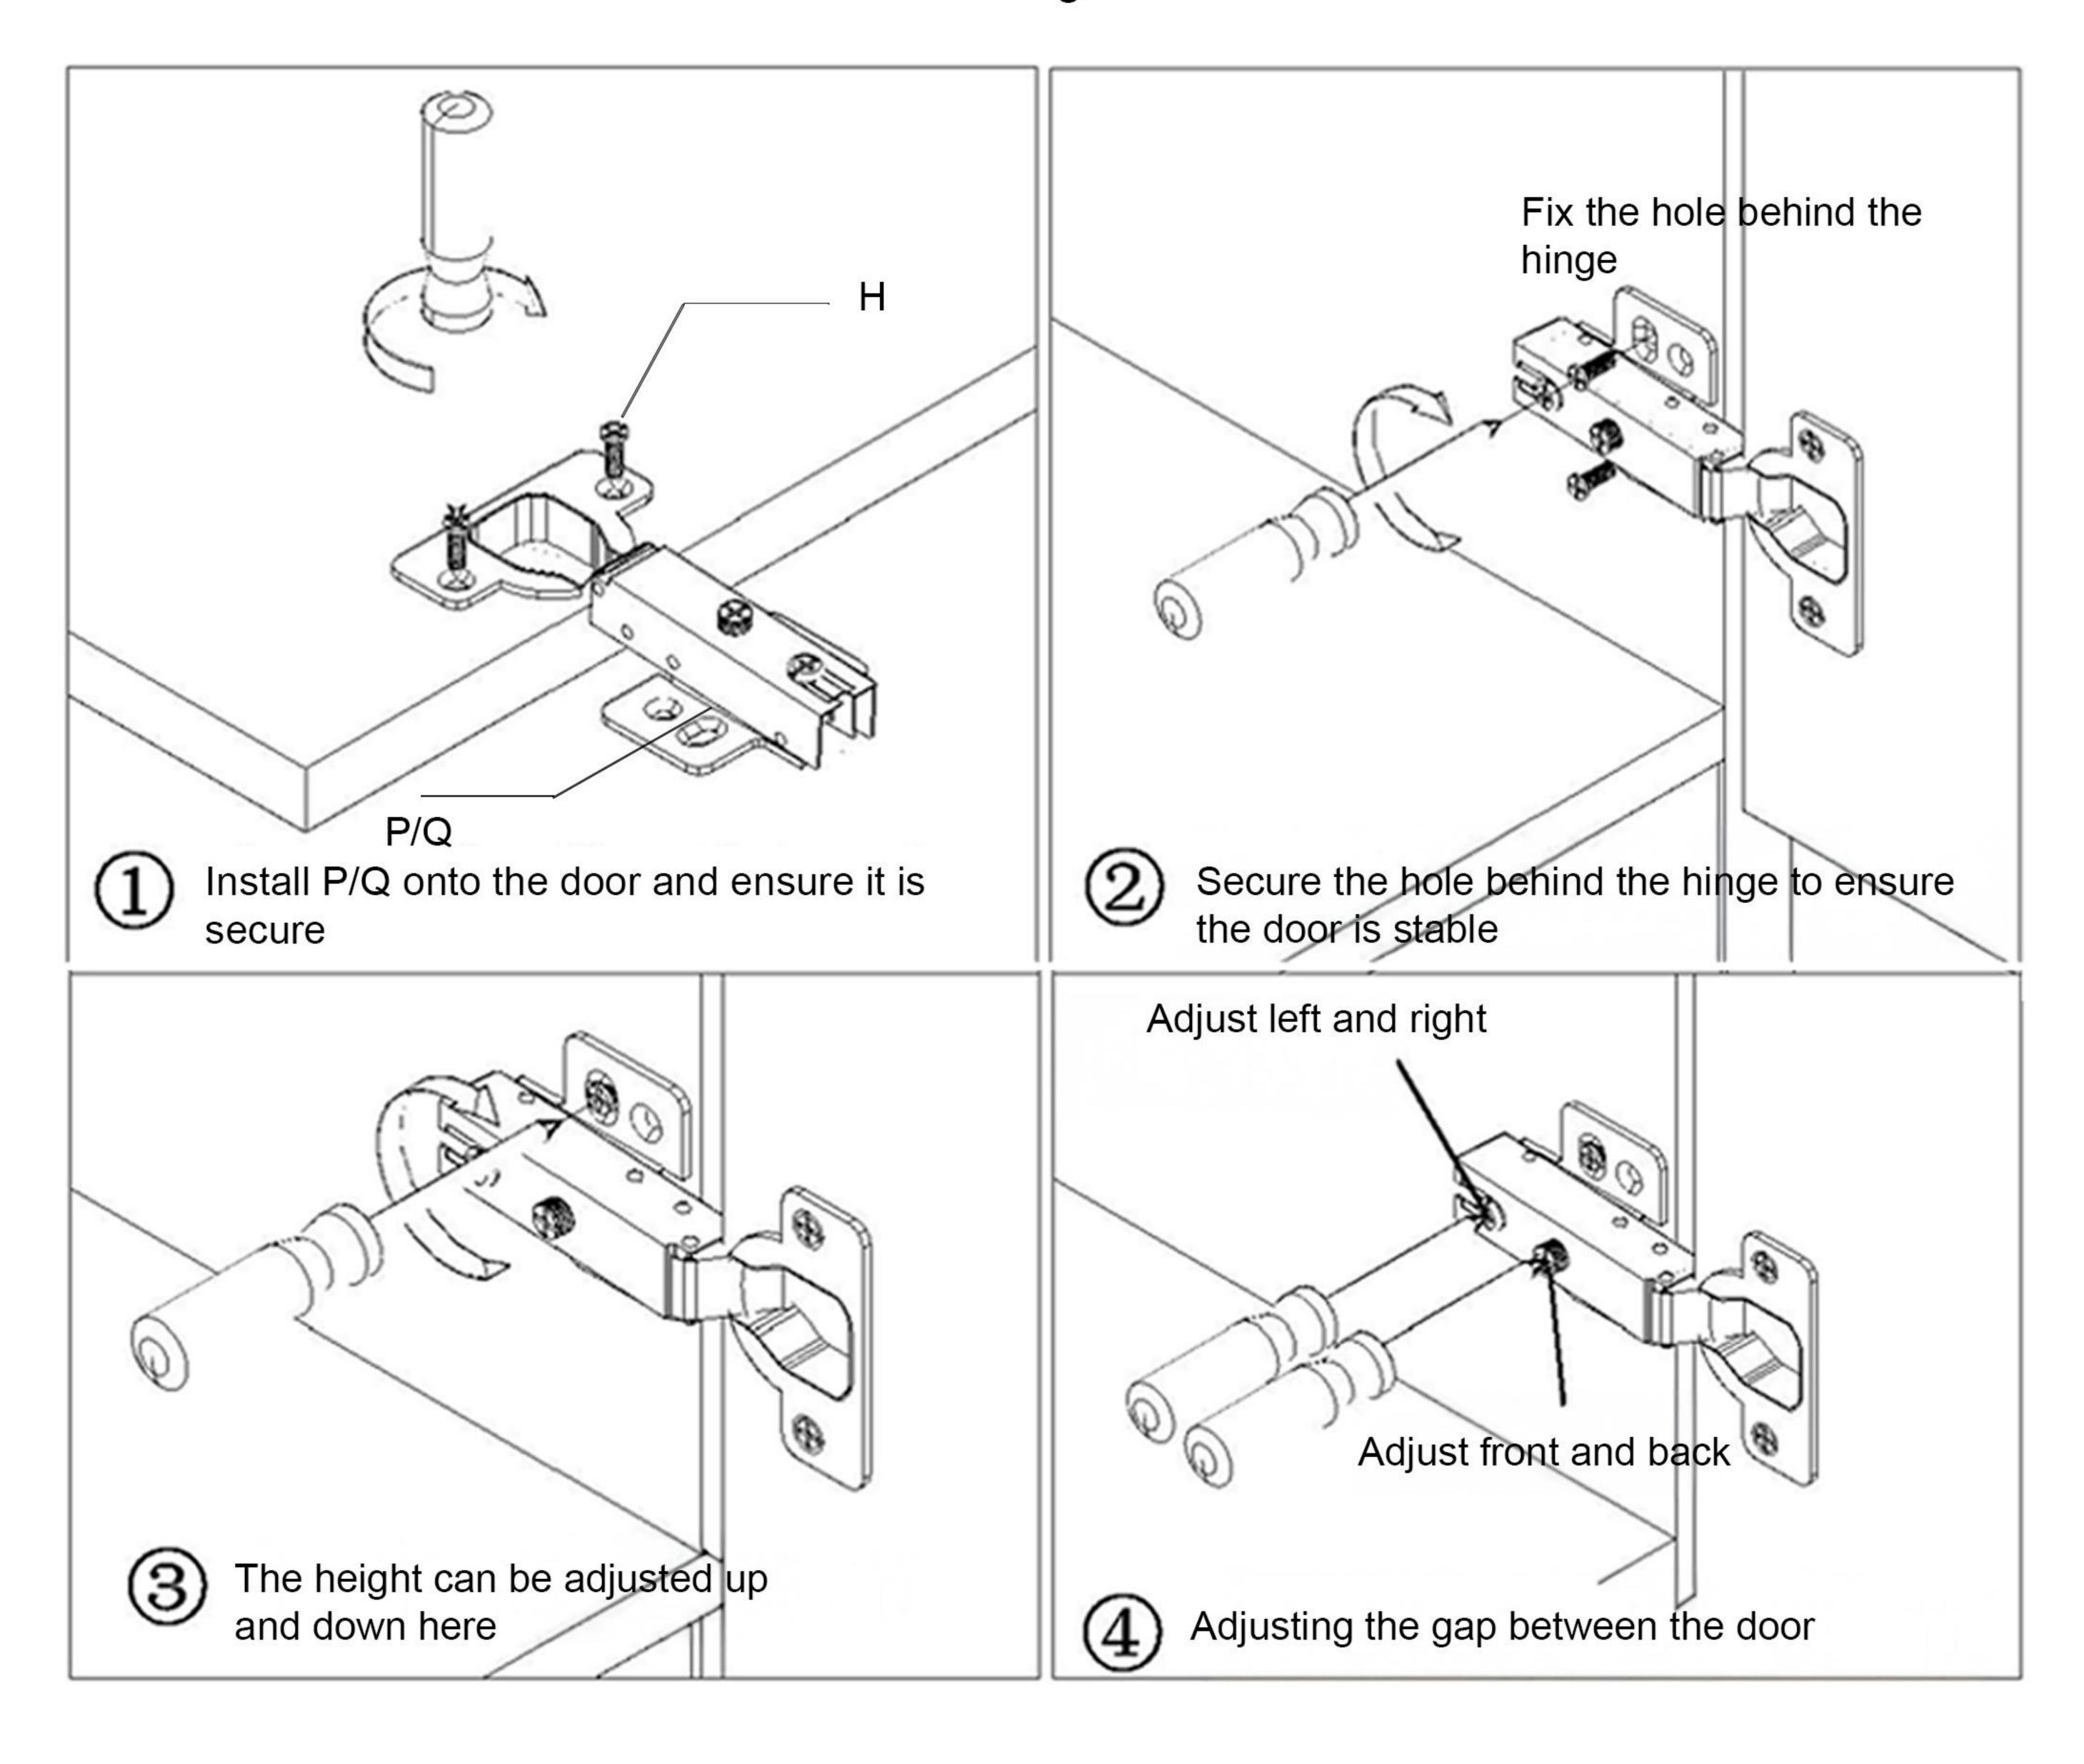


Installation Guide: Threaded Rod, Latch, Pre-drilled Hole A + B is large, D + E is small

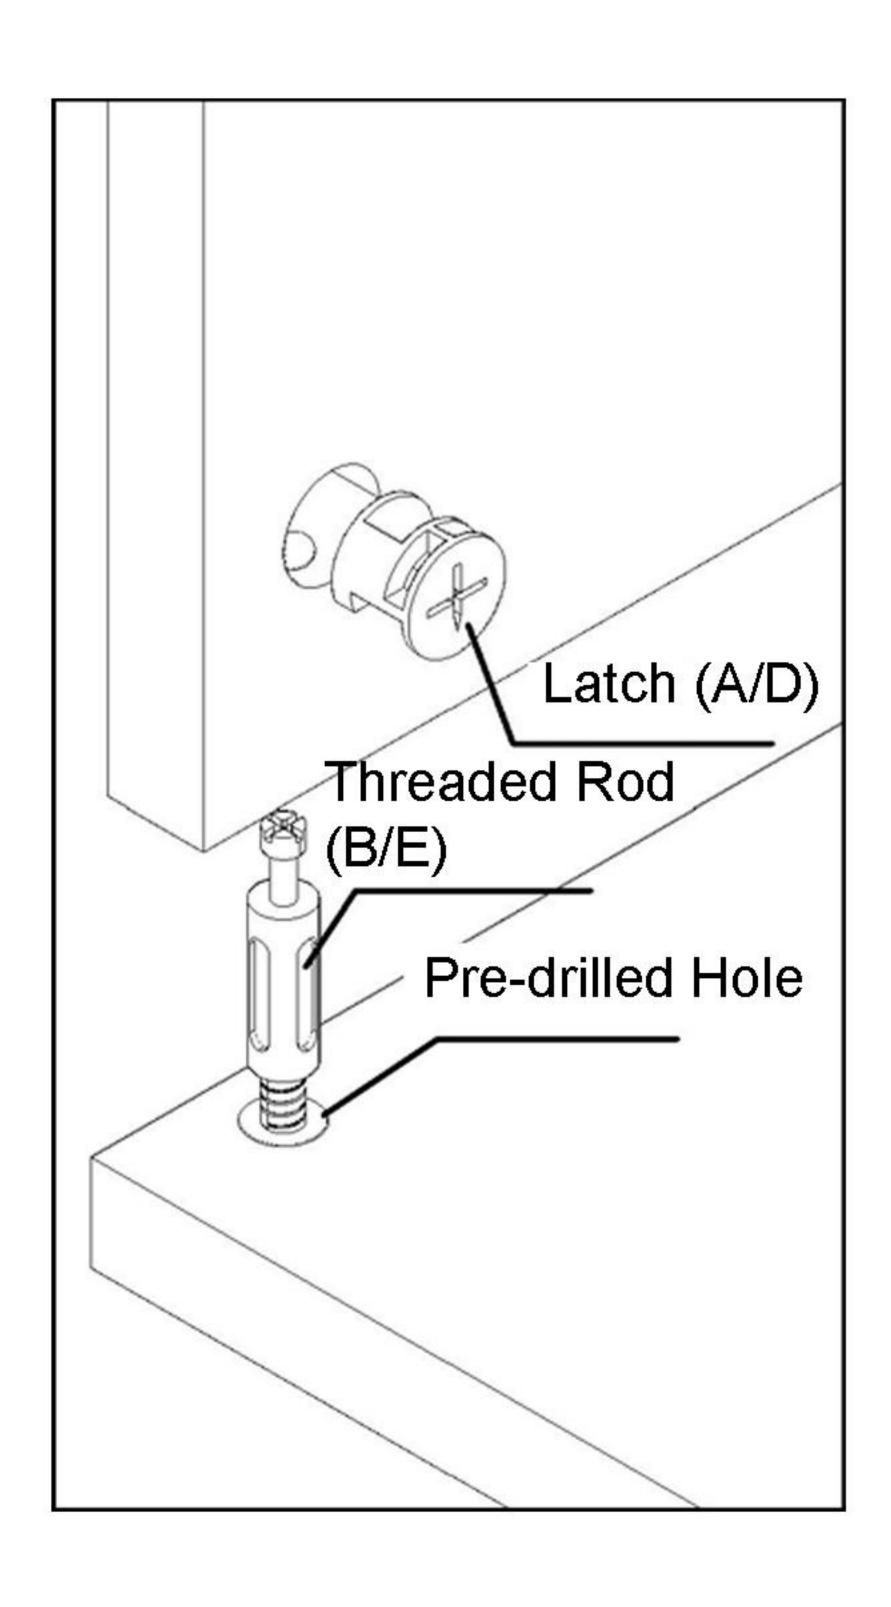



- 1. Screw the B/E (Threaded Rod) into the Pre-drilled Hole
- 2. Insert the installed A/D into the corresponding hole of the other piece. Press A/D (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
- 3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.


R (Sliding Rail) Installation Instructions

When installing **R**, use with screw **F**

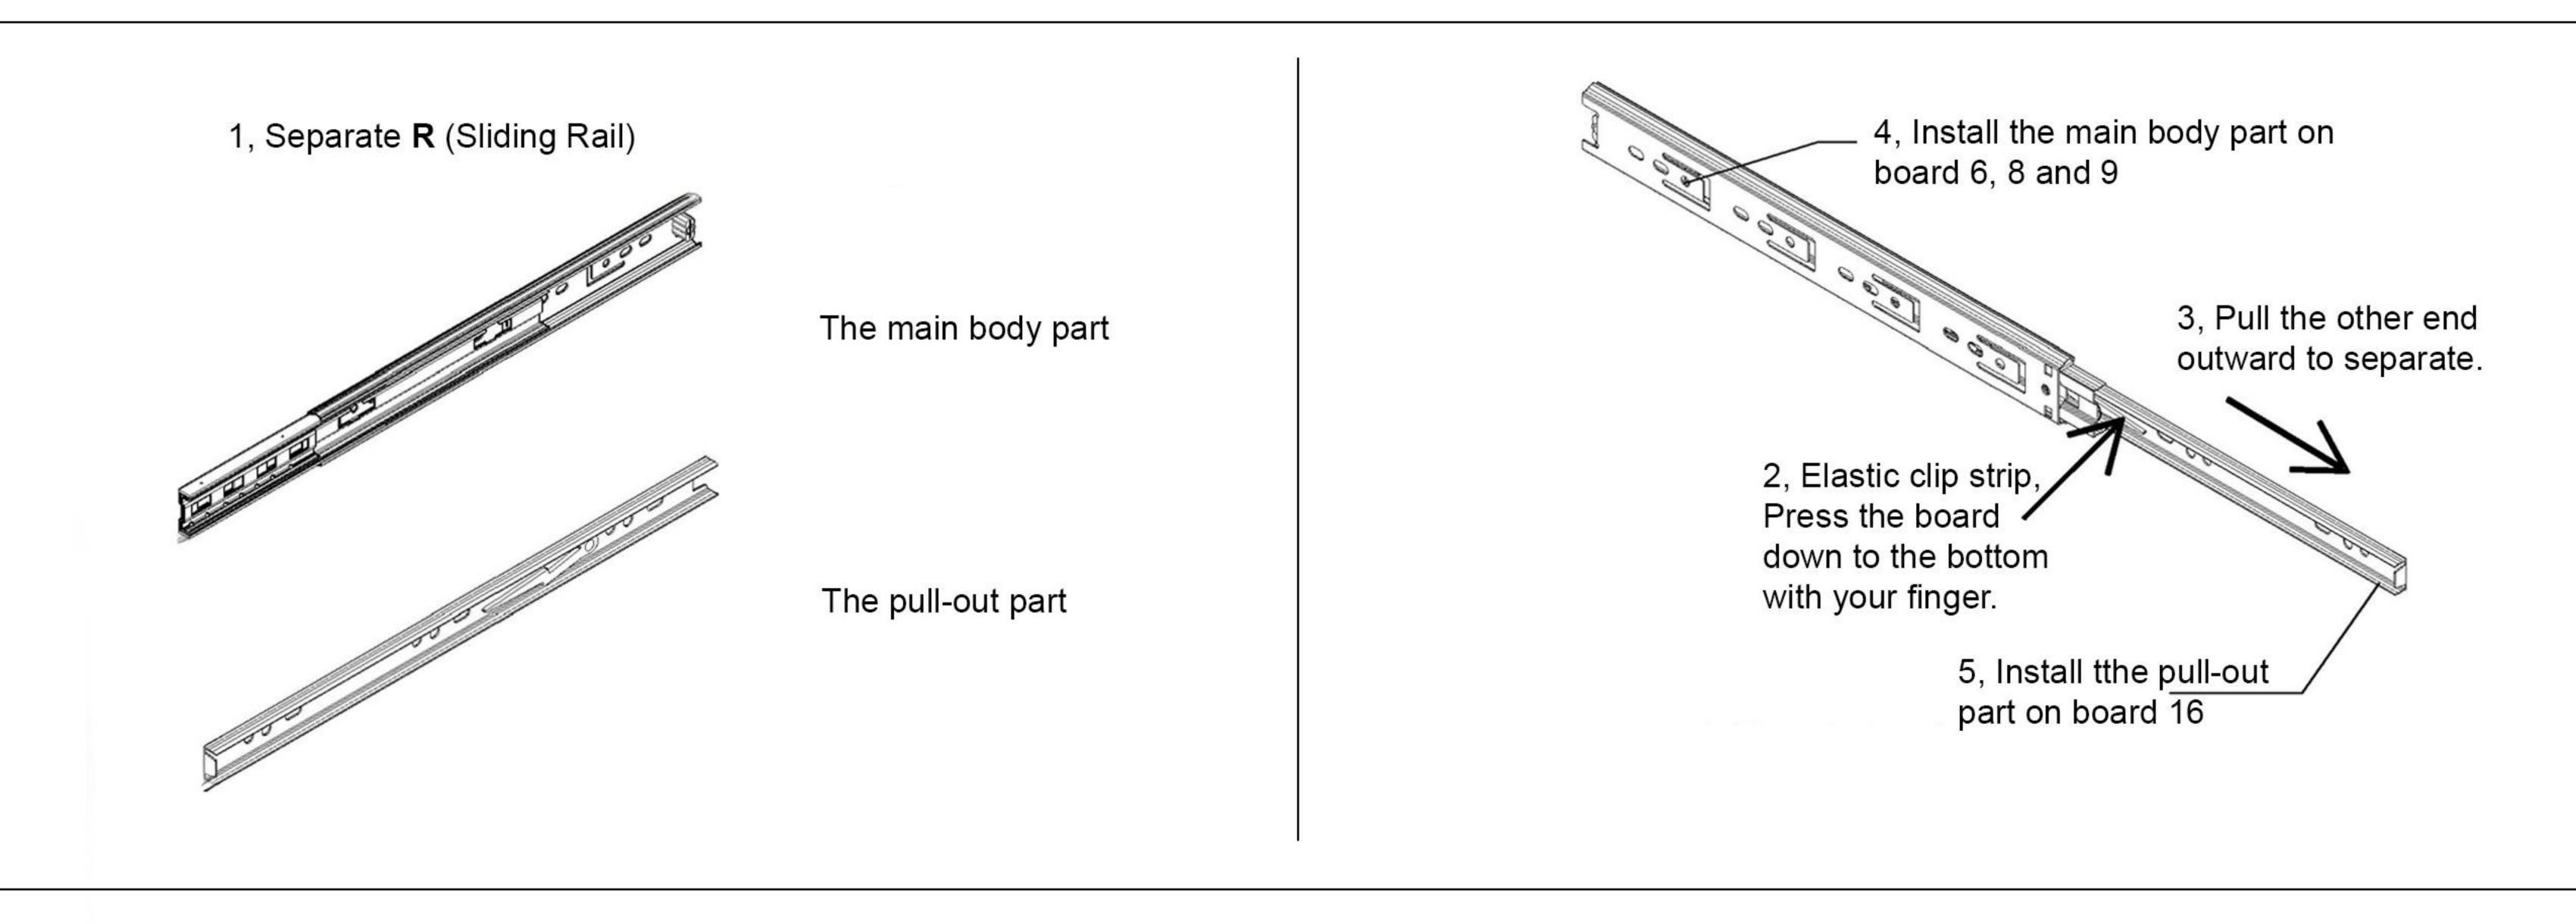

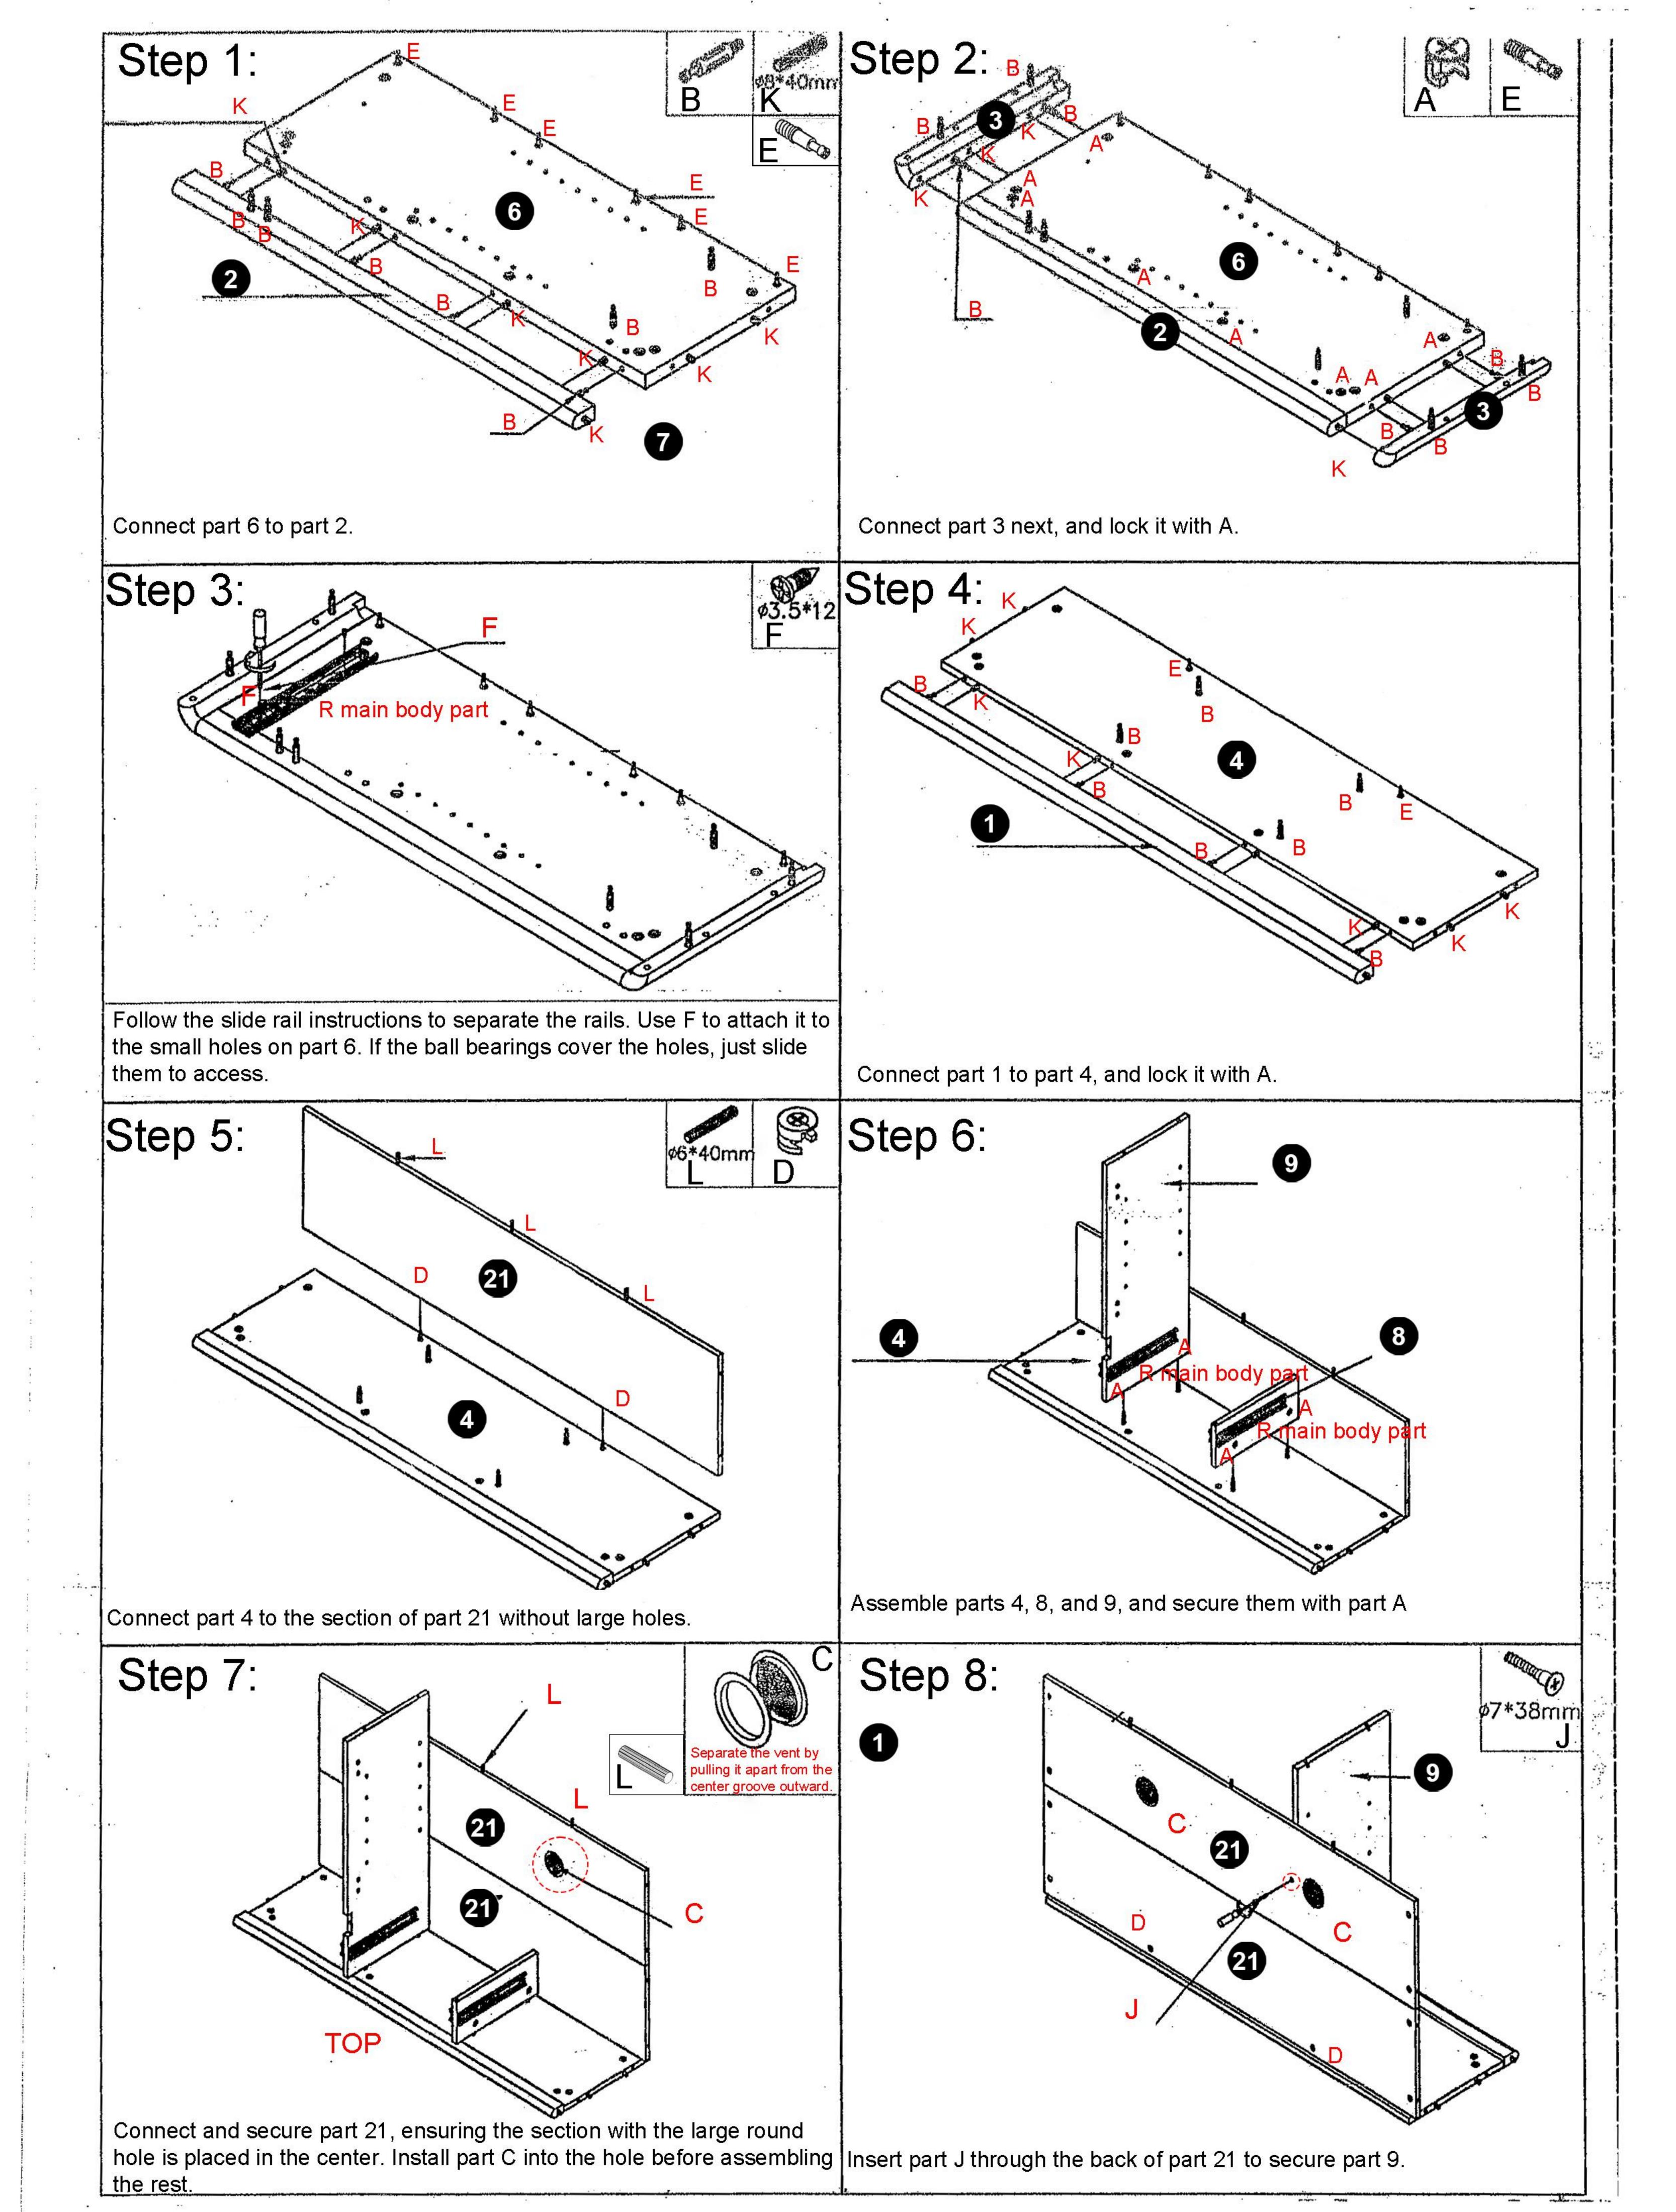

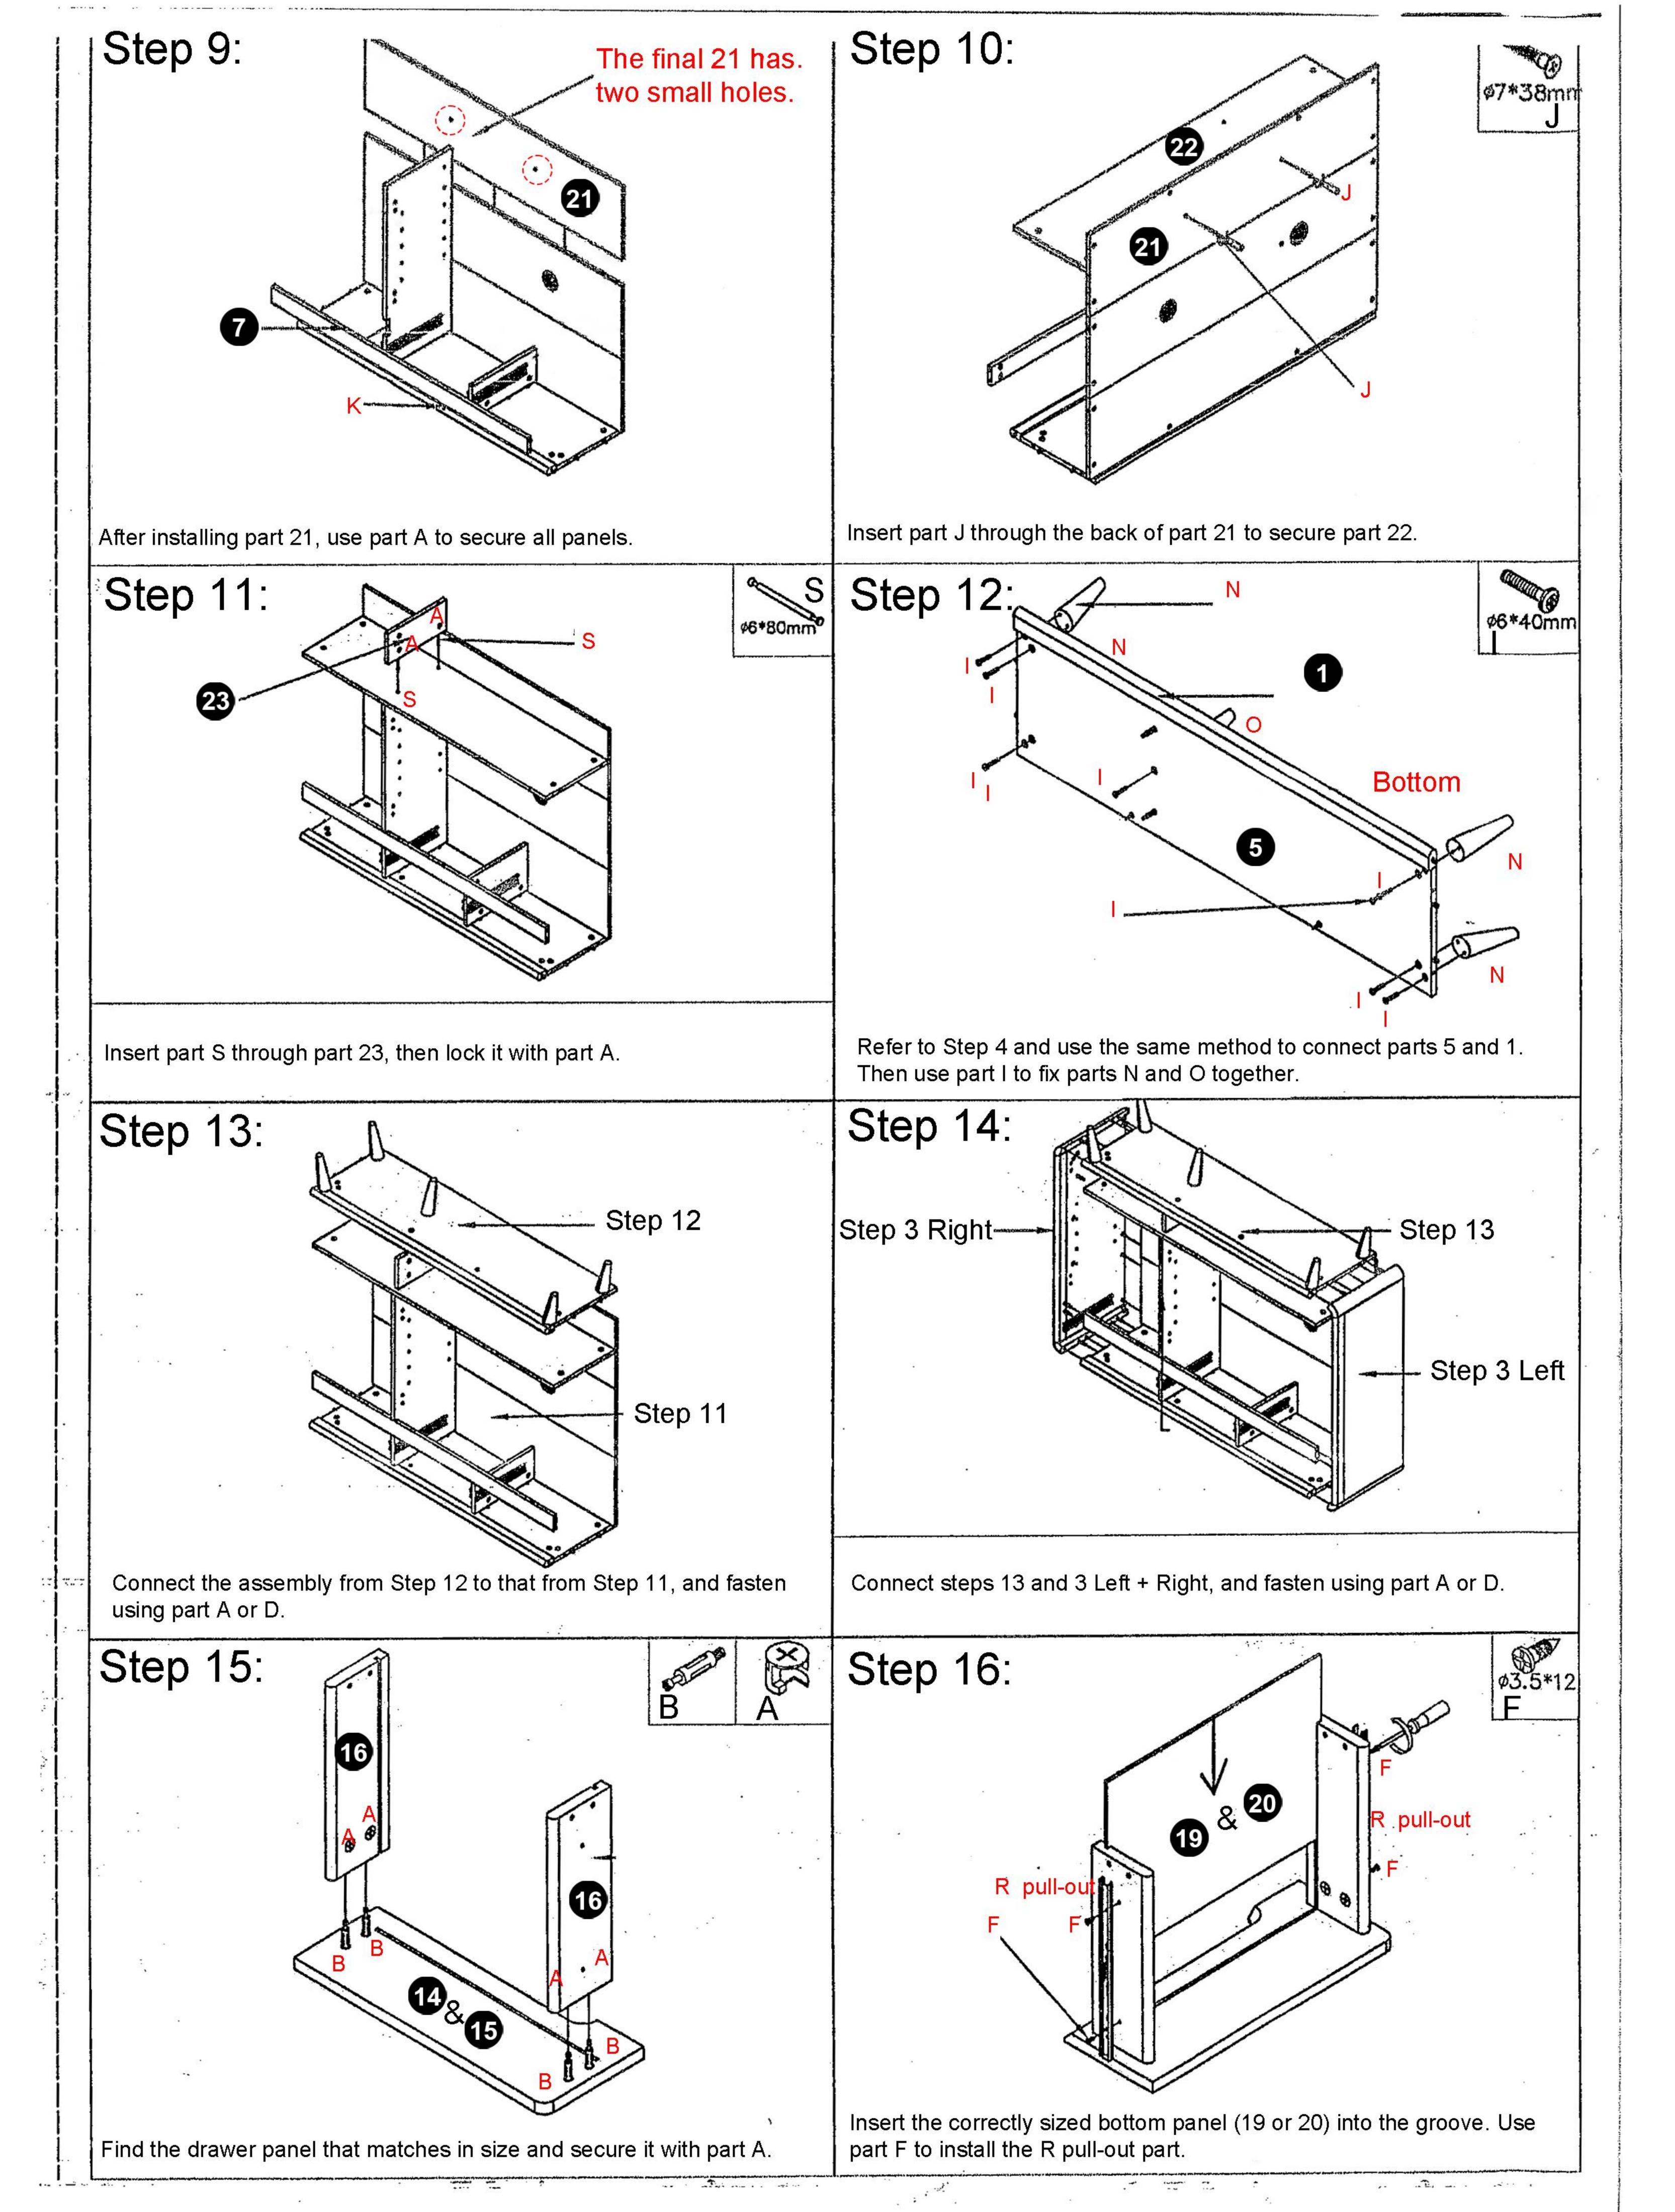

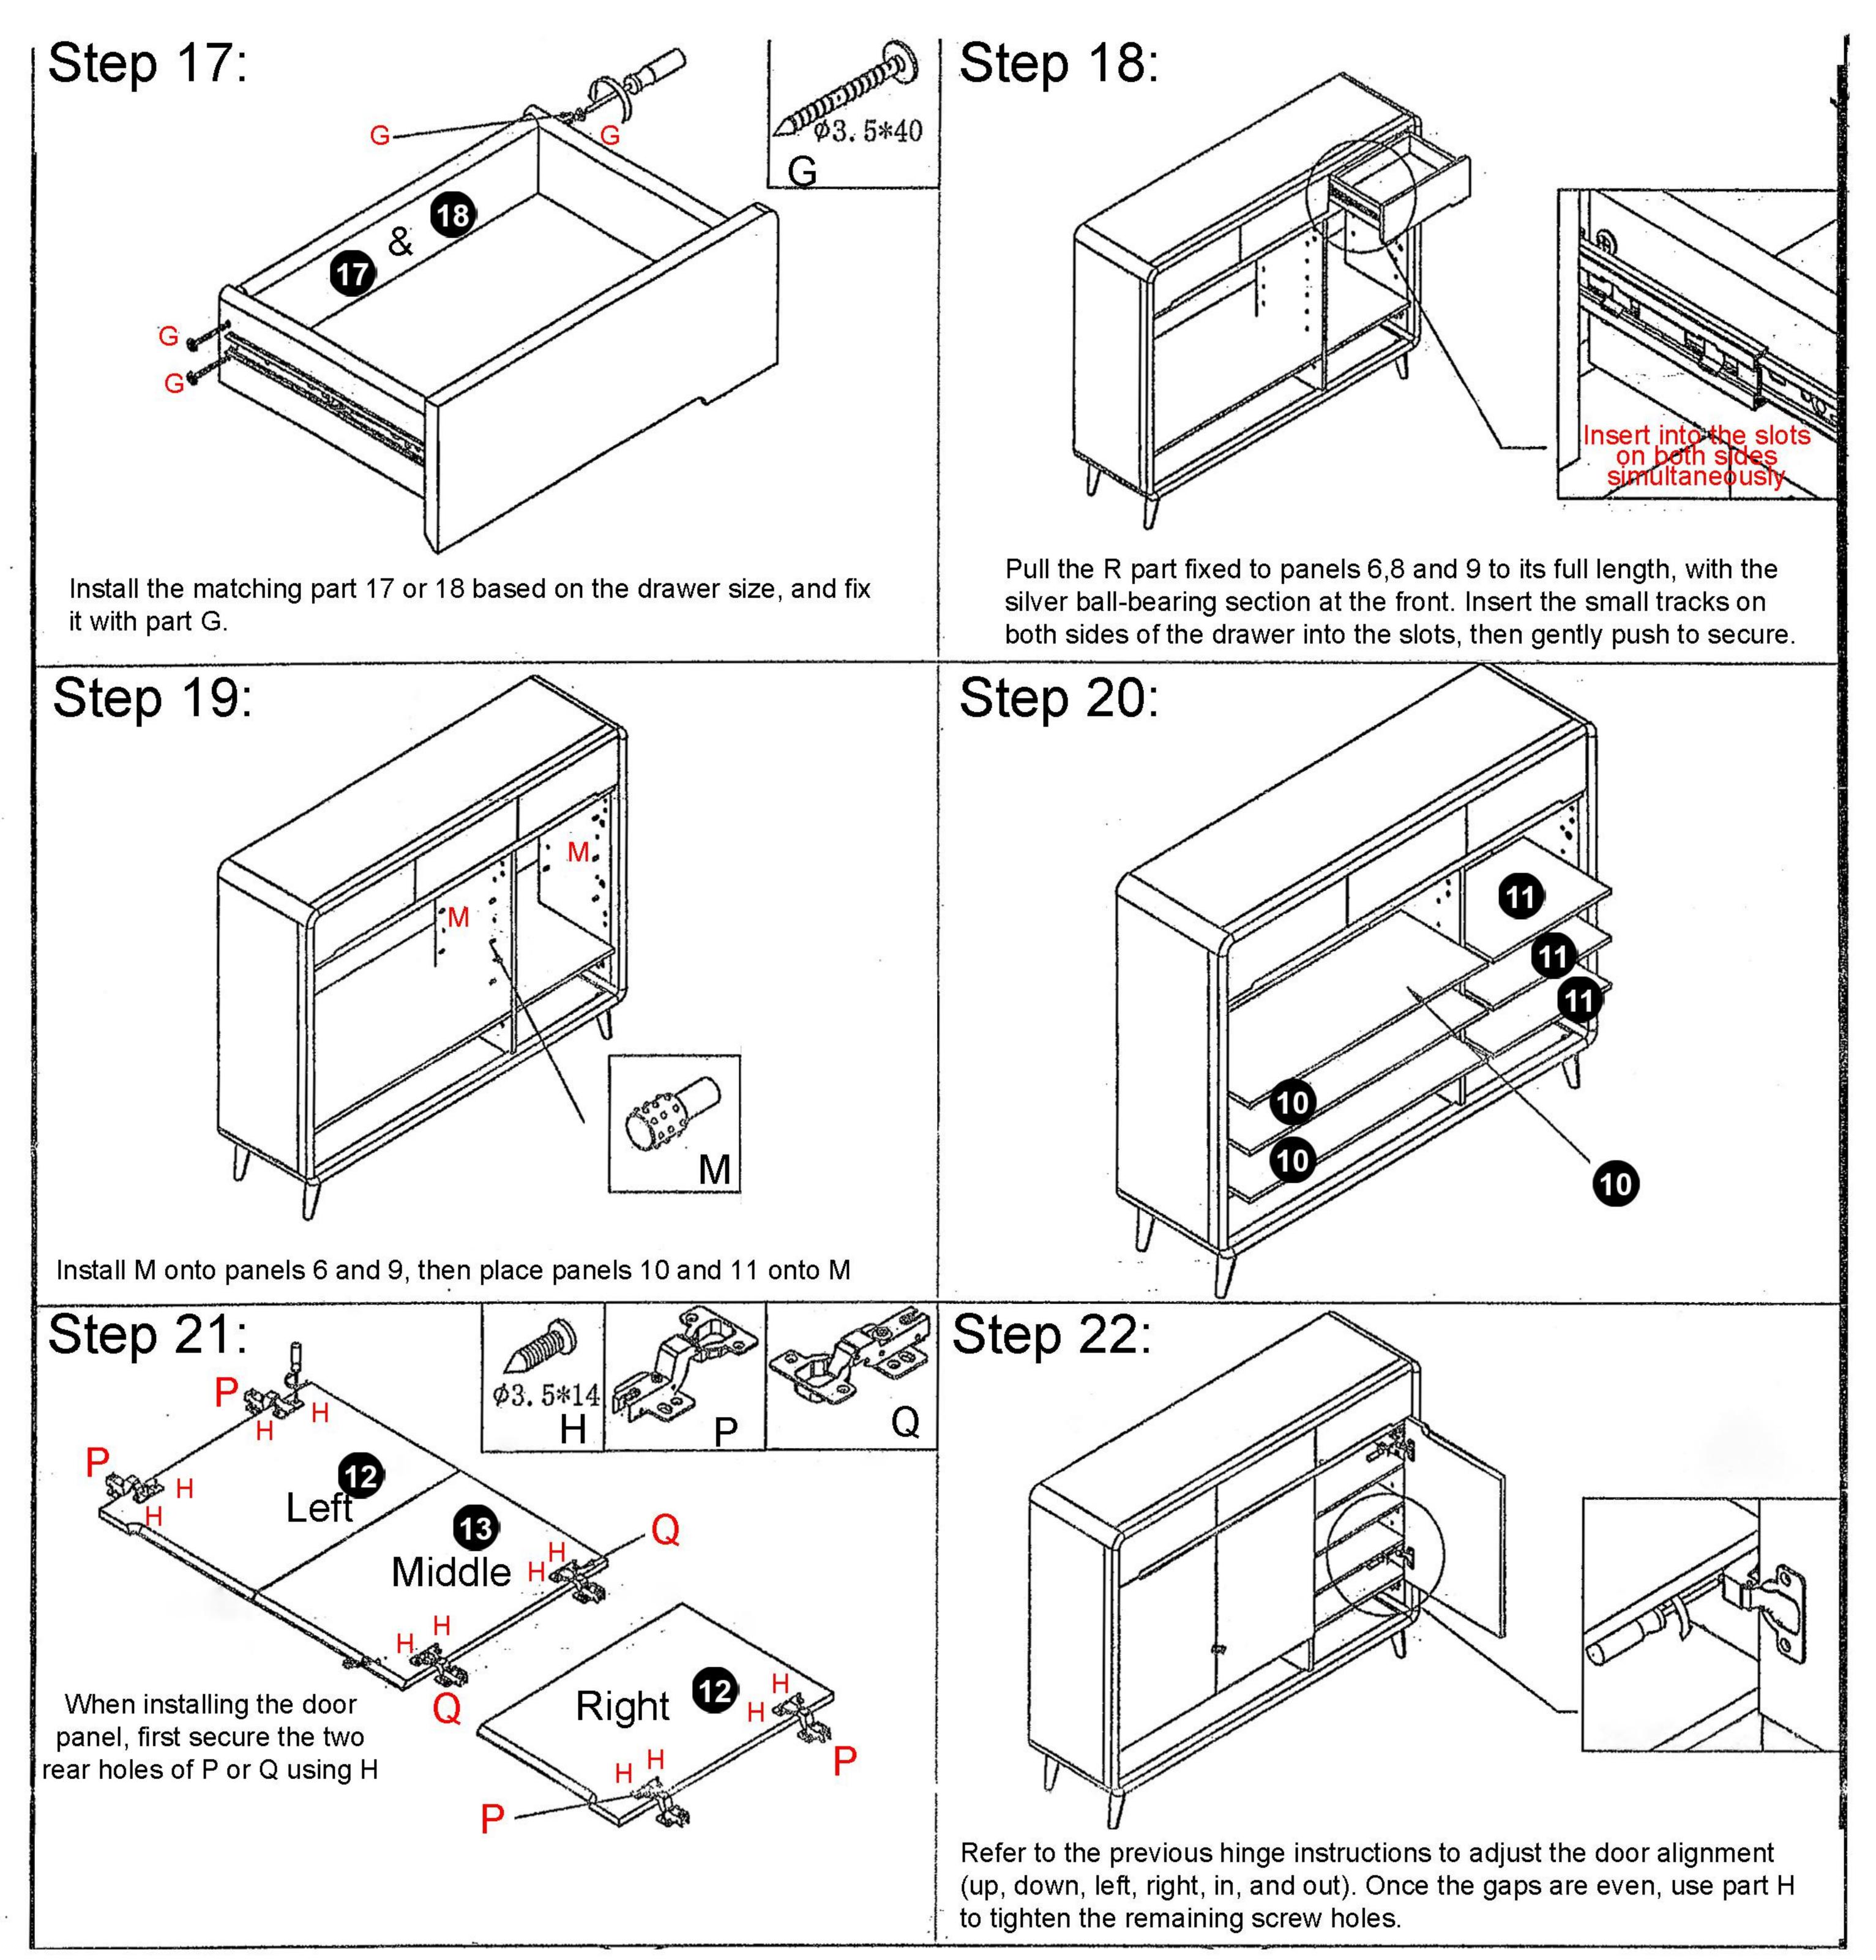

First, secure the rear two holes of P or Q with H, then install the front two holes. Refer to the initial hinge installation instructions to adjust the door's height and gap.

Note: When installing P or Q, if you encounter resistance while tightening the screws, stop immediately. Continuing to apply force may cause the threads to strip or damage the mechanism.