


SOCE059-120

Installation Instruction

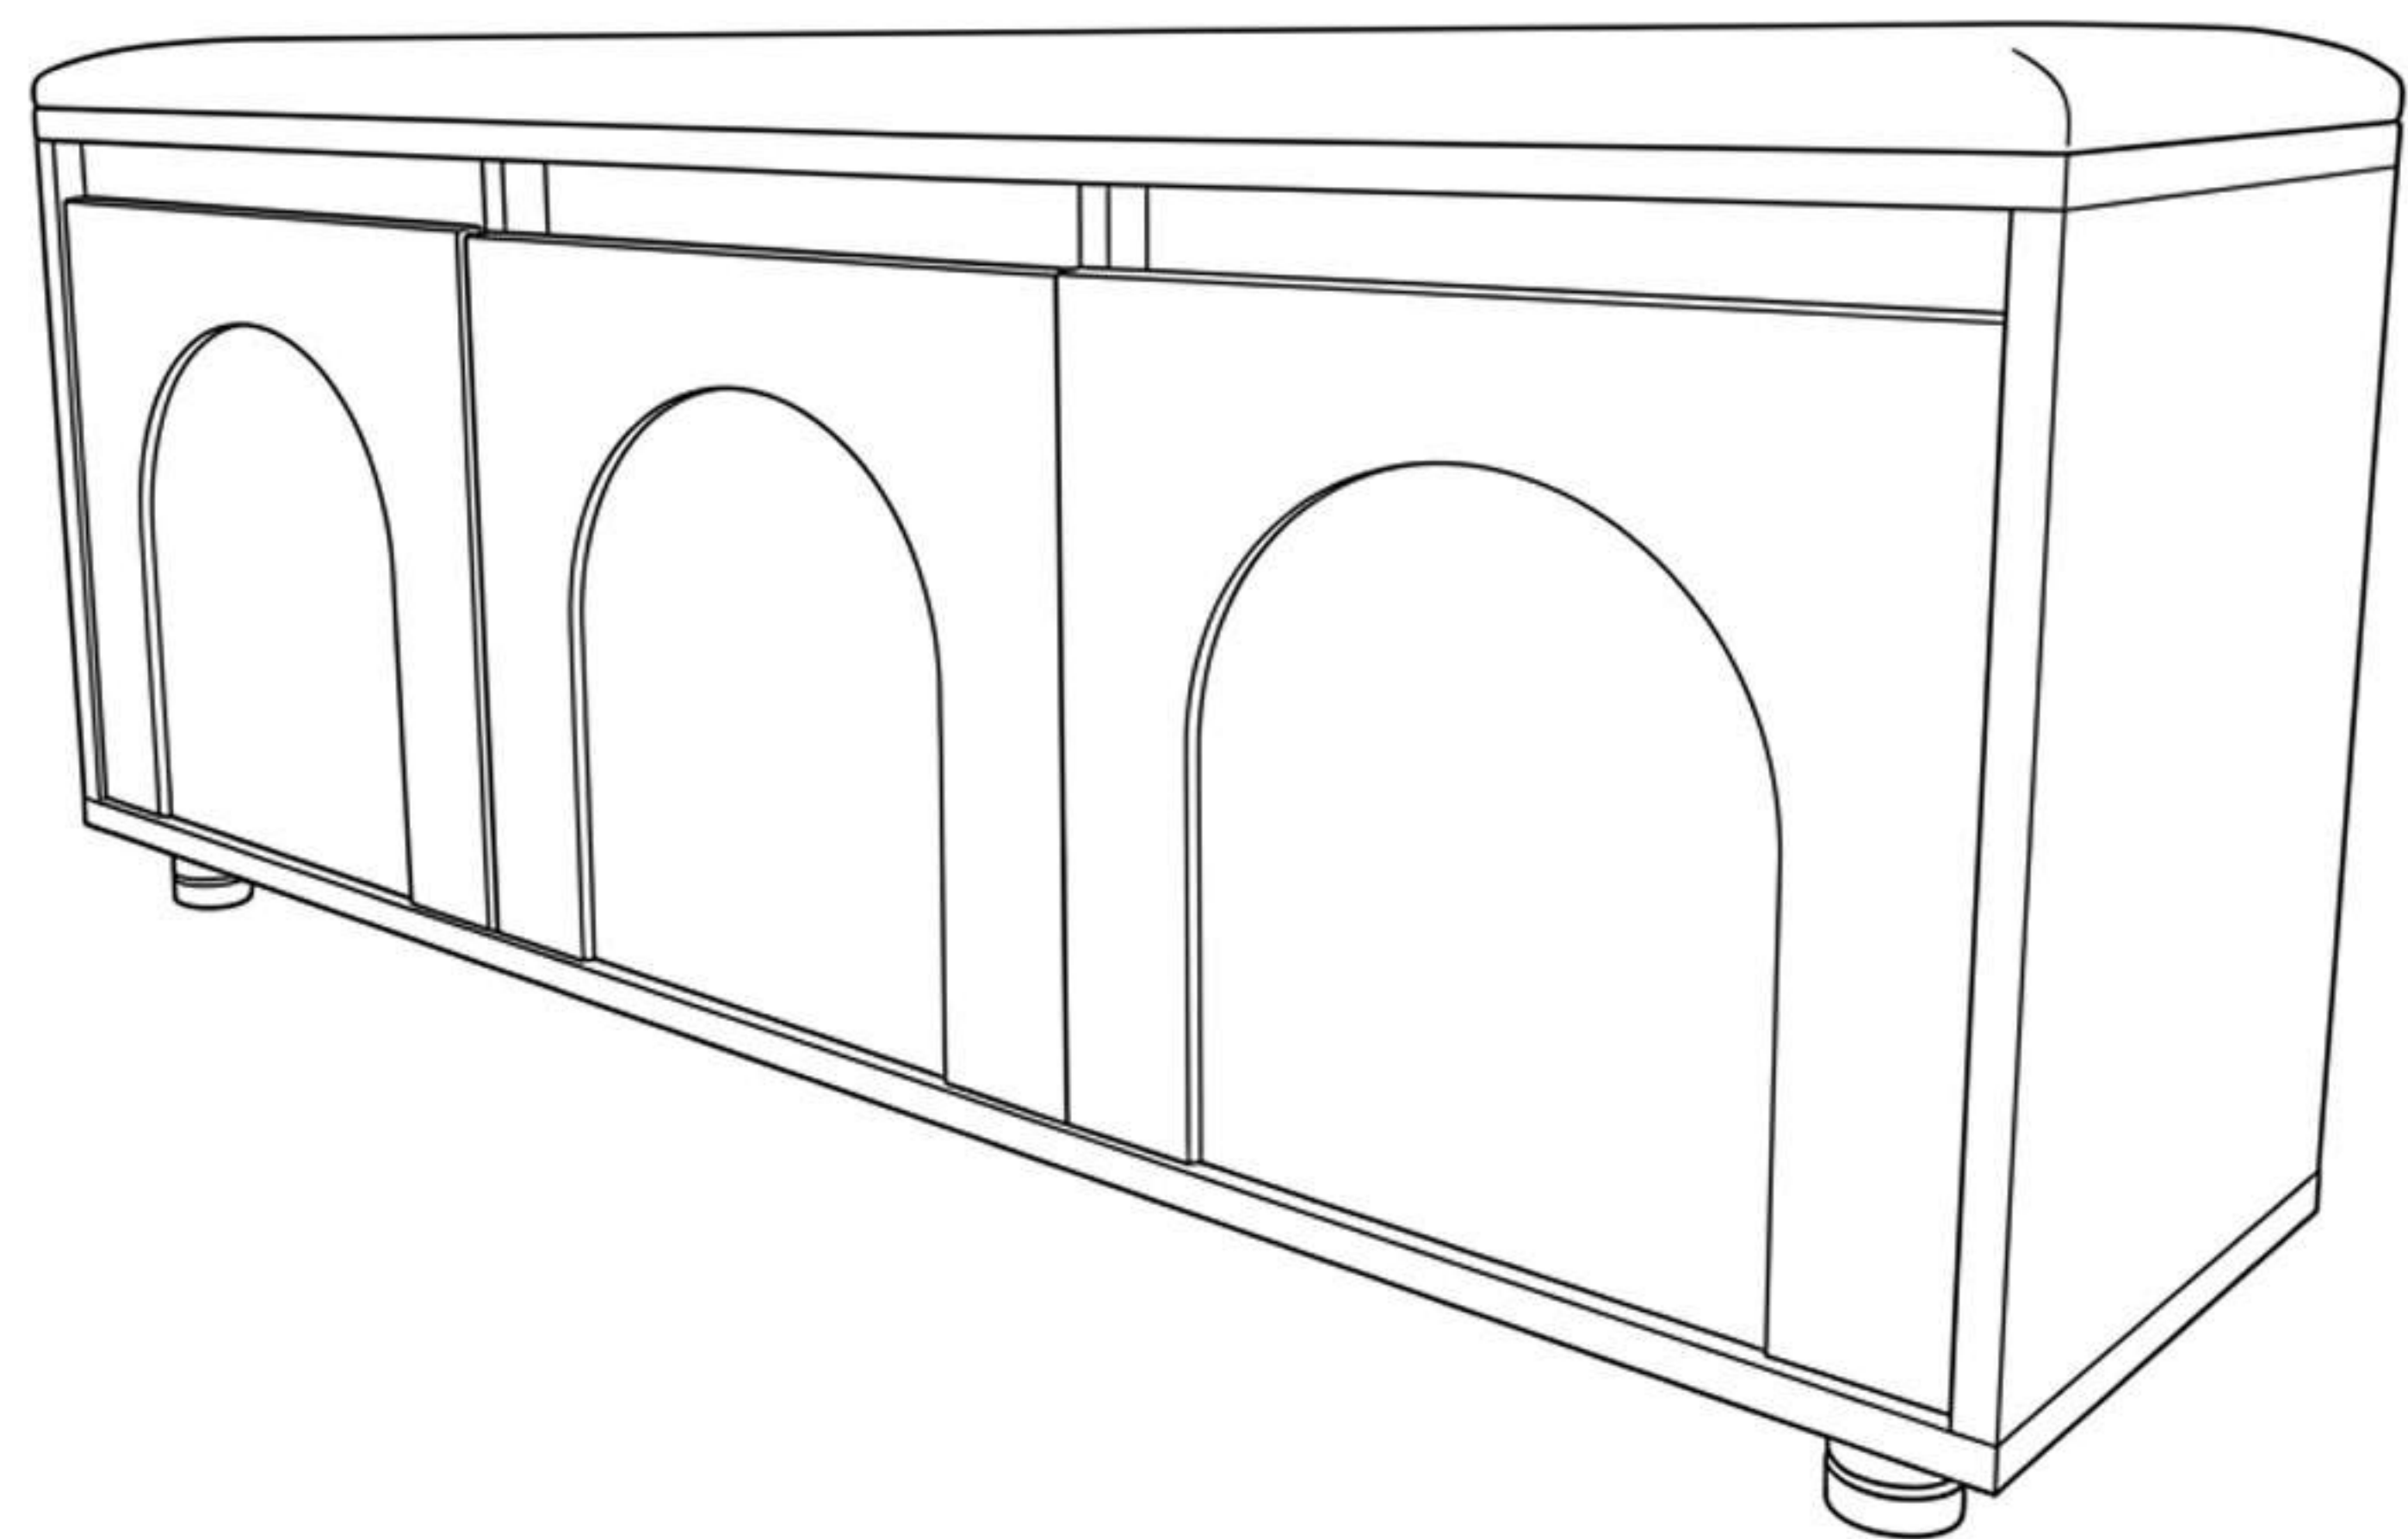

Please read this instruction manual carefully before installation and use.


Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:








1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

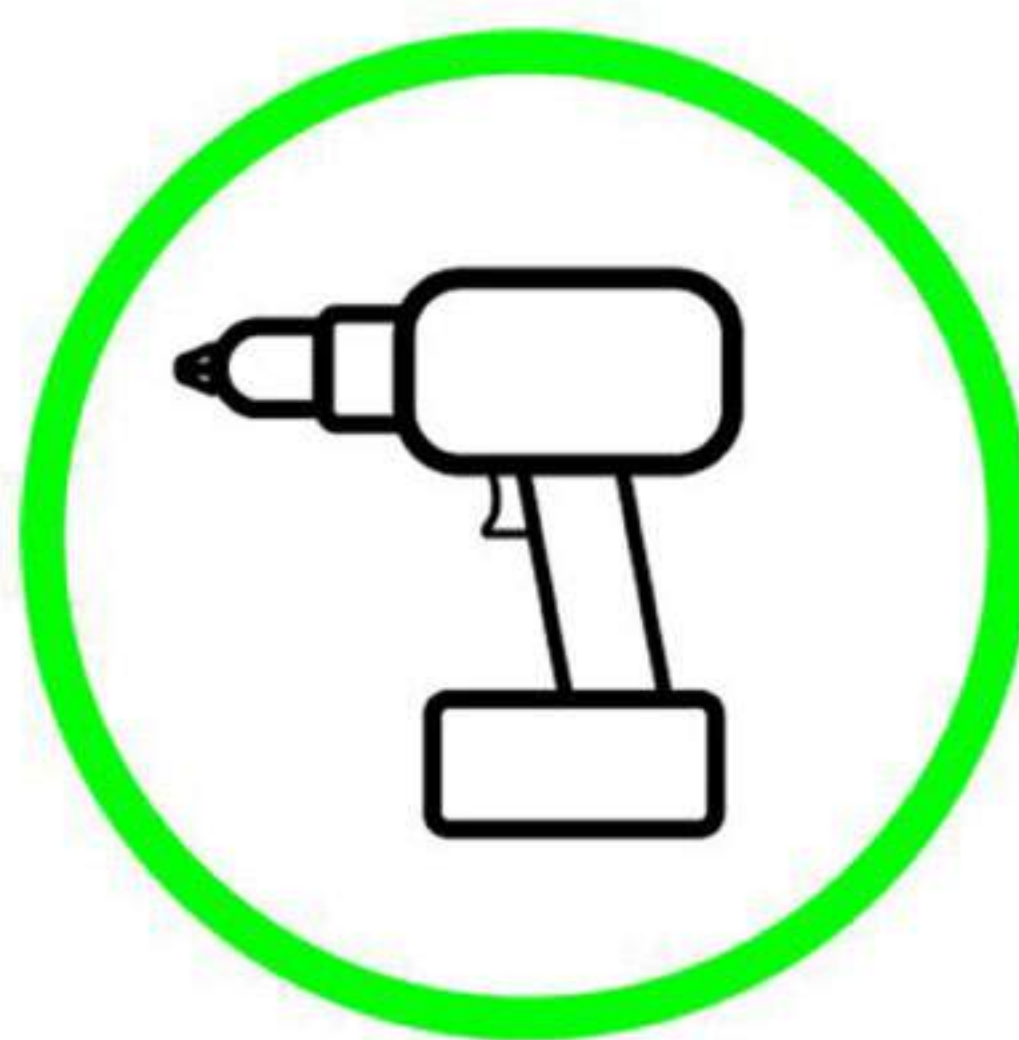

Scan the code to purchase ES001


Hardware List

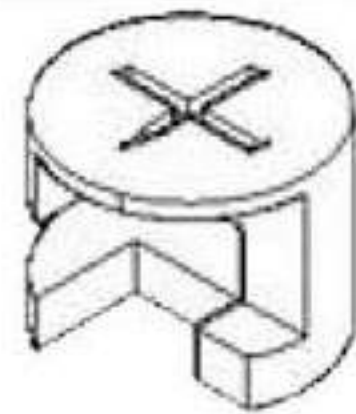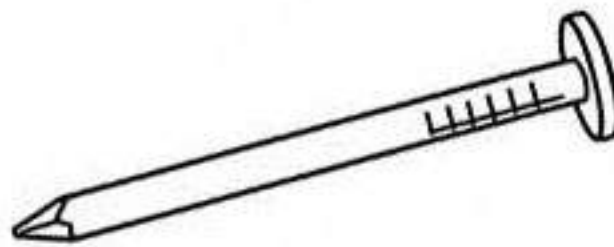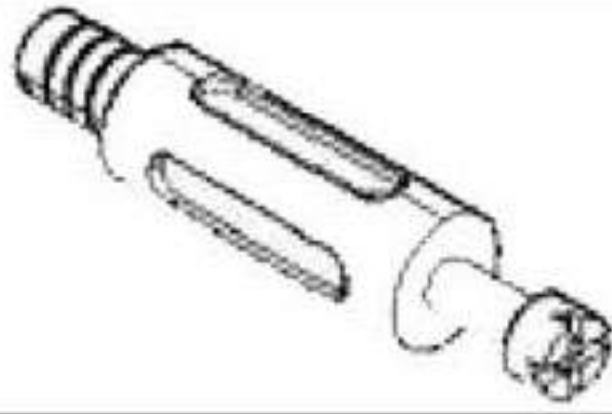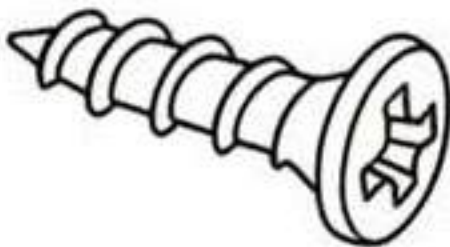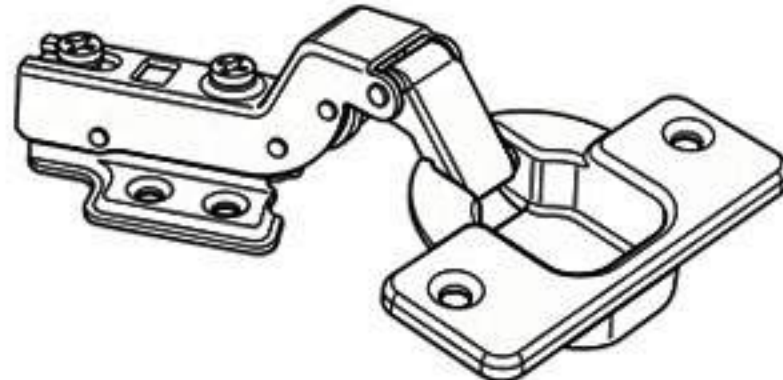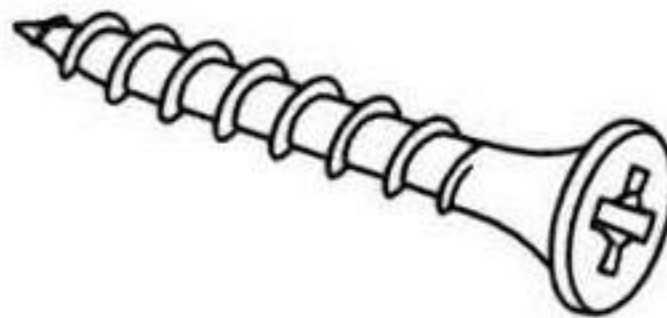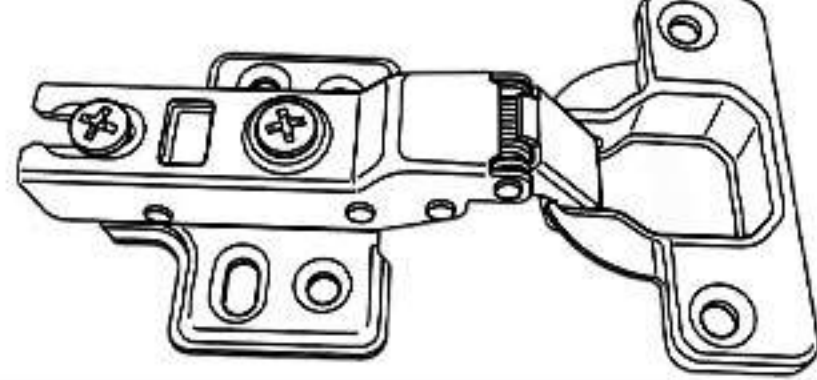Accessory Appearance	Code	Accessory Appearance	Code
	A		E
	B		F
	C		G
	D		H


Detailed description of the main components, please read carefully

G / H (Hinge) Installation Instructions


Install the hinge with screw C

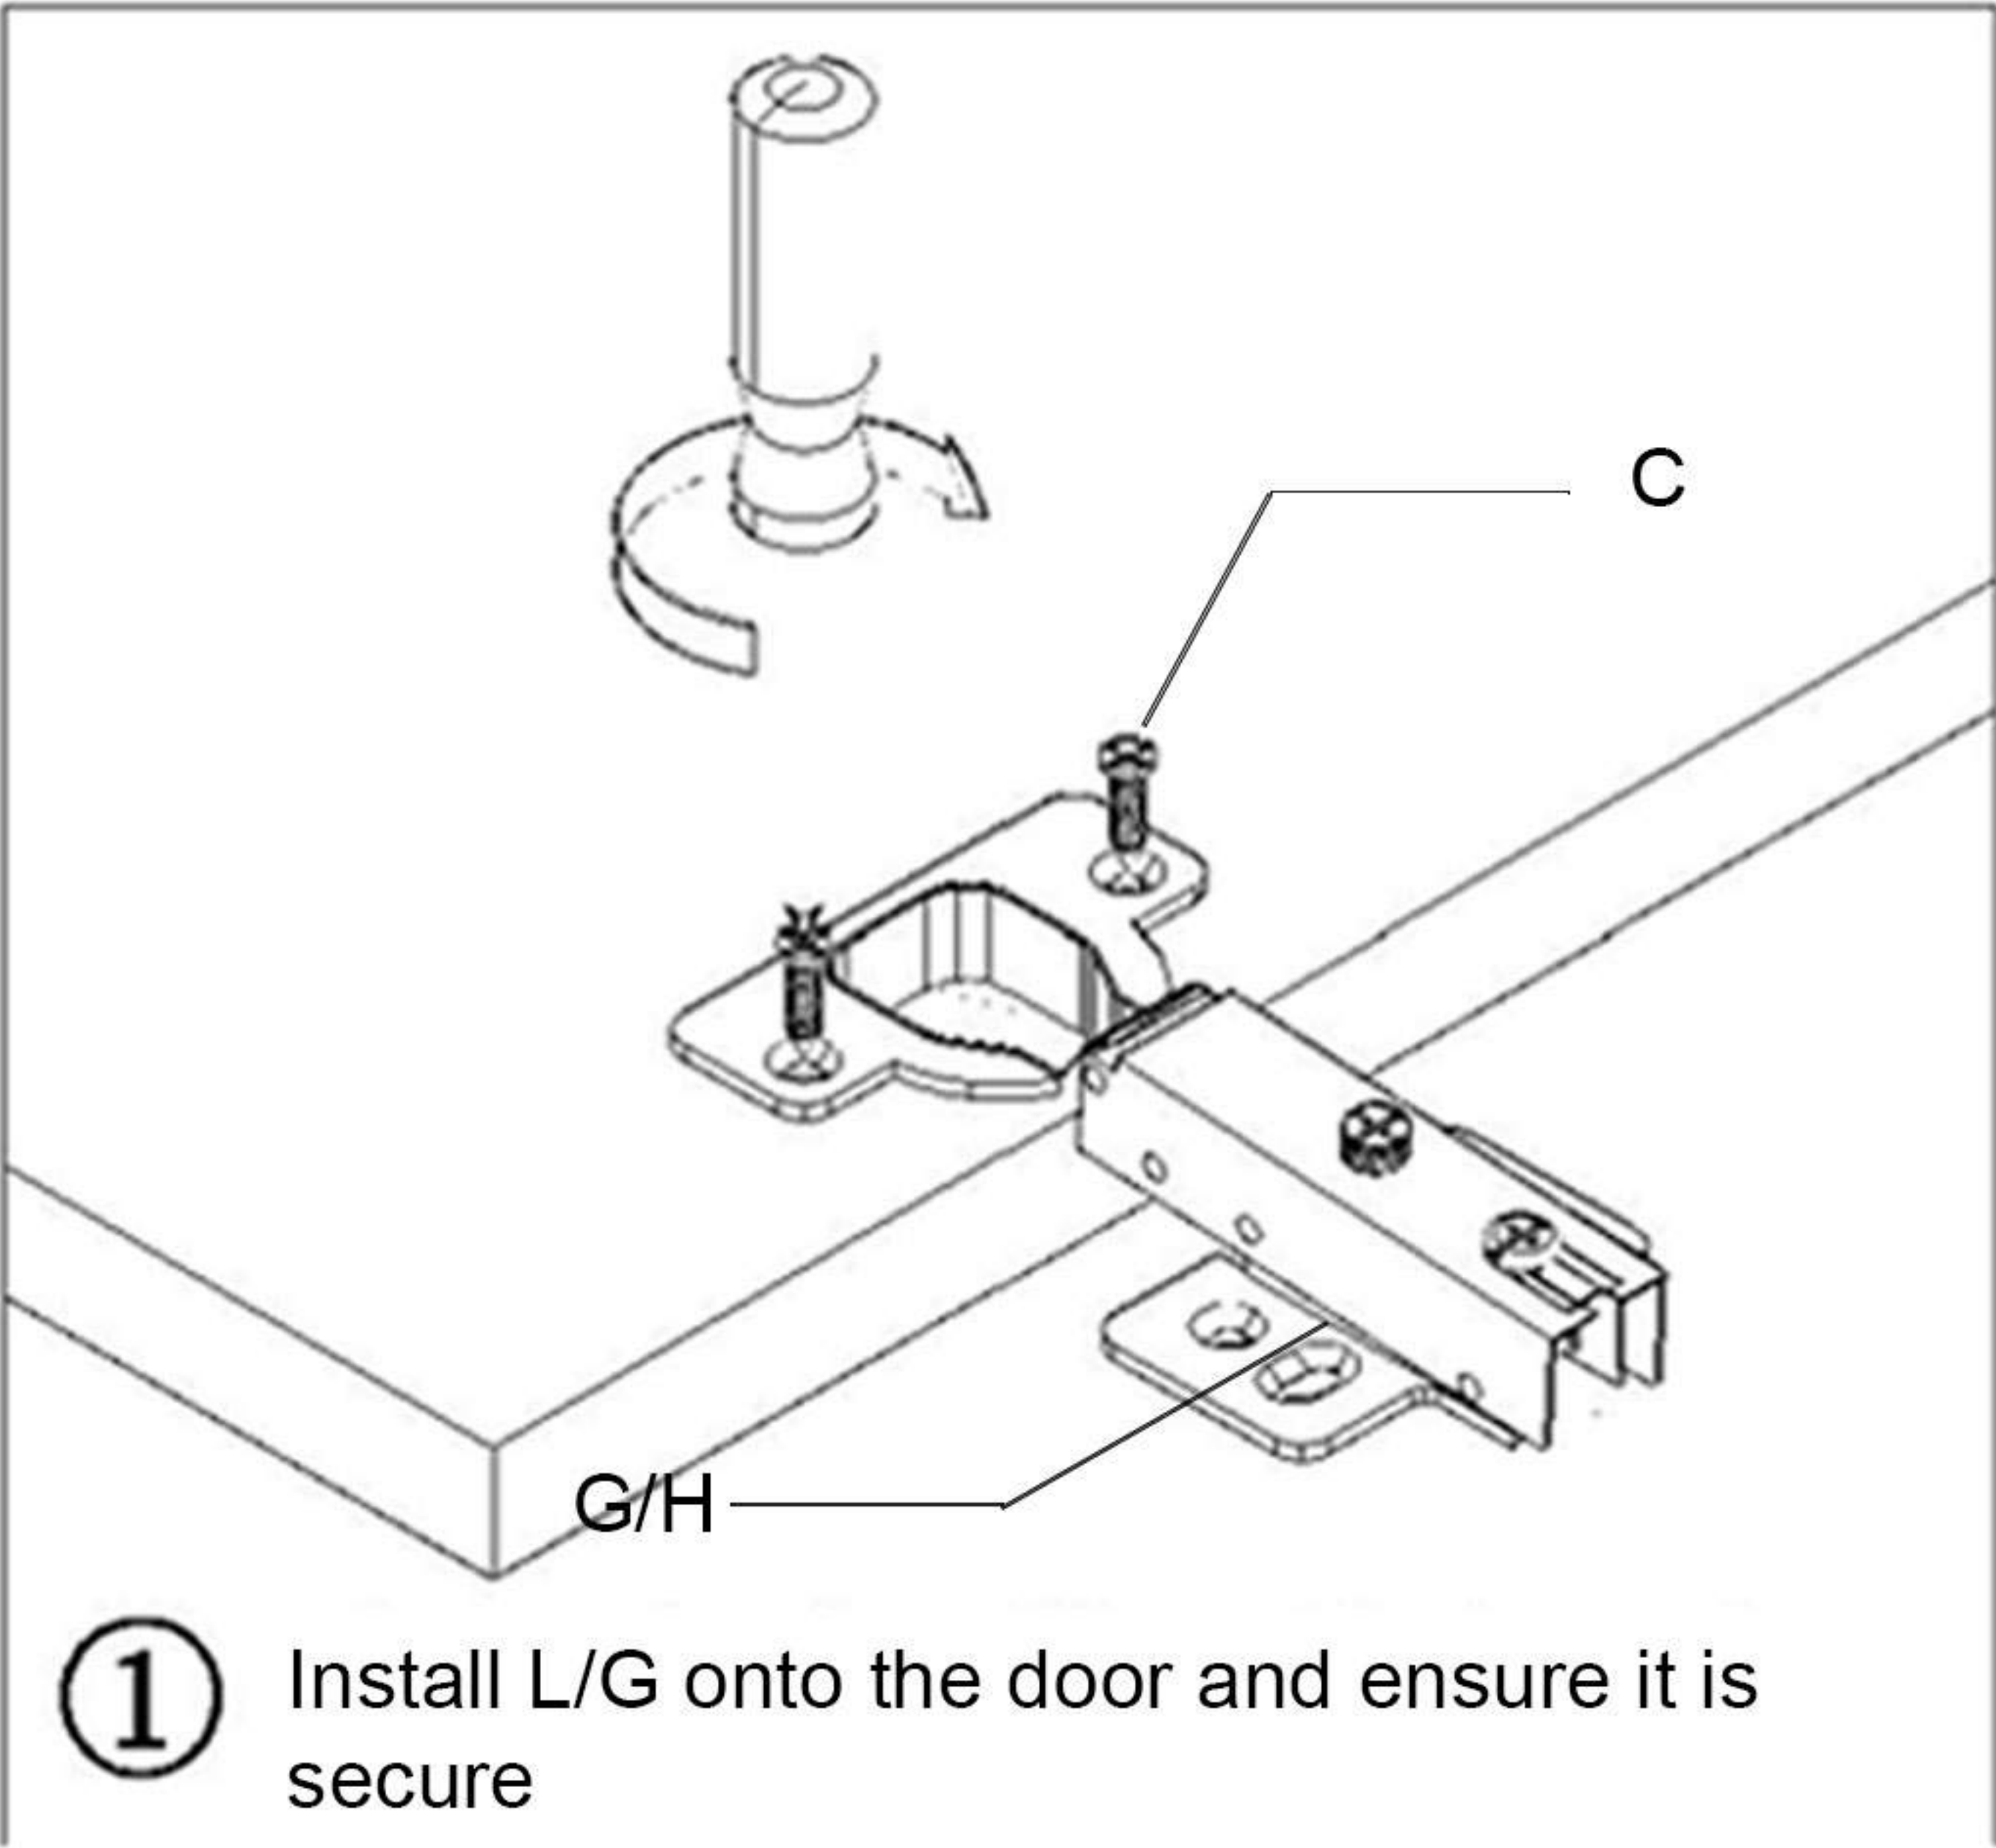


① Install L/G onto the door and ensure it is secure

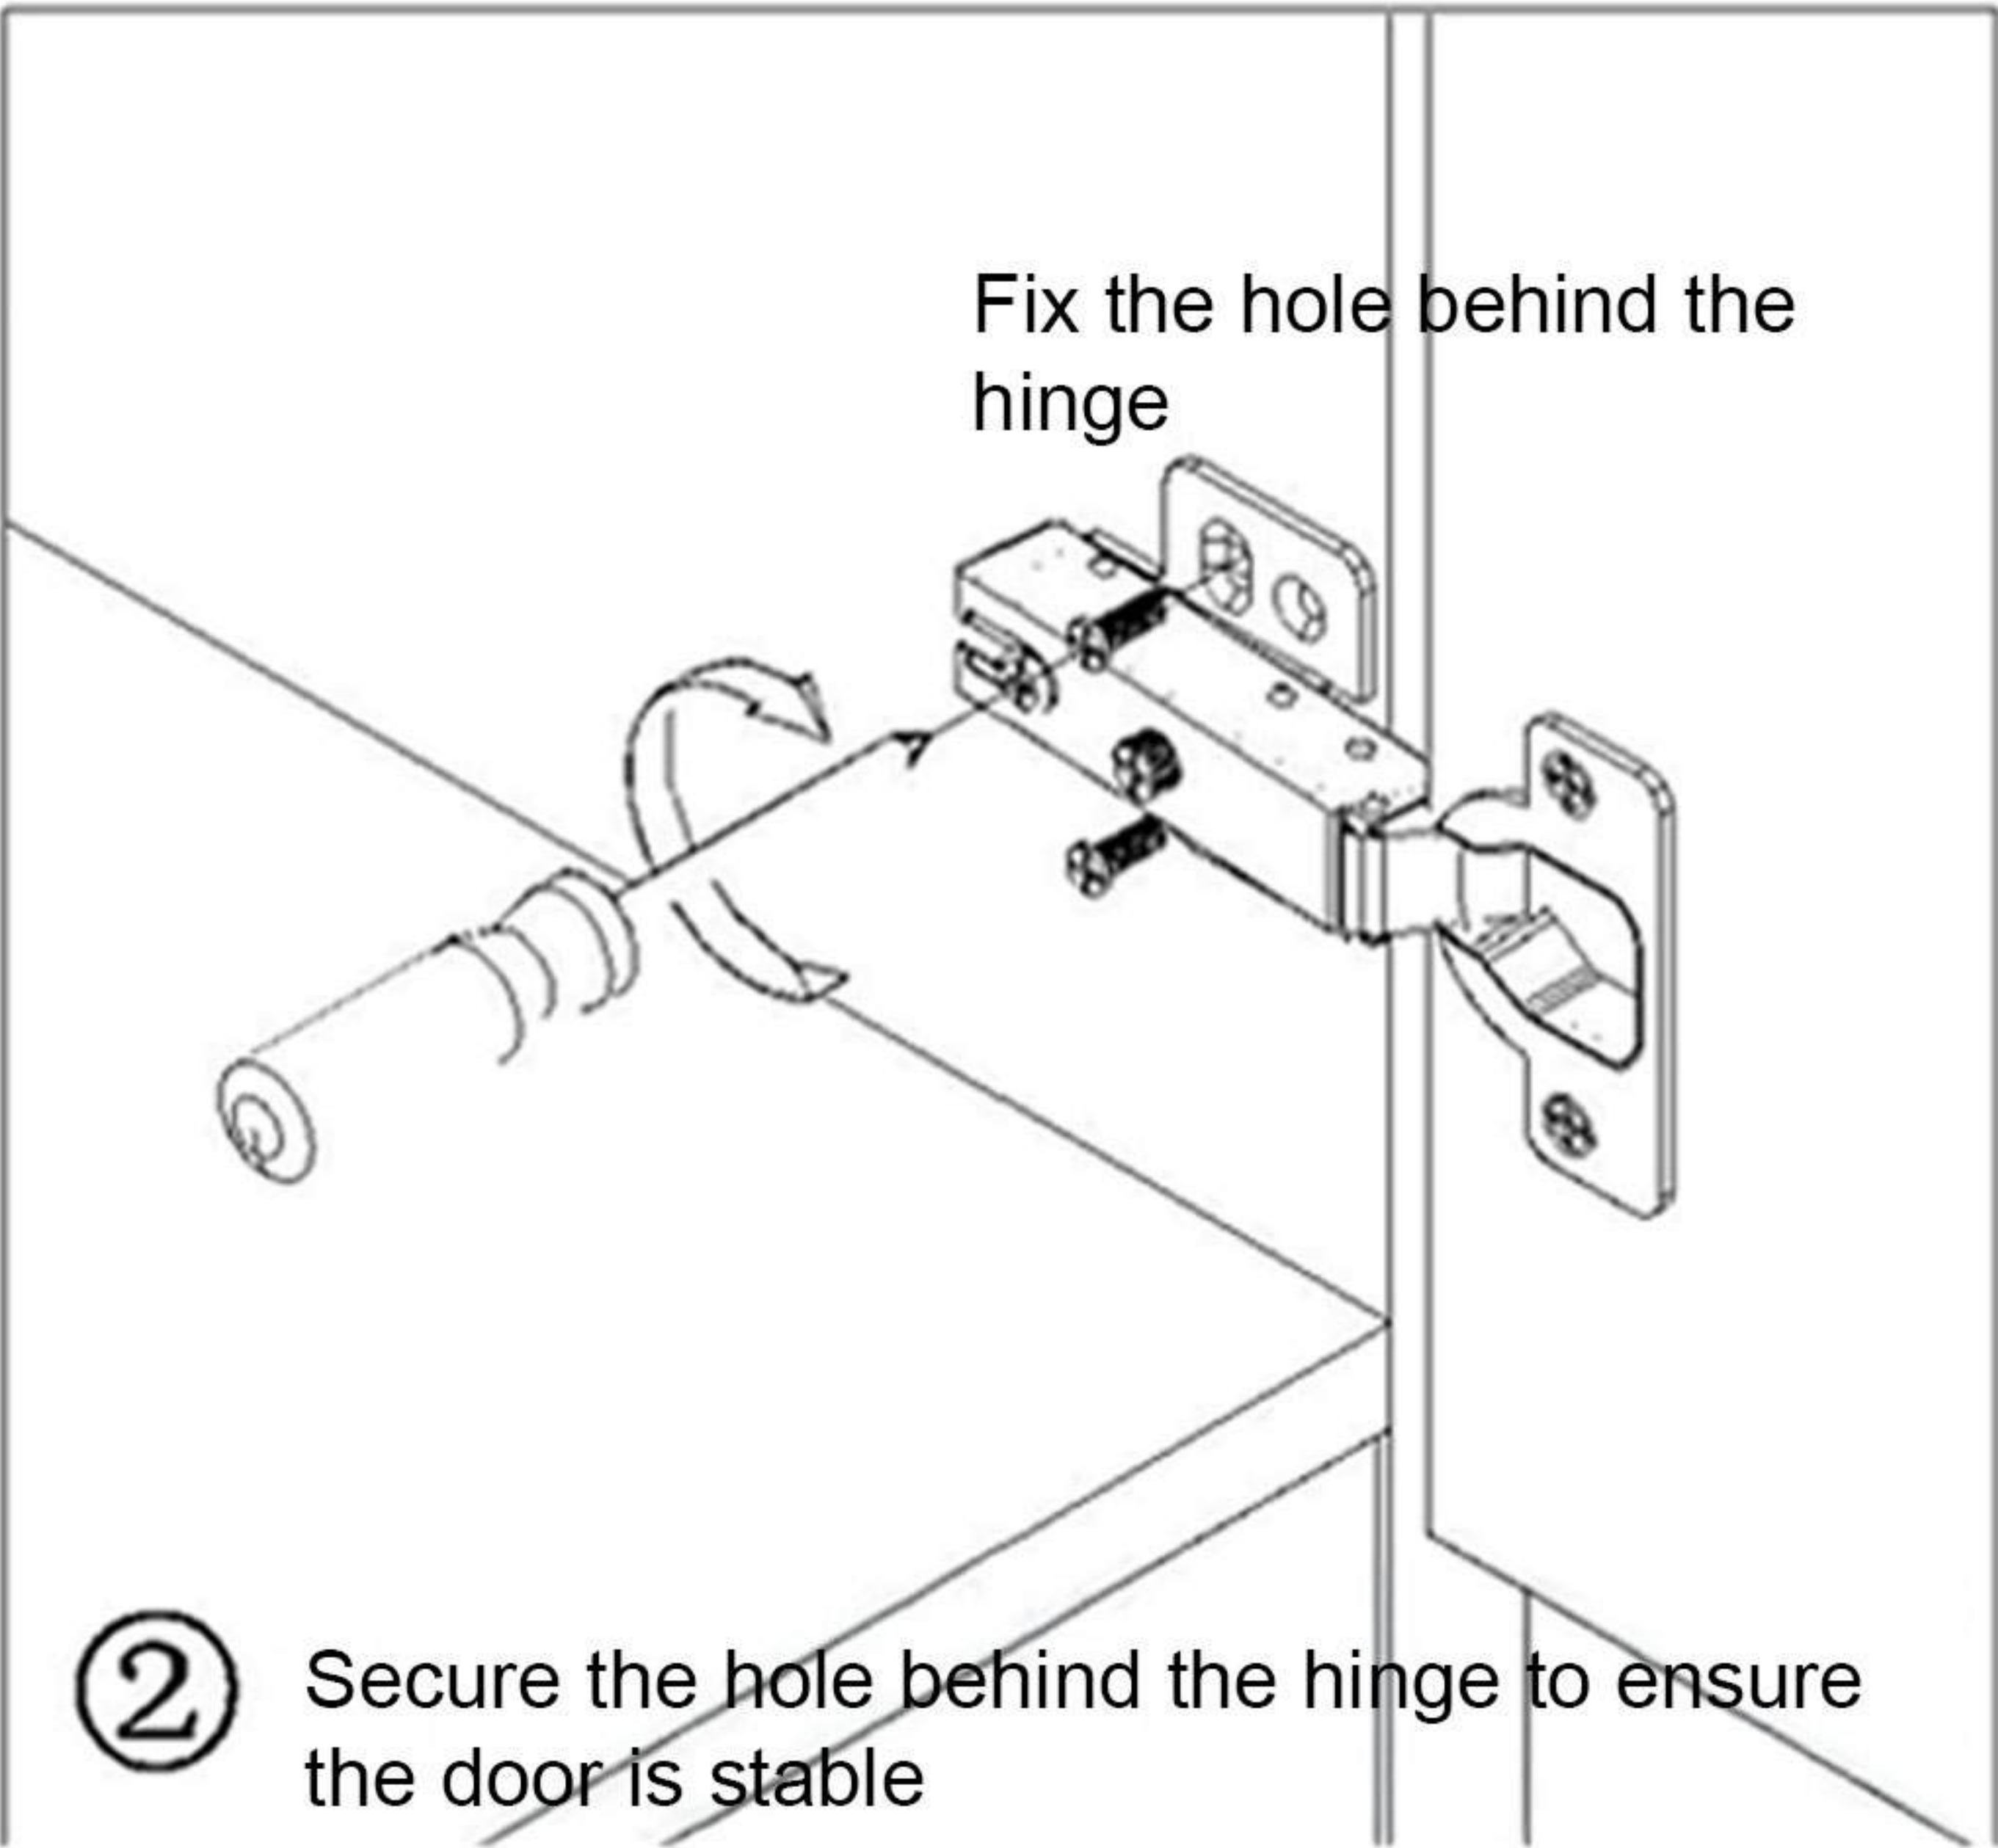

② Secure the hole behind the hinge to ensure the door is stable

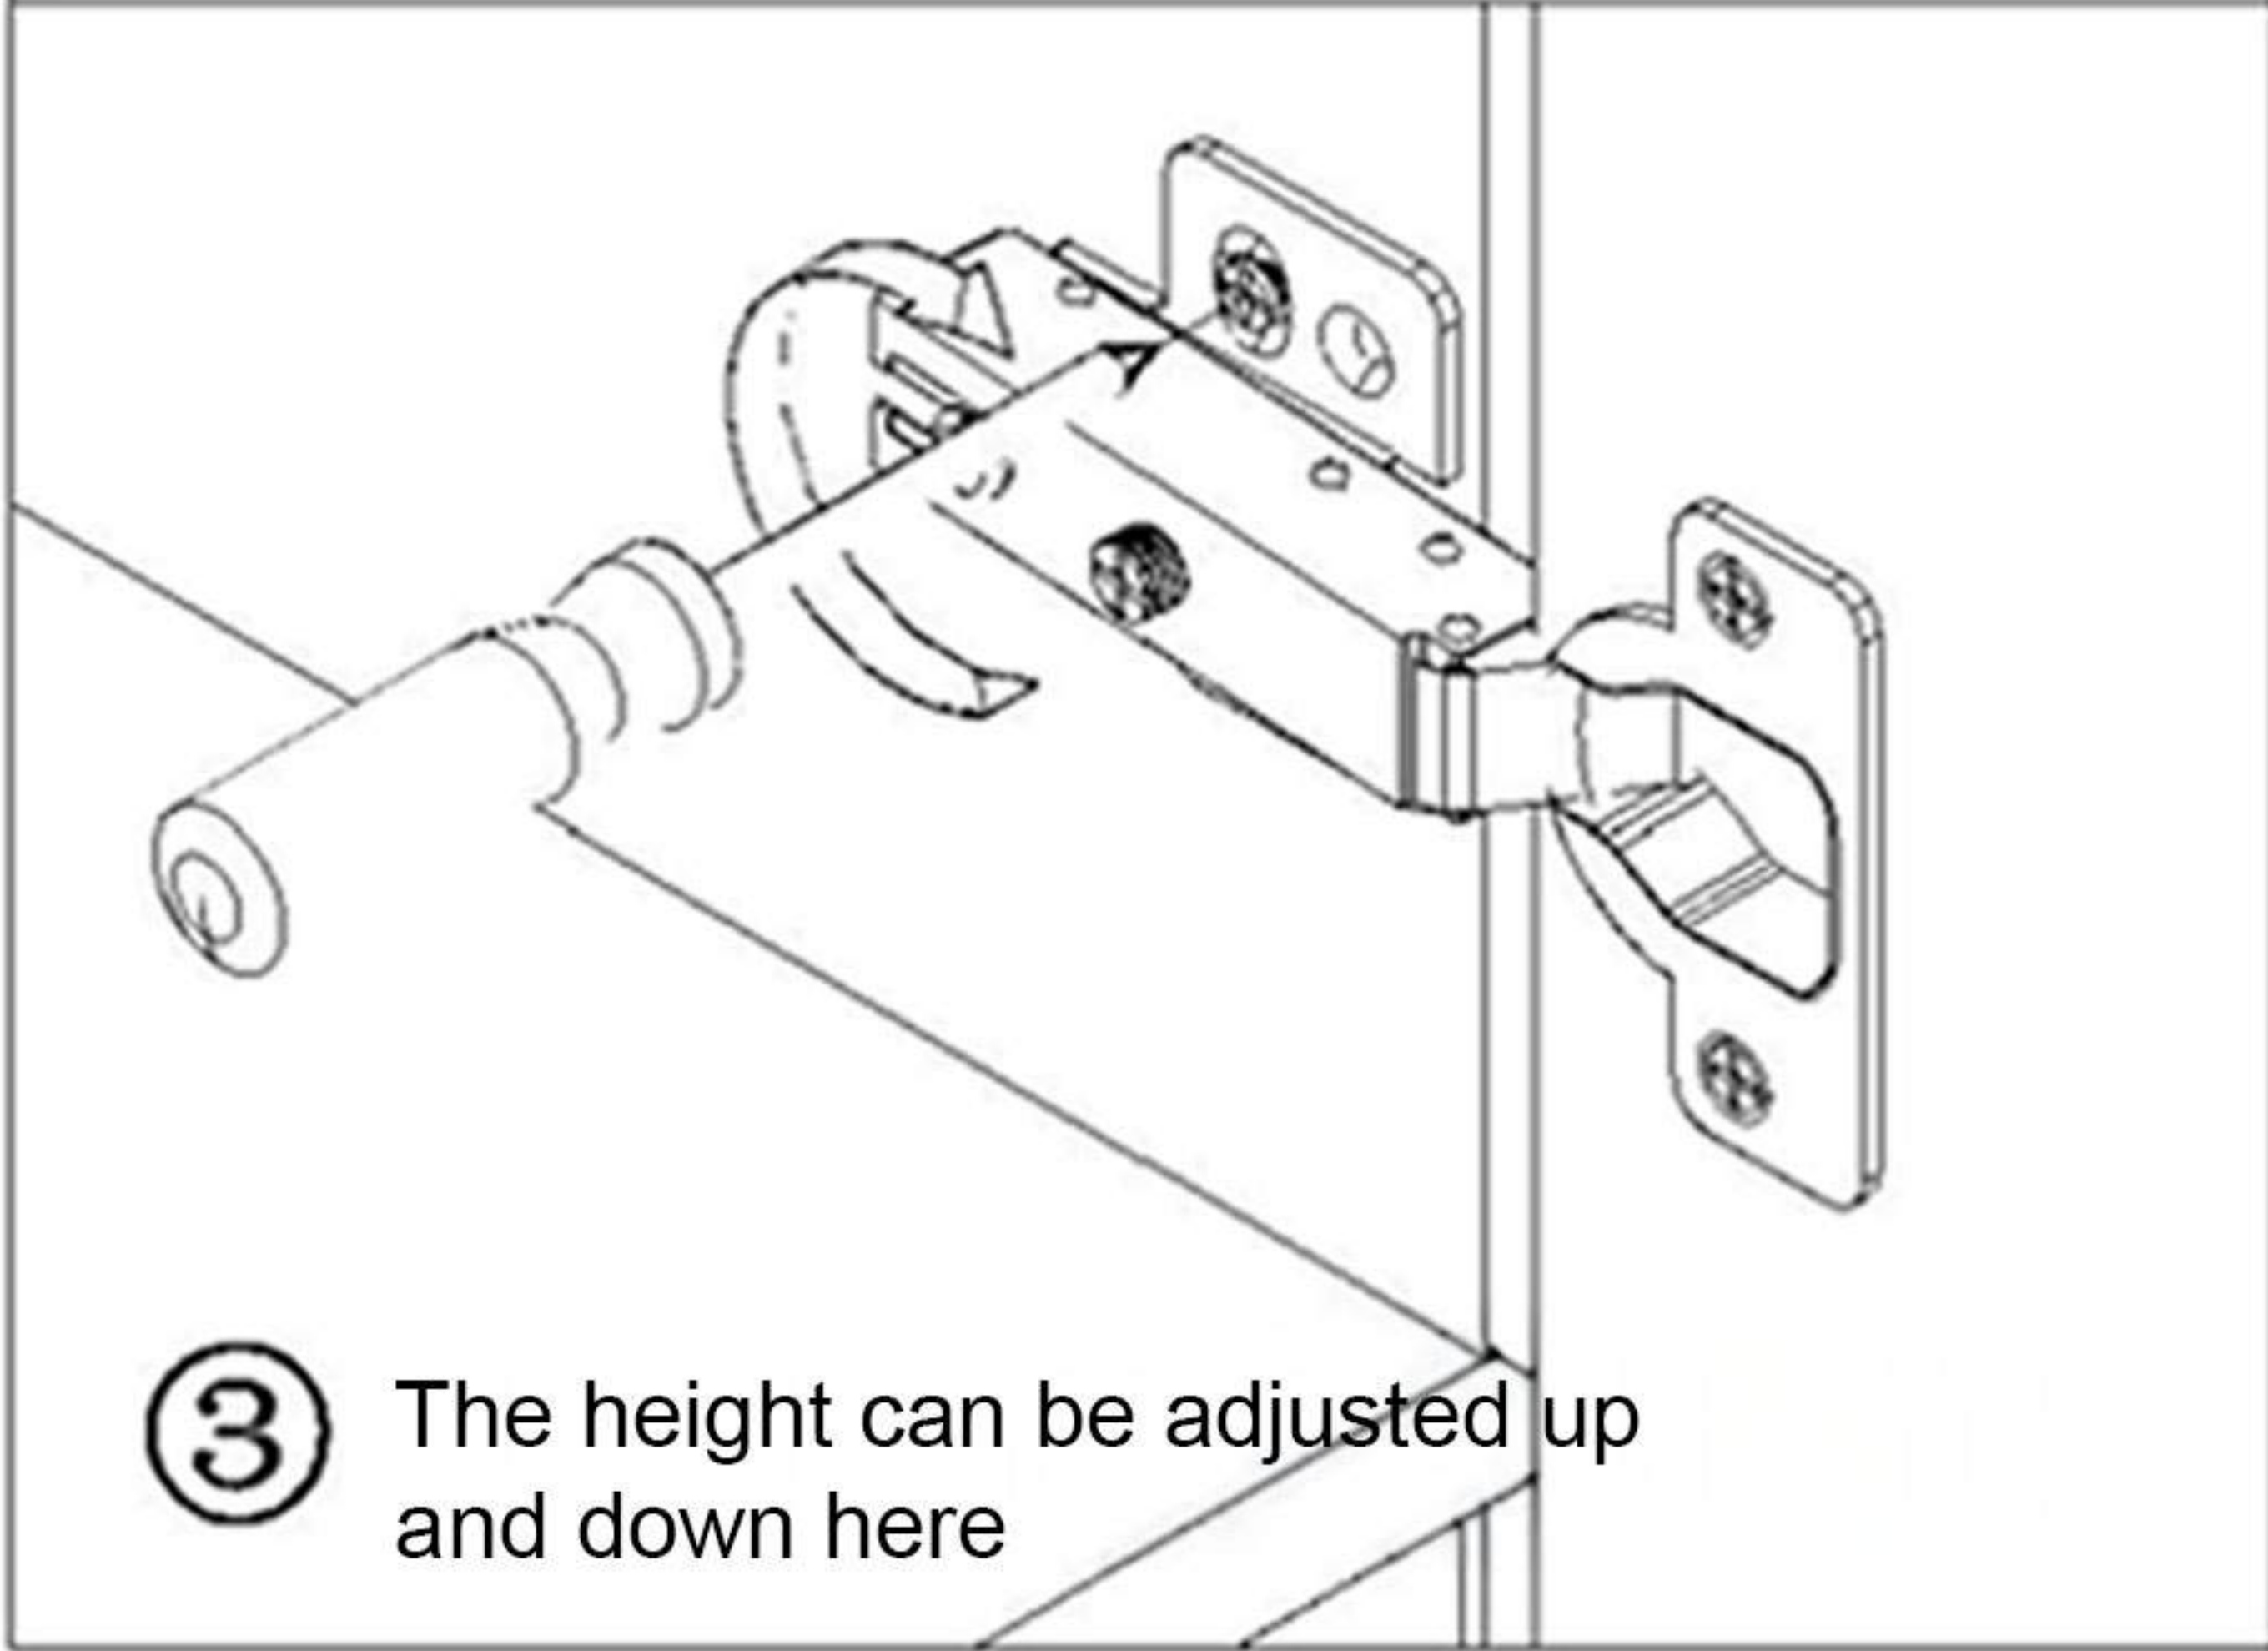


③ The height can be adjusted up and down here

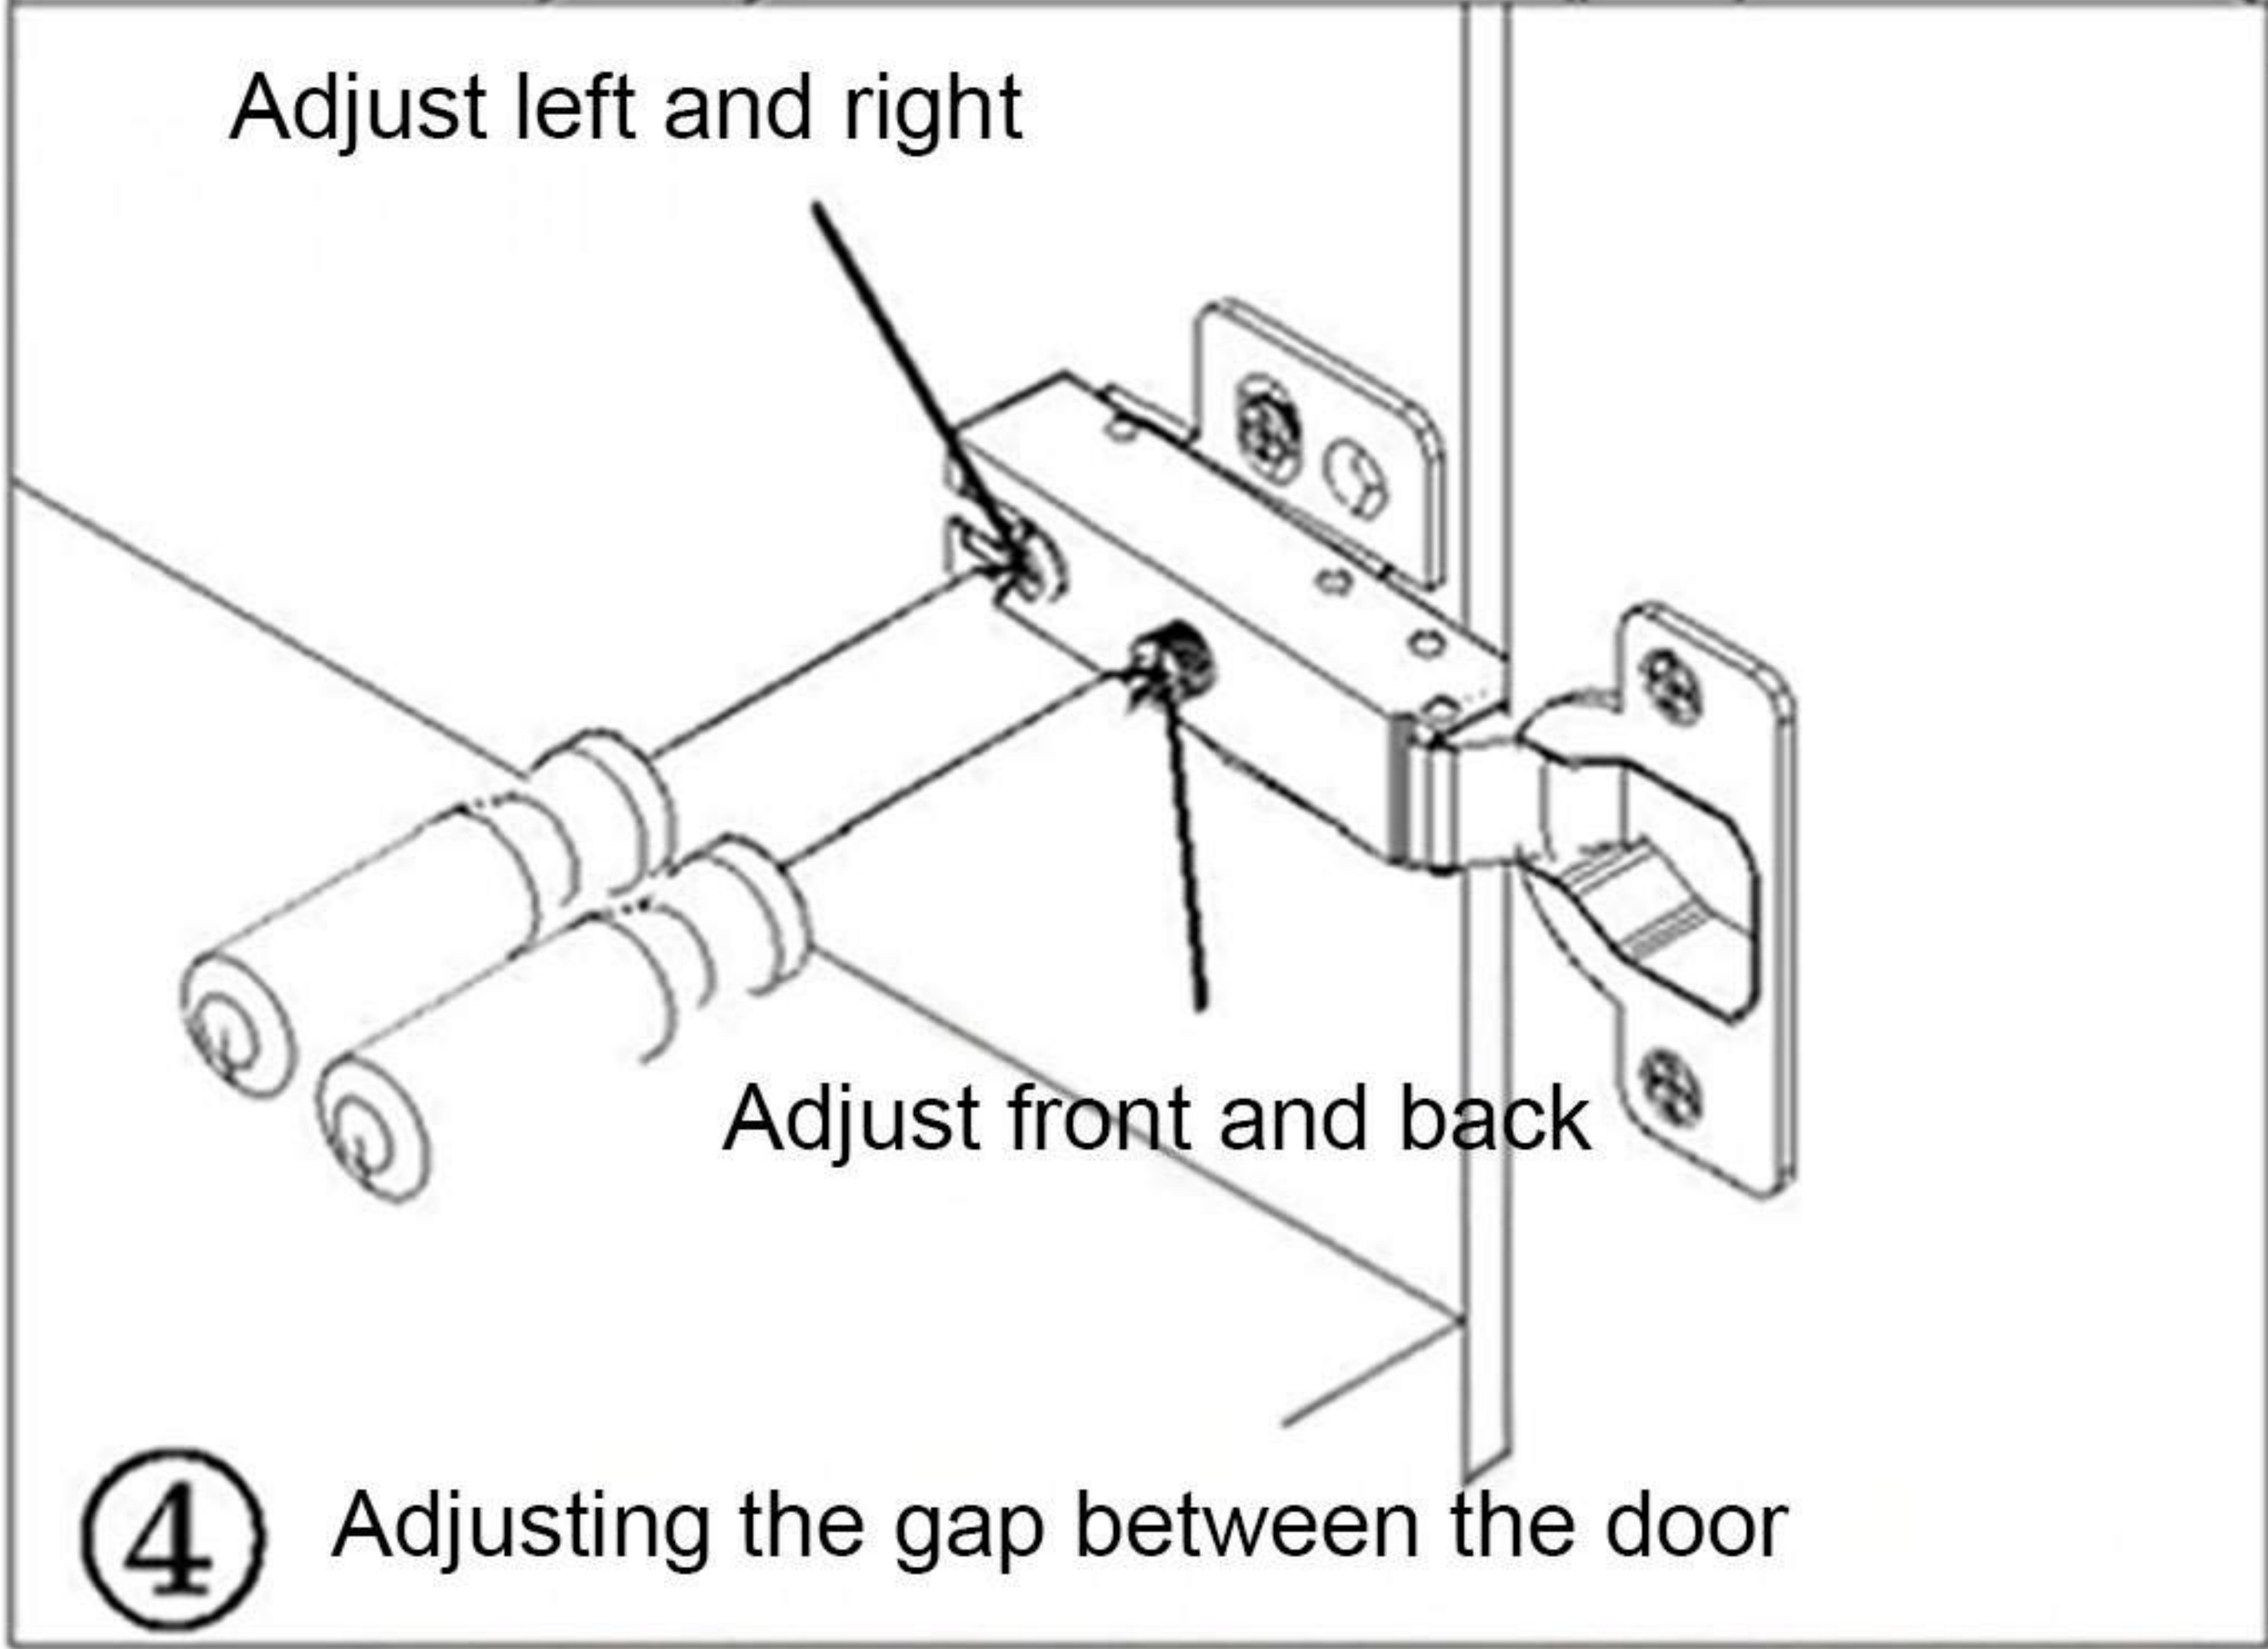


④ Adjusting the gap between the door

Full Overlay Hinge (G) vs. Half Overlay Hinge (H)

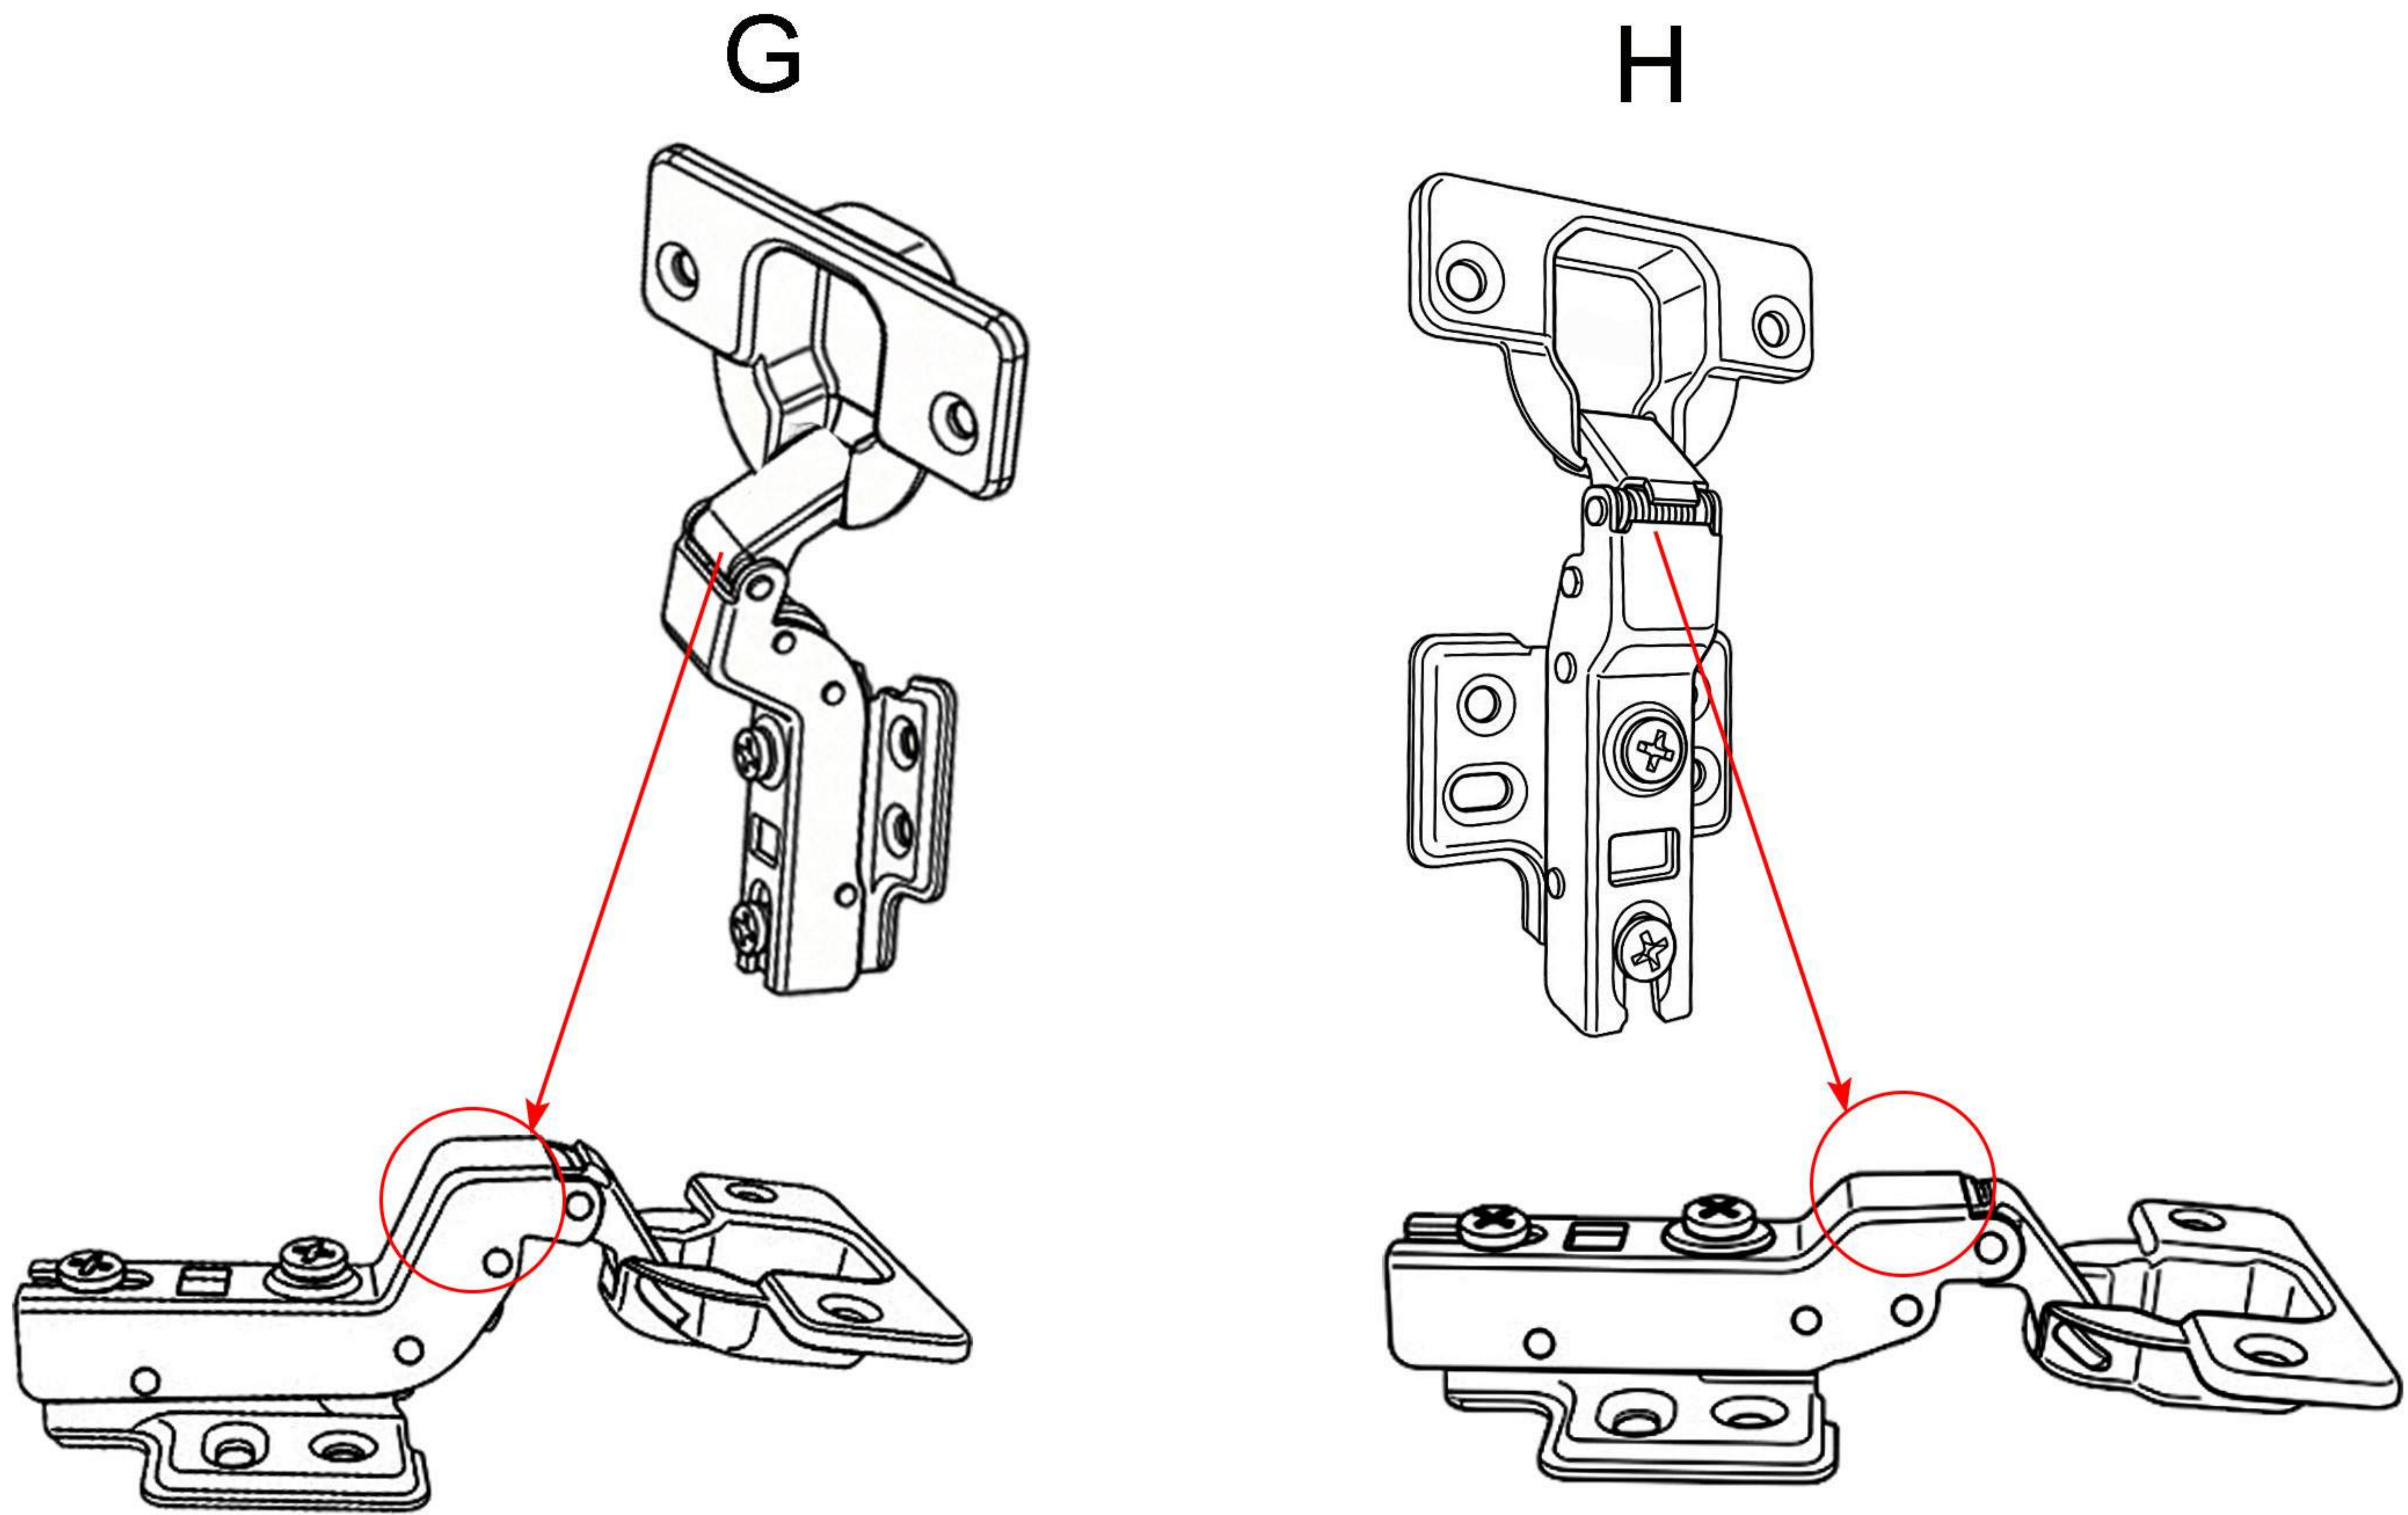


Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

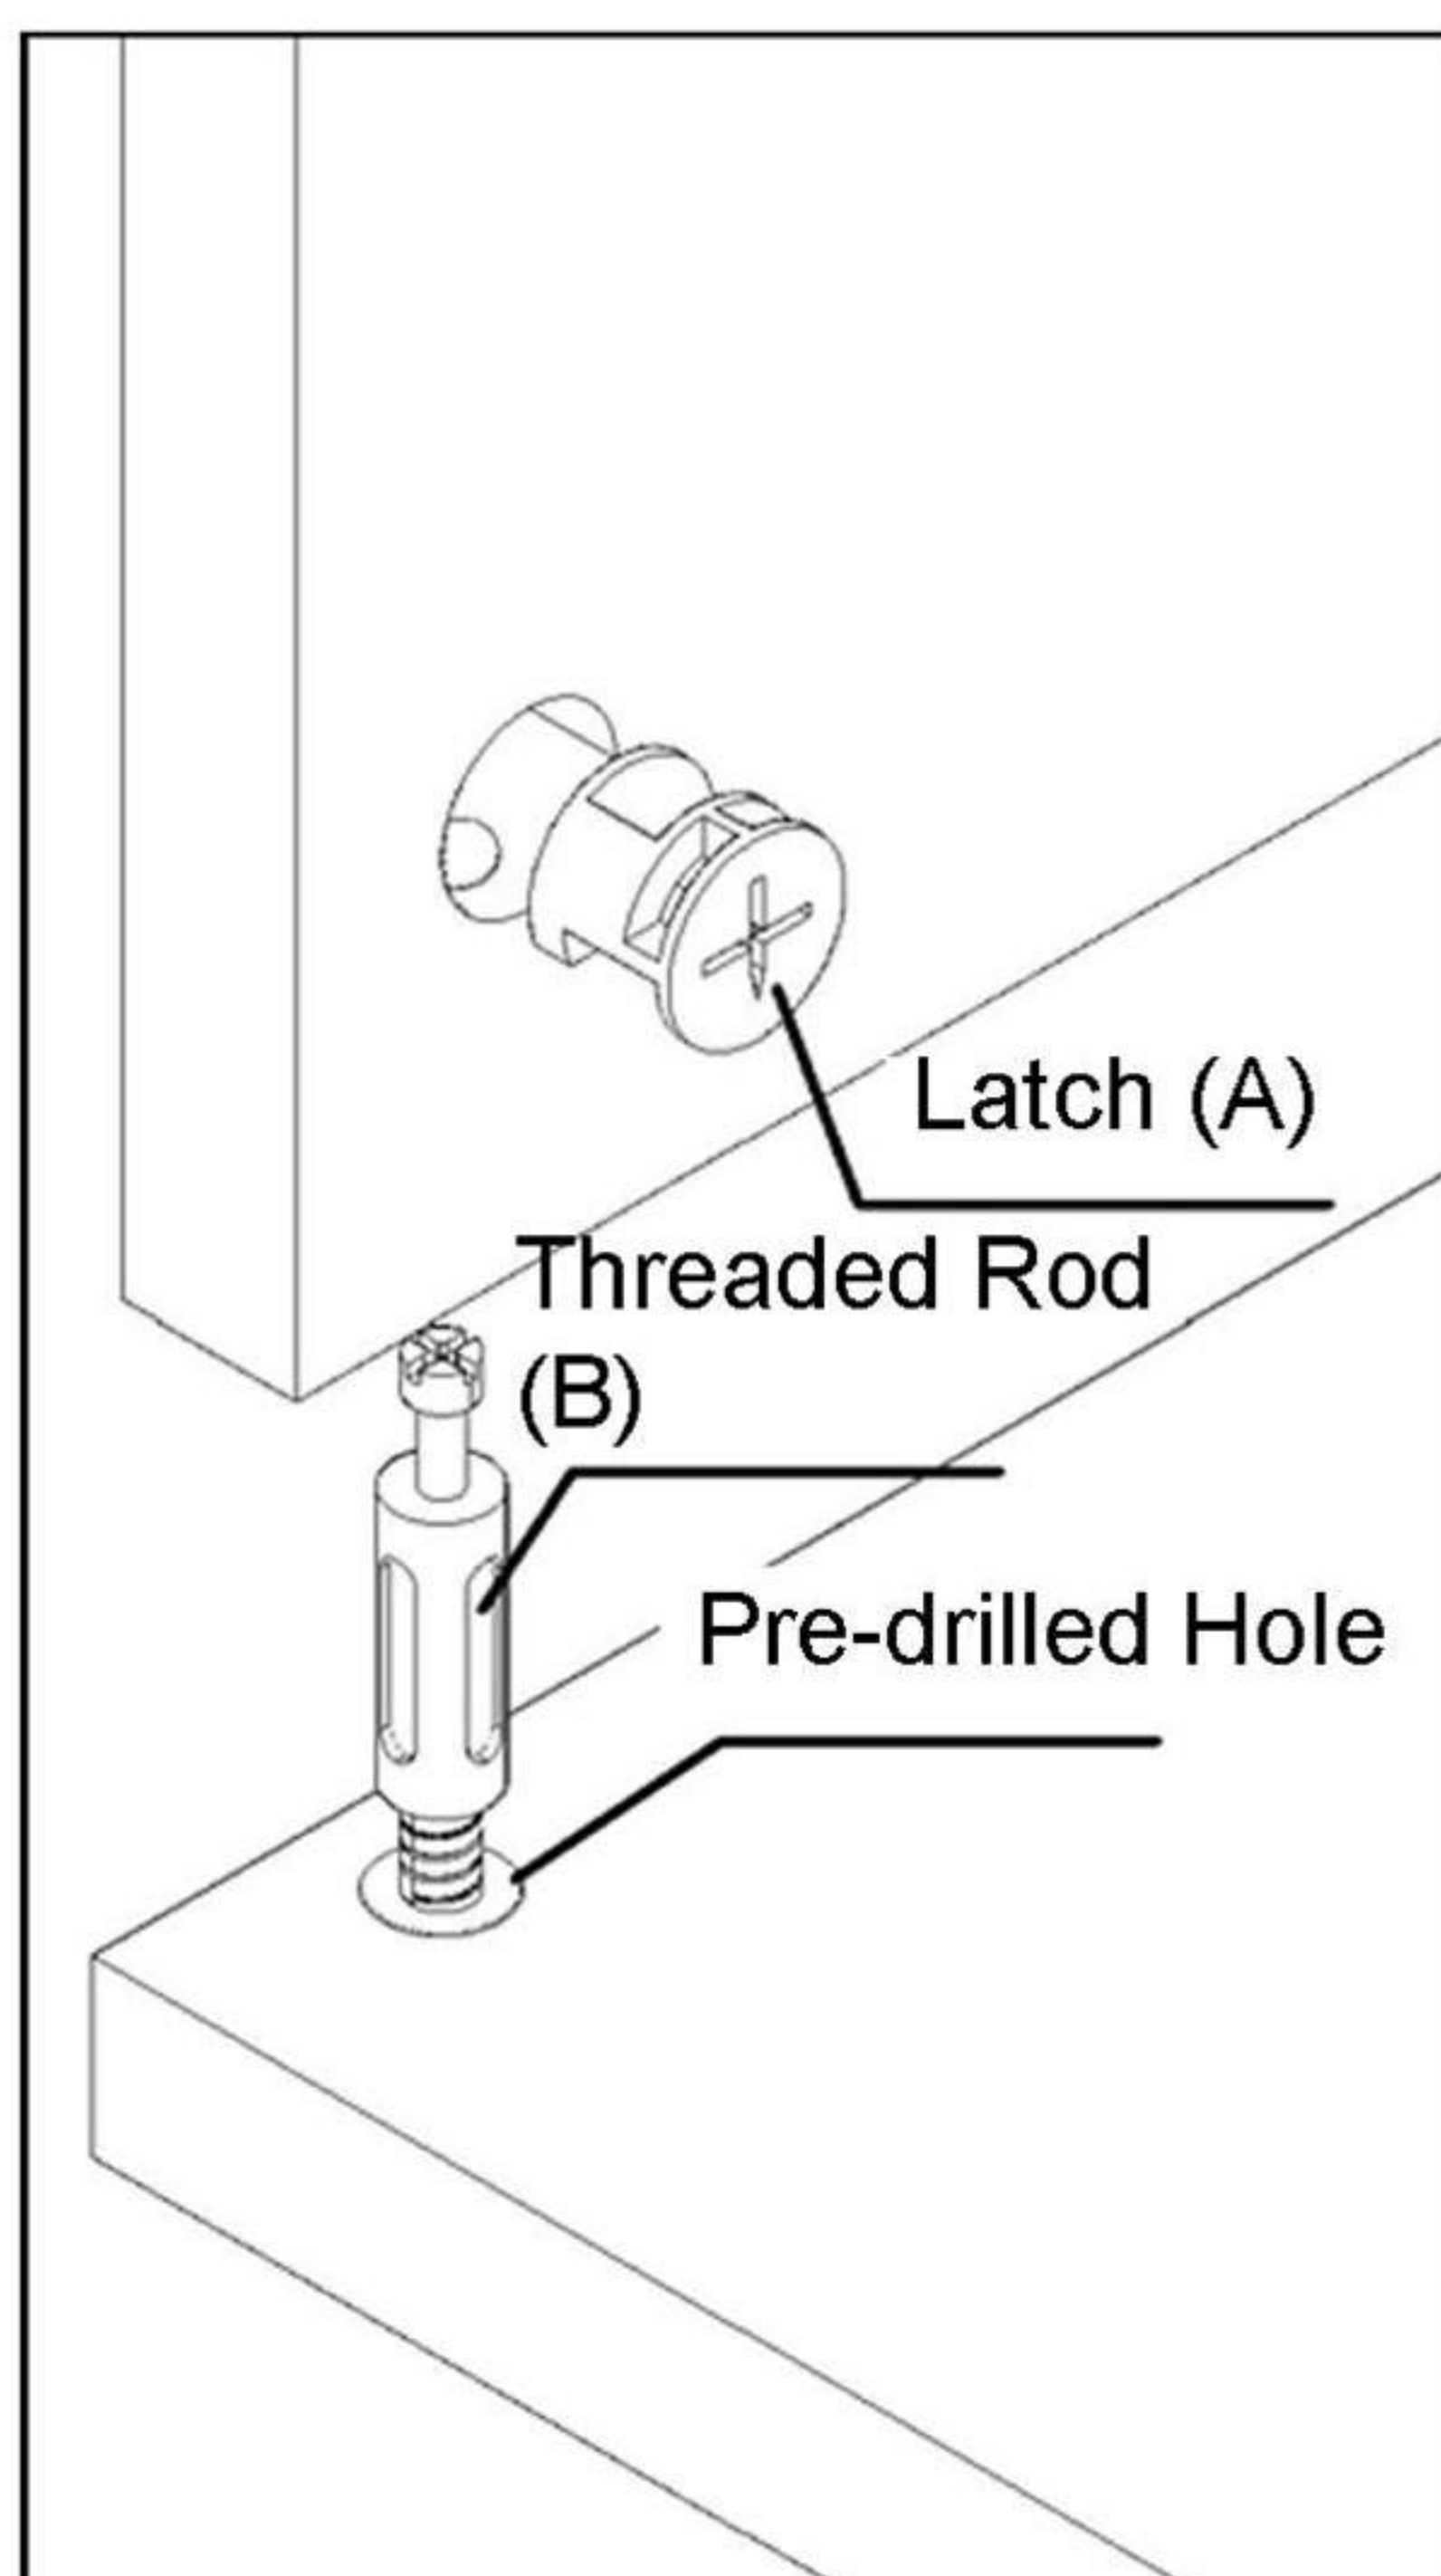


1. Screw the B (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed A into the corresponding hole of the other piece. Press A (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.


Step 1:

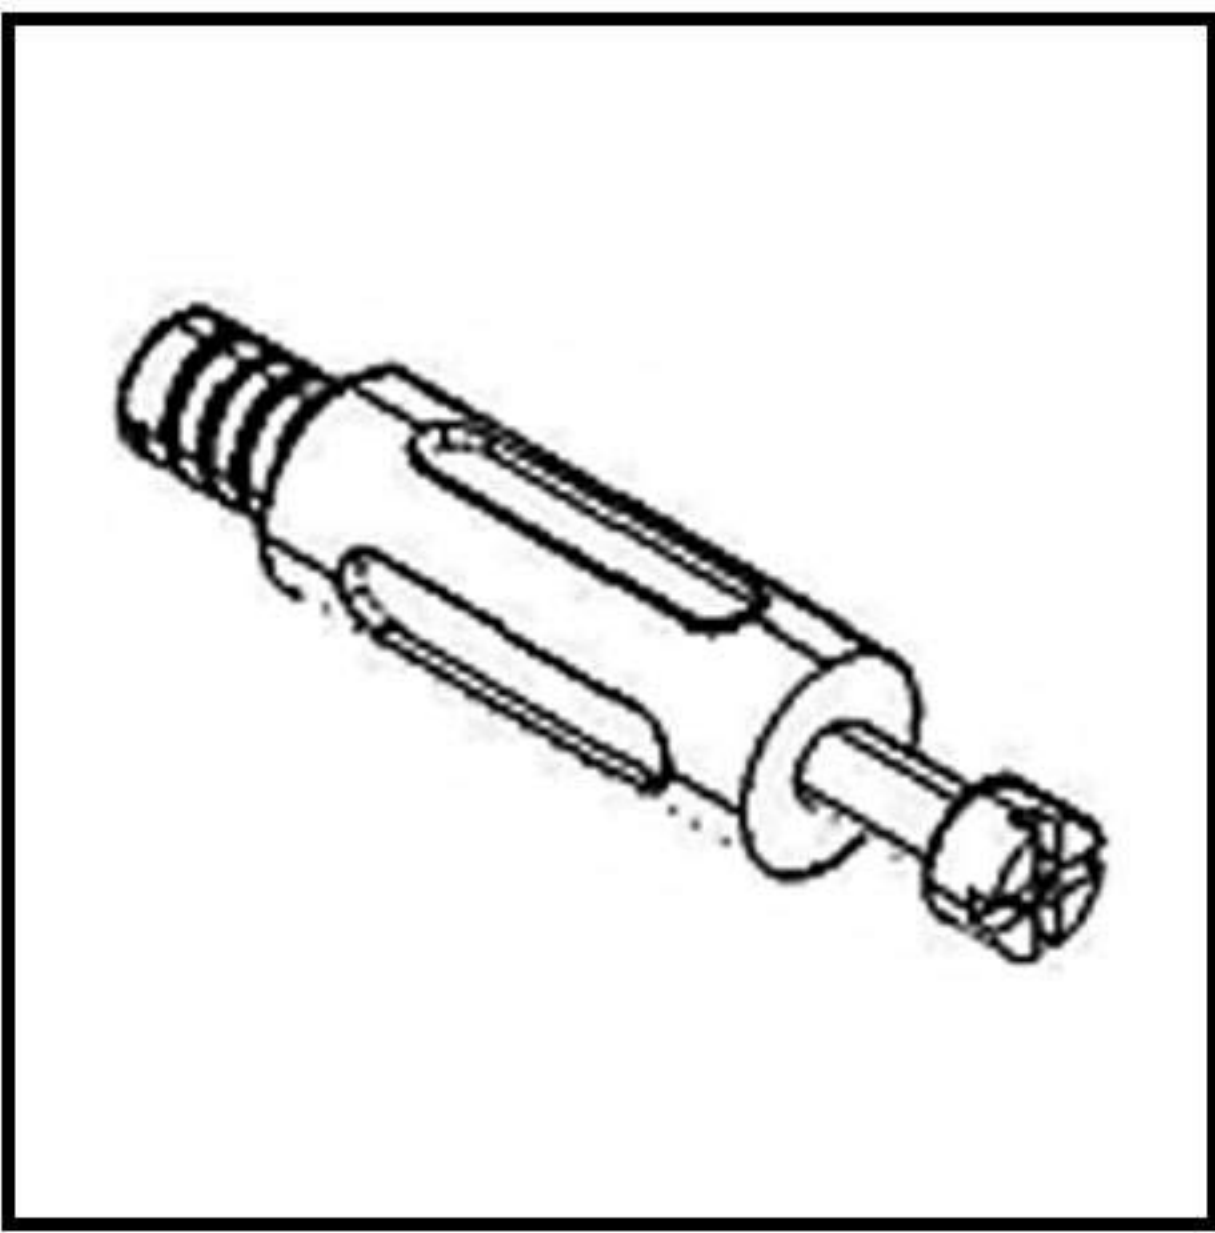


B

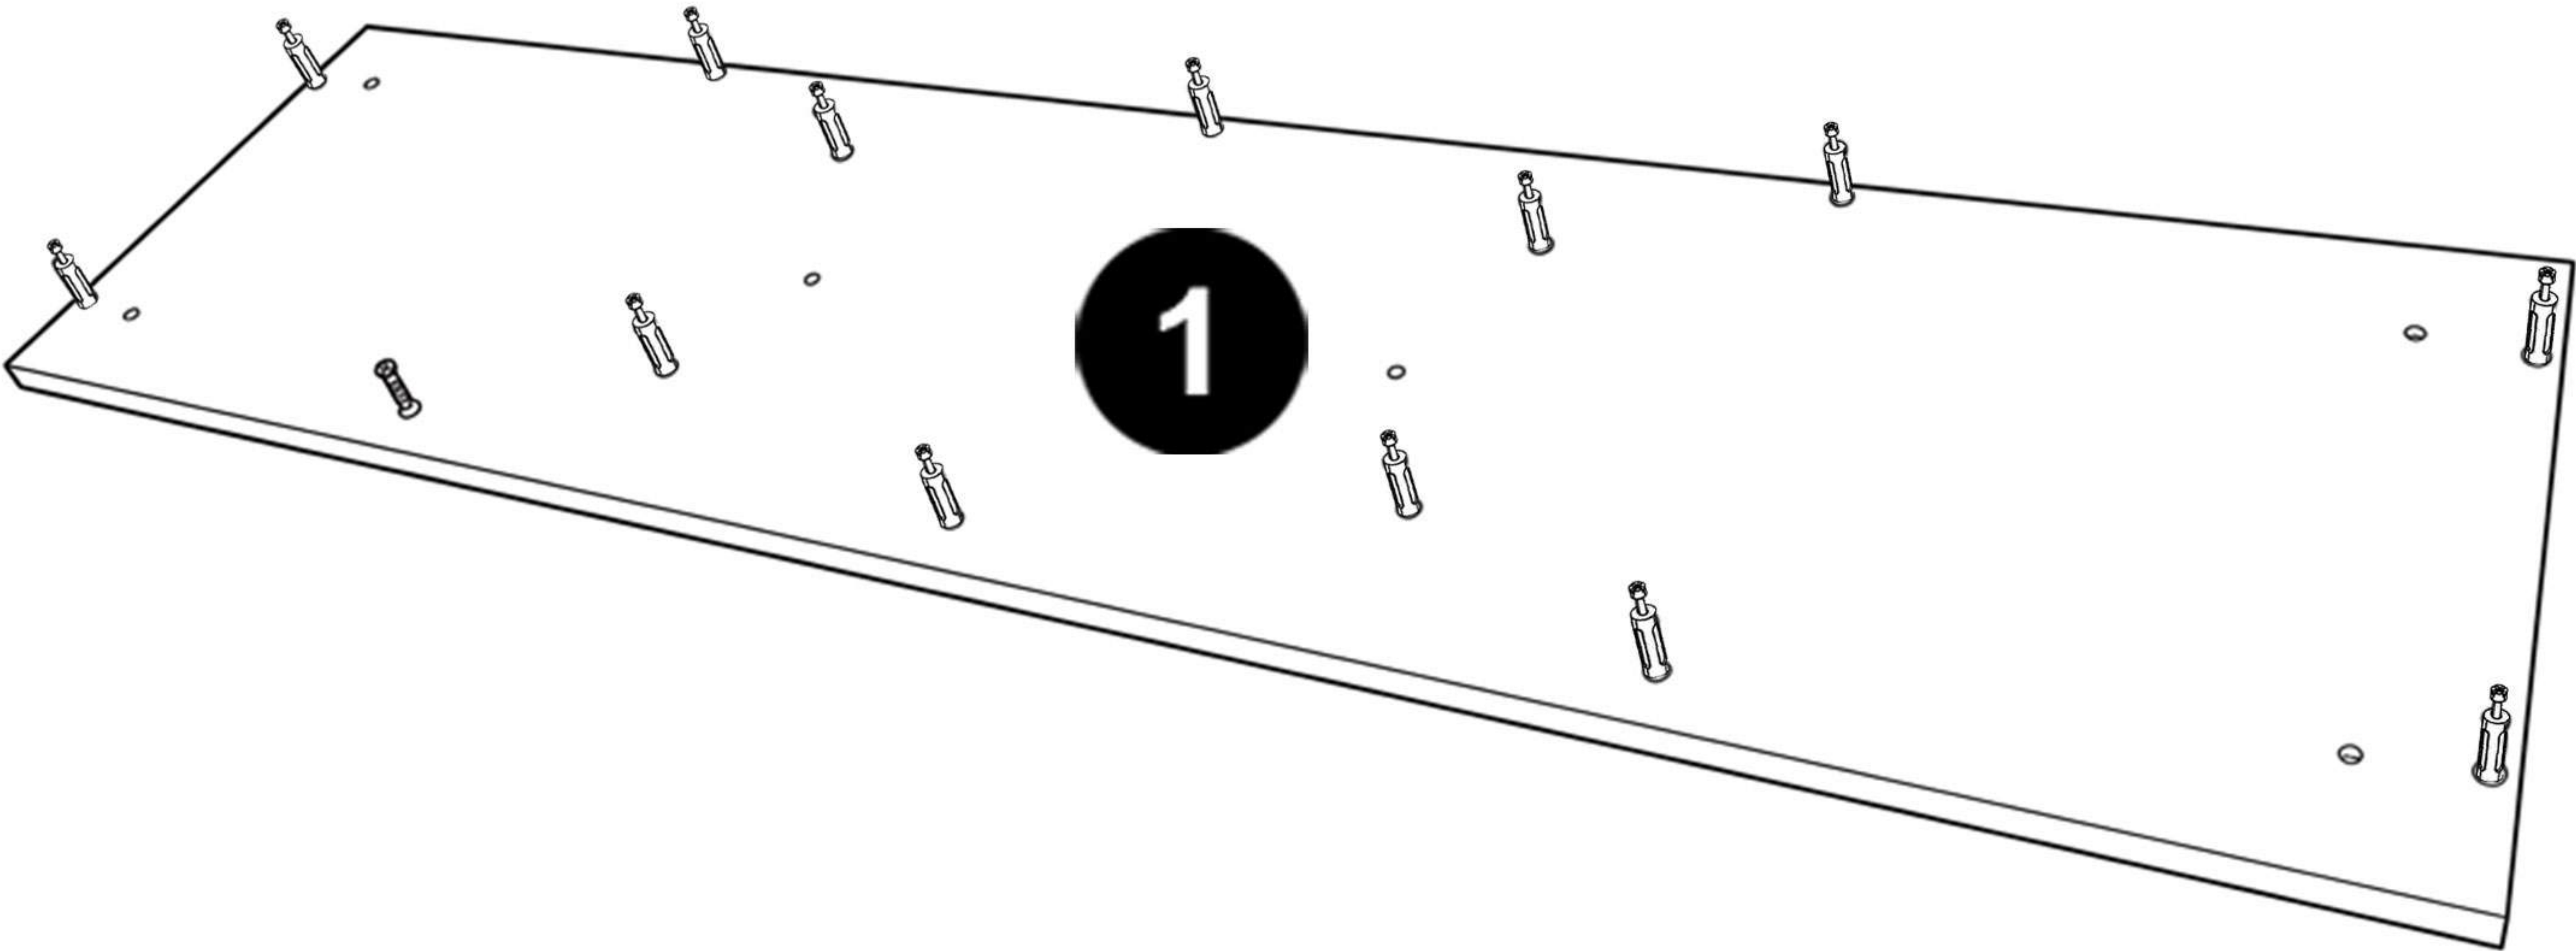

Step 2:

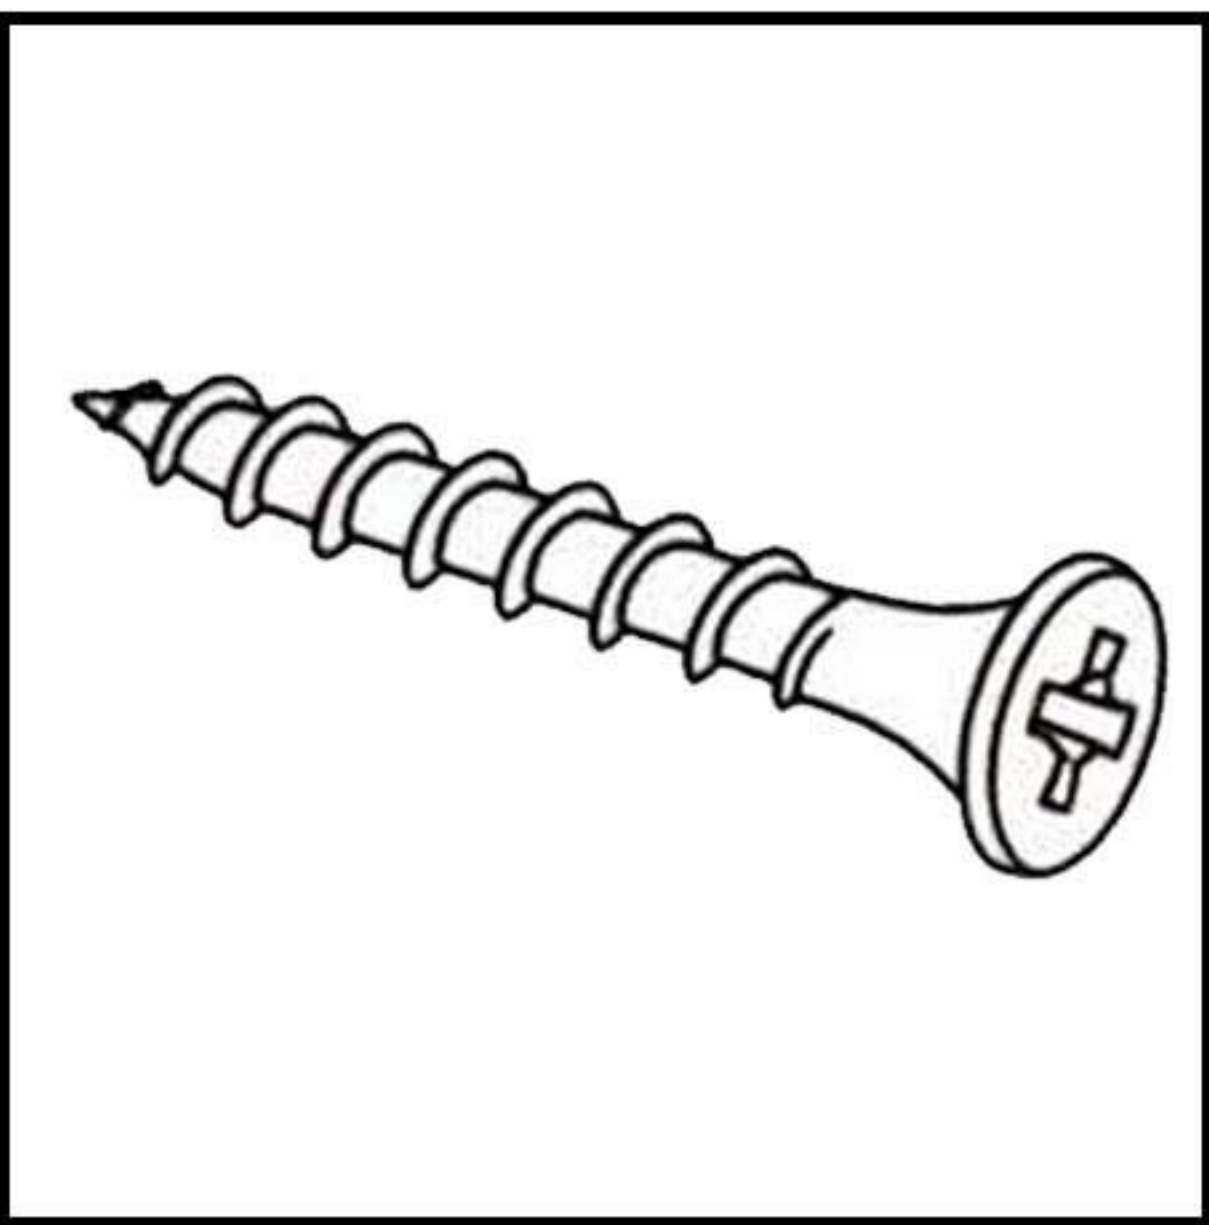


D

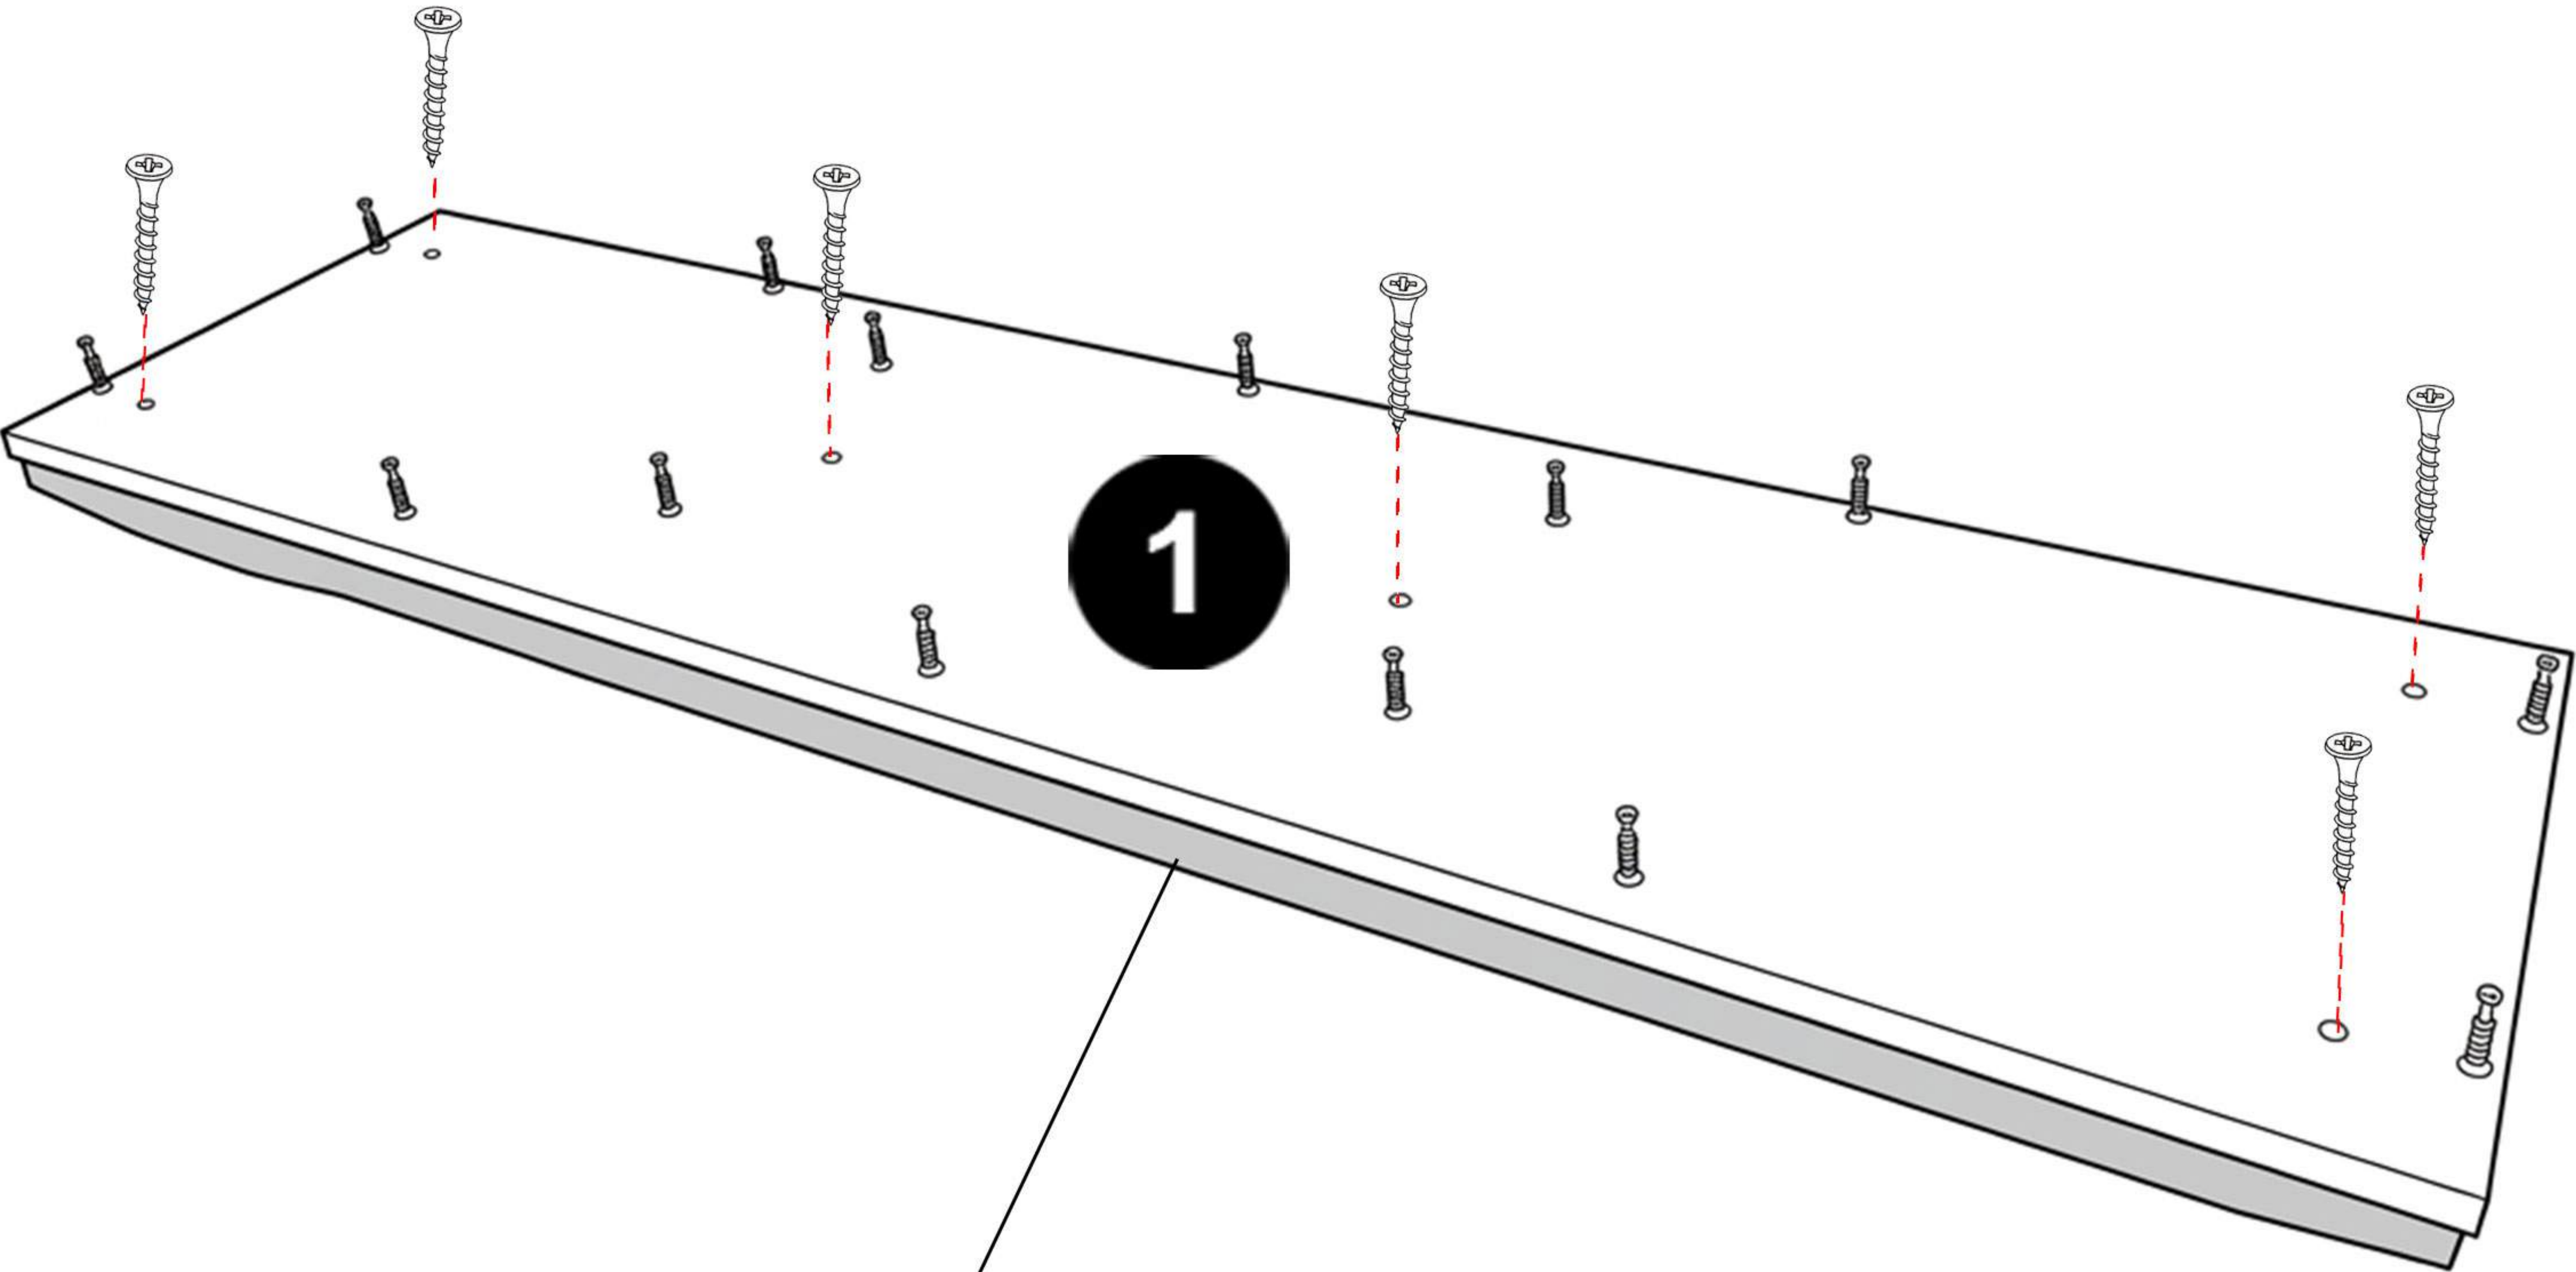


Seat cushion


Step 3:

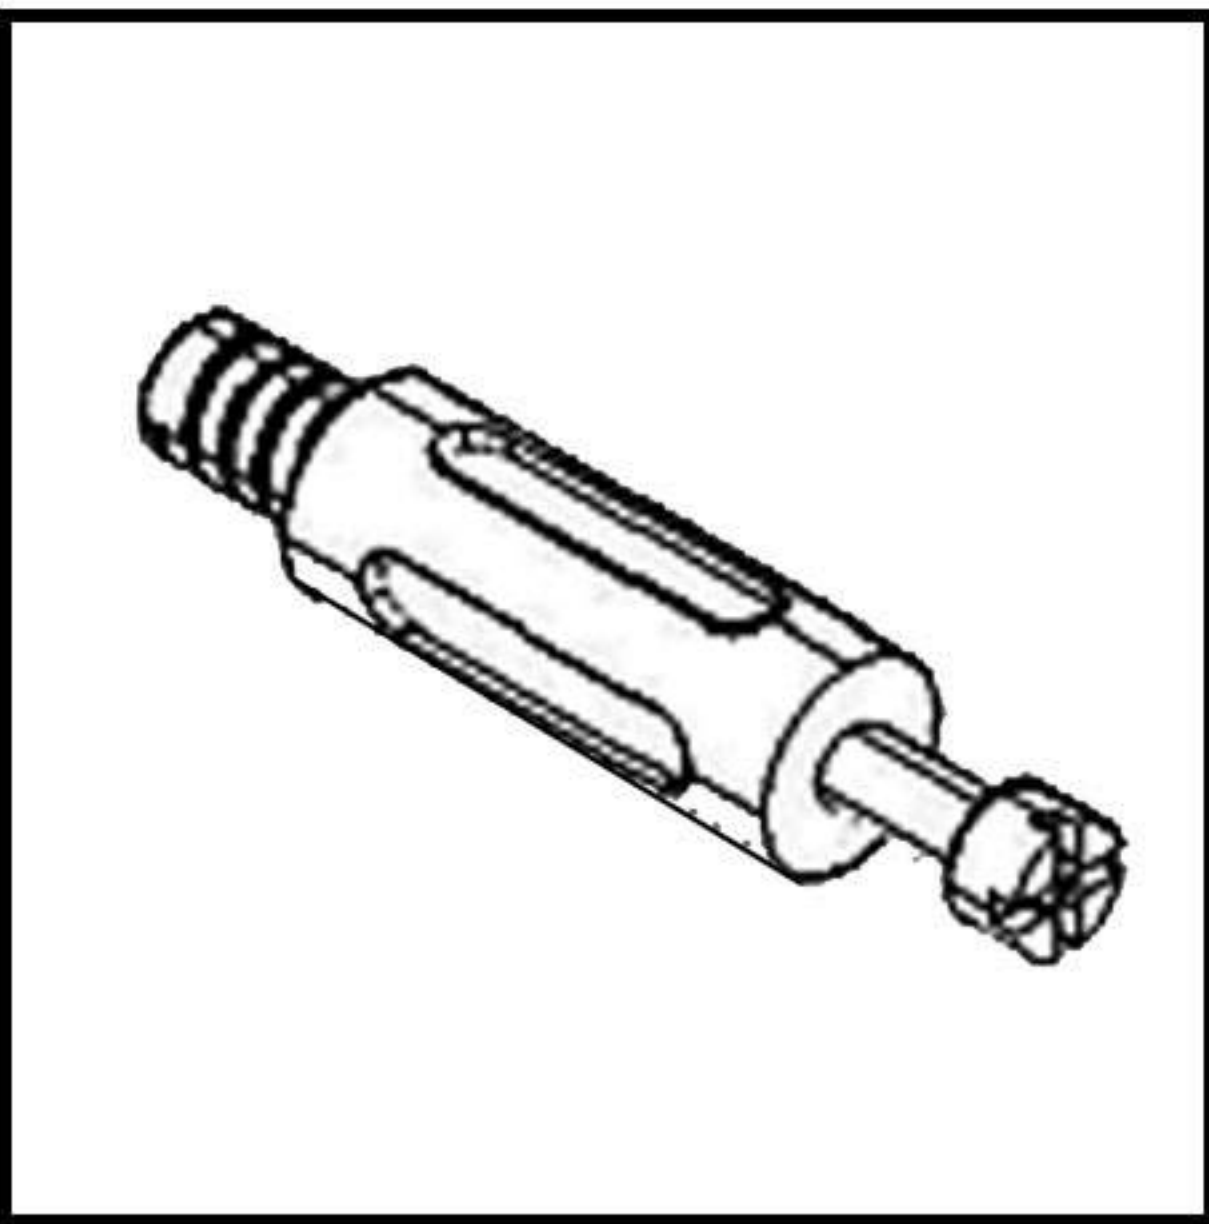

B

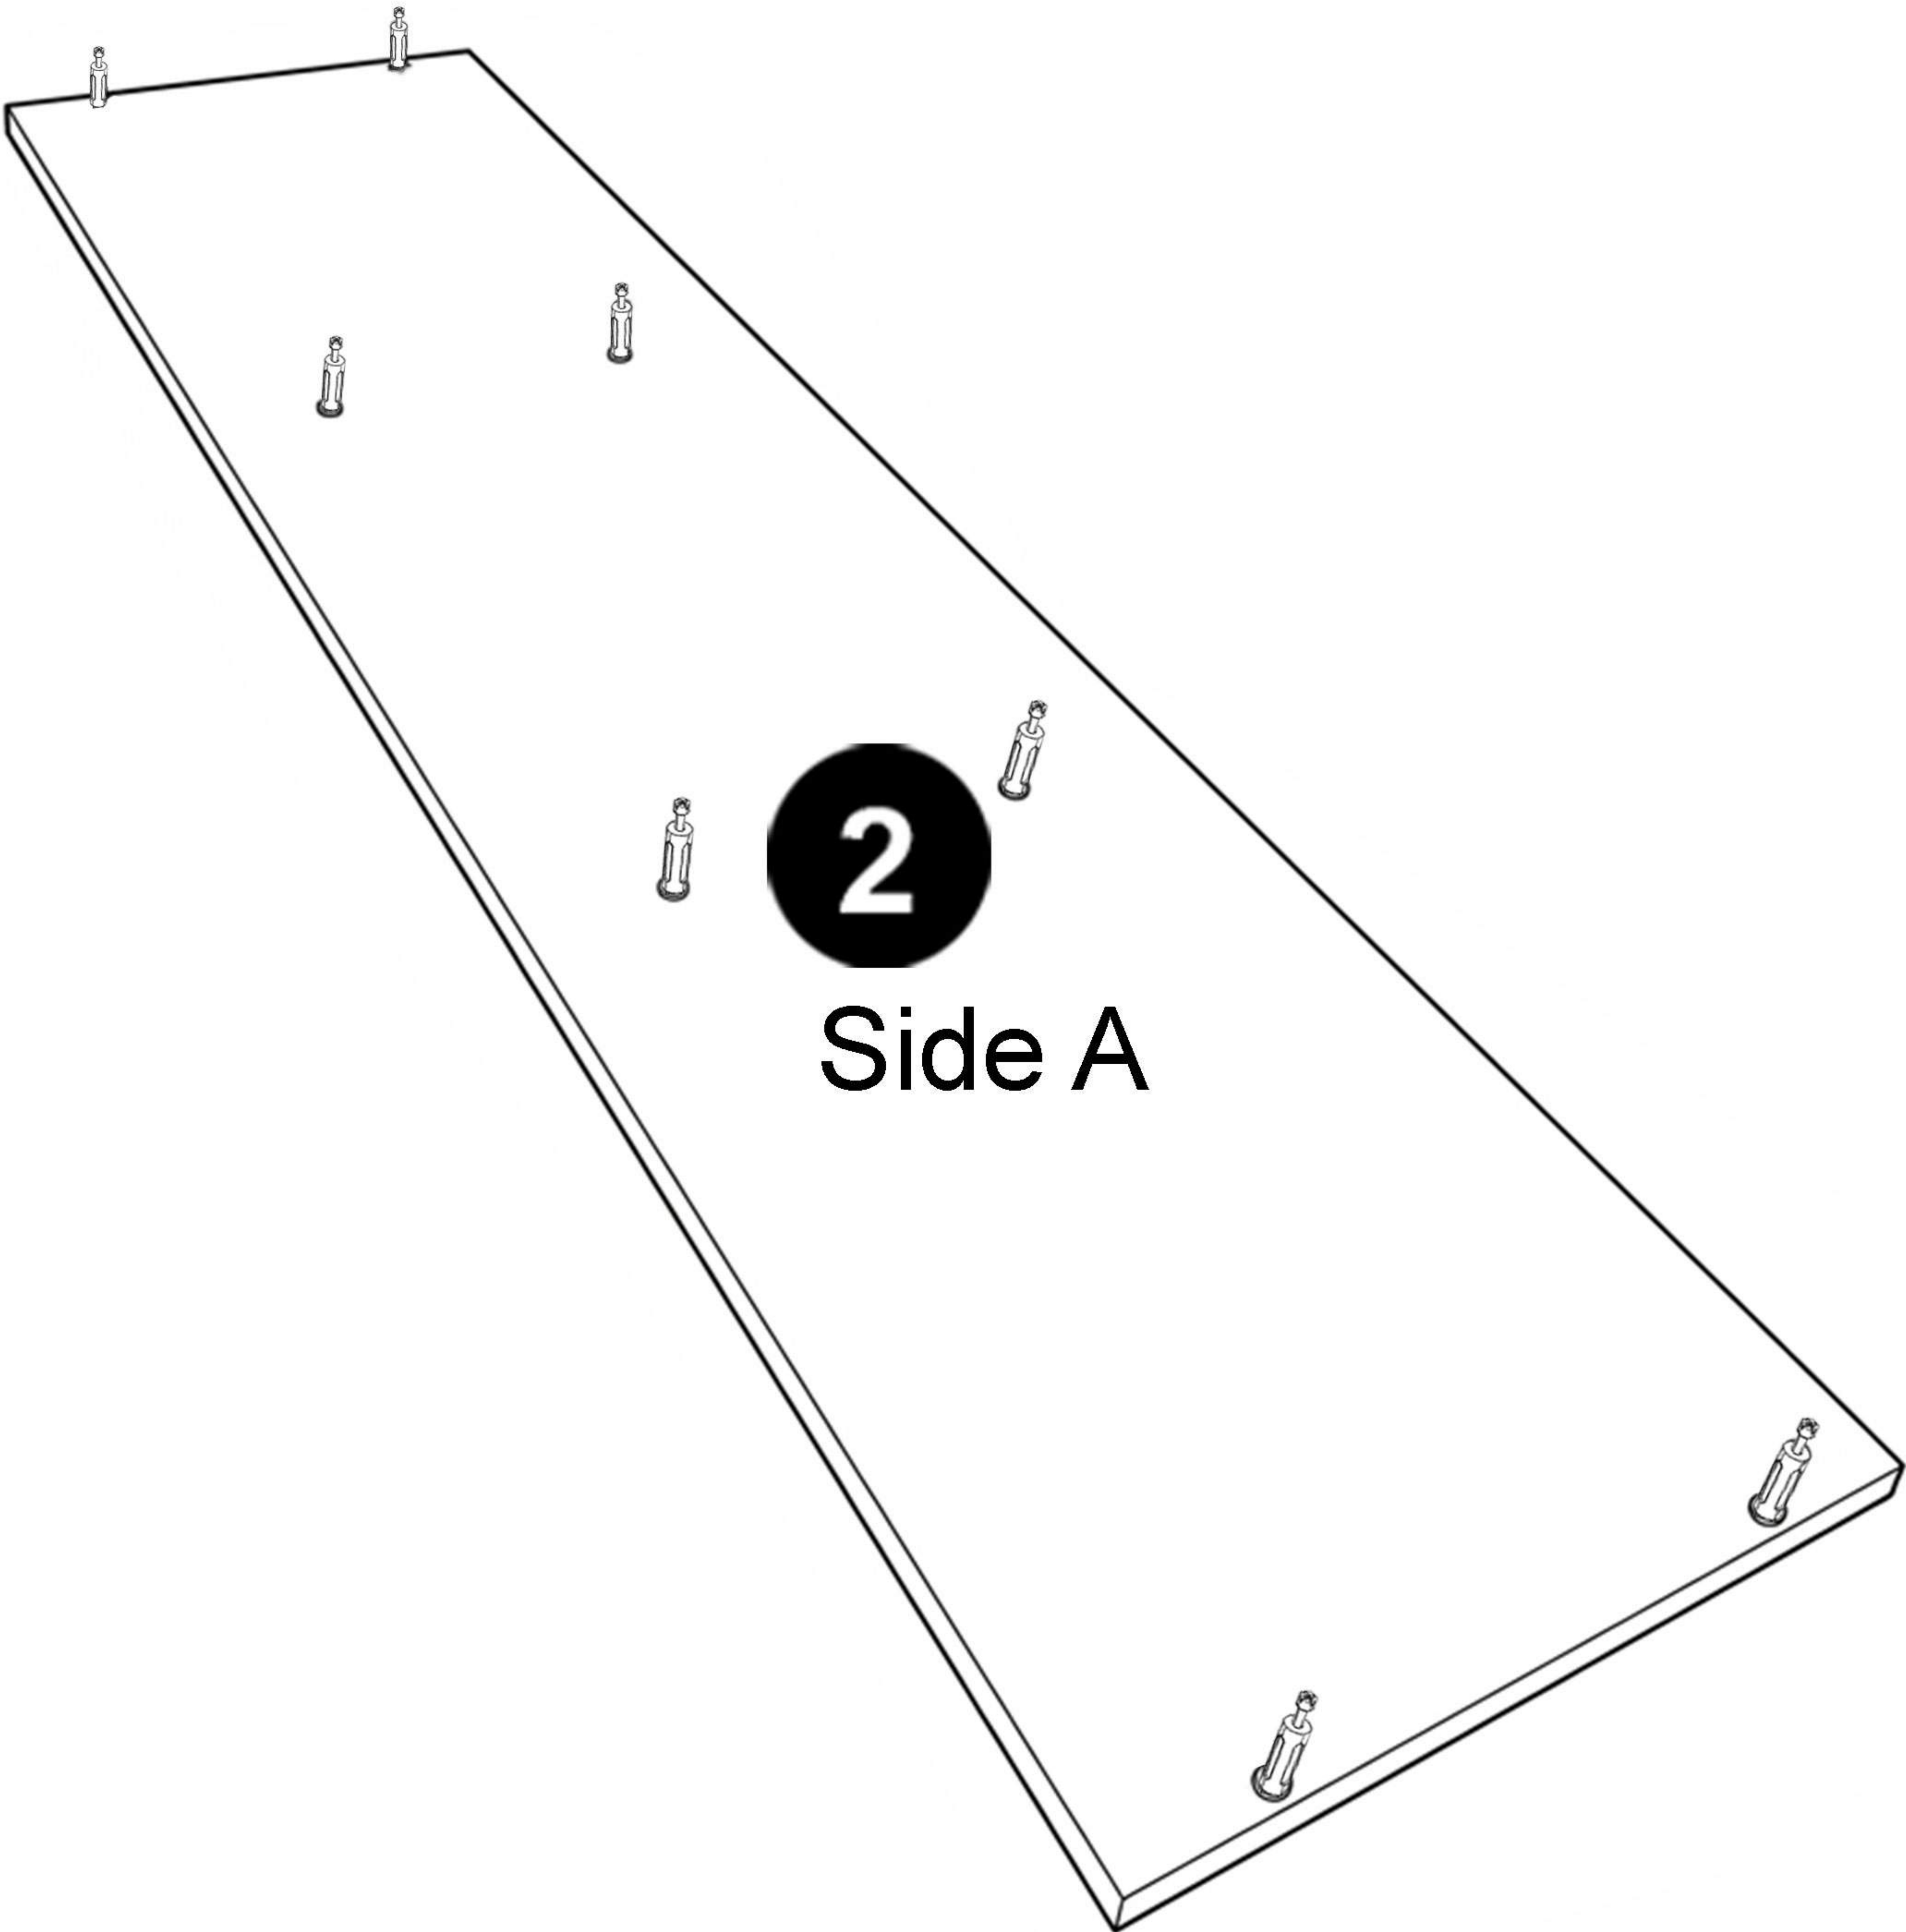


Step 4:

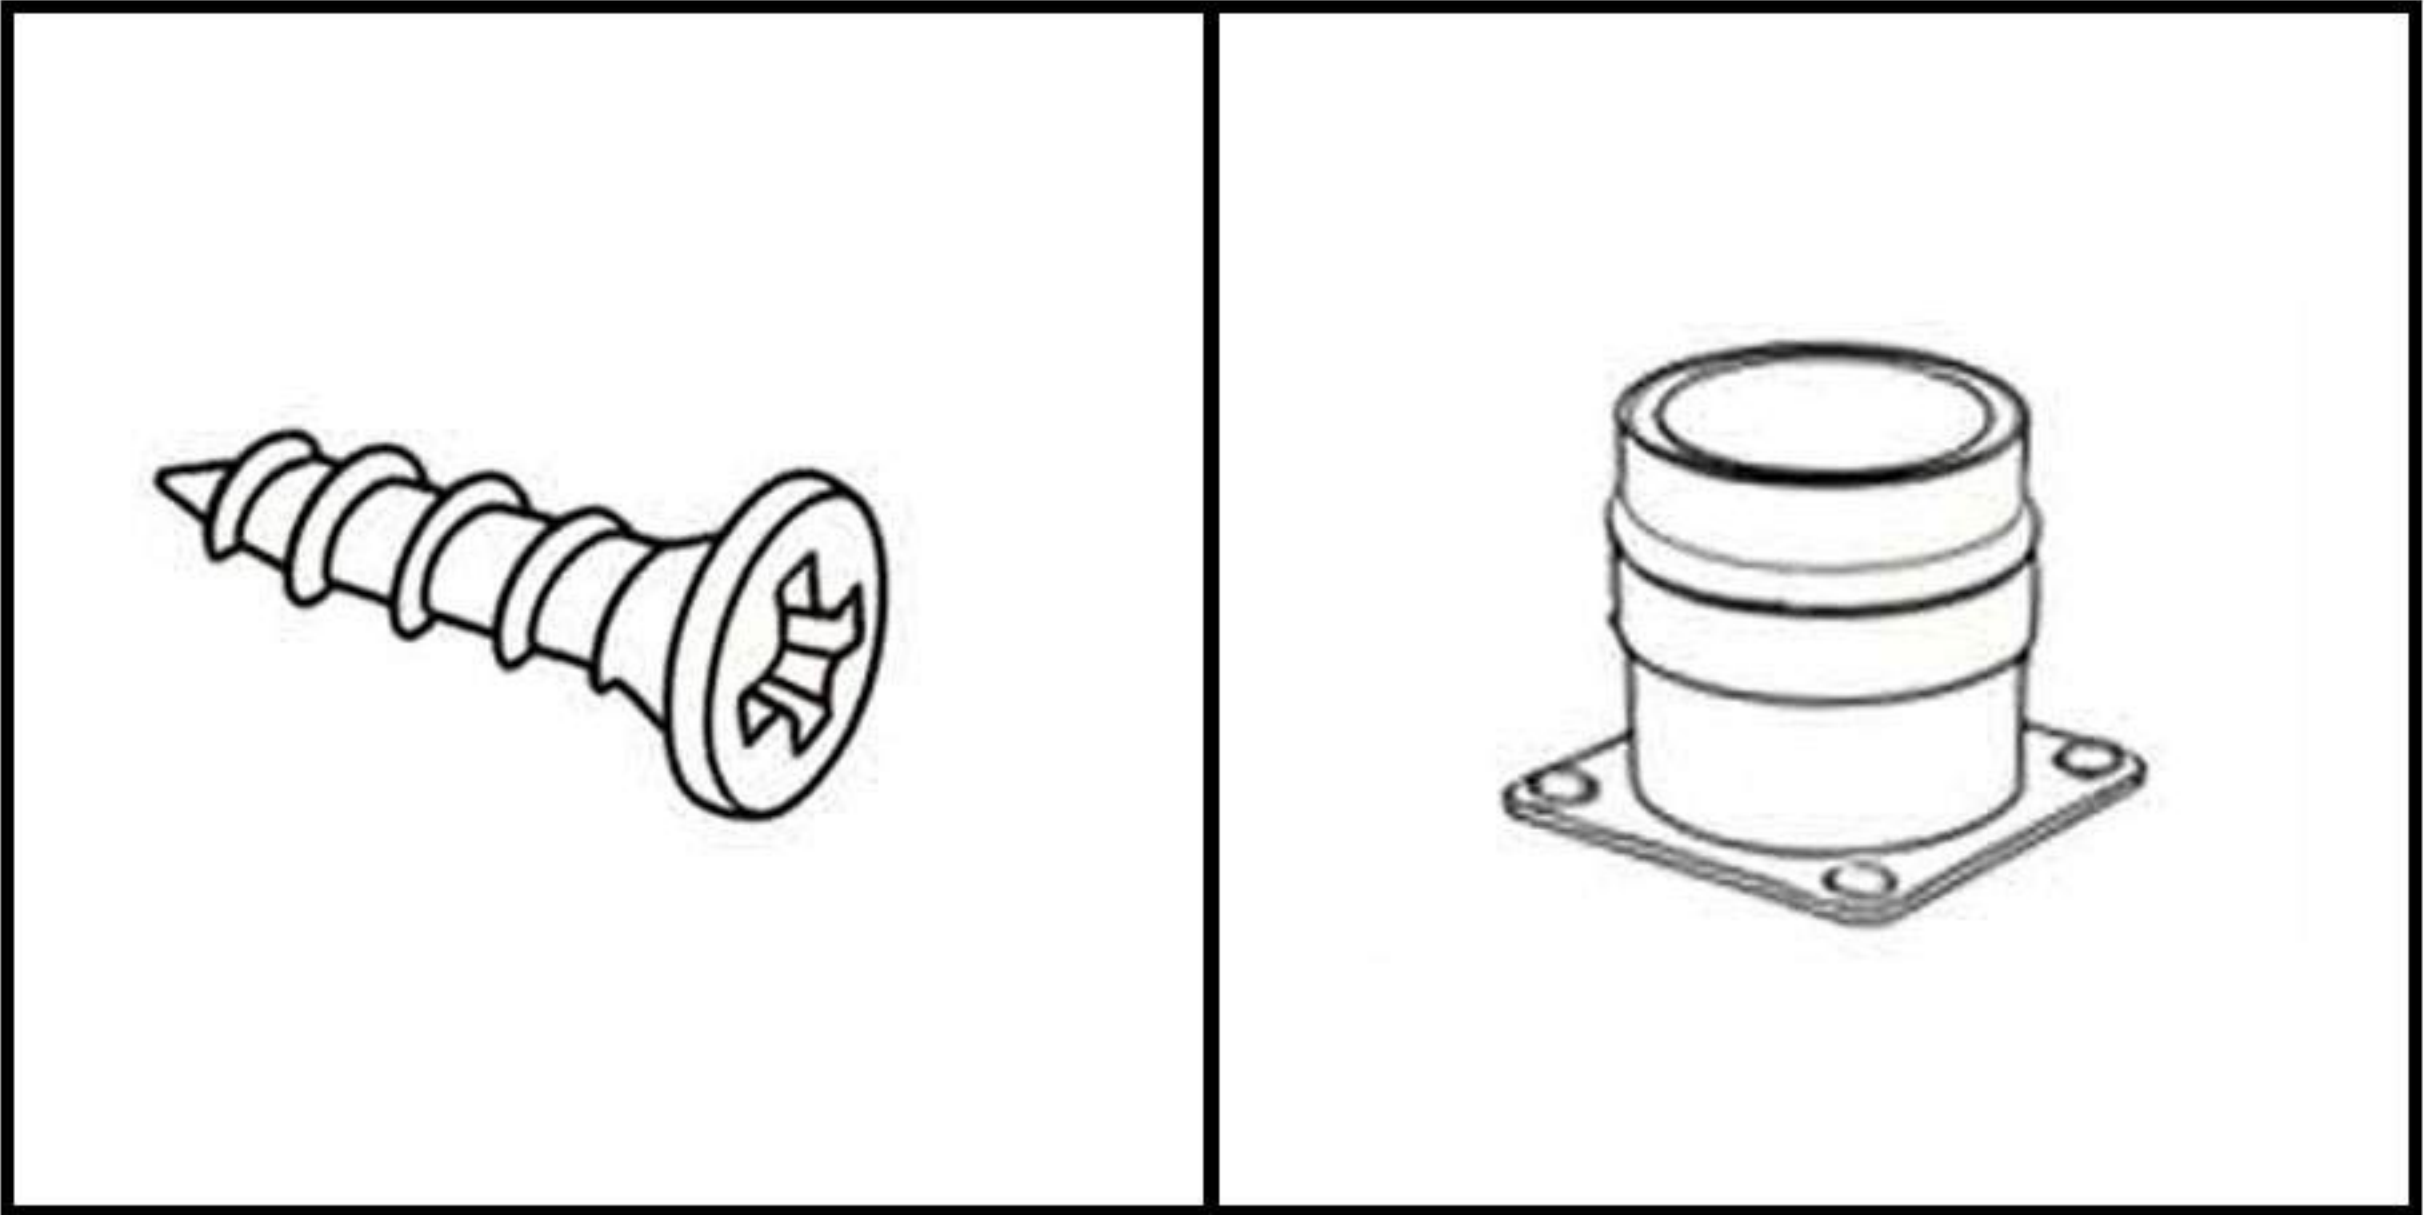


C

F

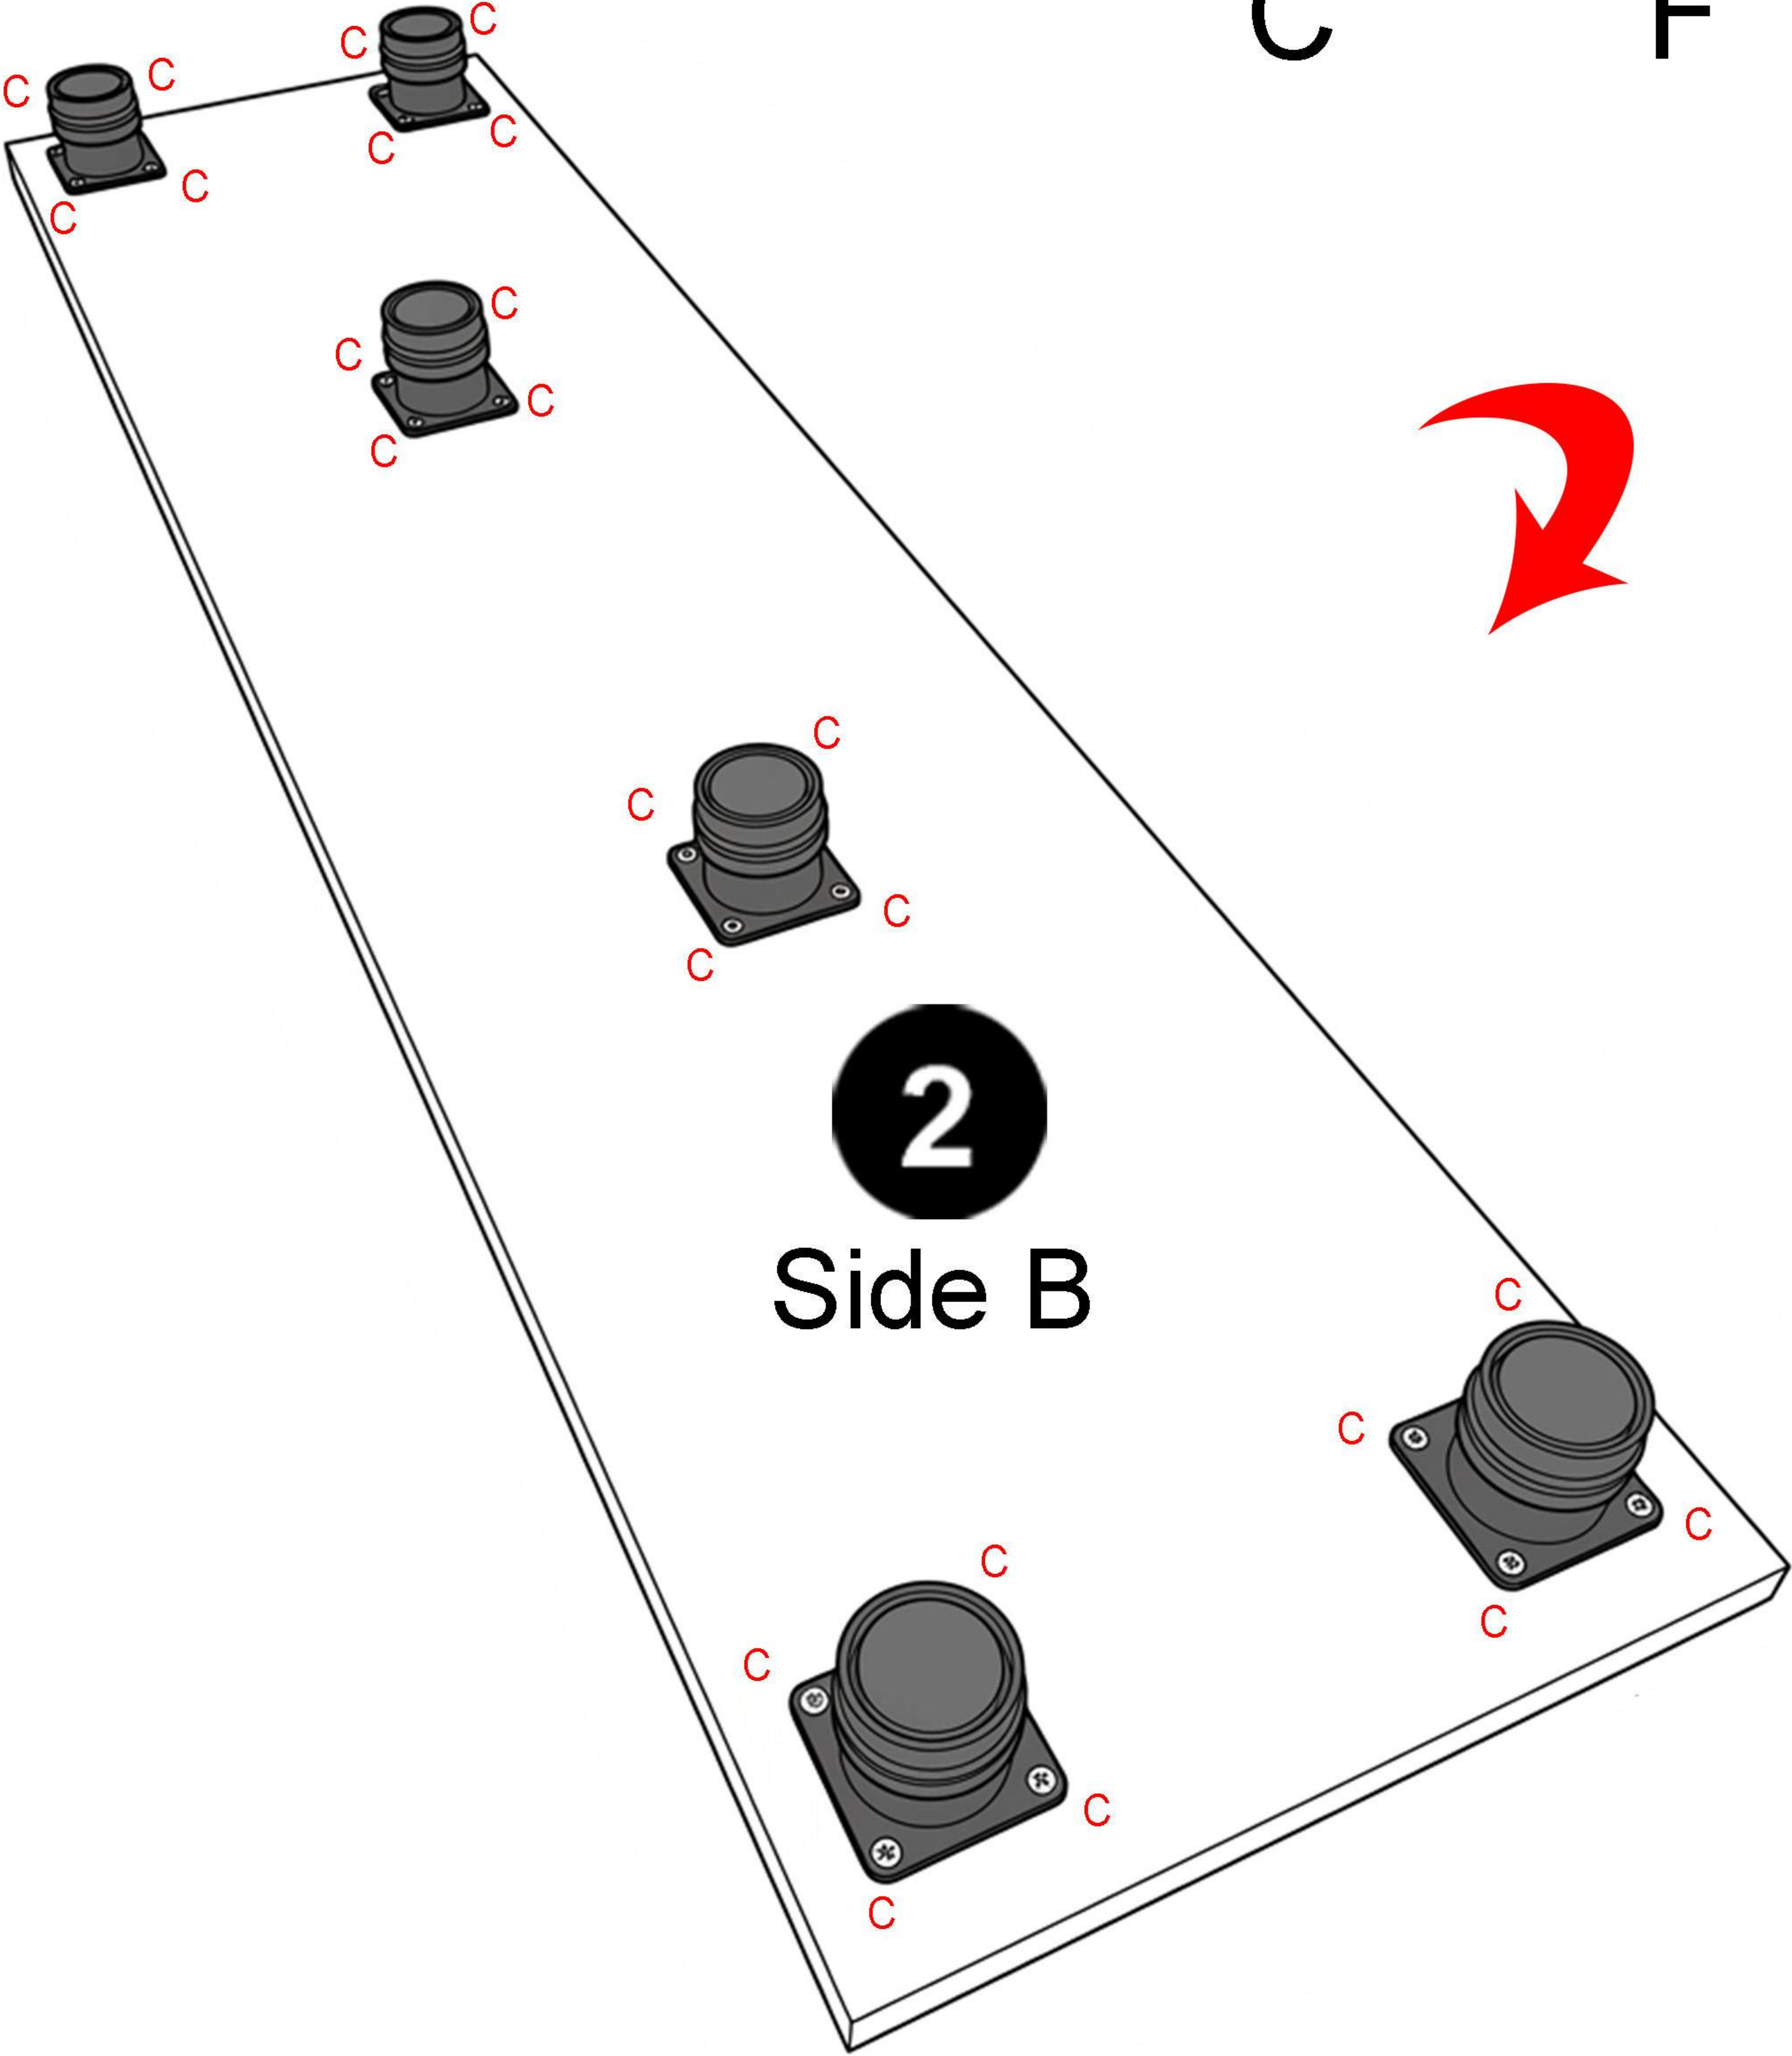


2
Side B

Step 5:

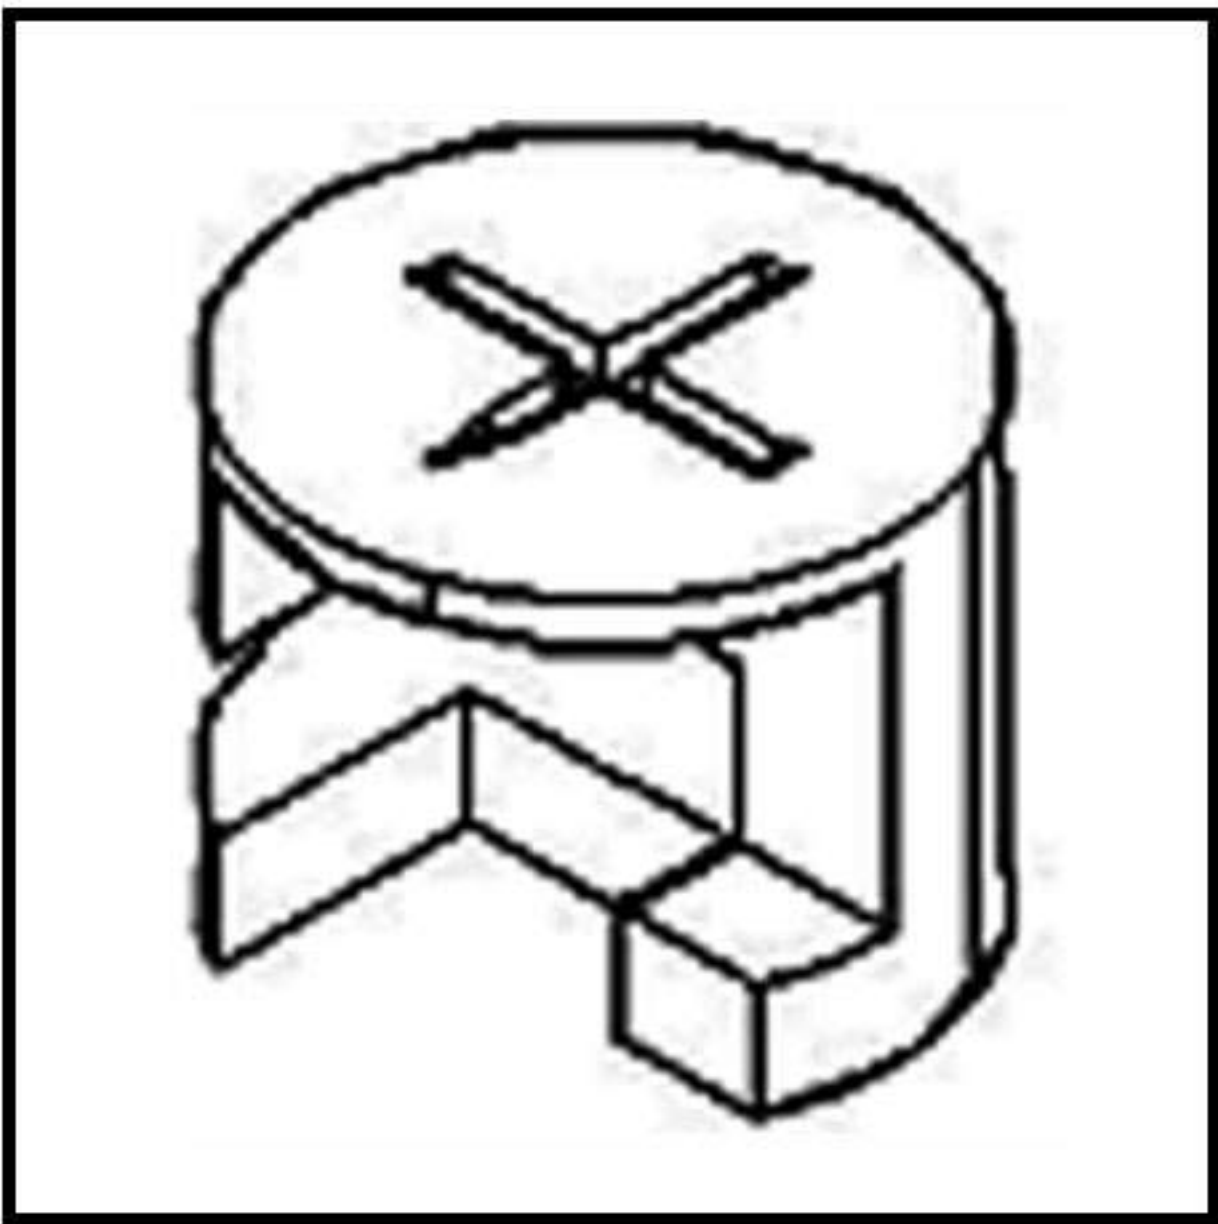


A


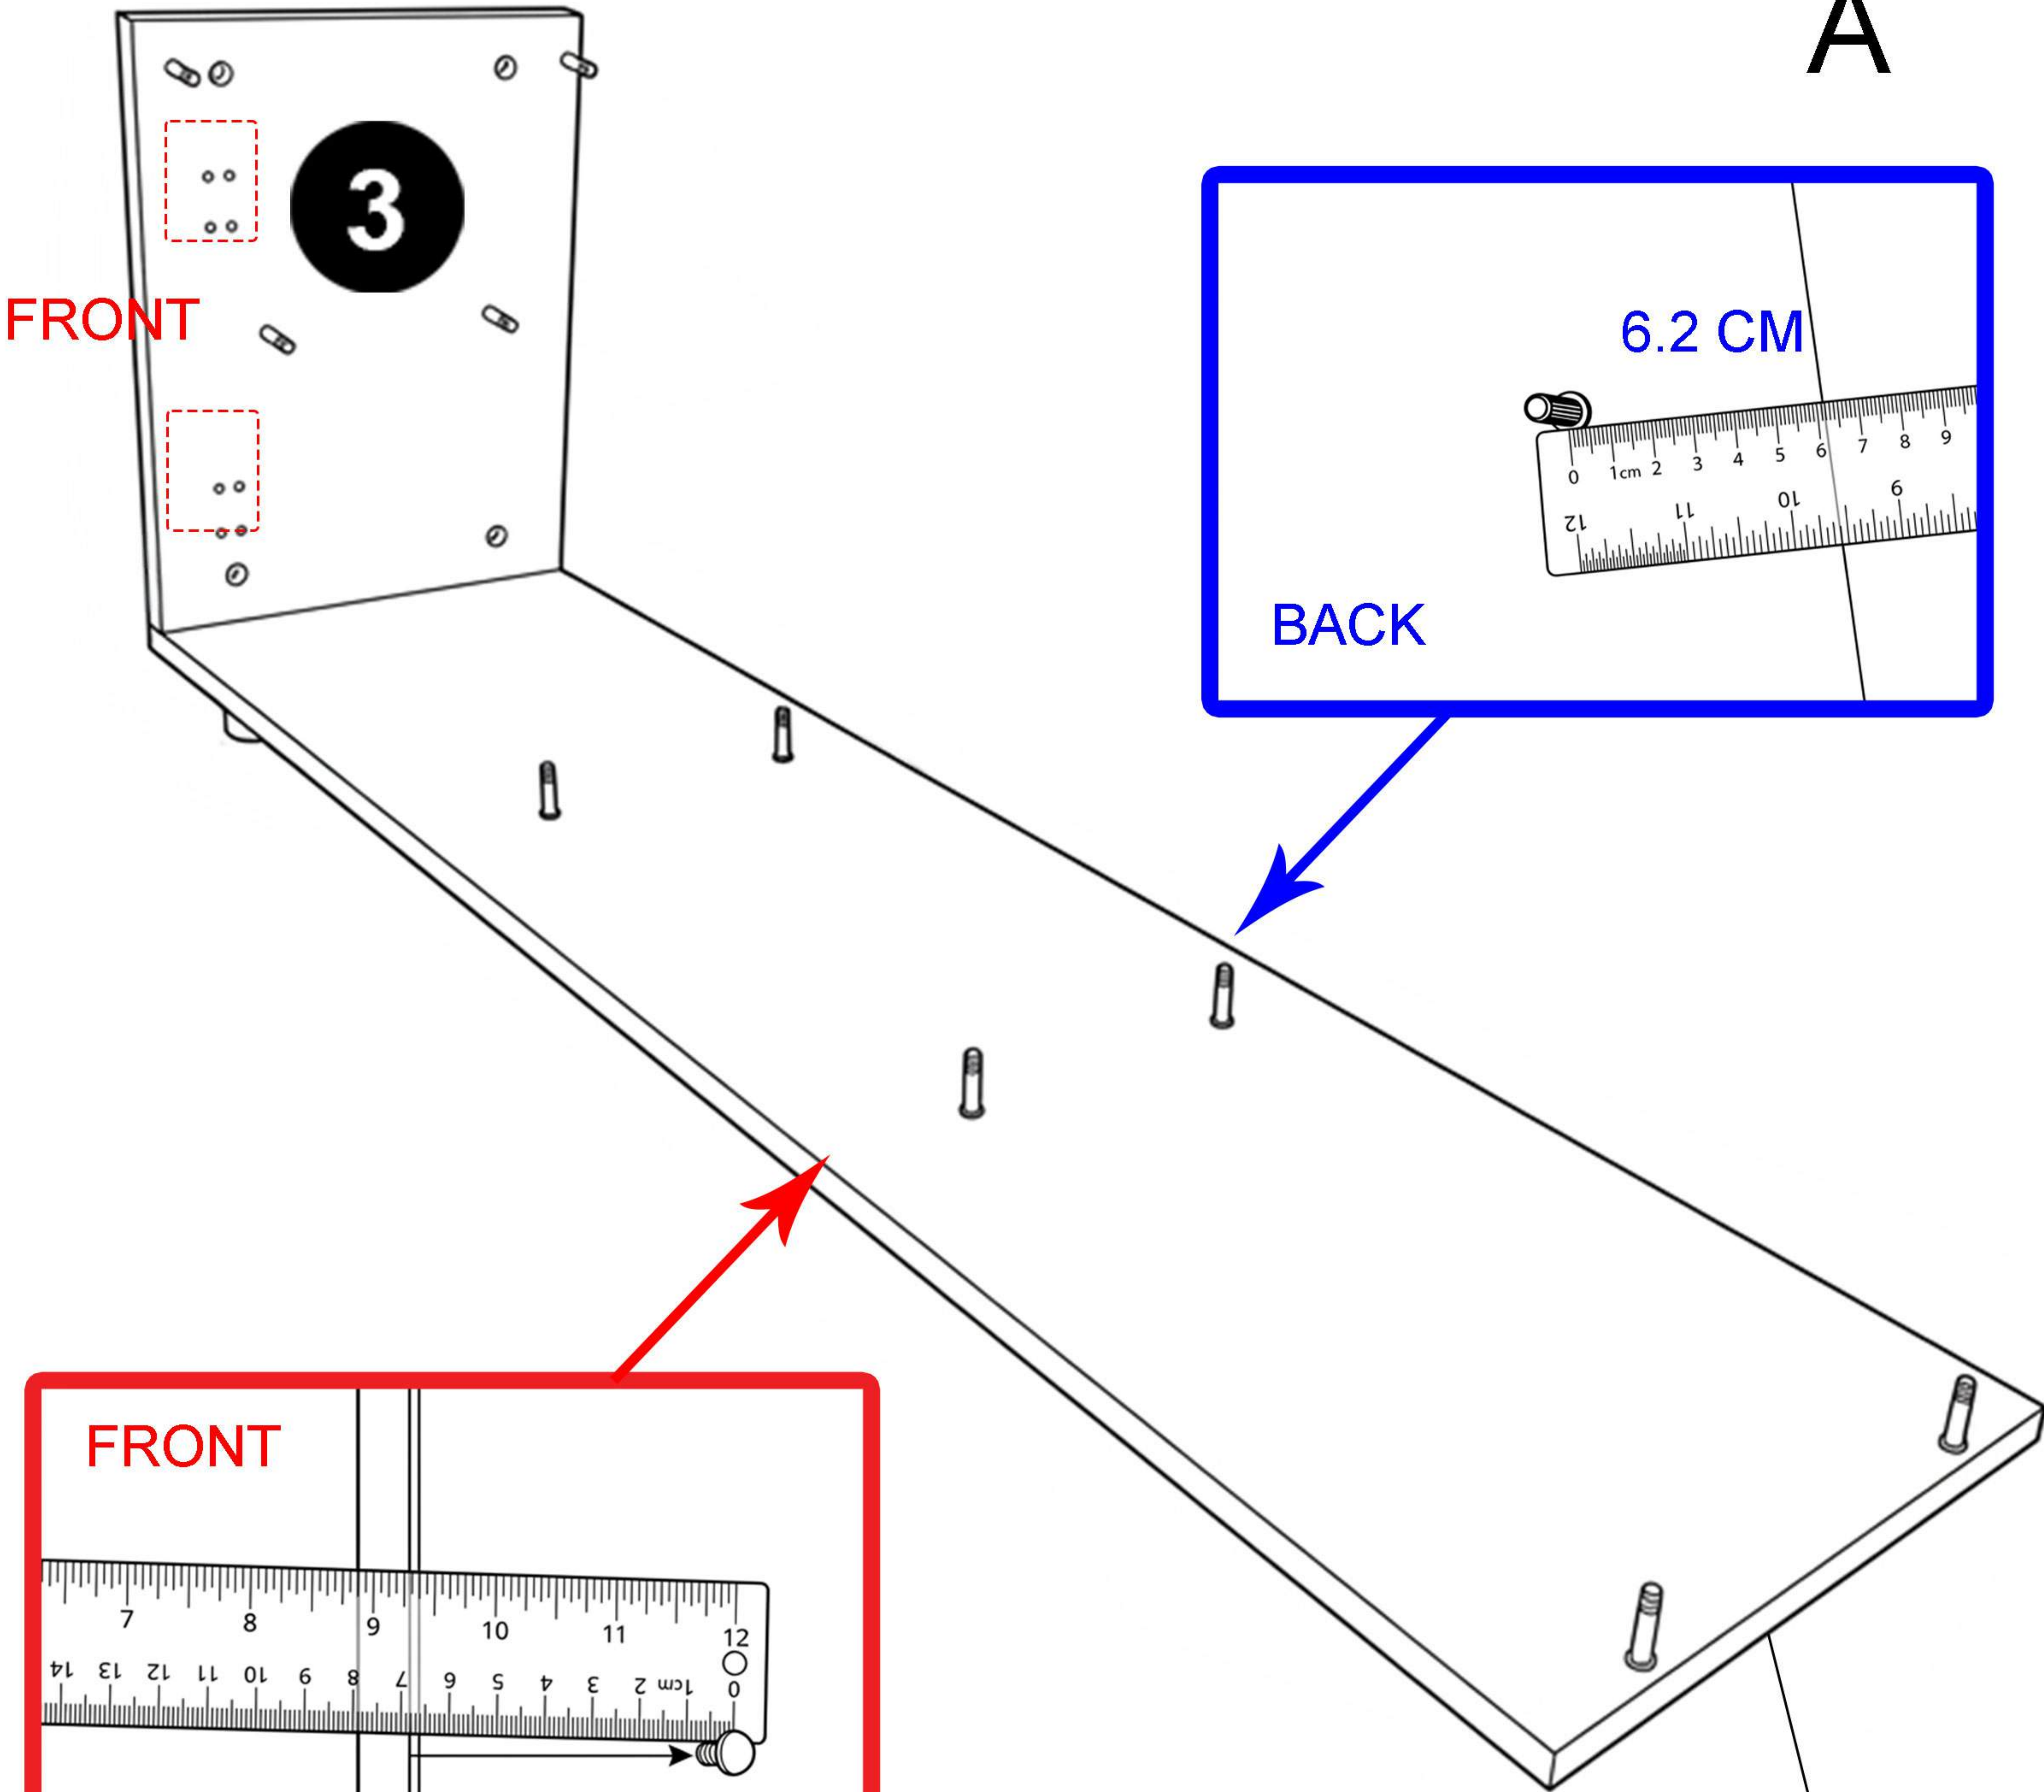


Step 4

Step 6:

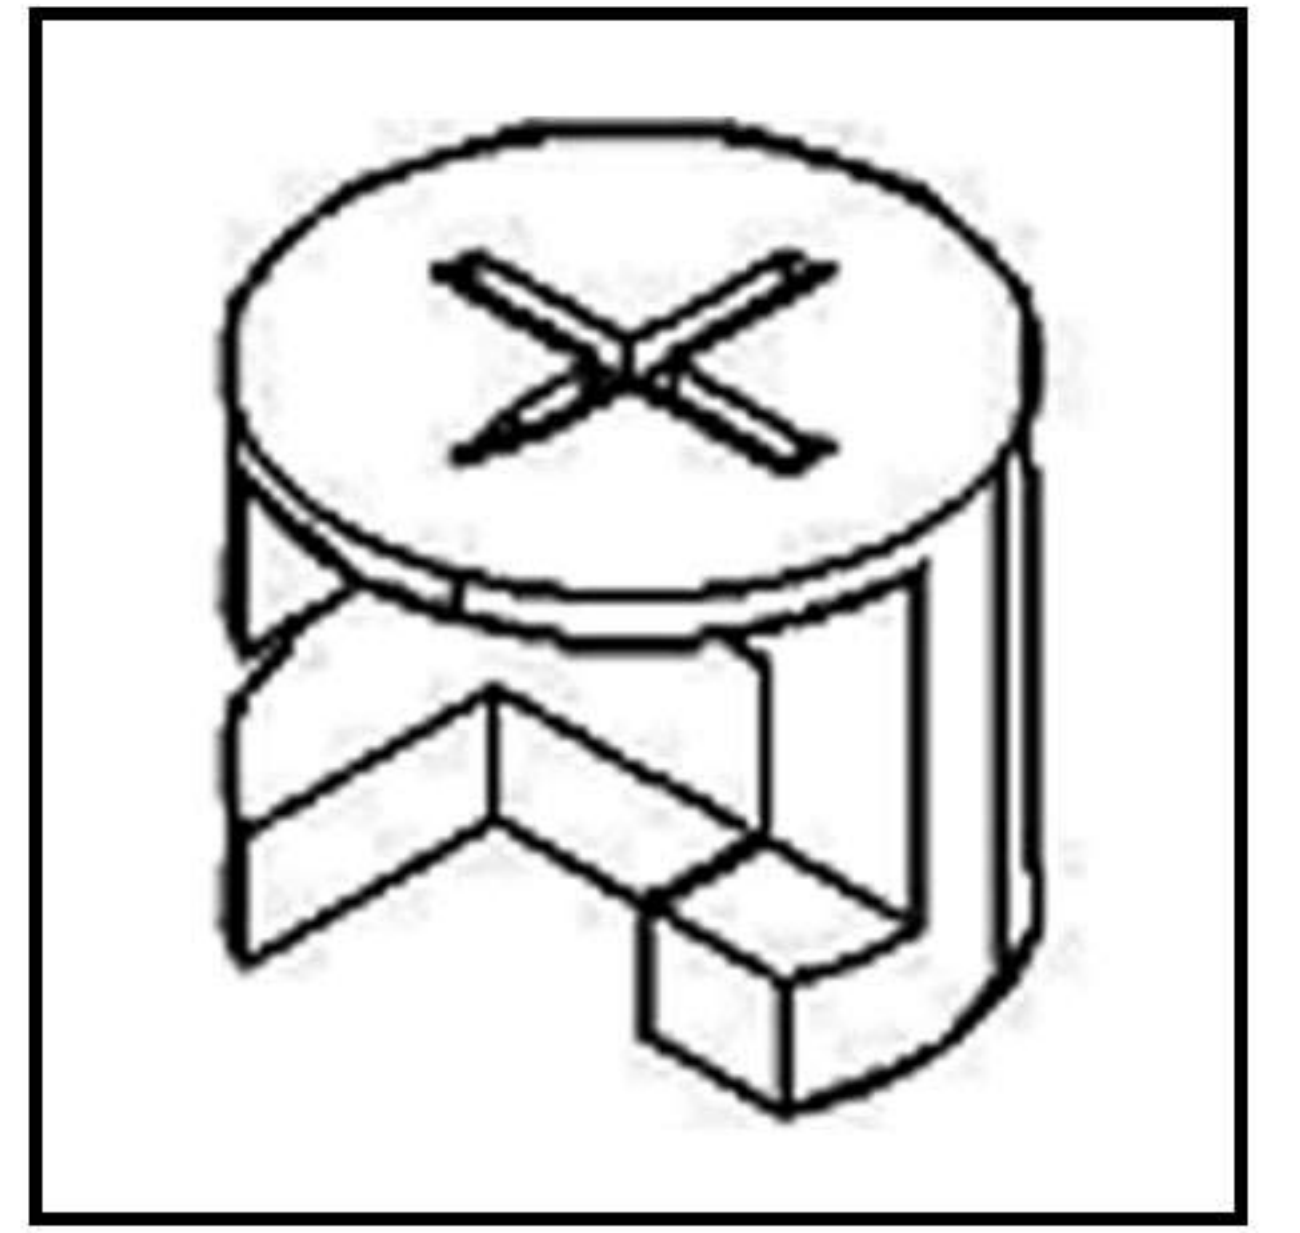


A

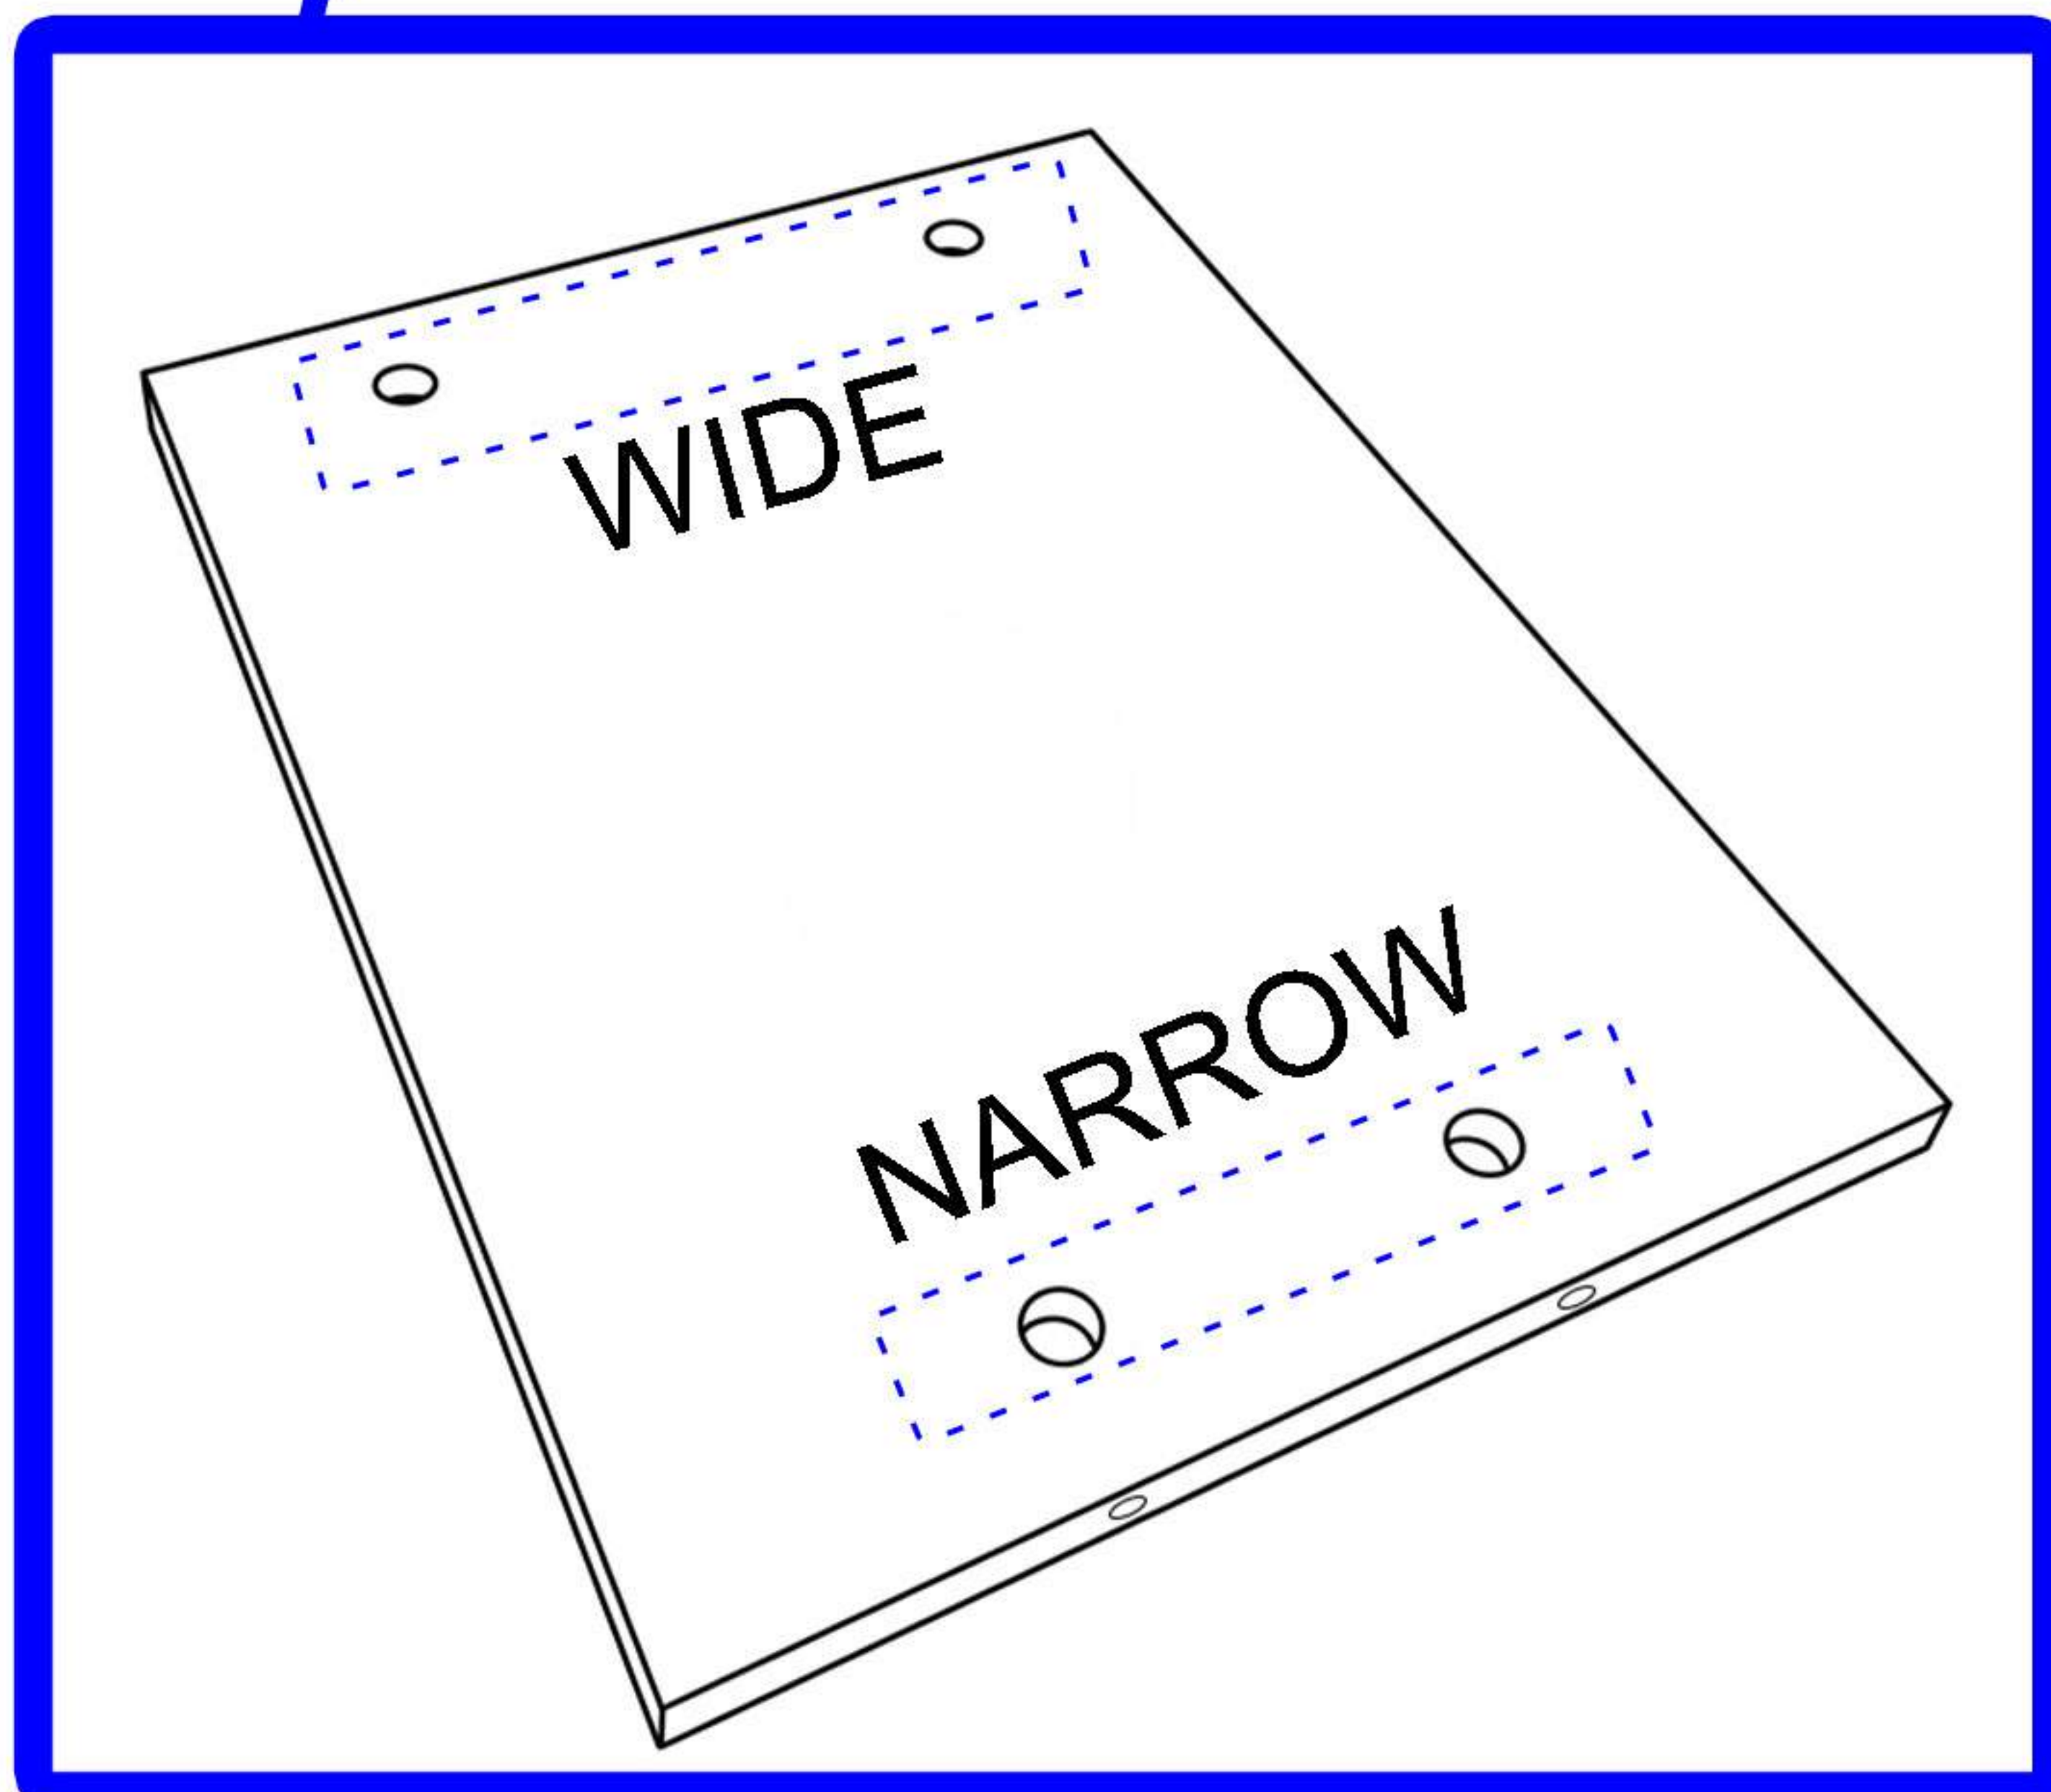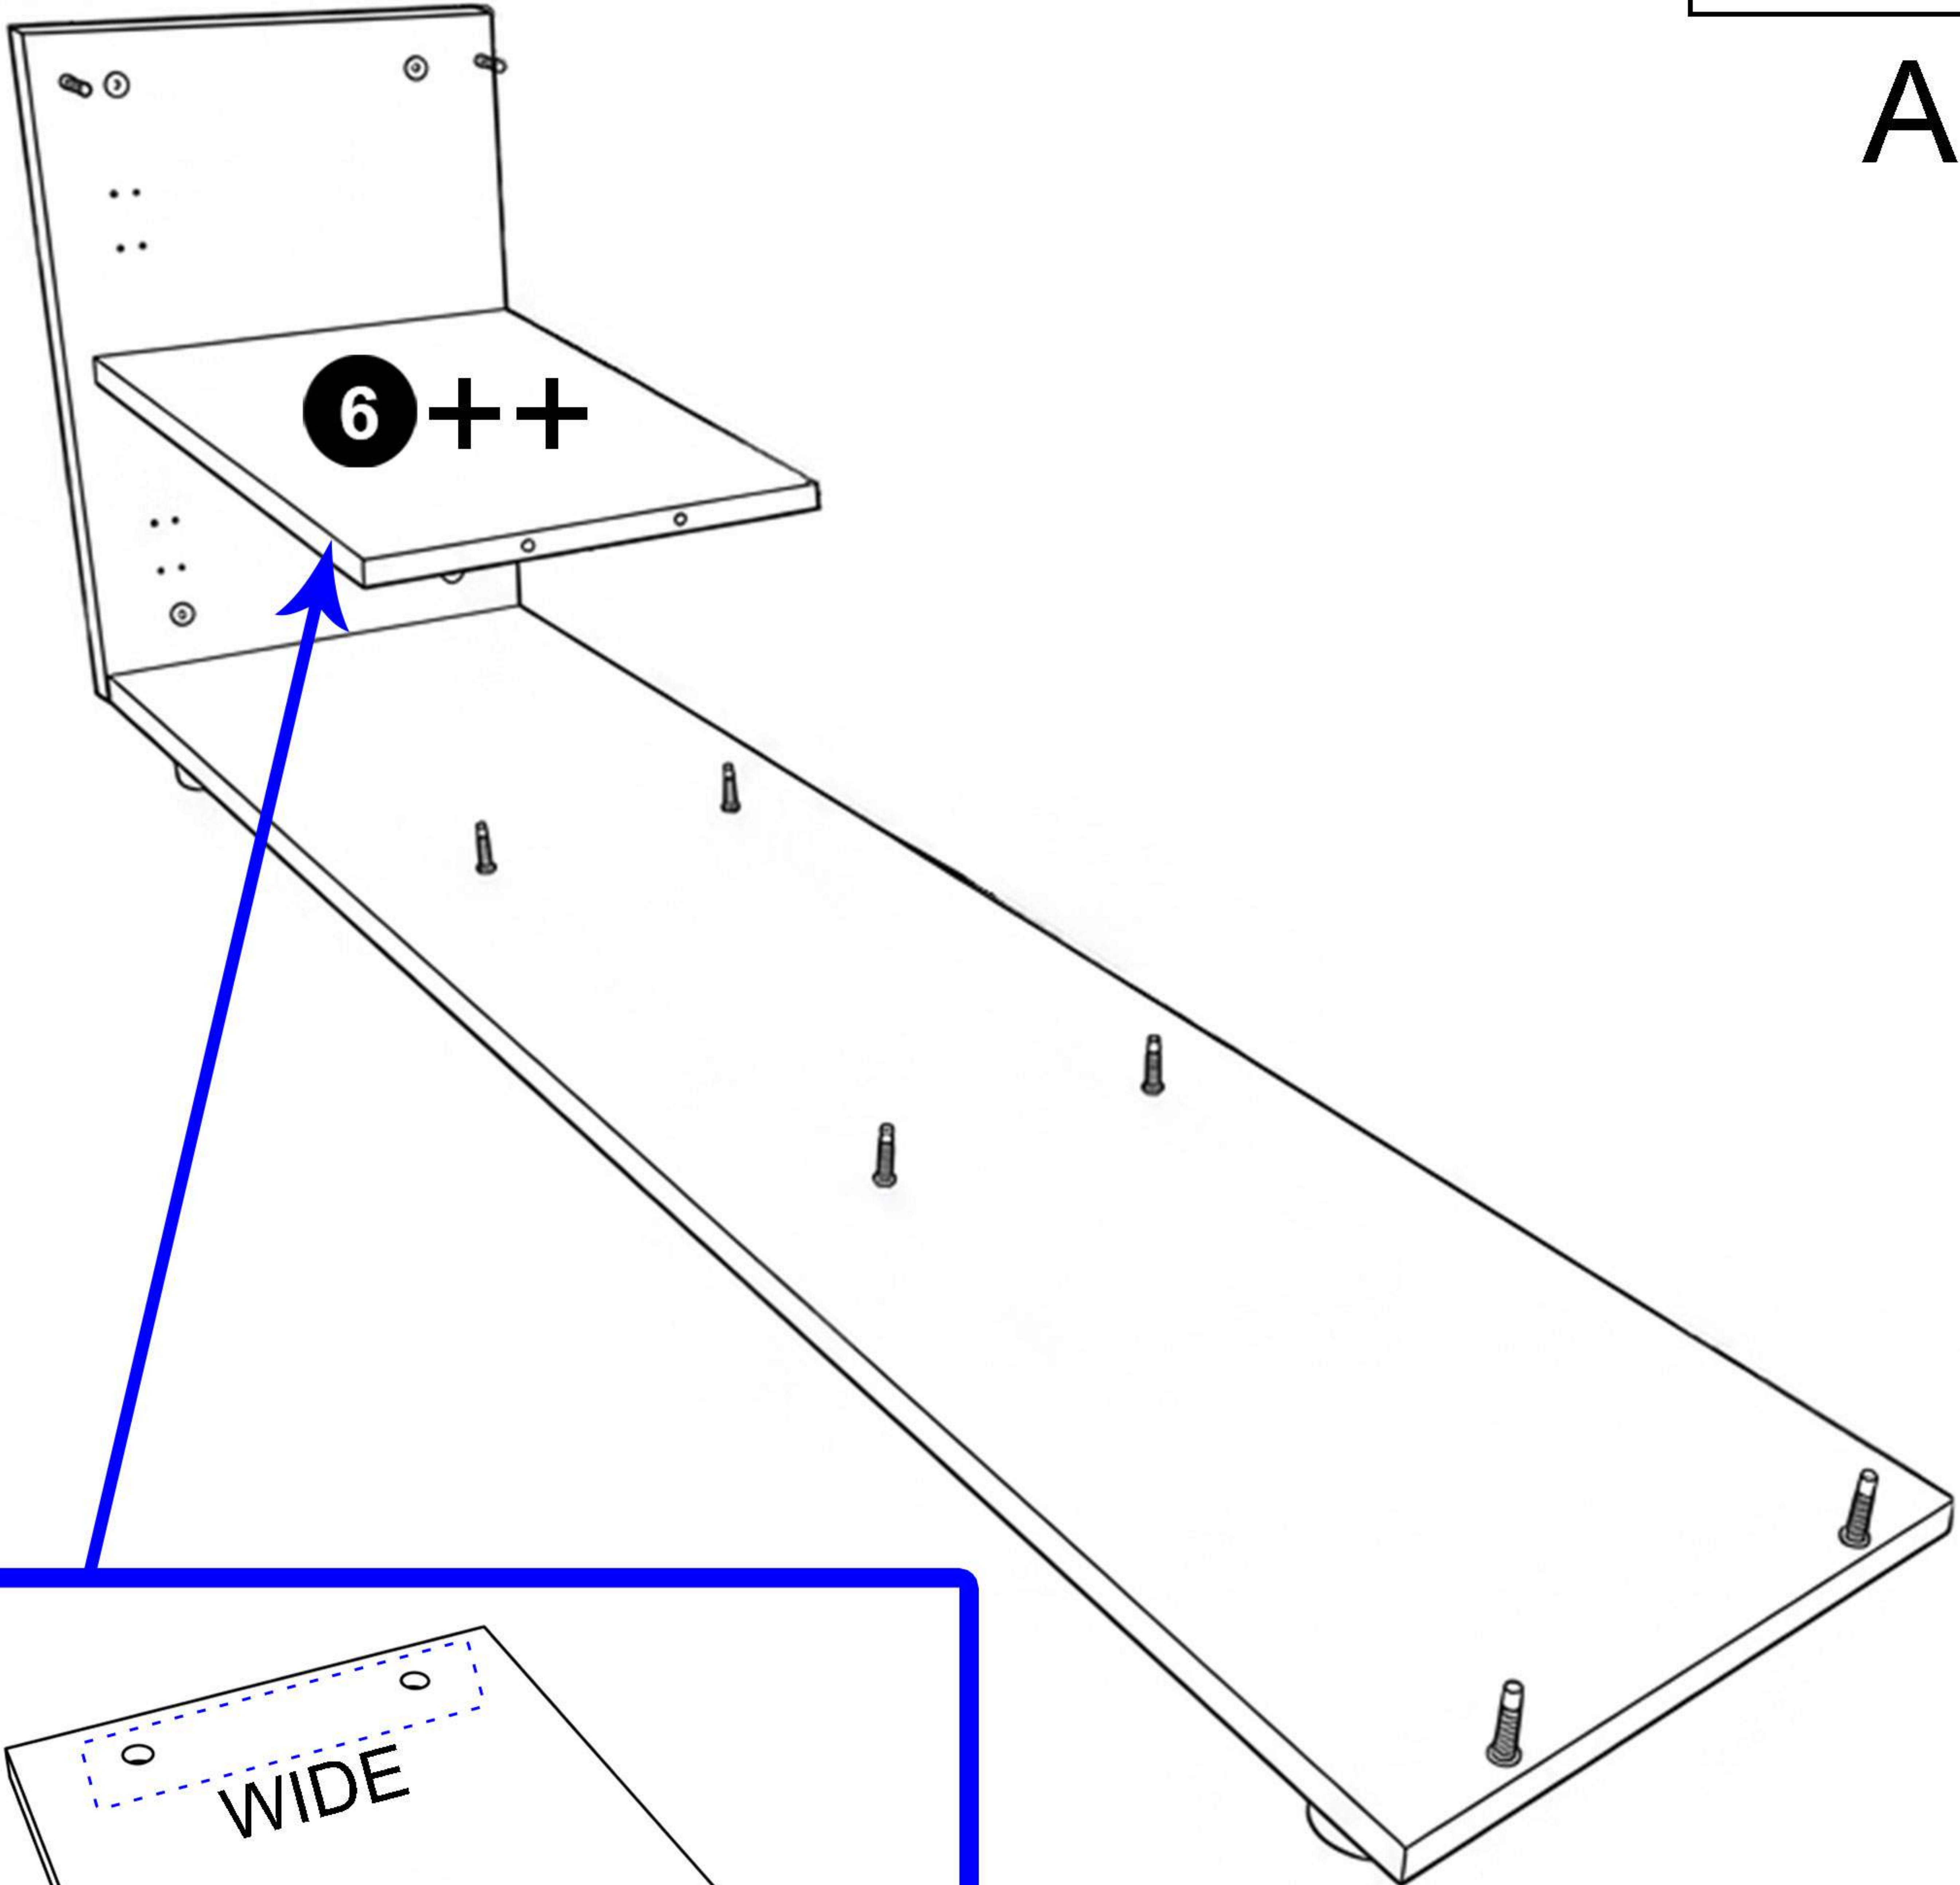



Panel 6++ has uneven hole spacing. One side is wider, the other is narrower.

Large round holes face down.


Step 7:

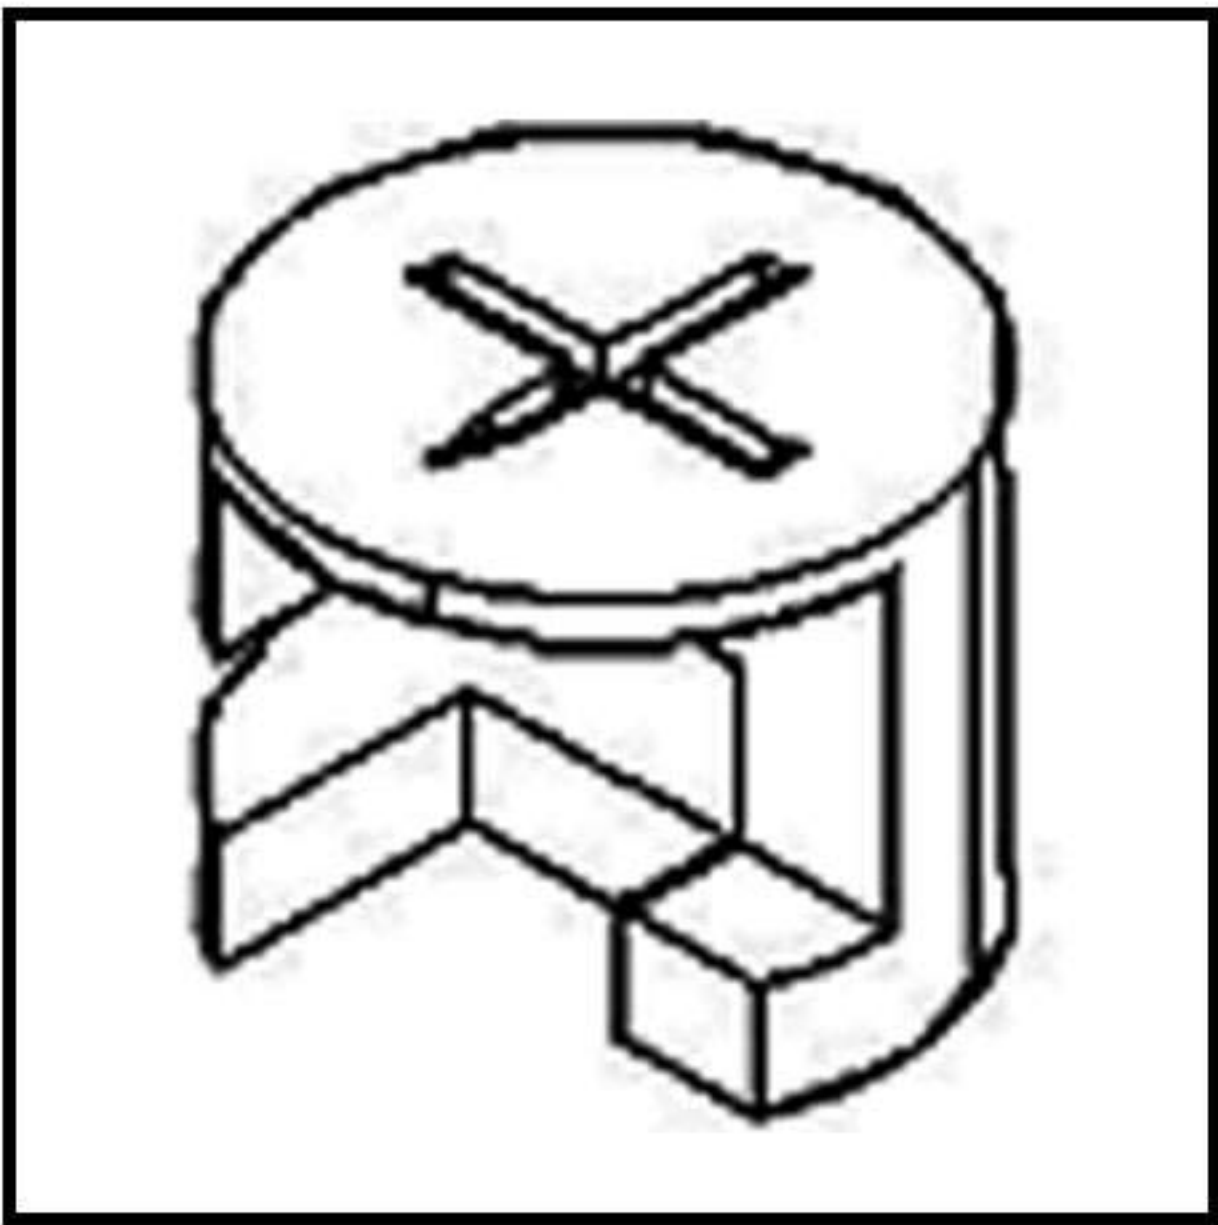



A

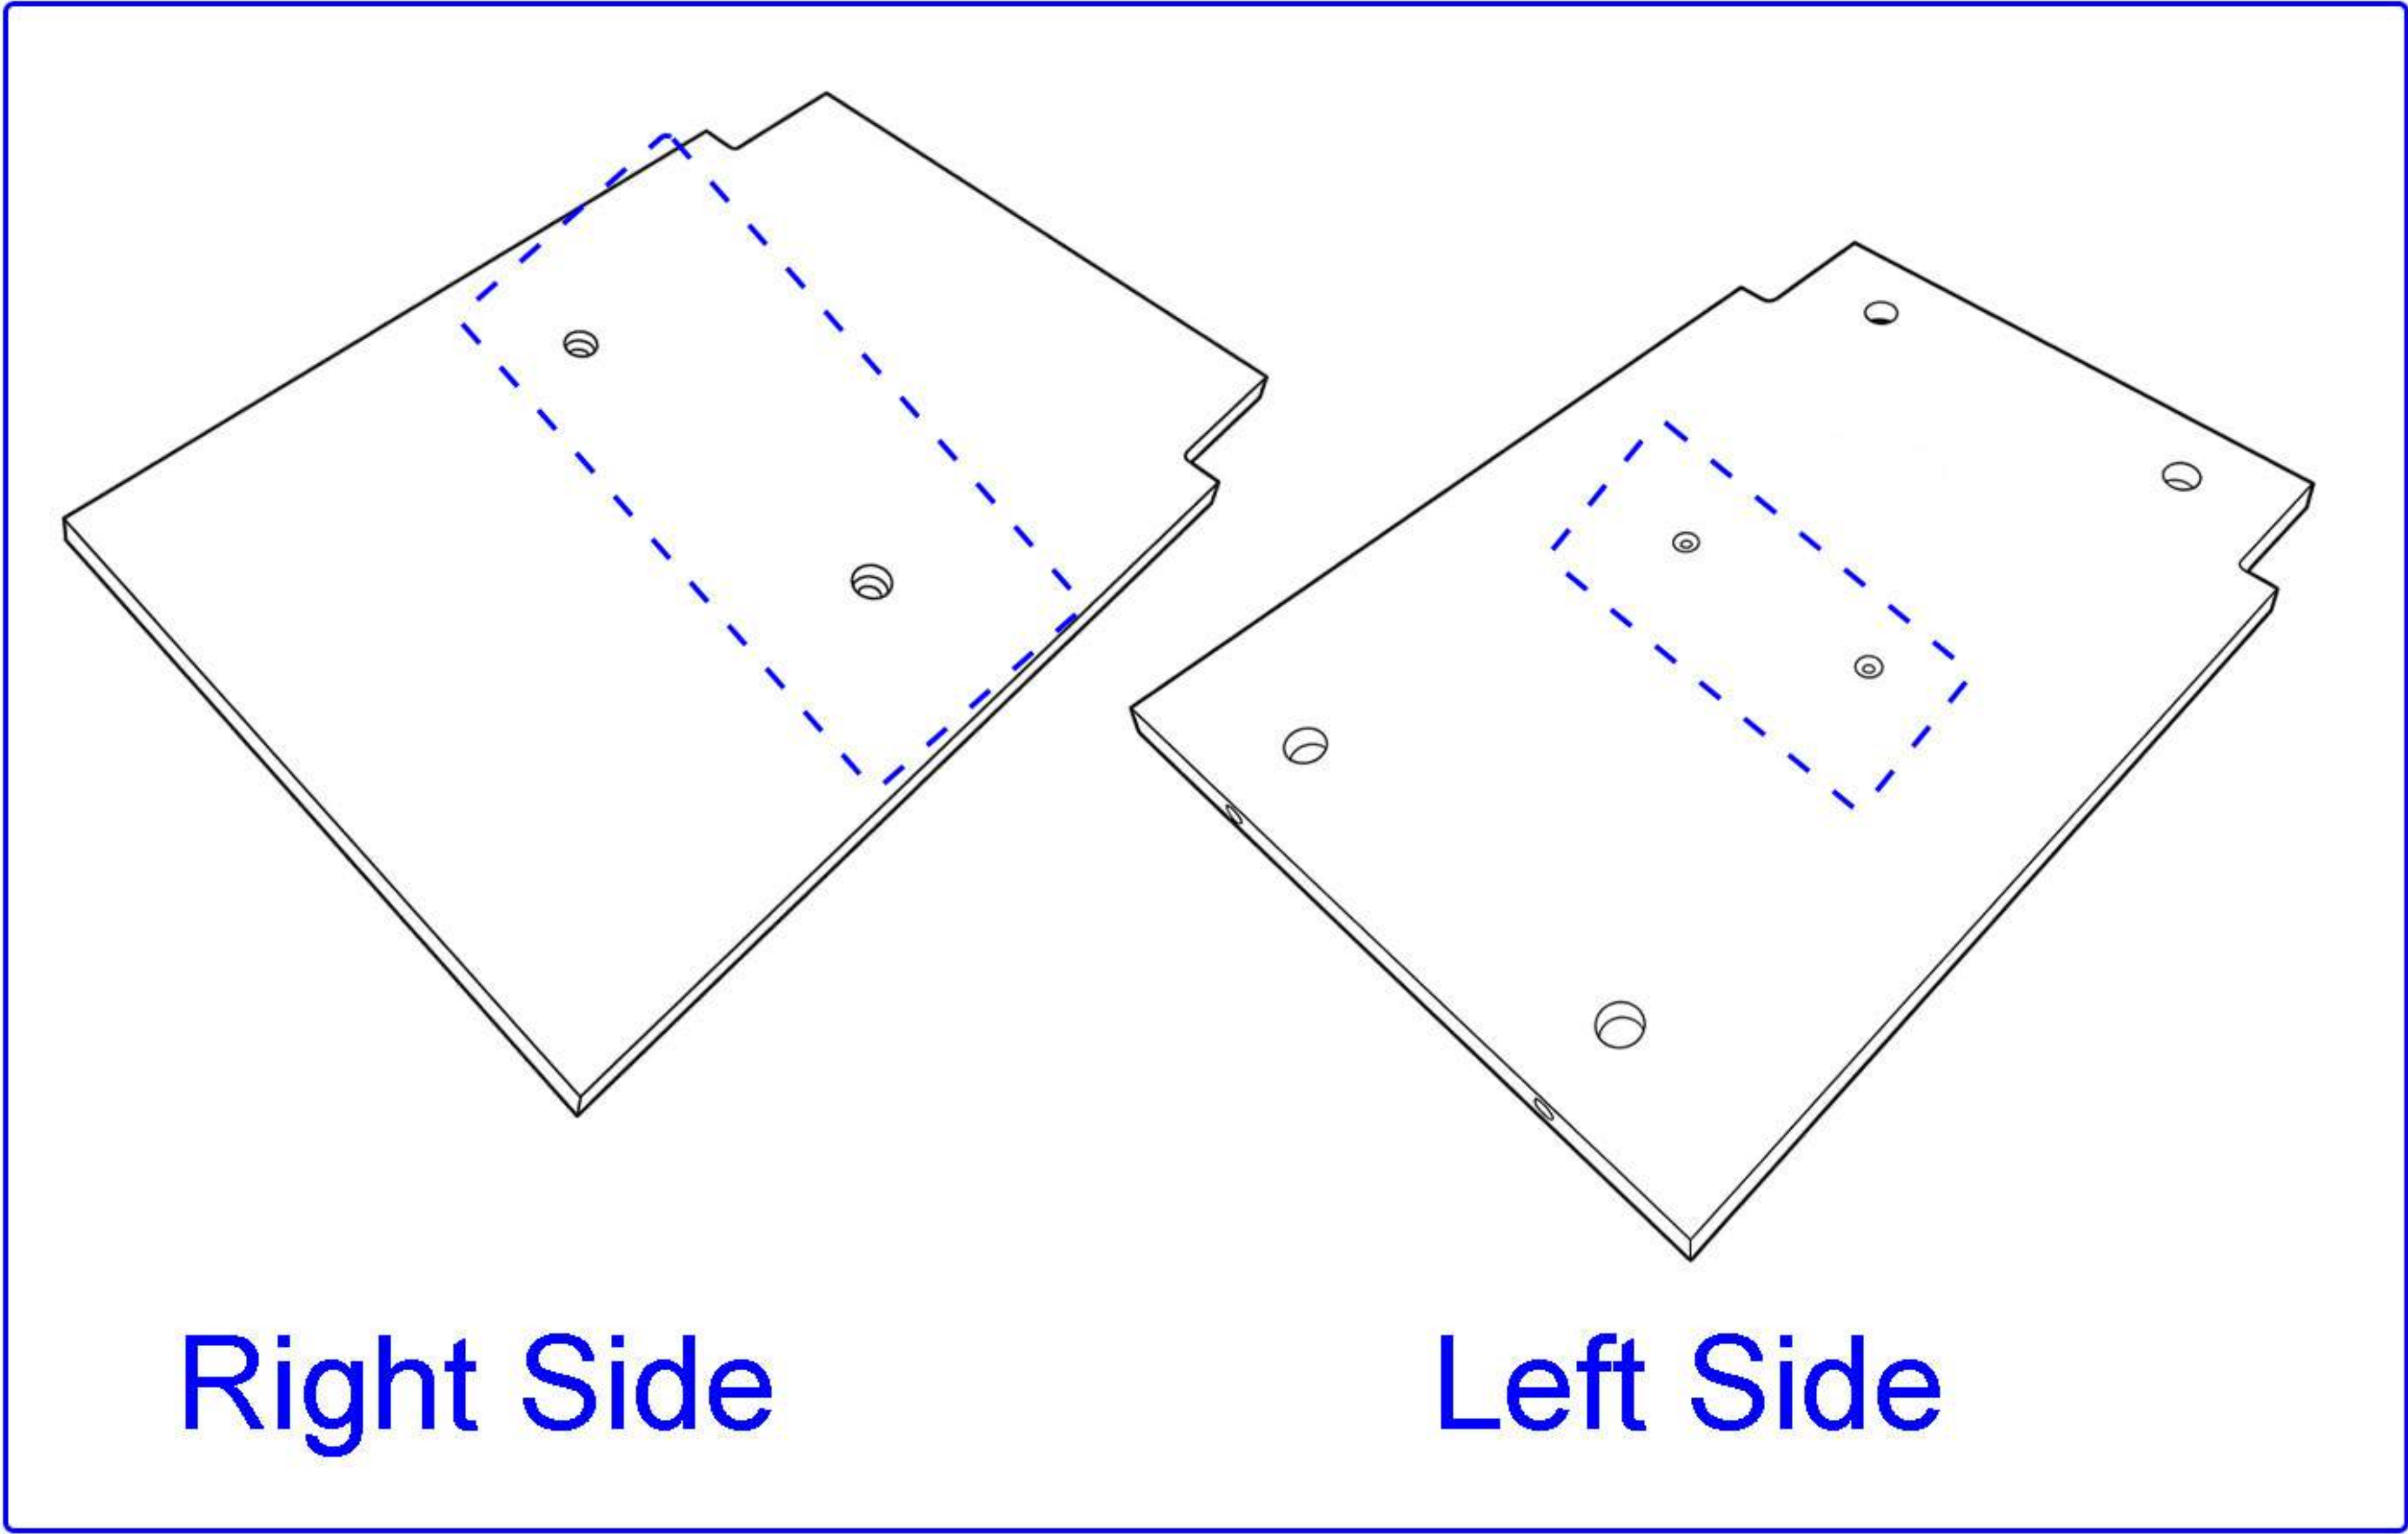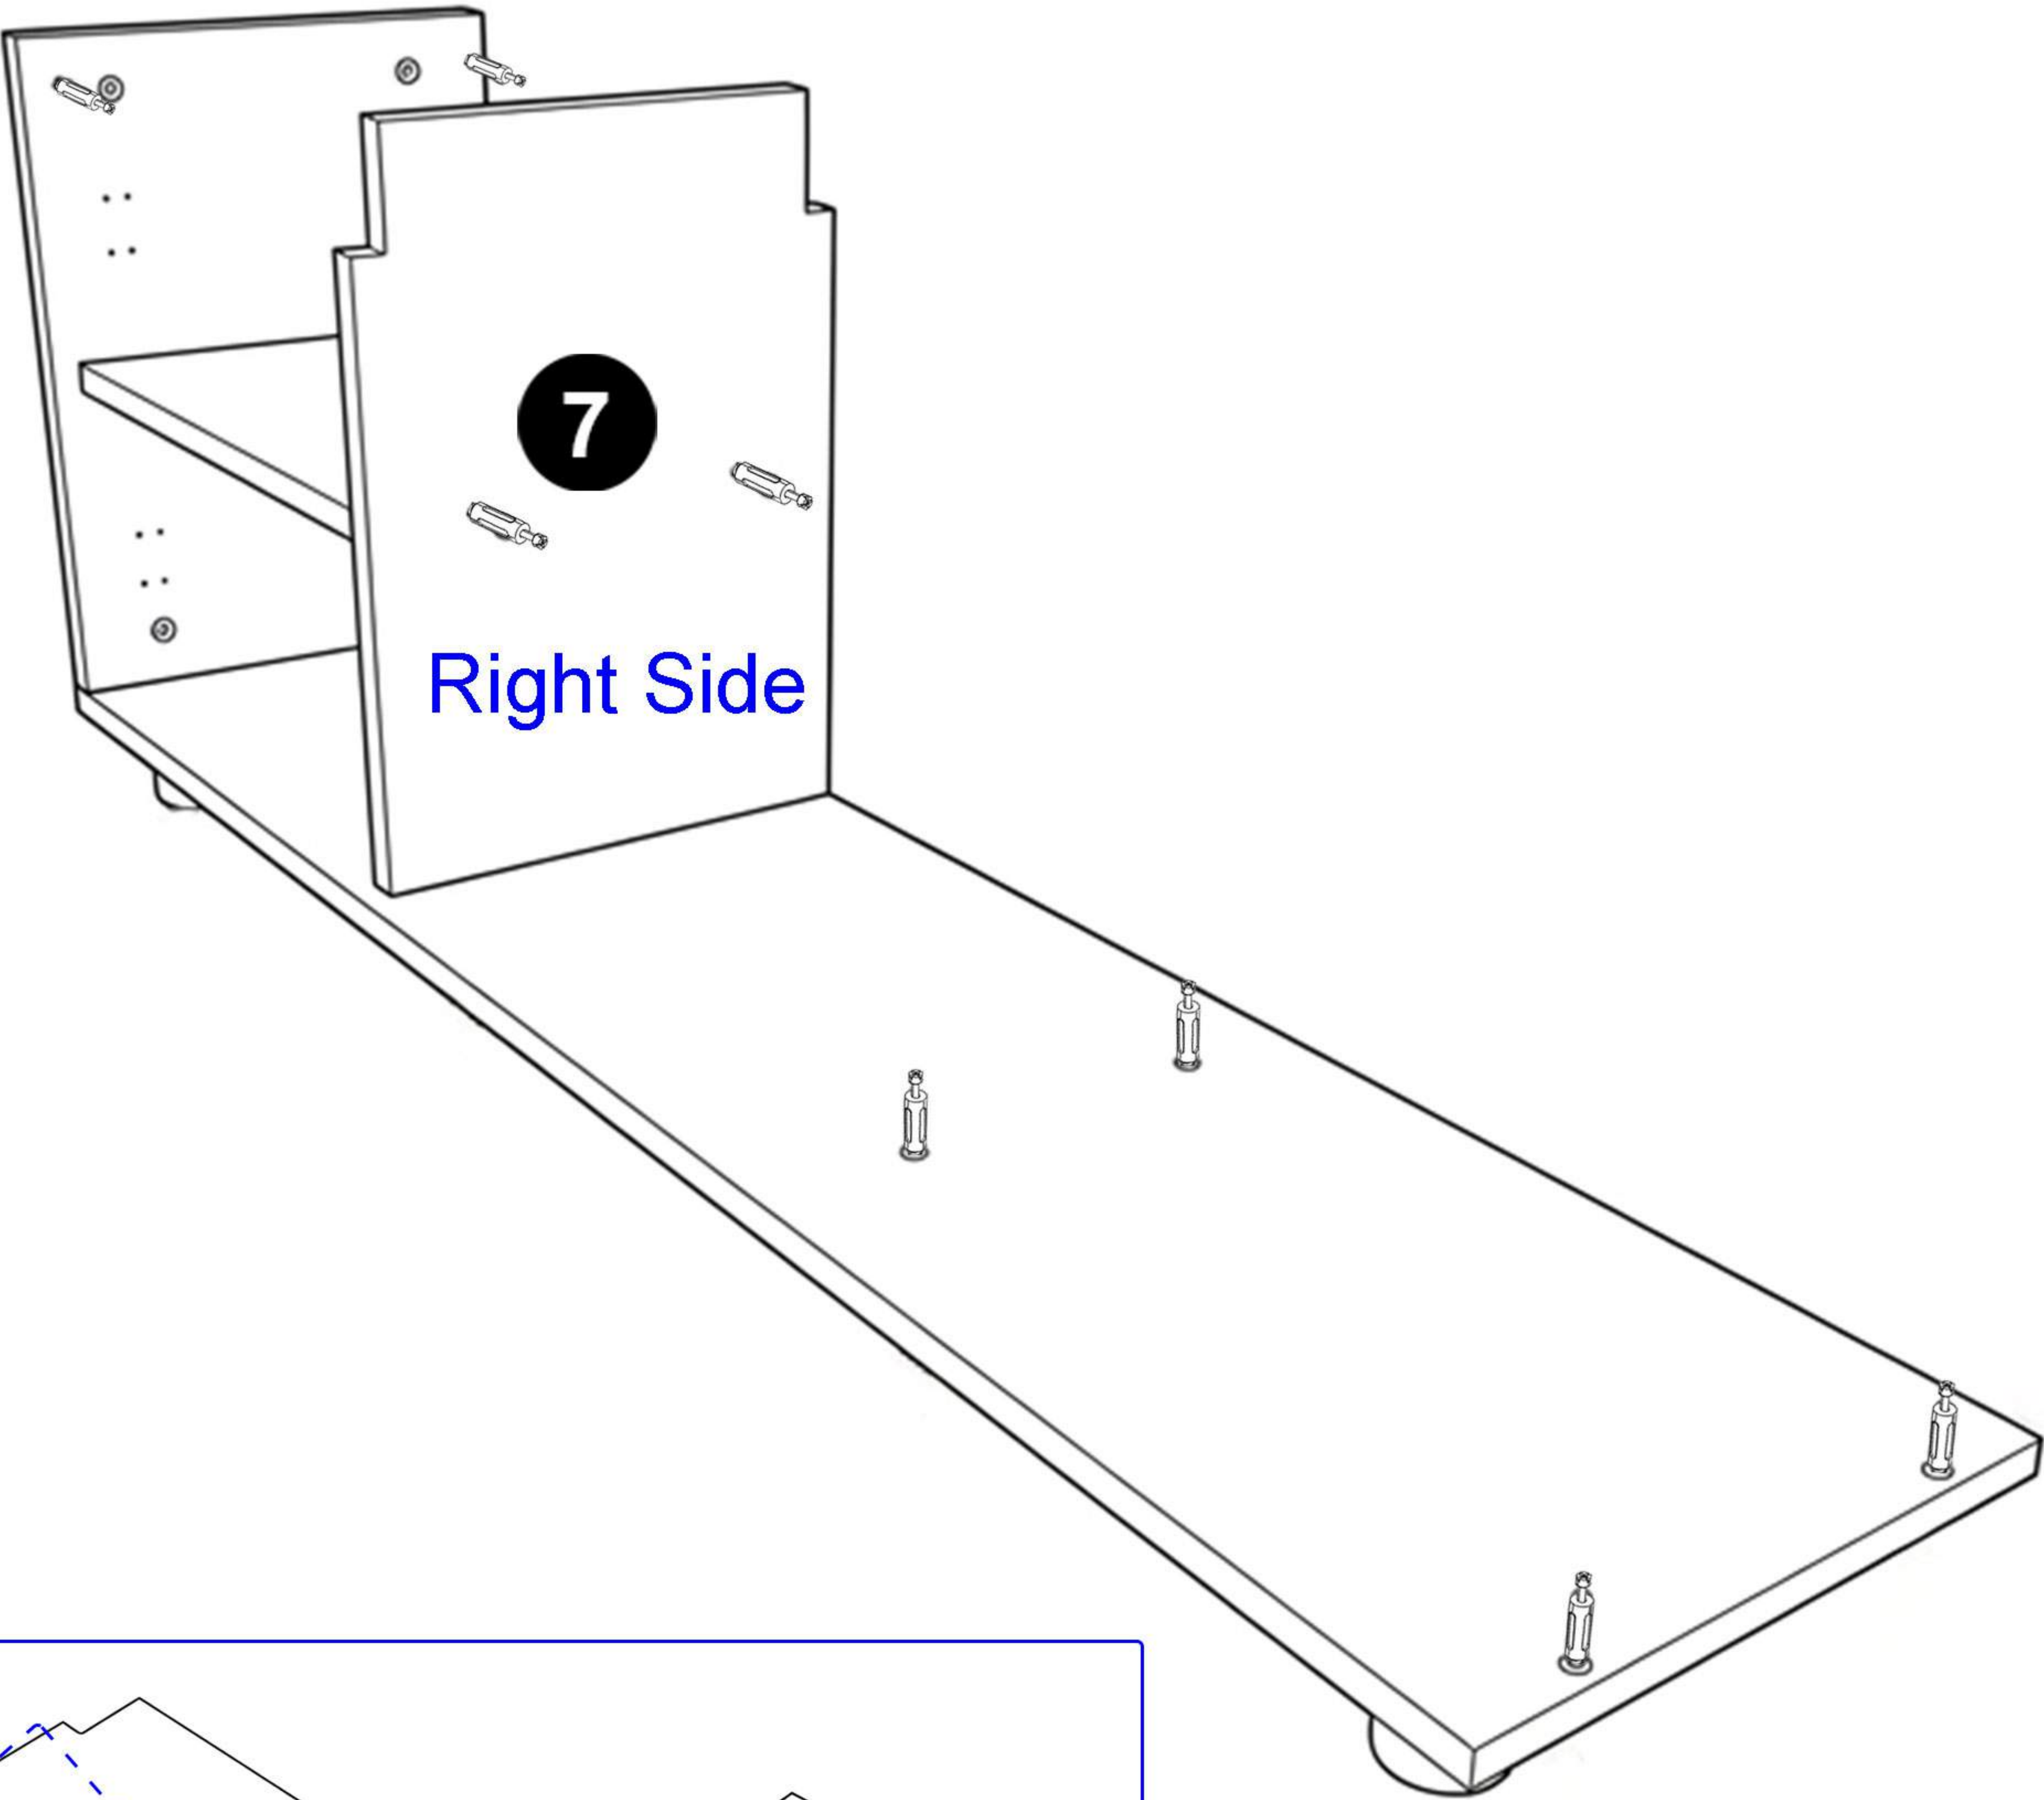

Step 8:

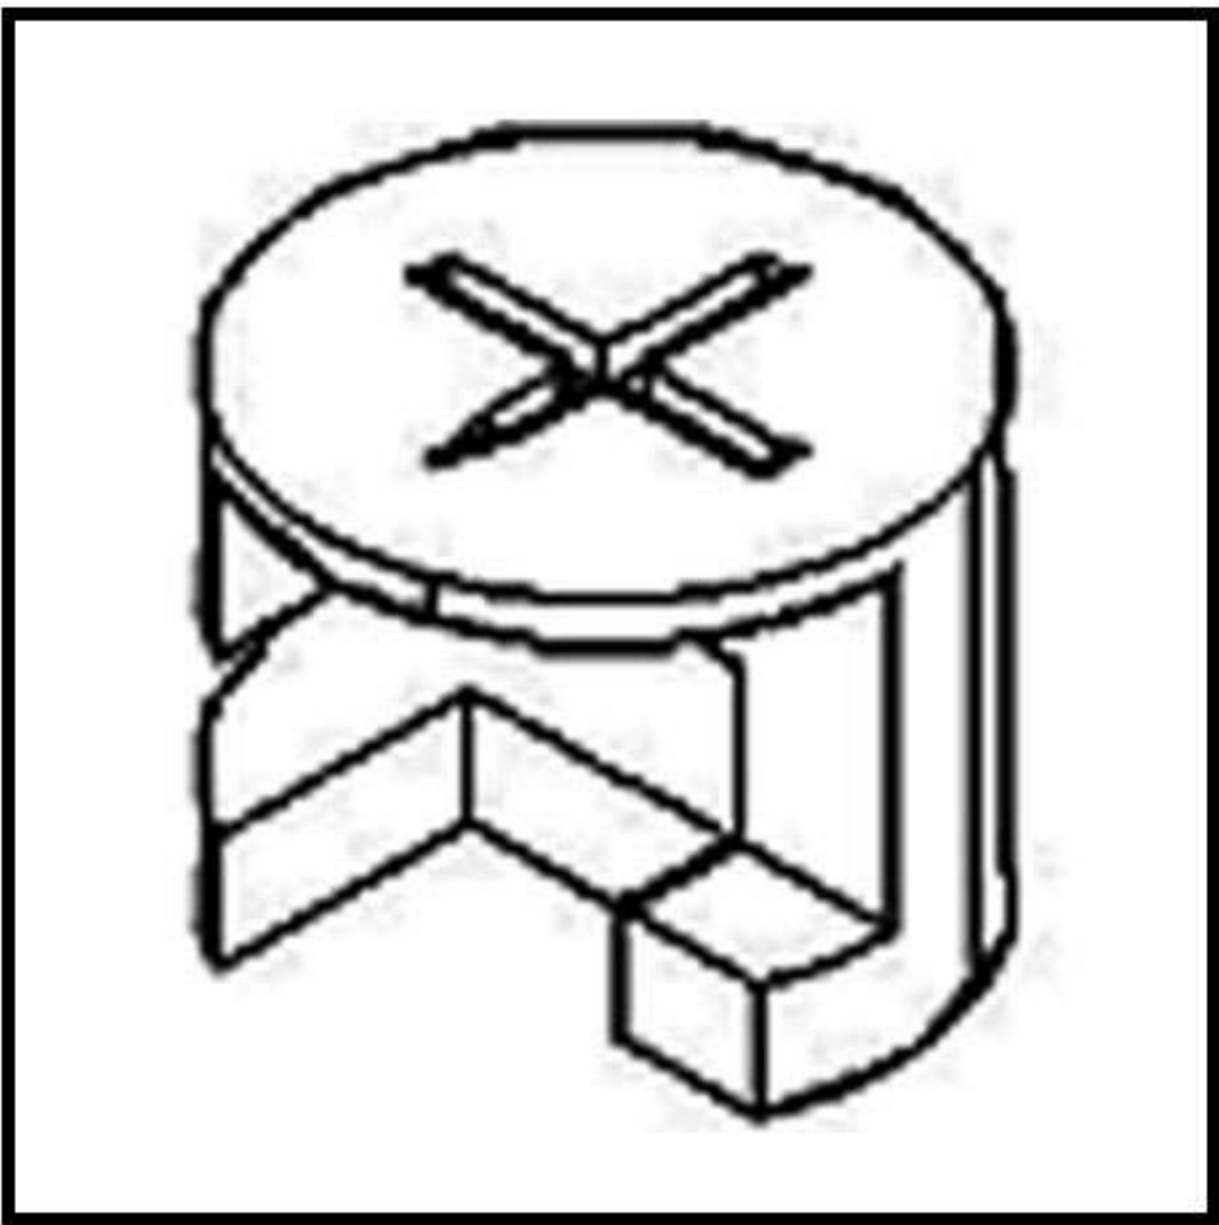


A

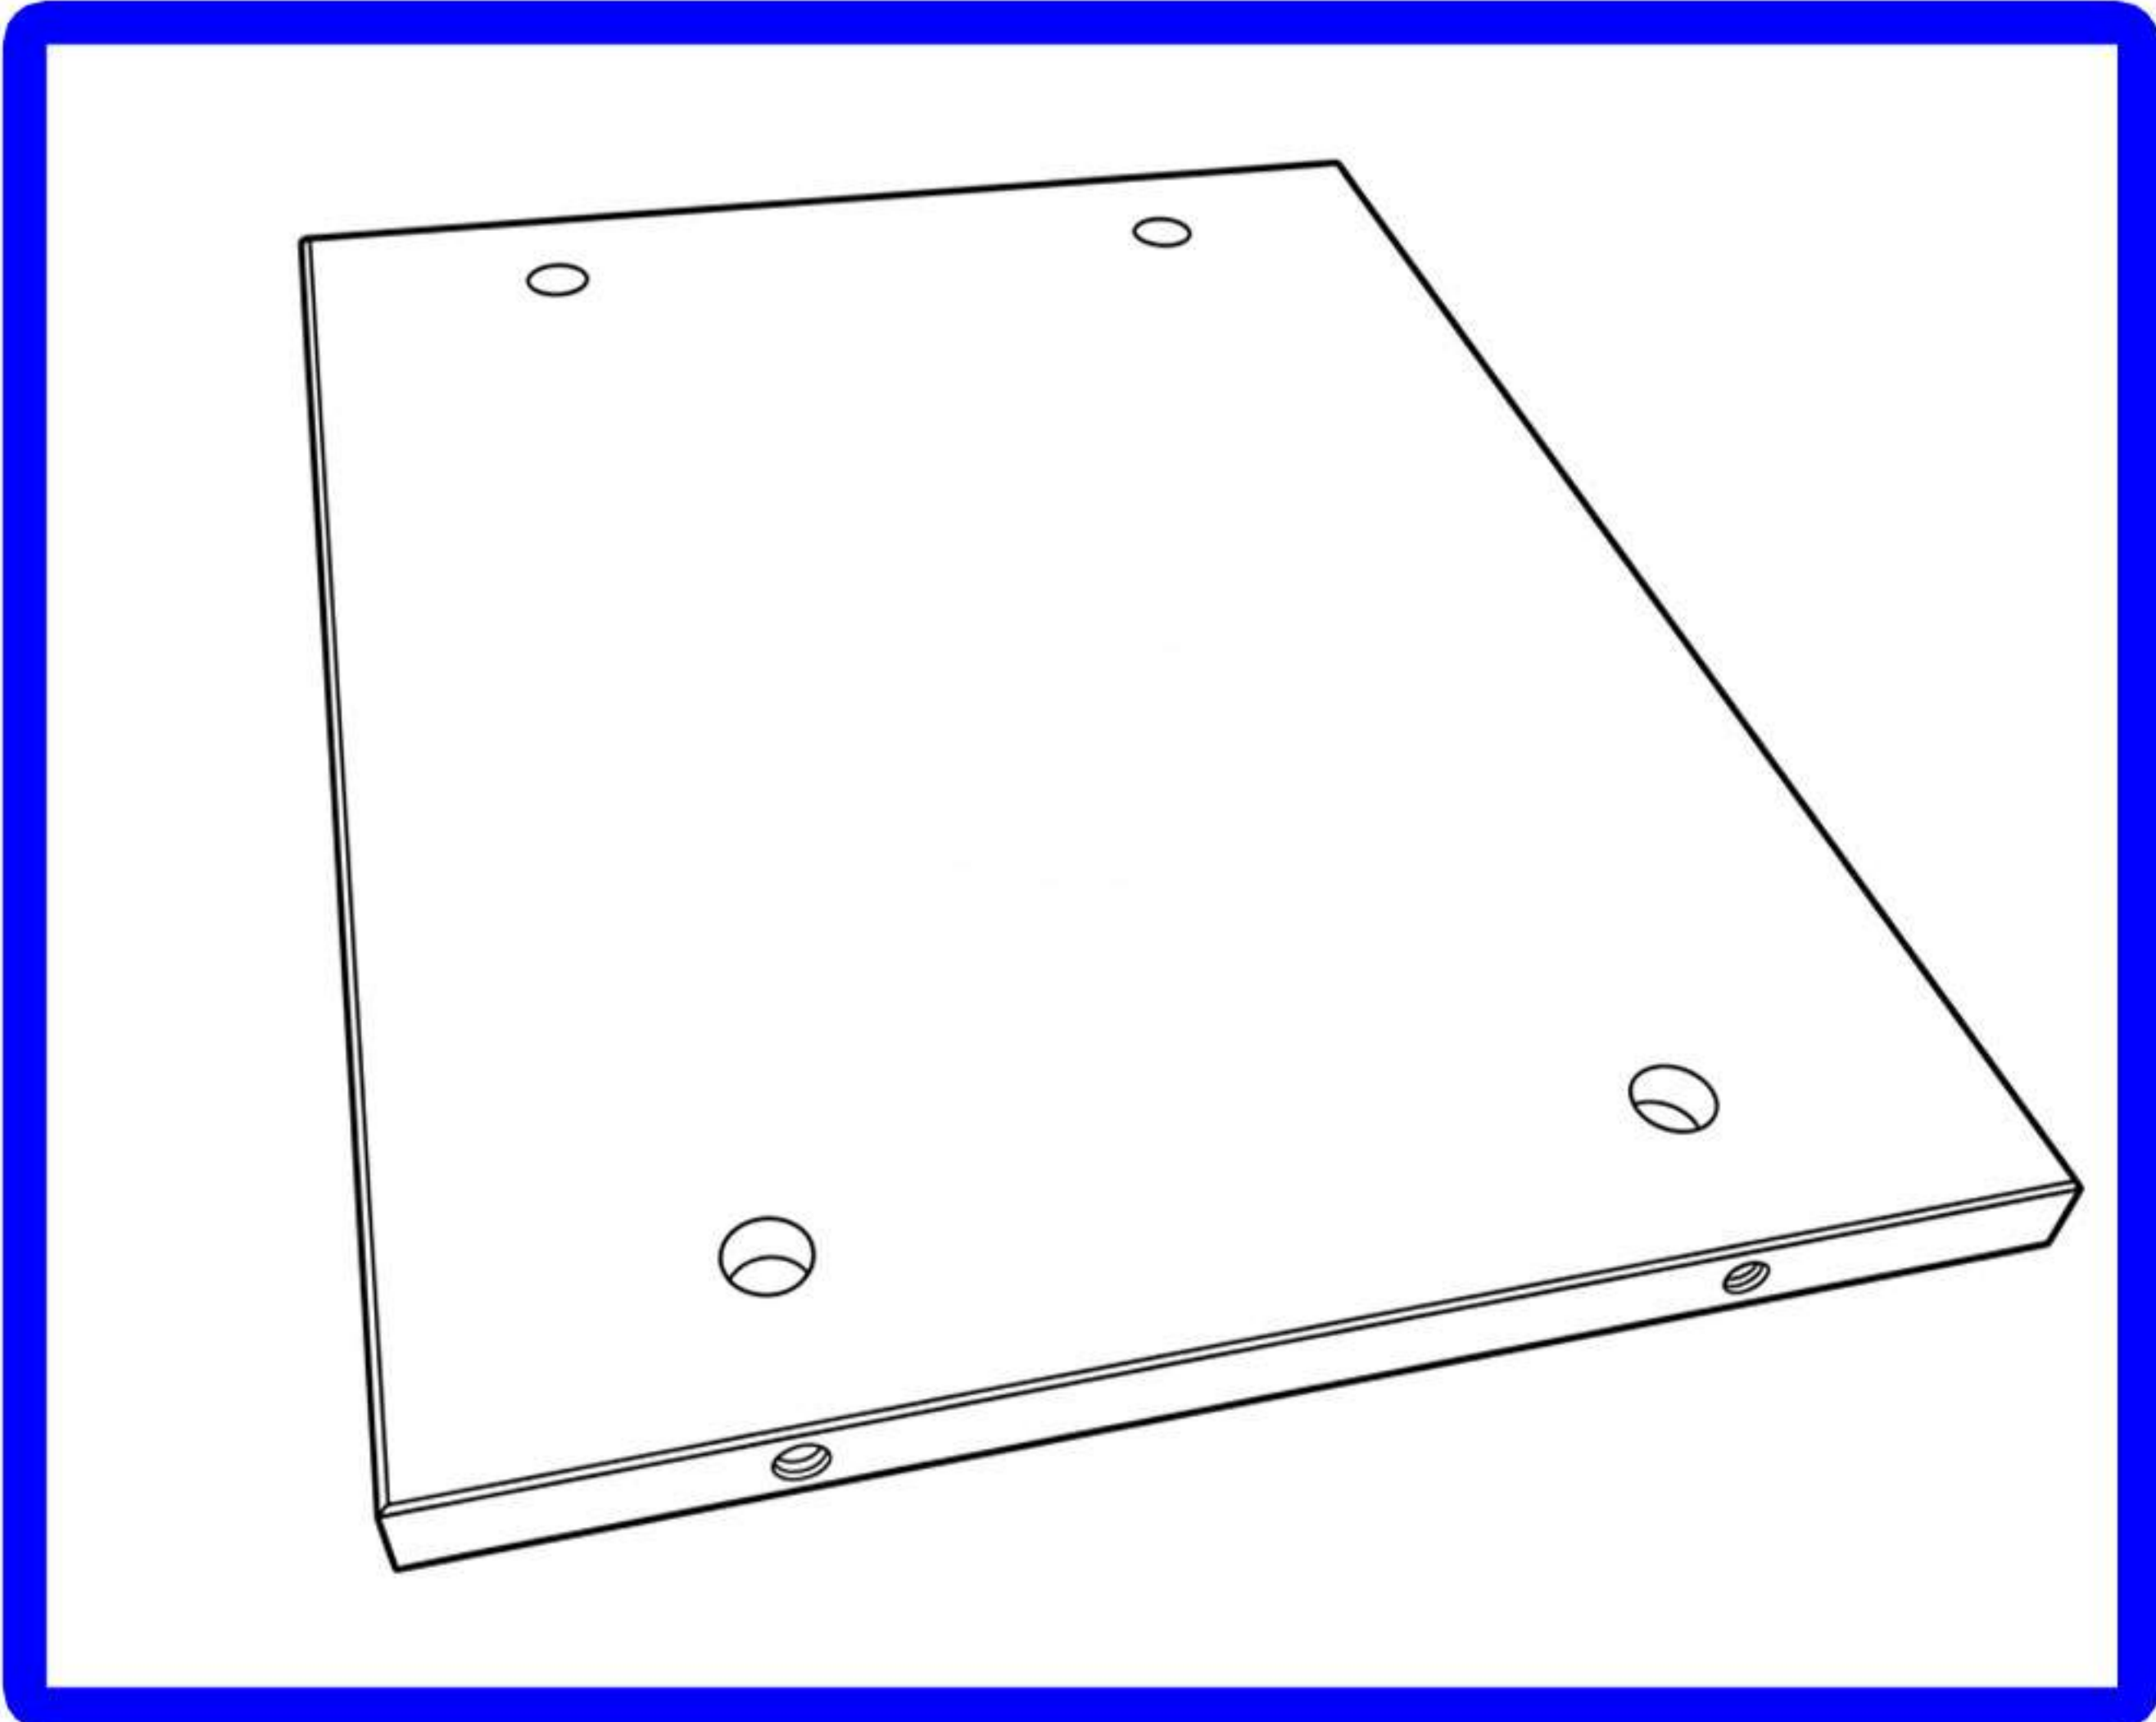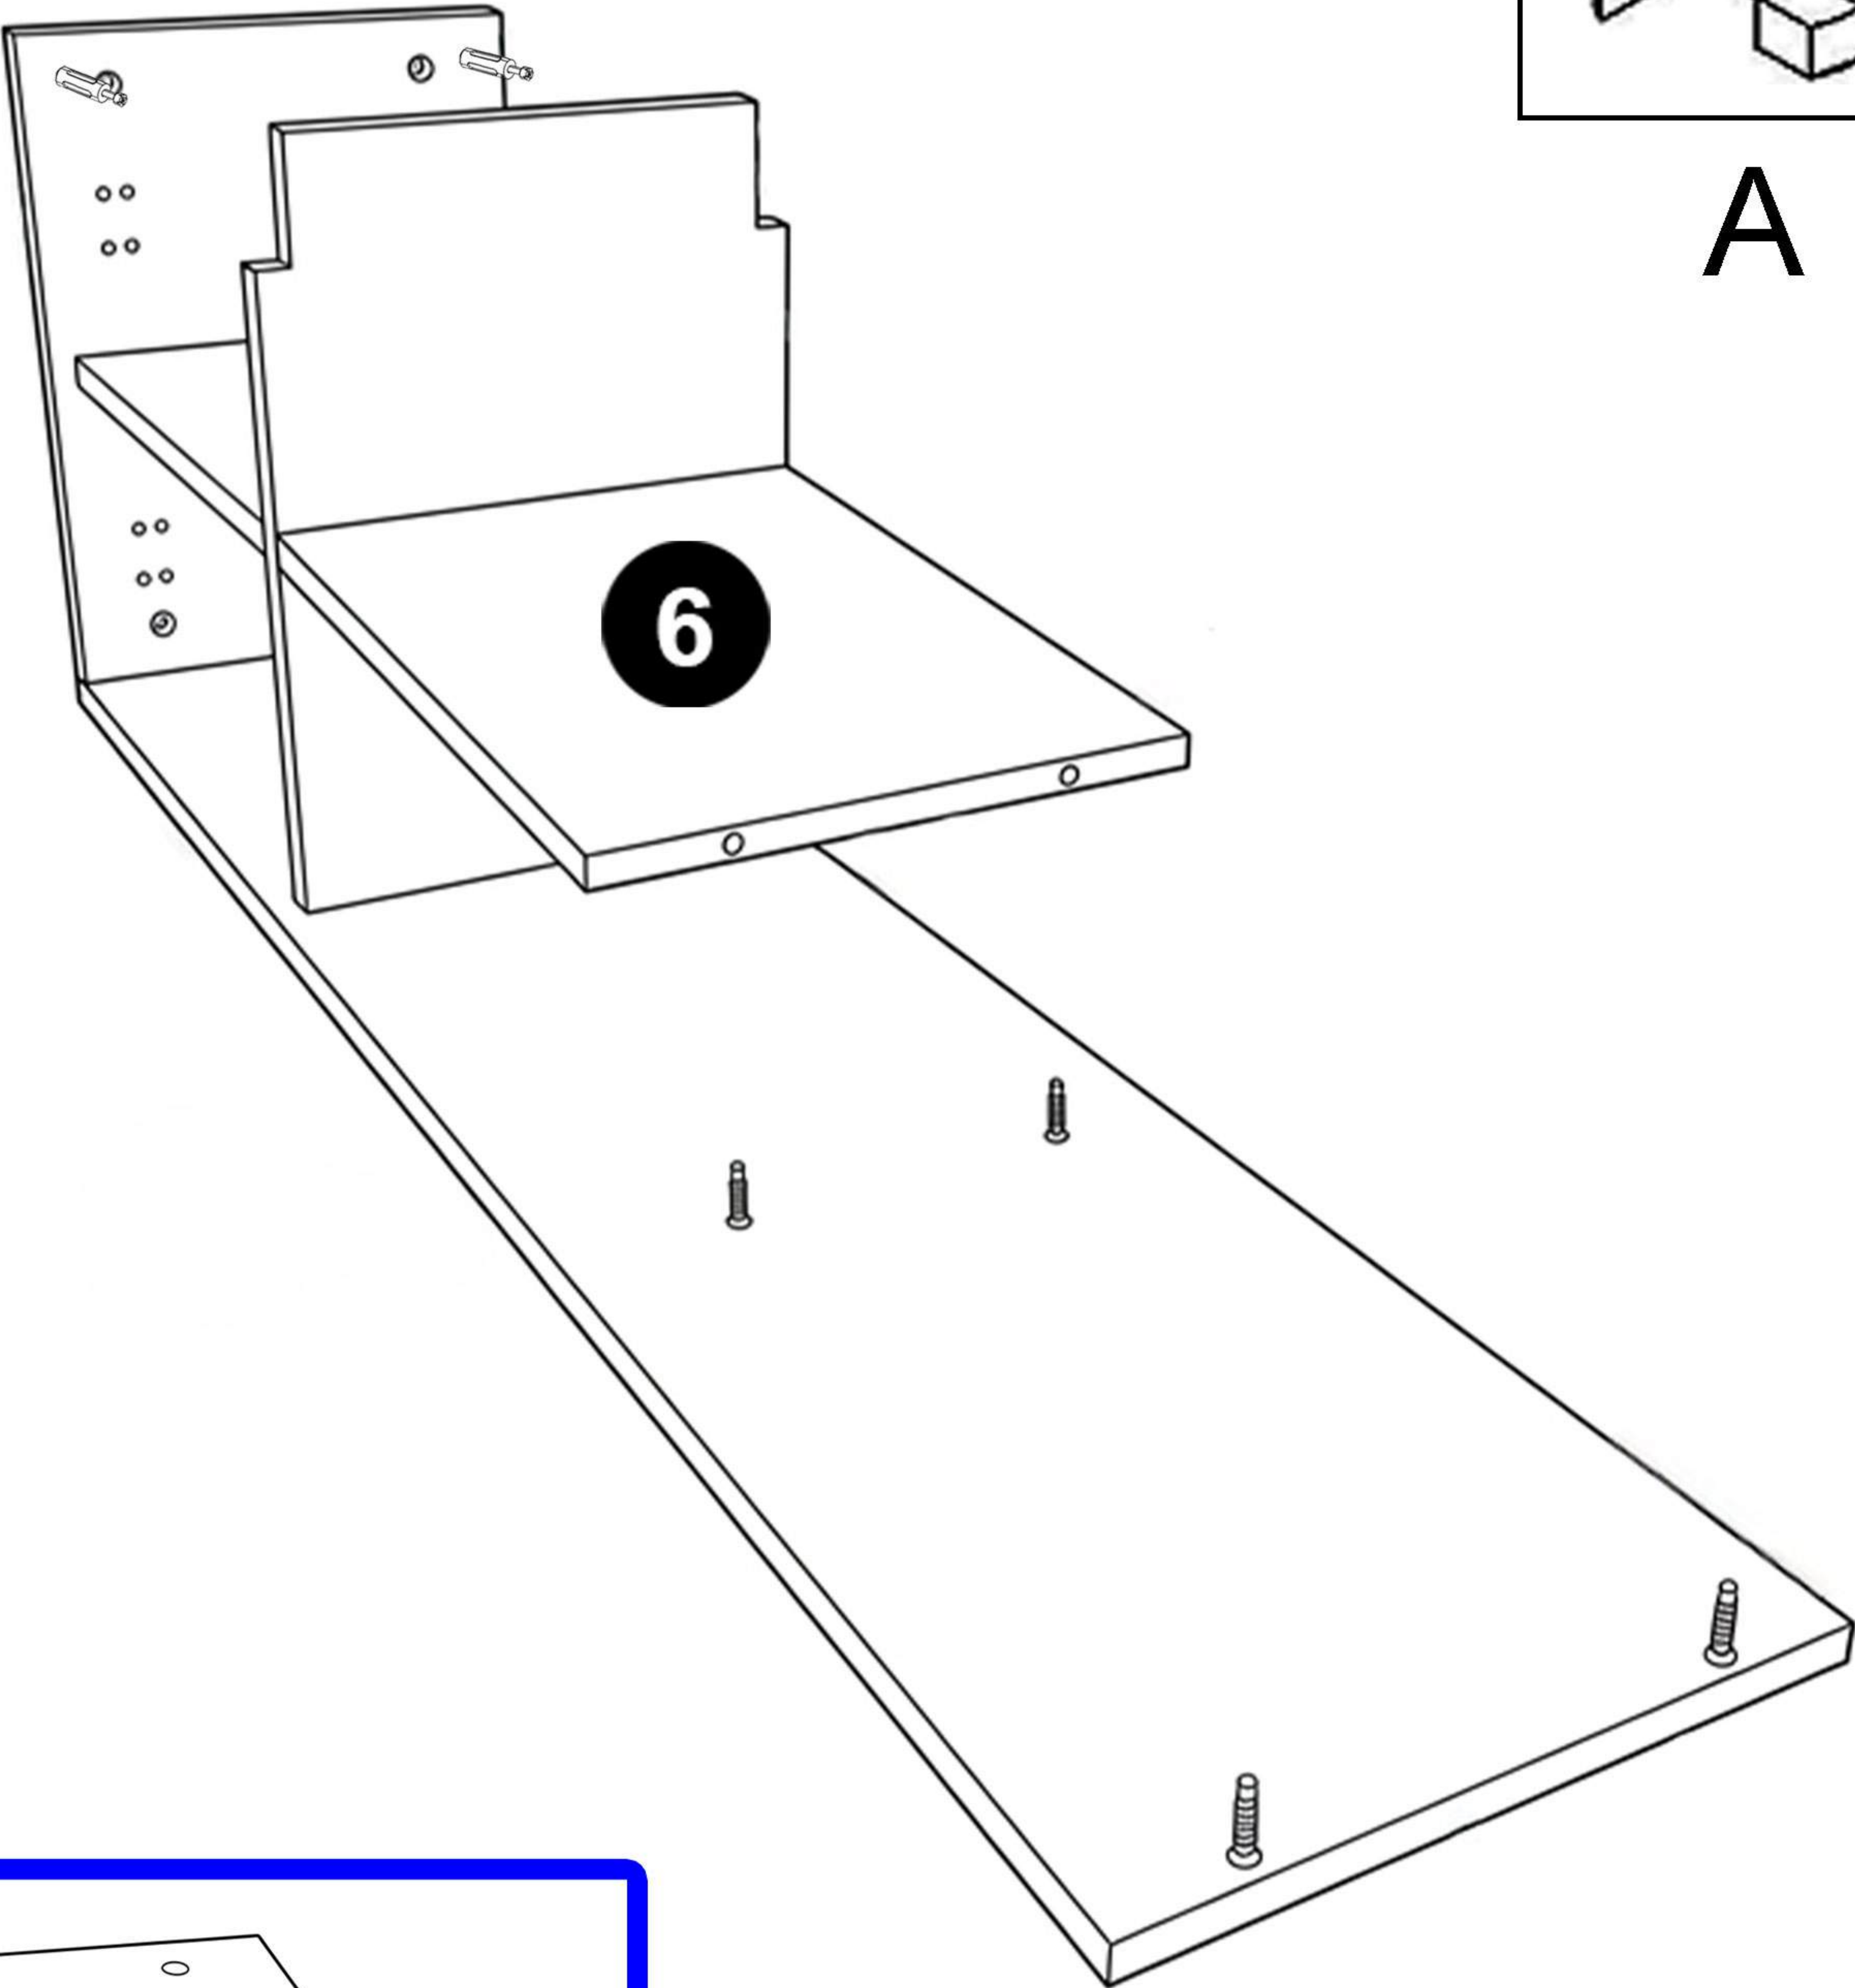



Panel 6 has symmetrical holes on both sides.

Large round holes face down.

Step 9:

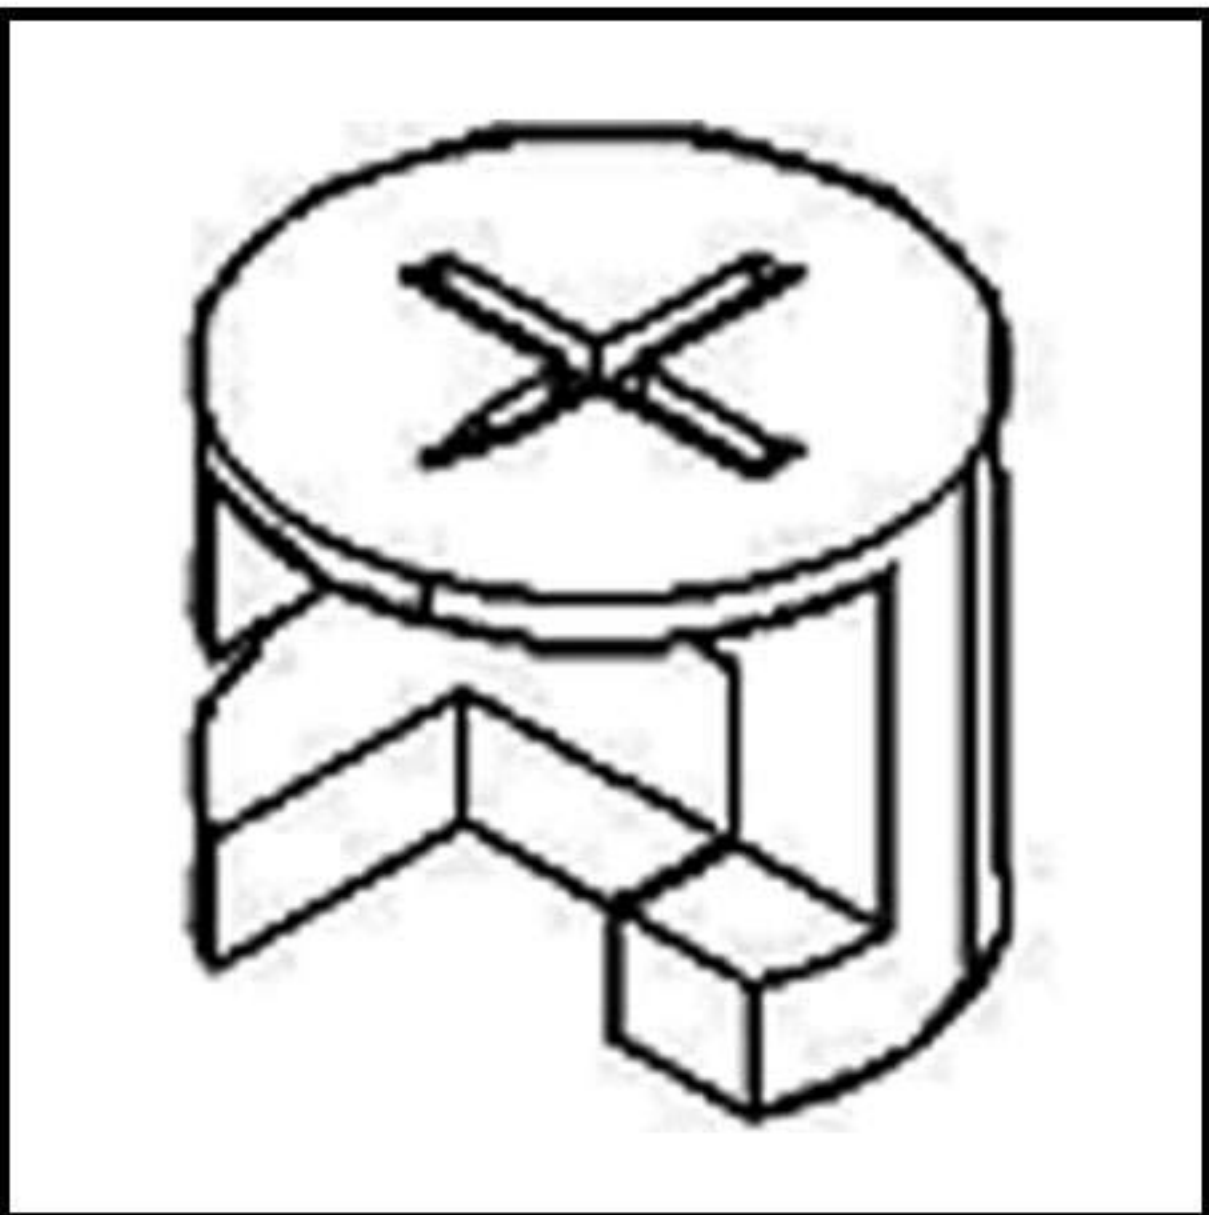


A

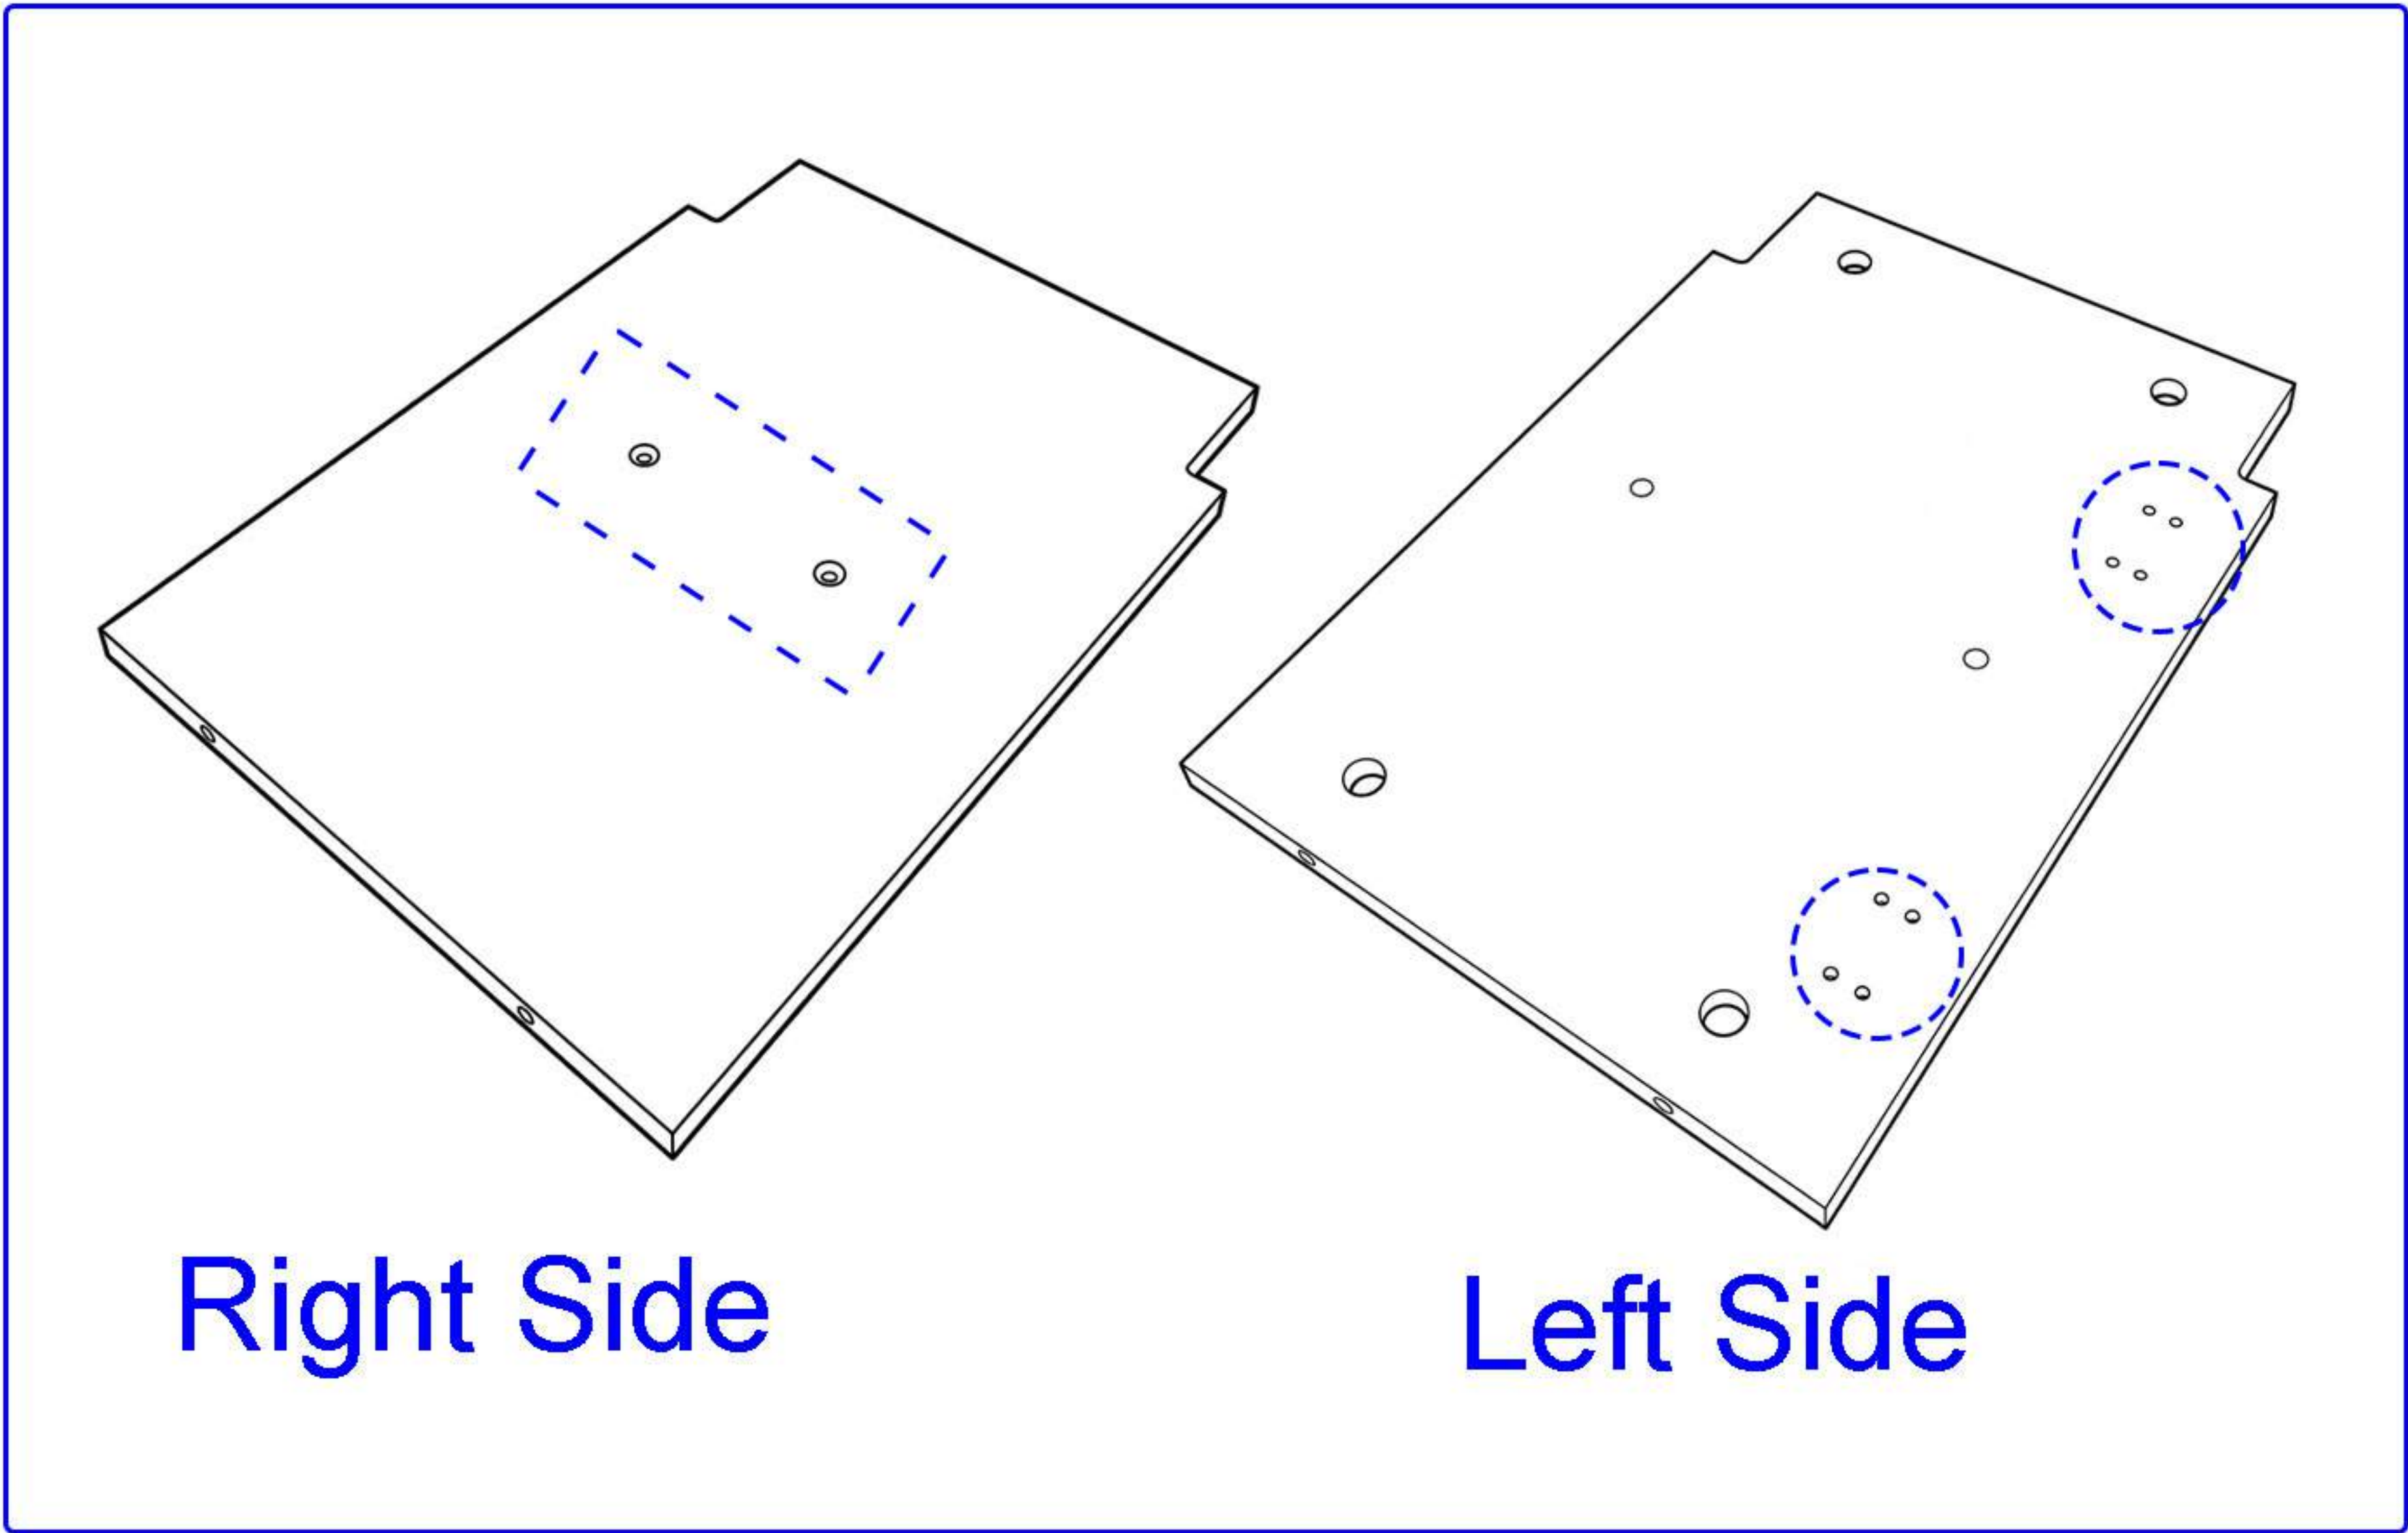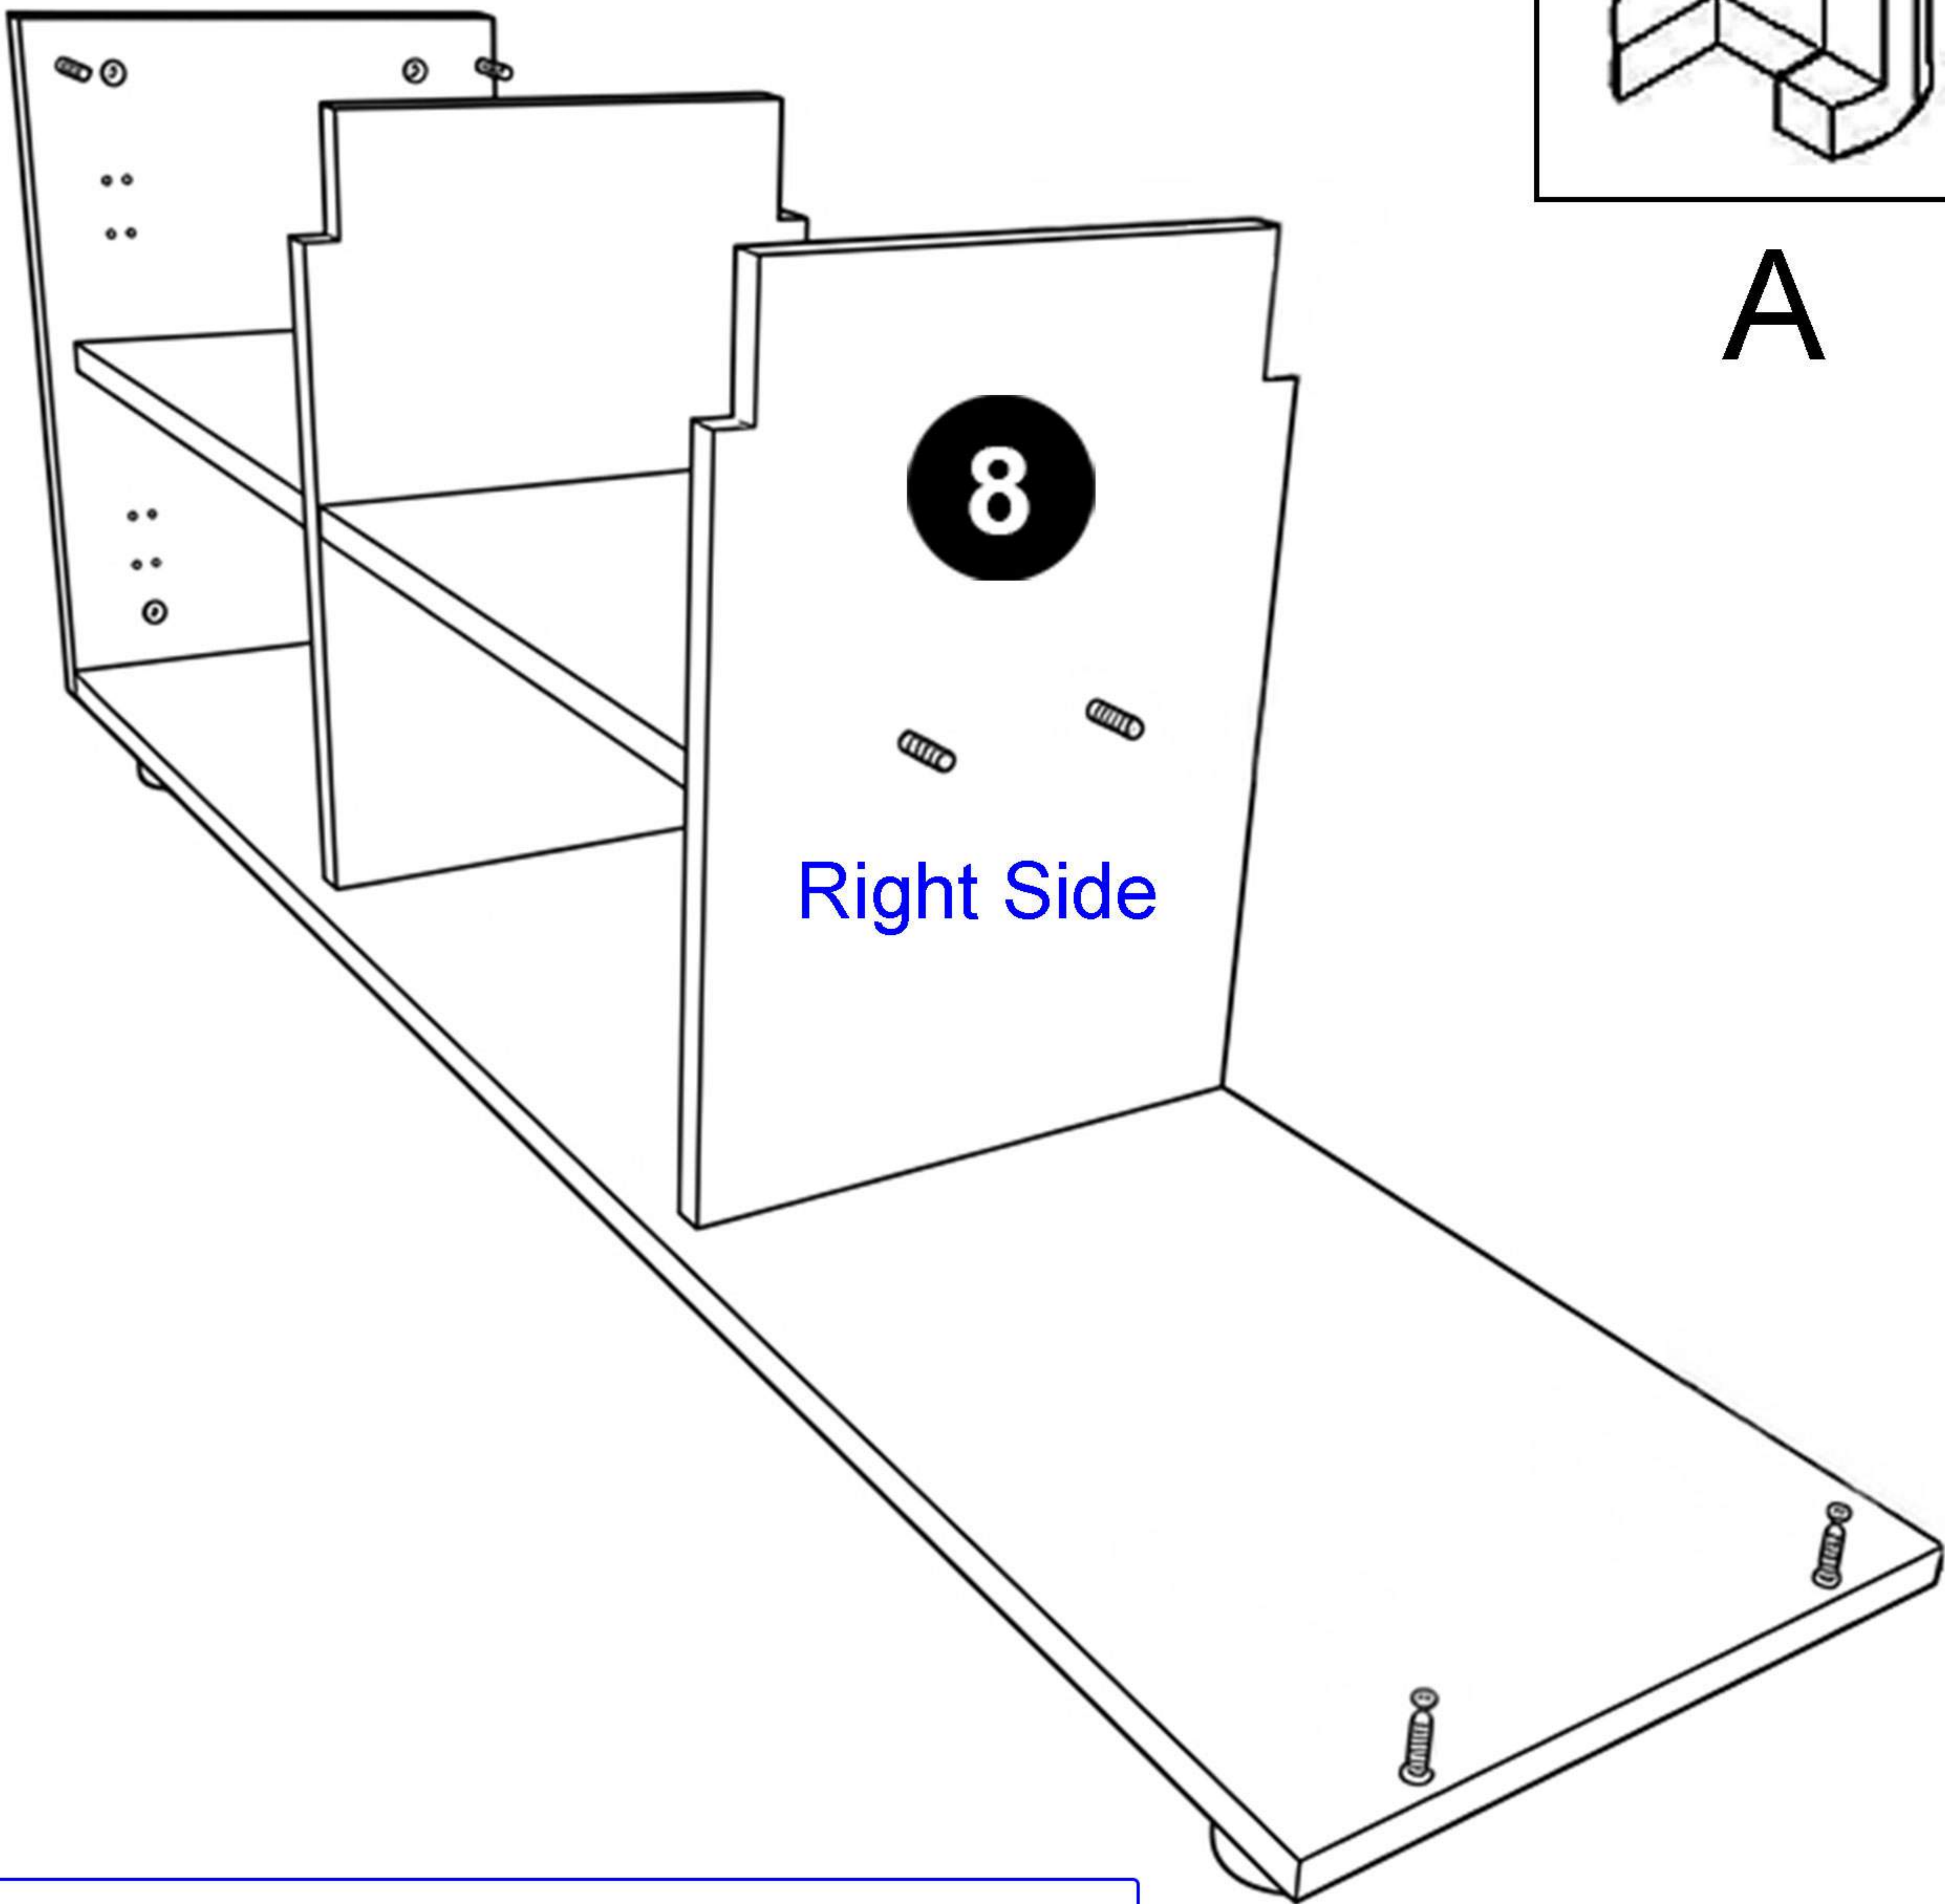



Right Side

Left Side

Step 10:

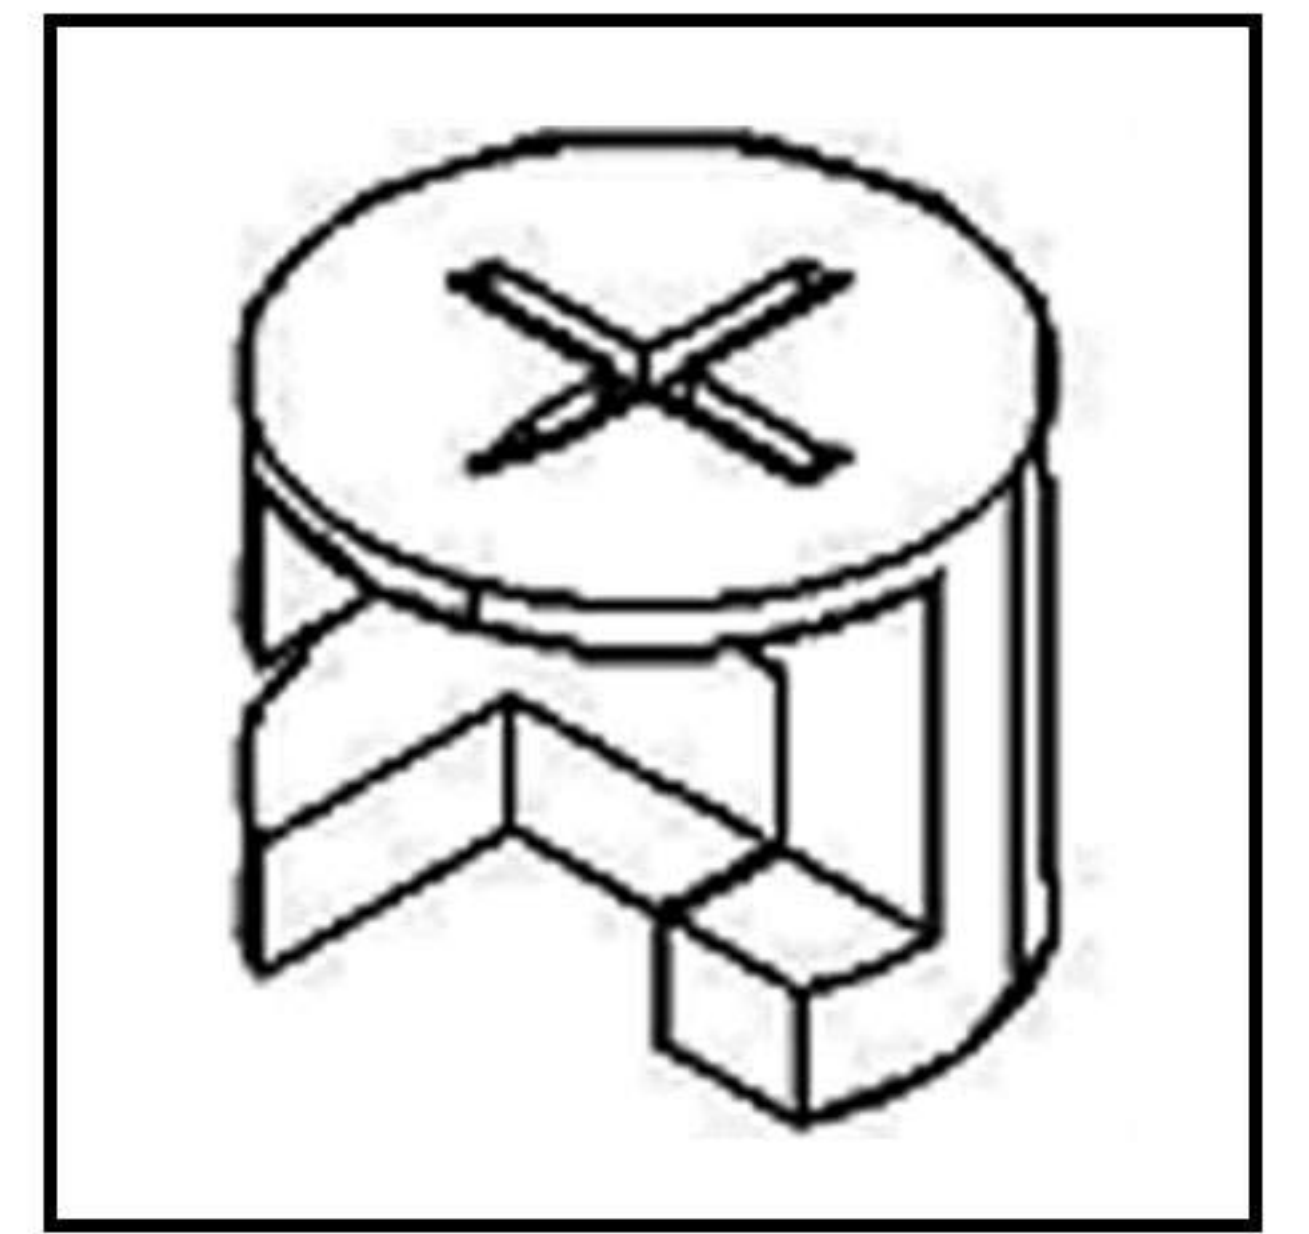


A

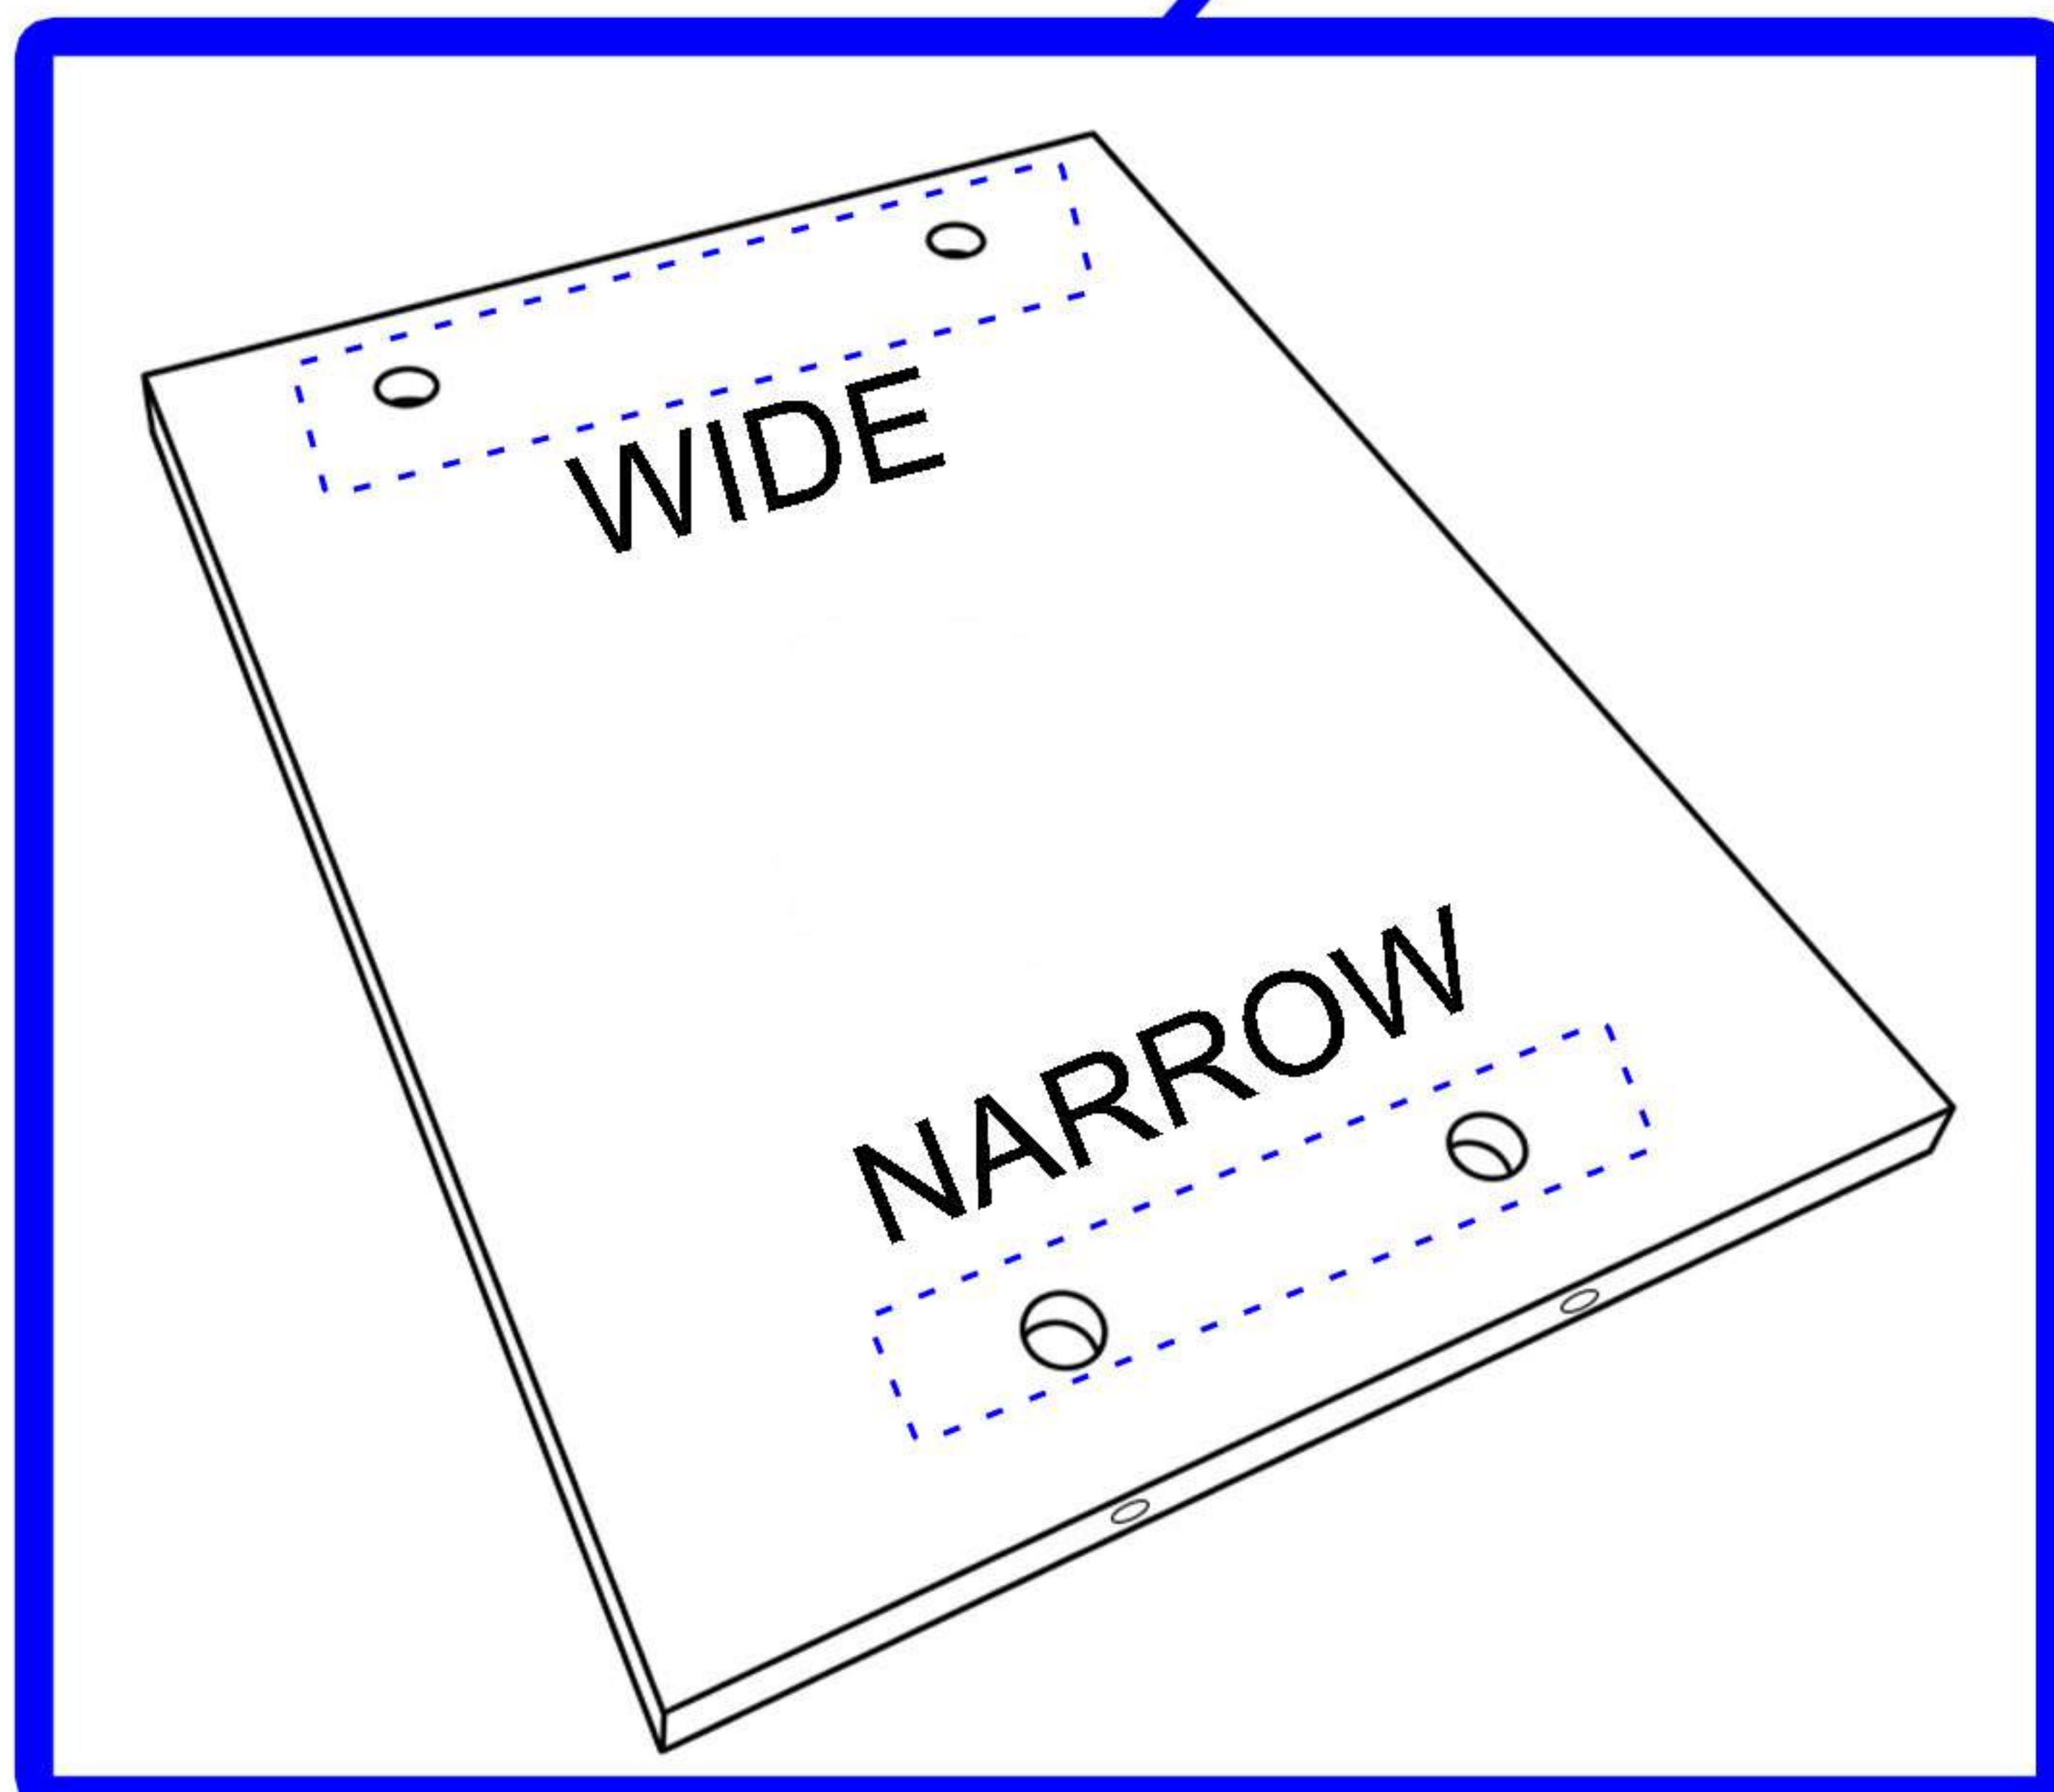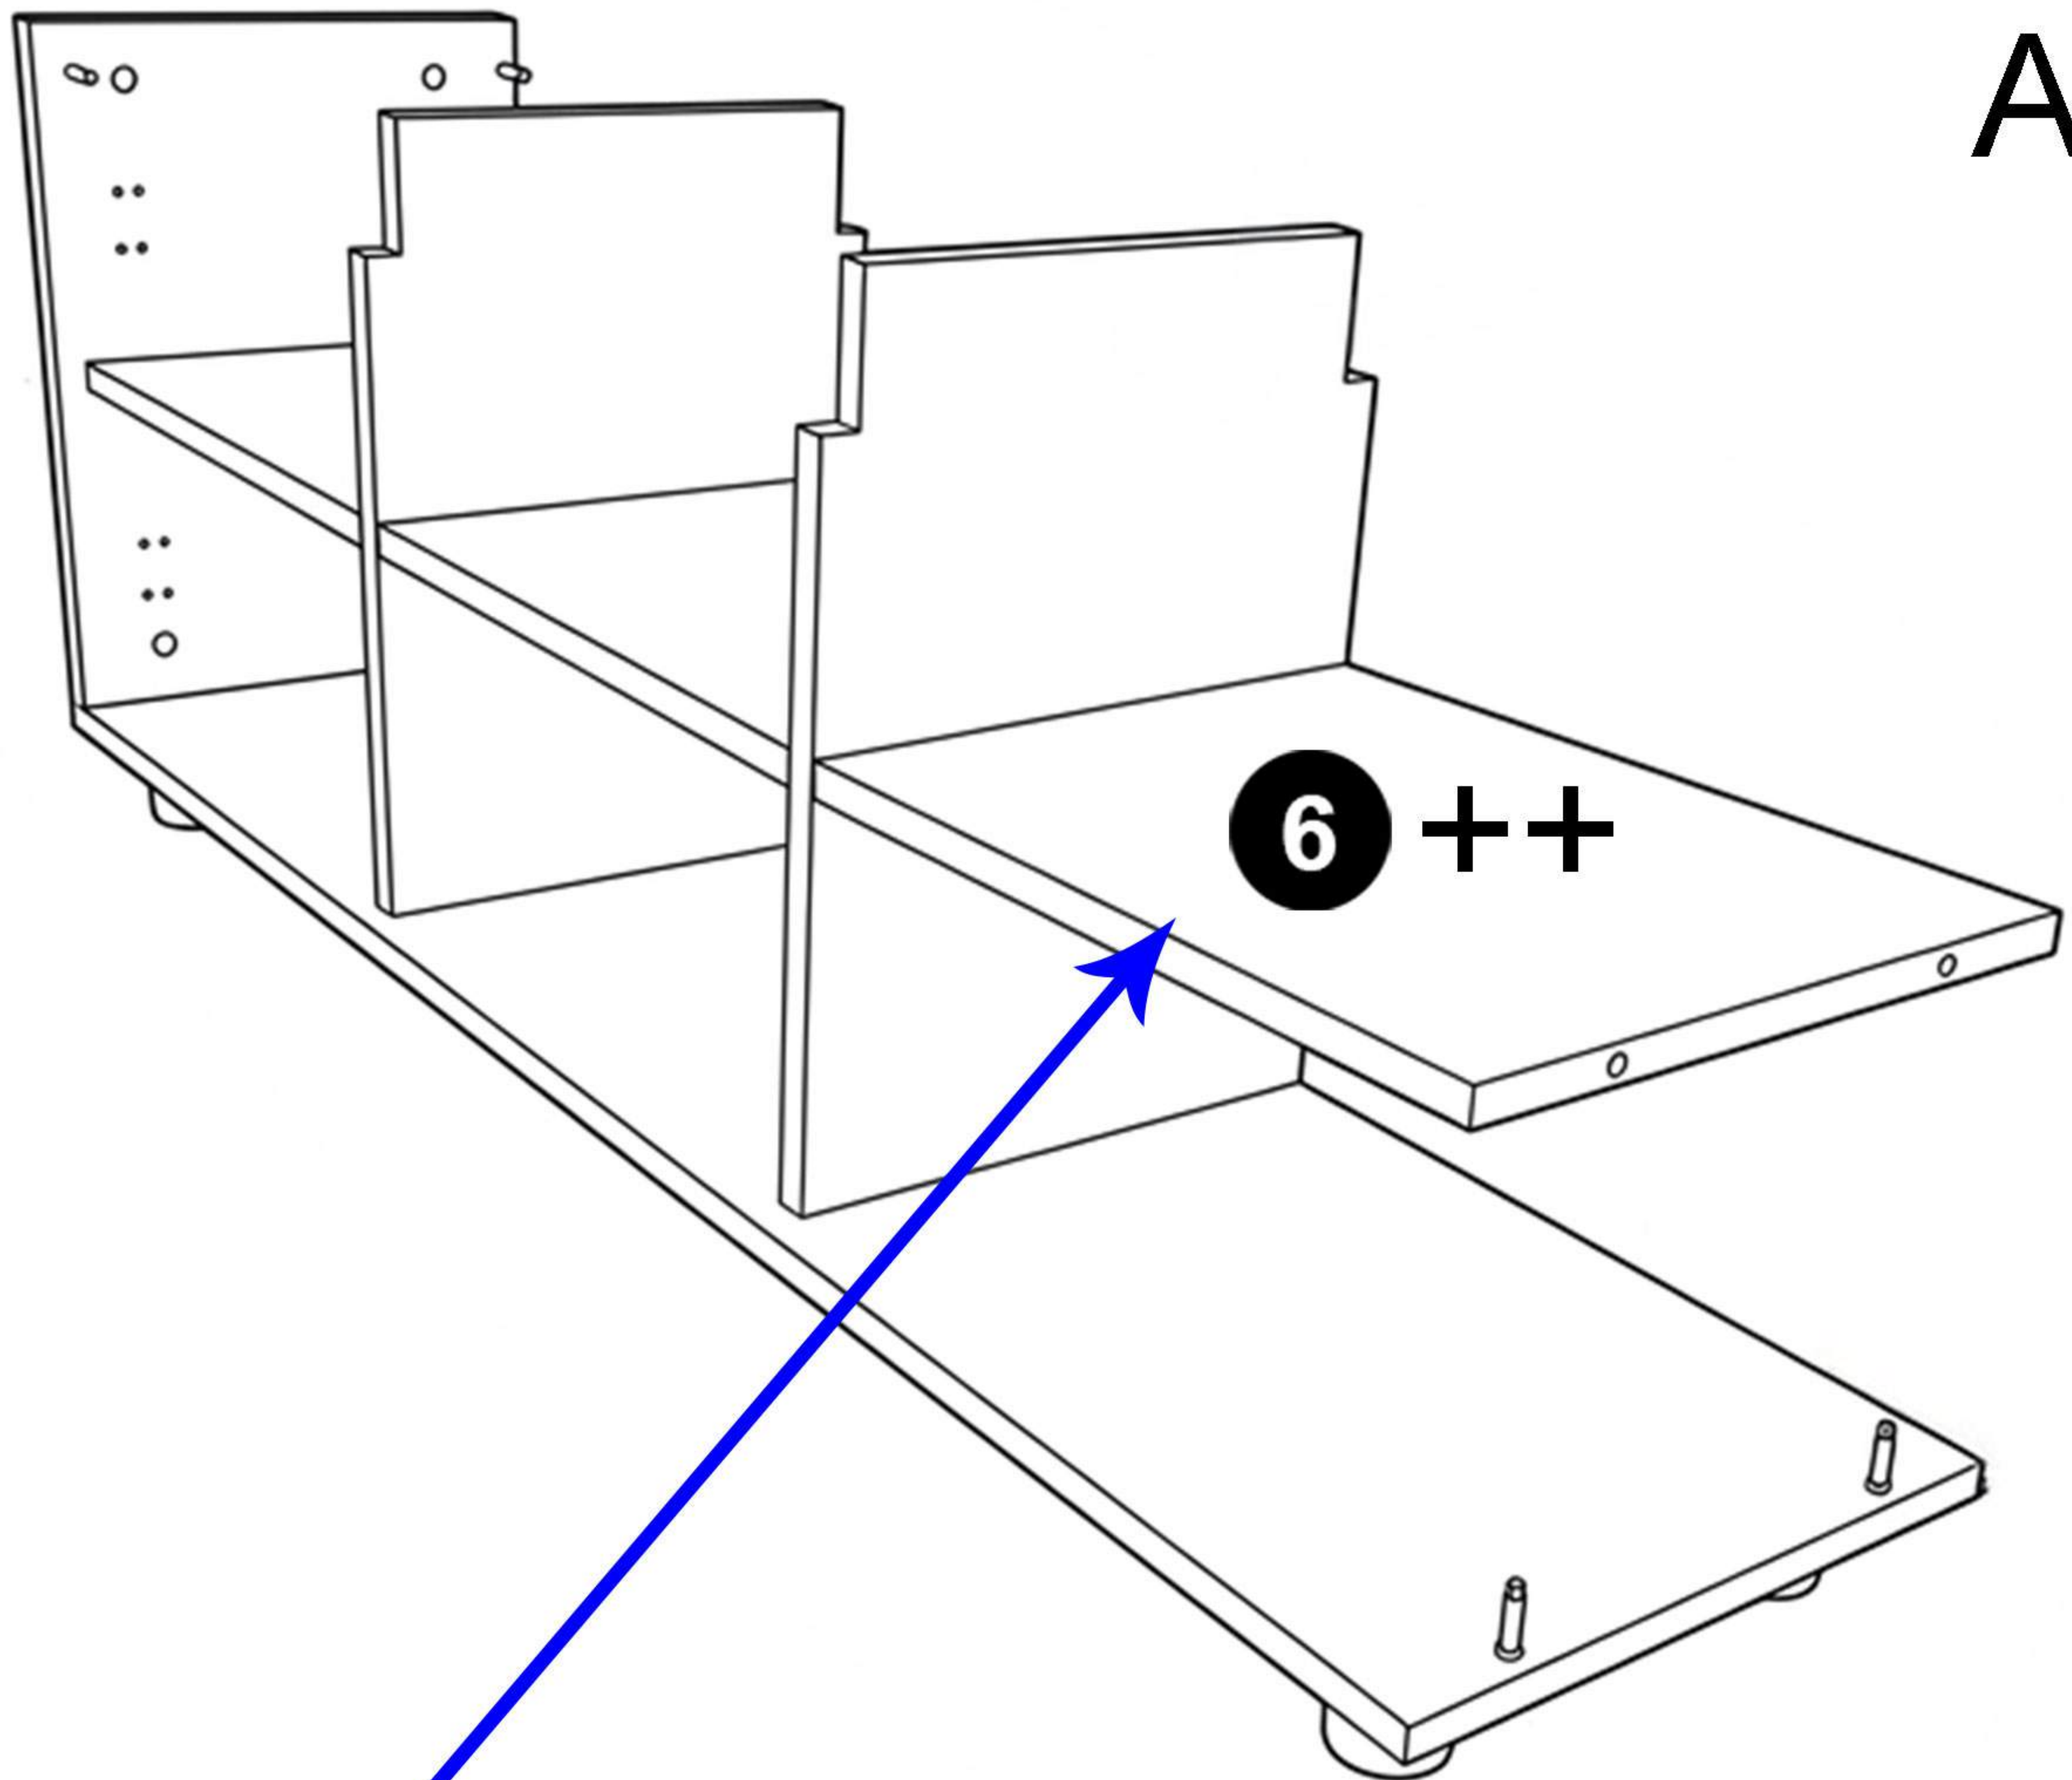

Panel 6++ has uneven hole spacing. One side is wider, the other is narrower.


Large round holes face down.

Step 11:

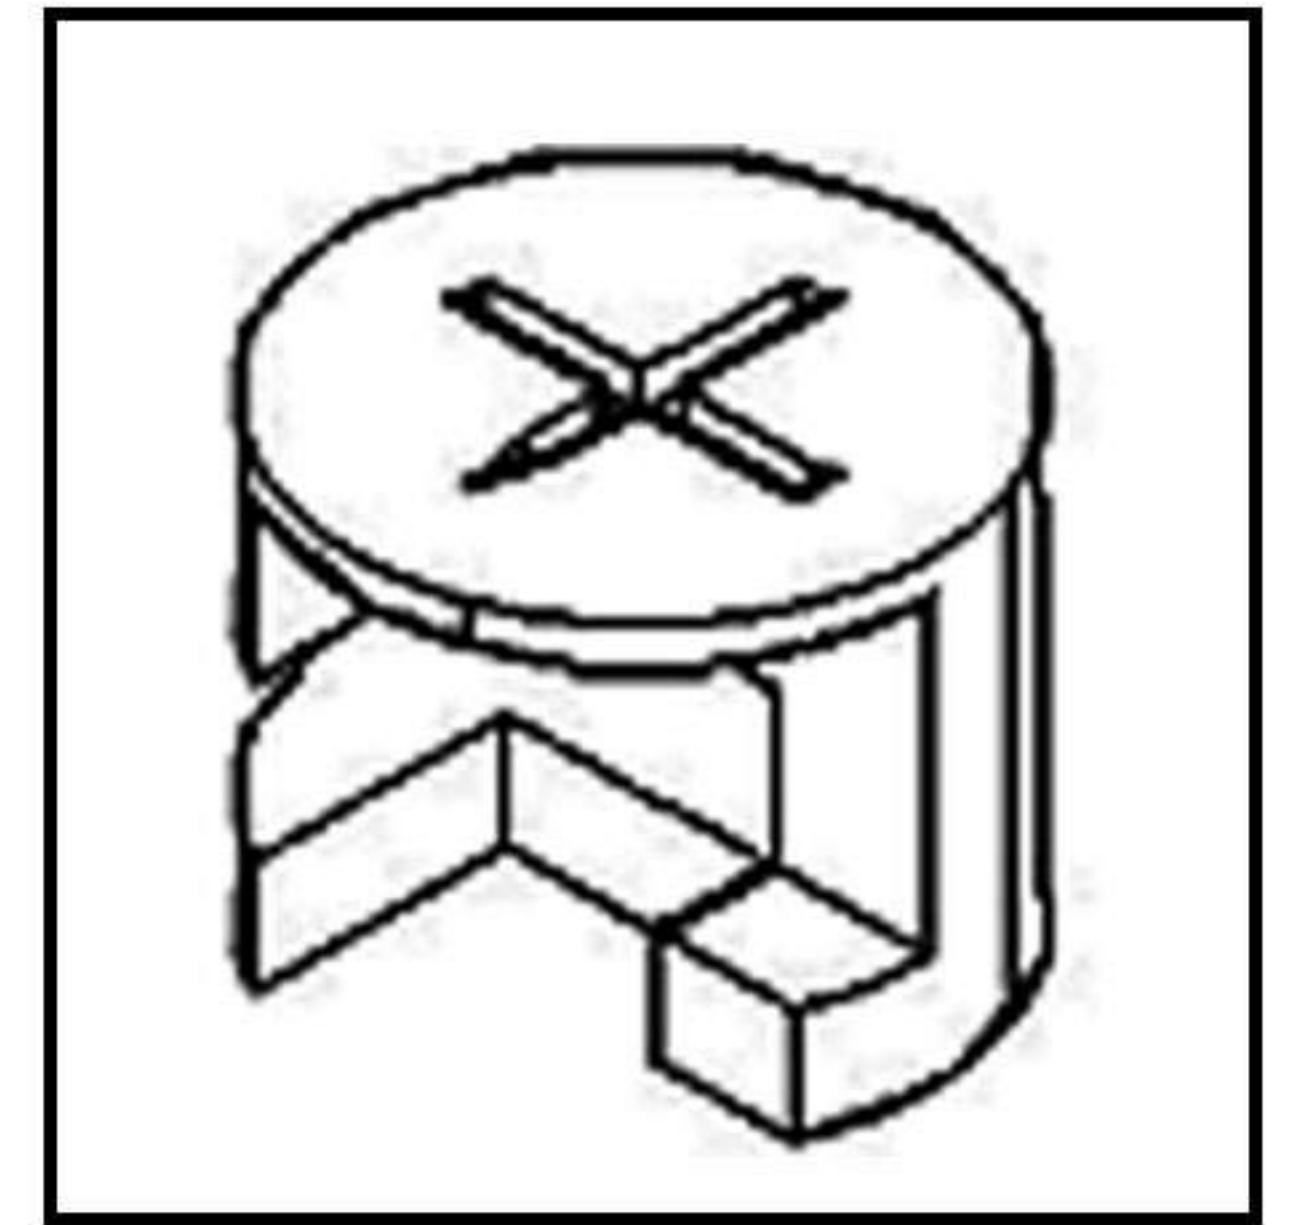

A


Important: All pre-drilled holes must face the front. If not, check the previous steps and adjust accordingly.

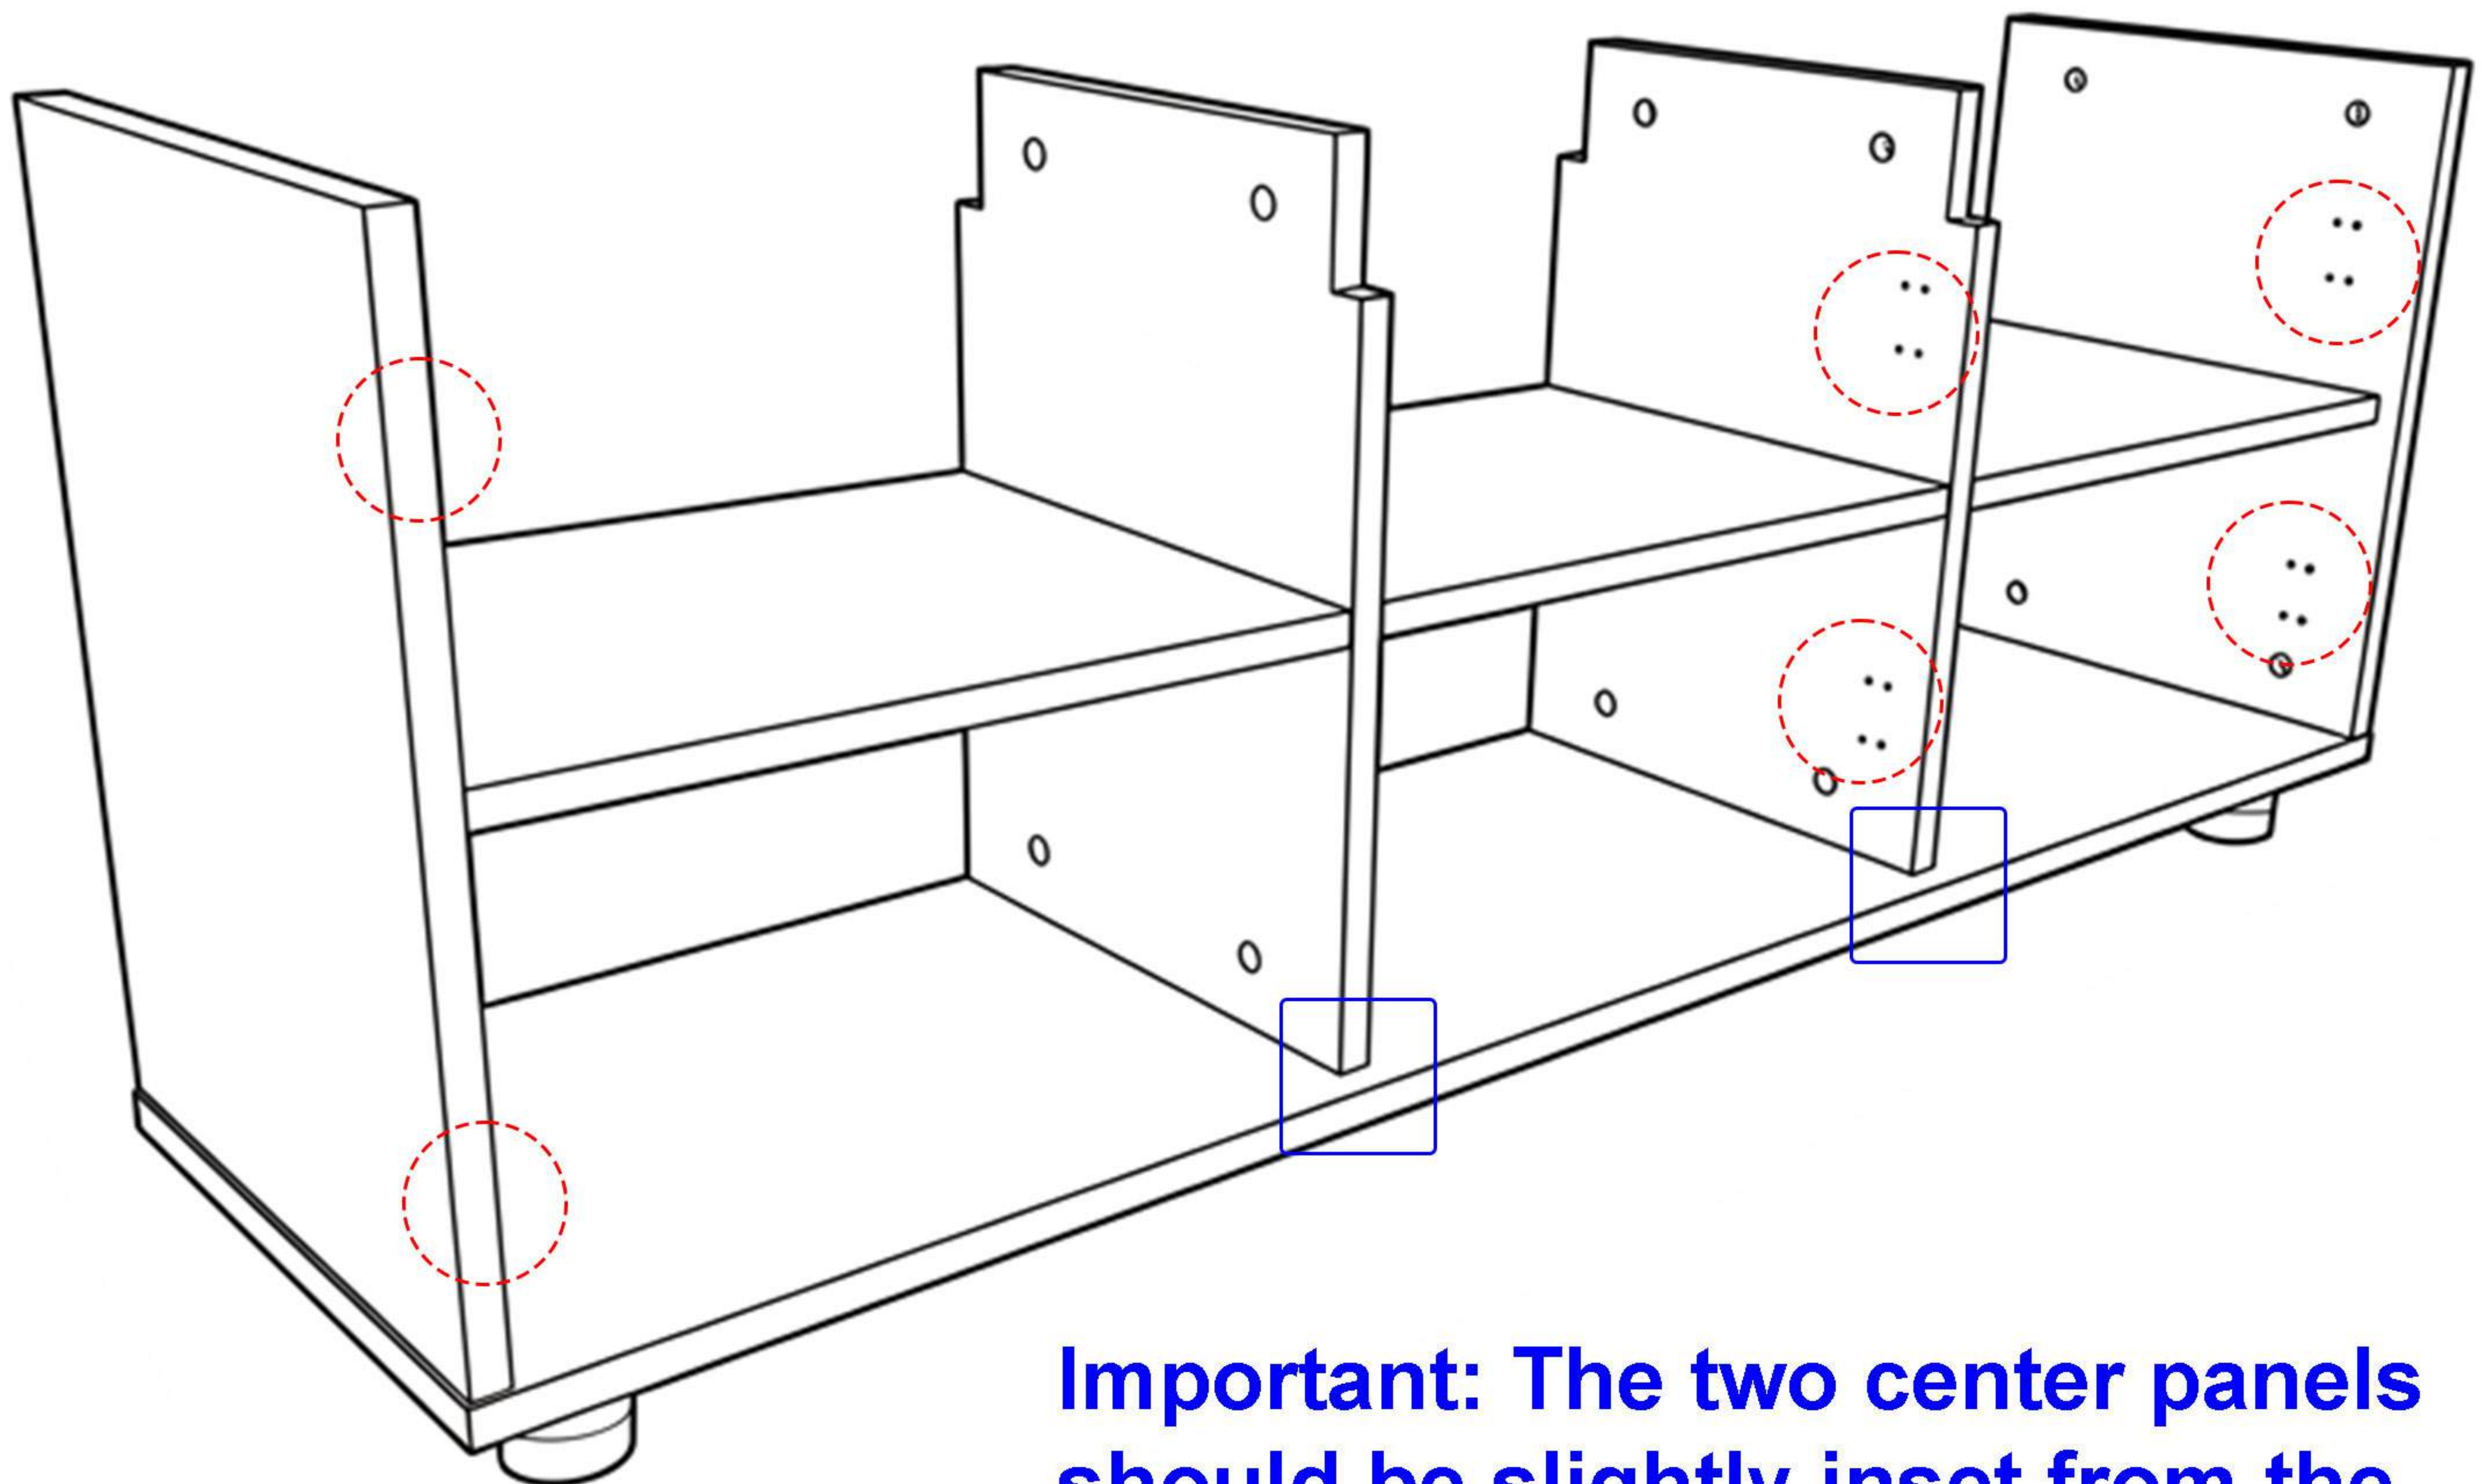

Important: The two center panels should be slightly inset from the edges. If not, check the previous steps and adjust accordingly.


Secure all large round holes with A.

Step 12:

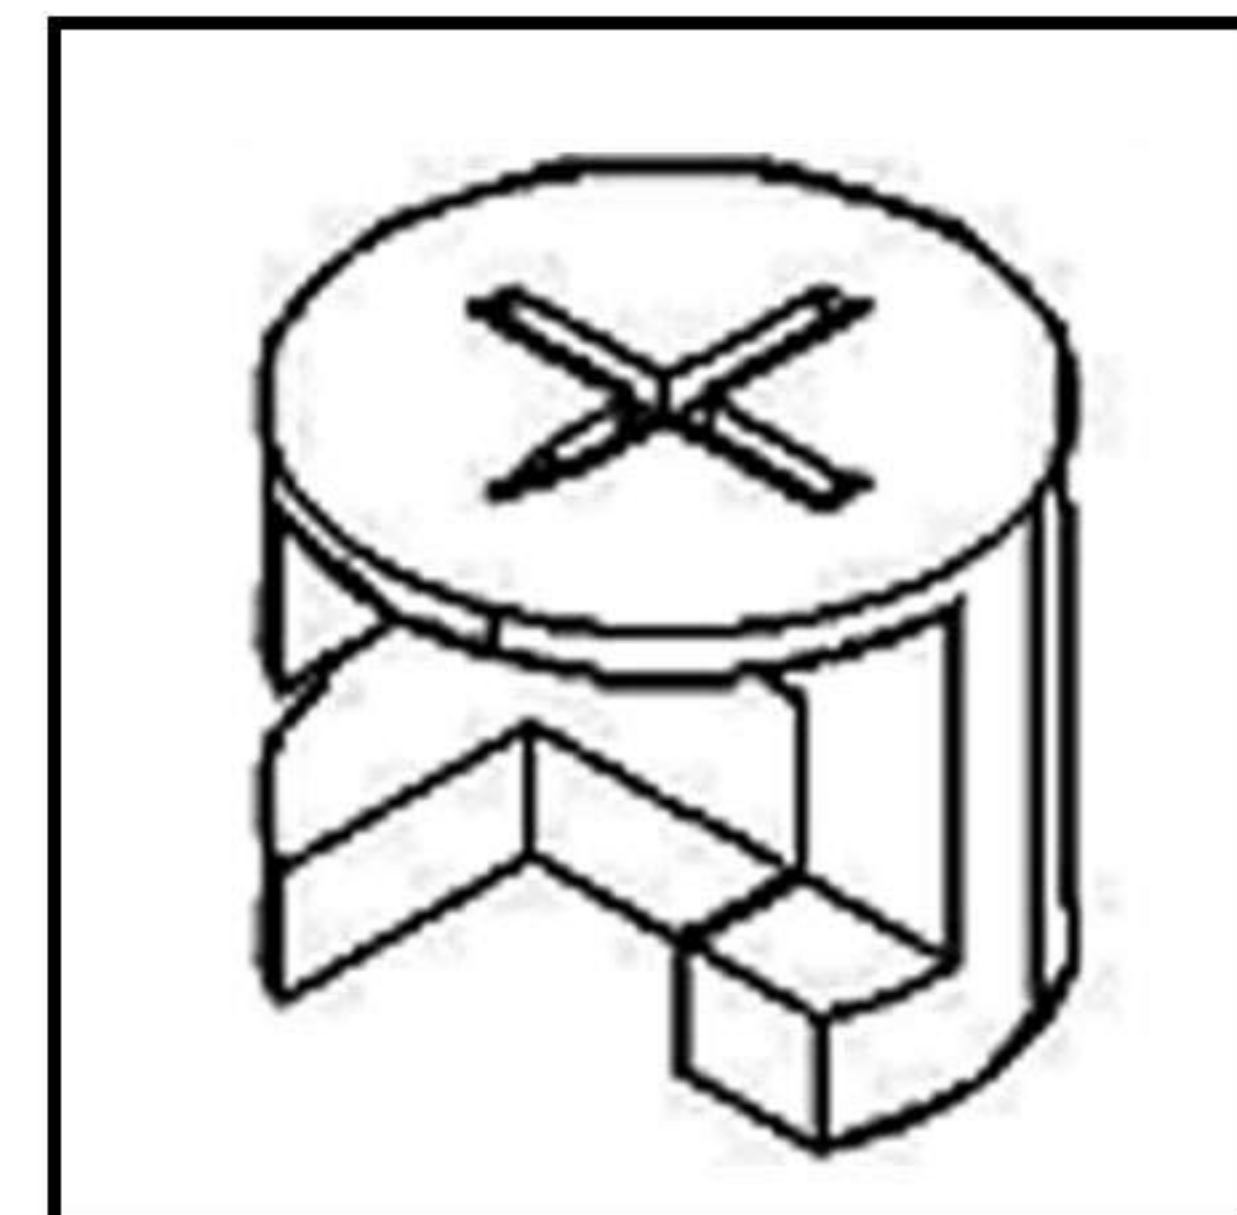


A

The pre-drilled holes on **panel 5** should **face up**.

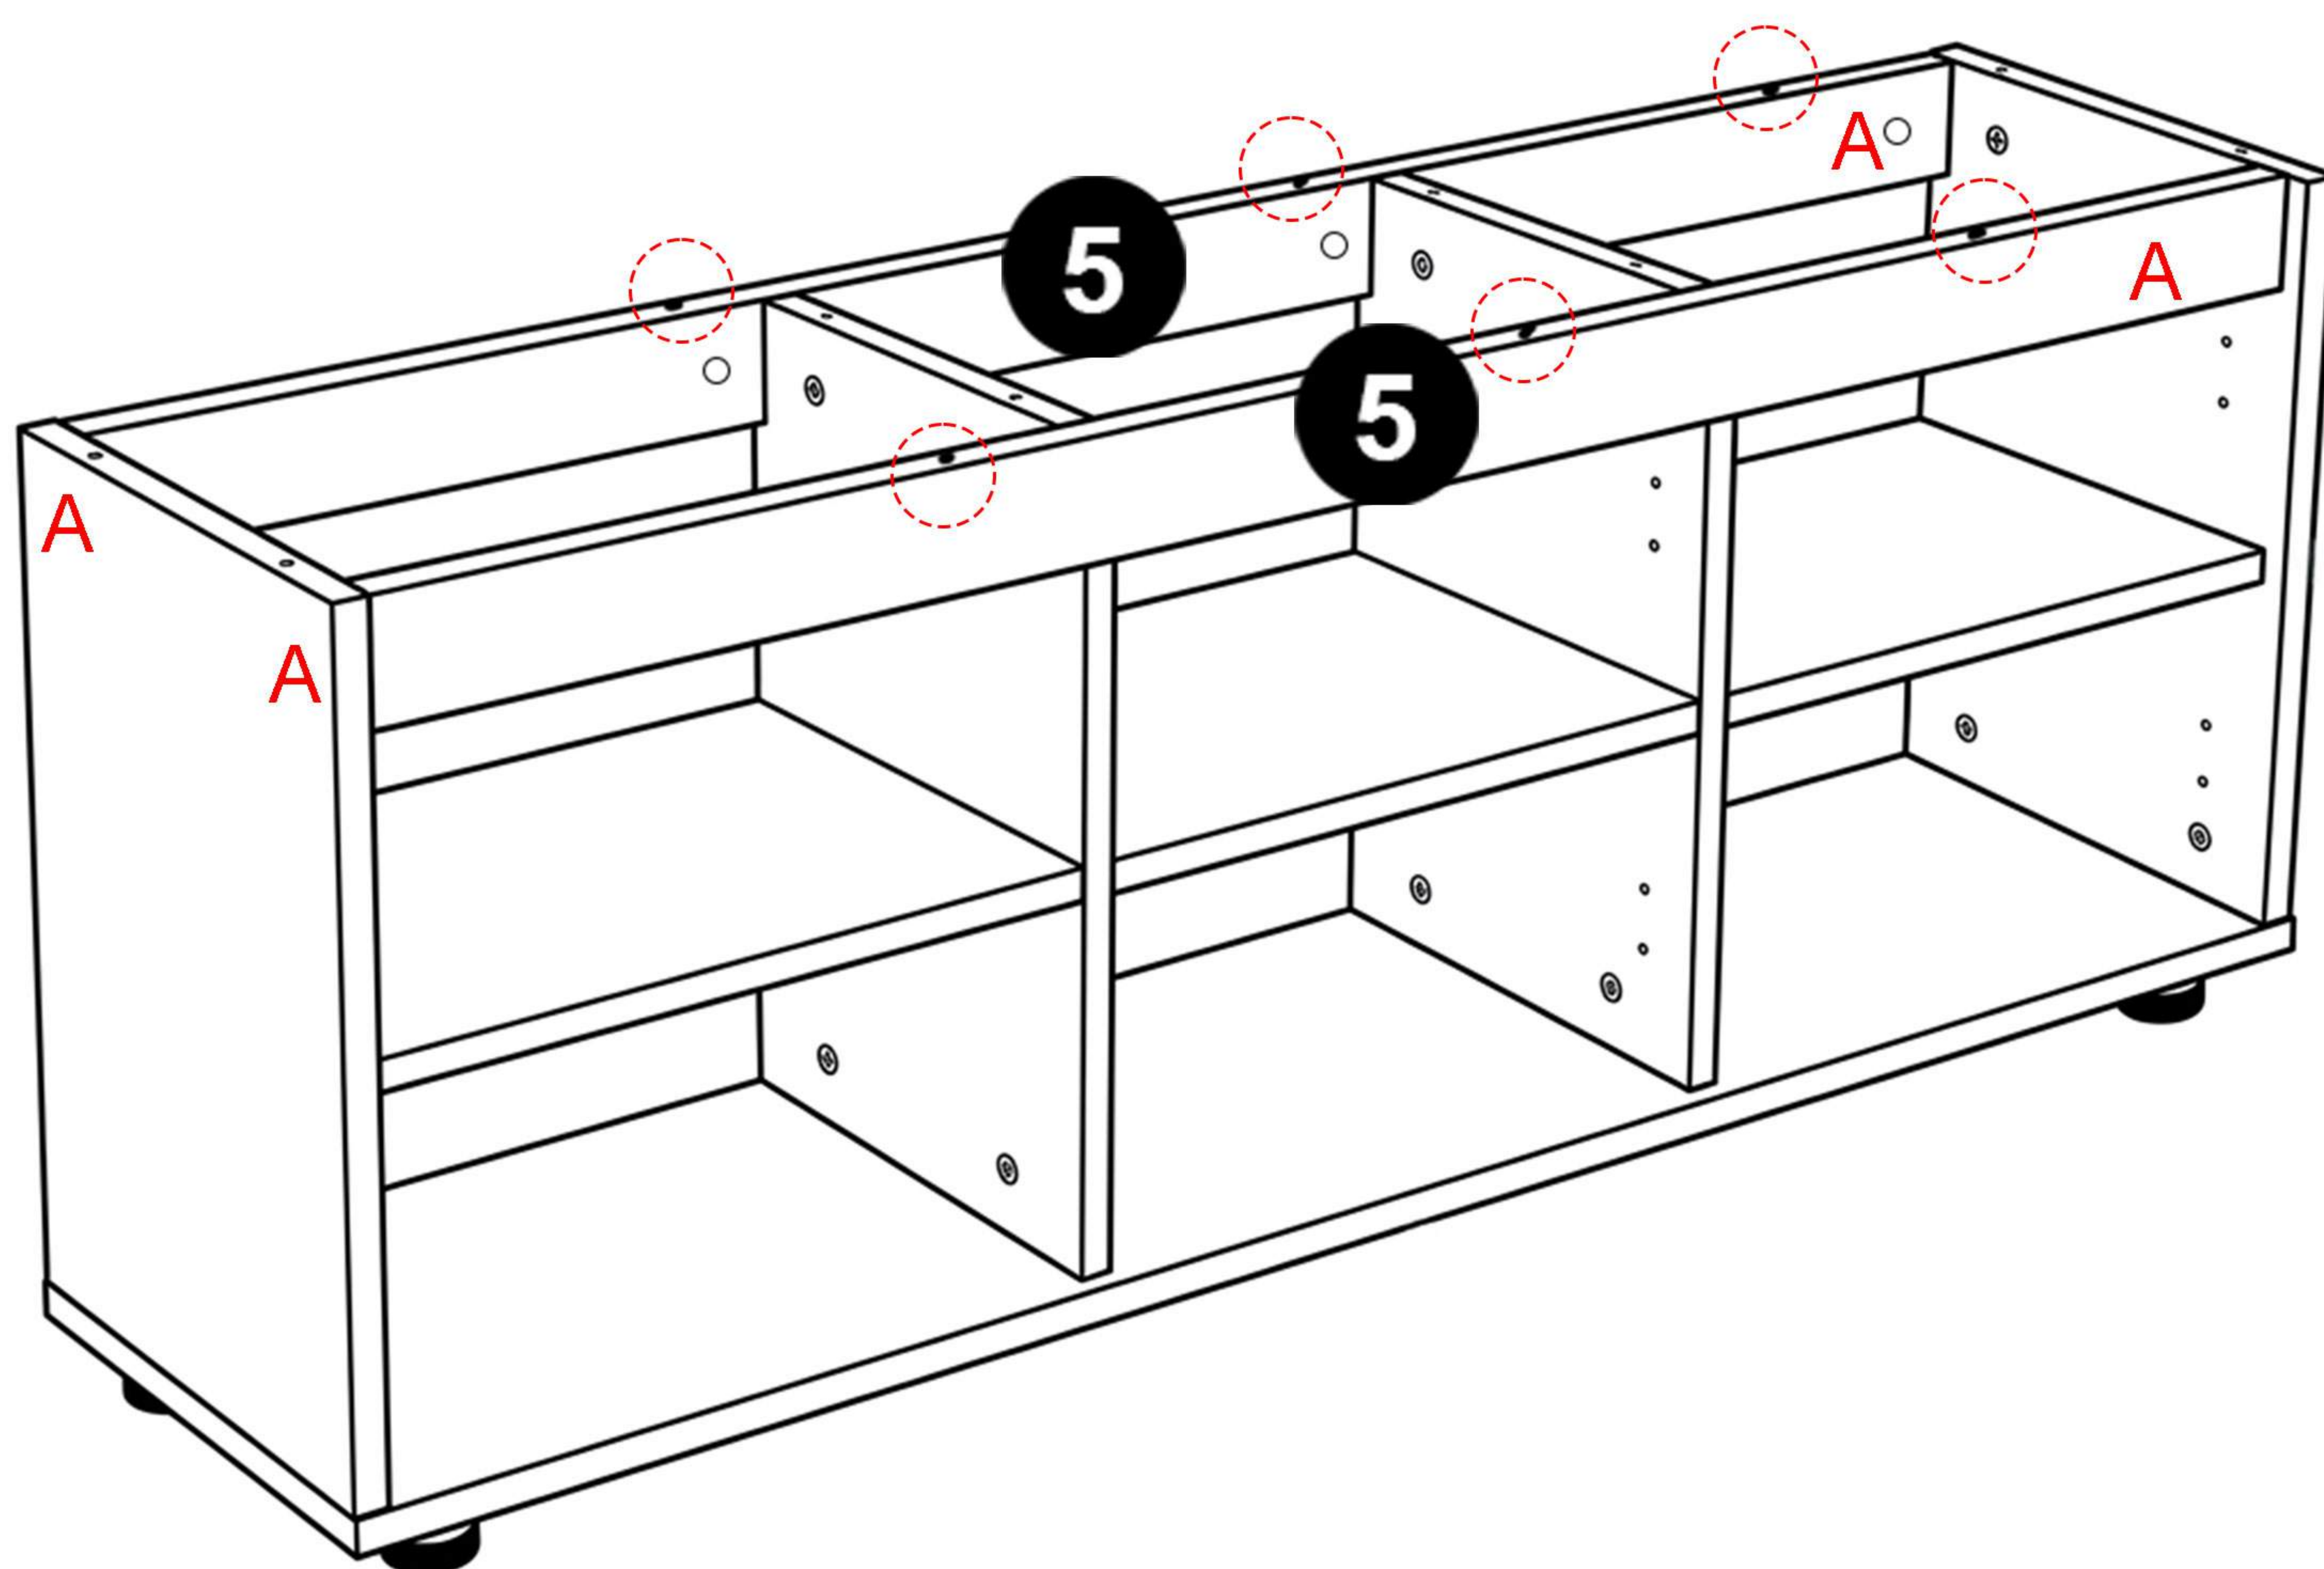


Step 13:

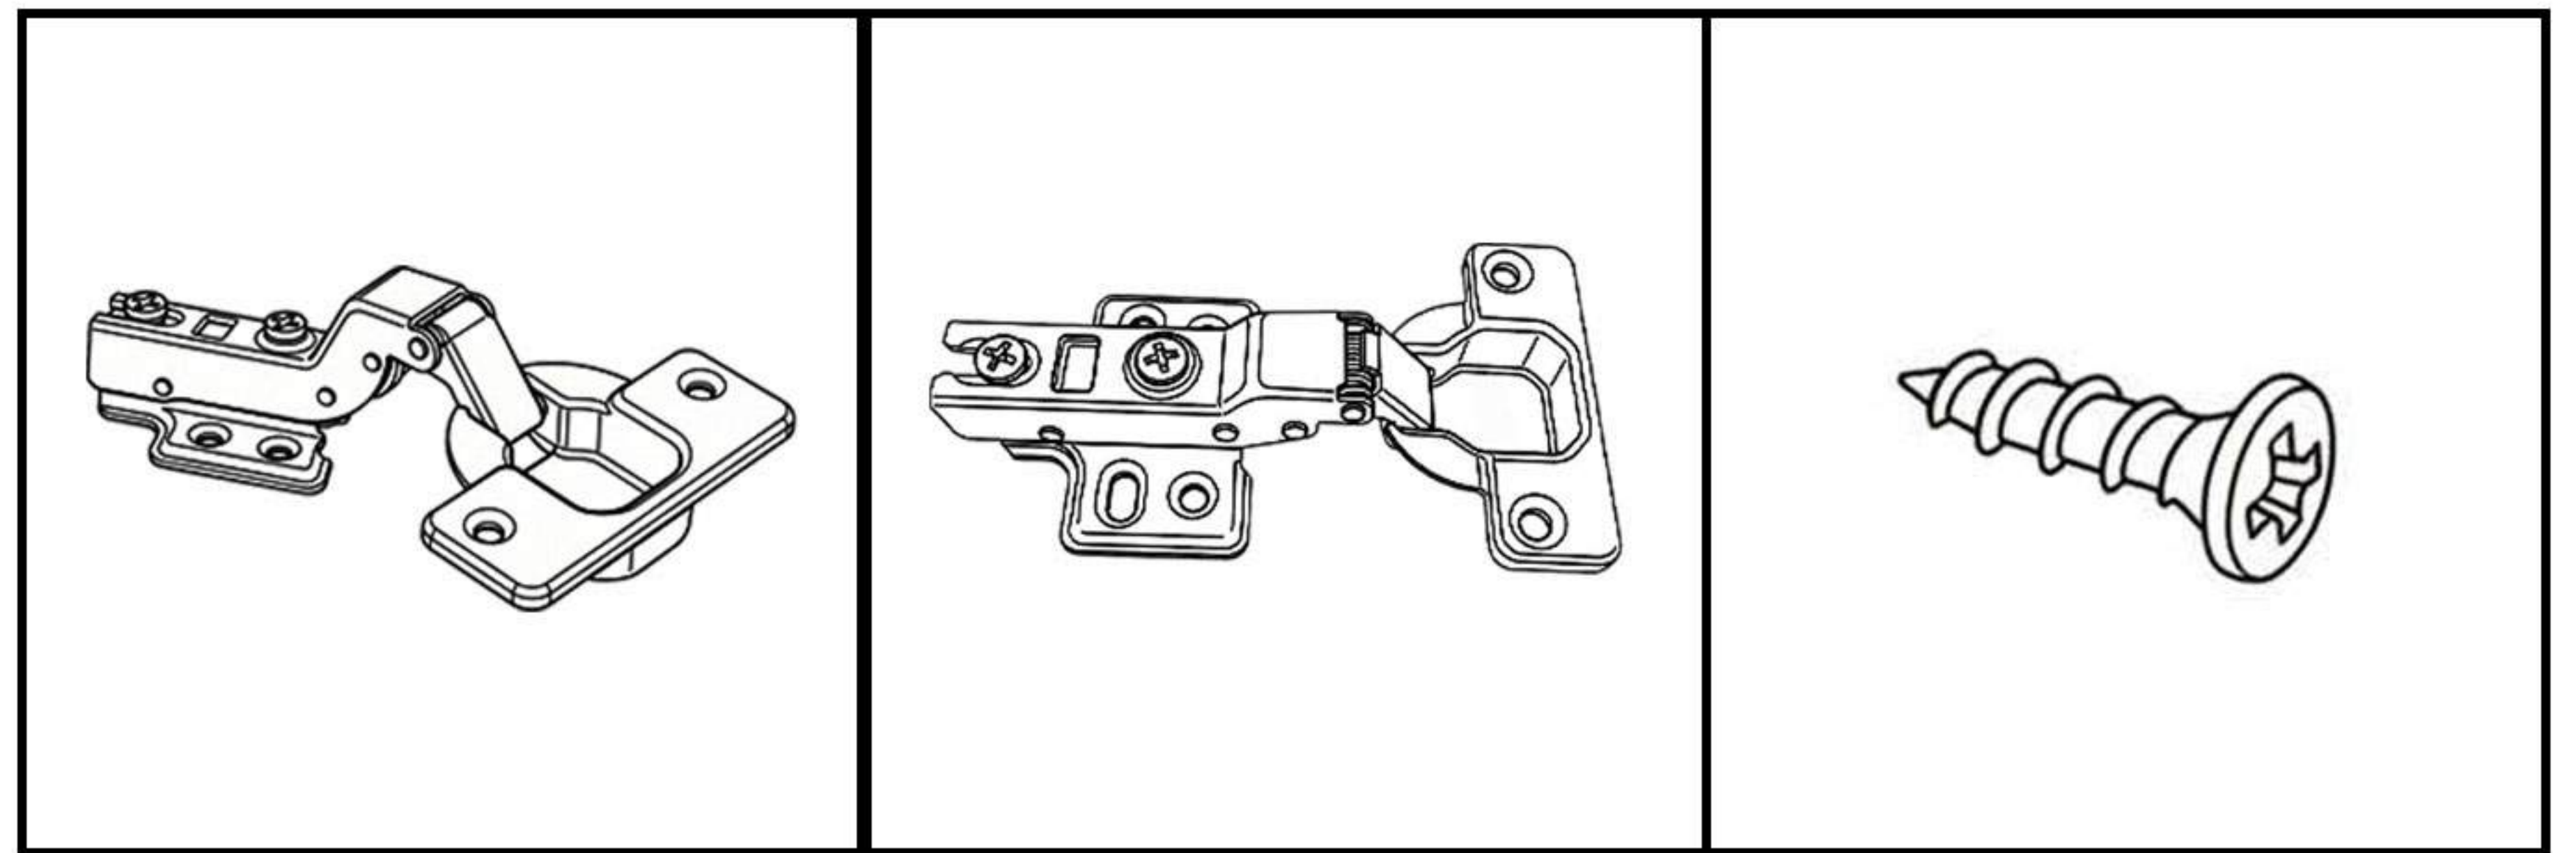

G


H

C


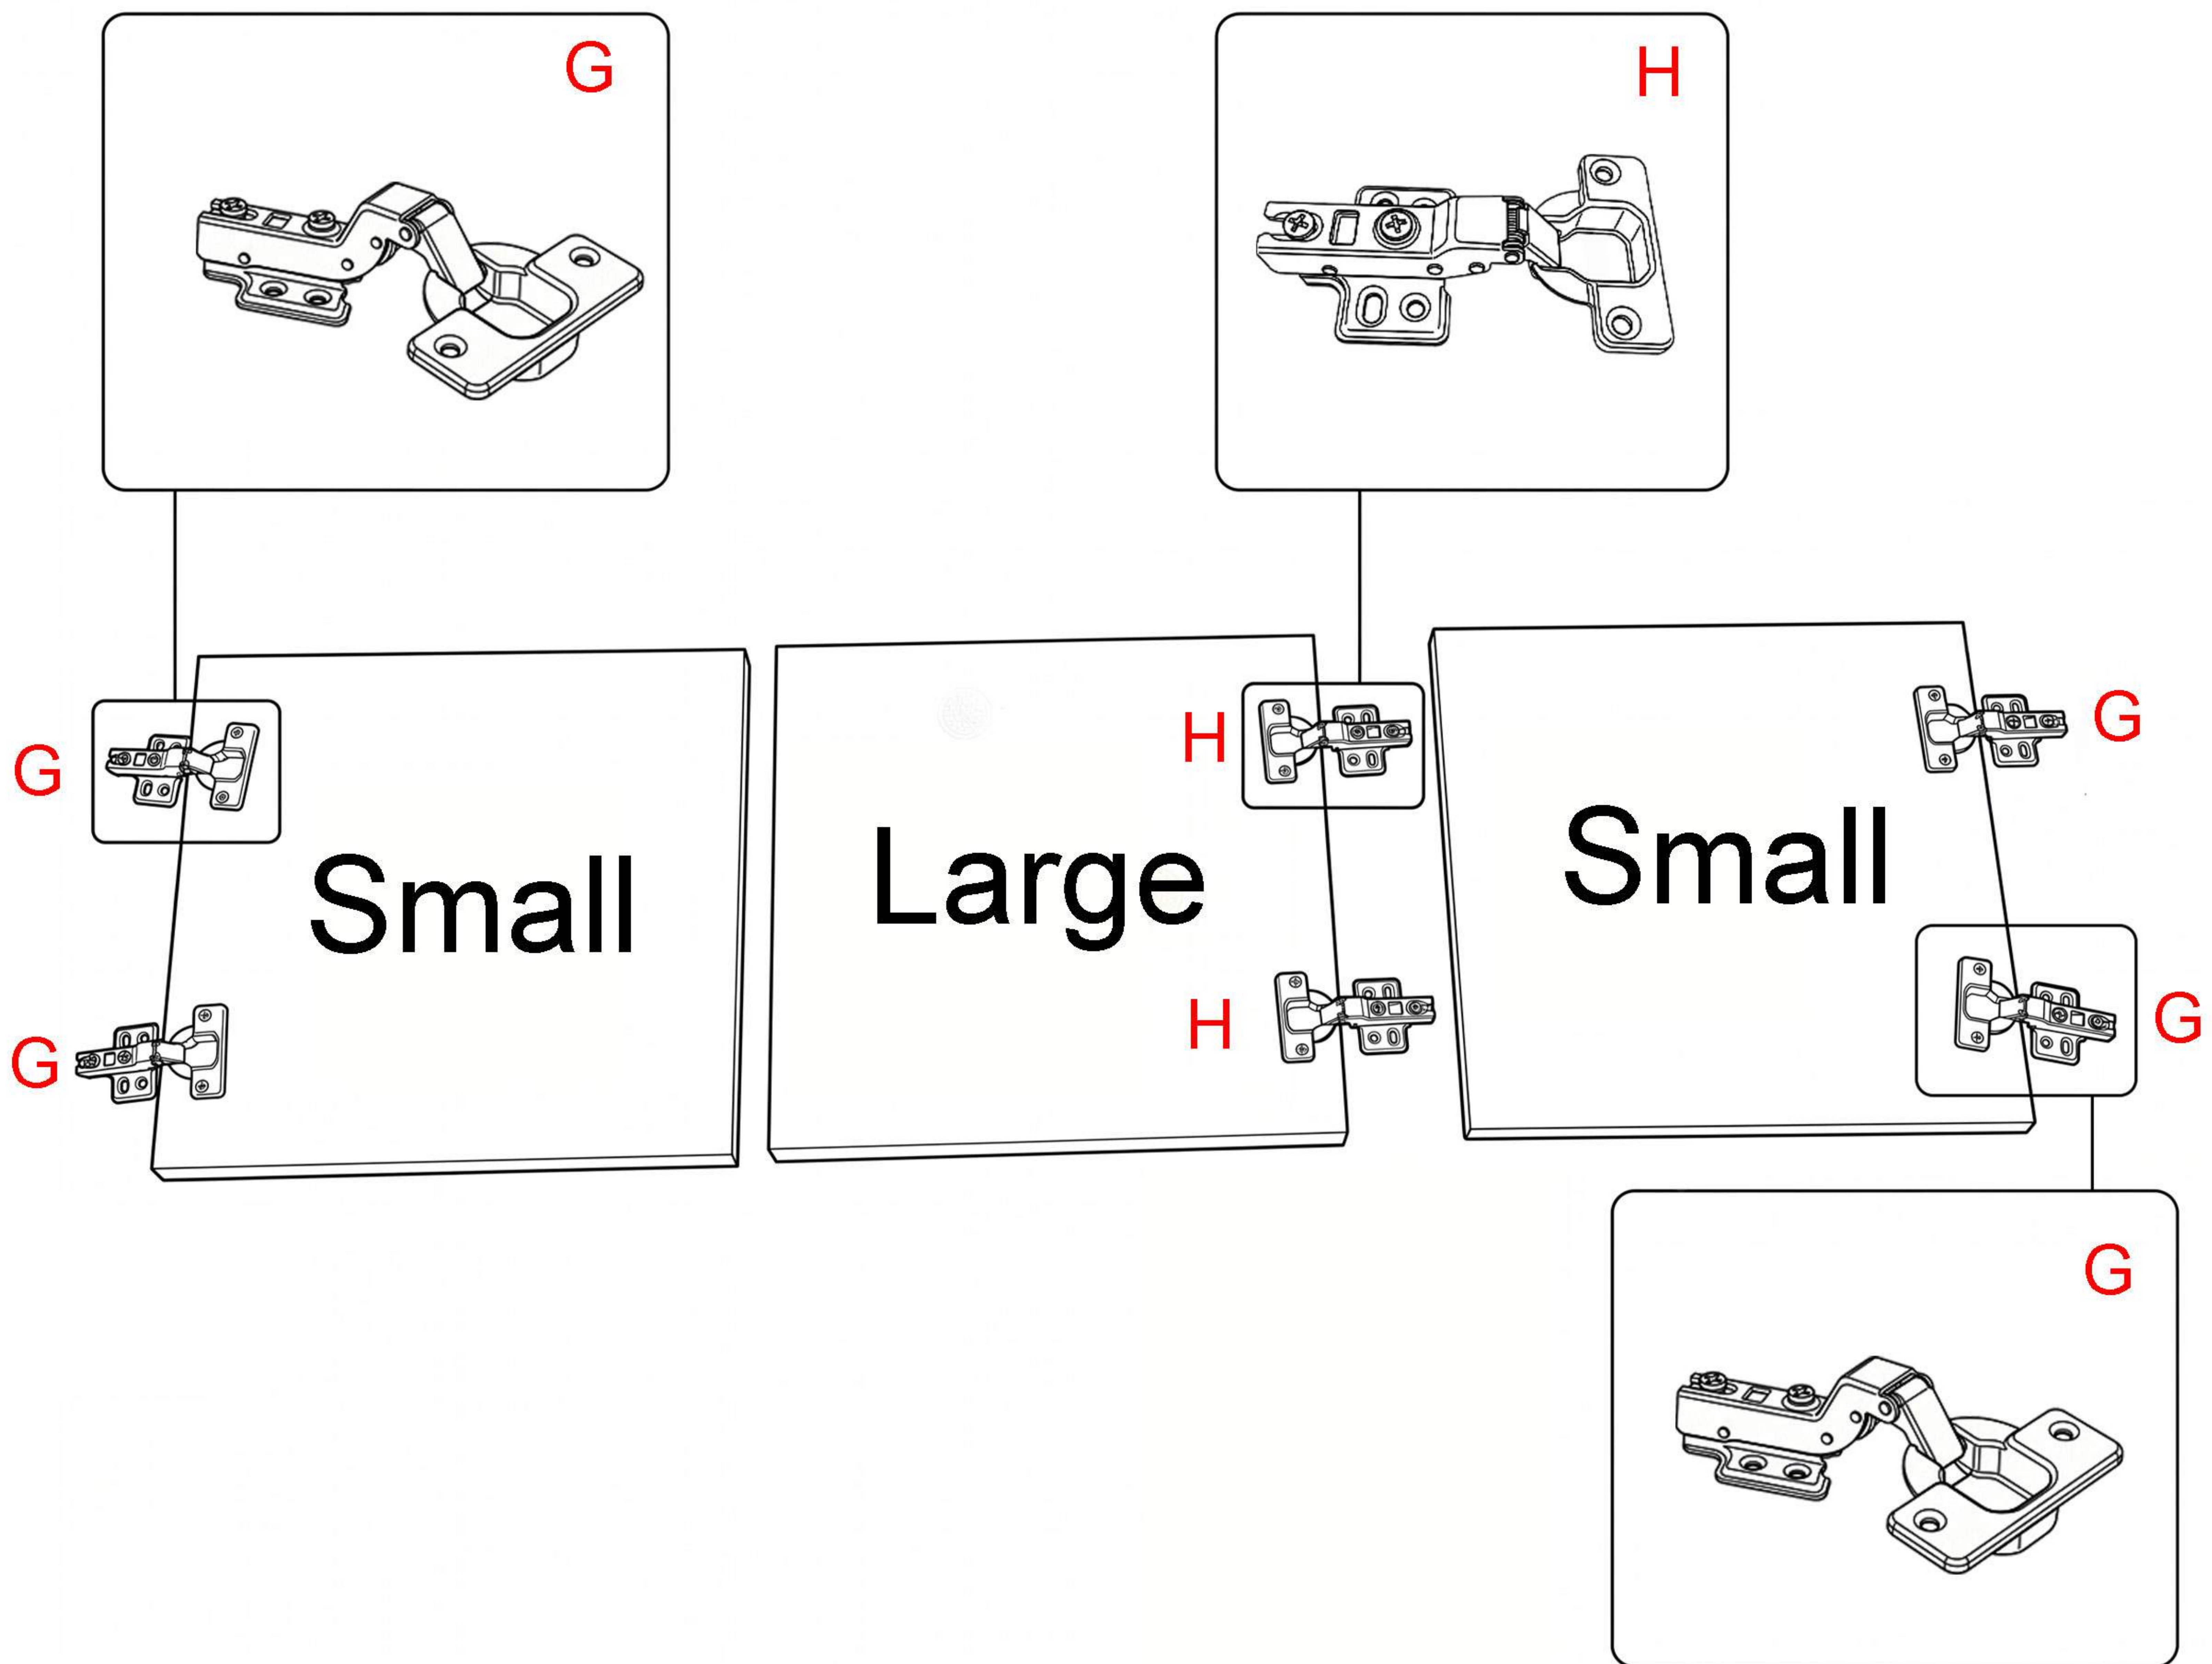


Use C to attach G/H to the corresponding door panel.

Step 14:

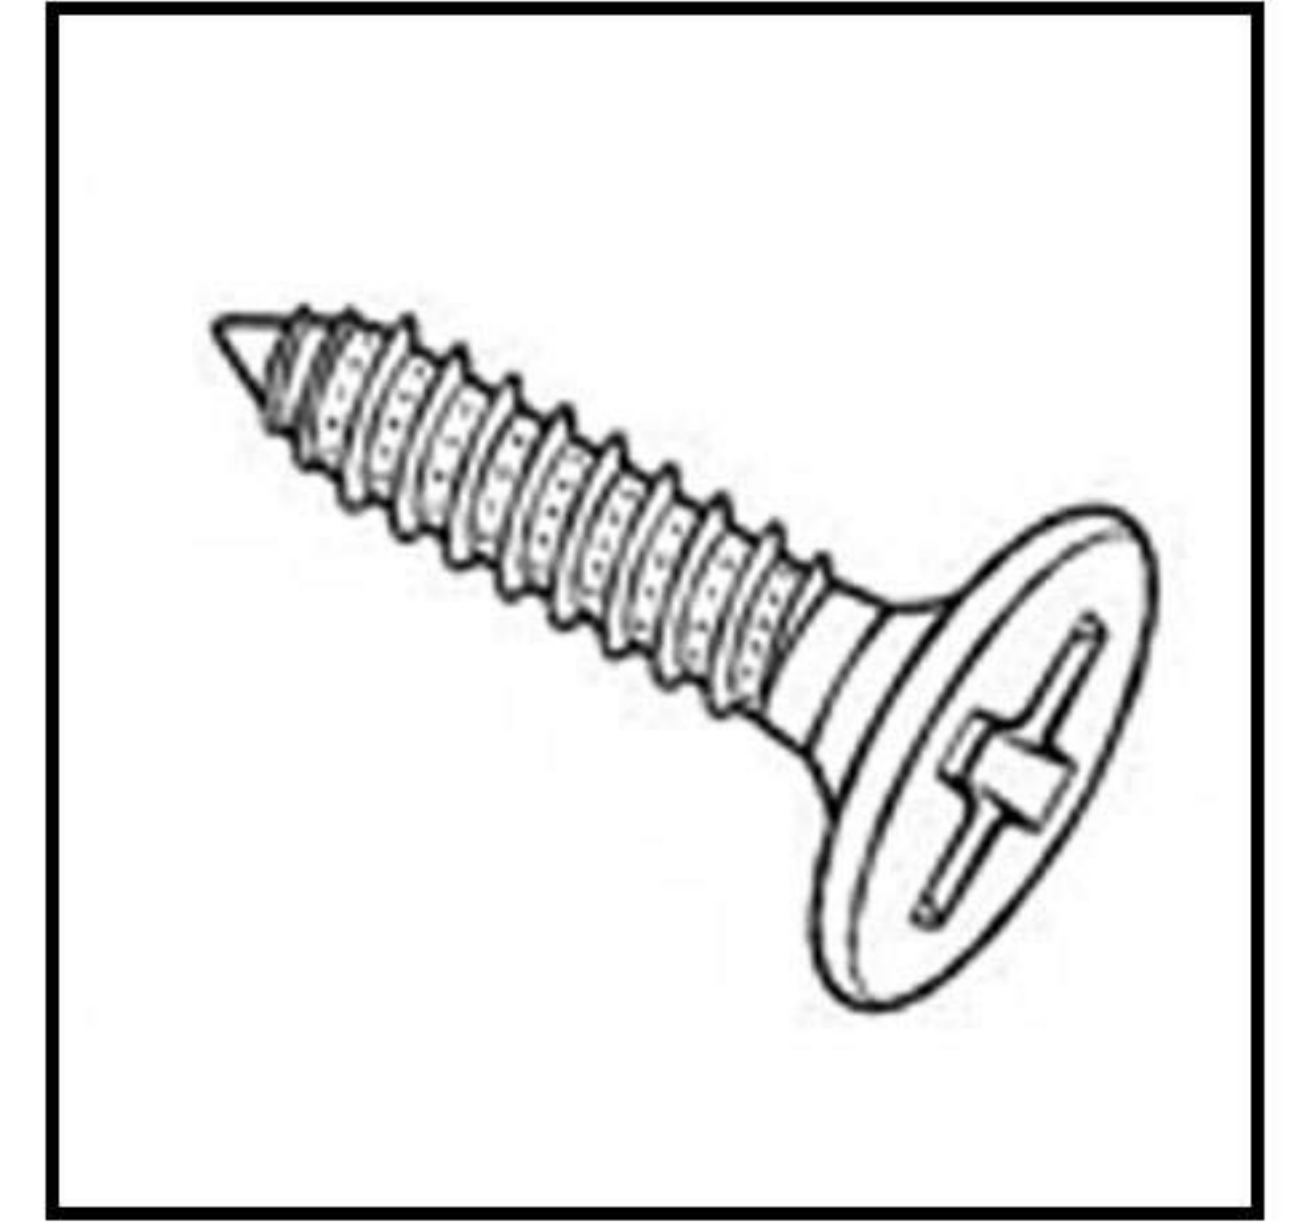

C

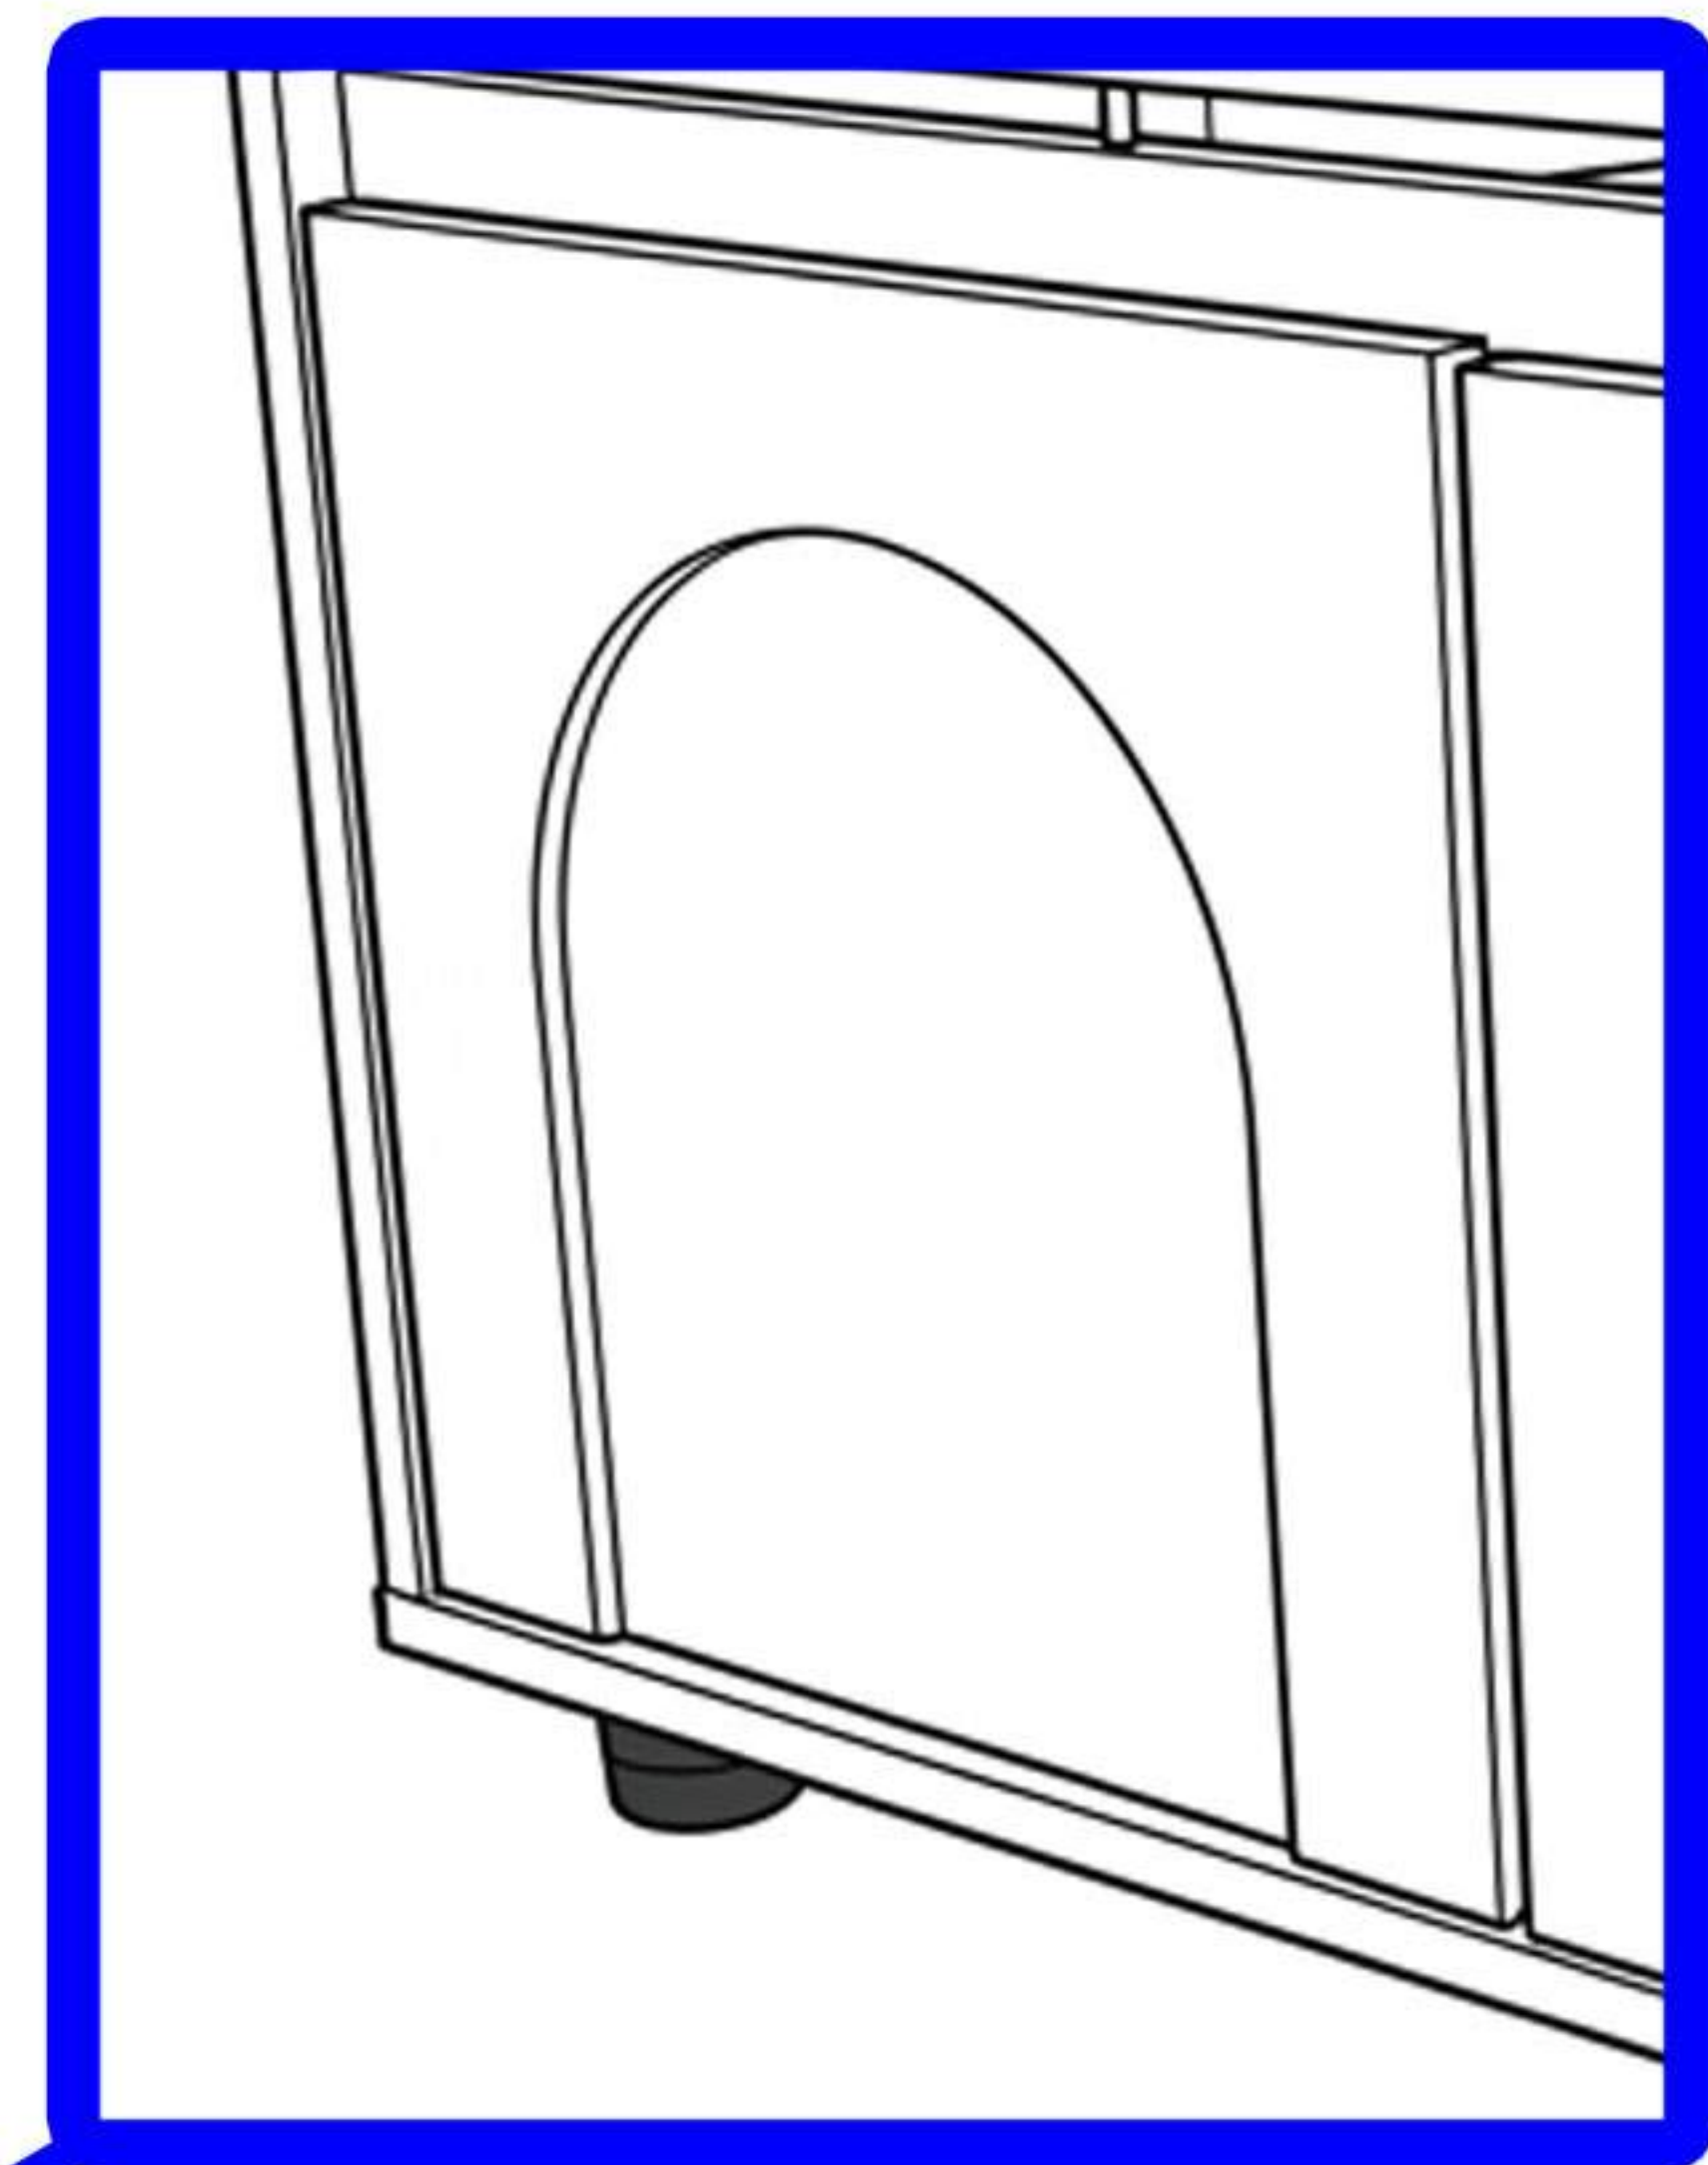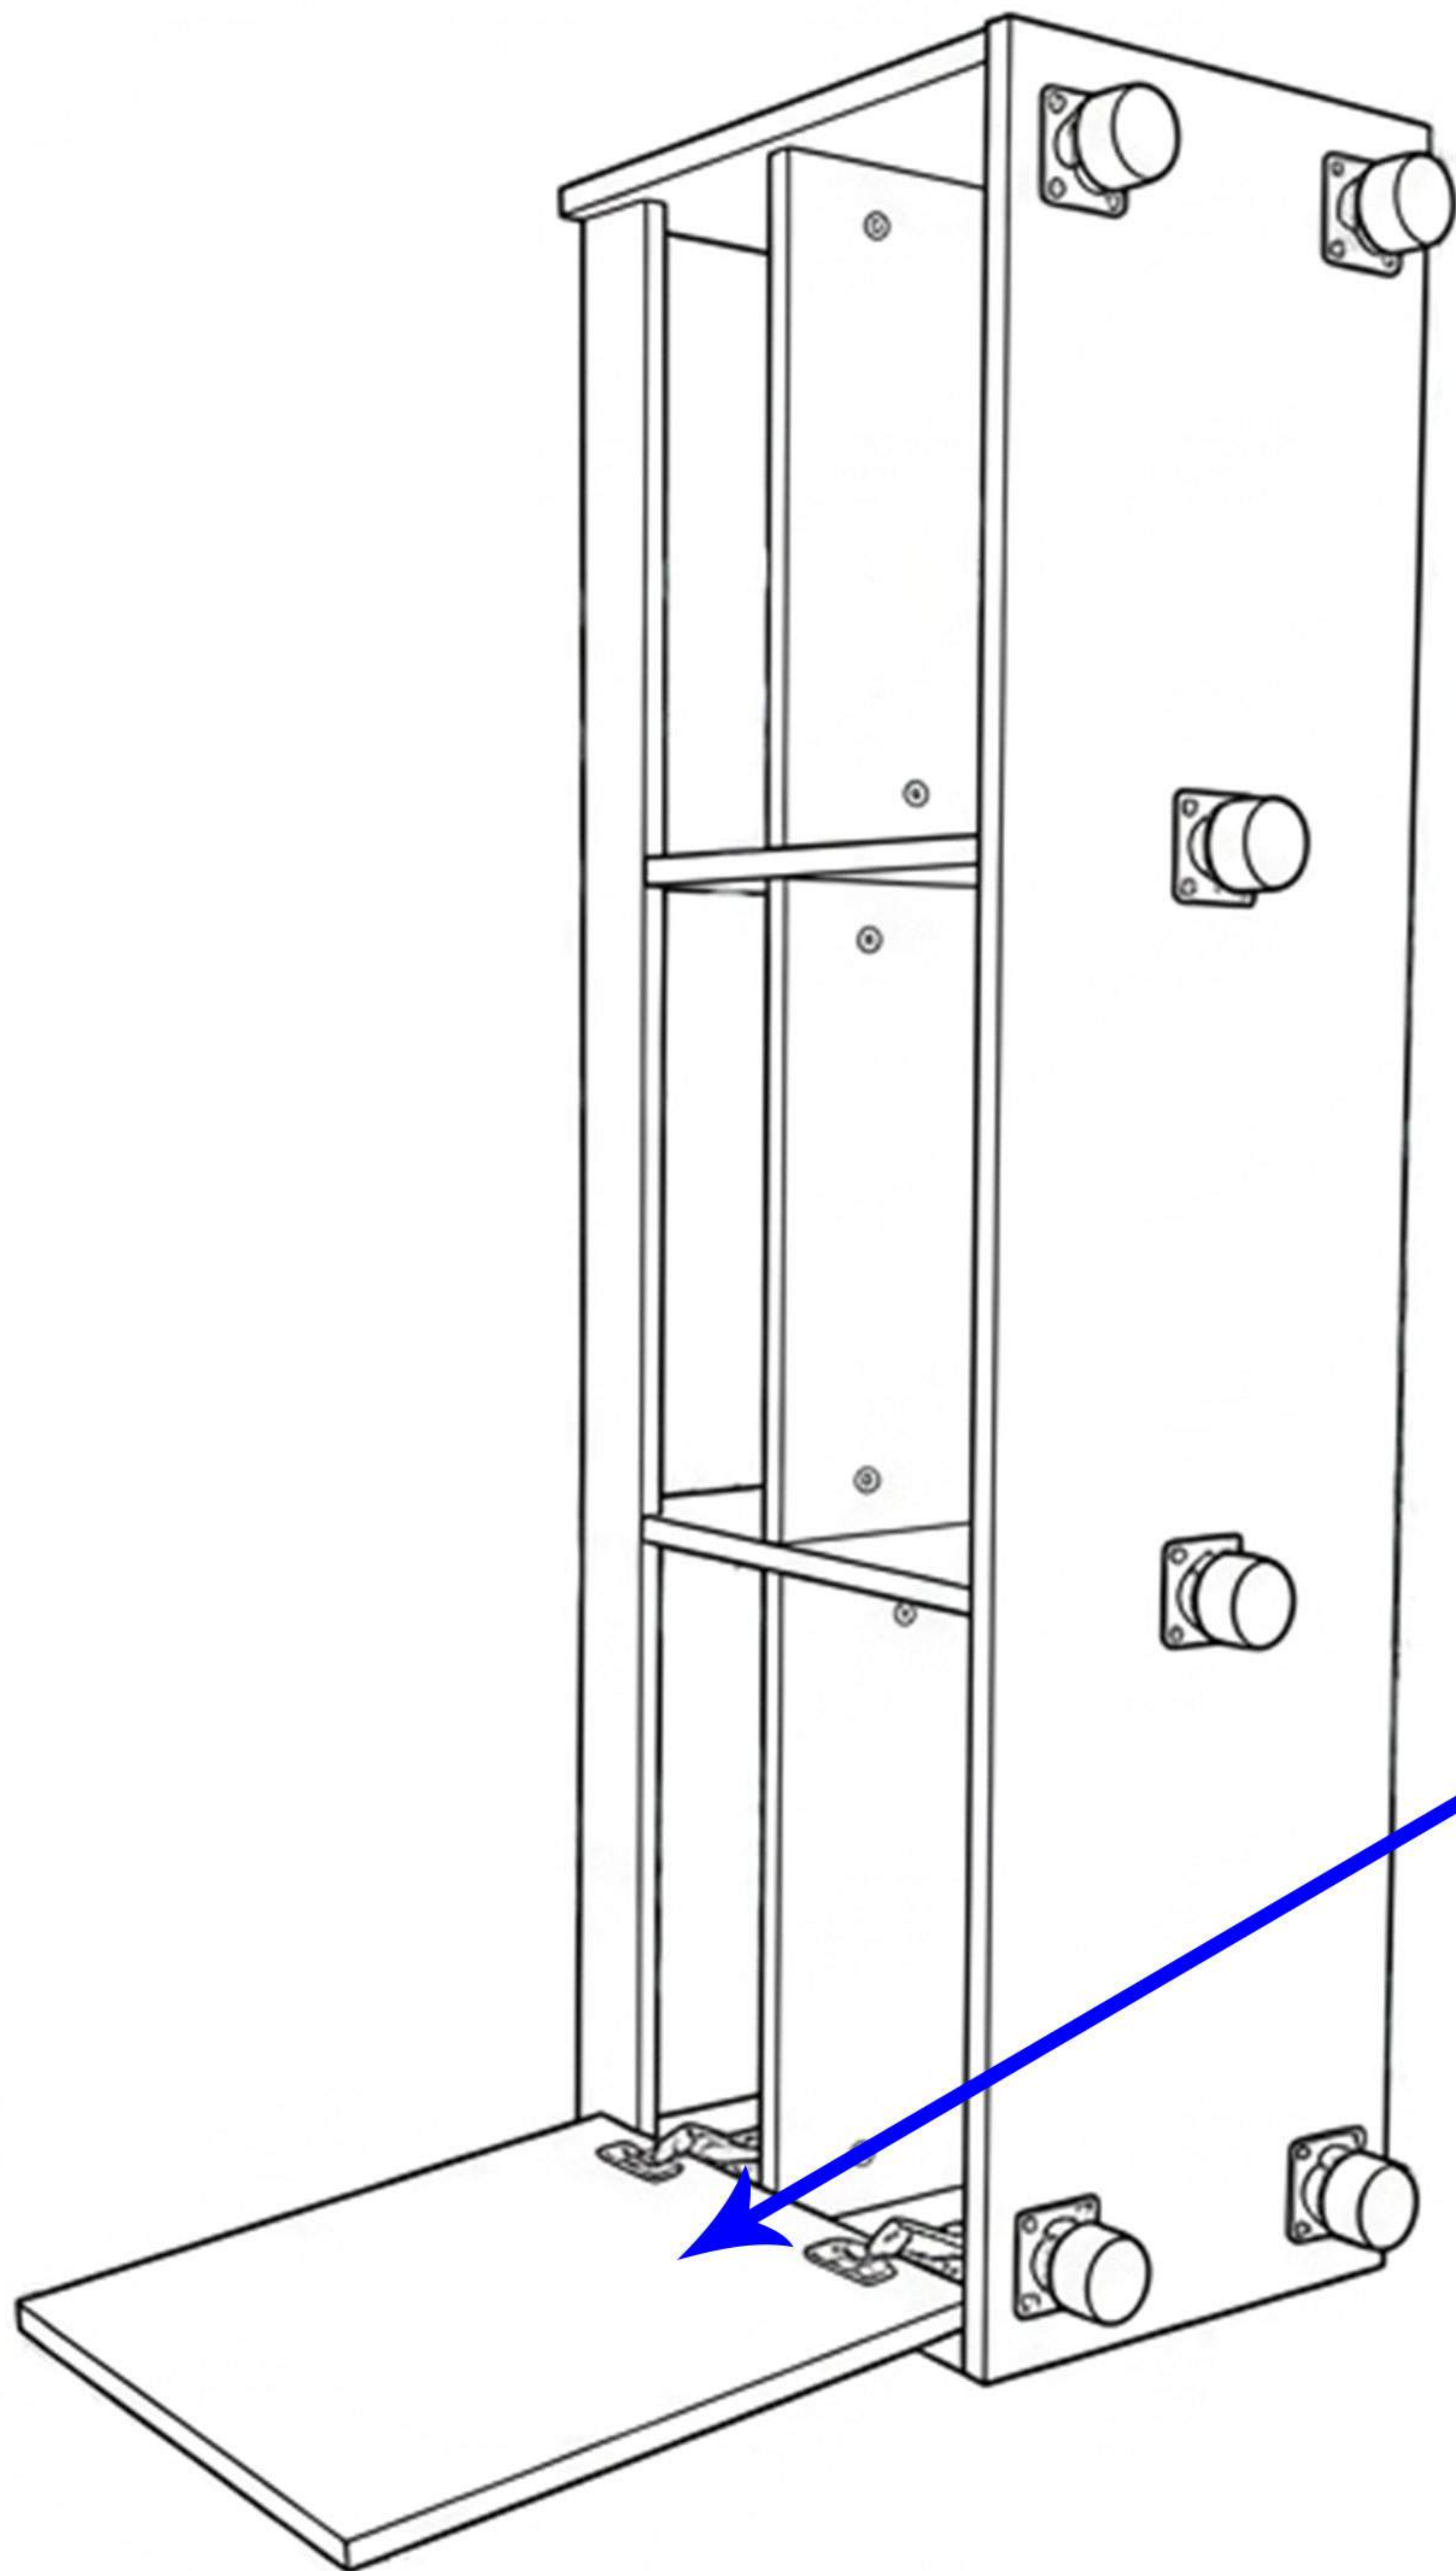


Small


Pay attention to the front pattern of the door and install it in the correct orientation.

Install the left small door with hinge G using C.


Step 15:

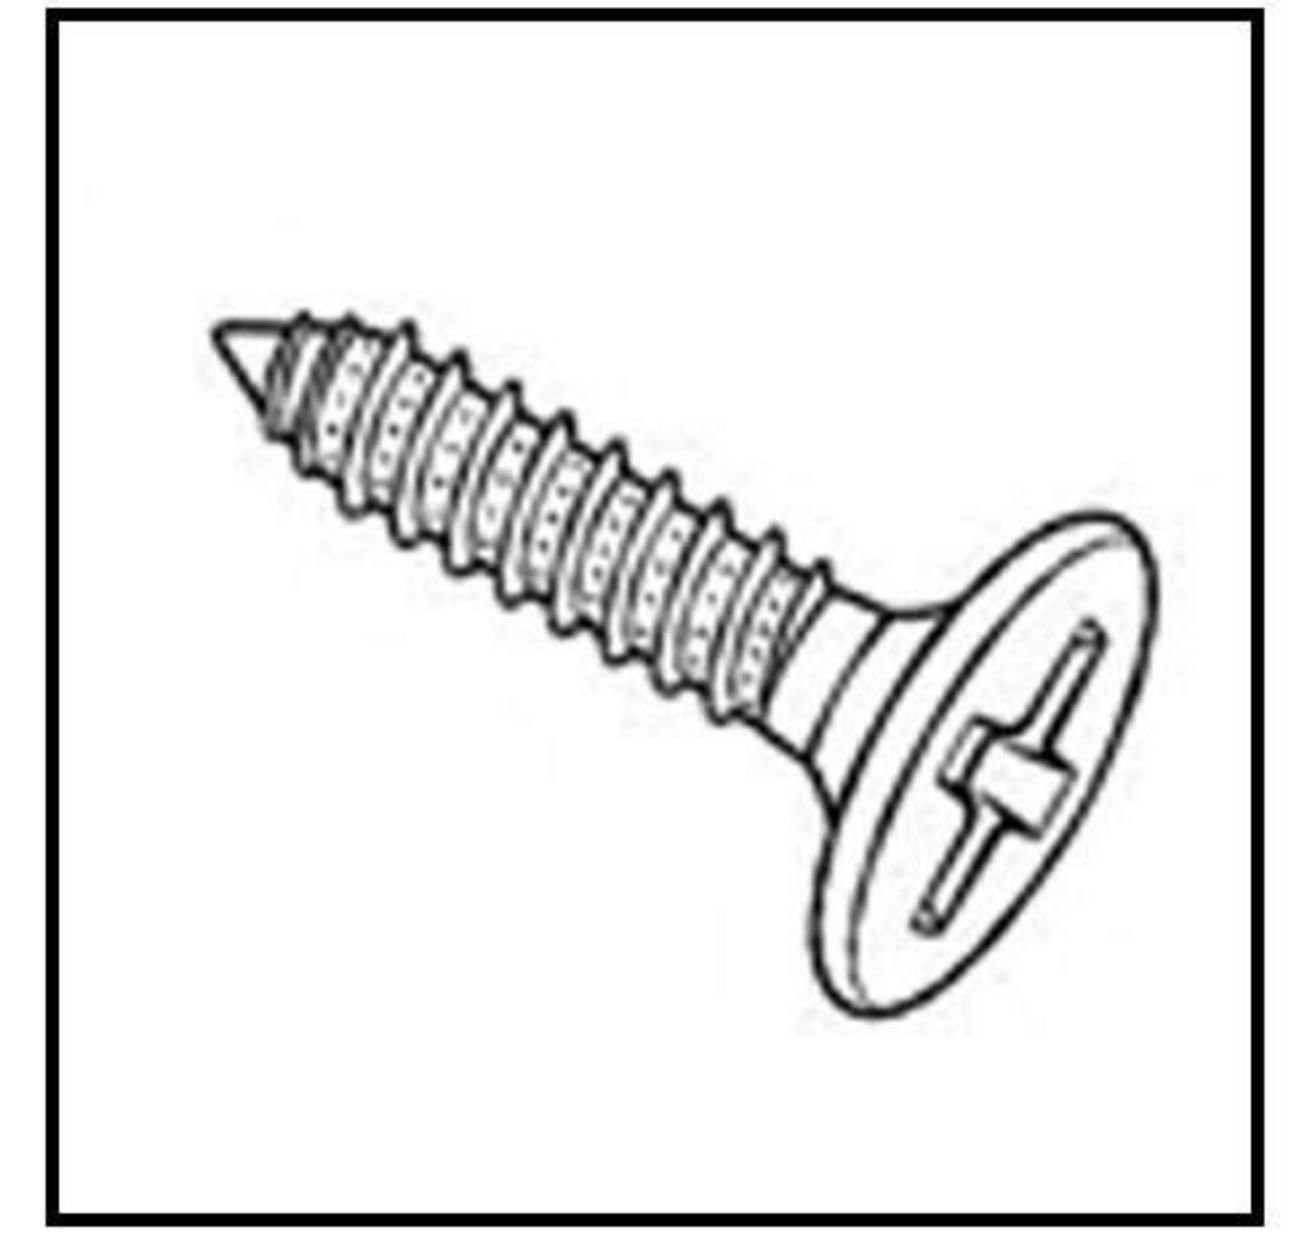

C

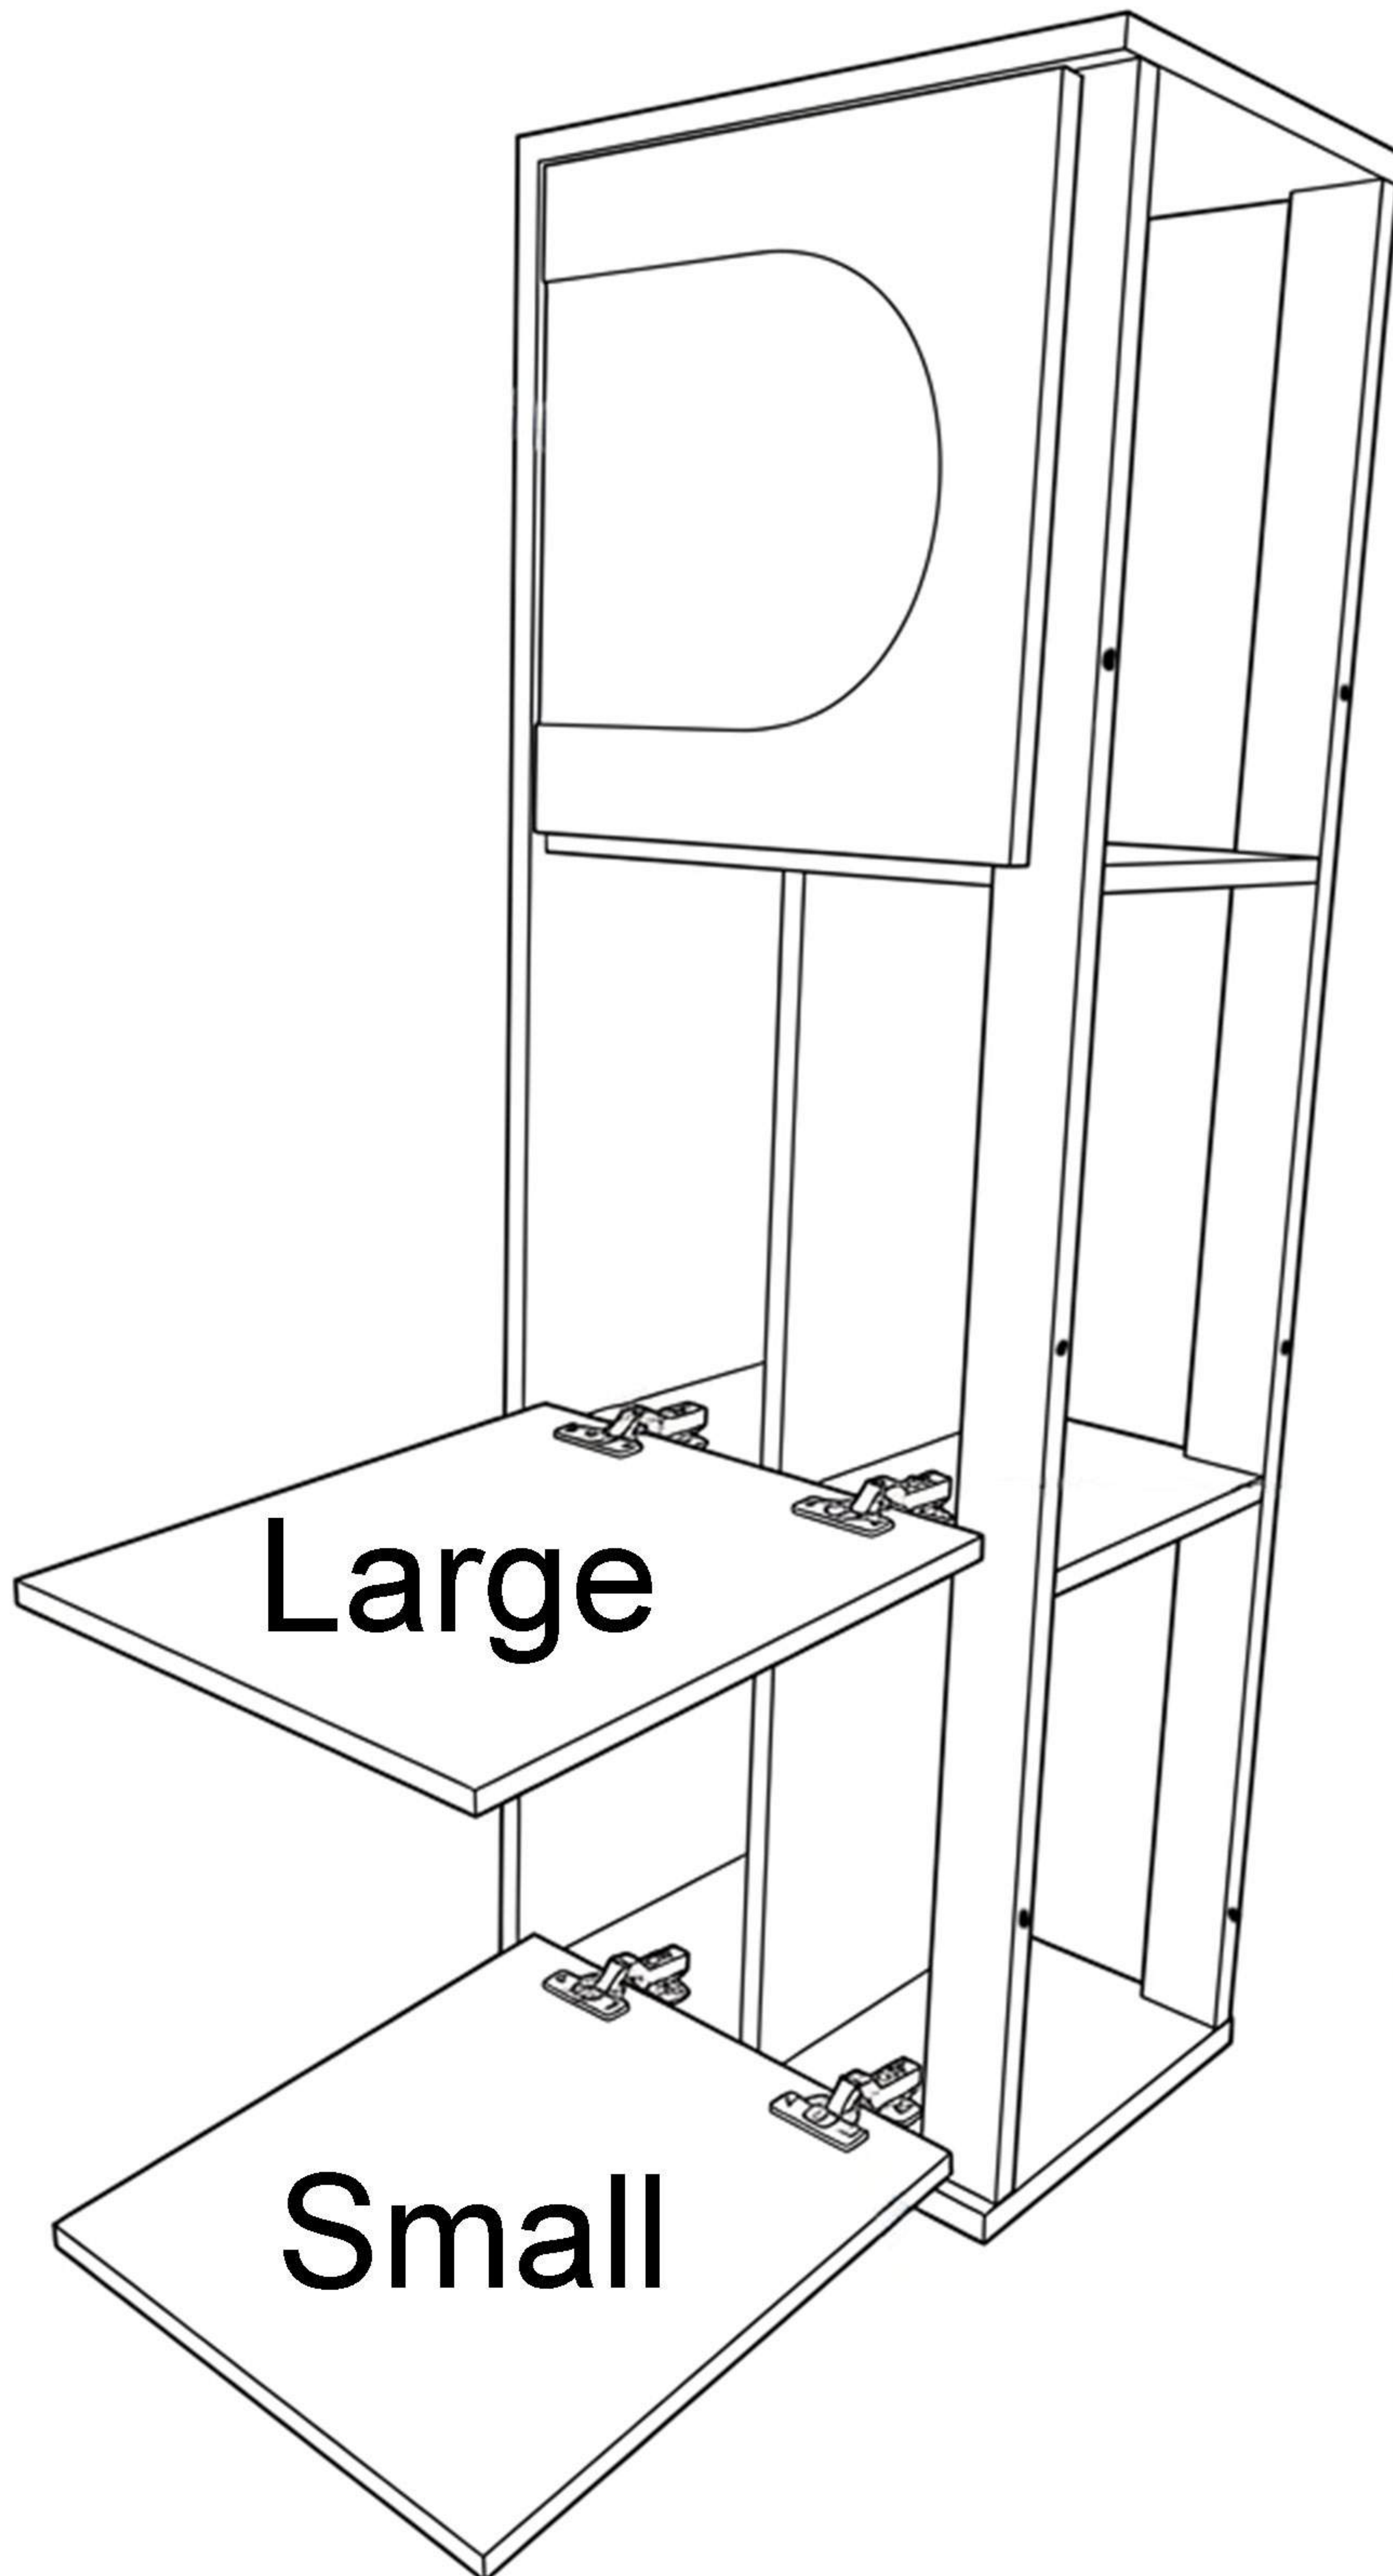


Pay attention to the front pattern of the door and install it in the correct orientation.

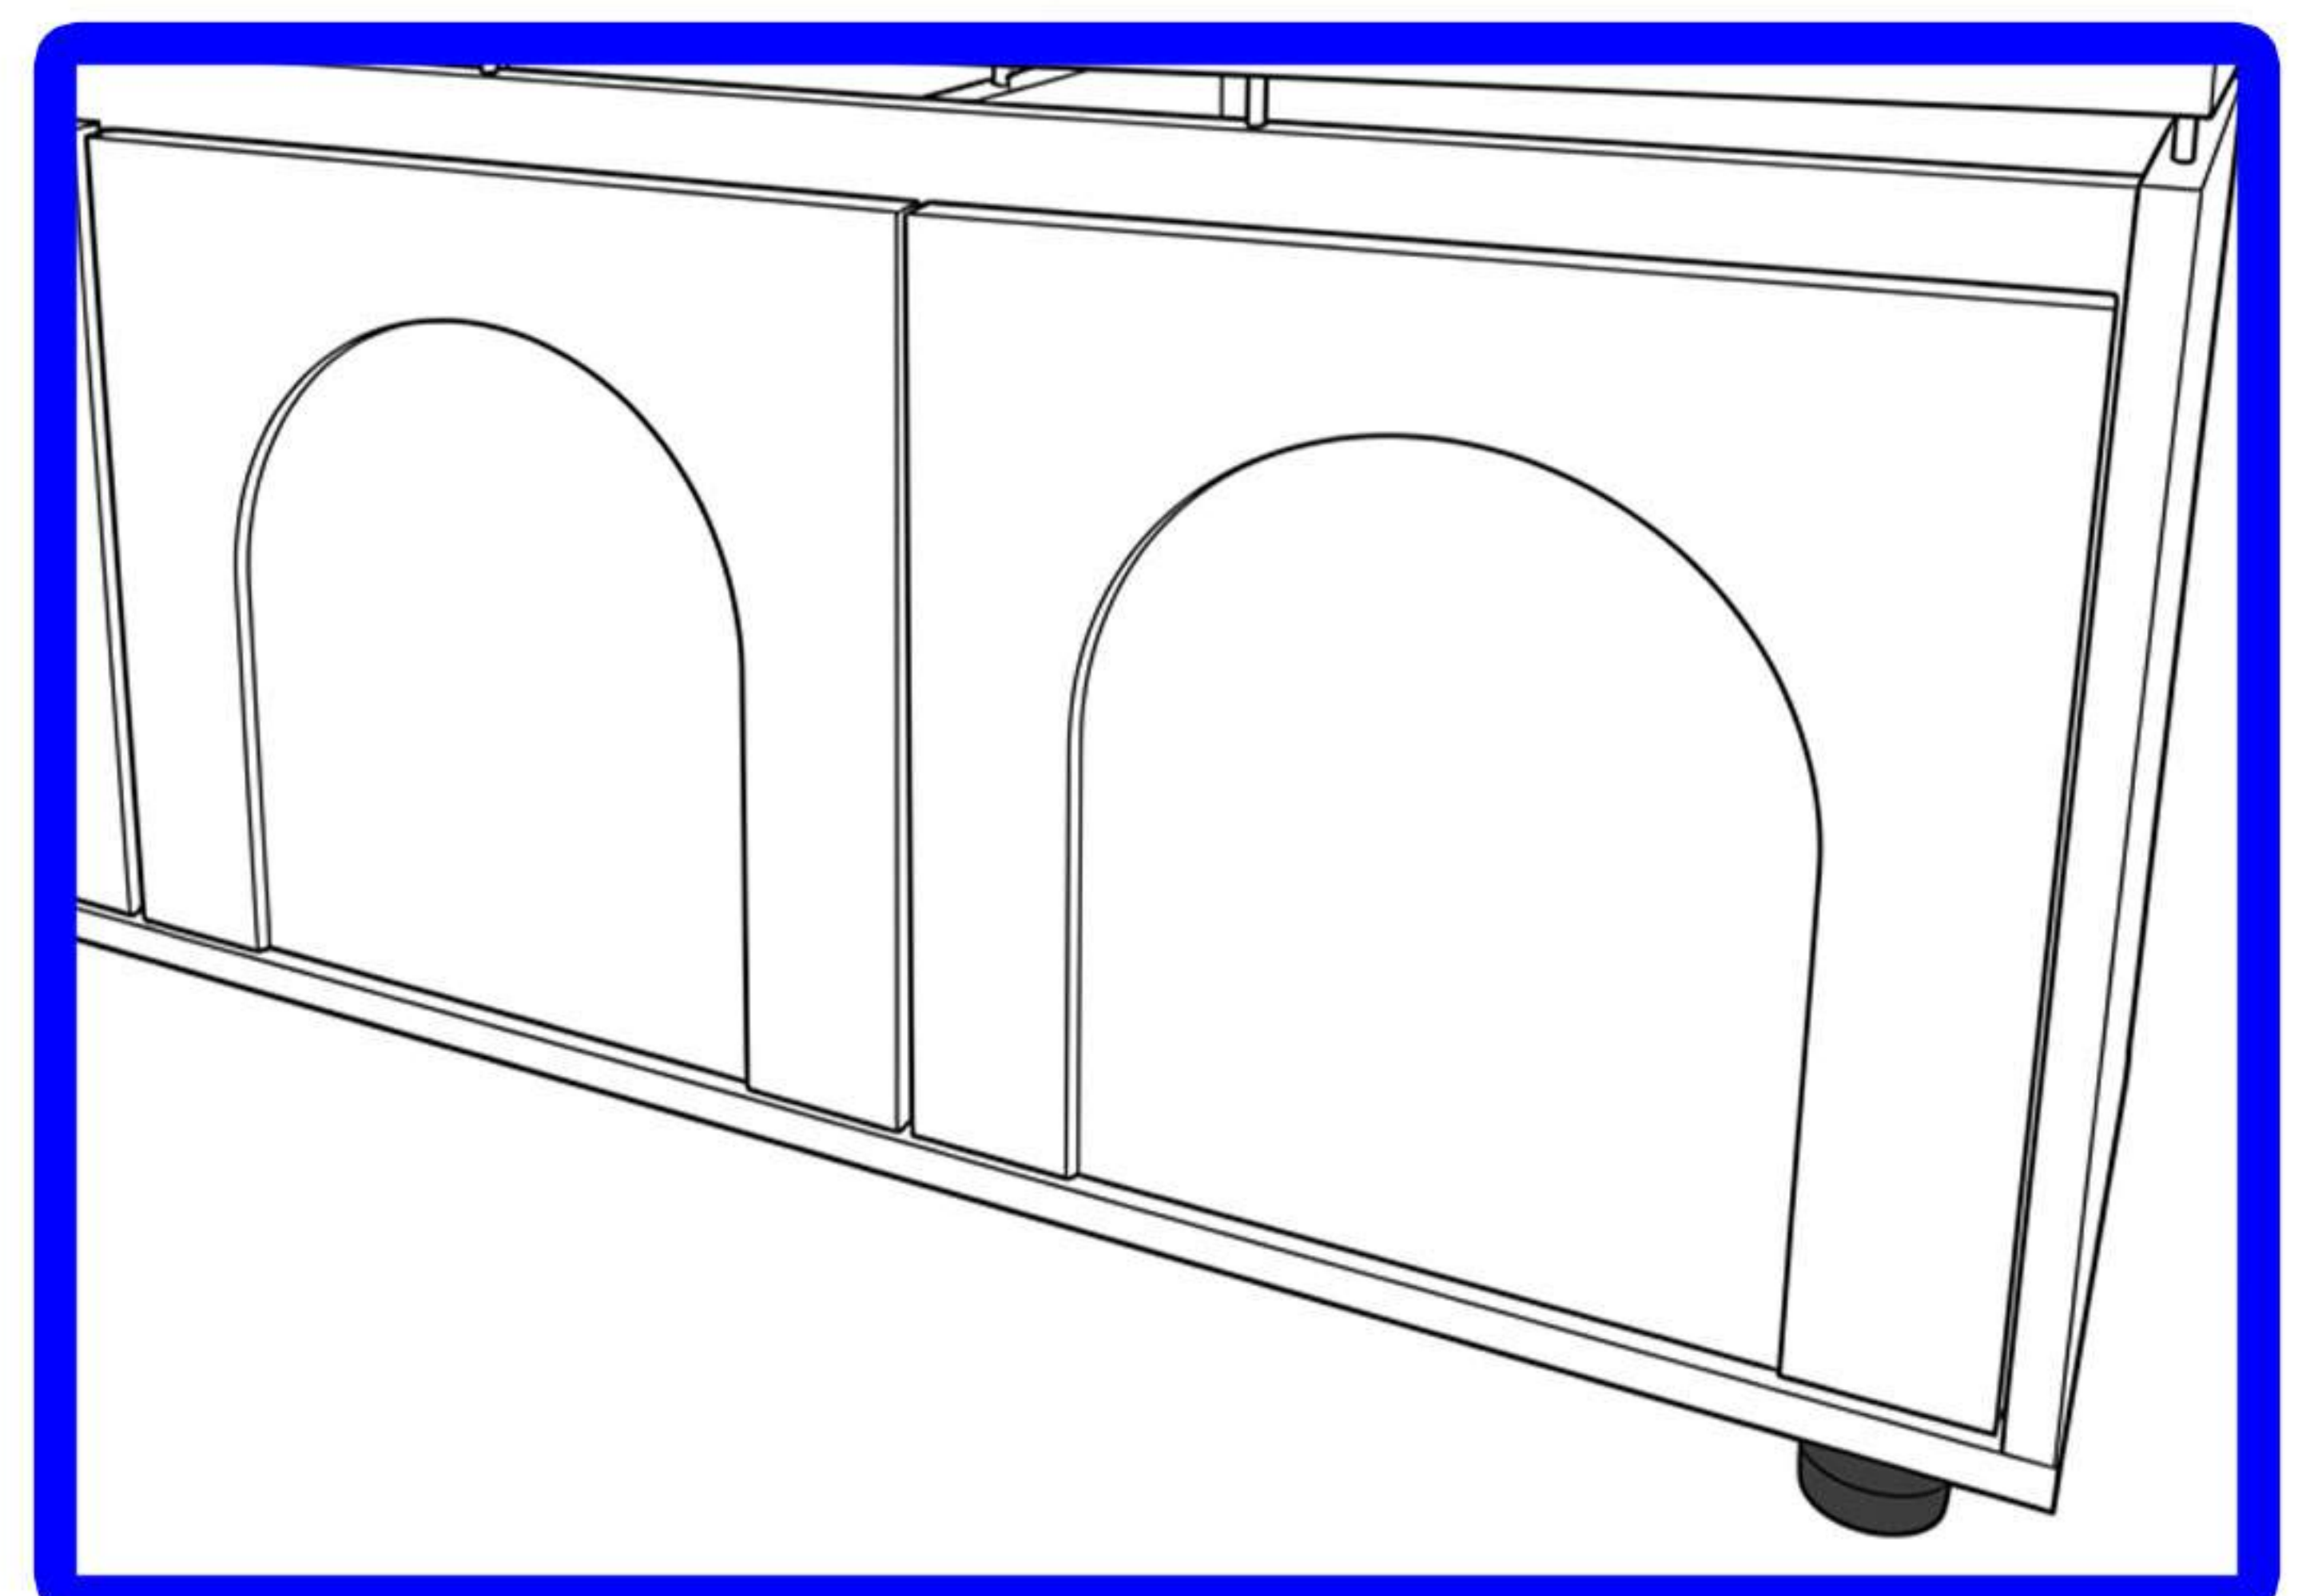

Large


Small

Step 16:

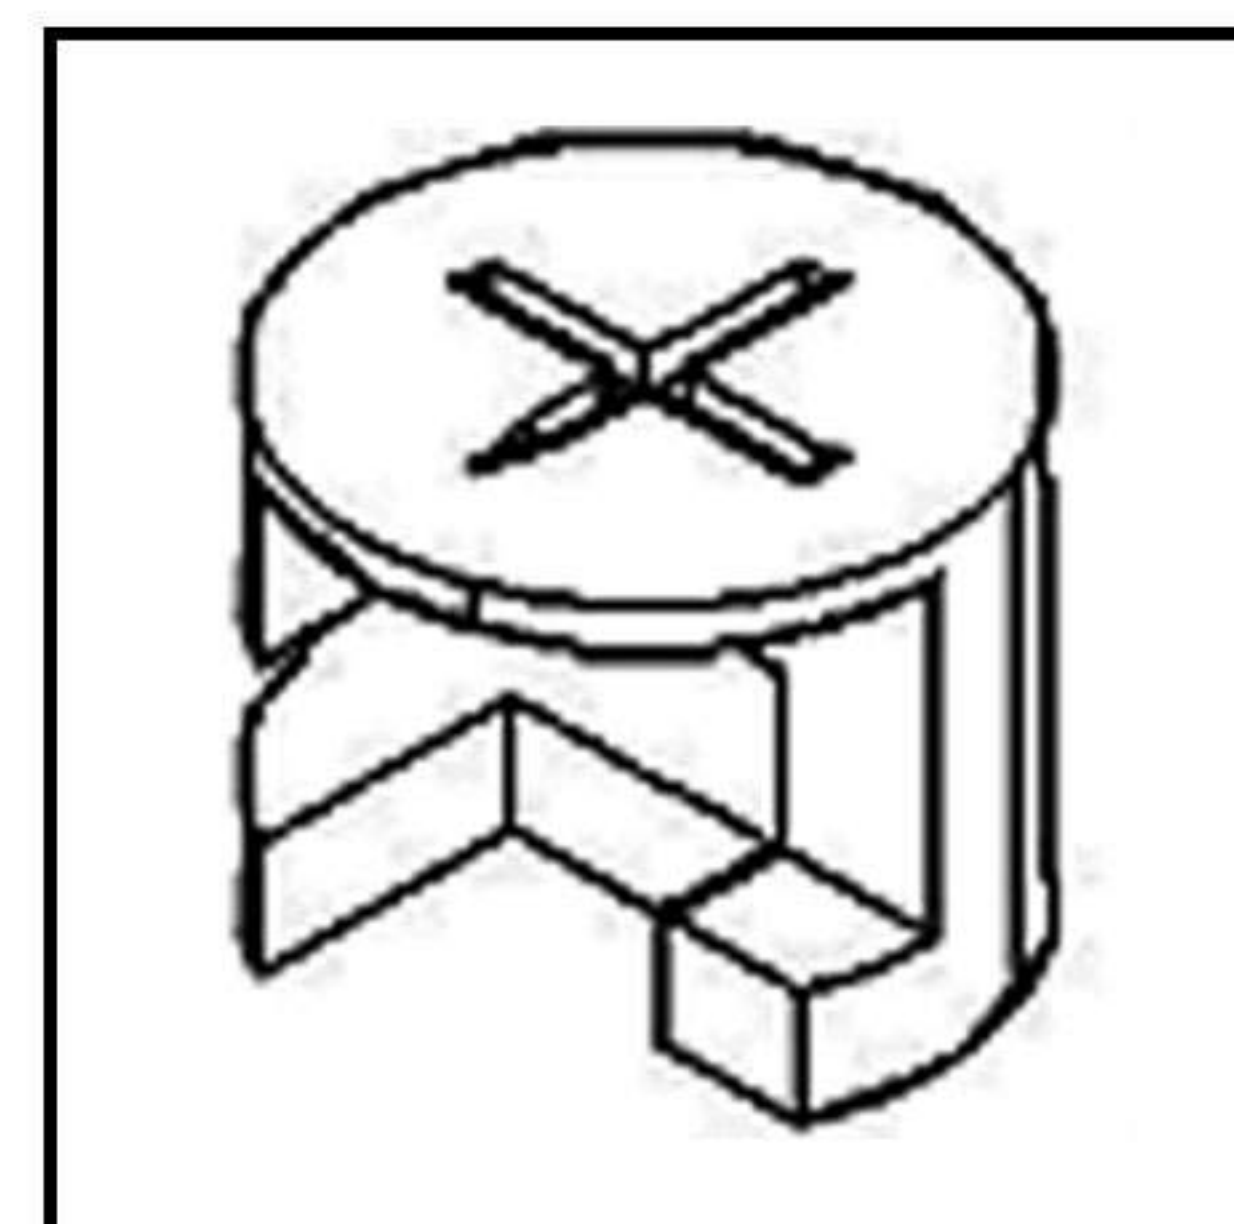

A


Step 2

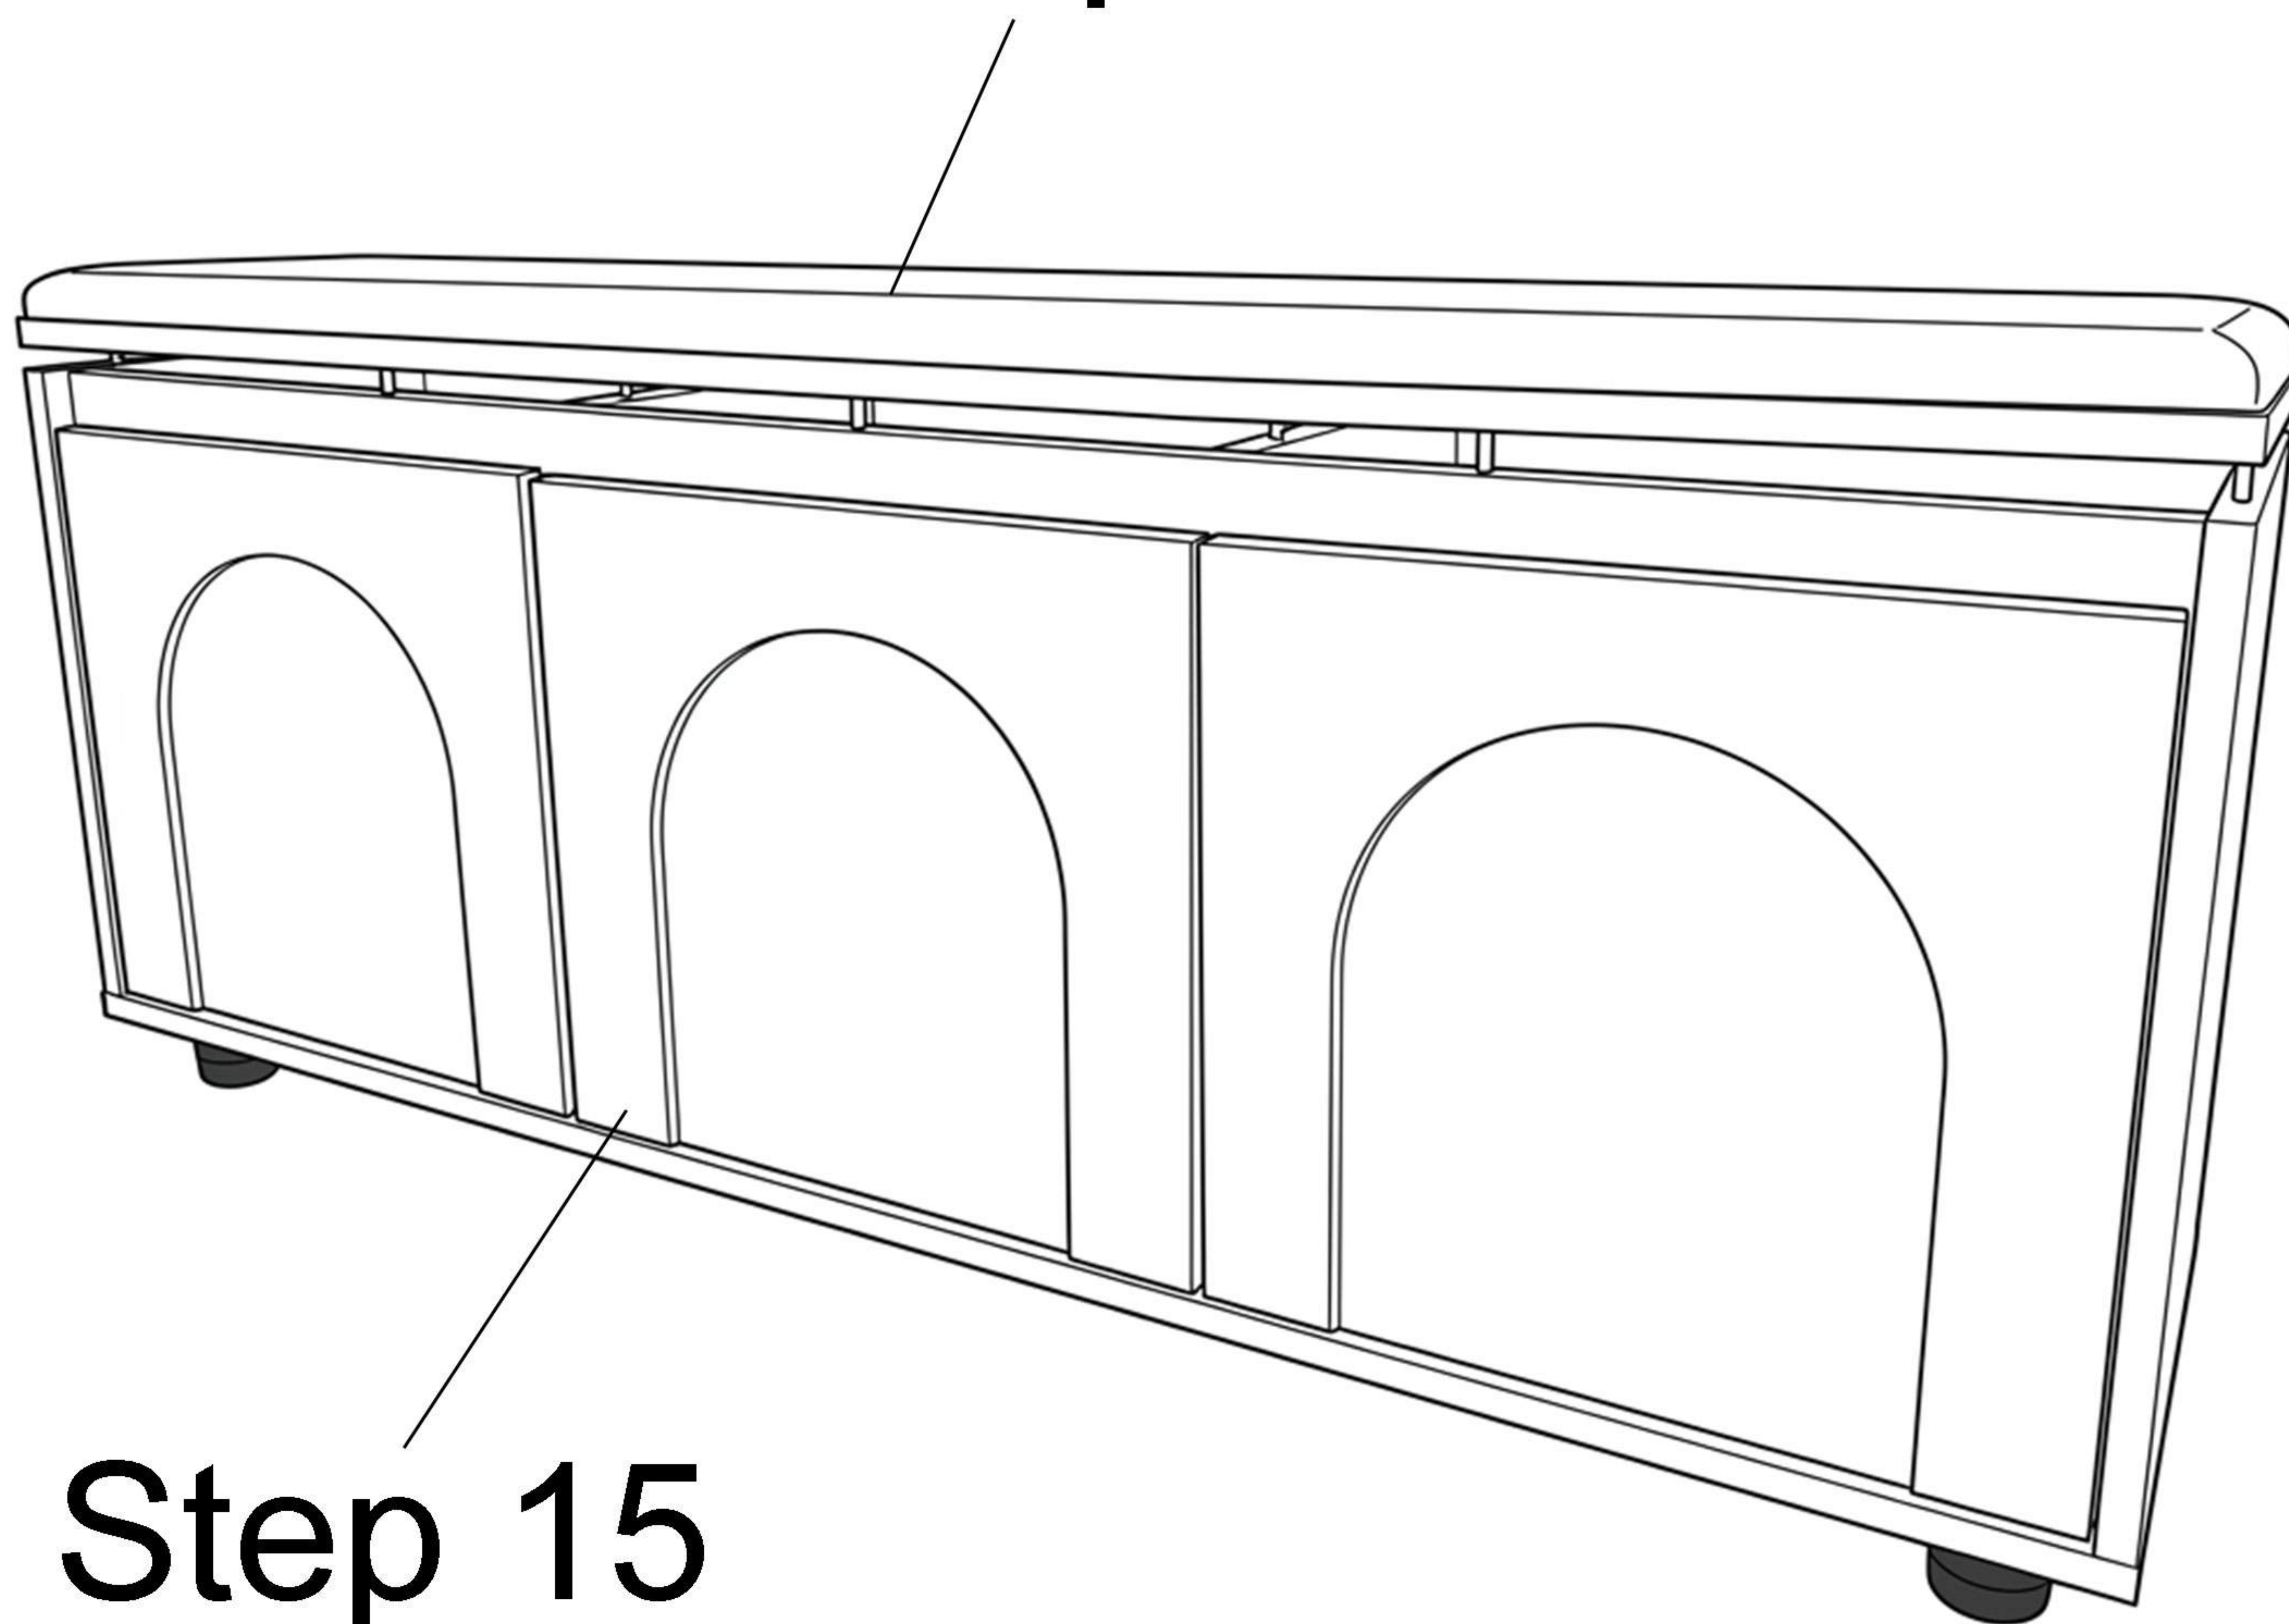


Step 15

Secure all large round holes with A.

Step 17:

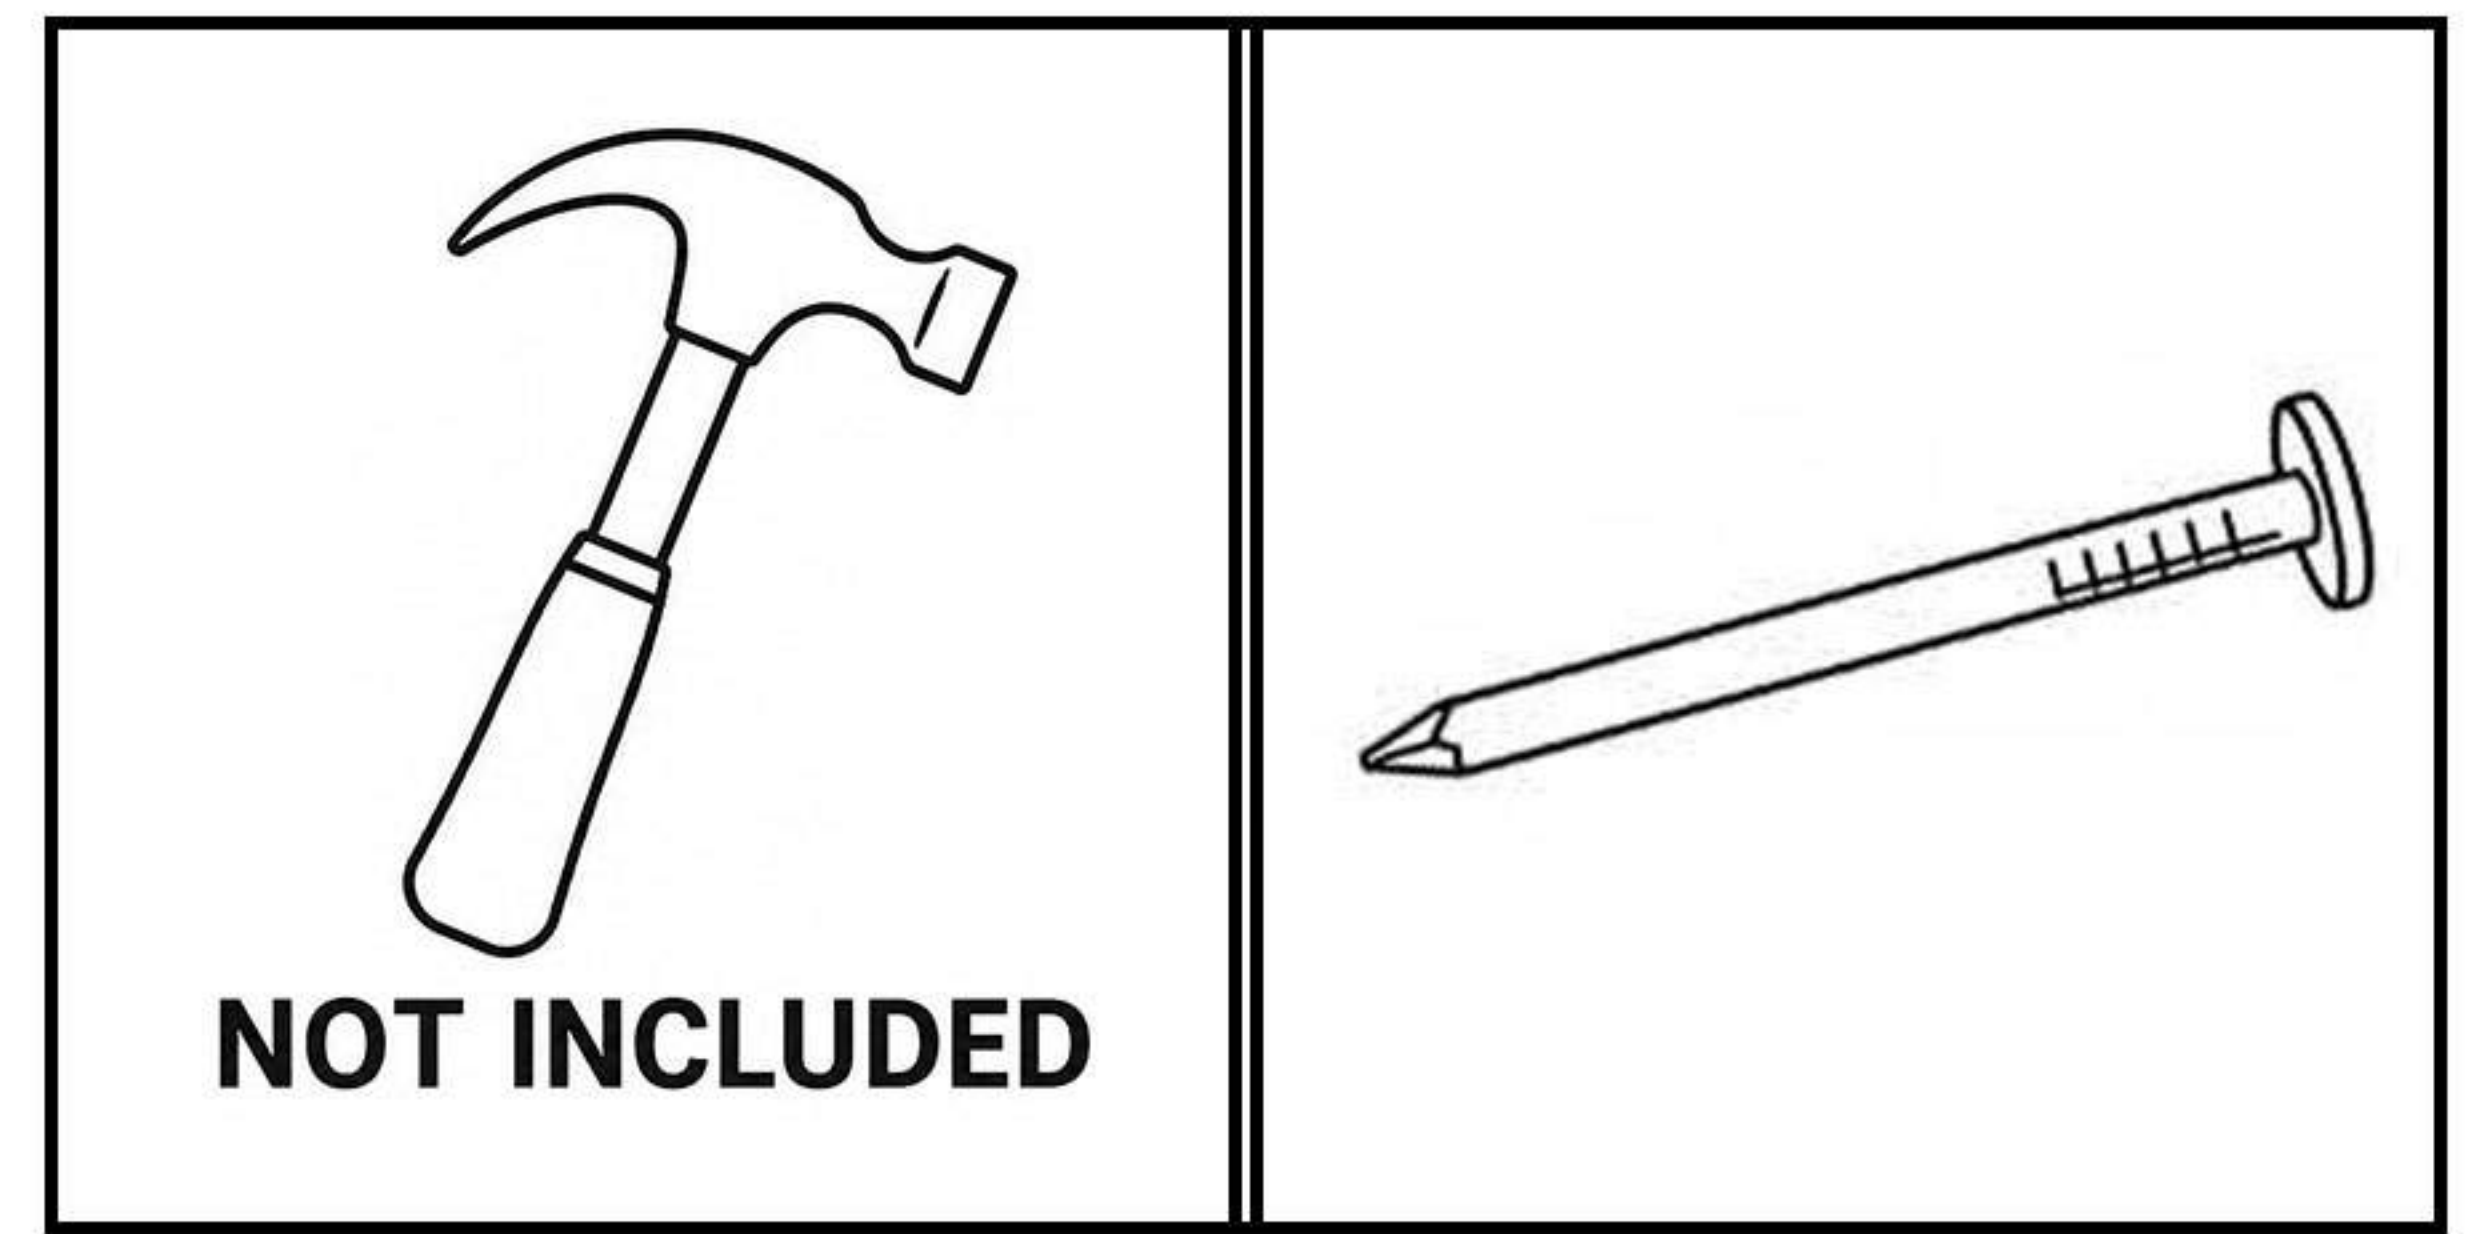


E

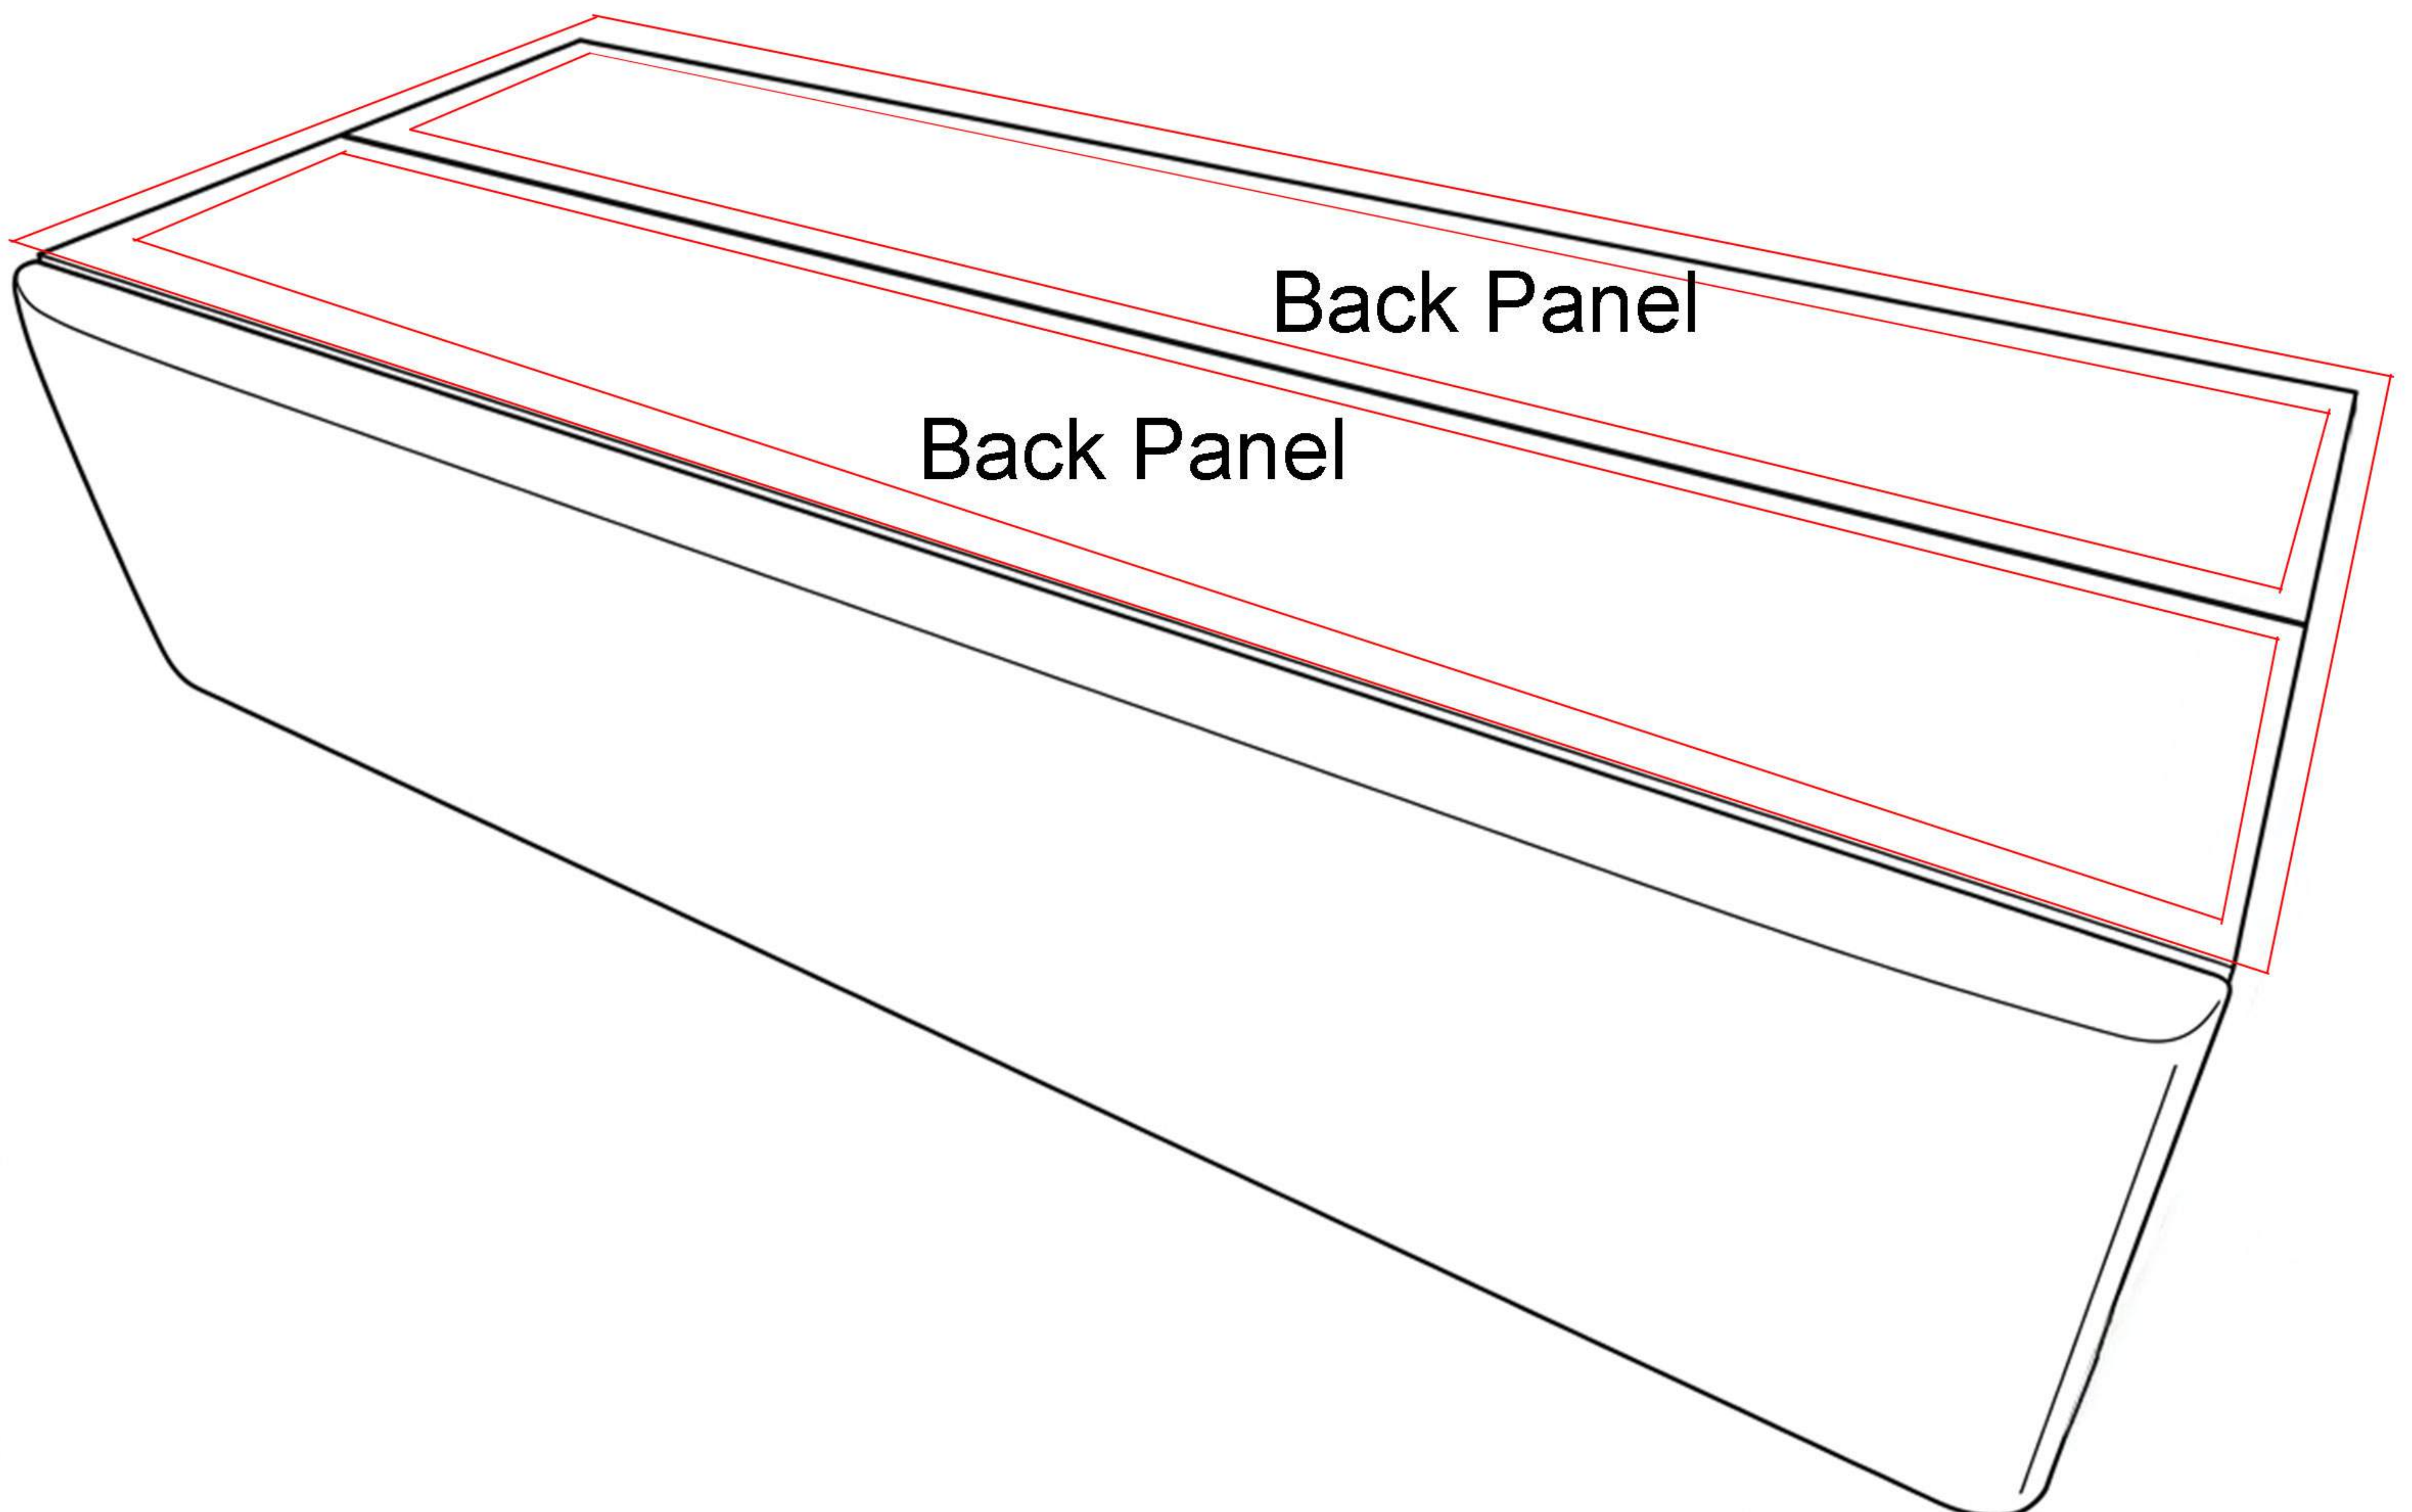

Secure the back panel with F nails. A small hammer is required (not included).

Step 18:

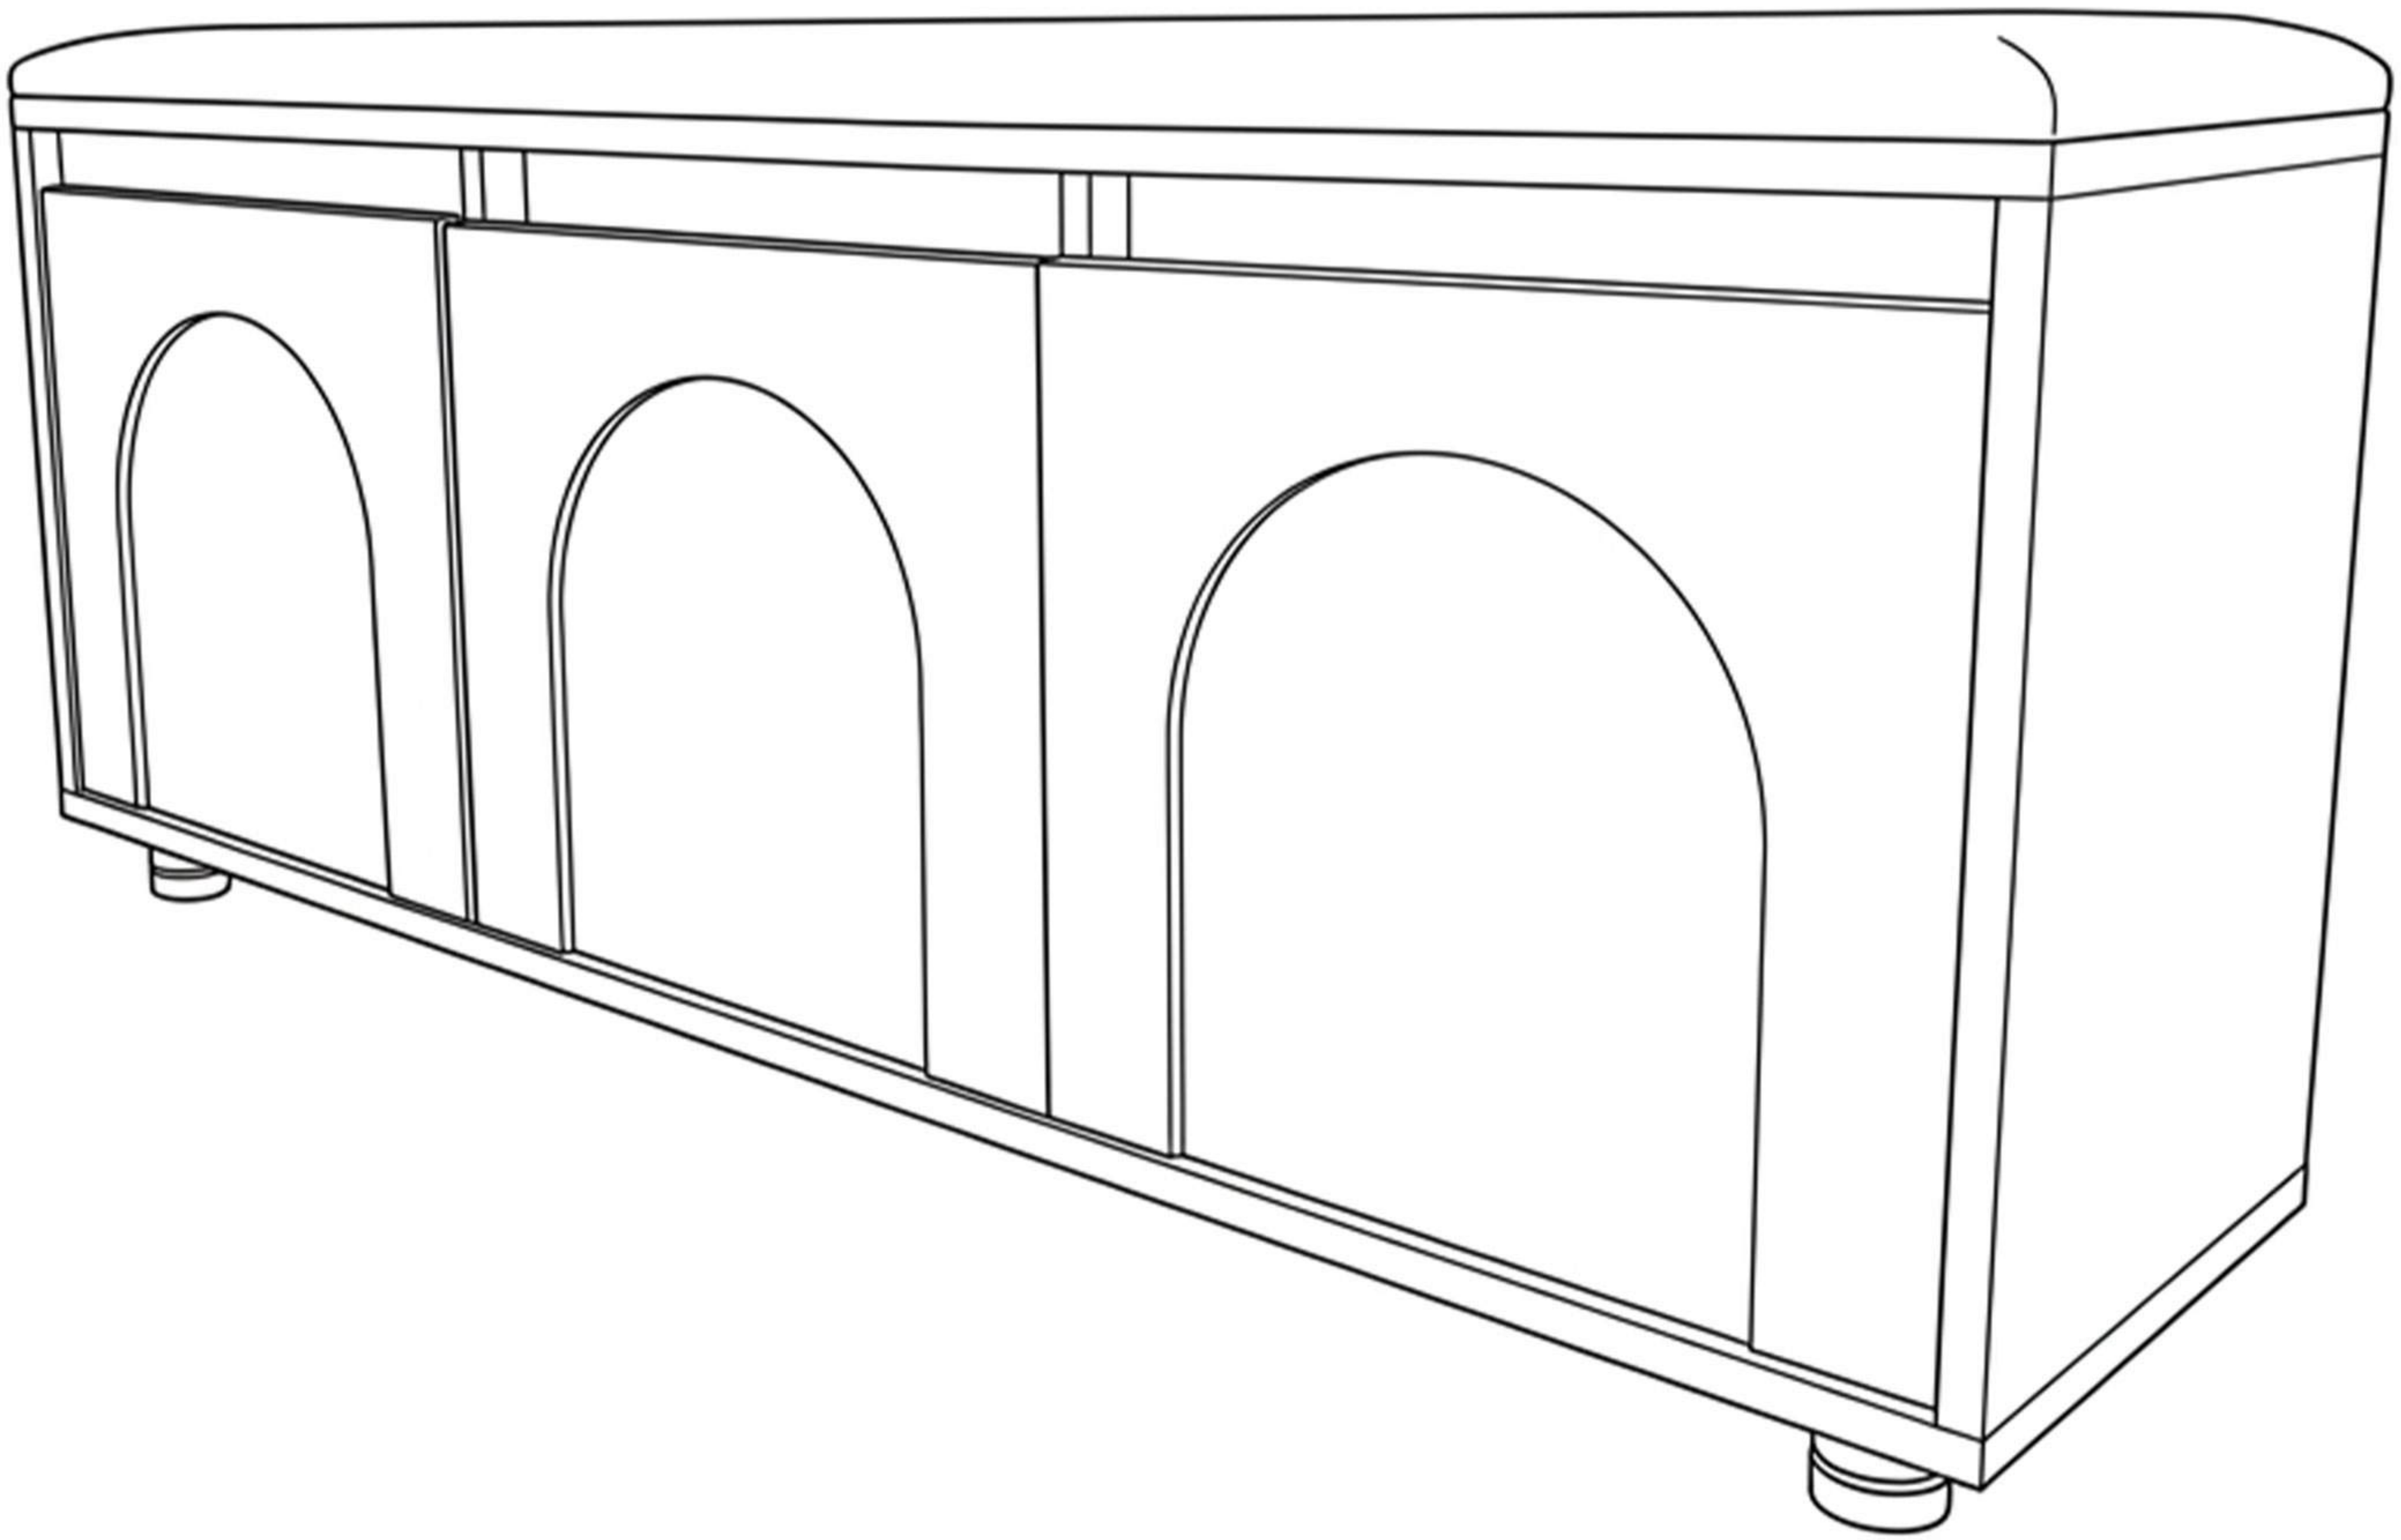

Installation finished