


BS042-5T

Installation Instruction

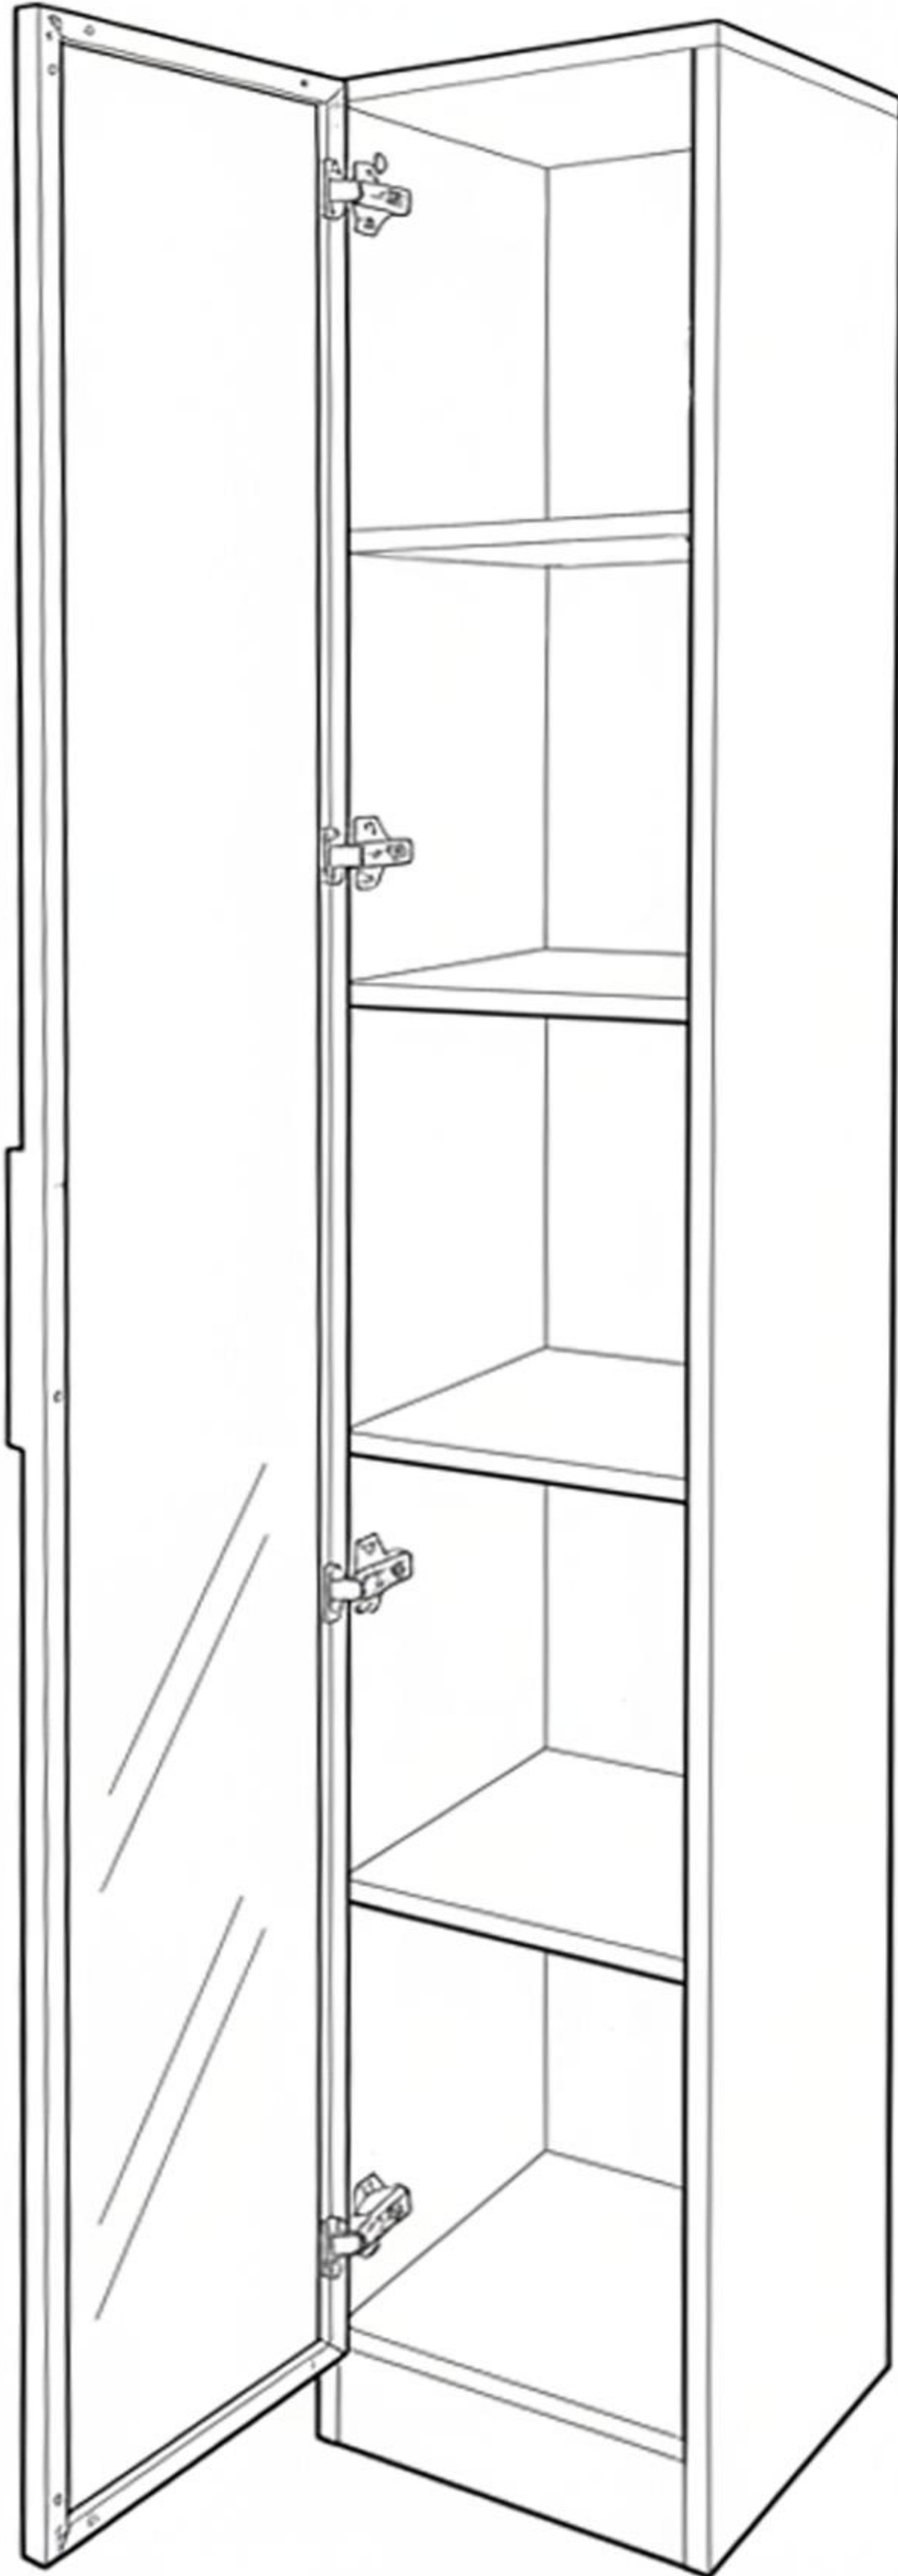

Please read this instruction manual carefully before installation and use.


Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:






1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

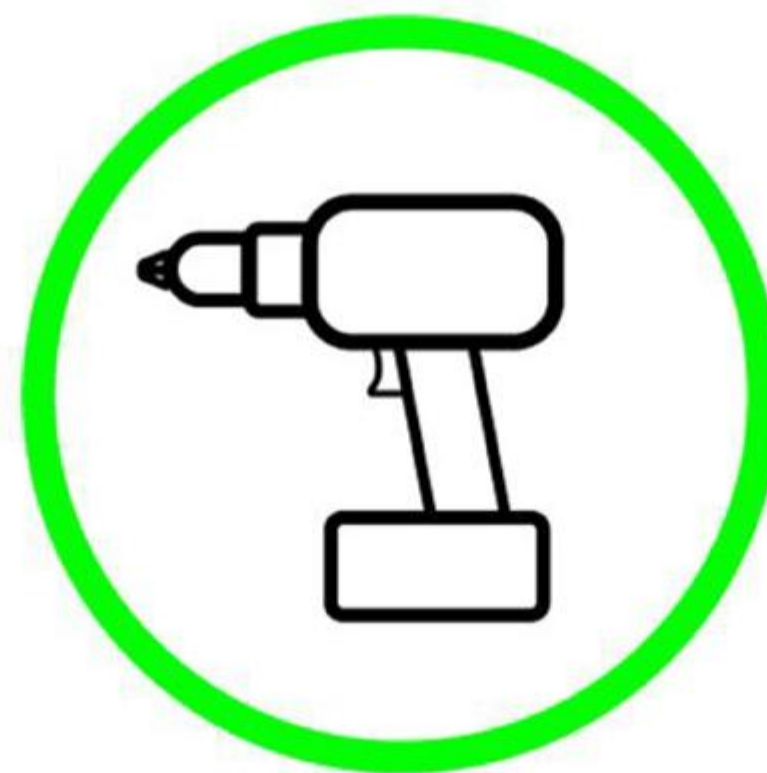


Scan the code to purchase ES001

Hardware List

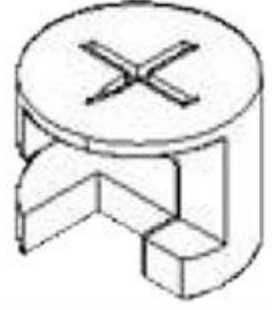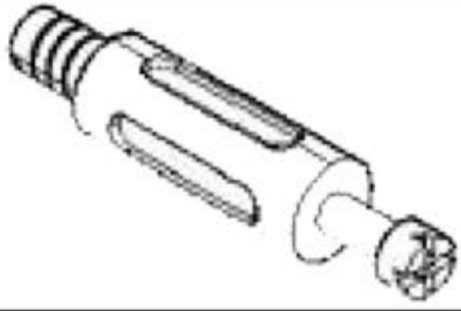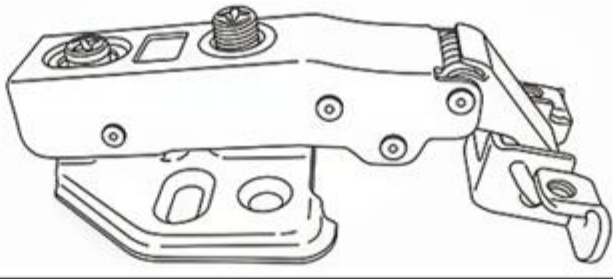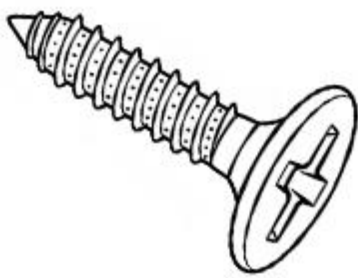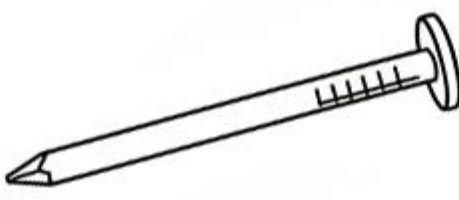Accessory Appearance	Code	Accessory Appearance	Code
	A	 Black	D
	B		E
 Black	C		F


Detailed description of the main components, please read carefully
Hinge Installation Instructions

1.

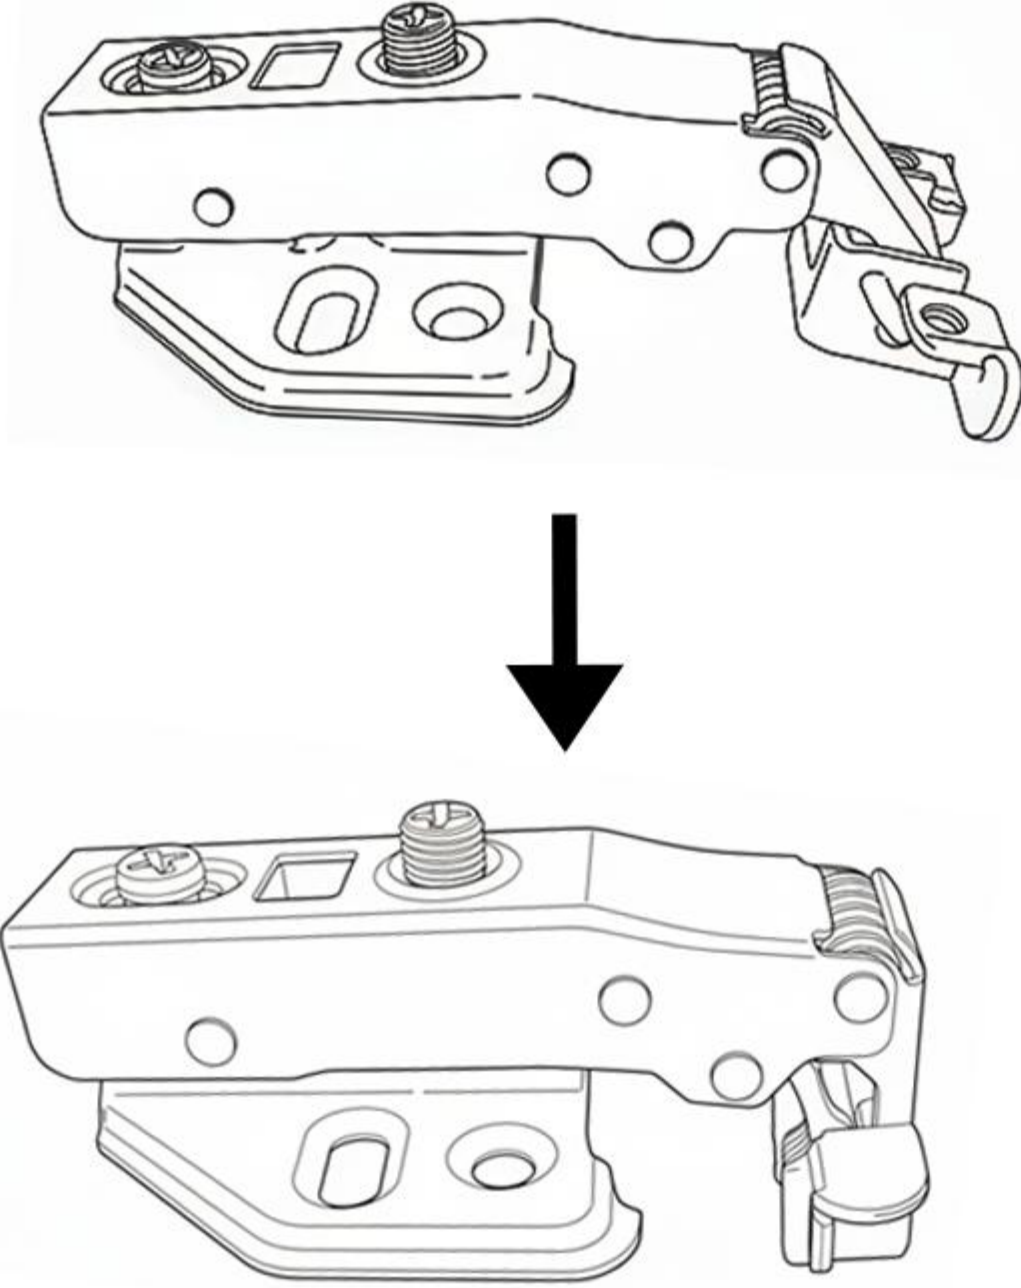


Fold the hinges as shown in the diagram.

2.

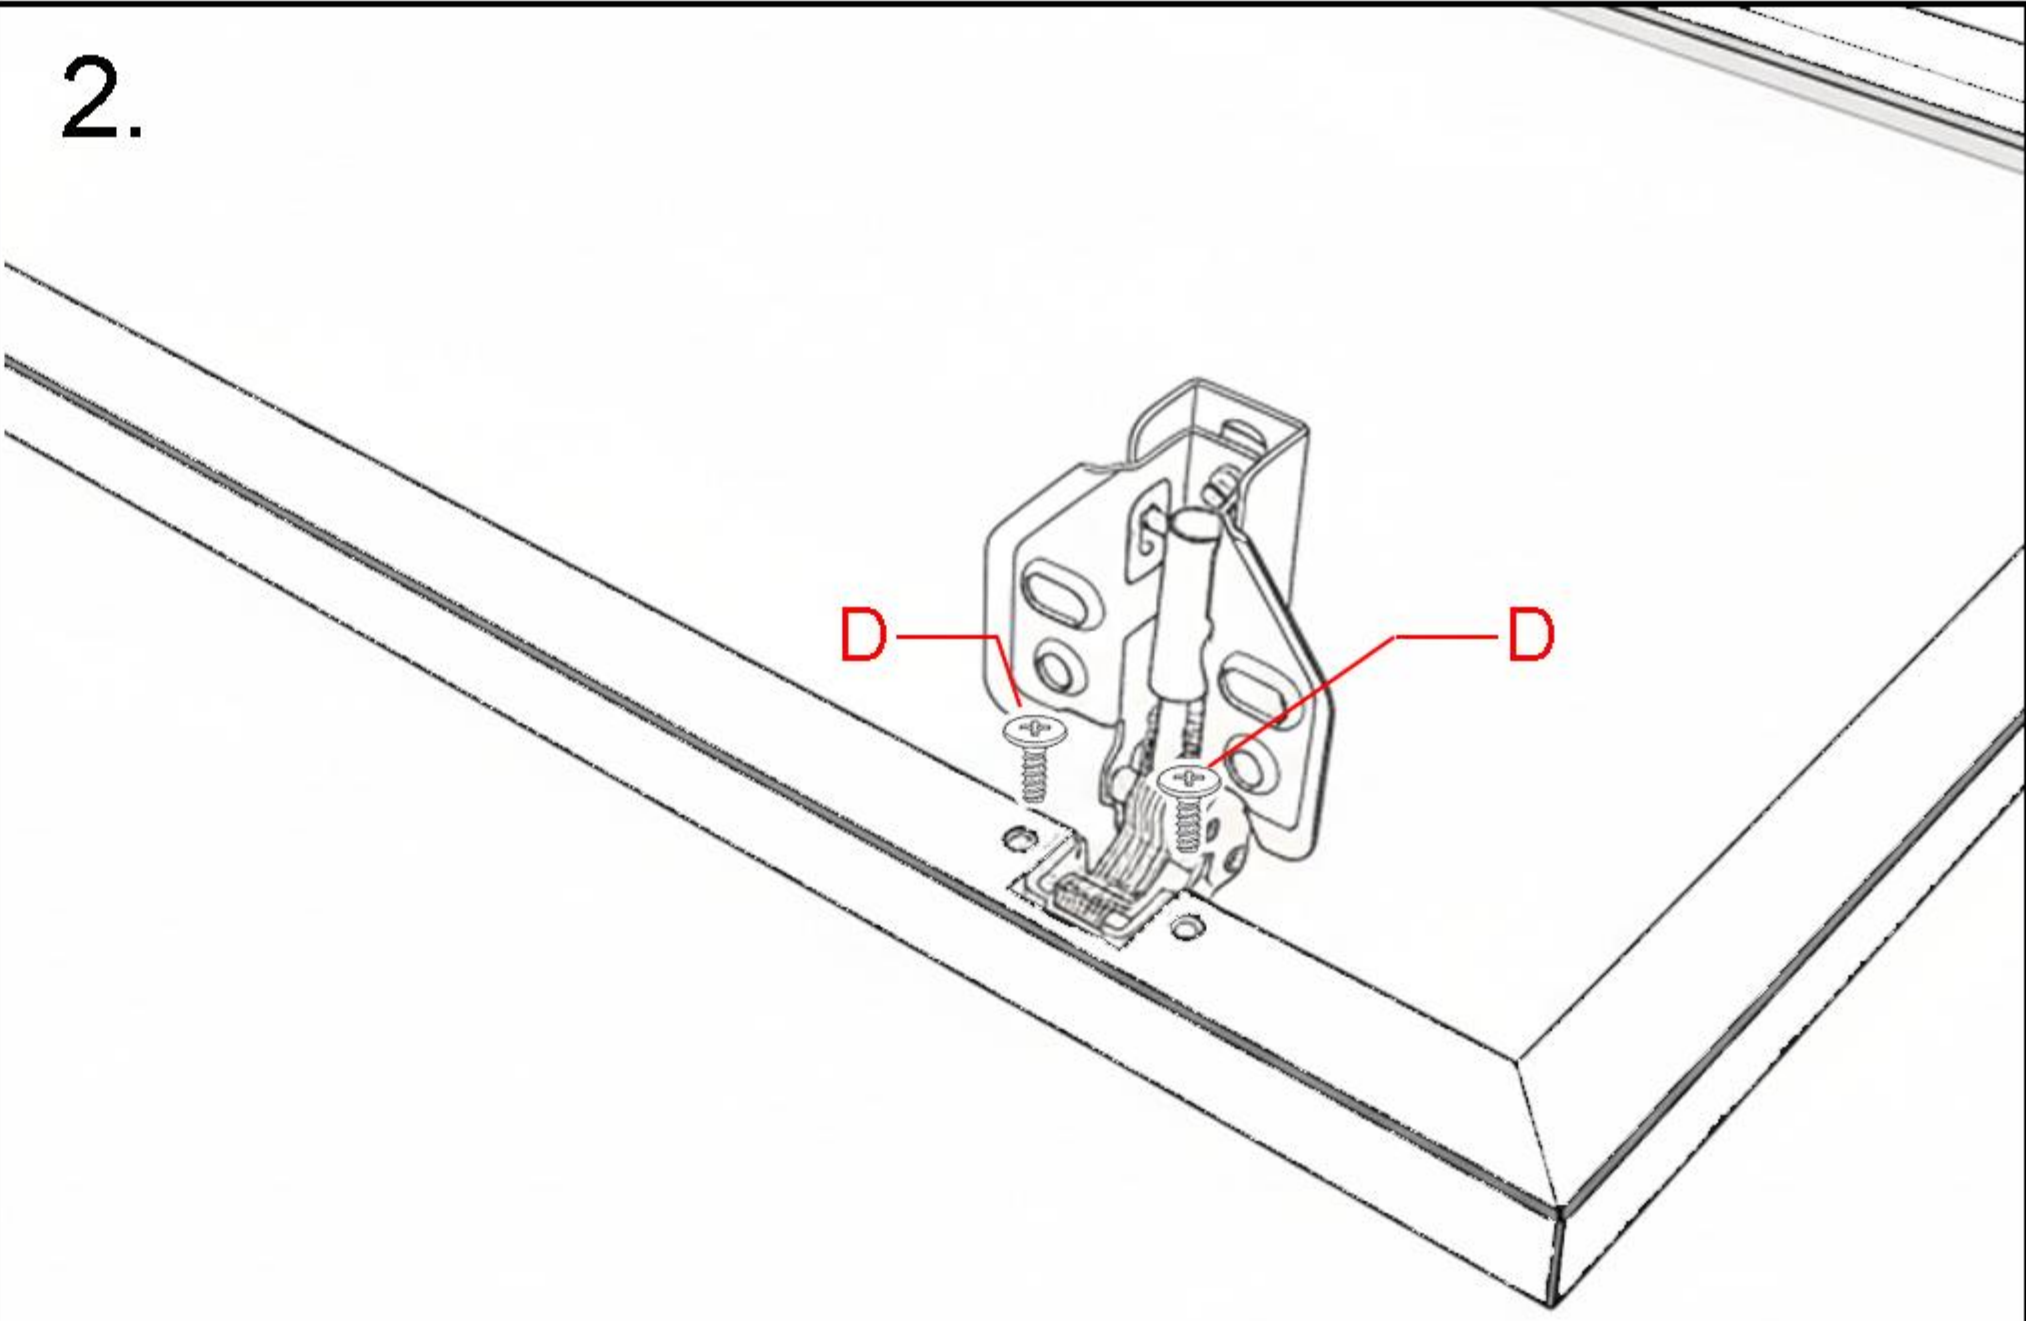


Install the hinge onto the door and ensure it is secure.

3.

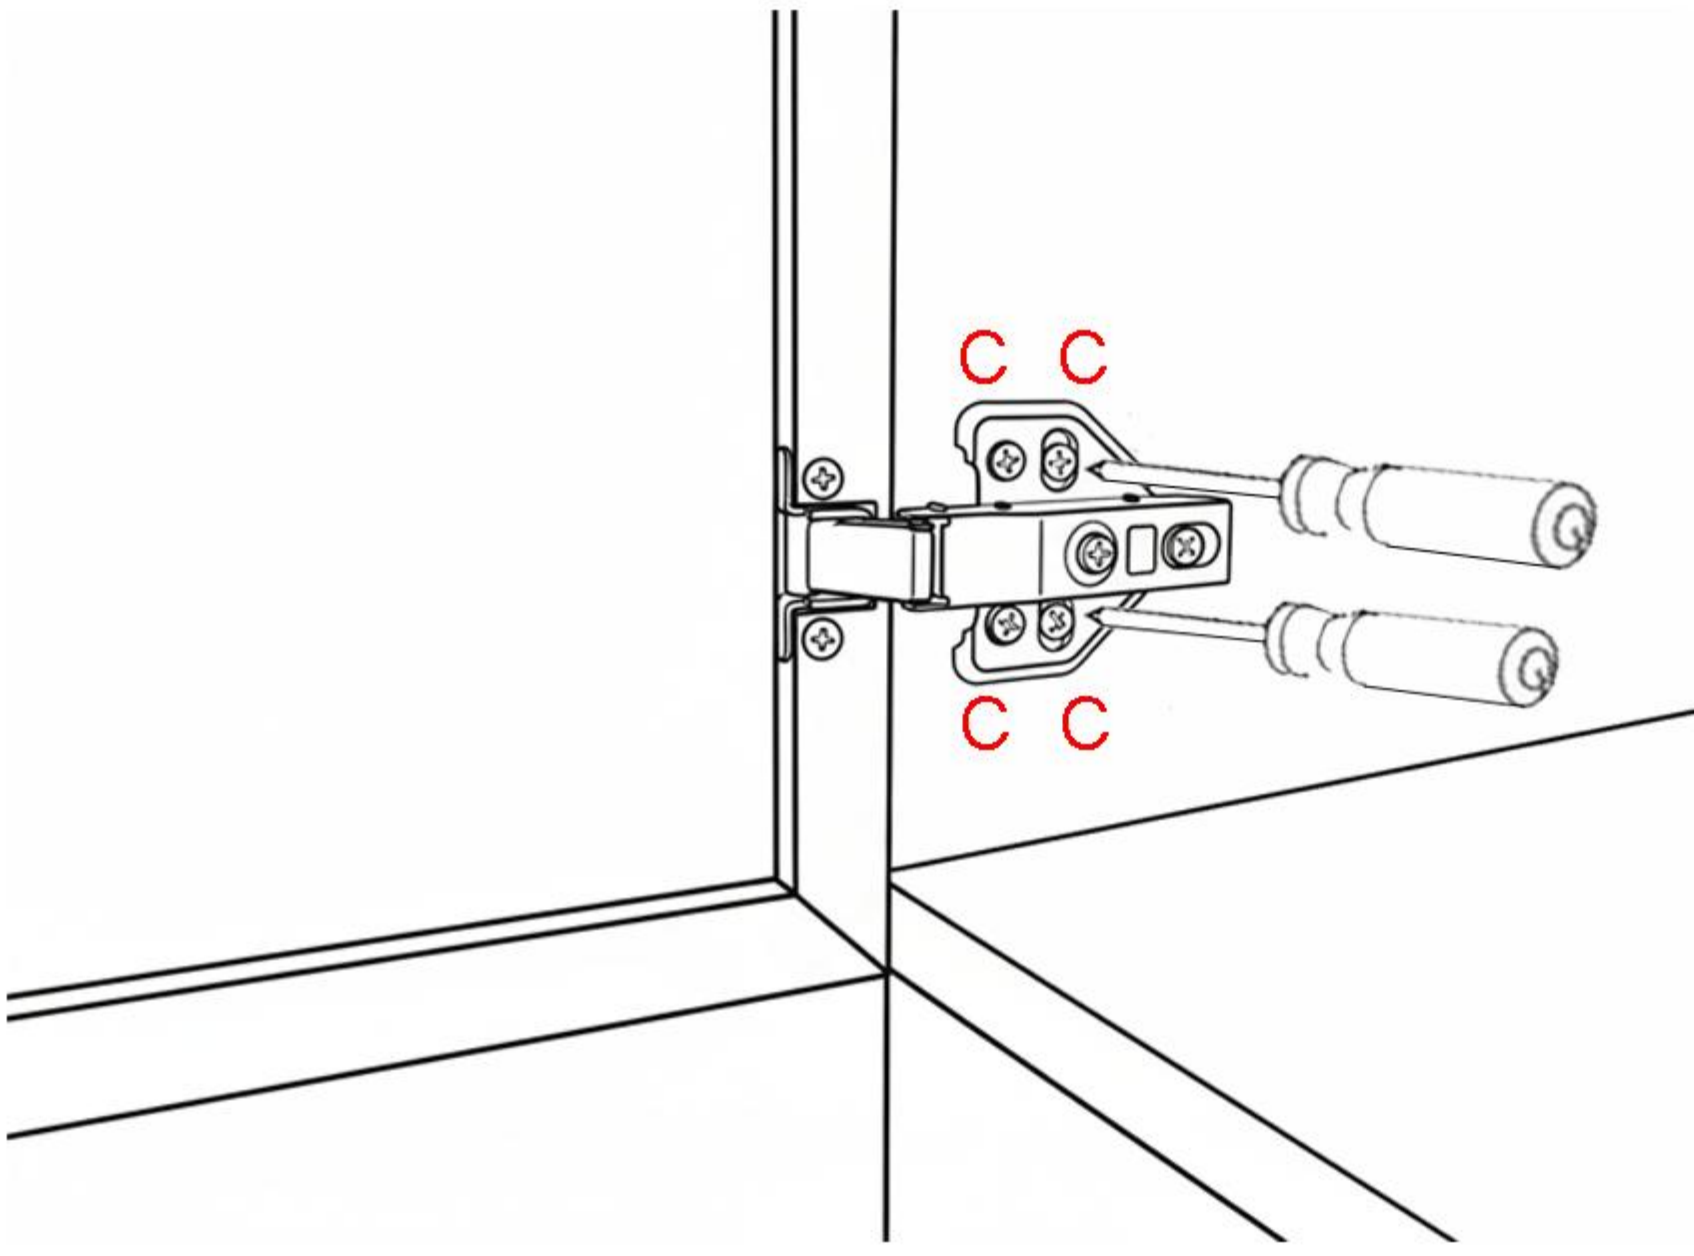


The height can be adjusted up and down here.

4.

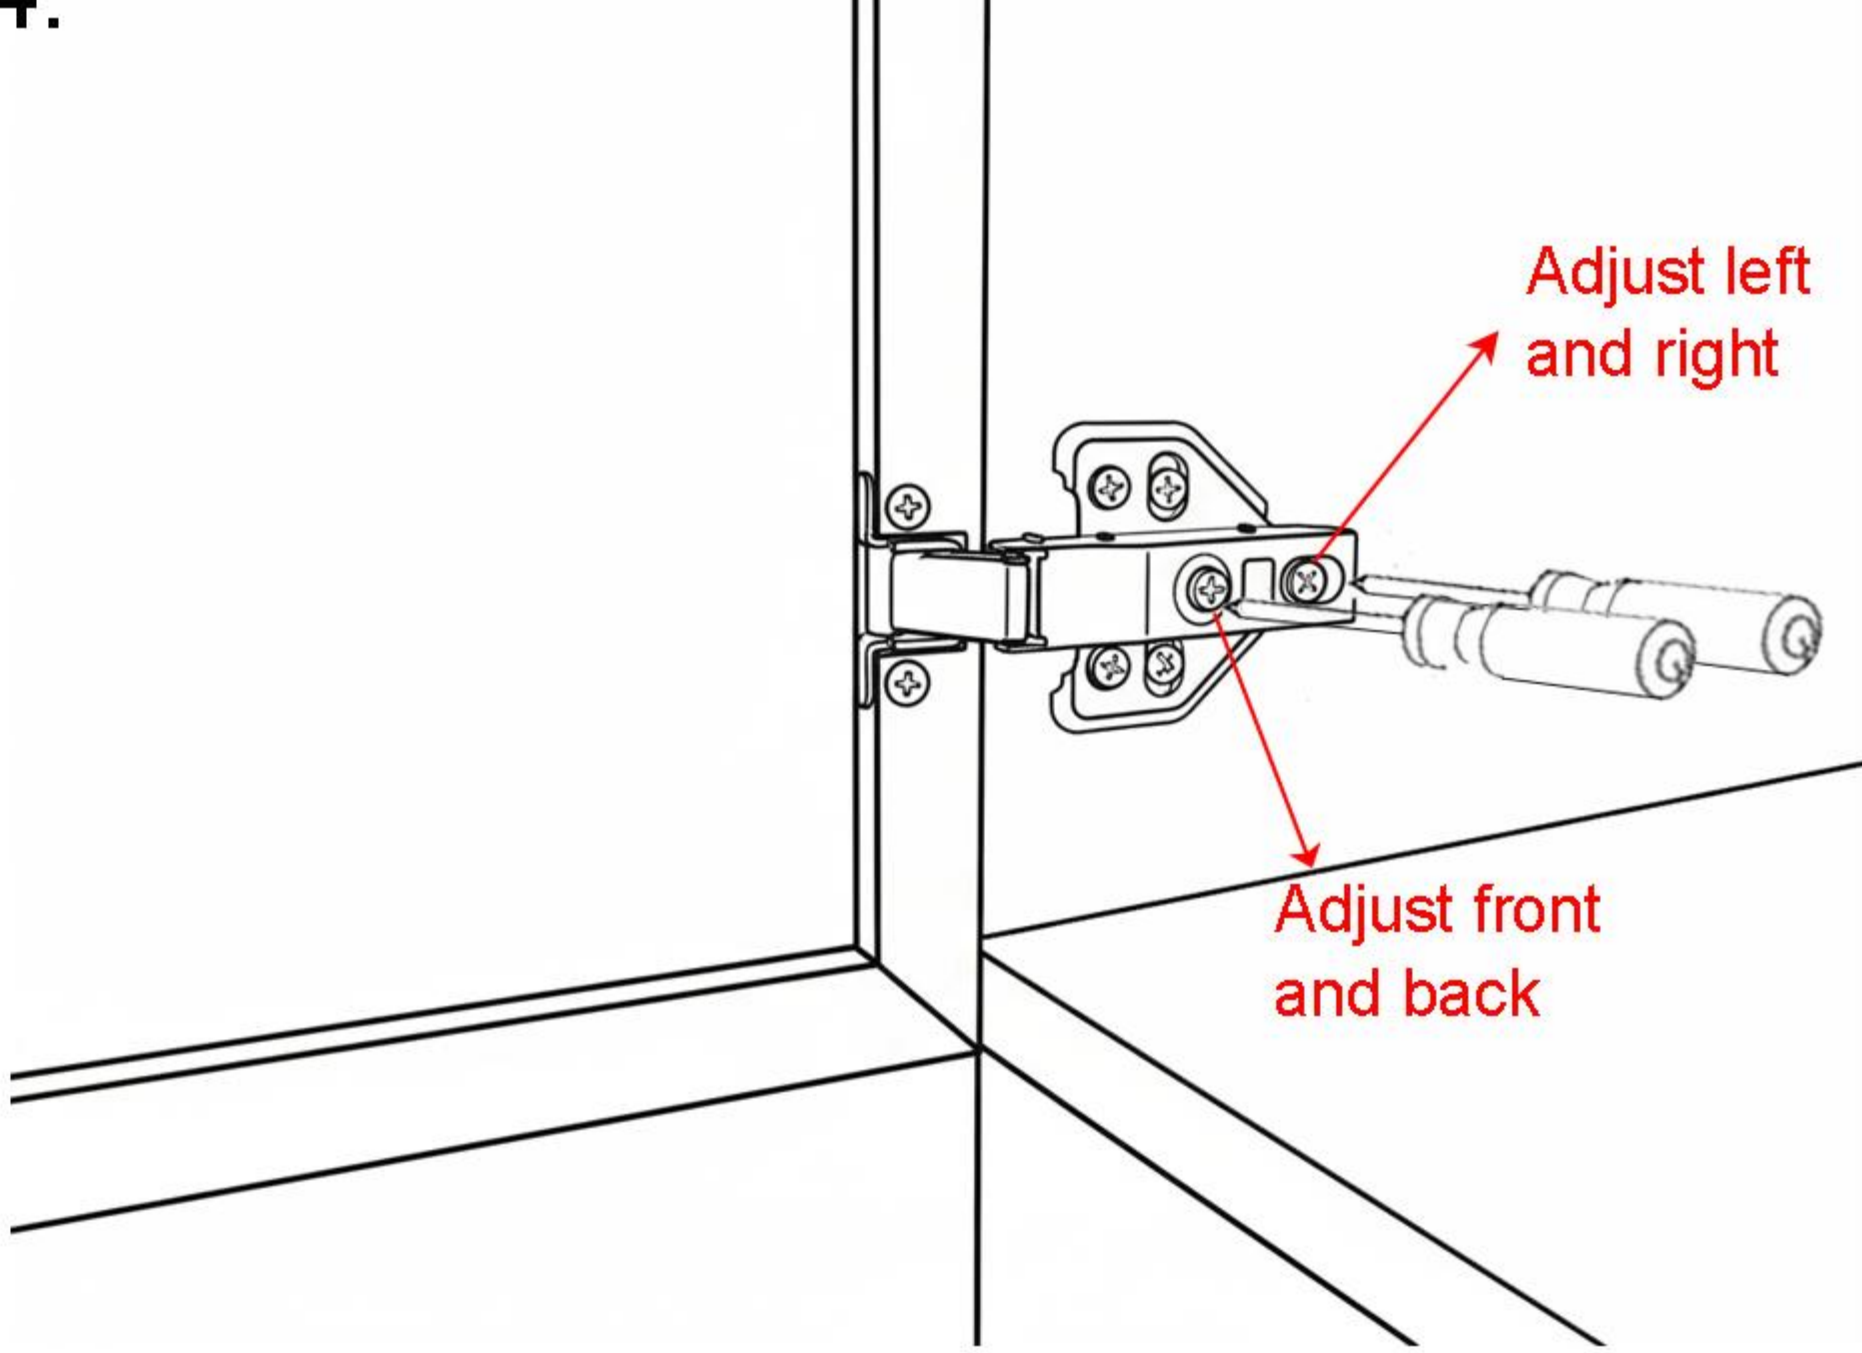


Adjusting the gap between the door.

Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

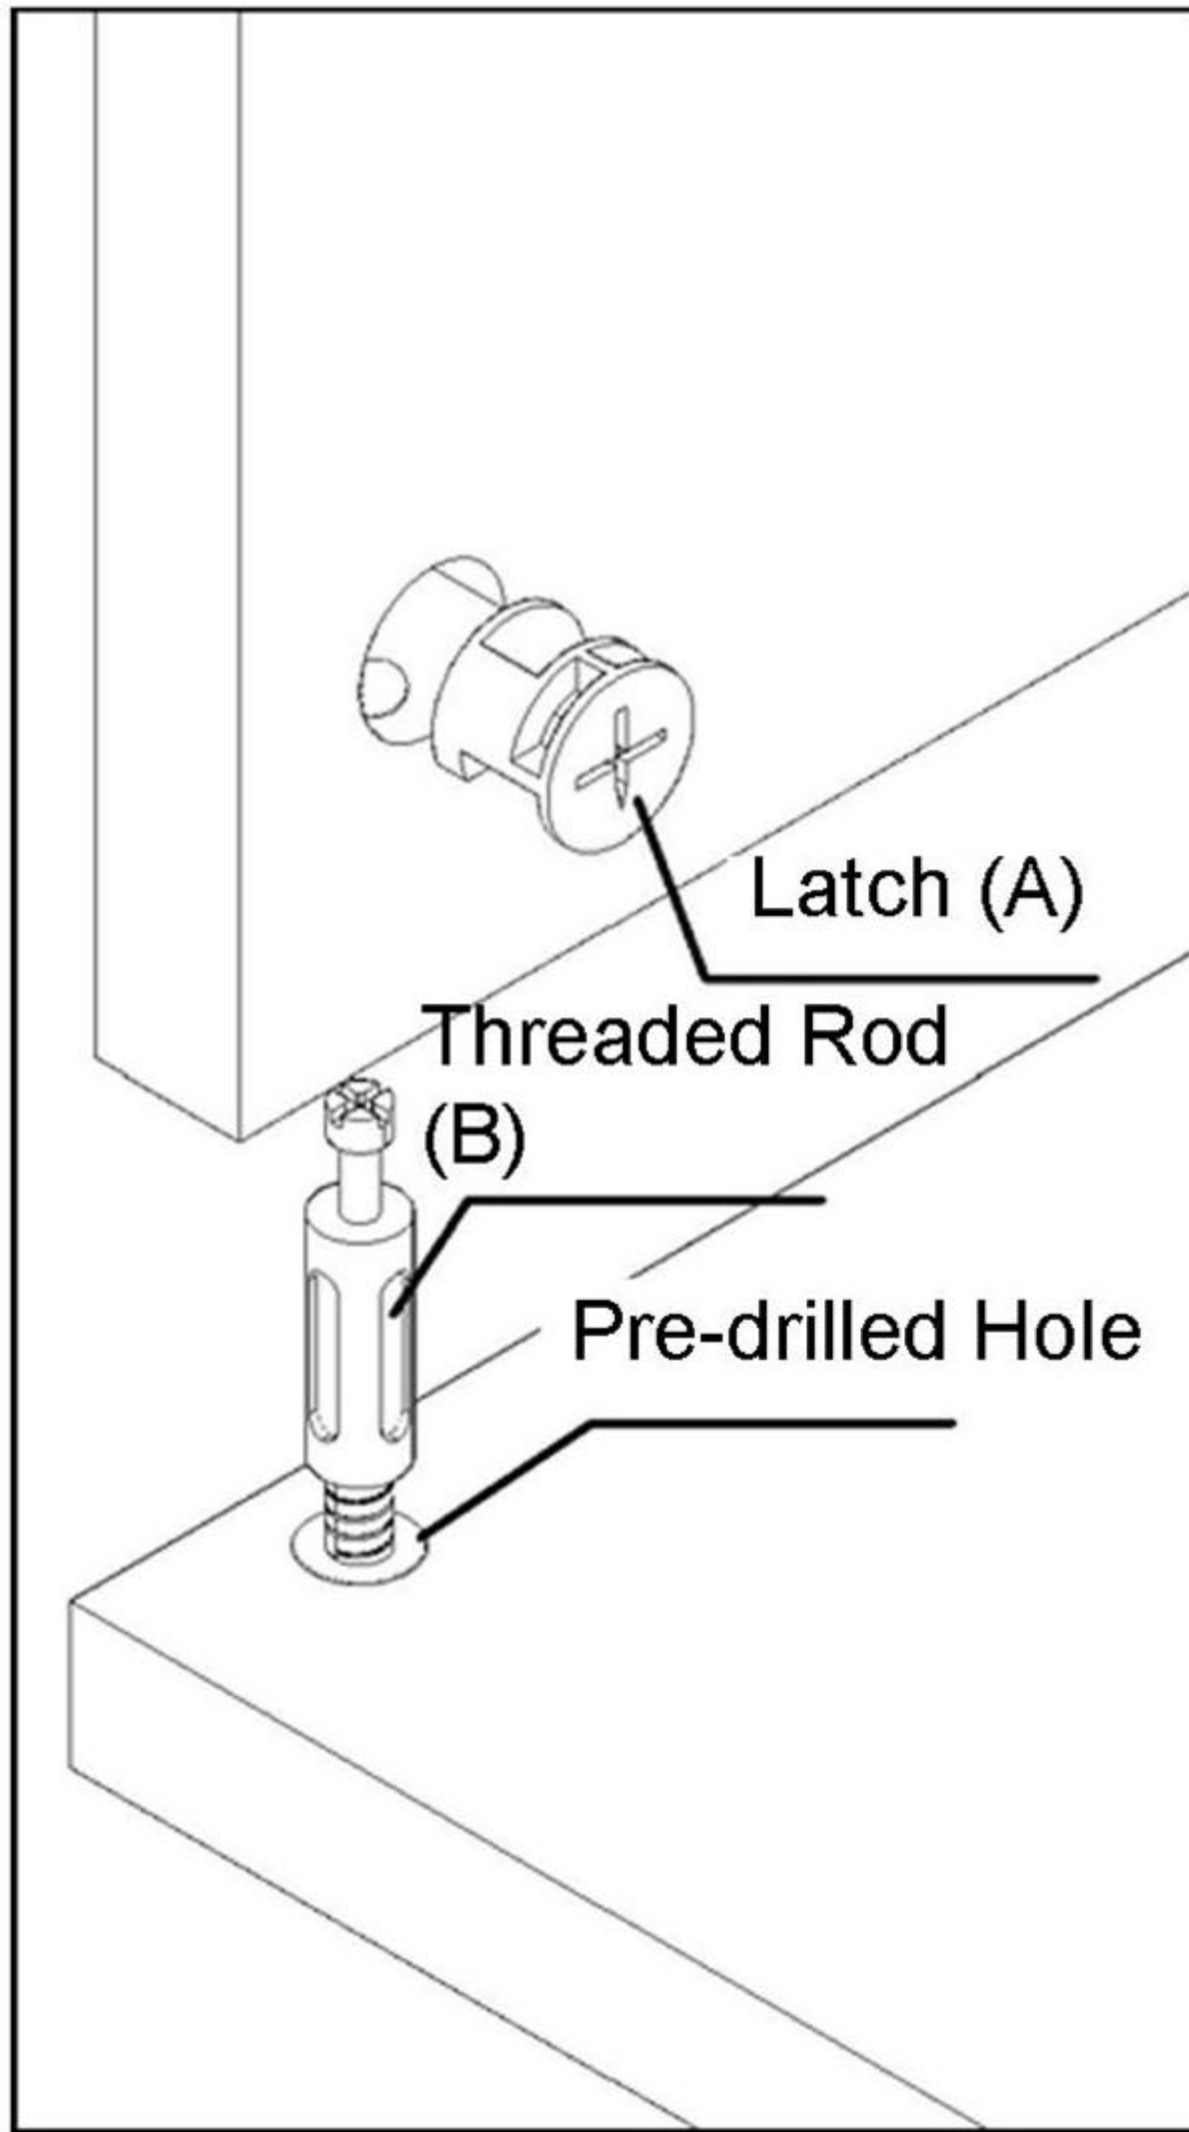


1. Screw the B (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed A into the corresponding hole of the other piece. Press A (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.

Step 1:

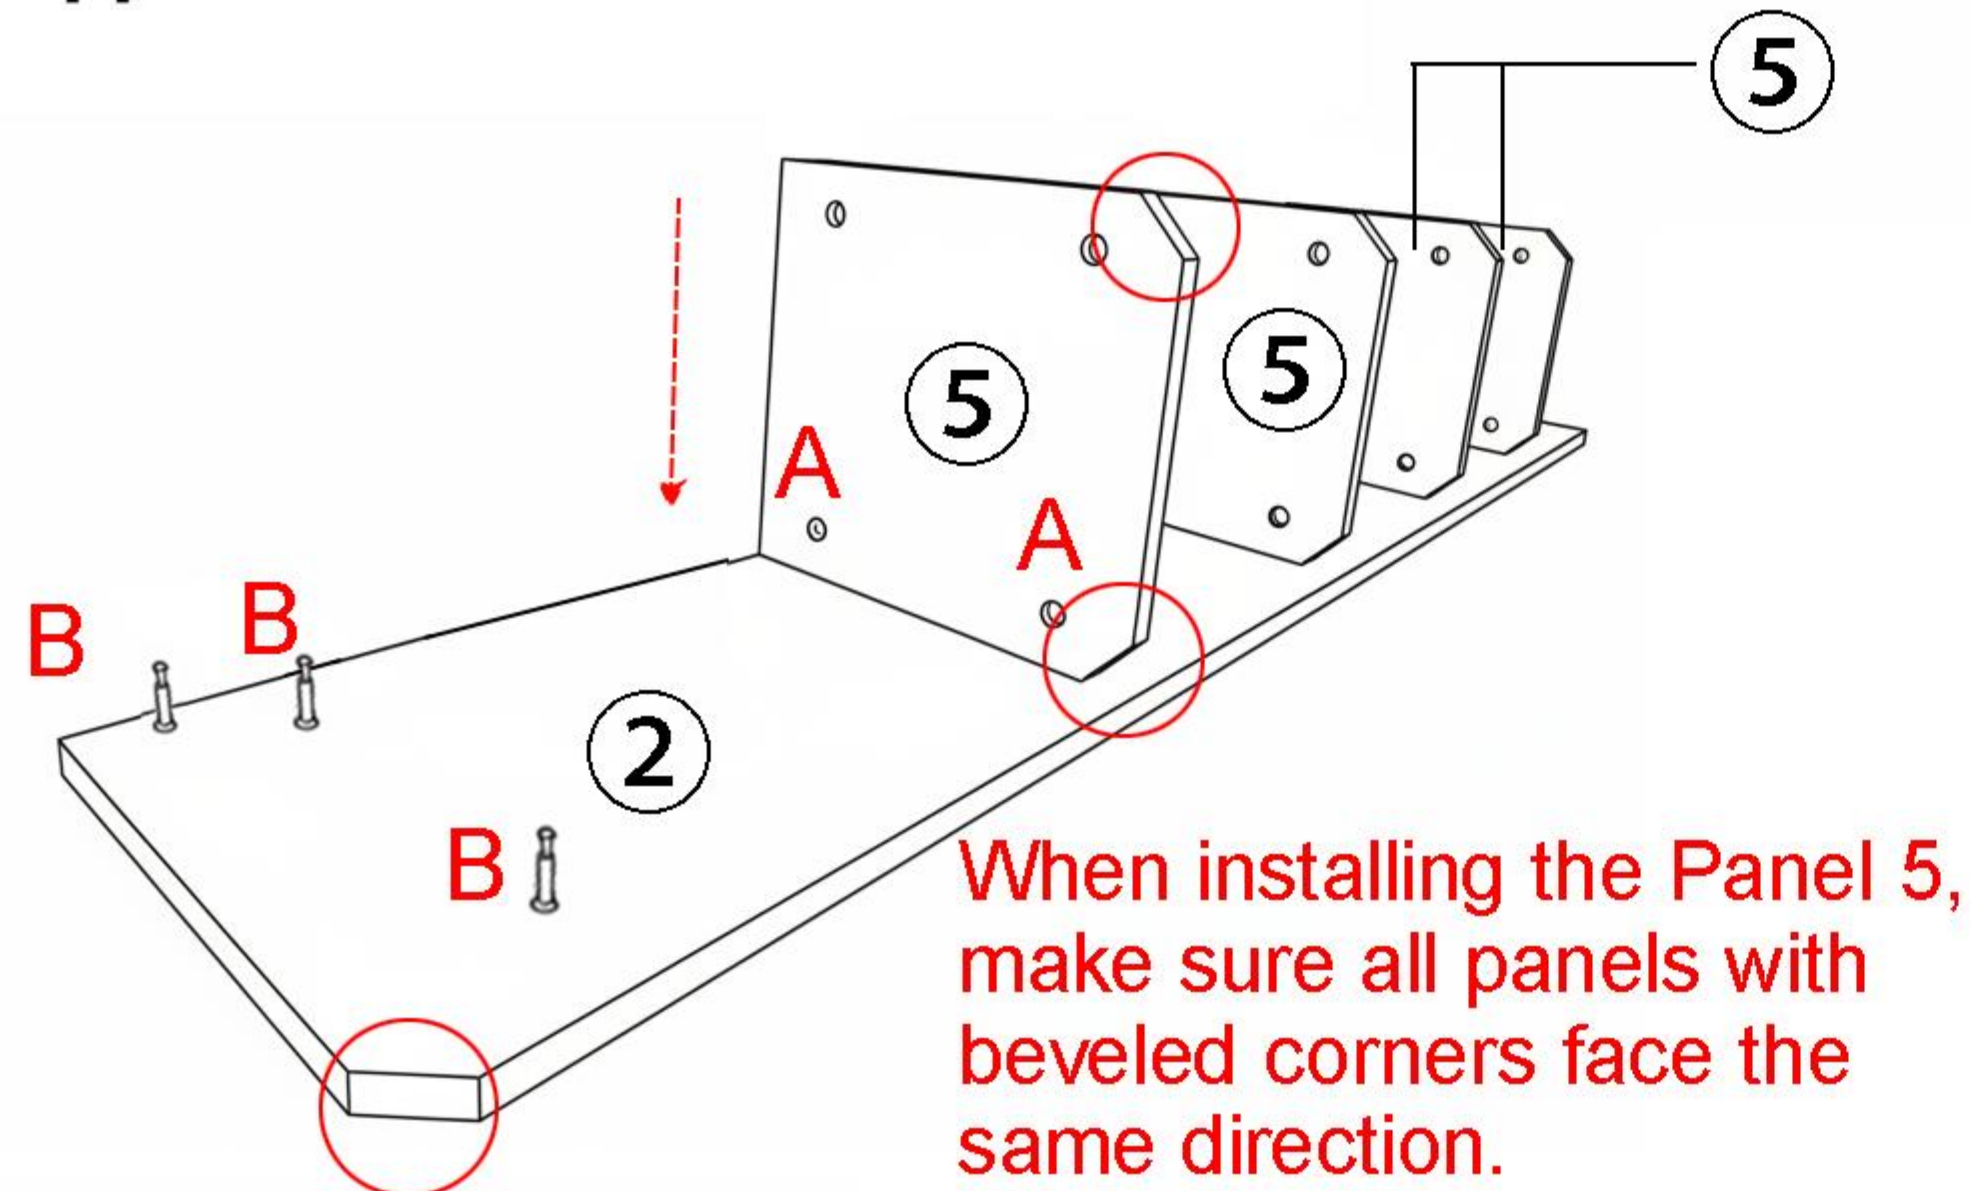


Install B into all white pre-installed holes on Panel 2.
Connect all Panel 5 to 2, use A to lock.

Step 2:

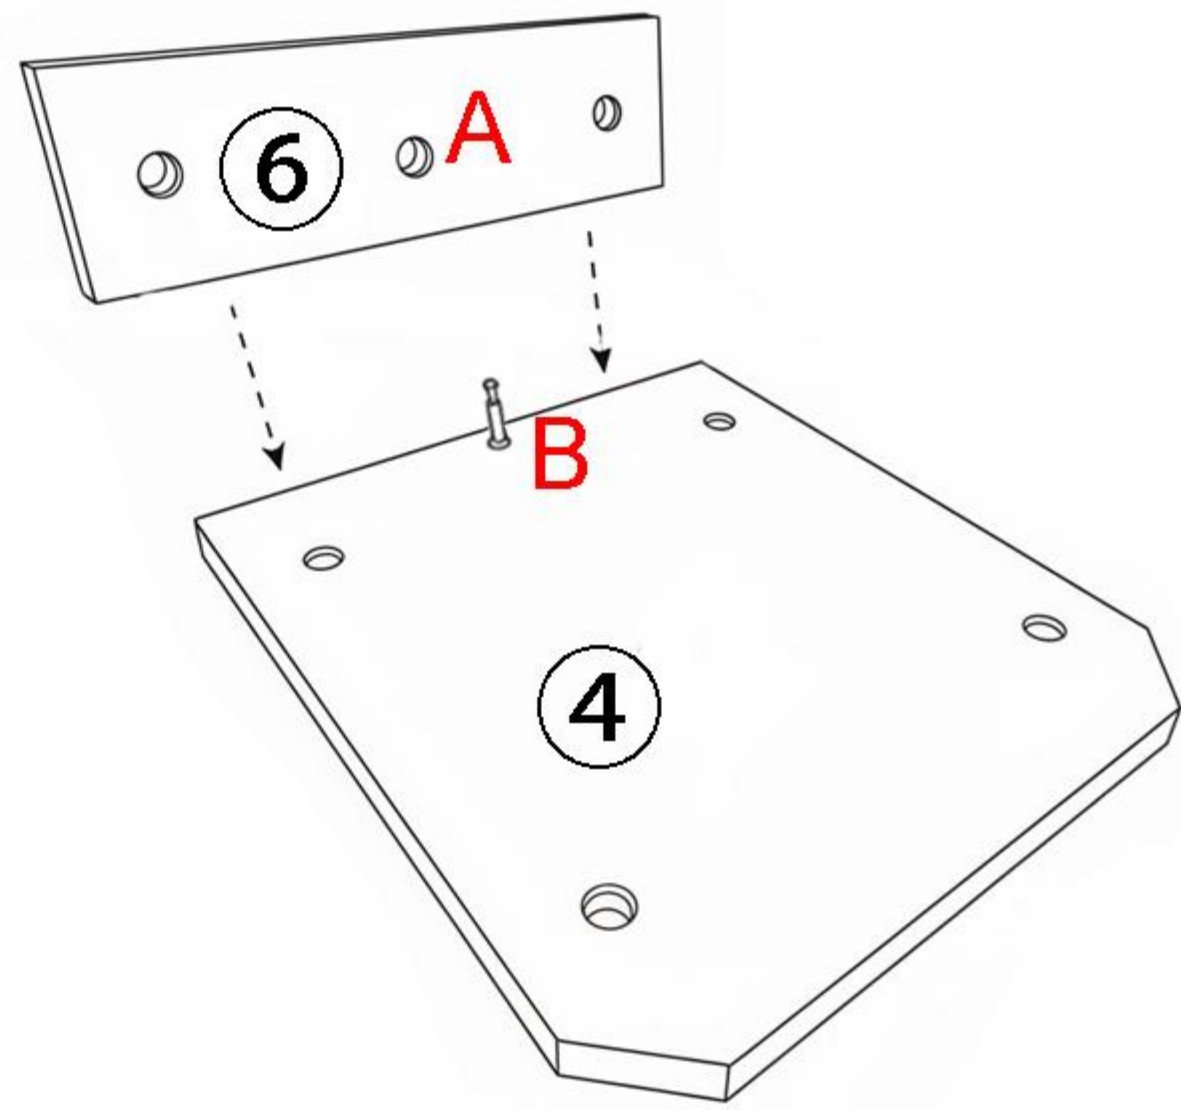


Connect Panel 4 and 6, use A to lock

Step 3:

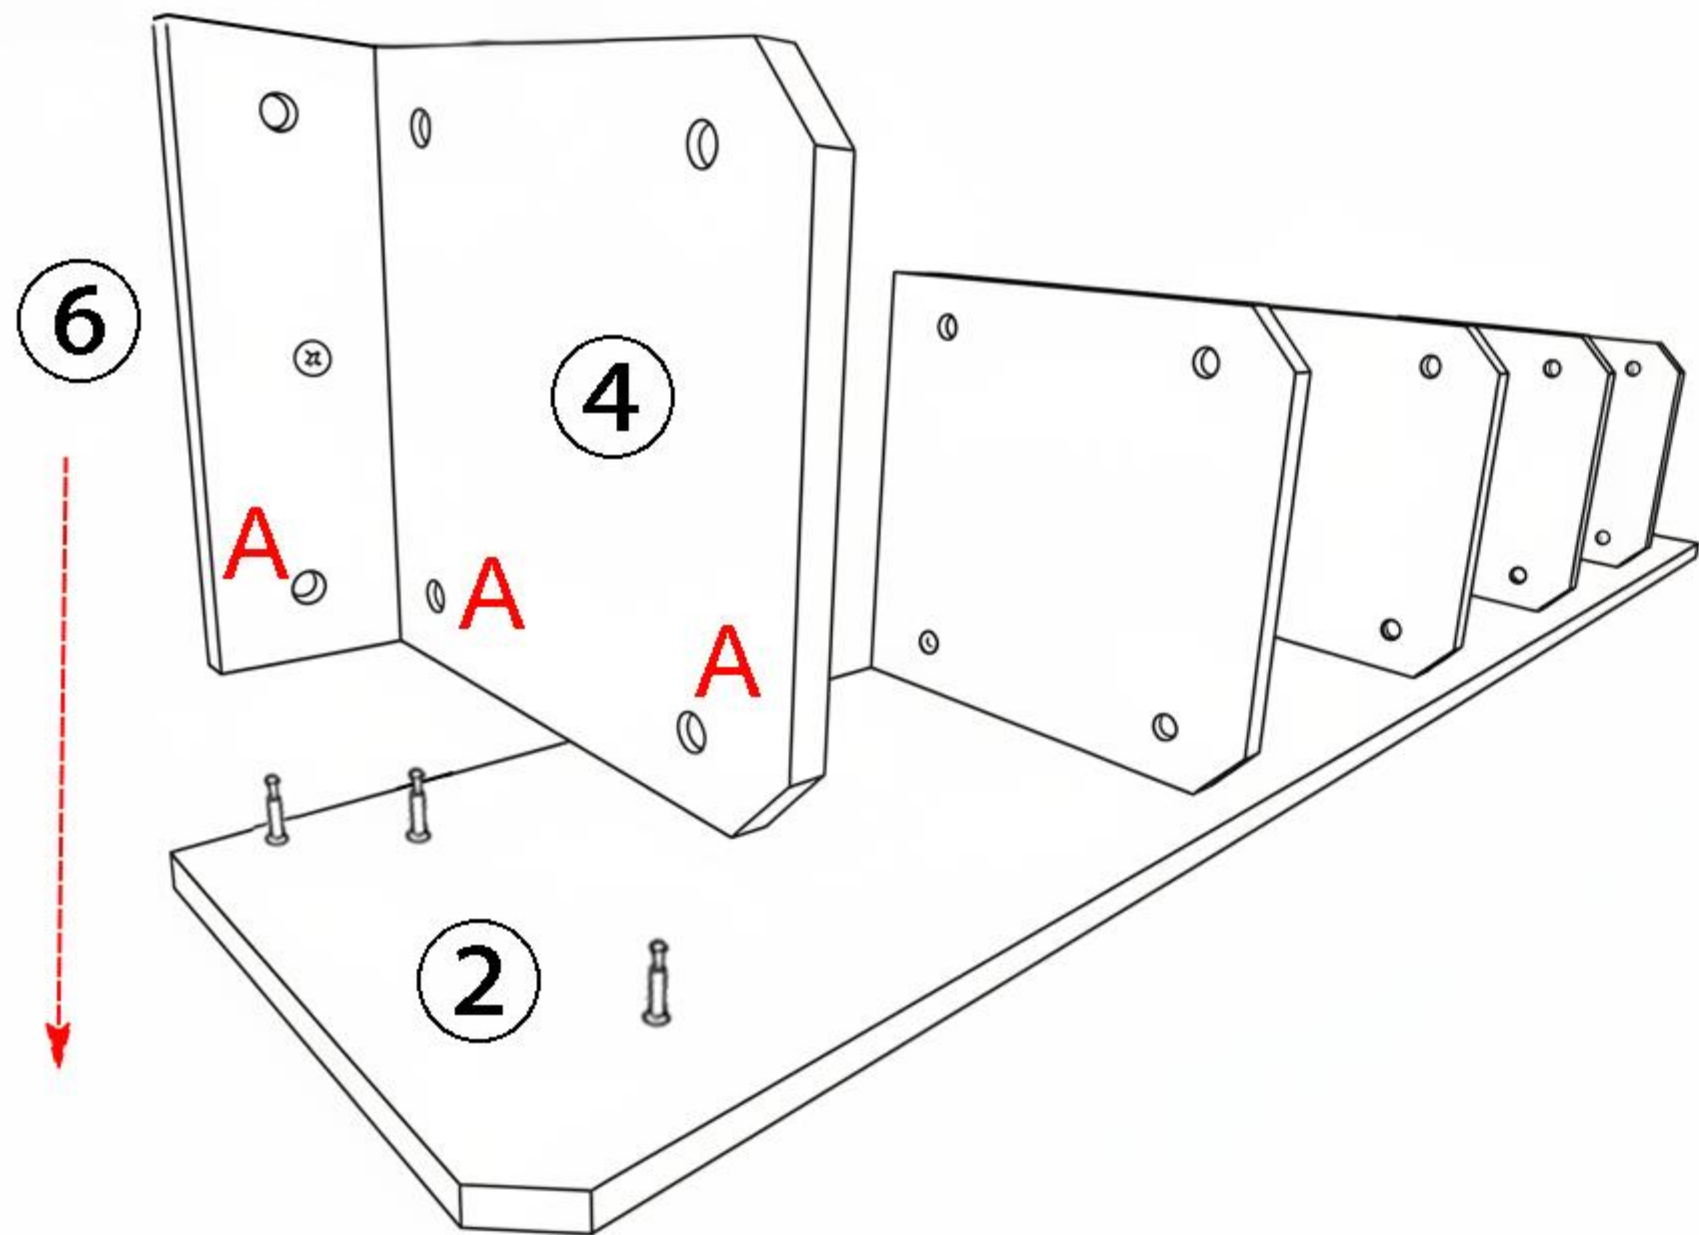


Connect the Panels, use A to lock

Step 4:

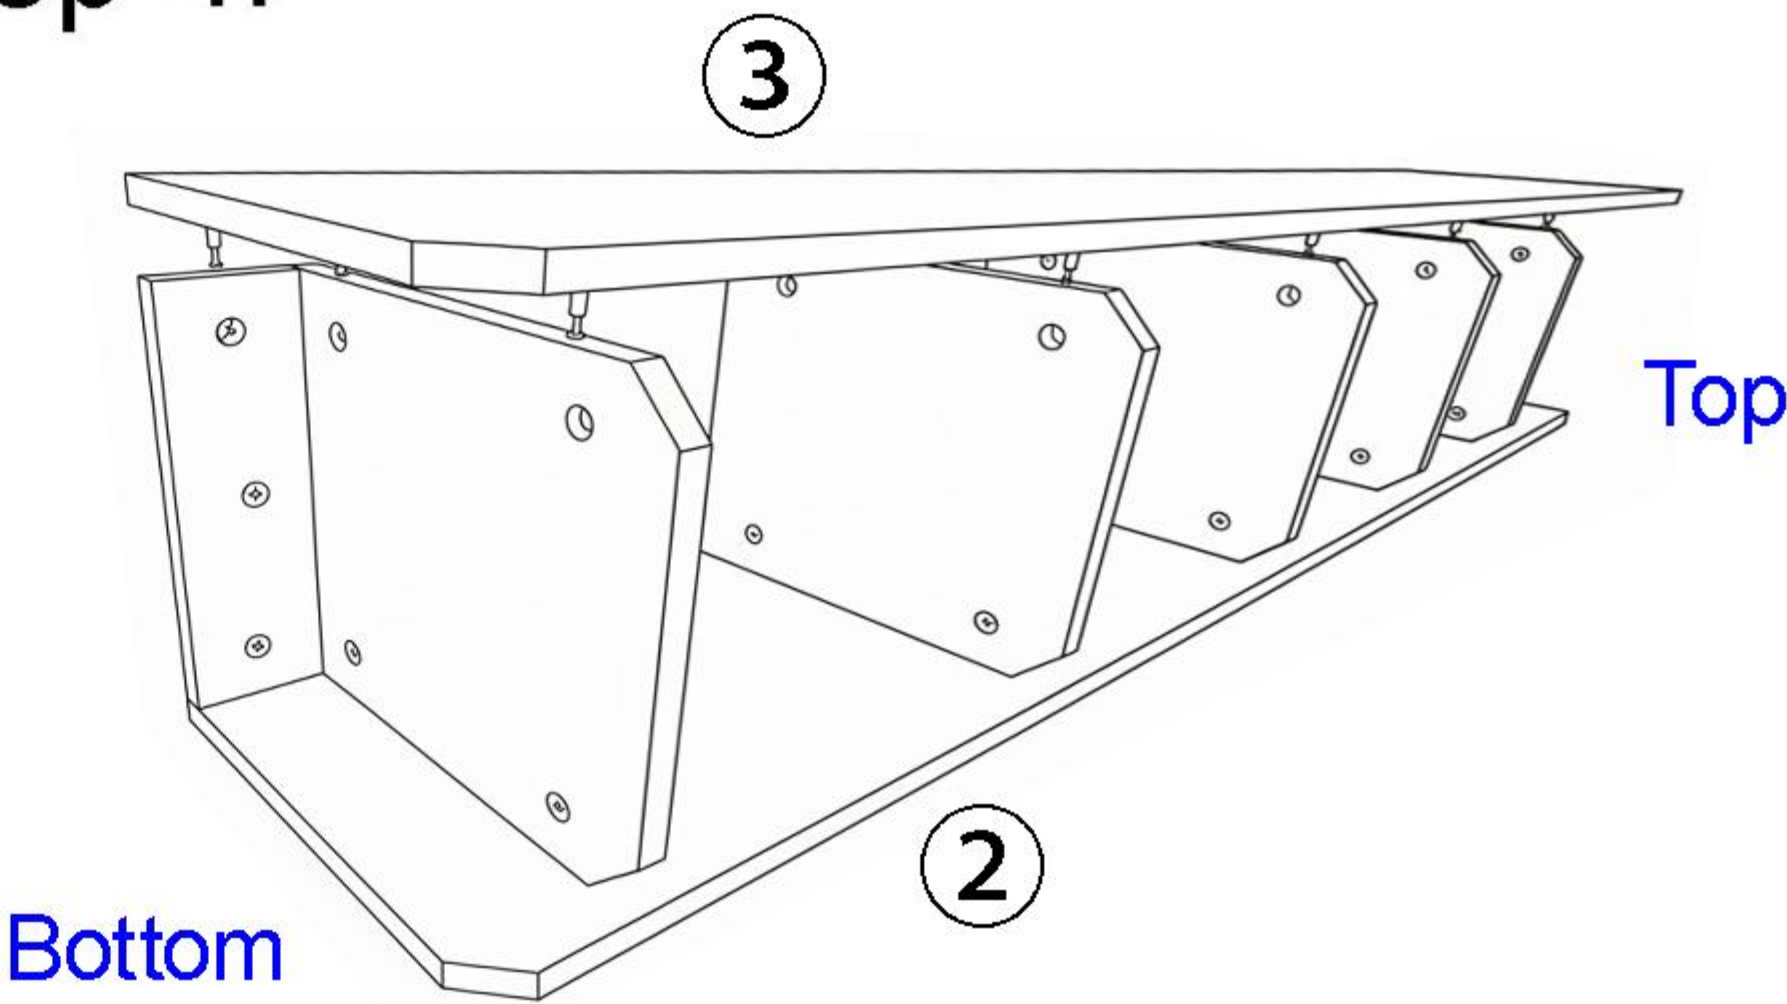


Install B into all white pre-installed holes on Panel 3.
Connect it to the Step 3 combination, use A to lock.

Step 5:

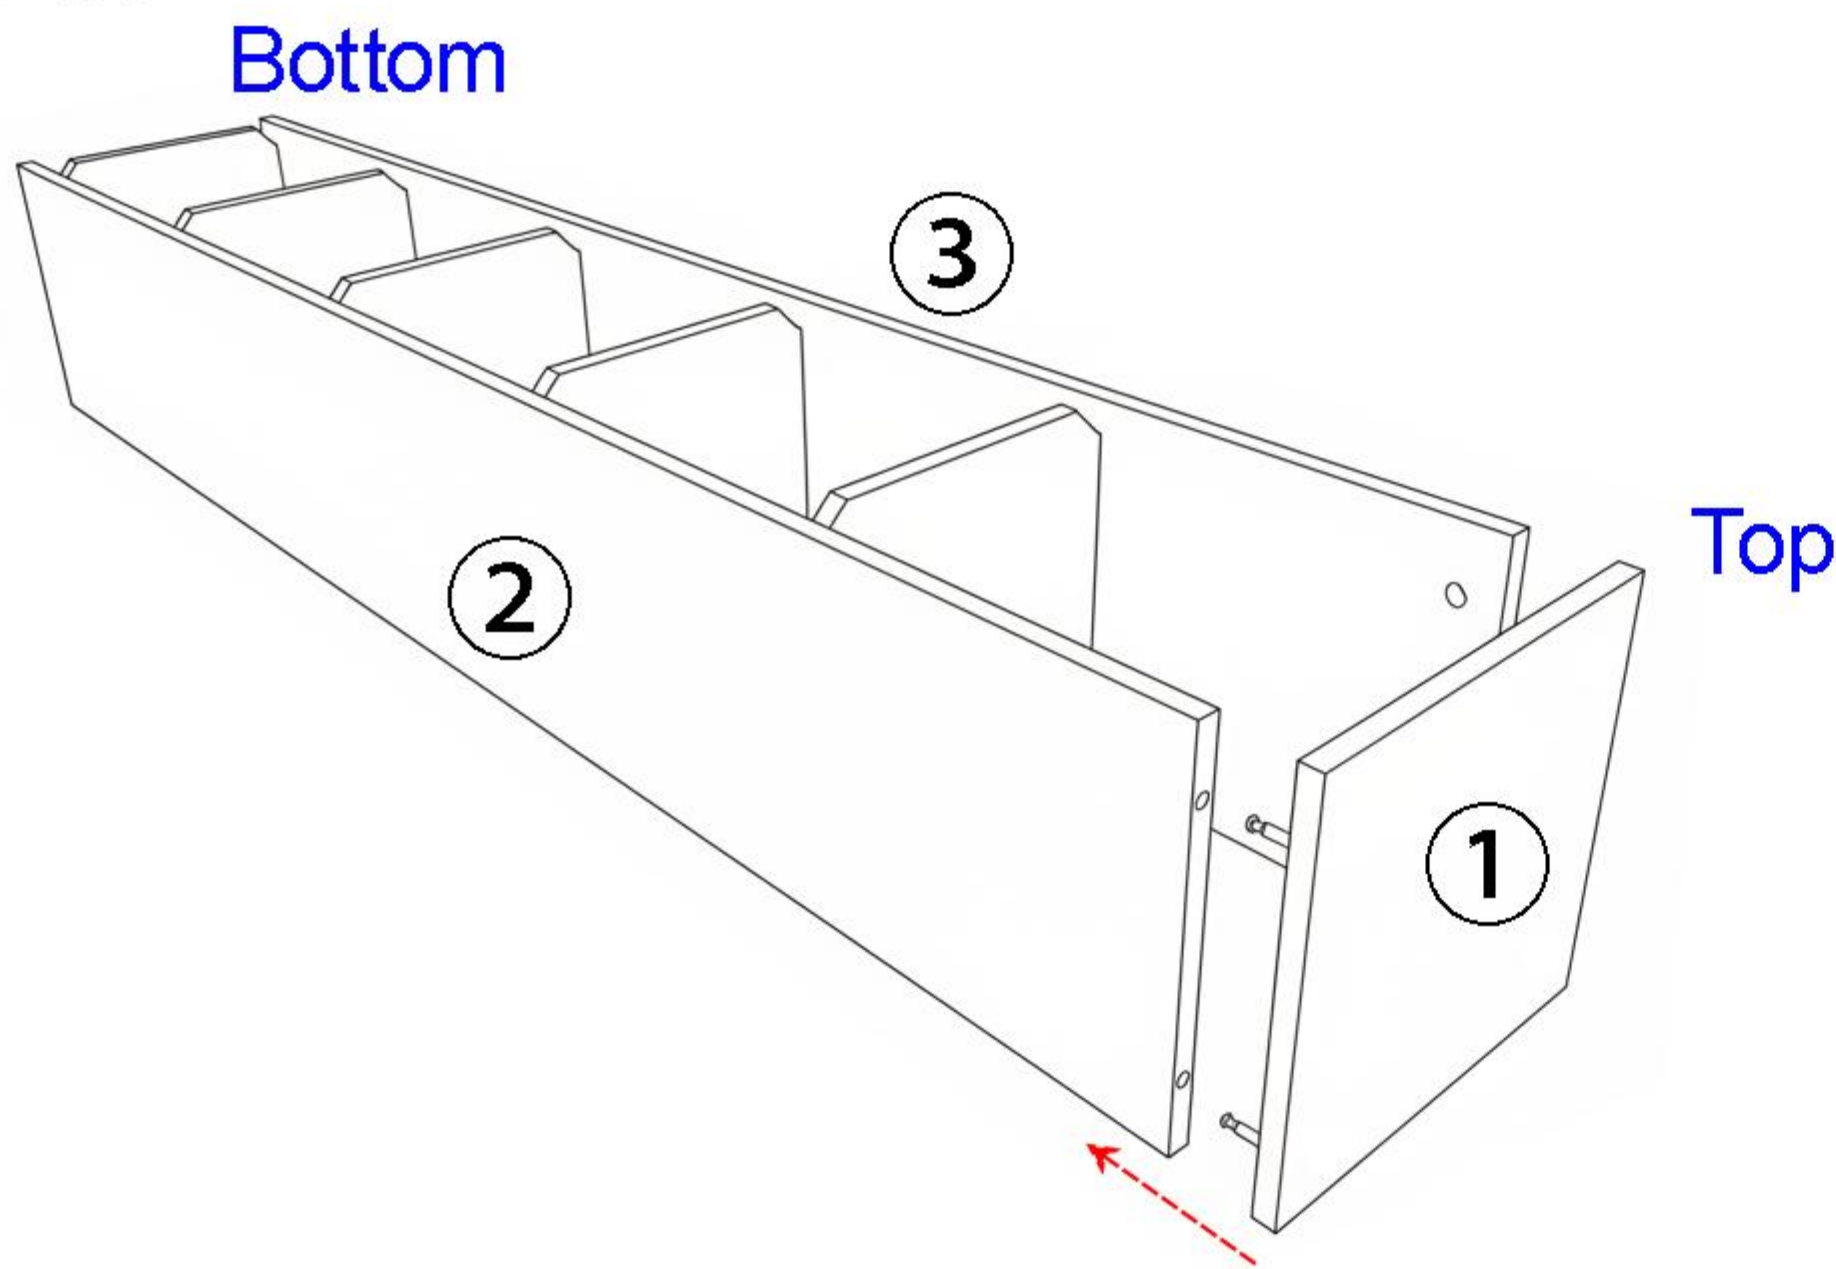


Connect the Panel 1 to the combination, use A to lock

Step 6:

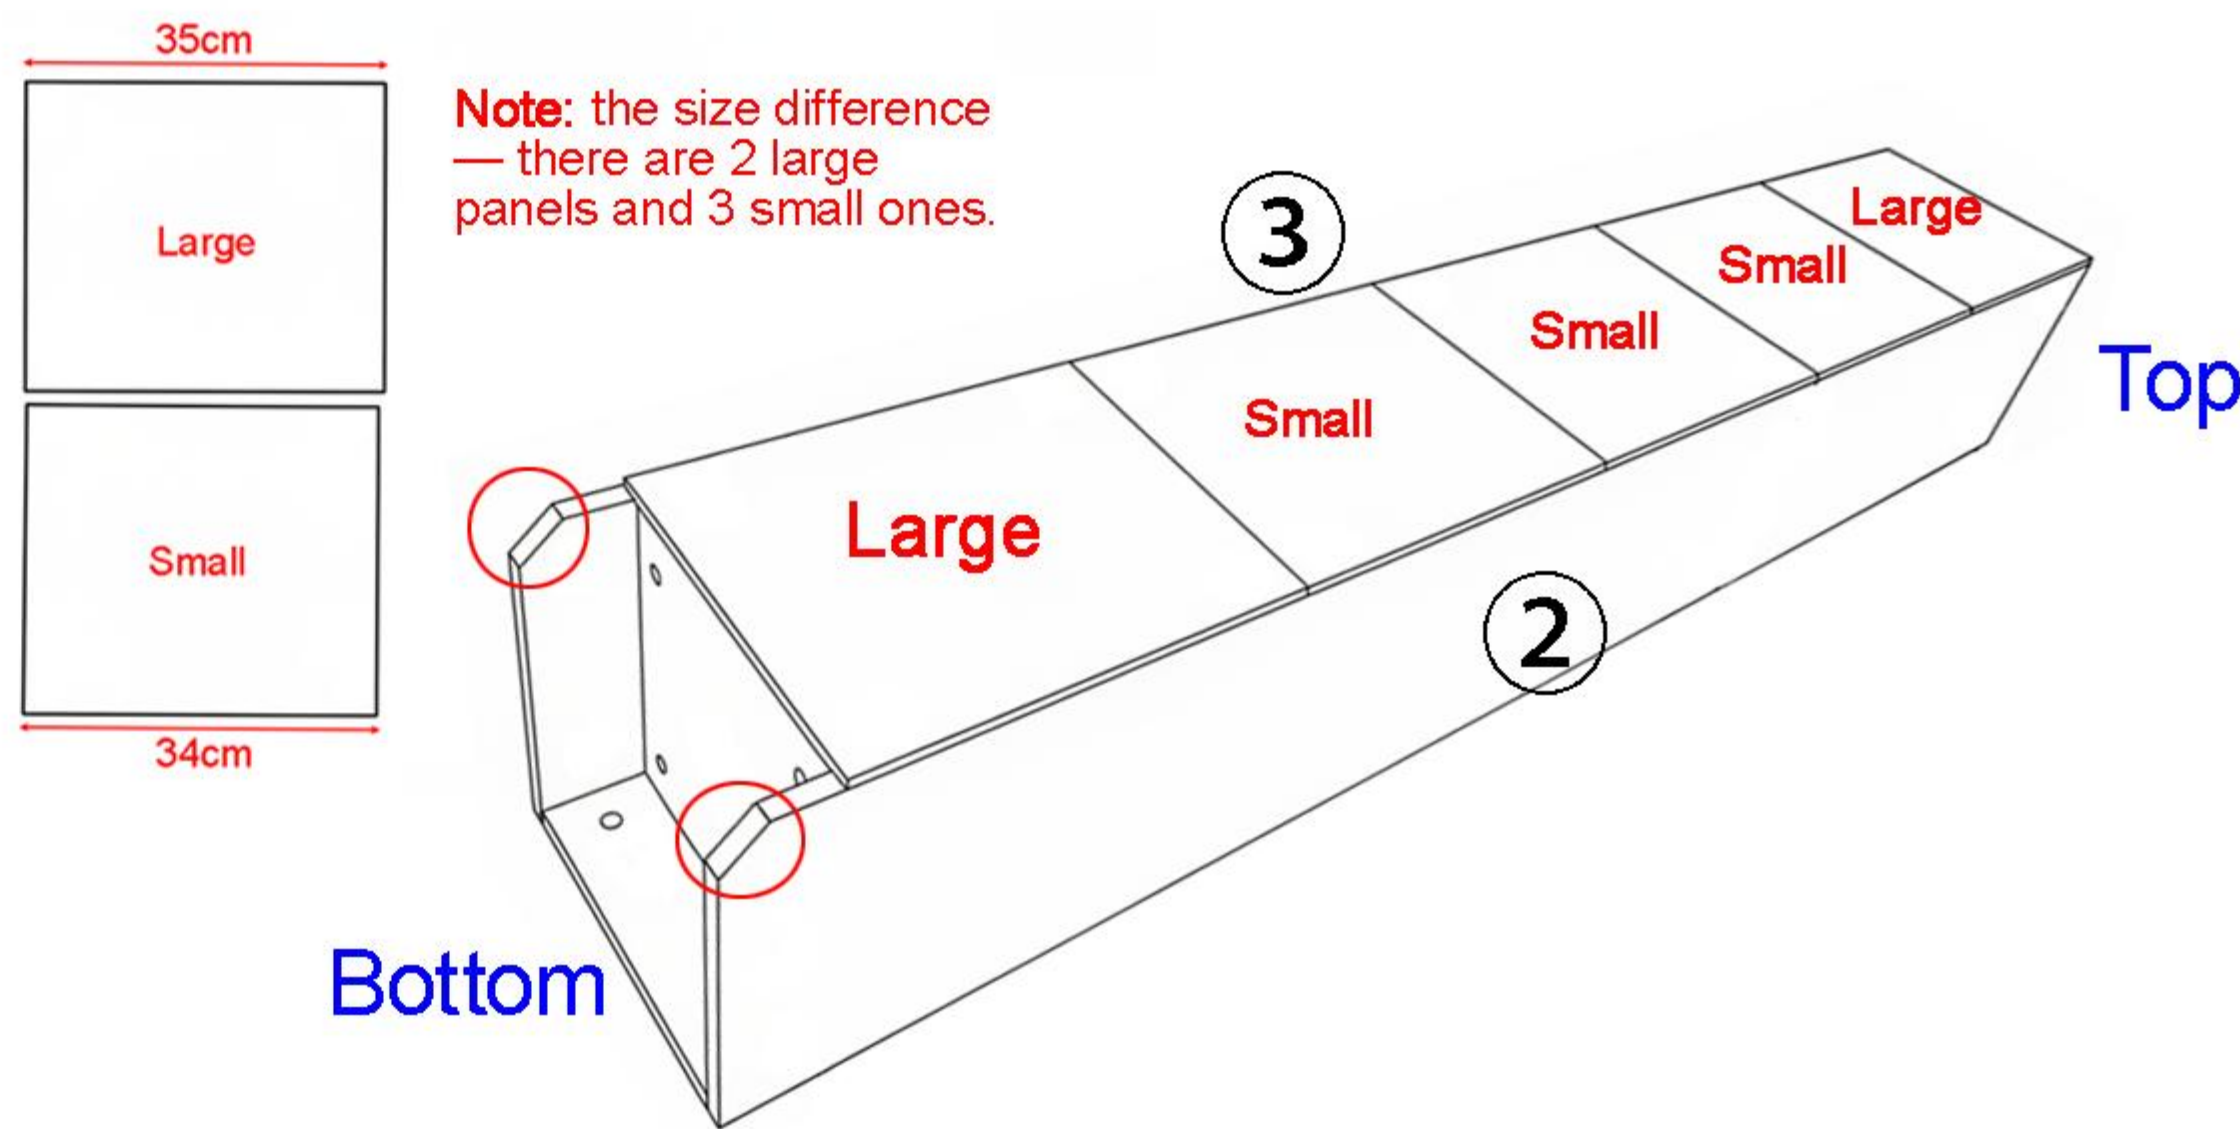


Ensure the beveled edges face upward, then install the back panels. Place the two large panels at the top and bottom of the cabinet, and the three smaller panels in sequence between them.

Step 7:

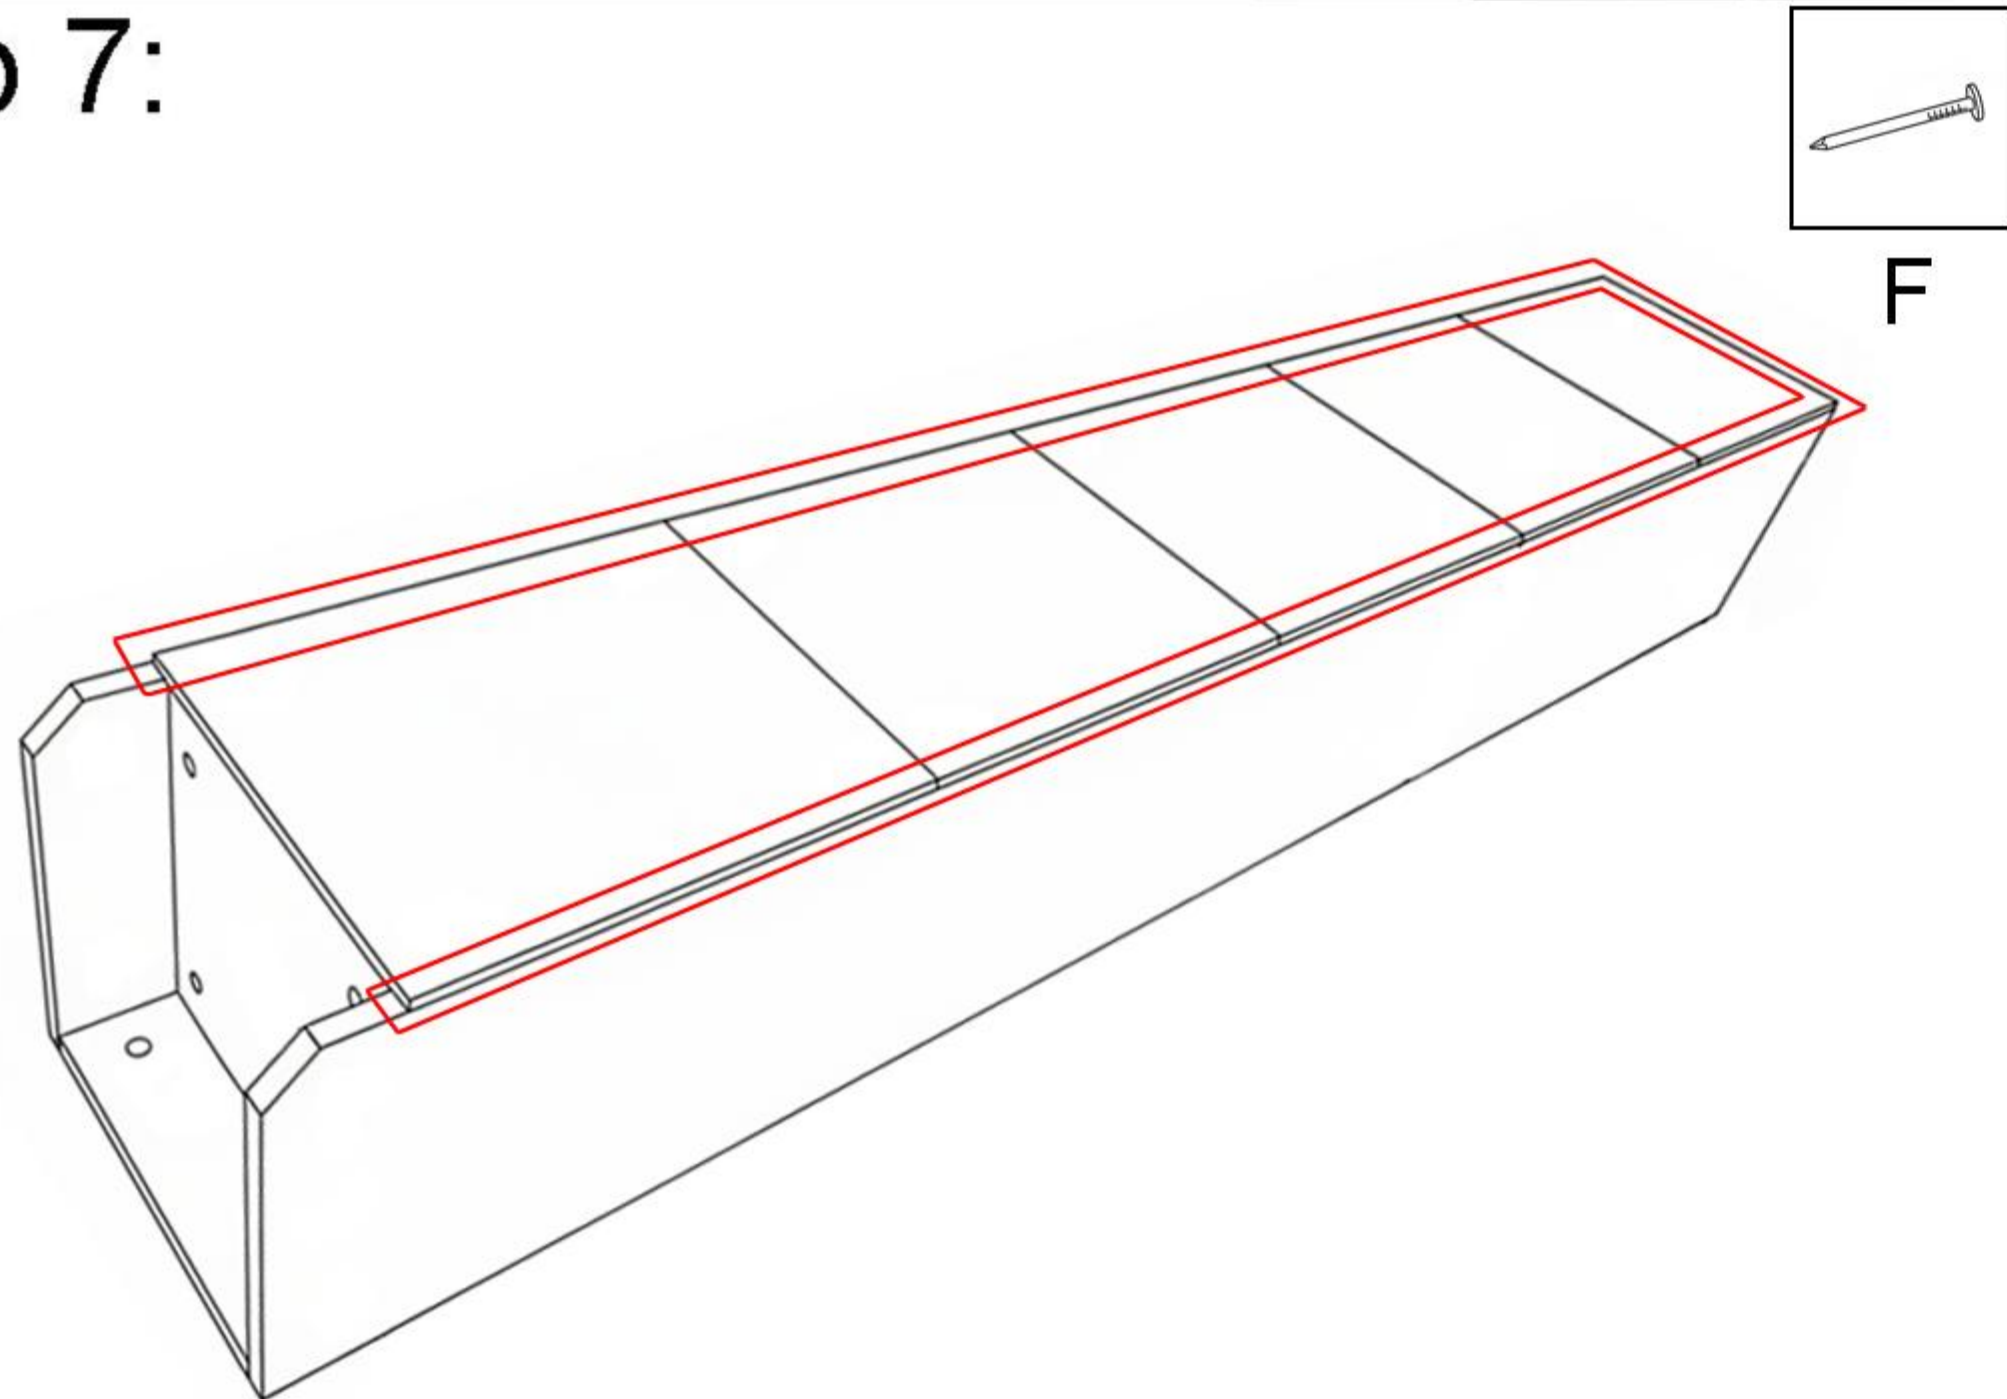


Use F to secure back panels to the frame.

Step 8:

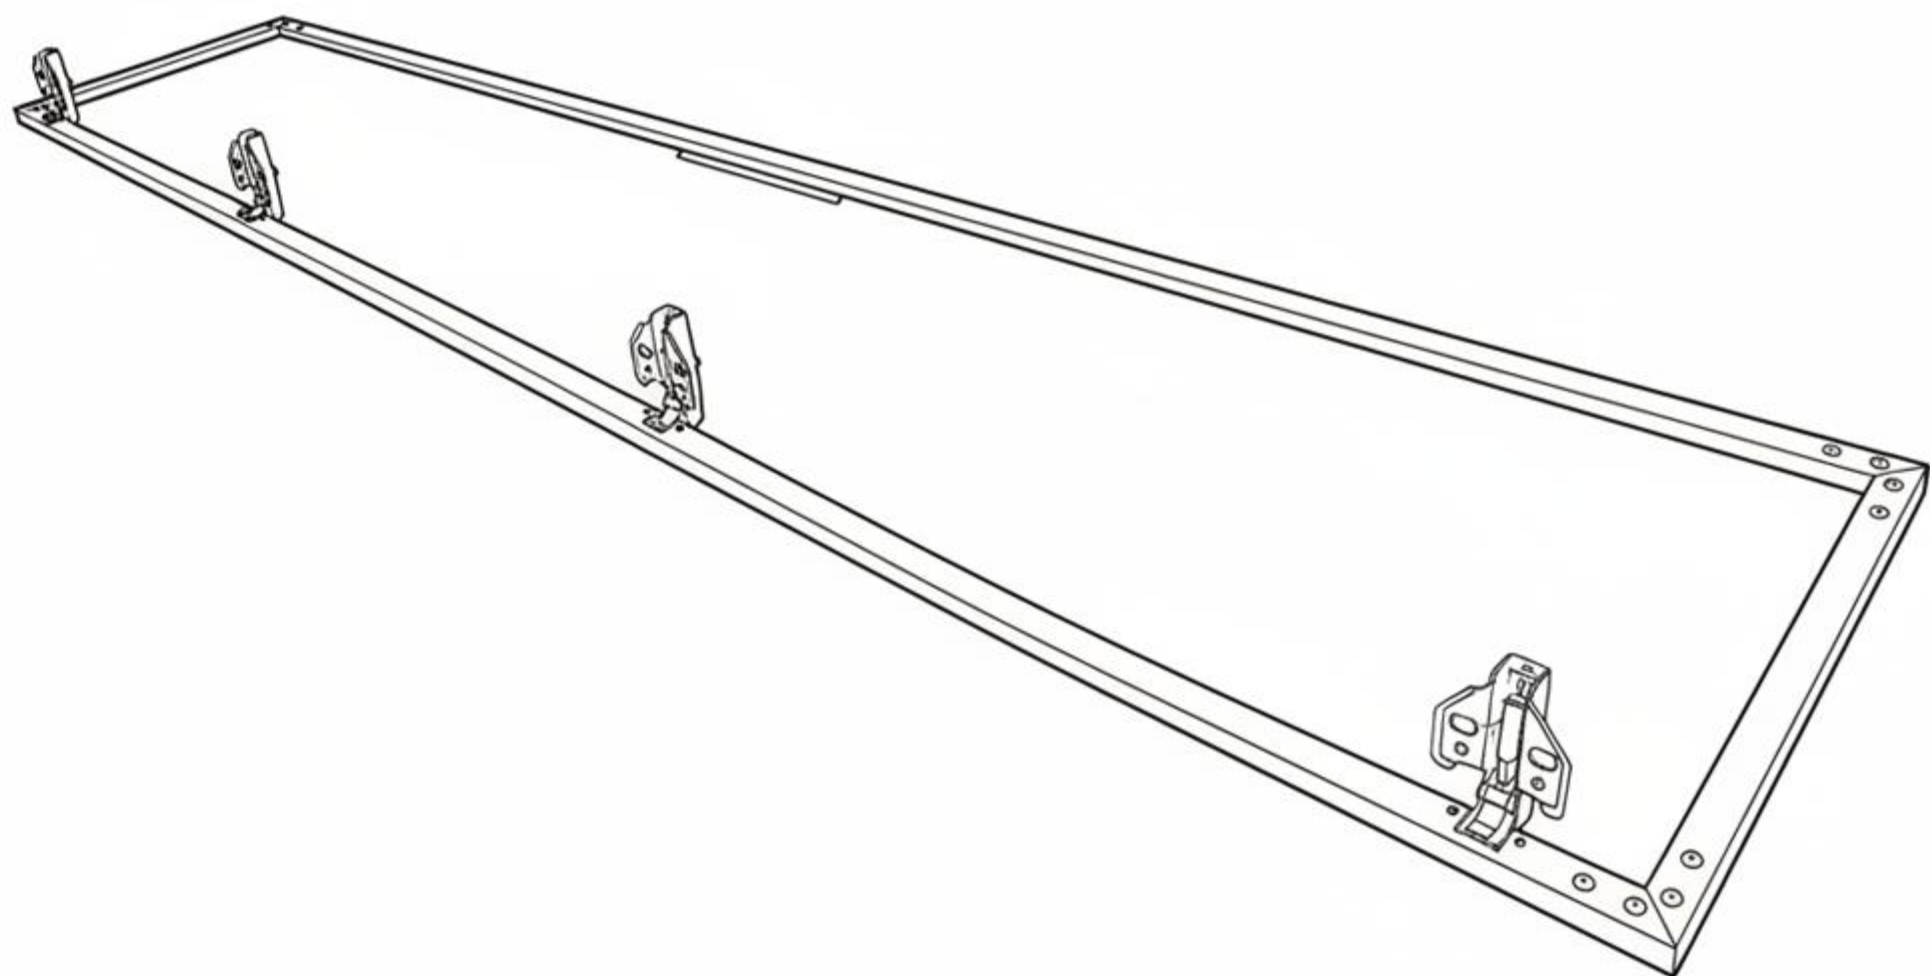

Install E onto the door. Secure E with D.

Step 9:

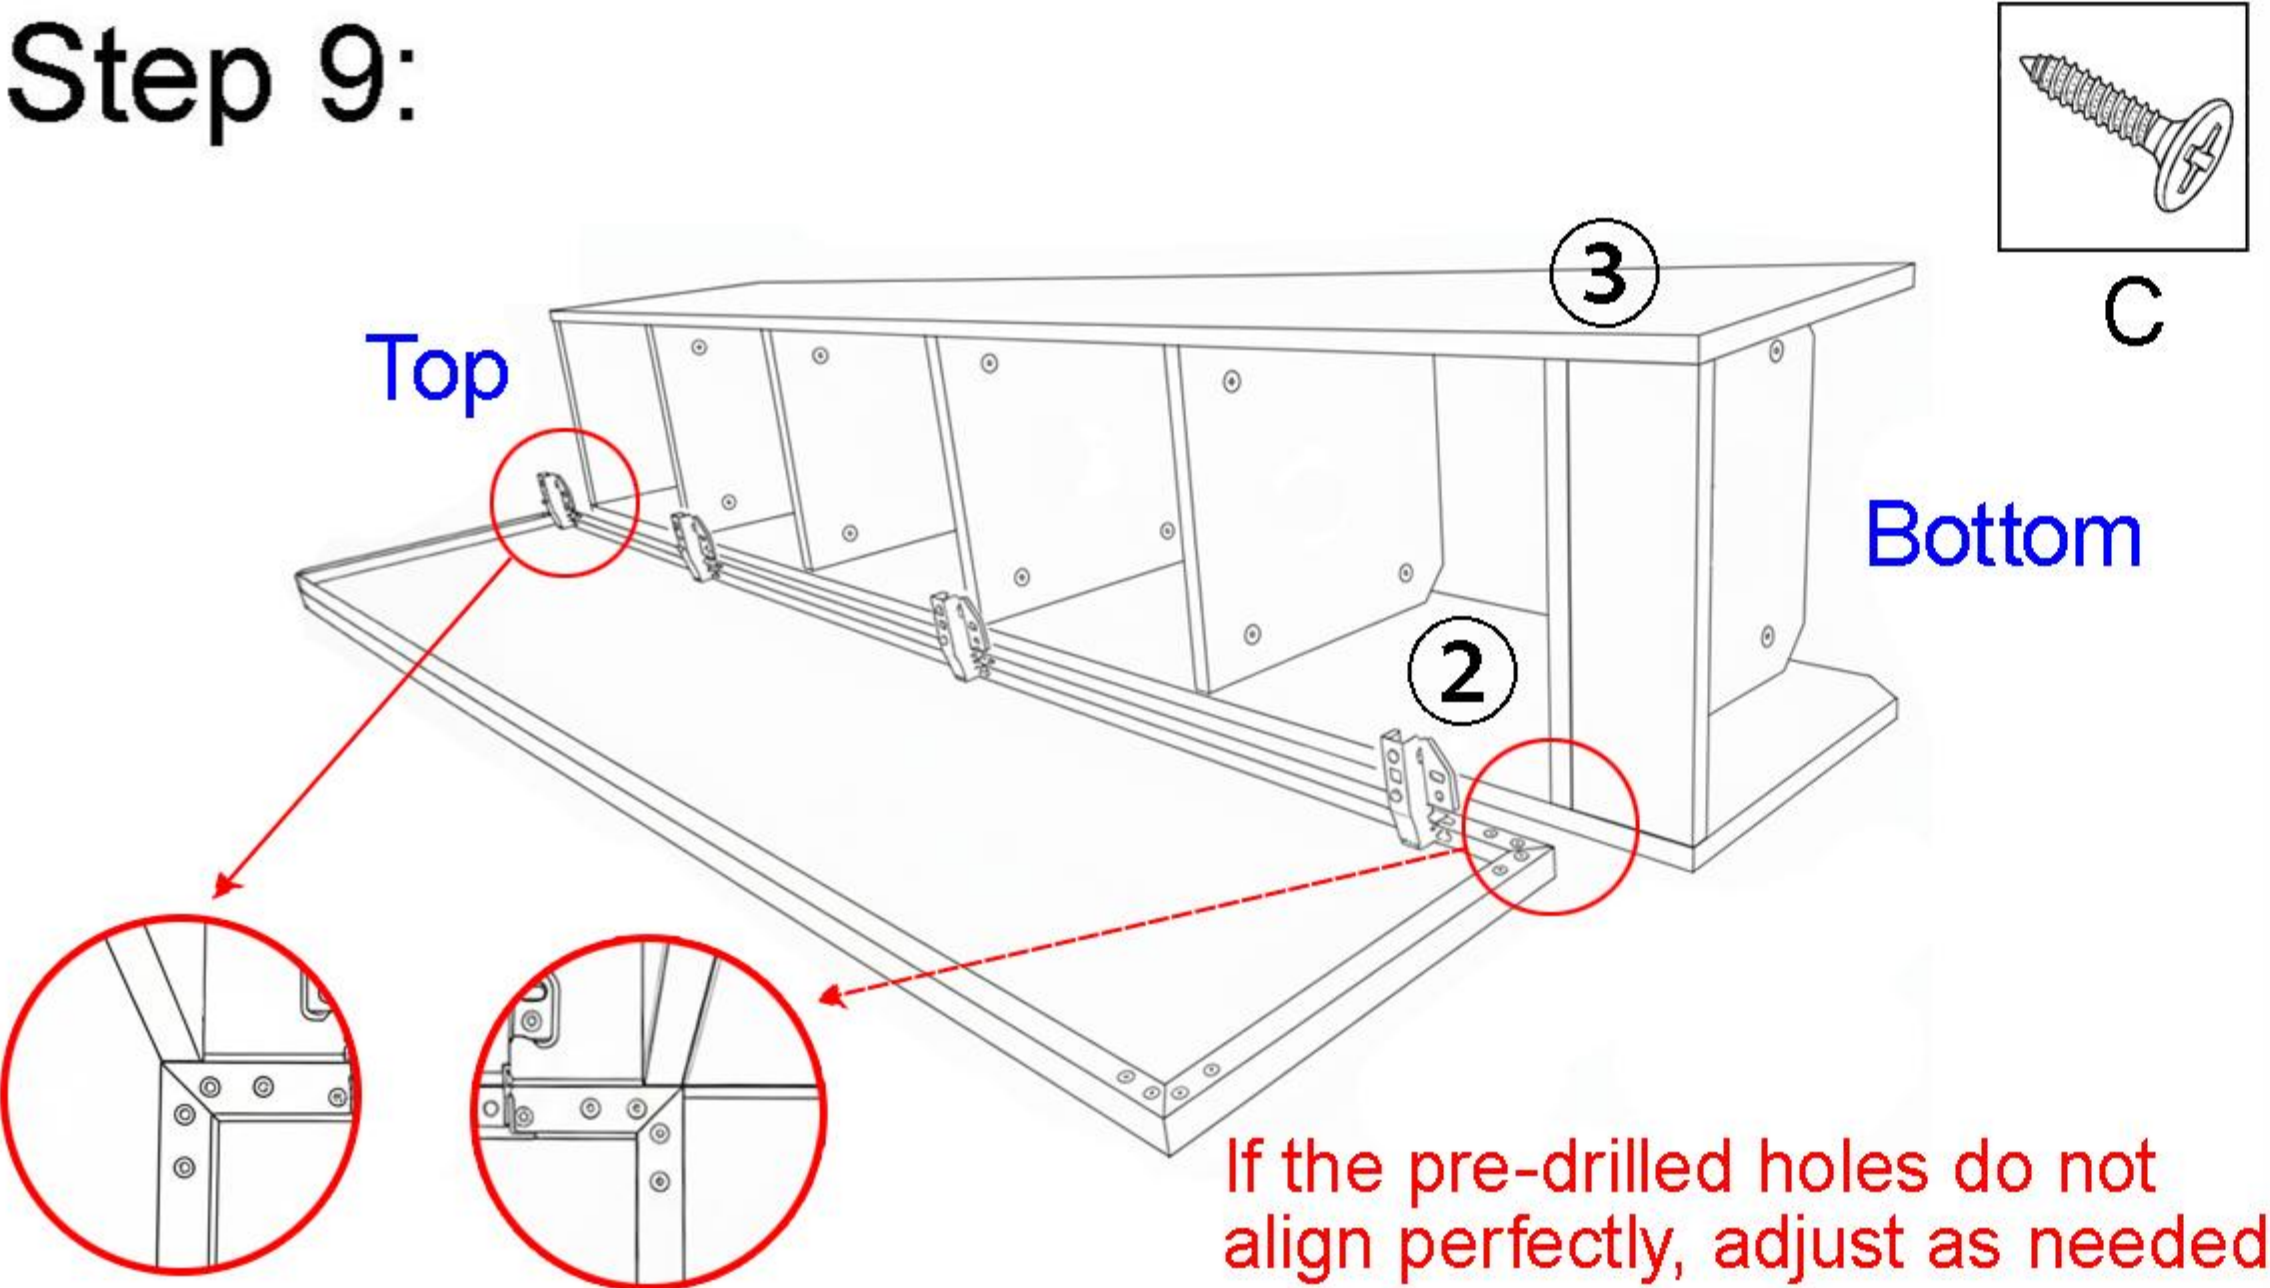

Align the door with the edge and fix it to panel 2 using black screws C.

