

SOCE060

Installation Instruction

Please read this instruction manual carefully before installation and use.



Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:















1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

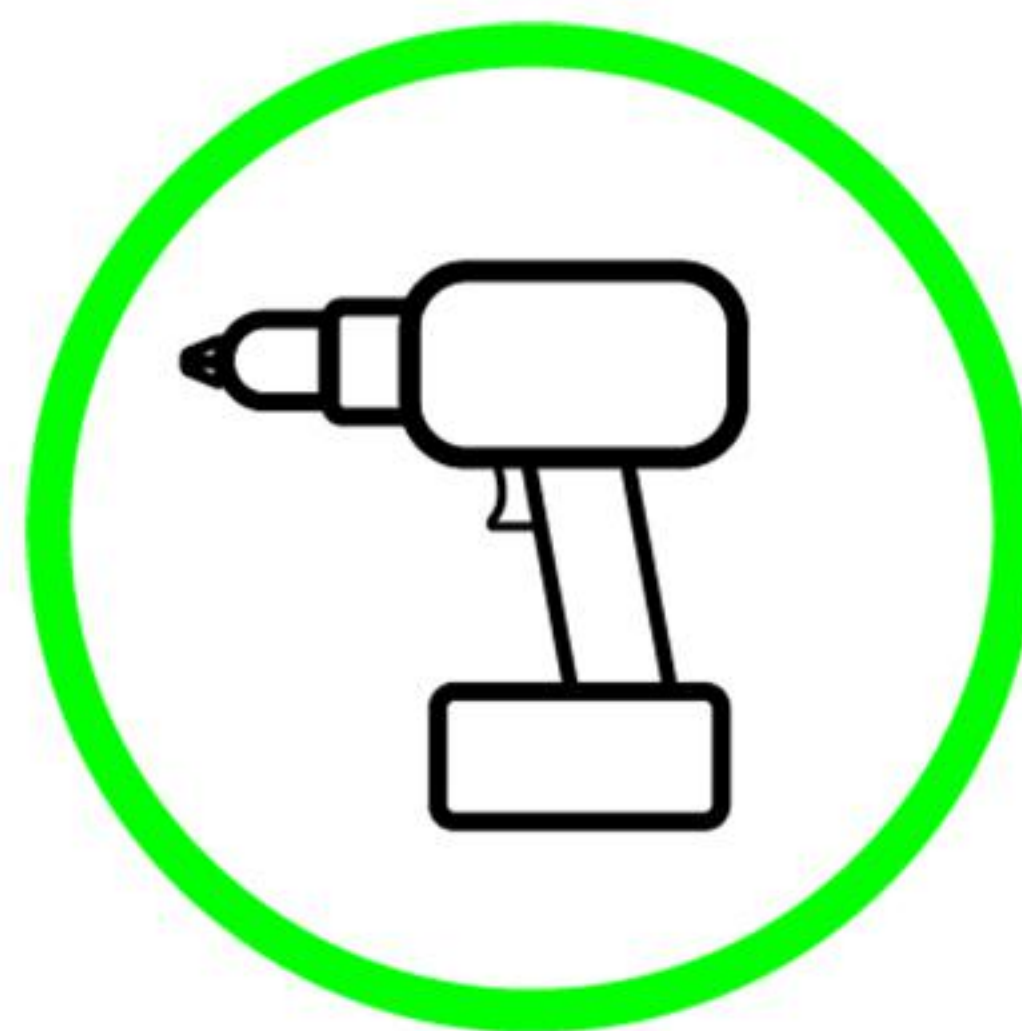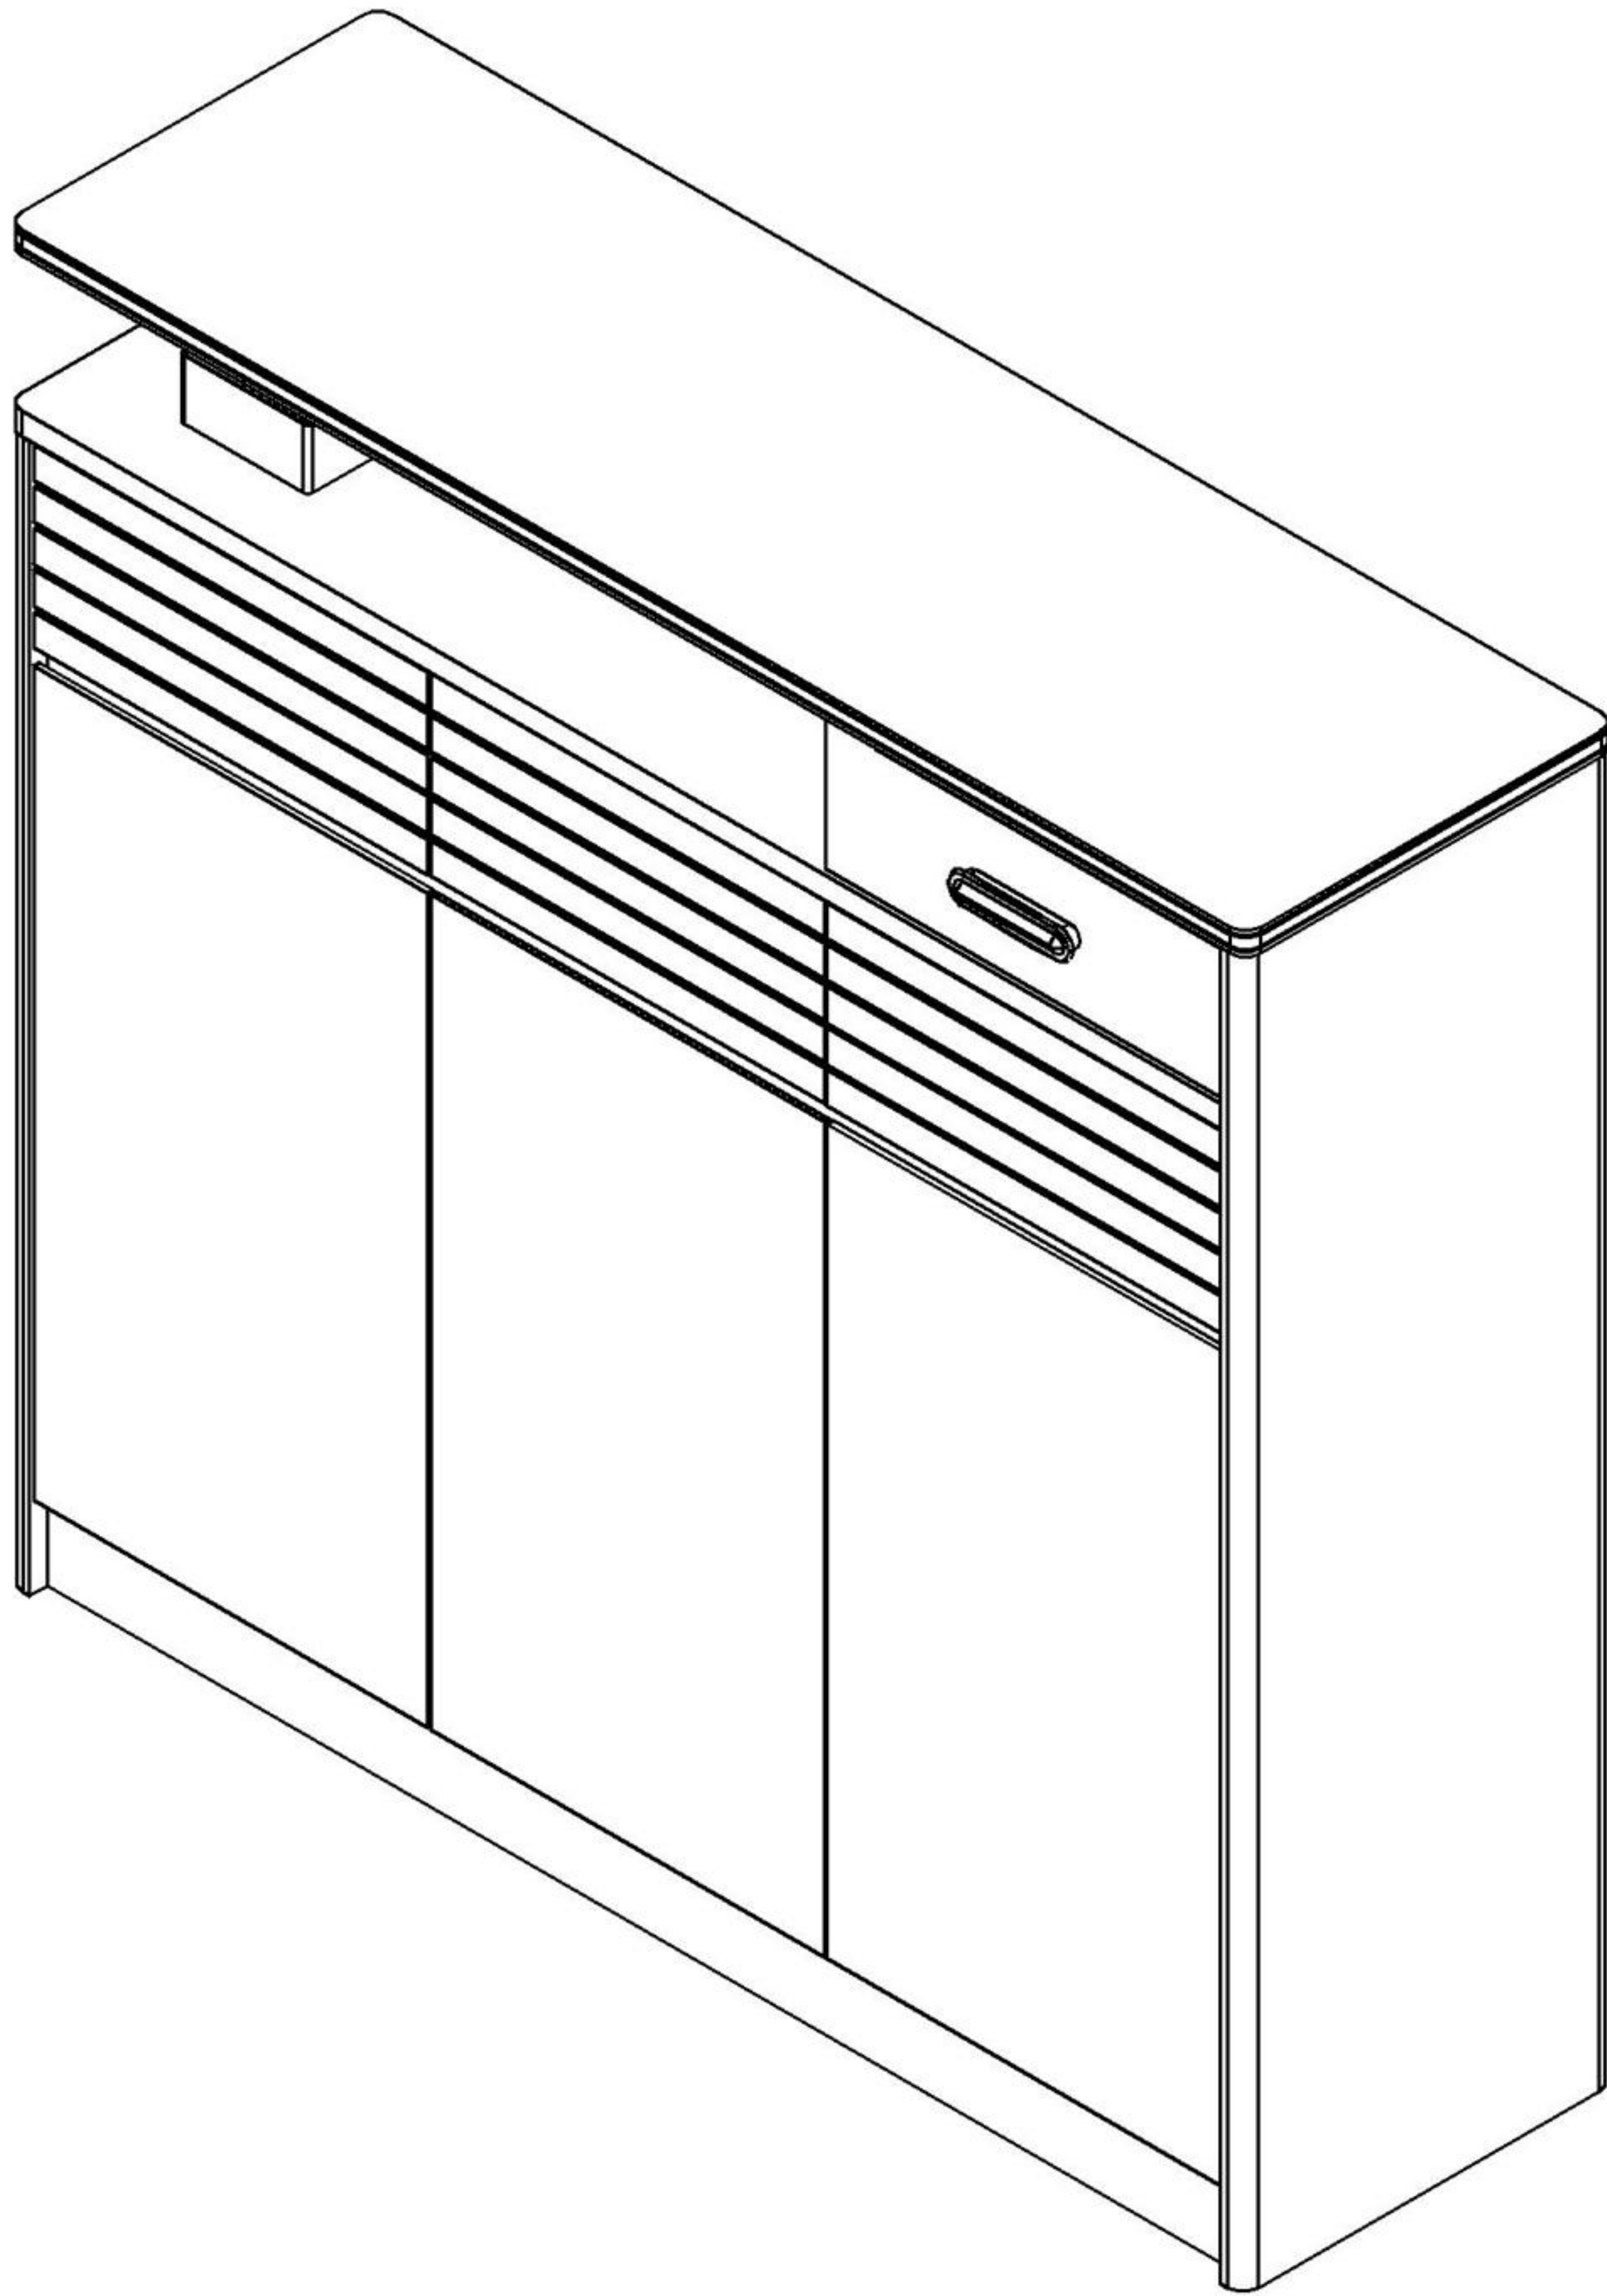


Scan the code to purchase ES001

Hardware List

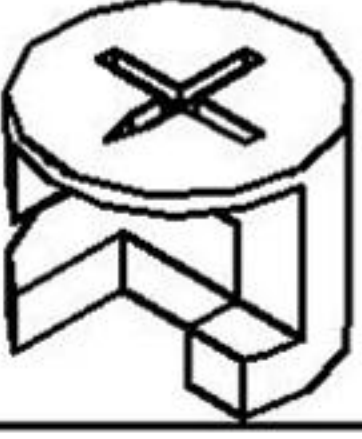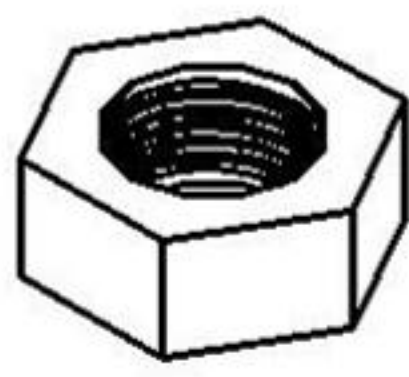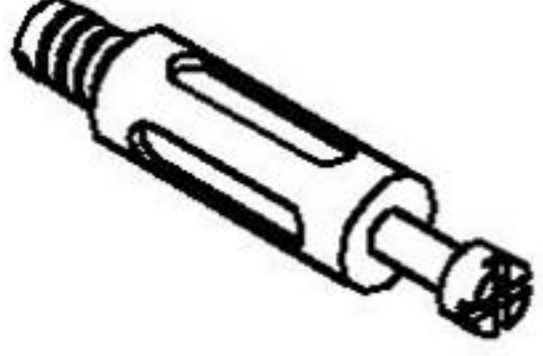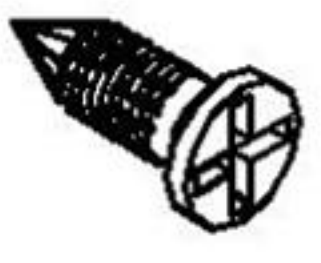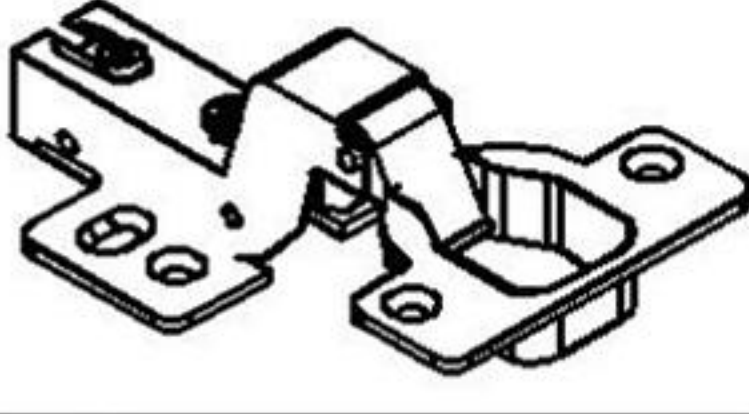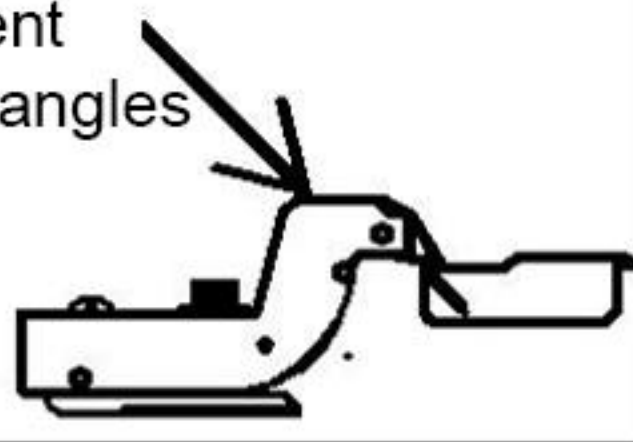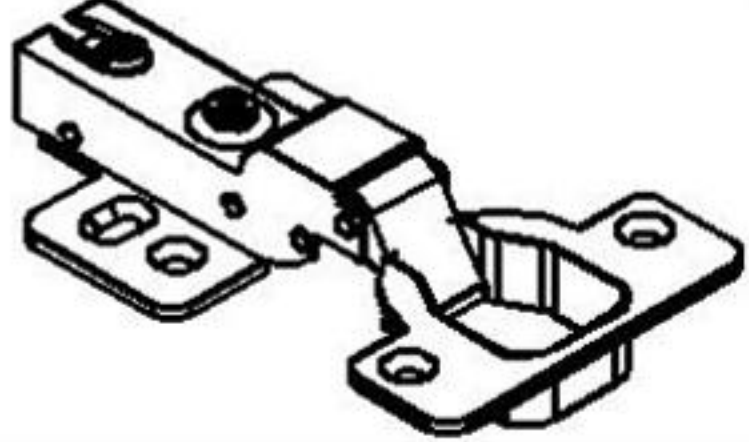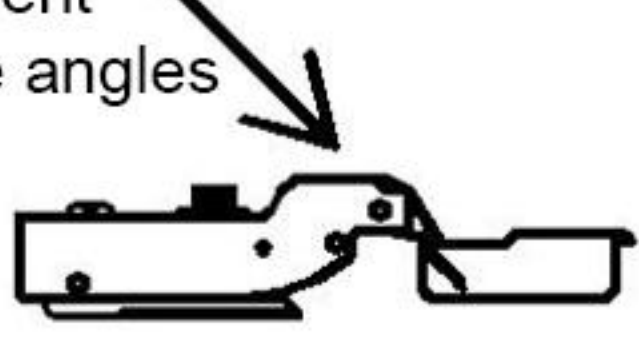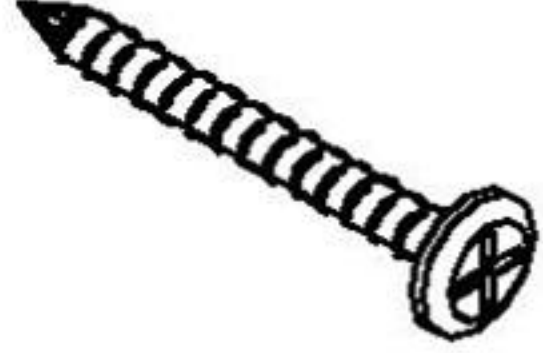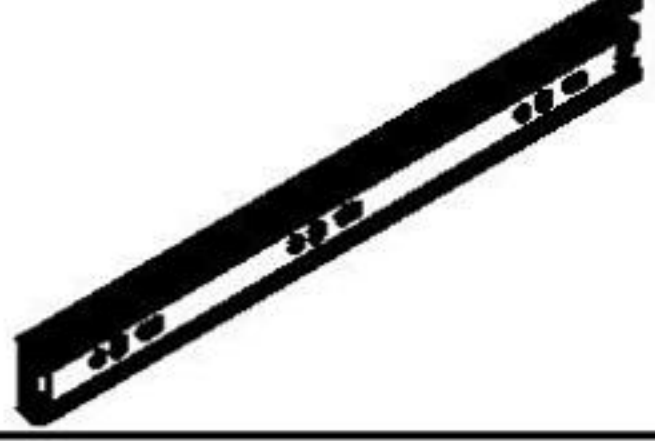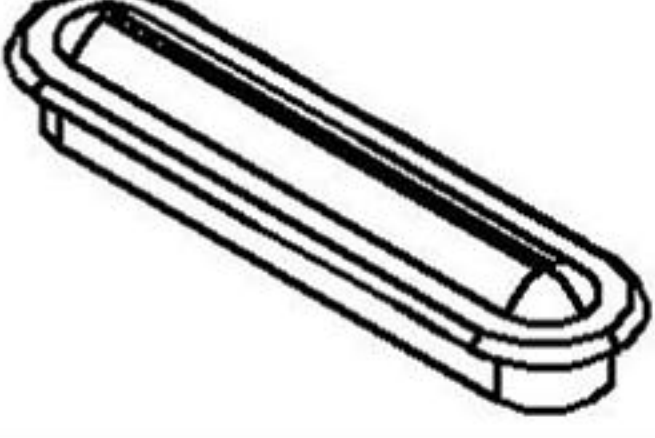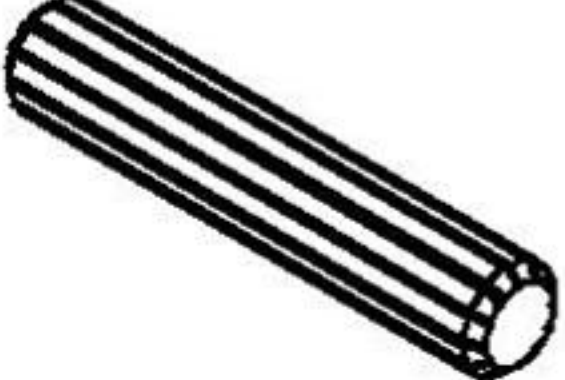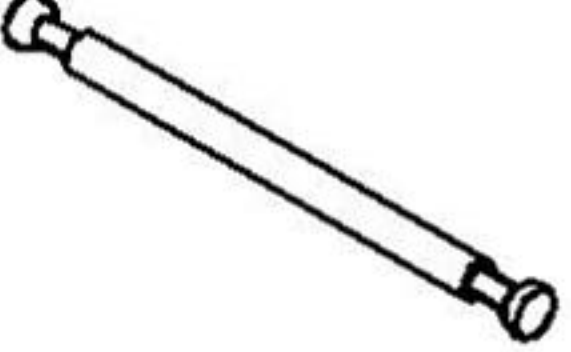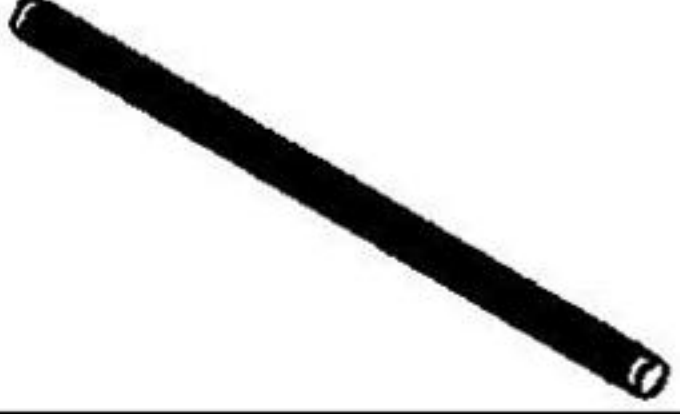Accessory Appearance	Code	Dimensions	Numbers	Unit	Accessory Appearance	Code	Dimensions	Numbers	Unit
	A	∅15*12mm	67	Piece		K	∅8mm	1	Piece
	B	∅7*40mm	63	Piece		L	∅14*4mm	6	Piece
	C Blue	∅3.5*12mm	32	Piece		M	Different hinge angles 	8	Piece
	D Gold	∅3.5*15mm	96	Piece		N	Different hinge angles 	4	Piece
	E	∅3.5*40mm	16	Piece		O	290*35mm	4	Pair
	F	∅4*20mm	4	Piece		P	64mm	2	Piece
	G	∅8*40mm	2	Piece					
	H	∅5*25mm	16	Piece					
	I	∅6*80mm	2	Piece					
	J	∅8*180mm	1	Piece					


Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

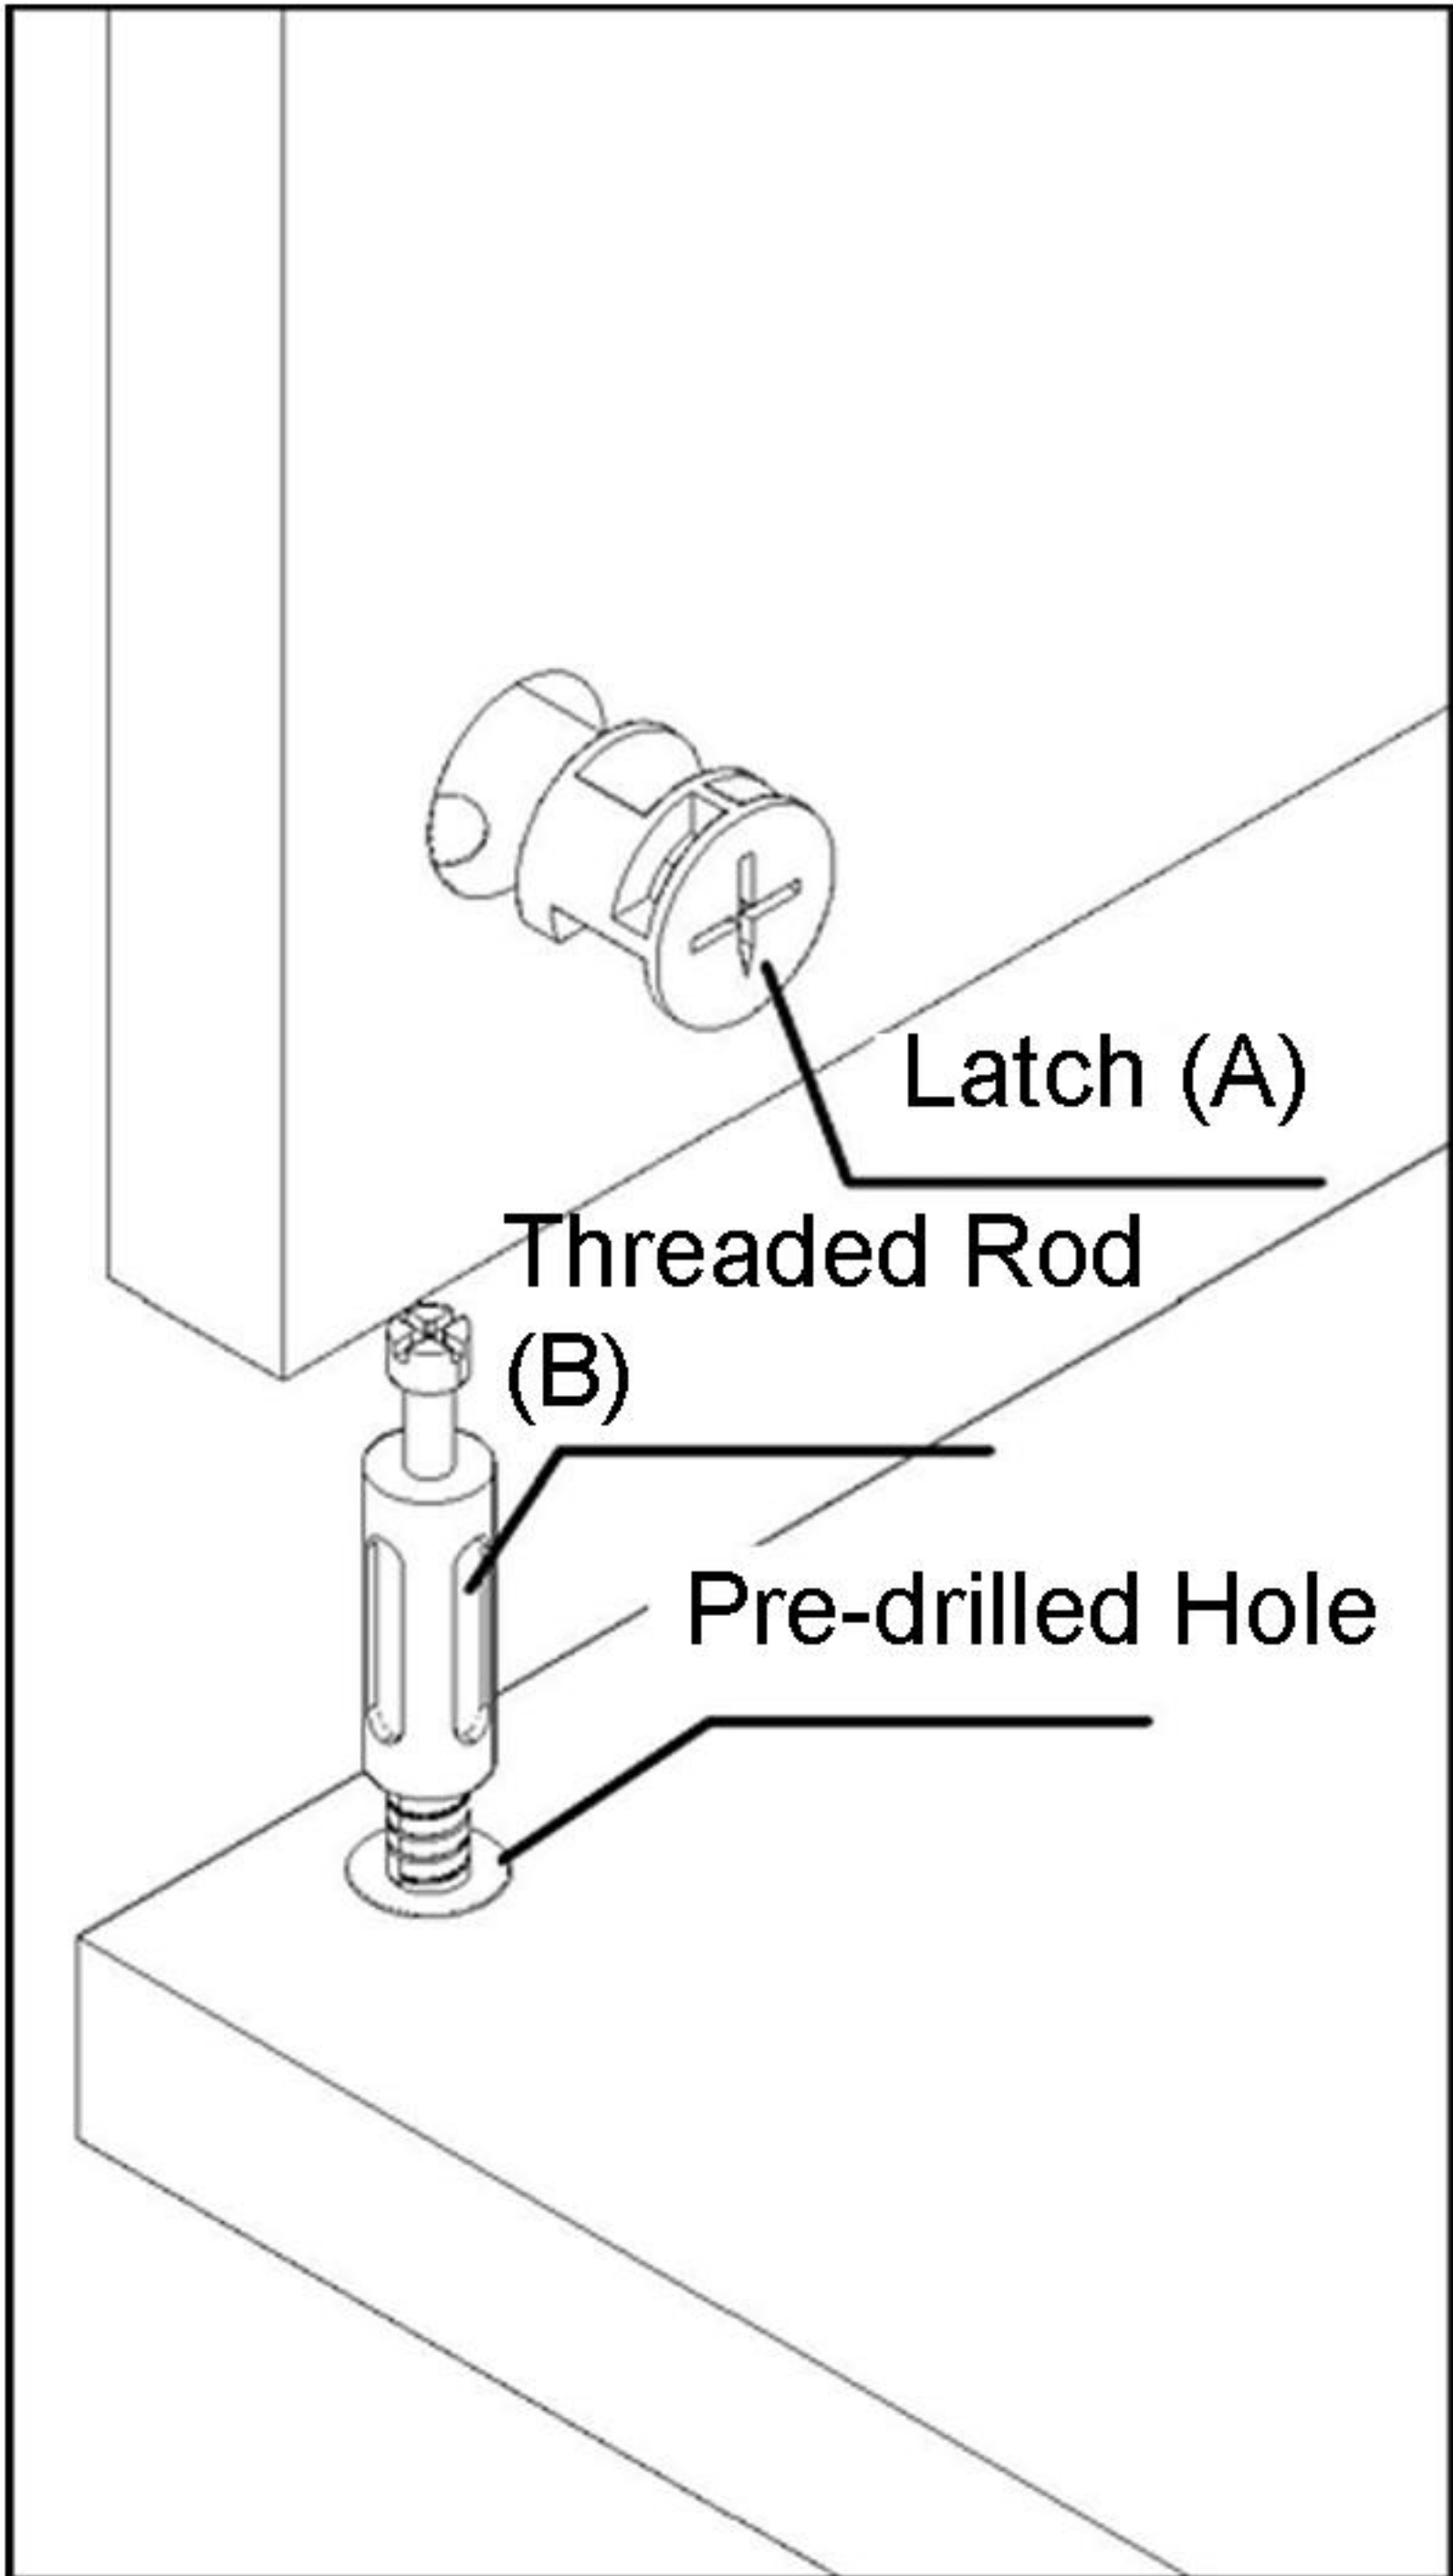

- 1. Screw the B (Threaded Rod) into the Pre-drilled Hole
- 2. Insert the installed A into the corresponding hole of the other piece. Press A (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
- 3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.


O (Sliding Rail) Installation Instructions
When installing O, use with screw C (Blue)






1, Separate O (Sliding Rail)

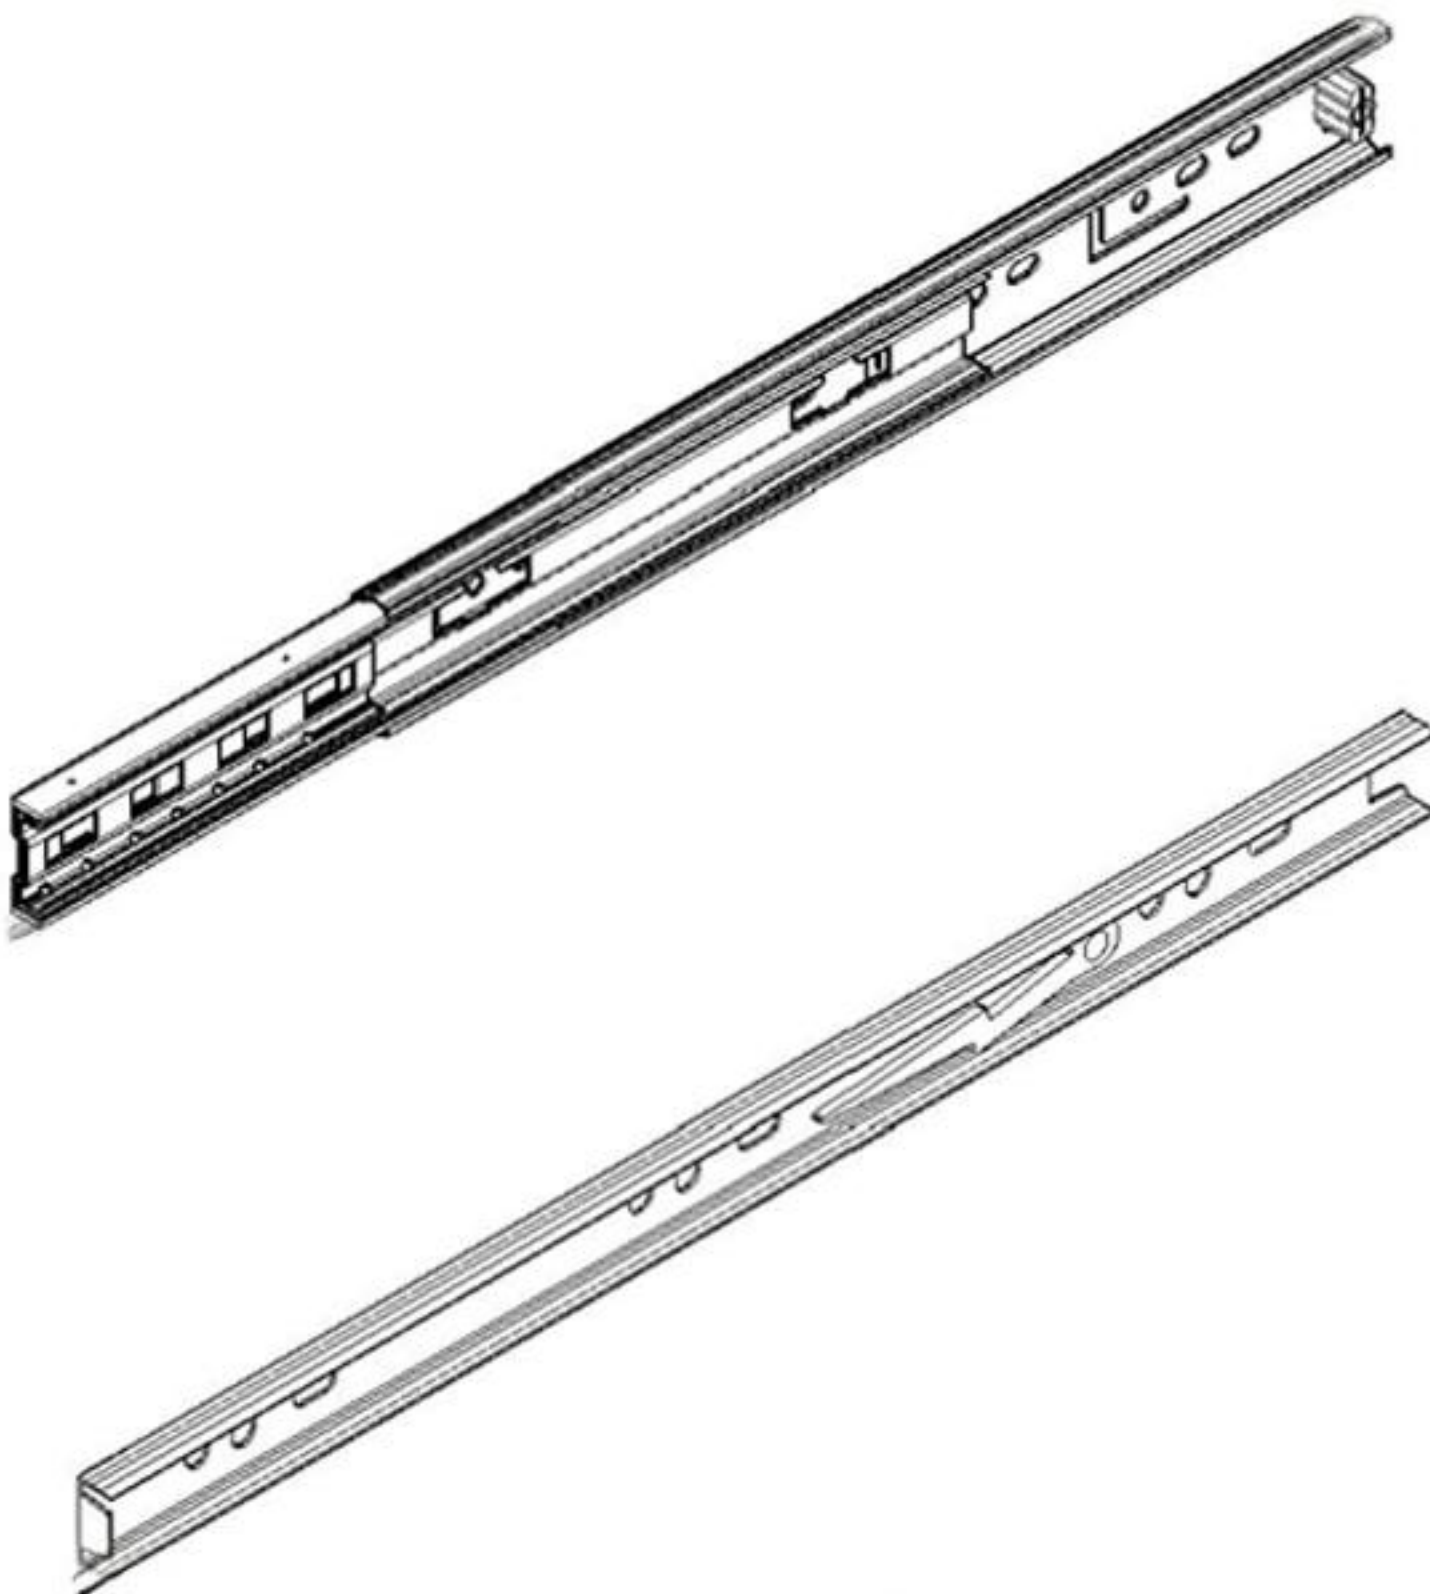

The main body part

The pull-out part

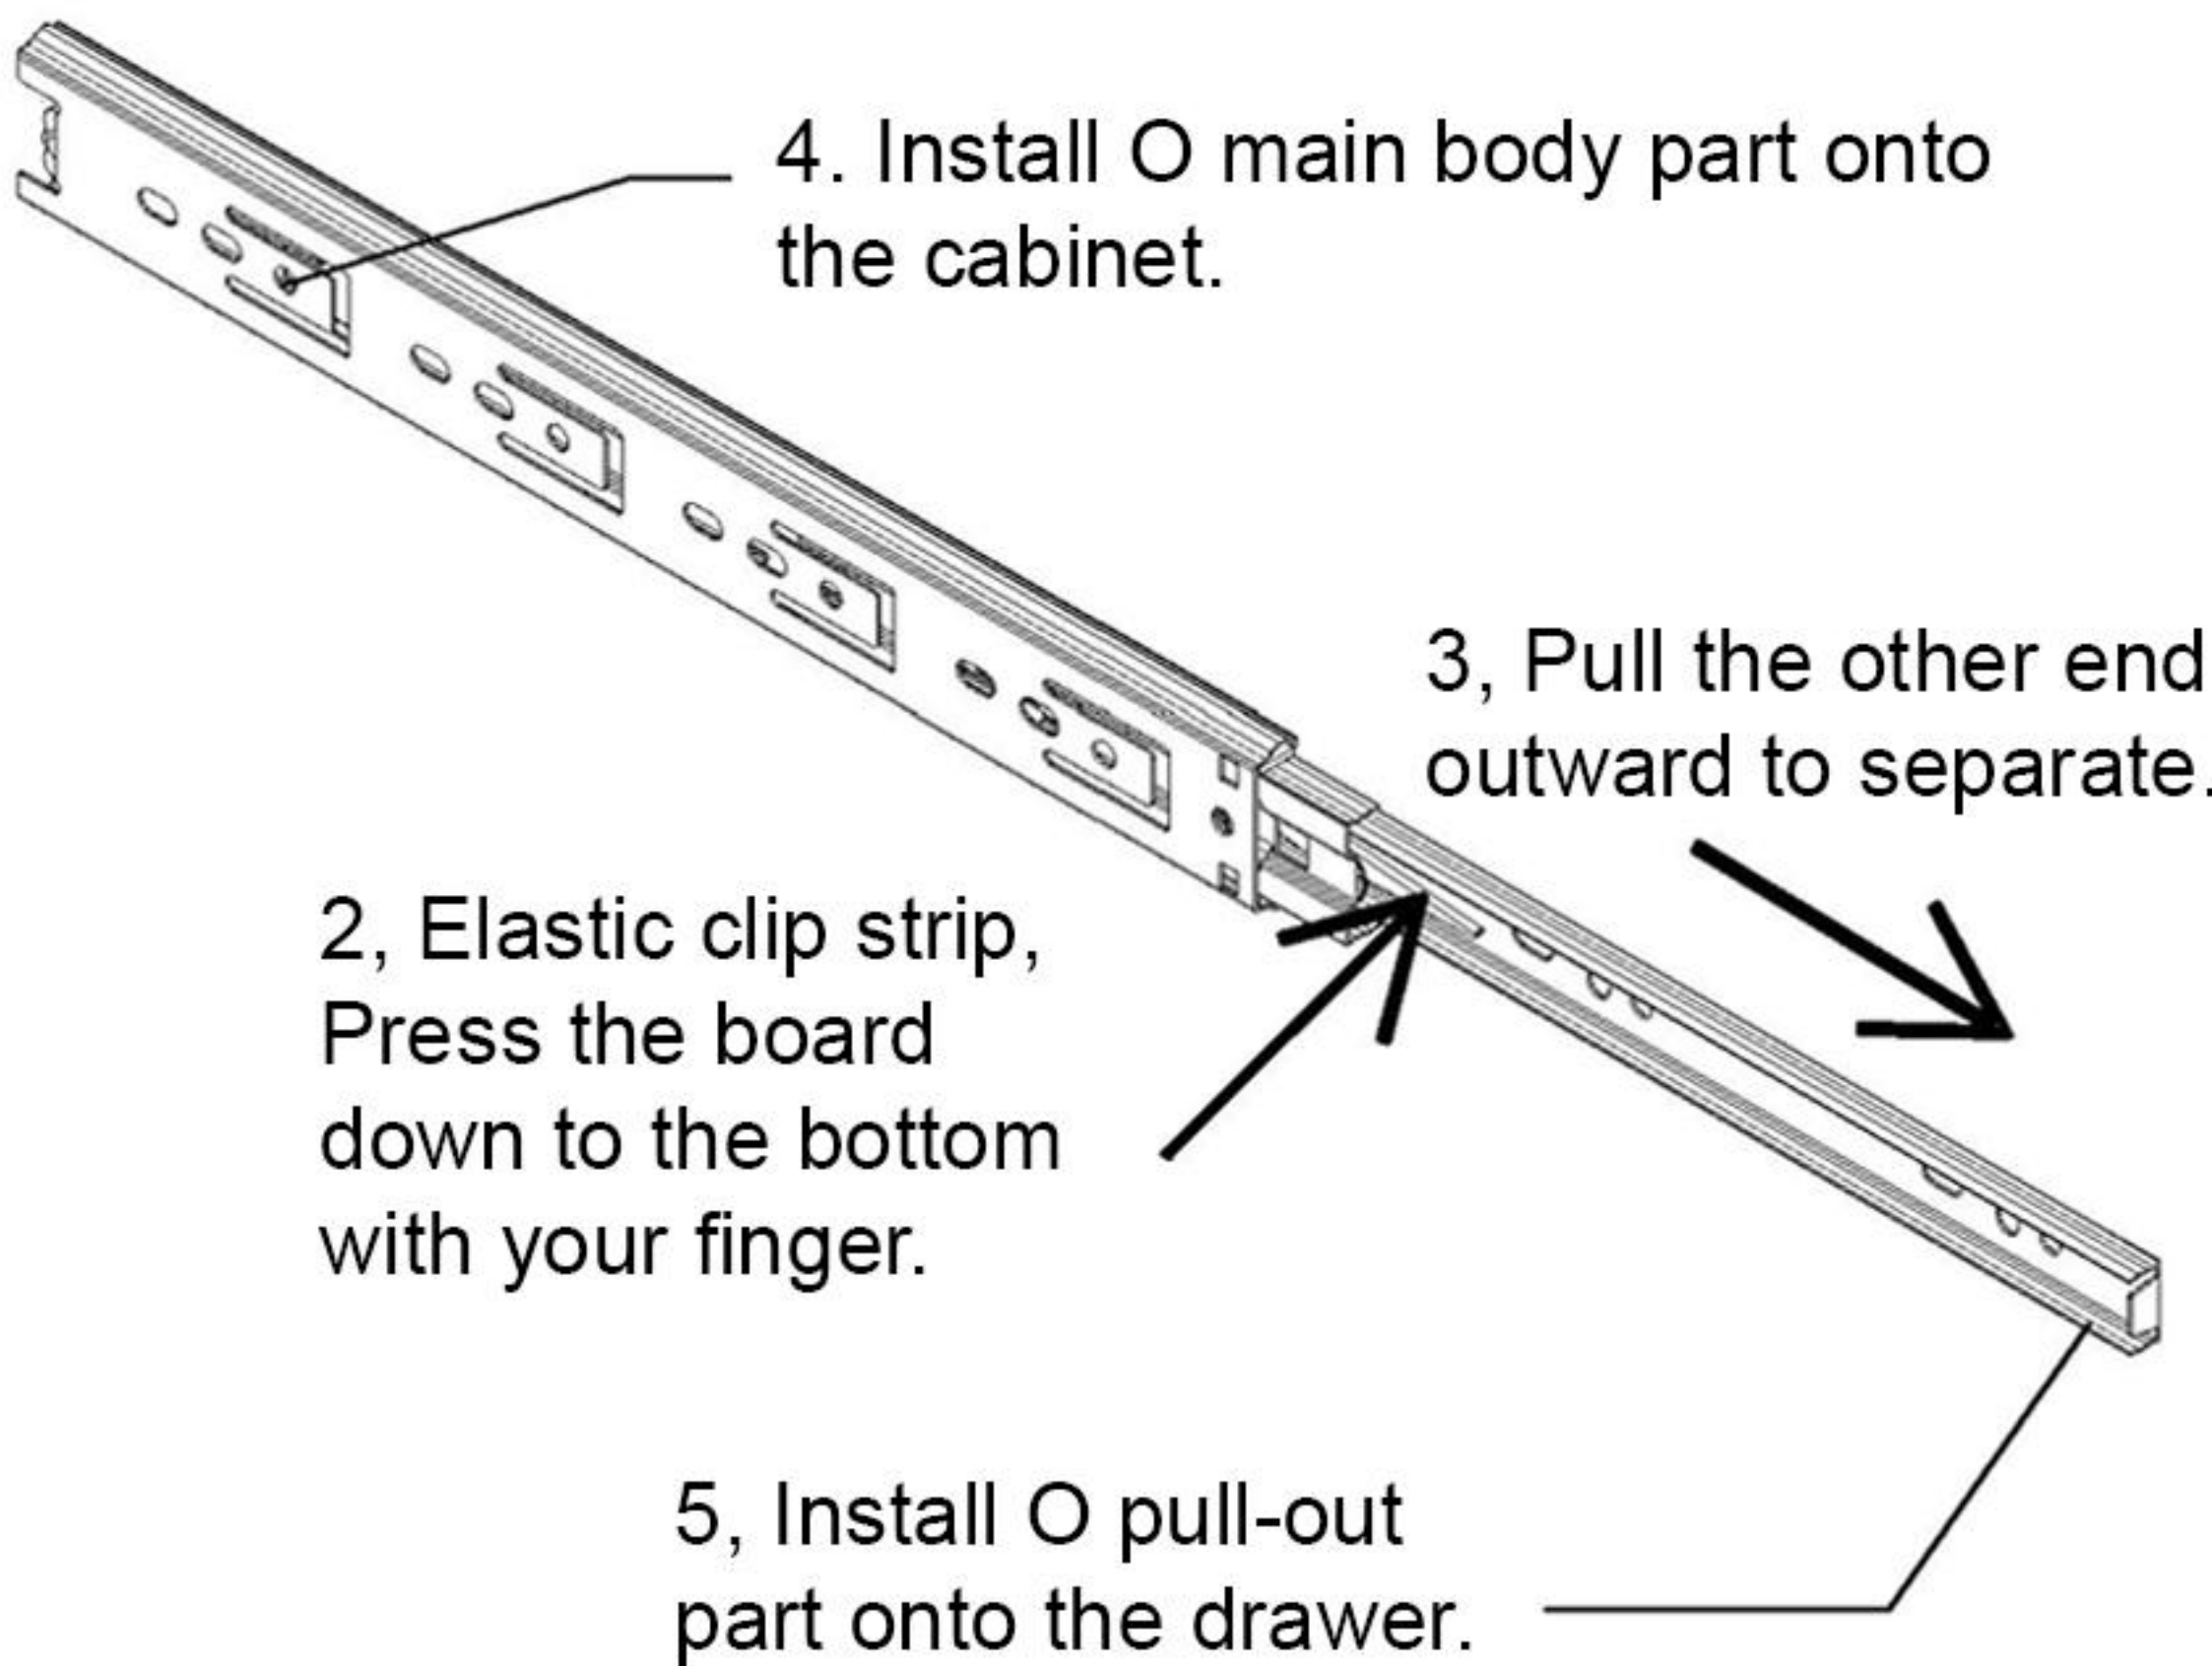


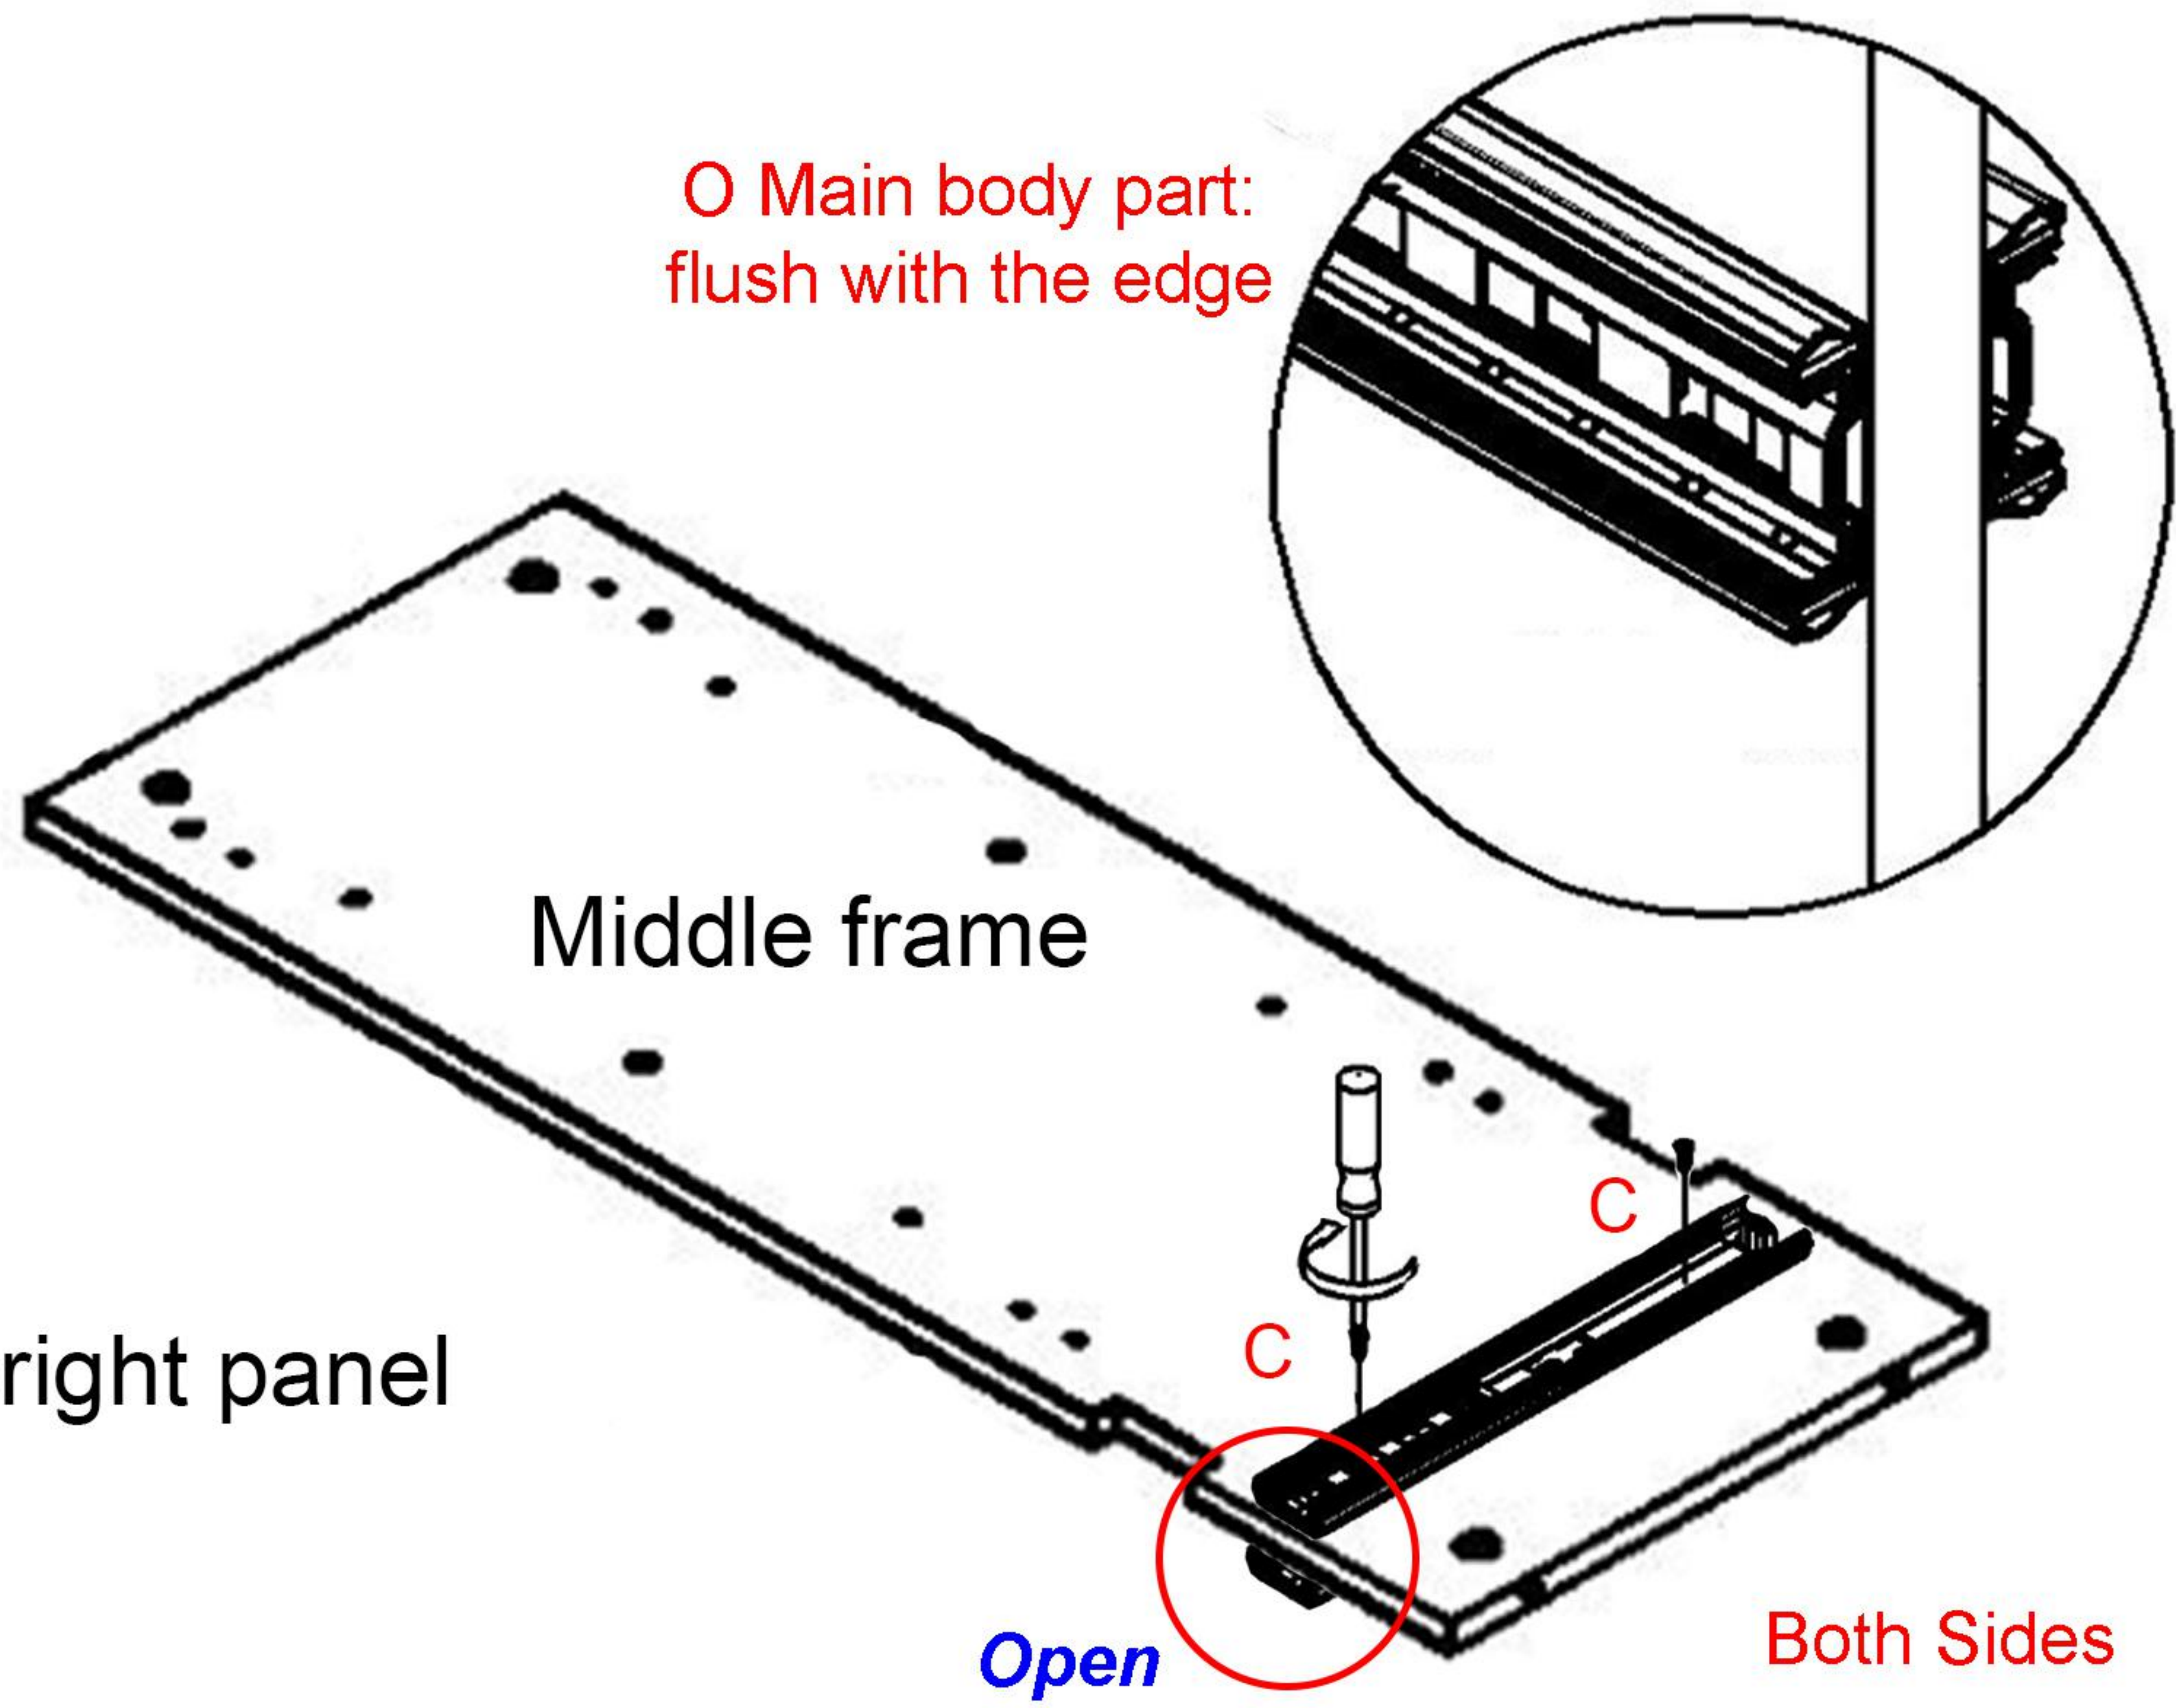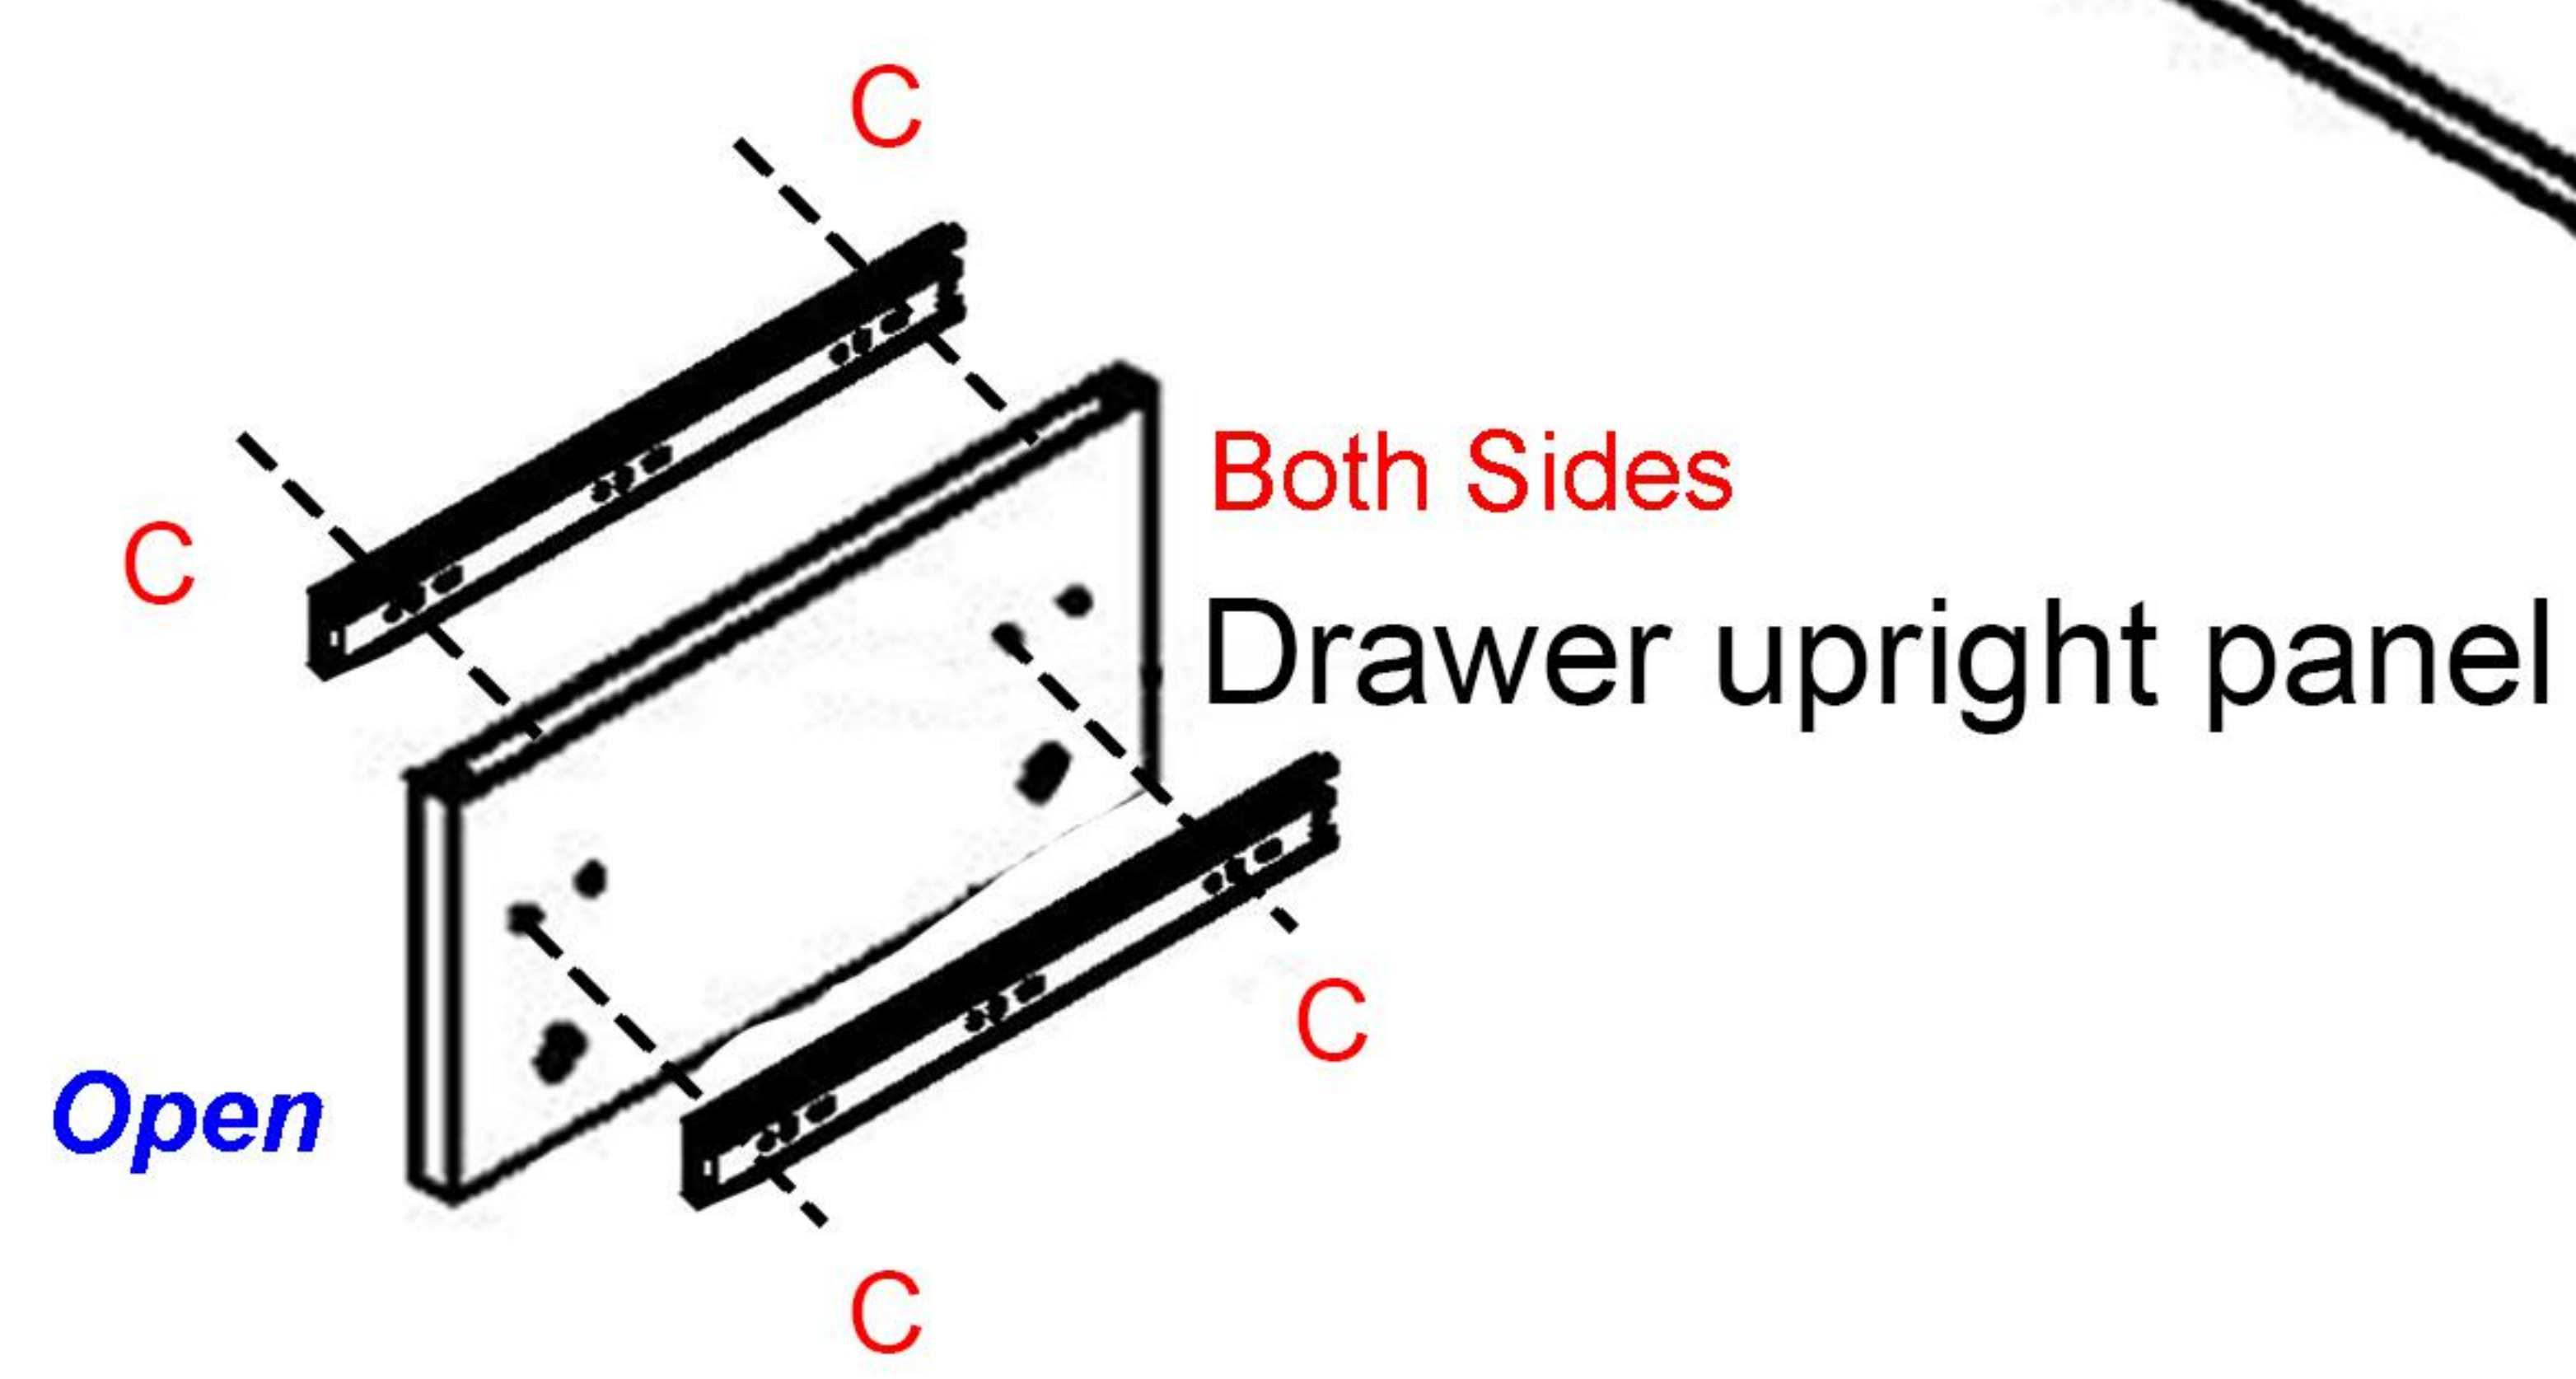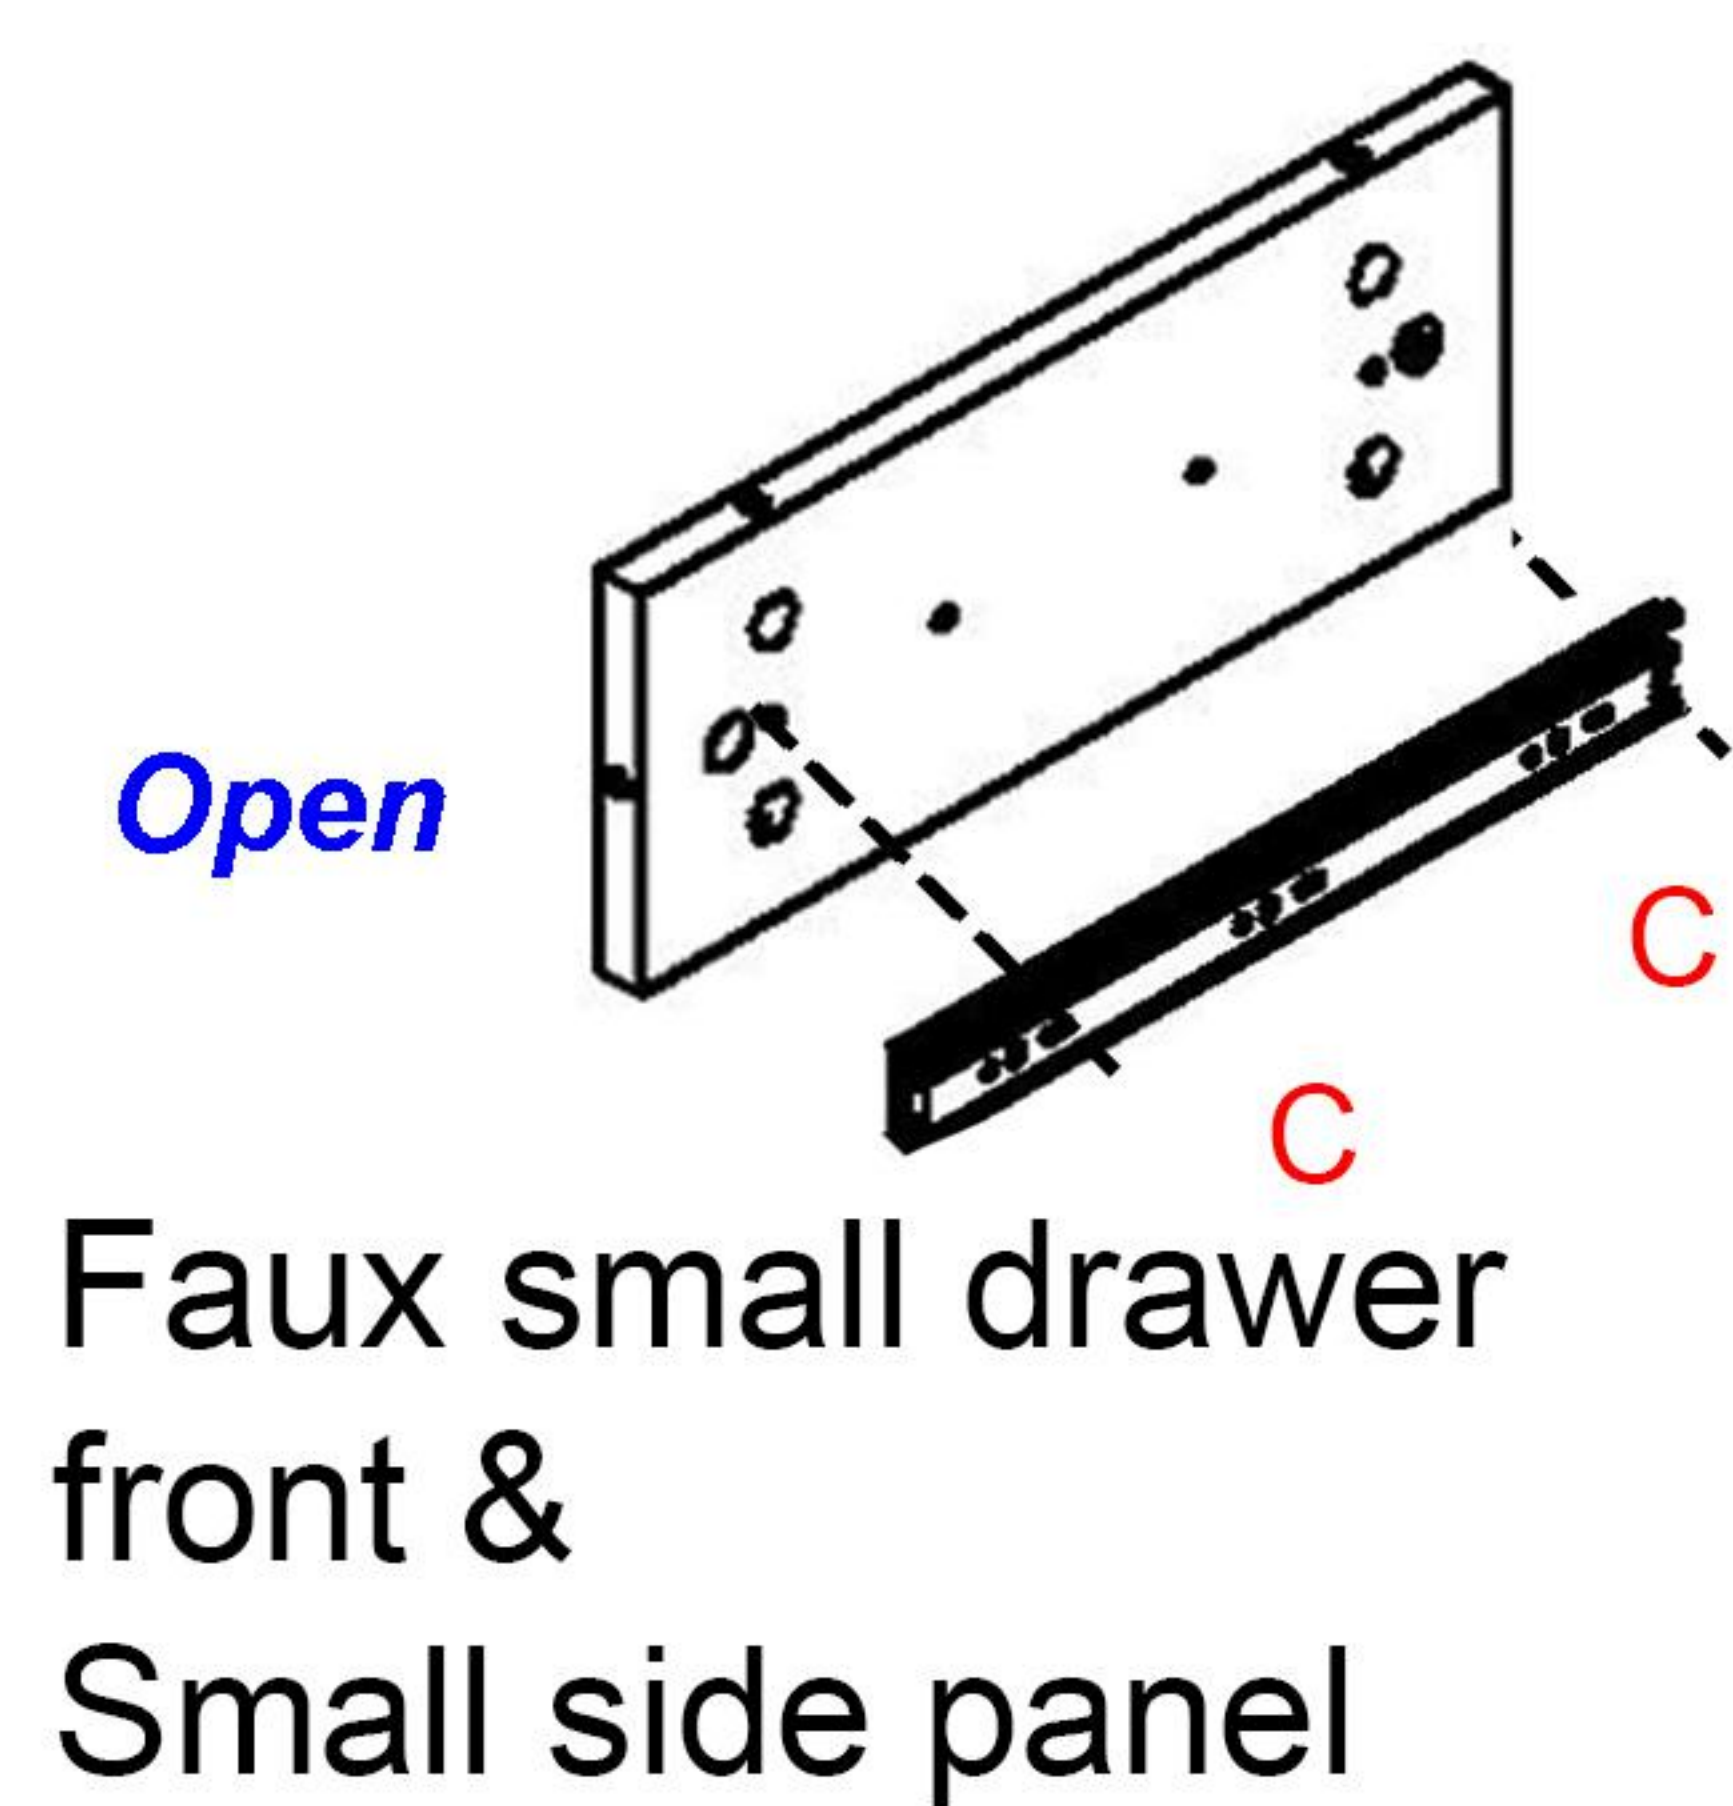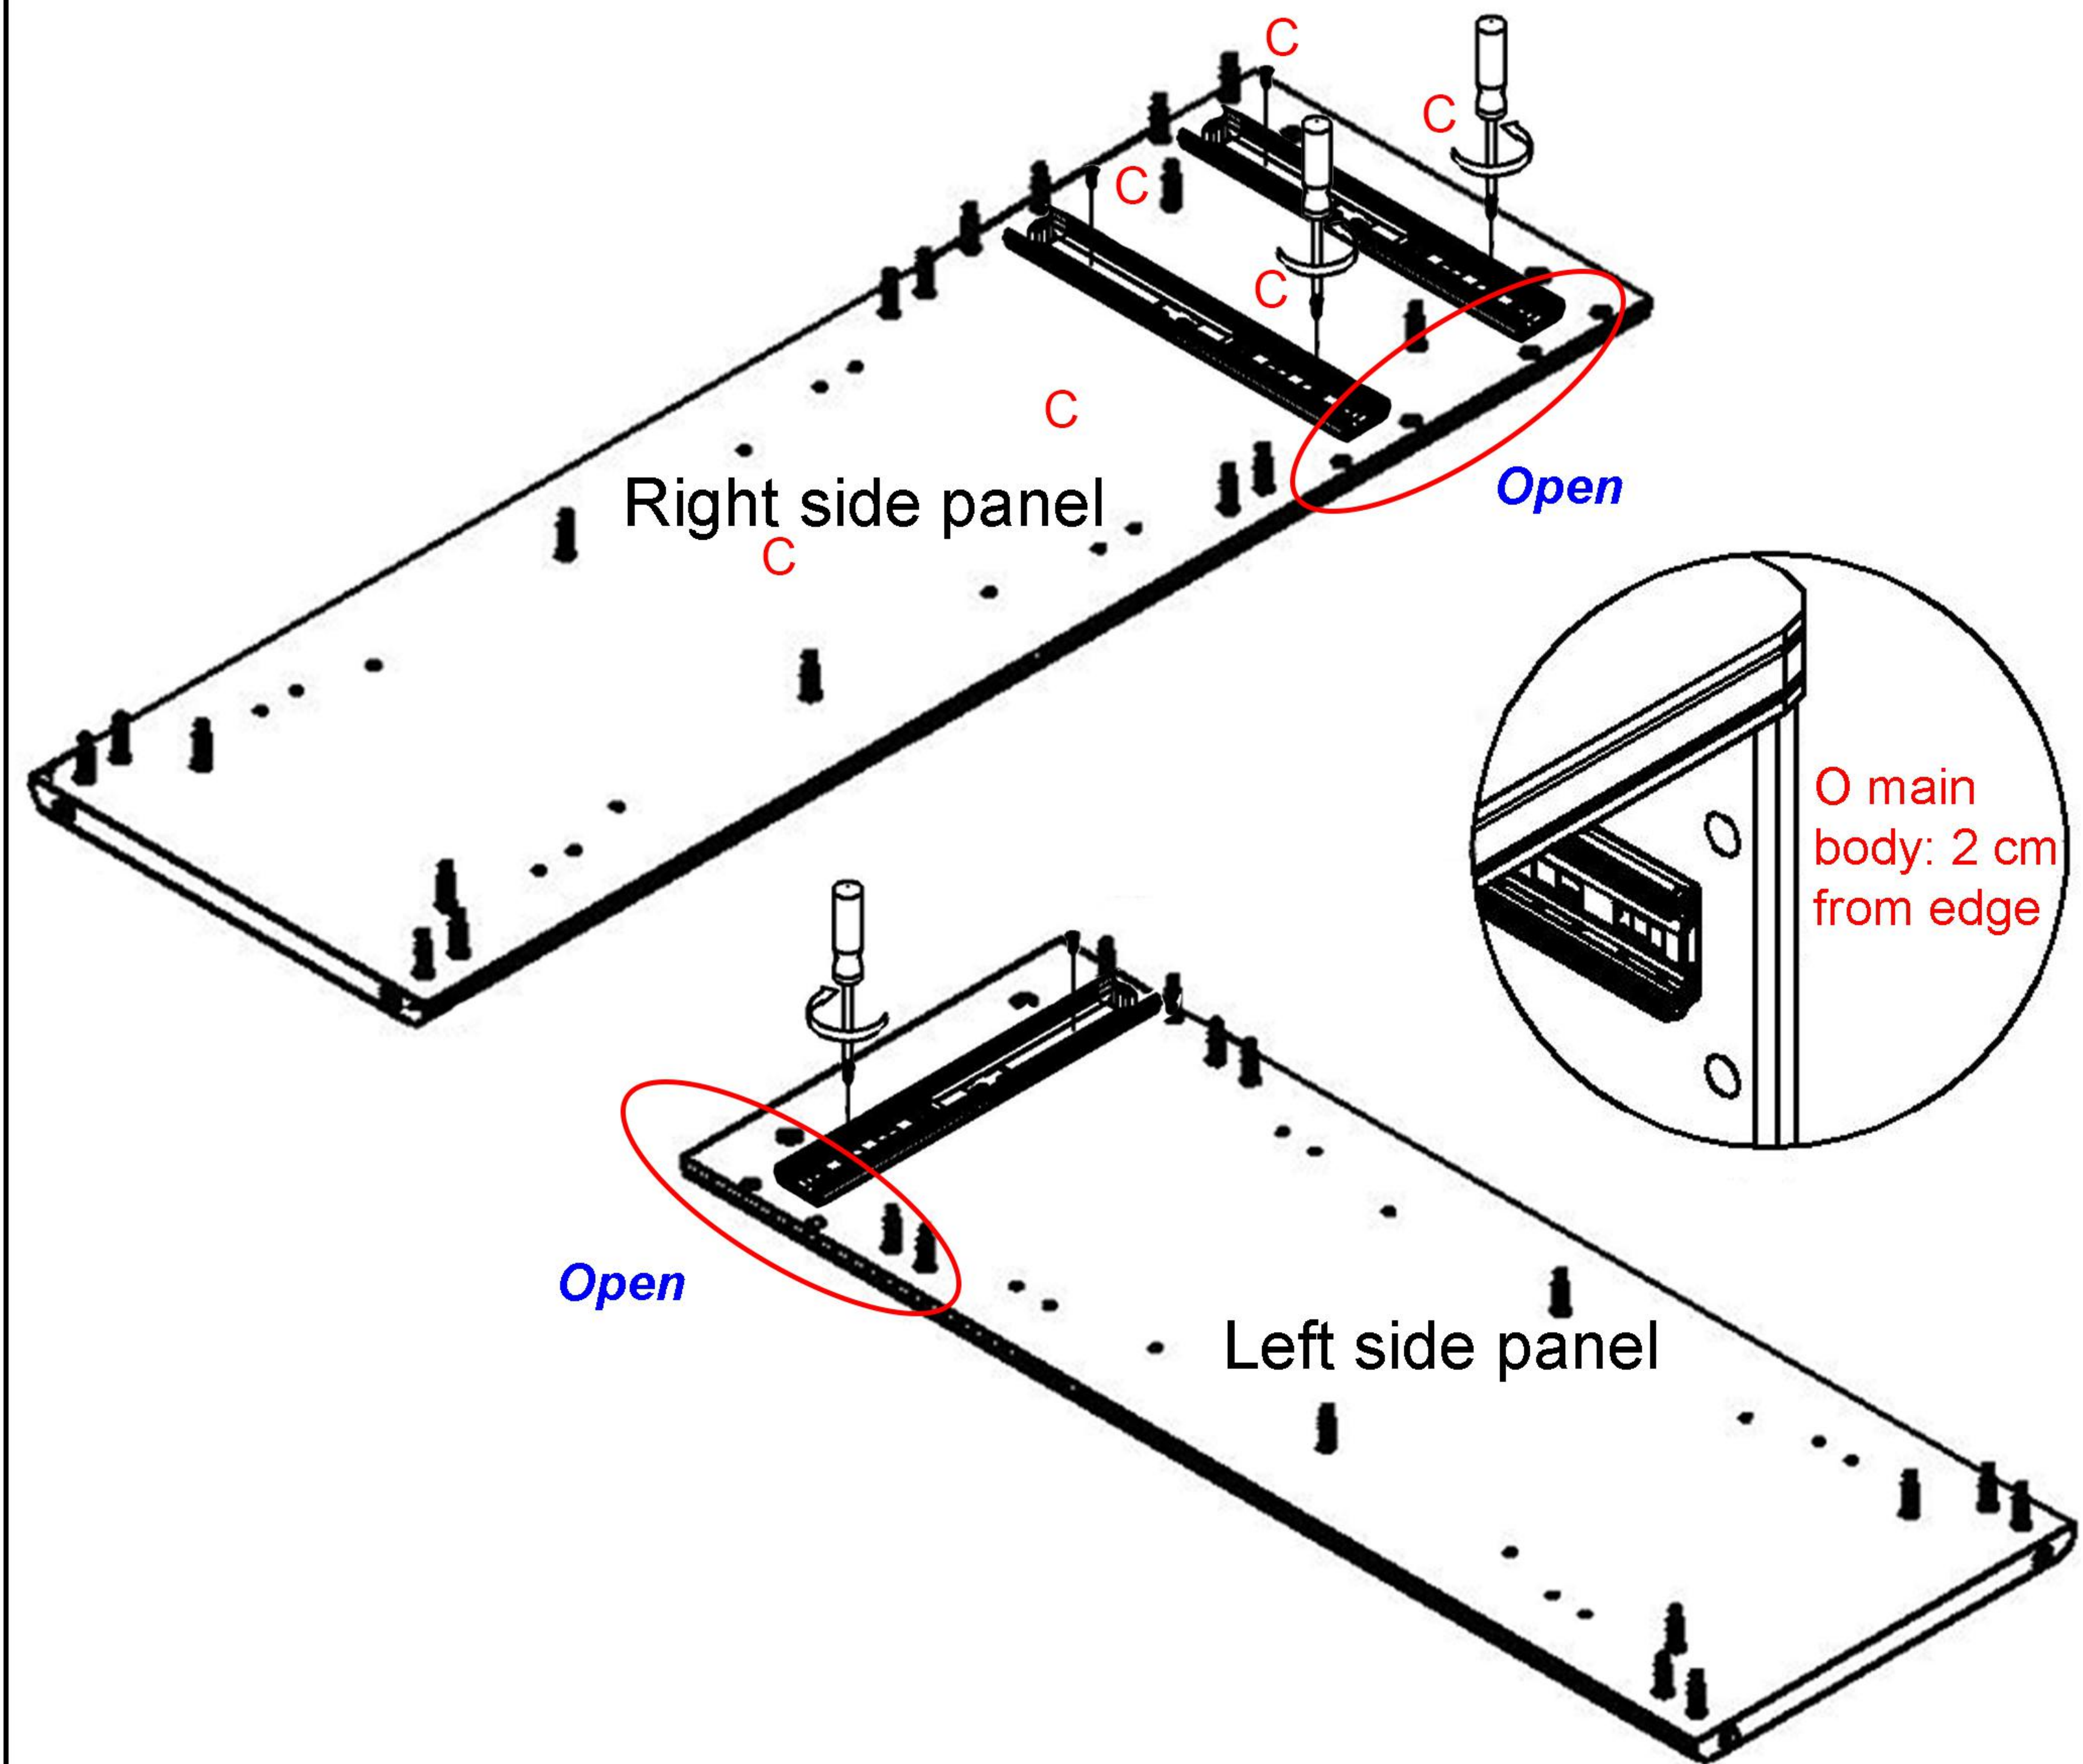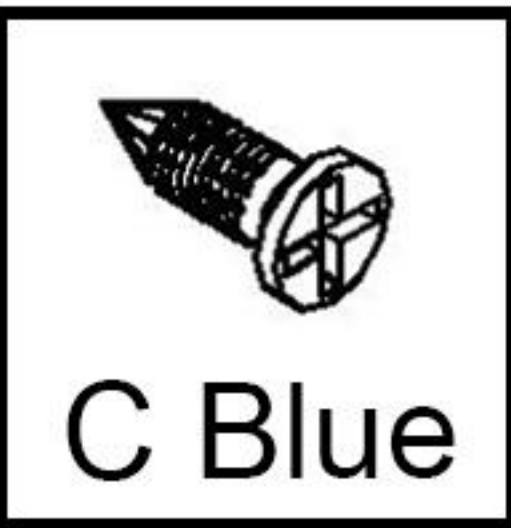


Detailed description of the main components, please read carefully

M / N (Hinge) Installation Instructions

Install the hinge with screw **D**

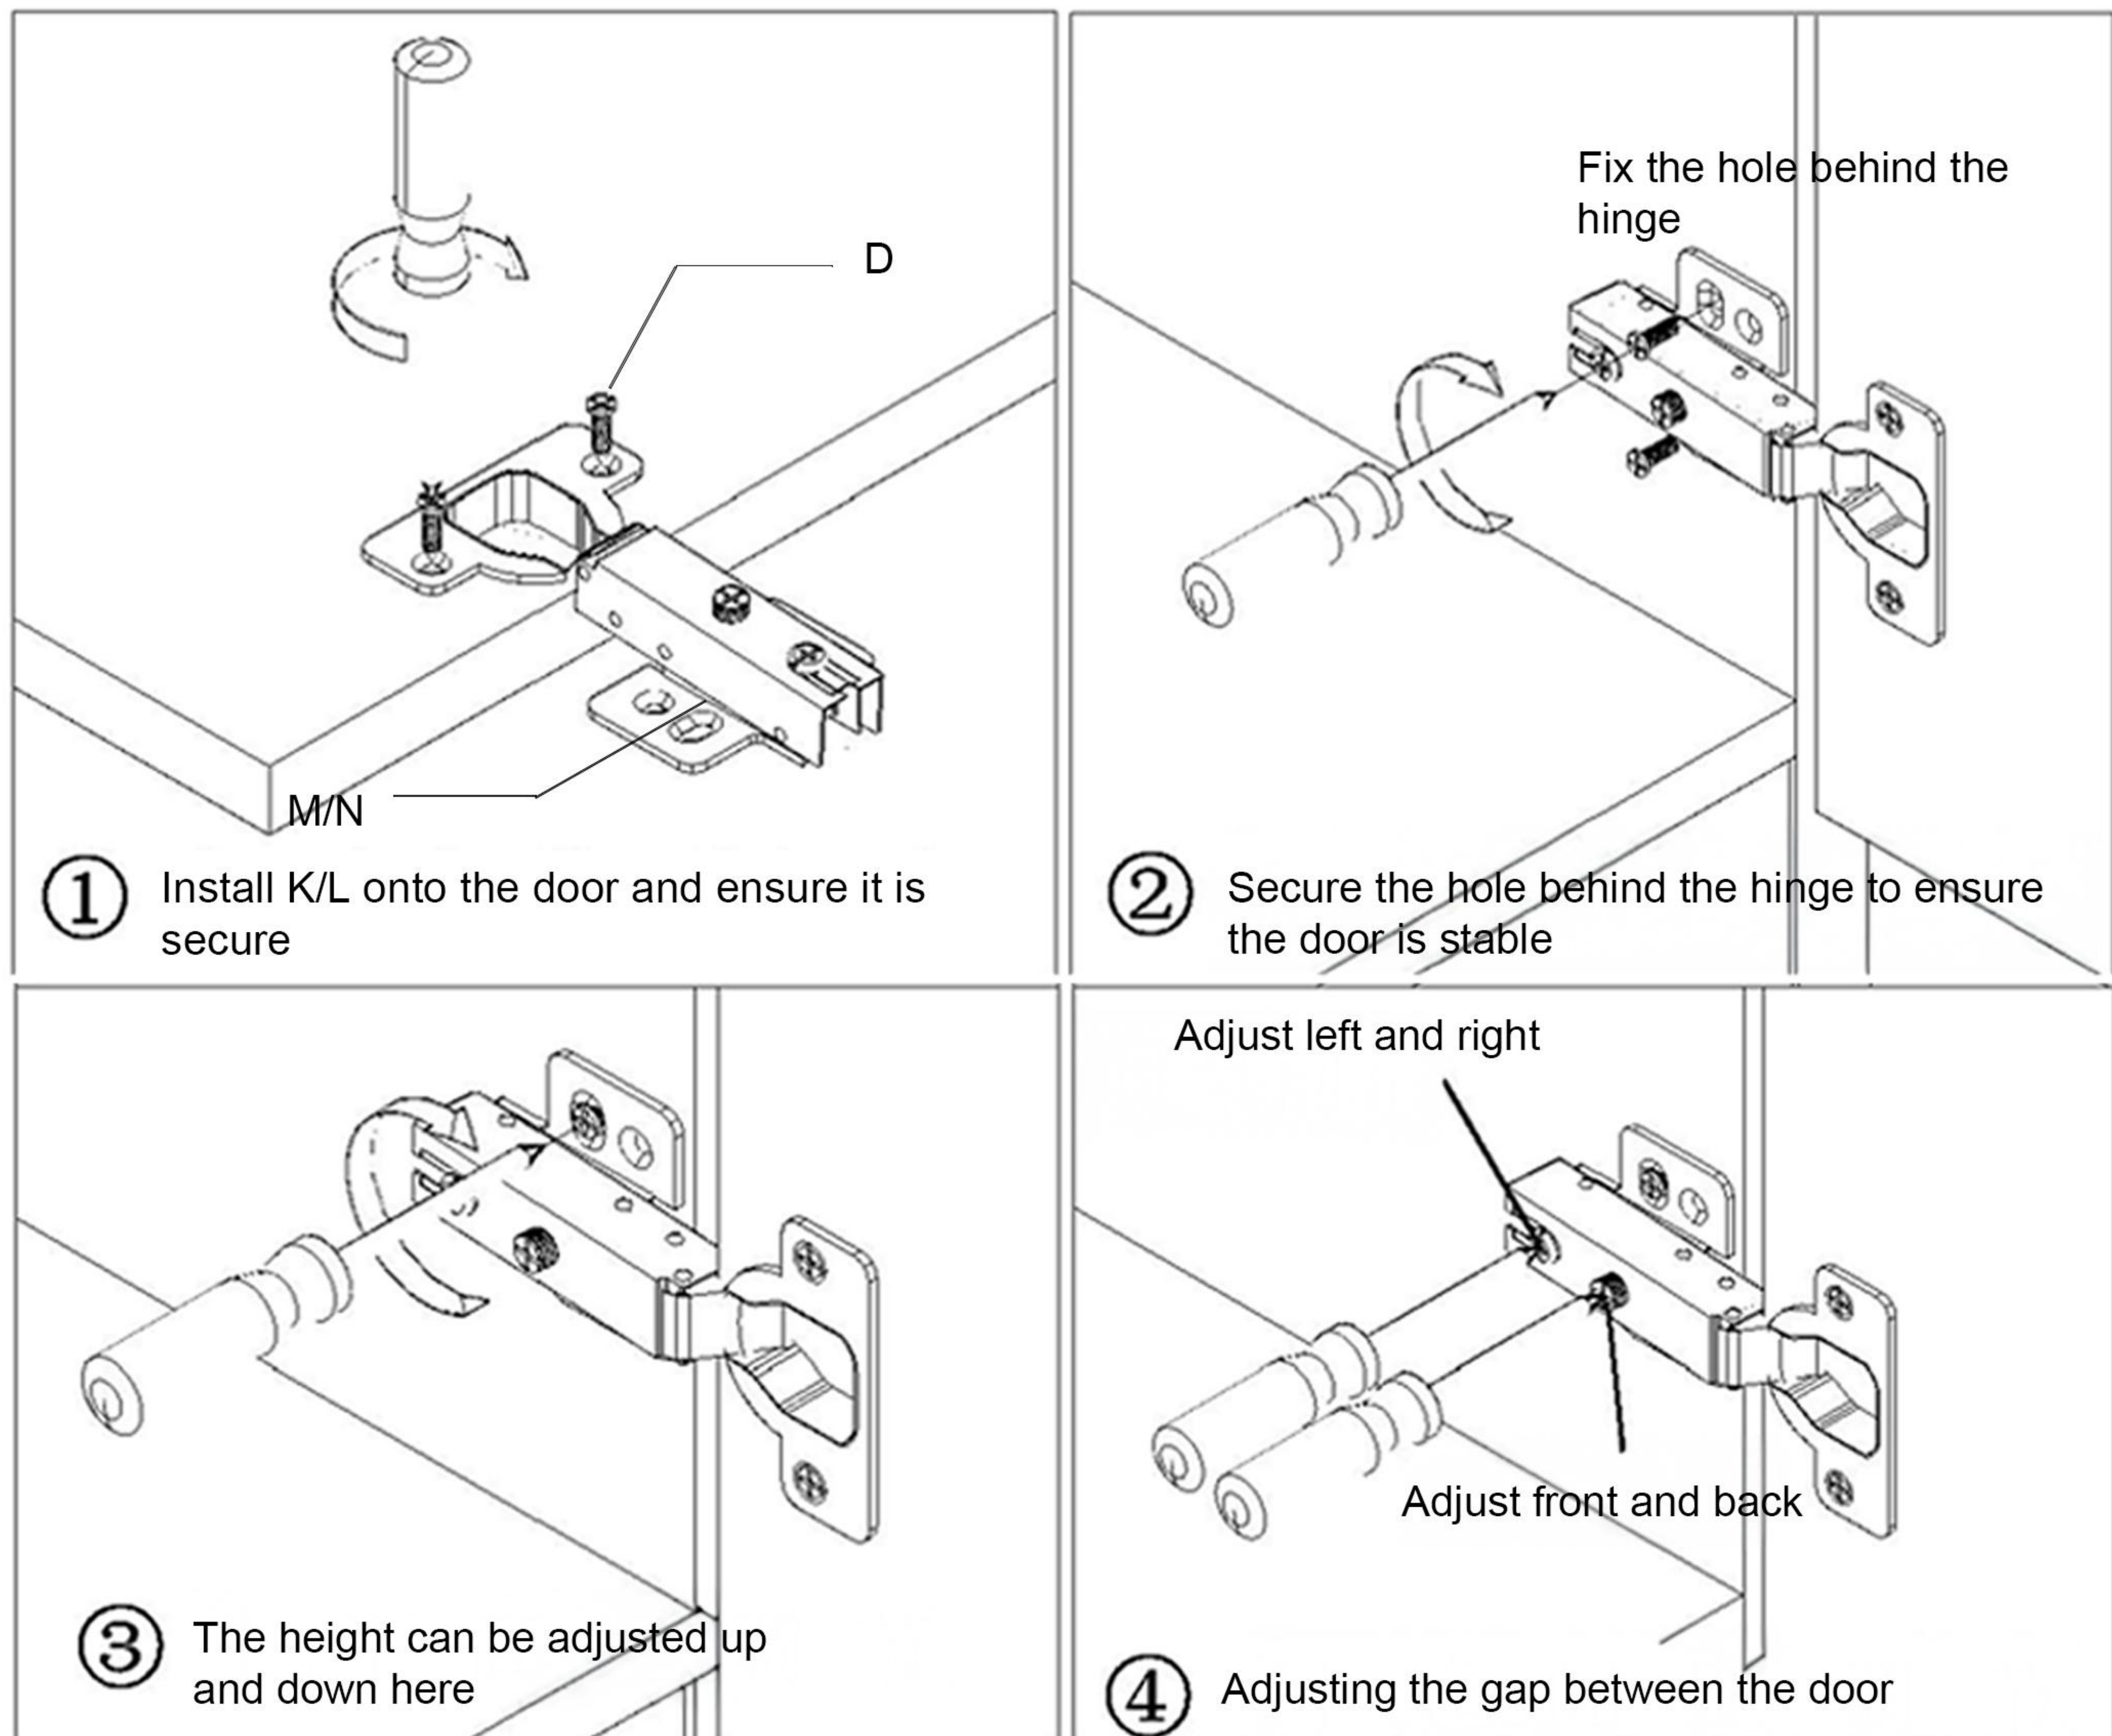


Step 1:

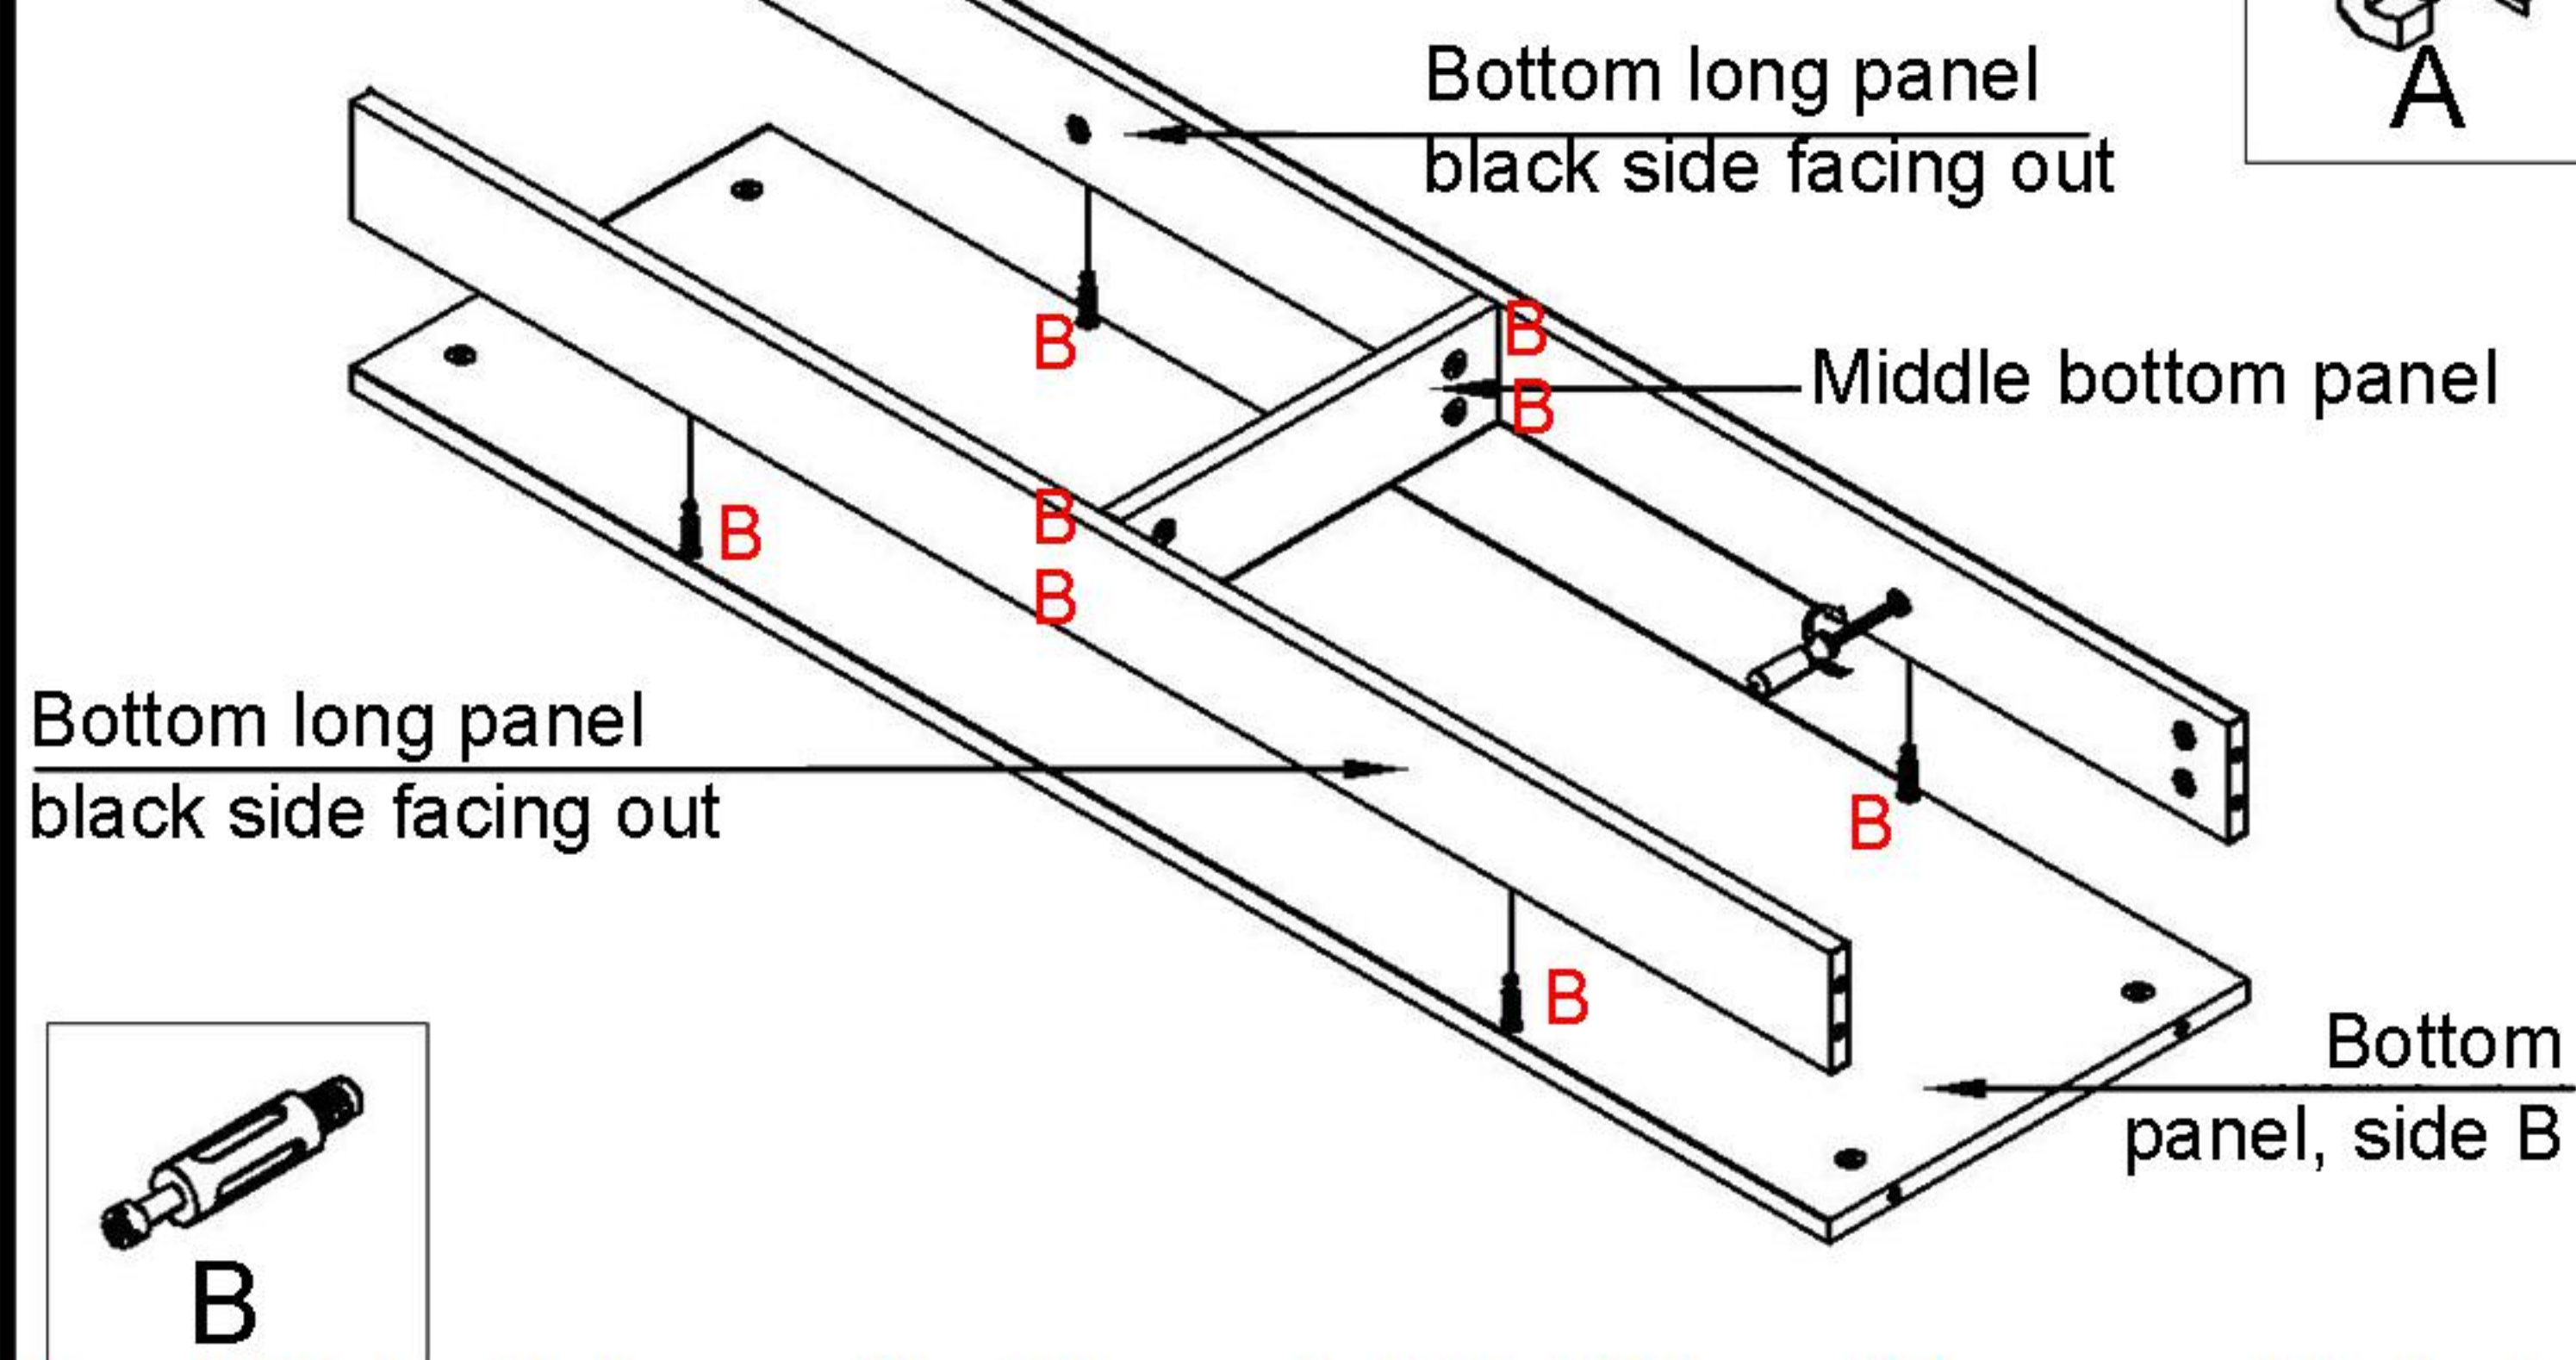


Insert B into all places with white pre-installed fittings. After assembly, lock with A. Do not over-tighten. For detailed instructions, refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 2:

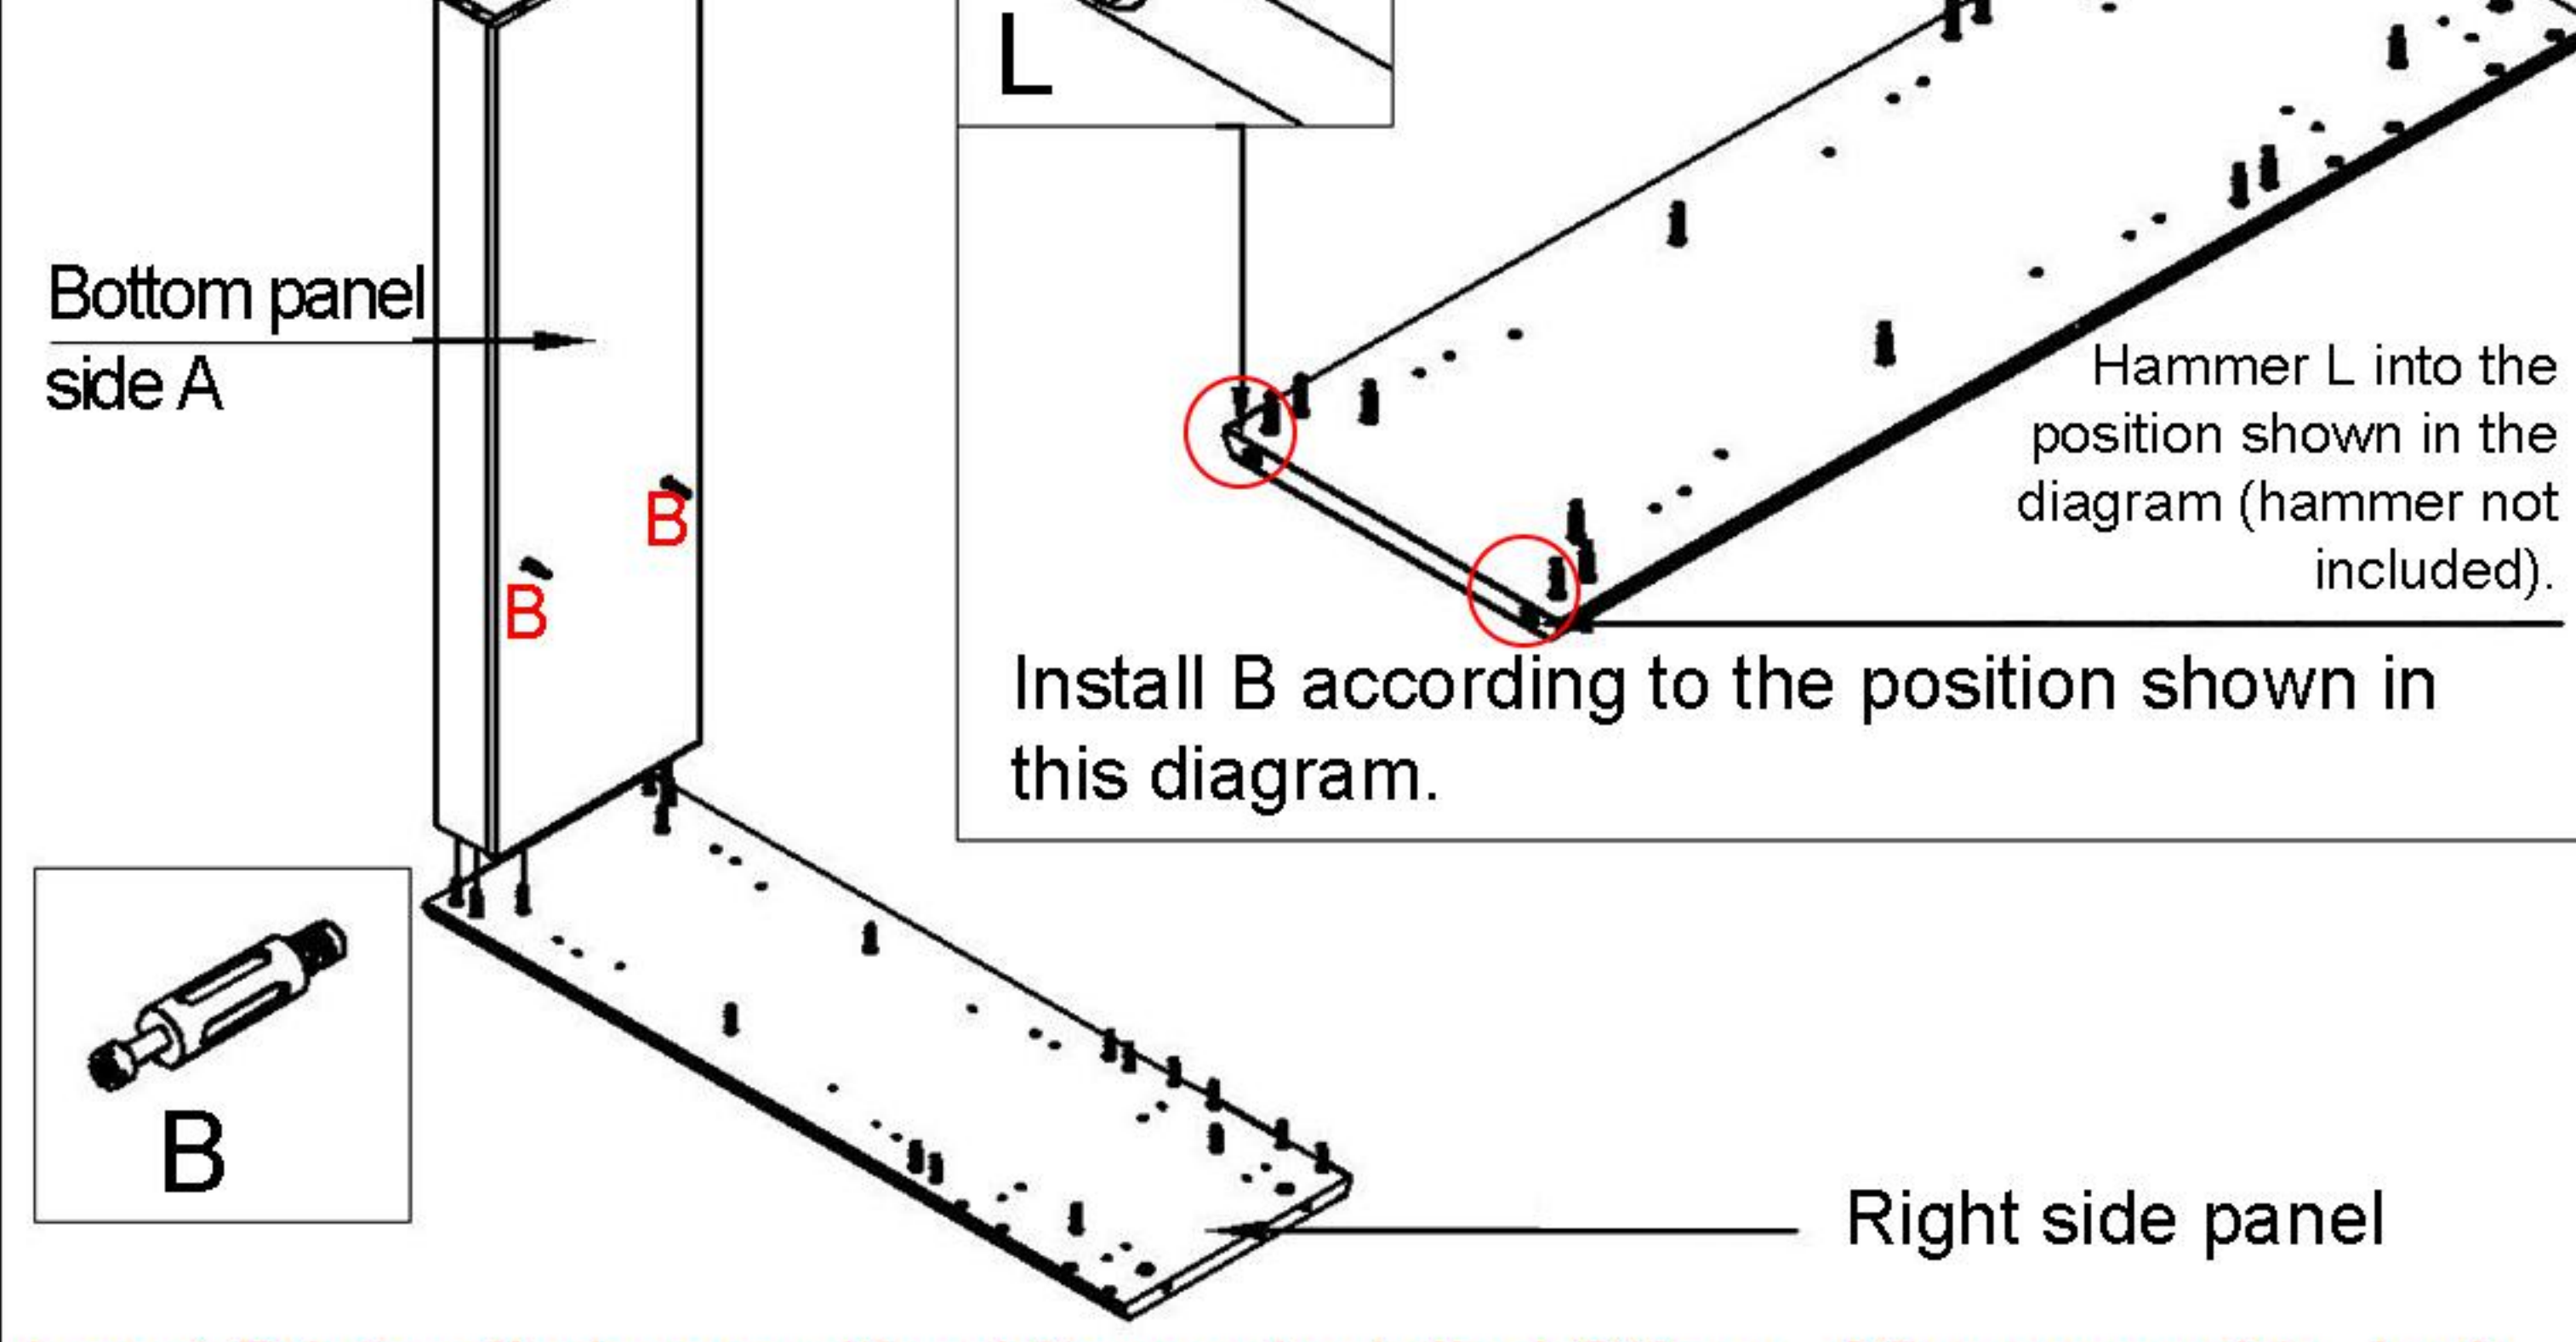


Insert B into all places with white pre-installed fittings. After assembly, lock with A. Do not over-tighten. For detailed instructions, refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.


Step 3:

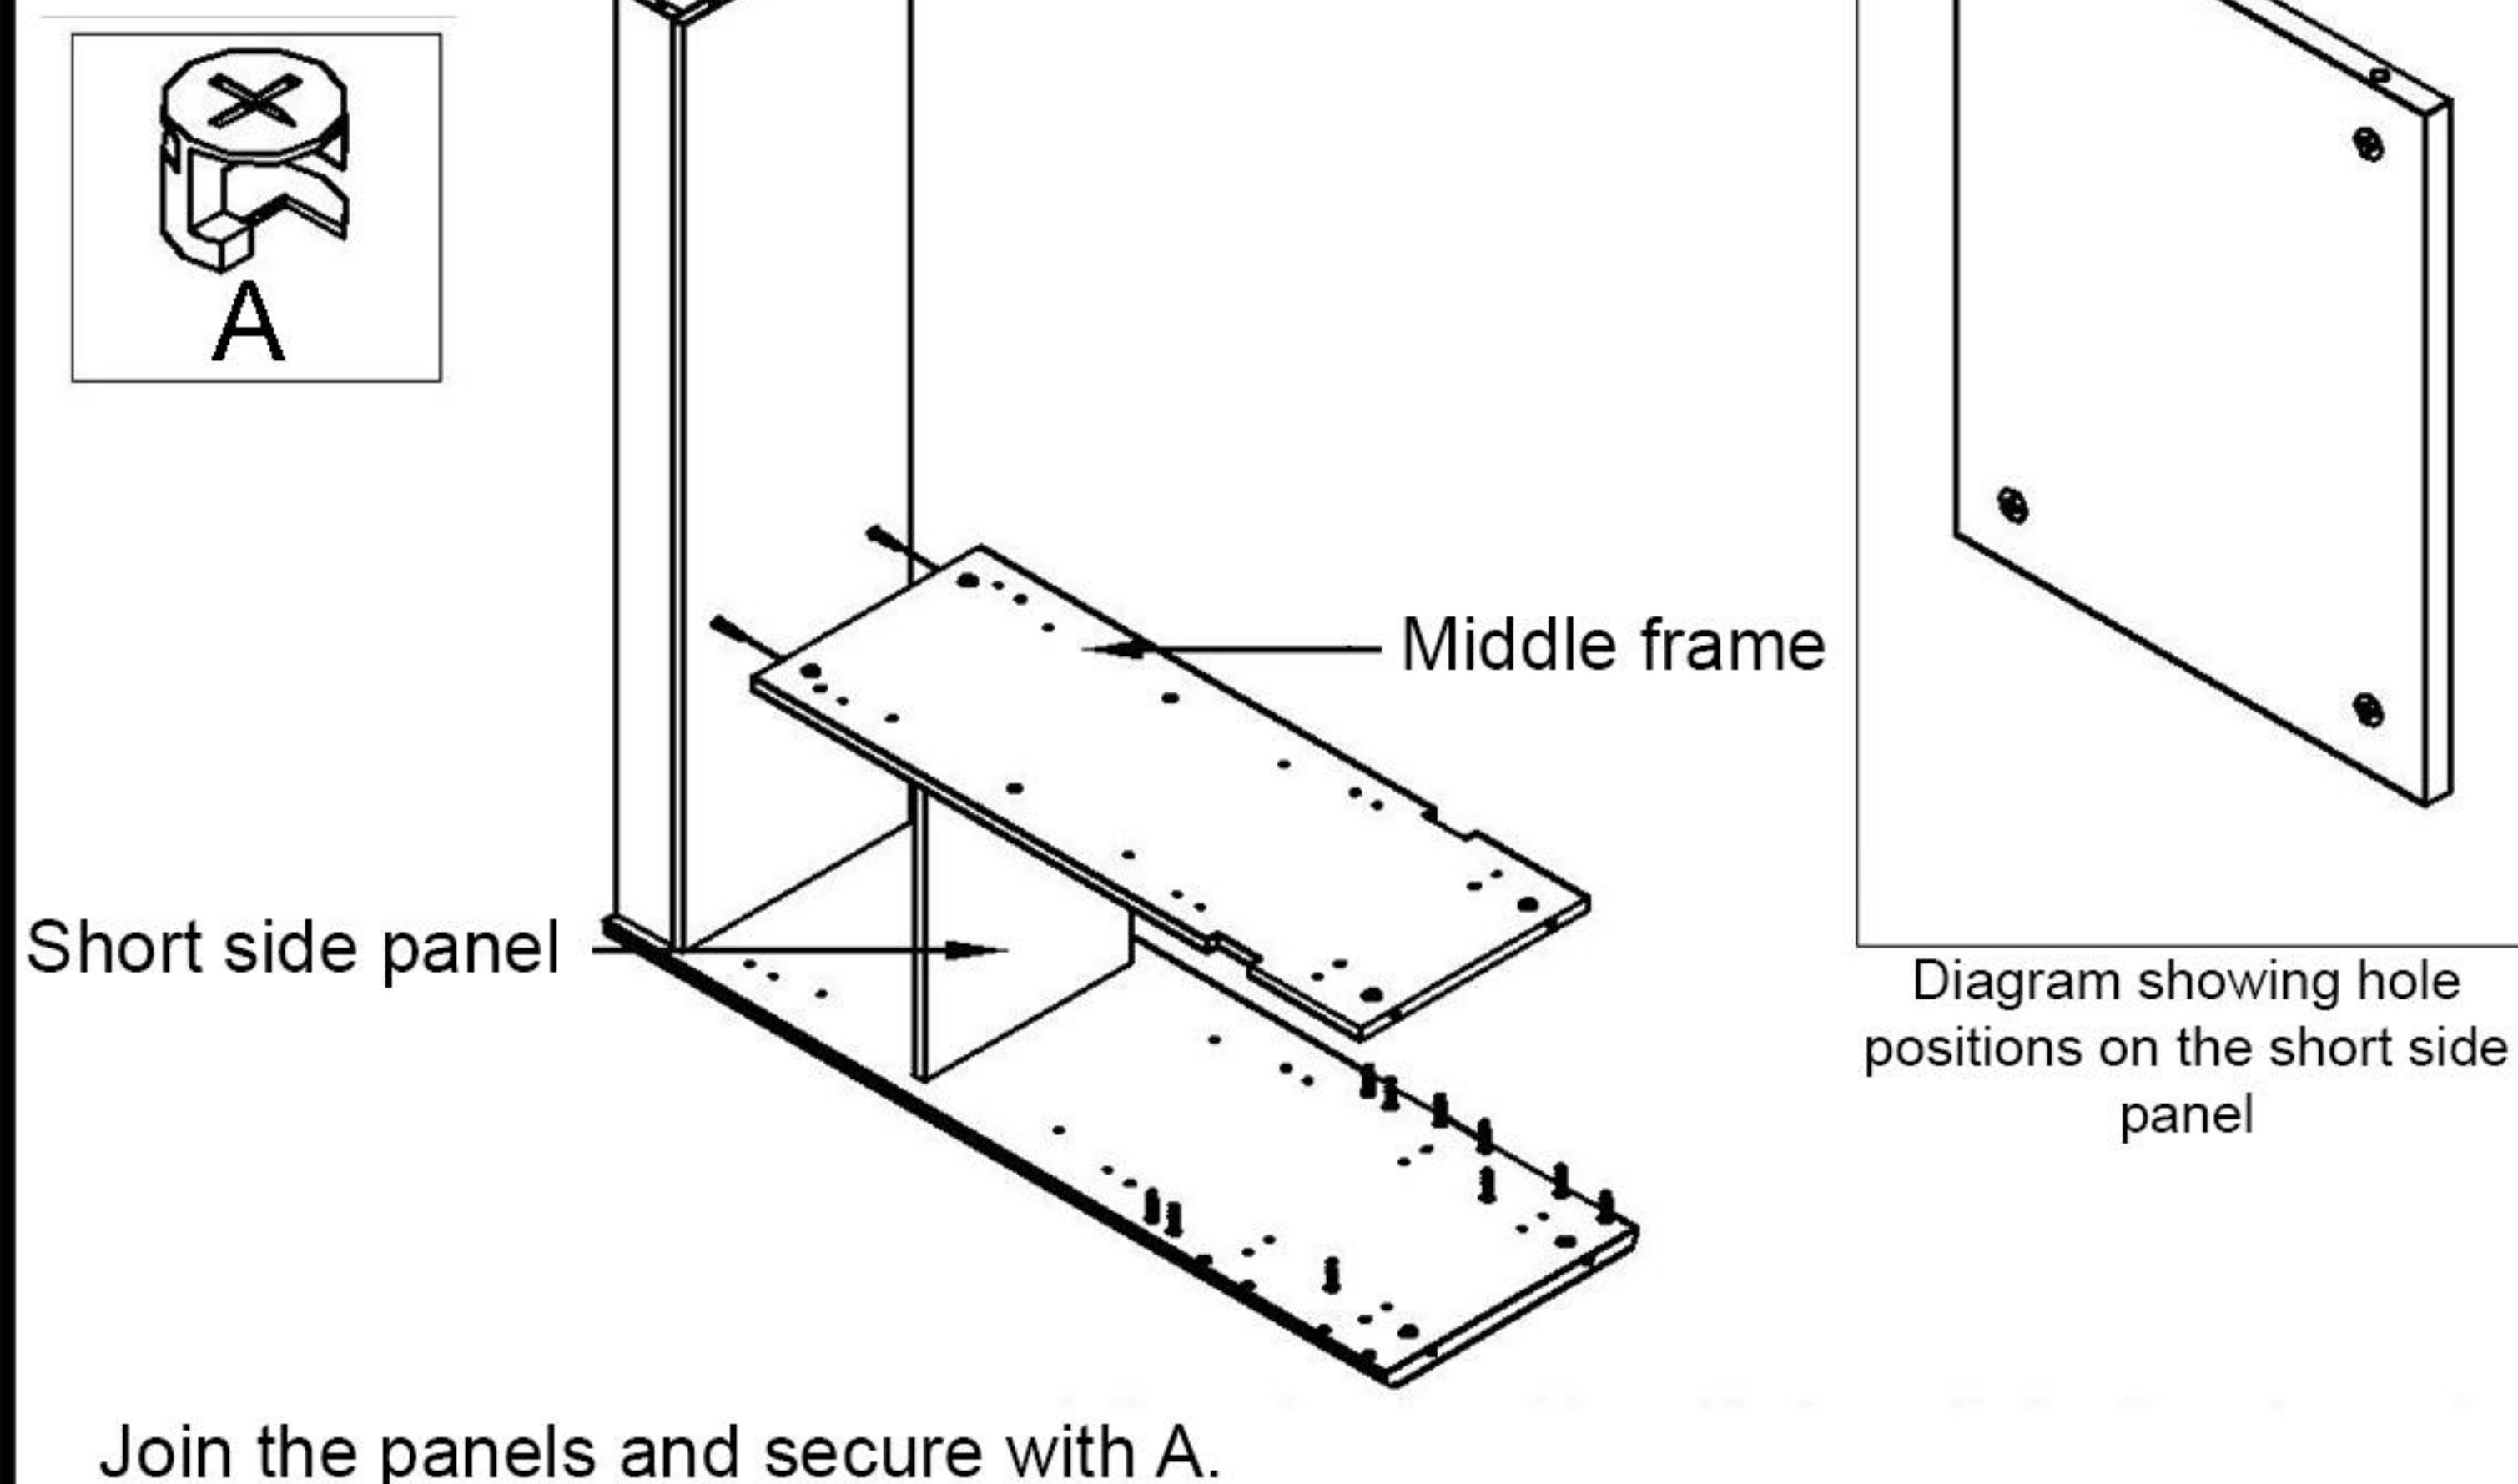


Step 4:

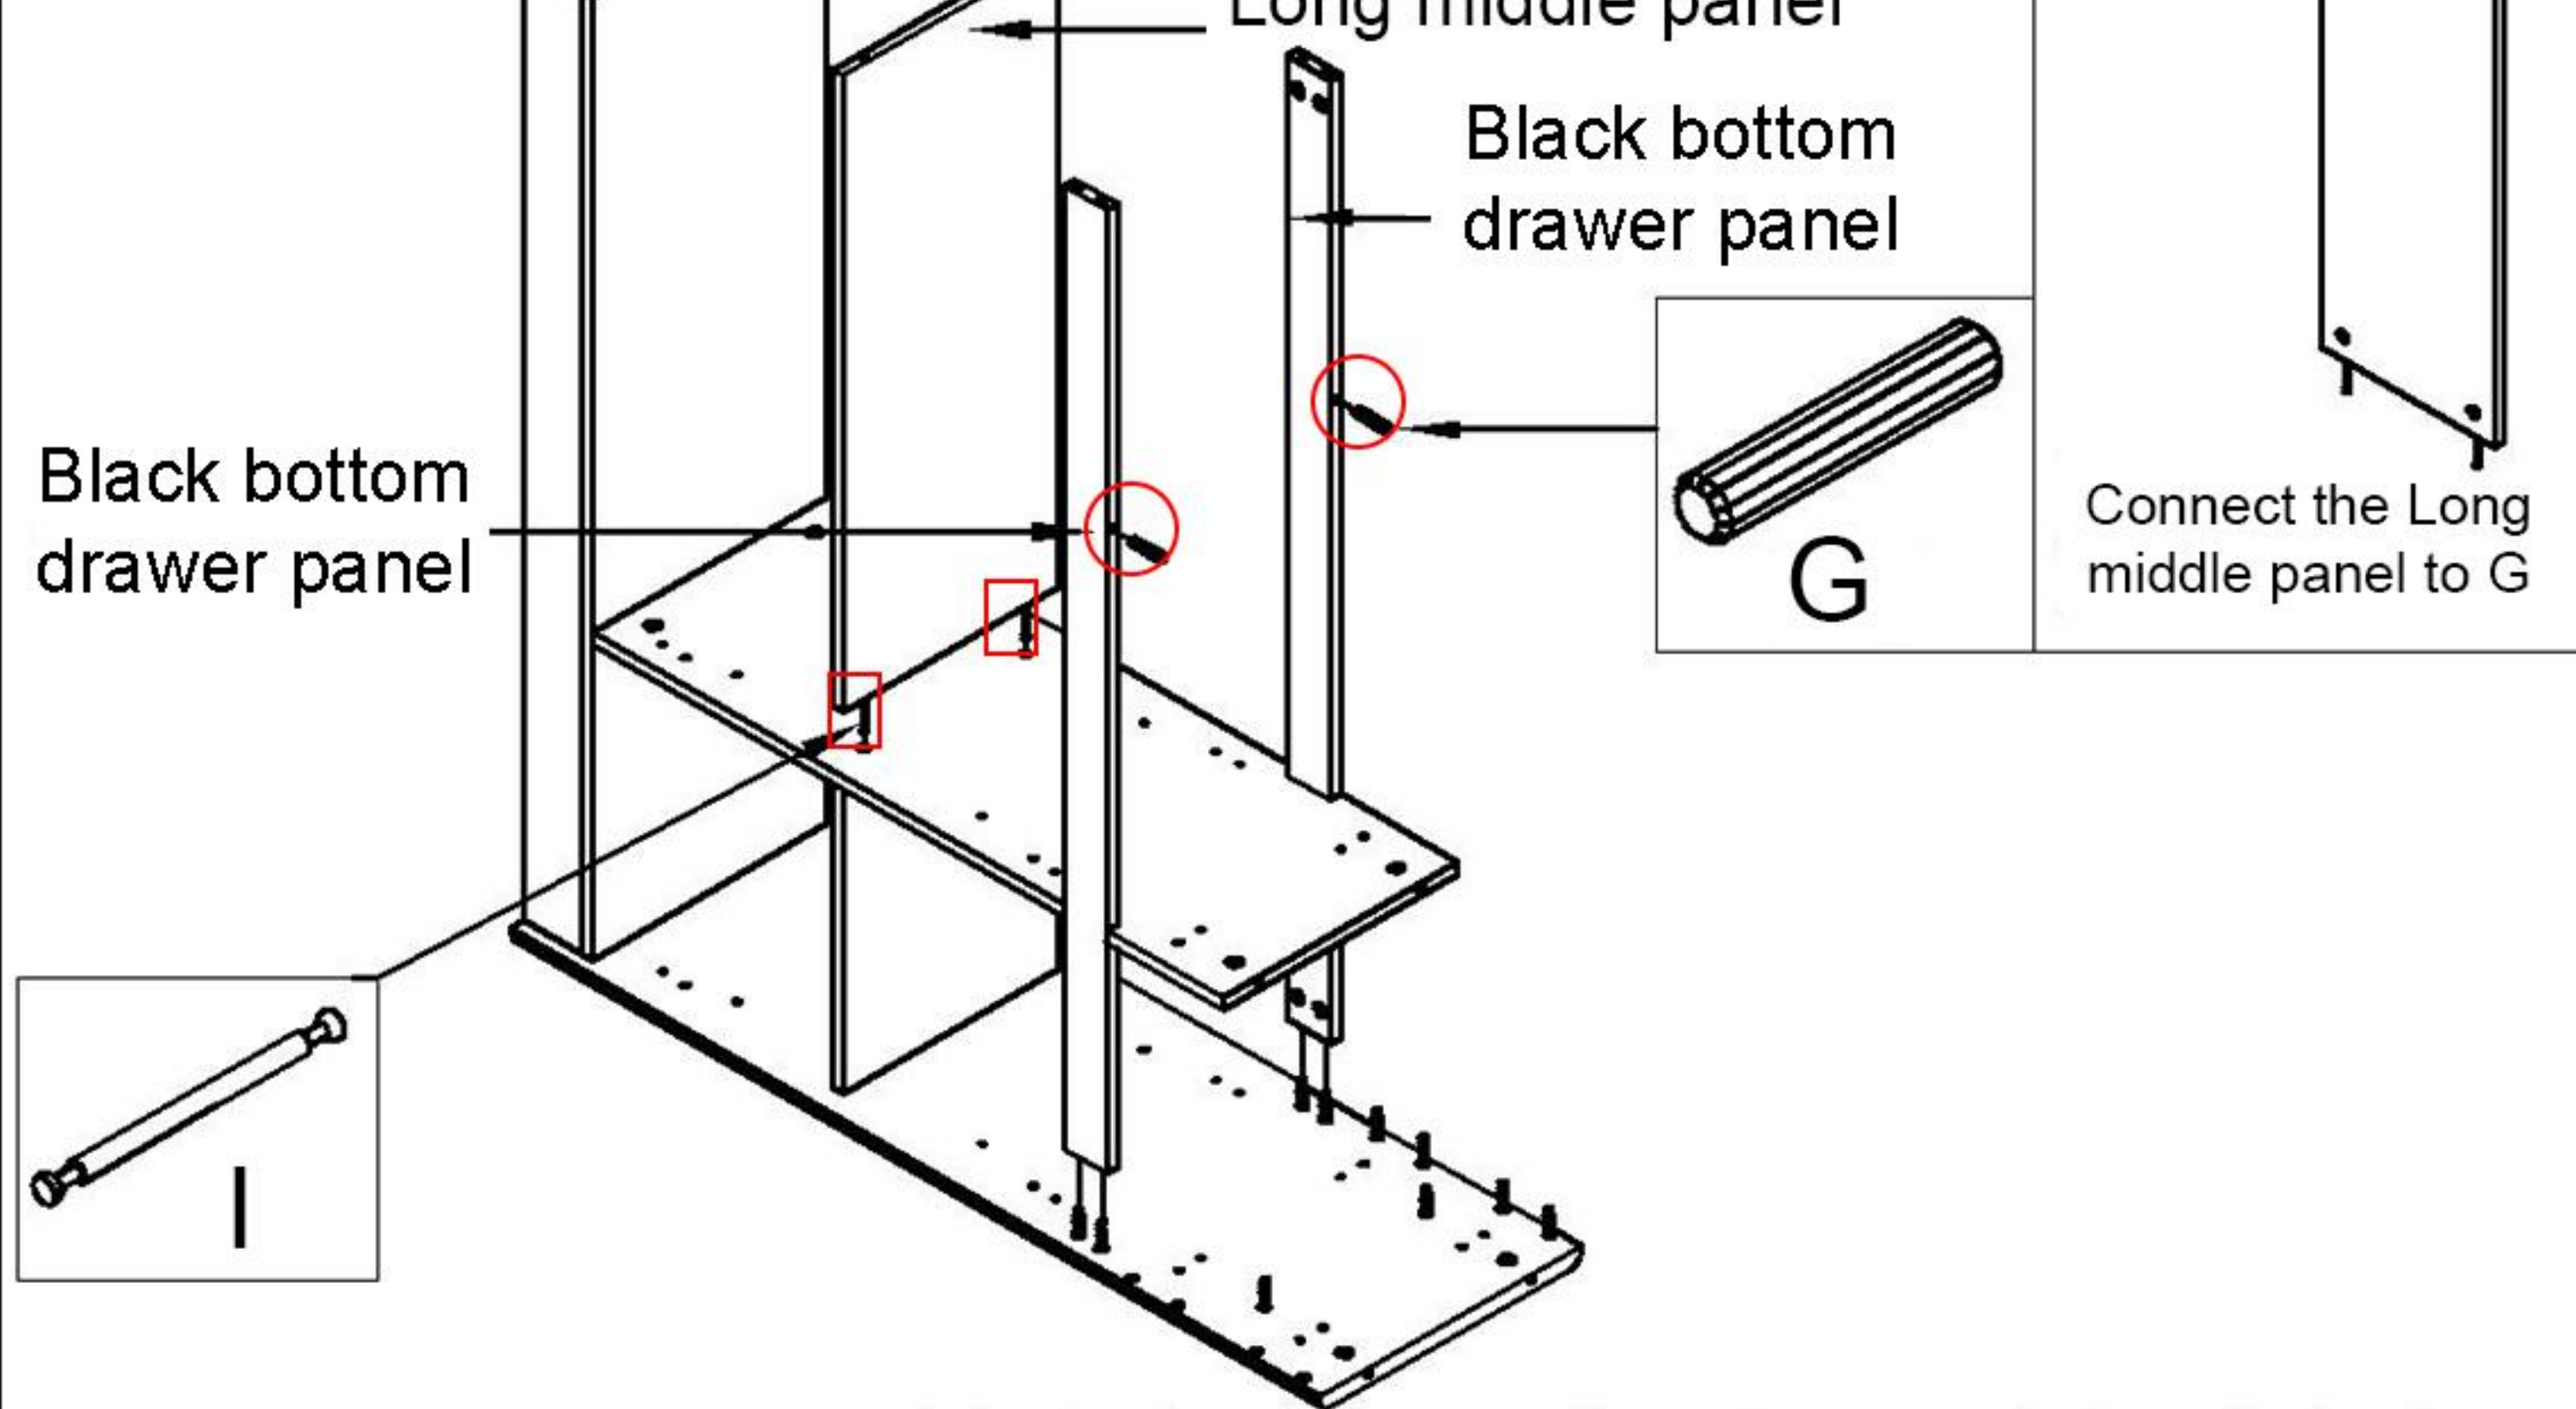


Step 6:

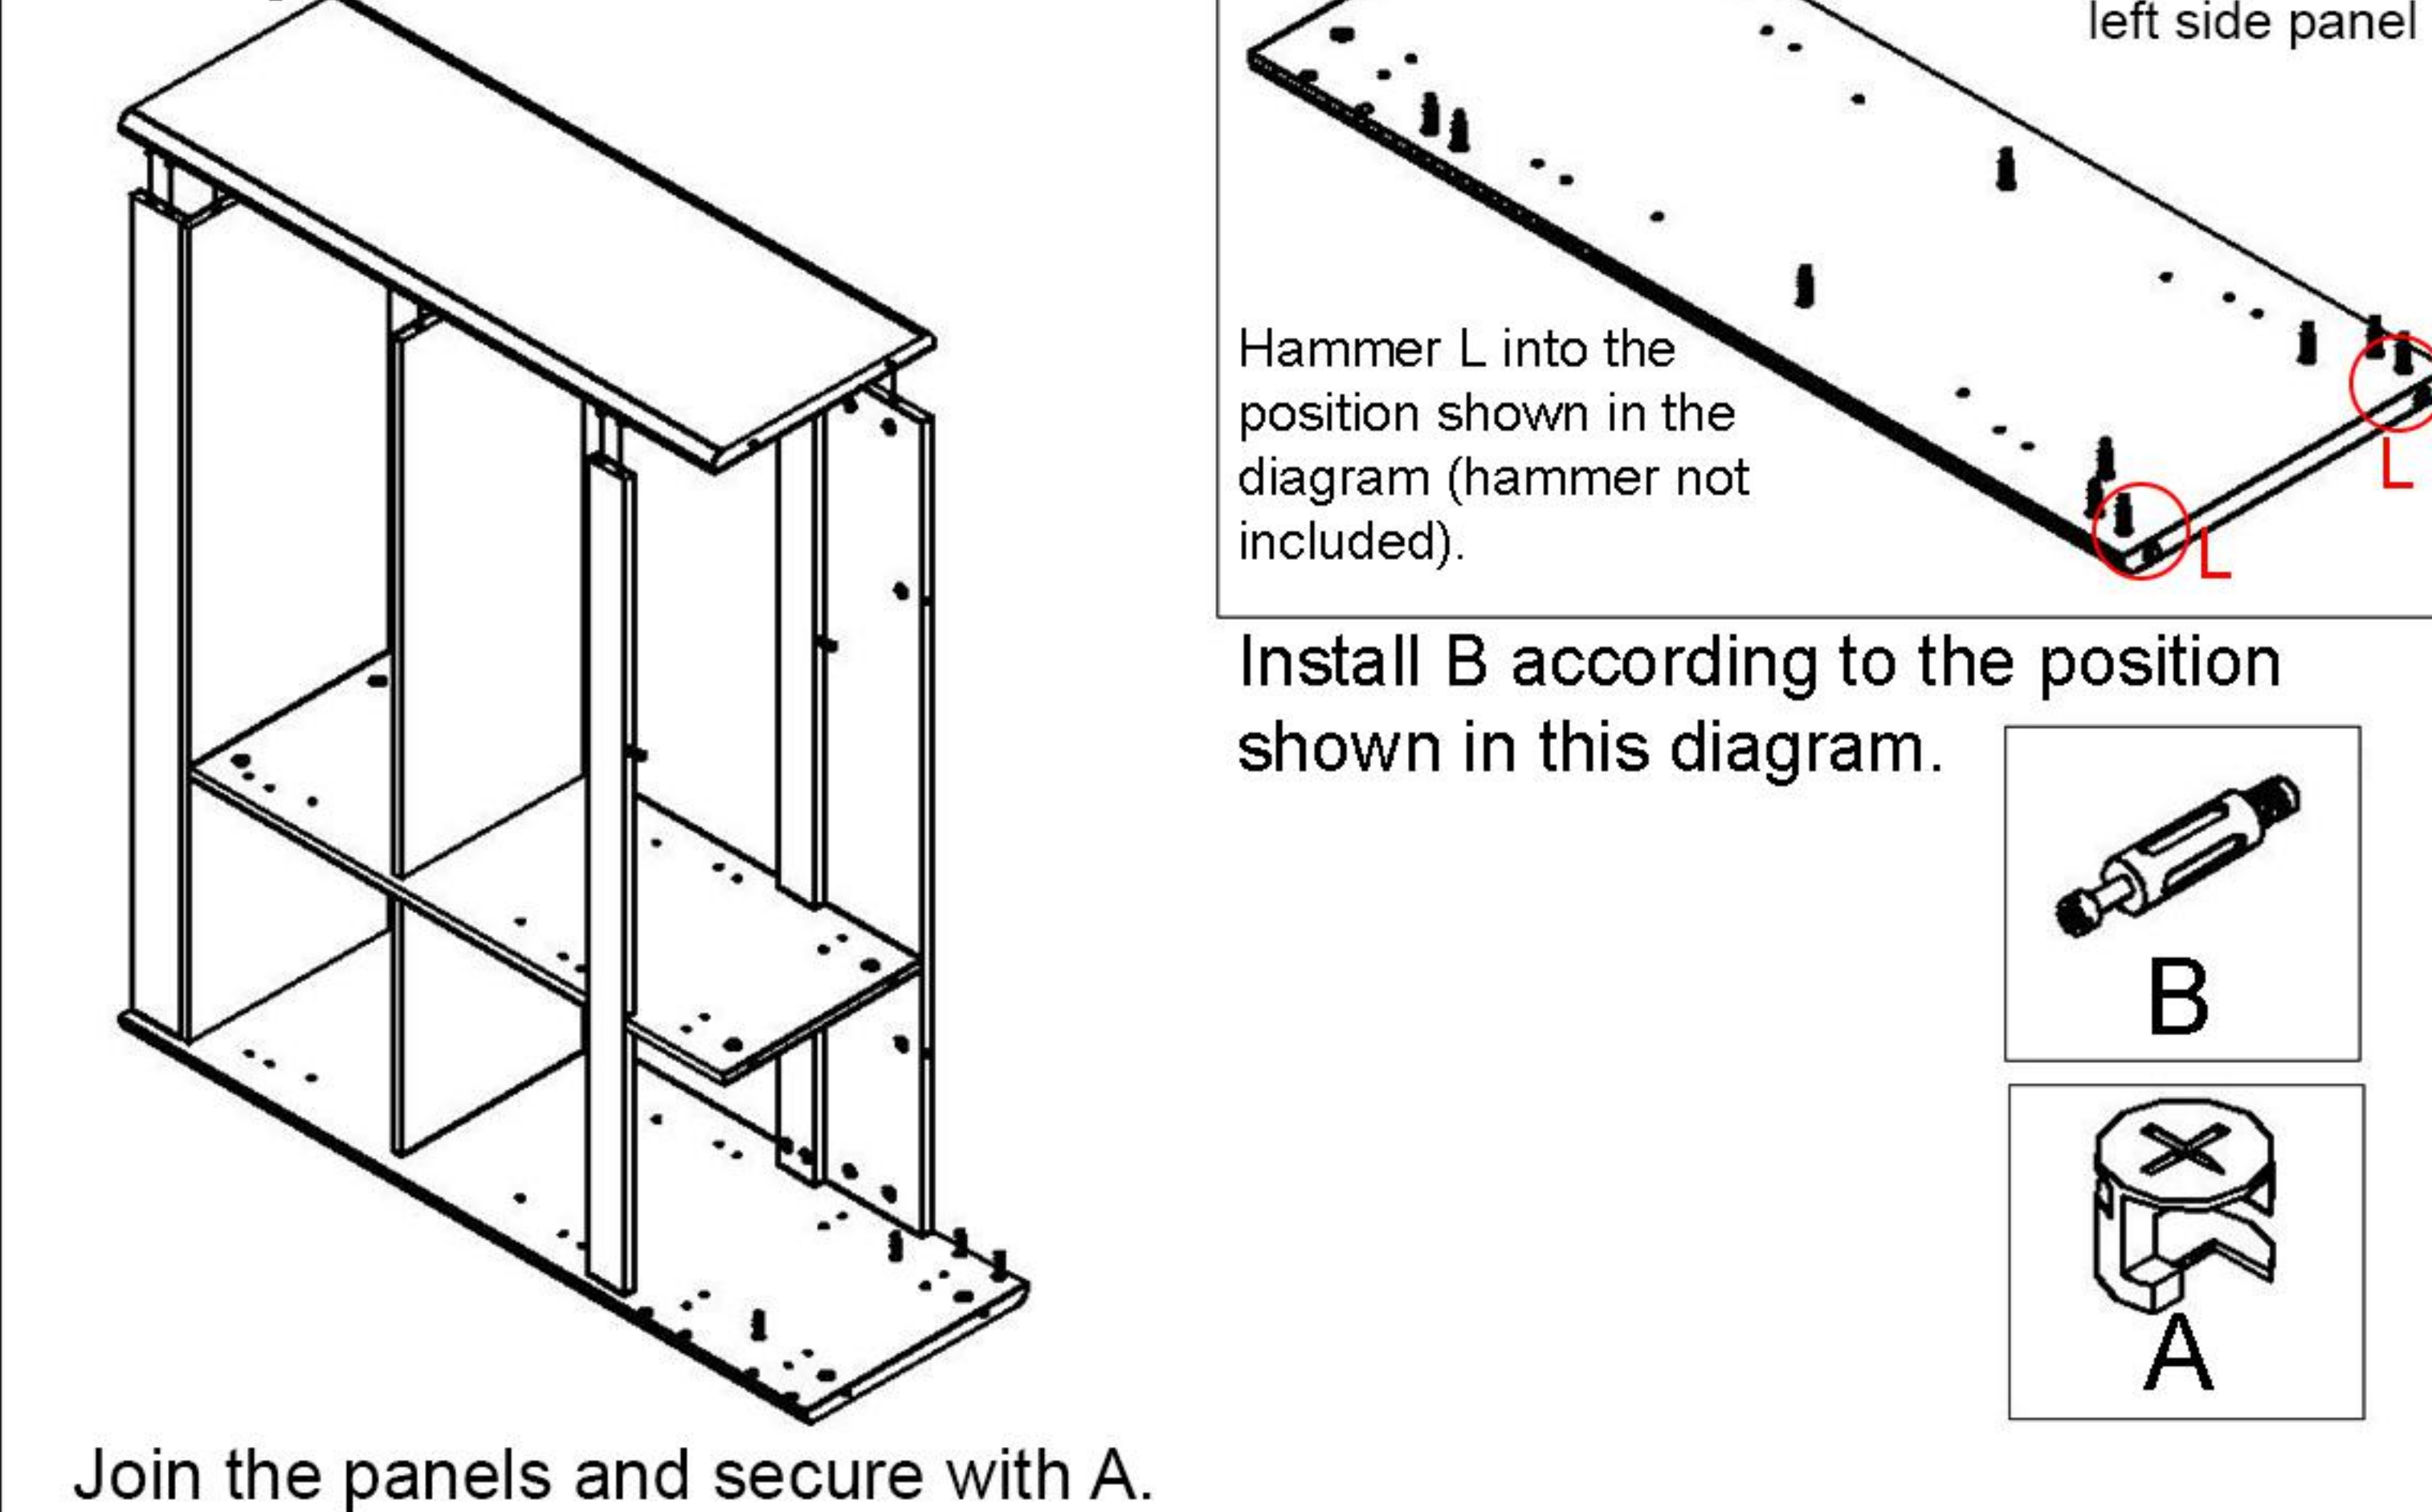


Step 5:

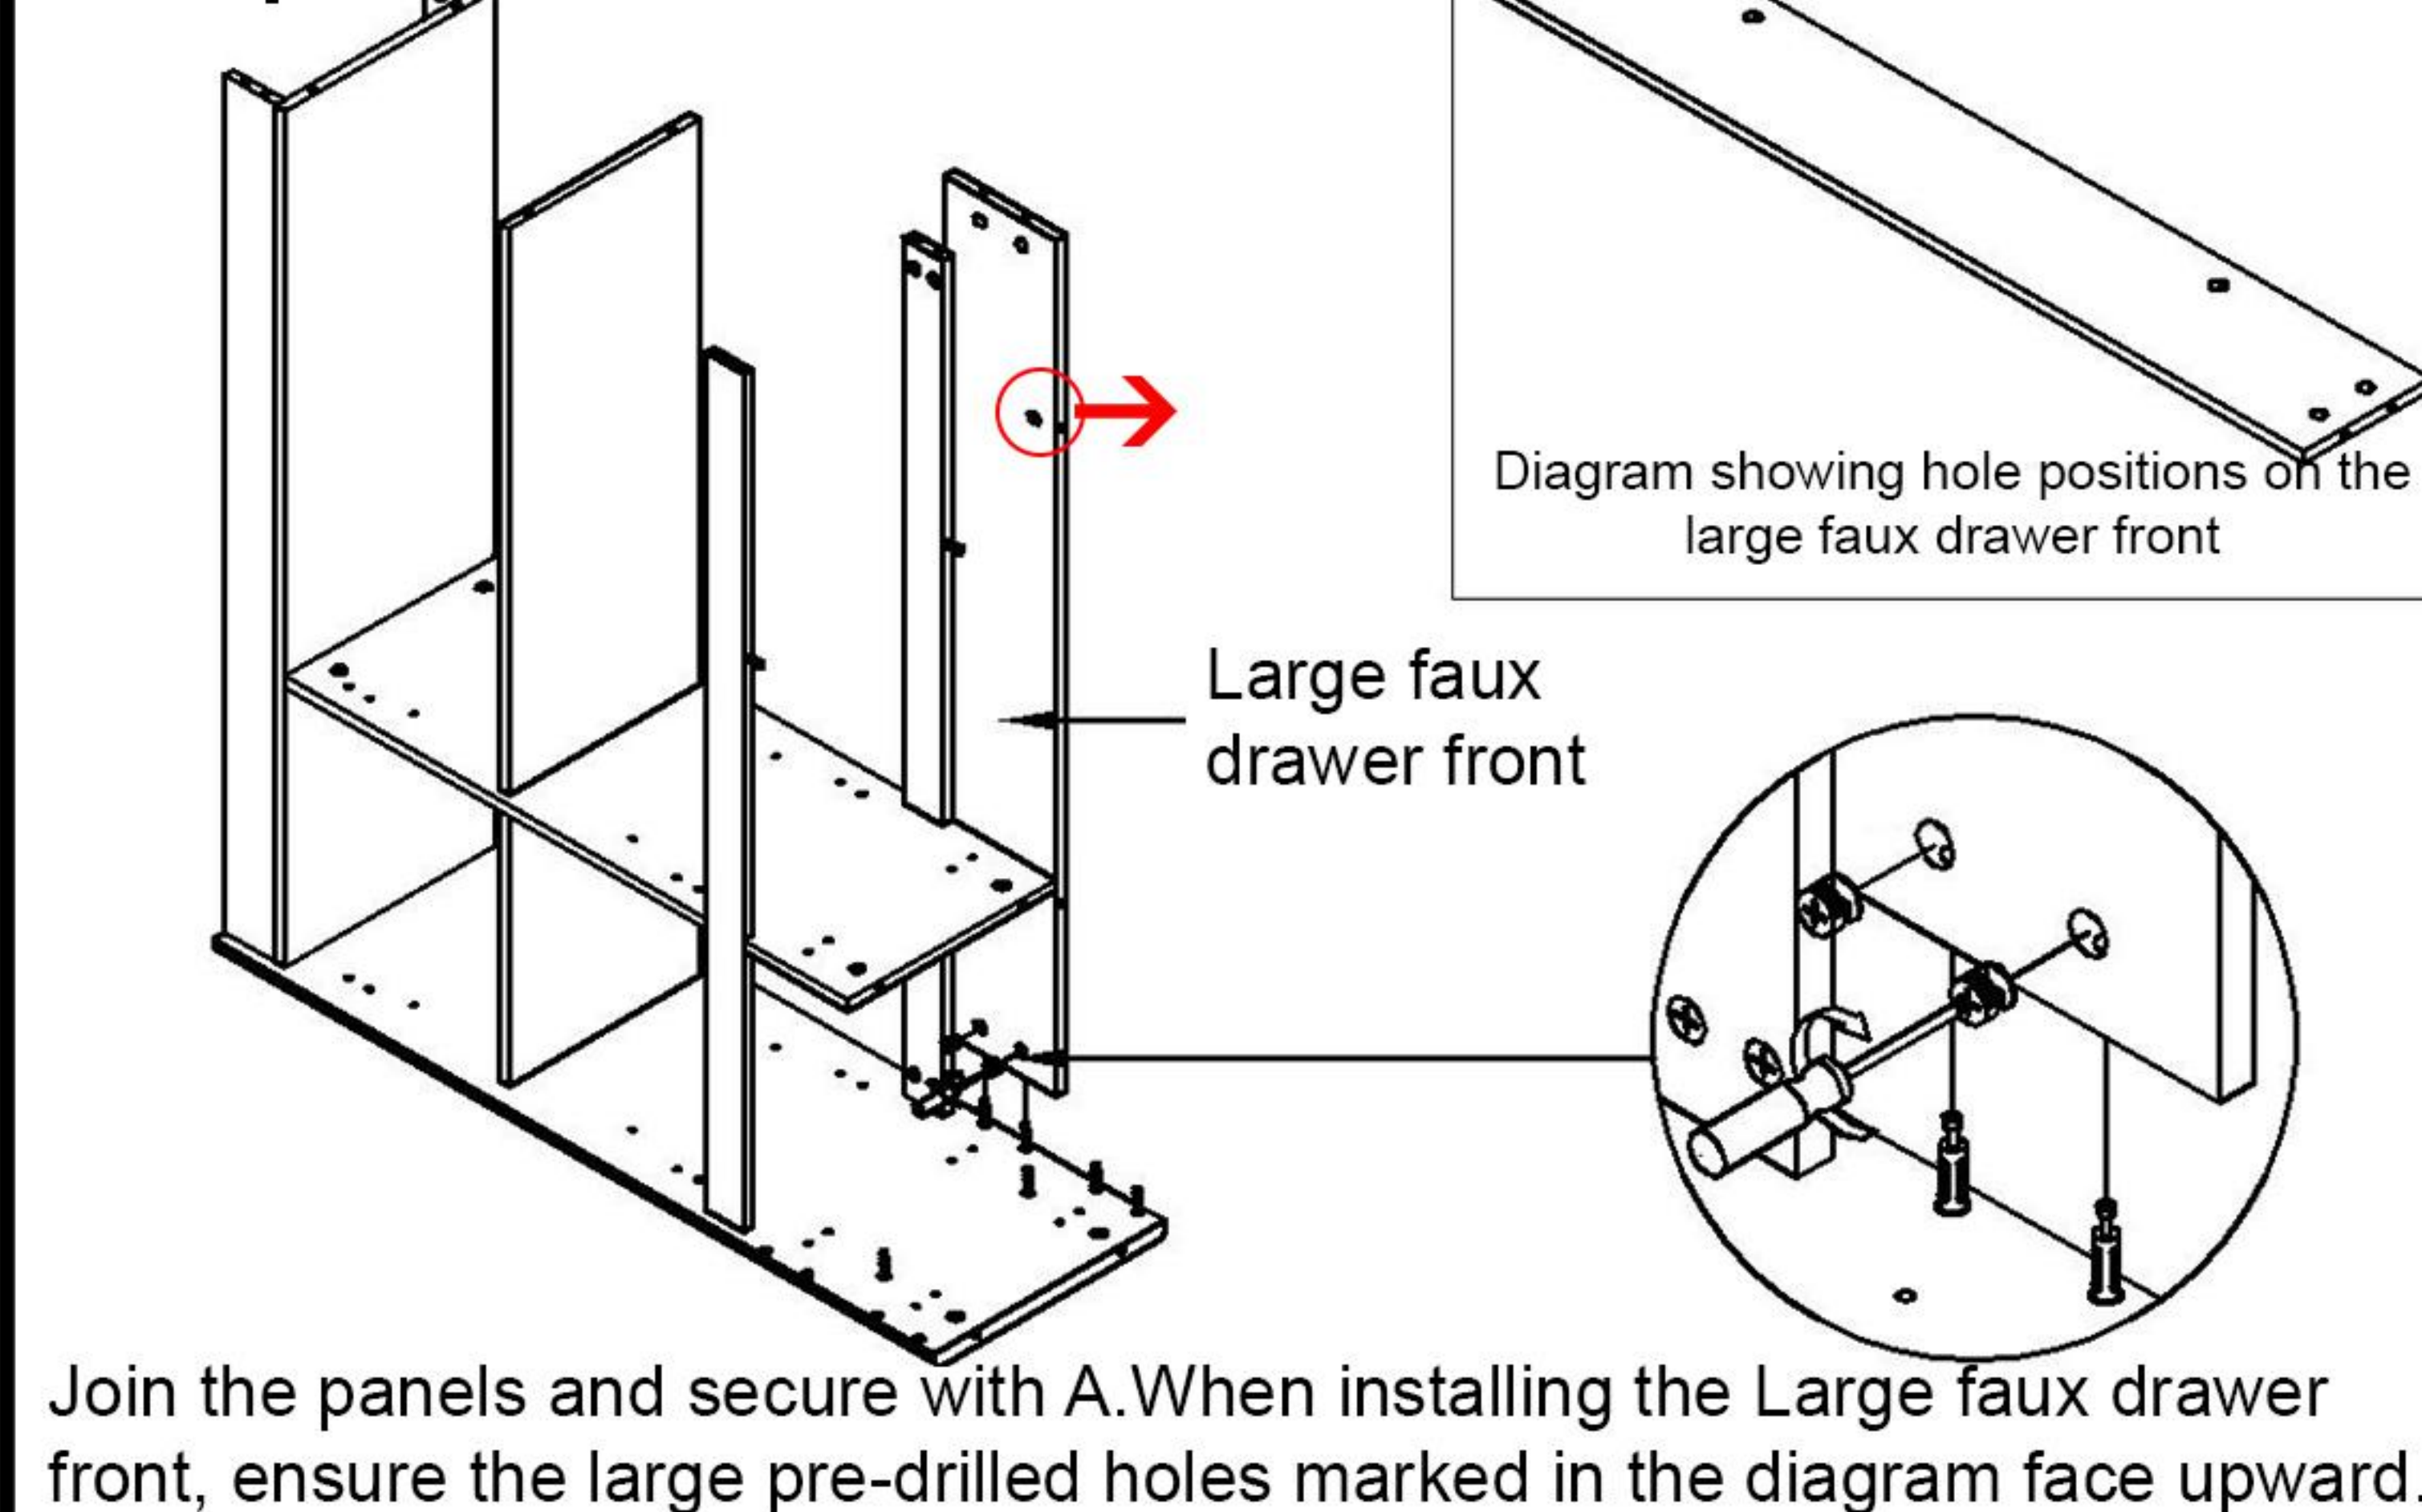

Step 8:

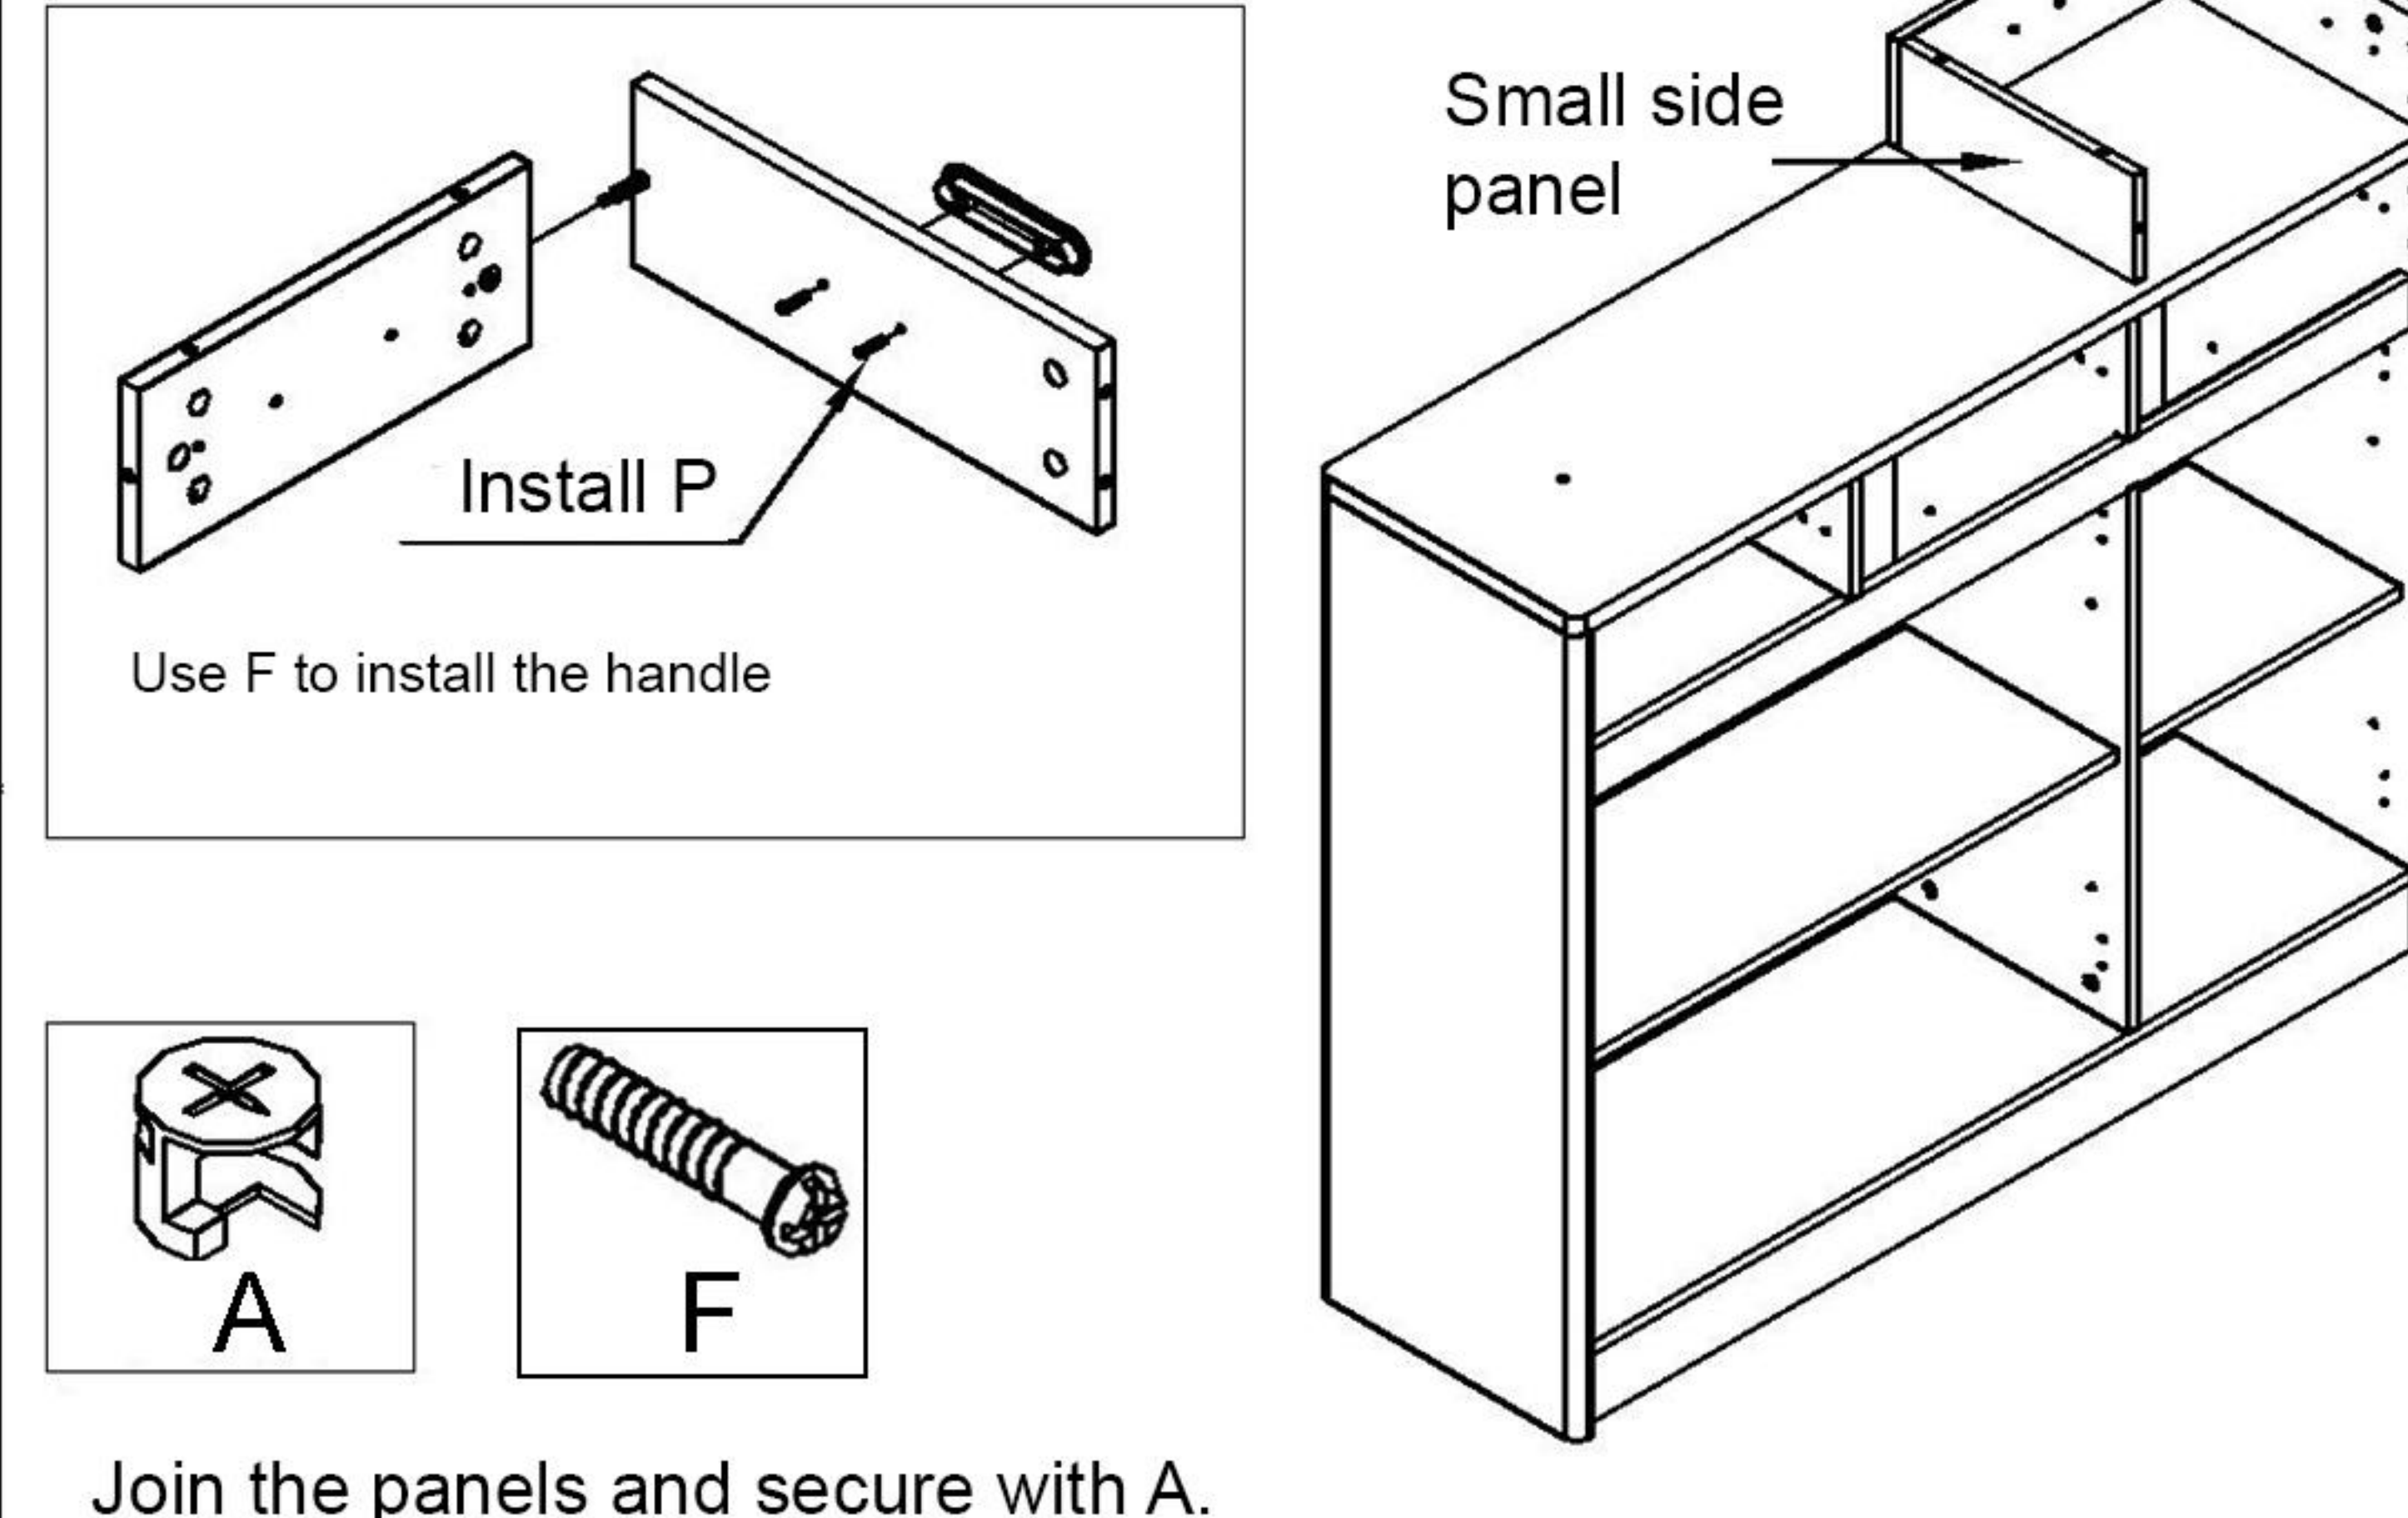


Step 7:

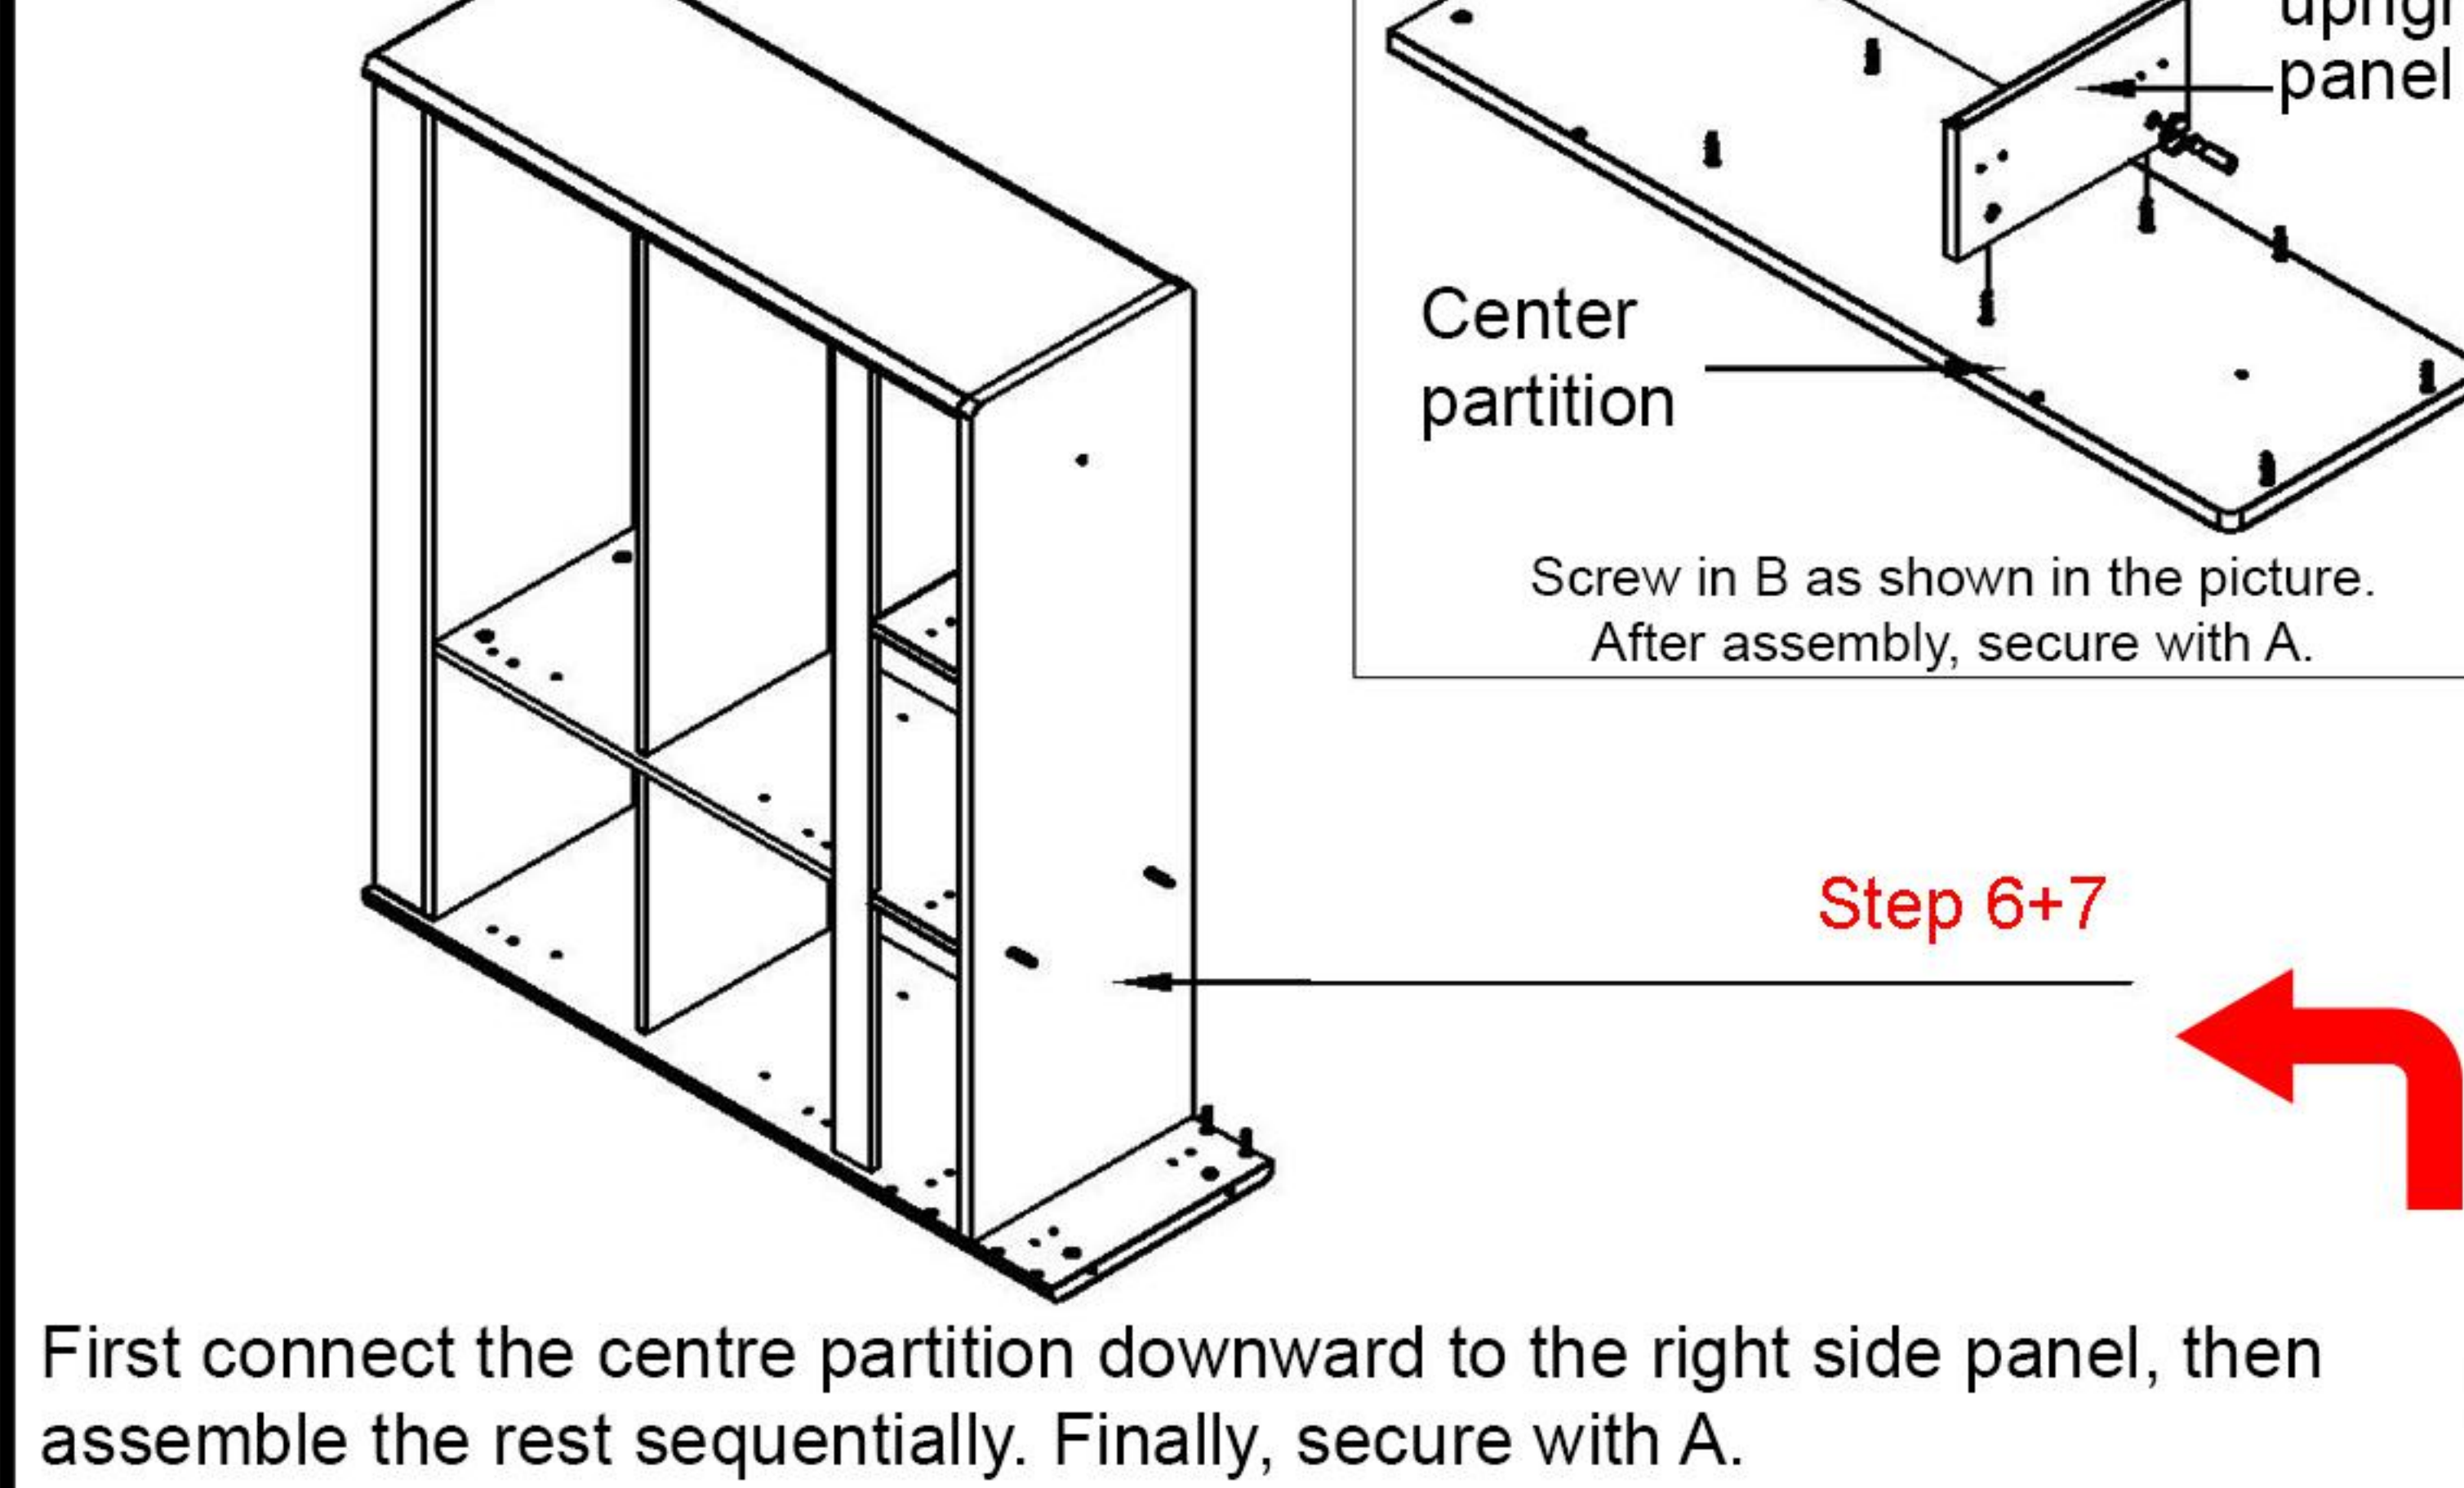


[illegible]


Step 10:

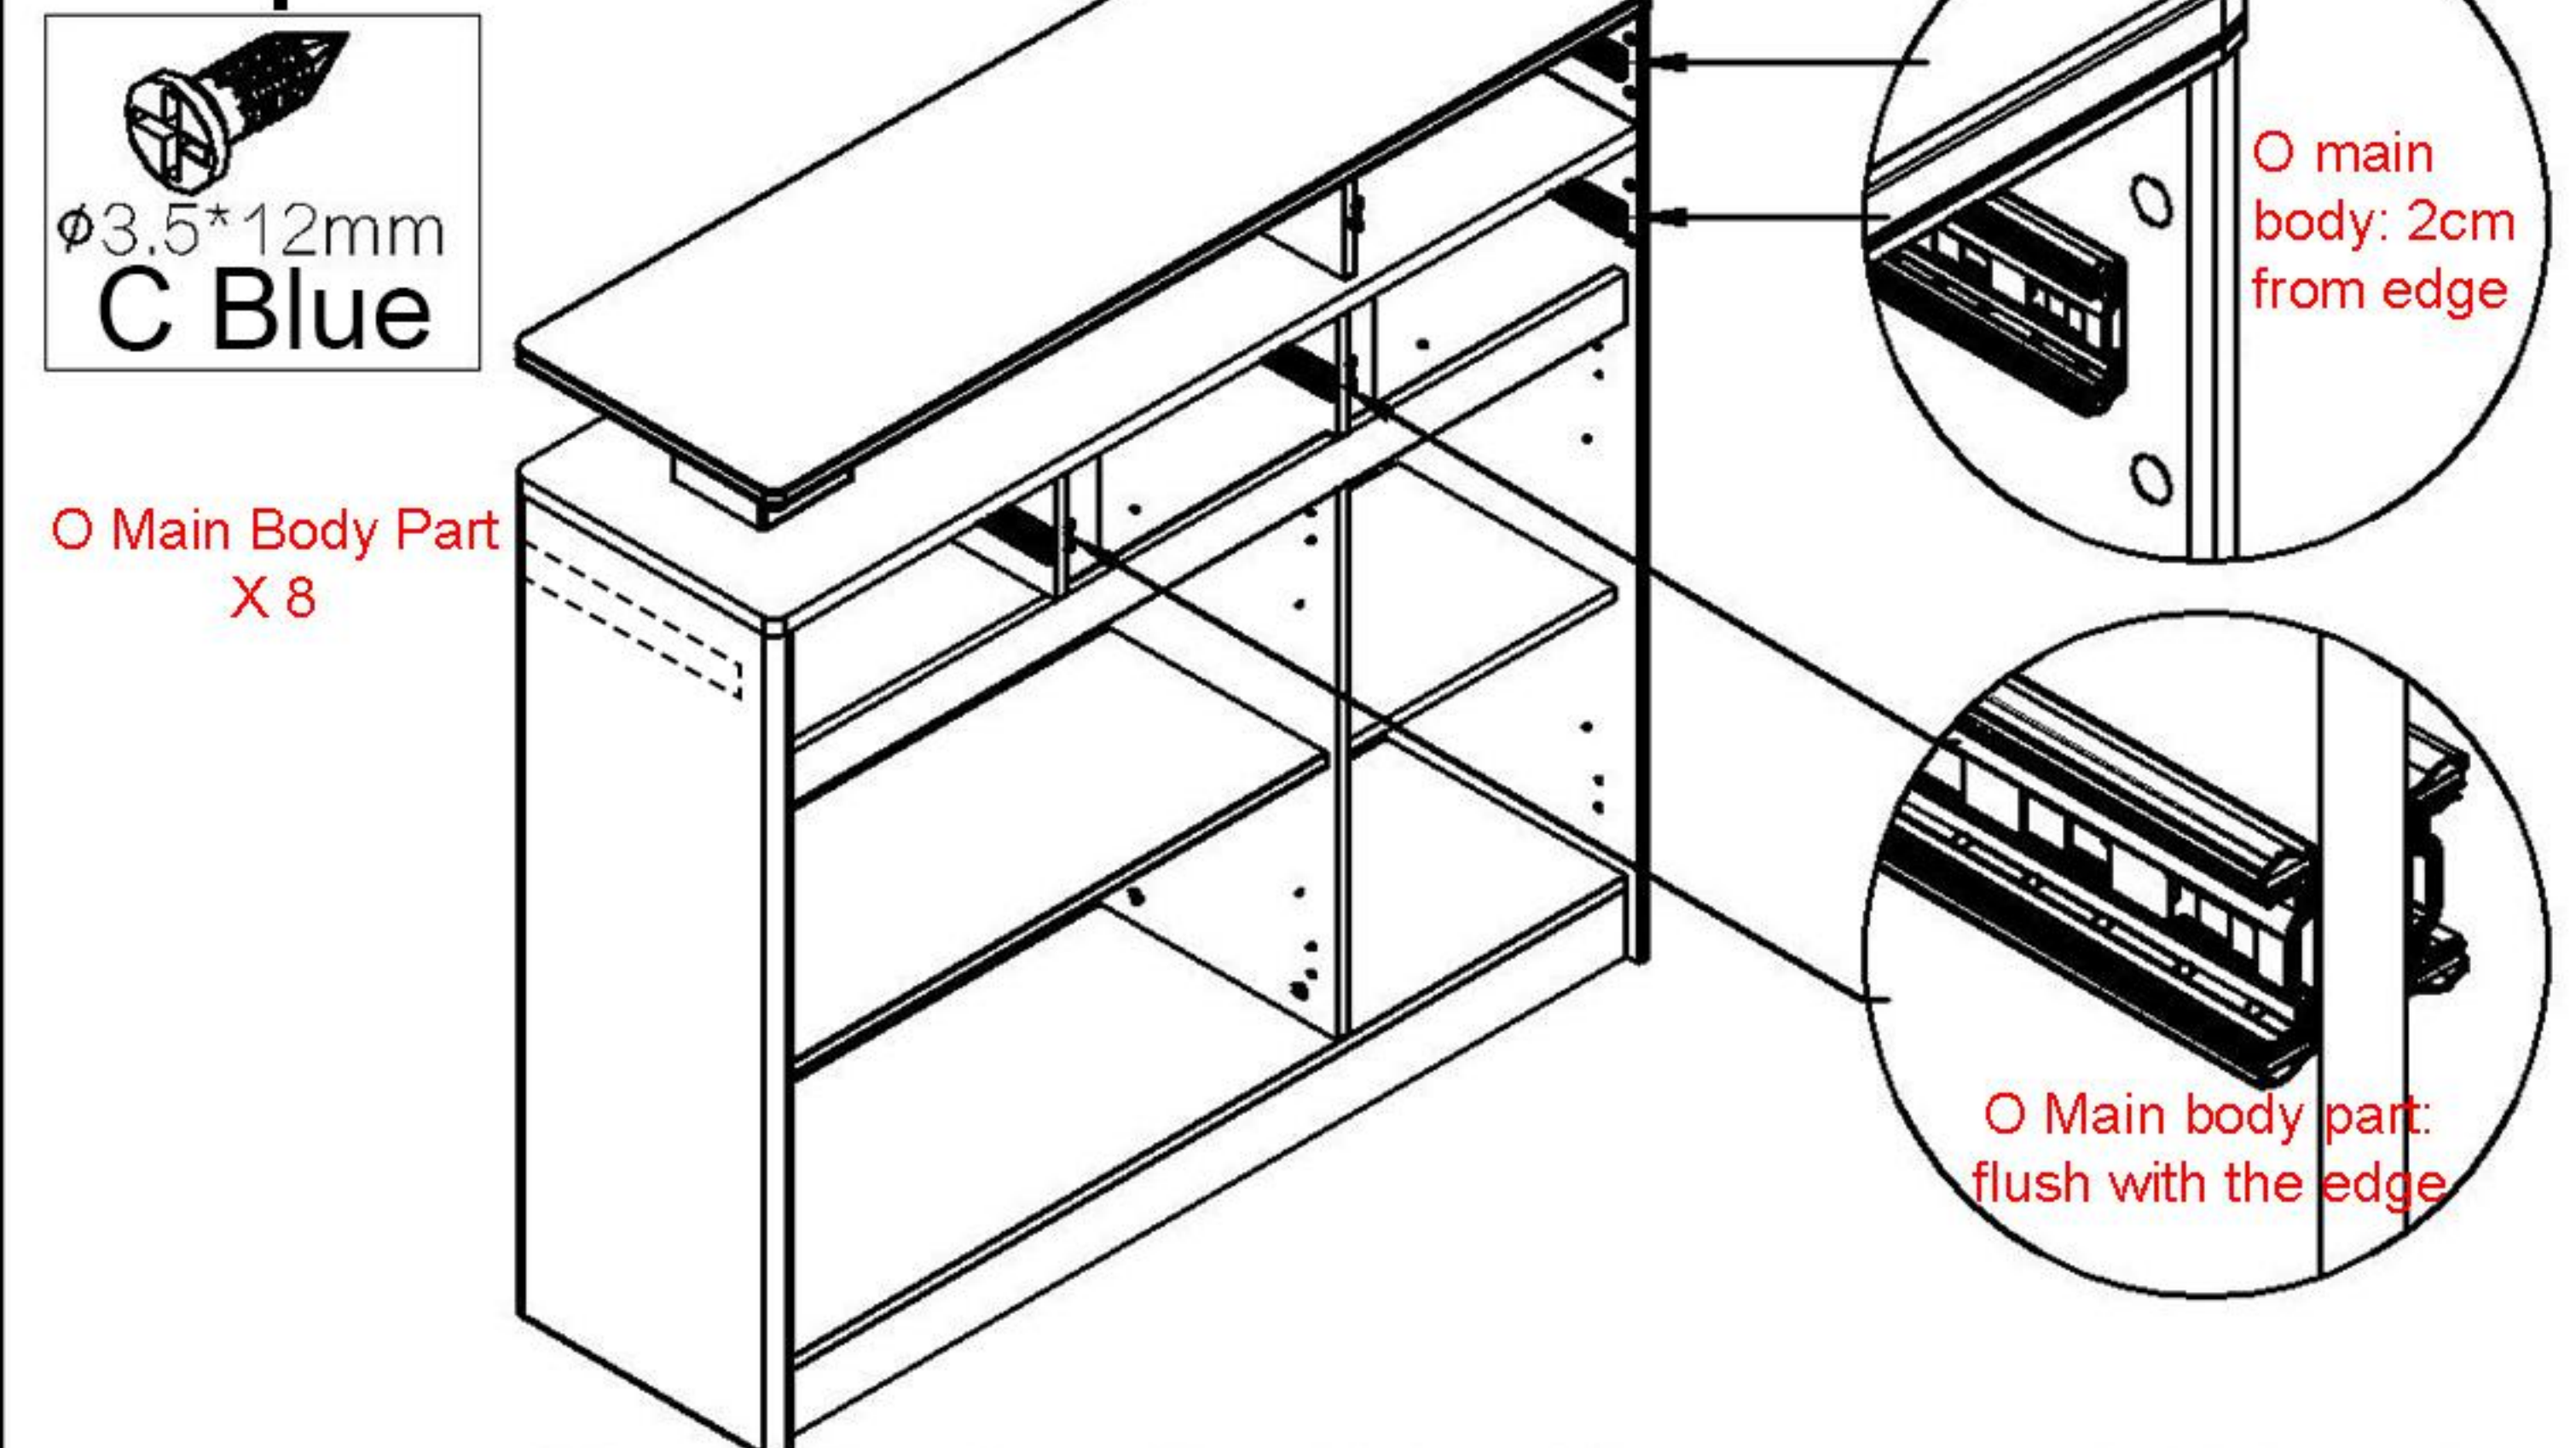


Step 11:

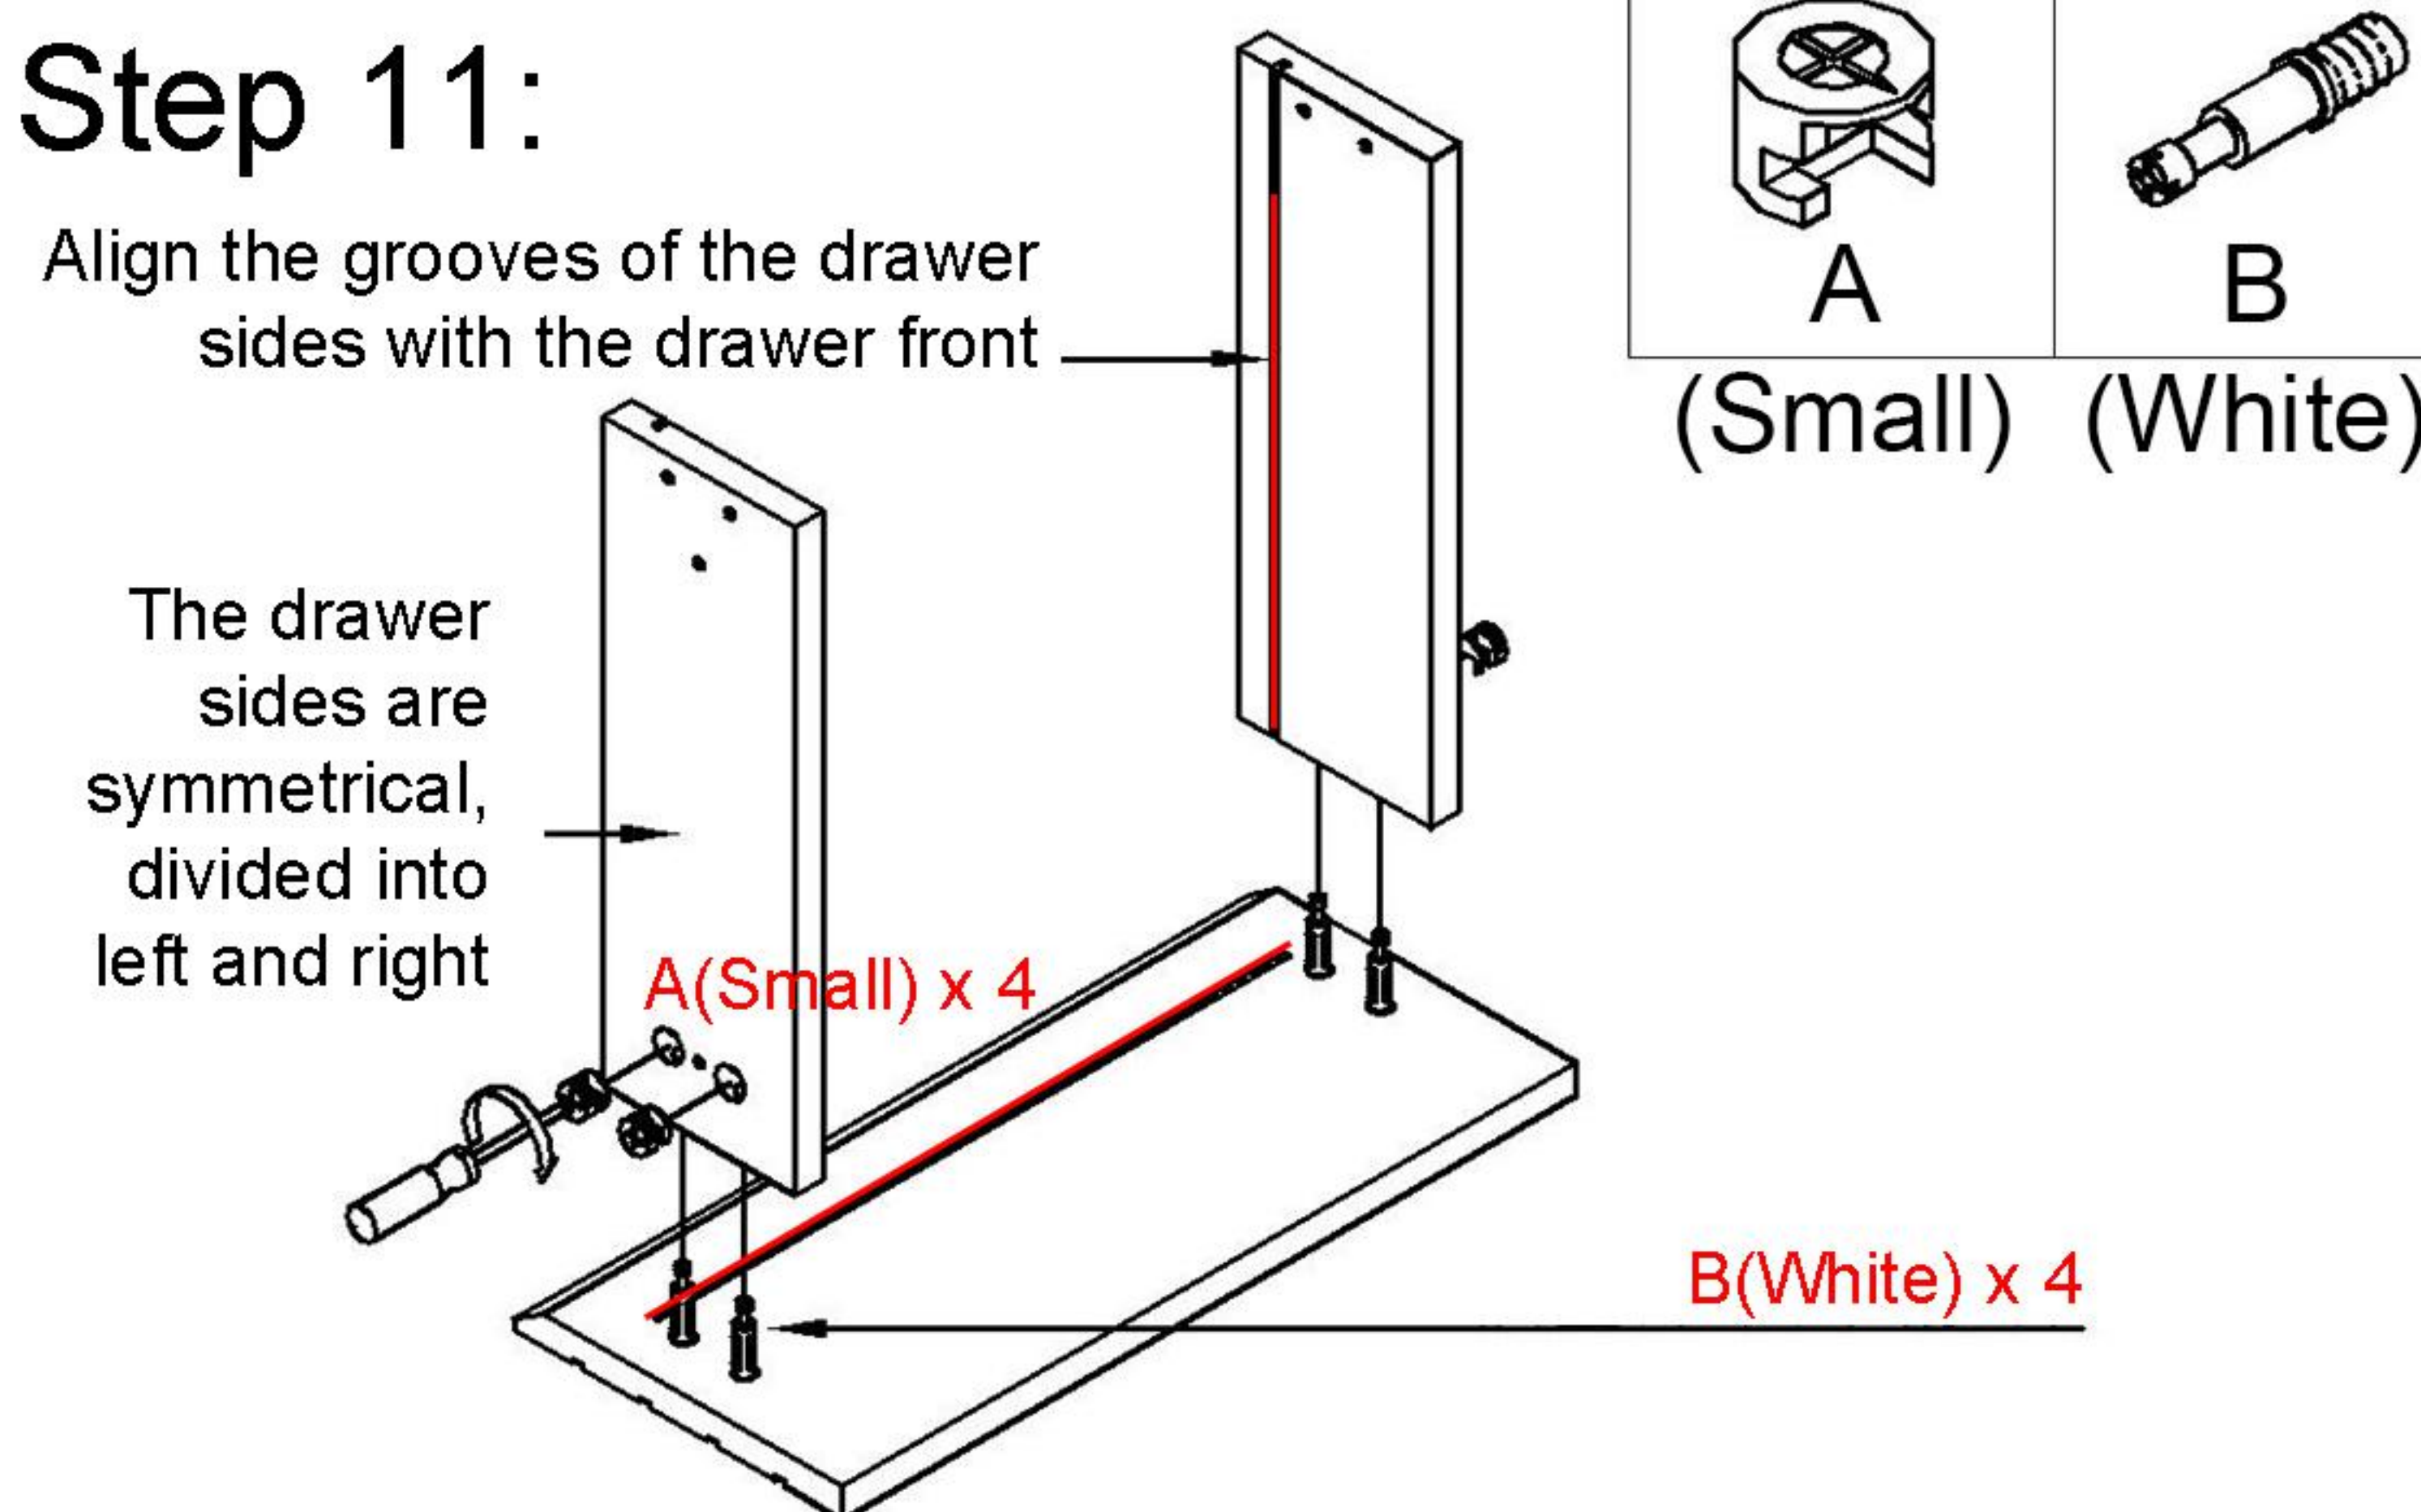


Step 12:

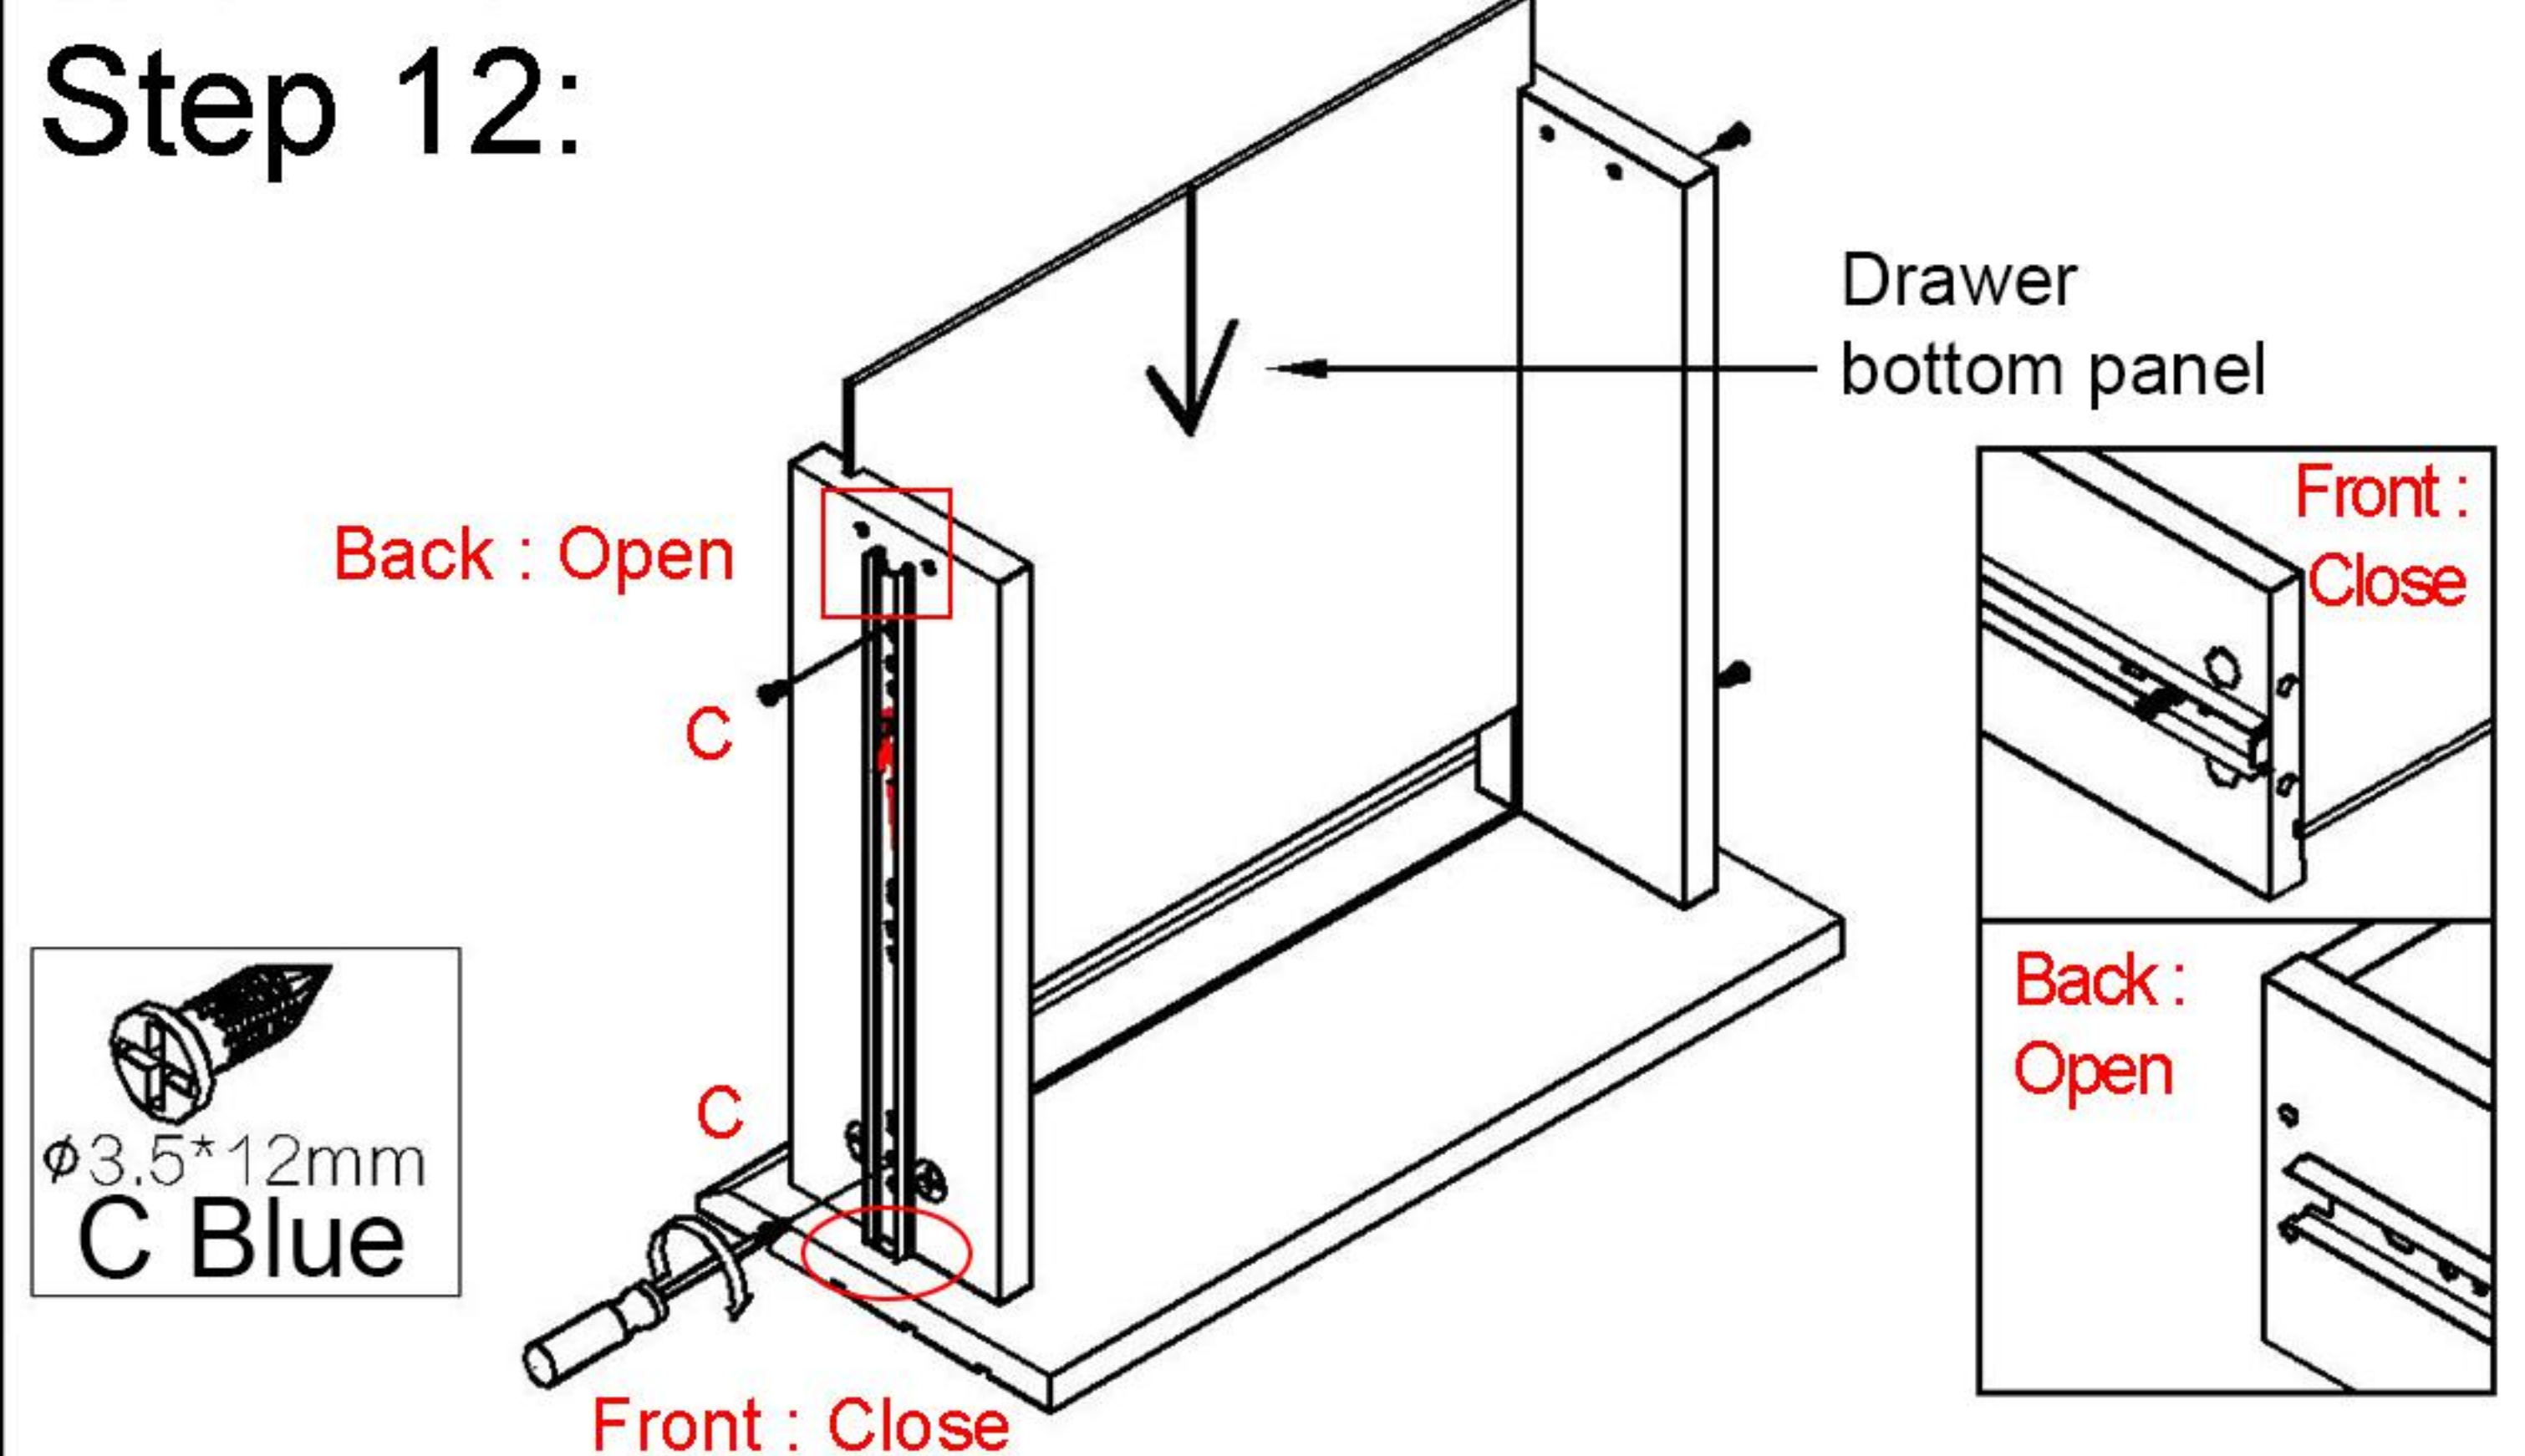

Step 13:

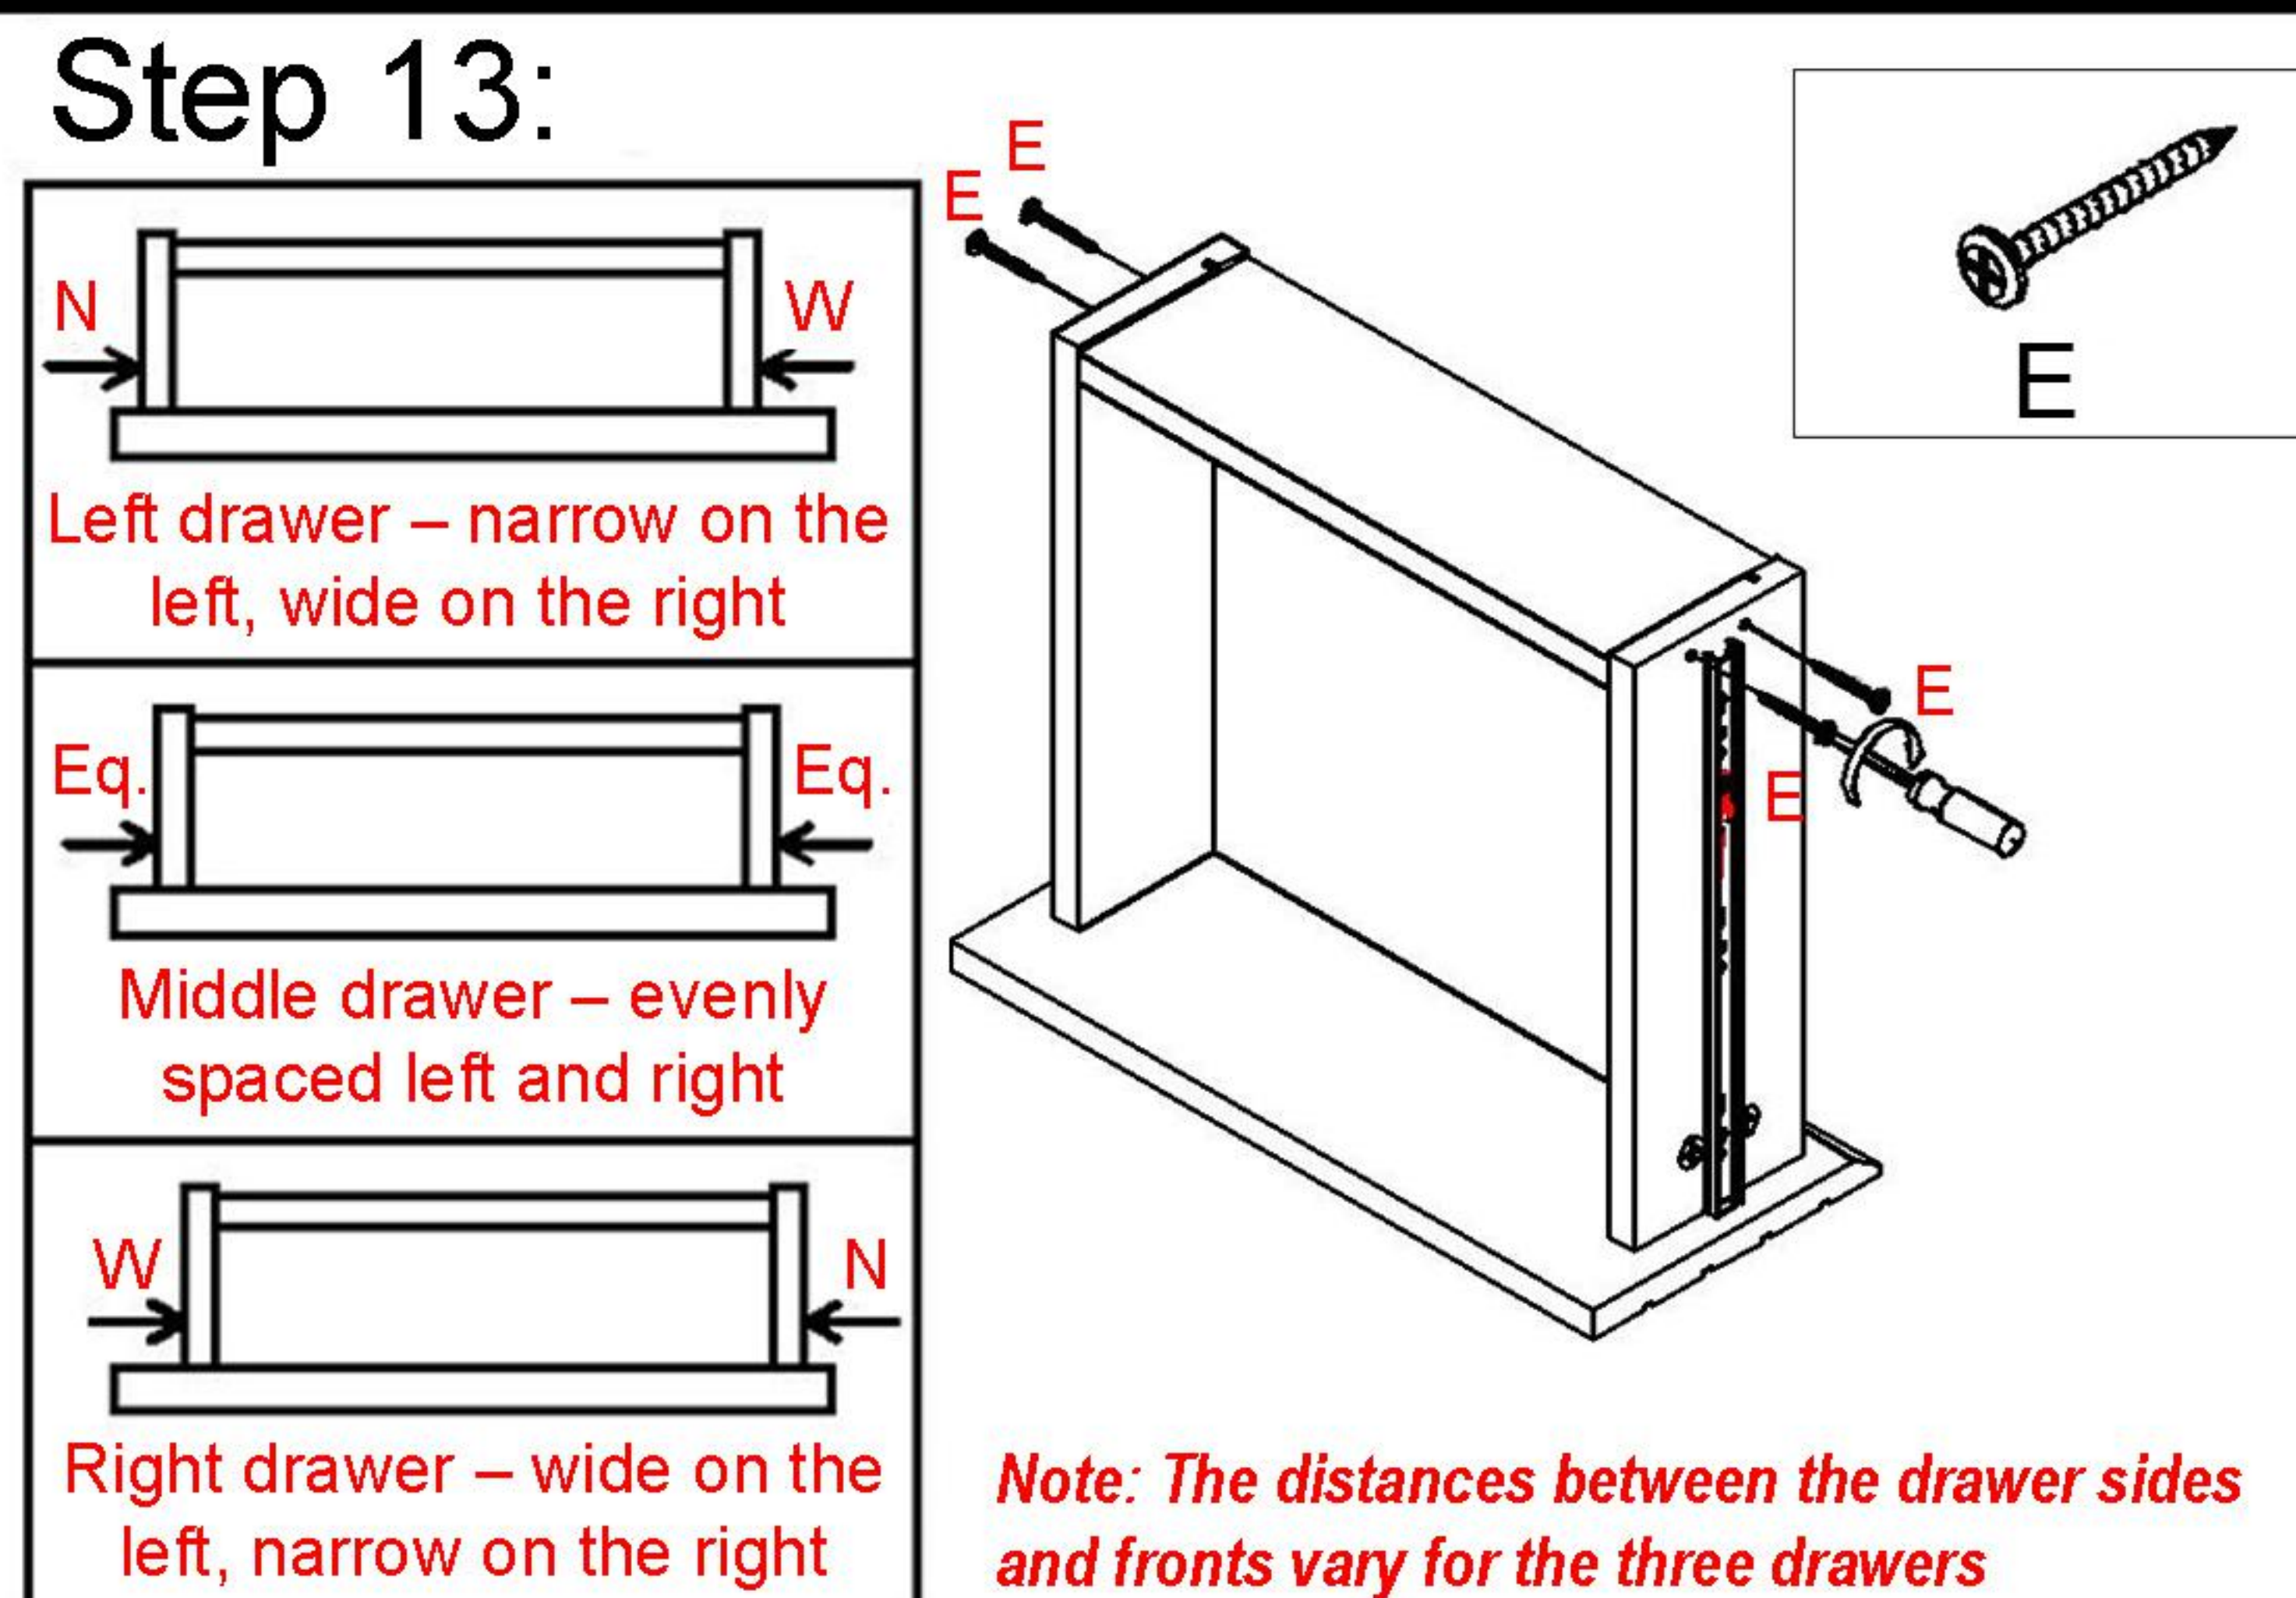


Step 14:

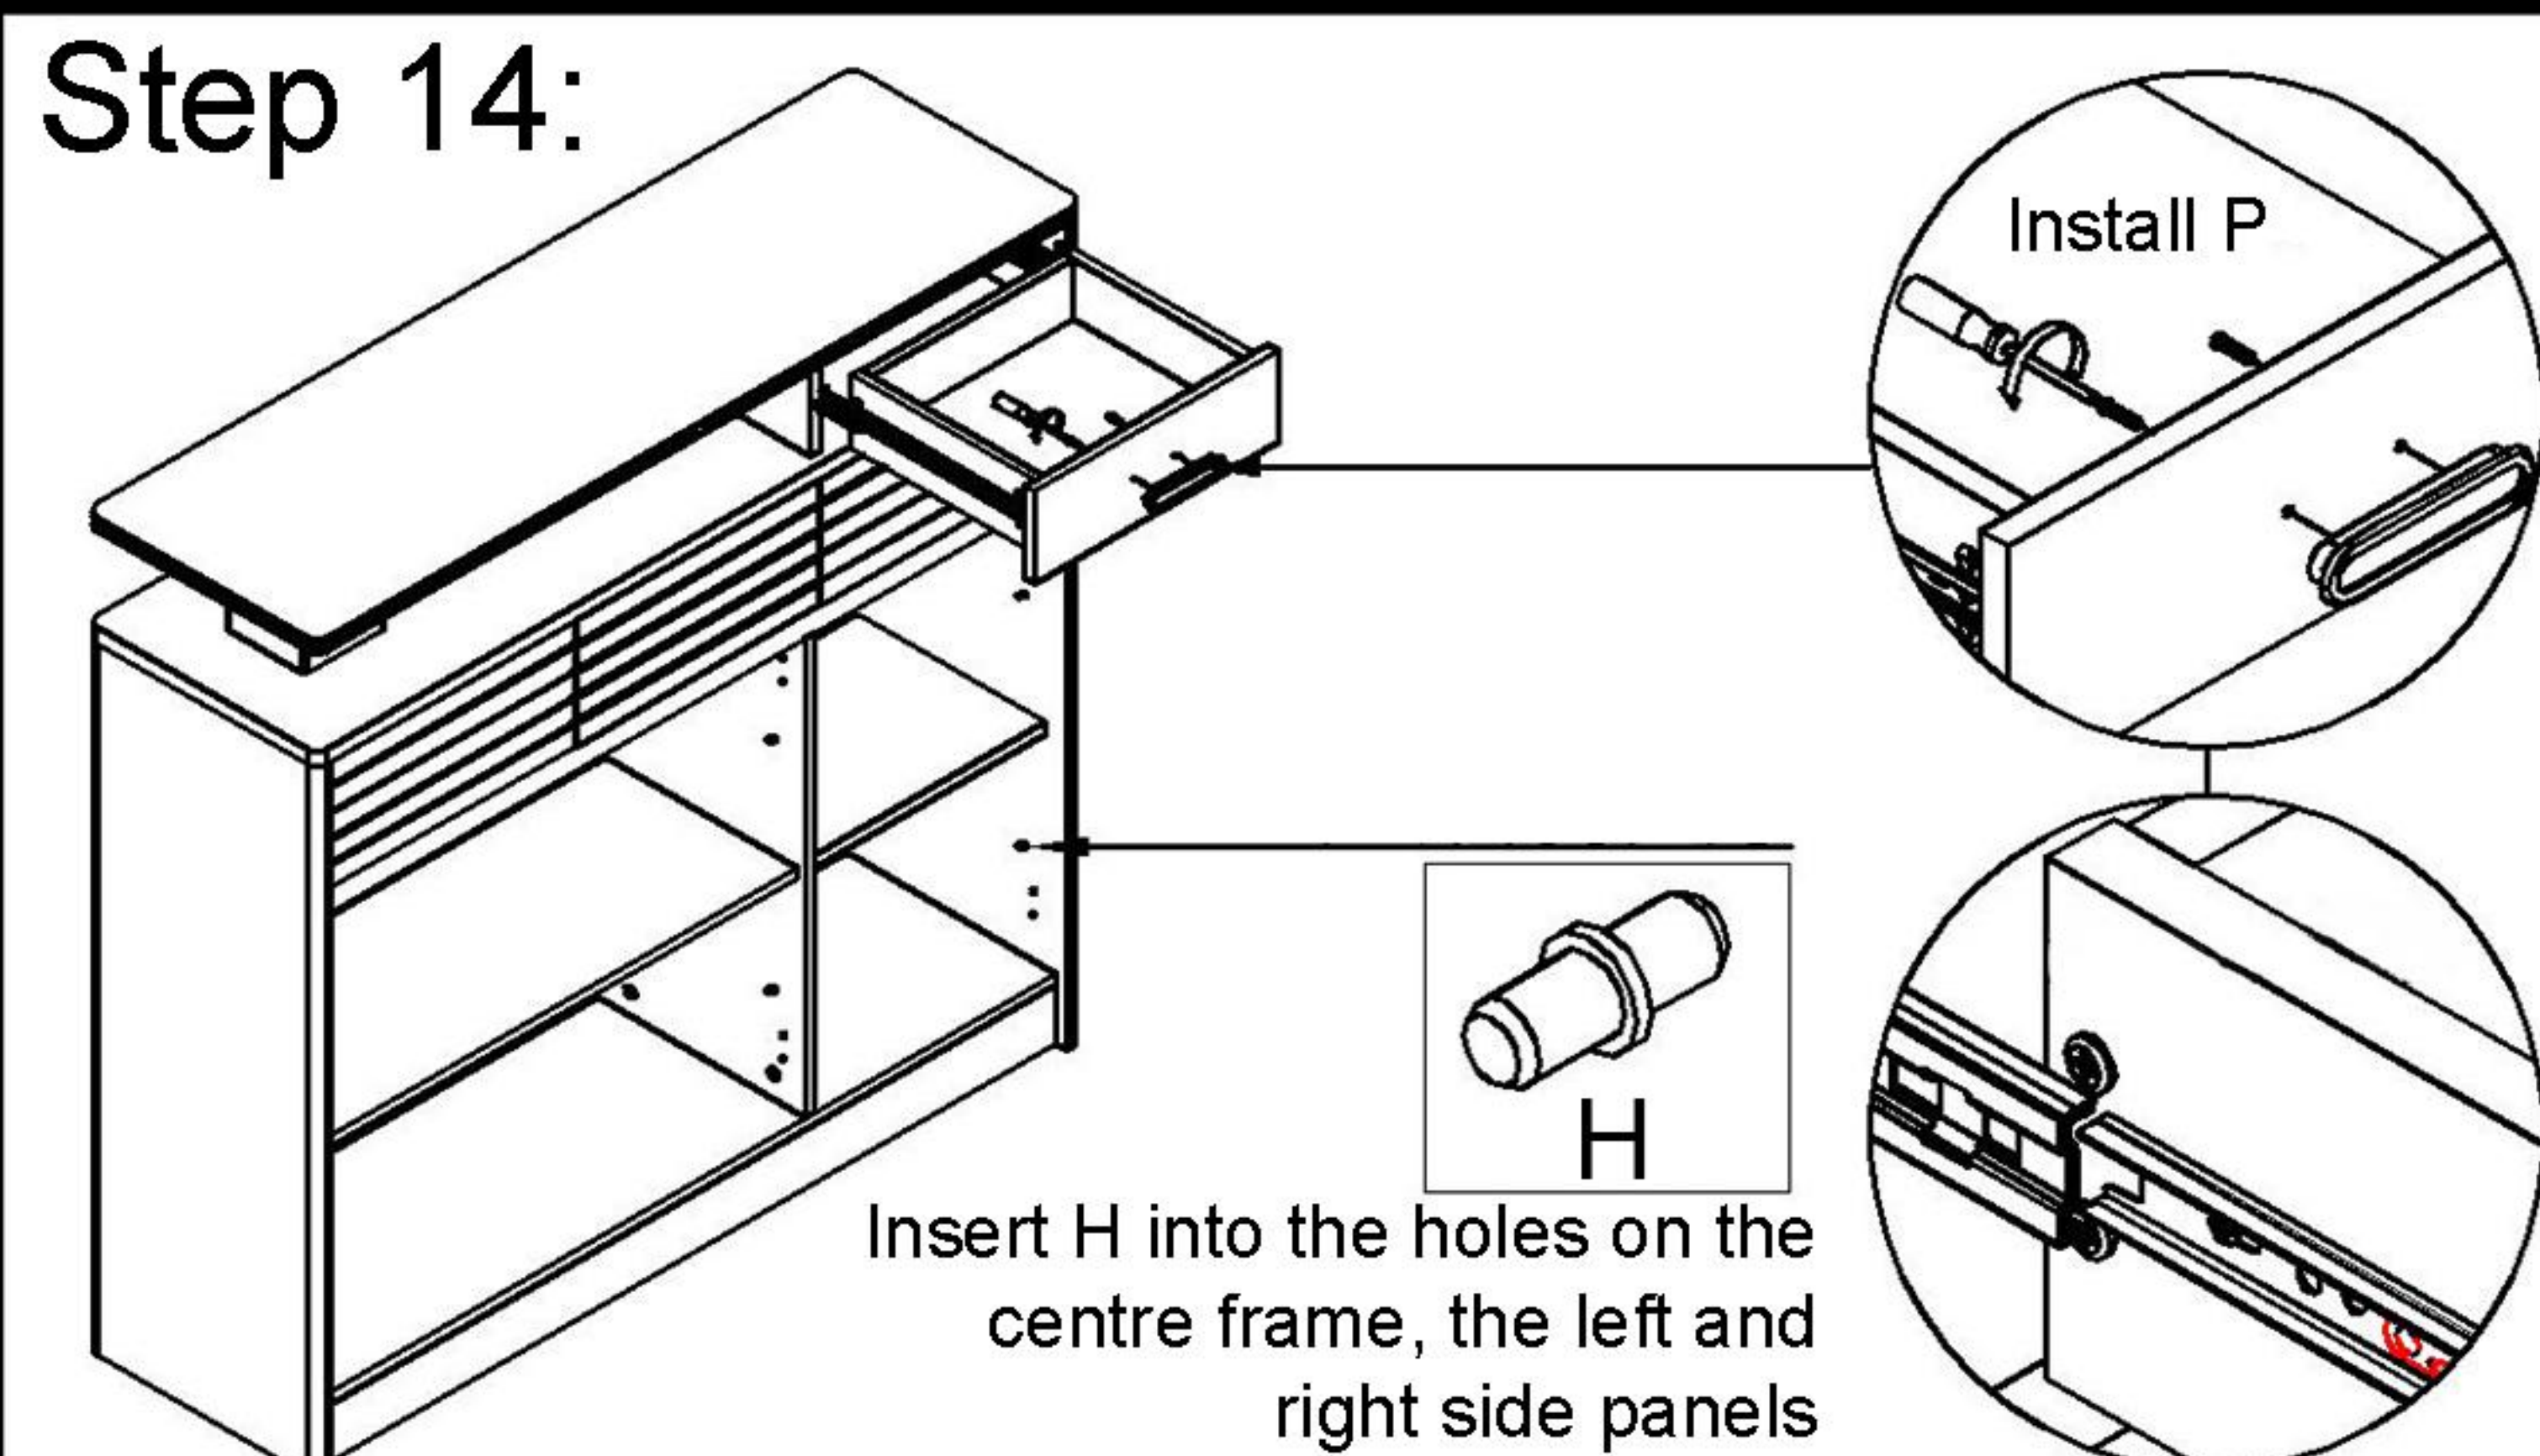


First, secure the rear two holes of L or K with I, then install the front two holes. Refer to the initial hinge installation instructions to adjust the door's height and gap.

Step 15:

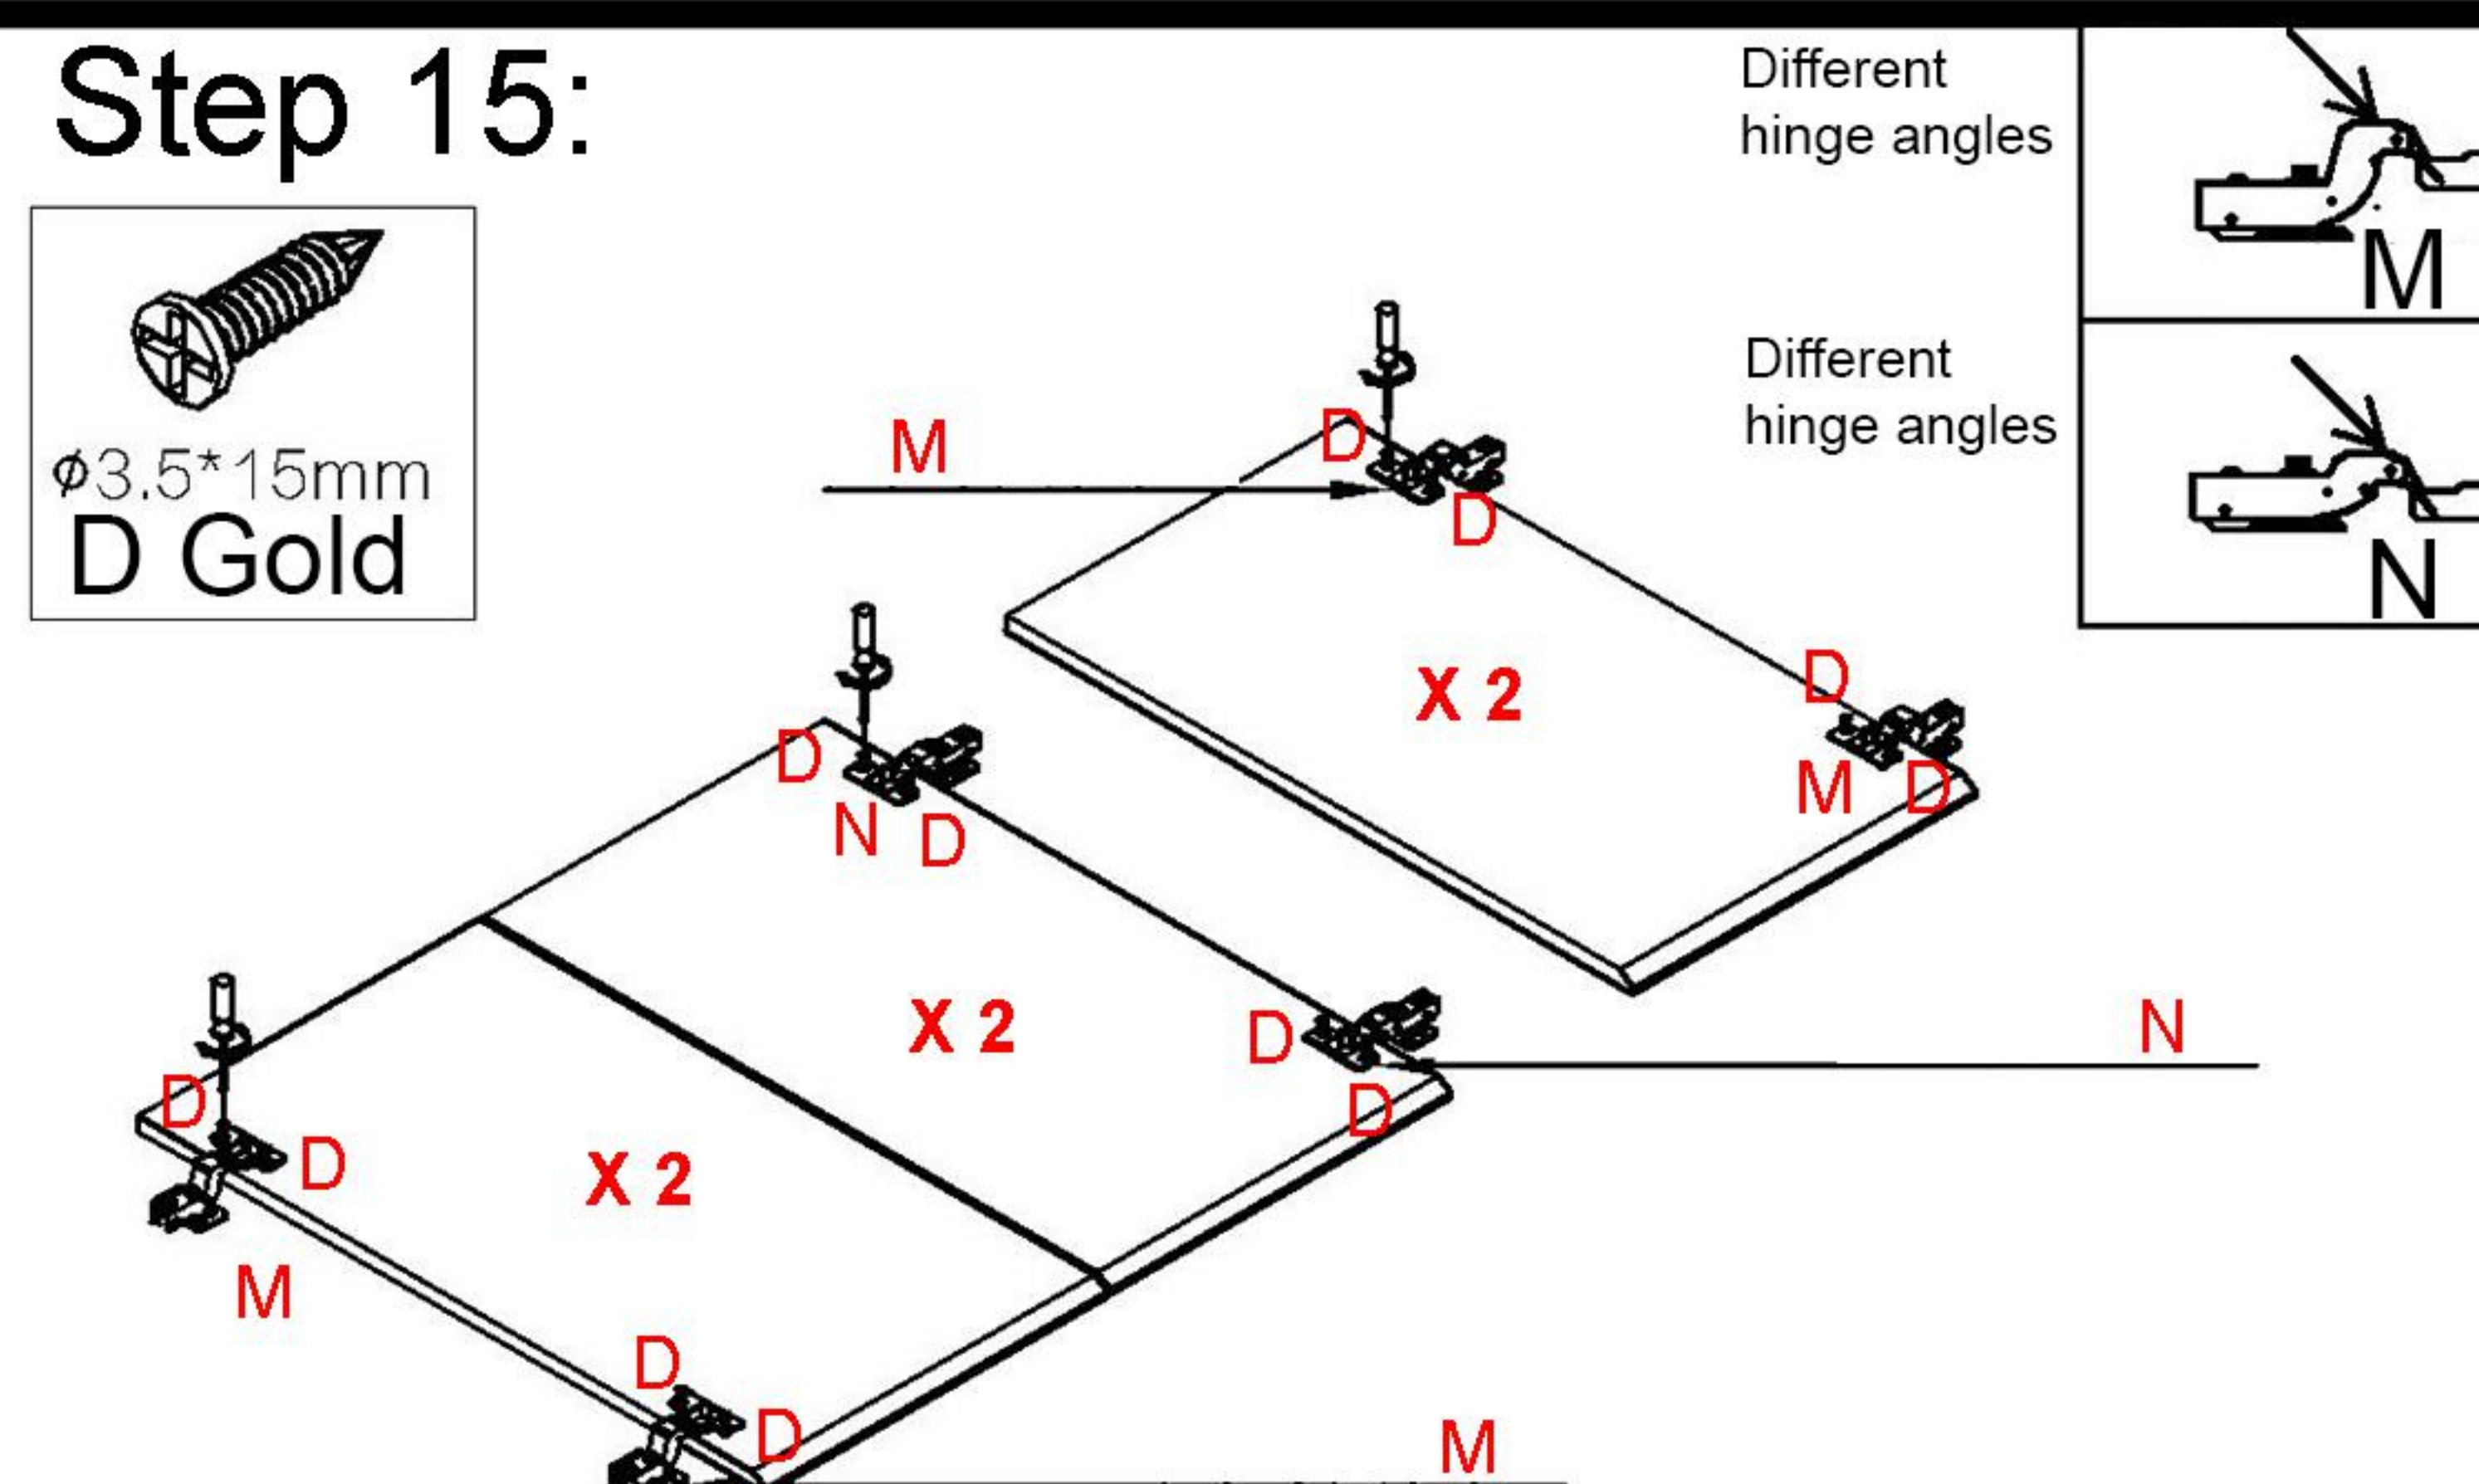

Use D (Gold) to install M and N. **DO NOT overtighten** to avoid amage—tighten only until resistance is felt. Note: There are cabinet doors on both the front and back sides, so a total of **6 doors** need to be installed.

Step 16:

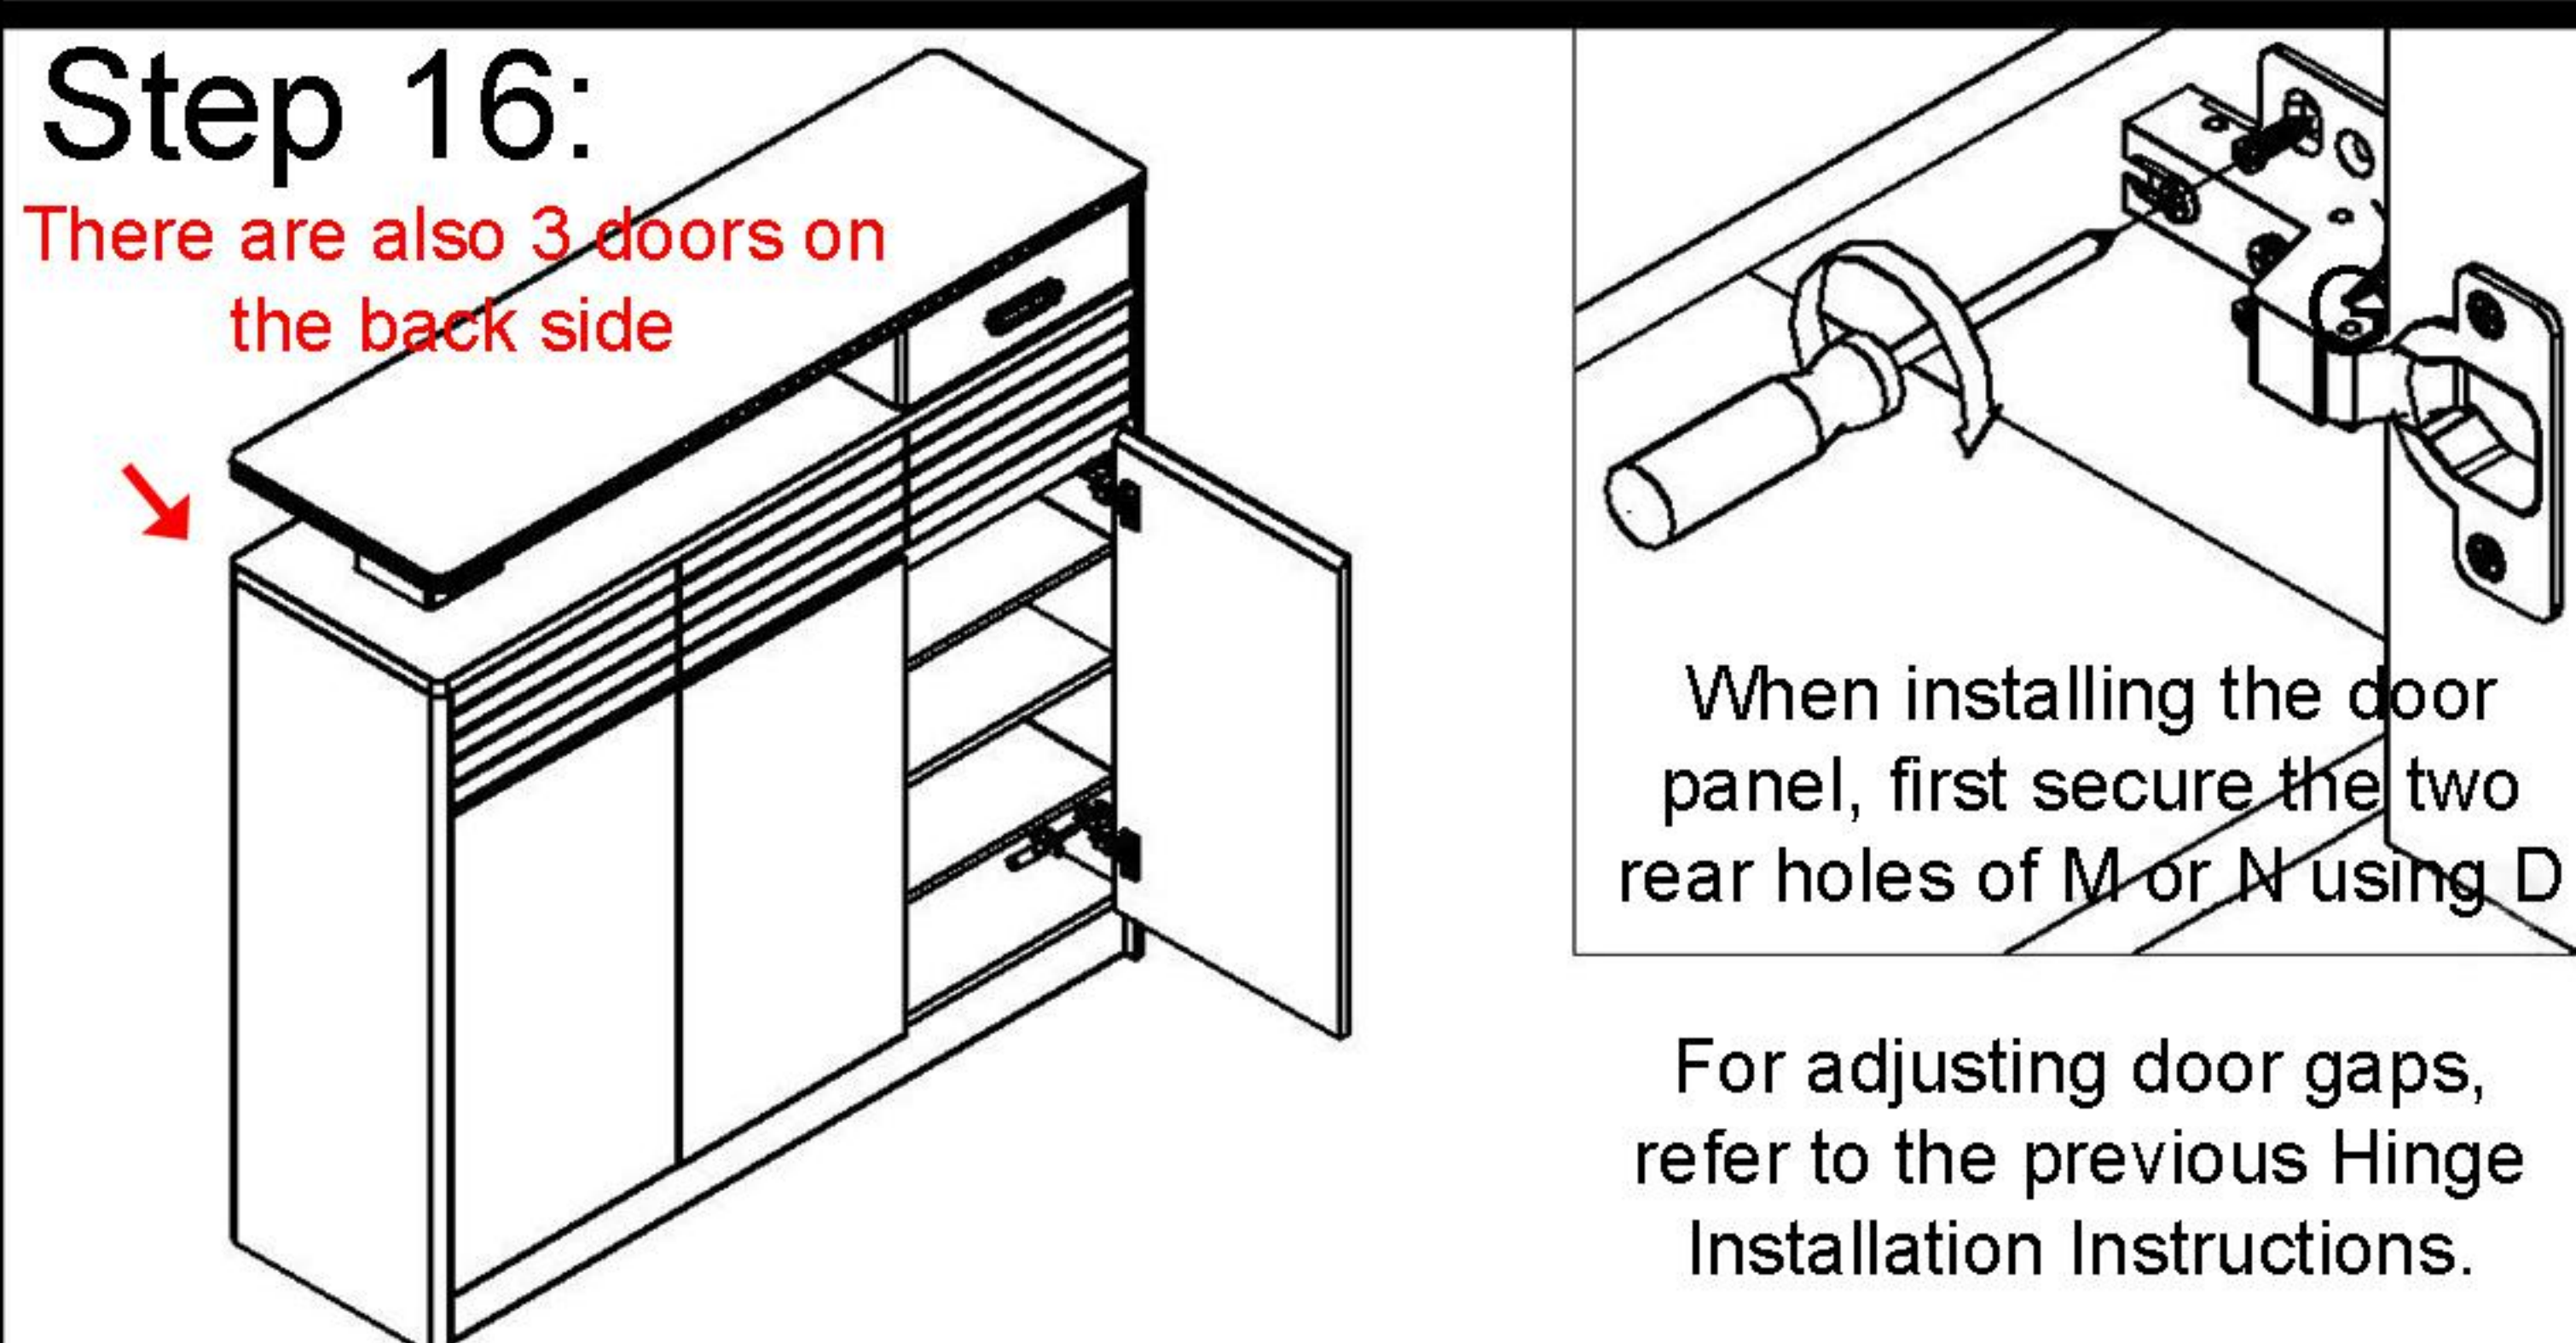

Pull the O main body part part fixed to its full length, with the silver ball-bearing section at the front. Insert the O pull out part on both sides of the drawer into the slots, then gently push to secure. Note: The two front holes of M/N are not pre-drilled on the side panels. Adjust their positions as needed during installation.