

BS044

The Installation Diagram

1



Embed the front bracket and rear bracket into side plate, put back plate into the transom. And repeat the above steps with other brackets.

2




3




Embed each bracket, put them together. And repeat the above steps with other brackets.

Cover the lid after all the brackets are installed, make sure the lid face to the right direction.

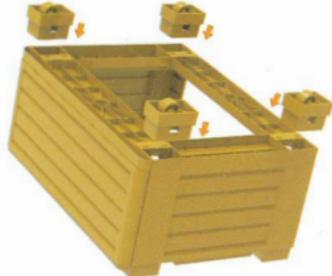

Embed the wheels frame into the transom.

4

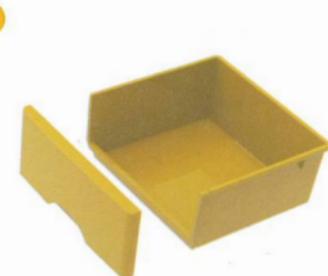

Embed the drawer panel, match the corresponding position. And put drawers in.