

BD017

Installation Instruction


Please read this instruction manual carefully before installation and use.

Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:

1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.




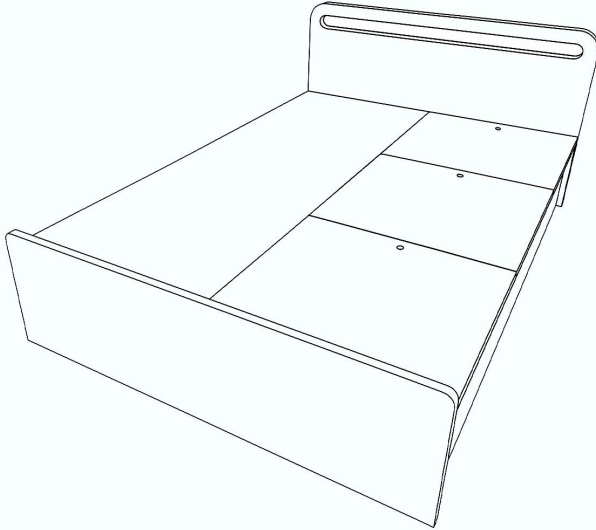




Scan the code to purchase ES001




NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

Hardware List

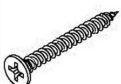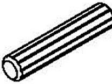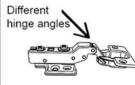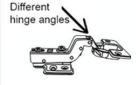A	B	C	D	E	F	G	H	I
Cam Lock	Cam Bolt	Screw (Long)	Screw (Short)	Half Overlay Hinge	Hull Overlay Hinge	Wooden Dowel	Drawer Slide	Foot Nail
								
								

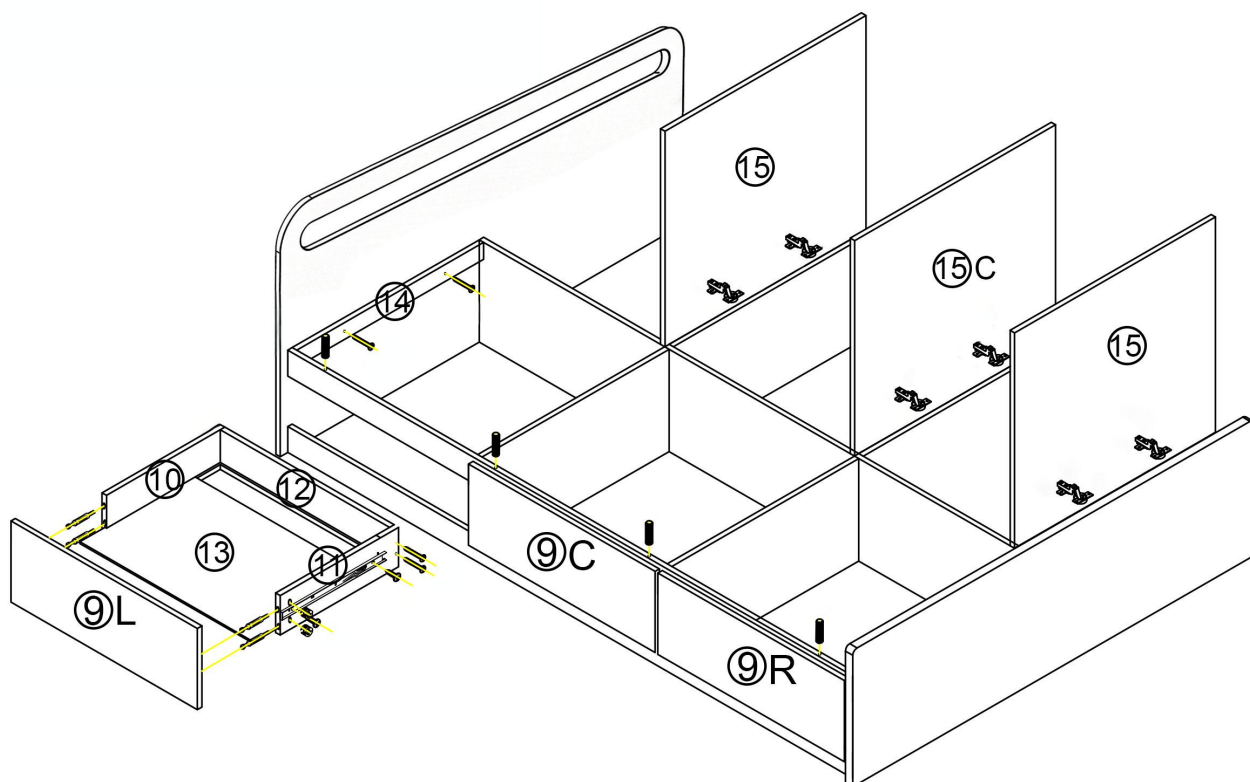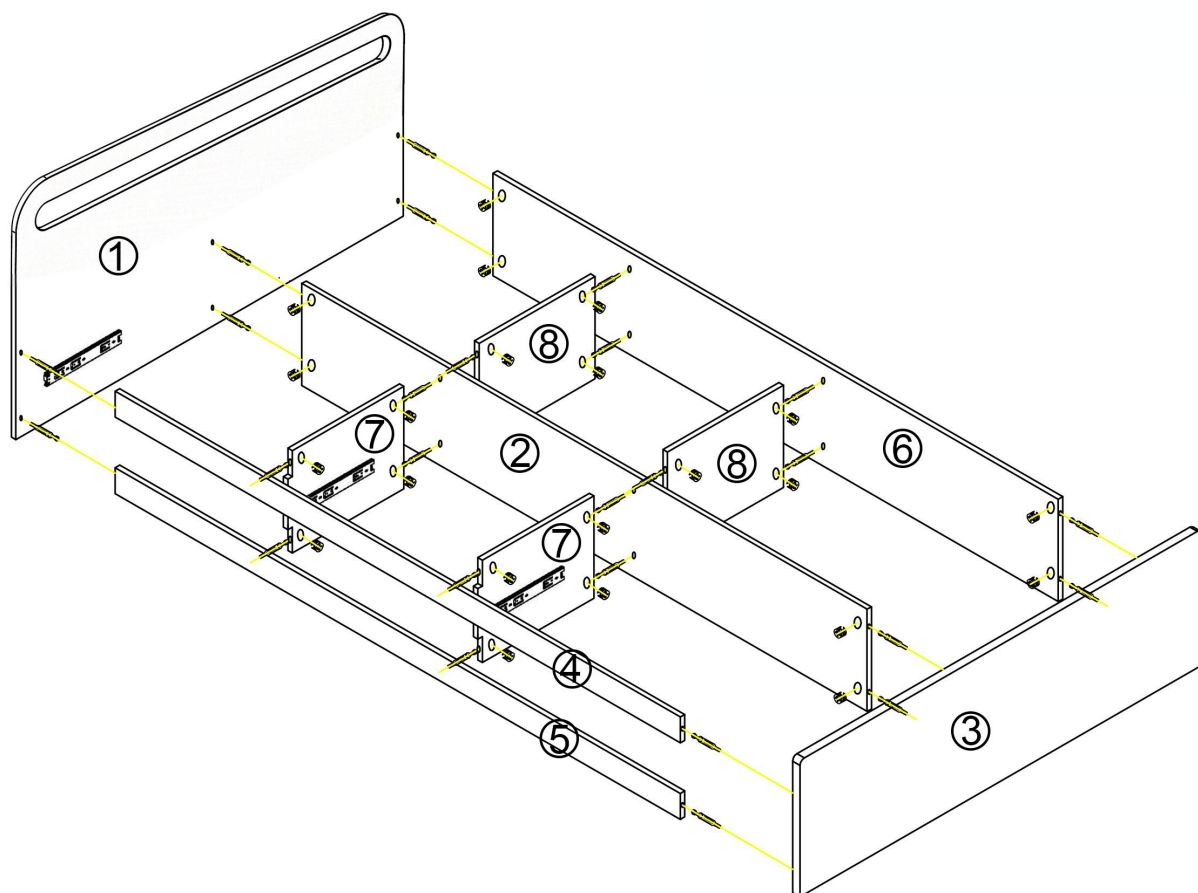


Half Overlay Hinge (E) vs. Full Overlay Hinge (F)

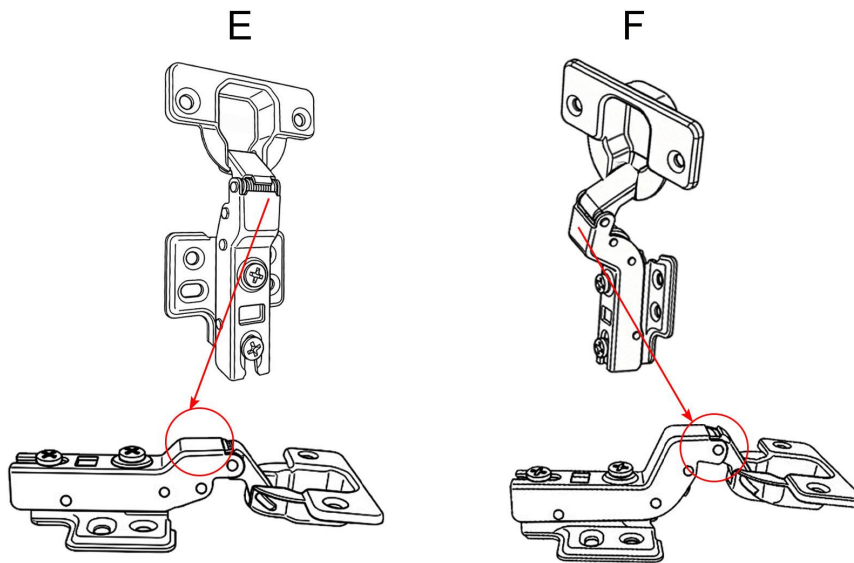


Detailed description of the main components, please read carefully

E/F (Hinge) Installation Instructions

Install the hinge with screw **D**

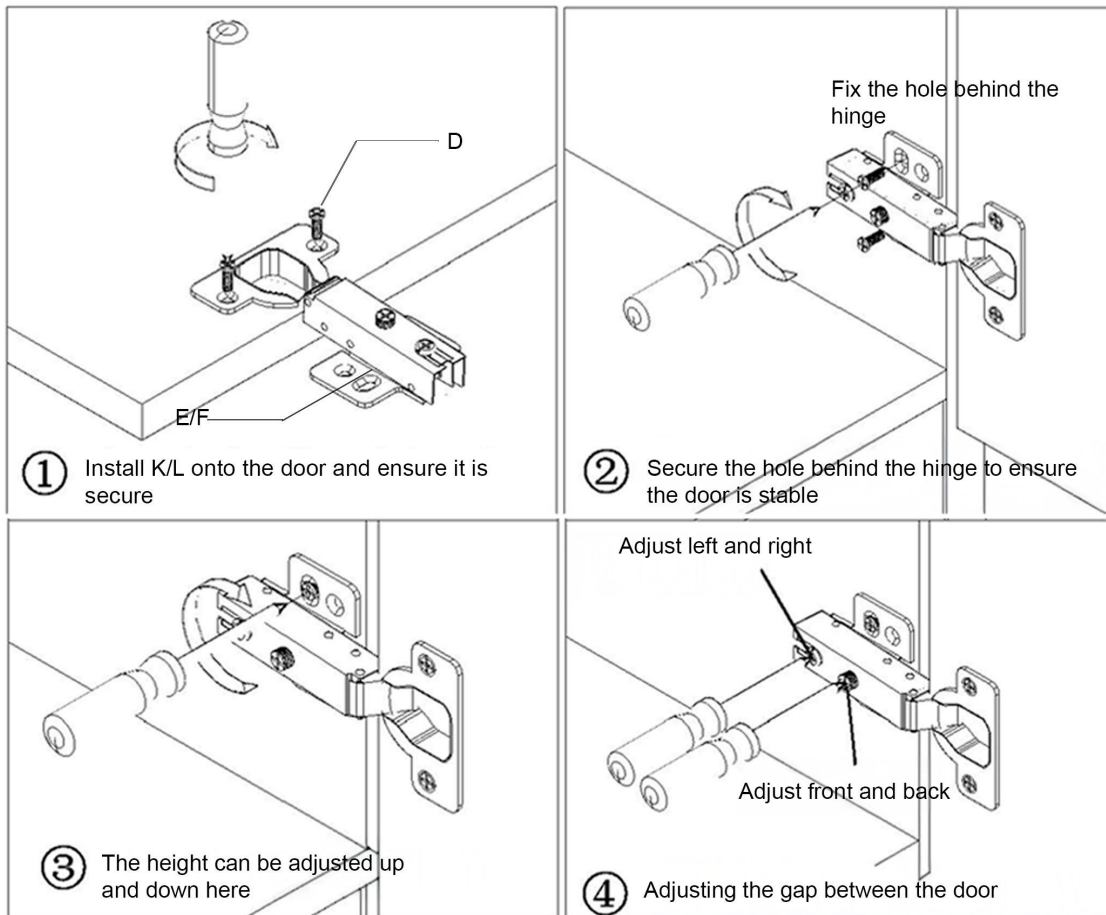

Installation Guide: Threaded Rod, Latch, Pre-drilled Hole (A + B)

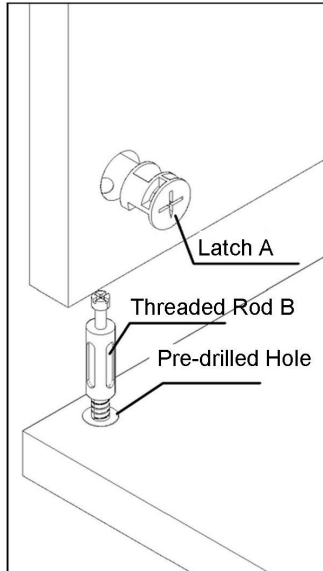

1. Screw the Threaded Rod into the Pre-drilled Hole
2. Insert the installed Threaded Rod into the corresponding hole of the other piece. Press Latch into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.

H (Sliding Rail) Installation Instructions


When installing H, use with screw D

1, Separate H (Sliding Rail)



The main body part


The pull-out part

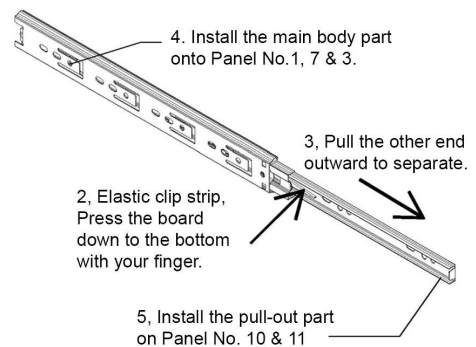


Step 1:



Please prepare a small hammer. It is not included with the

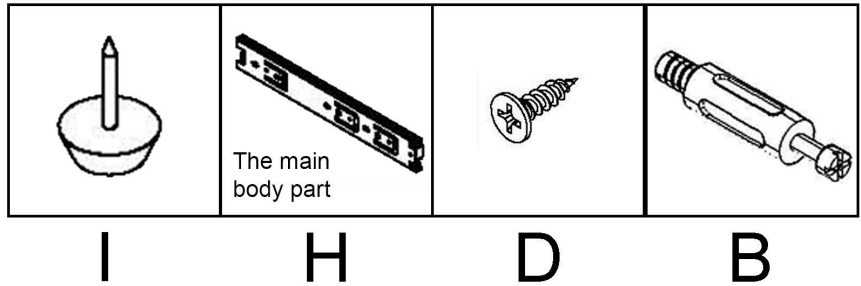

Option 1 Drawer on the Left side

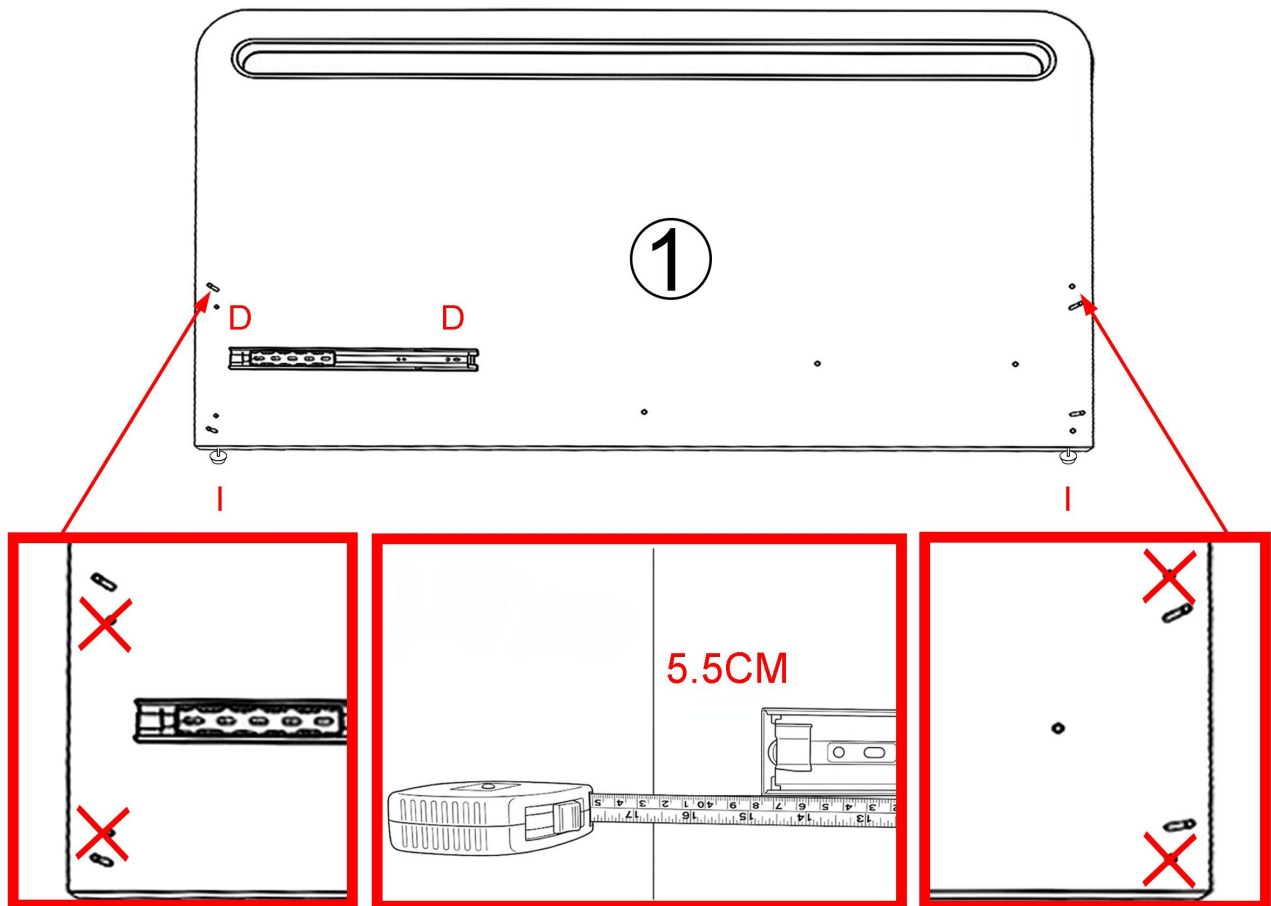


- Install part B according to the diagram.
- Do not install in the locations marked with an "X".
- Leave a 5.5 cm gap from the edge of the main body (Part H).

Note: these two panels have symmetrical cutouts, so the left and right positions are interchangeable.


Step 2:



Please prepare a small hammer. It is not included with the

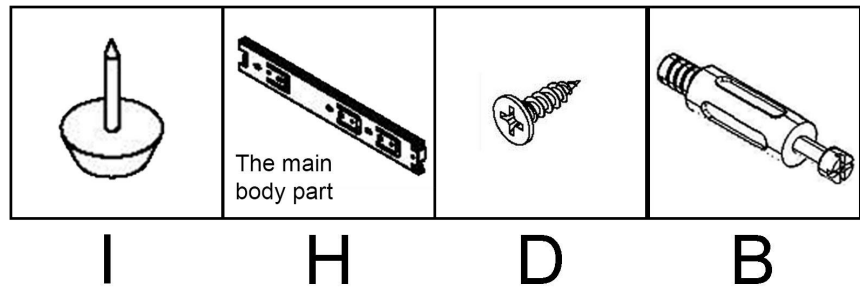

Option 2
Drawer on the Right side

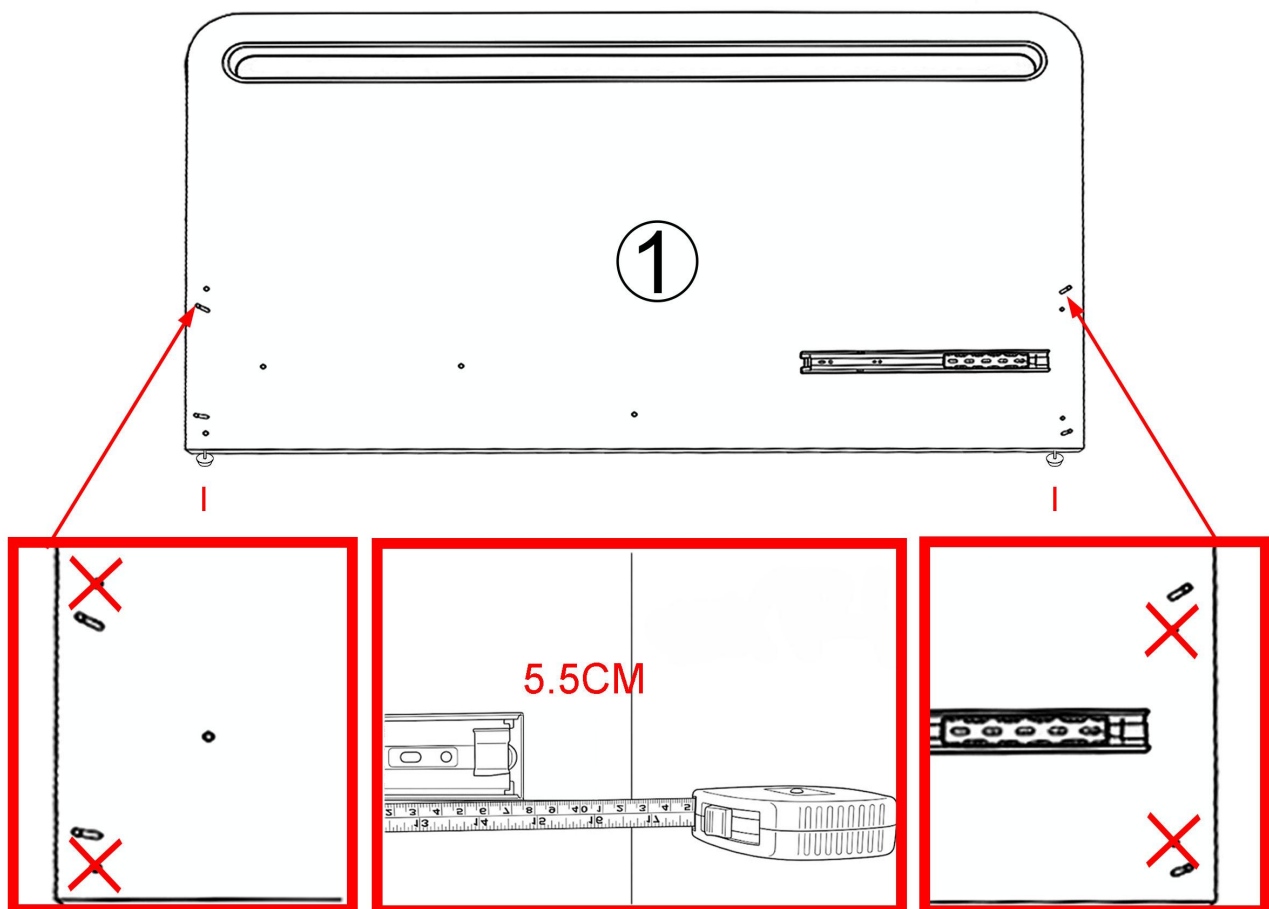




- Install part B according to the diagram.
- Do not install in the locations marked with an "X".
- Leave a 5.5 cm gap from the edge of the main body (Part H).

Note: these two panels have symmetrical cutouts, so the left and right positions are interchangeable.


Step 3:




Please prepare a small hammer. It is **not included** with the

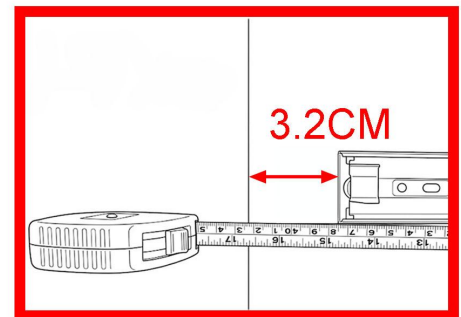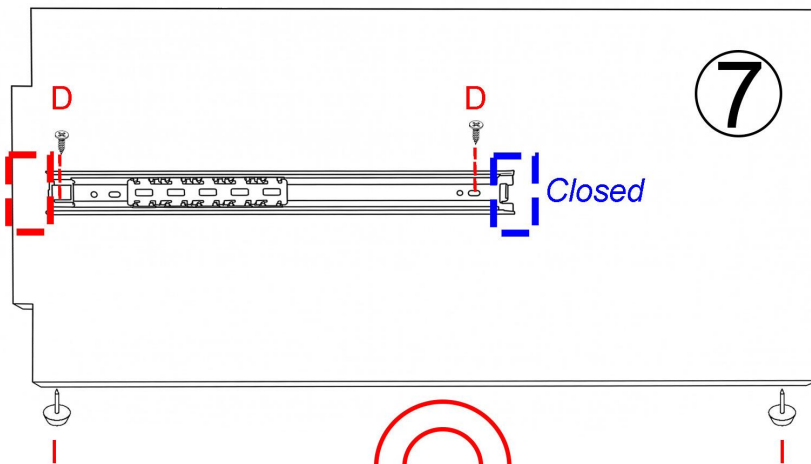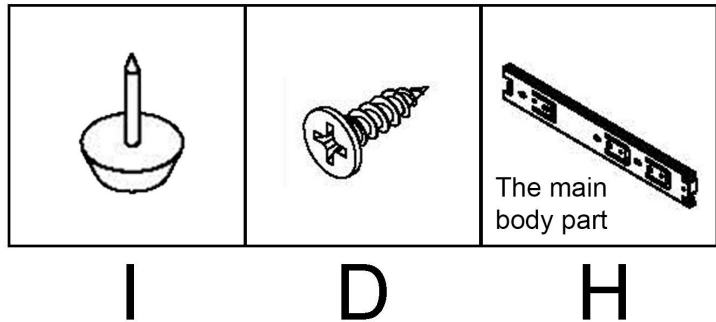

- Leave a 3.2cm gap from the edge of the main body (Part H).
- Install main body (Part H) on both sides of panel 7

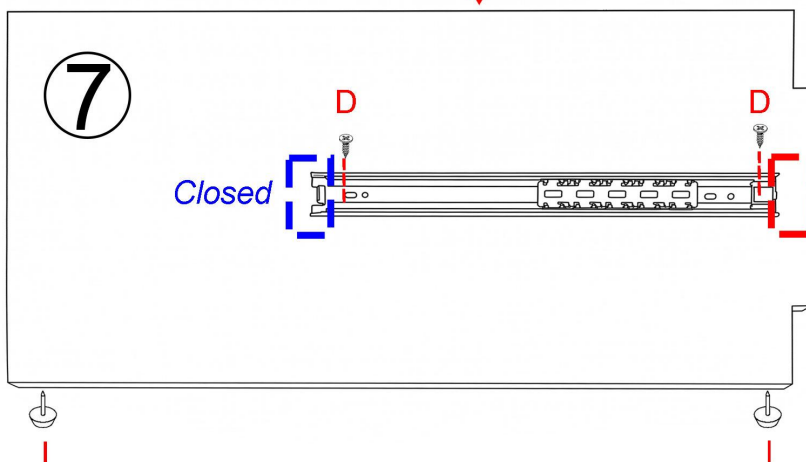


Step 4:

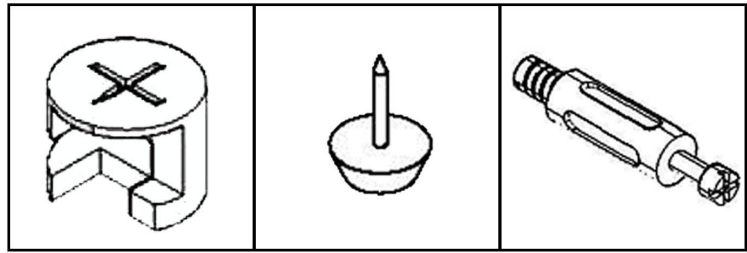

A

I





B

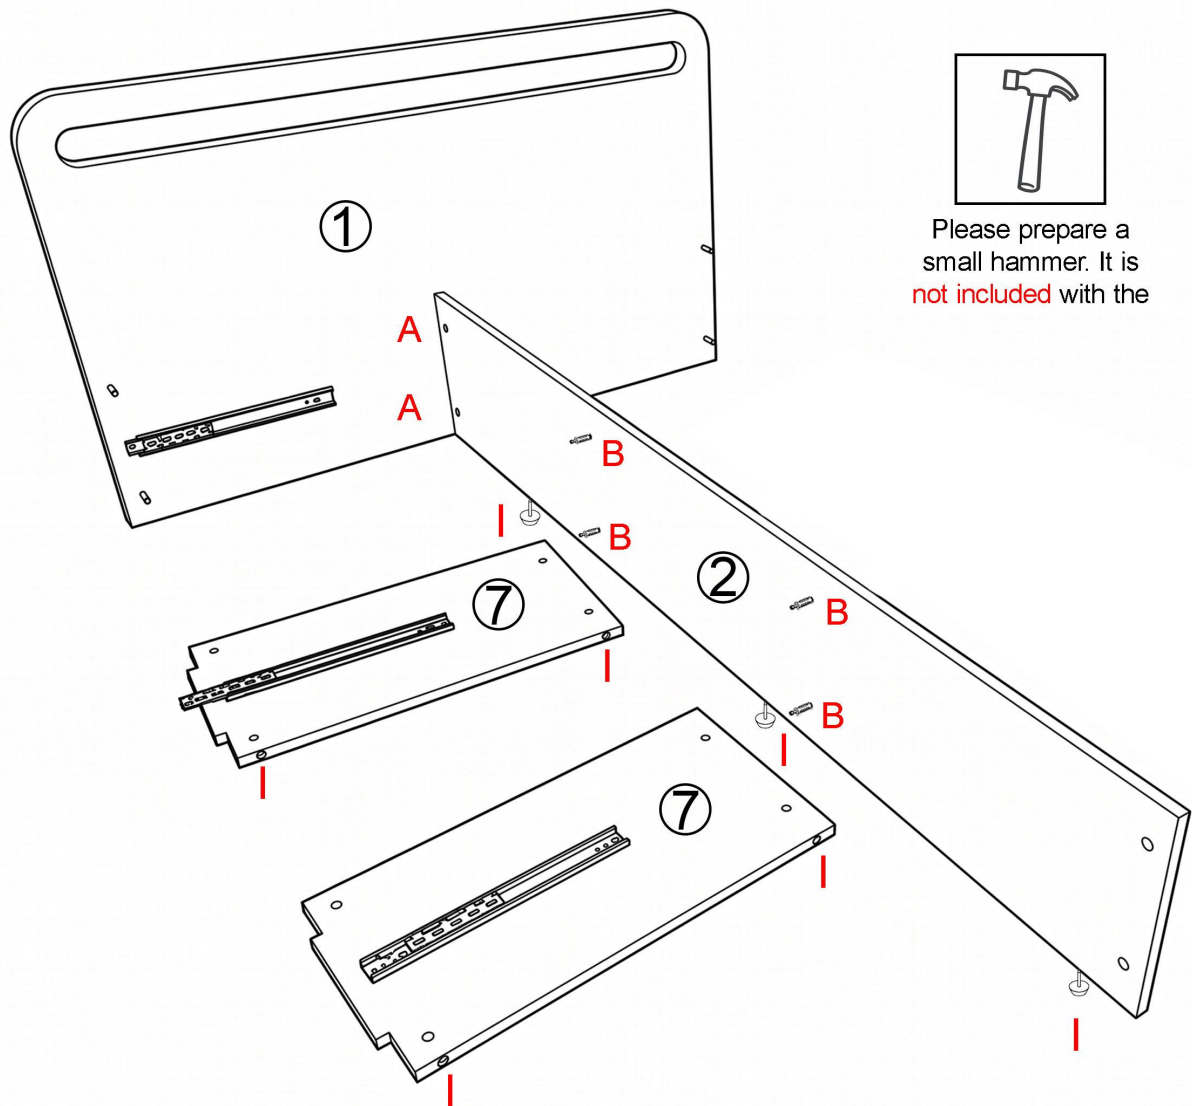

Please prepare a
small hammer. It is
not included with the


*For the next steps, use **Option 1** orientation as shown. For Option 2, install it as a mirrored (flipped) version.*

Step 5:

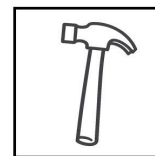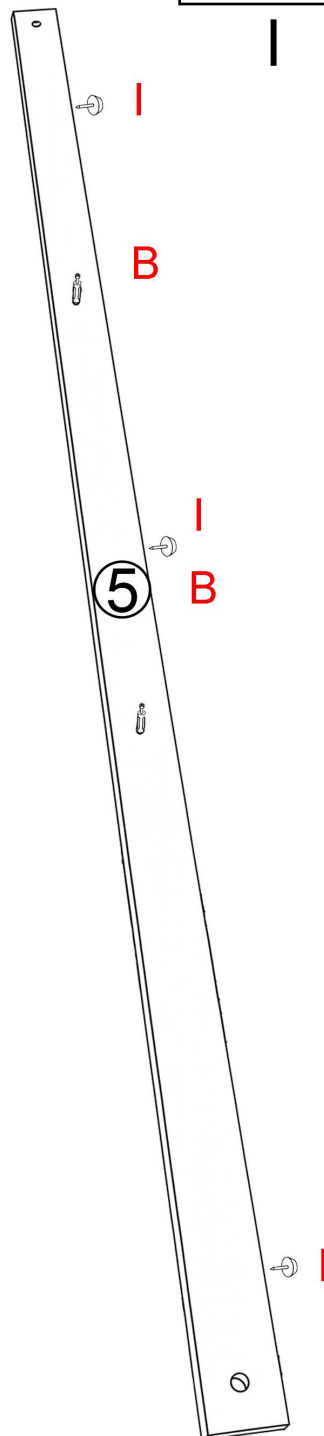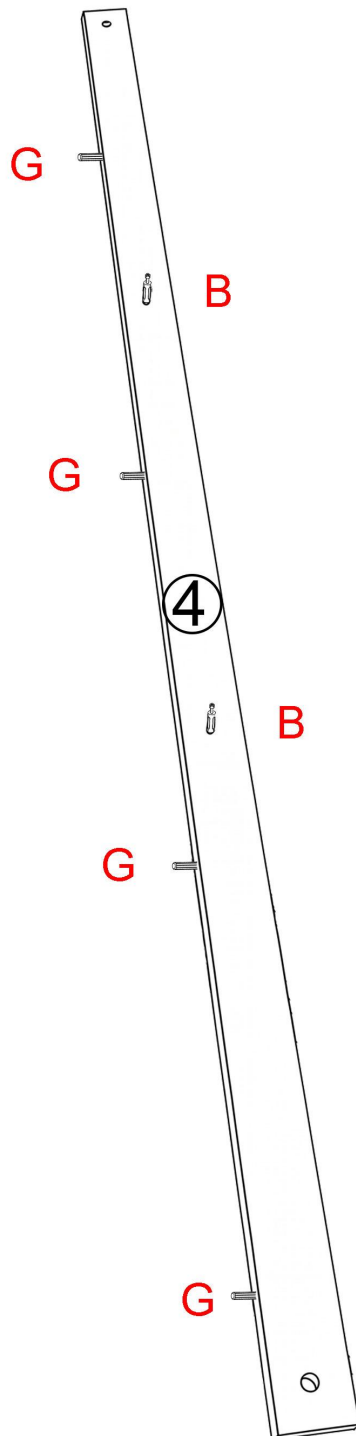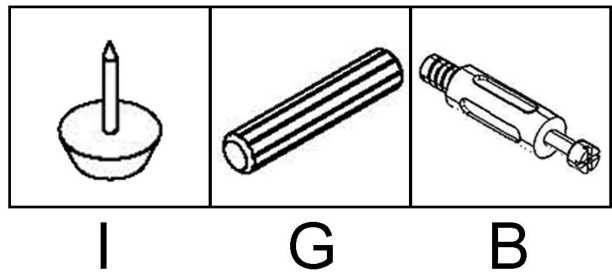

Please prepare a small hammer. It is not included with the


Step 6:

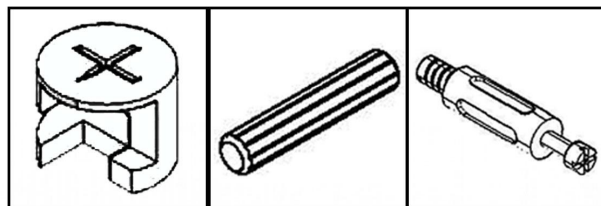



A

G

B

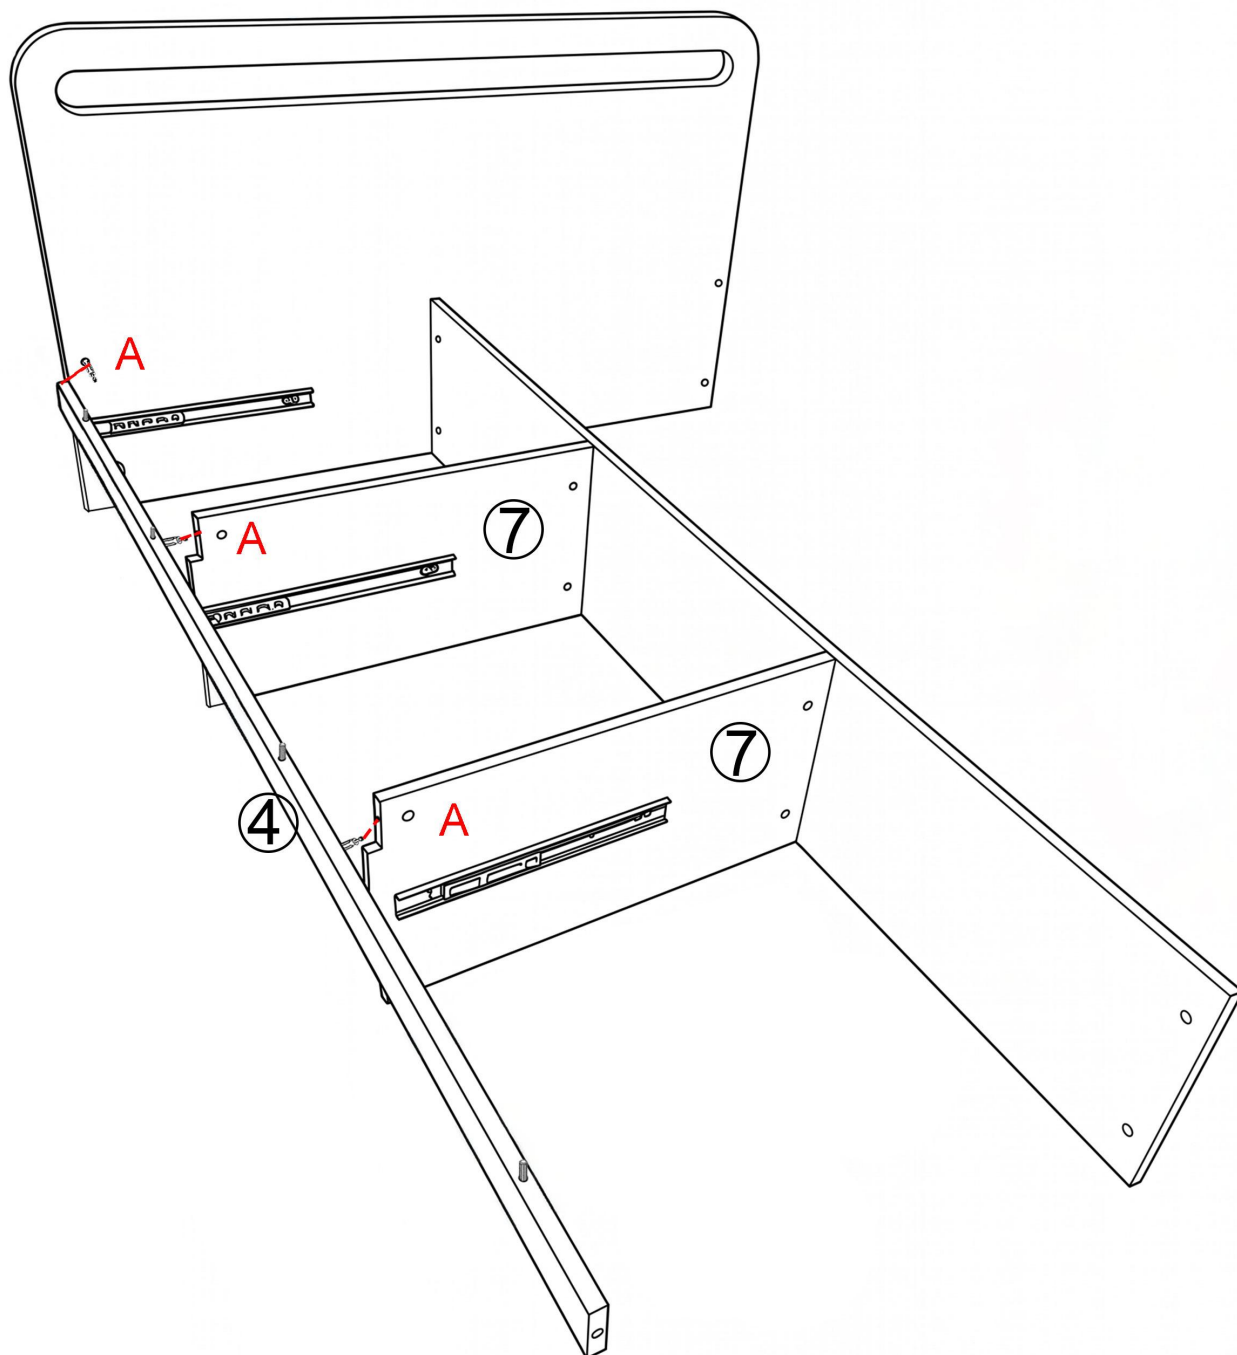


Step 7:

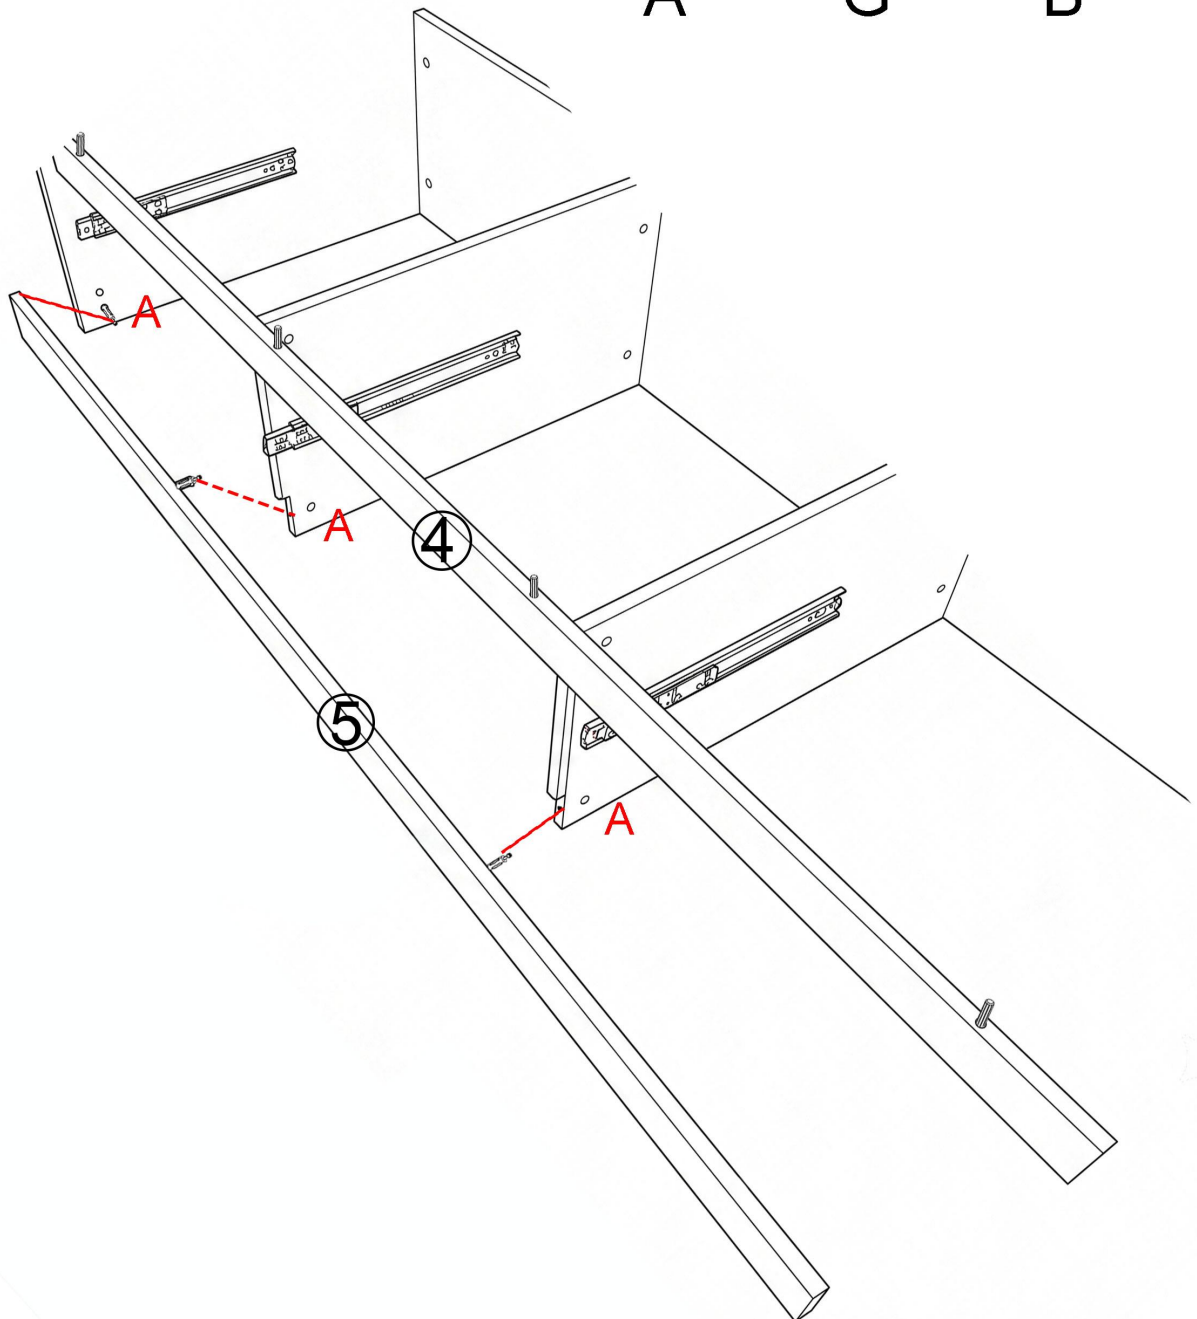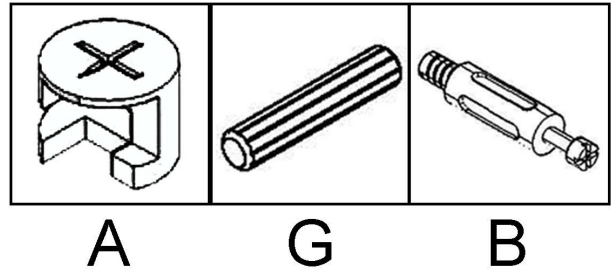

Step 8:




Please prepare a
small hammer. It is
not included with the

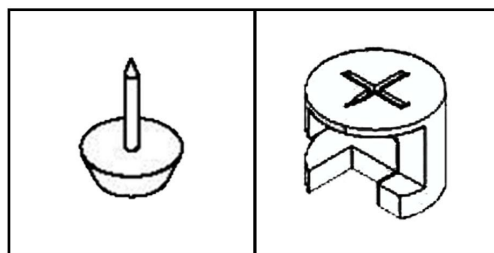


I

A

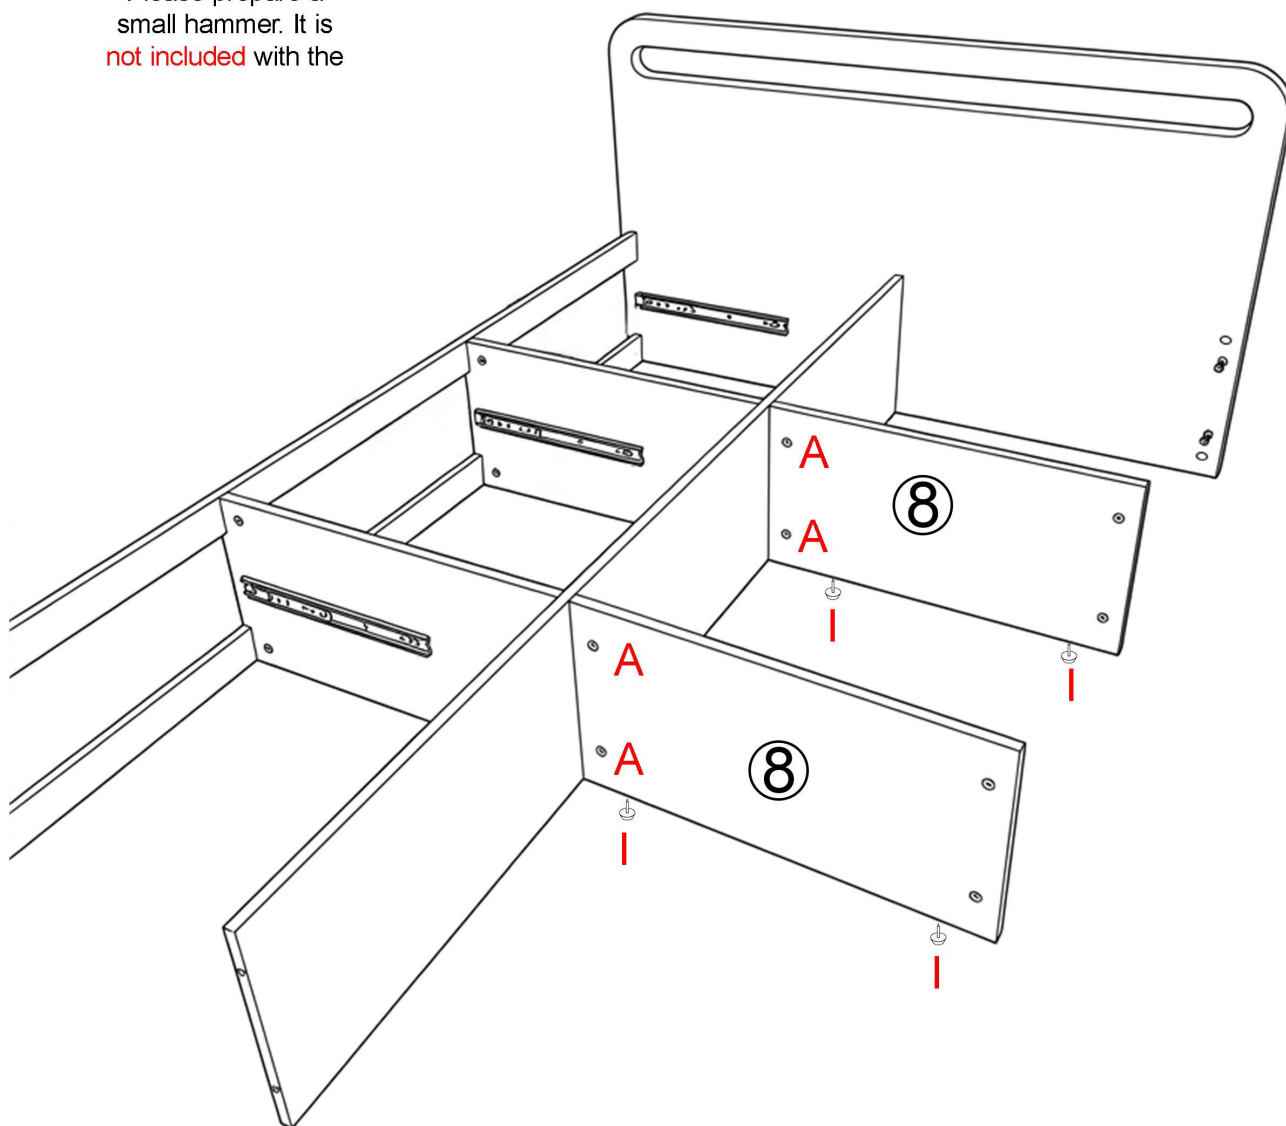

Step 9:

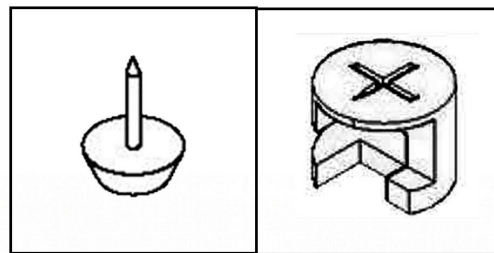


I

A




Please prepare a
small hammer. It is
not included with the

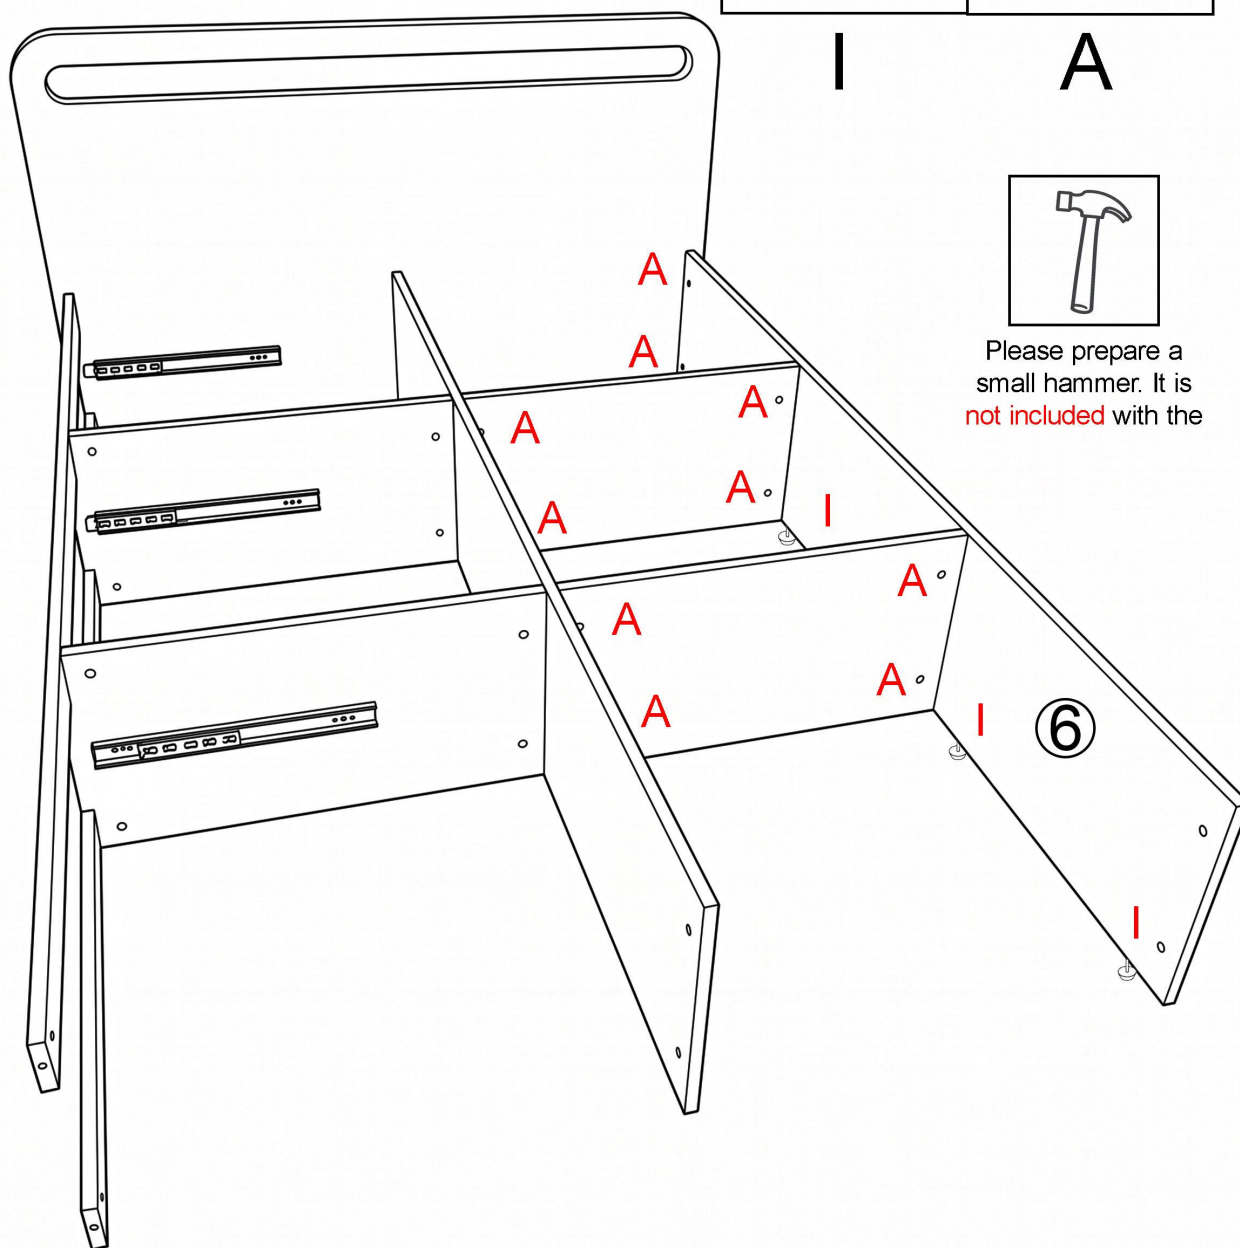





Step 10:



Please prepare a small hammer. It is not included with the

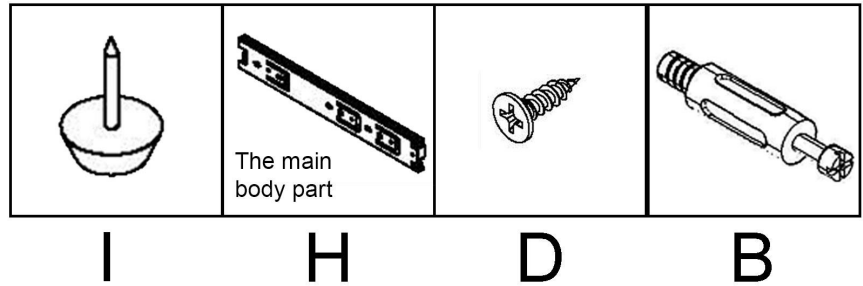

*Option 1
Drawer on the Left side*

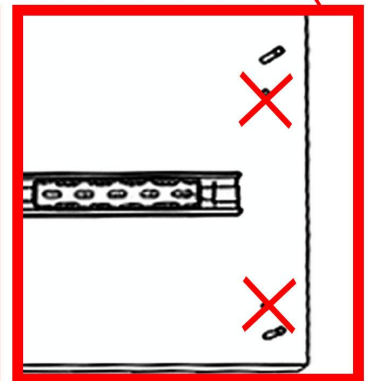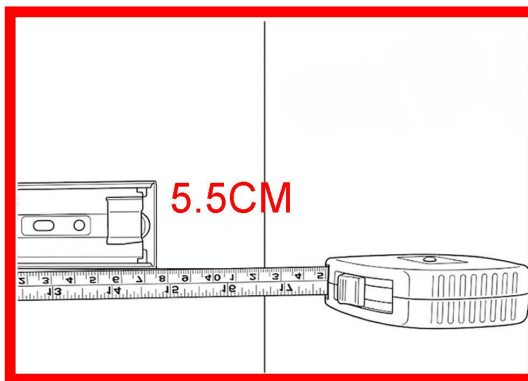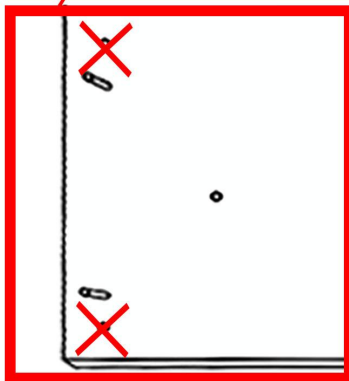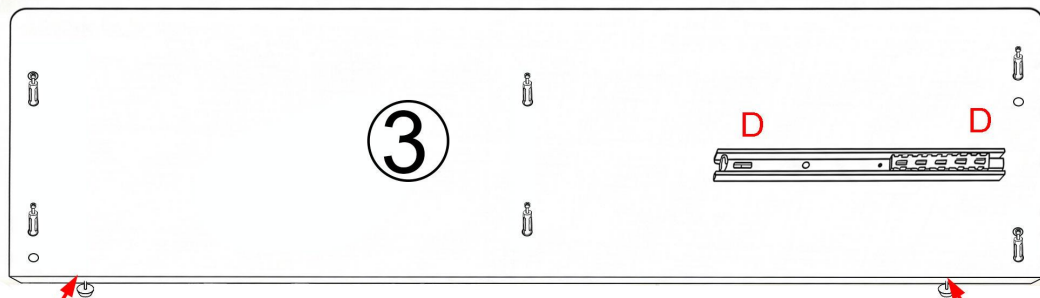


- Install part B according to the diagram.
- Do not install in the locations marked with an "X".
- Leave a 5.5 cm gap from the edge of the main body (Part H).

Note: these two panels have symmetrical cutouts, so the left and right positions are interchangeable.





Step 11:



Please prepare a small hammer. It is not included with the

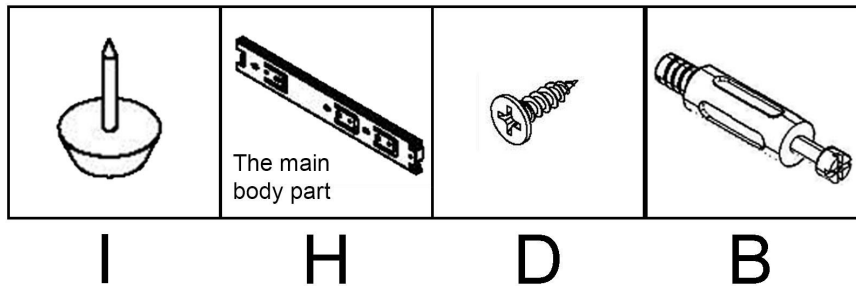


*Option 2
Drawer on the Left side*

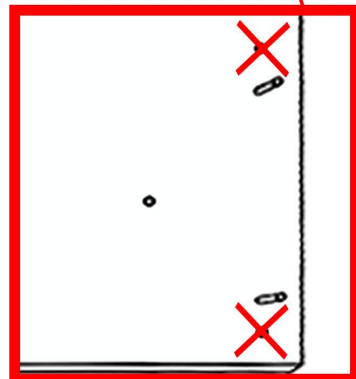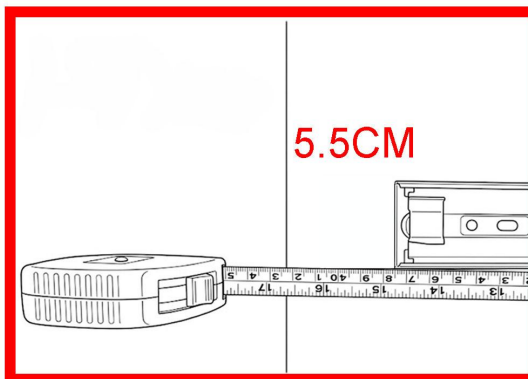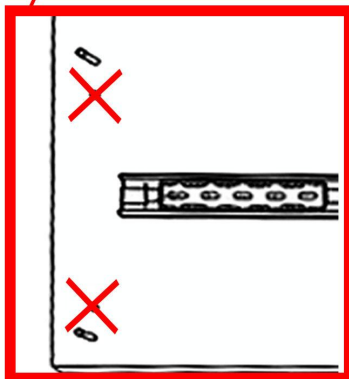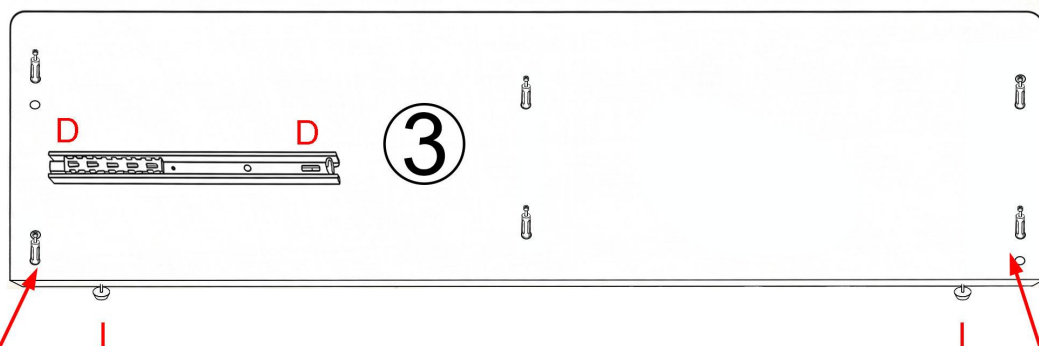


- Install part B according to the diagram.
- Do not install in the locations marked with an "X".
- Leave a 5.5 cm gap from the edge of the main body (Part H).

Note: these two panels have symmetrical cutouts, so the left and right positions are interchangeable.

Step 12:

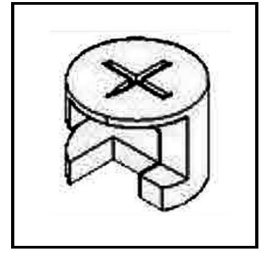


A

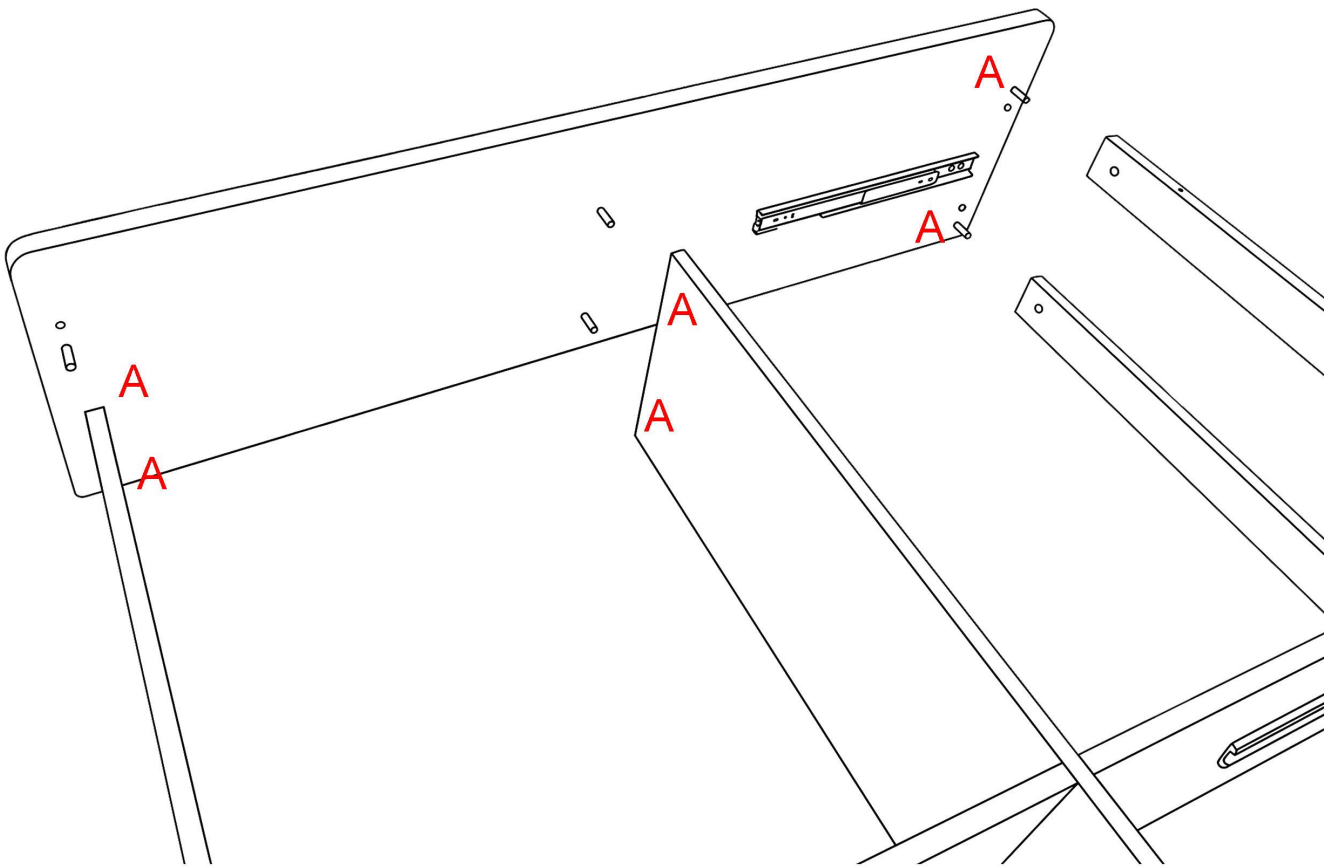


*For the next steps, use **Option 1** orientation as shown. For Option 2, install it as a mirrored (flipped) version.*


Step 13:

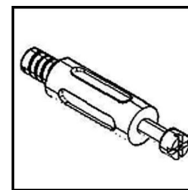


B

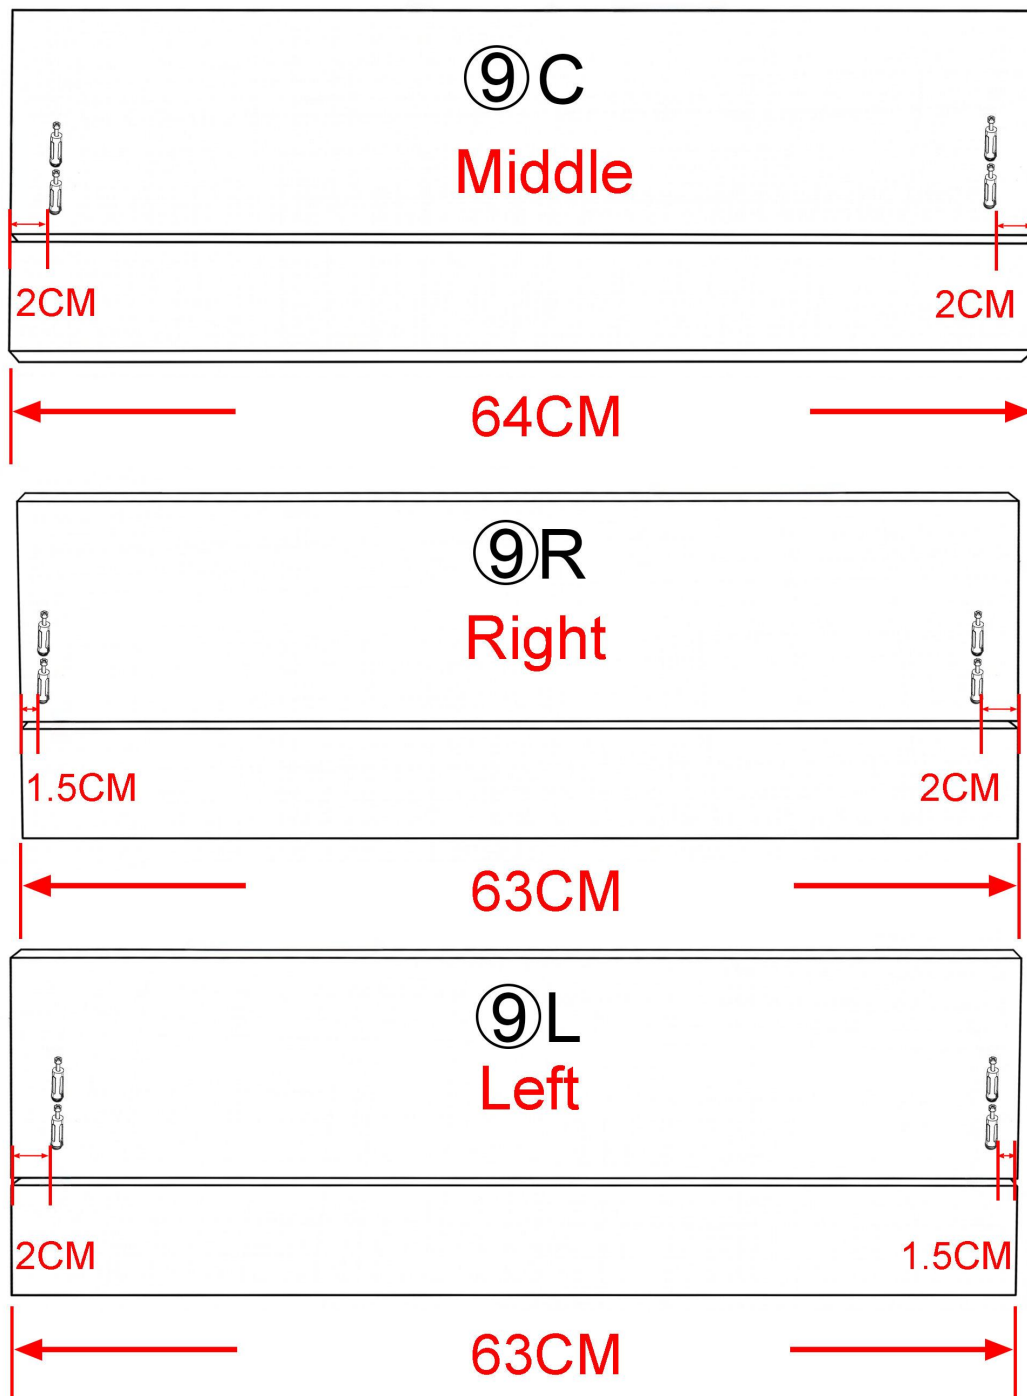



Step 14:

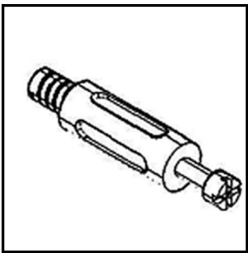


B

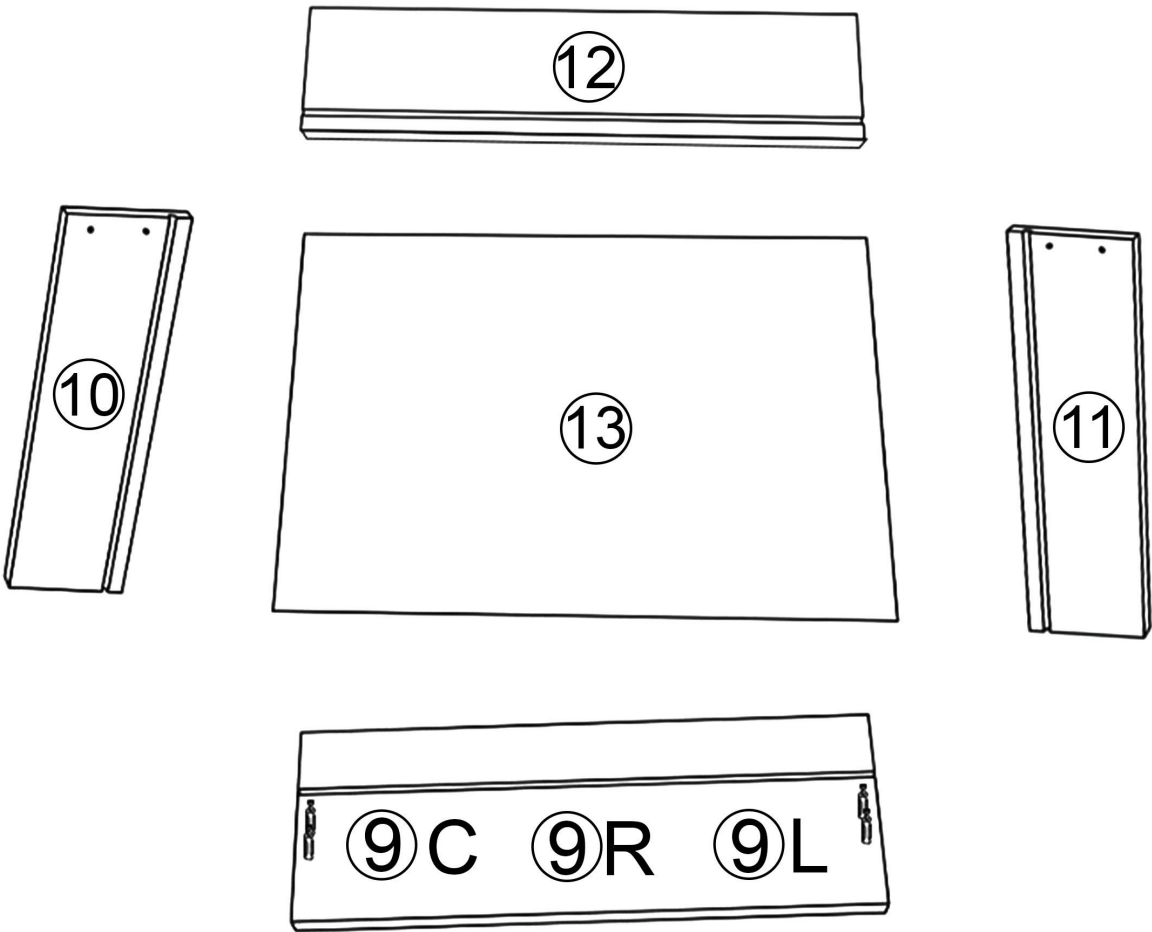


Step 15:

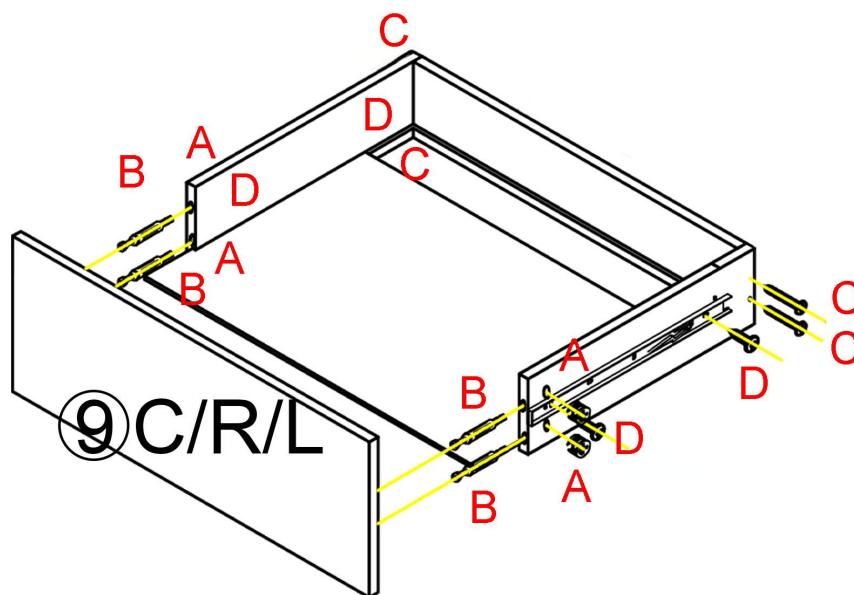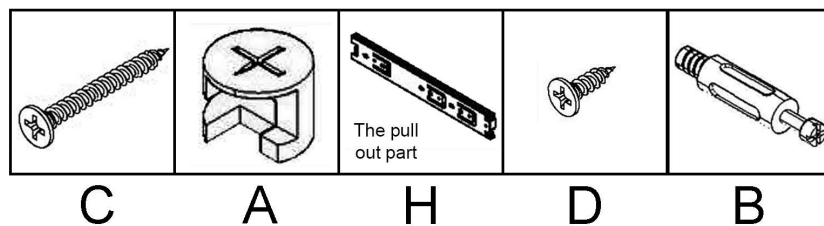


Note: The H pull-out part should be positioned with the closed side close to Panel No.9C/9R/9L.

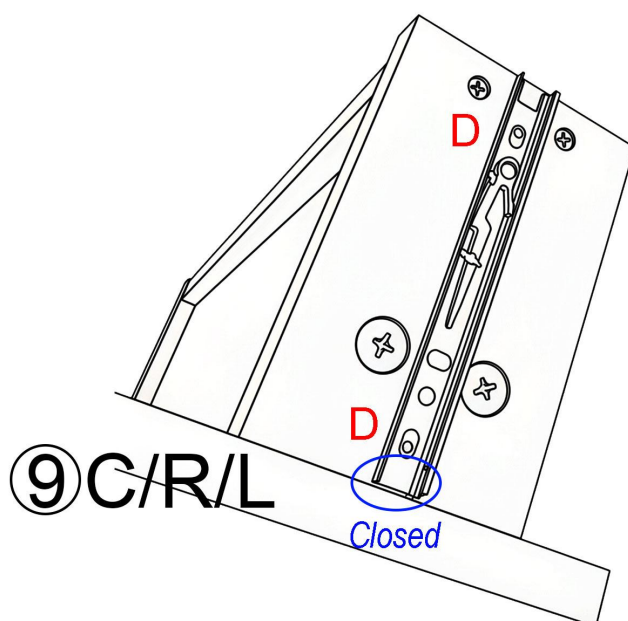


Step 16:

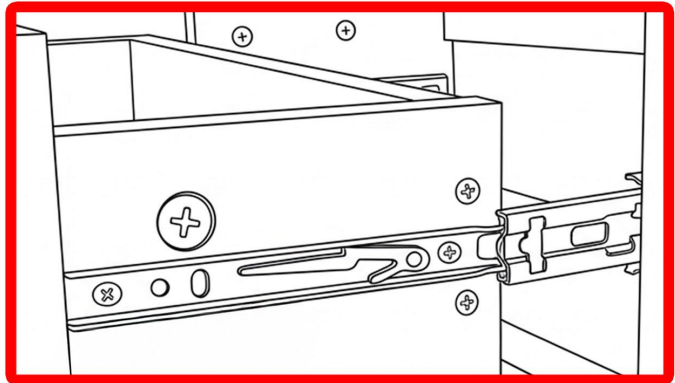



Insert into the slots on both sides at the same time.

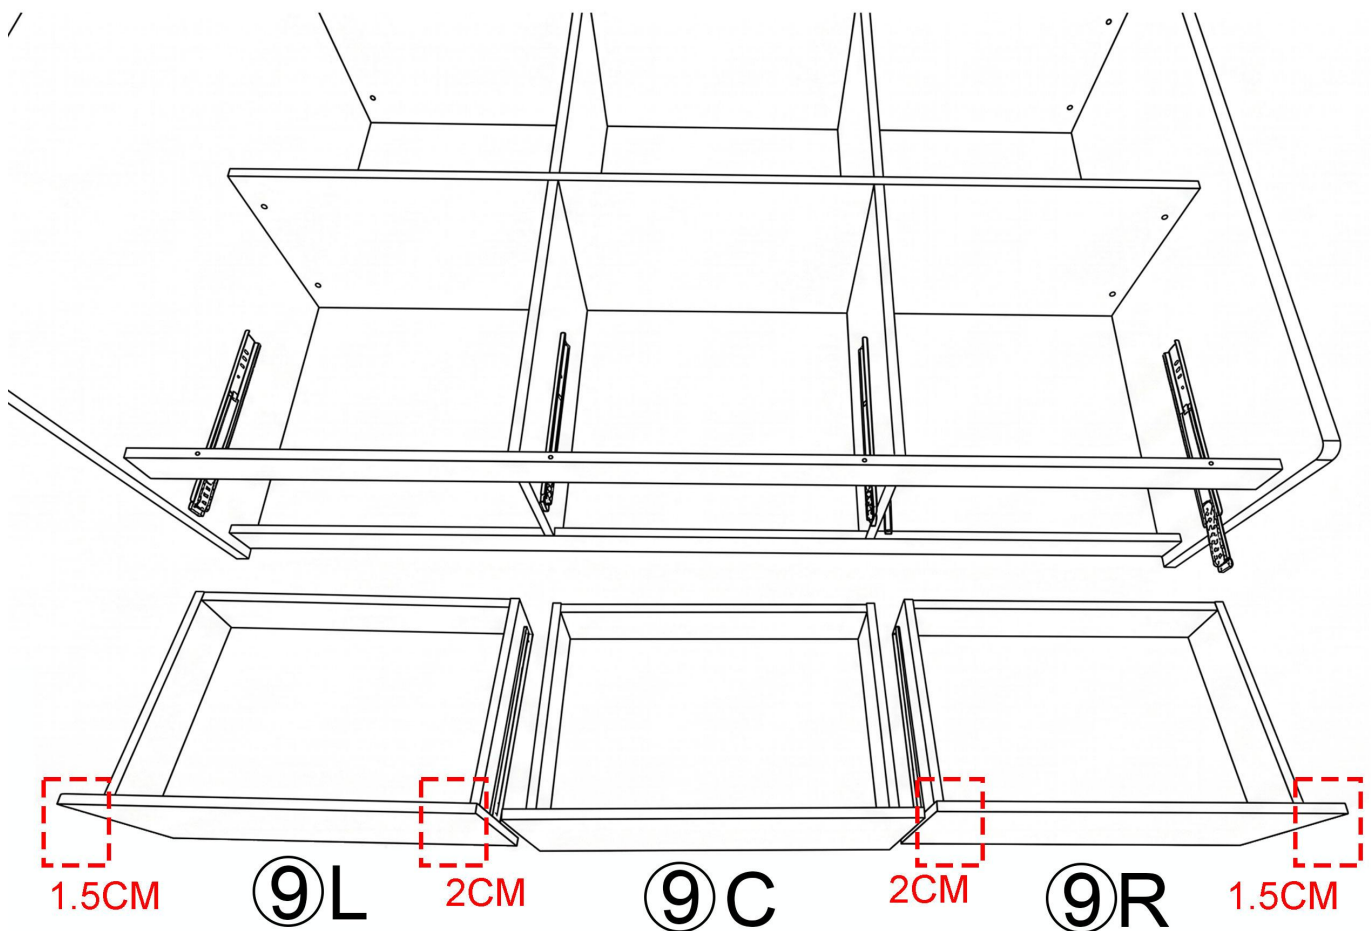


Step 17:

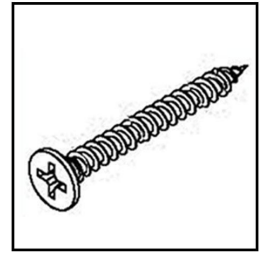


C

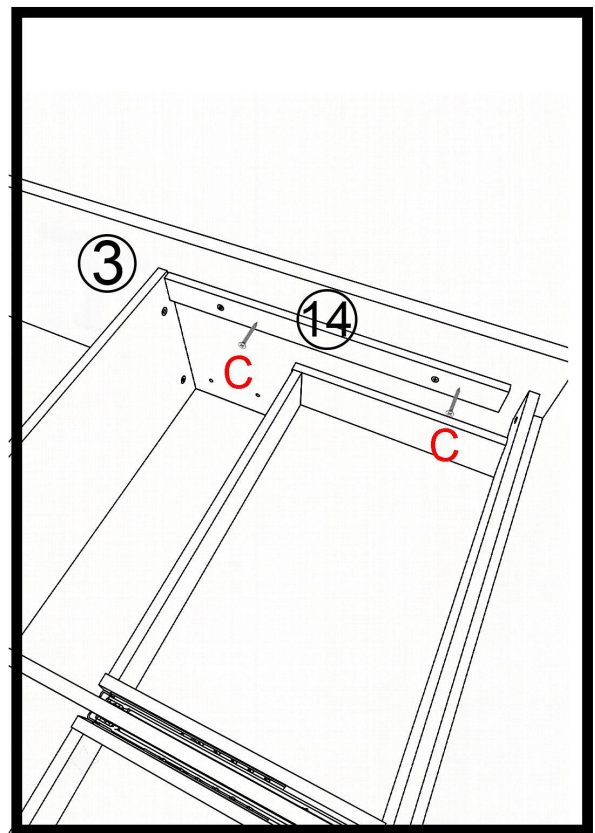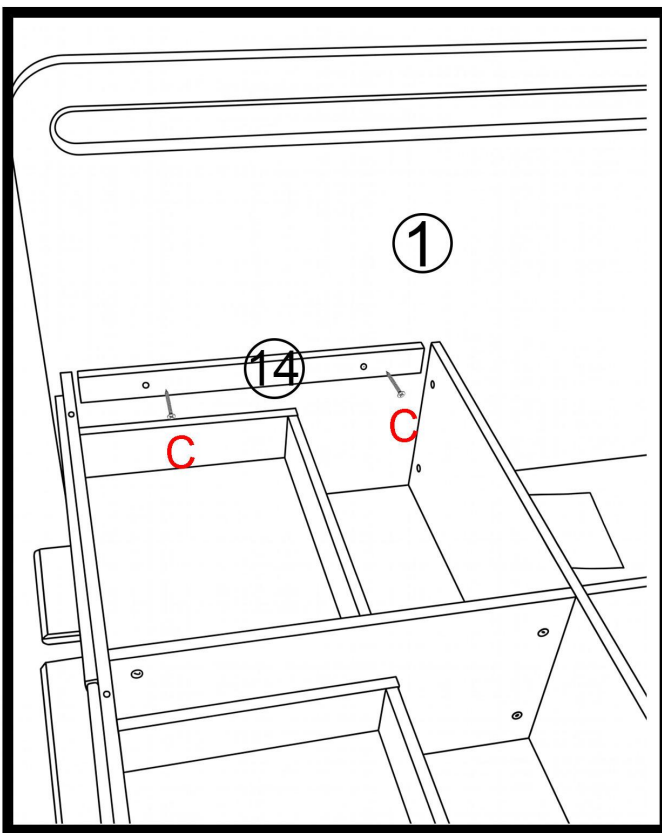

Step 18:

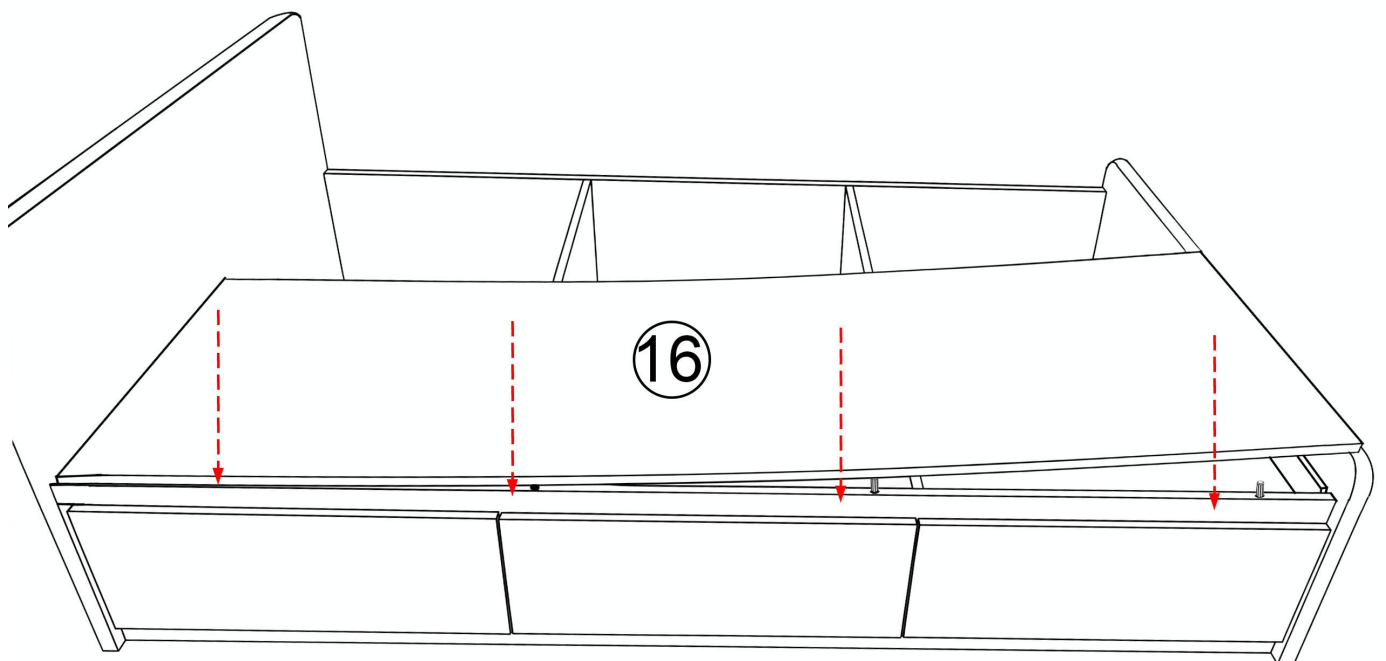


Step 19:

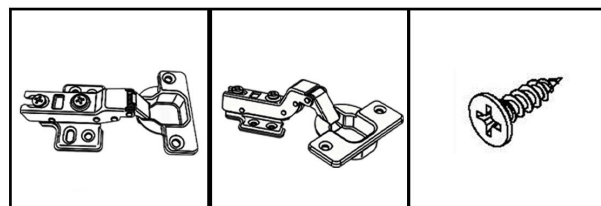


E

F


D

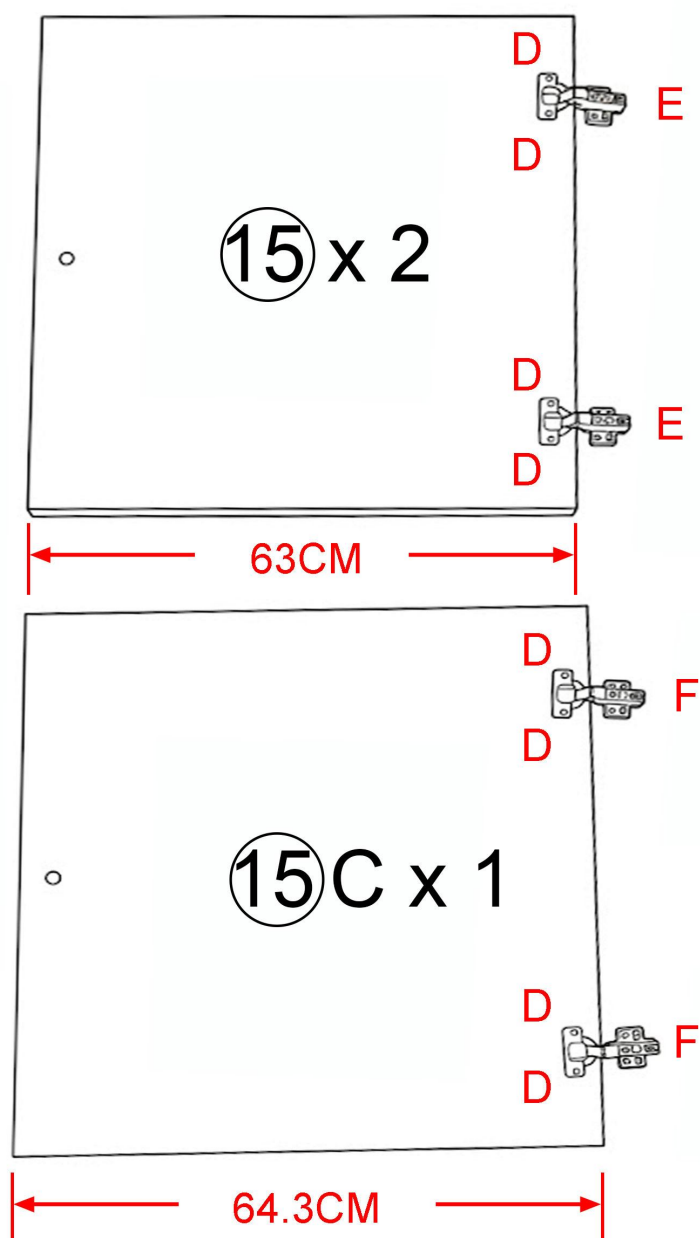

Step 20:

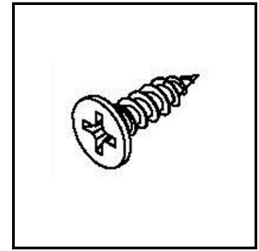

D

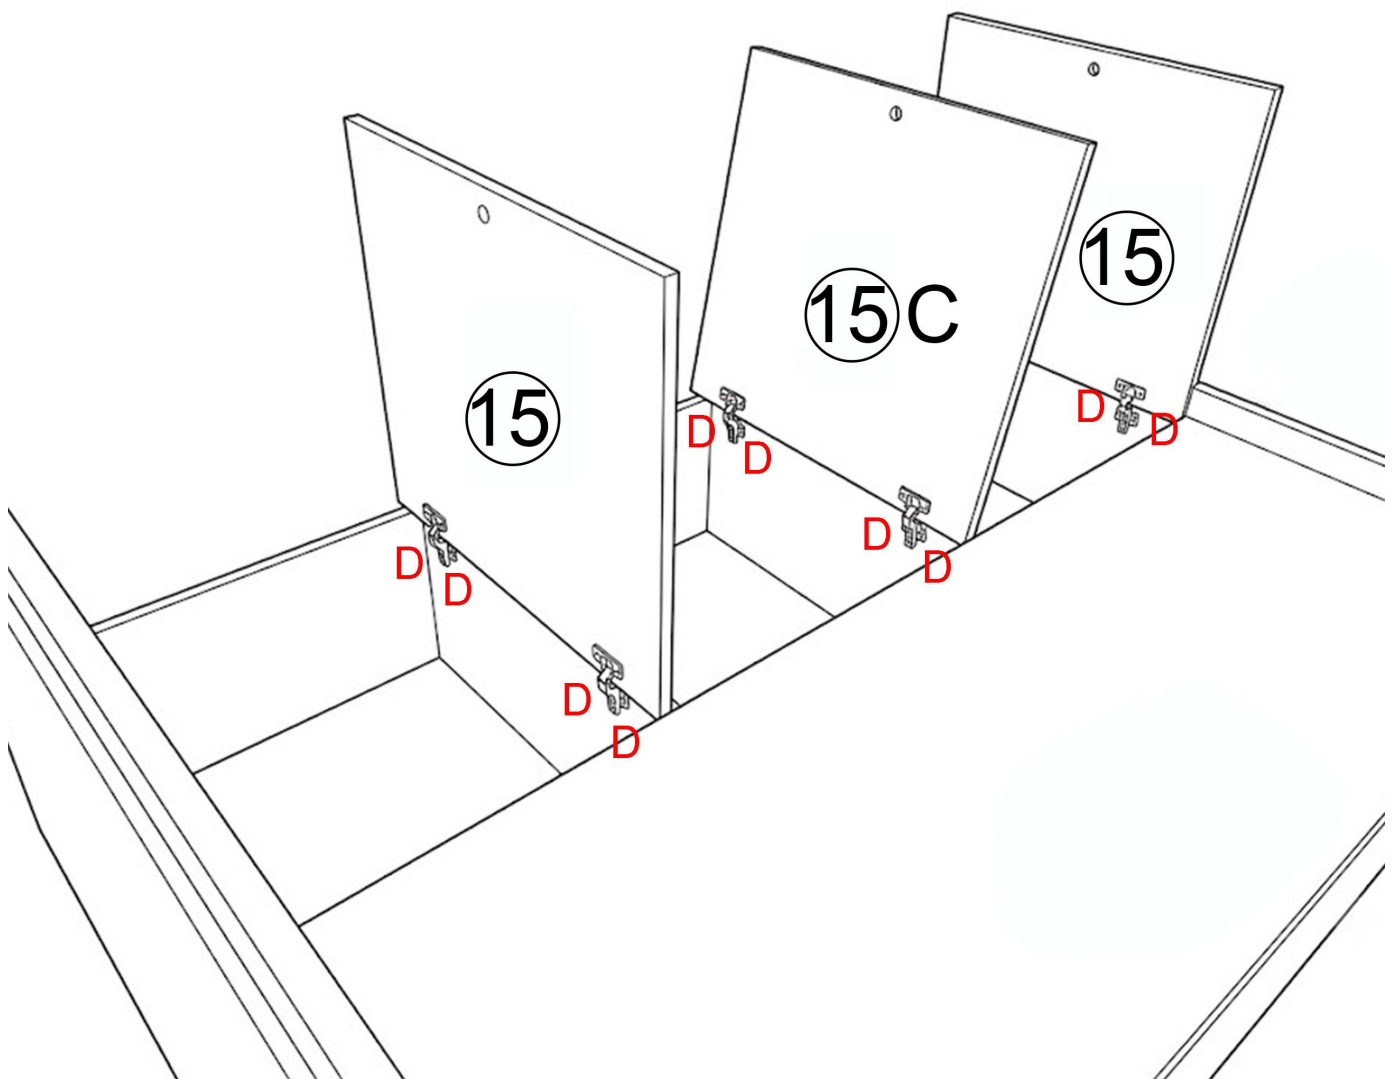

Step 21:

