



# CBD031

## Installation Instruction

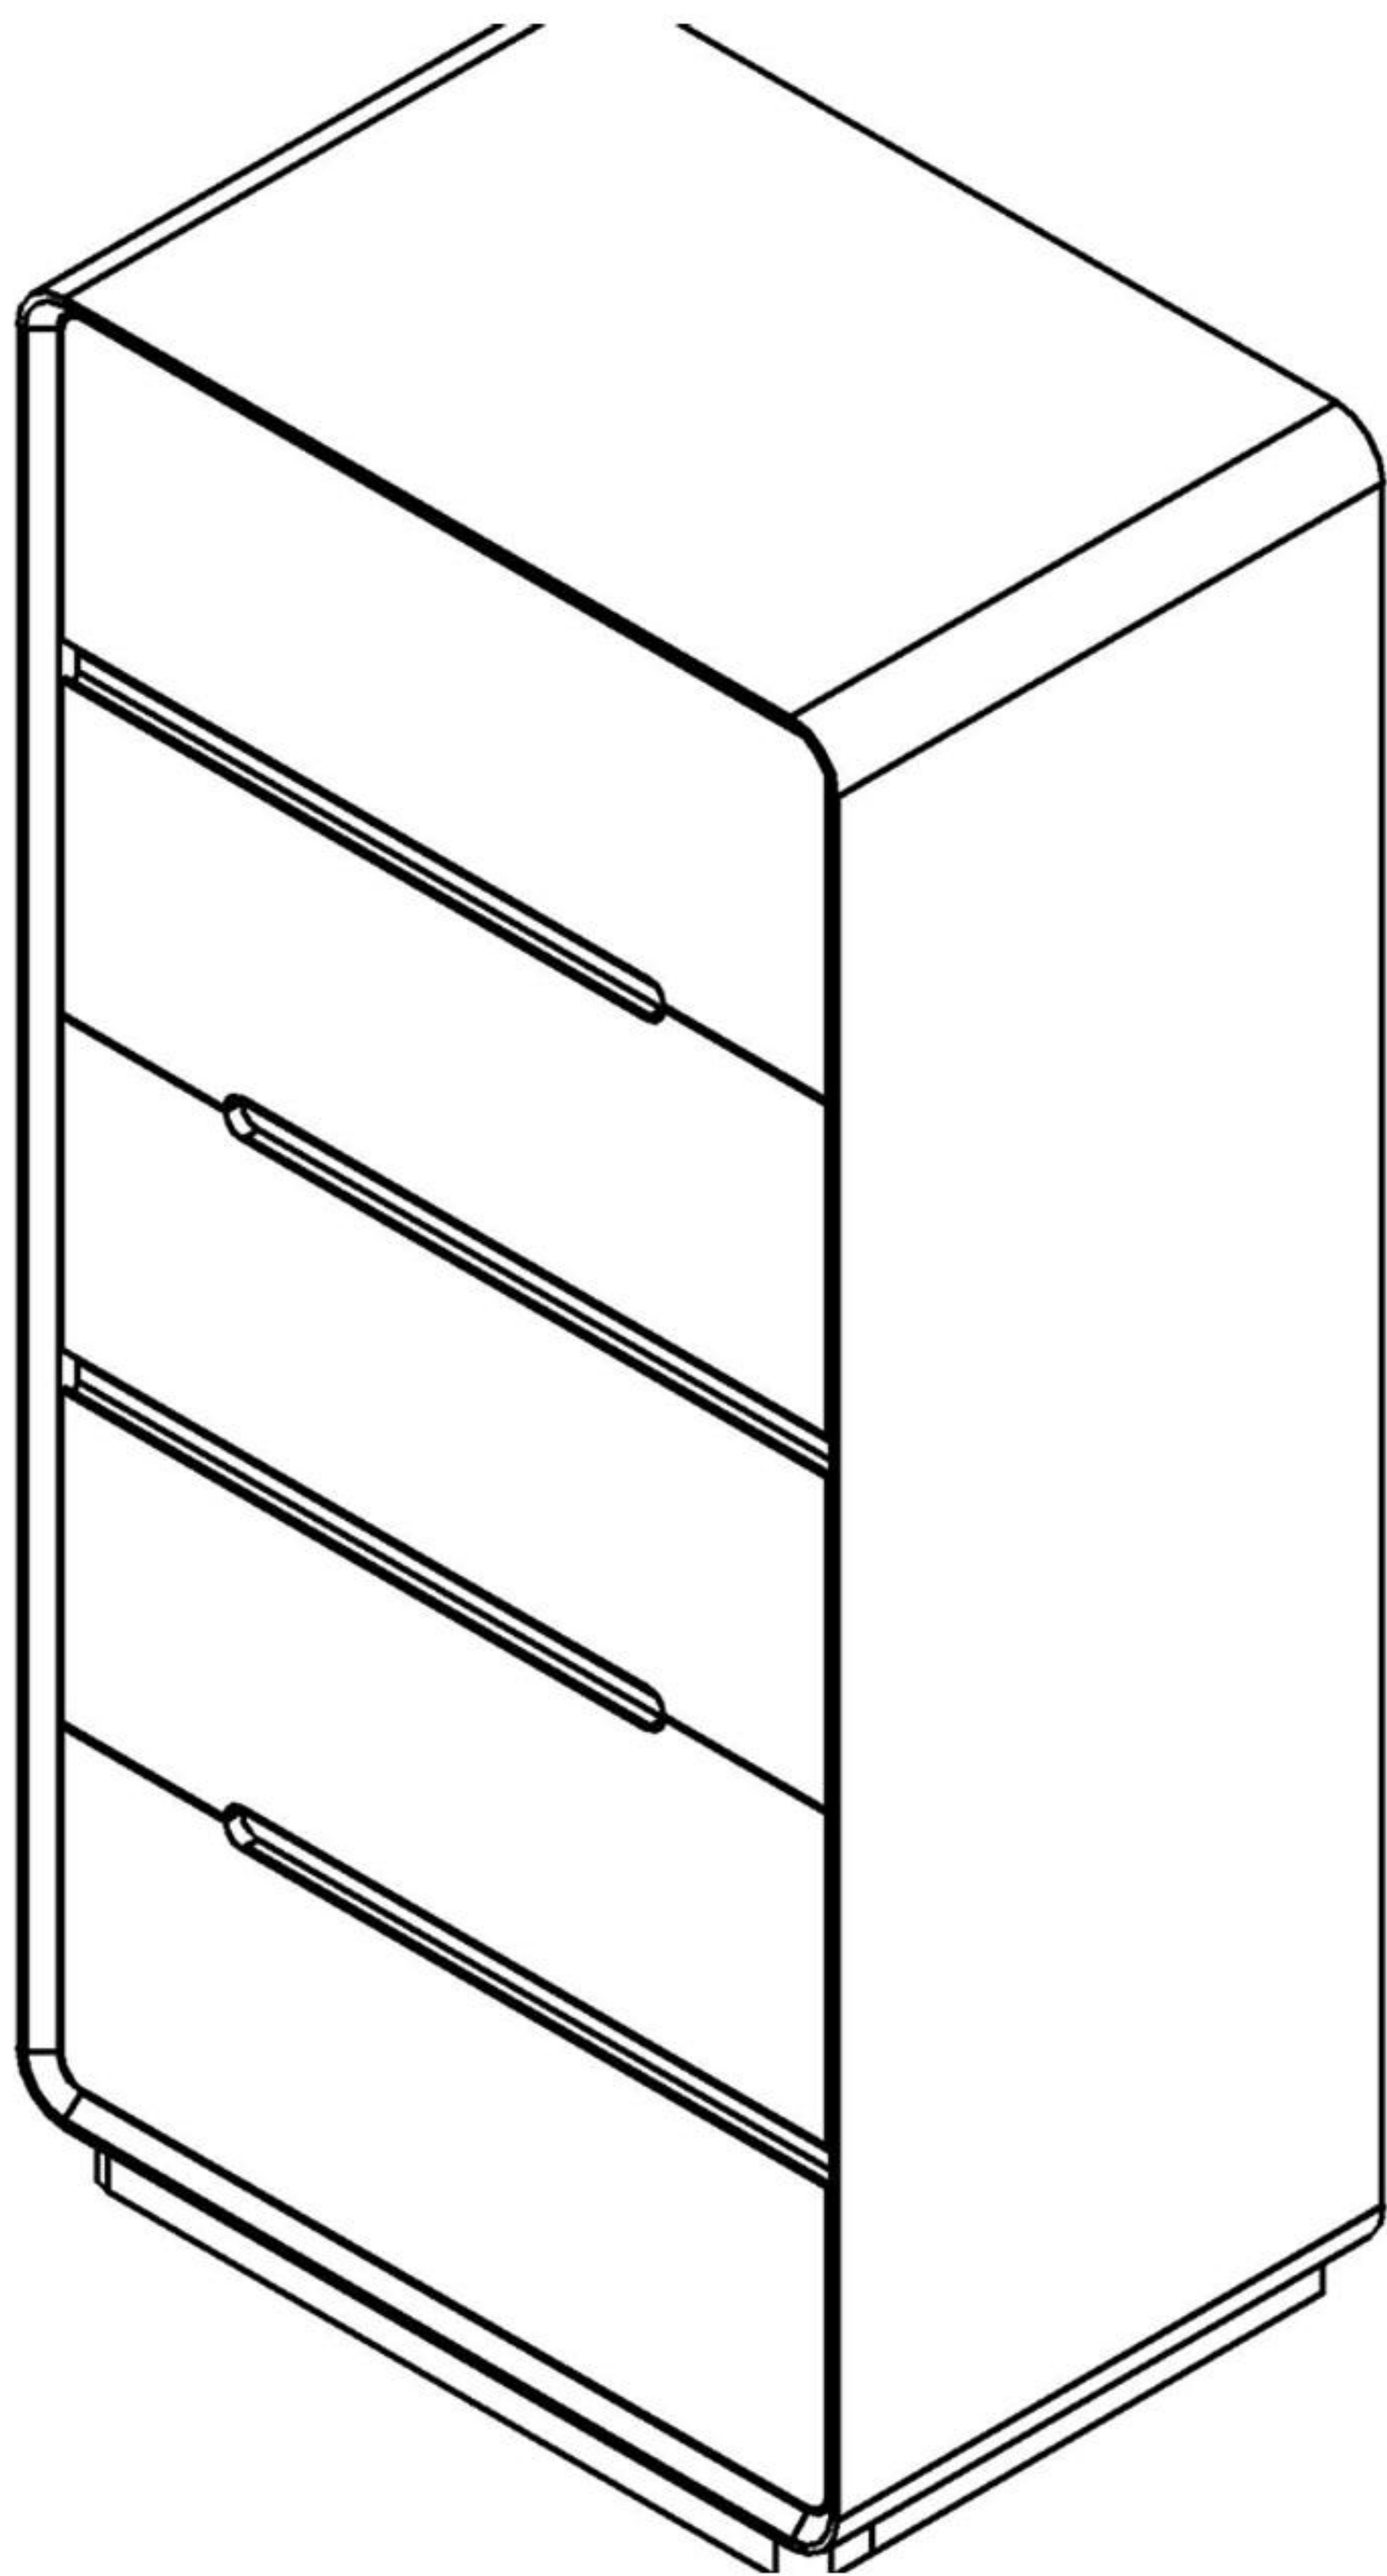

Scan the code to purchase ES001

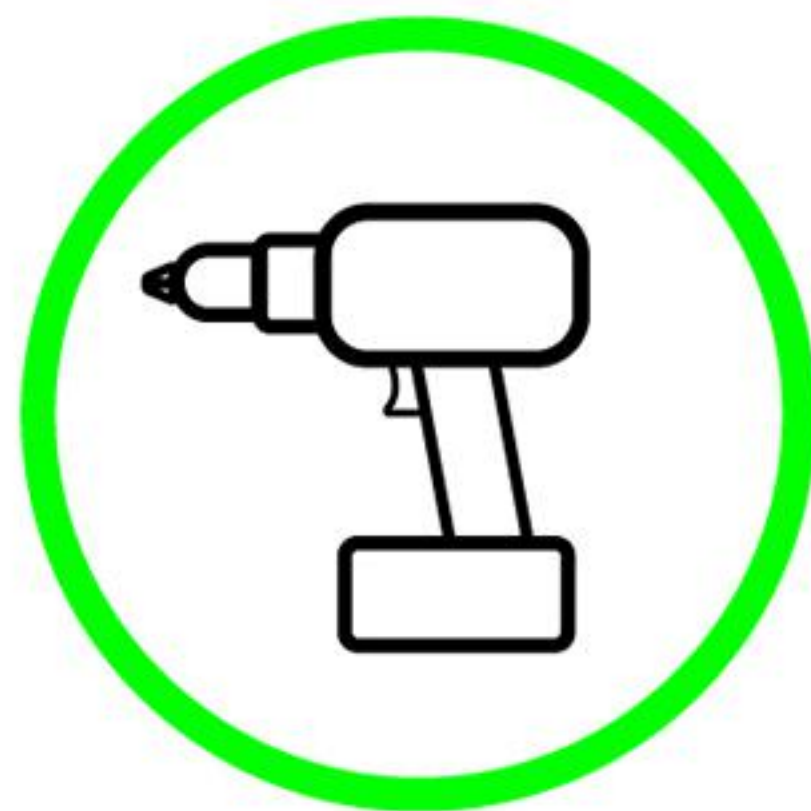

Please read this instruction manual carefully before installation and use.

### Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

### Precautions after assembly:

1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.


**NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.**

### Hardware List

| Accessory Appearance | Code            | Dimensions      | Numbers | Unit  | Accessory Appearance | Code | Dimensions | Numbers | Unit  |
|----------------------|-----------------|-----------------|---------|-------|----------------------|------|------------|---------|-------|
|                      | A               | ø15*12mm        | 32      | Piece |                      | H    |            | 5       | Pair  |
|                      | B               | ø7*40mm         | 32      | Piece |                      | I    |            | 6       | Piece |
|                      | C + D (smaller) | C + D (smaller) | 14      | Set   |                      |      |            |         |       |
|                      | E               | ø6*40mm         | 24      | Piece |                      |      |            |         |       |
|                      | F               | ø3.5*12mm       | 40      | Piece |                      |      |            |         |       |
|                      | G               | ø3.5*40mm       | 20      | Piece |                      |      |            |         |       |

| BoardMaterial List |  |               |  |         |  |  |      |  |            |  |         |  |
|--------------------|--|---------------|--|---------|--|--|------|--|------------|--|---------|--|
| Code               |  | Dimensions    |  | Numbers |  |  | Code |  | Dimensions |  | Numbers |  |
| ①                  |  | 600*400*34    |  | 2       |  |  | ⑩    |  | 300*116*15 |  | 10      |  |
| ②                  |  | 1093*399*17   |  | 2       |  |  | ⑪    |  | 510*116*15 |  | 5       |  |
| ③                  |  | 565*375. 5*12 |  | 2       |  |  | ⑫    |  | 522*294*4  |  | 5       |  |
| ④                  |  | 565*60*15     |  | 1       |  |  |      |  |            |  |         |  |
| ⑤                  |  | 282*60*12     |  | 5       |  |  |      |  |            |  |         |  |
| ⑥                  |  | 530*50*34     |  | 1       |  |  |      |  |            |  |         |  |
| ⑦                  |  | 430*50*34     |  | 1       |  |  |      |  |            |  |         |  |
| ⑧                  |  | 330*50*34     |  | 2       |  |  |      |  |            |  |         |  |
| ⑨                  |  | 561*223*17    |  | 5       |  |  |      |  |            |  |         |  |

## Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

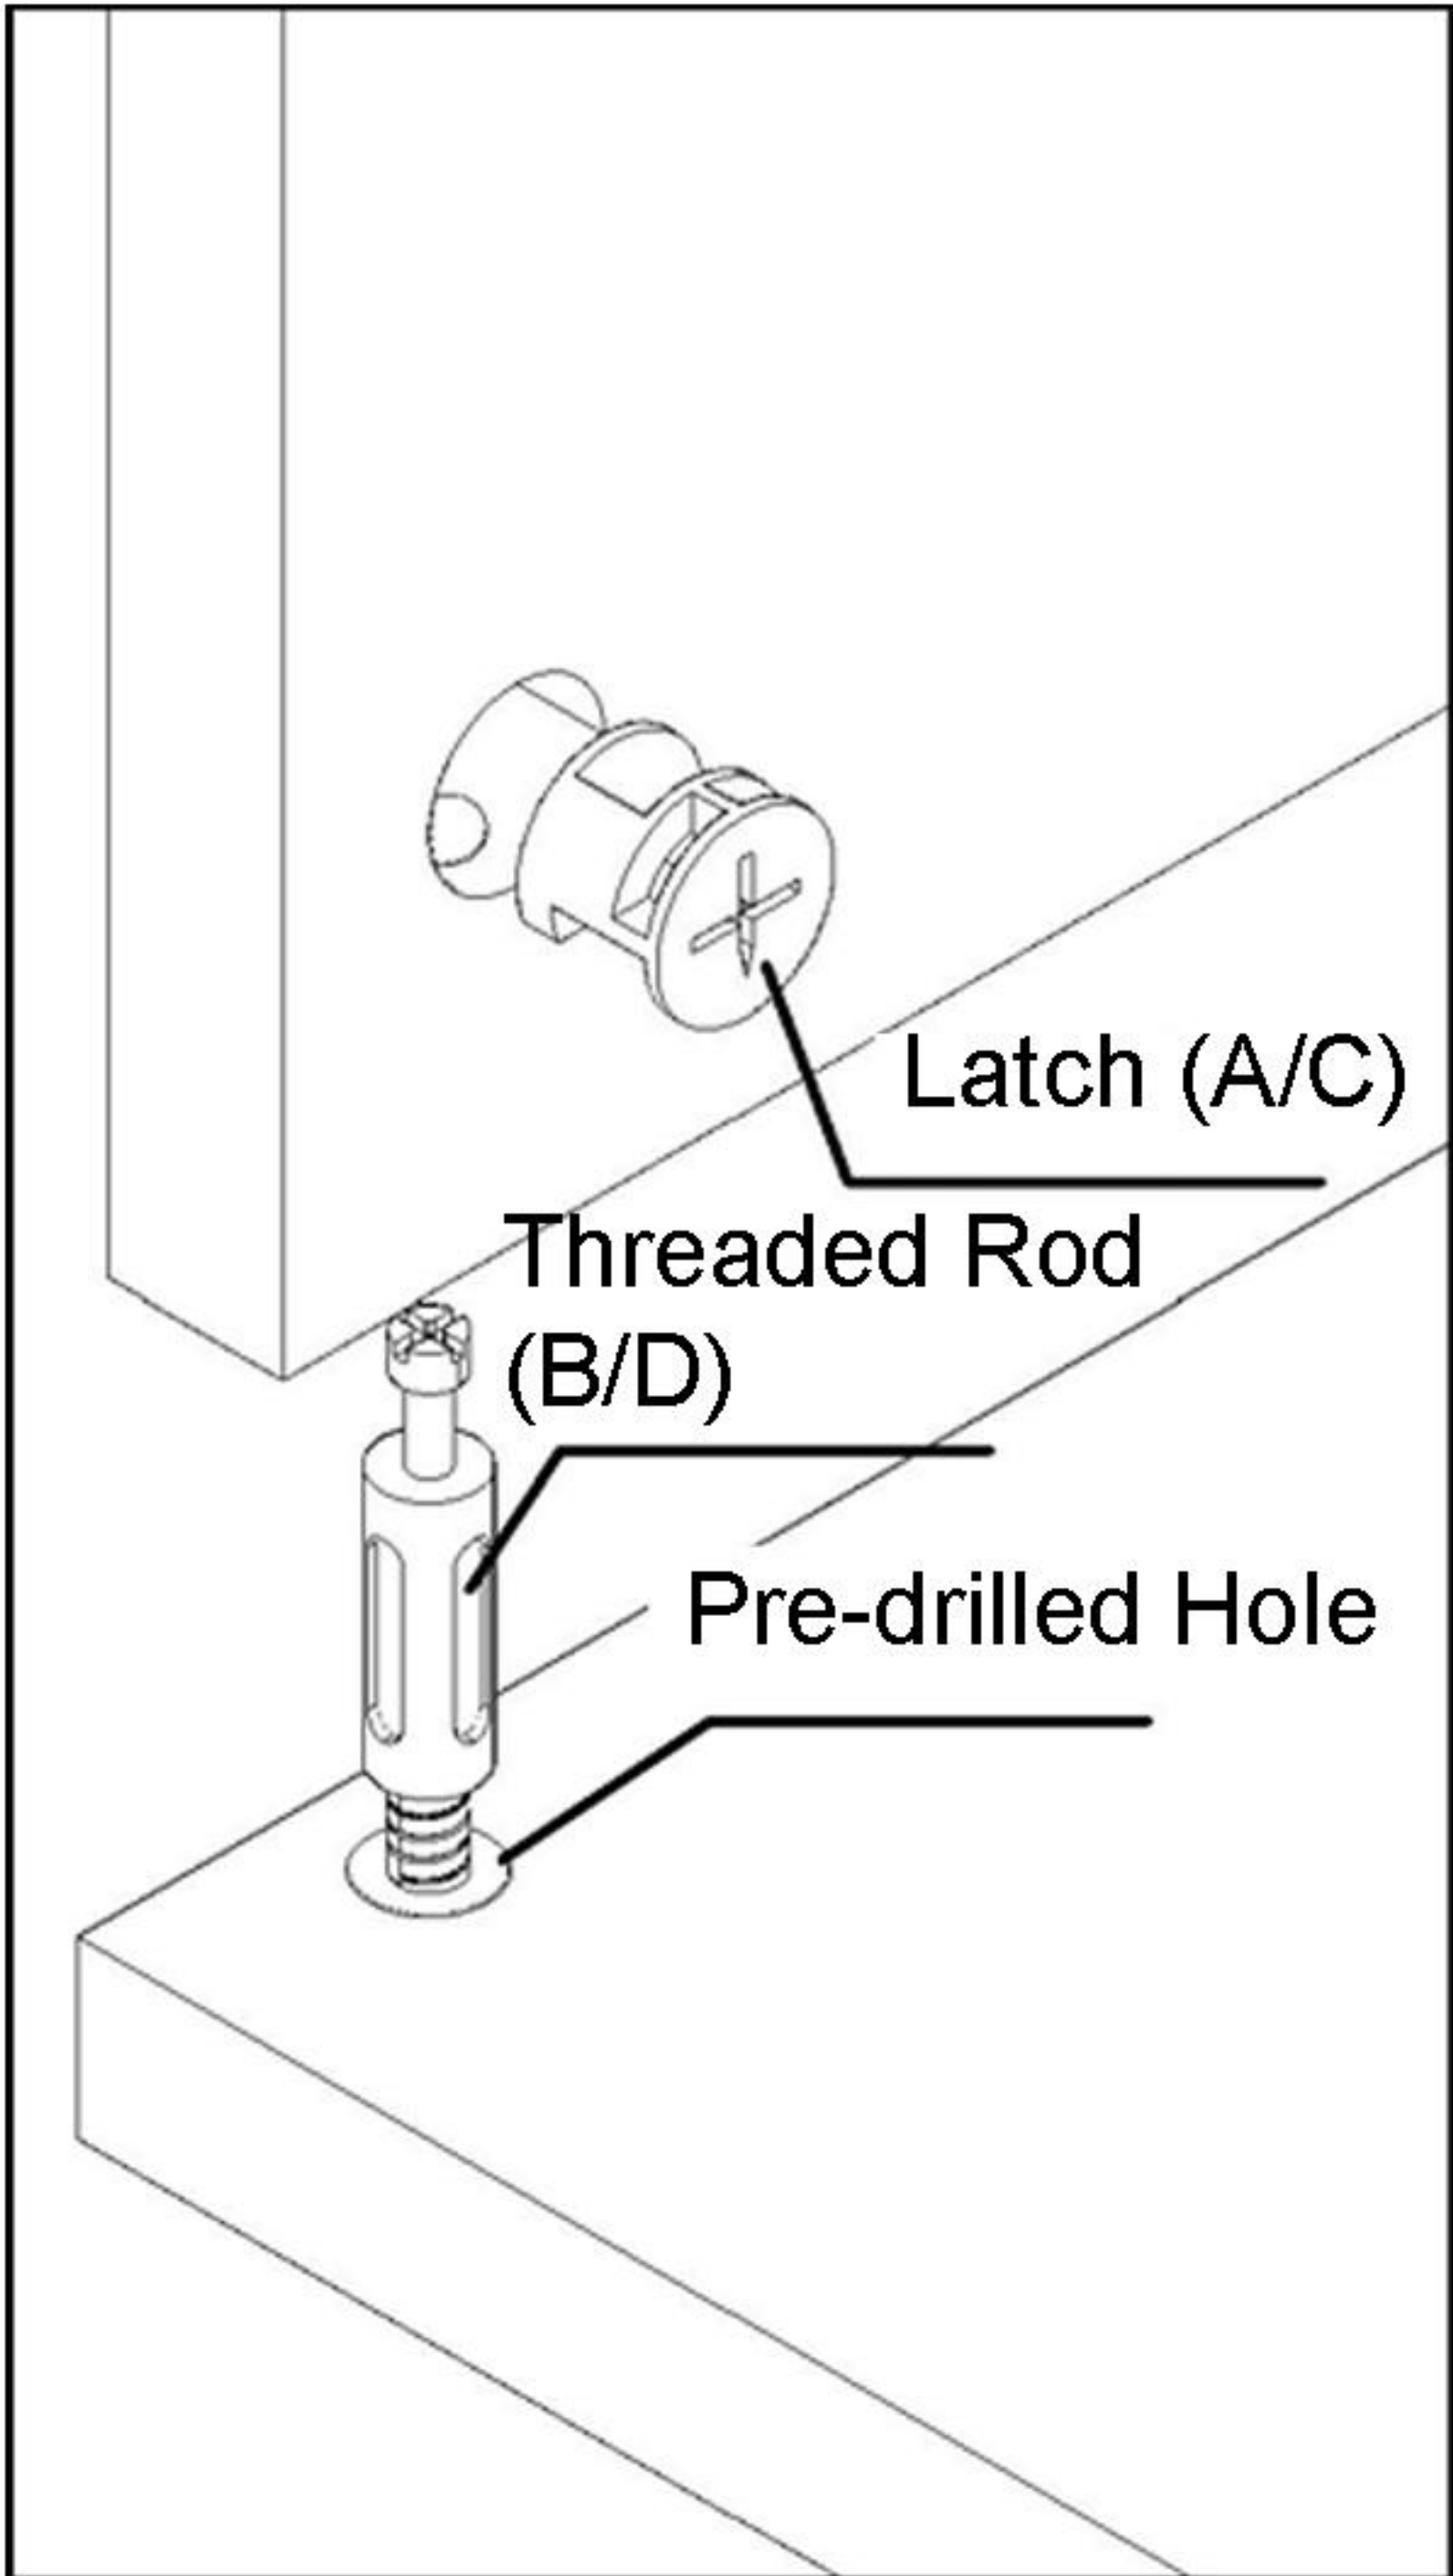

1. Screw the B/D (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed A/C into the corresponding hole of the other piece. Press A/C (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.

## H (Sliding Rail) Installation Instructions


When installing **H**, use with screw **F**

1, Separate H (Sliding Rail)




The main body part

The pull-out part

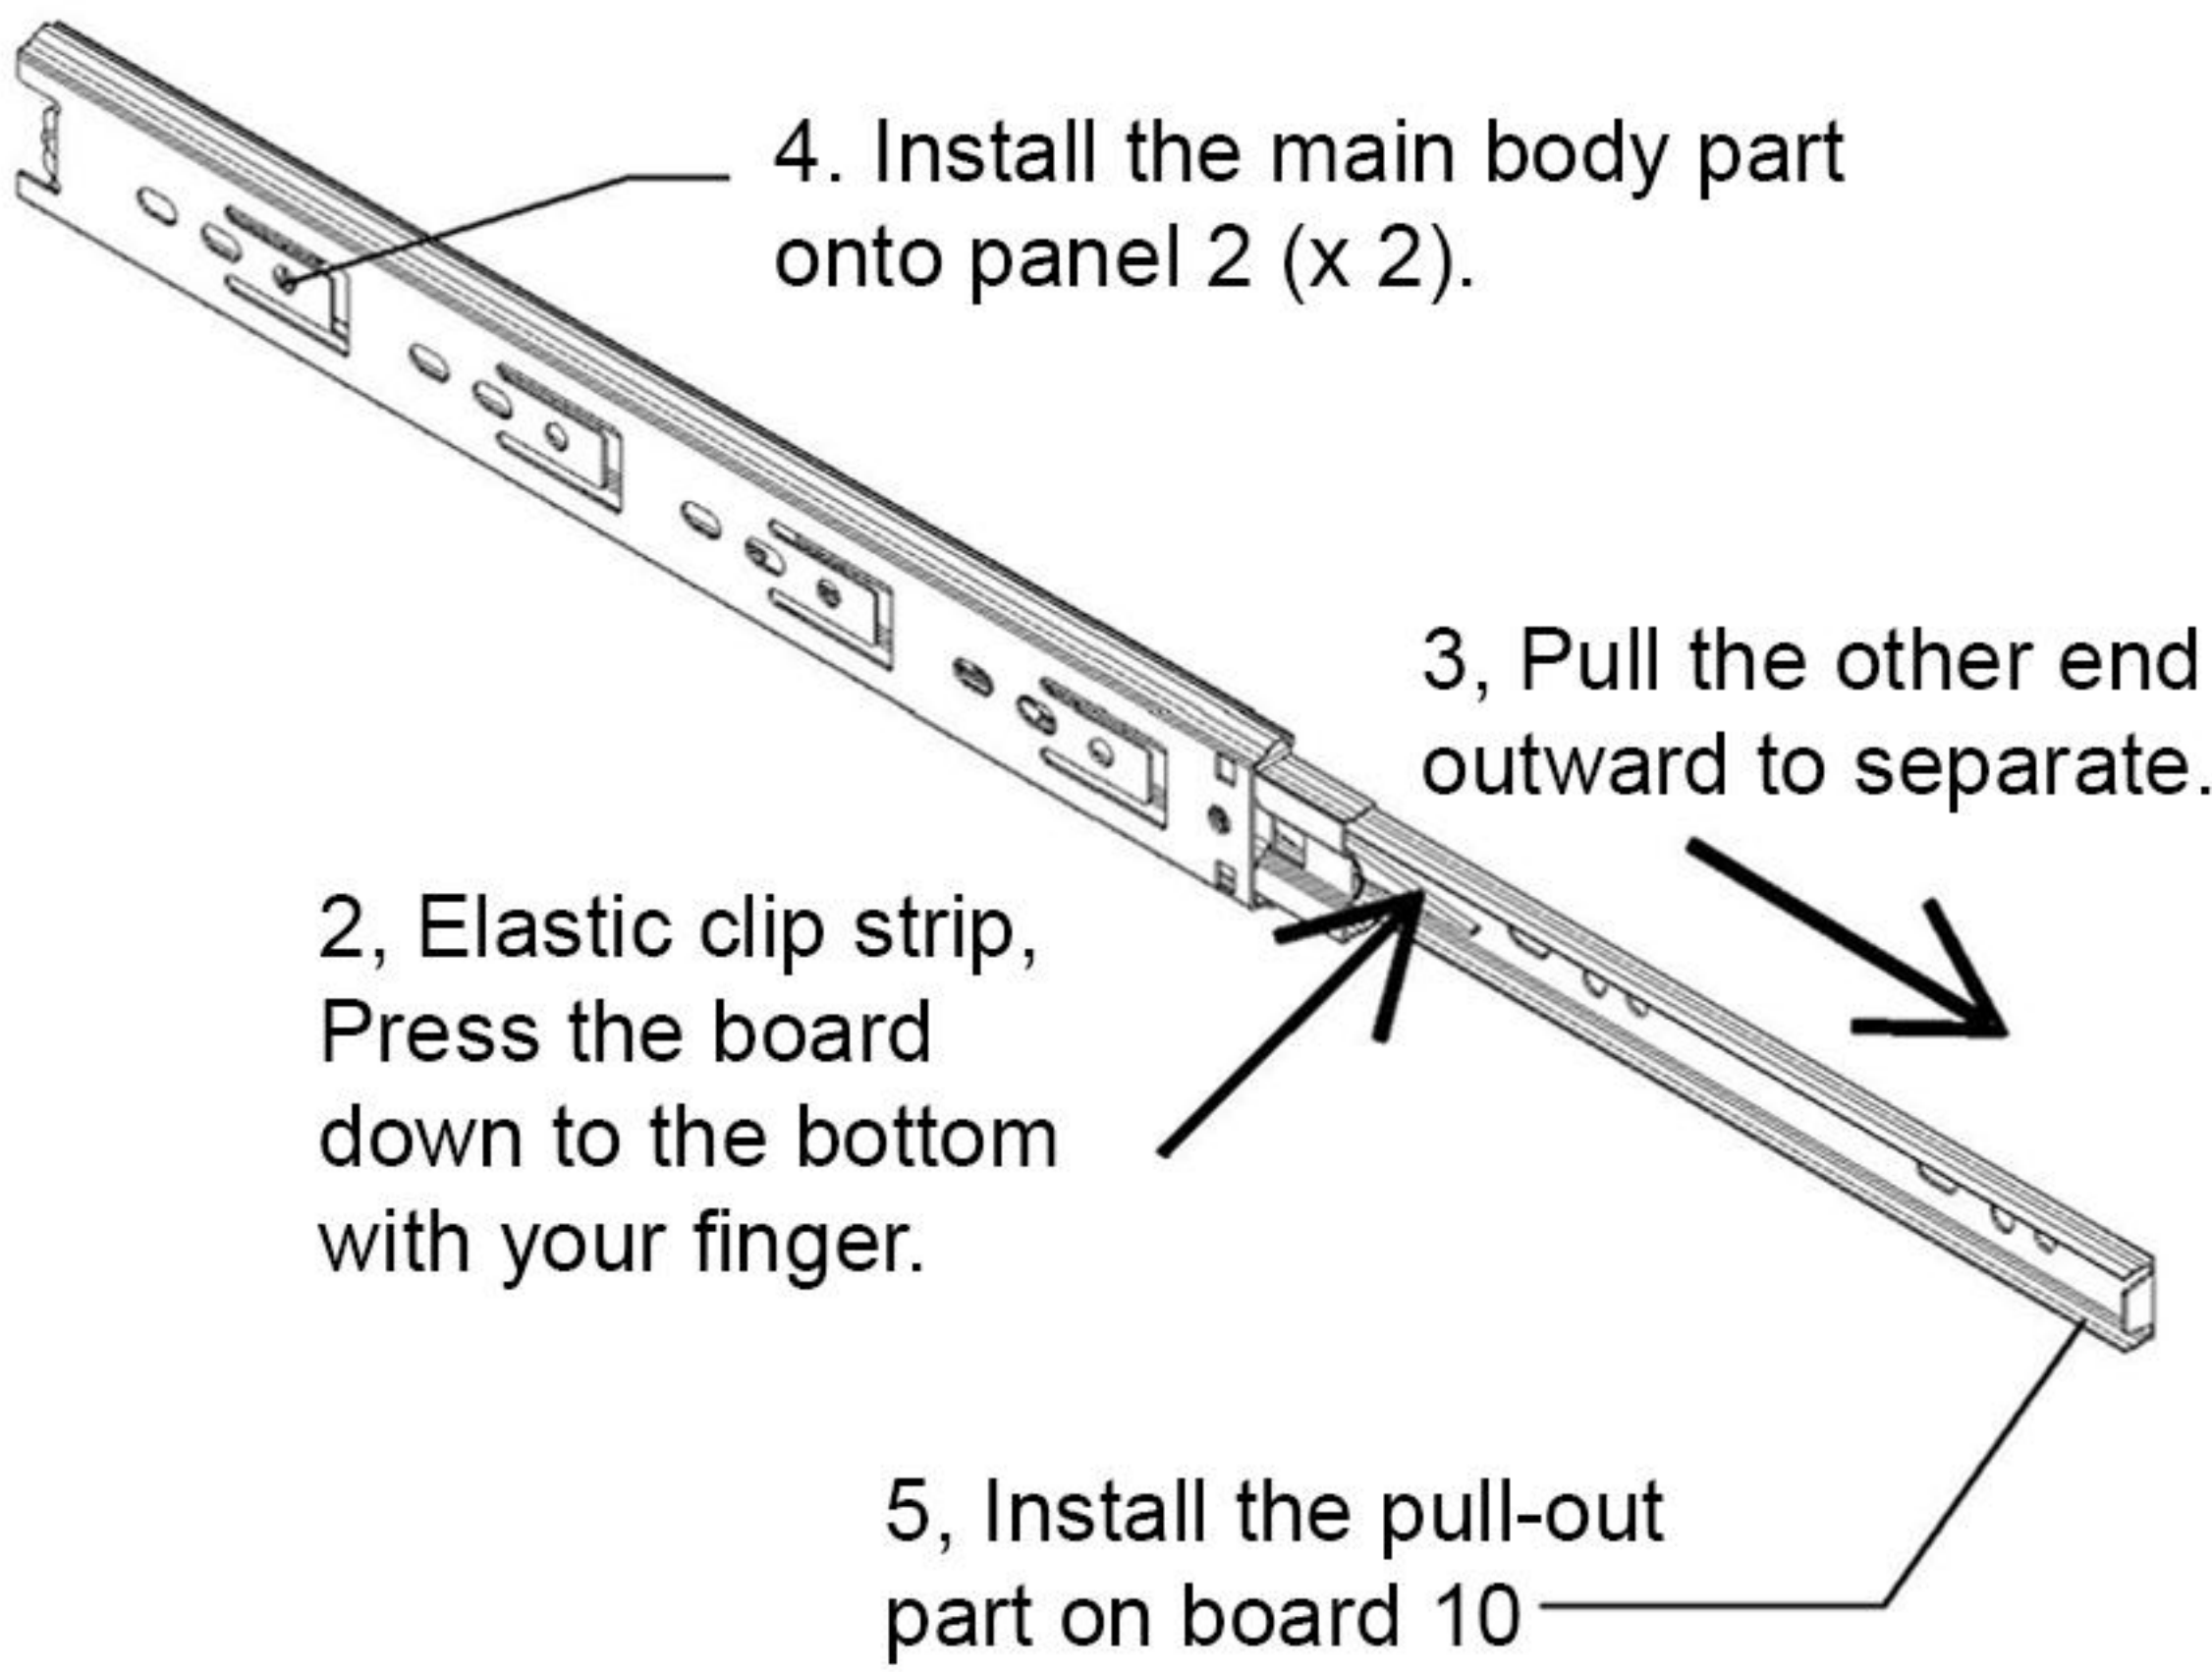


## Step 1:

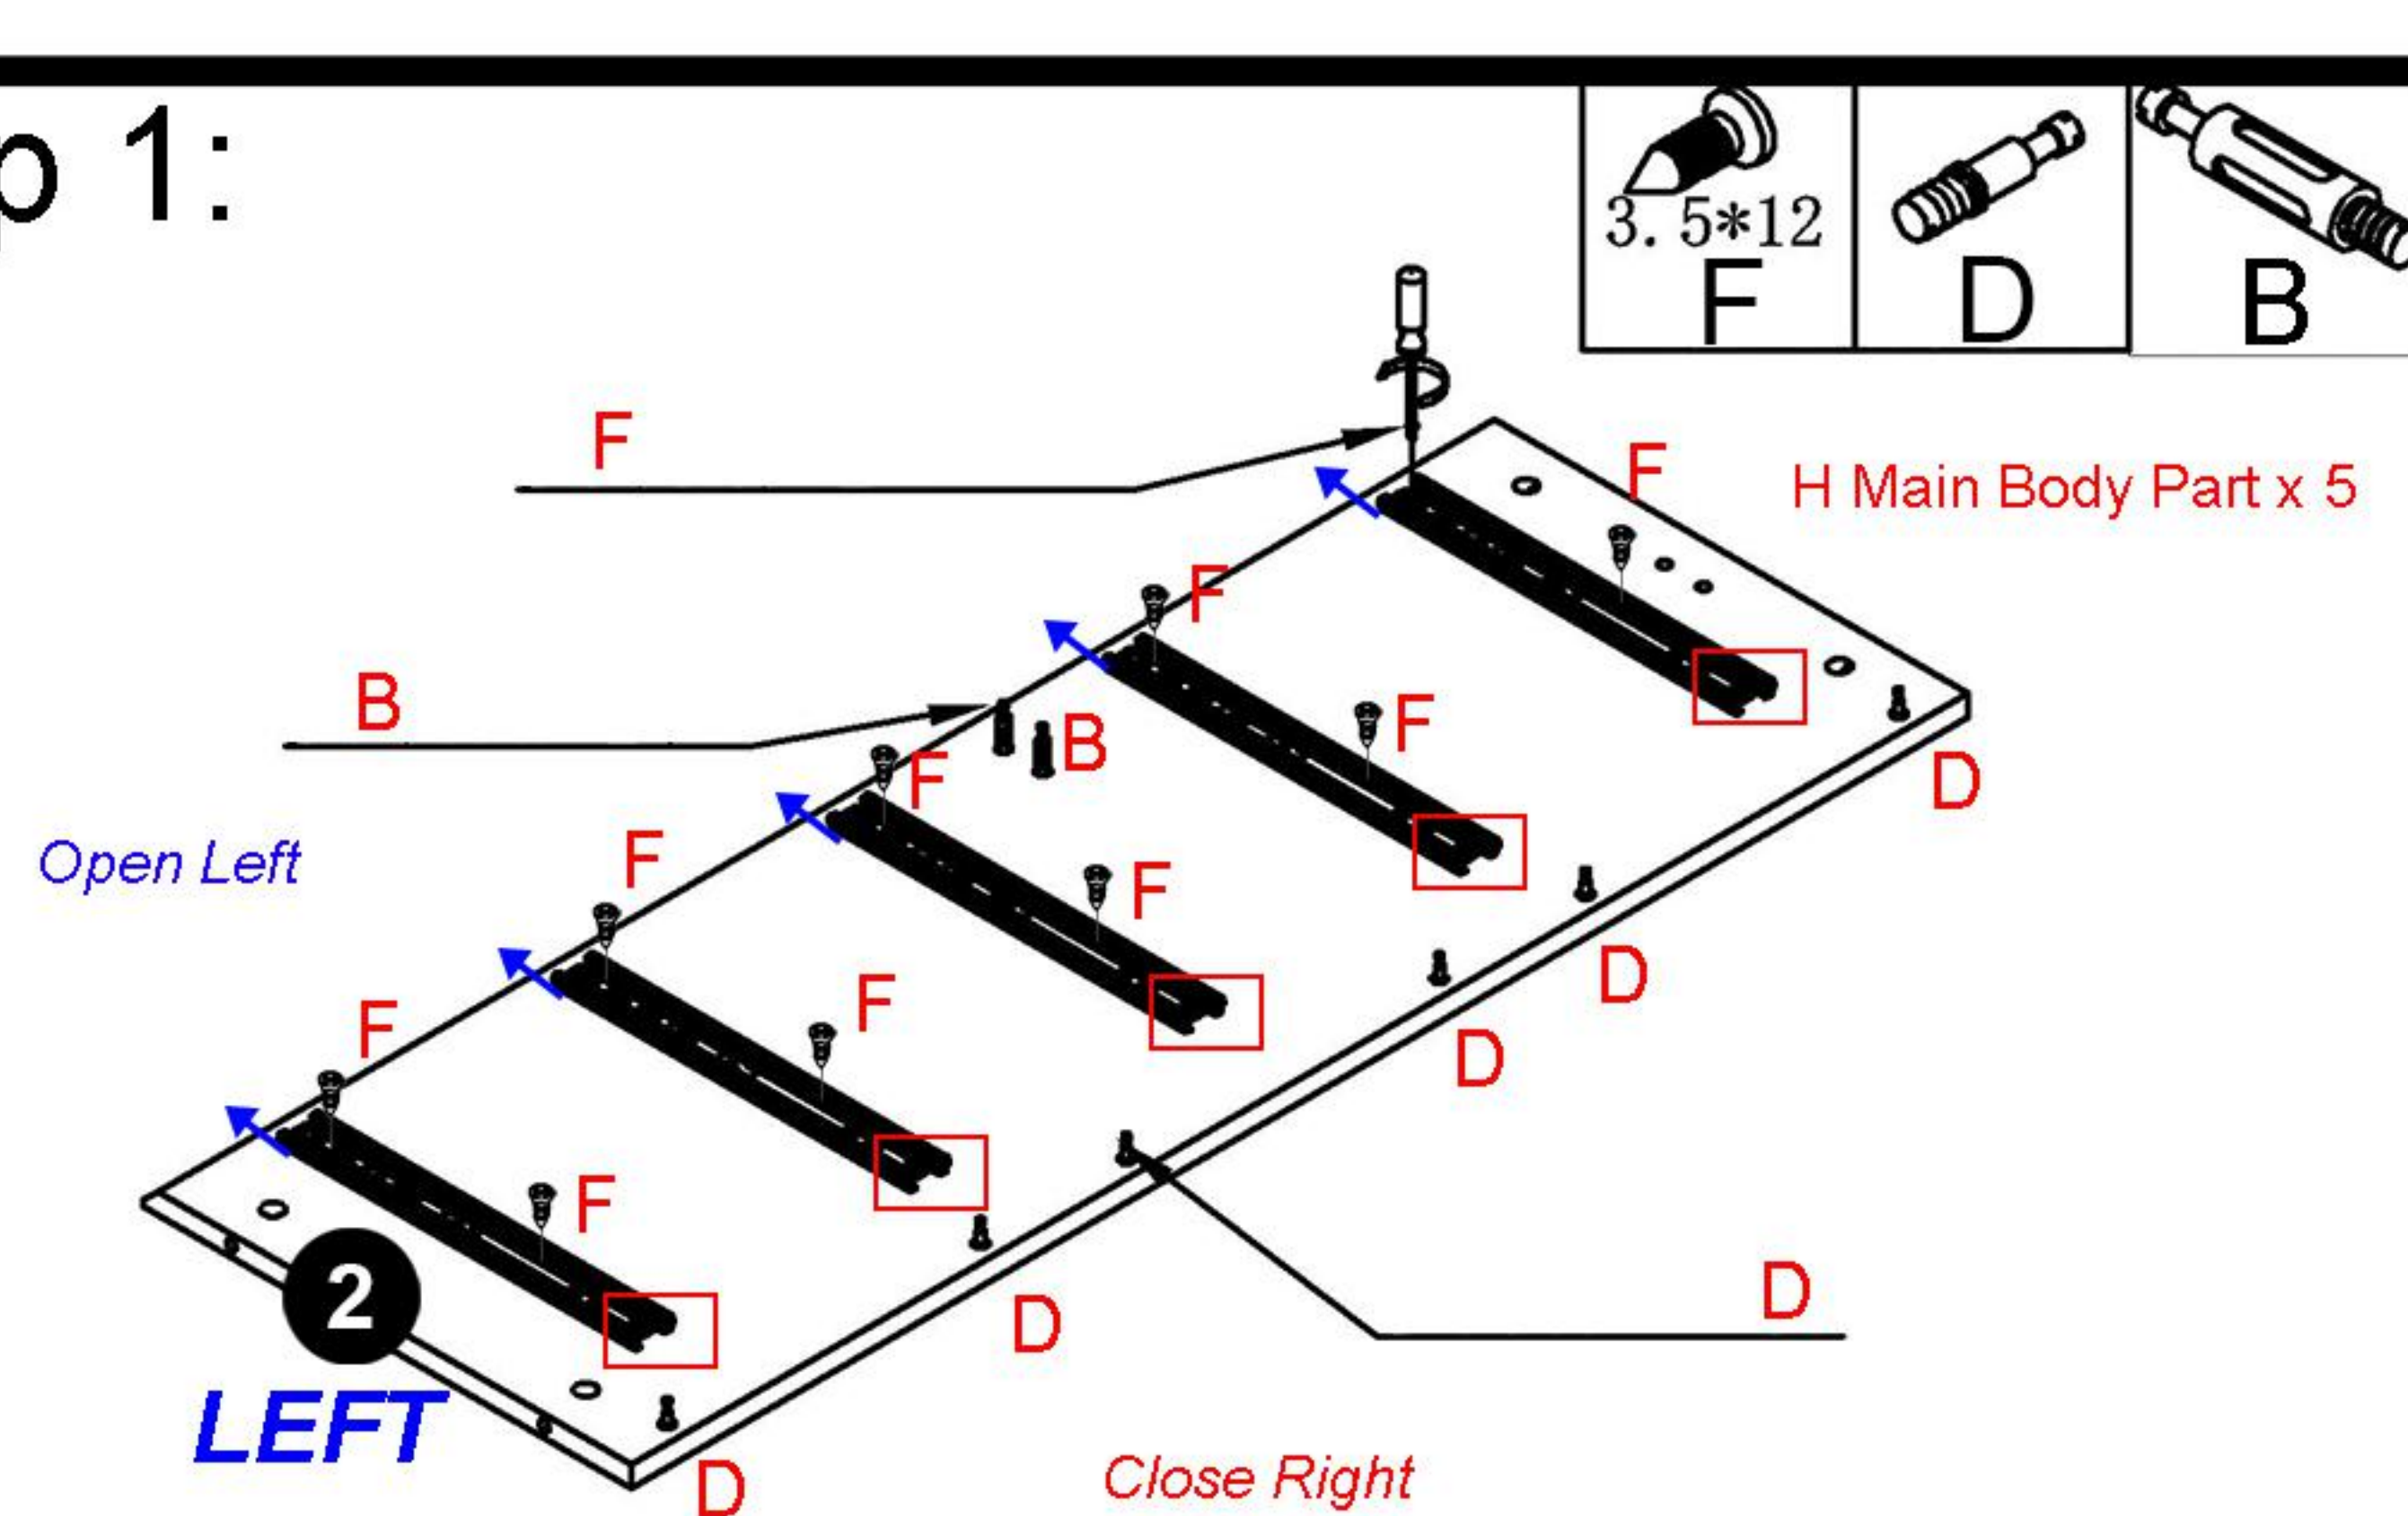


Pay attention to the orientation of H main body part, with the opening facing outward. Install using F.

## Step 2:

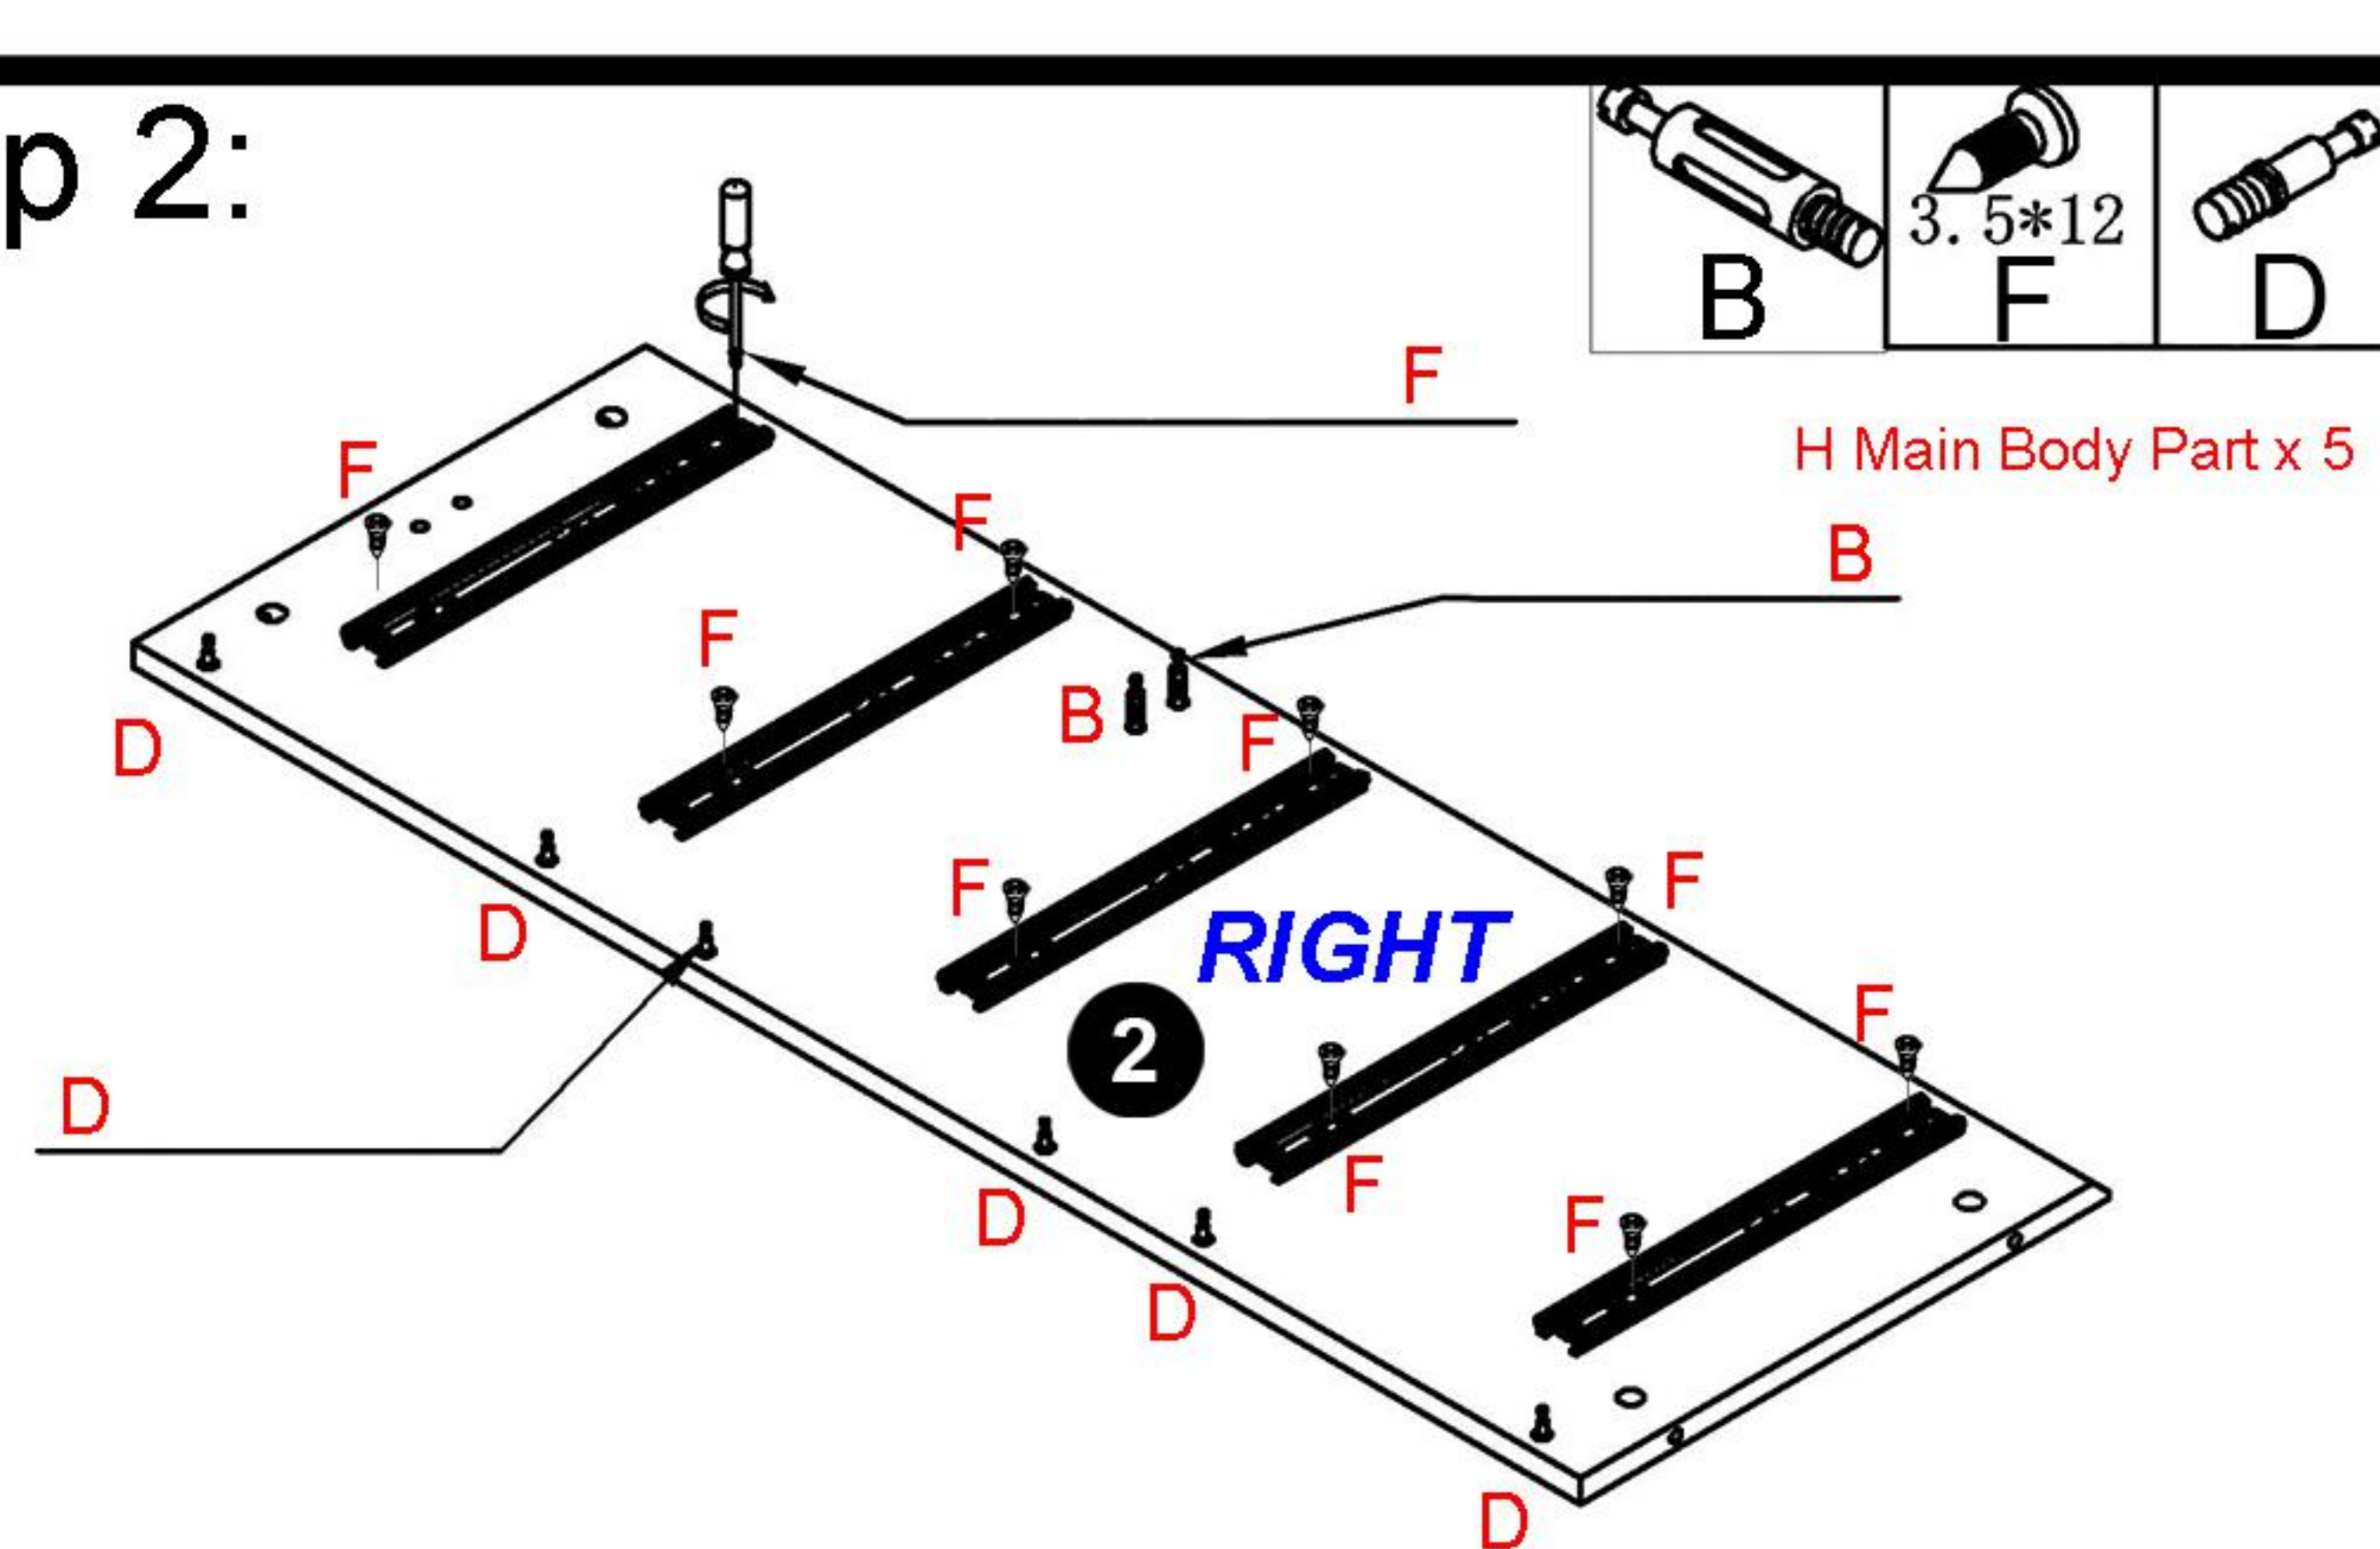


Repeat the previous step on the right side of panel 2.

## Step 3:

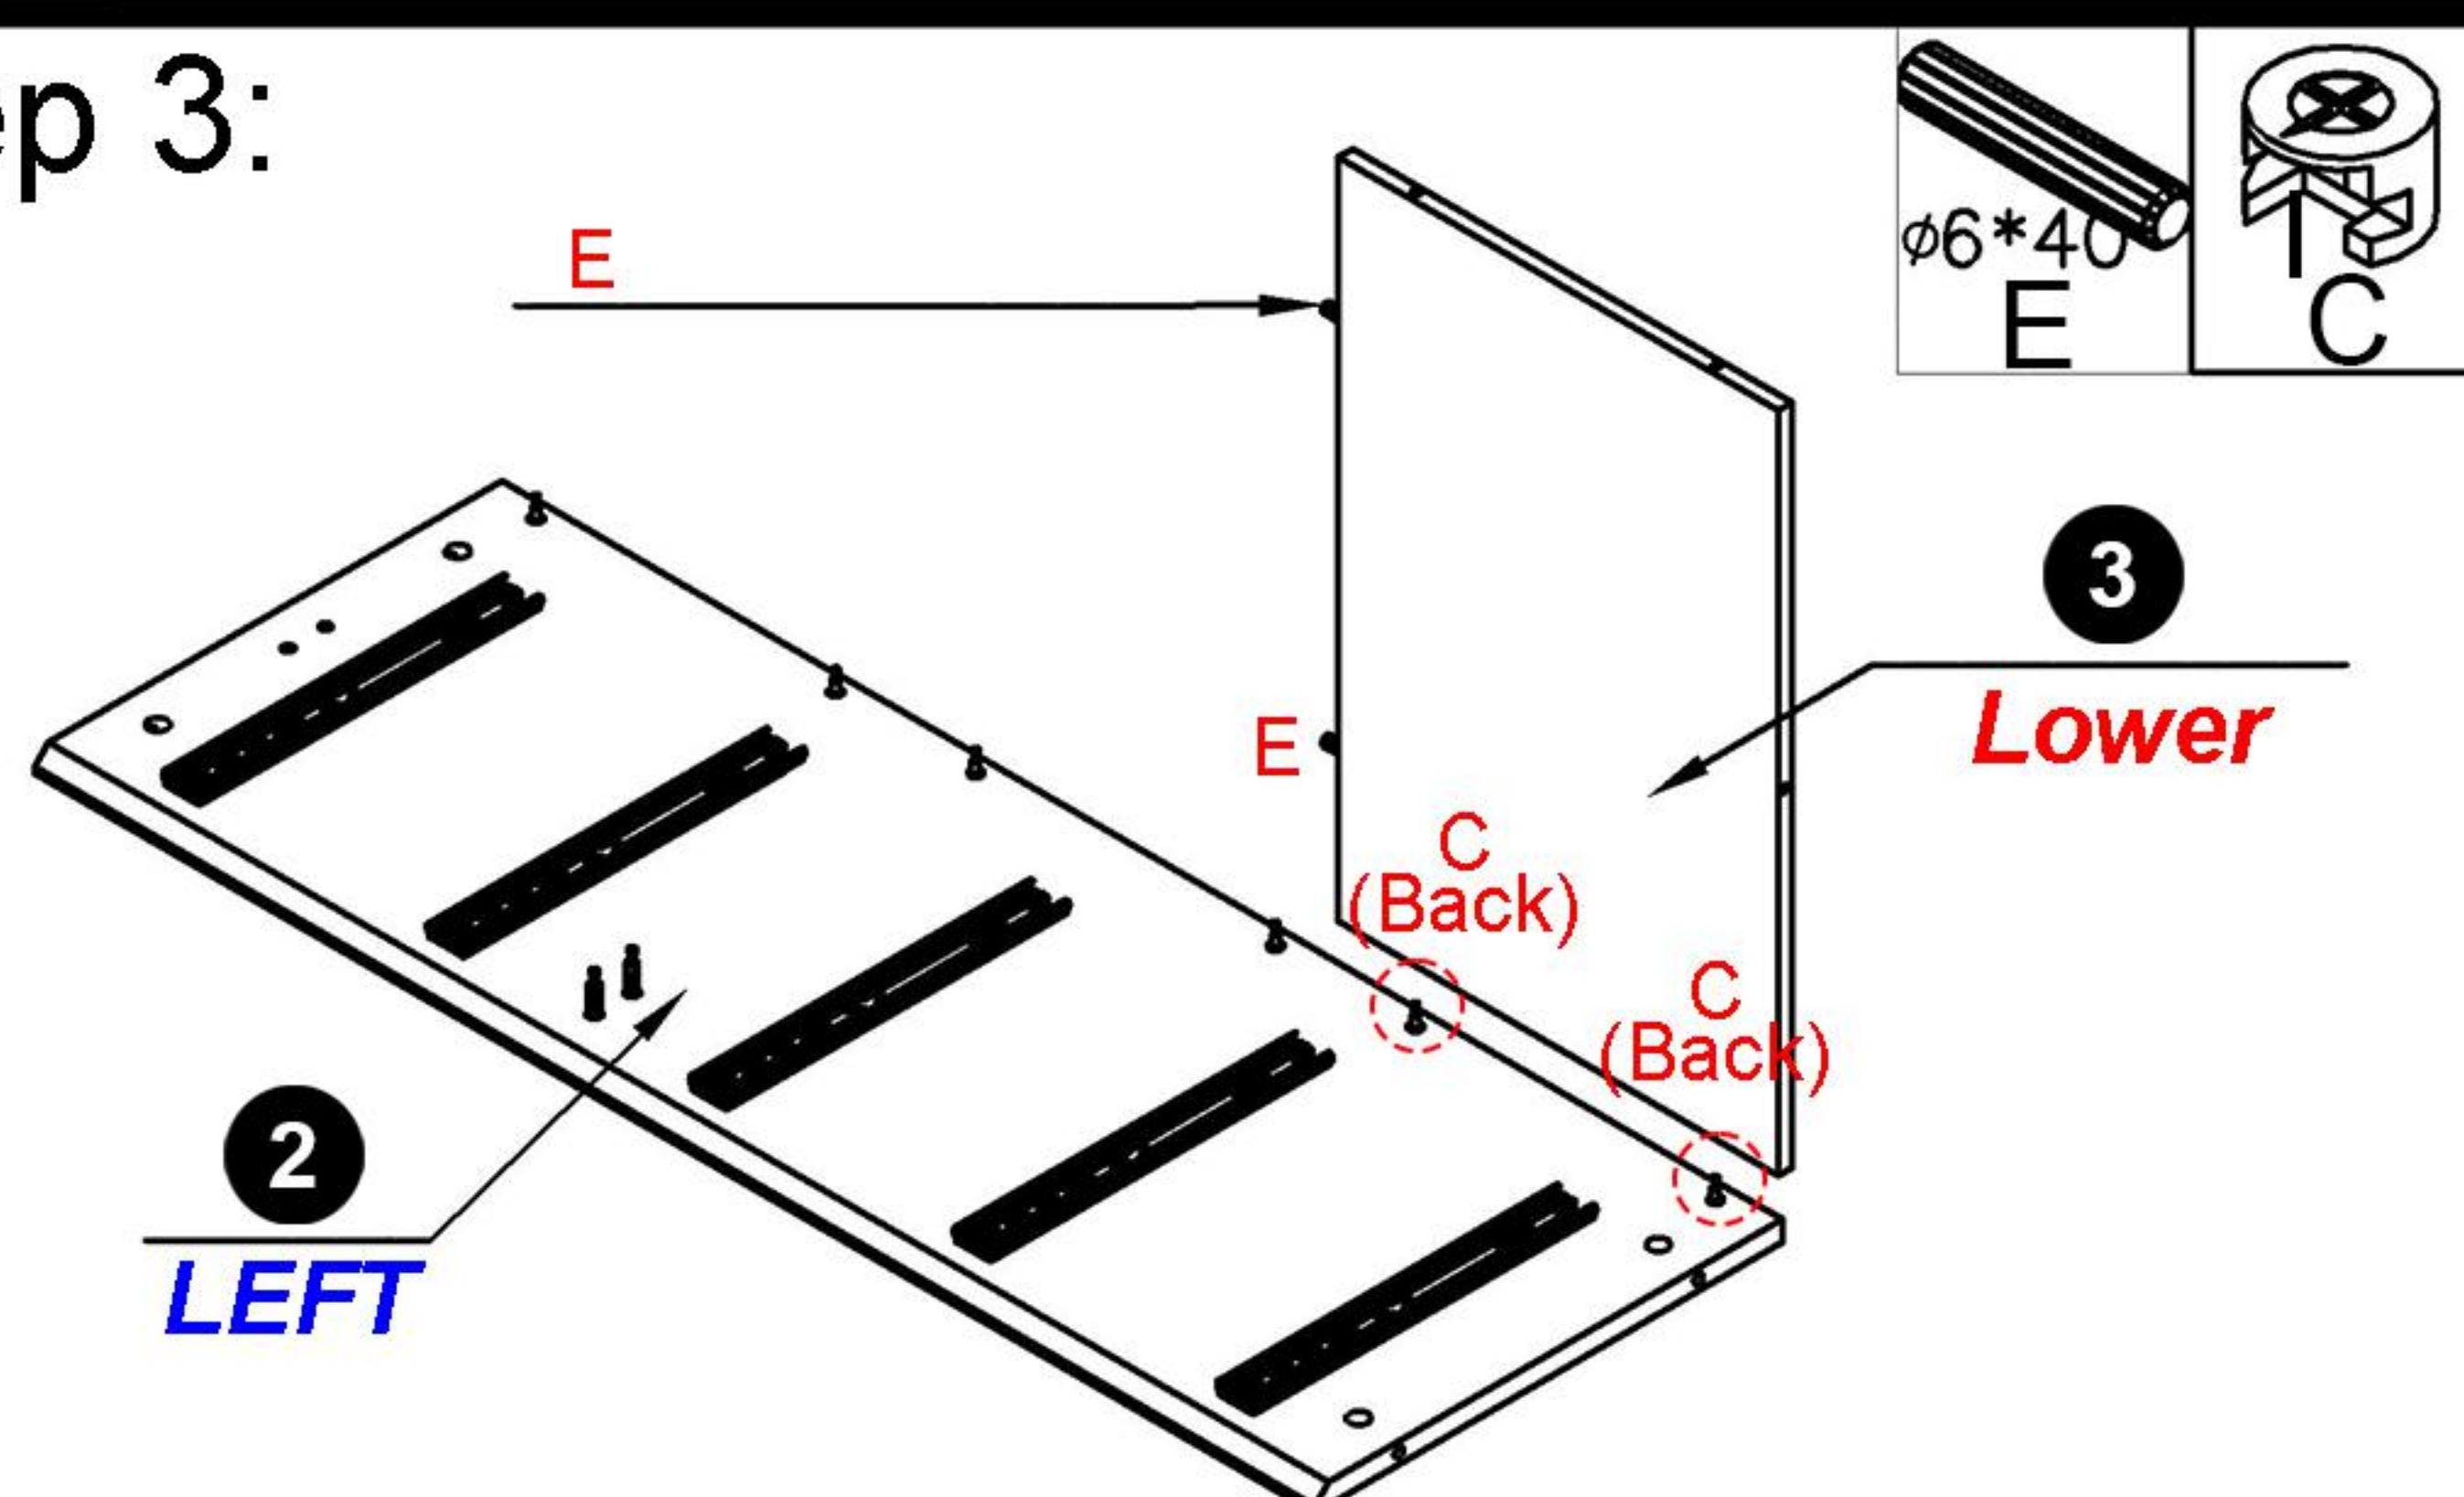


Lock the connection with C. Please refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

## Step 4:

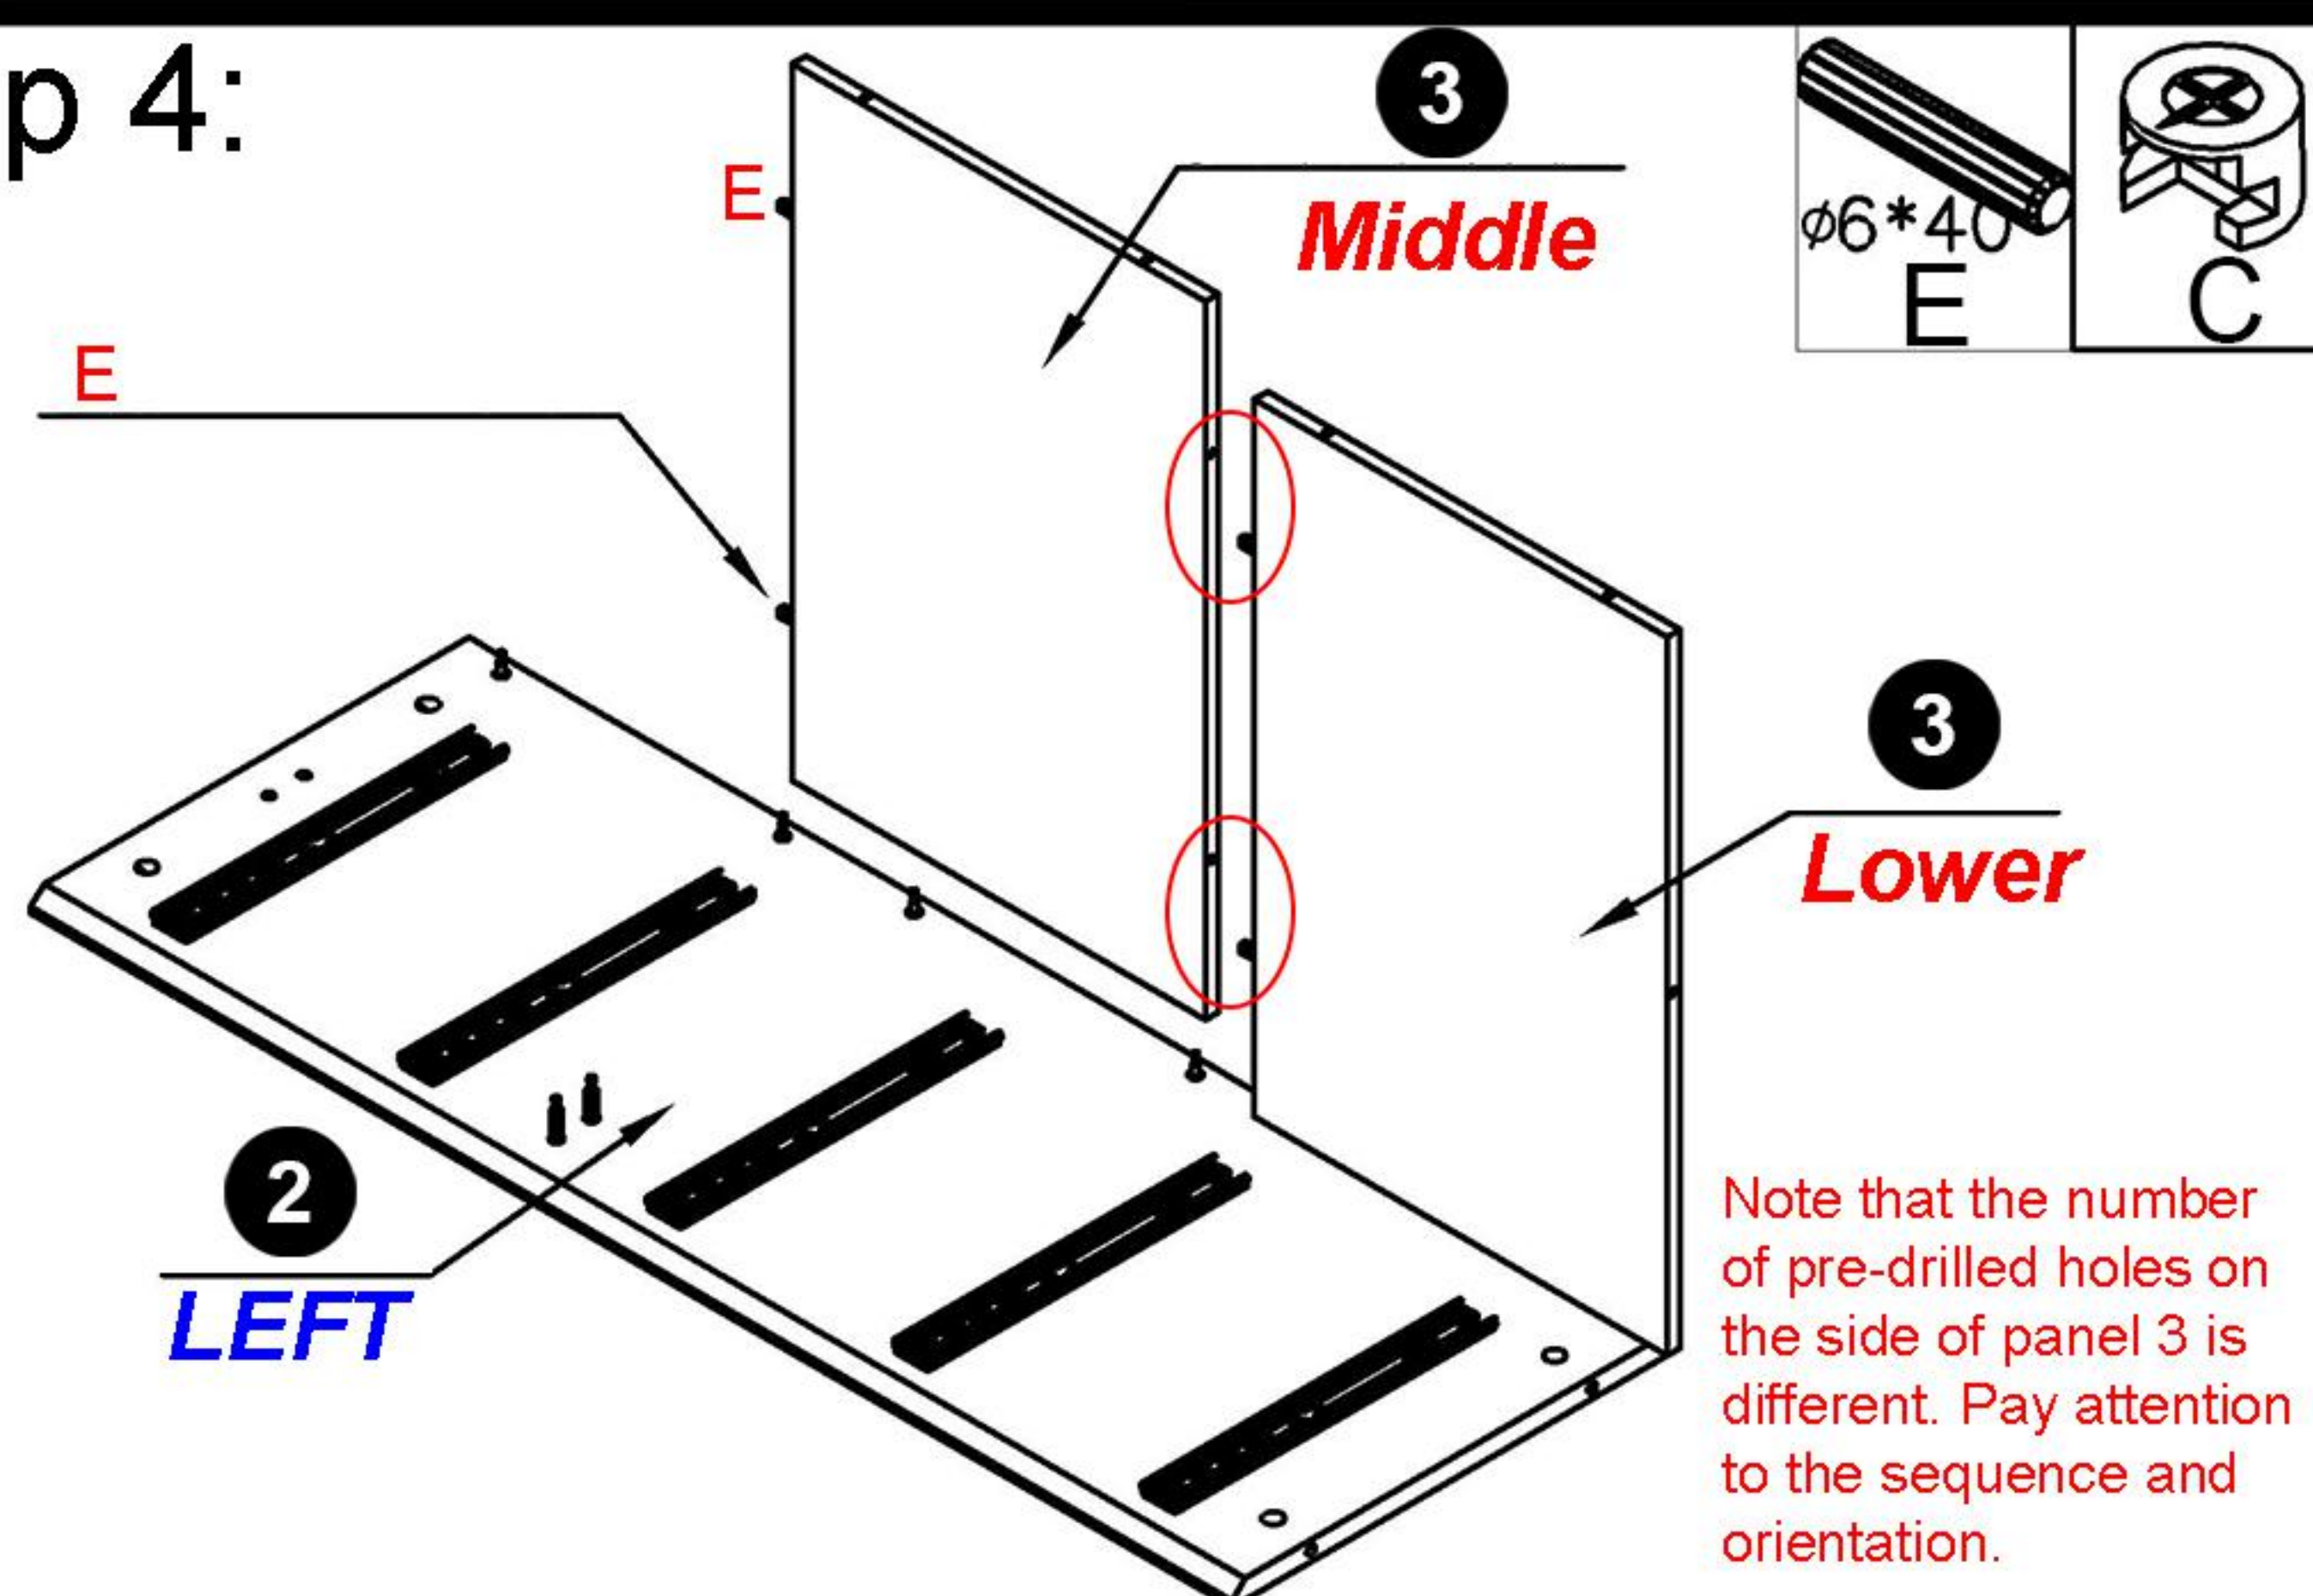


Lock the connection with C. Please refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

## Step 5:

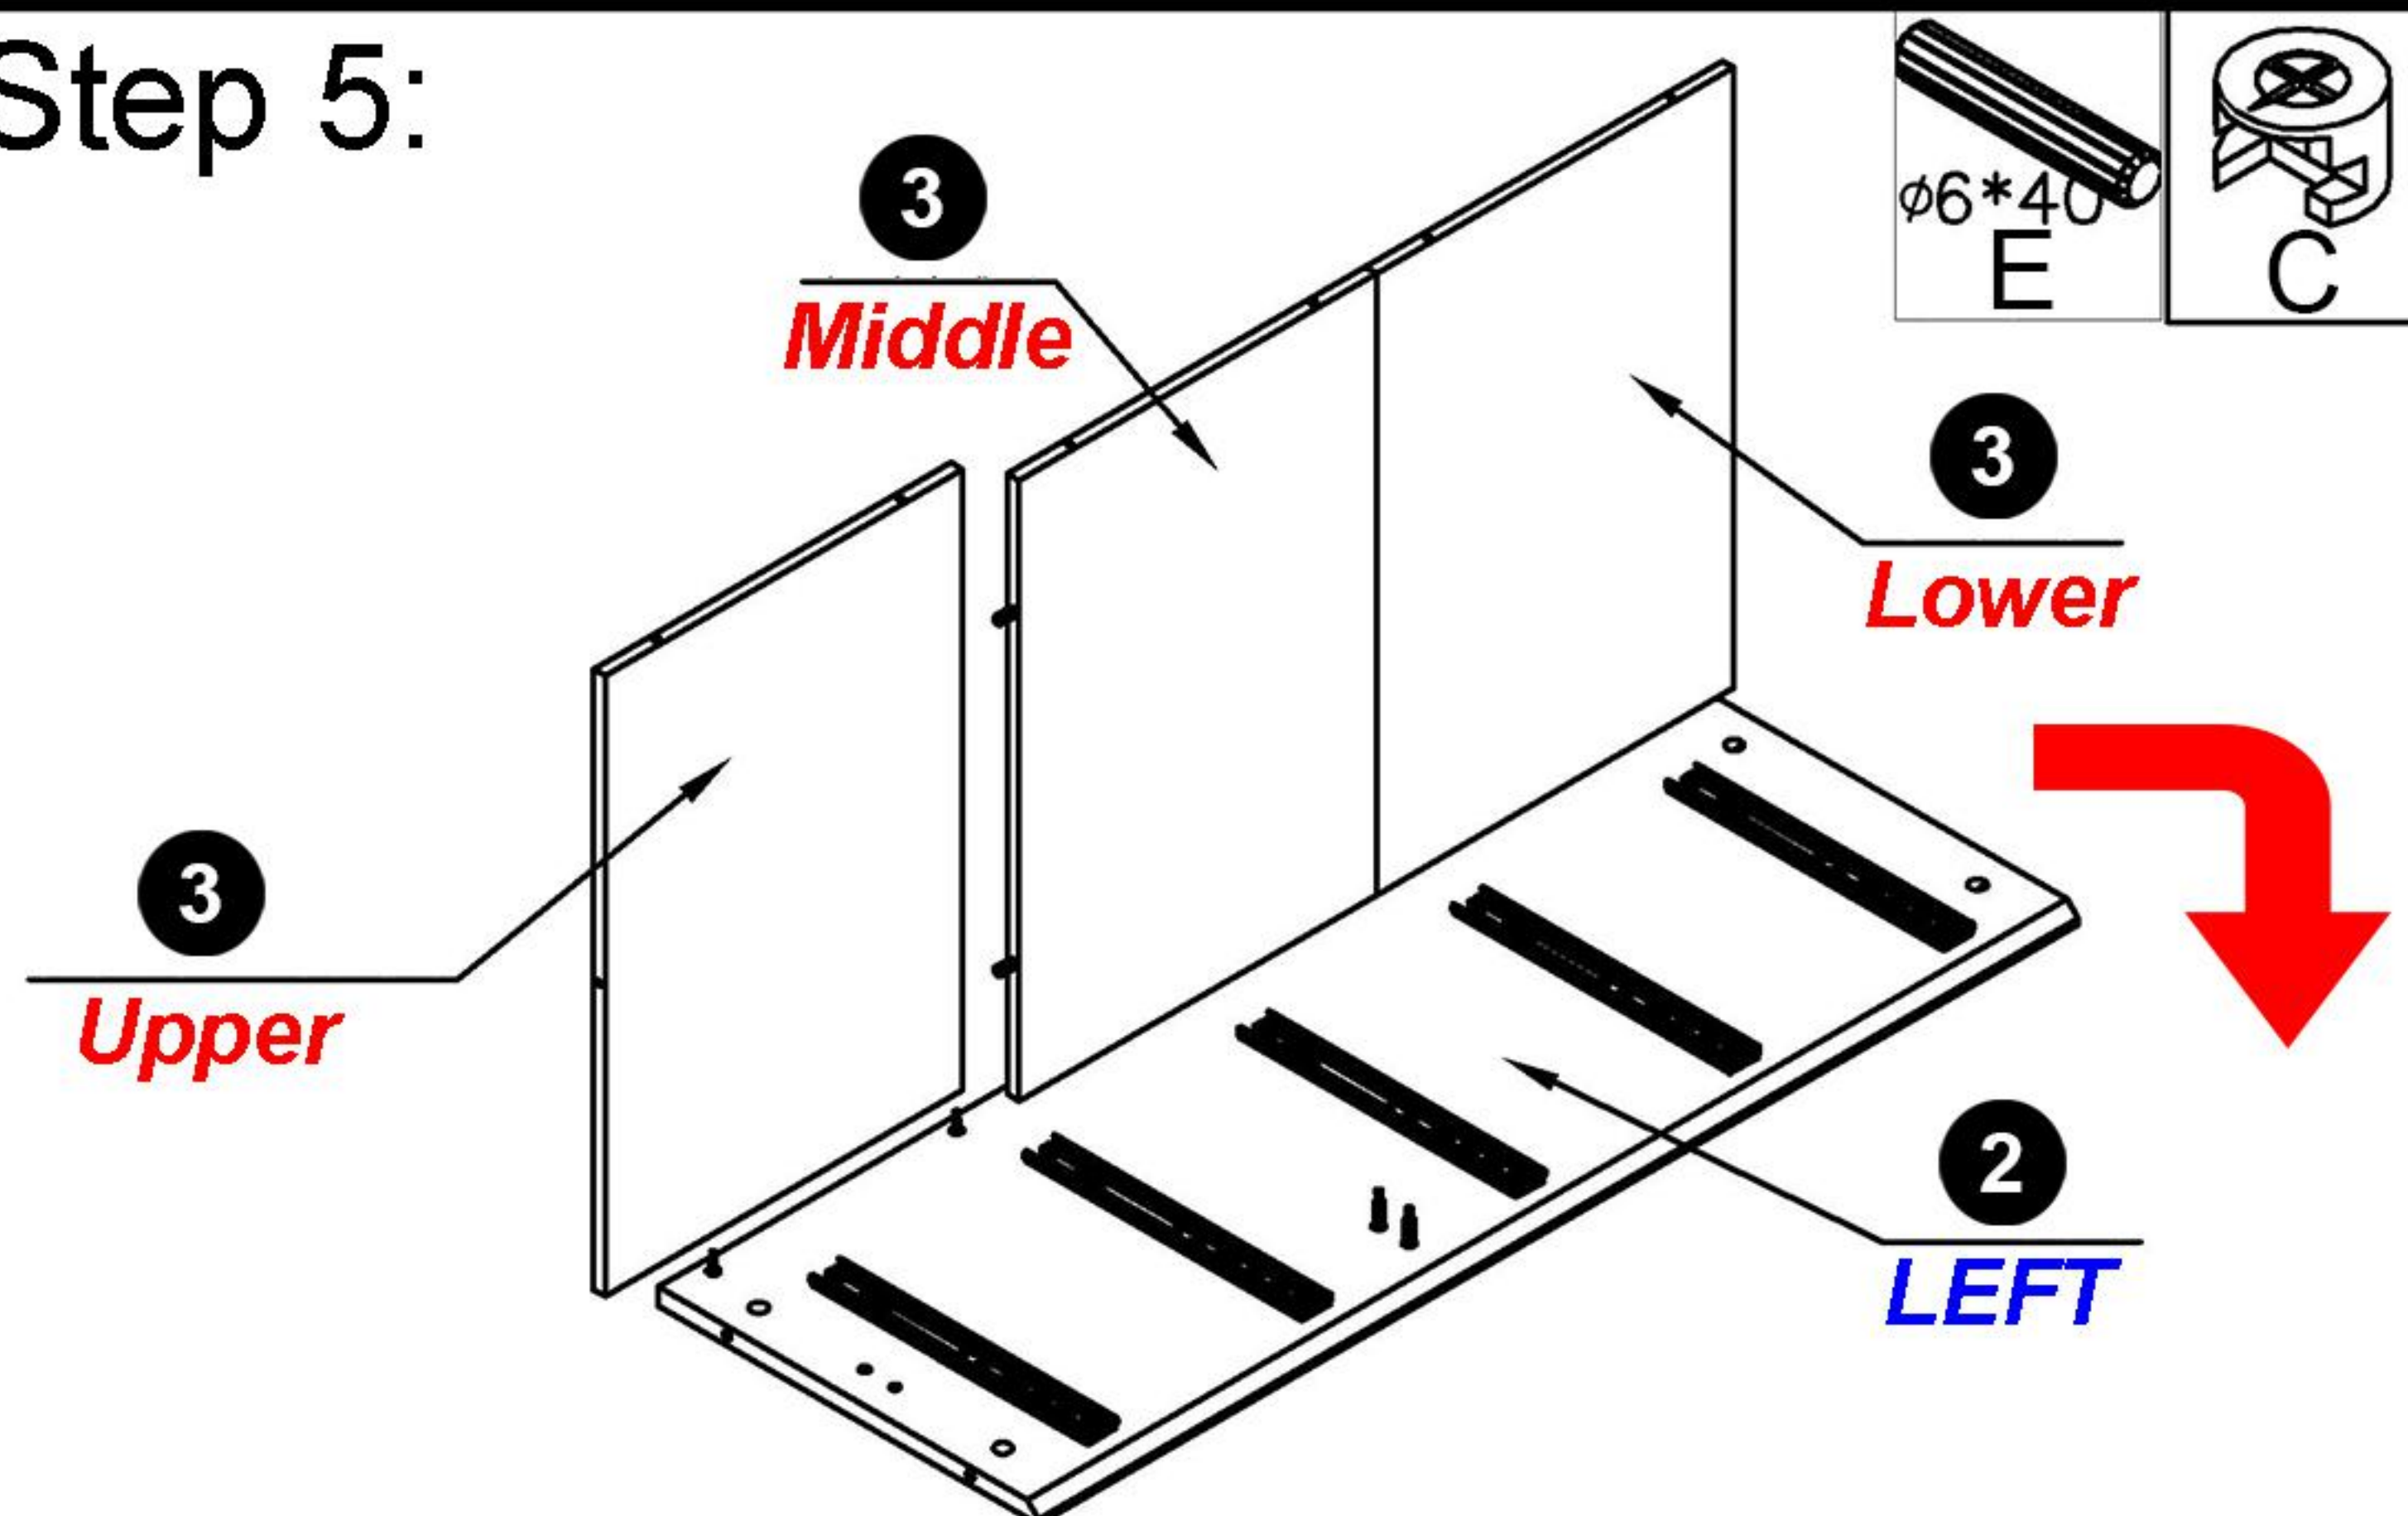


Lock the connection with C. Please refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

## Step 6:

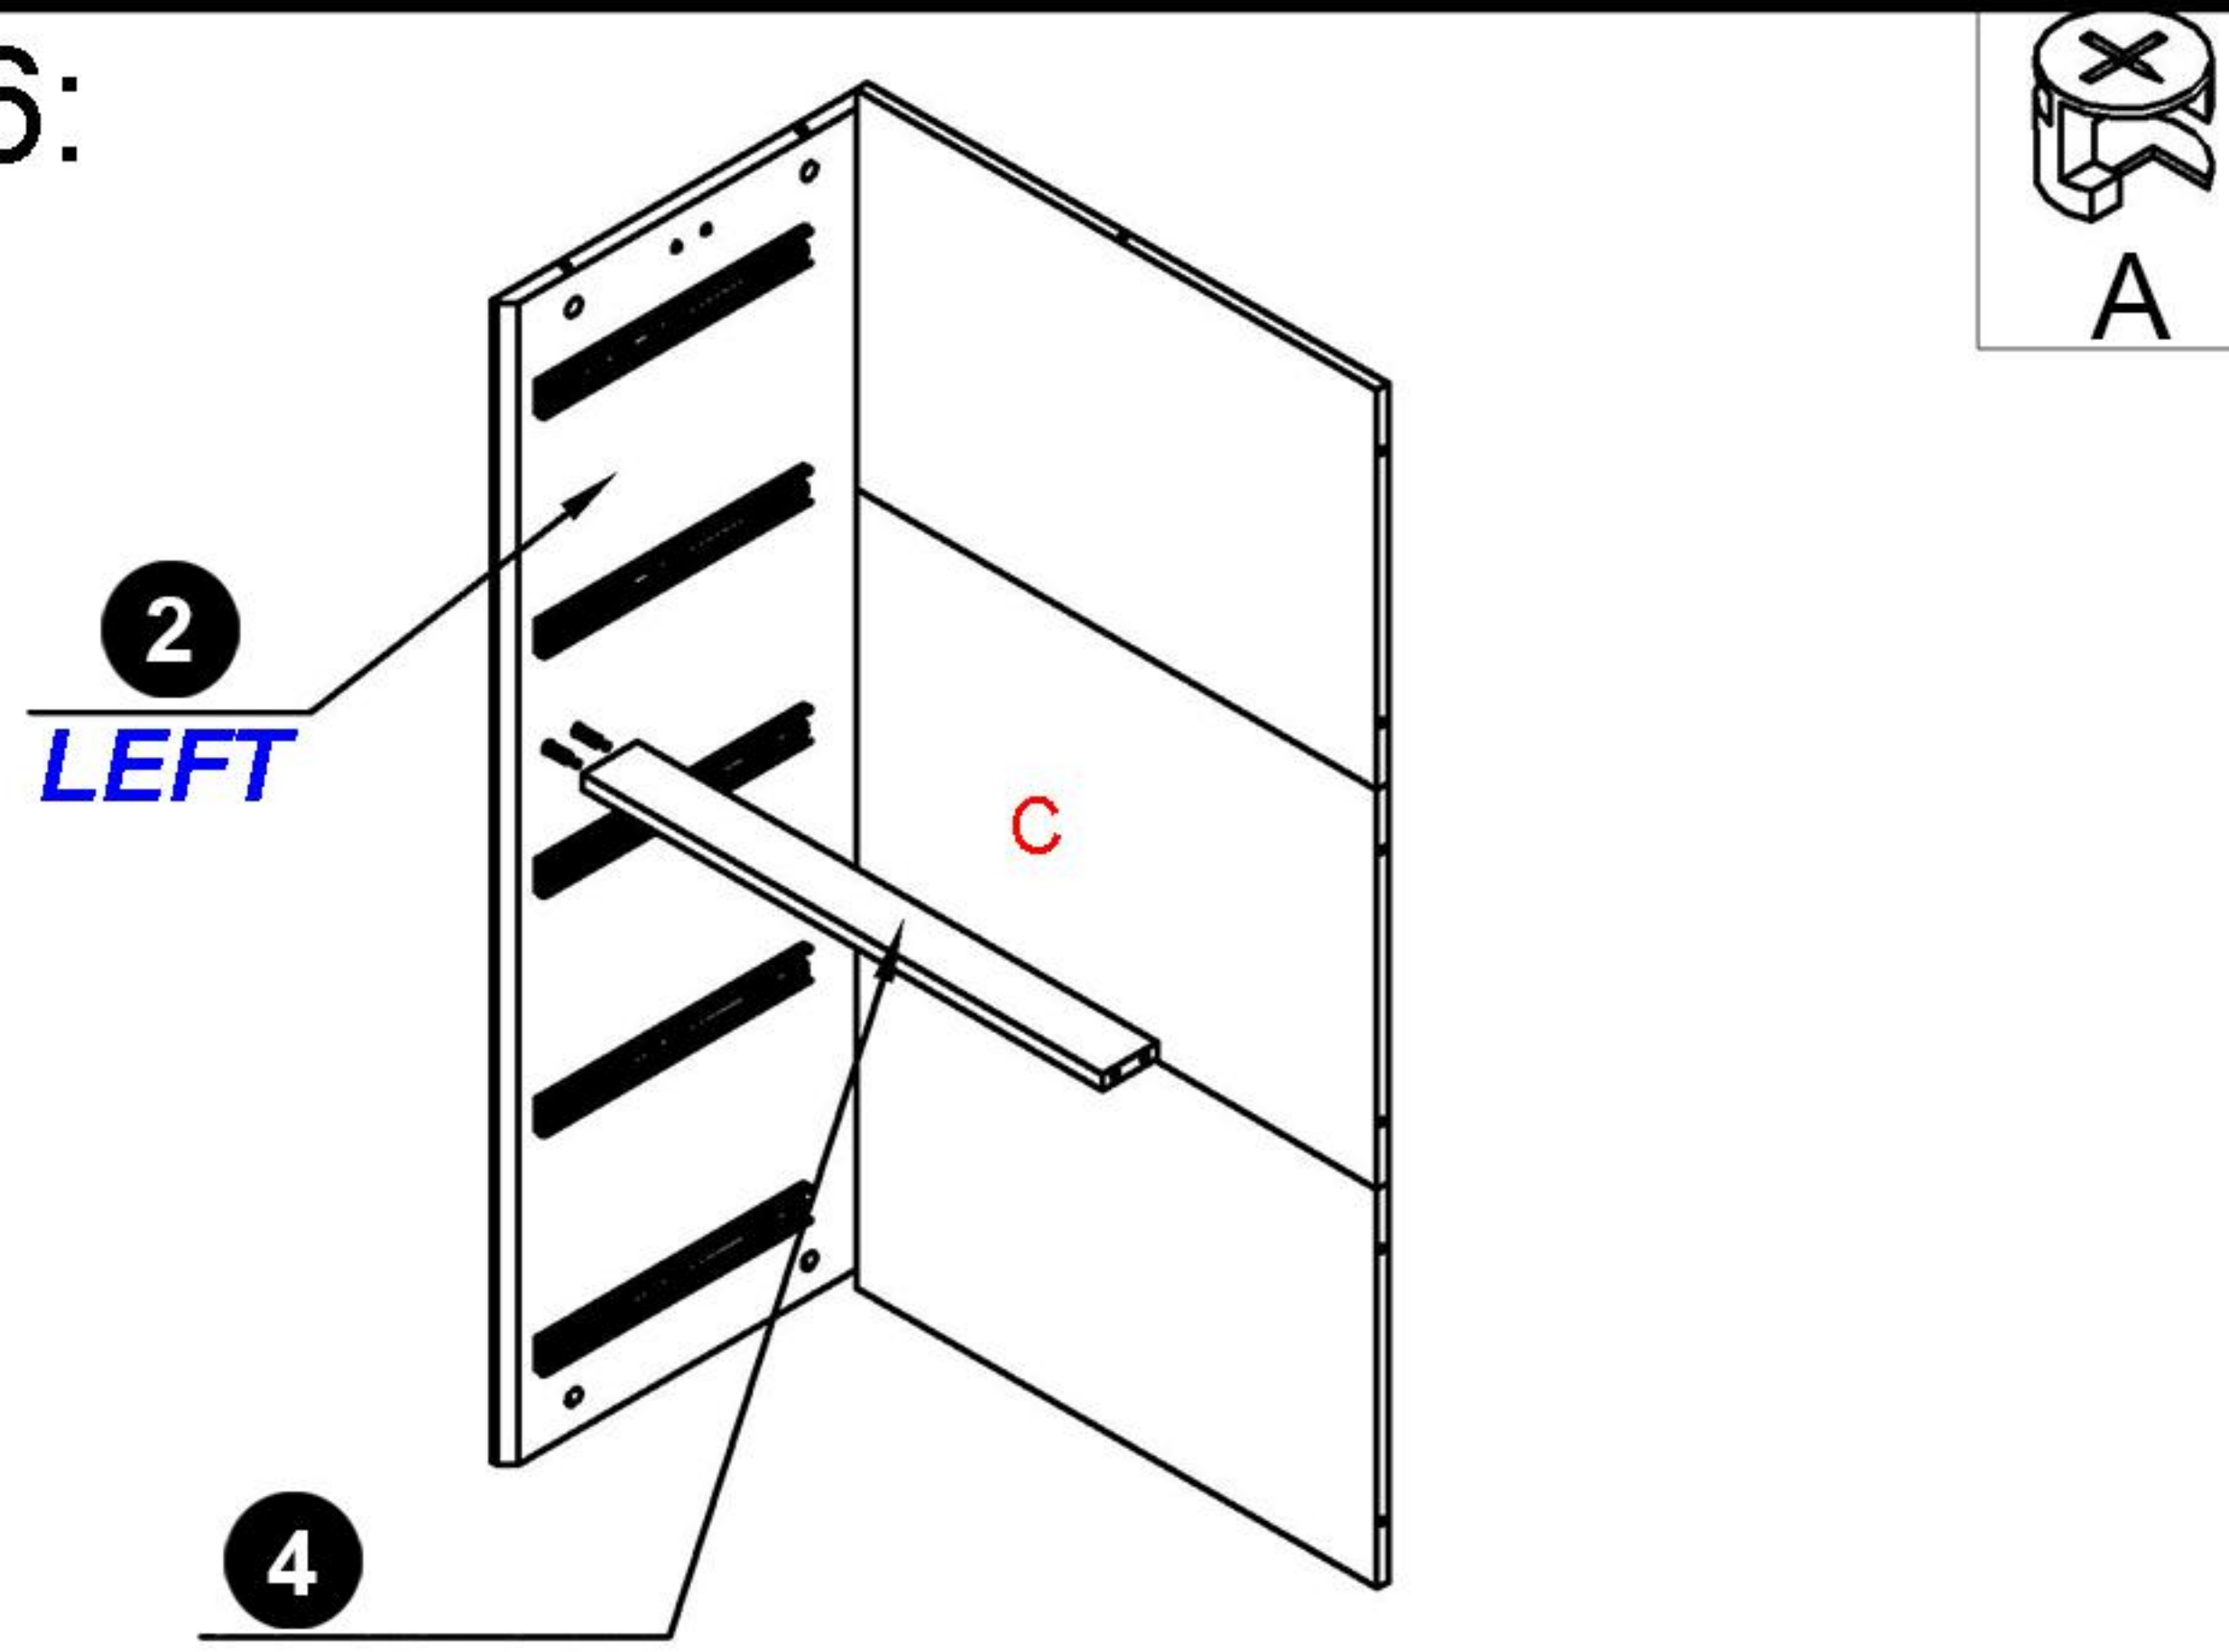


Lock the connection with A. Please refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.


## Step 7:

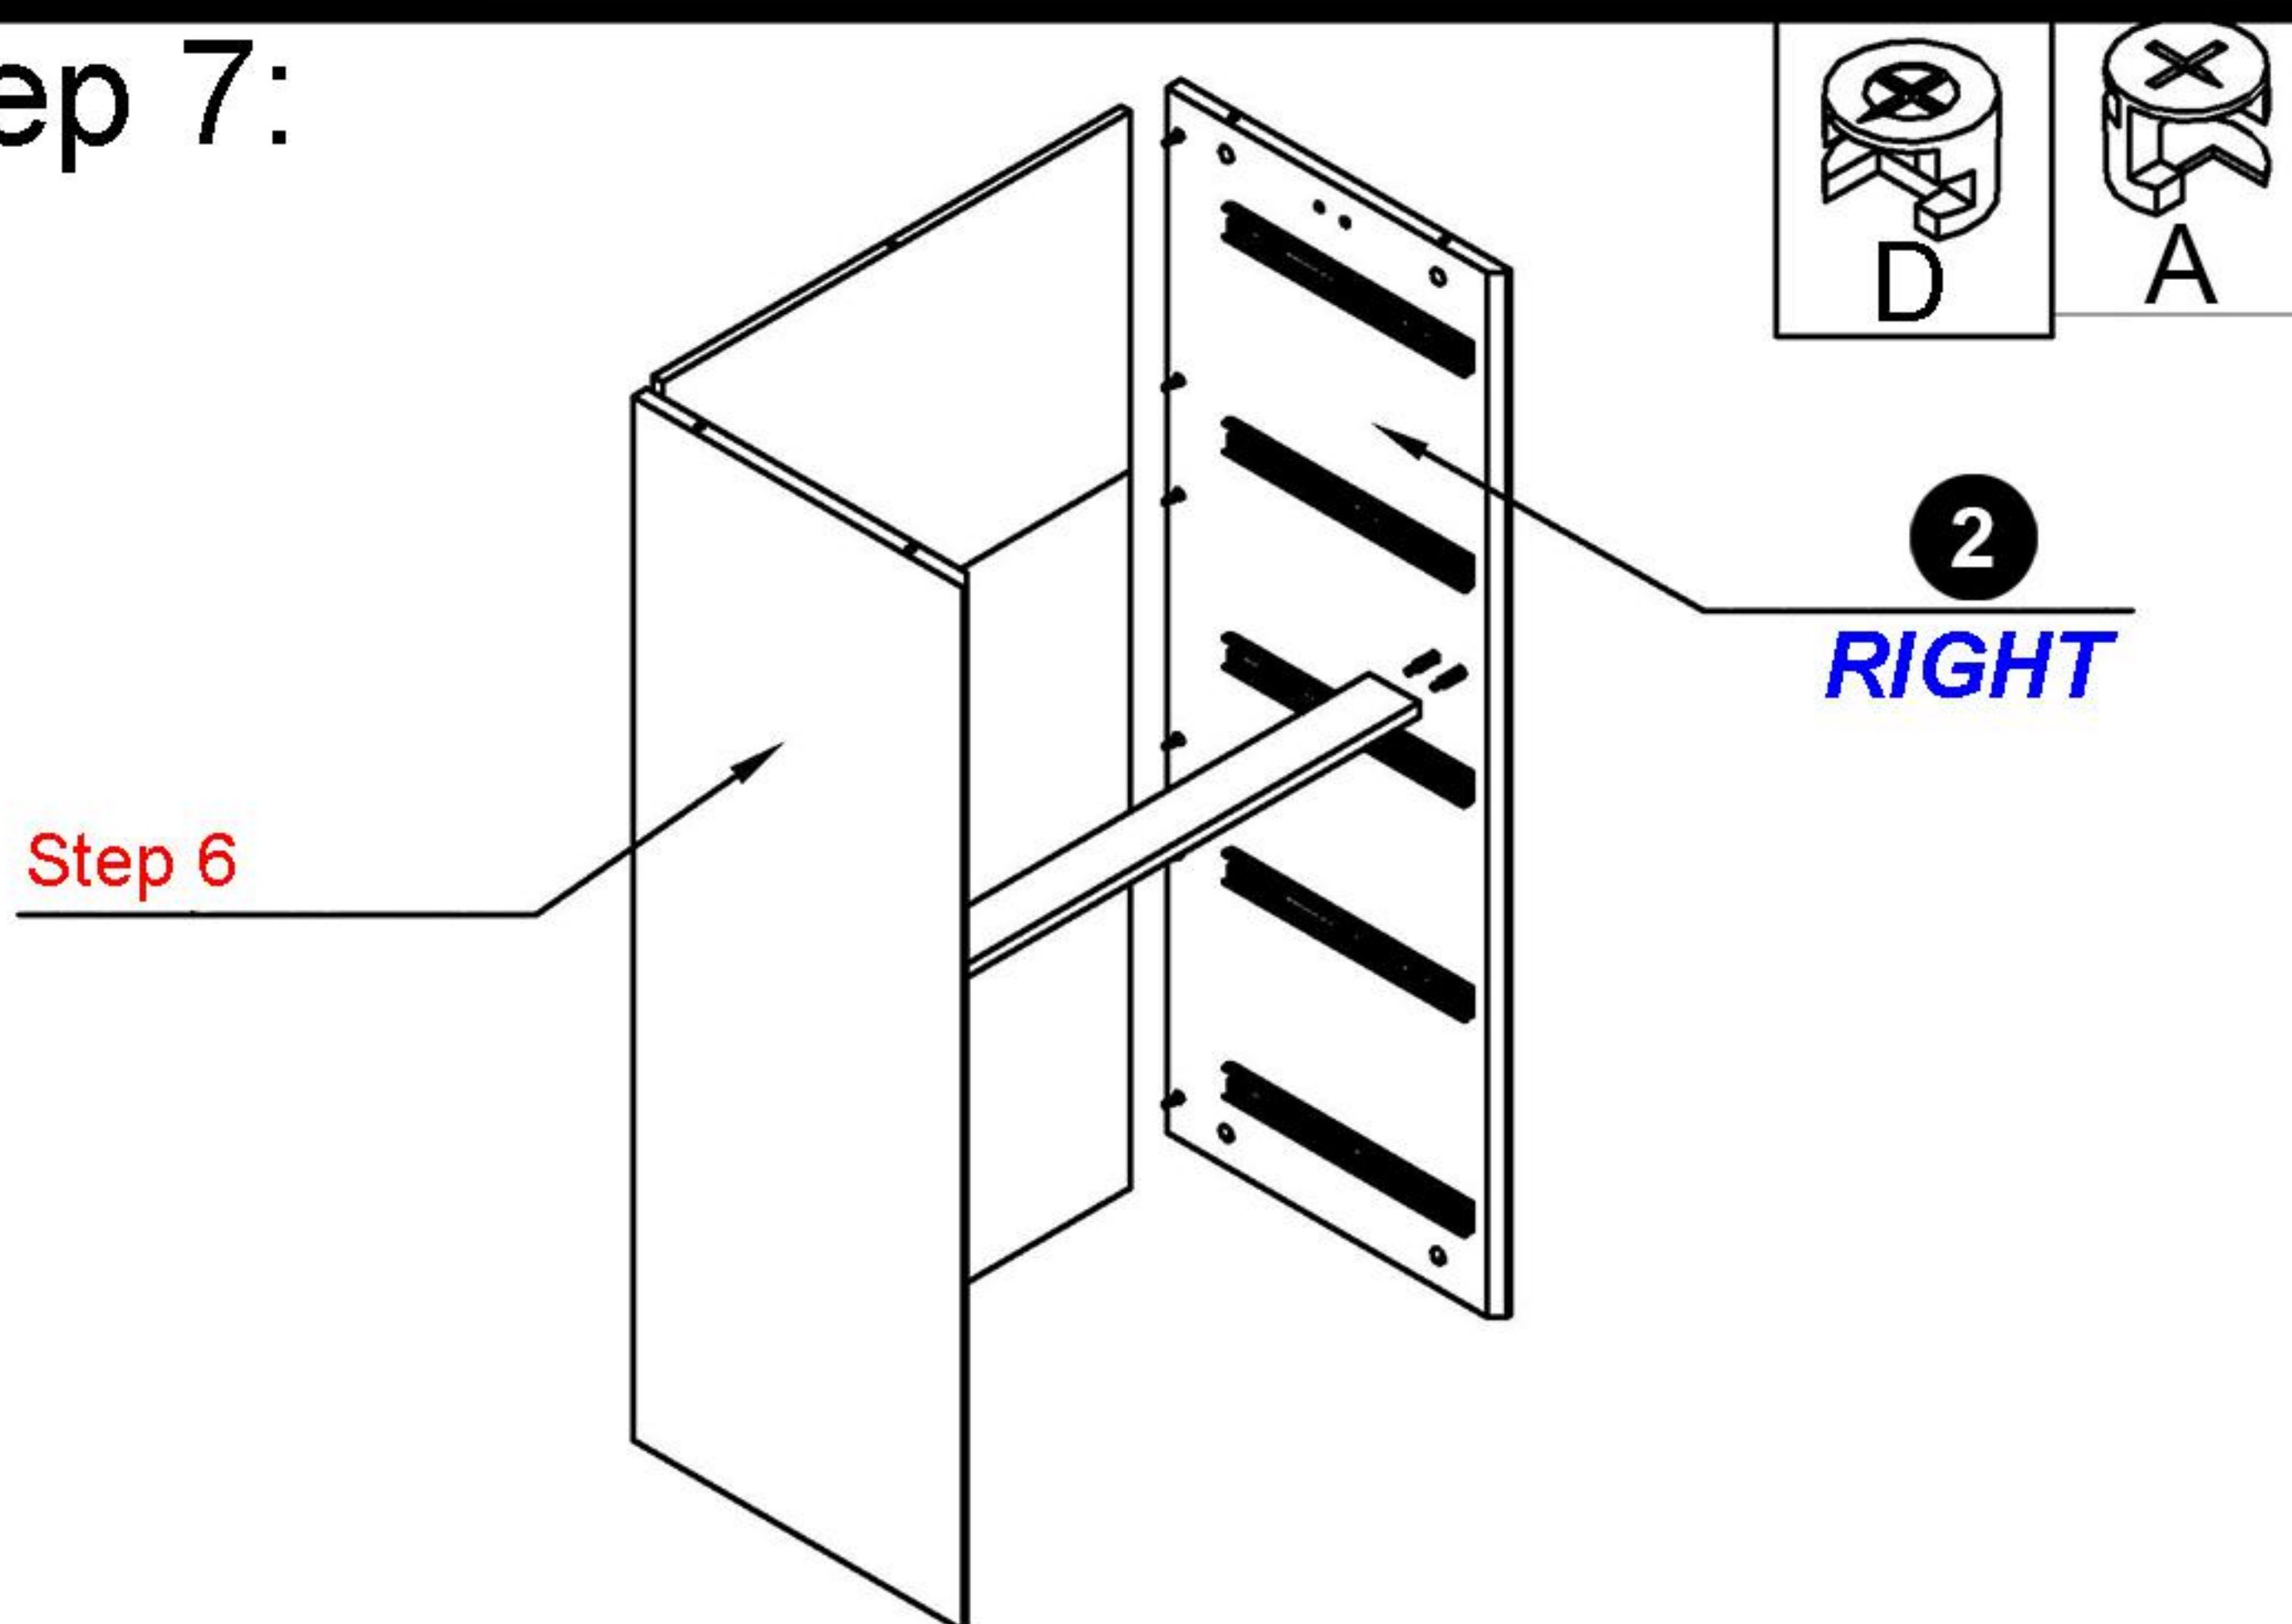


## Step 8:

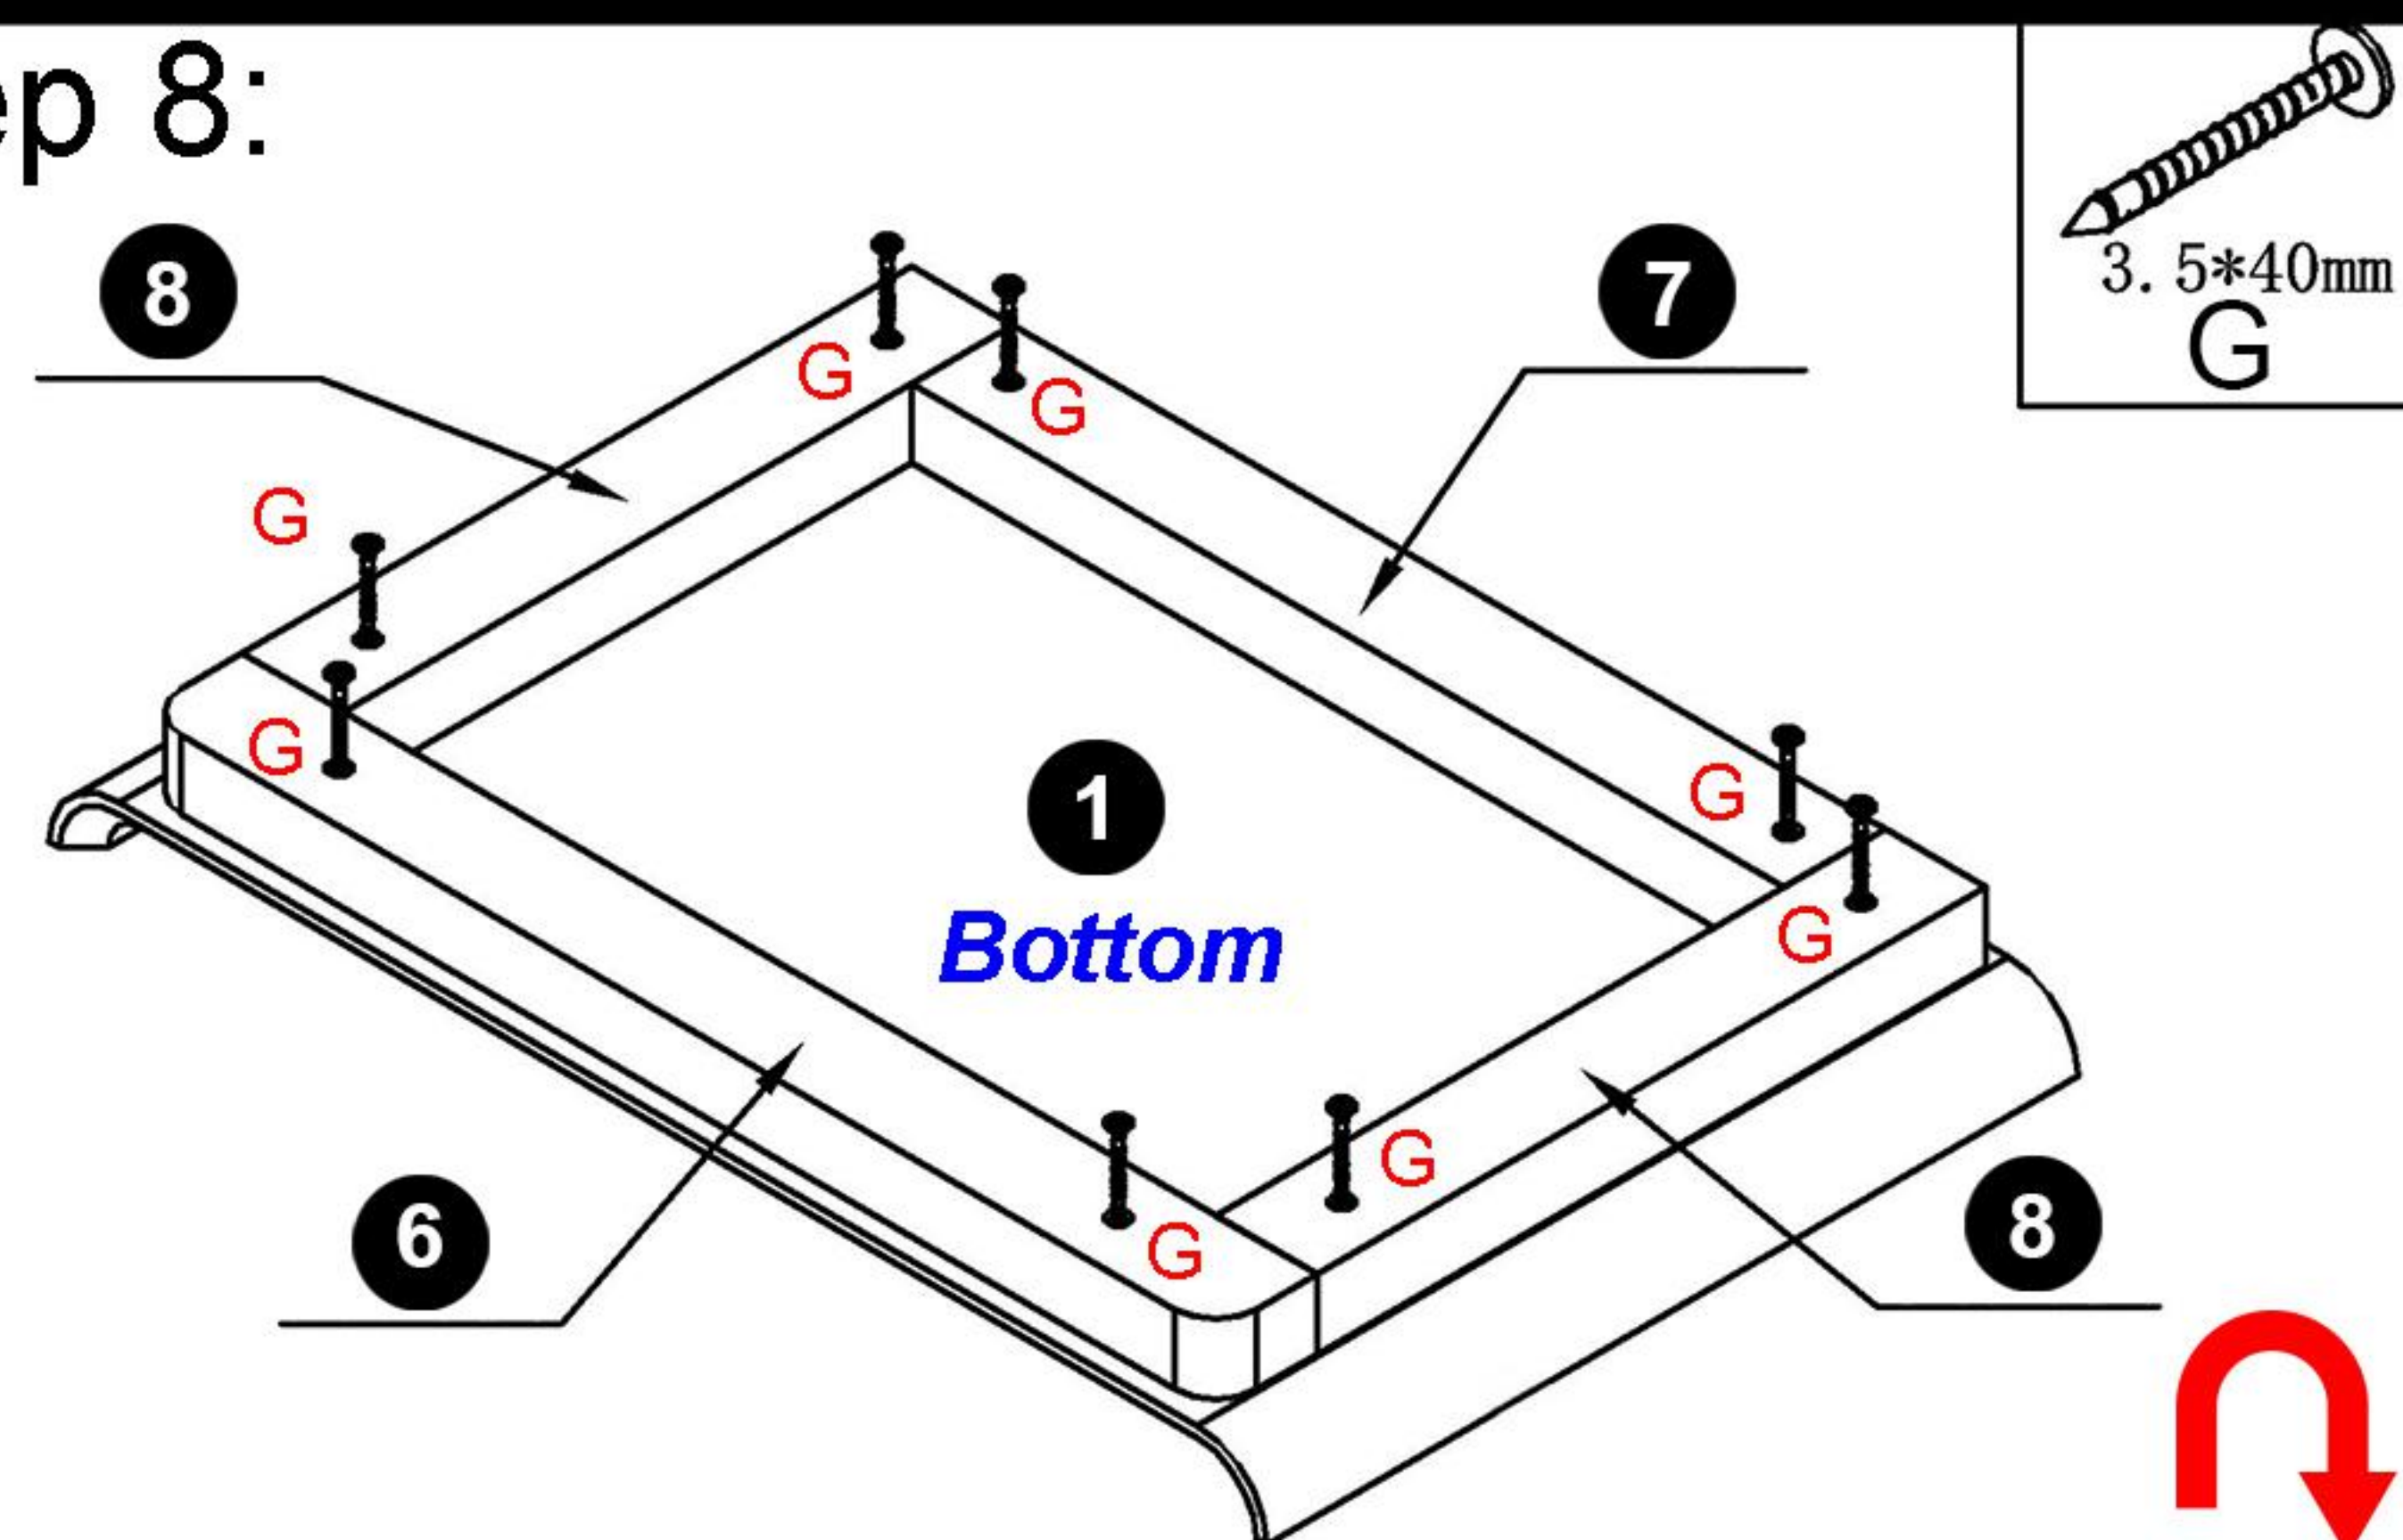


## Step 9:

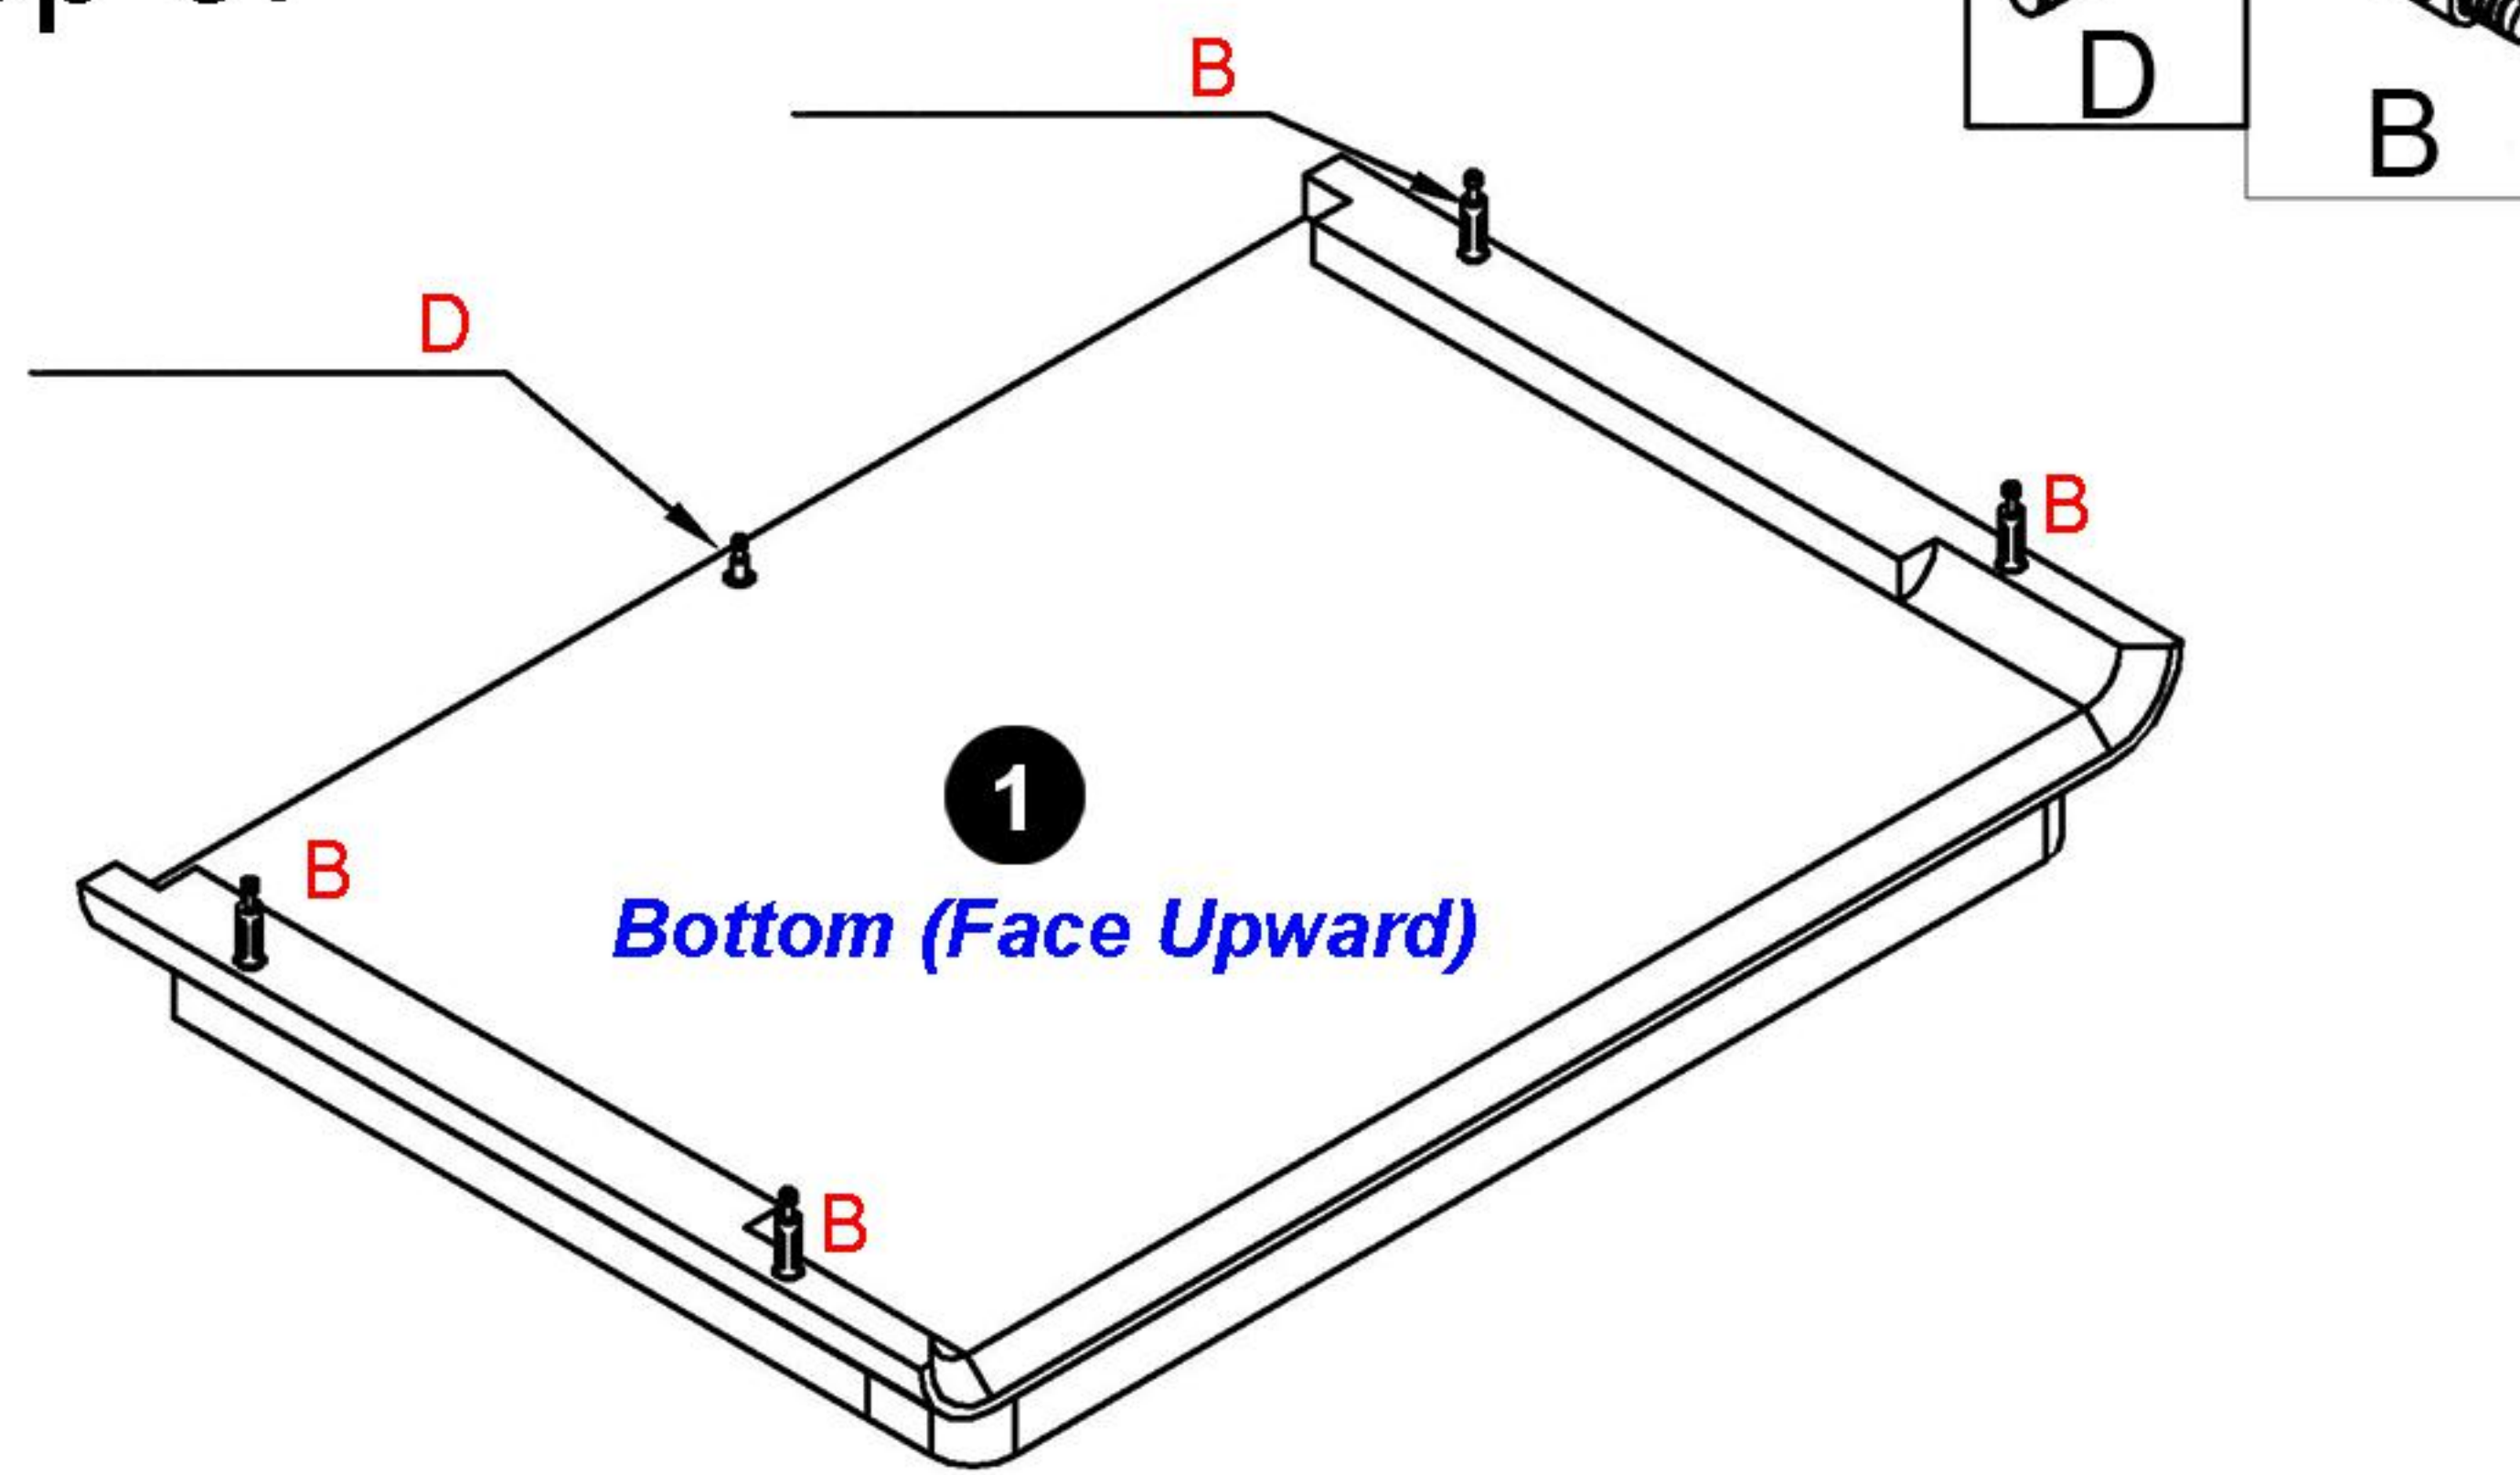


## Step 10:

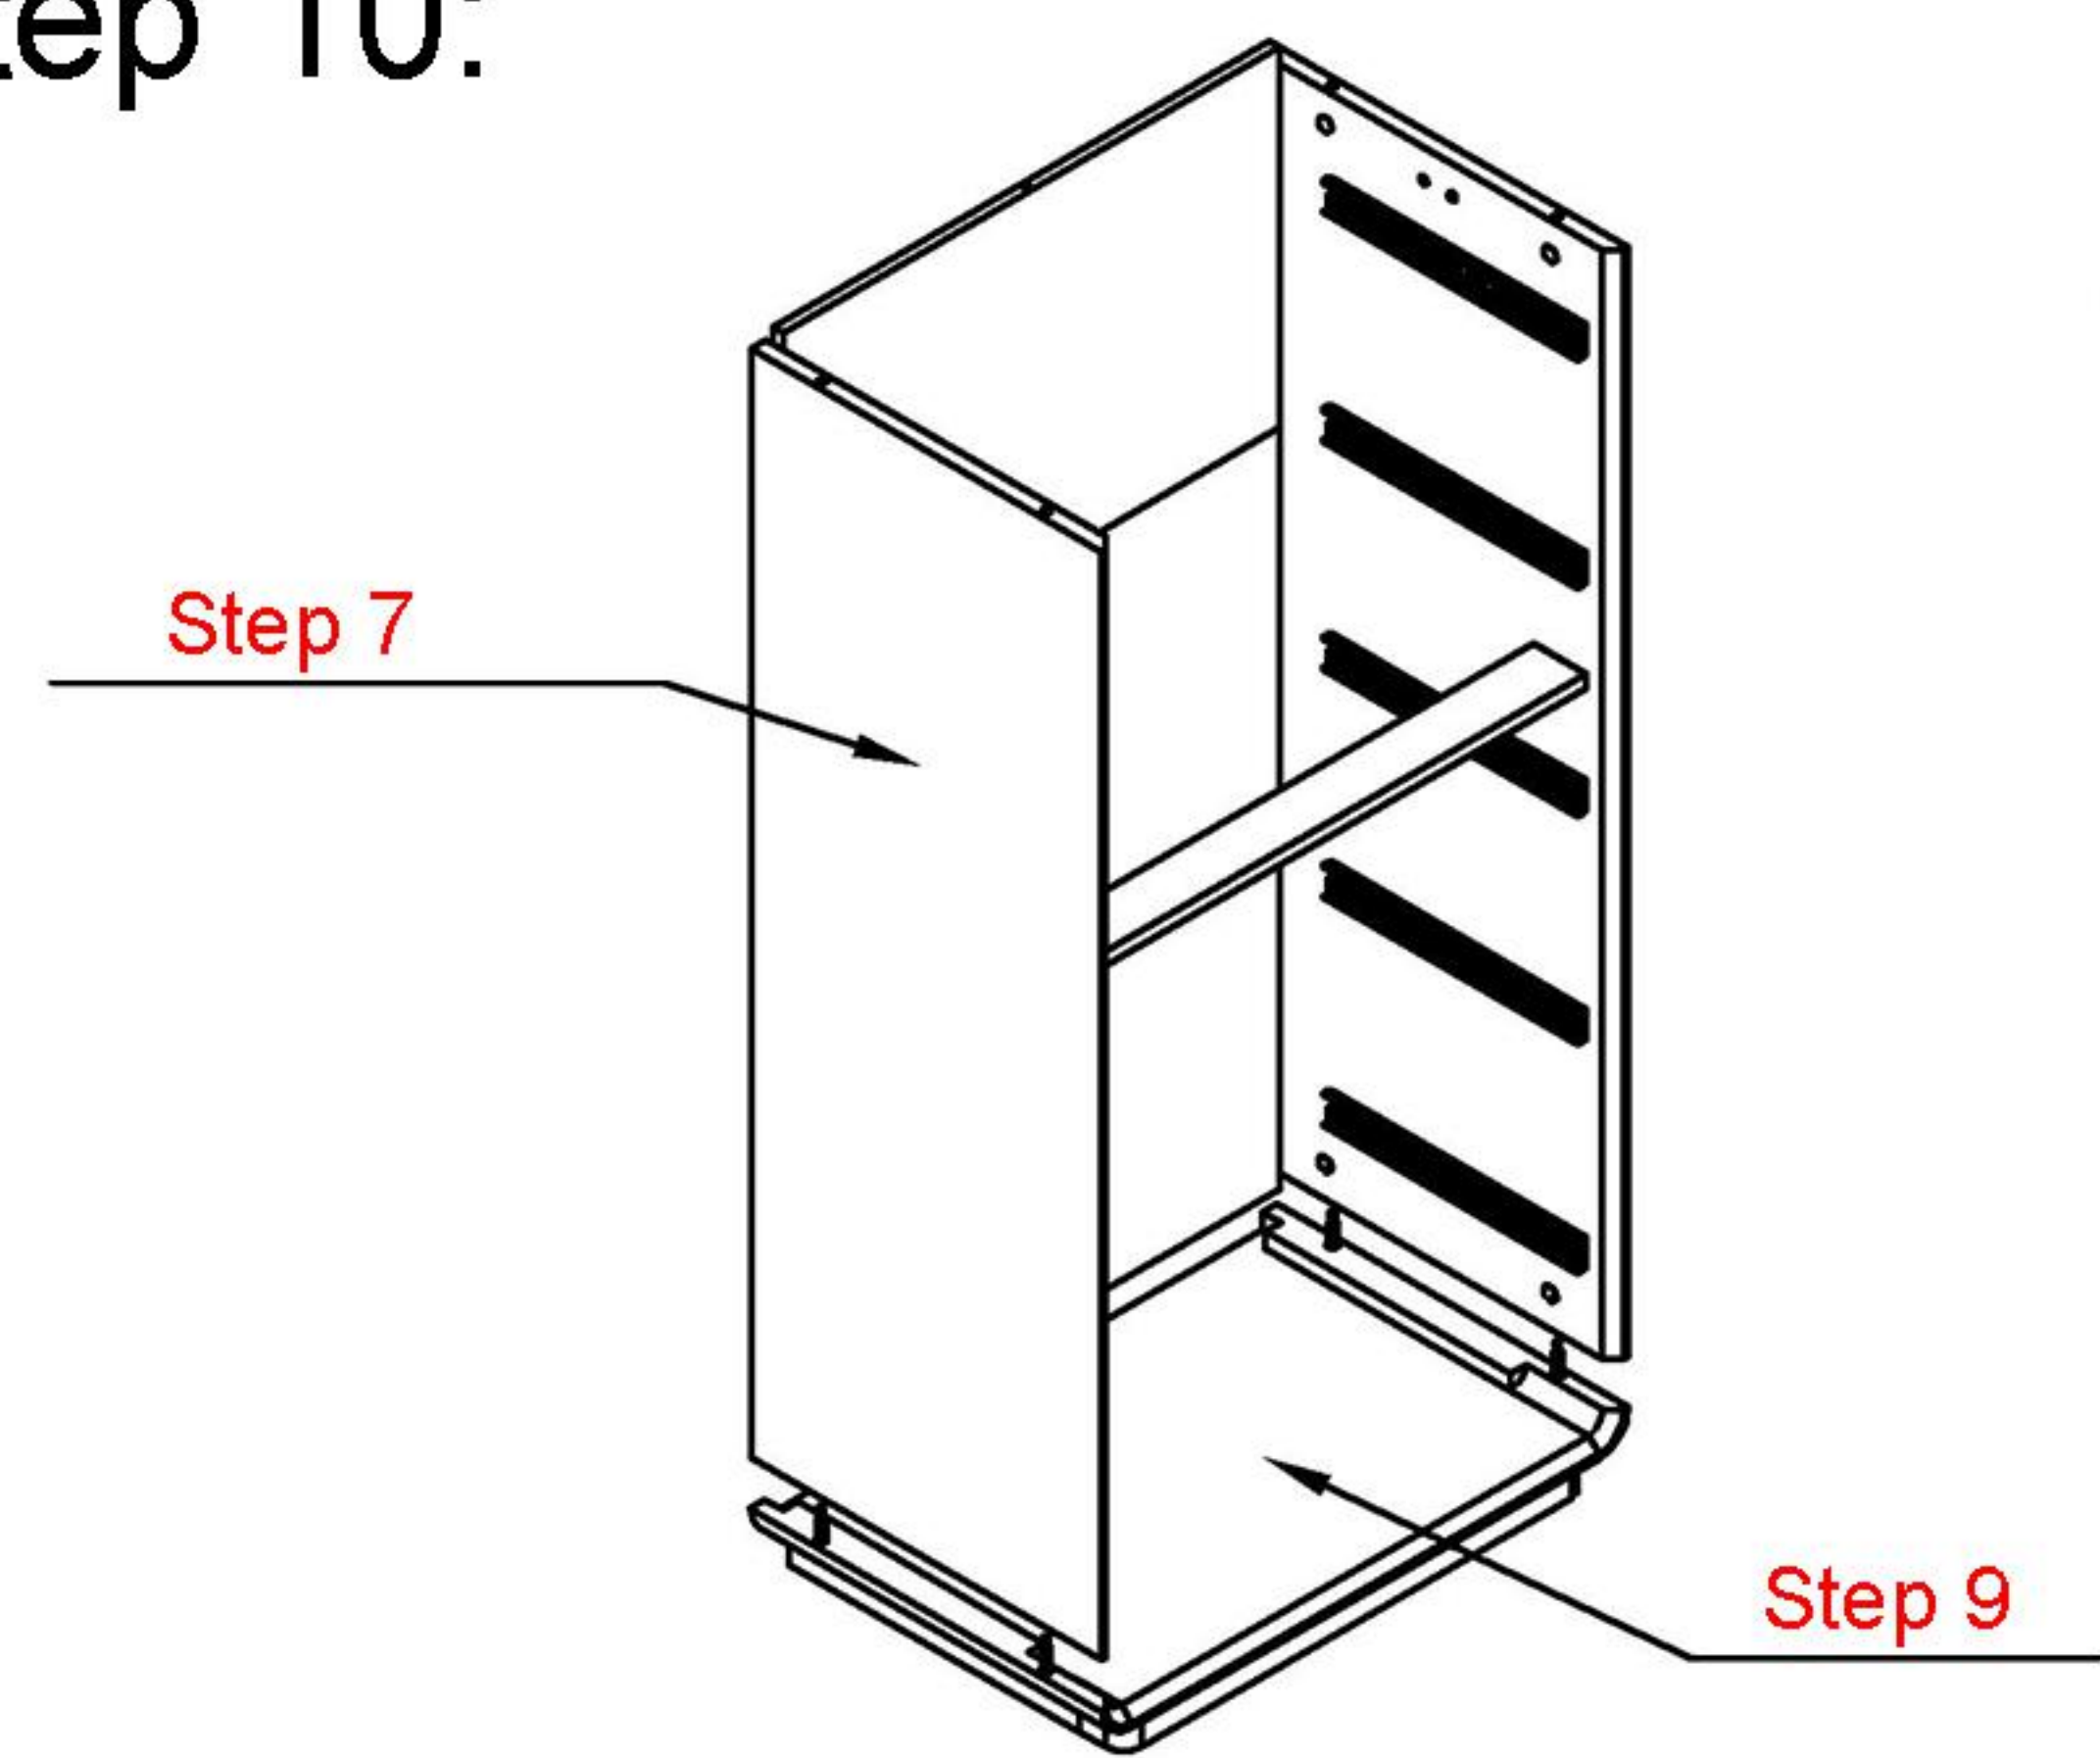

## Step 11:

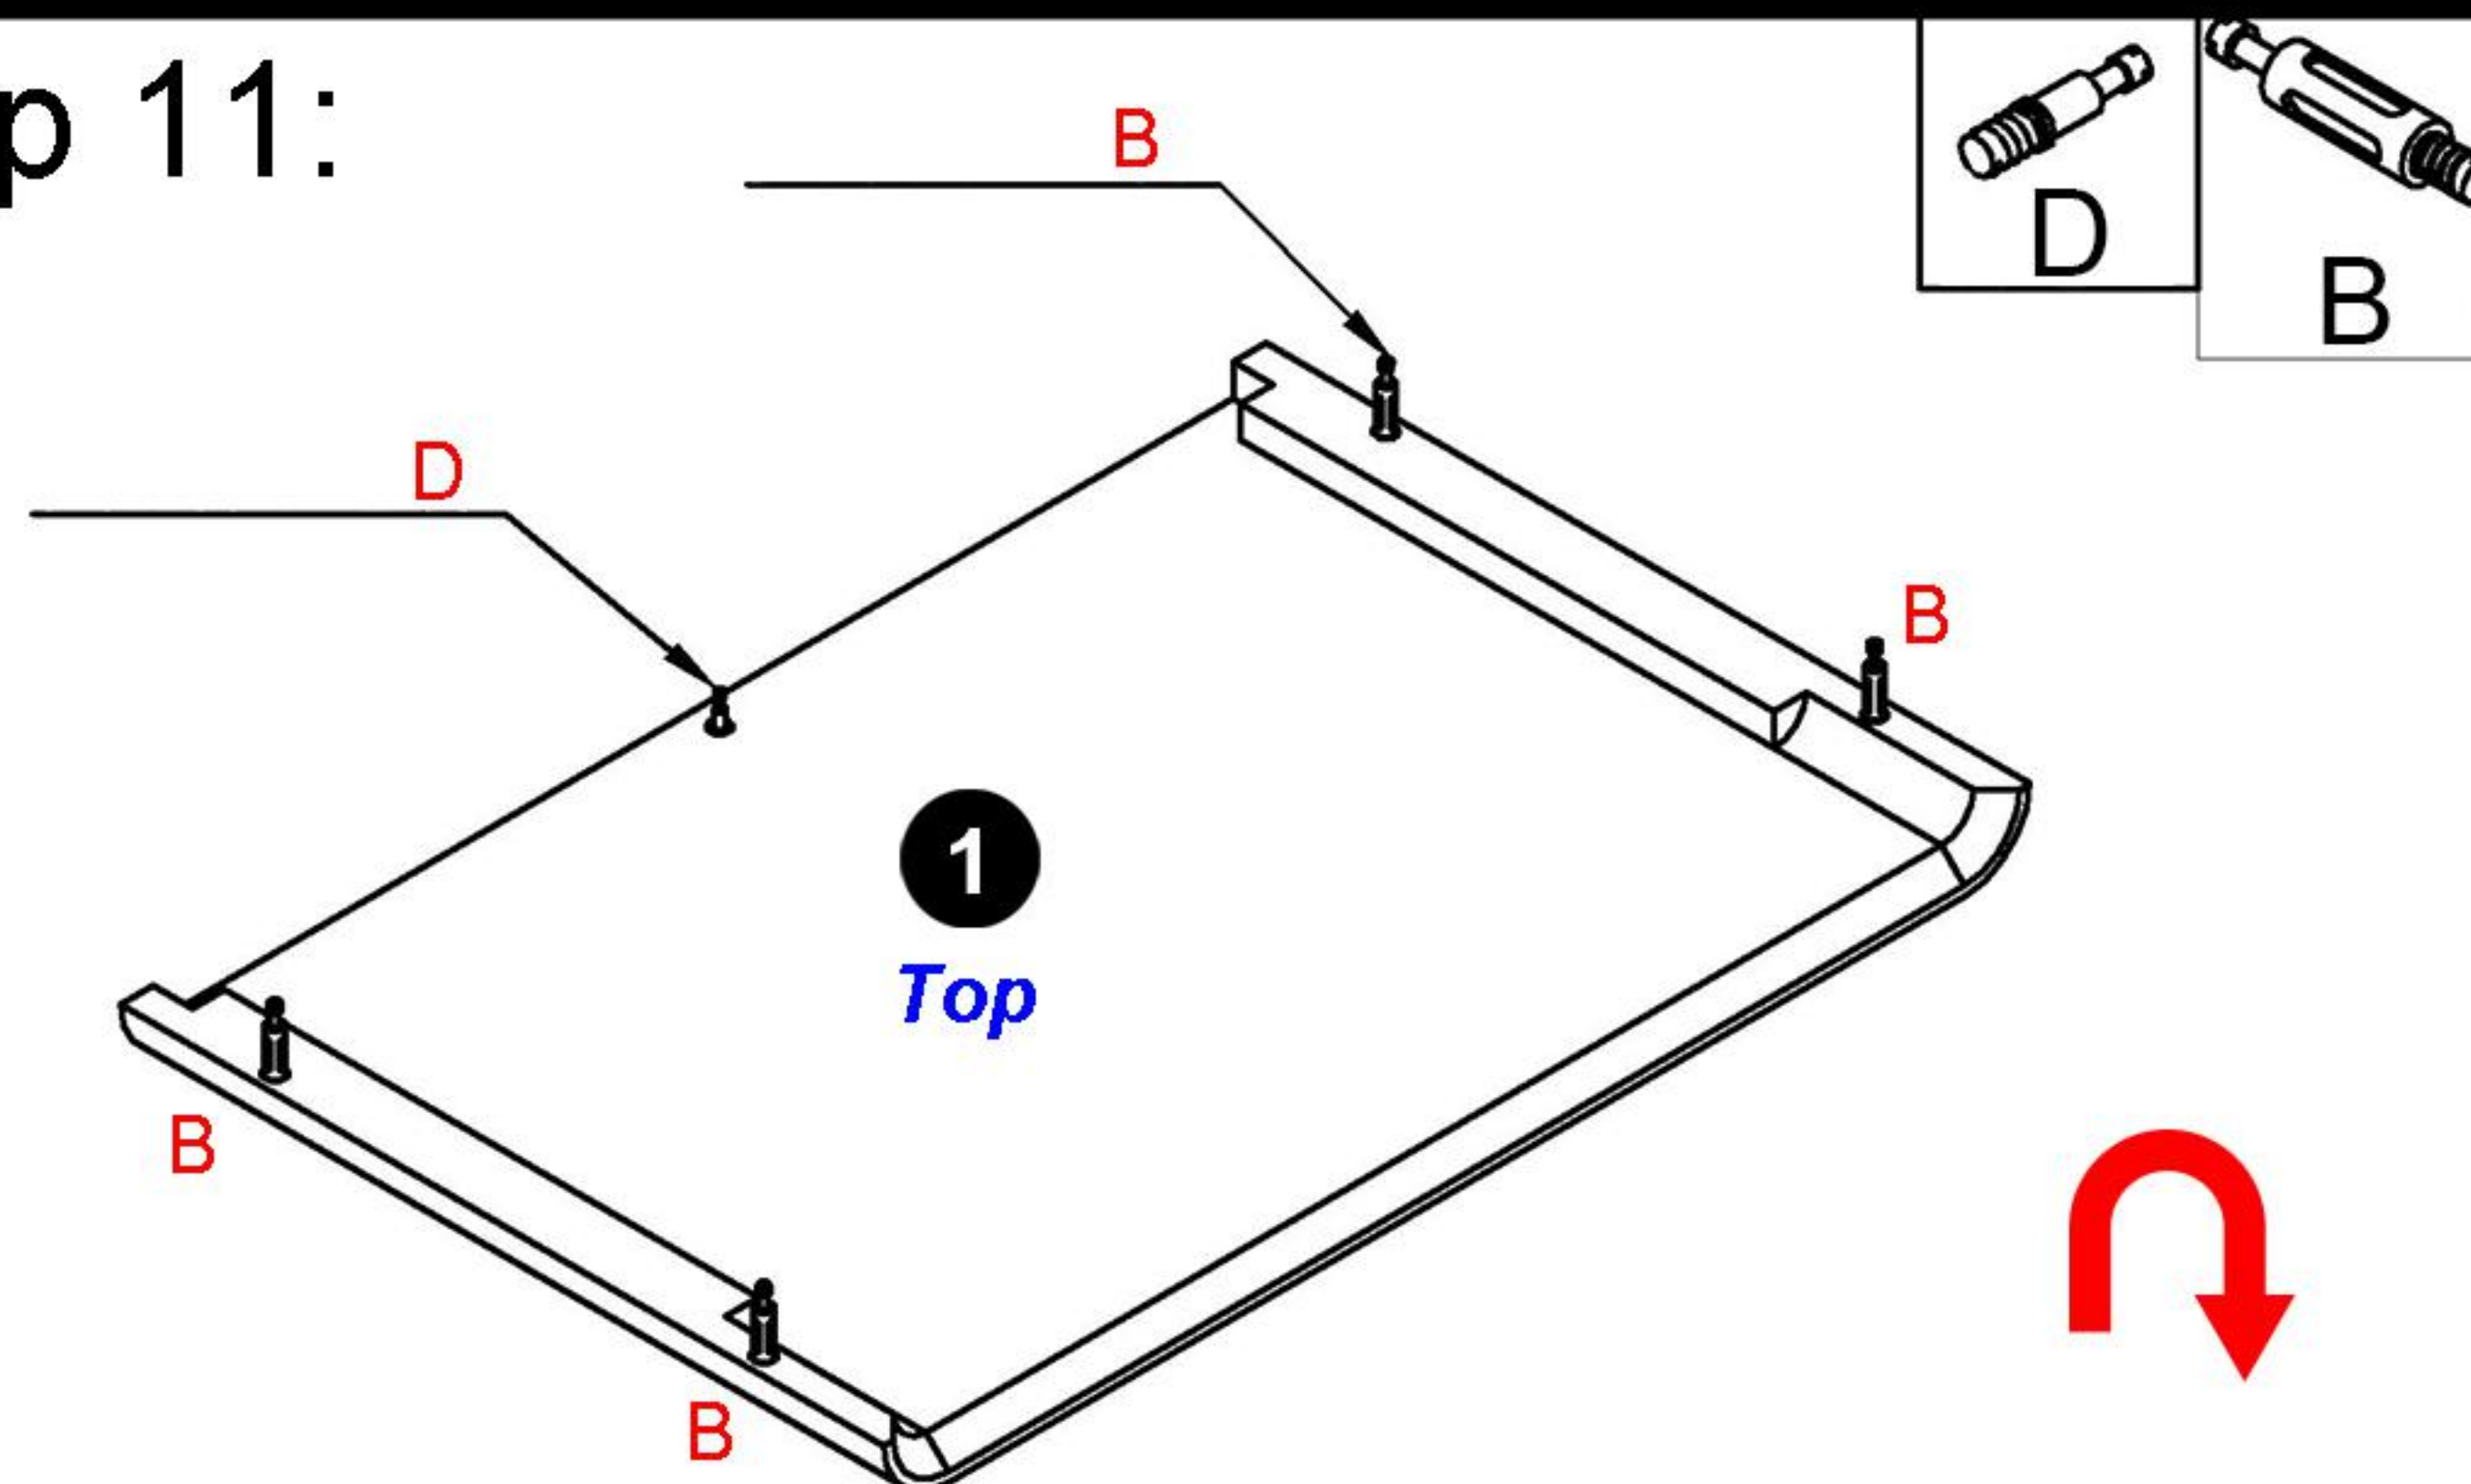


## Step 12:

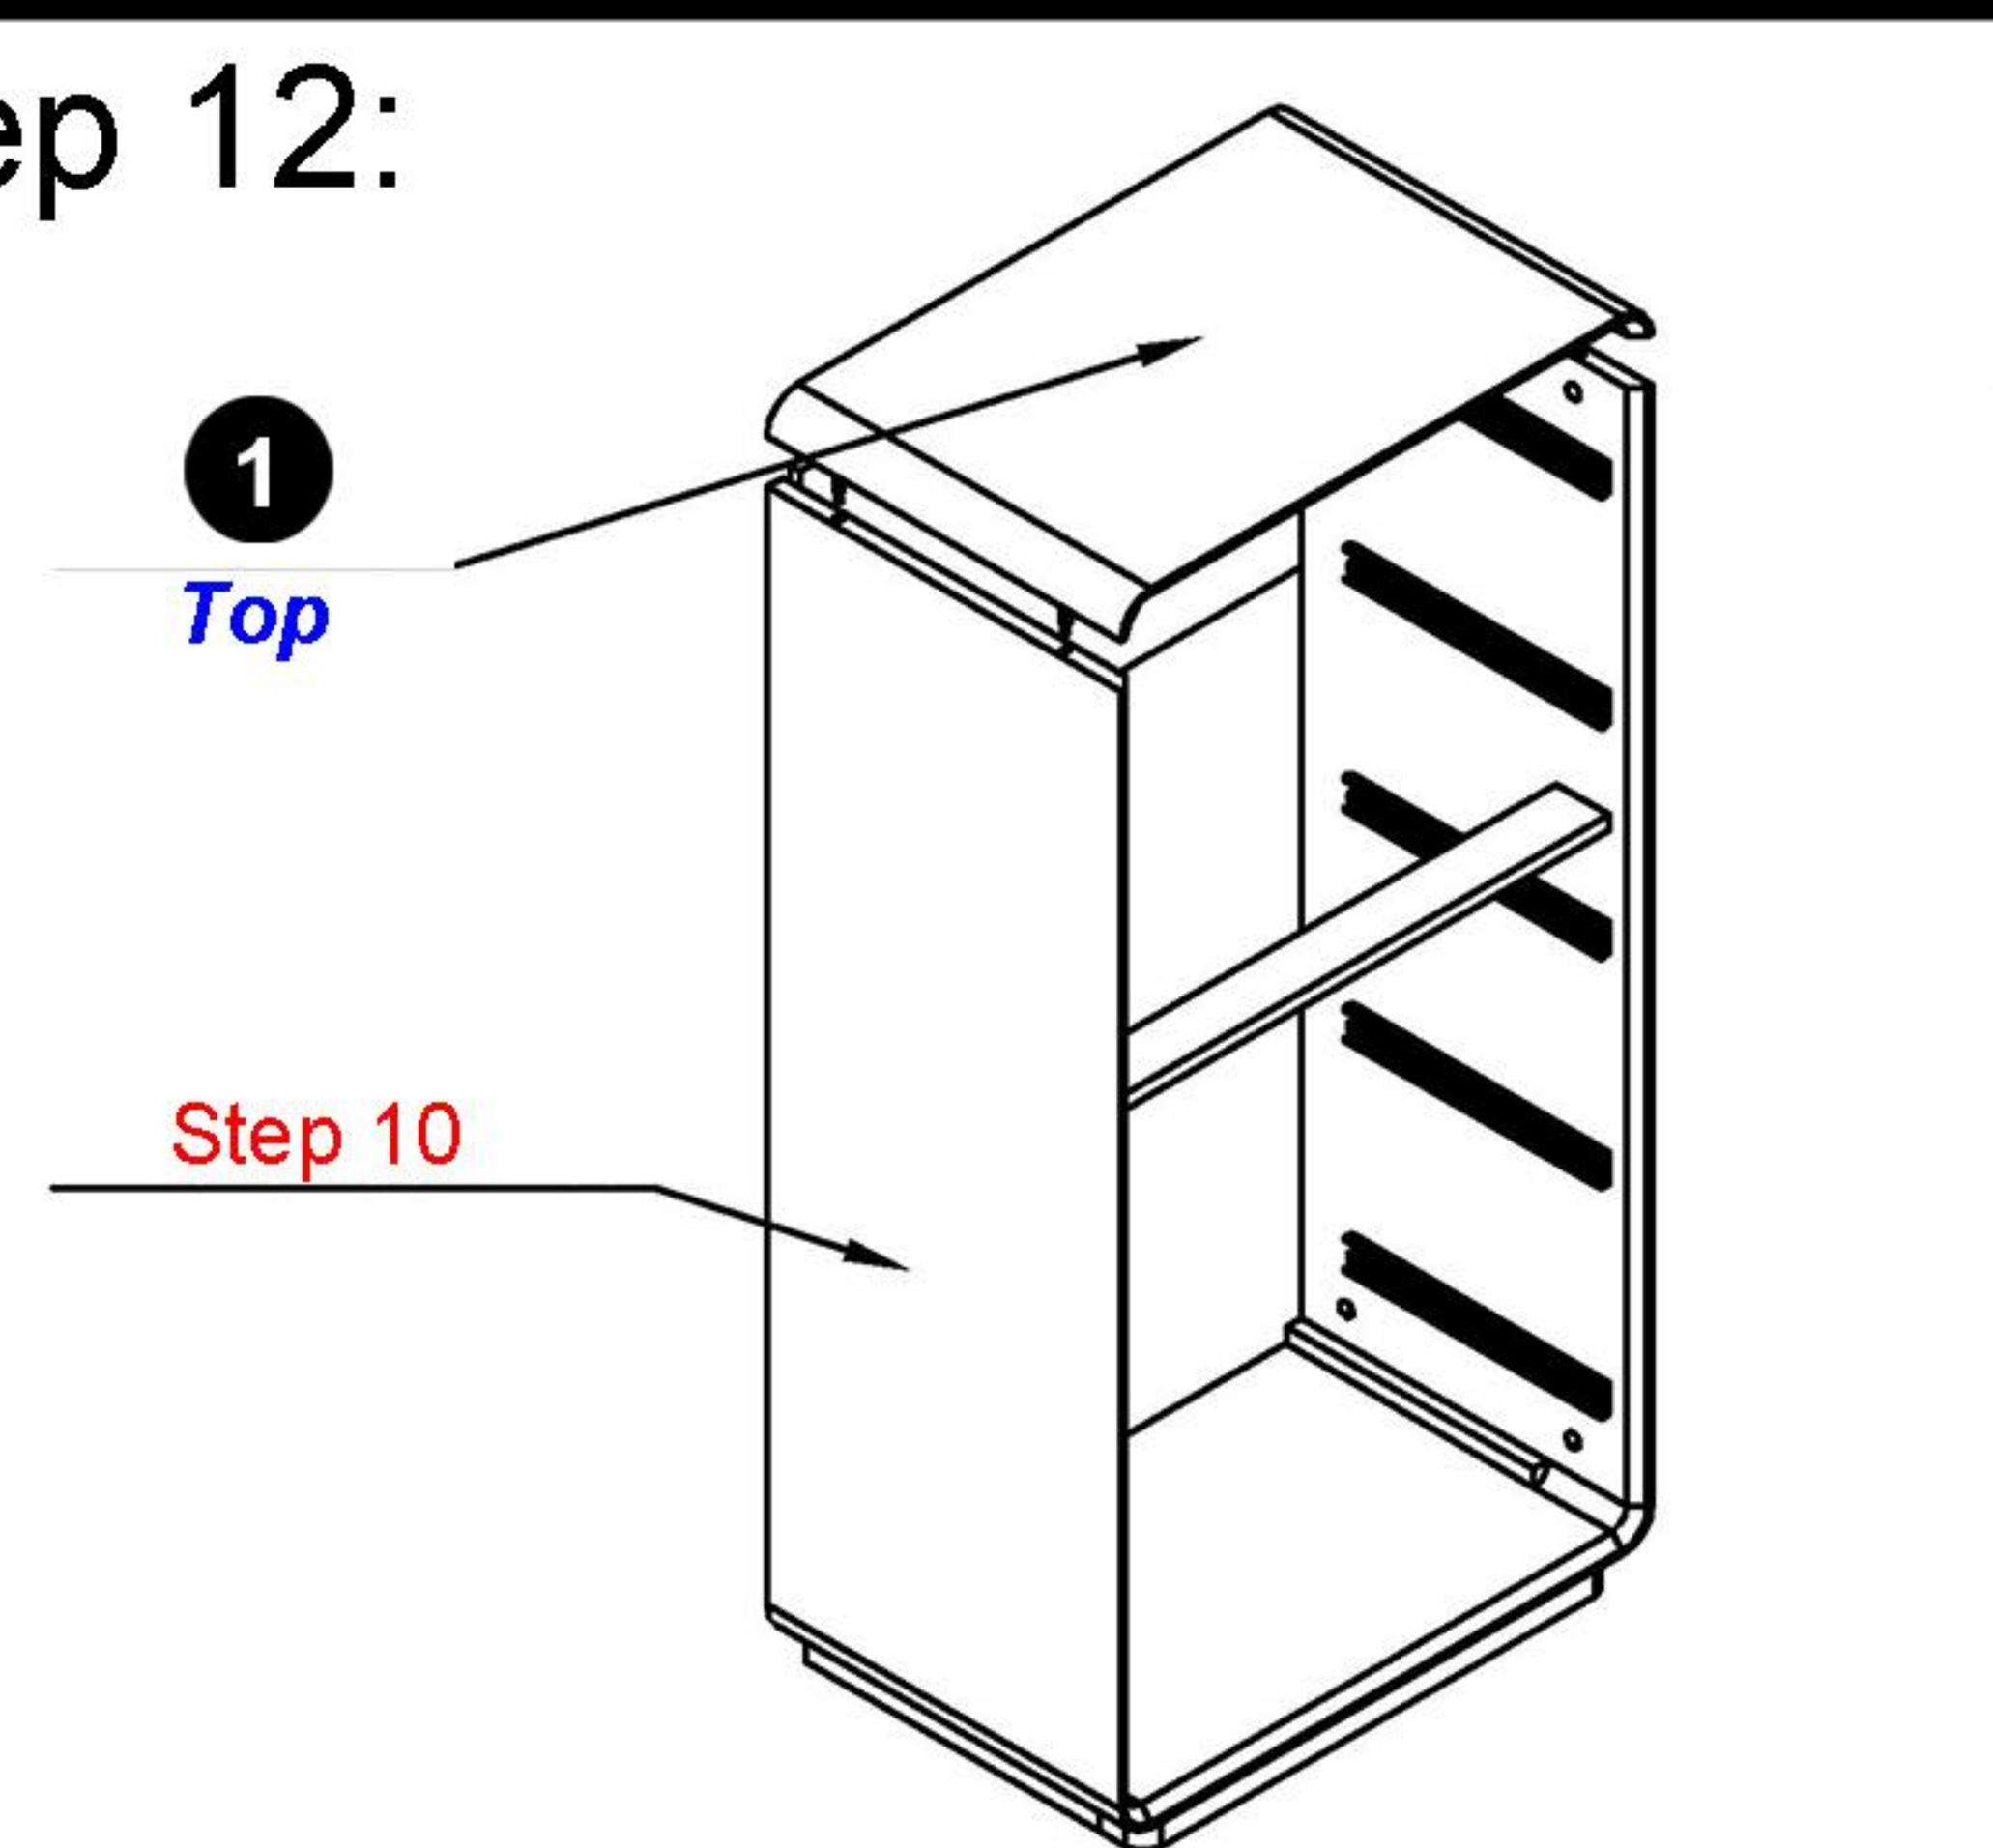


Lock with A or C.

## Step 13:

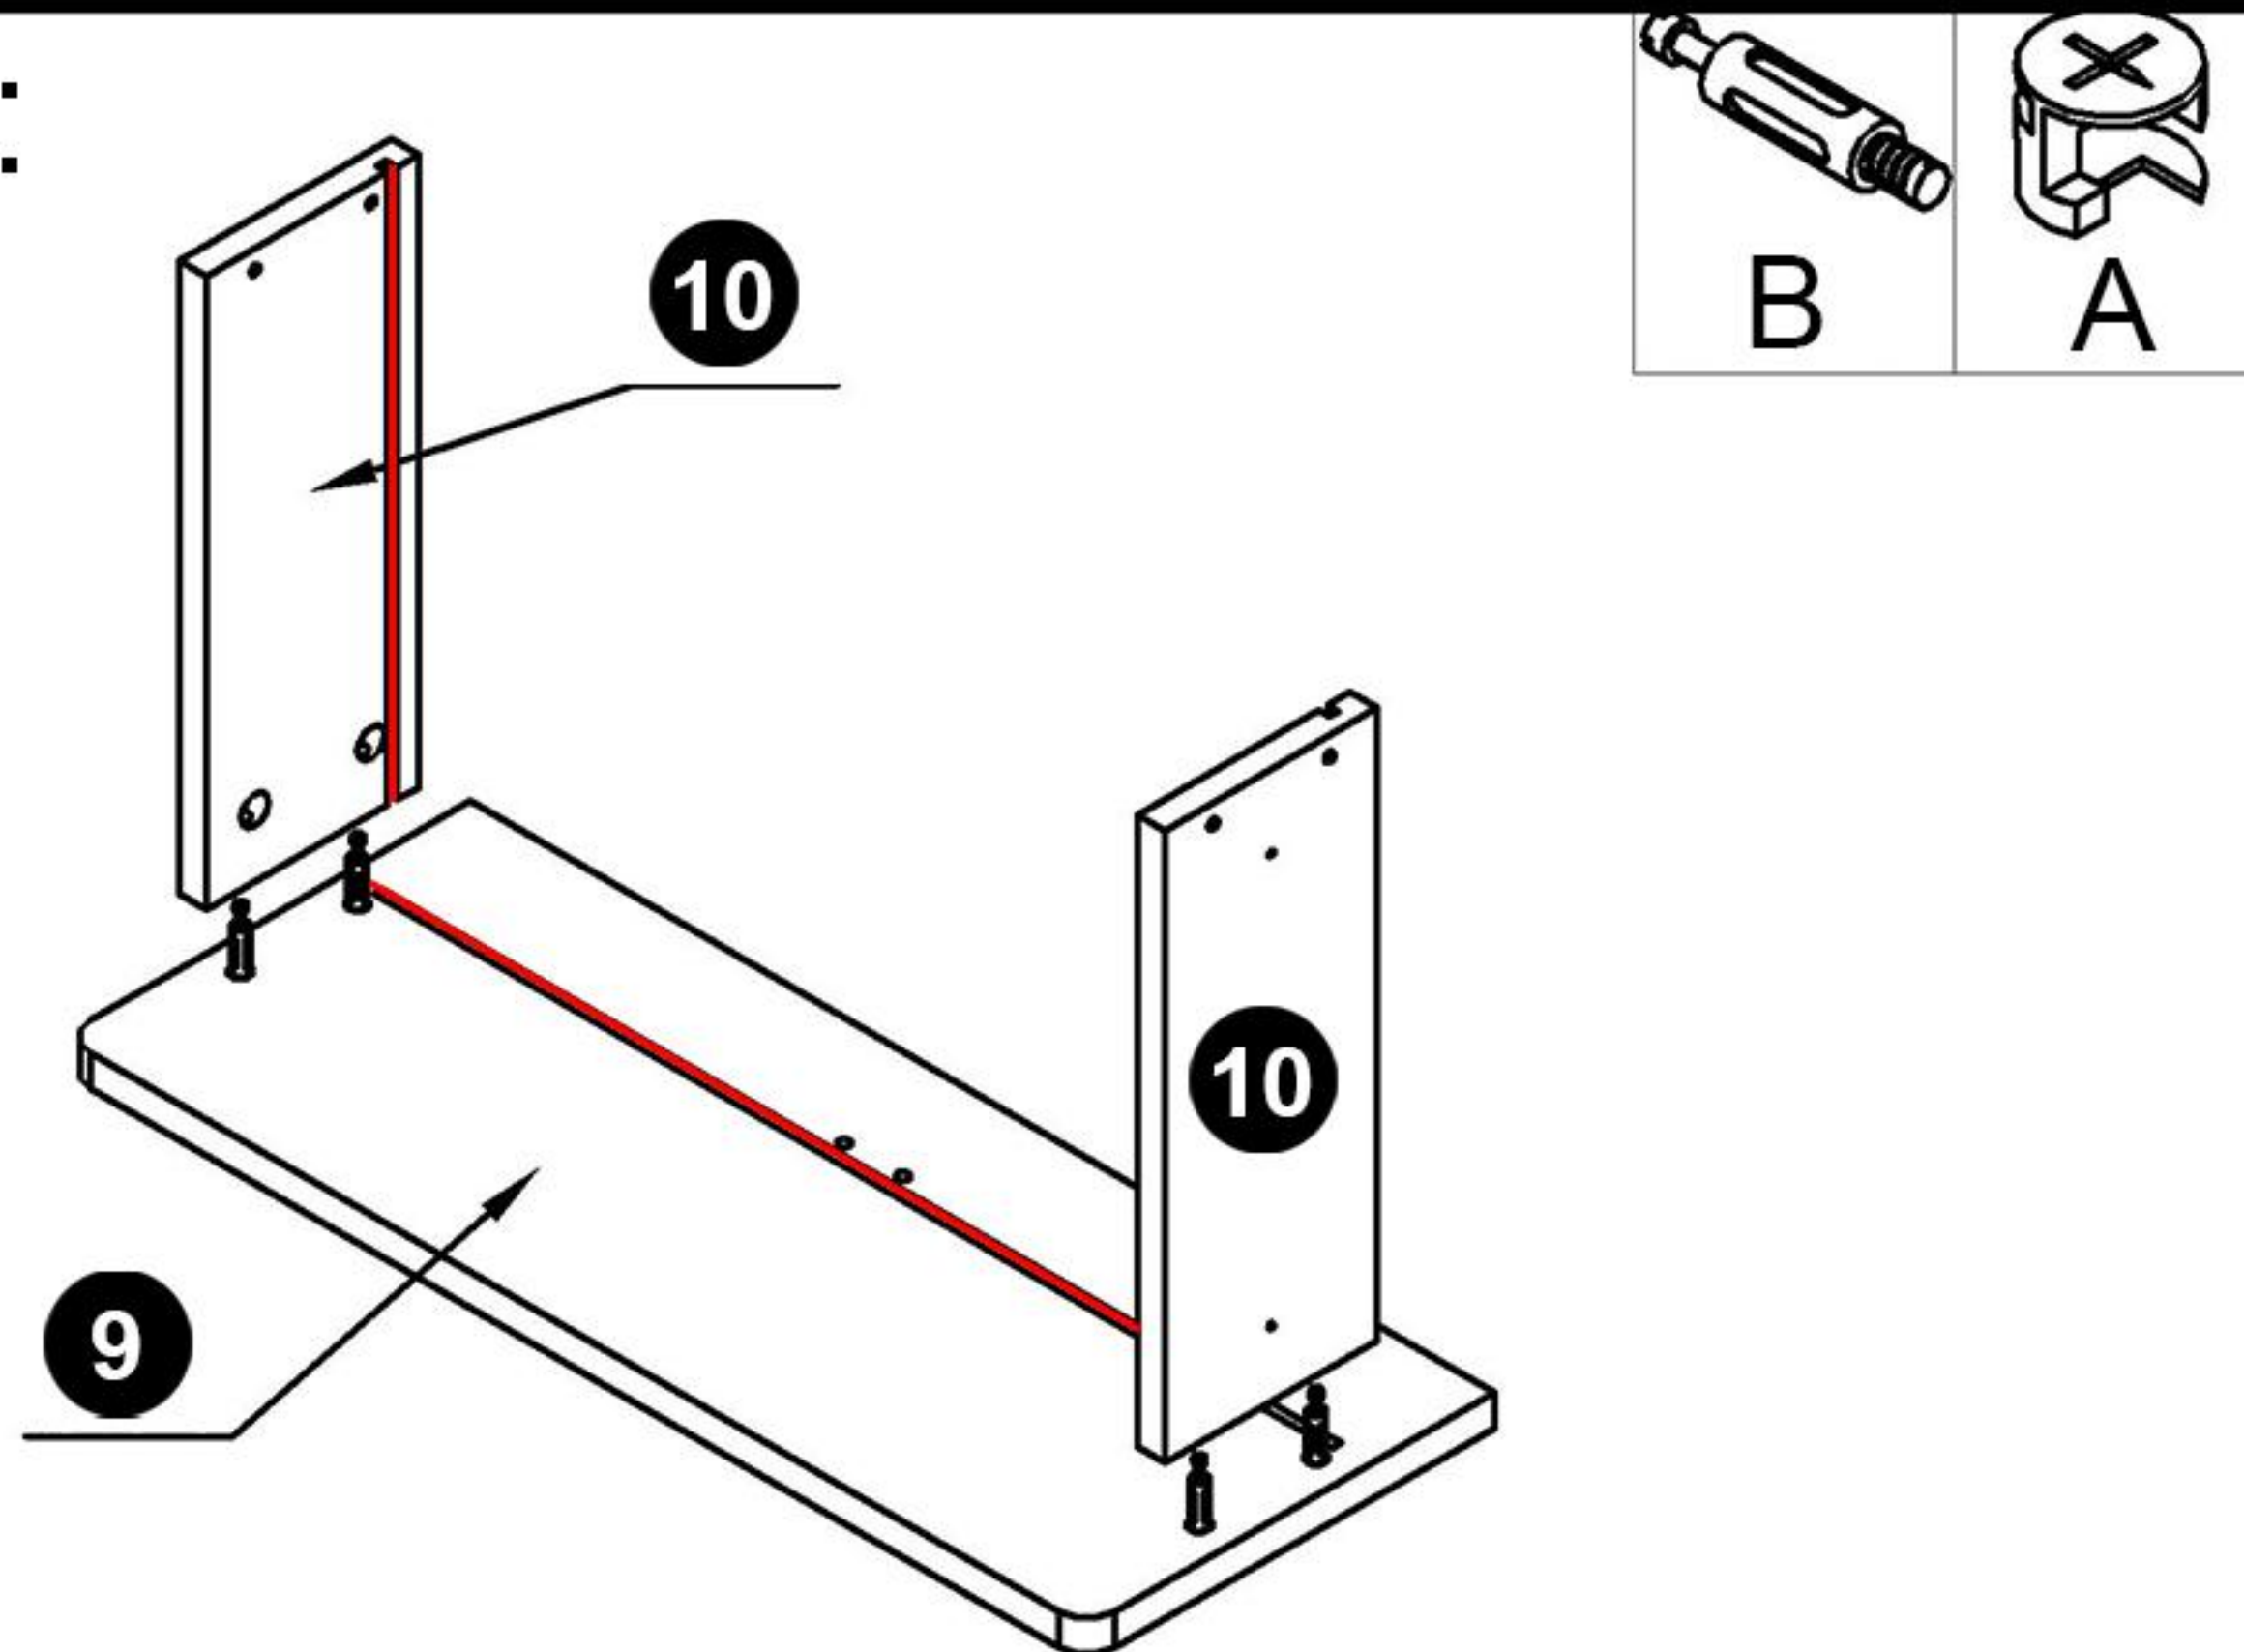


When installing, make sure to align the grooves on panels 9 and 10.  
Lock with A+B.

## Step 14:

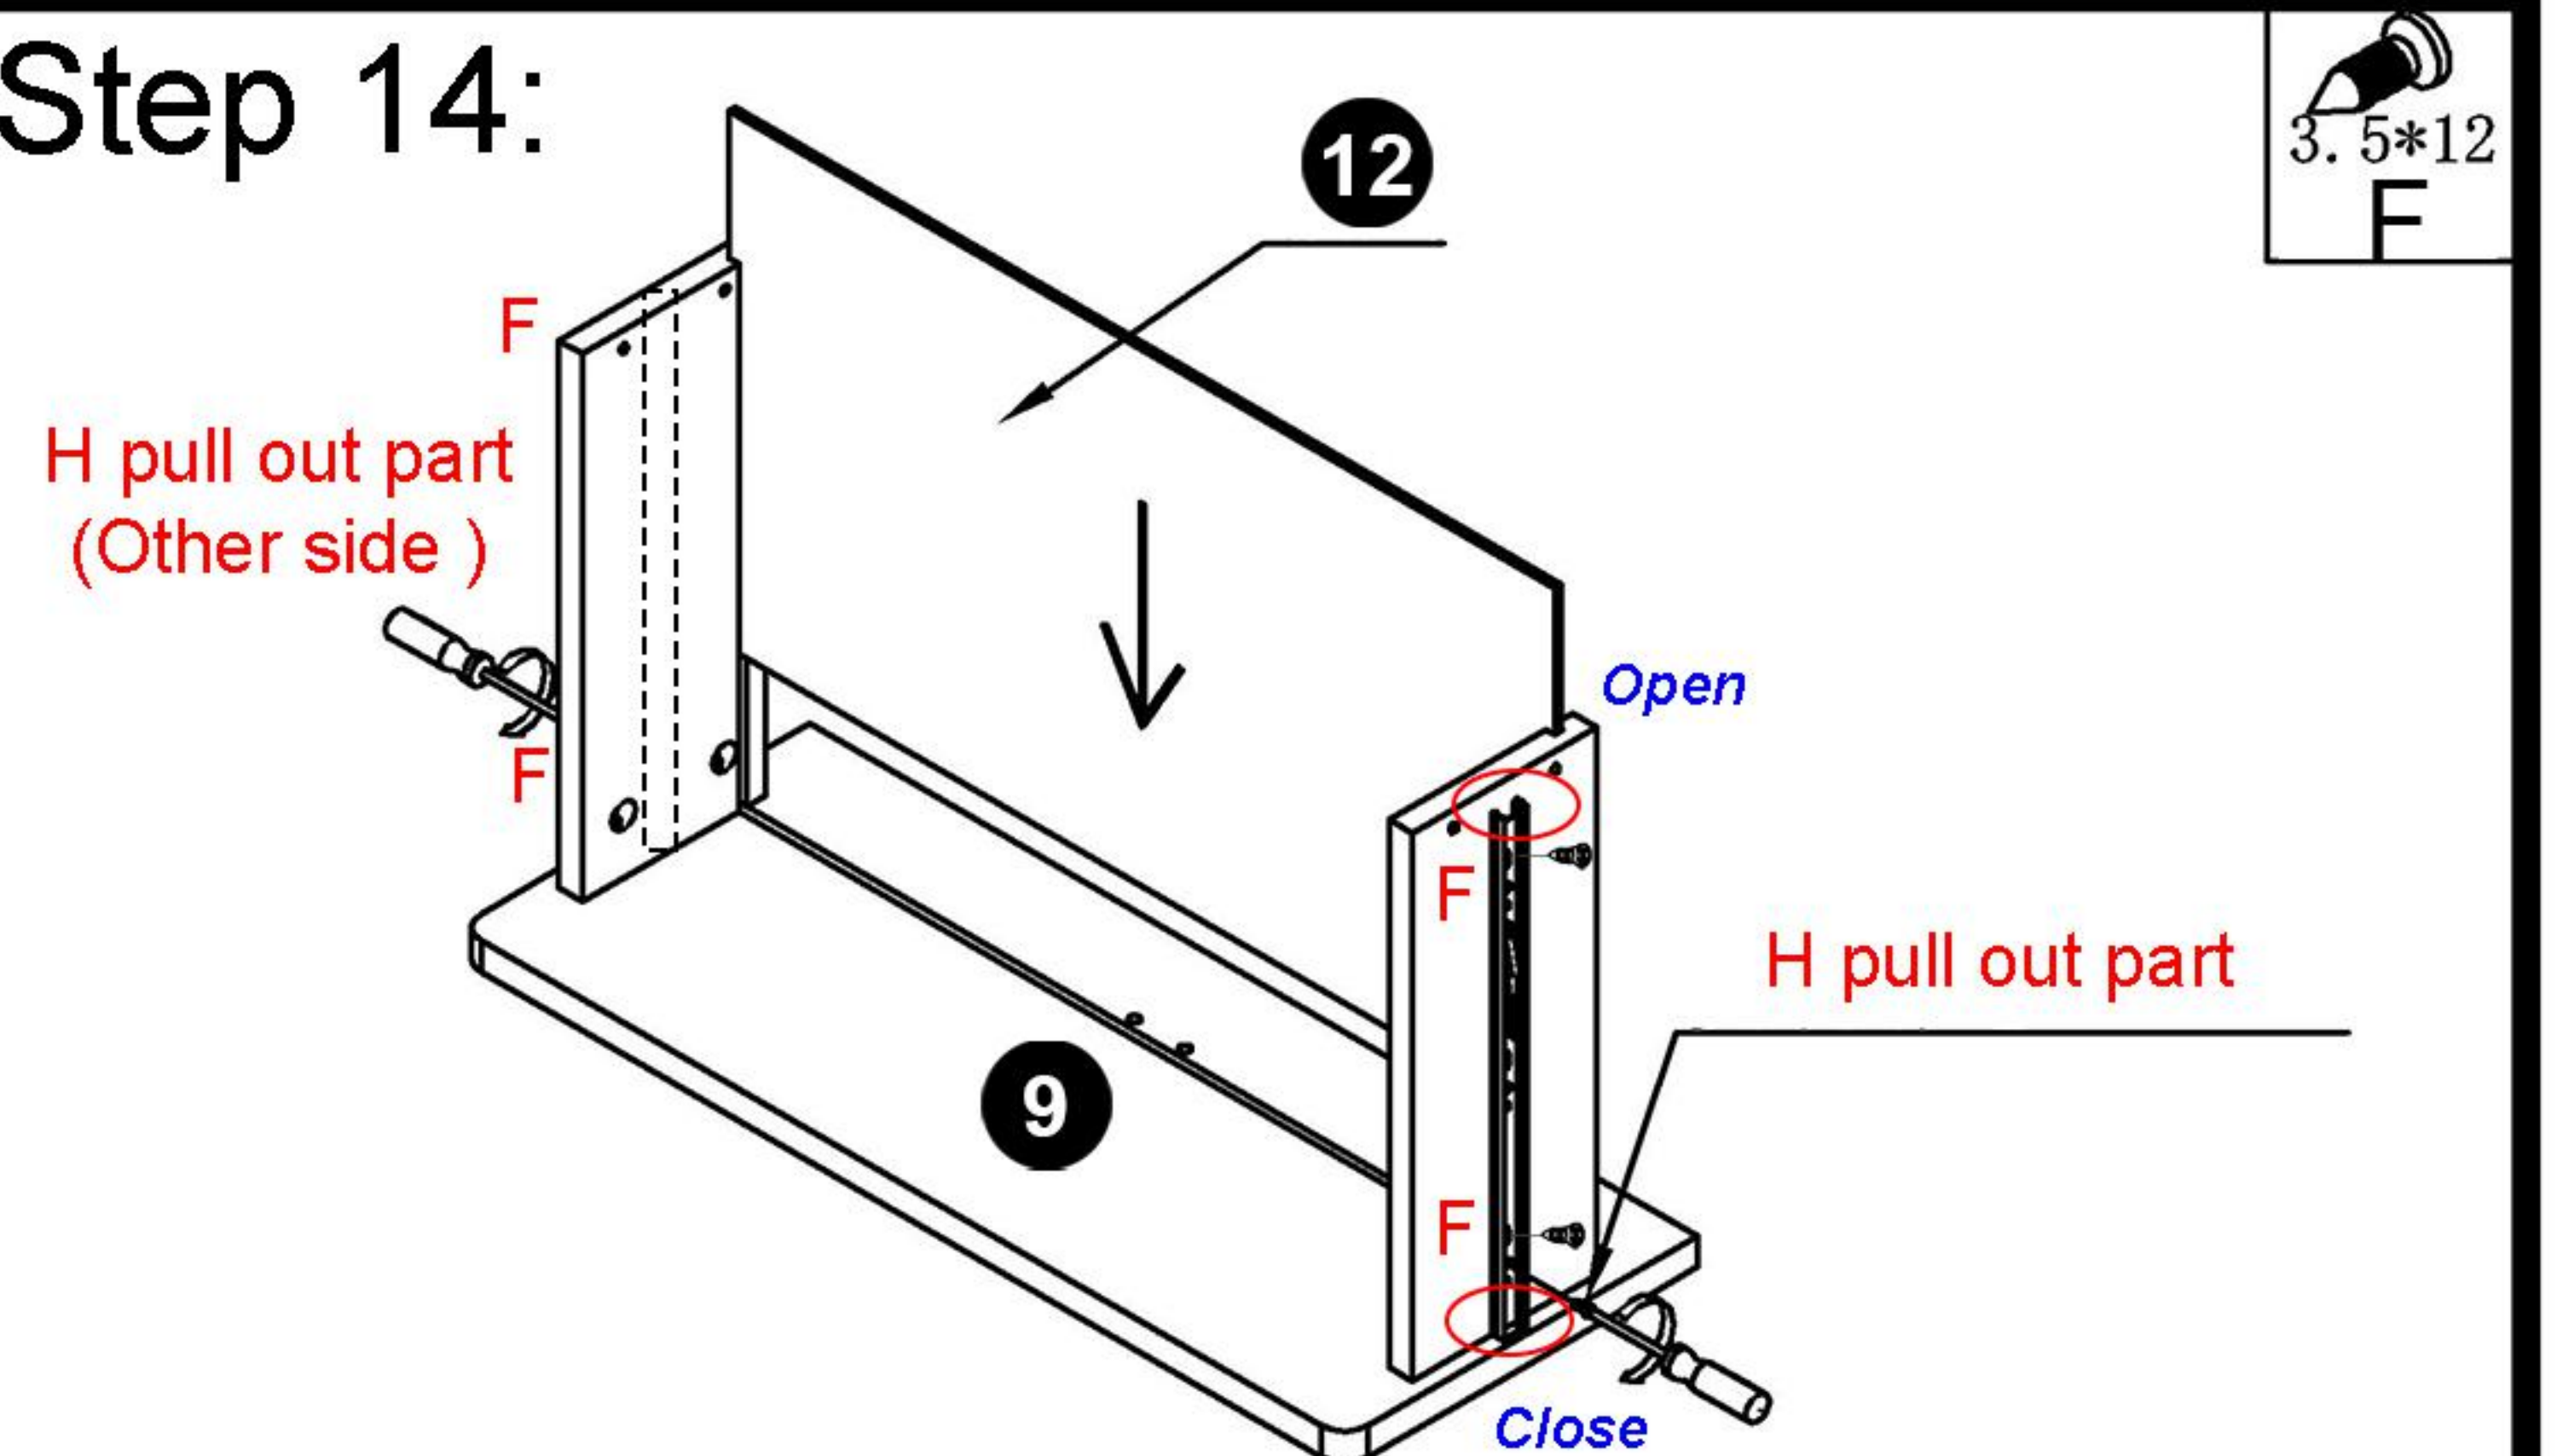


Make sure panel 12 is inserted into the groove. Use F to install H pull-out part onto panel 10s, ensuring the close side is flush against panel 9.



## Step 15:

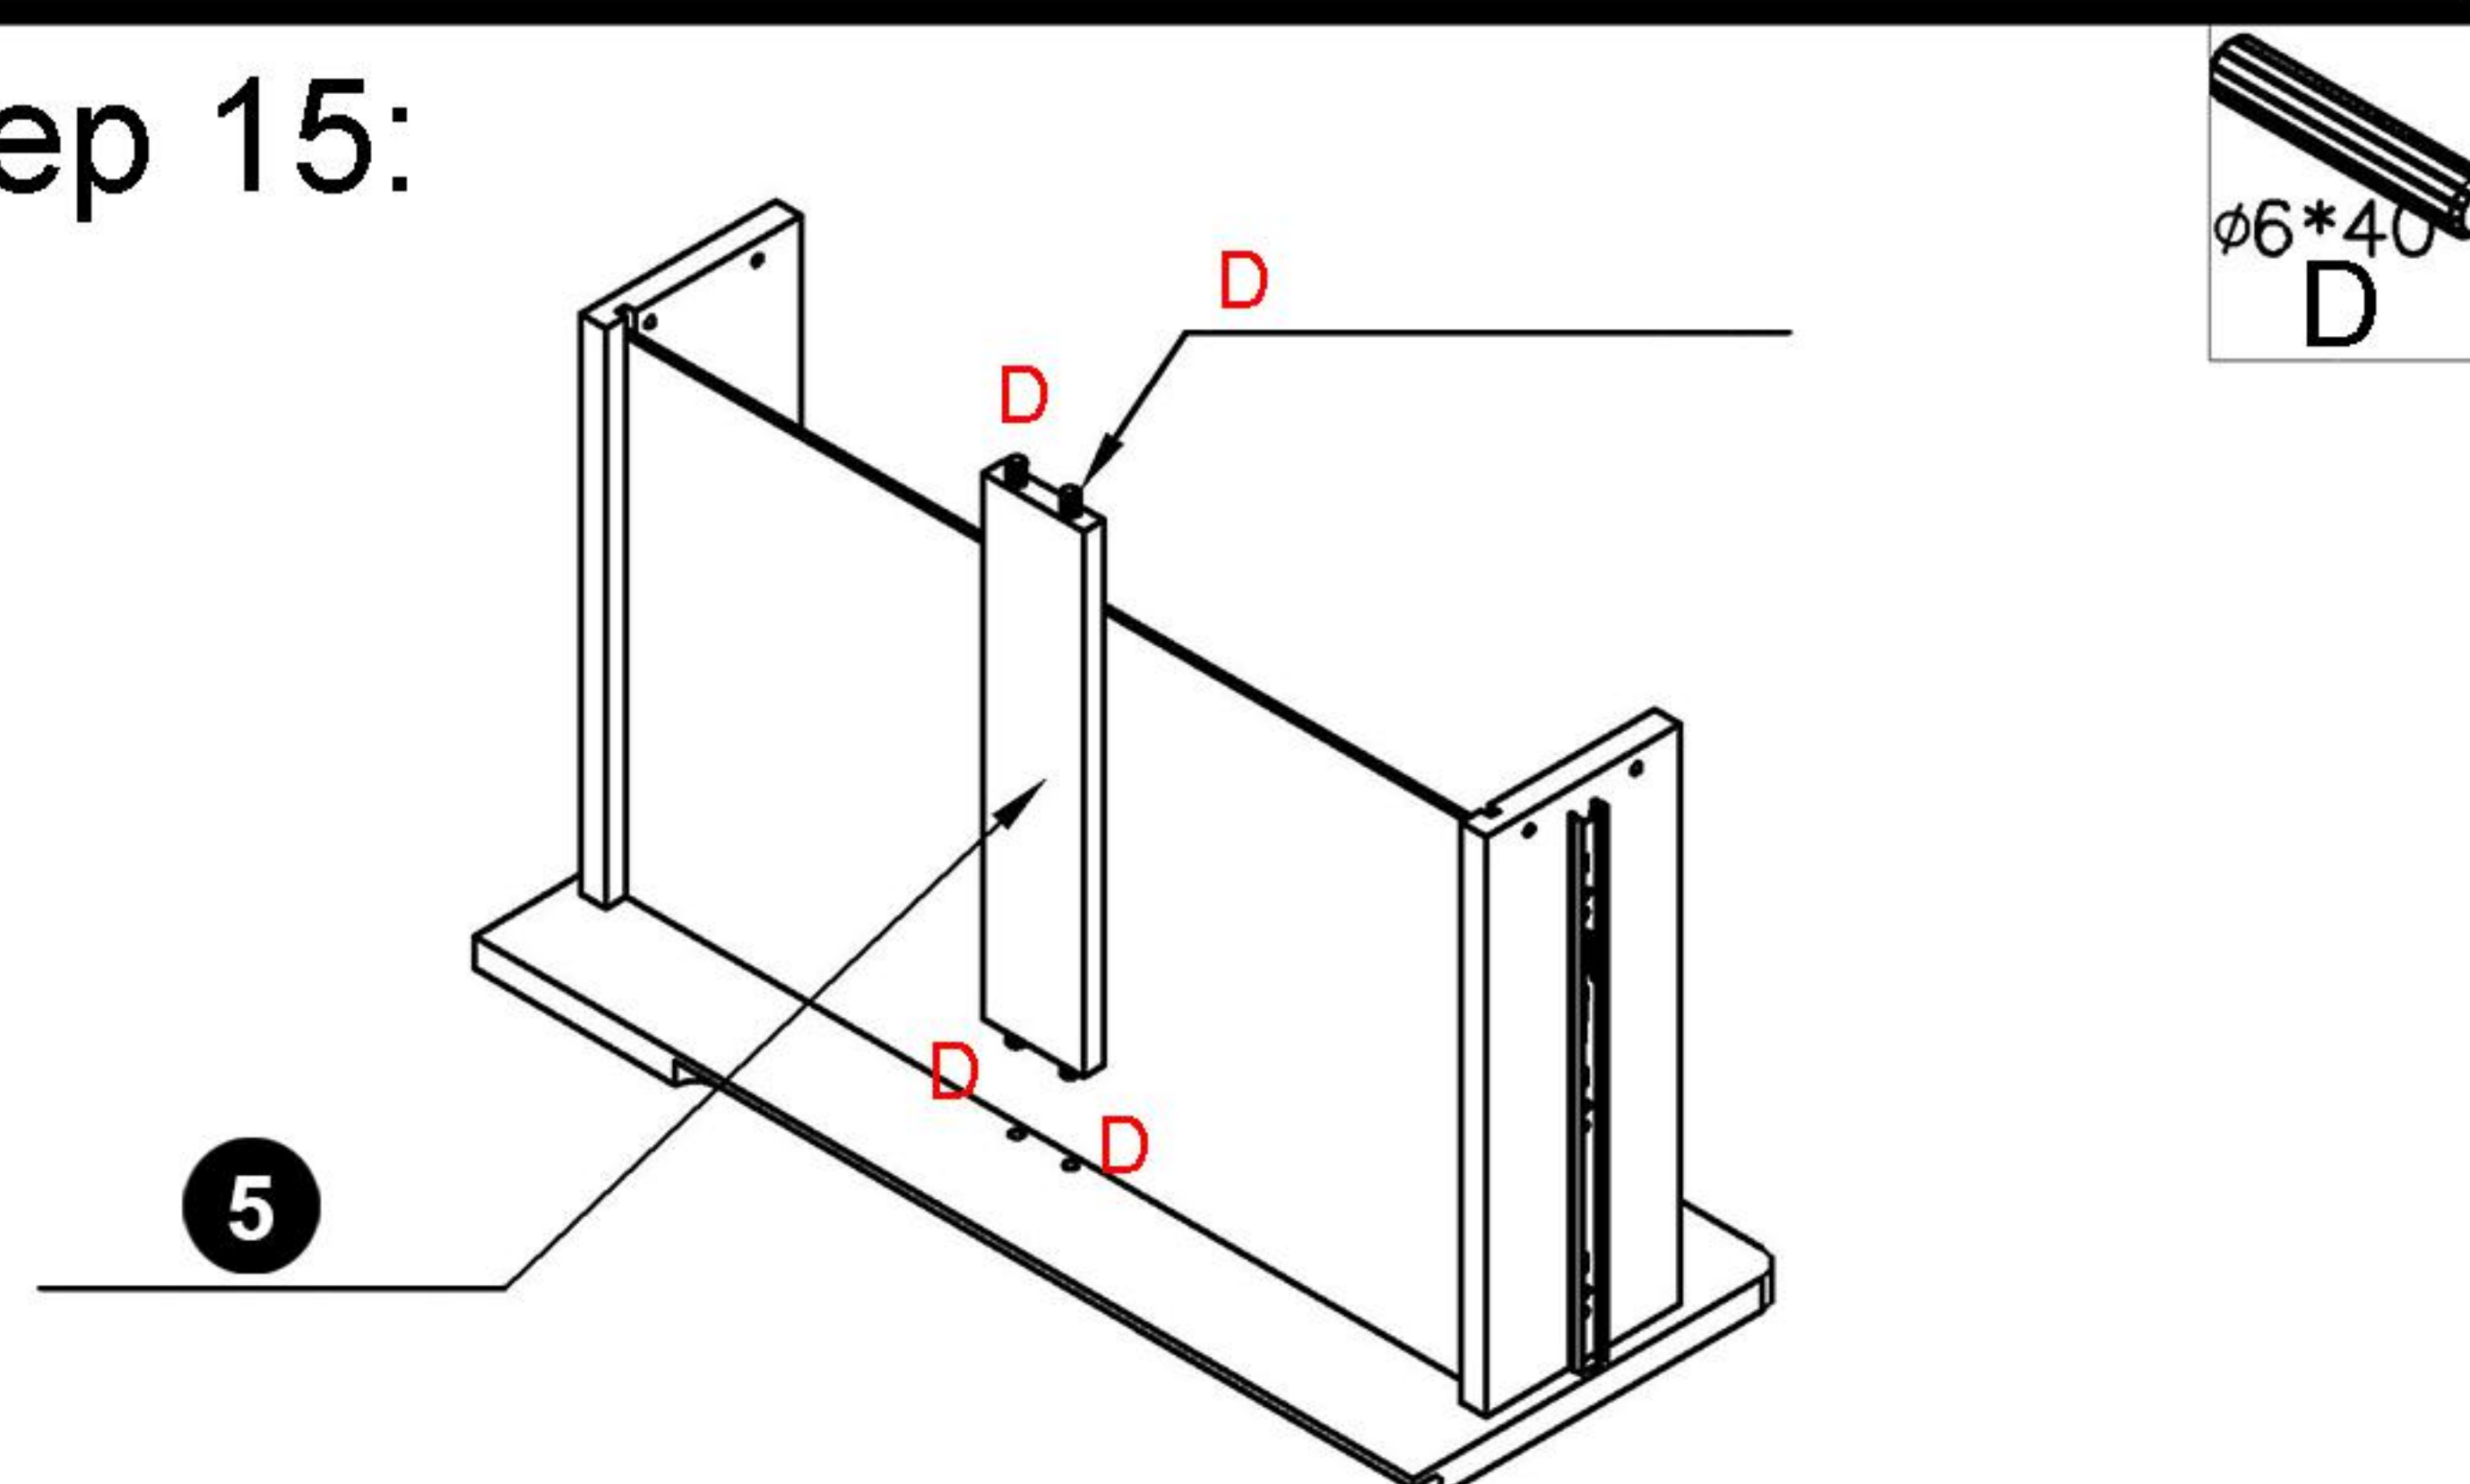

## Step 16:

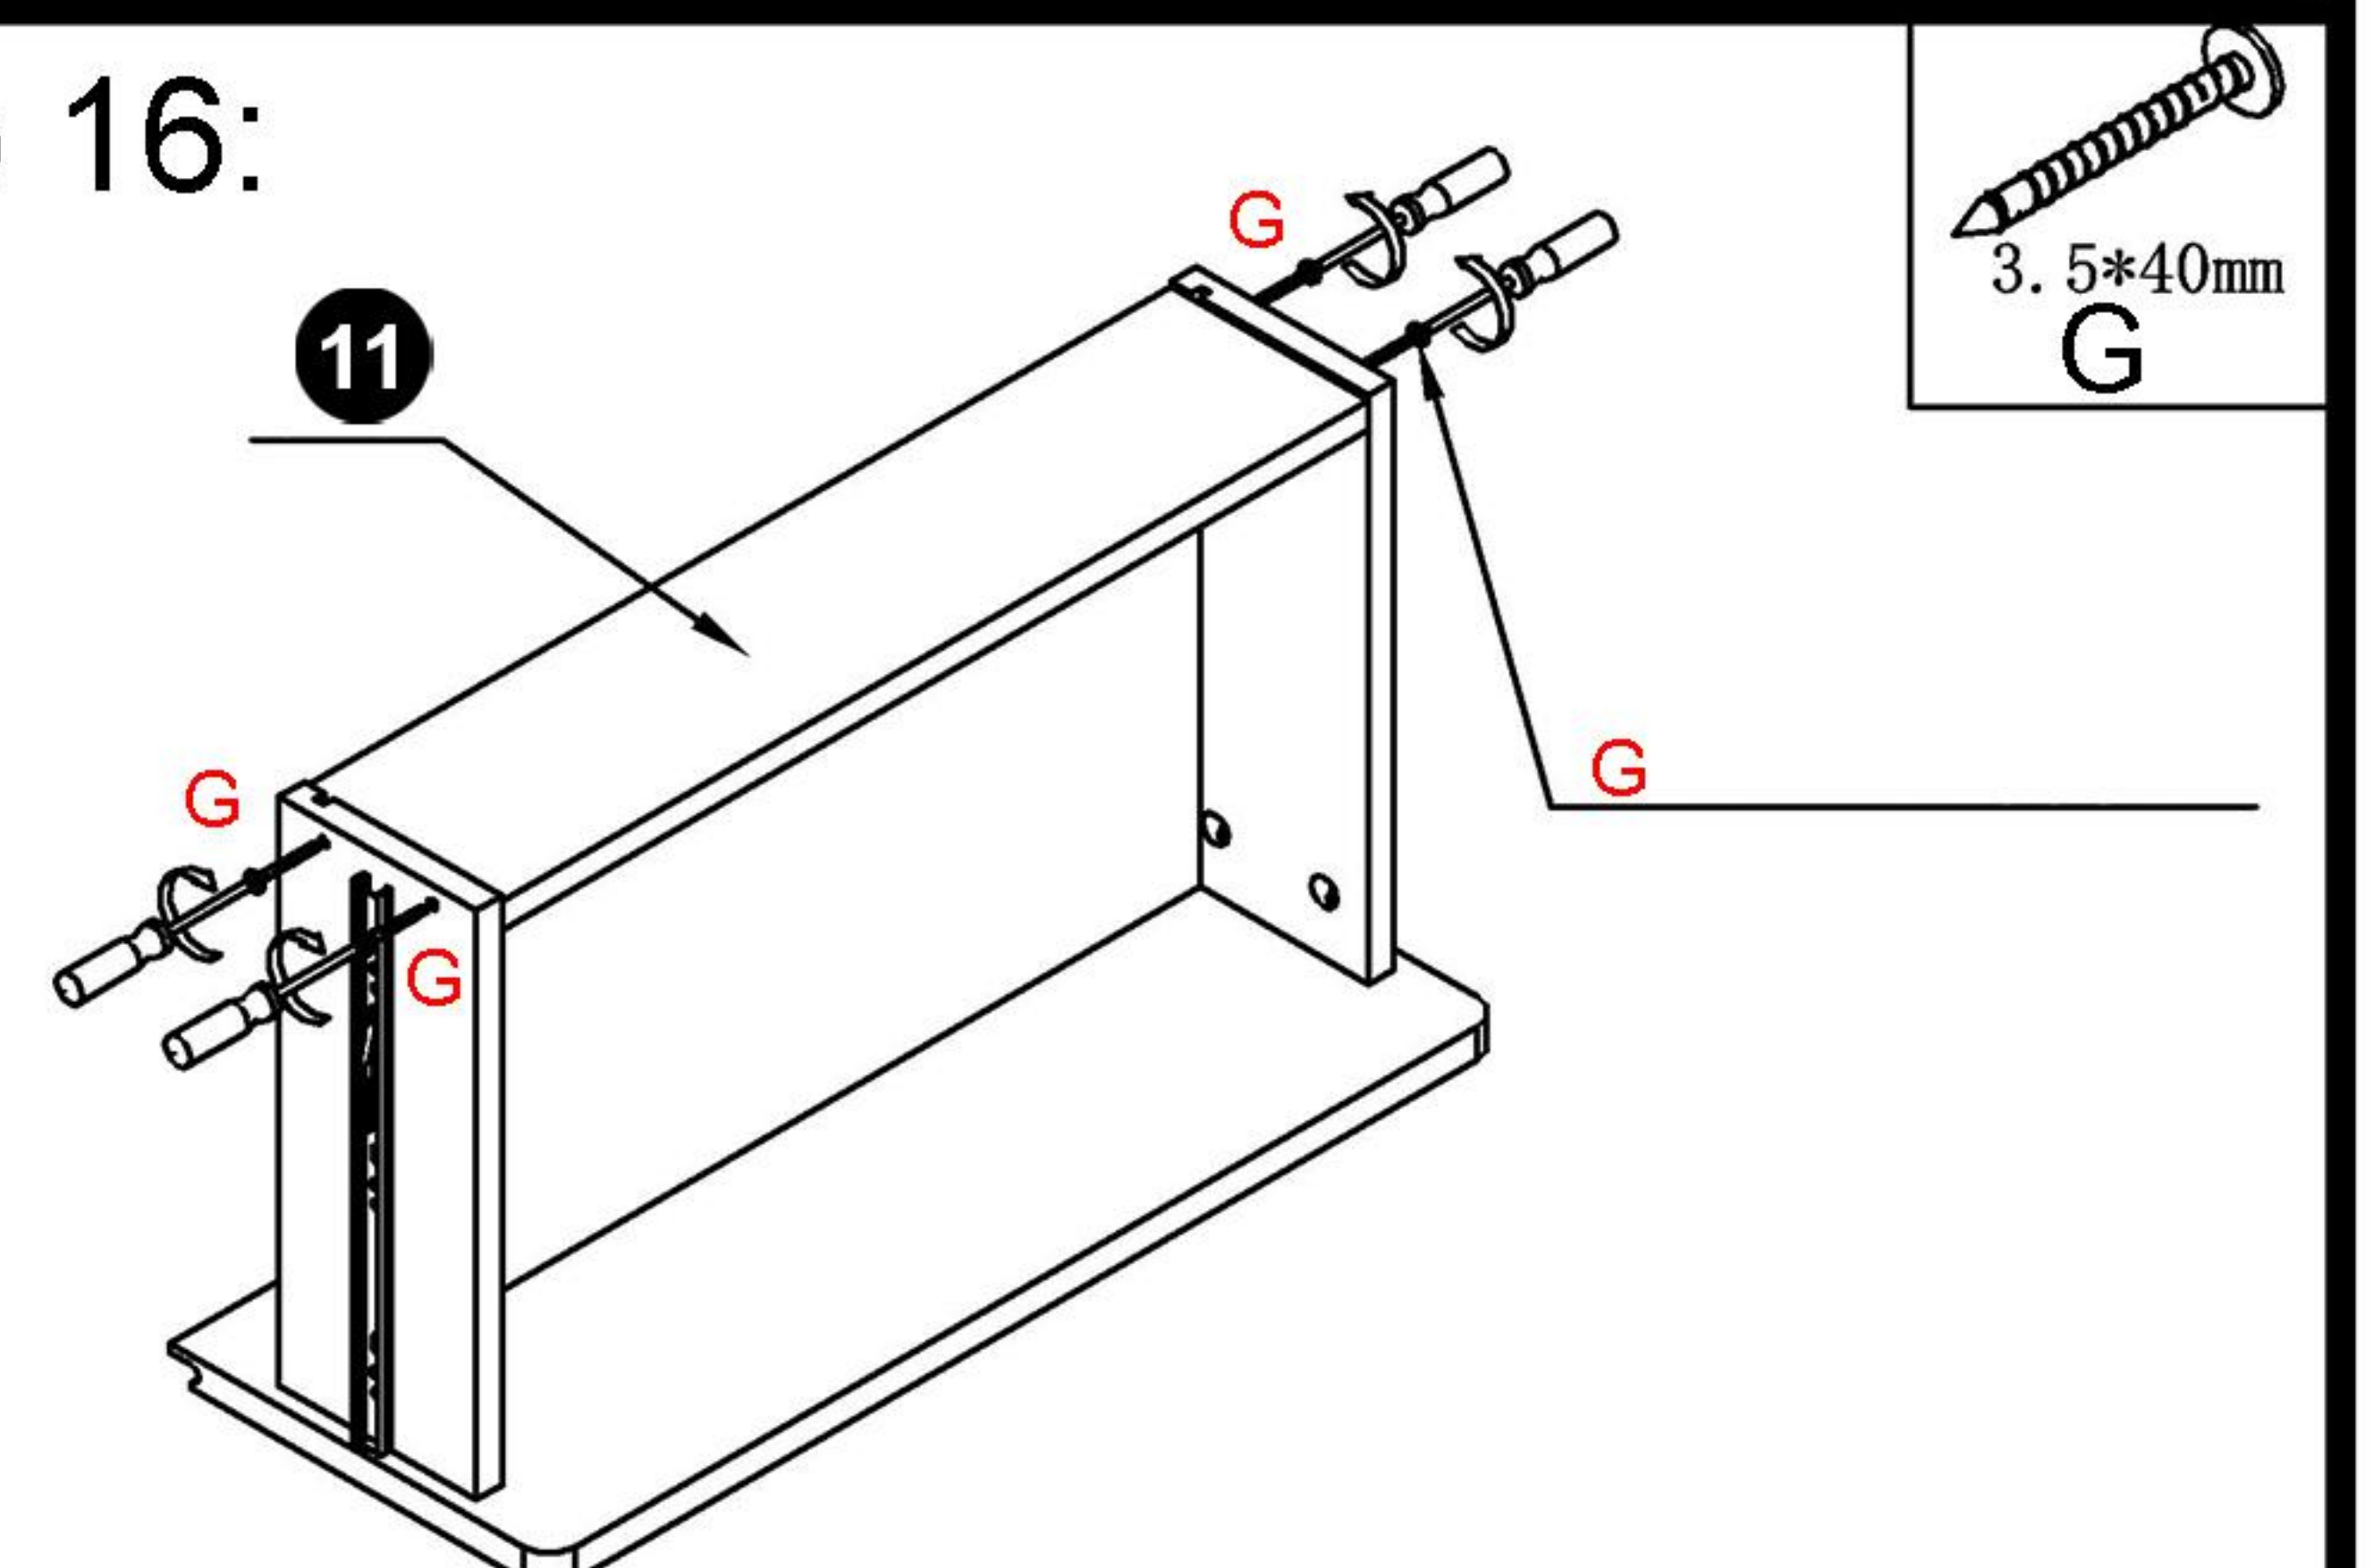

## Step 17:

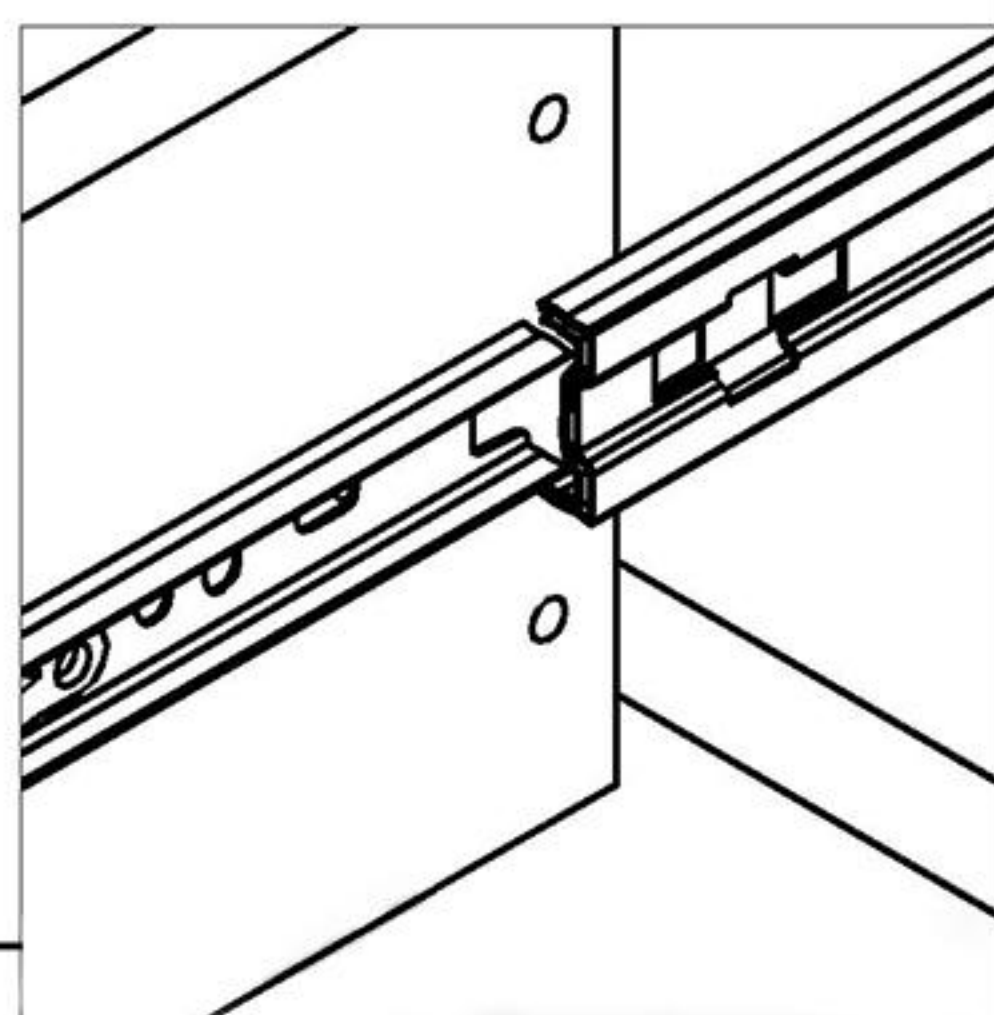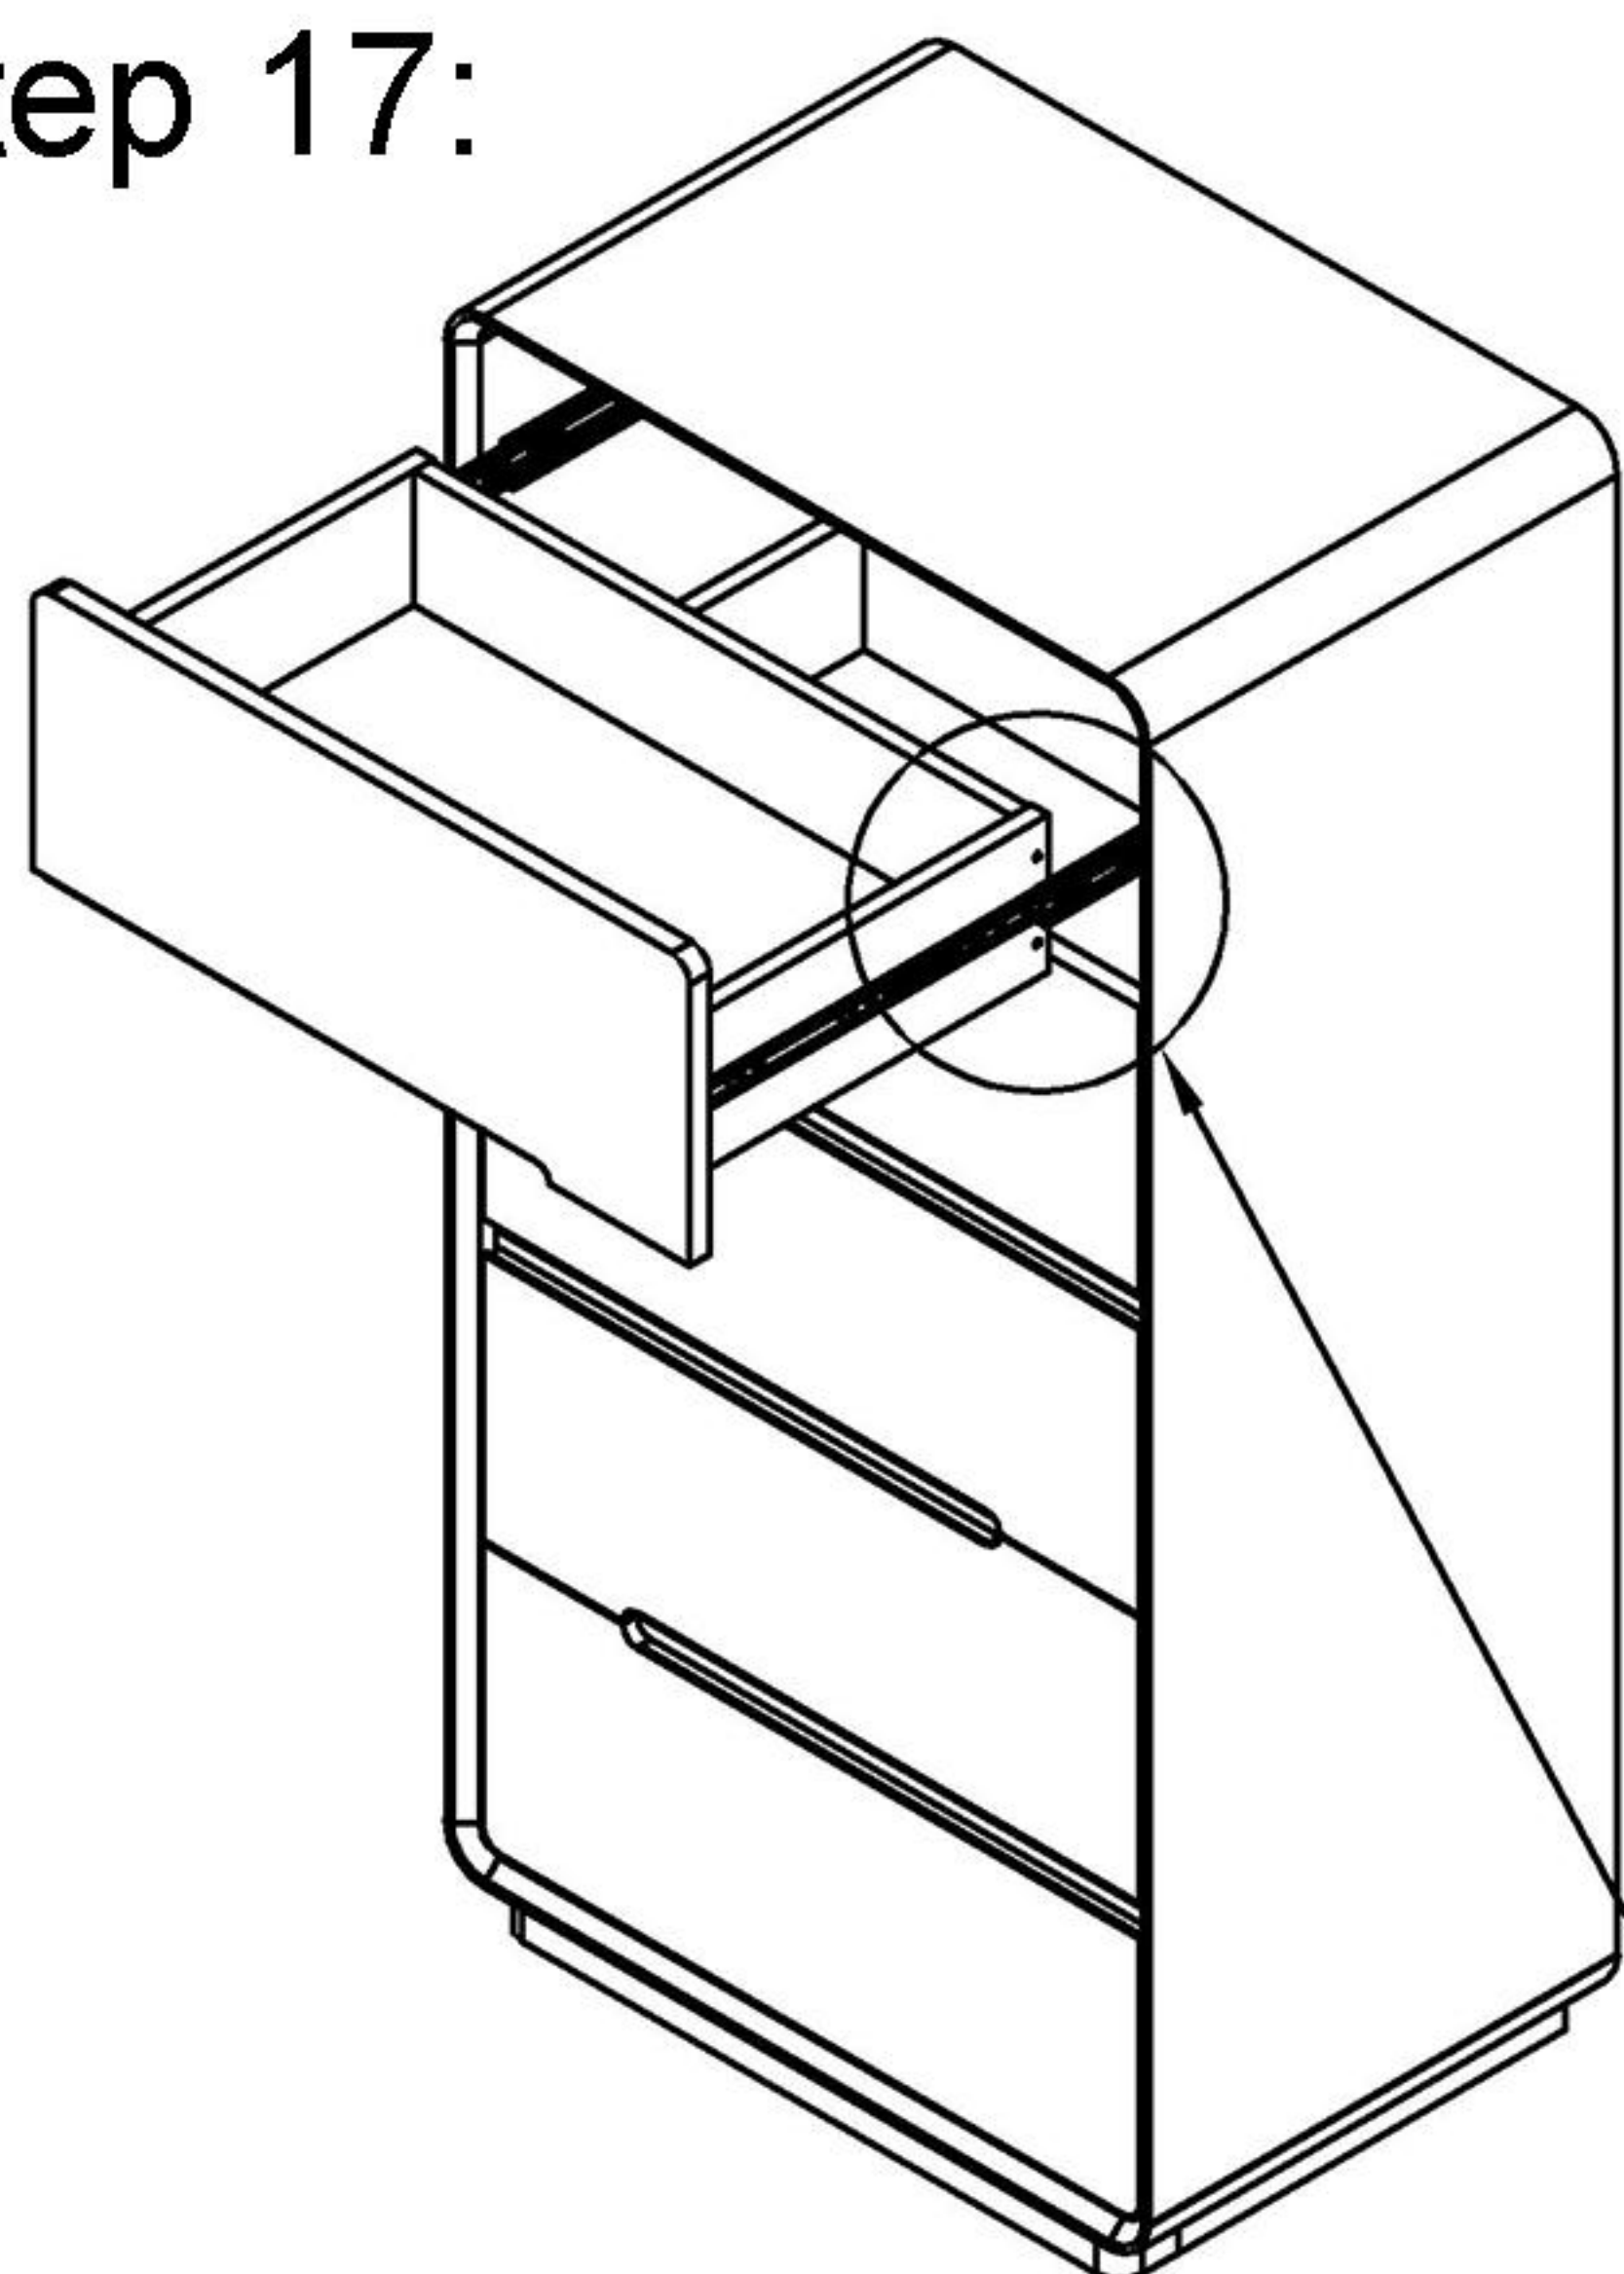

Insert into the slots  
on both sides  
simultaneously

Pull the H main body part its full length, with the silver ball-bearing section at the front. Insert the small tracks on both sides of the drawer into the slots, then gently push to secure.

