



CC059

Installation Instruction

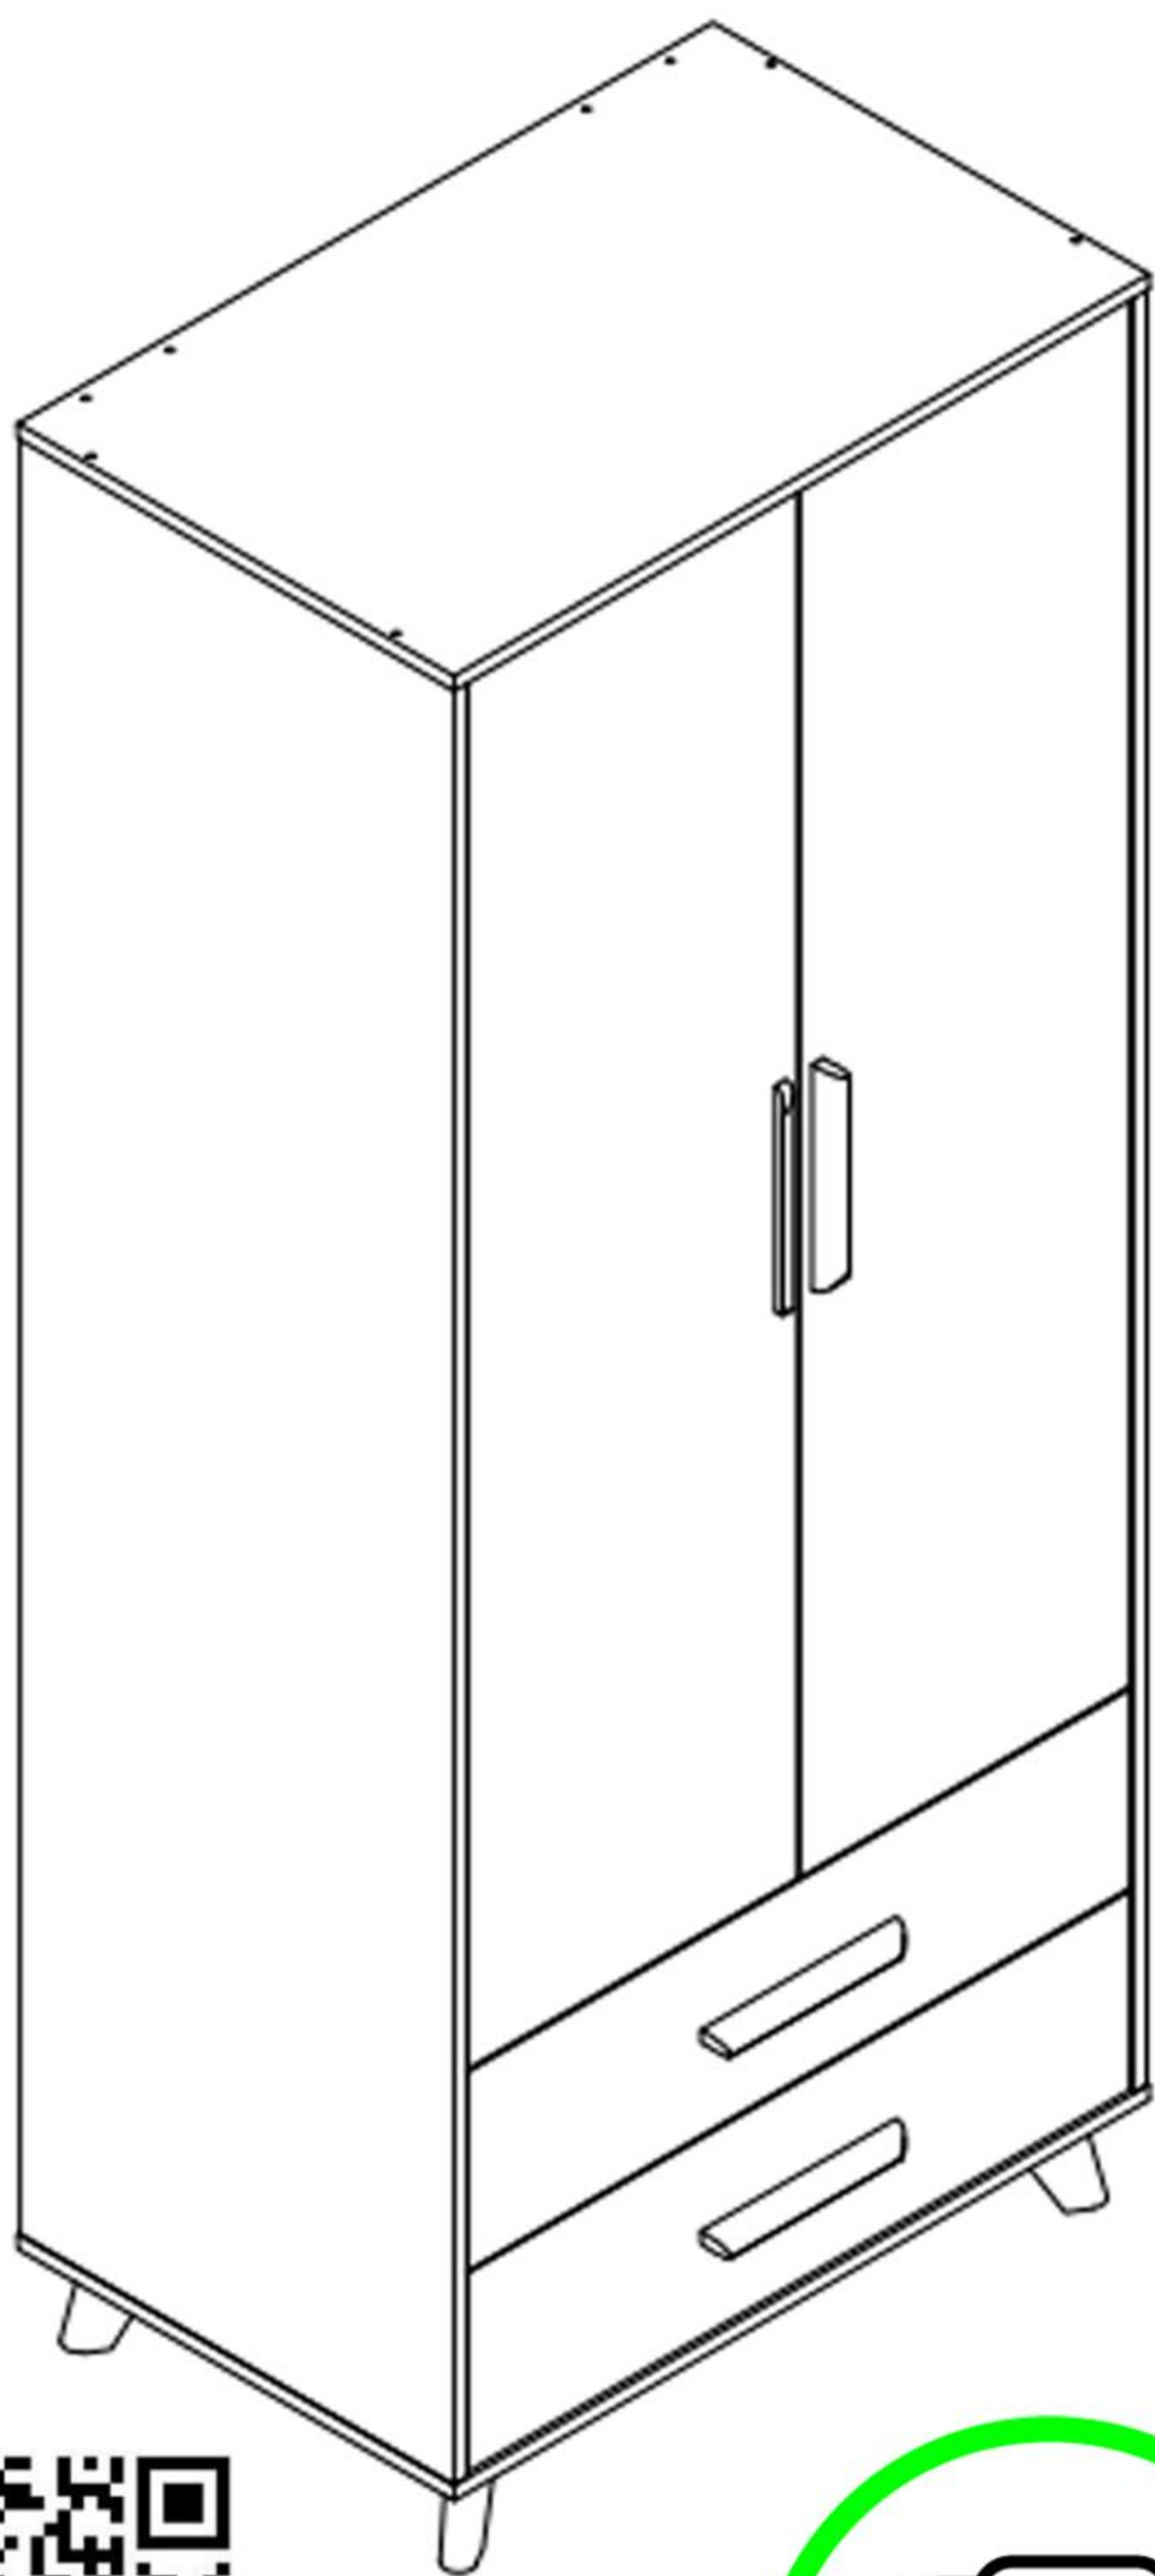

Scan the code to purchase ES001

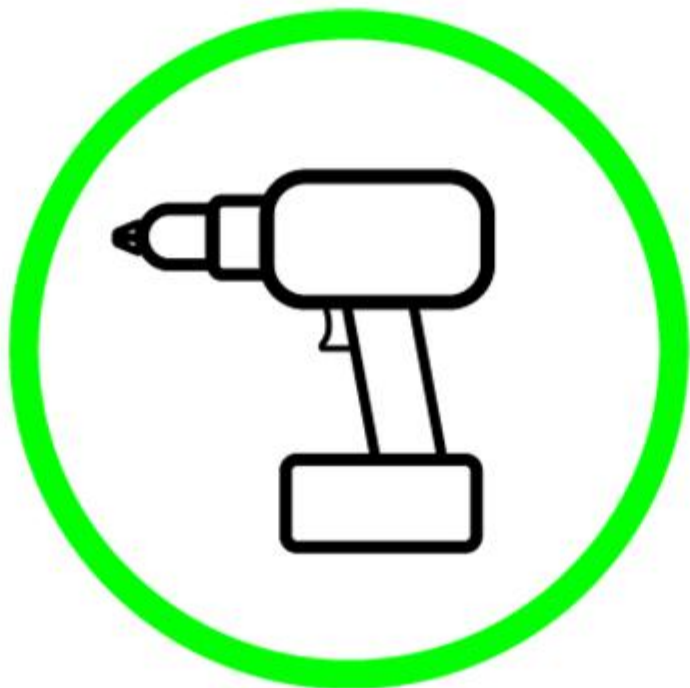

Please read this instruction manual carefully before installation and use.

Assembly notes:





1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:


1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

Hardware List

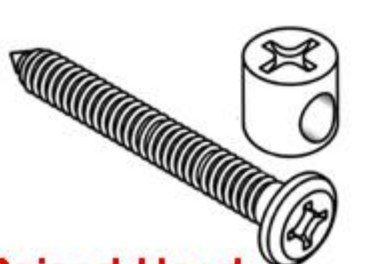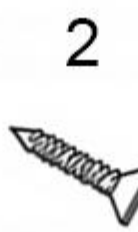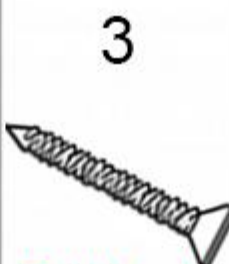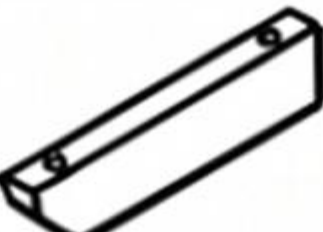(A)	(B)	(C)	(D)	(E)			(F)	(G)	(H)	(I)	(J)
3-in-1 Connector	2-in-1 Connector	Hinge	Round Head Screw	Self-Tapping Screw			Handle	Handle Screw	Silent Drawer Slide	Rod Support	Foot Pad
	 Raised Head					 Flat Head					
Ø12/L=40	Ø10/Ø5*45	Large Bend	Ø6*30	Ø3.5*14	Ø3.5*16	Ø4*25	192 Hole Spacing	Ø4*20	12"		


BoardMaterial List

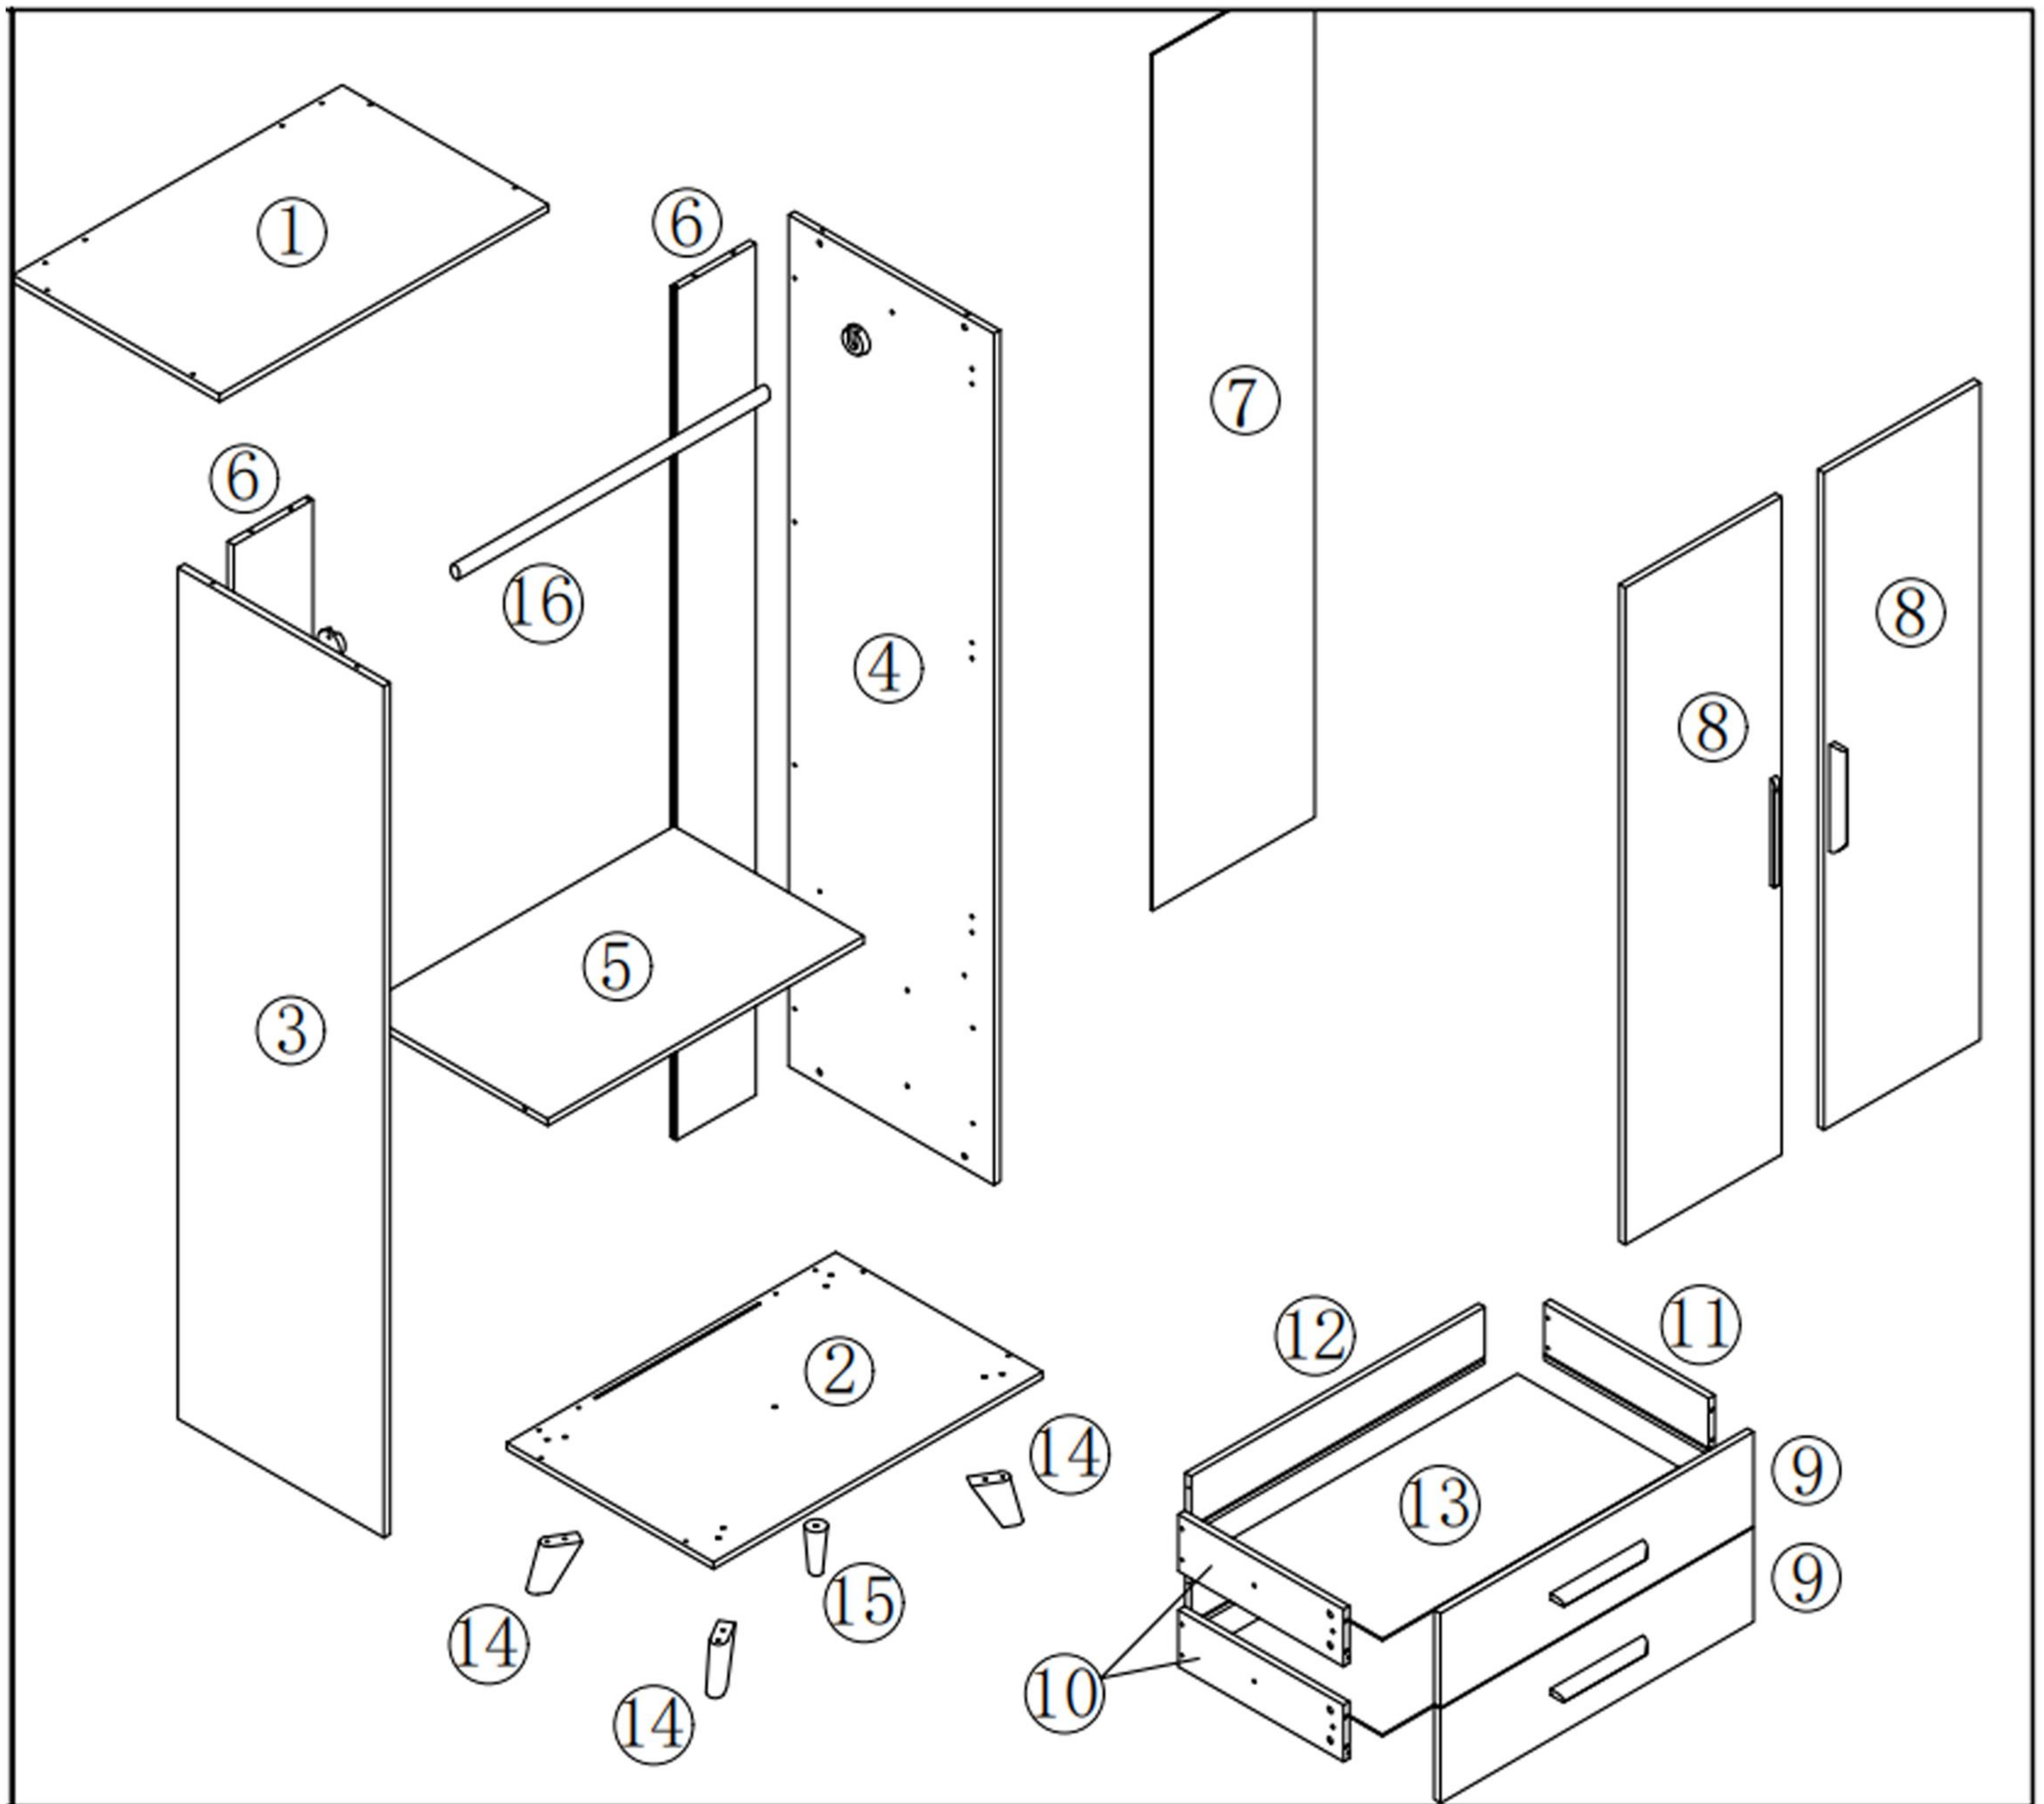

- | | | | | |
|---------------------|---------------------|-------------------|--------------------|--------------------|
| ① Top Board | ② Bottom Board | ③ Left Side Board | ④ Right Side Board | ⑤ Shelf Board |
| ⑥ Back Support Bar | ⑦ Back Panel | ⑧ Door Panel | ⑨ Drawer Front | ⑩ Left Drawer Side |
| ⑪ Right Drawer Side | ⑫ Drawer Shelf | ⑬ Drawer Bottom | ⑭ Side Leg | ⑮ Middle Leg |
| ⑯ Clothes Rod | | | | |

Detailed description of the main components, please read carefully

Installation Guide: 3-in-1 Connector

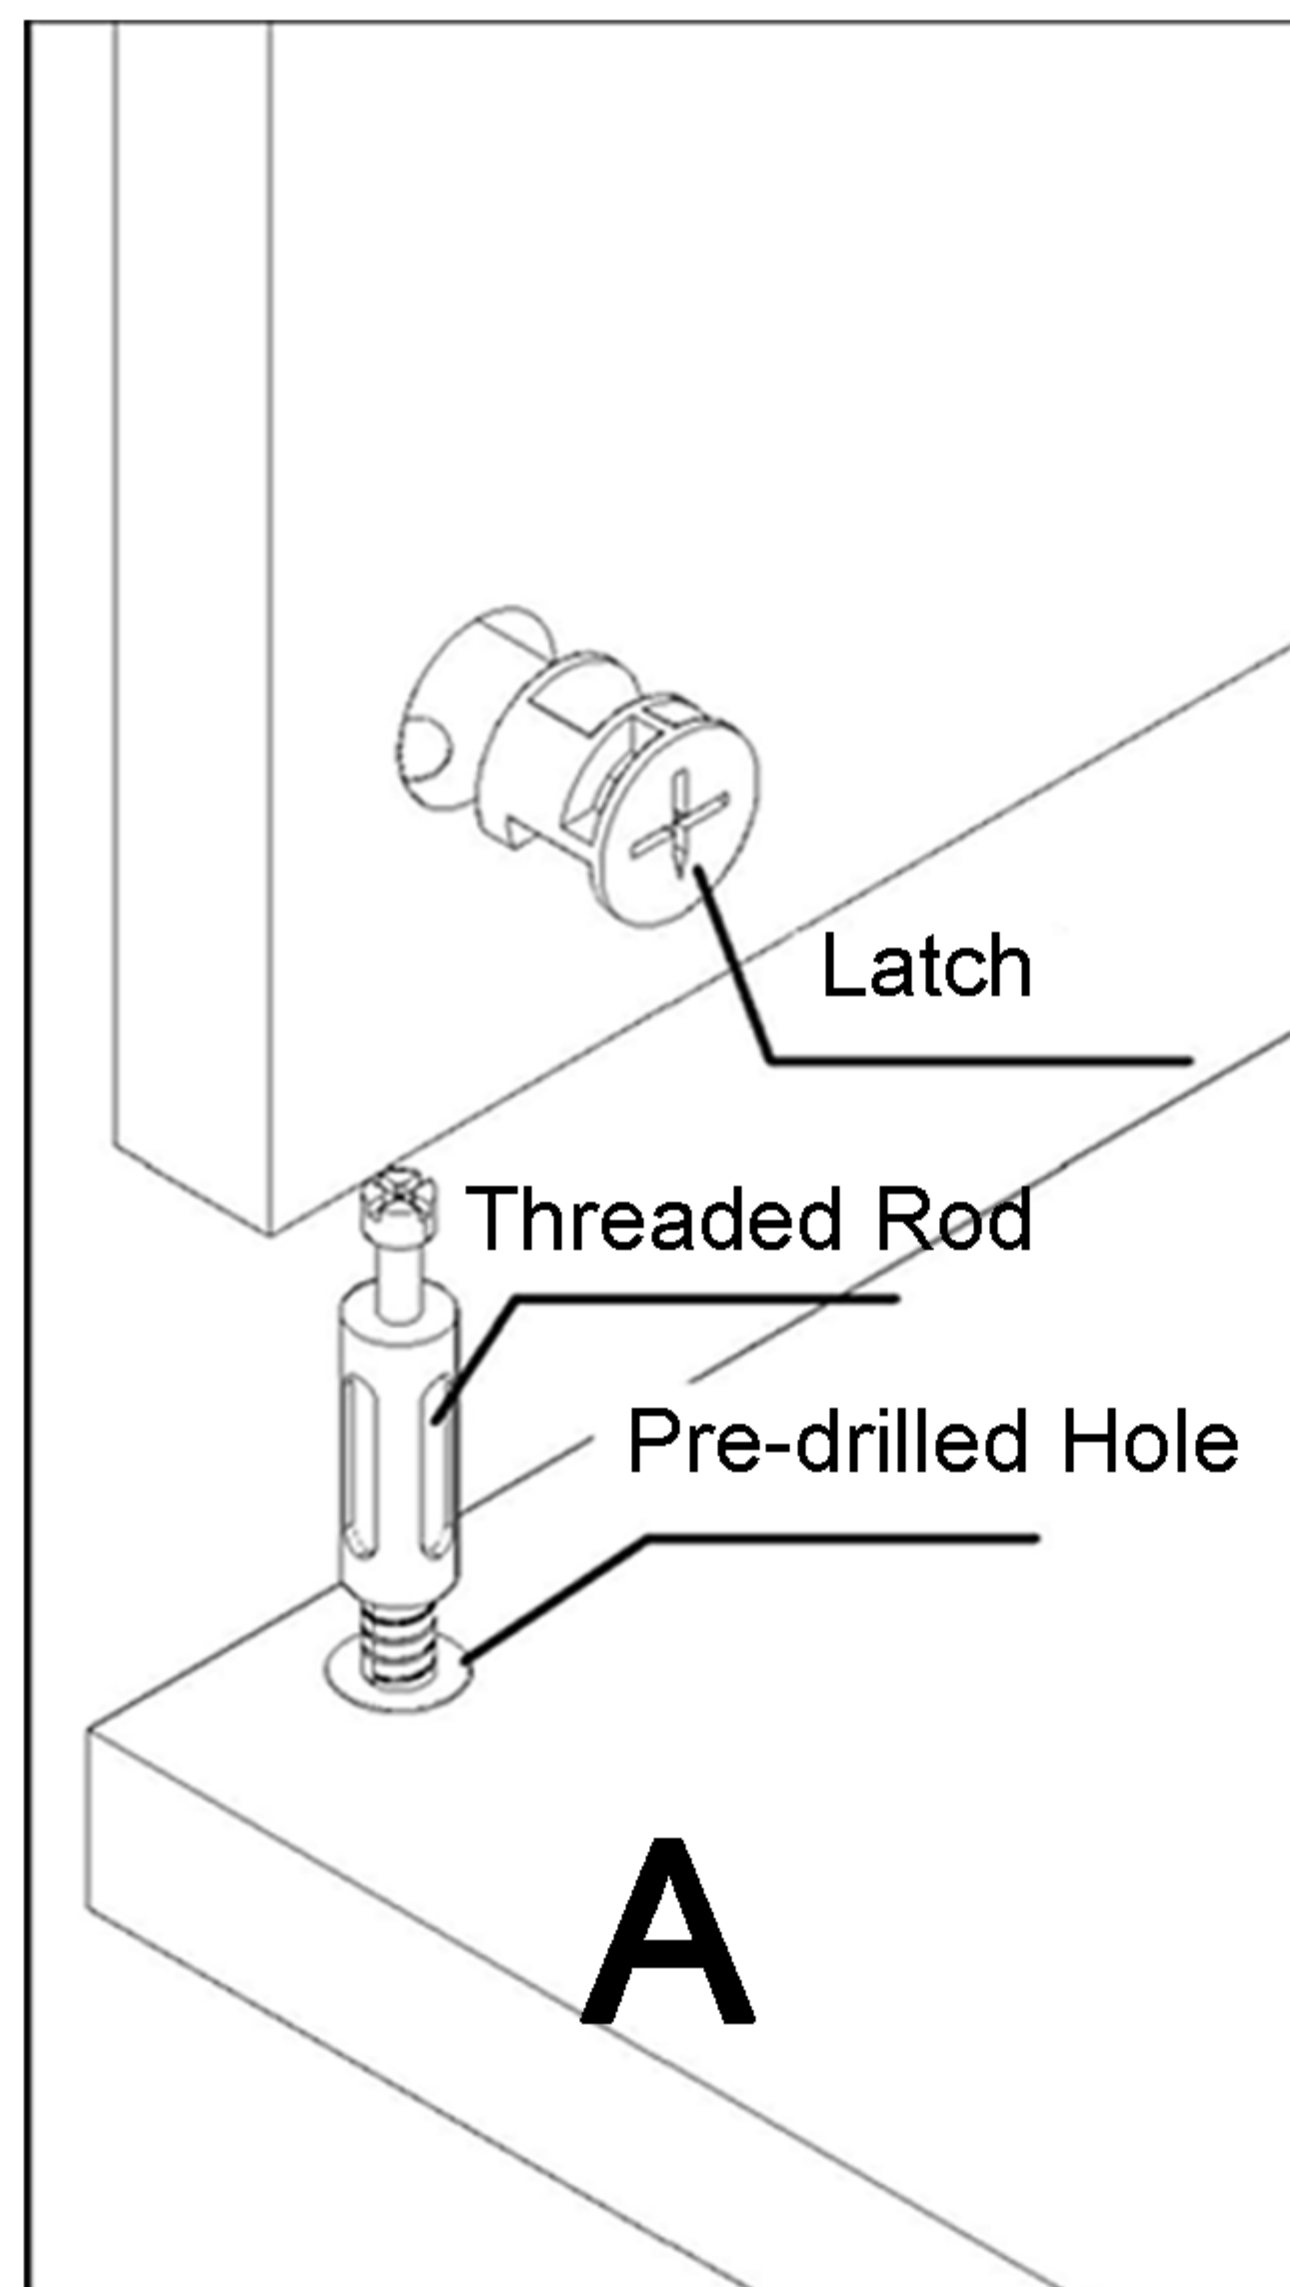

1. Screw the Threaded Rod into the Pre-drilled Hole
2. Insert the installed Threaded Rod into the corresponding hole of the other piece. Press Latch into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.

H (Sliding Rail) Installation Instructions


When installing H, use with screw E1

1, Separate H (Sliding Rail)




The main body part



The pull-out part

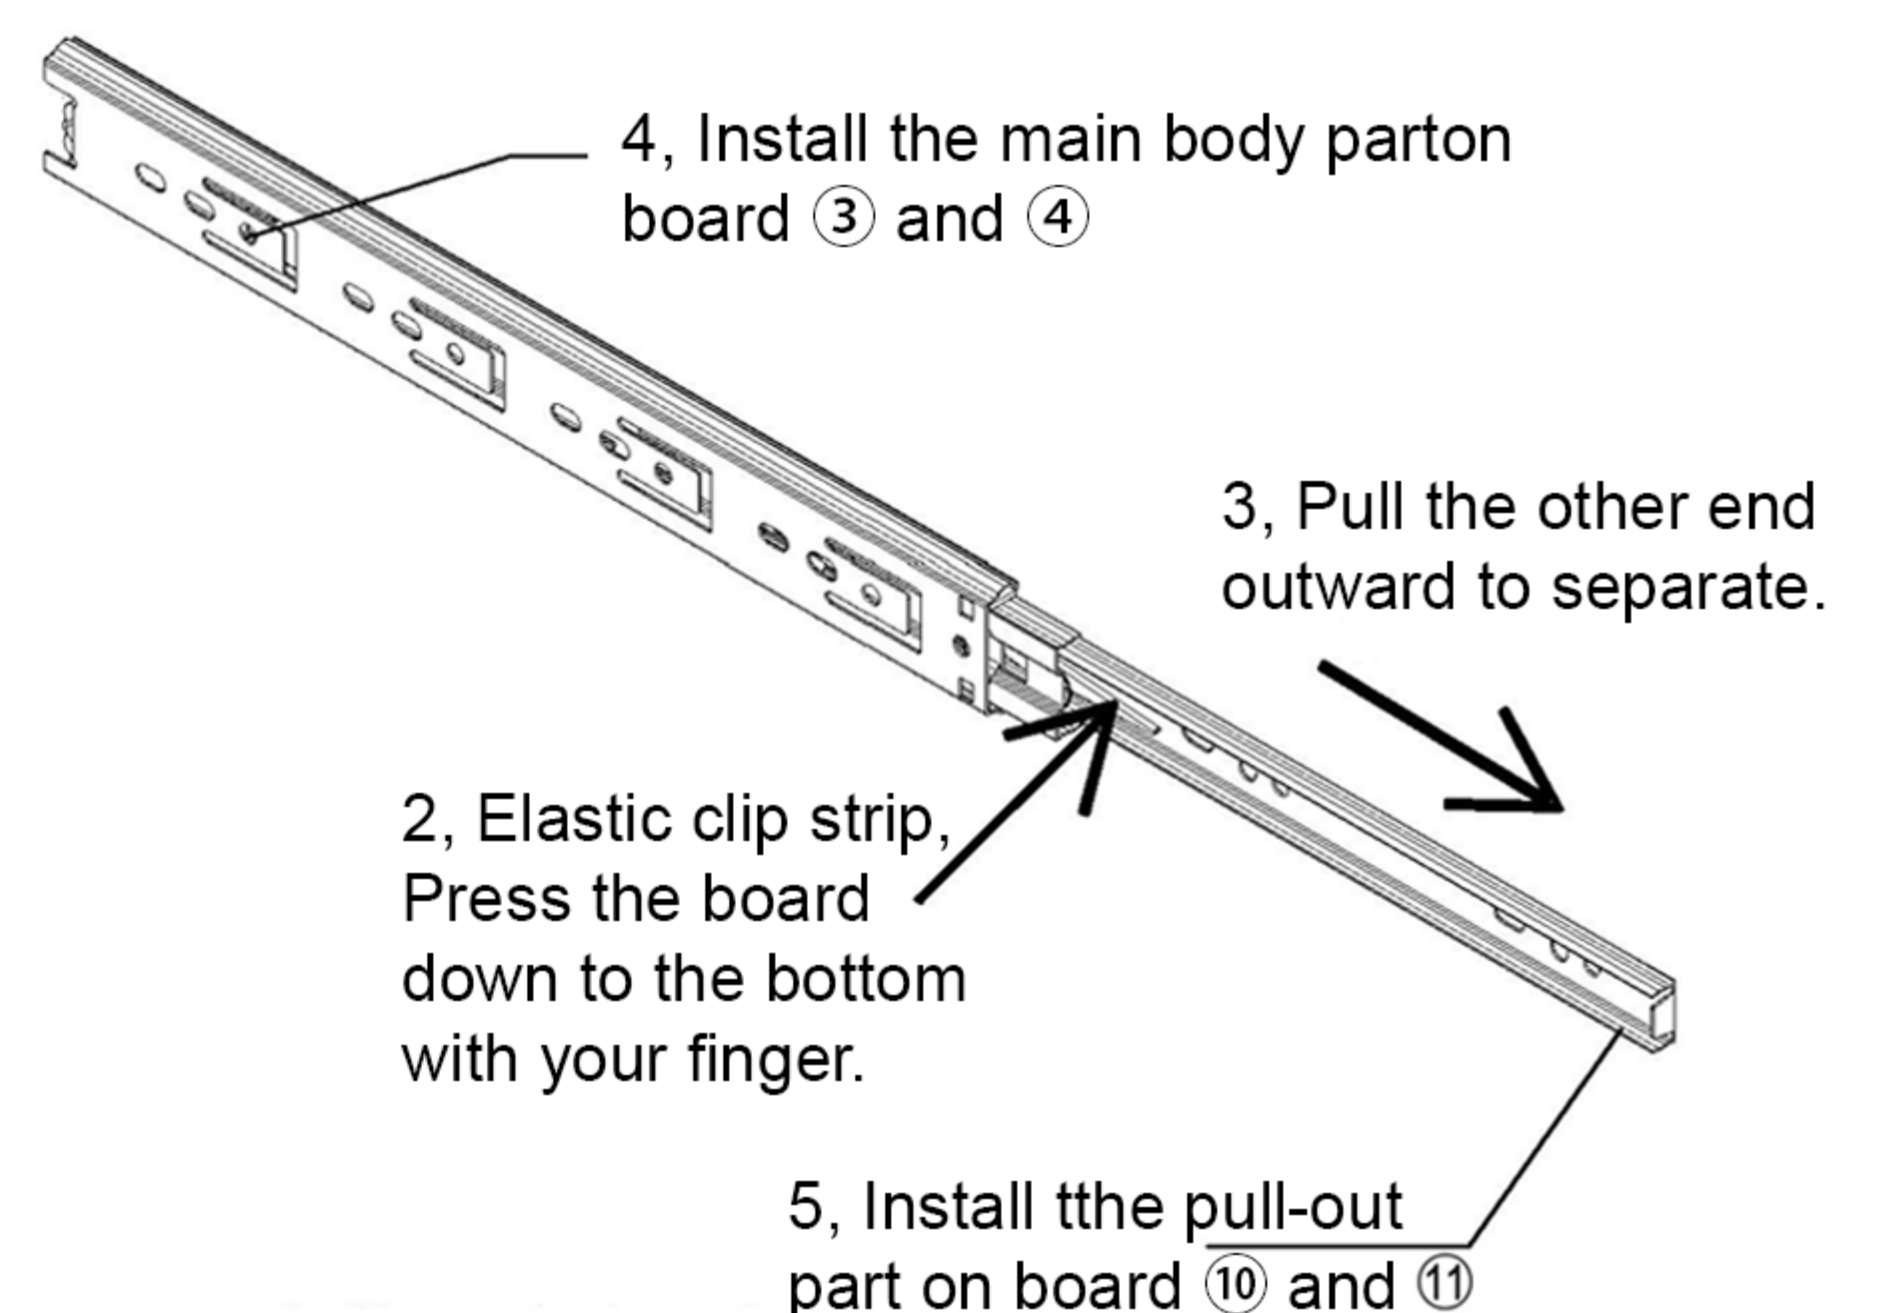

2-in-1 Assembly Instructions

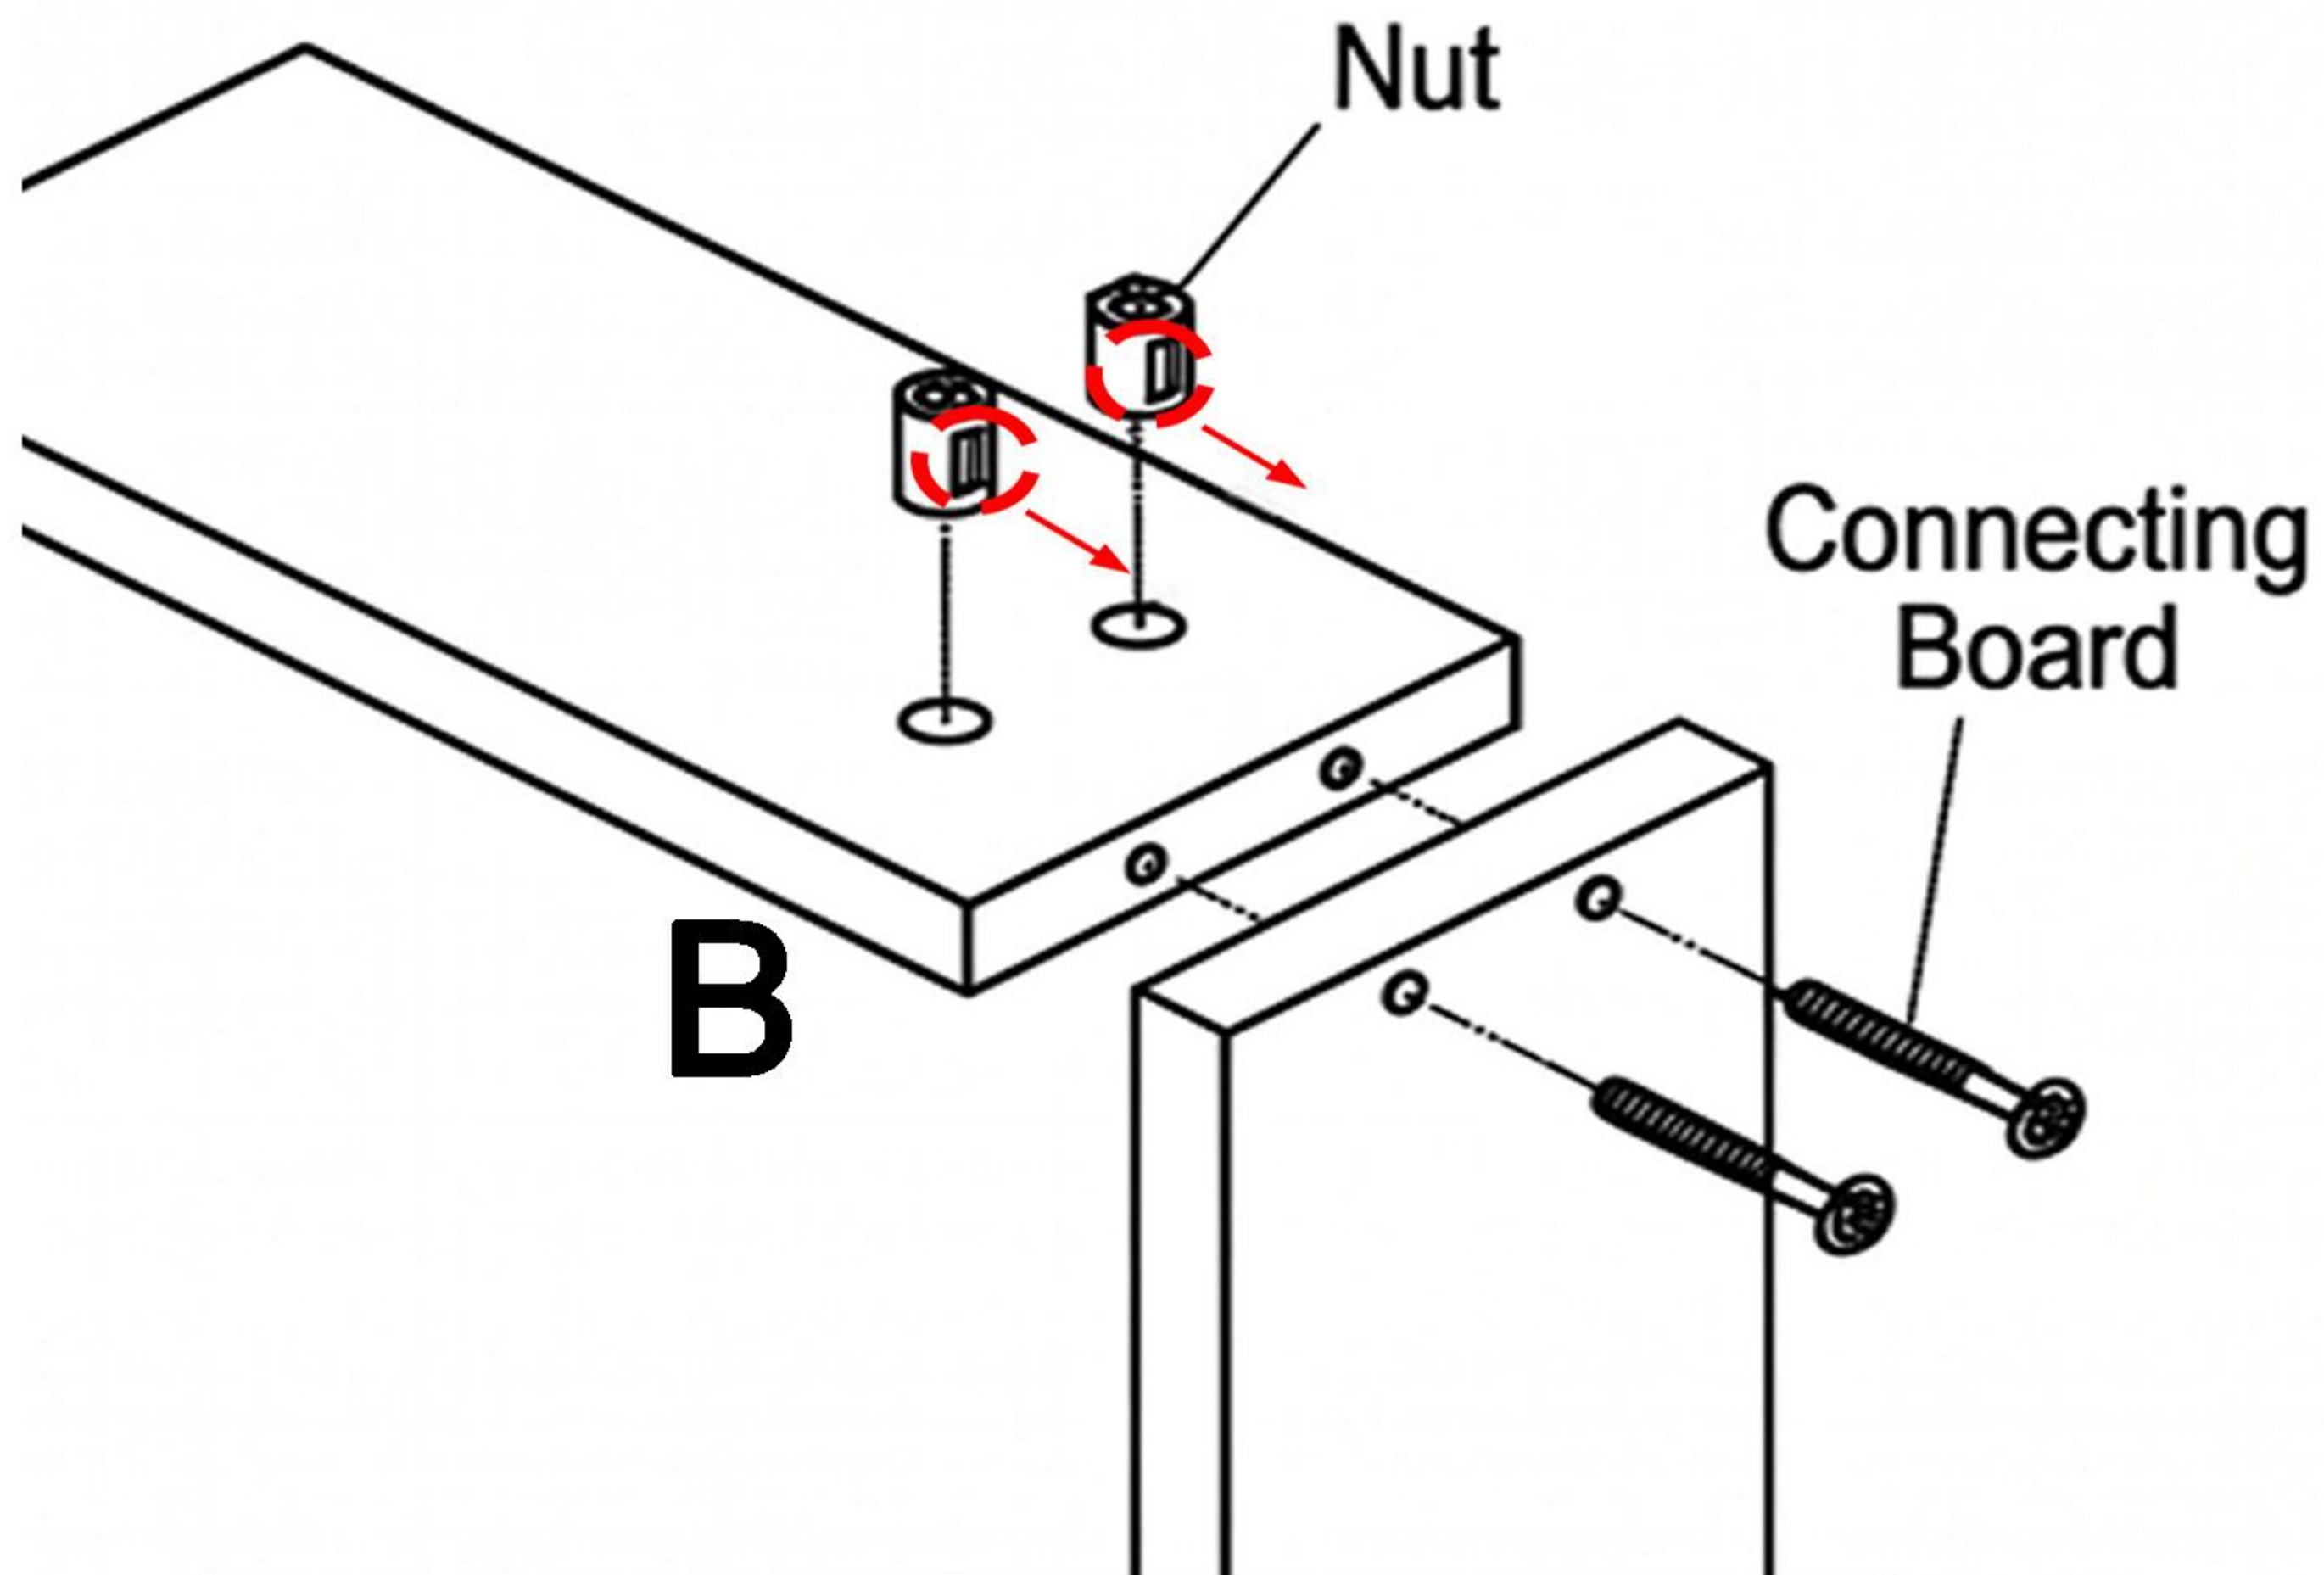


1. Insert the rubber nut into the large hole.
2. Align the side hole of the insert with the screw hole.
3. Insert the long screw through the side hole.
4. Tighten the screw until secure.

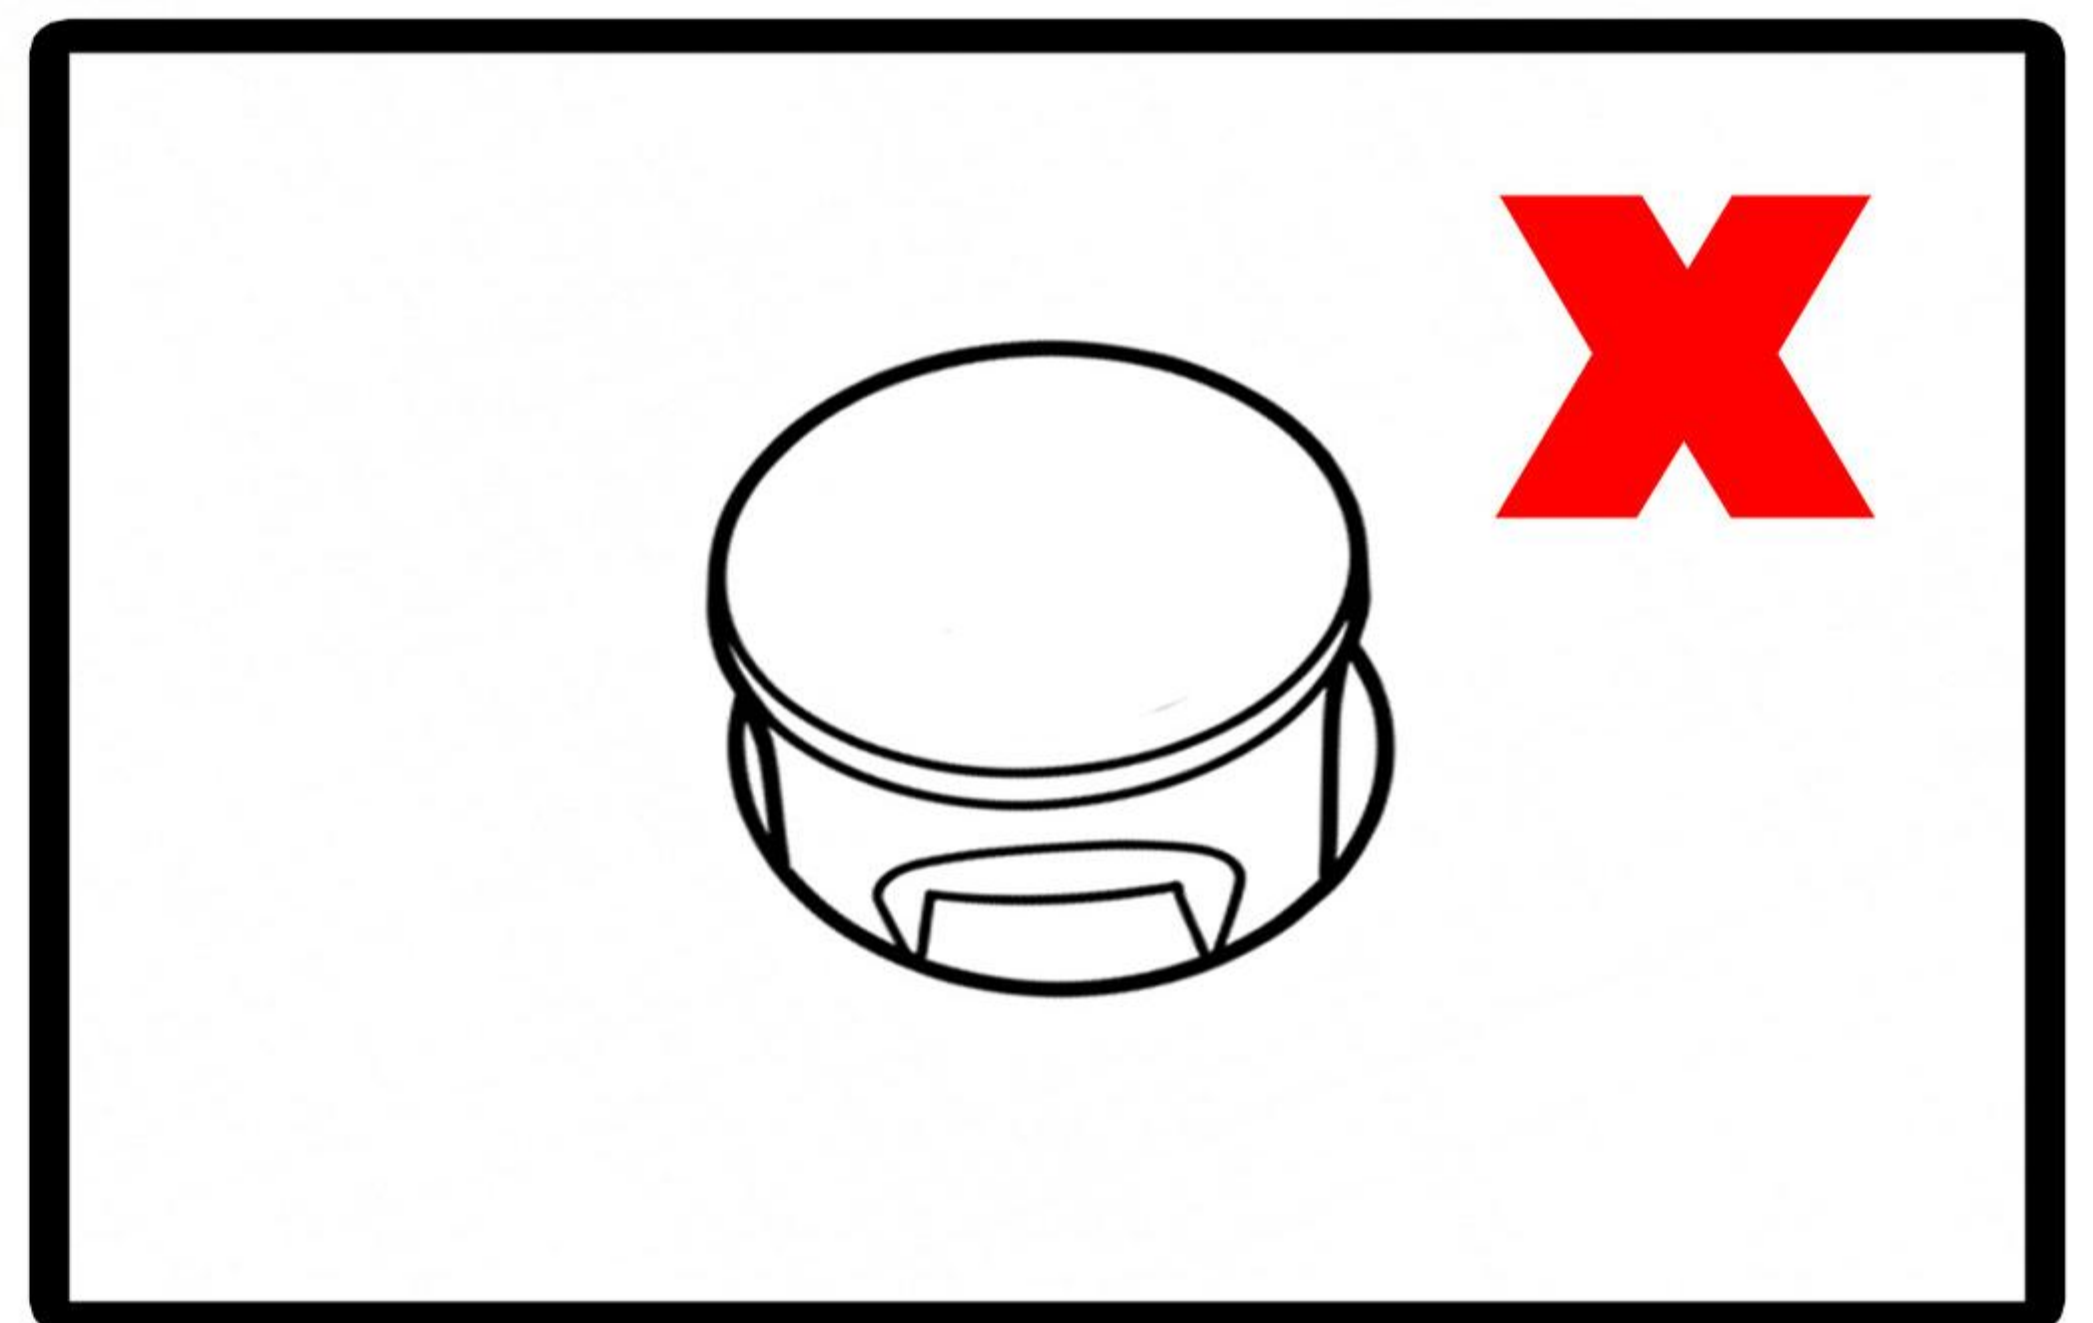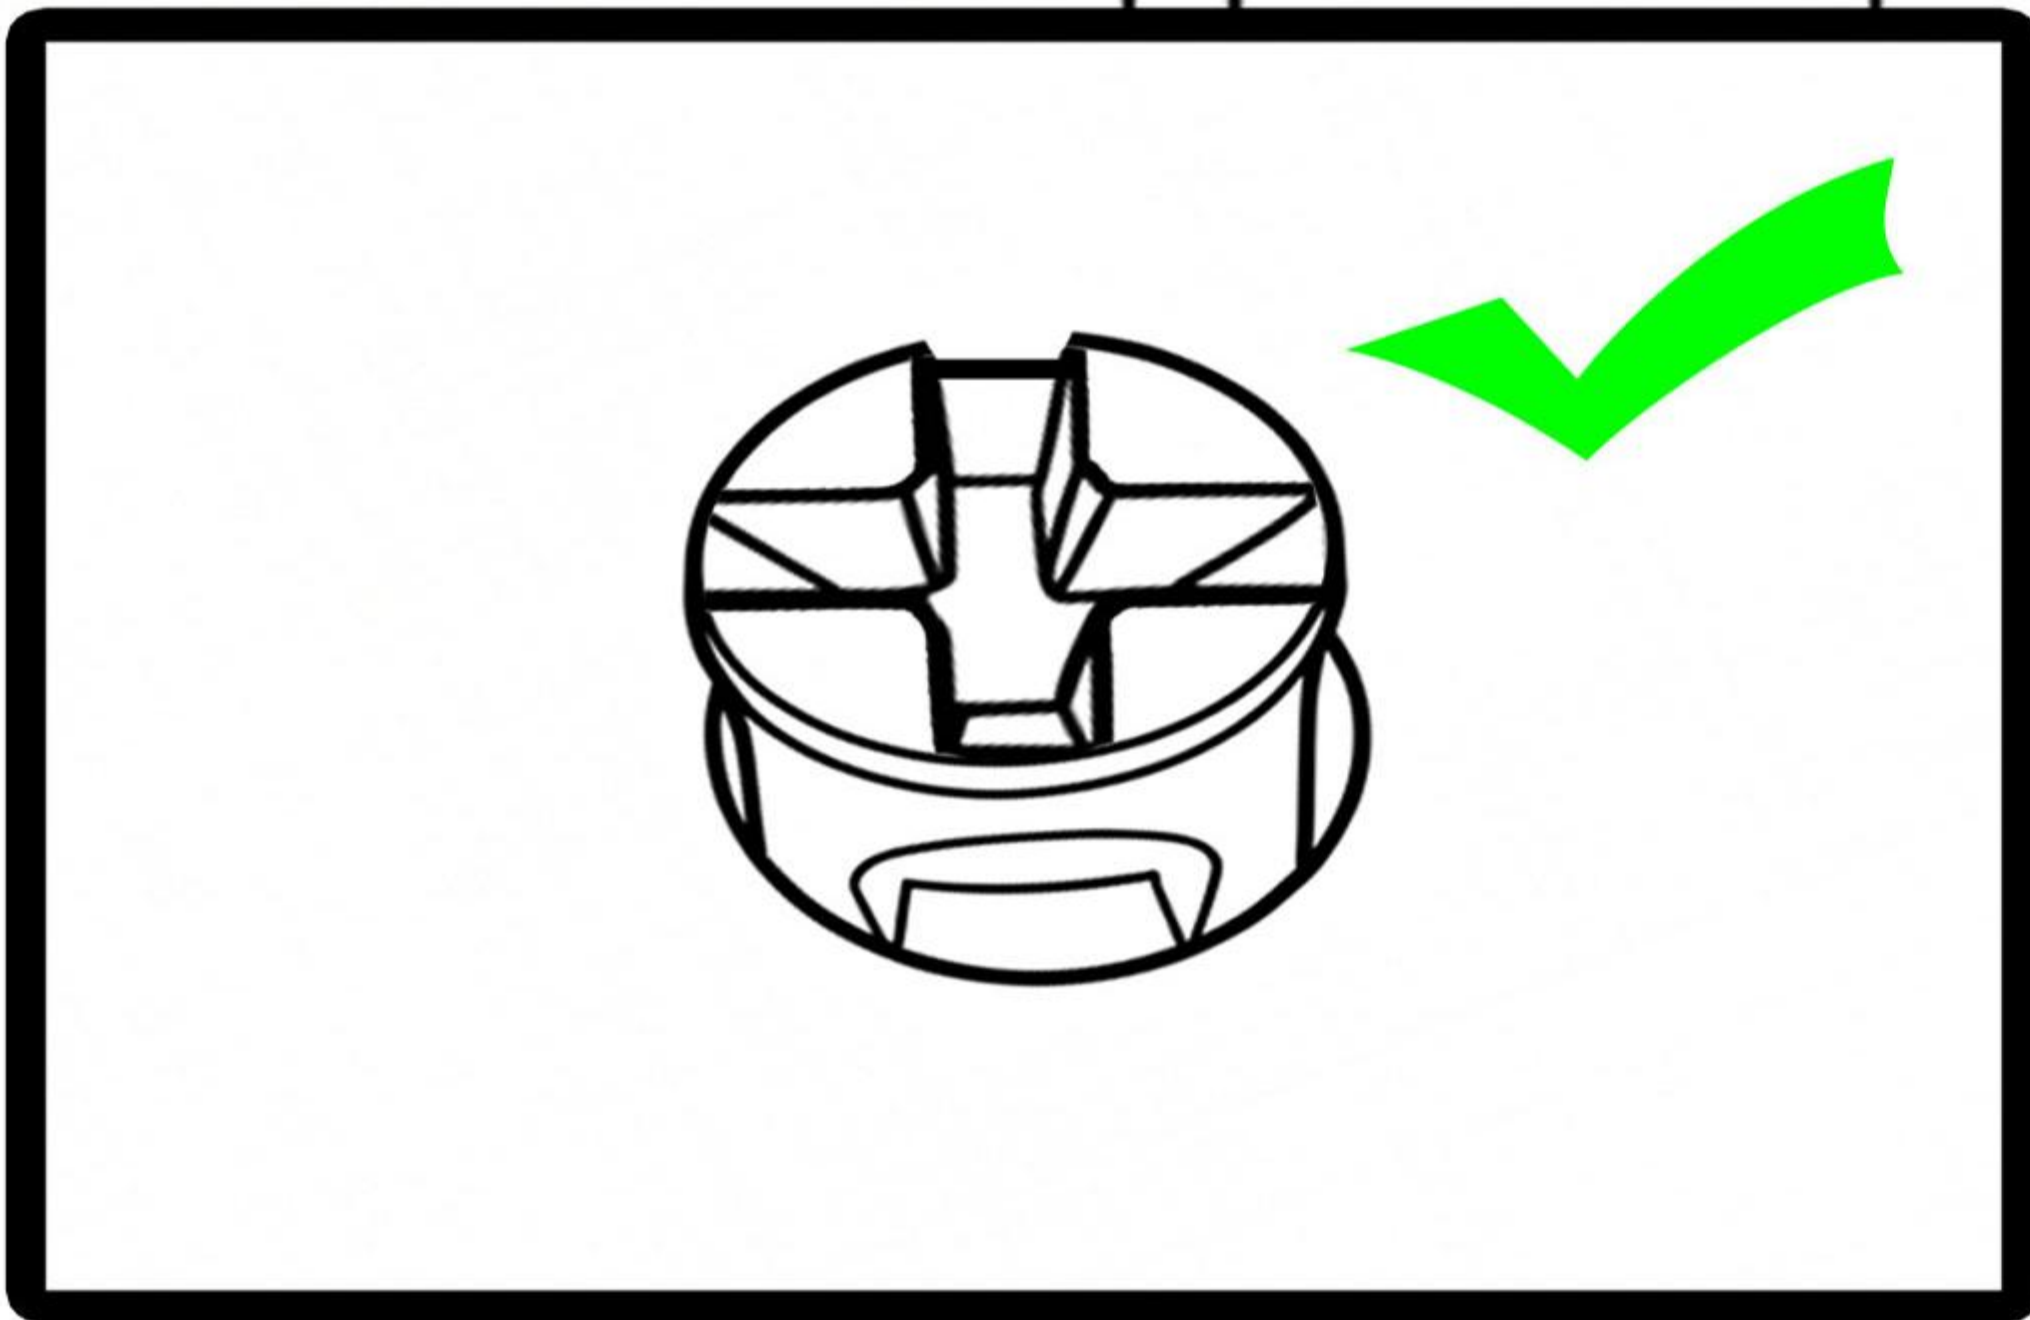

IMPORTANT ORIENTATION

Make sure the cross (+) slot on the rubber nut is facing up / outward.
If not aligned first, it cannot be adjusted later.

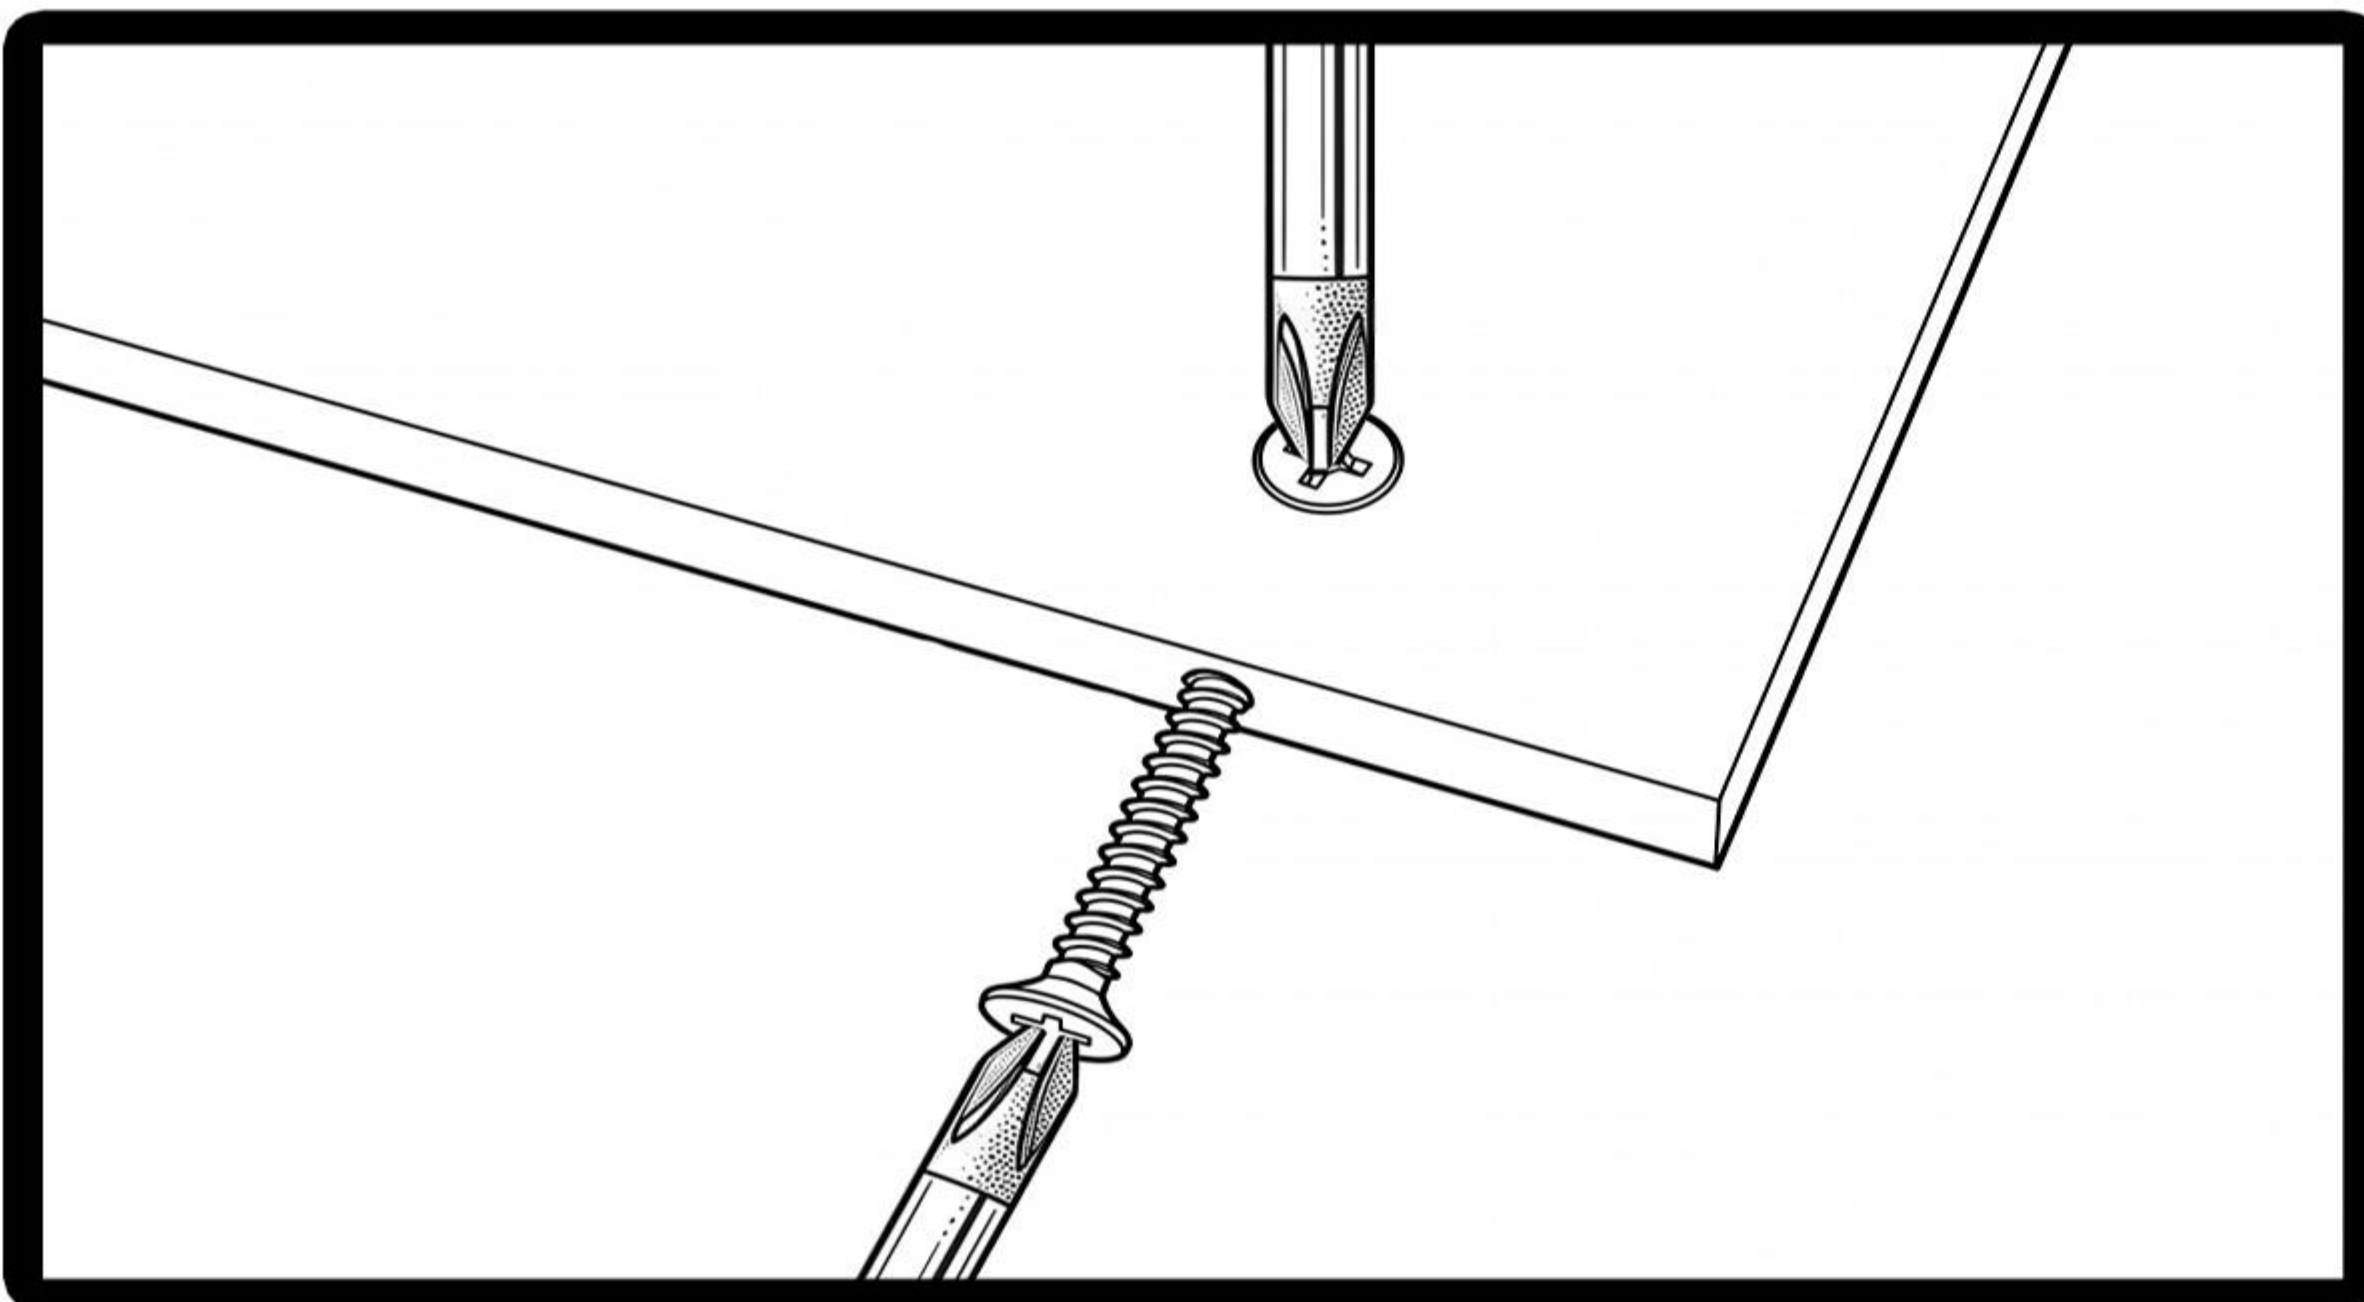

Tip


If the insert rotates, hold it in place with a screwdriver while tightening the screw with another screwdriver.

Important


Make sure the insert is fully seated.
Do not overtighten.

C (Hinge) Installation Instructions




Install the hinge with screw E1

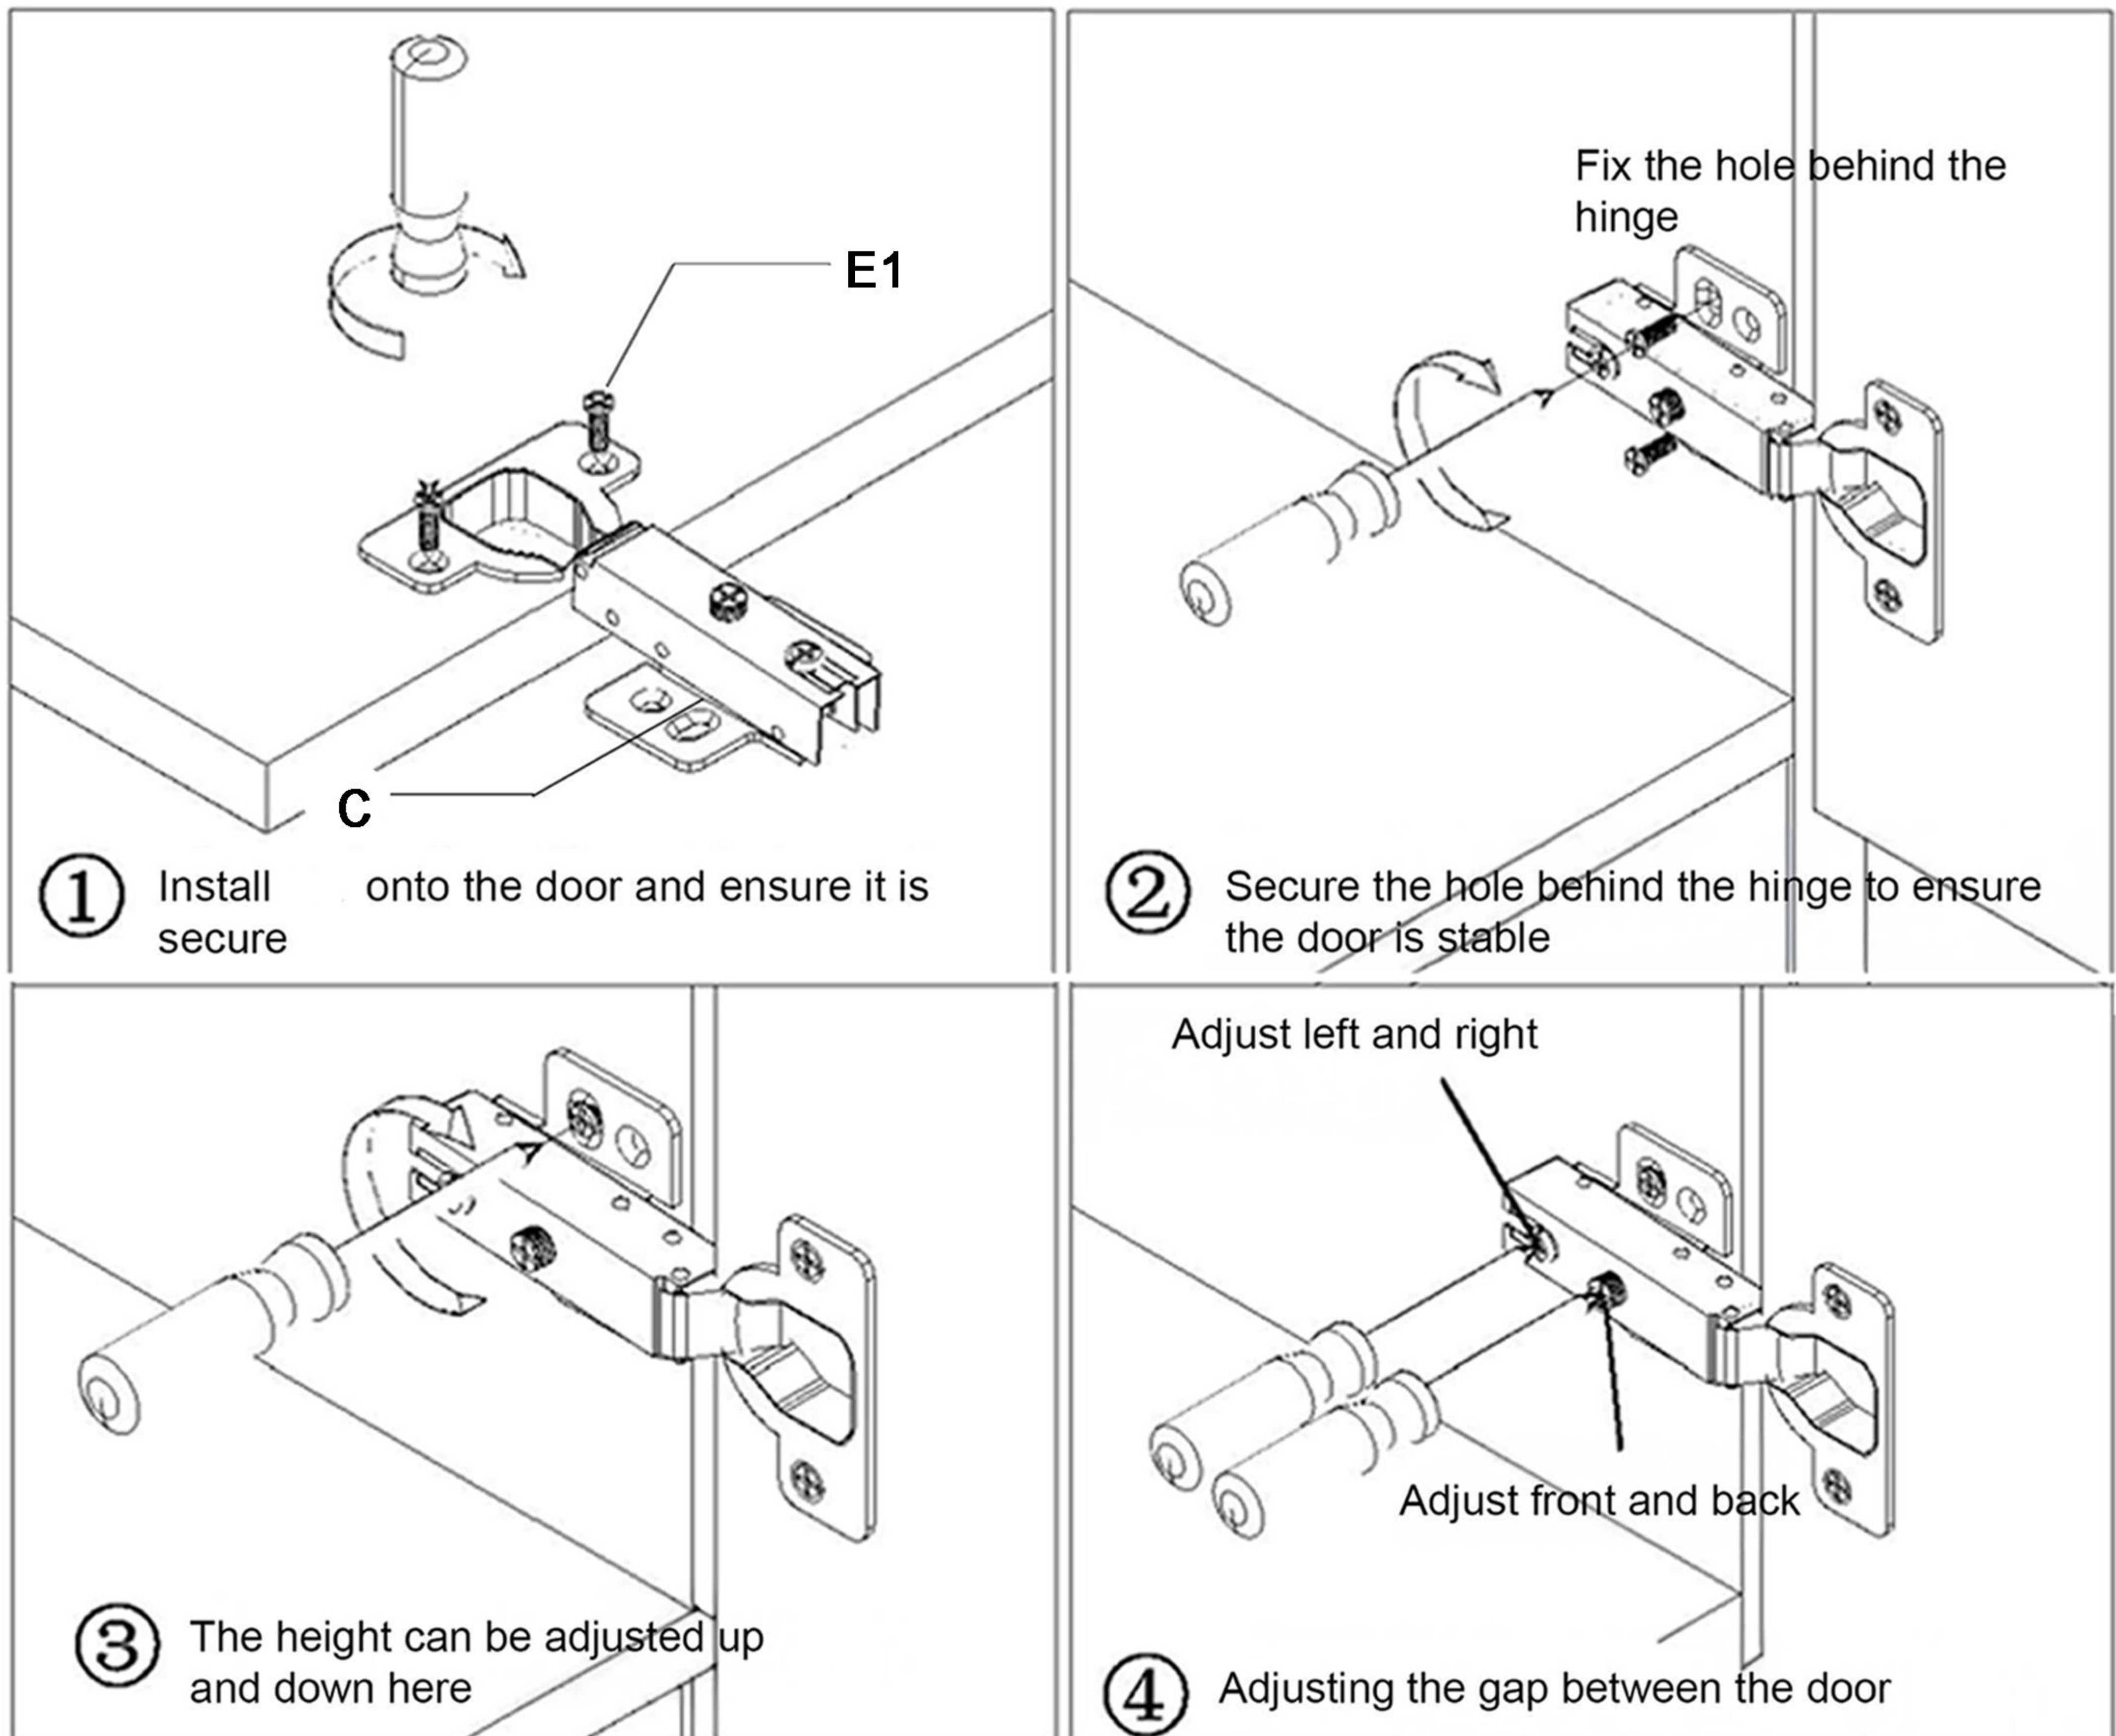

Step 1:

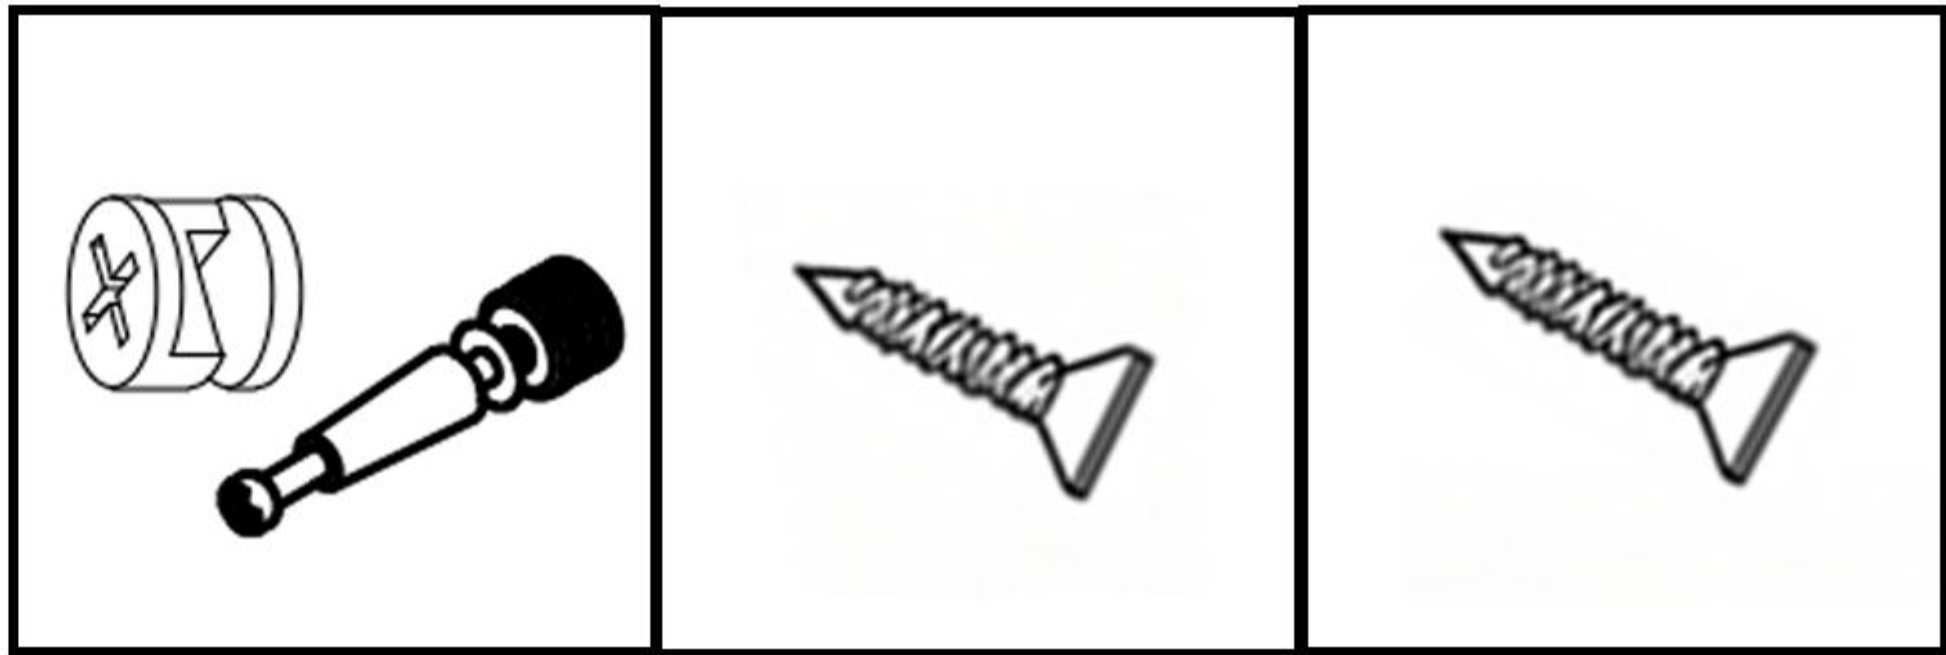


A E1 E2

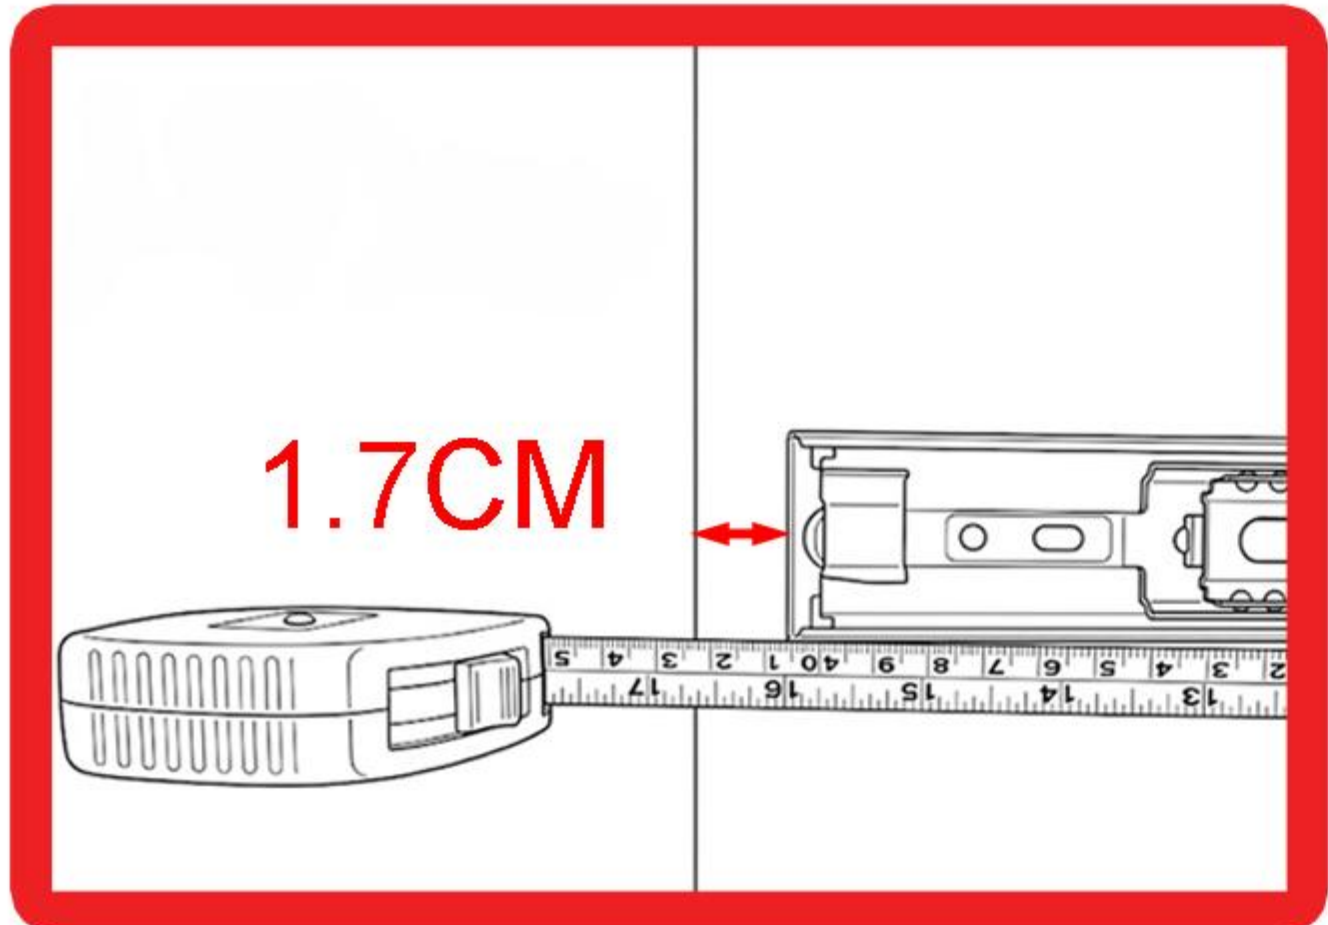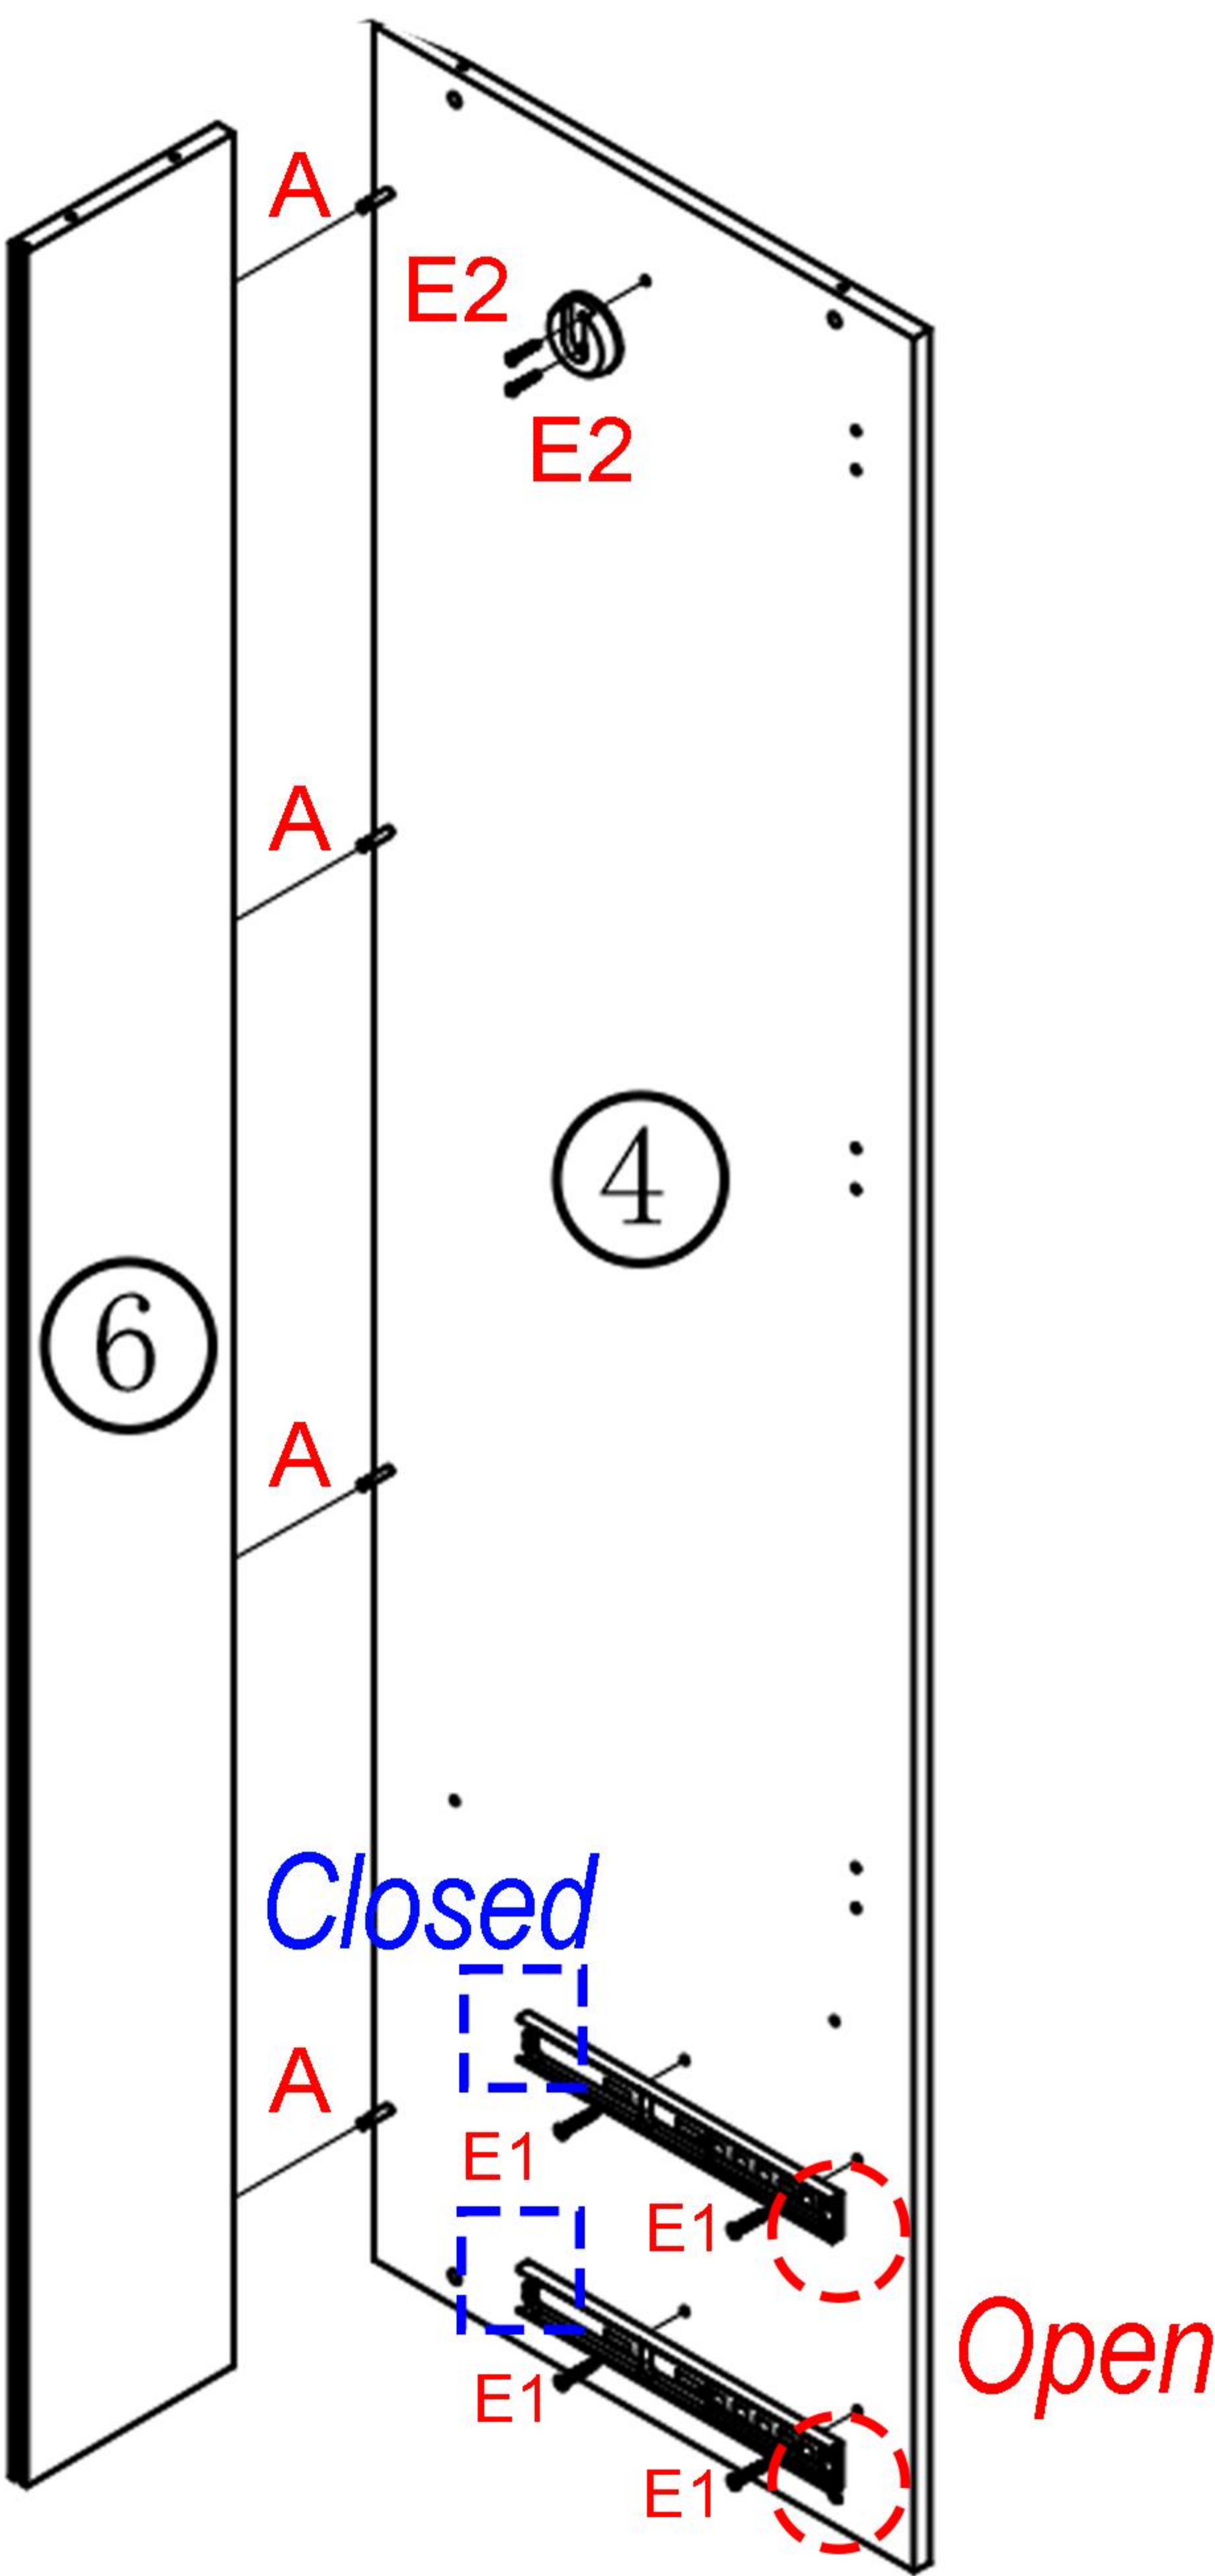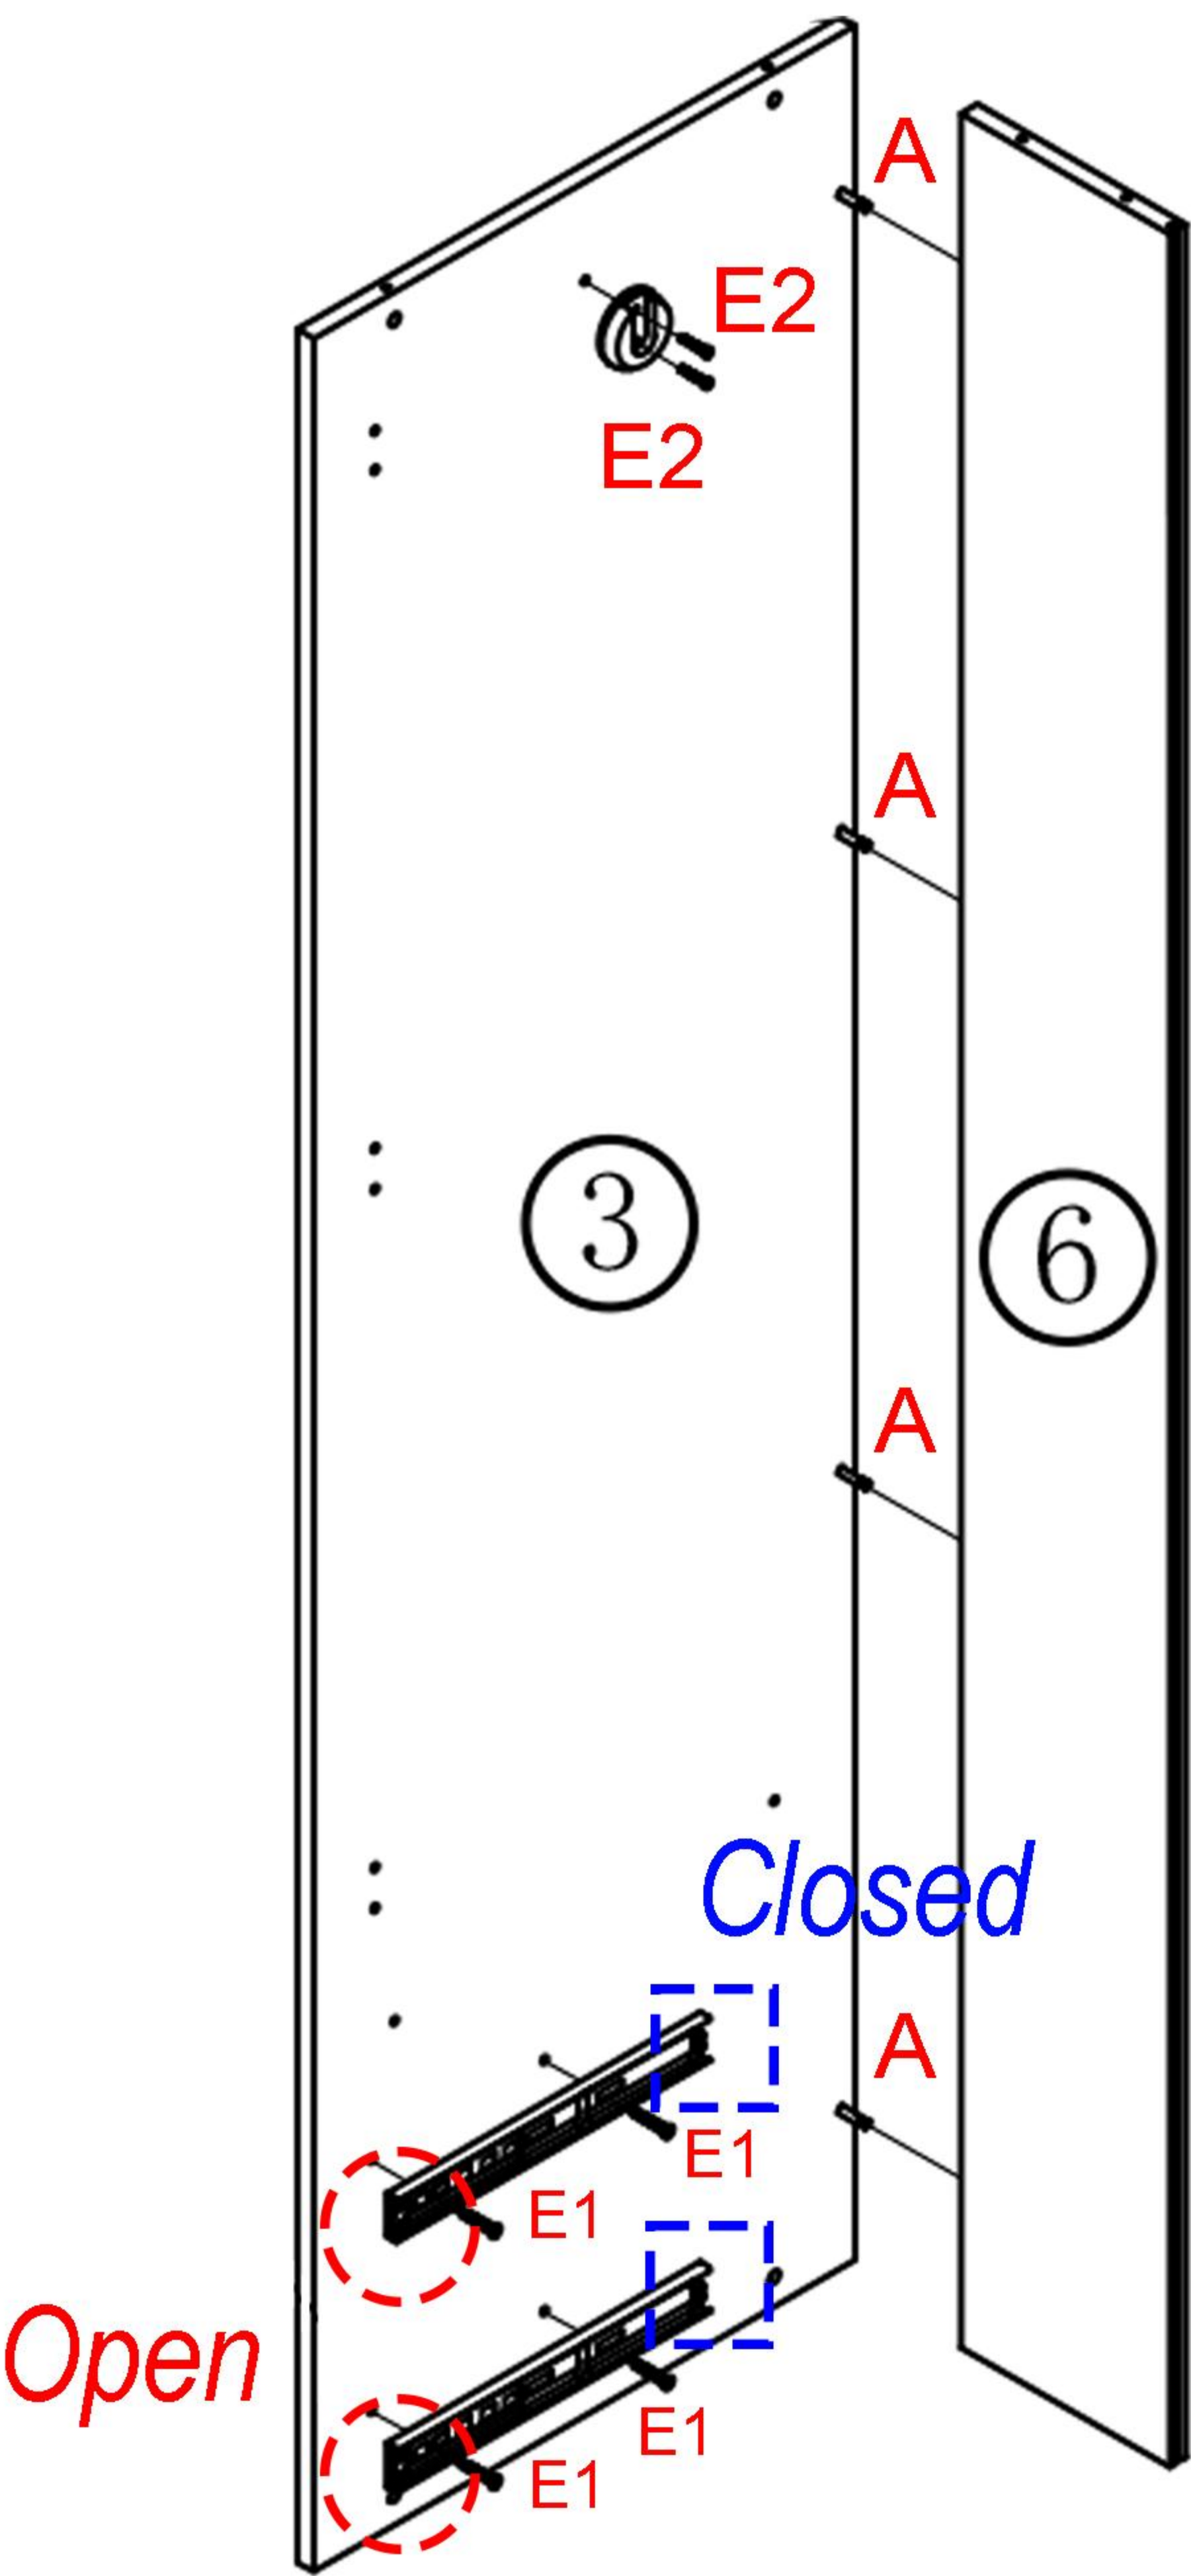

Install the H main body parts, leaving a 1.7cm gap from the edge.


Step 2:

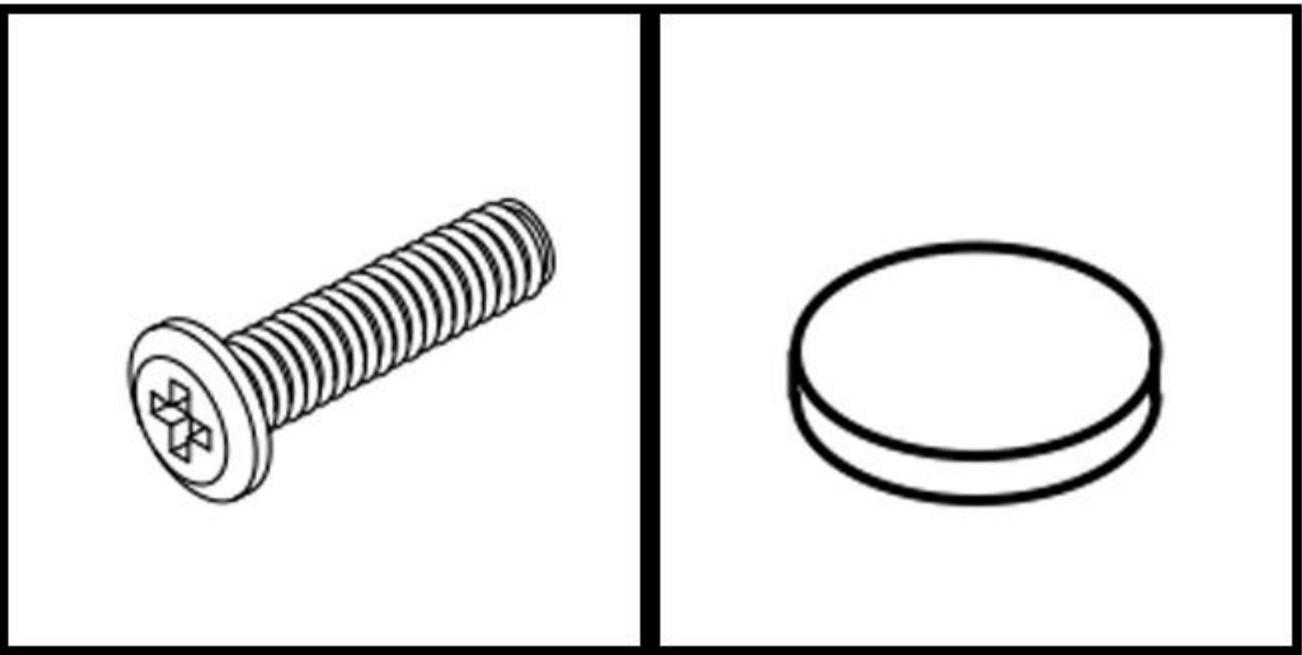

D

J


Place the grooved side facing up.

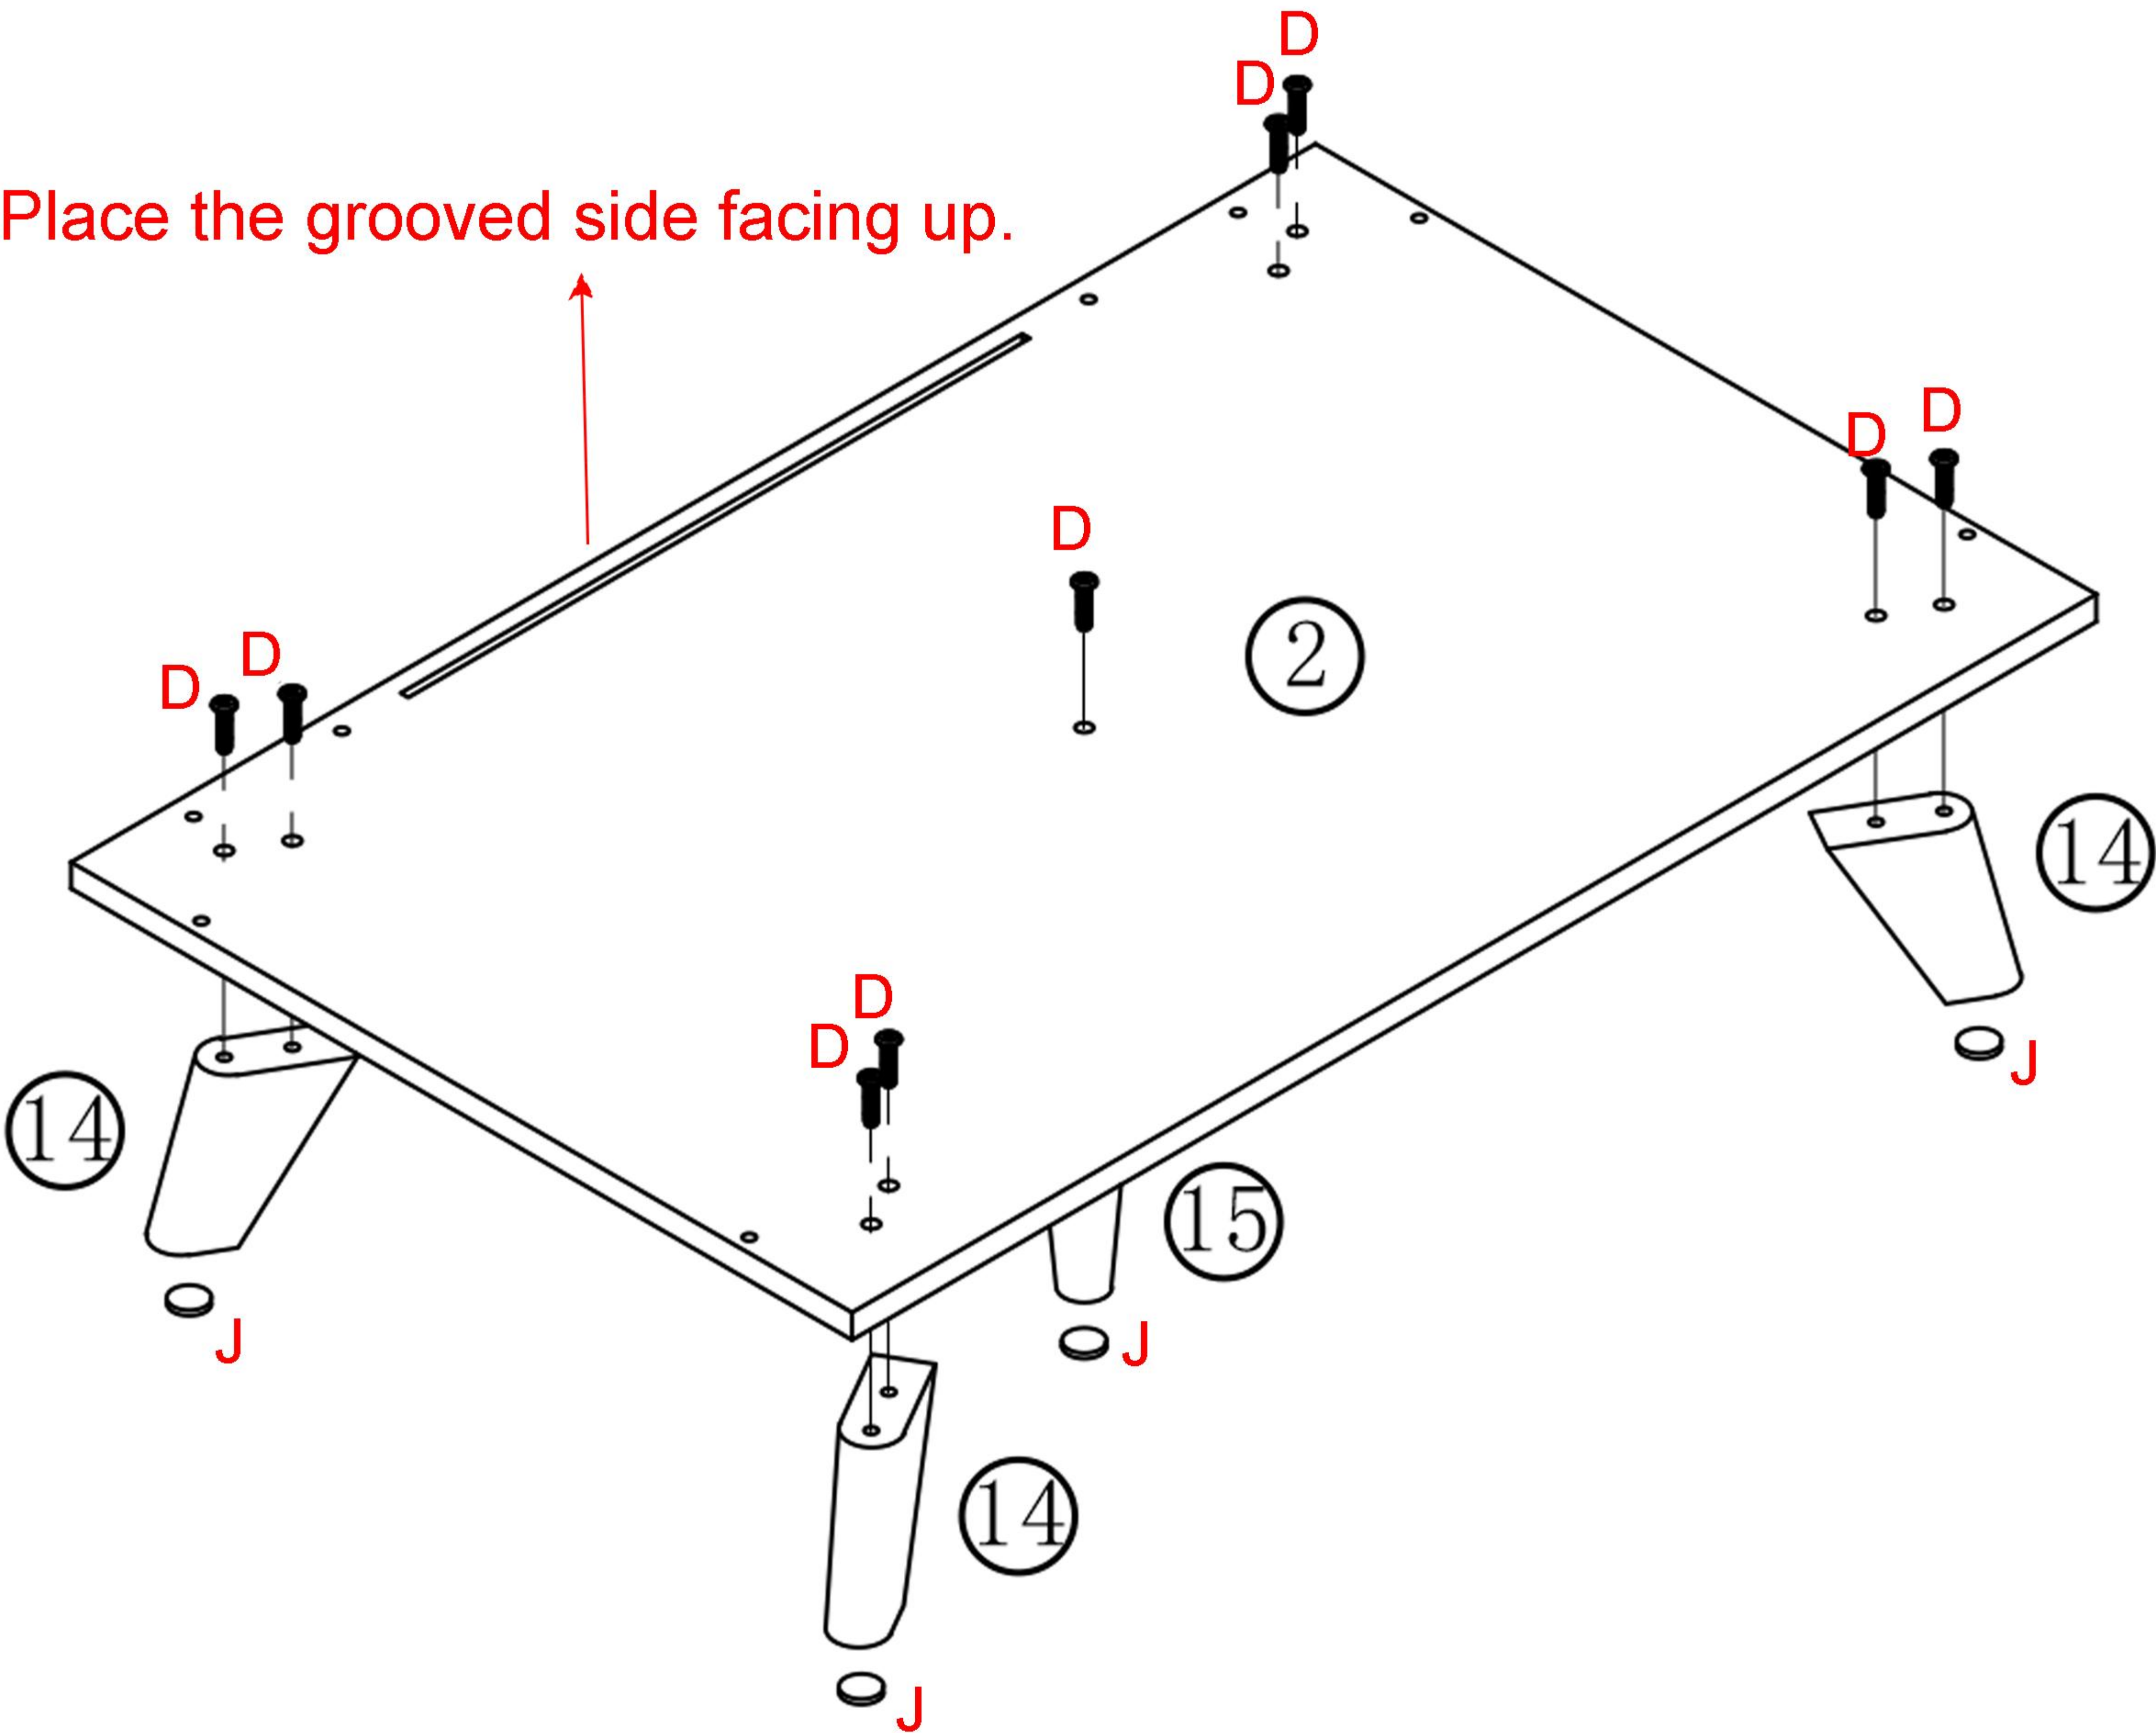

Step 3:




B

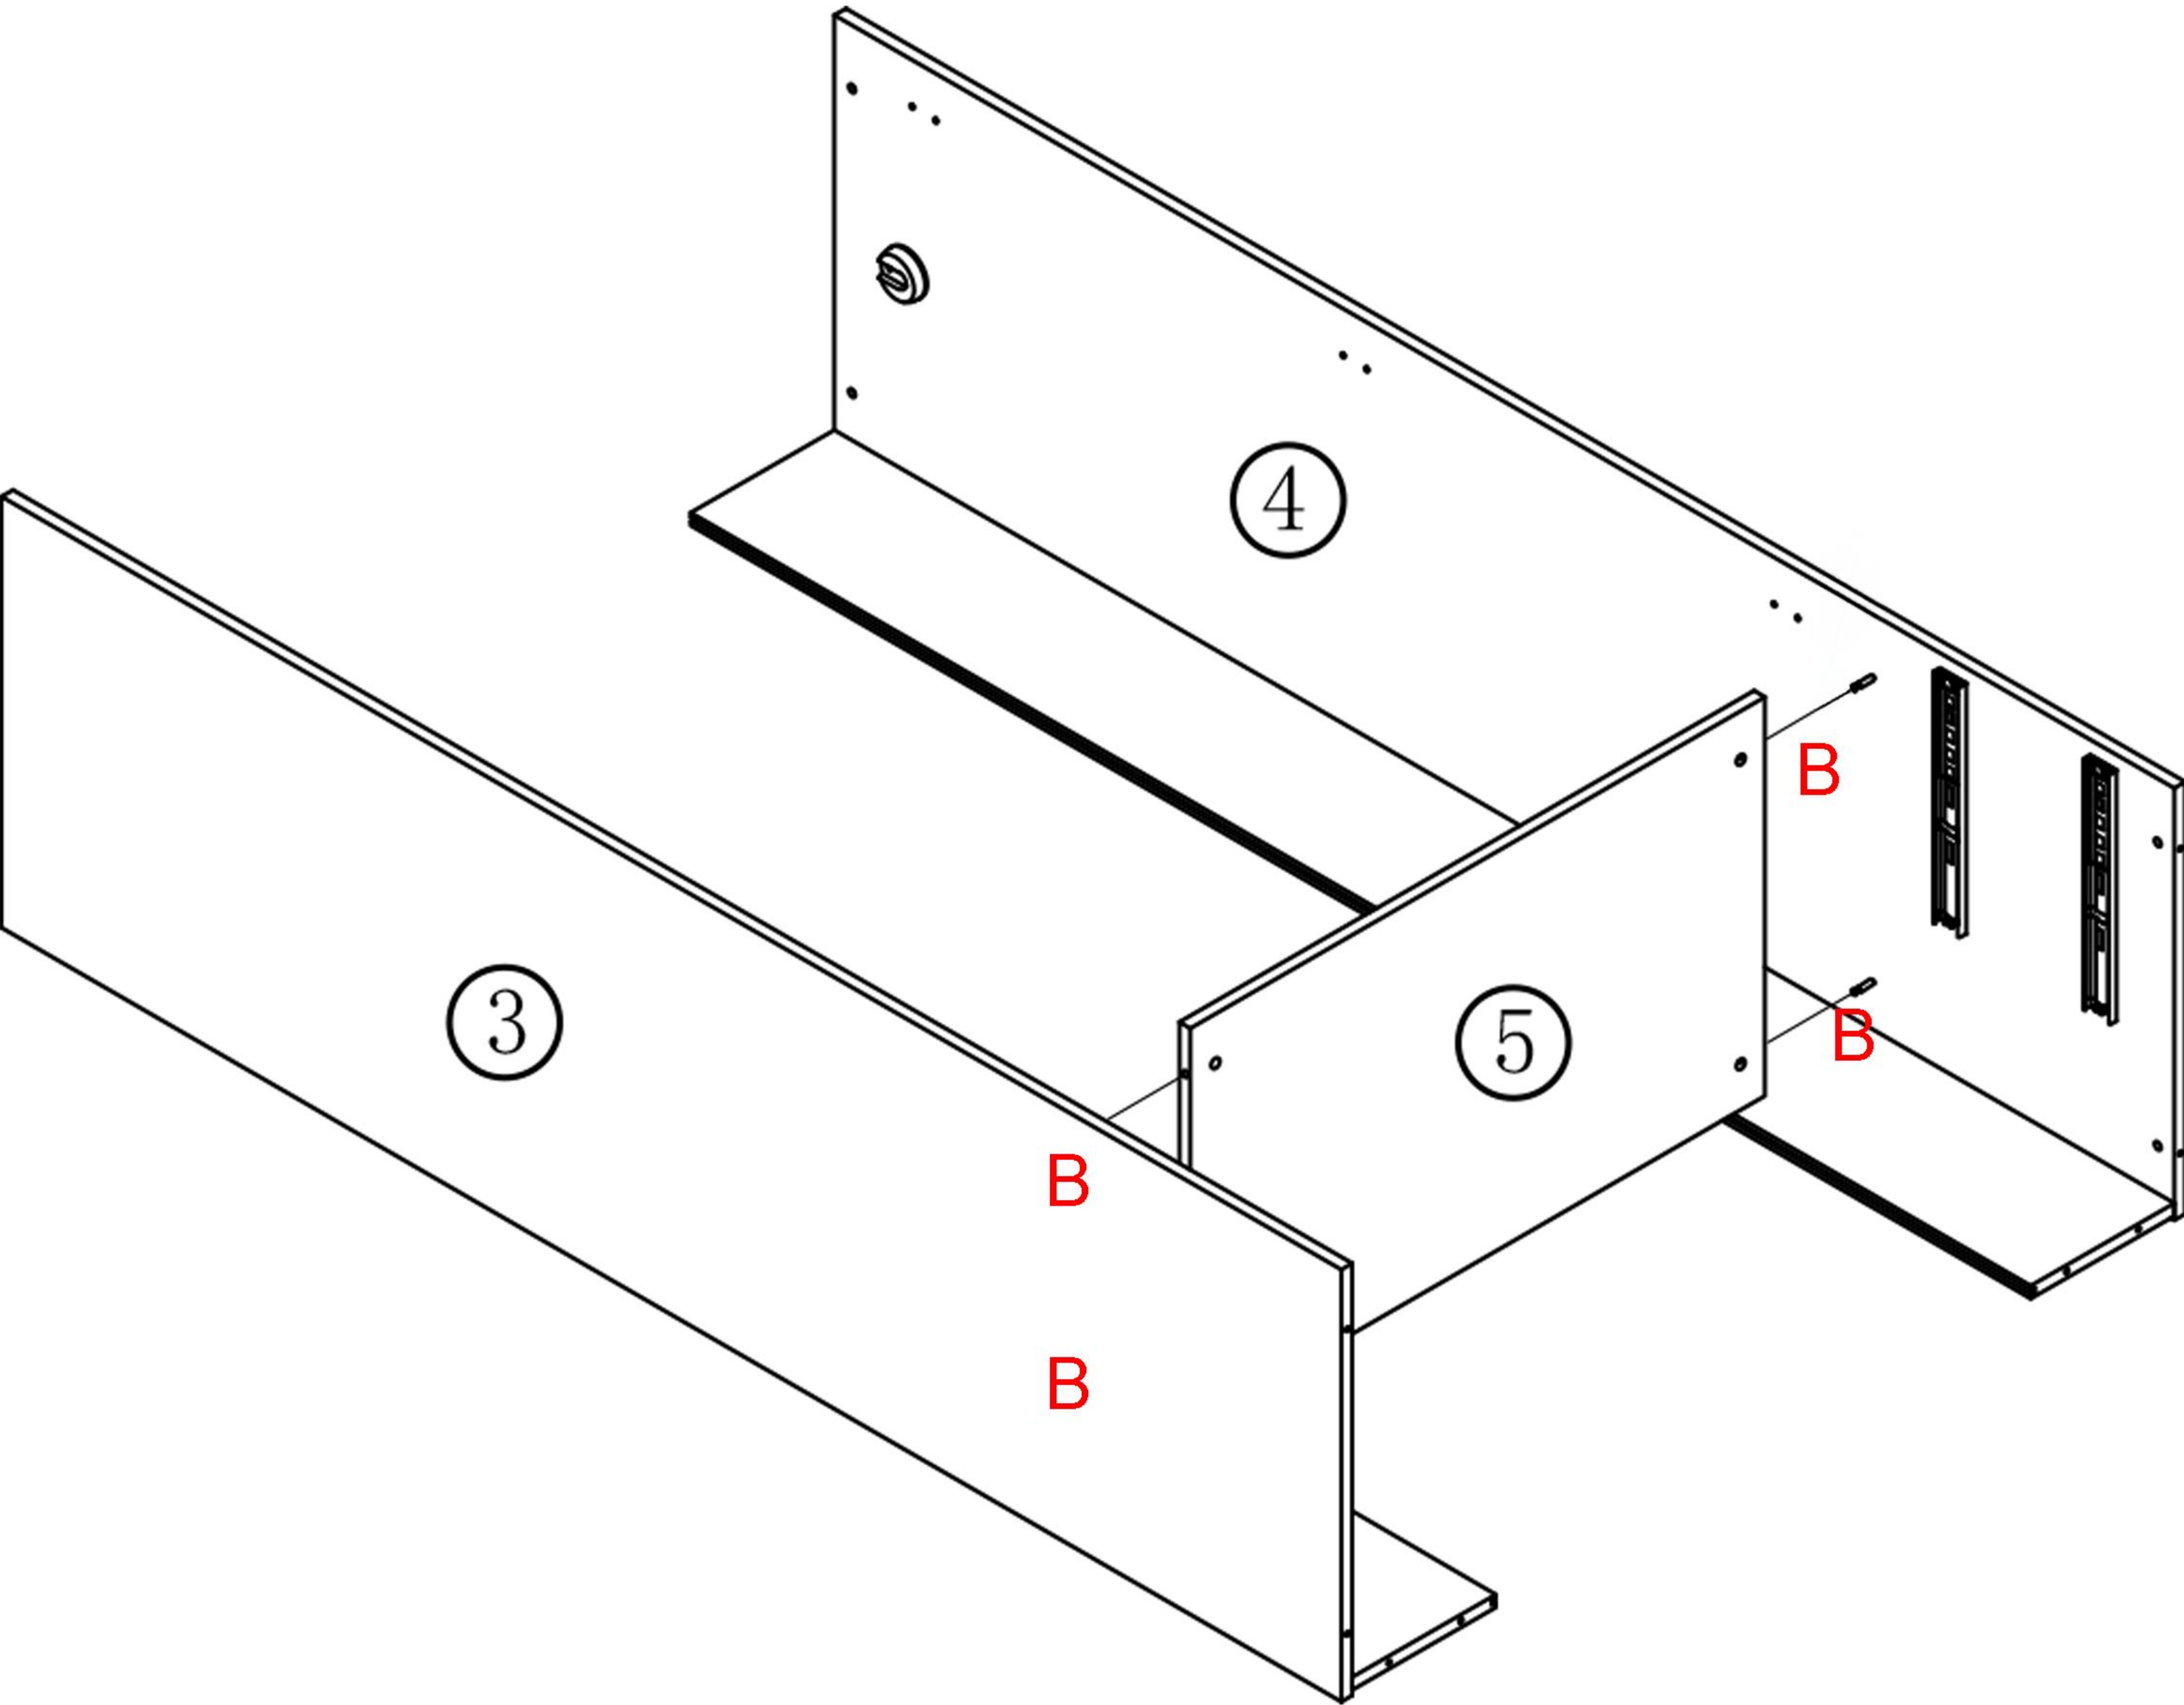


Step 4:



B

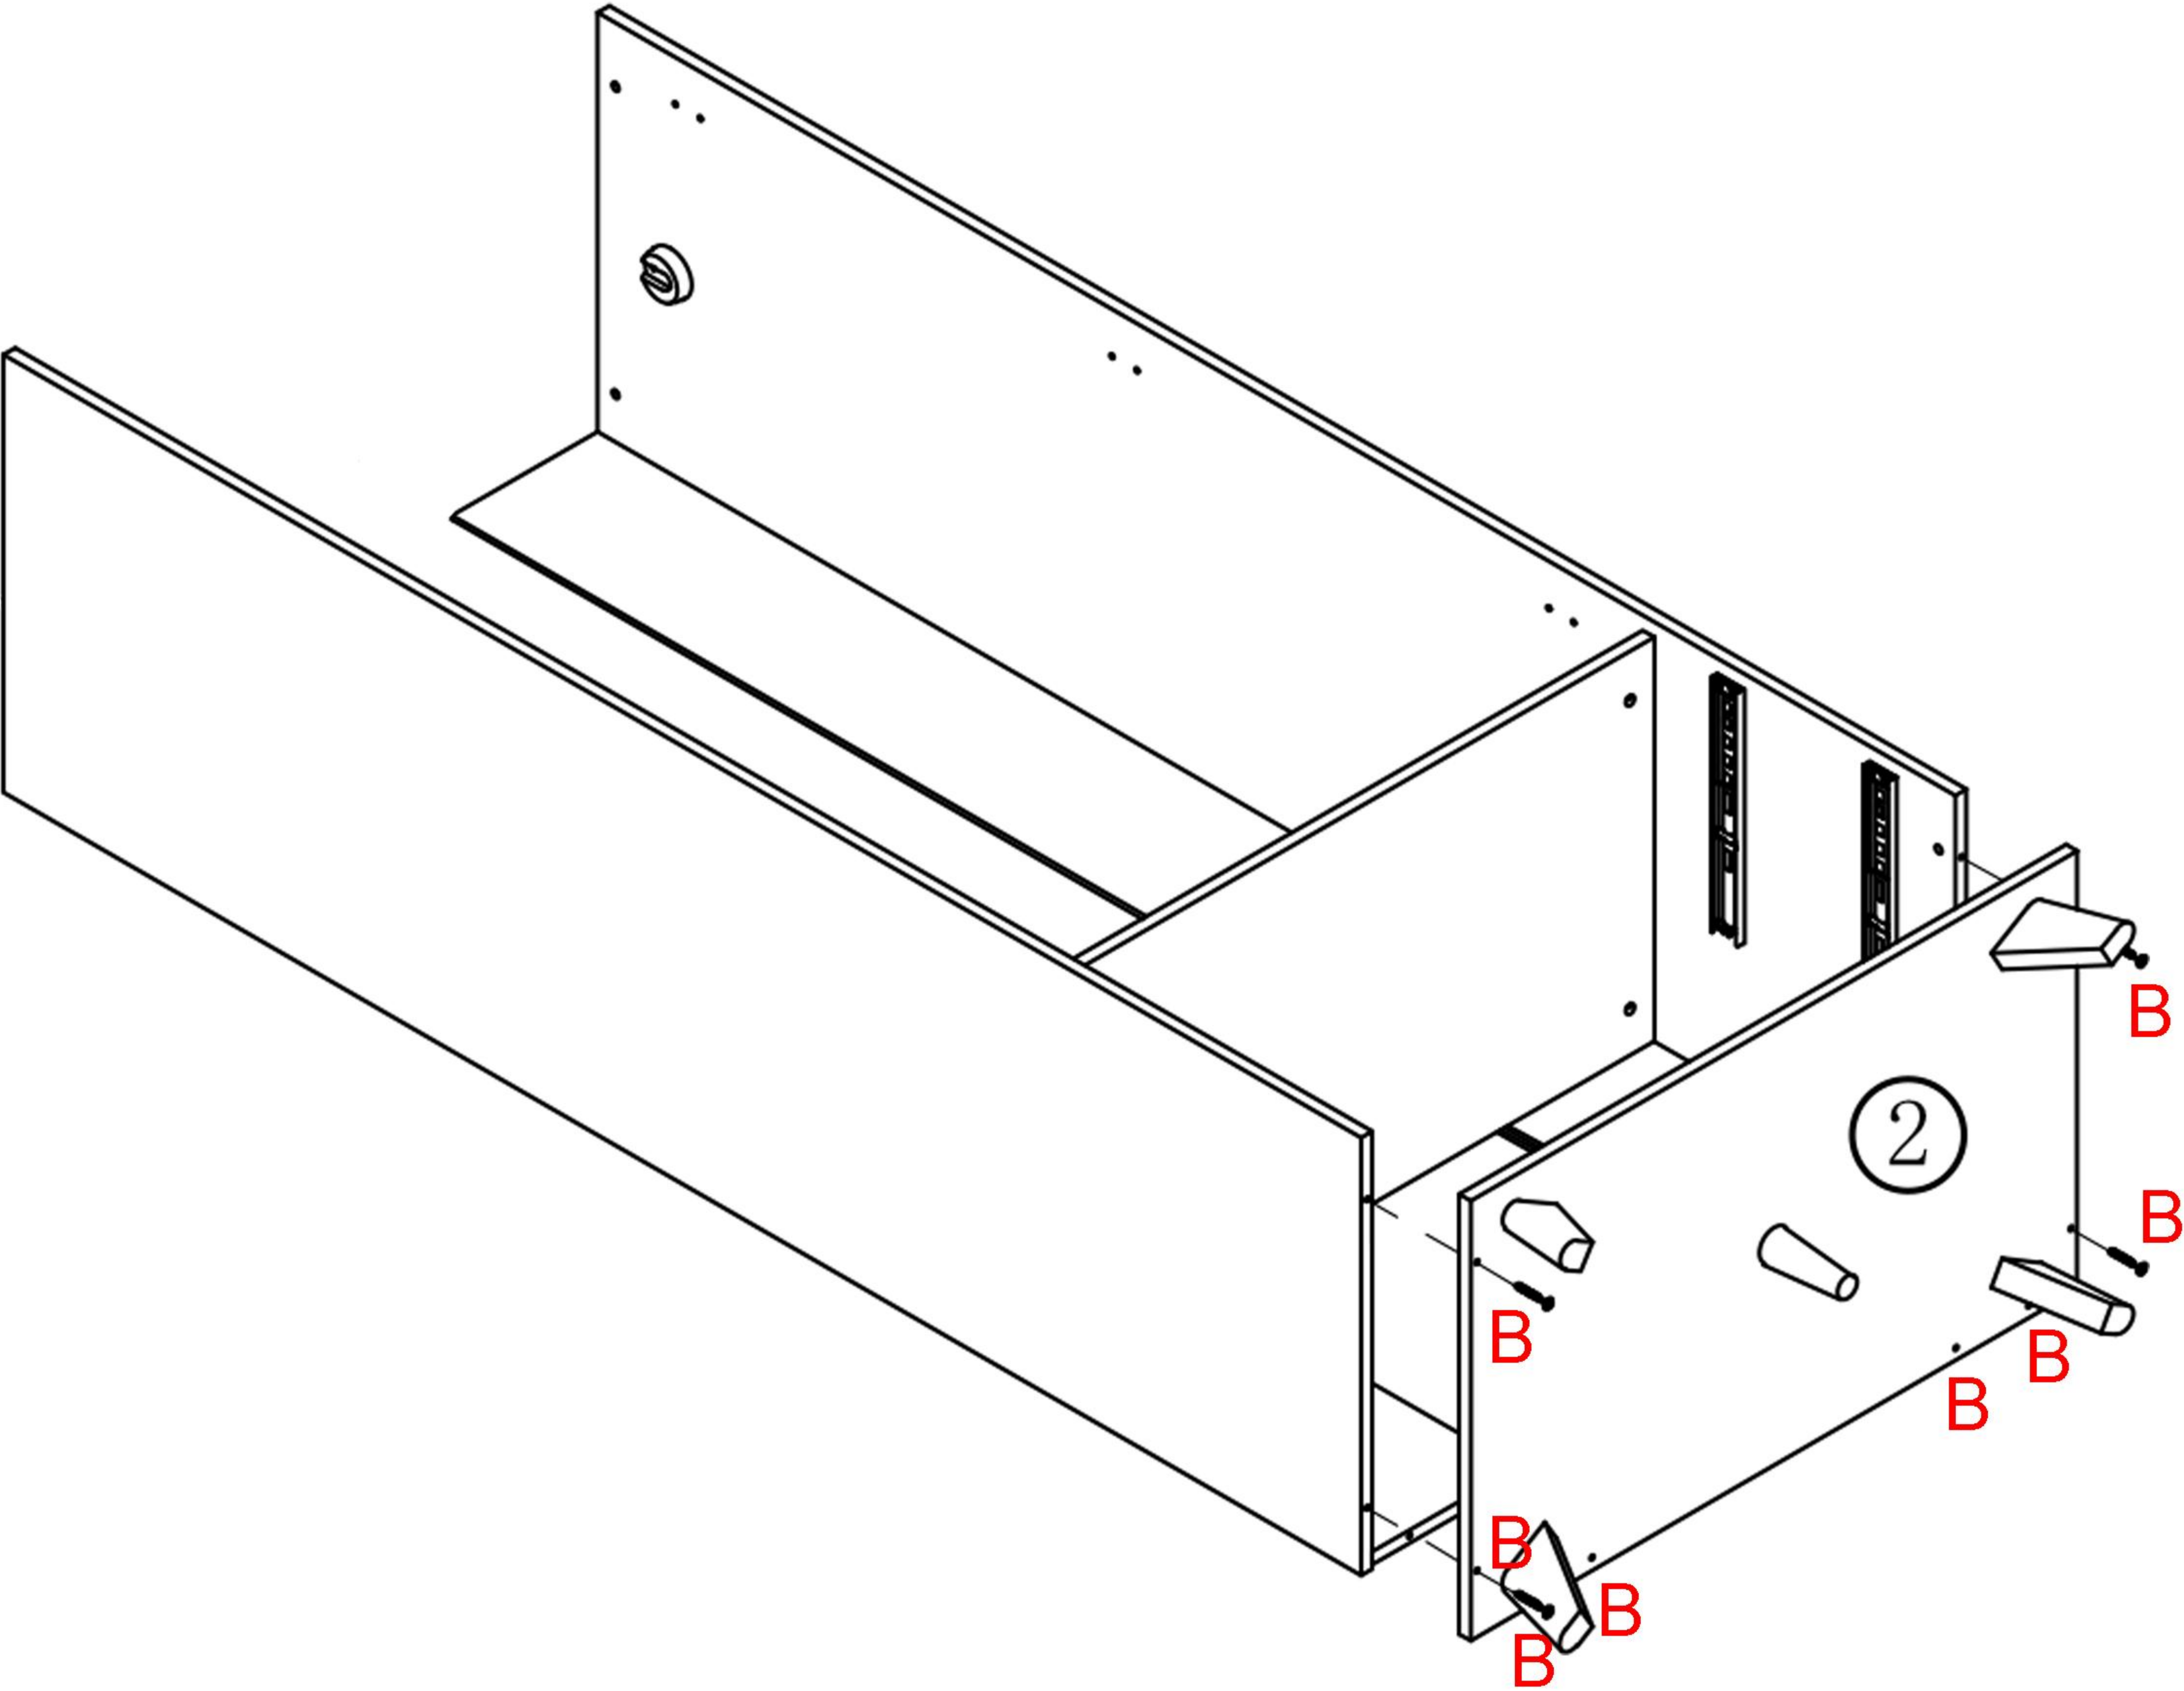


Step 5:

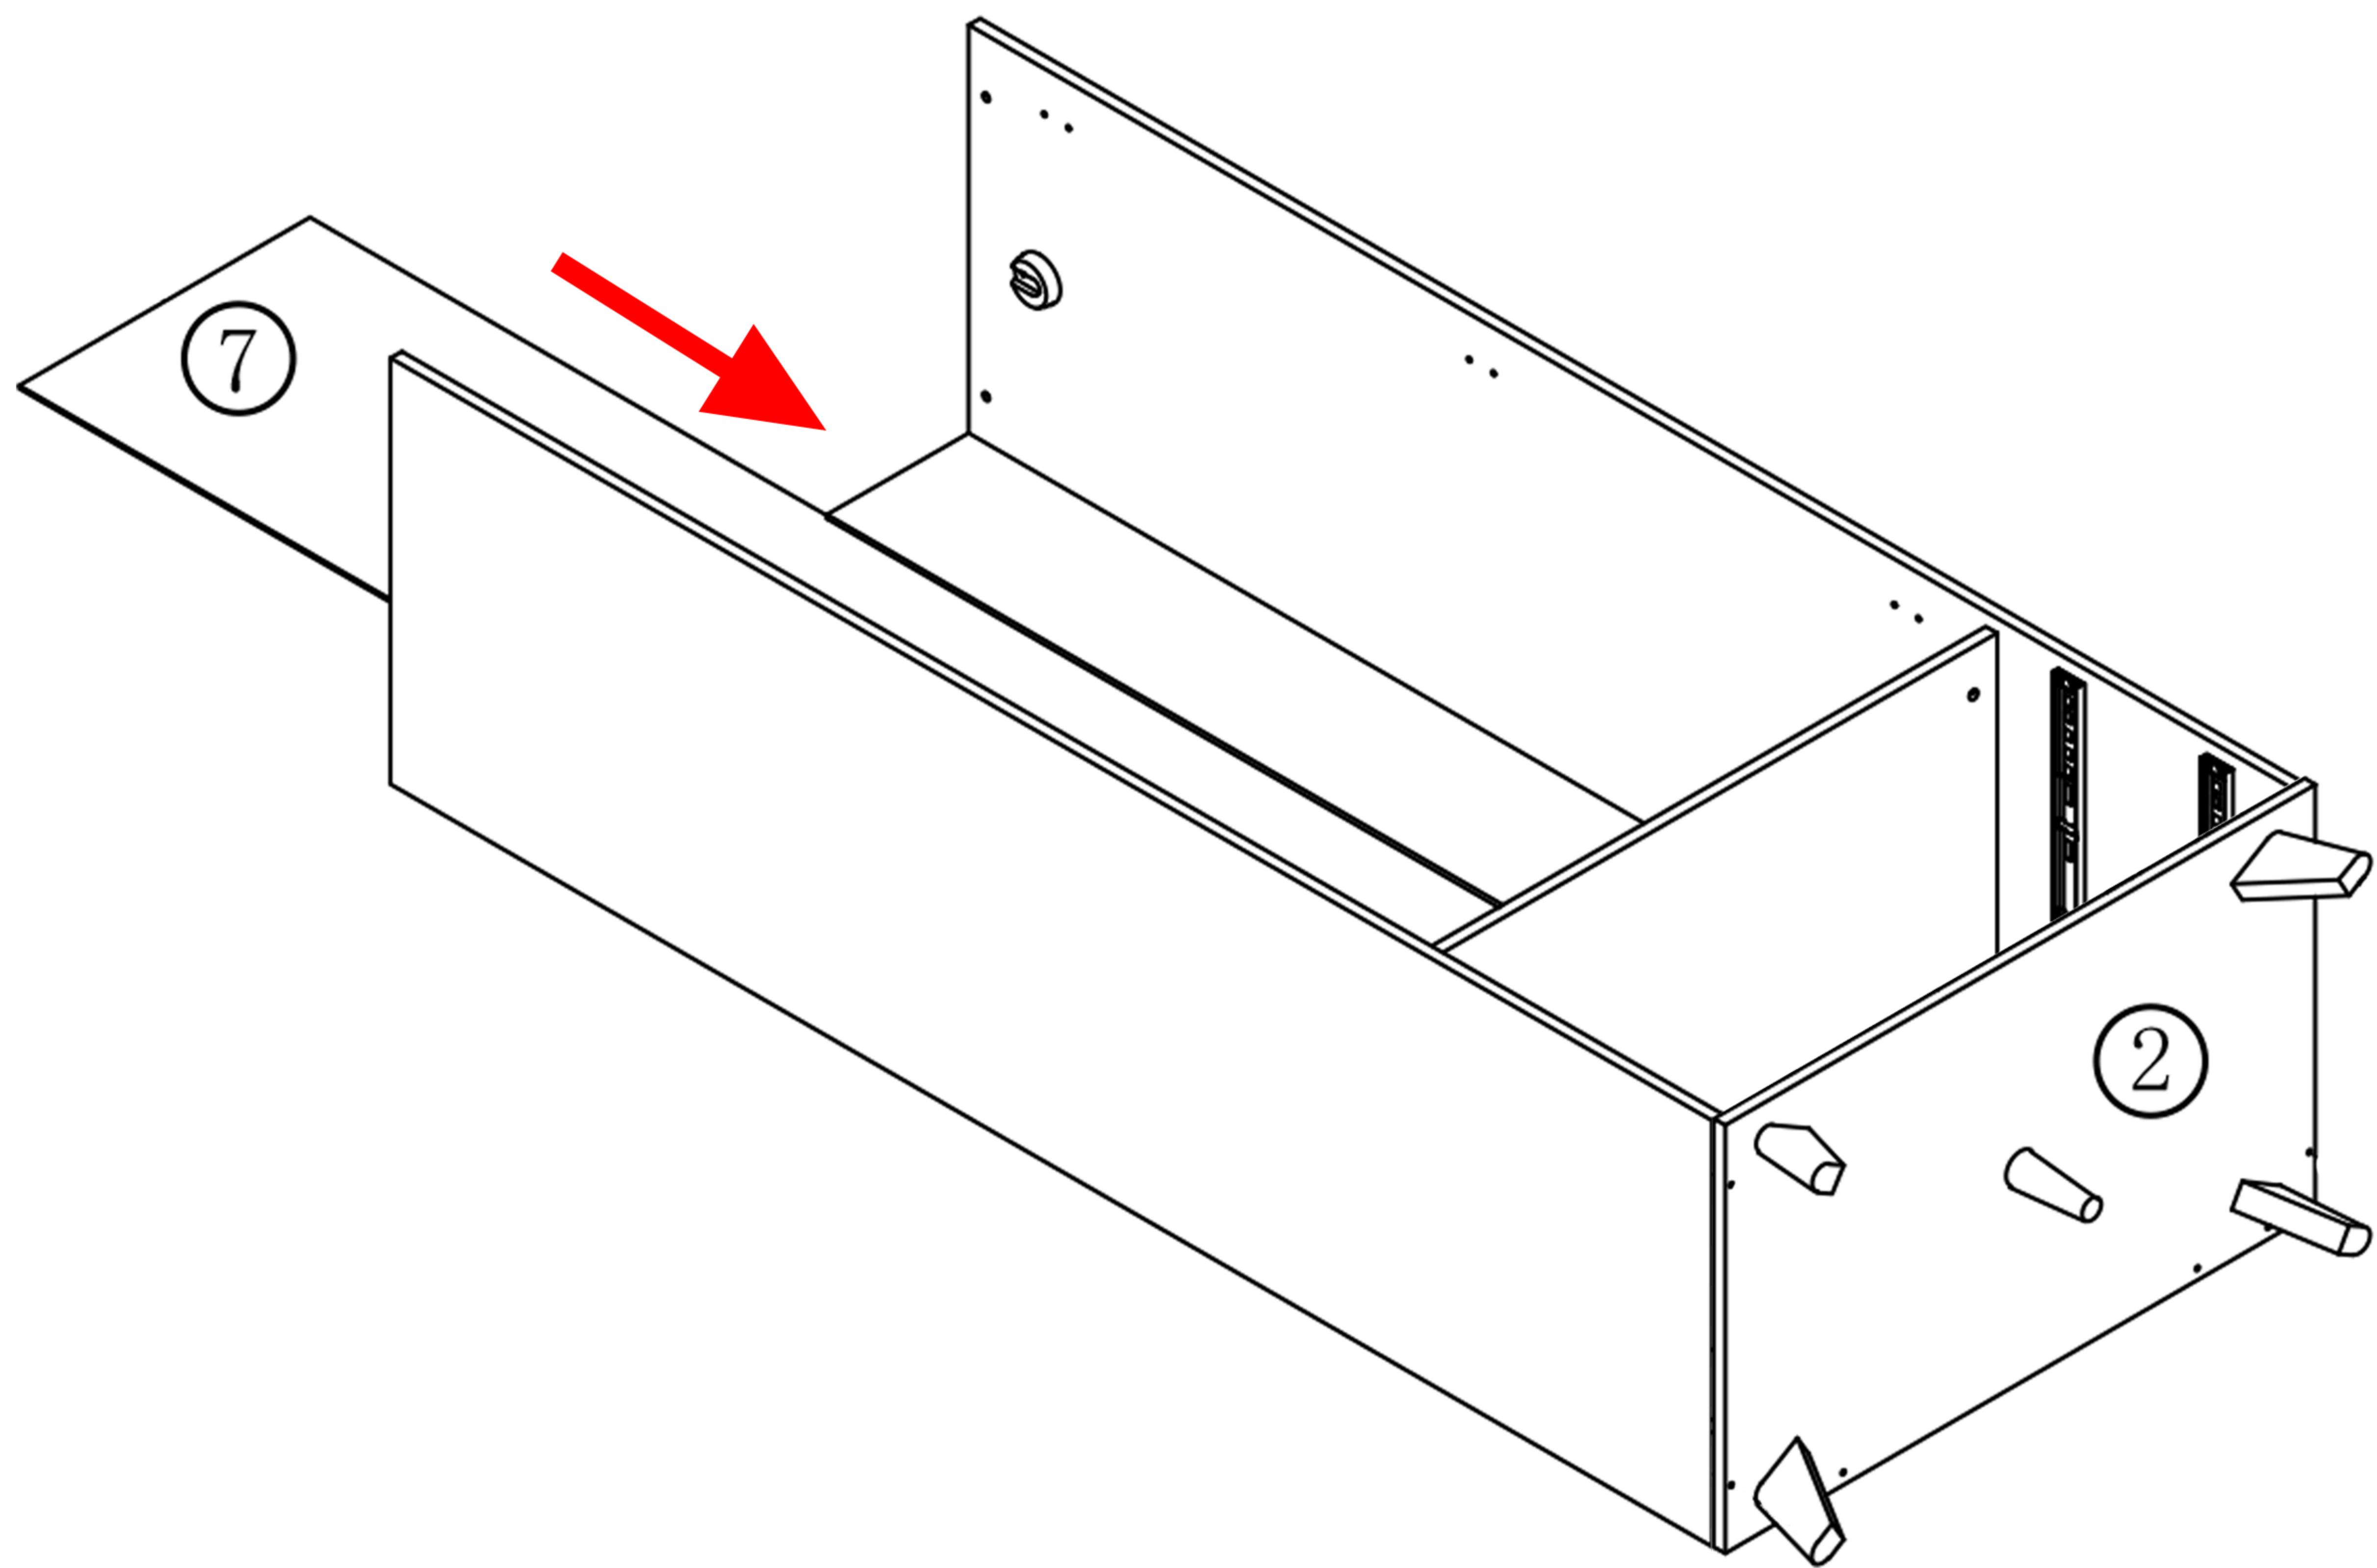

Step 6:




B

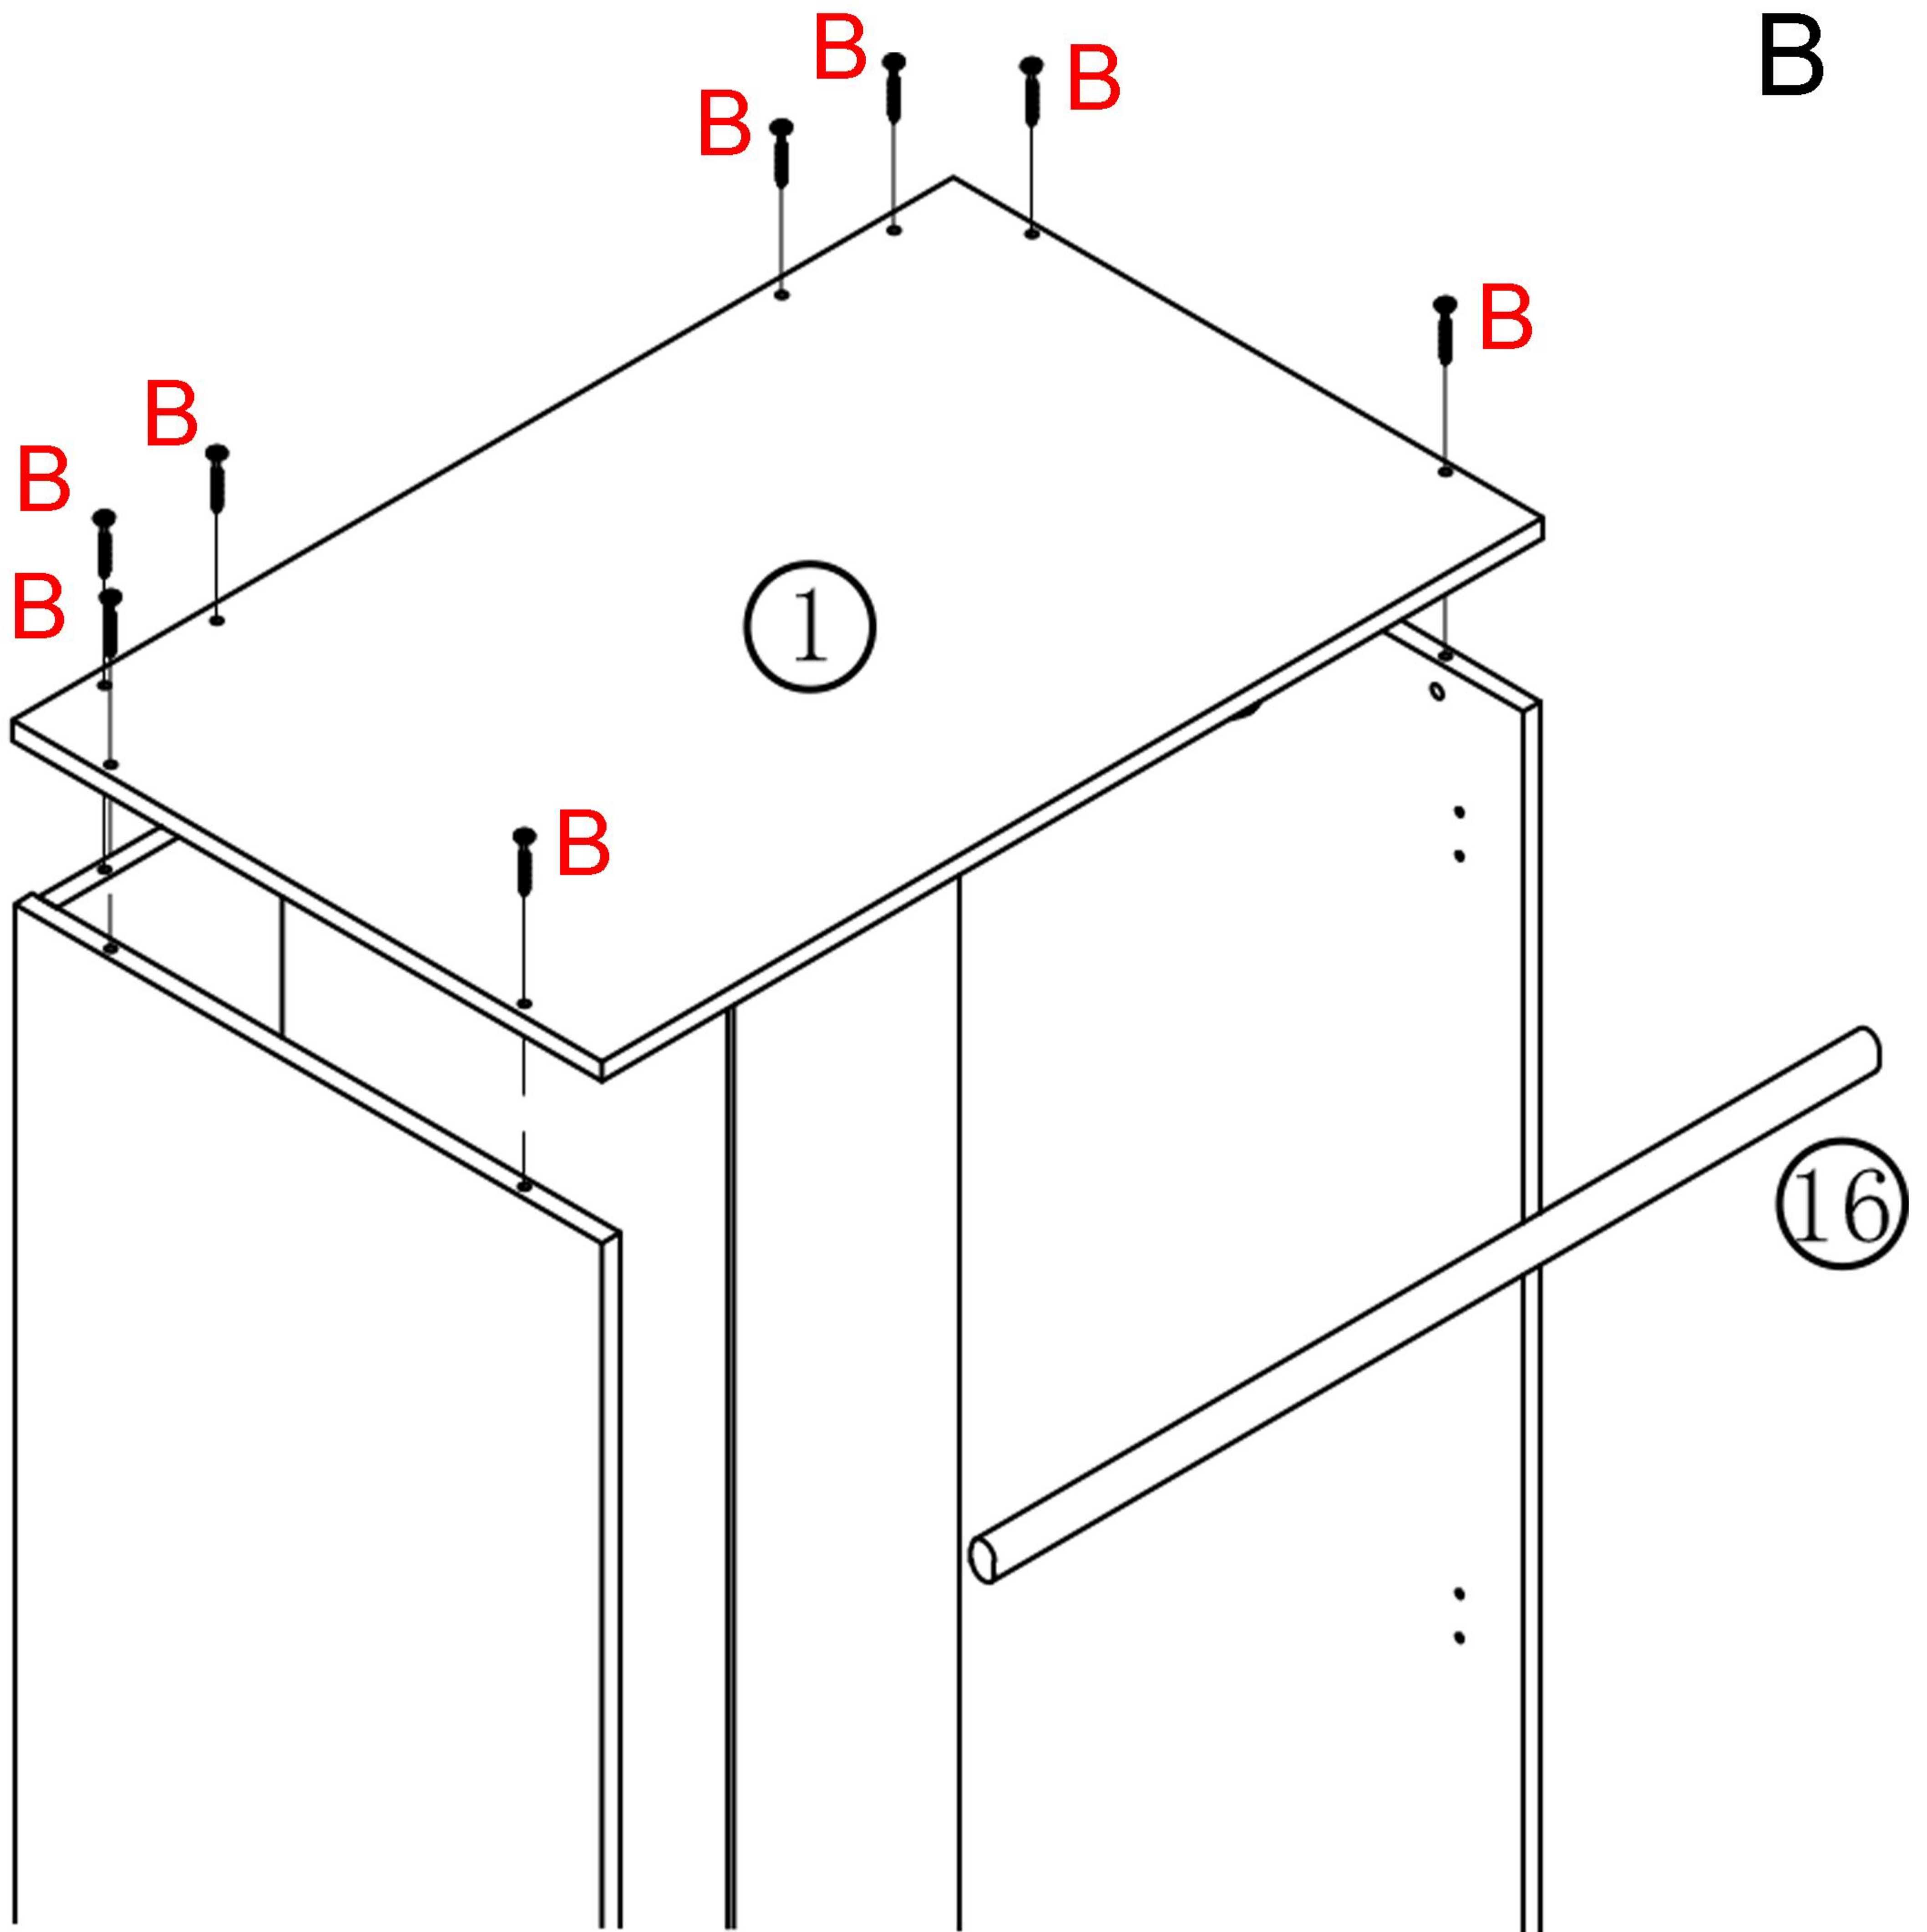

After installing the top panel ①, insert the rod into the wardrobe rod support.

Step 7:

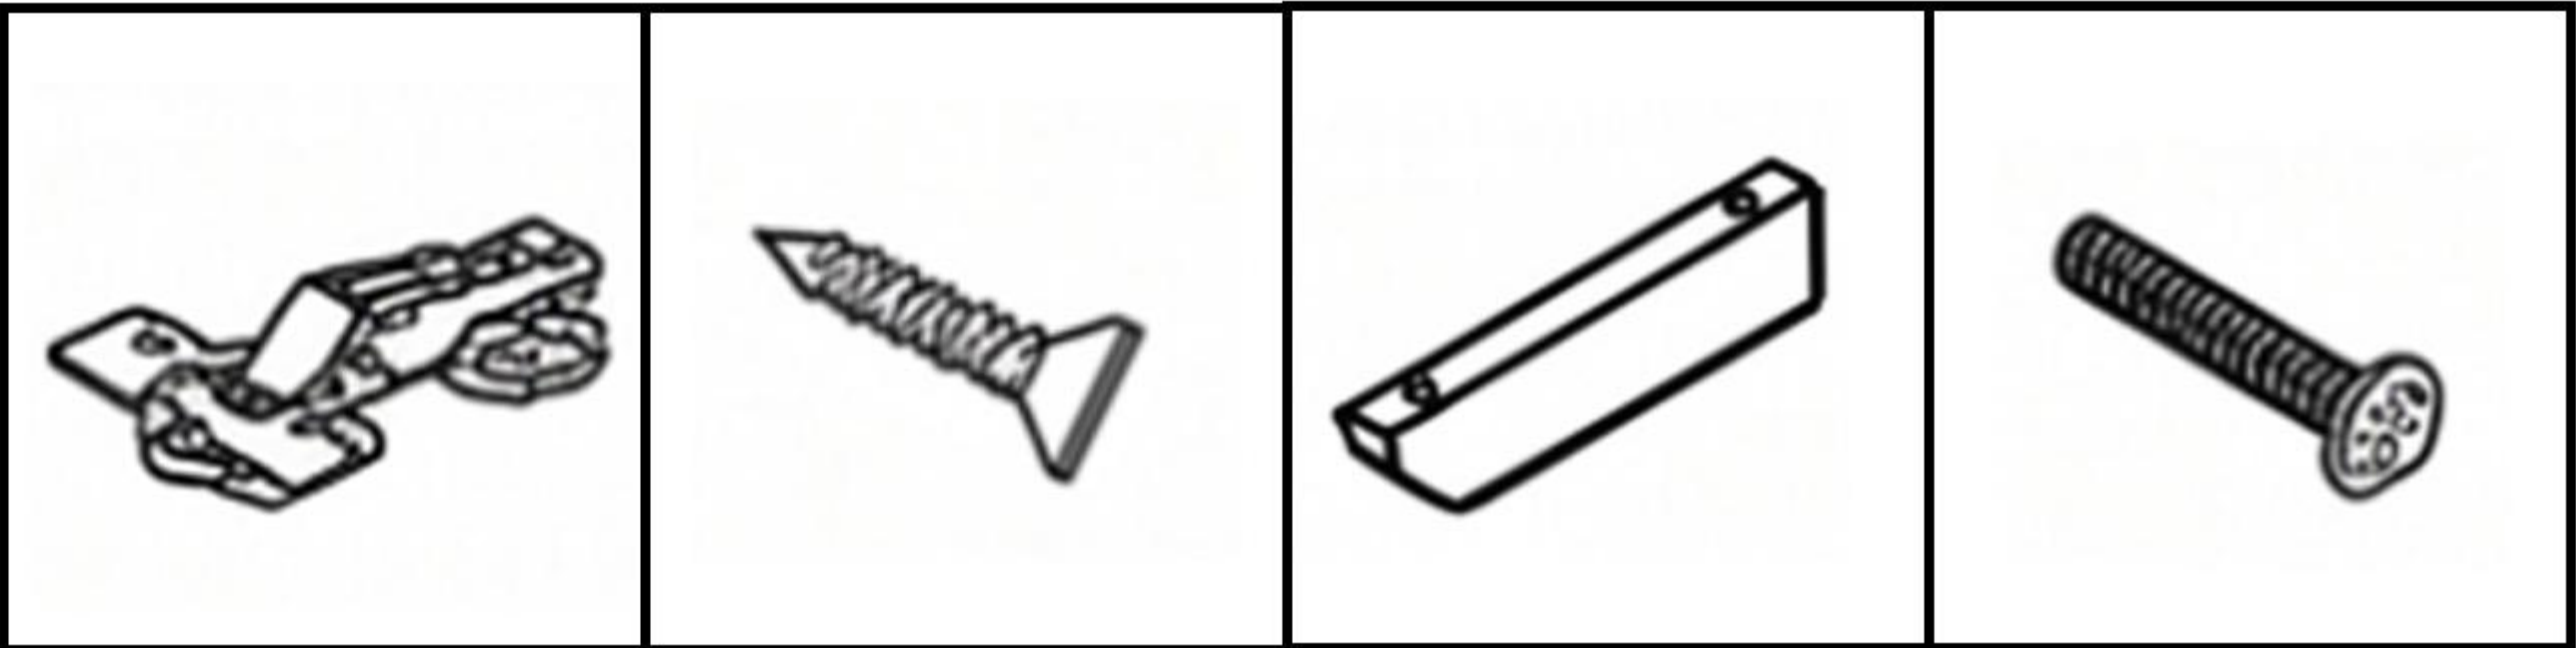


C

E1

F



G

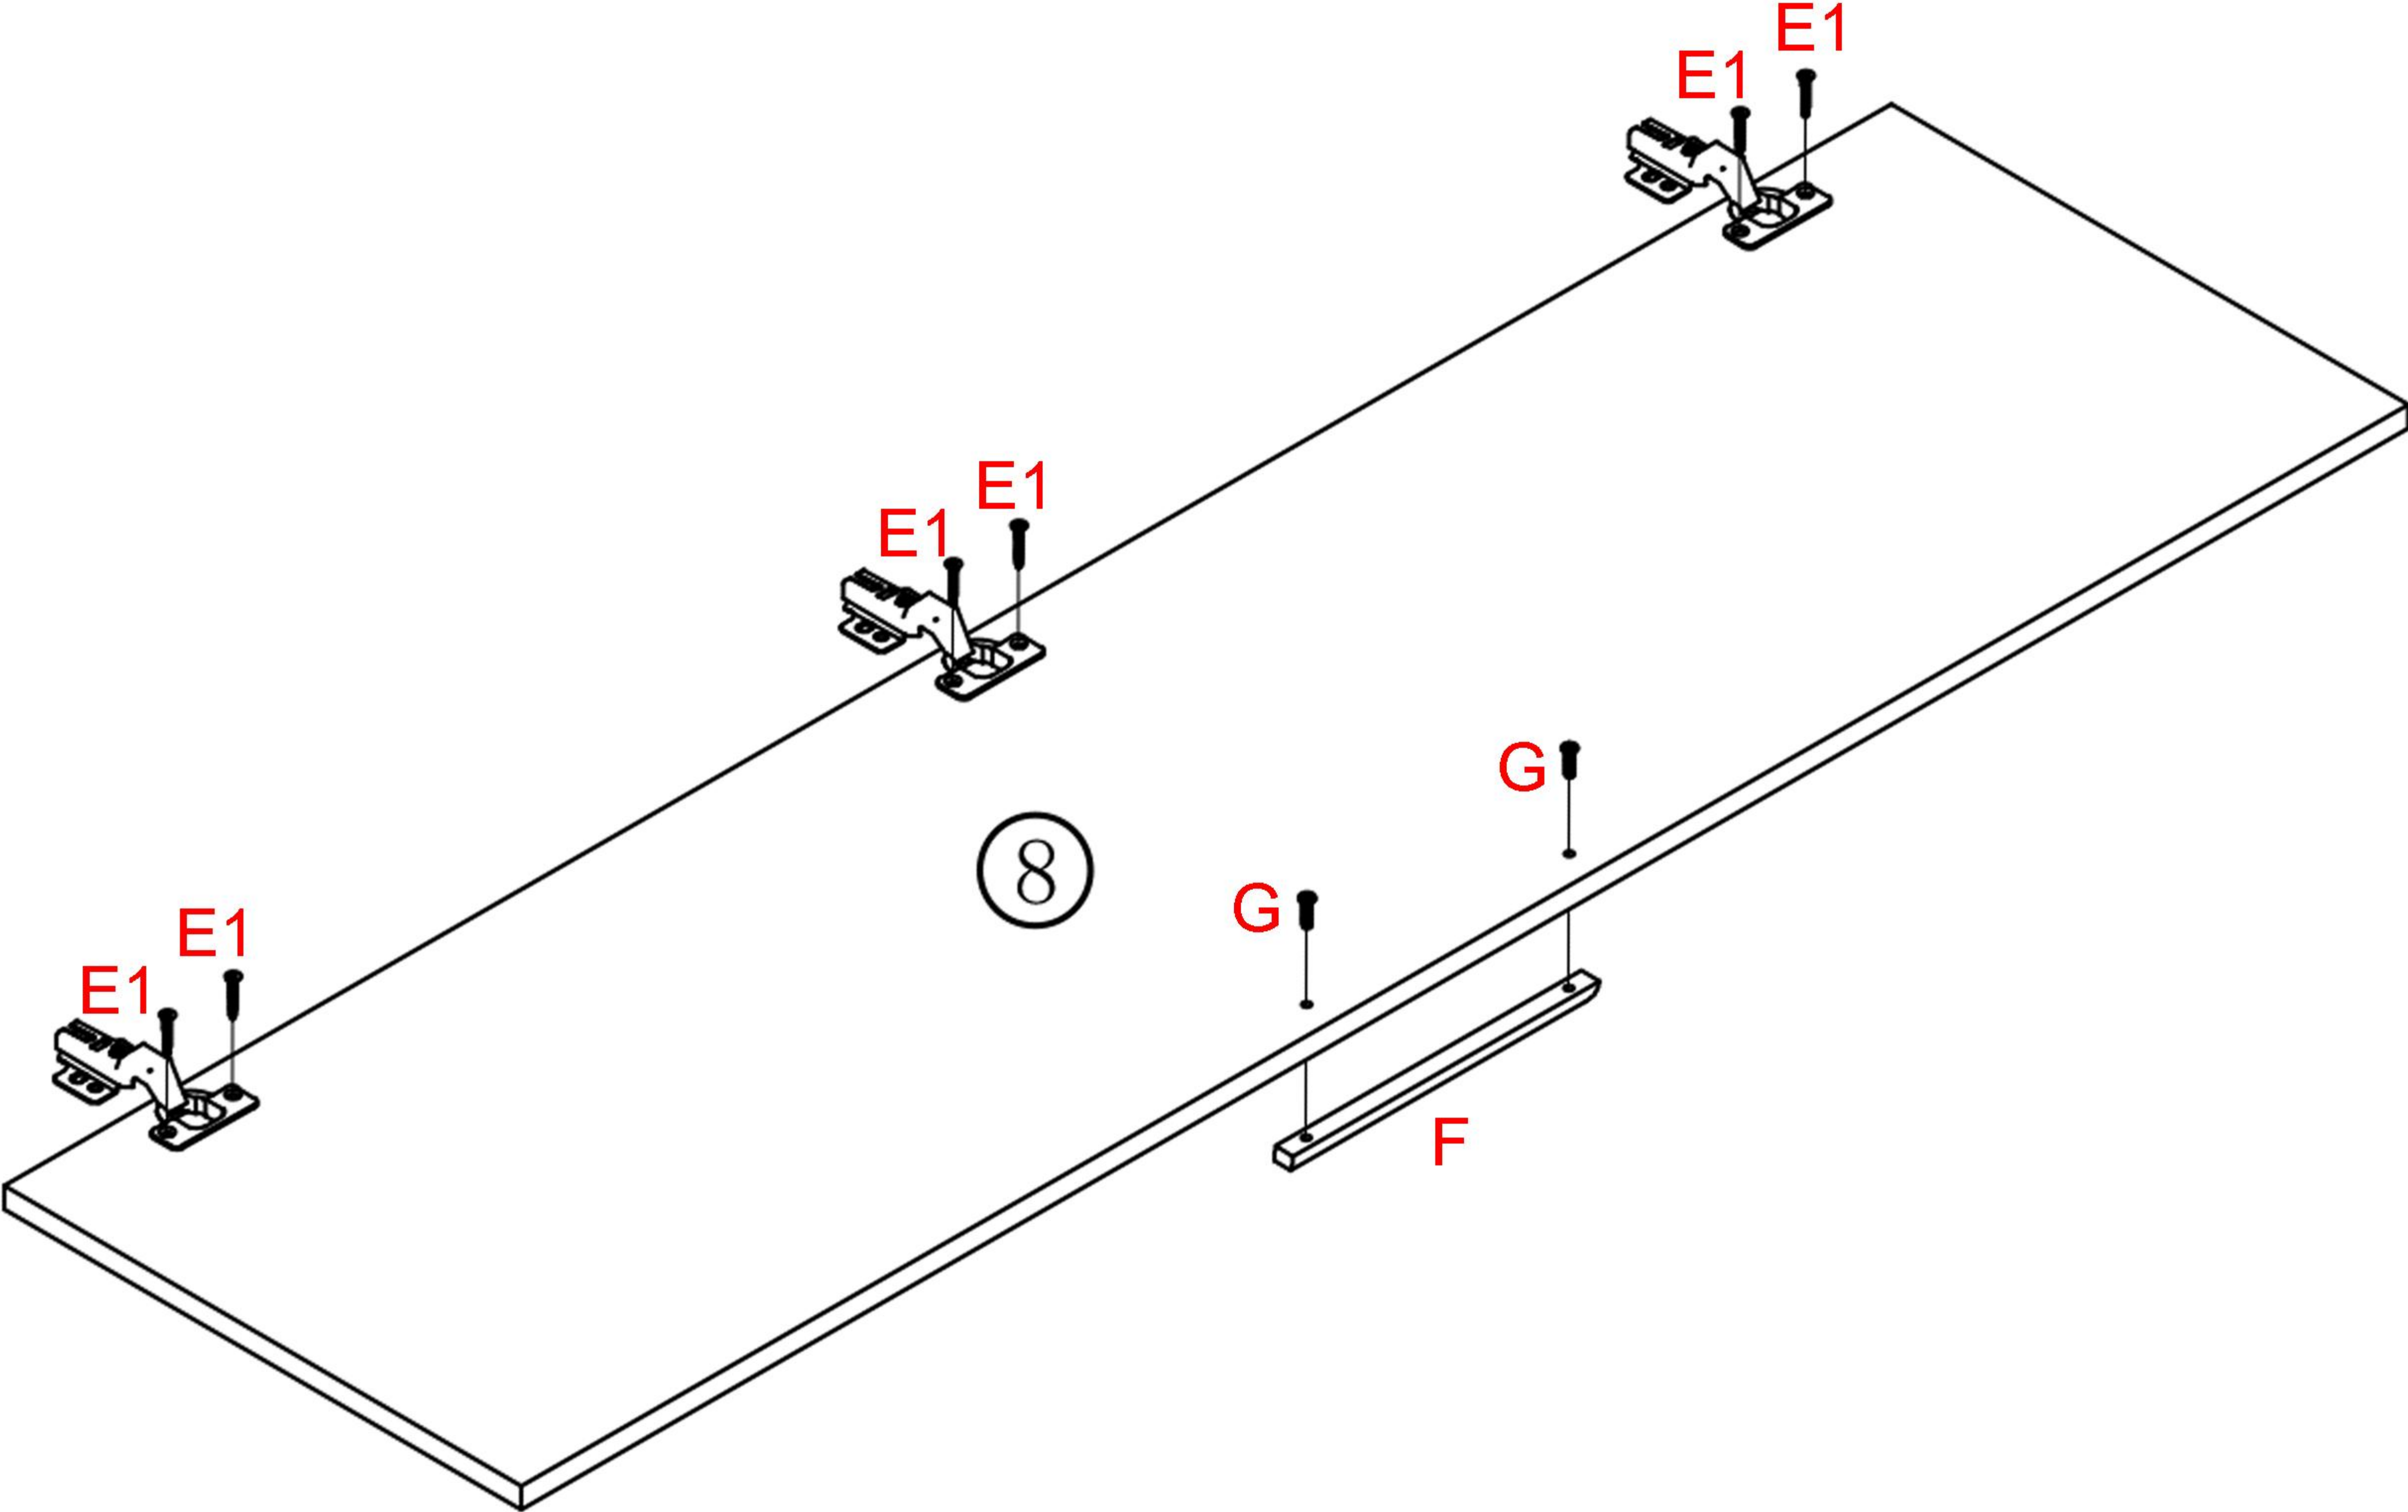

Step 8:




E1

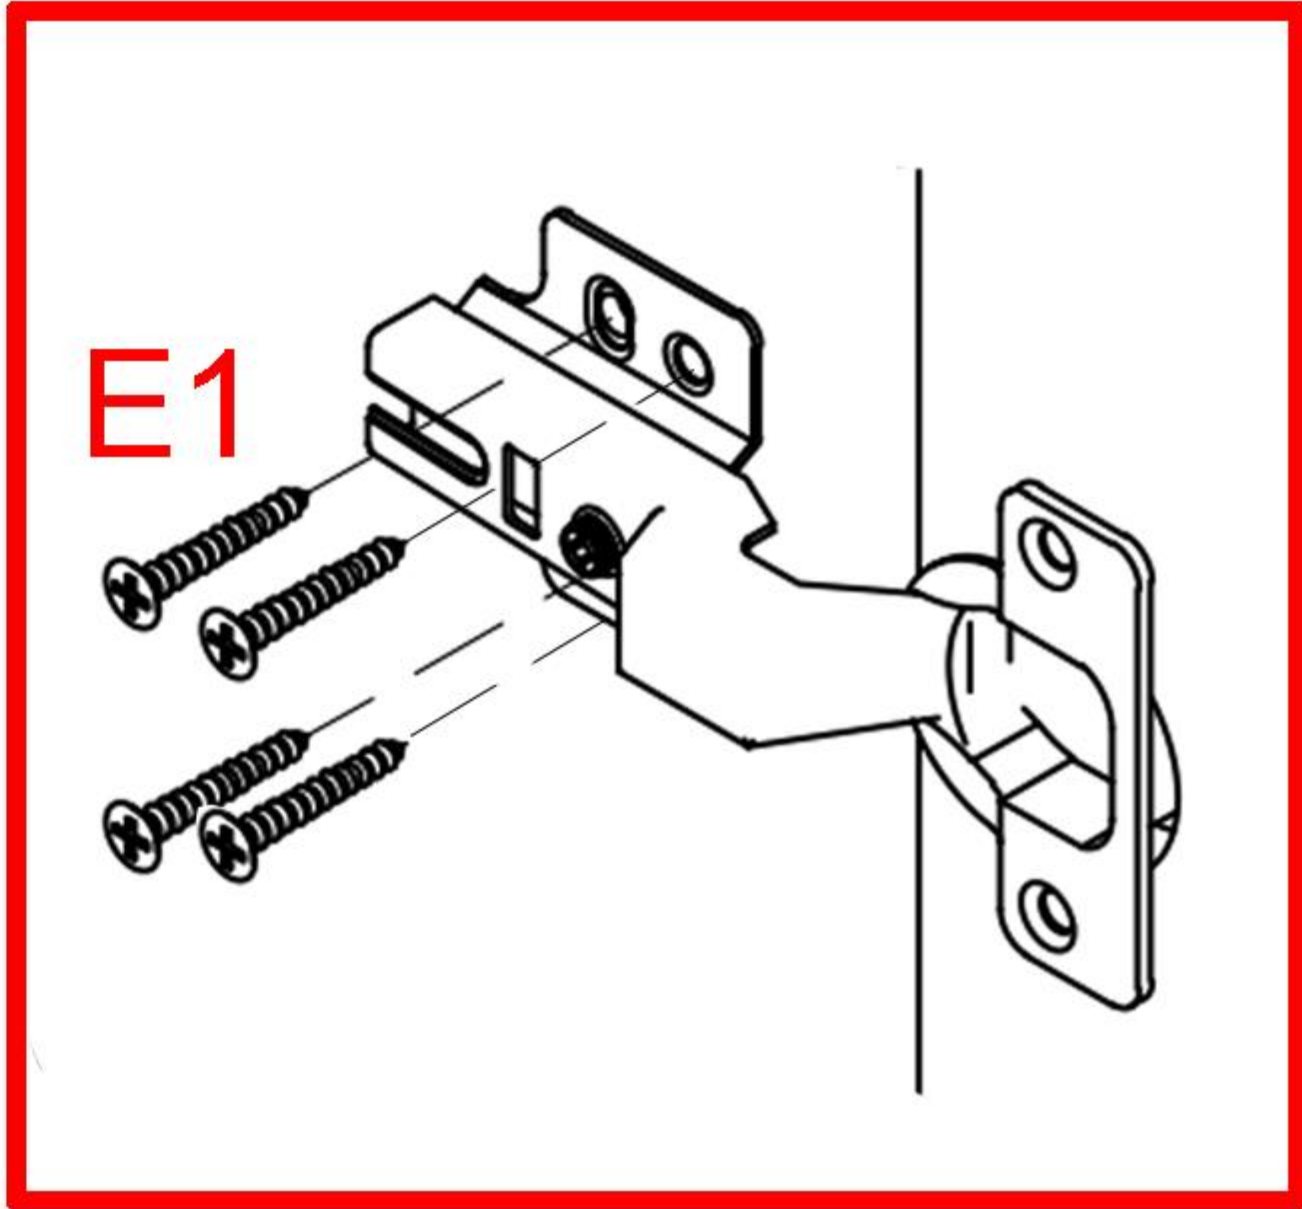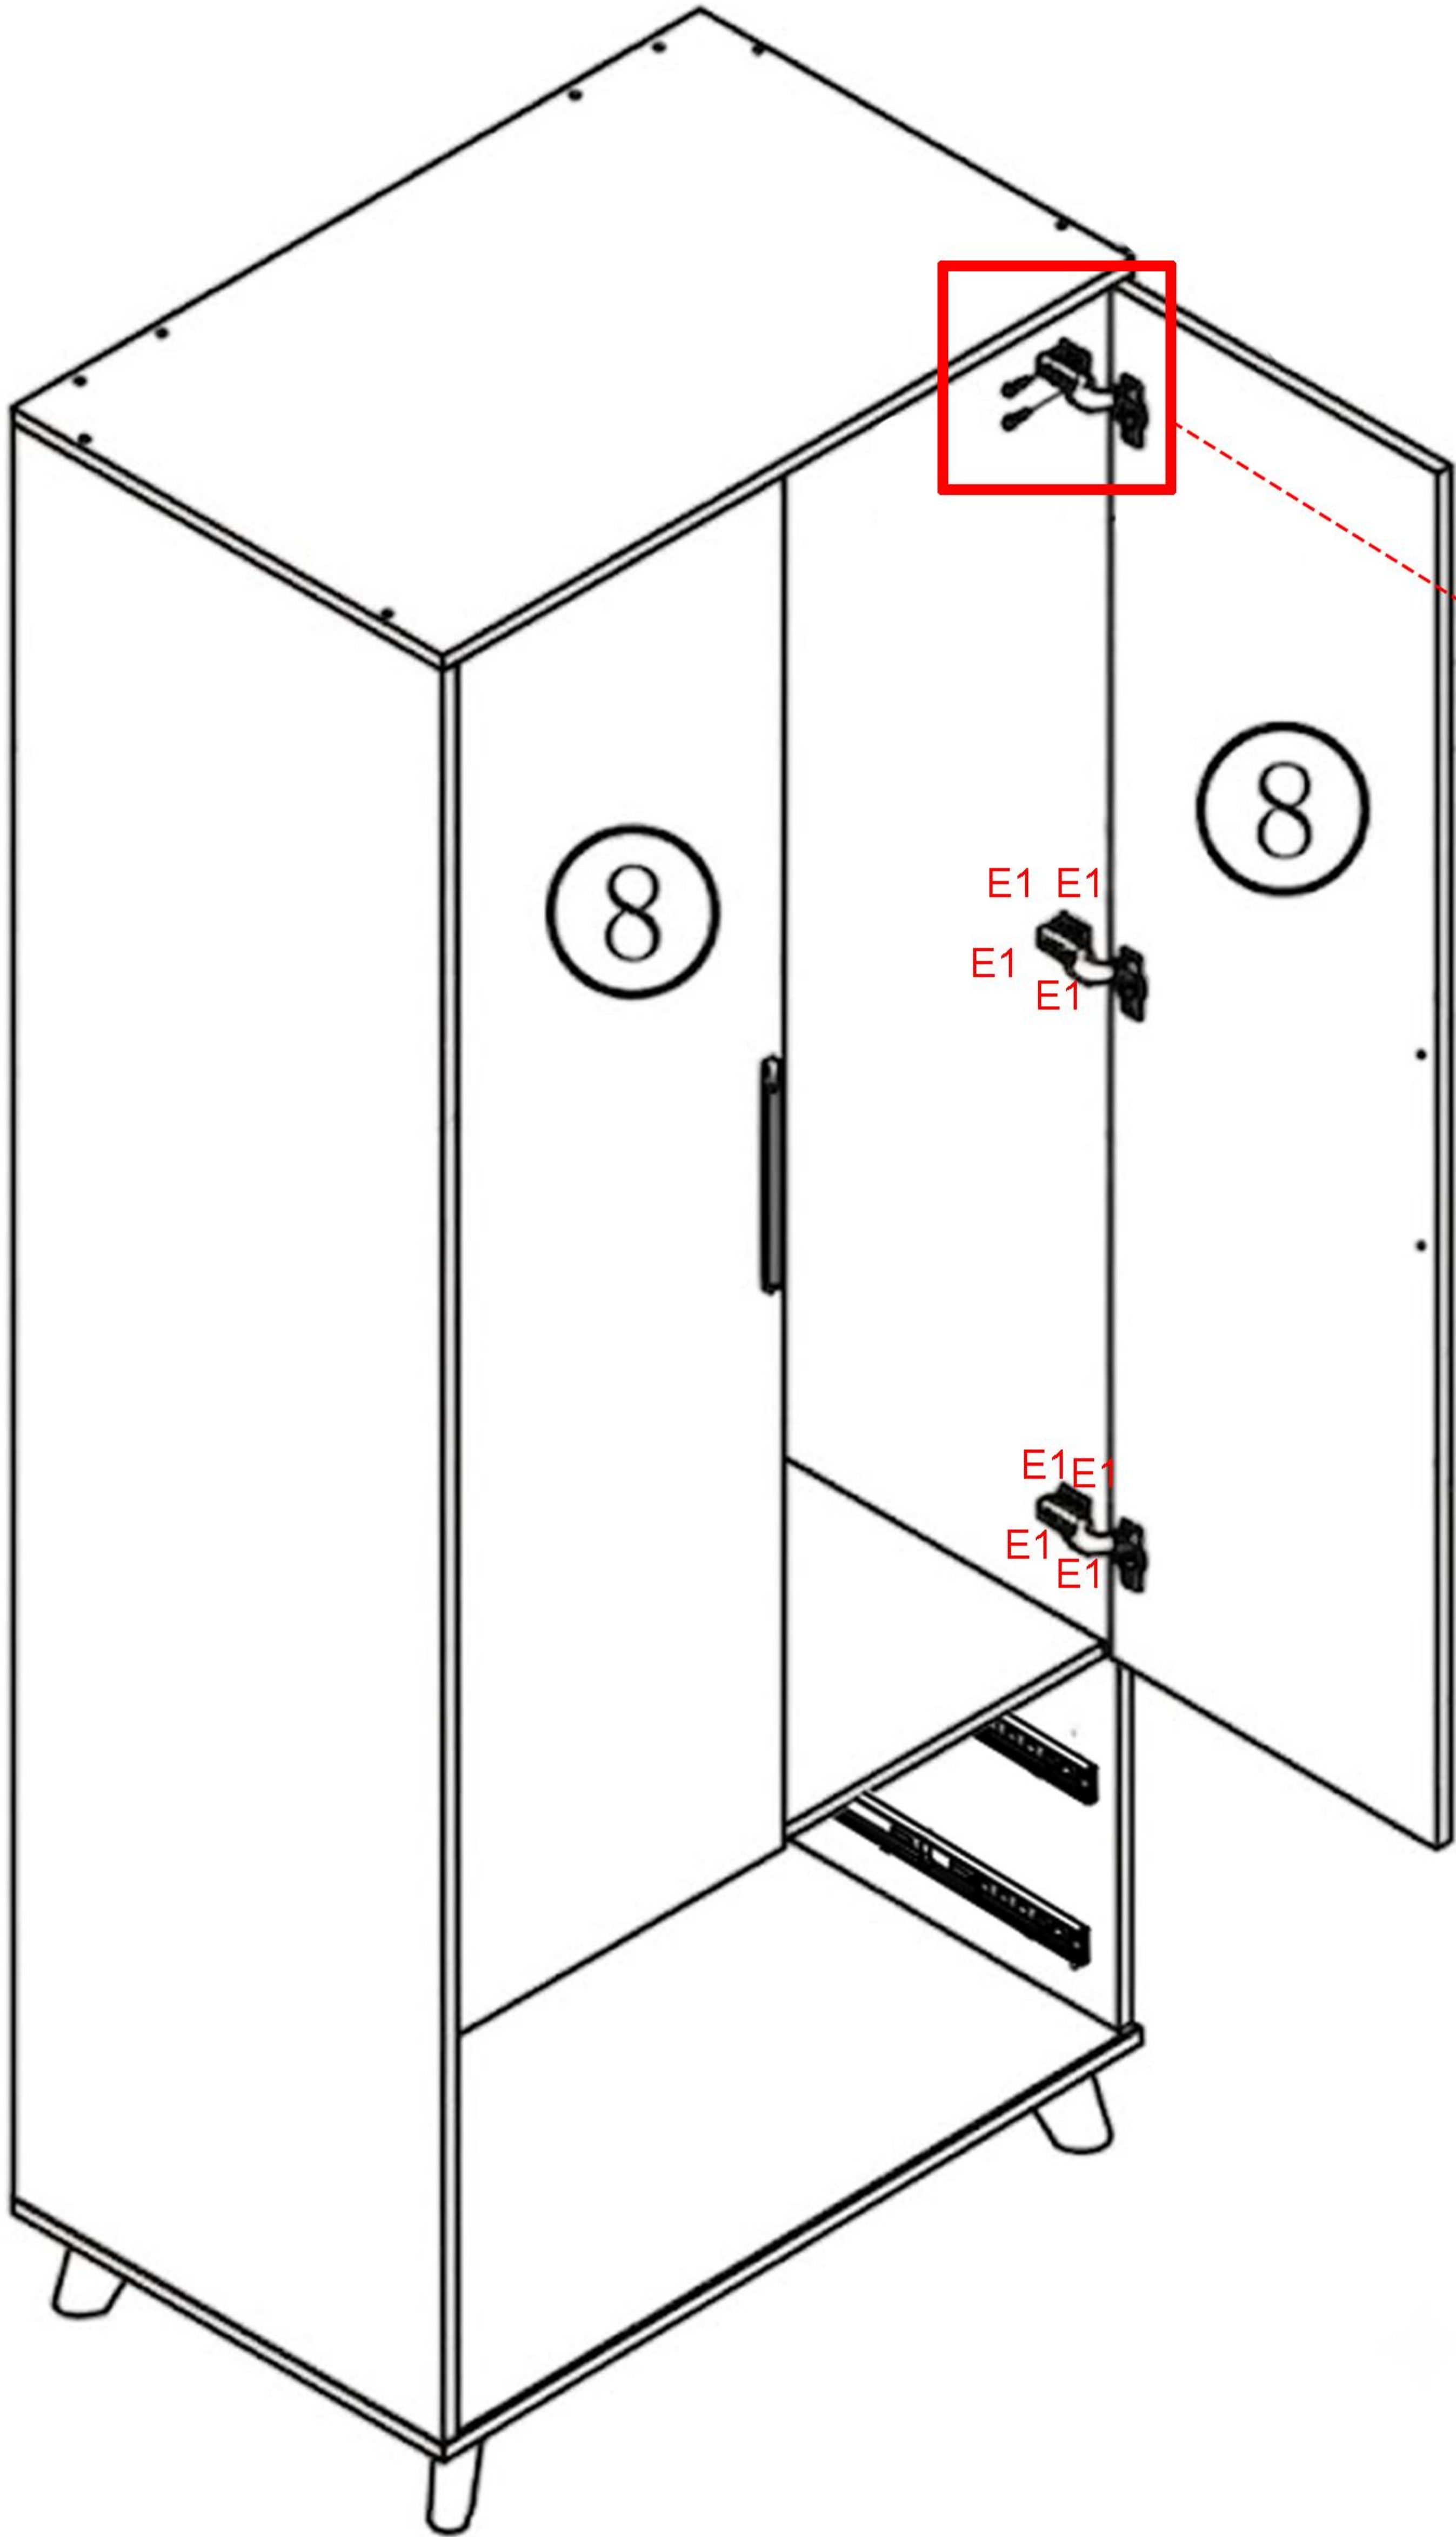

Refer to the initial hinge installation instructions to install and adjust the hinge


Step 9:

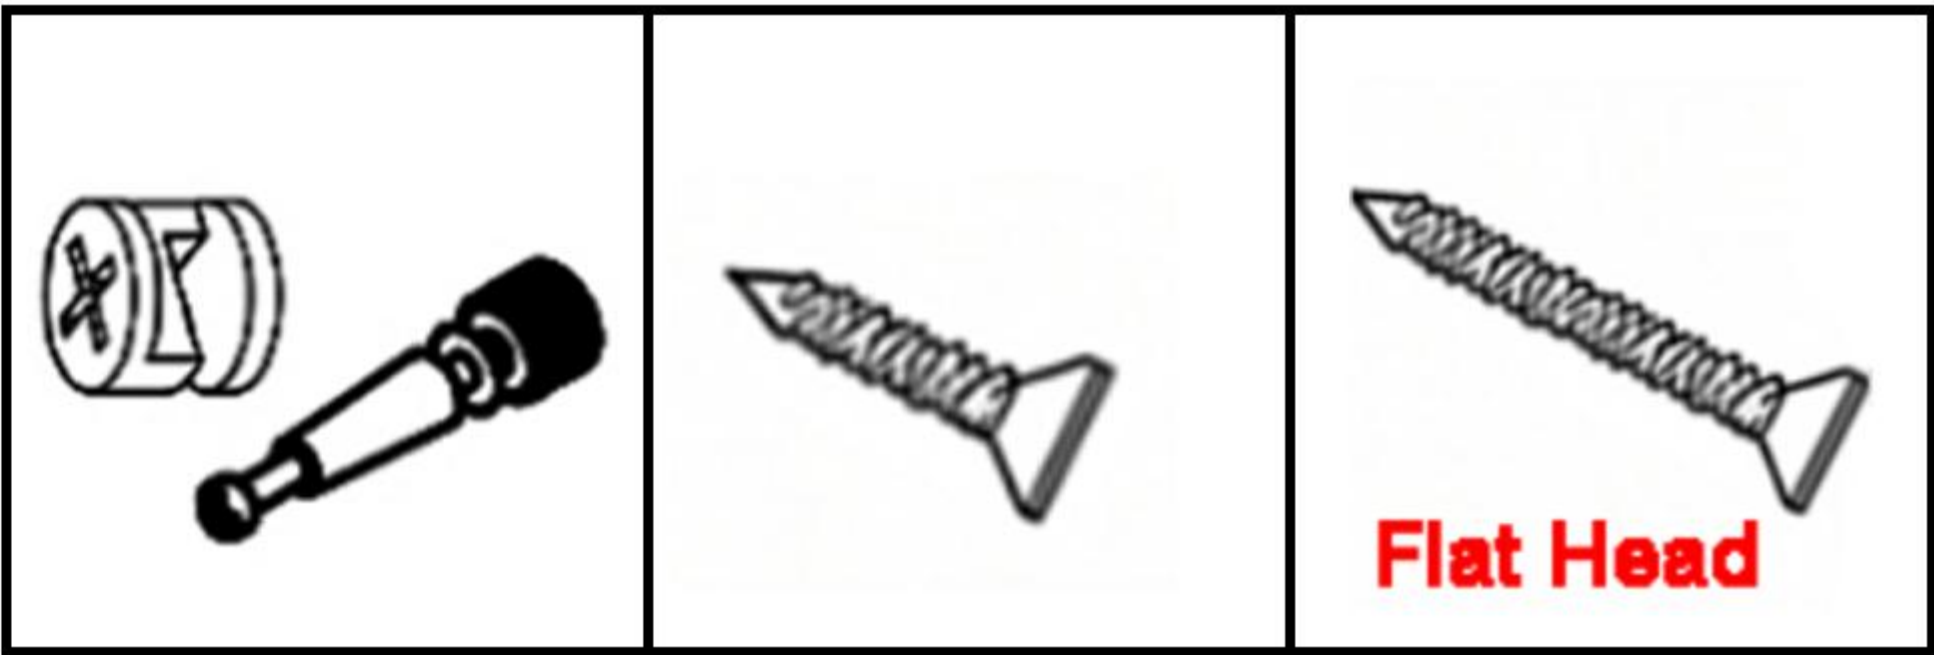


A

E1


E3

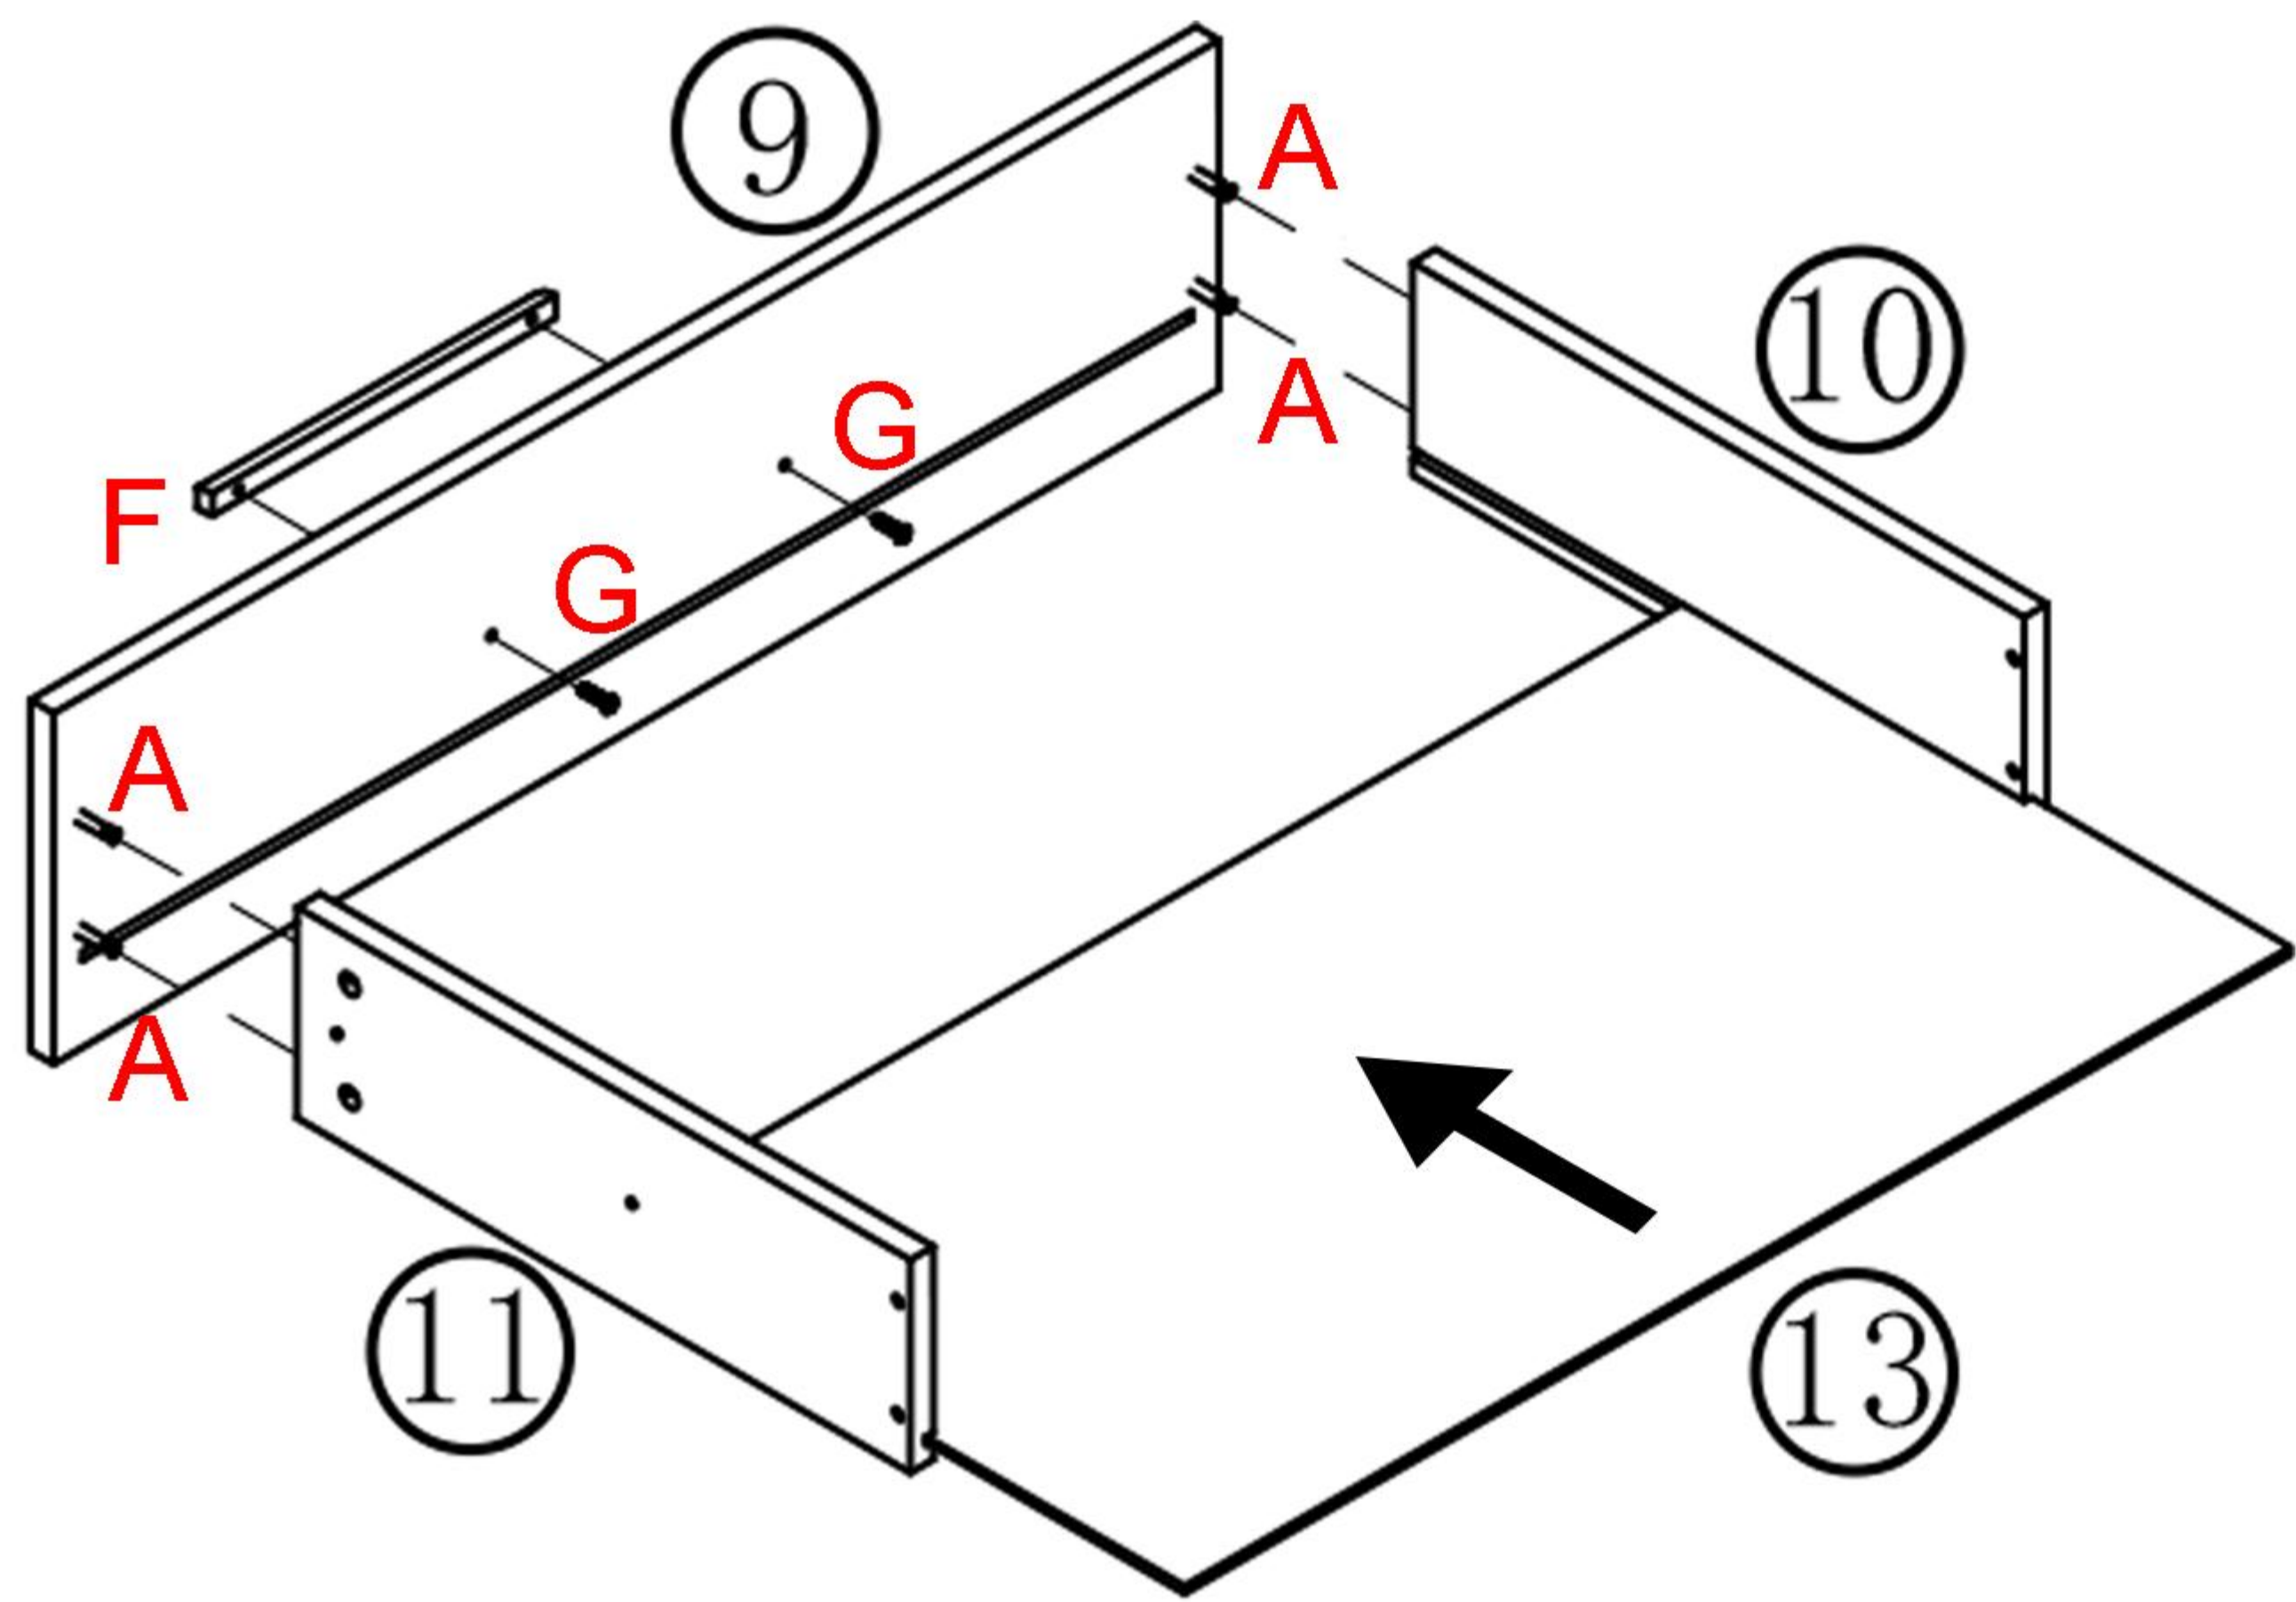



Position the pull-out part of sliding rails on the **both** side of drawer. Ensure the stopper of the slide rail is aligned with the drawer front panel. Secue with screws E1.

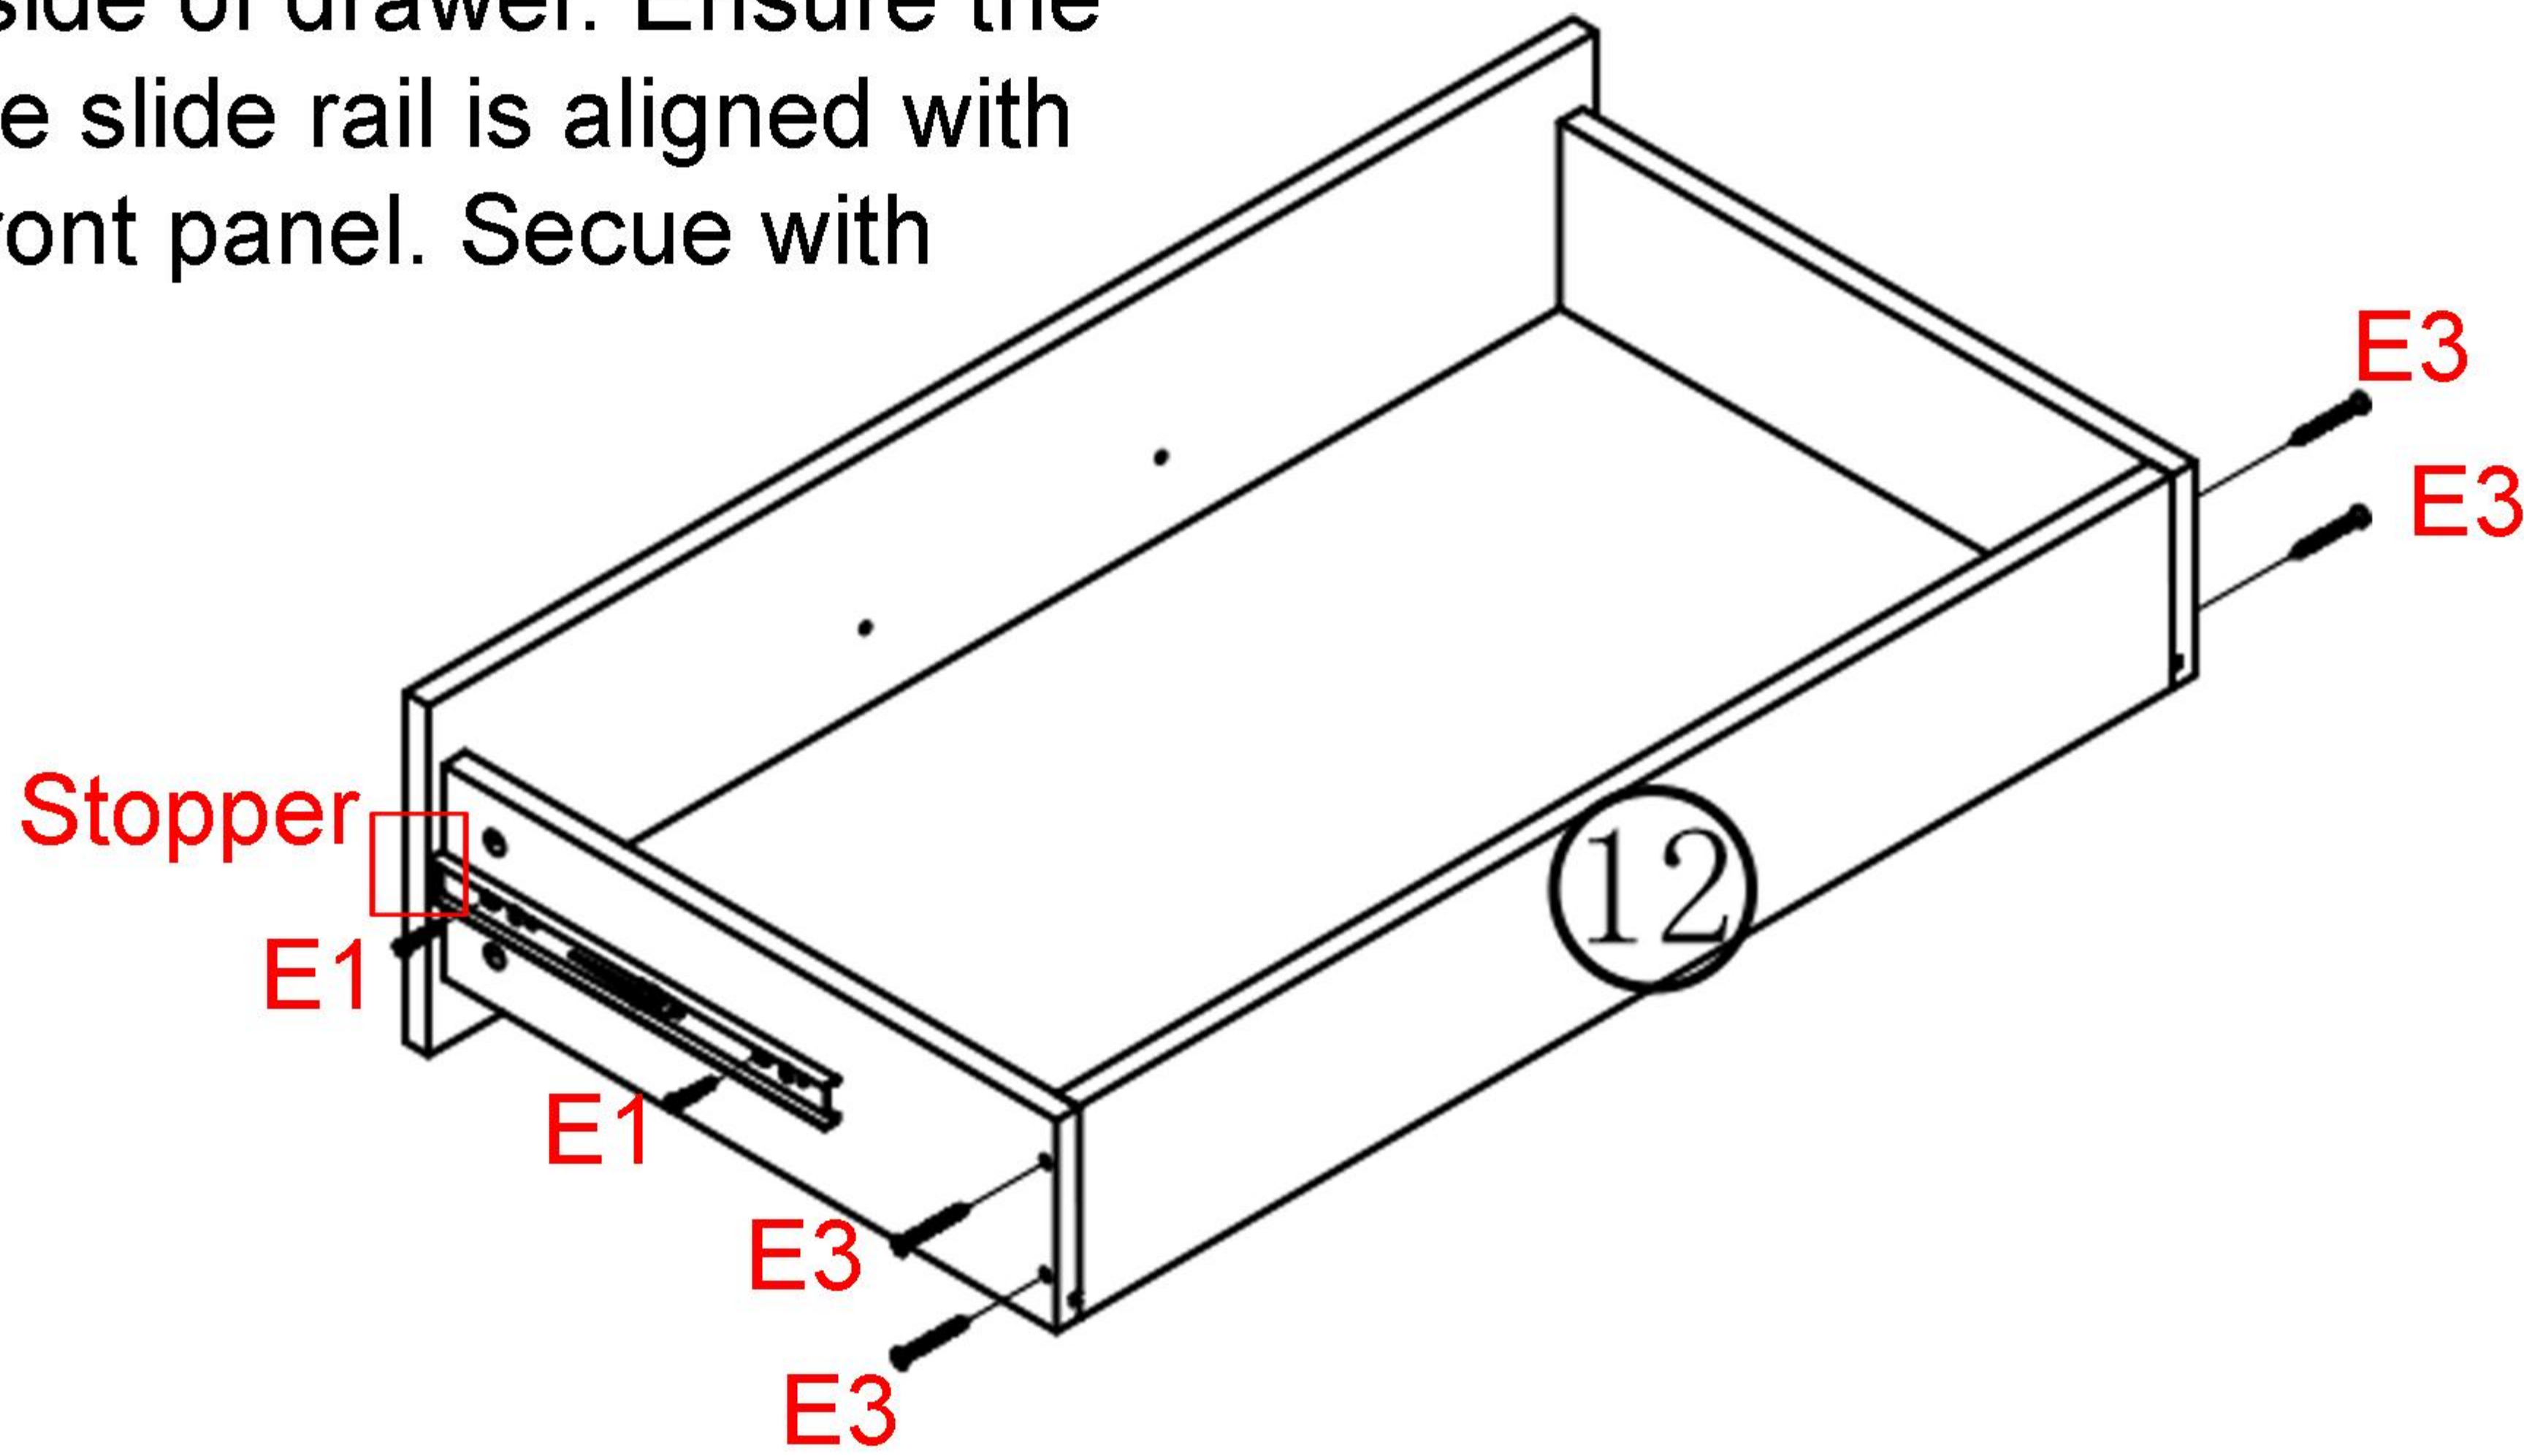


Step 10:

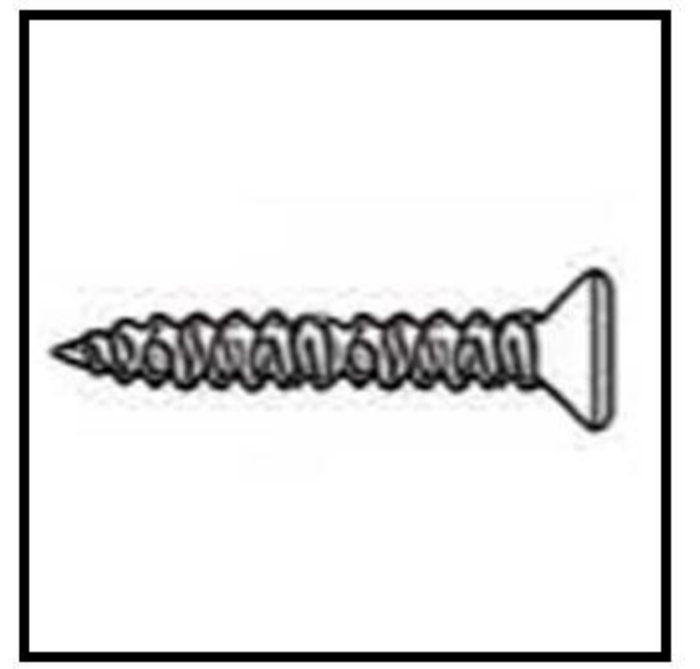

D

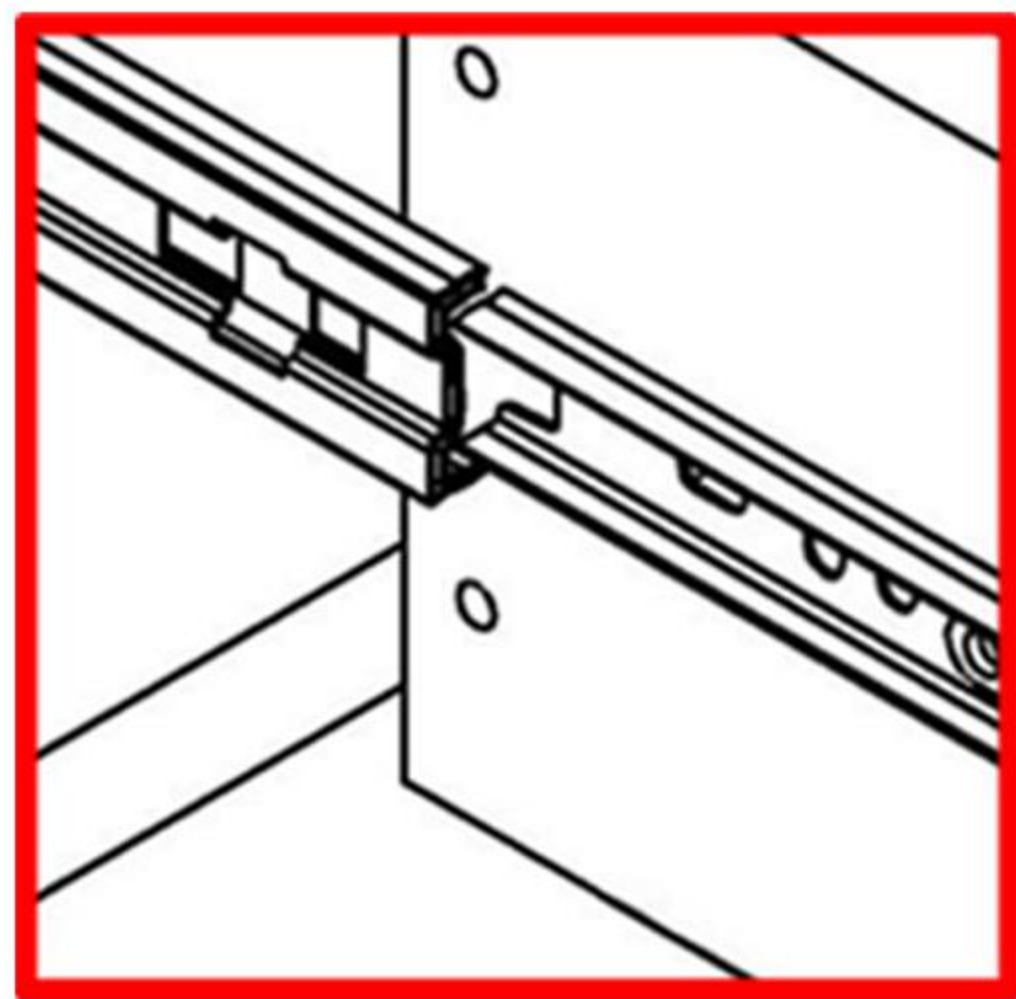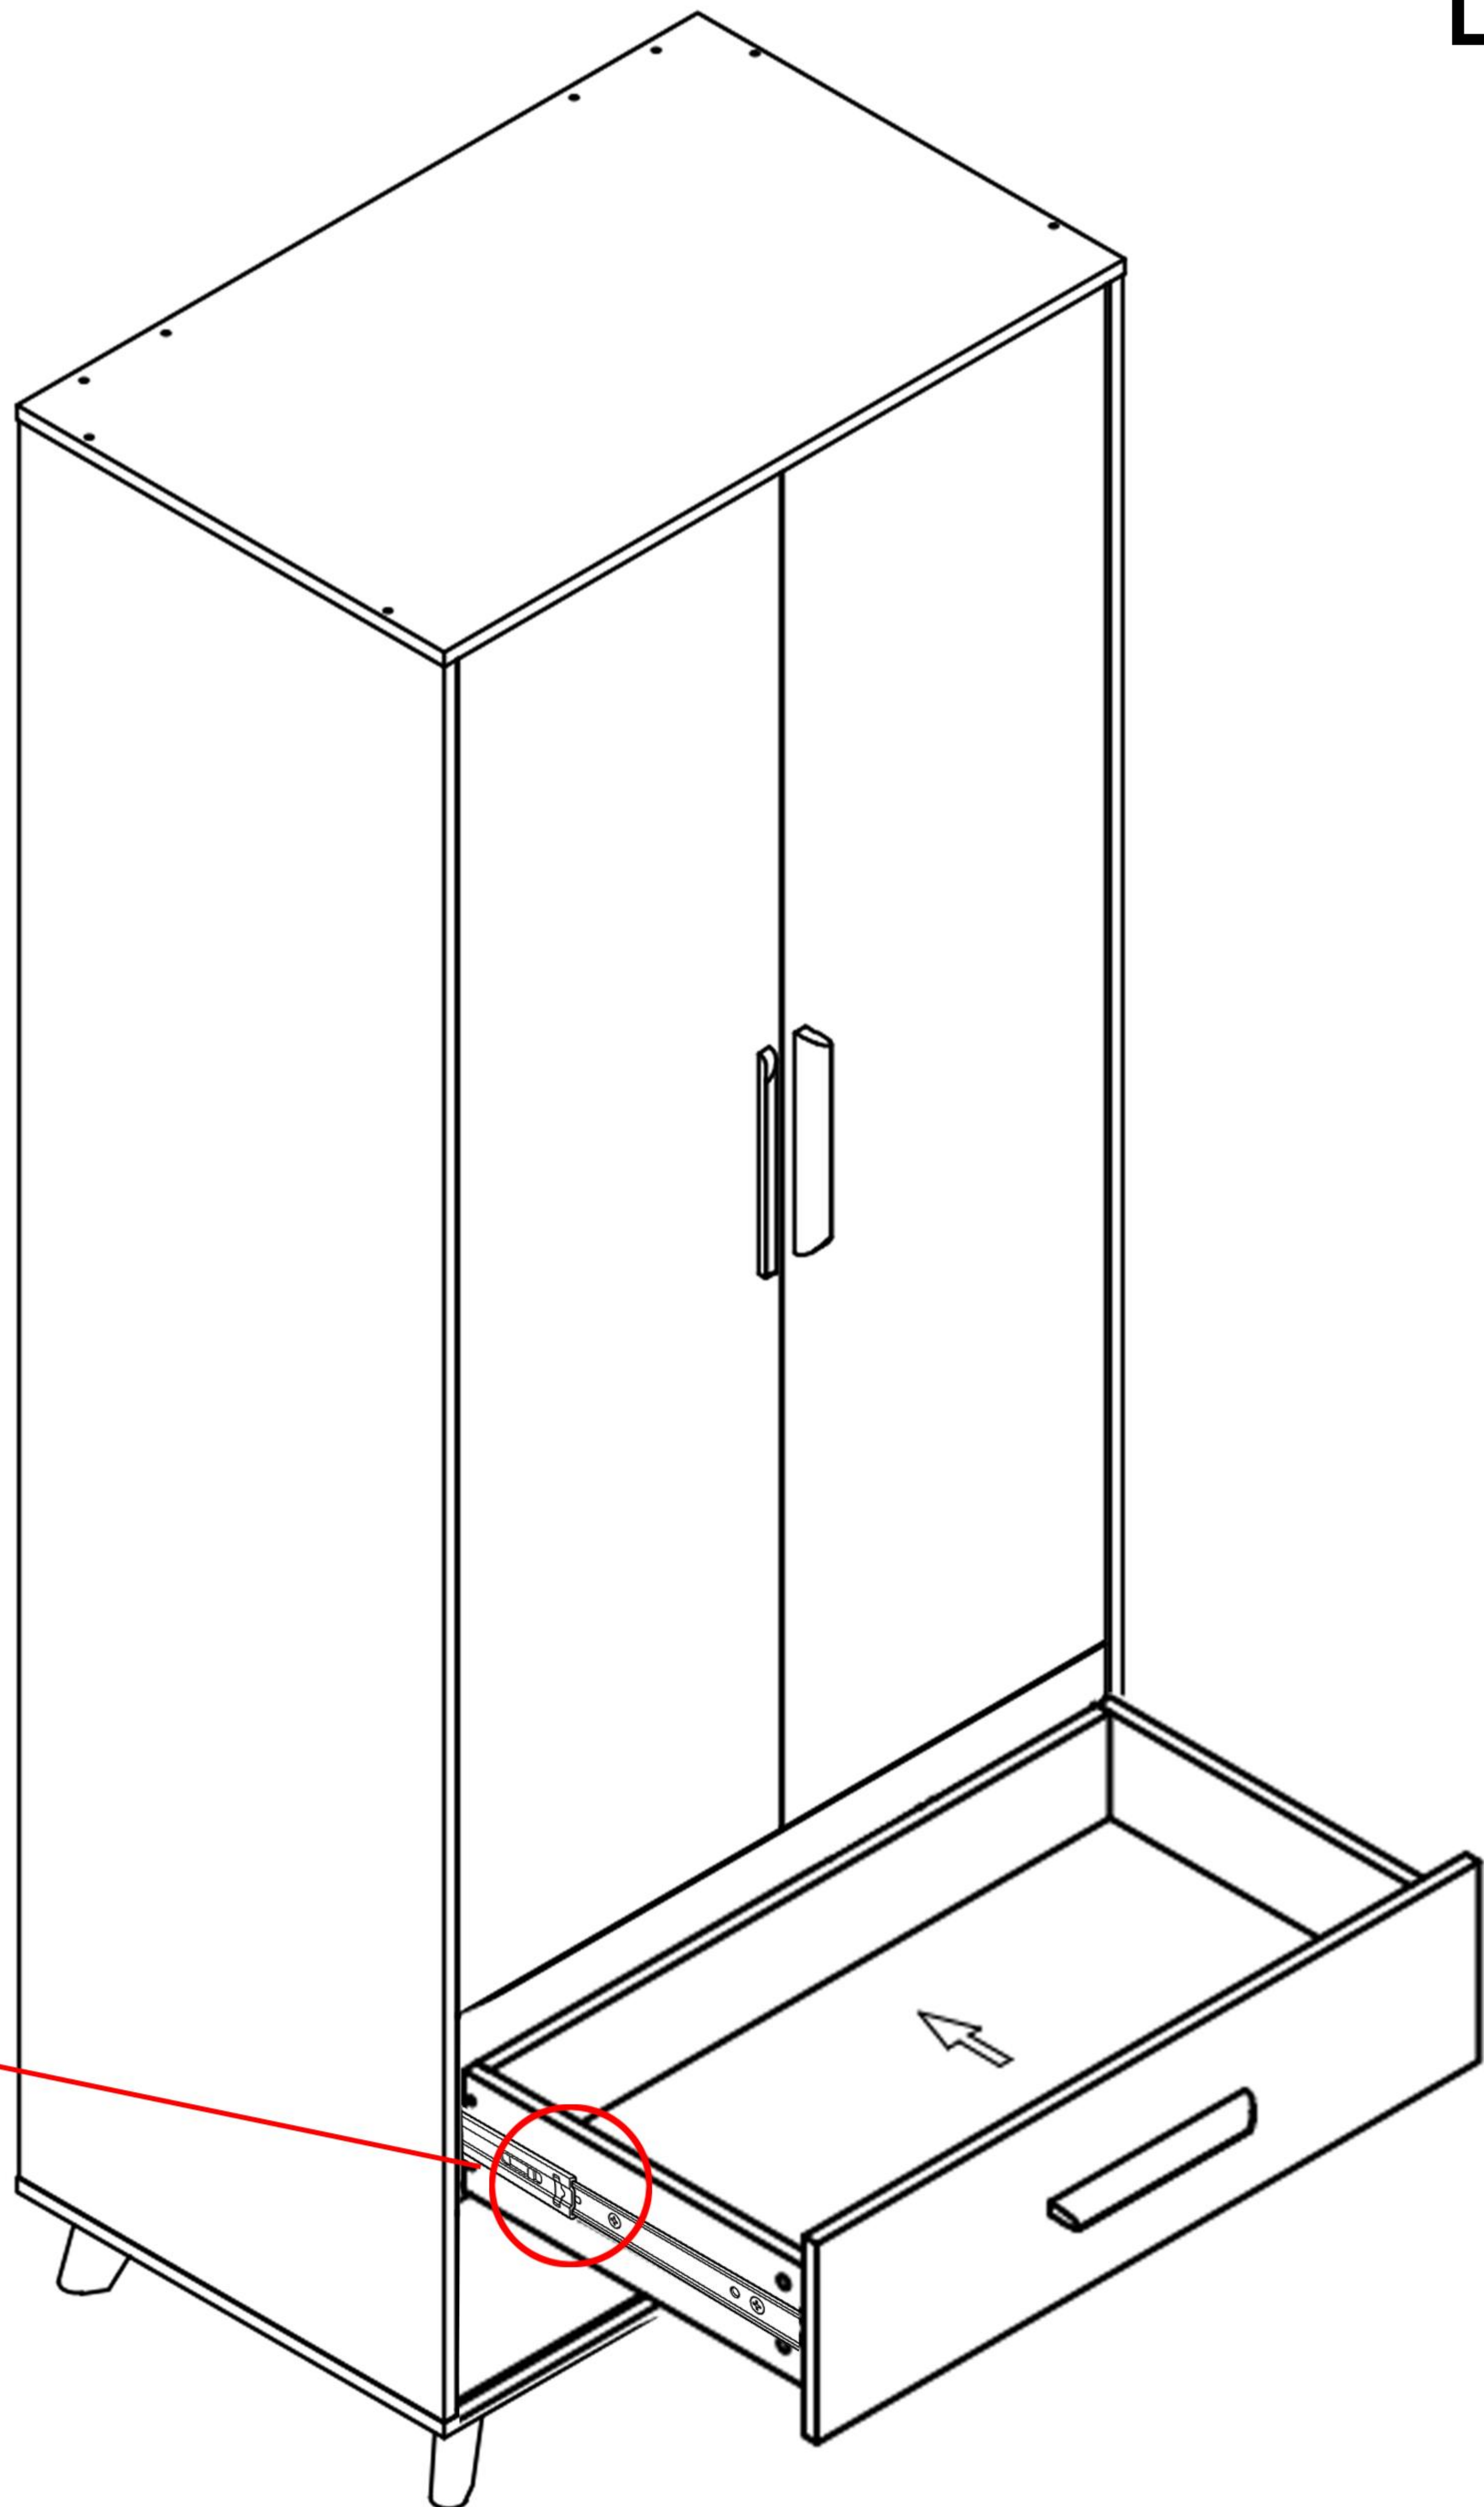

Insert into the slots
on both sides
simultaneously

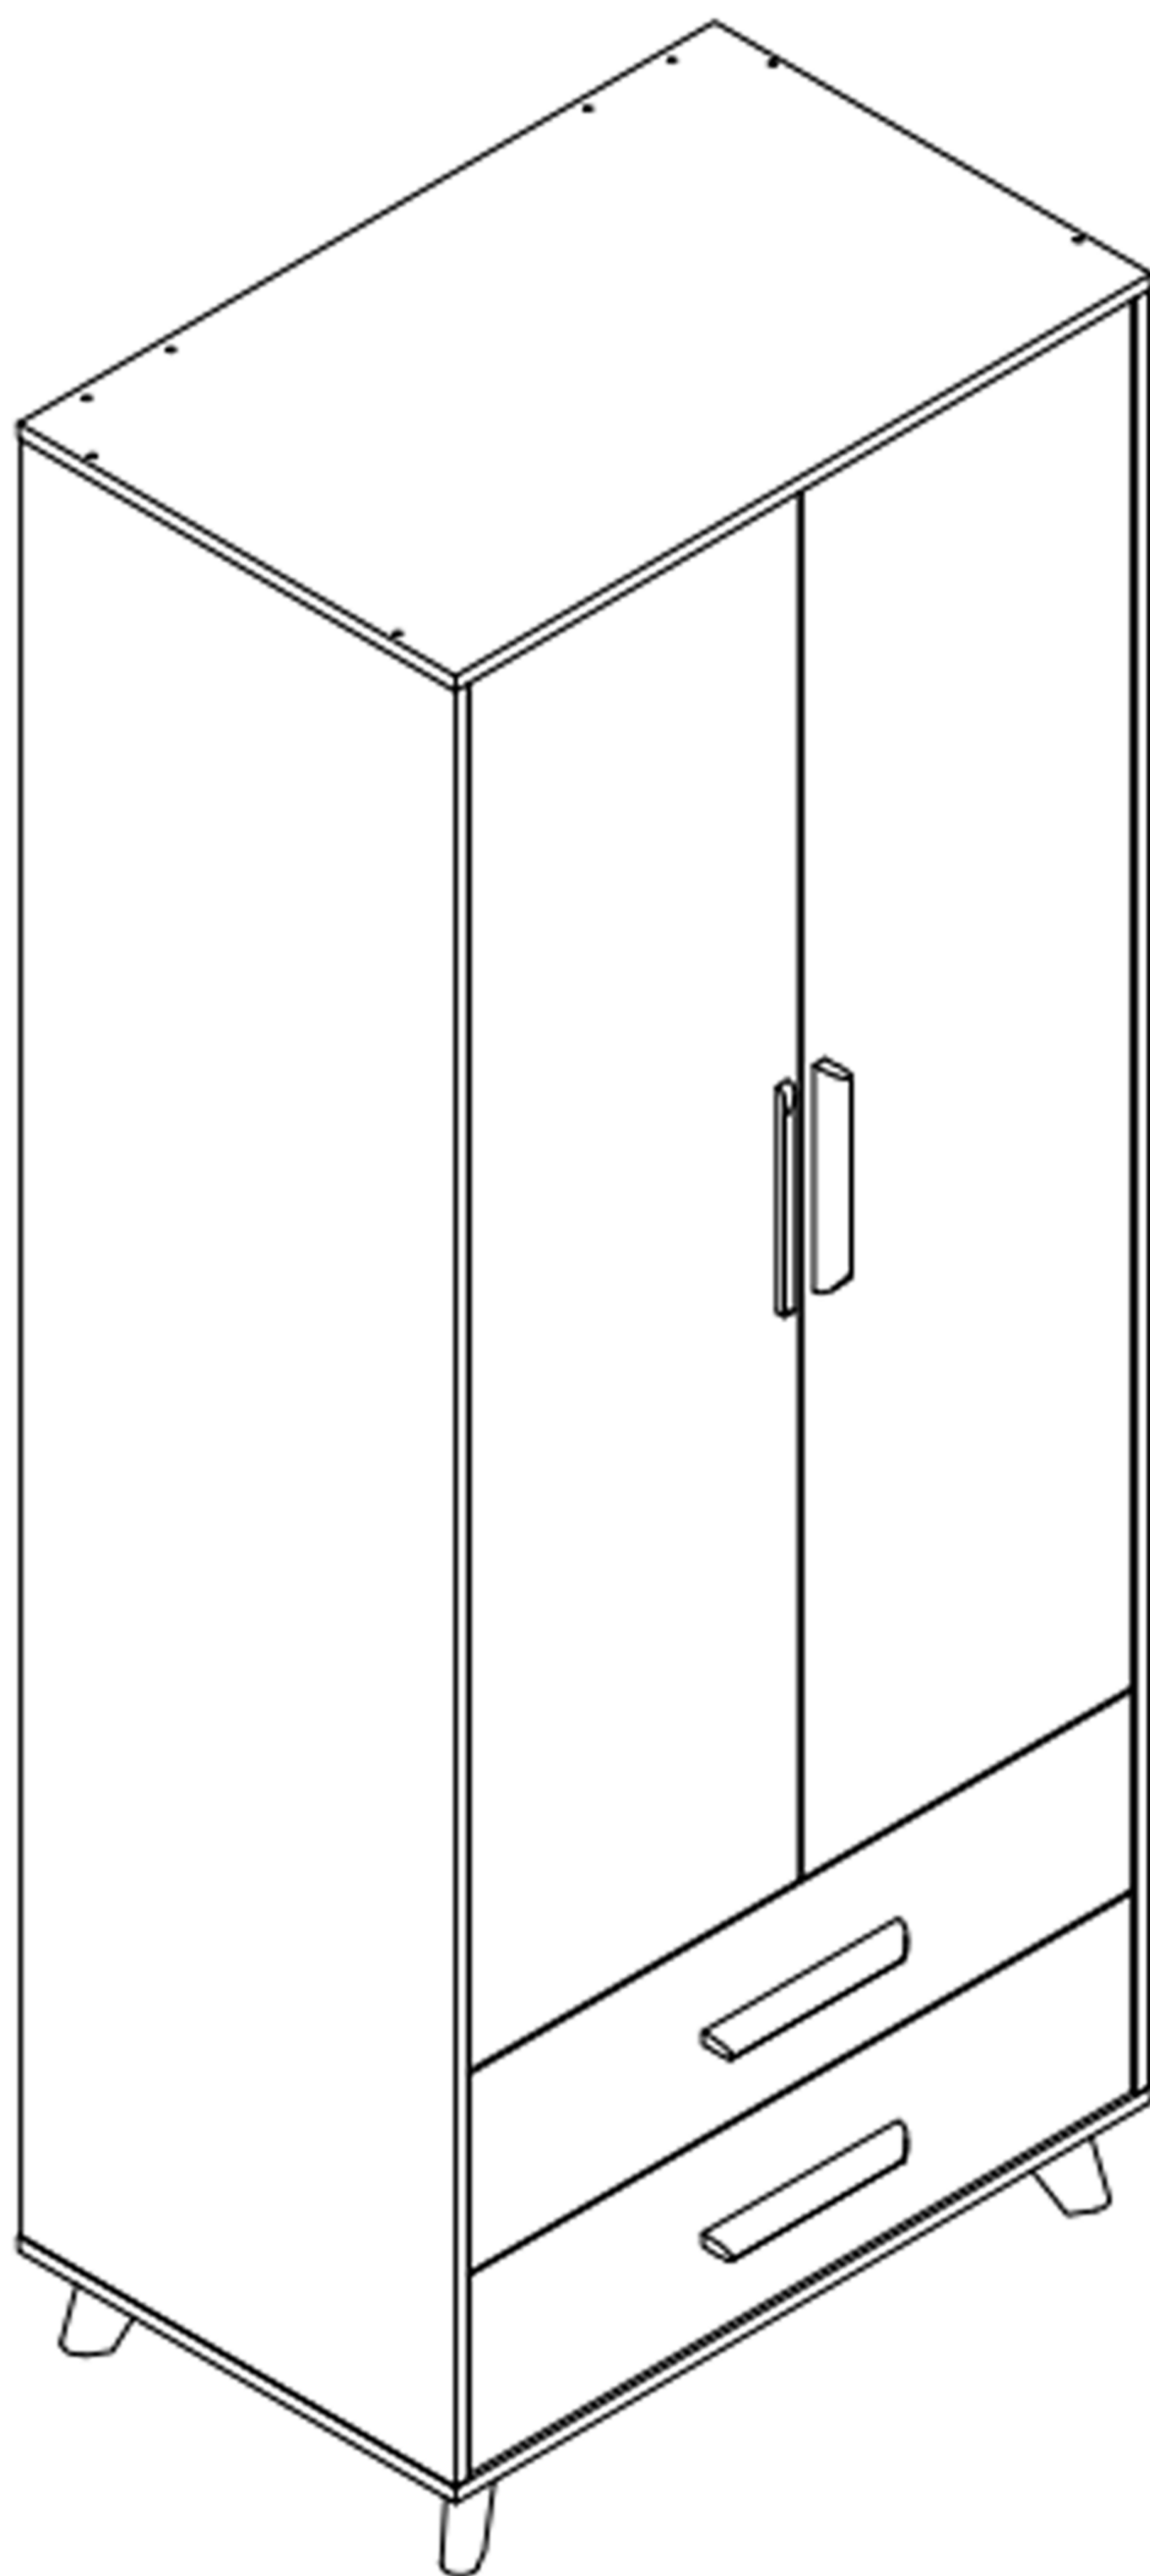

Installation Finished