

SOCE056-80/100CM


Installation Instruction



Hardware List



NOTE: An electric drill is highly recommended for installation.

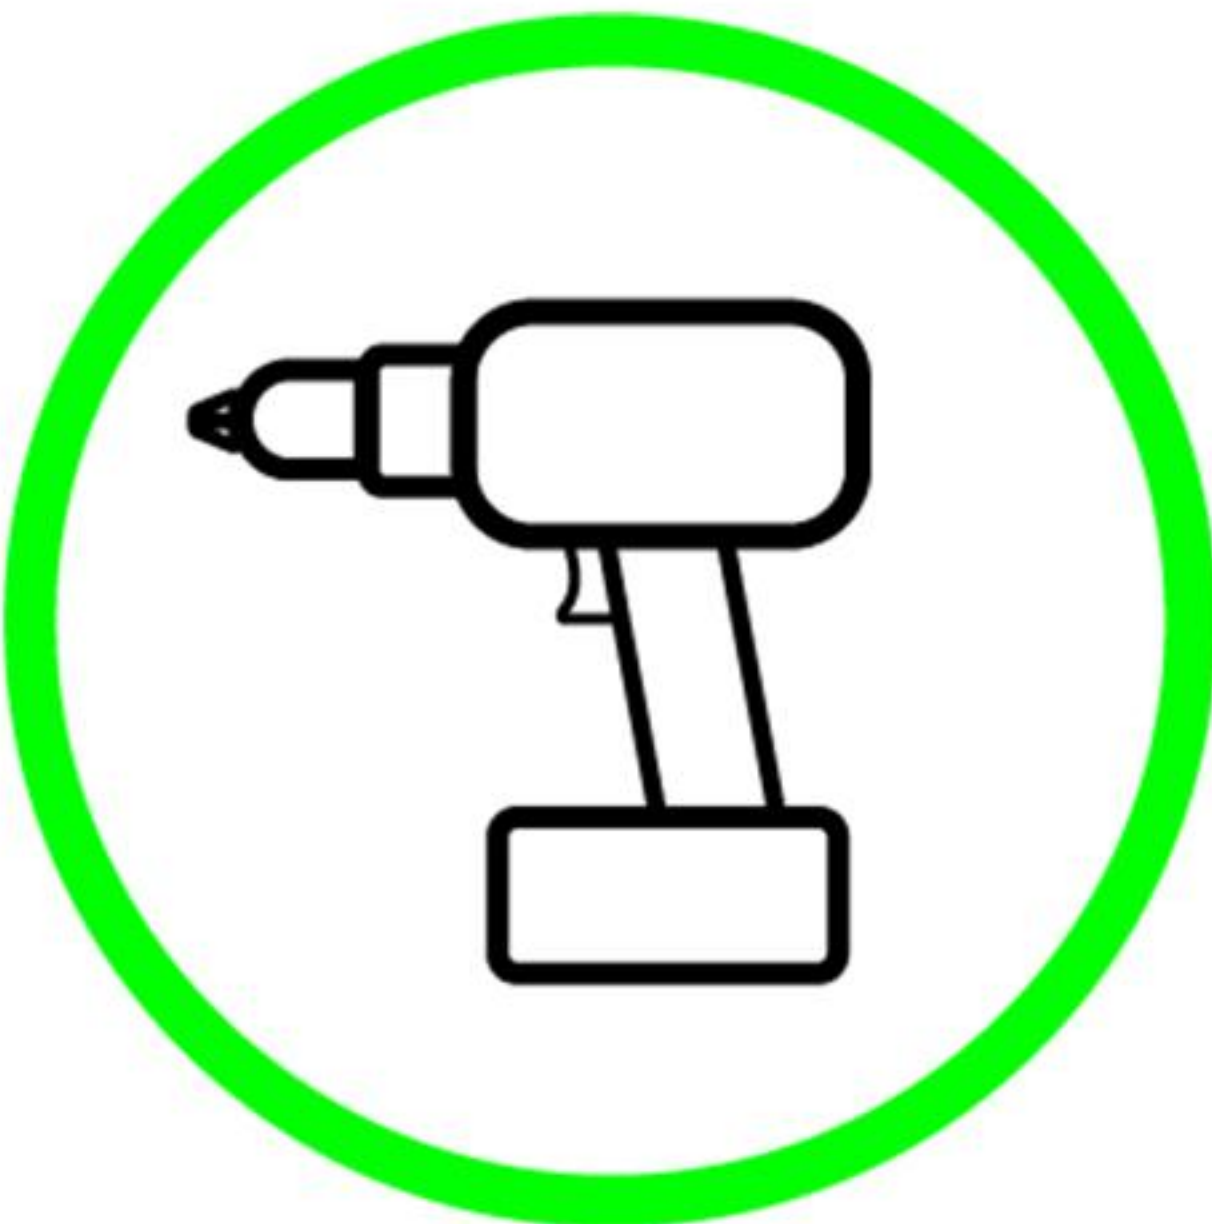


Scan the code to purchase ES001



Installations for using eccentric bolts



The arrow on the eccentric bolt indicates the position to align with the eccentric cam

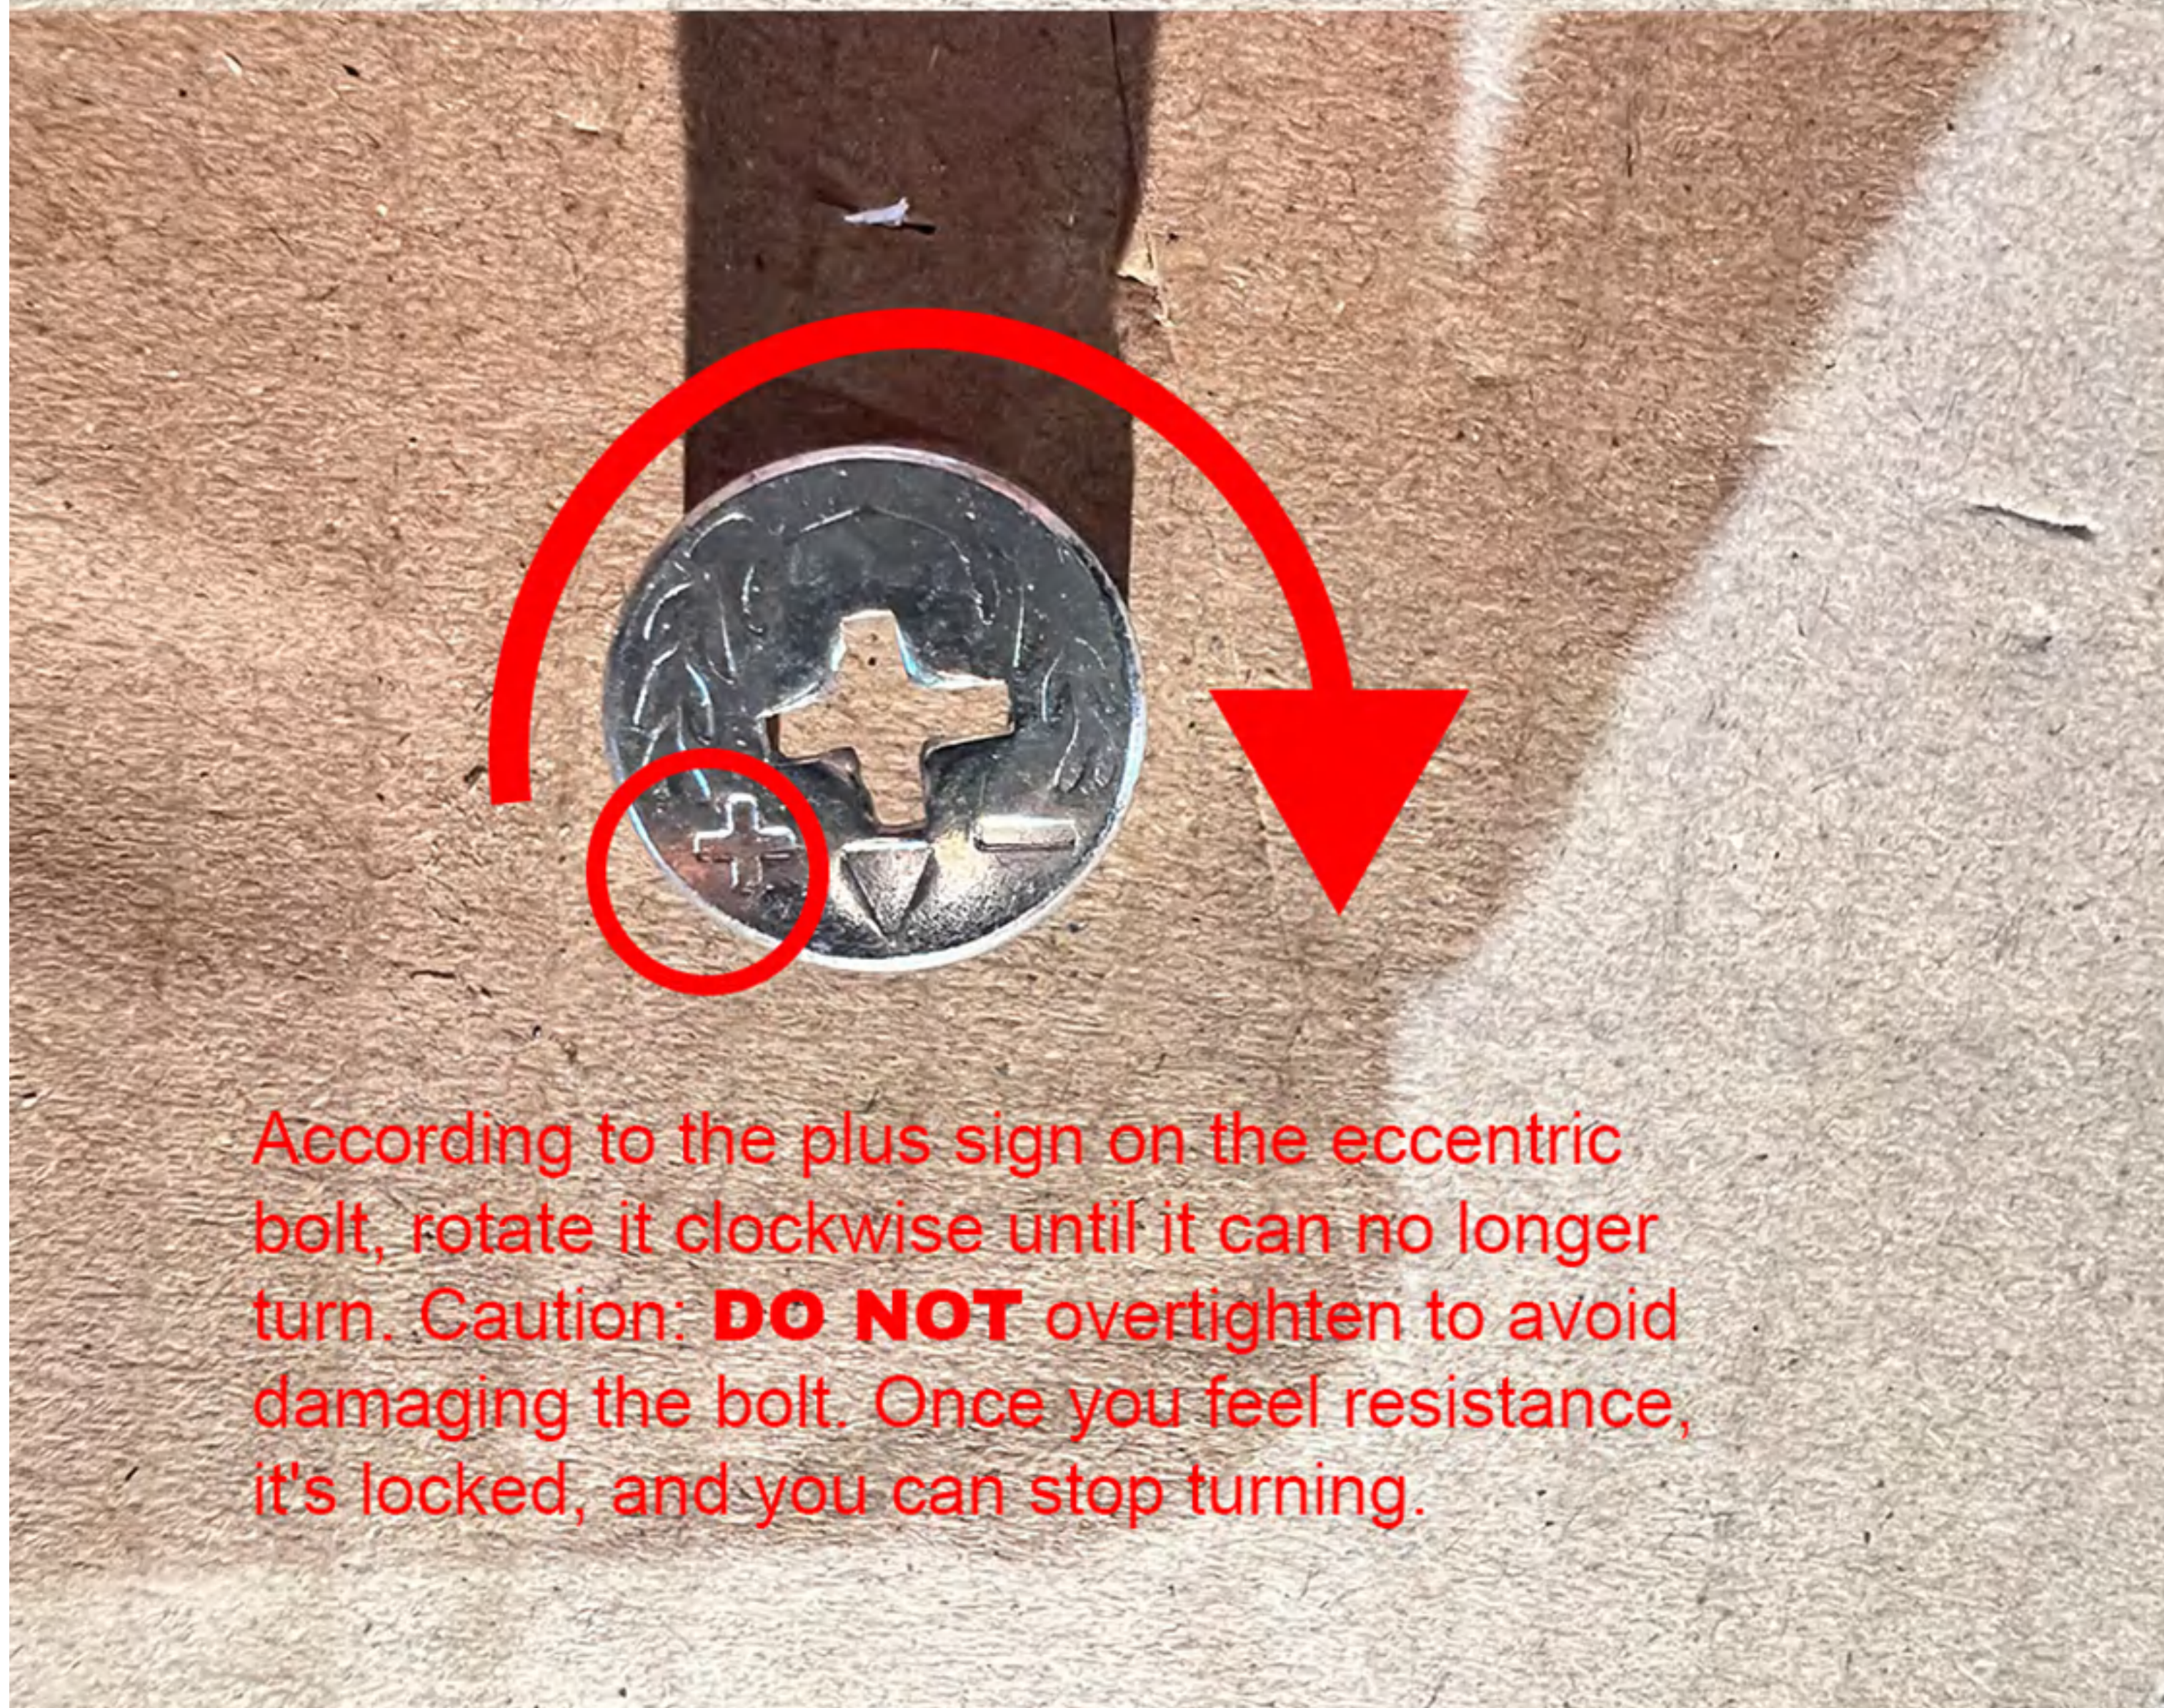


According to the plus sign on the eccentric bolt, rotate it clockwise until it can no longer turn. Caution: **DO NOT** overtighten to avoid damaging the bolt. Once you feel resistance, it's locked, and you can stop turning.

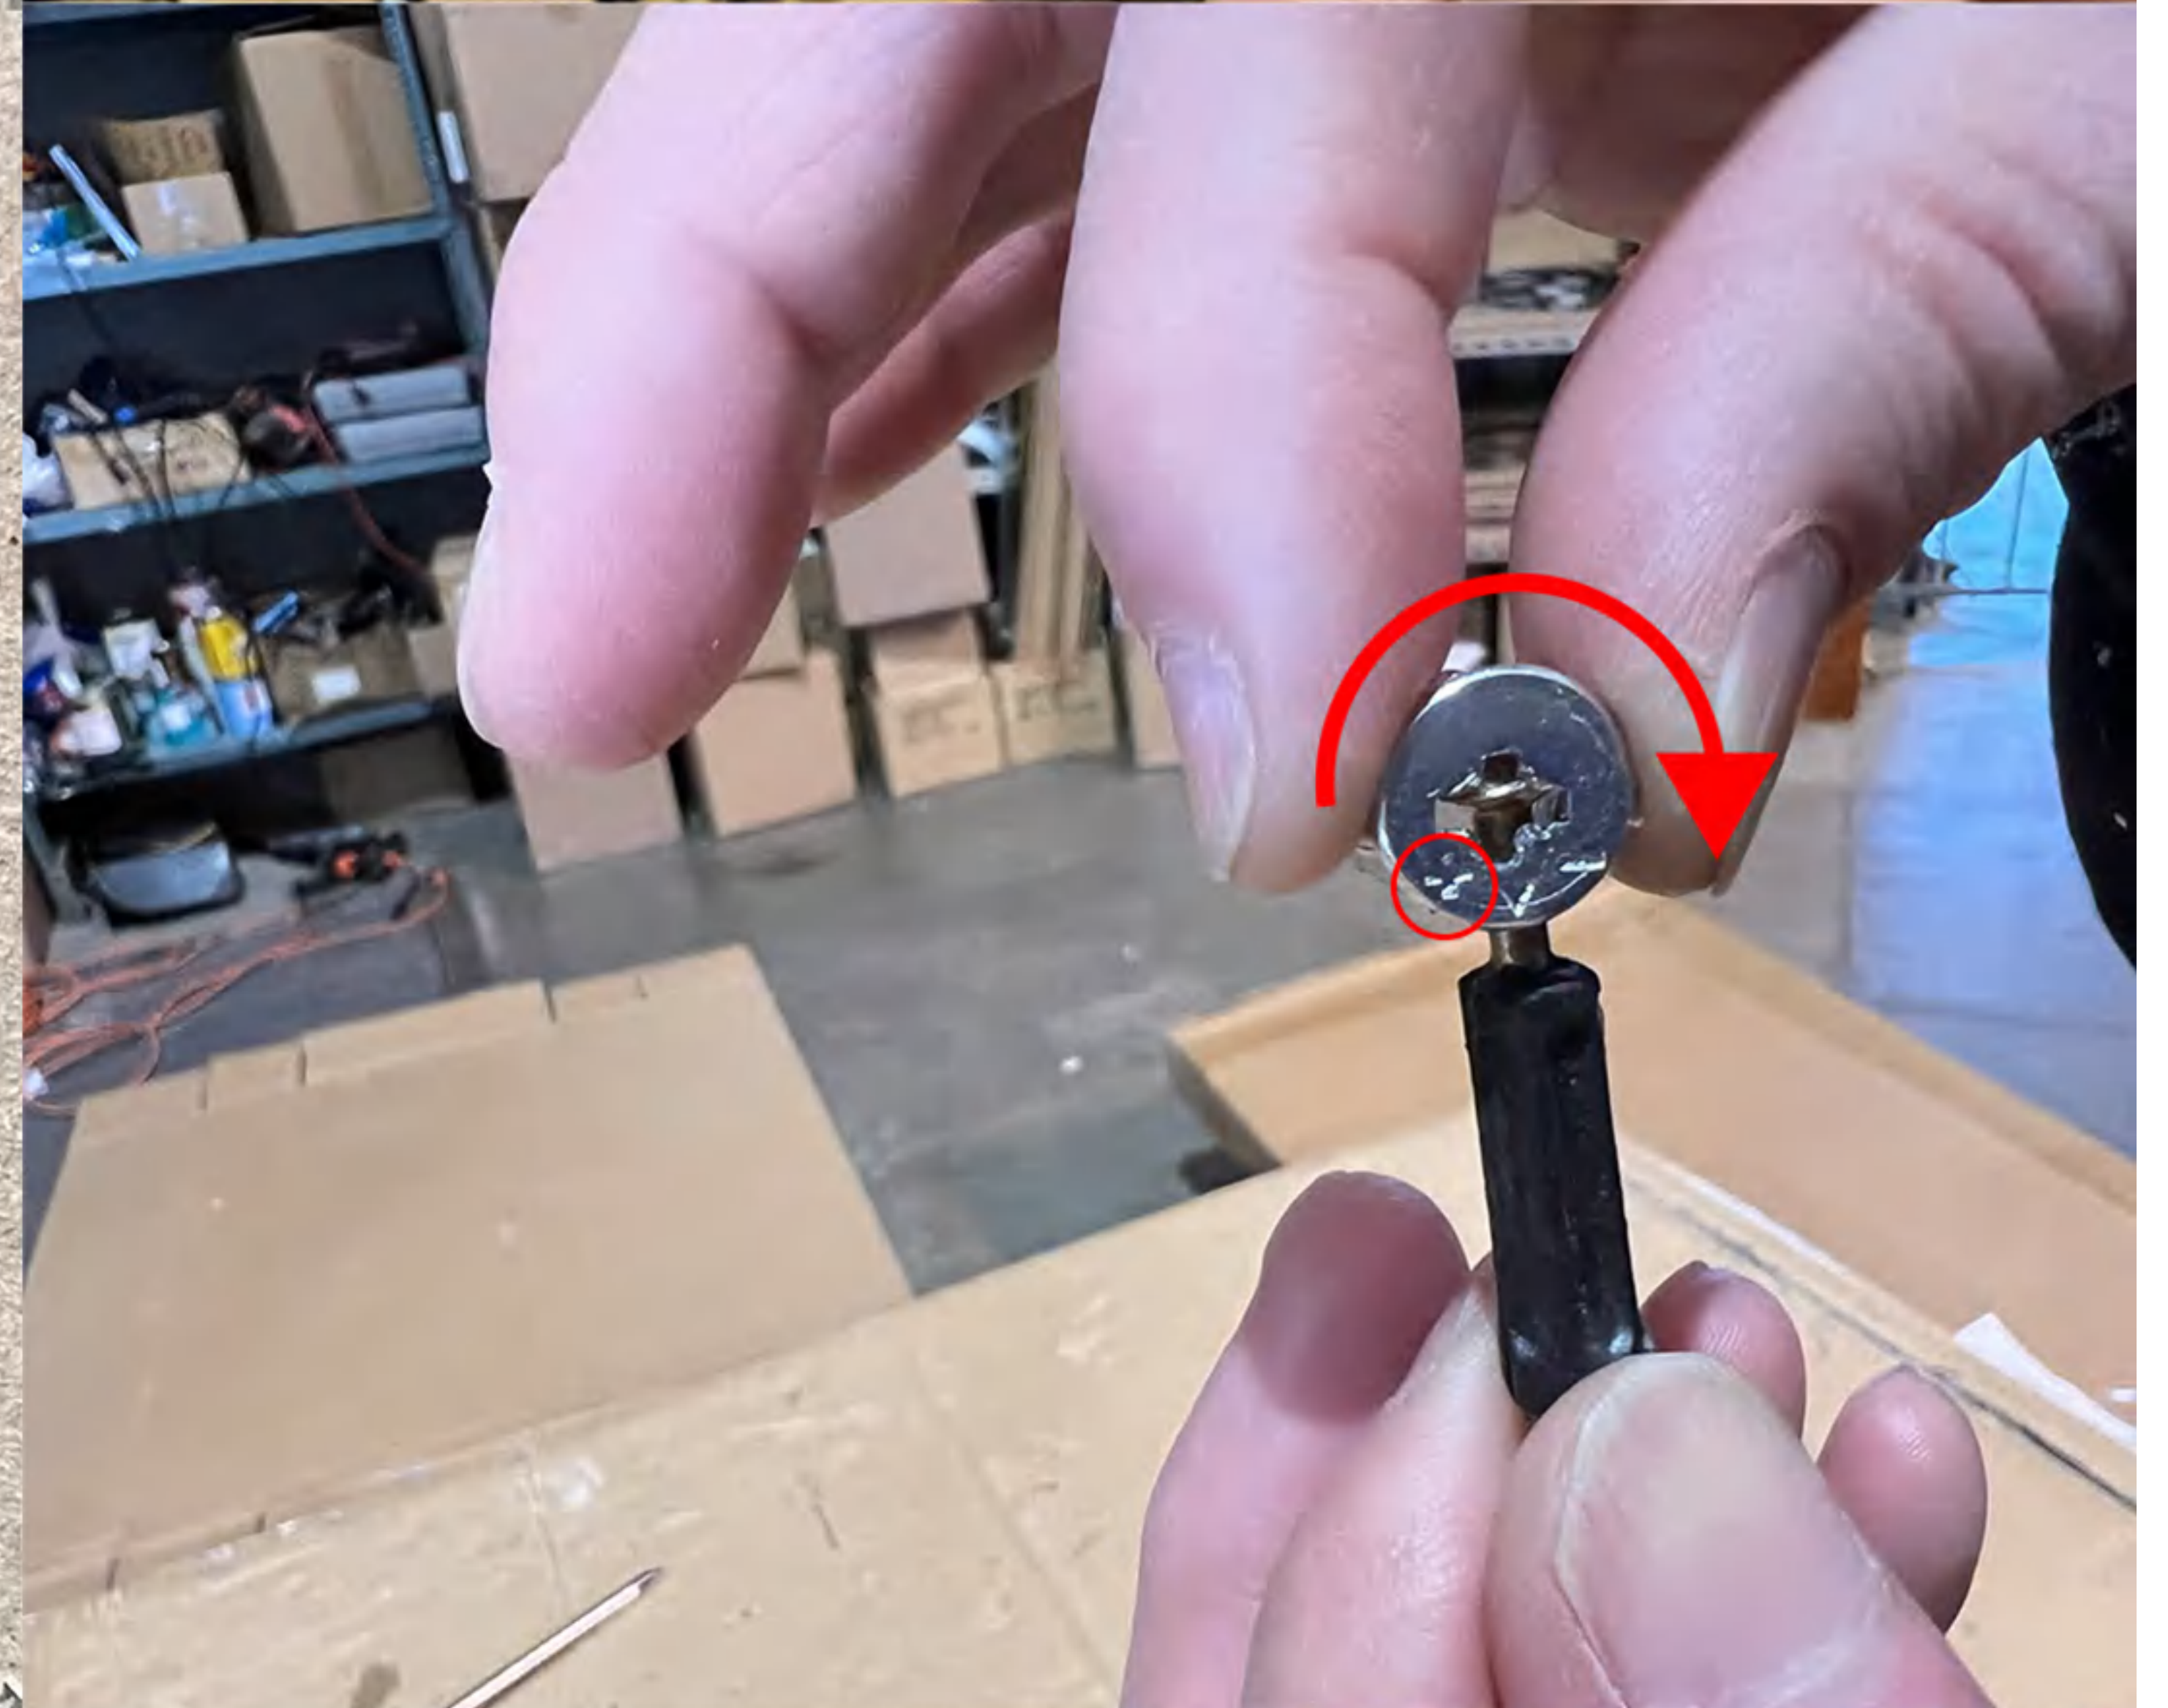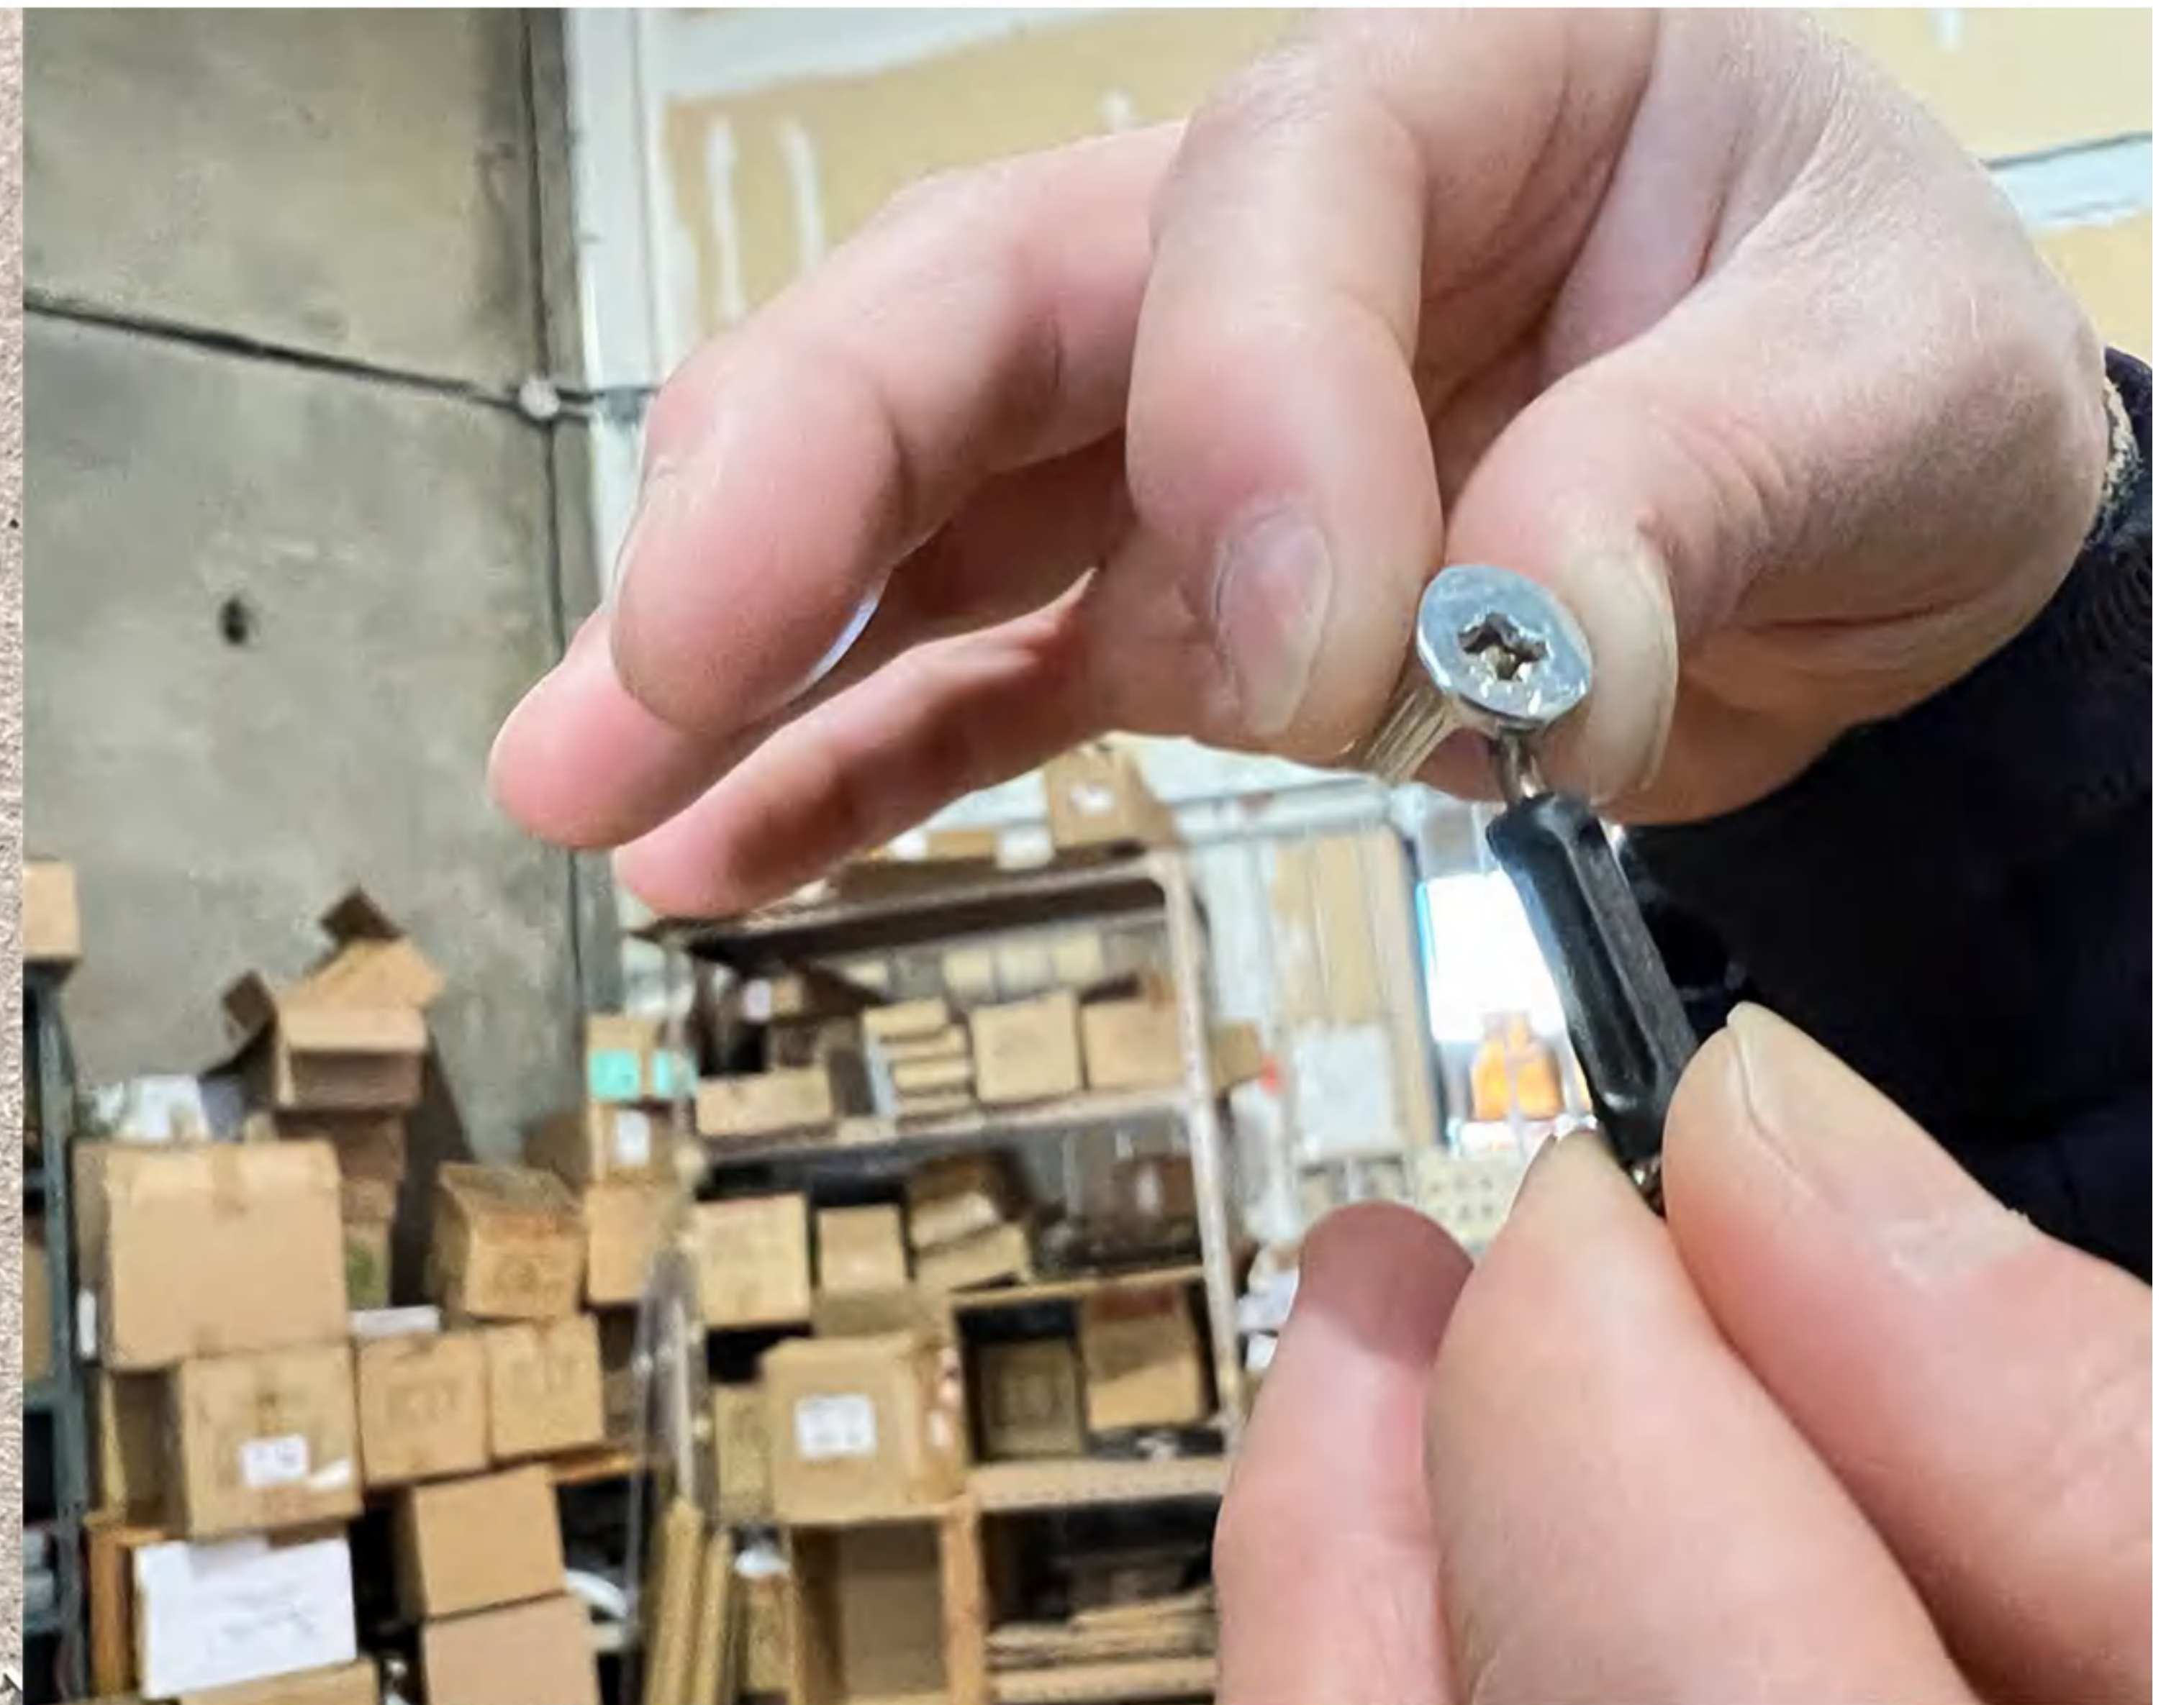



Example




Panel List

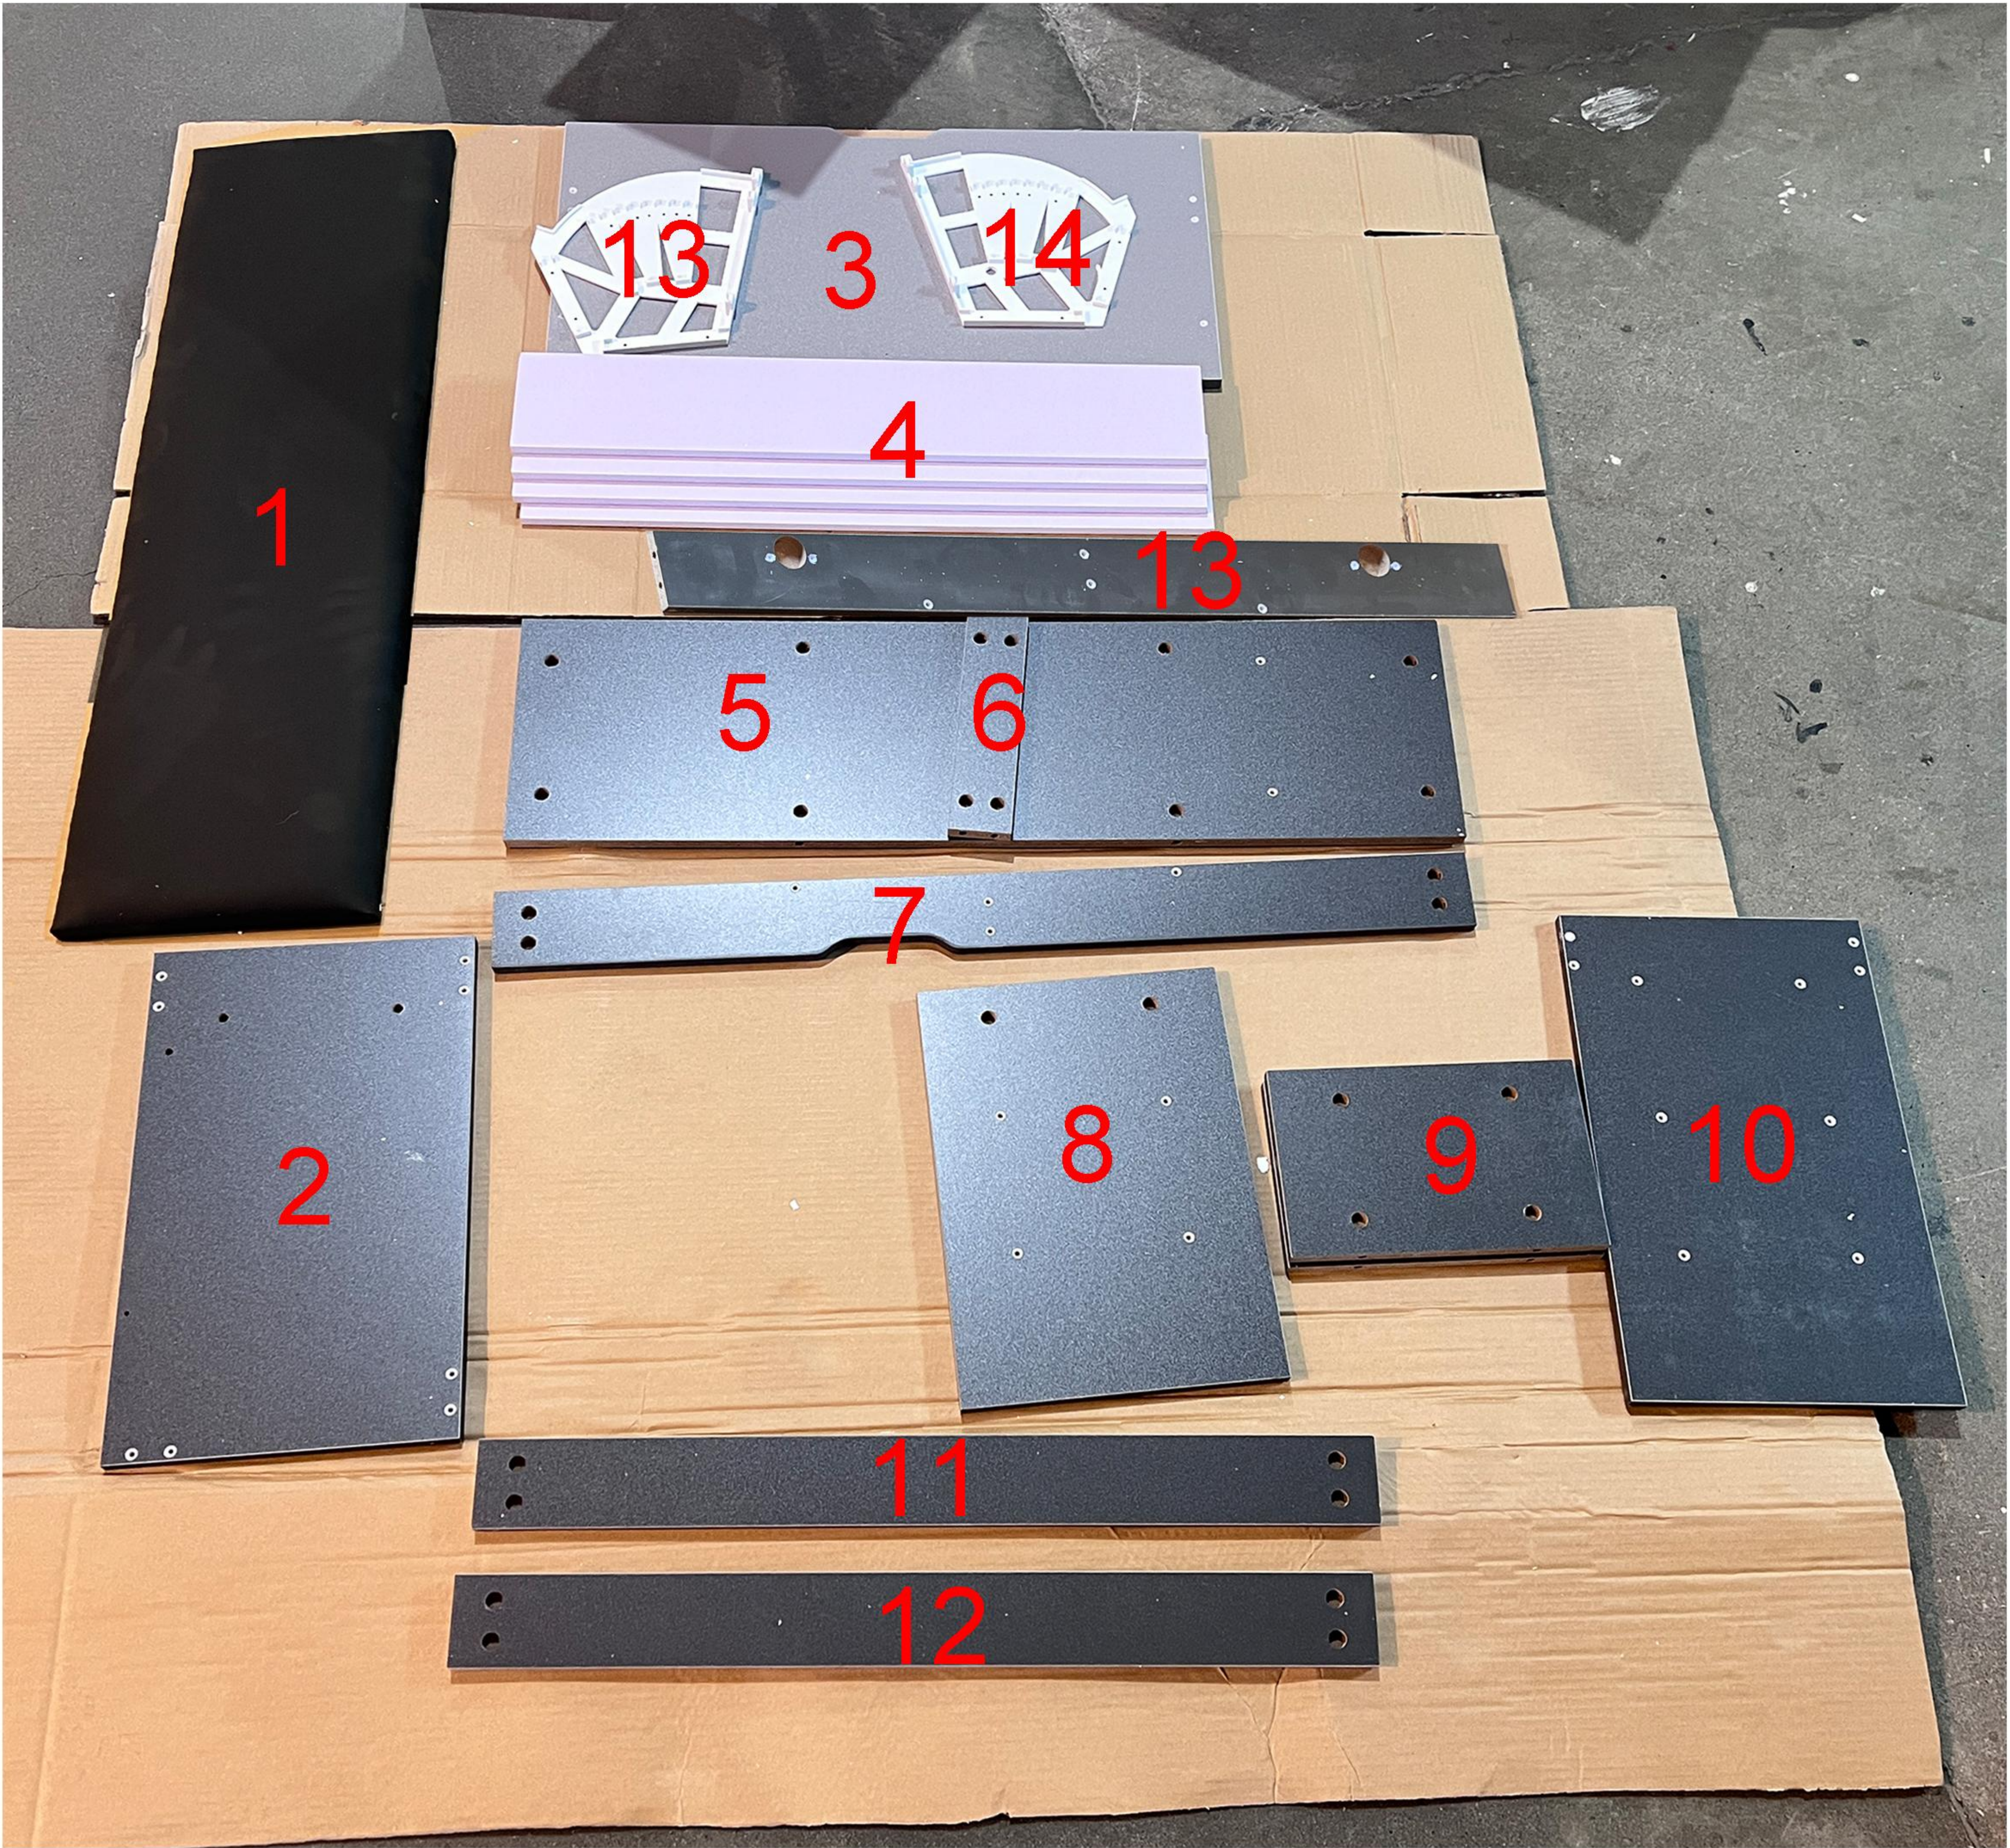

Step 1

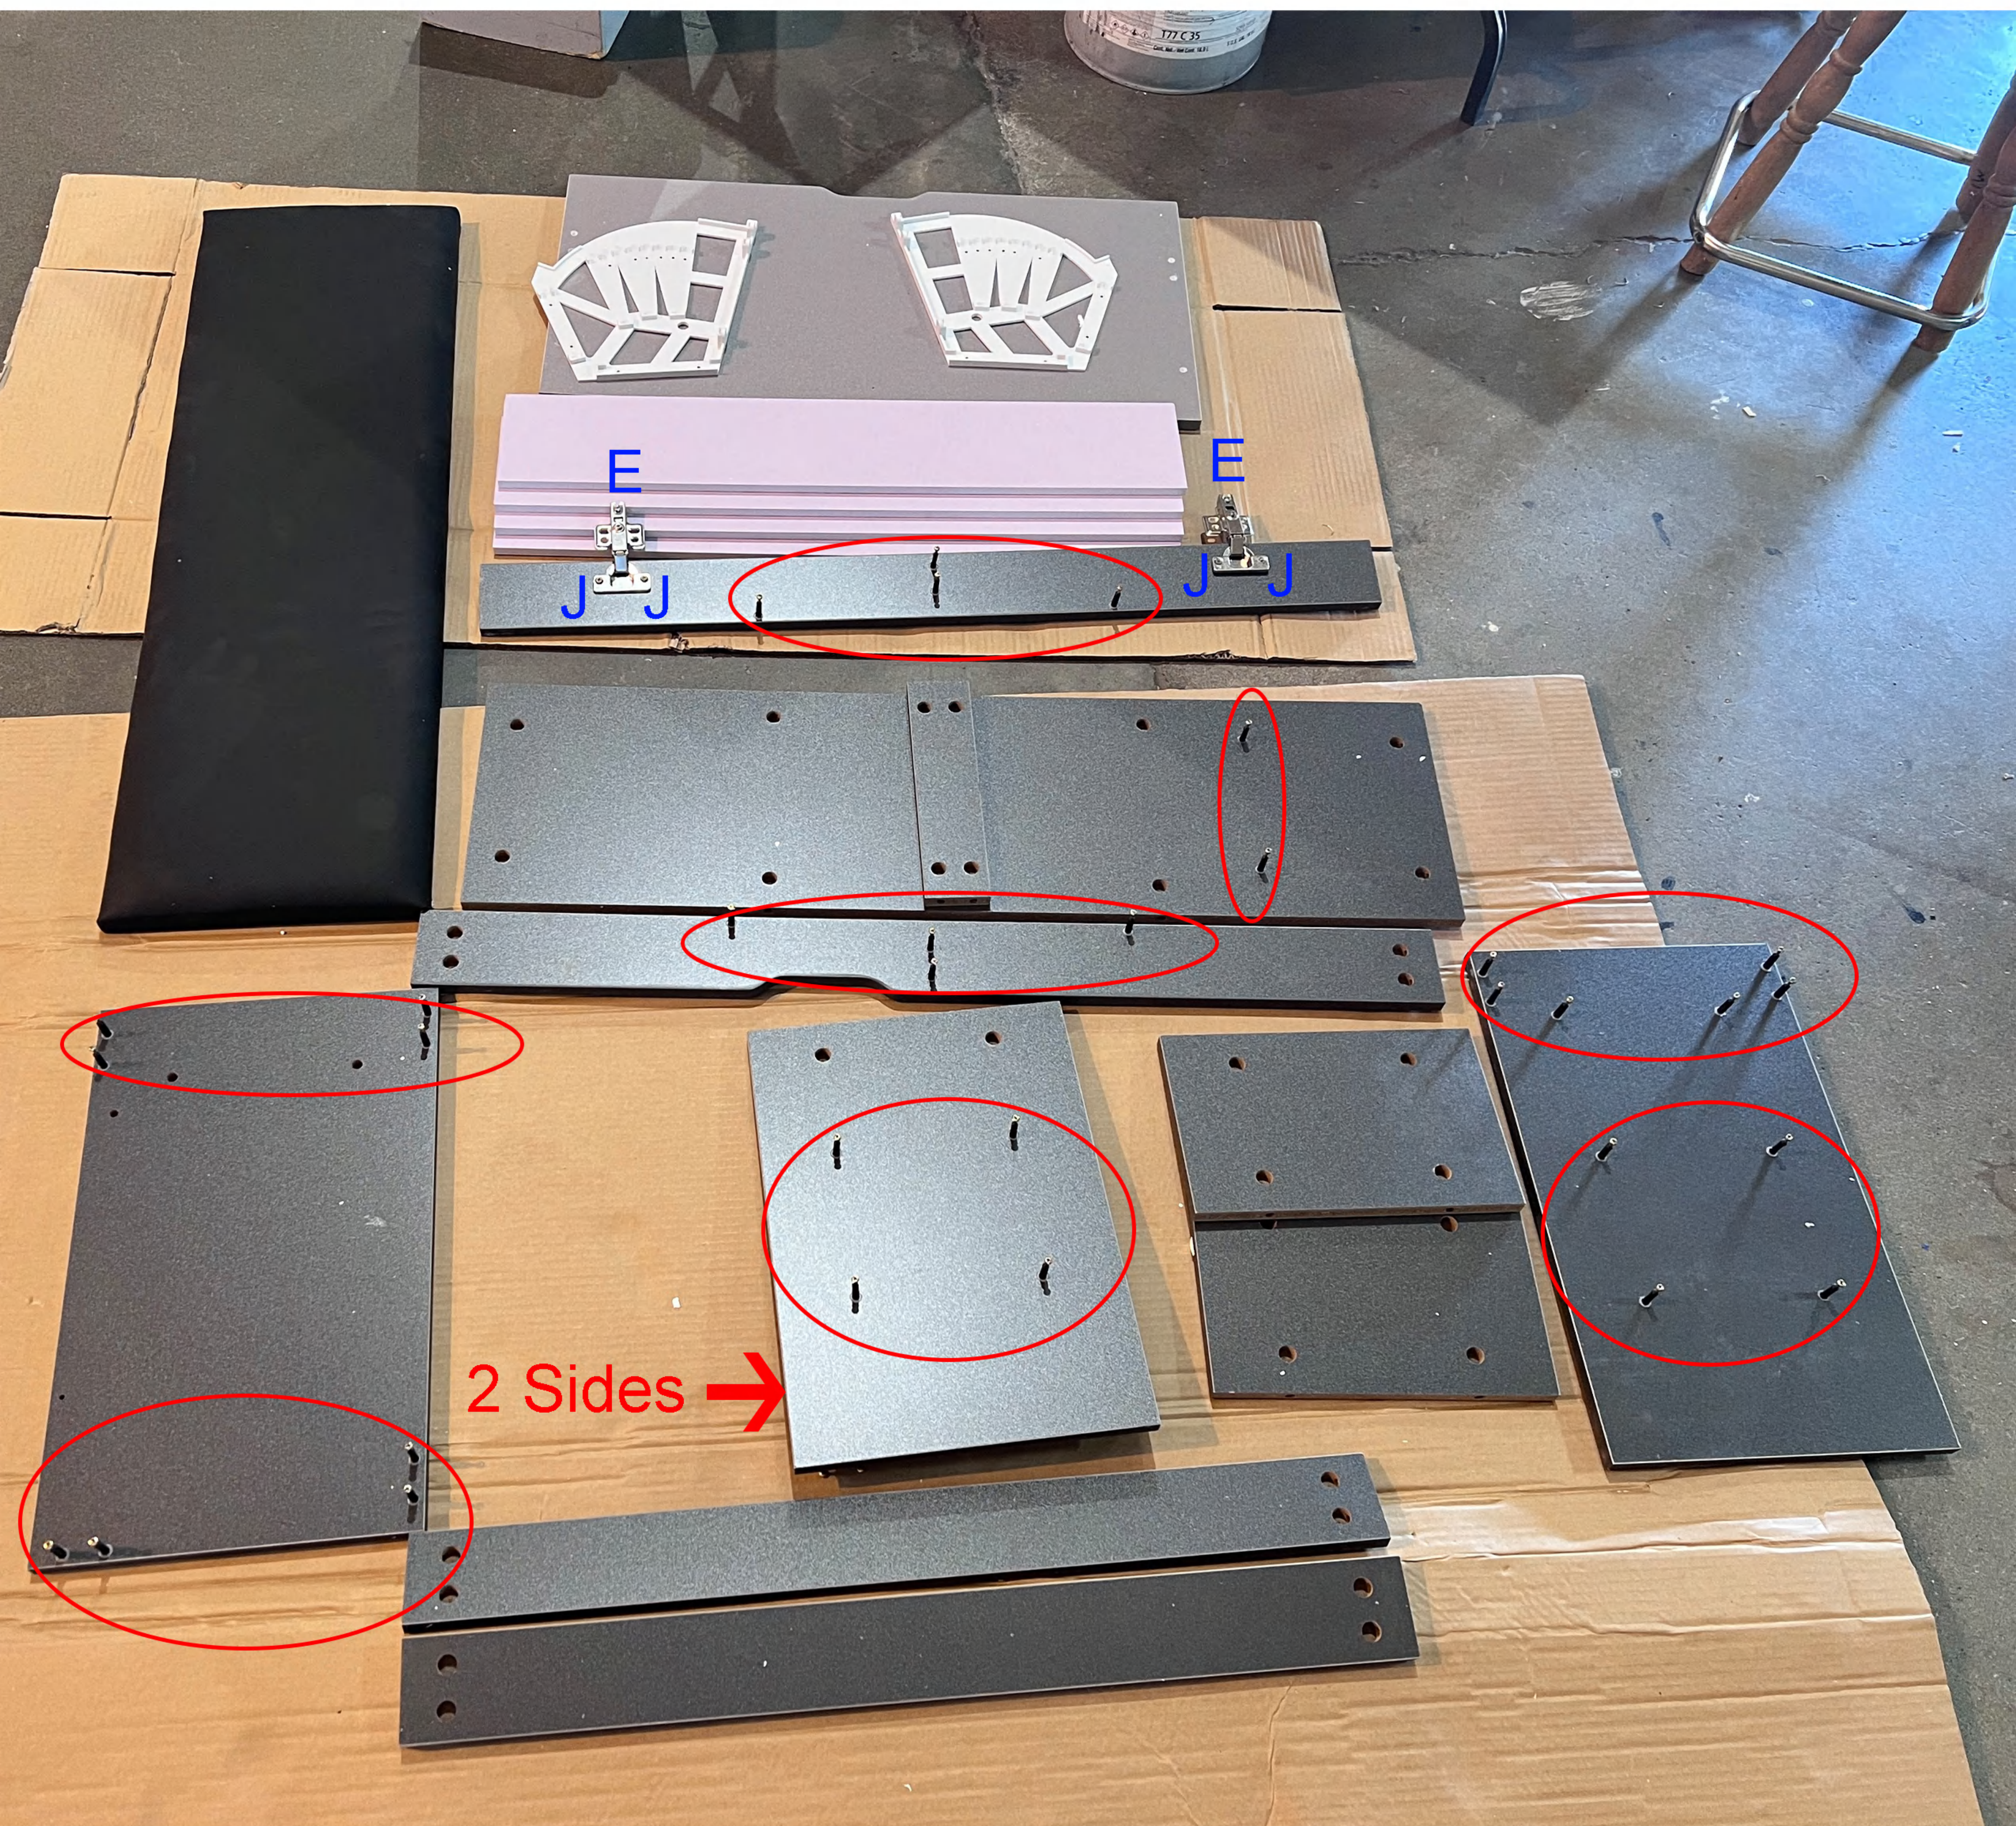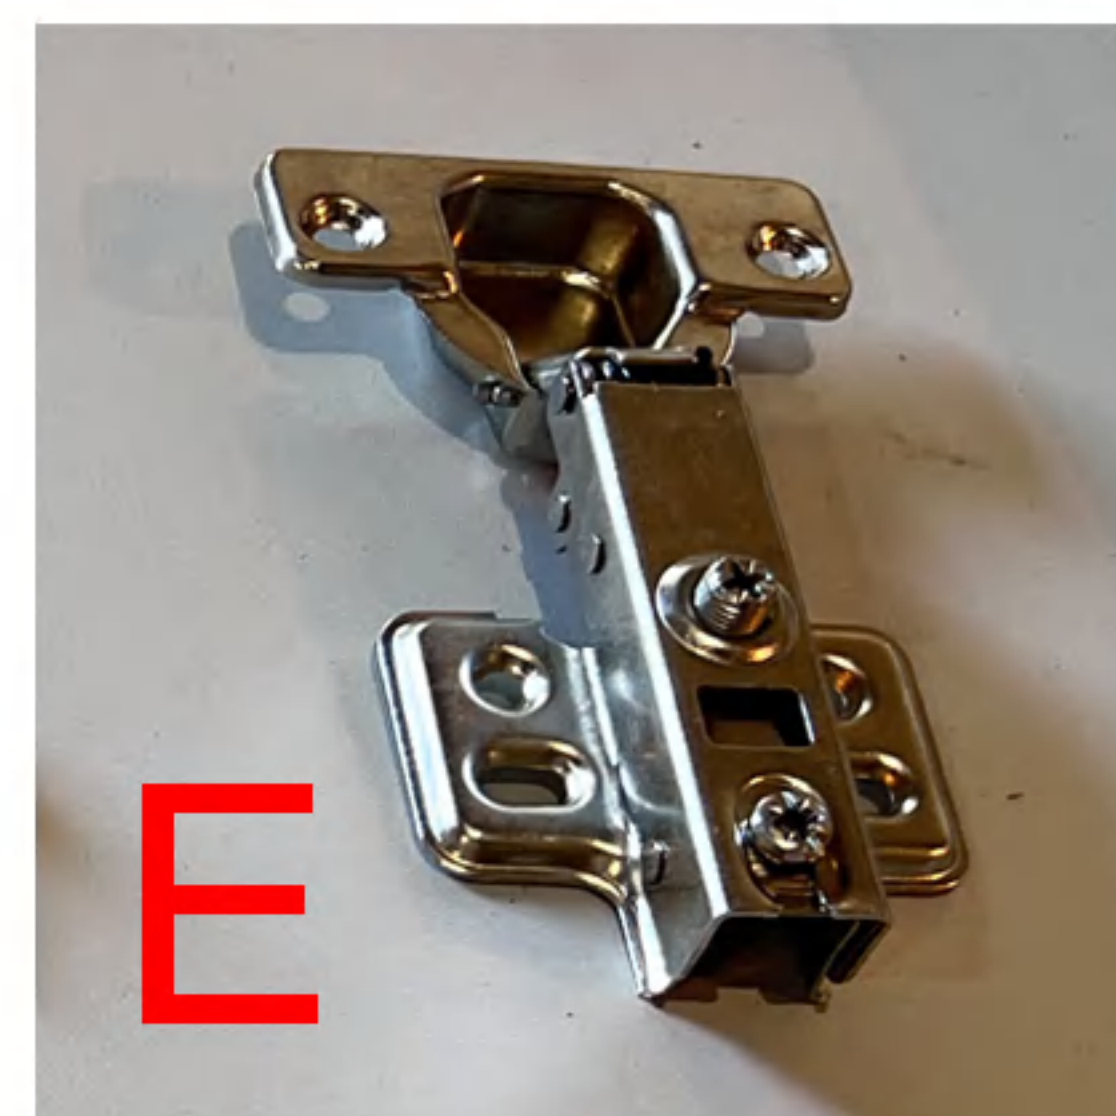


Step 2

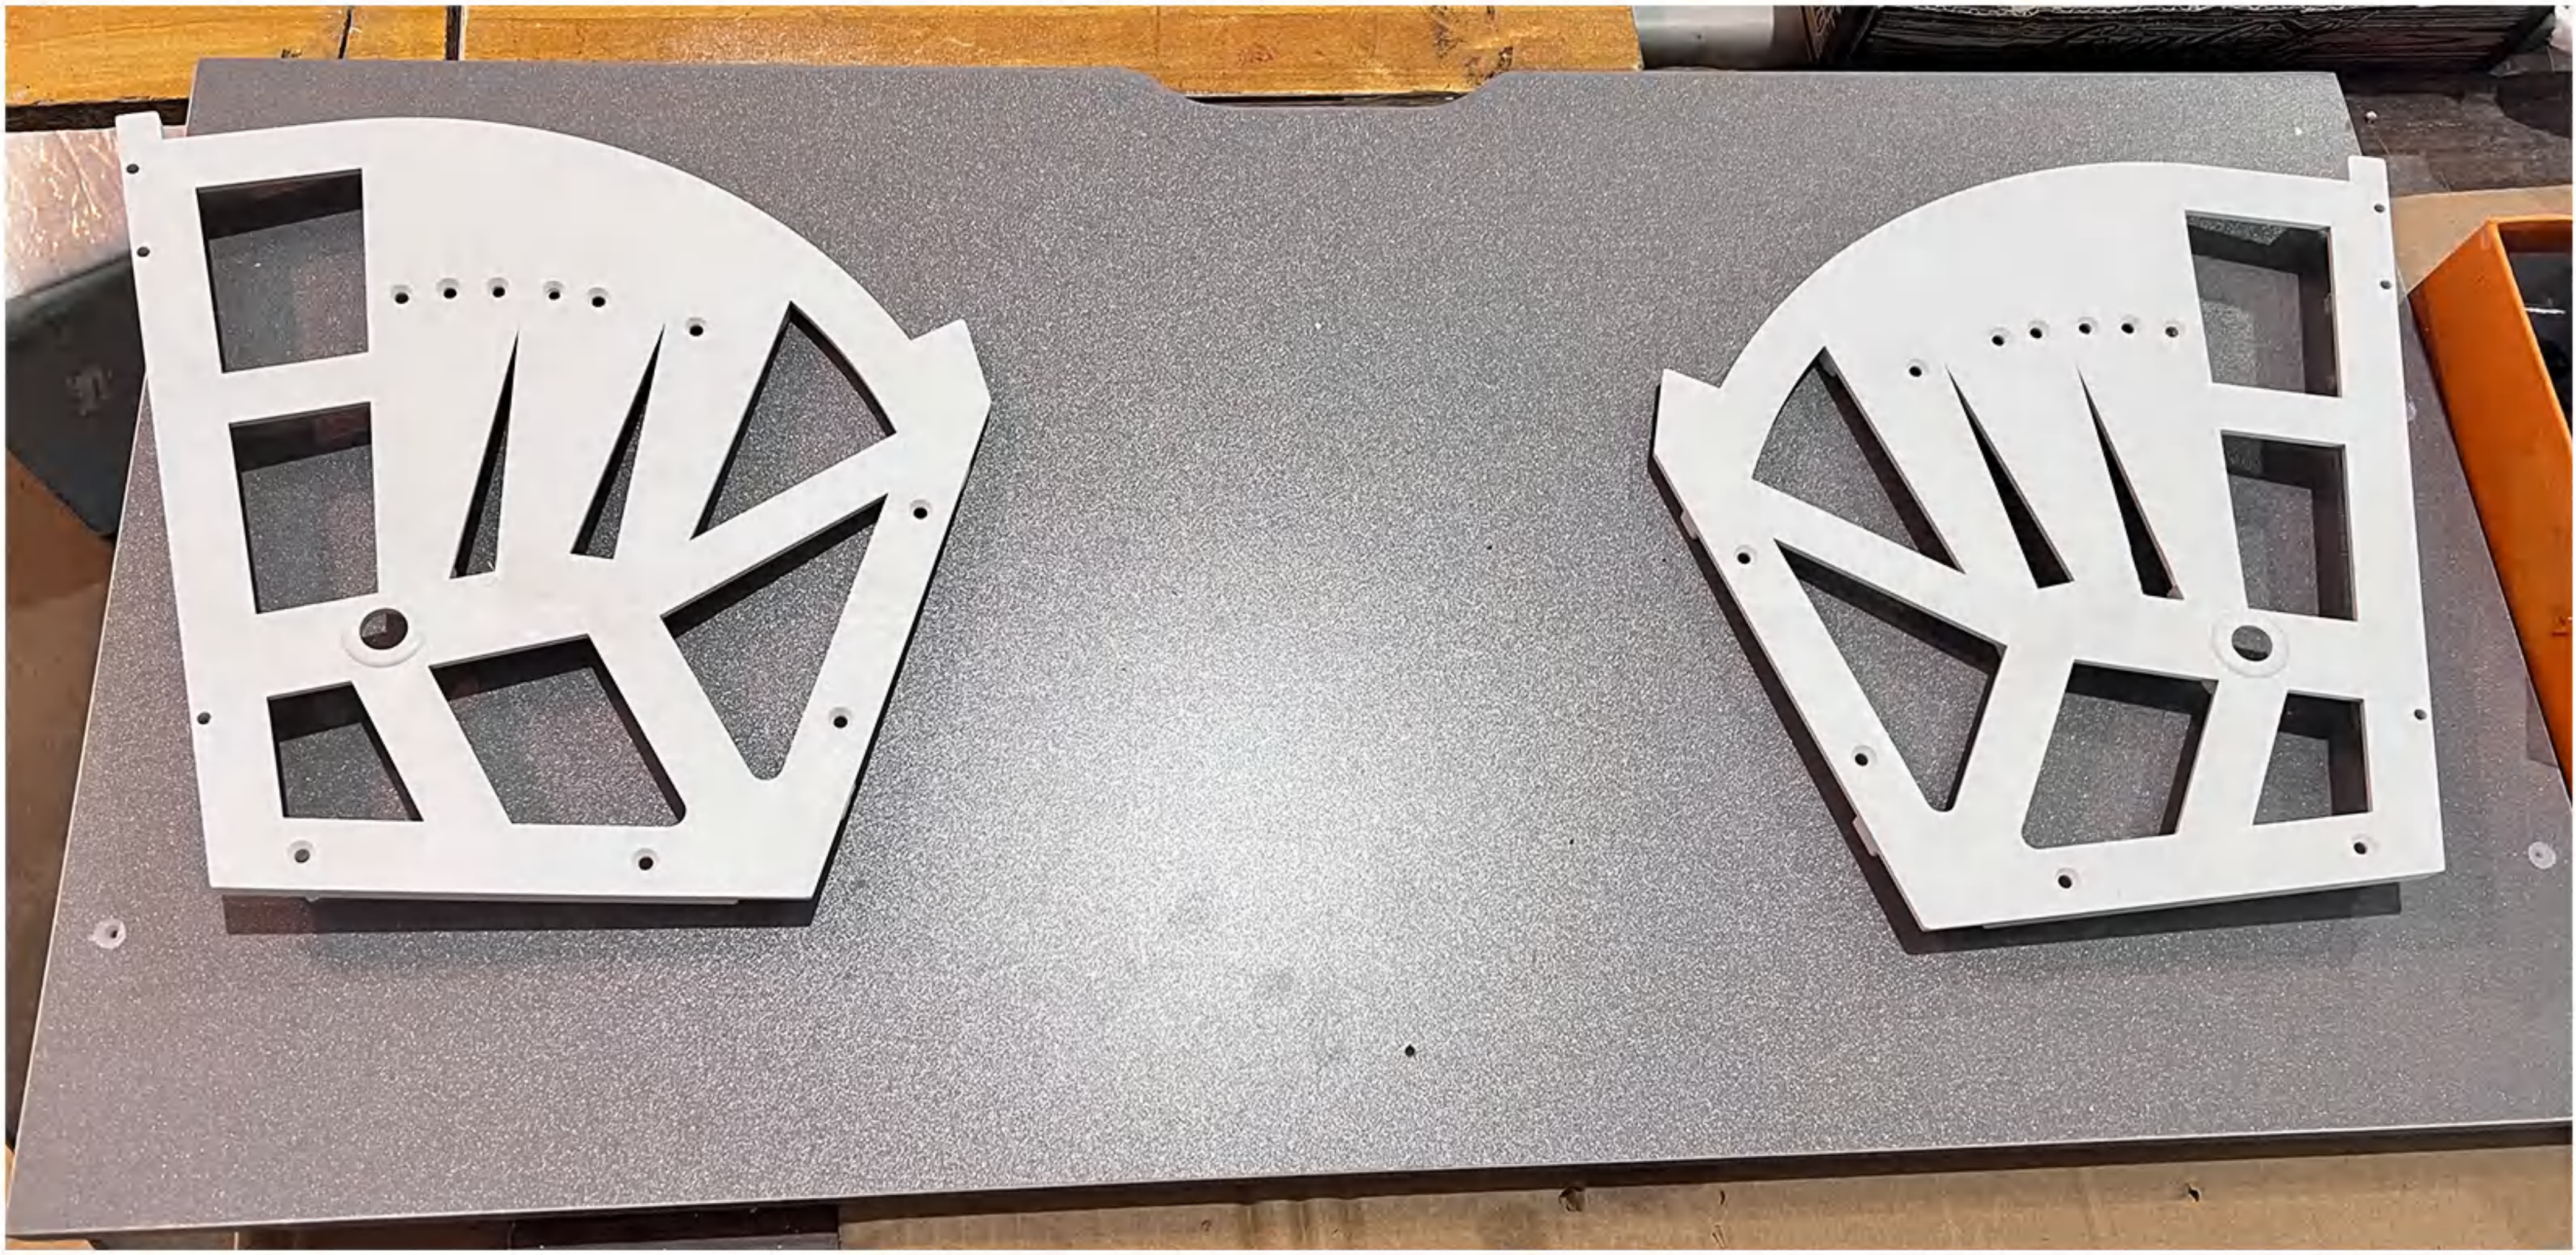

Step 3


3

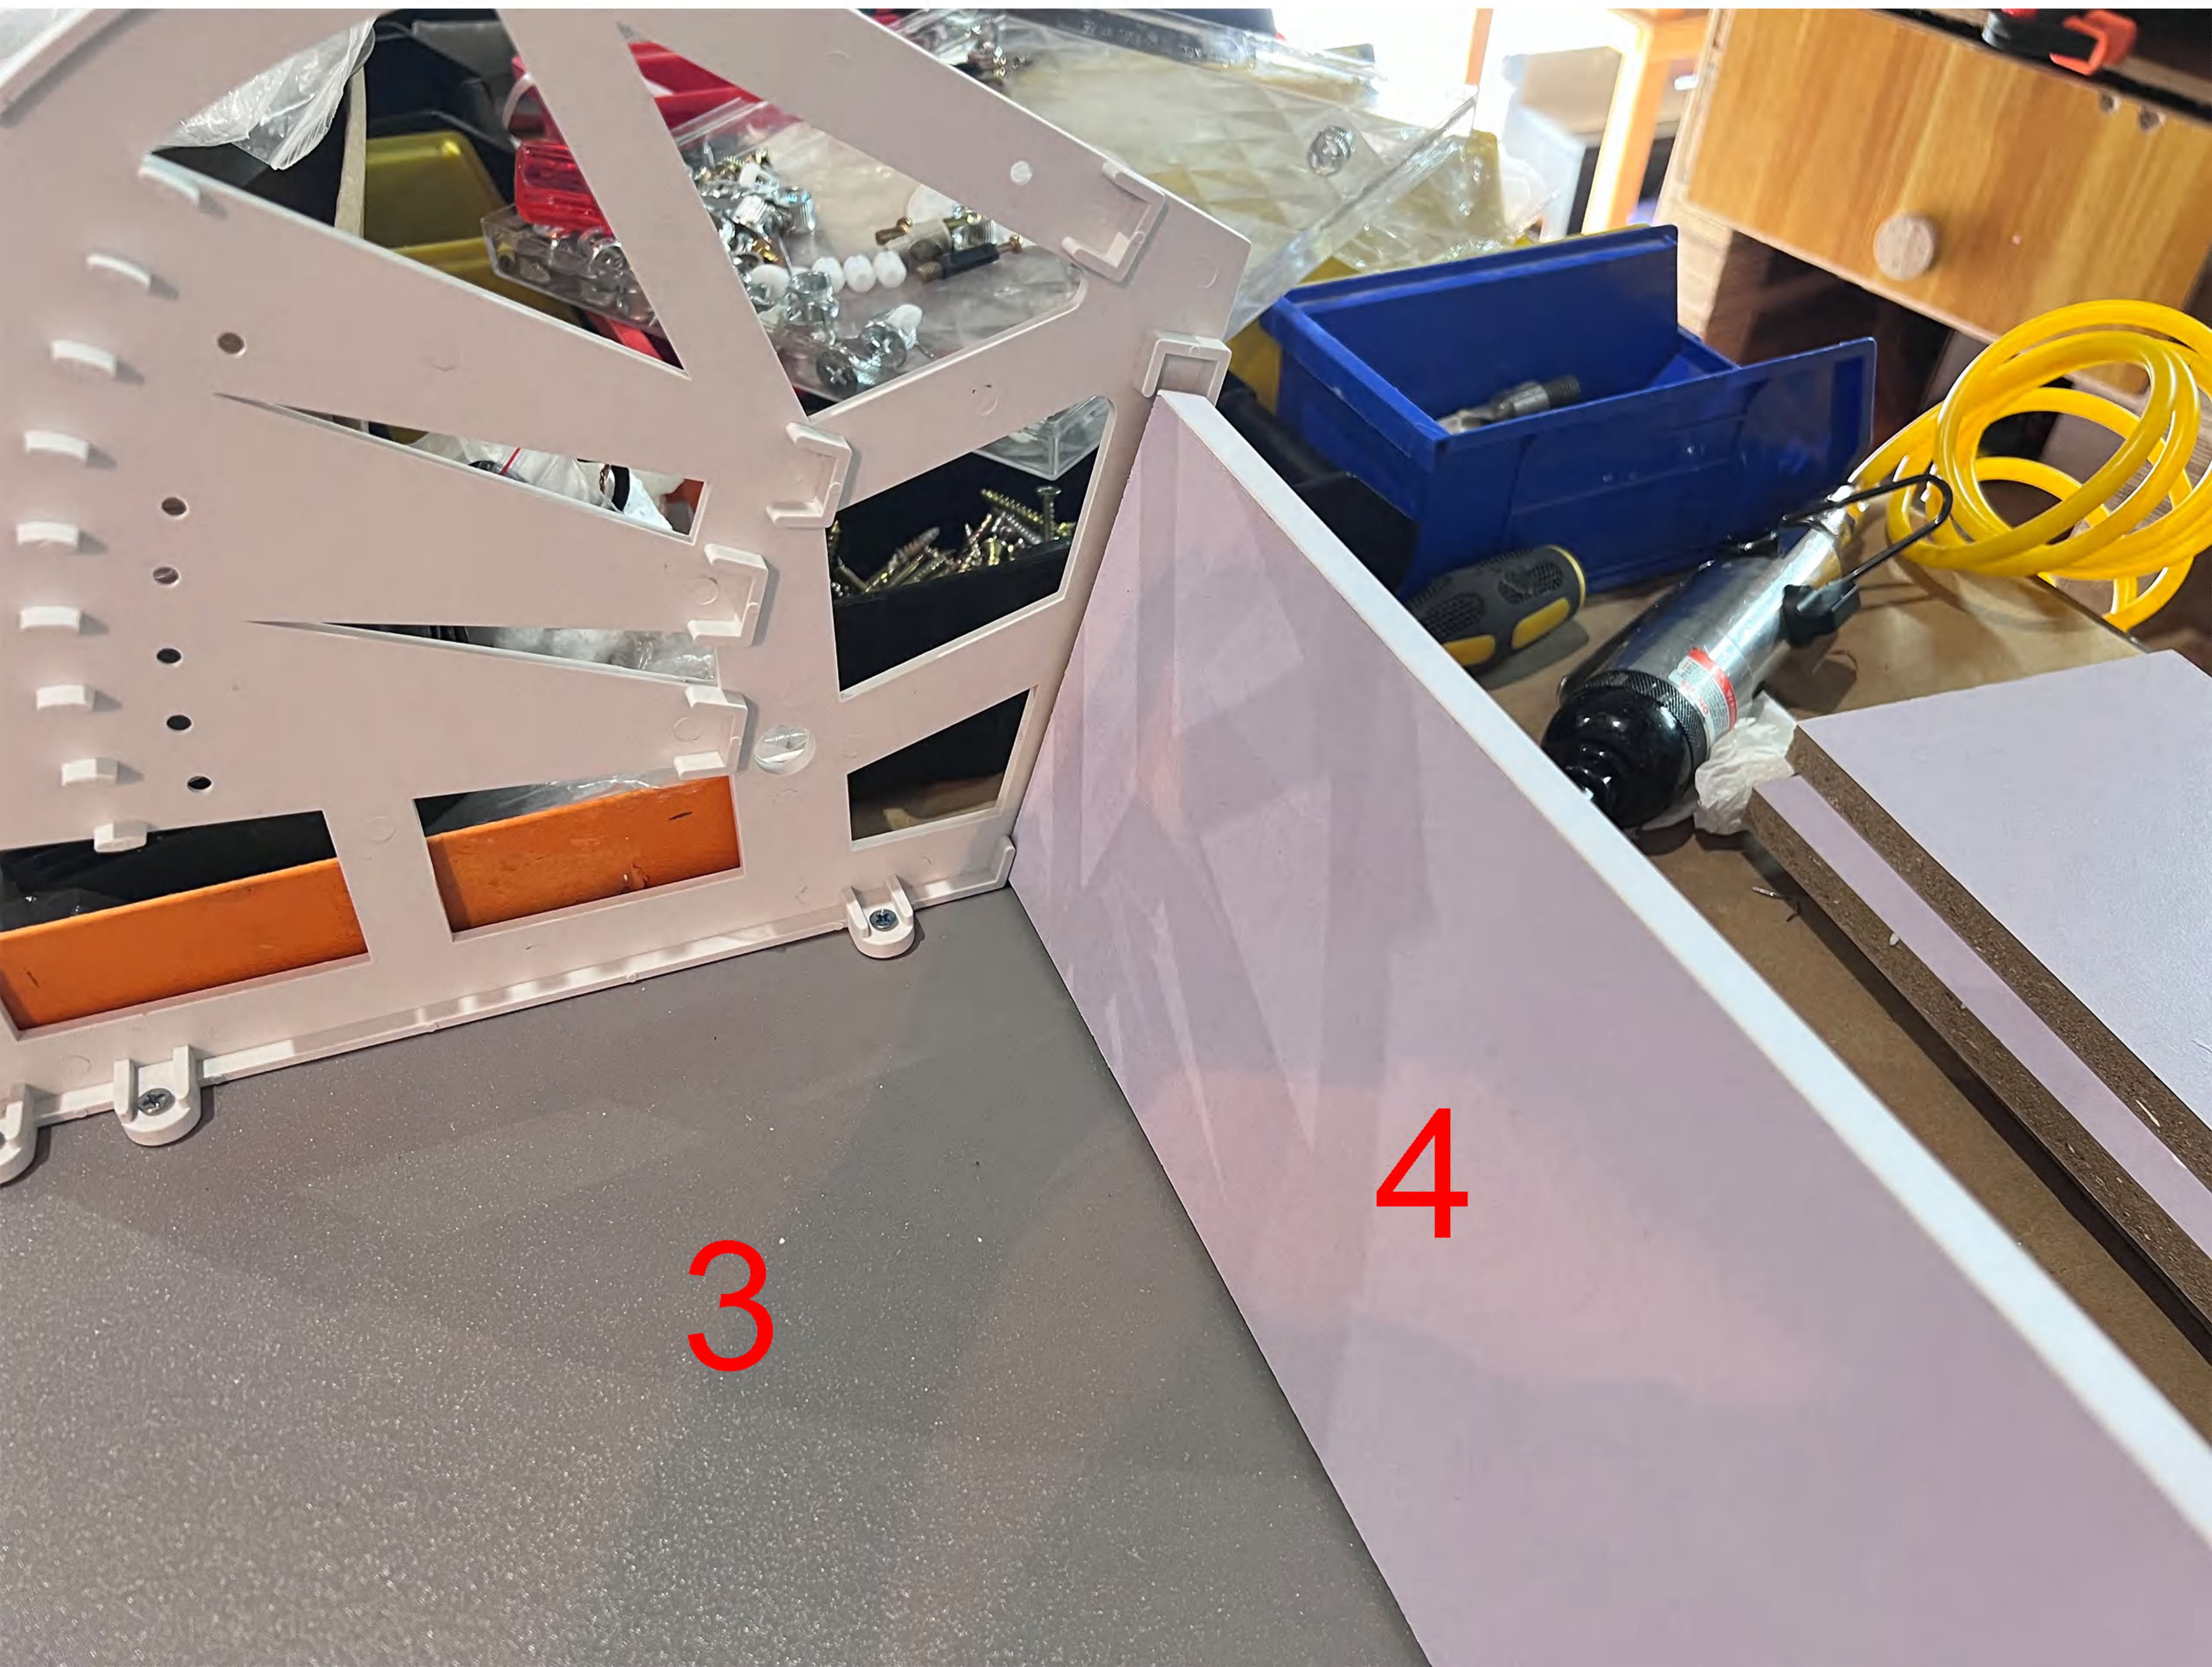


Step 4



← →
2 Sides

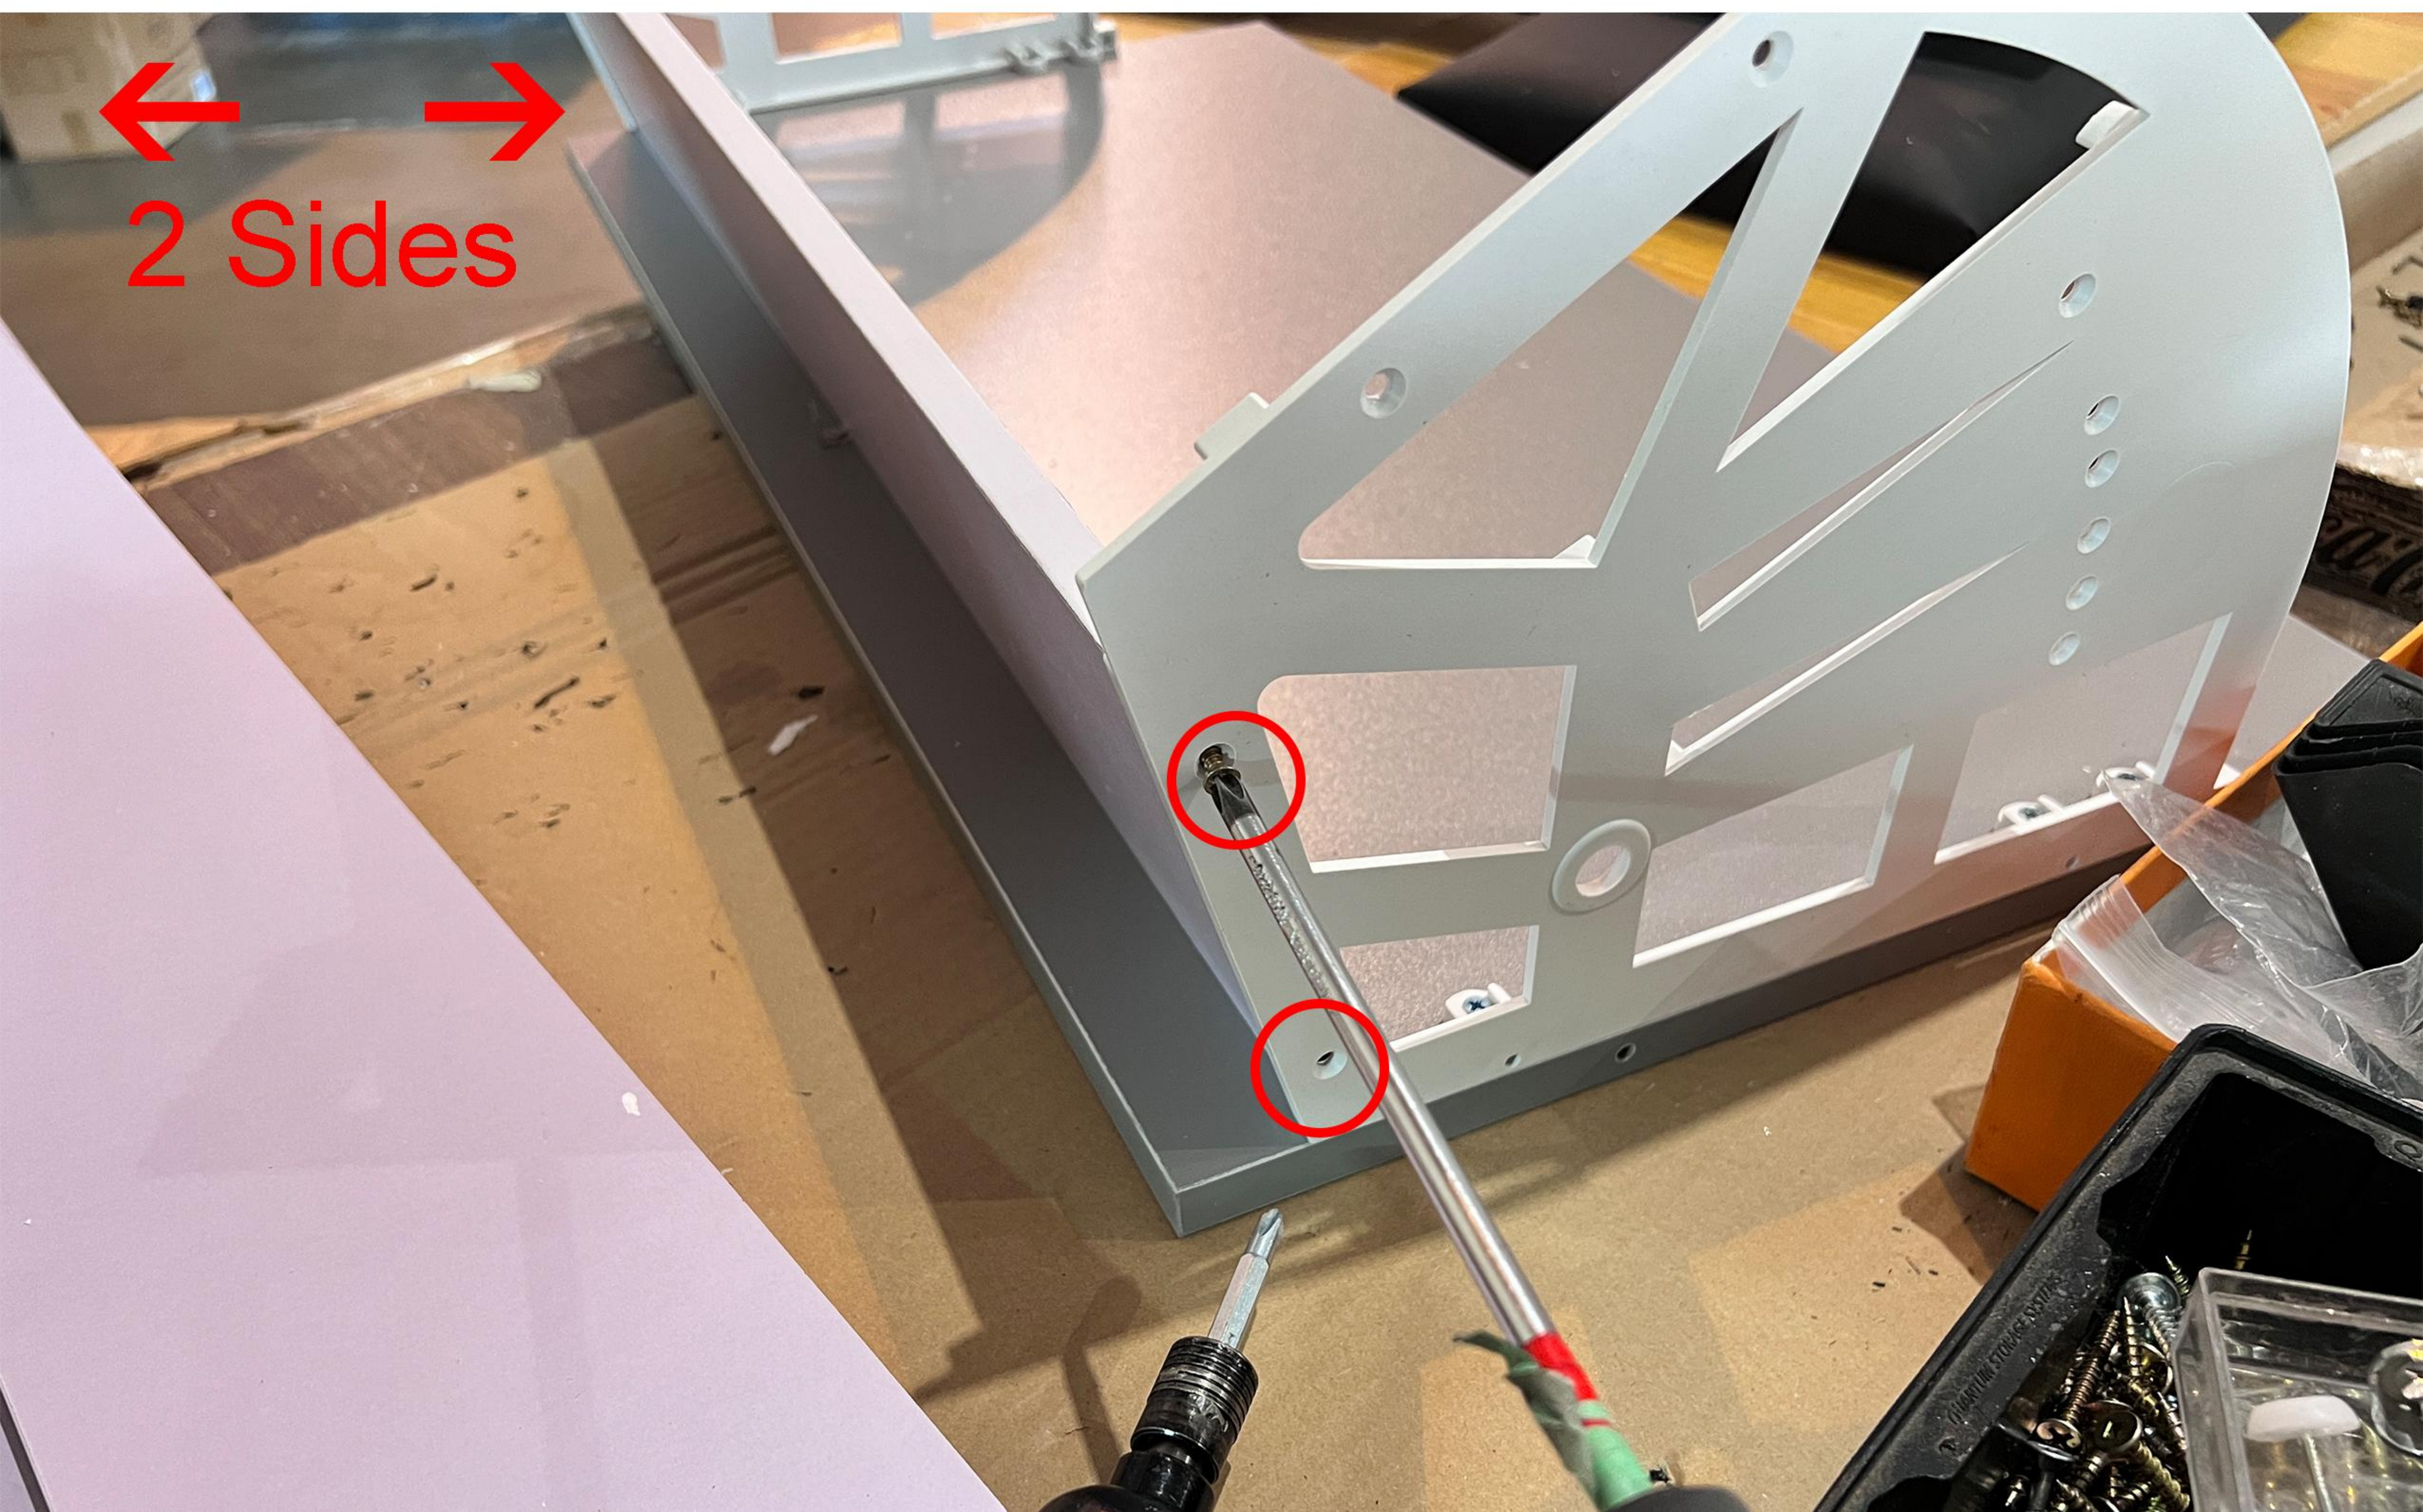



Step 5

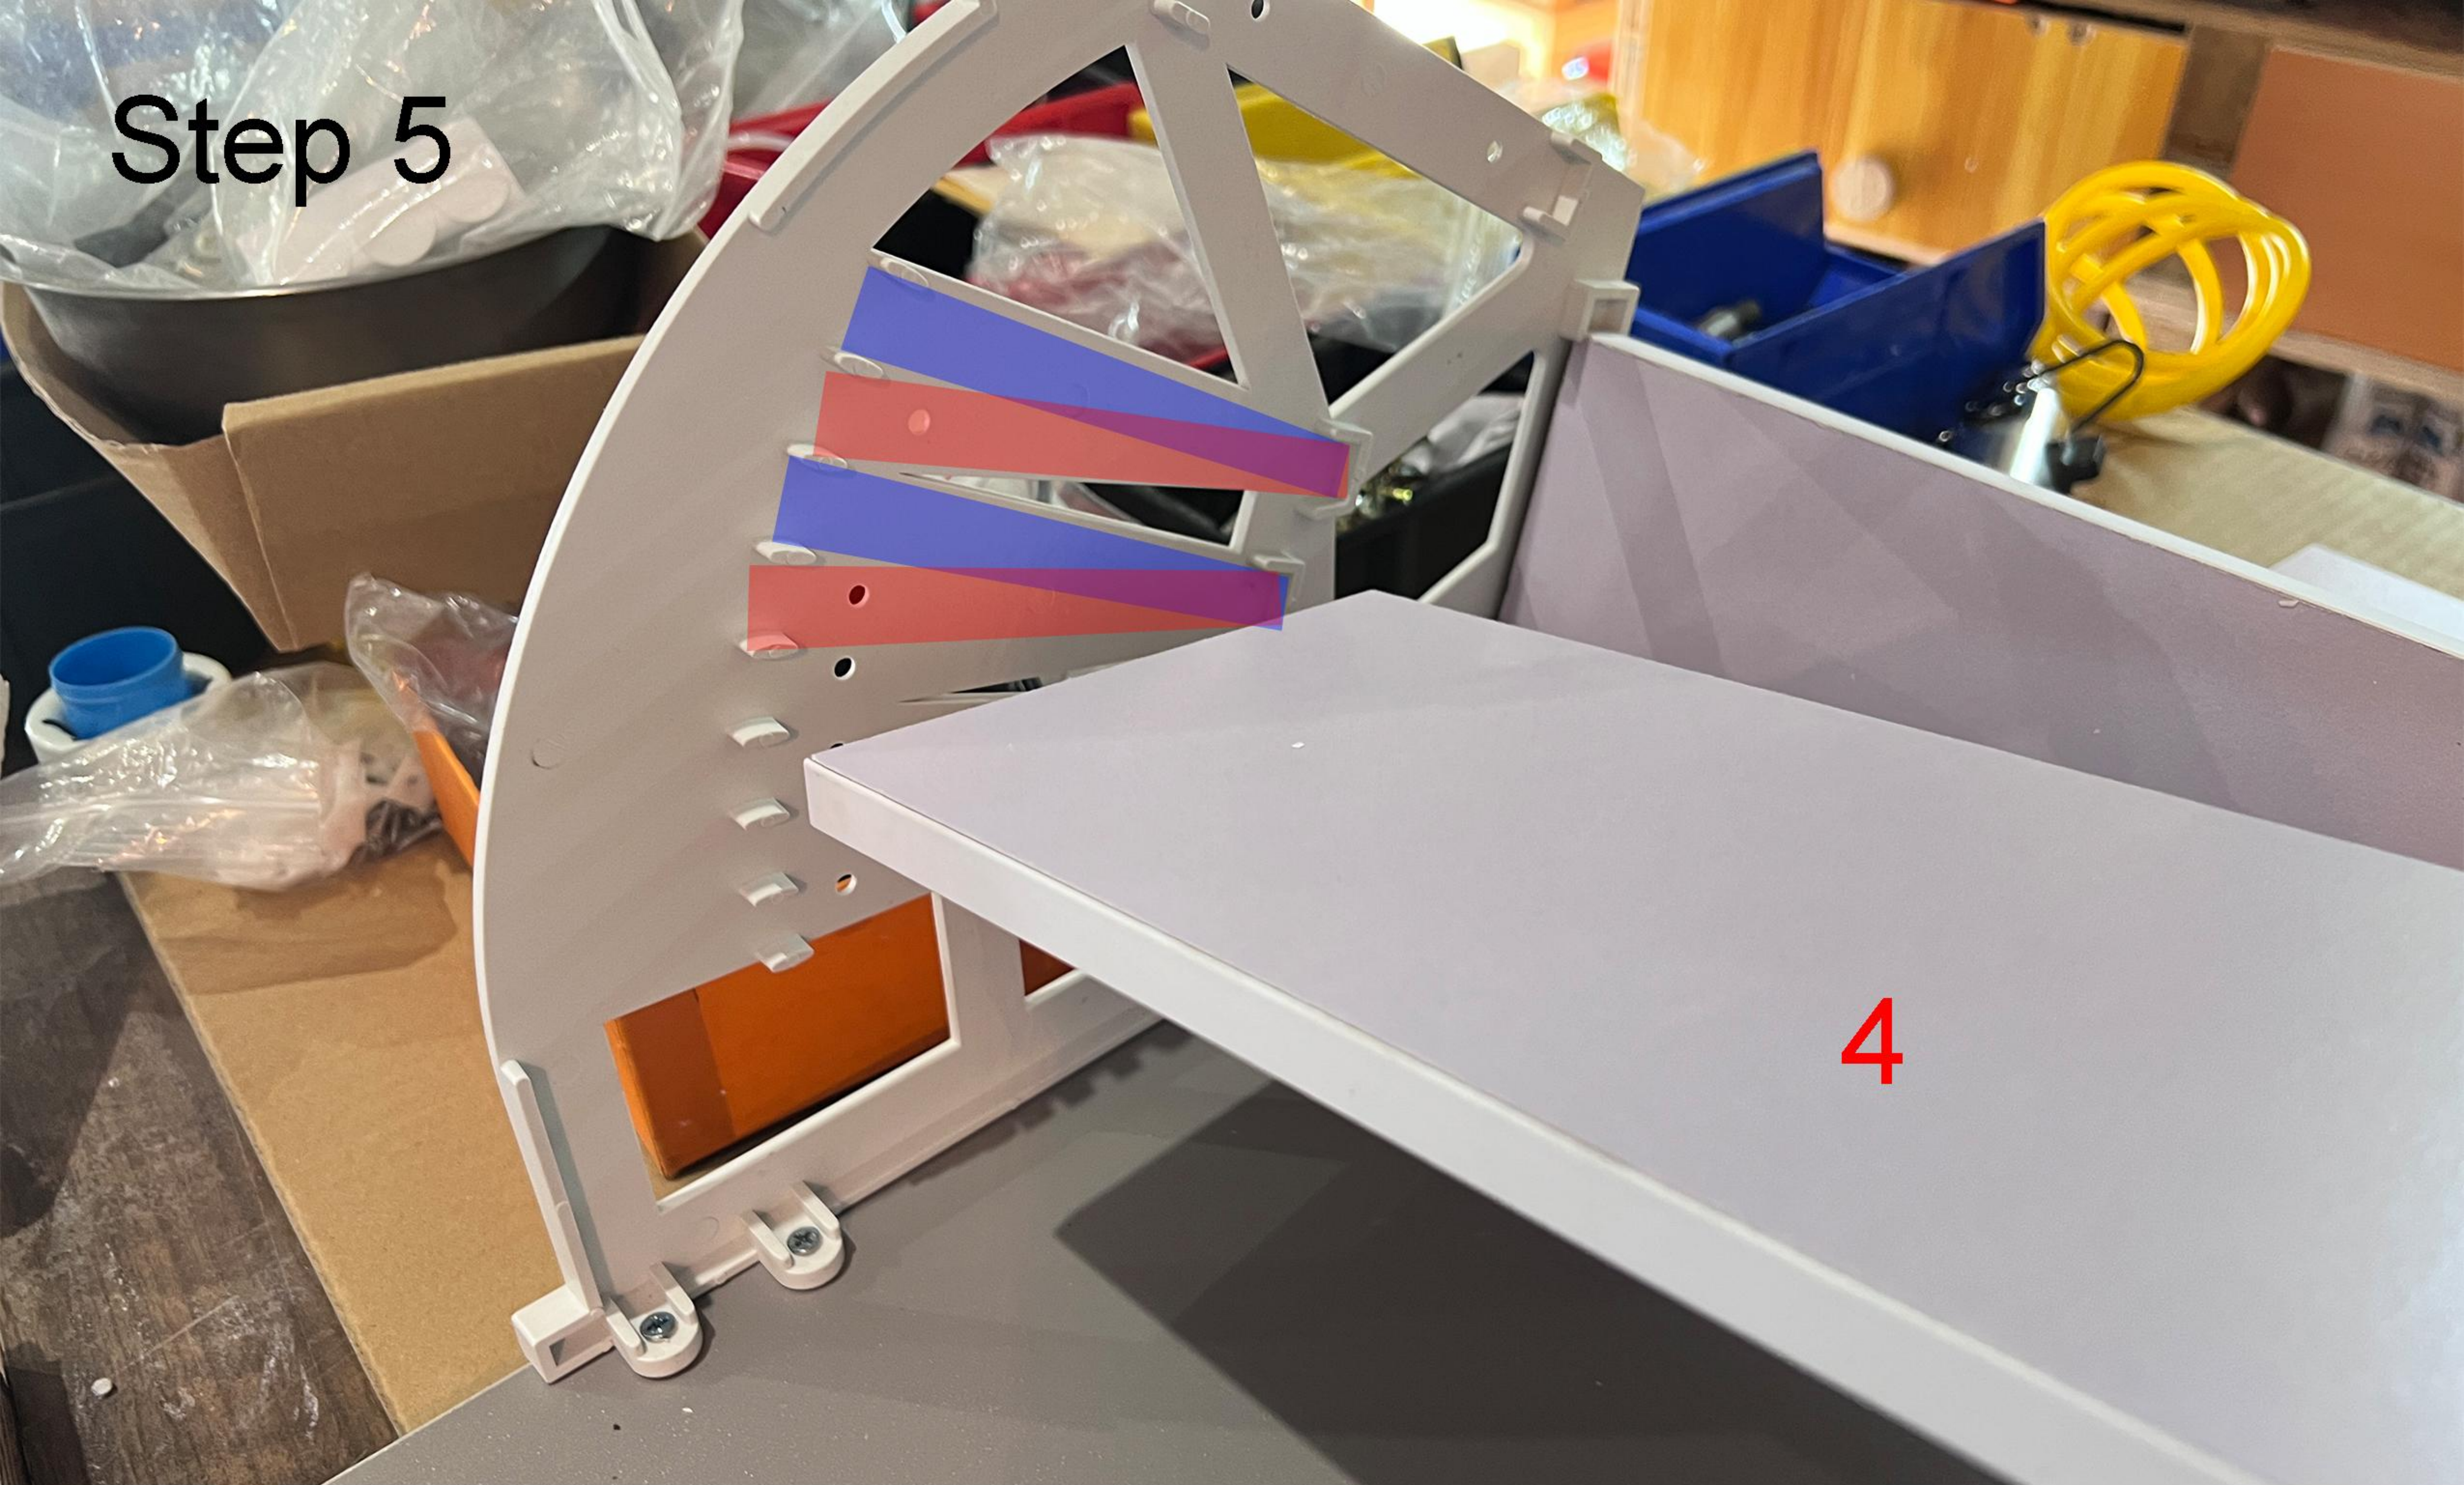

Place Panel No.4 in the desired position. If needed, use J to secure it through the pre-drilled holes on the side.





Step 6

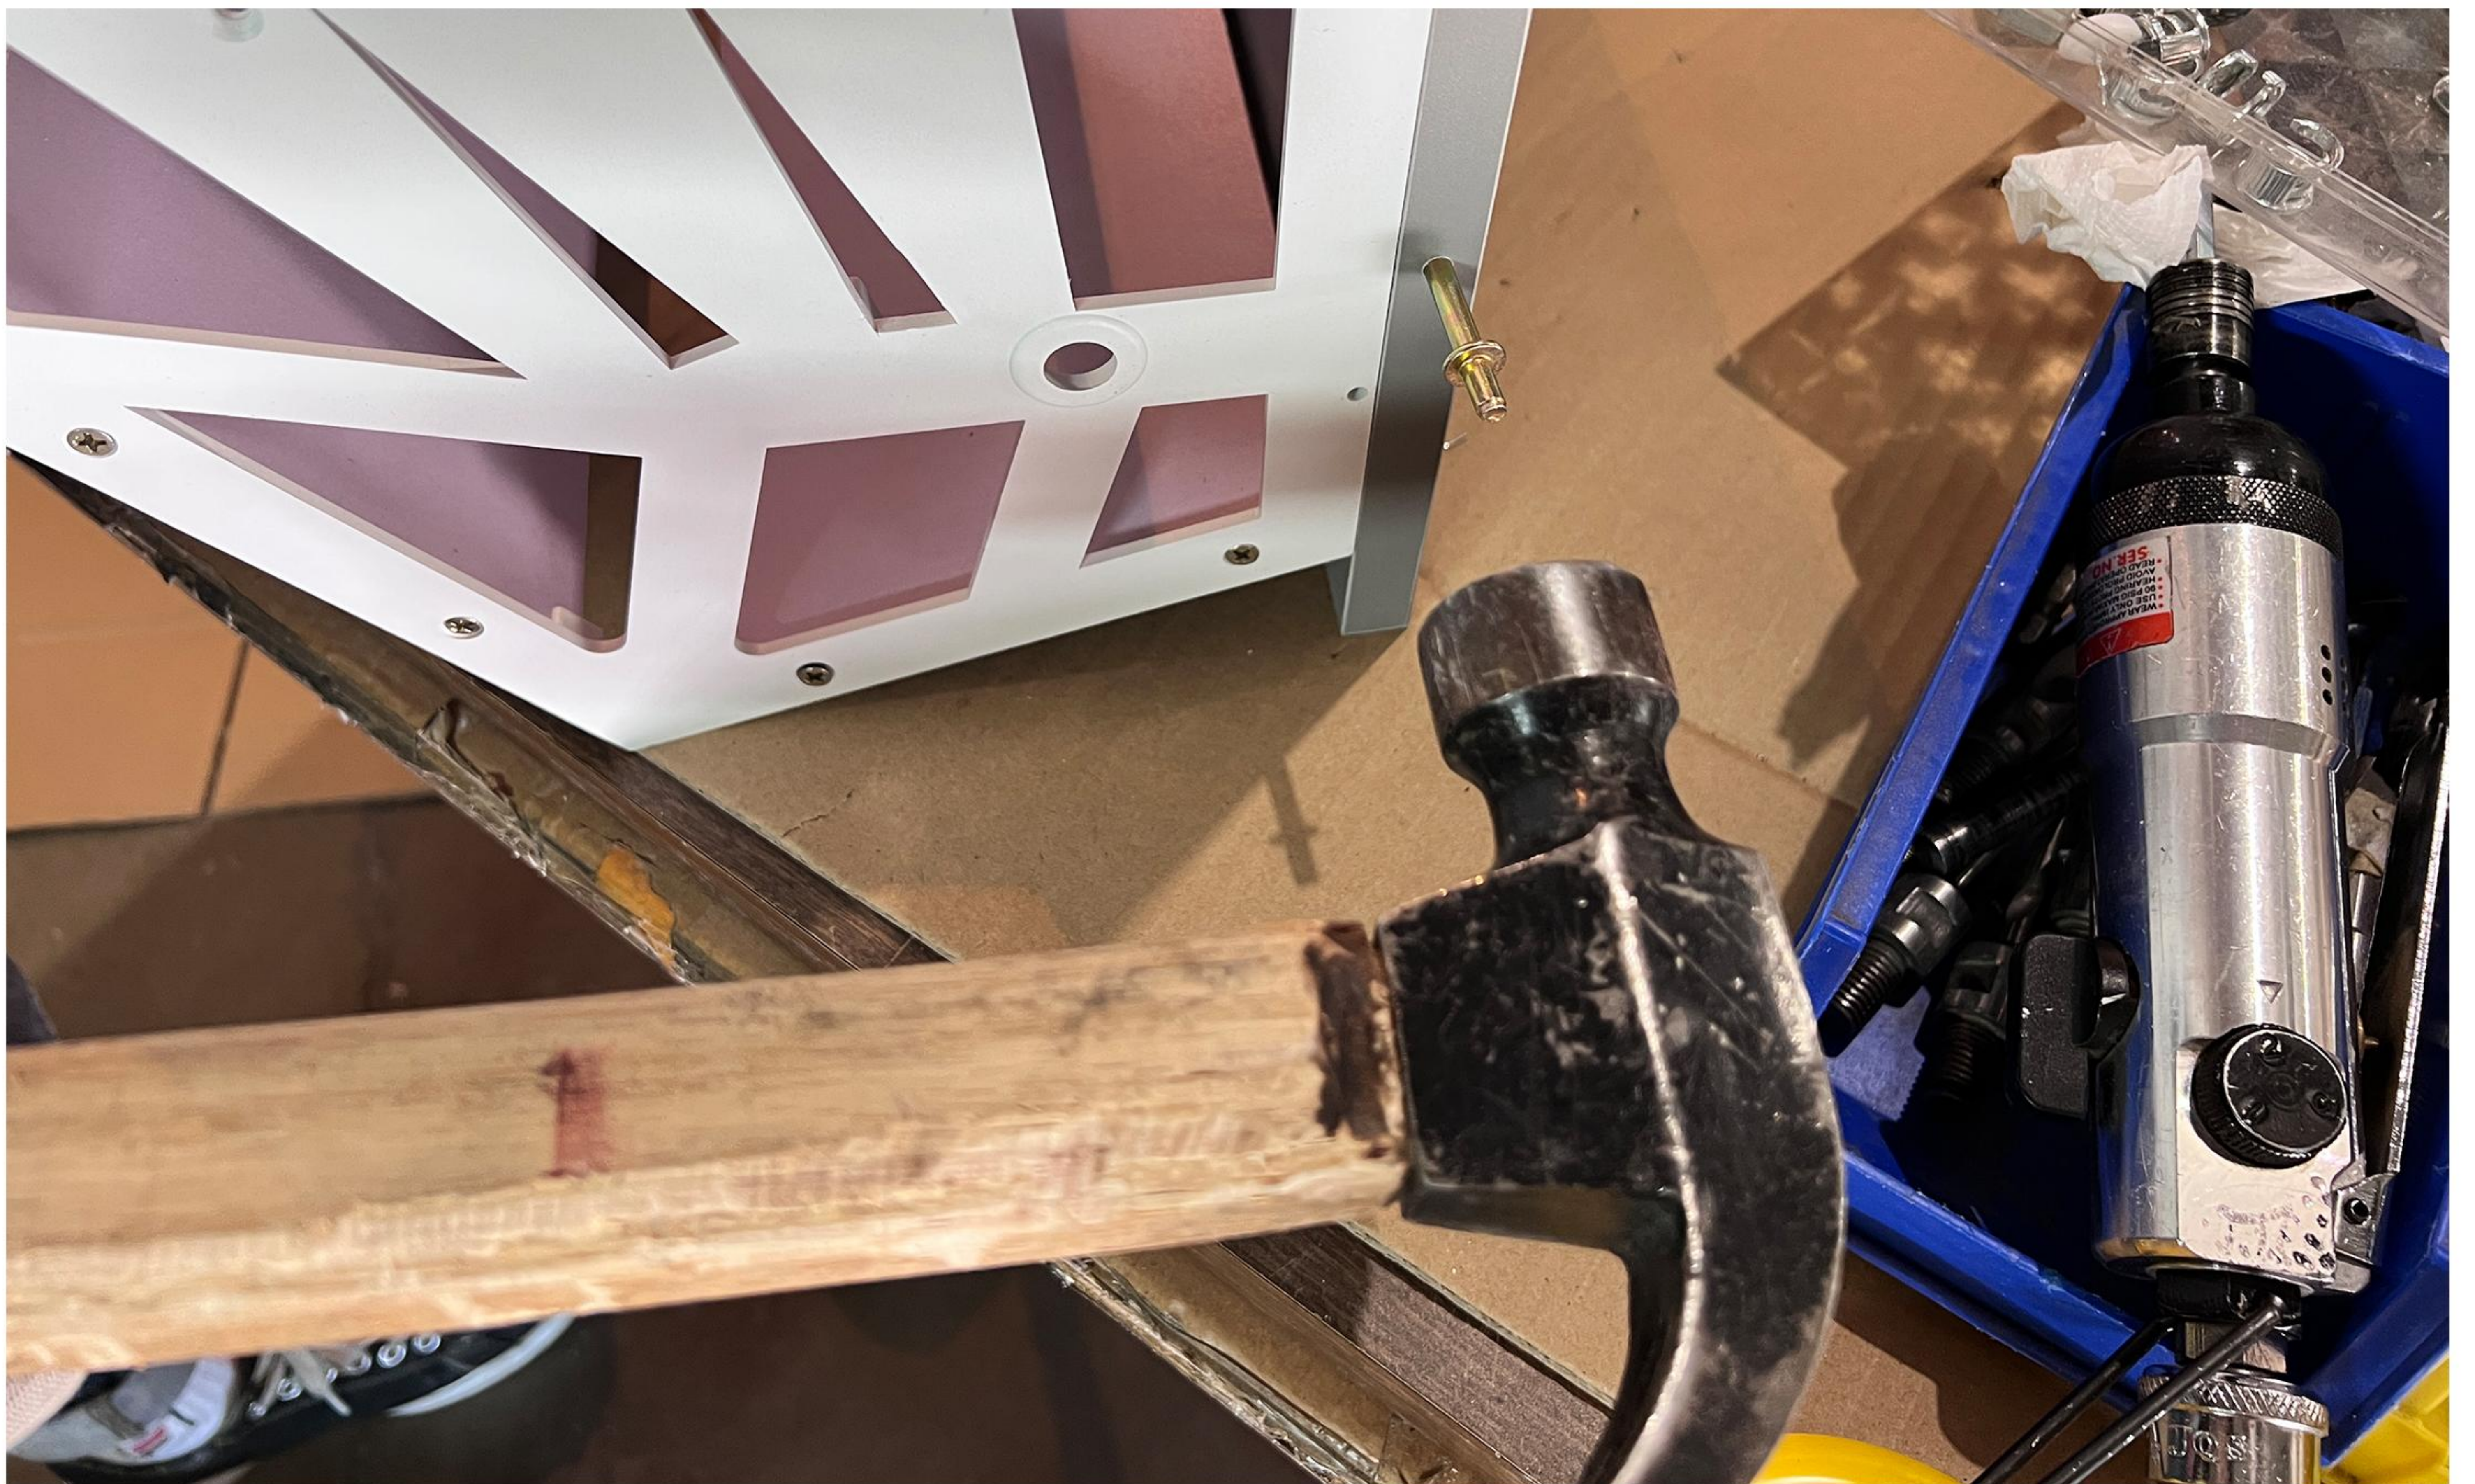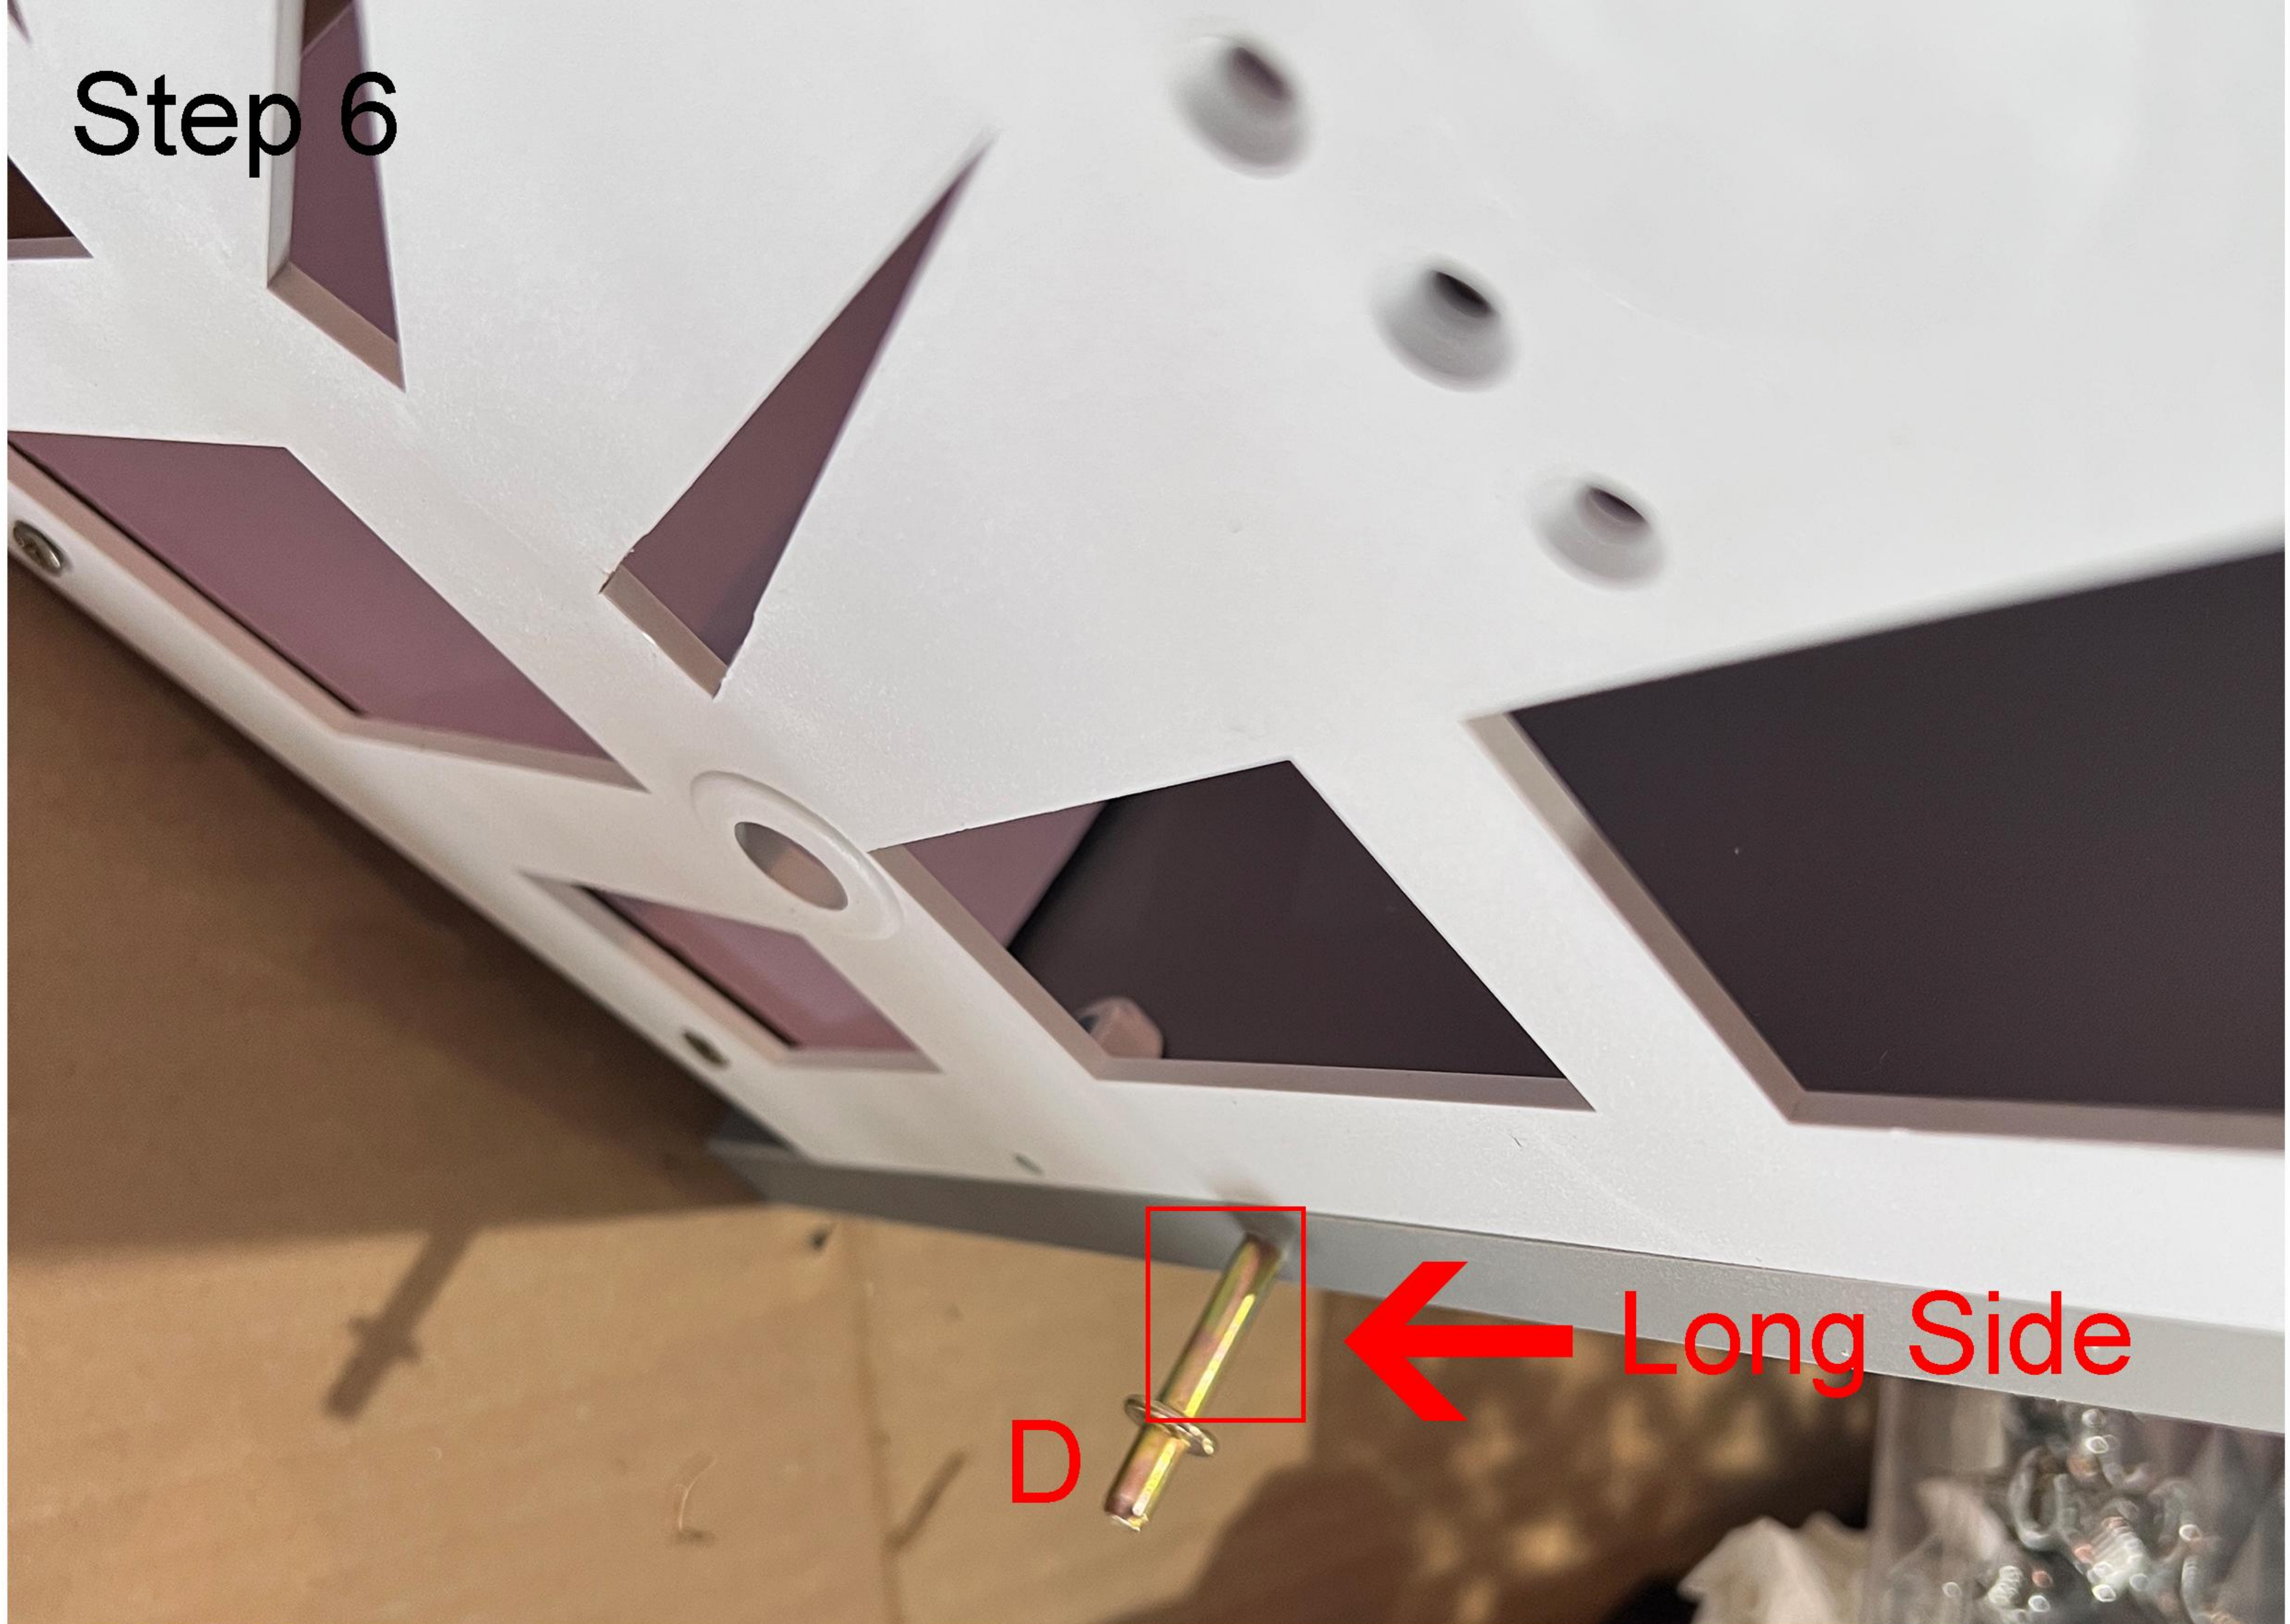

Step 7



Step 8

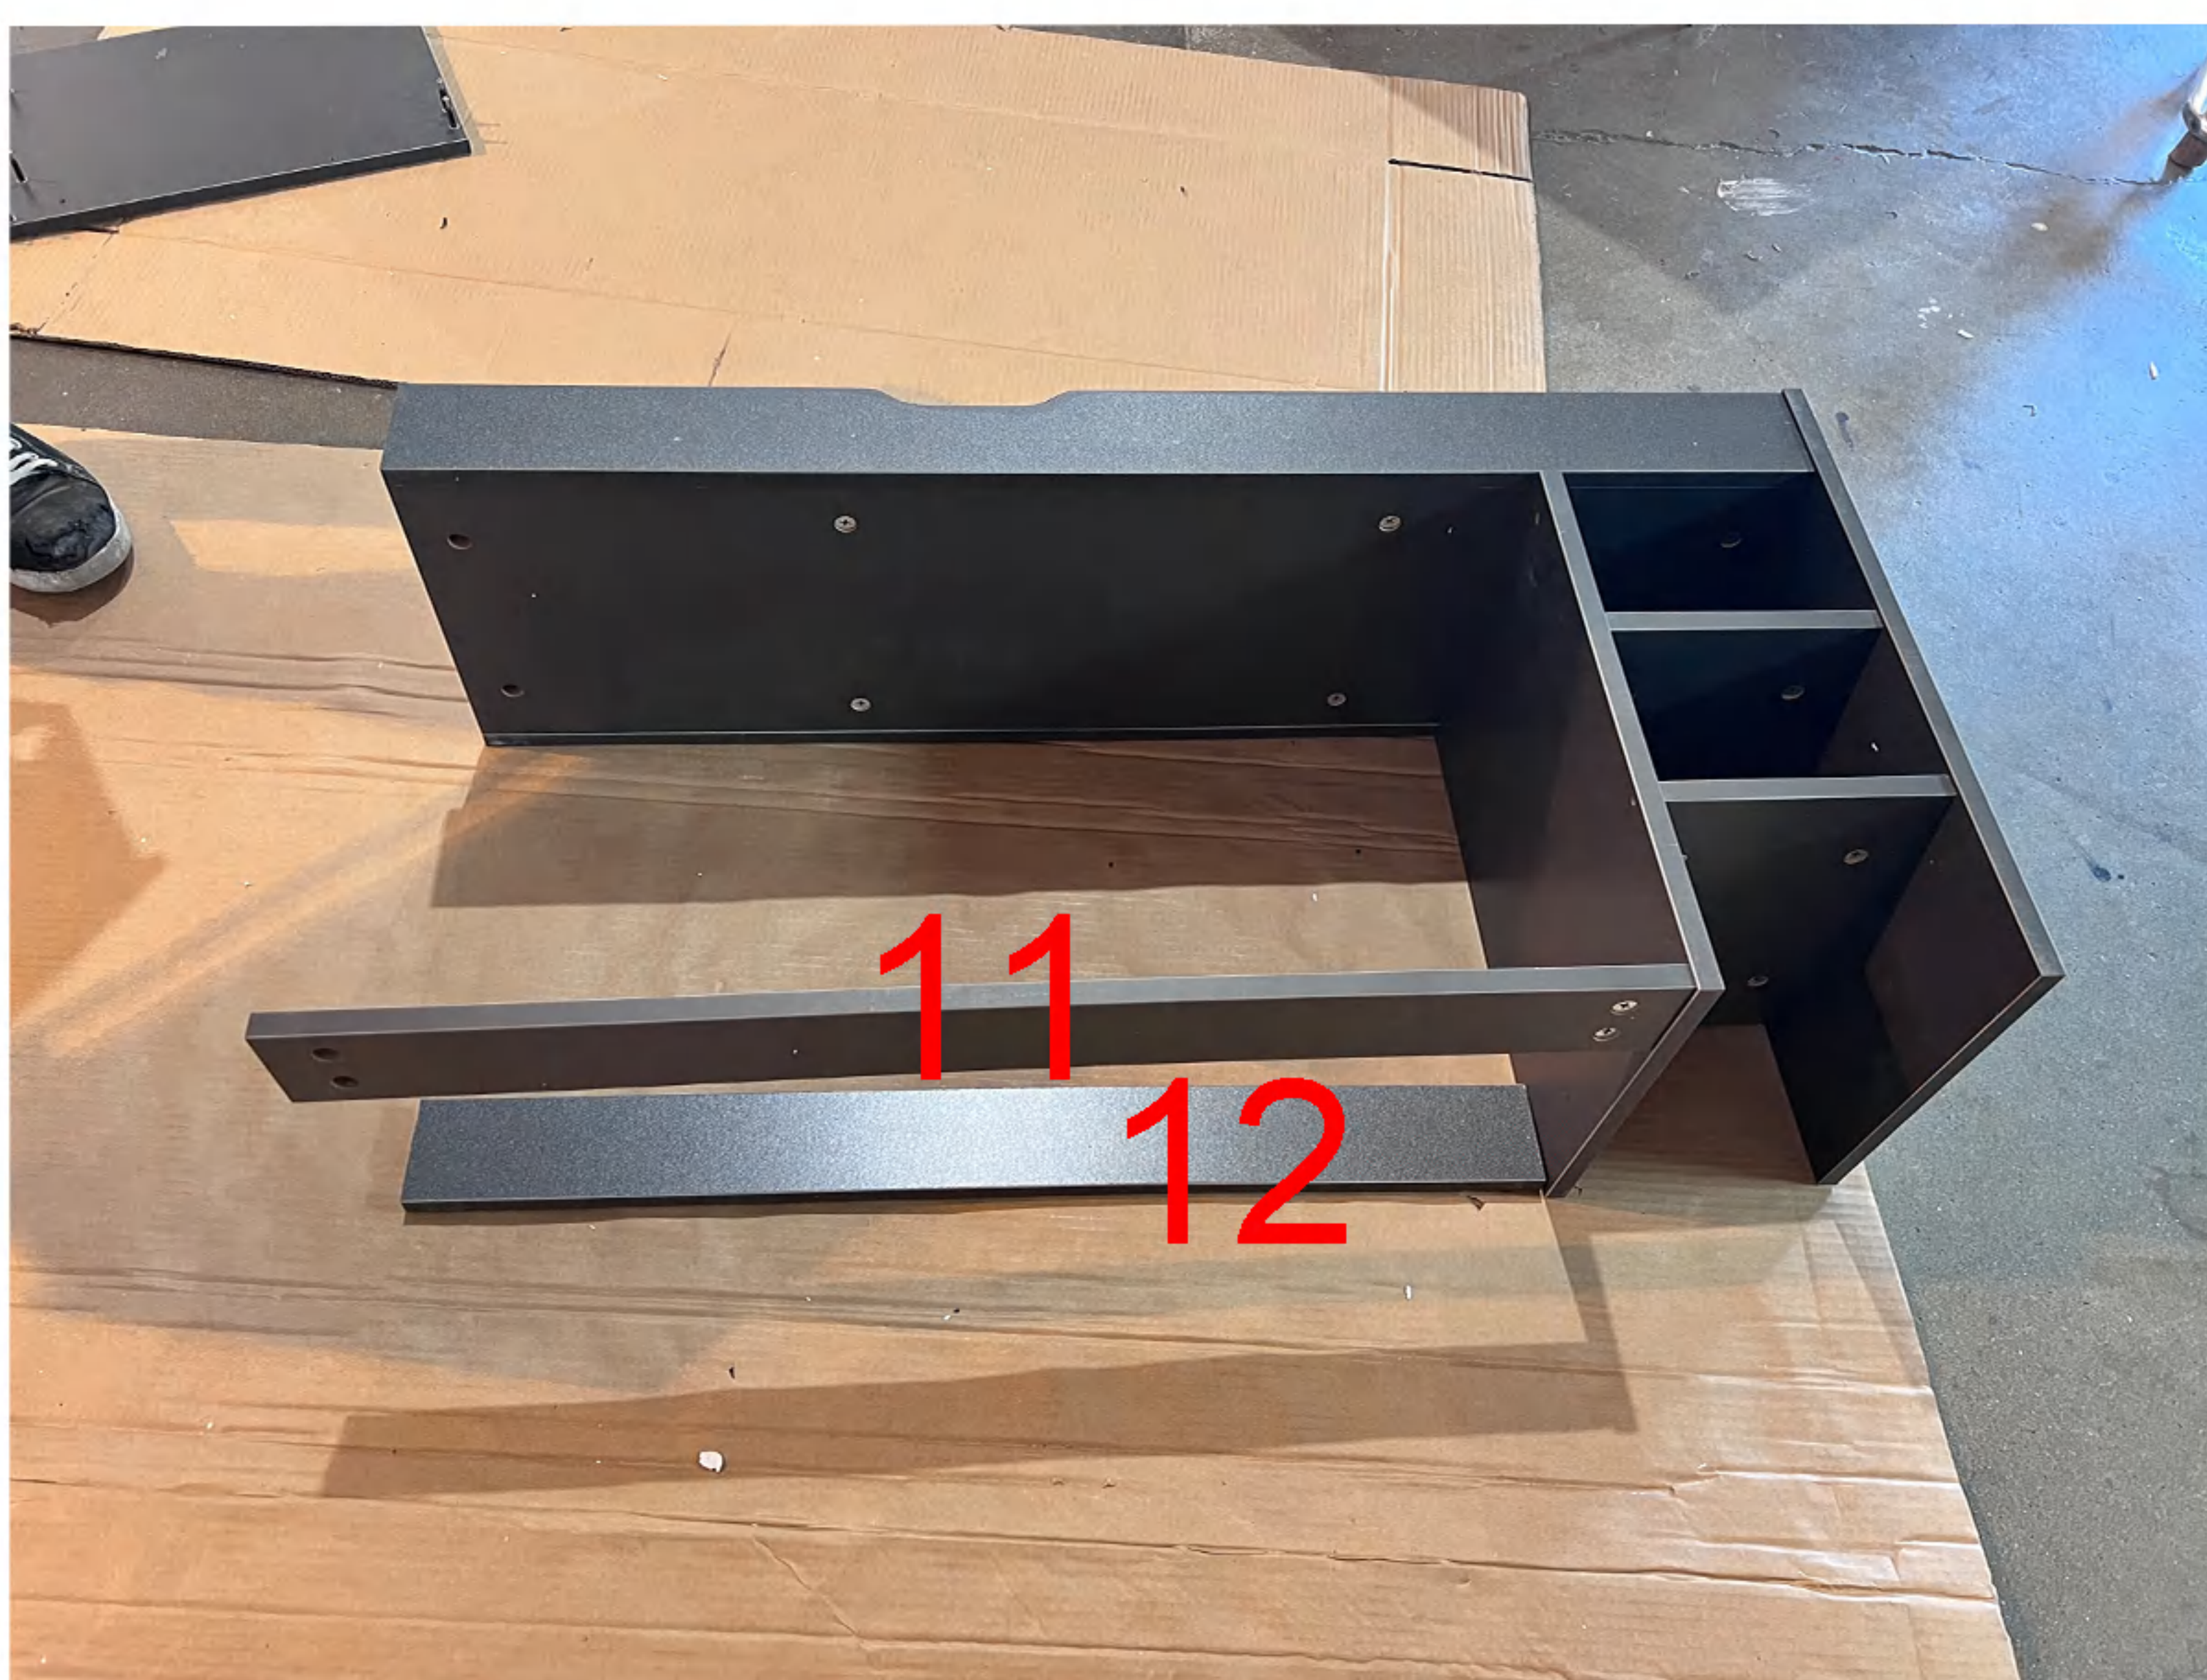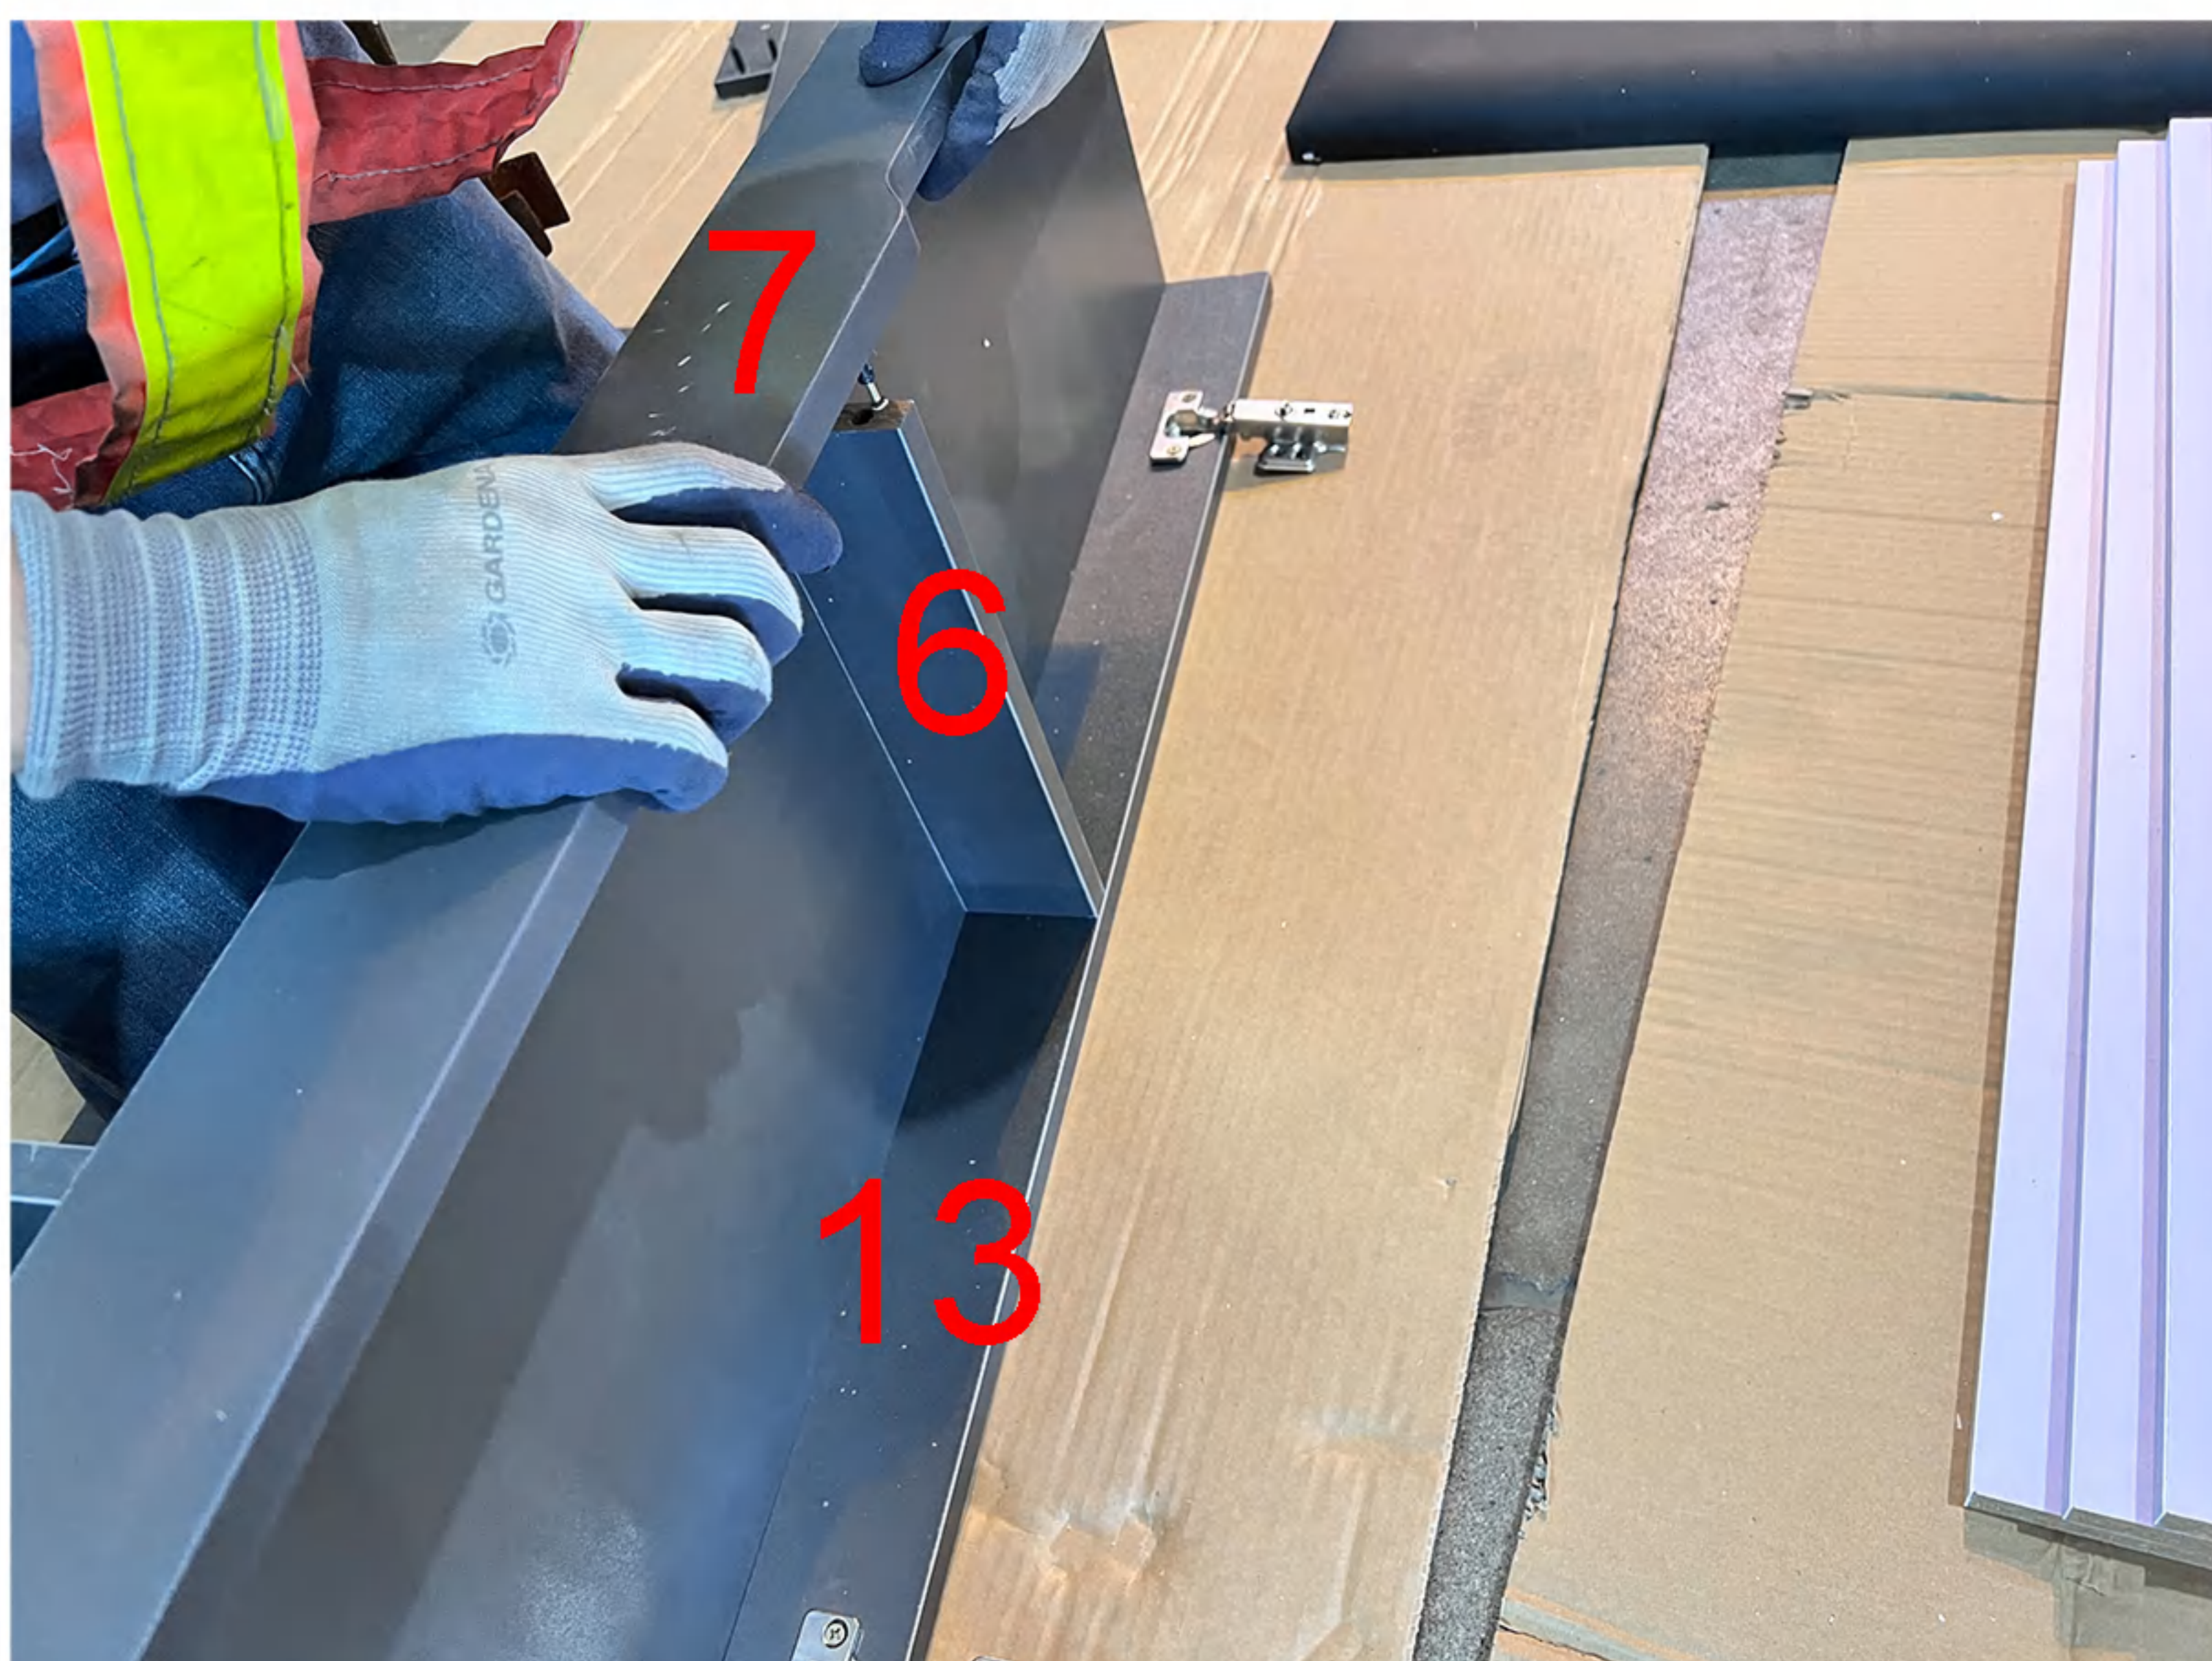

Step 9





B



Lock all large pre-drilled holes with B. For detailed instructions, refer to the previous section: Instructions for using eccentric bolts.

Step 10

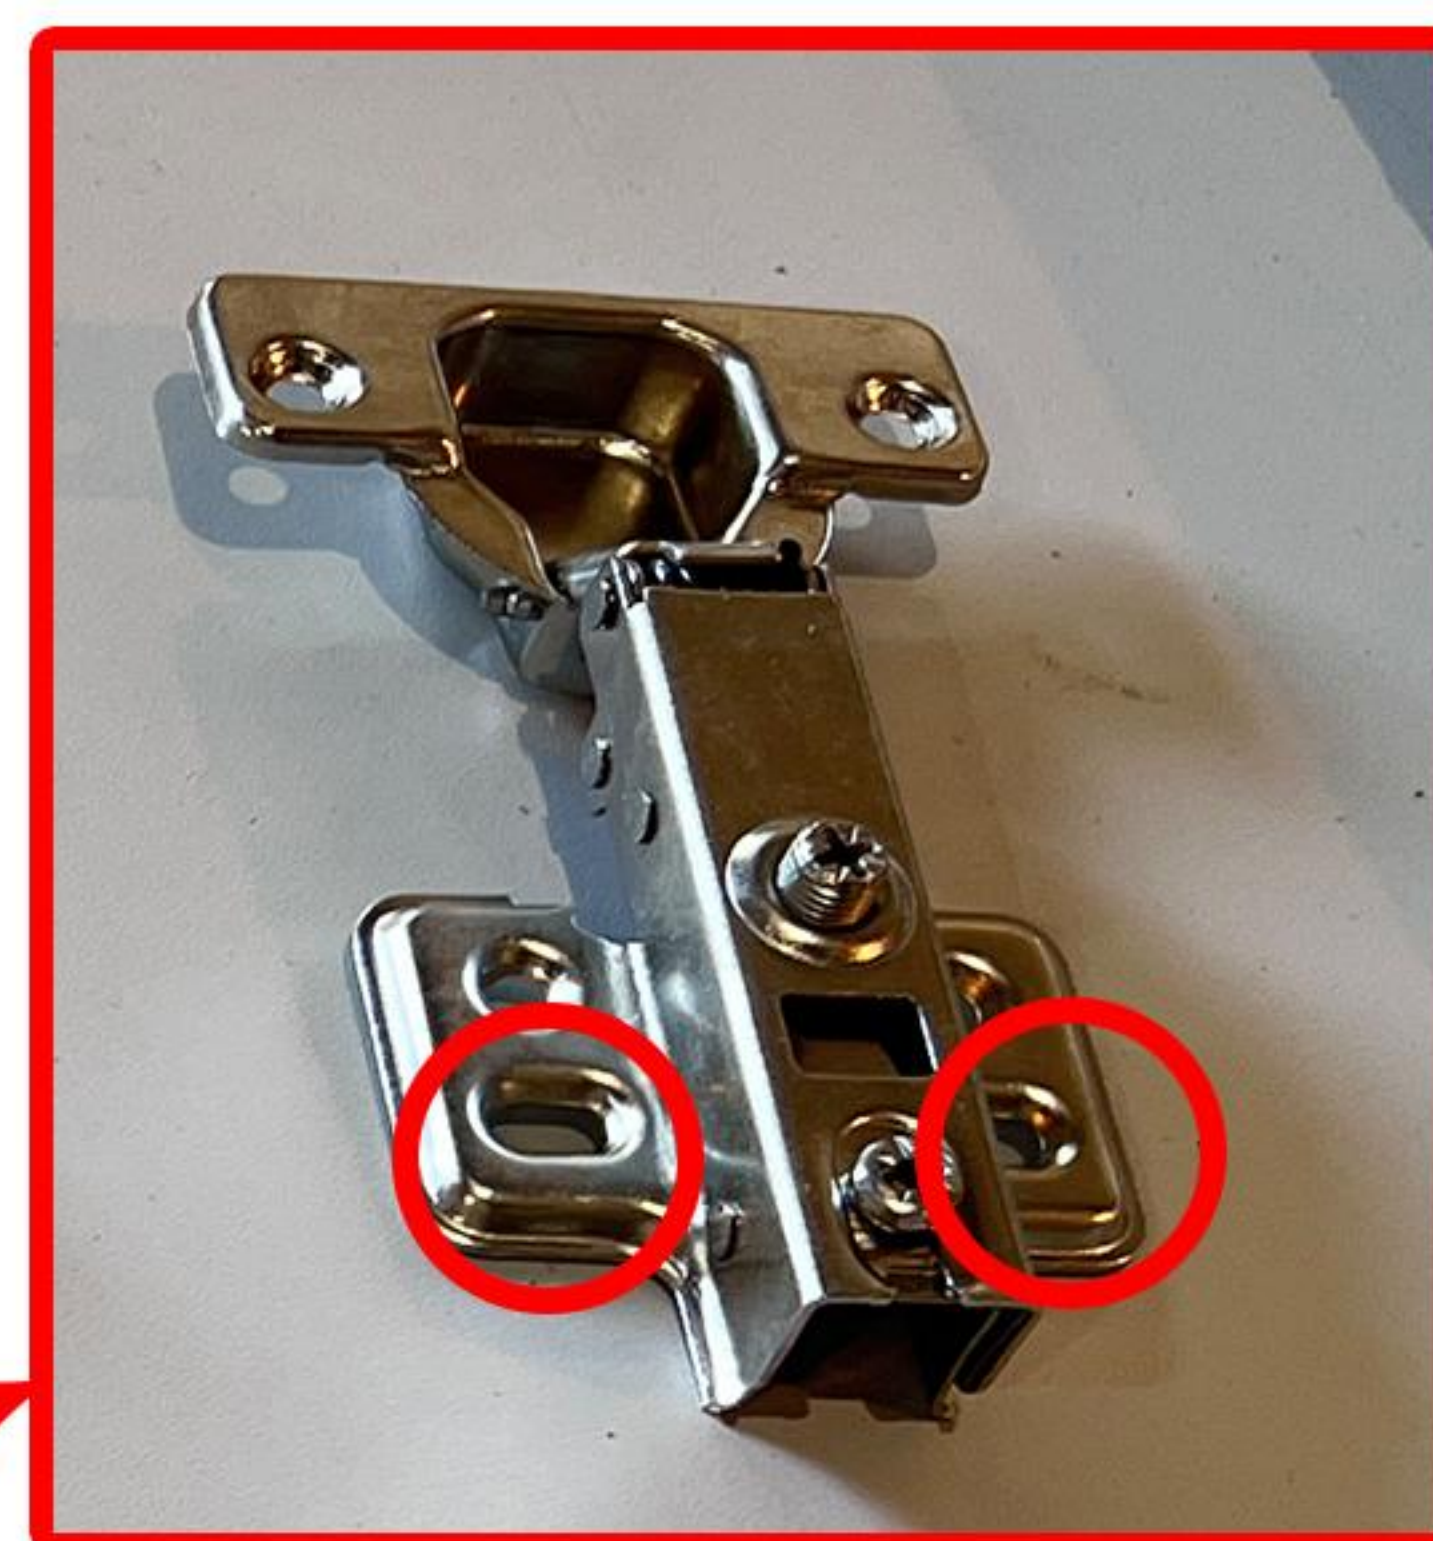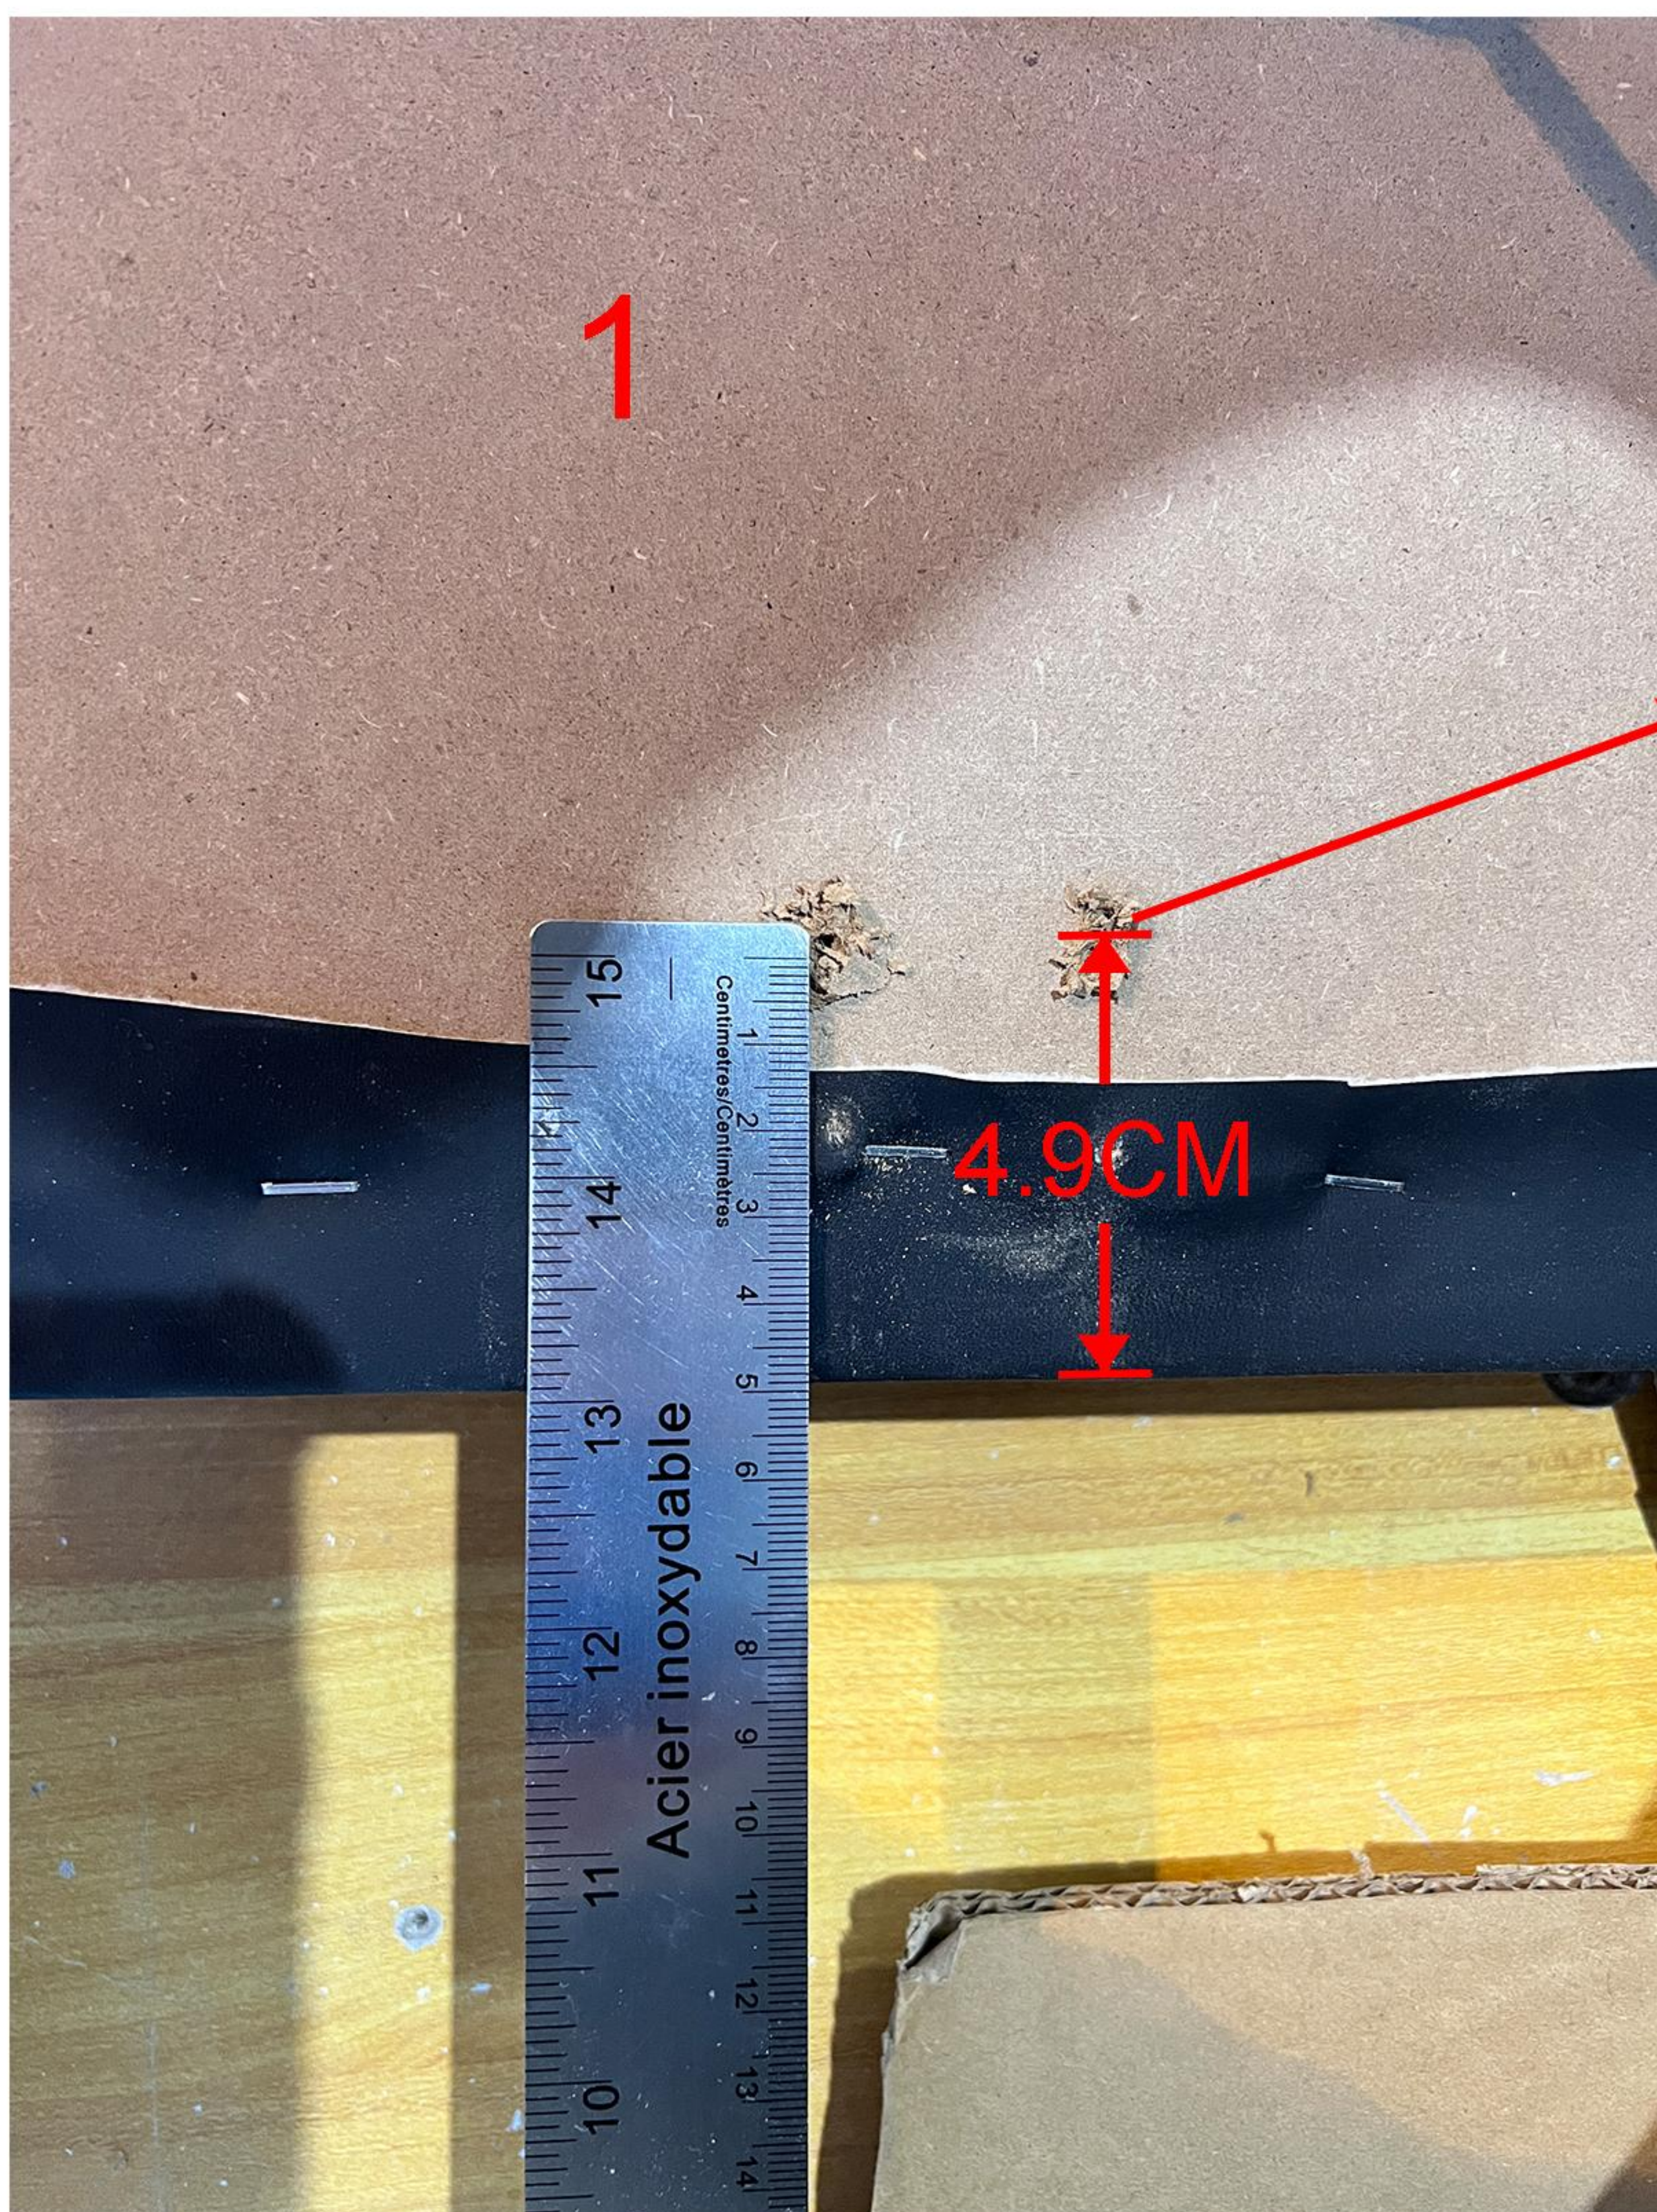

E

Leave about 4.9 cm from the edge of the cushion toward the inside. This marks the position of the first set of holes for installing E.



Finish