


WCK016 Installation Instruction

Installation steps



1. Remove the ordinary shelf and door stopper and install the door stopper with short screws. **Leave one shelf**

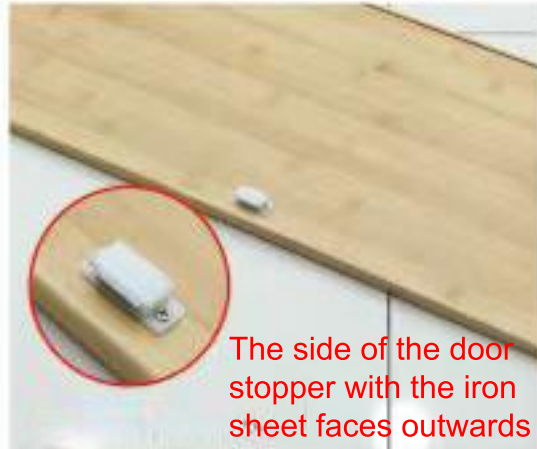

2. Take out the left side bracket and install the ordinary shelf with **the door stopper on the back of the side bracket with**



4. Flip the shelf



5. Take out the back panel and insert it along the groove of the layer board



6. Take out the side bracket and install it with long screws. **Do not tighten the screws in the front row yet.**




7. Flip the shelf



8. Insert the metal strip into the hole of the side bracket



9. Take out the door panel, door handle, and door gasket and install them with flat head screws

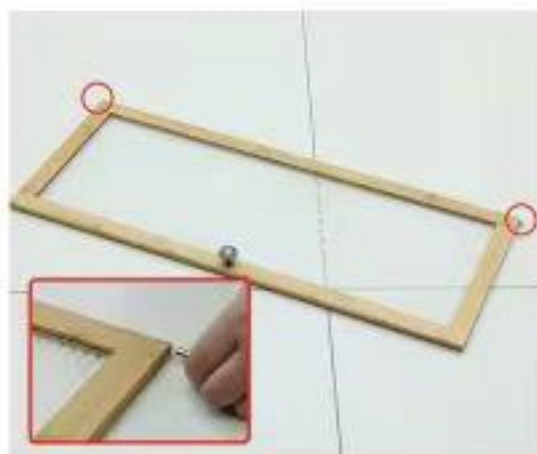

10. Take out the metal strips and insert them into both ends of the door panel



11. Take out the installed door panel and insert the metal strip on the door panel into the groove of the side bracket



12. Take out the long screw and tighten the unscrewed screw on the right side of the side bracket