





BS040 Installation Instruction

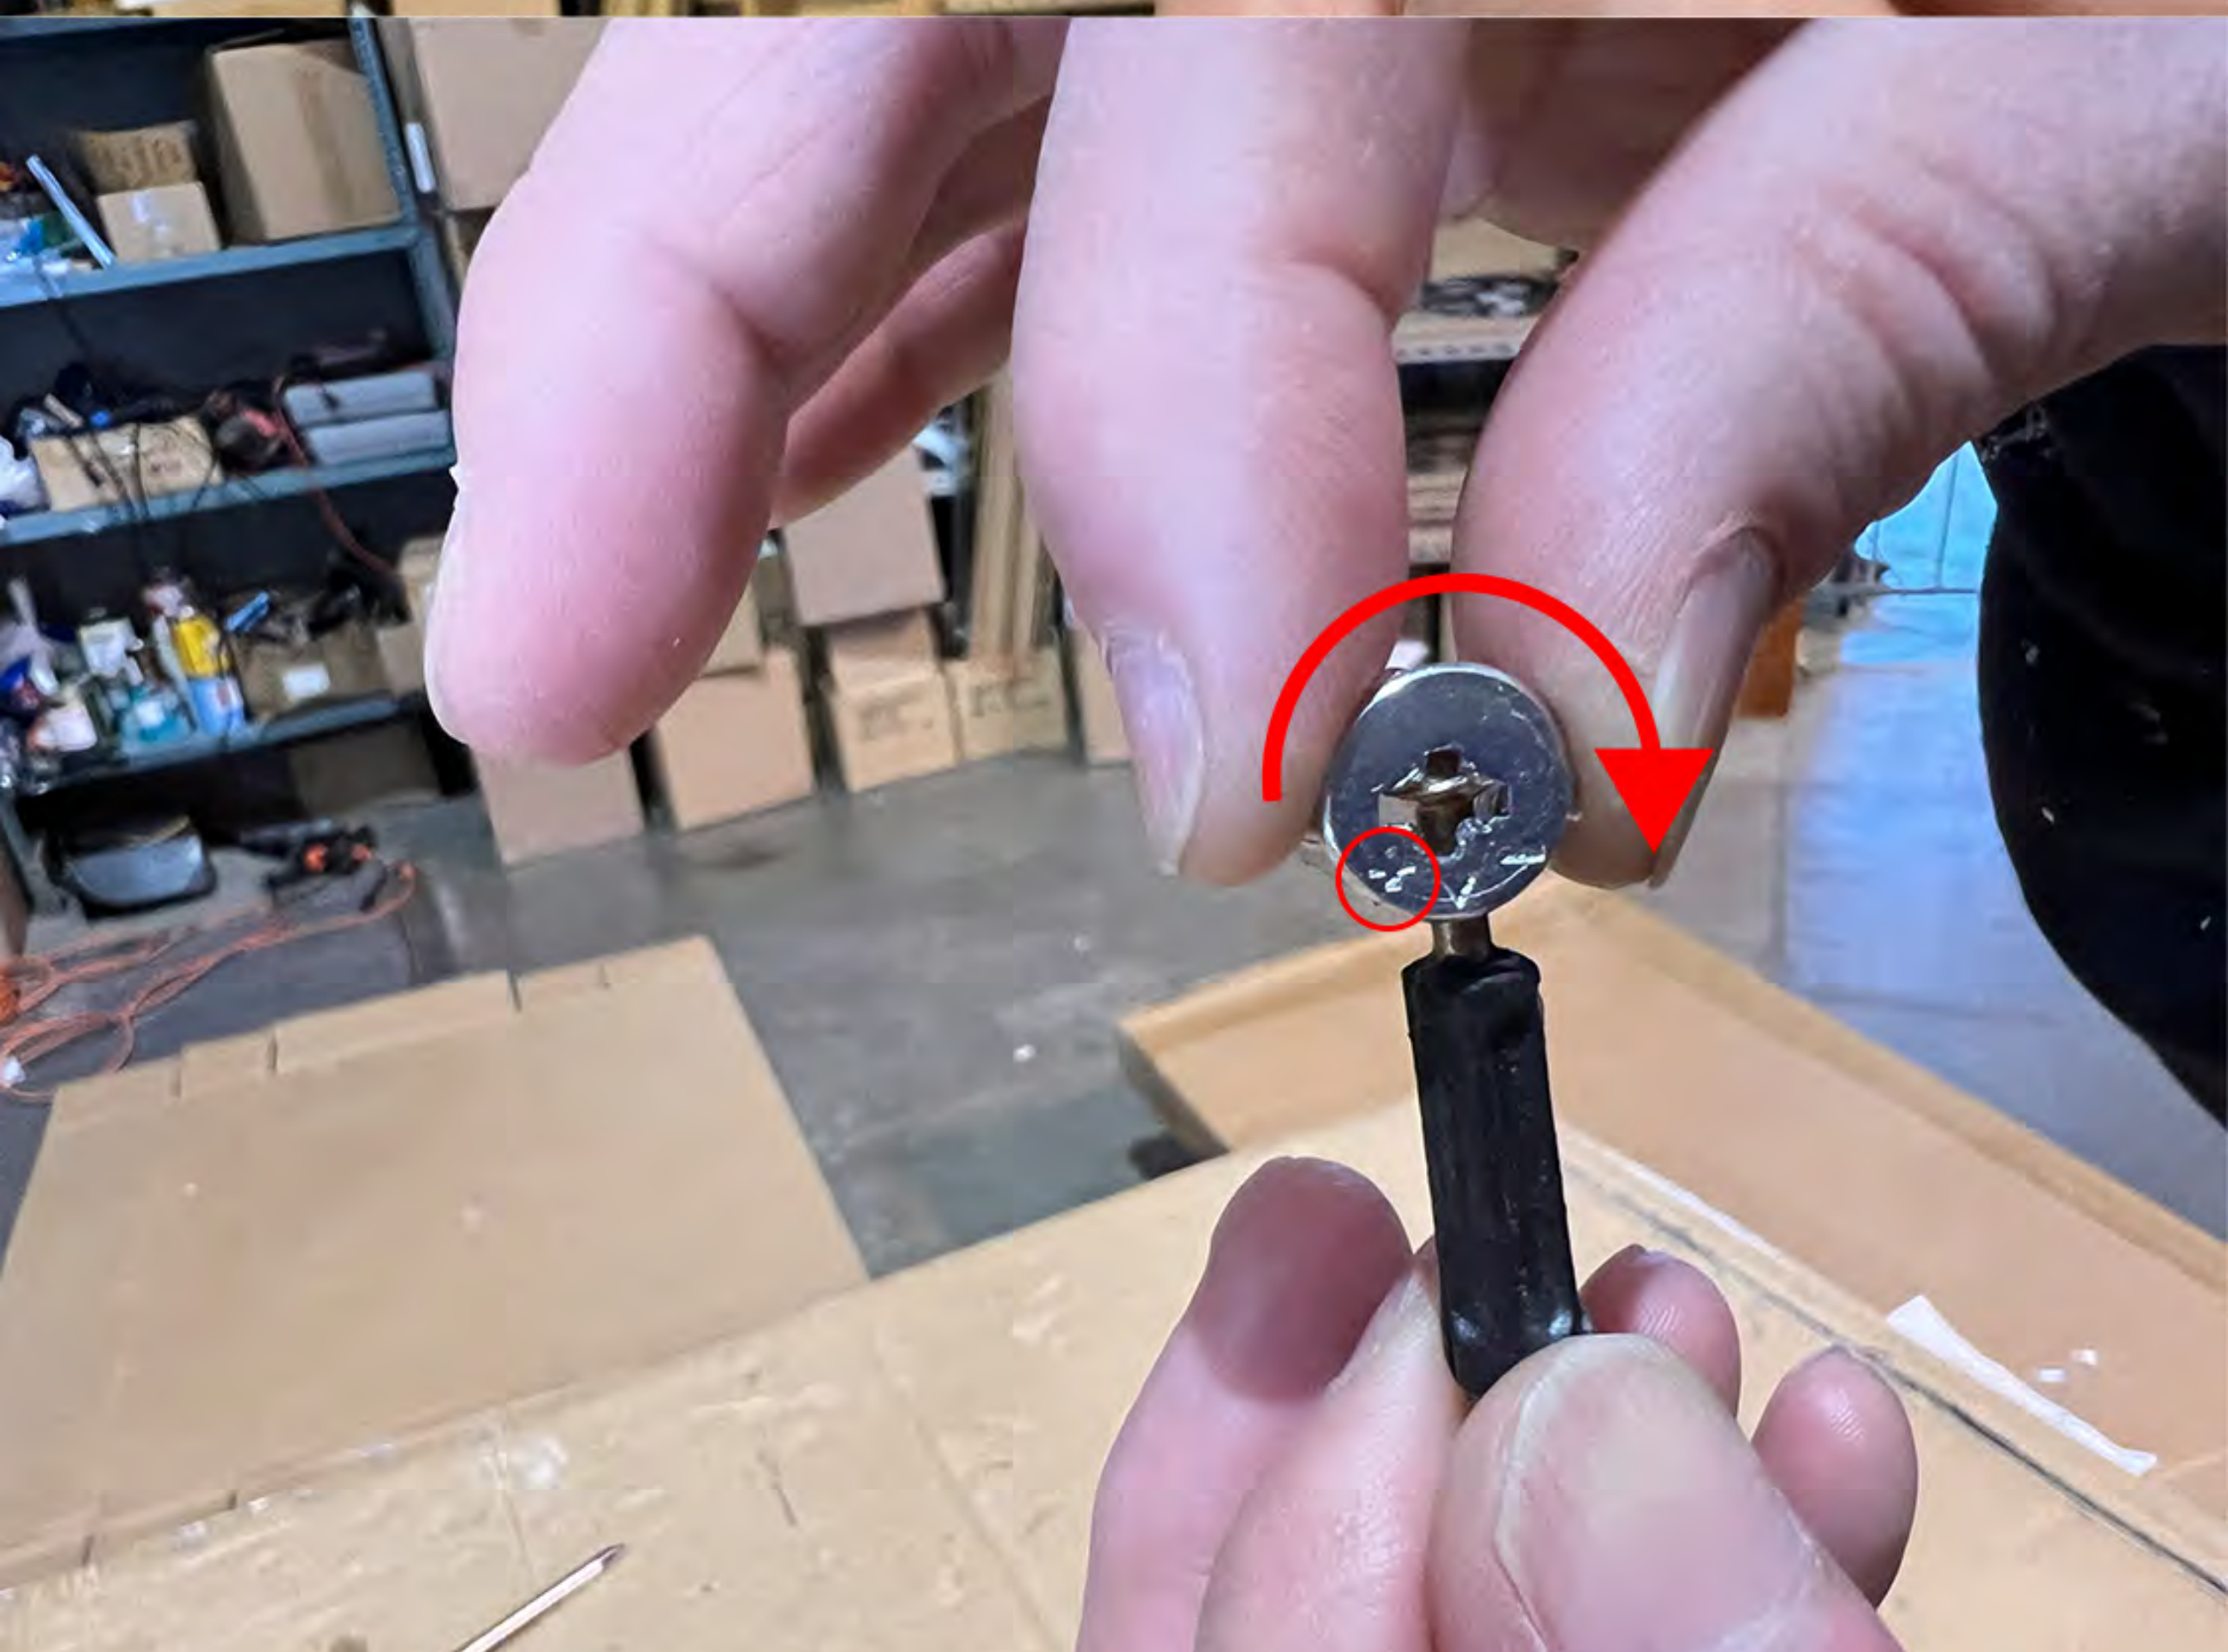


Instructions for using eccentric bolts:

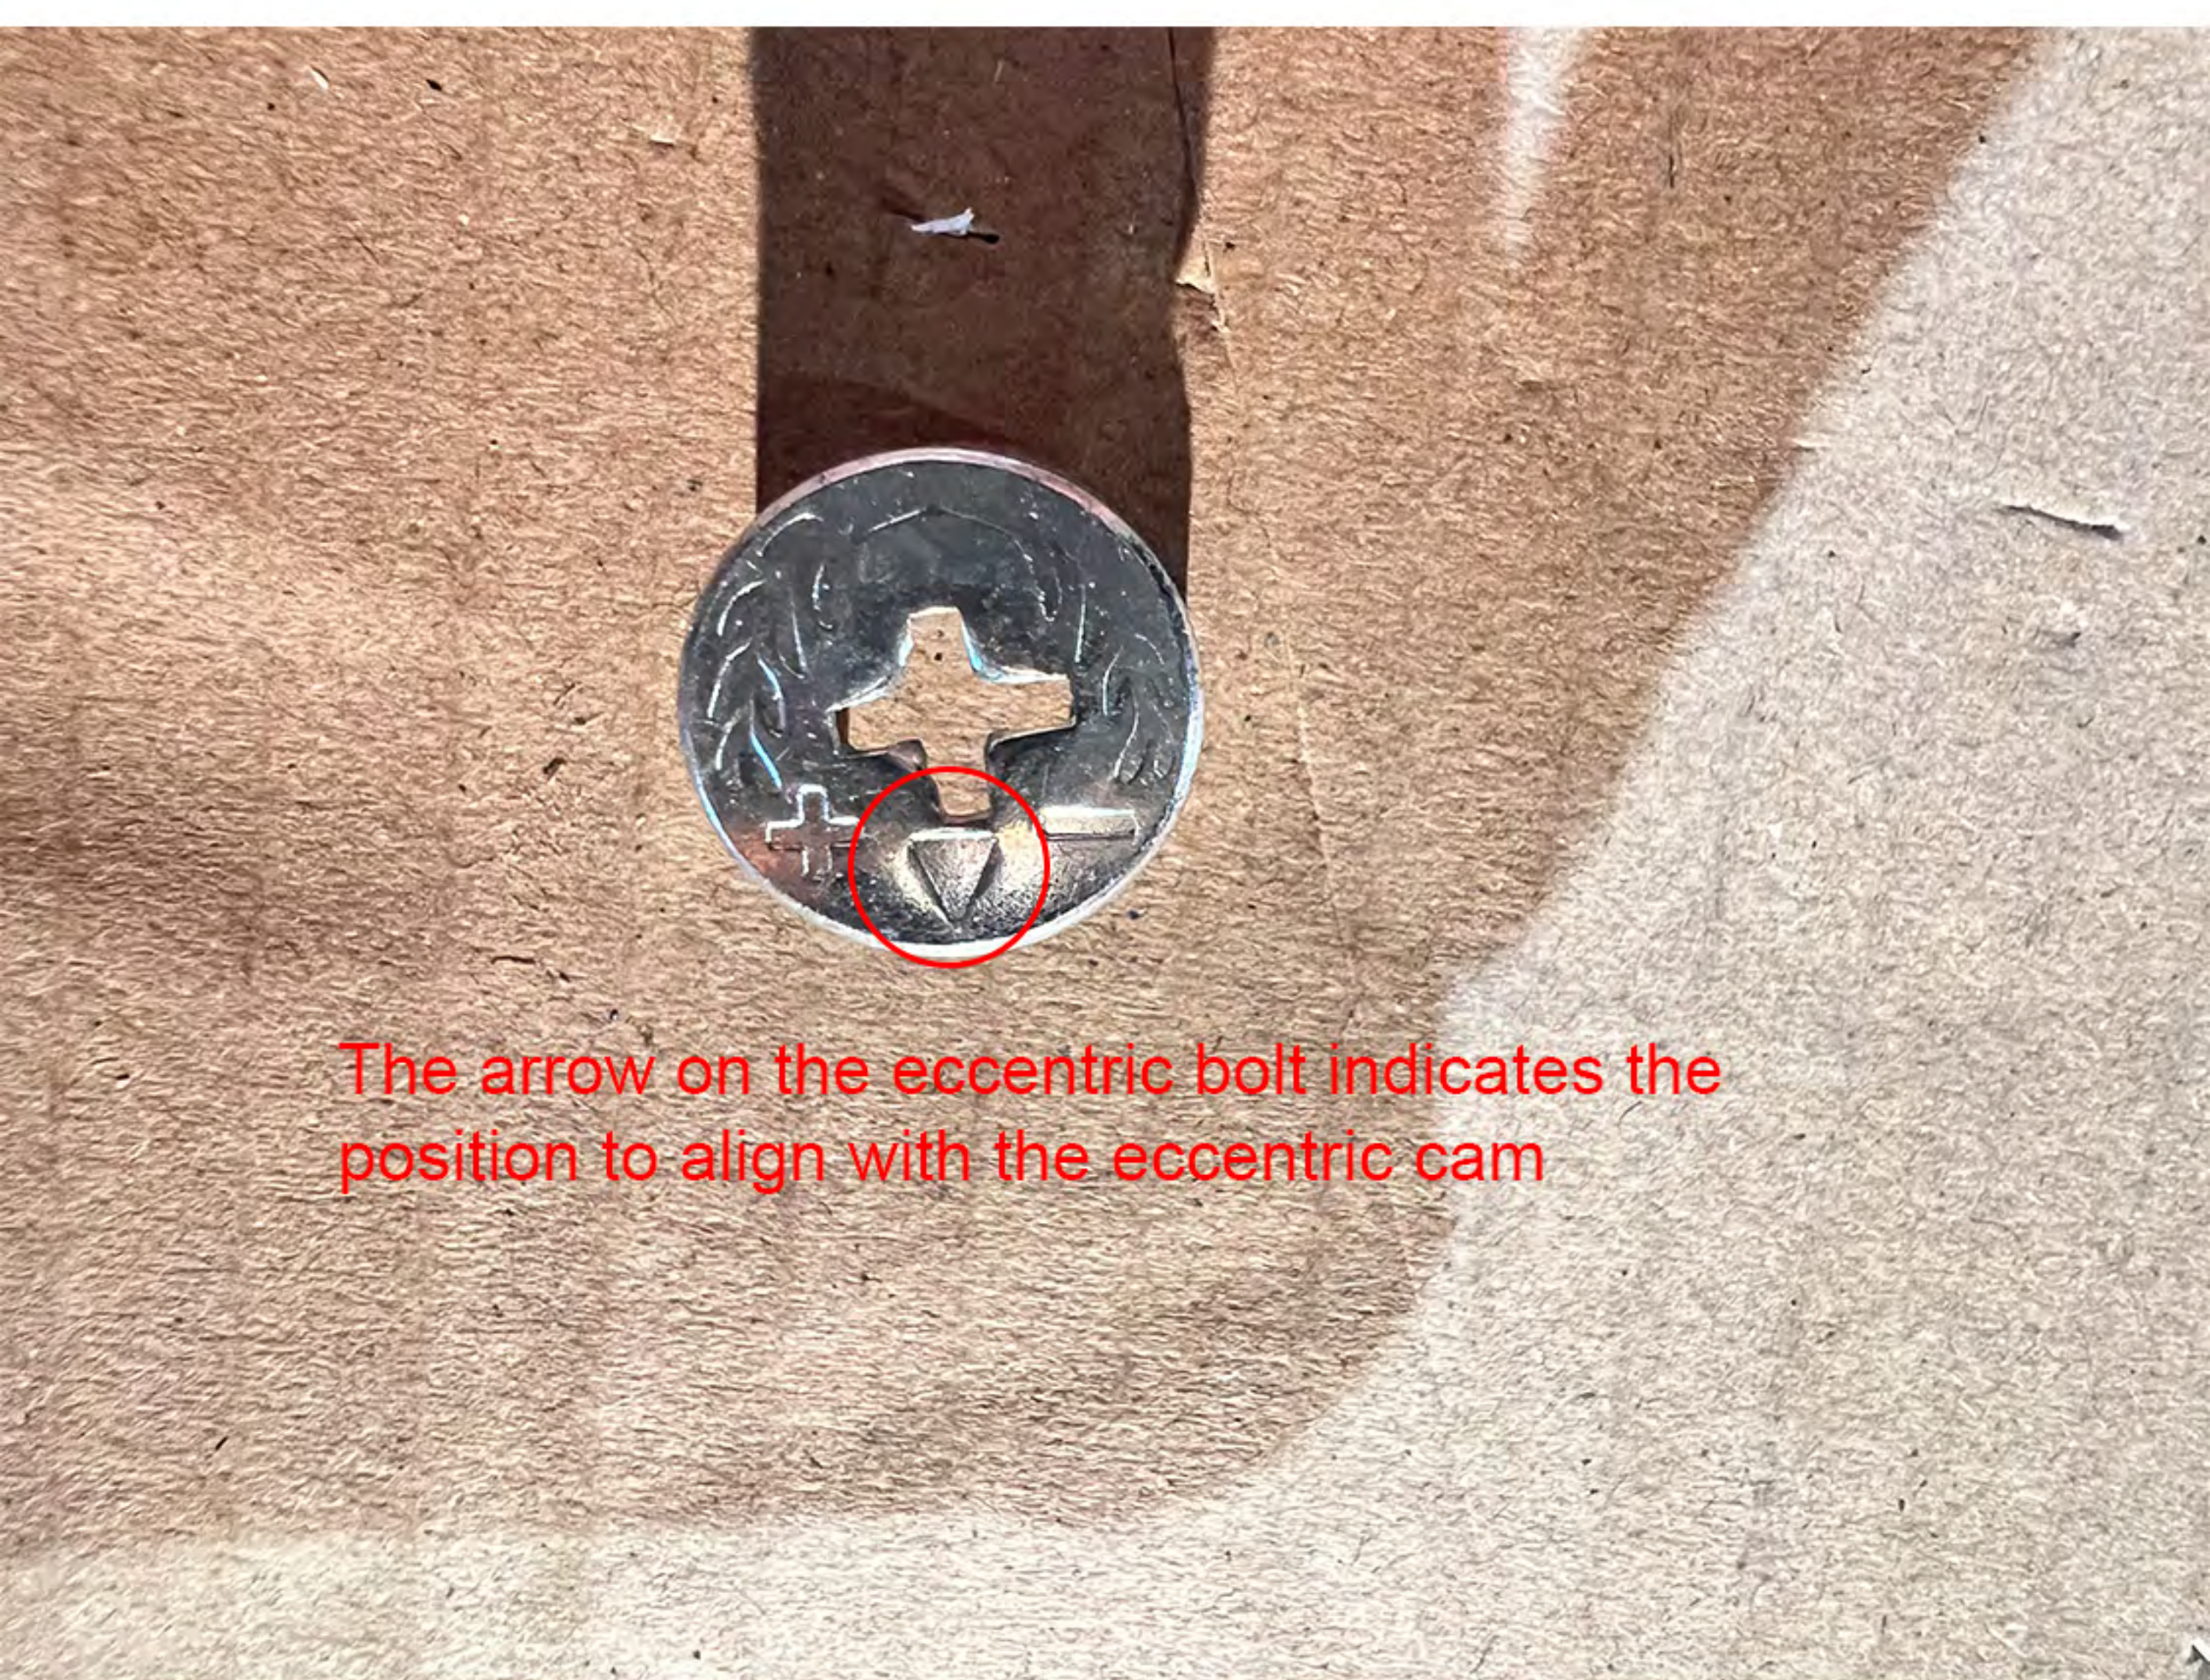


Example

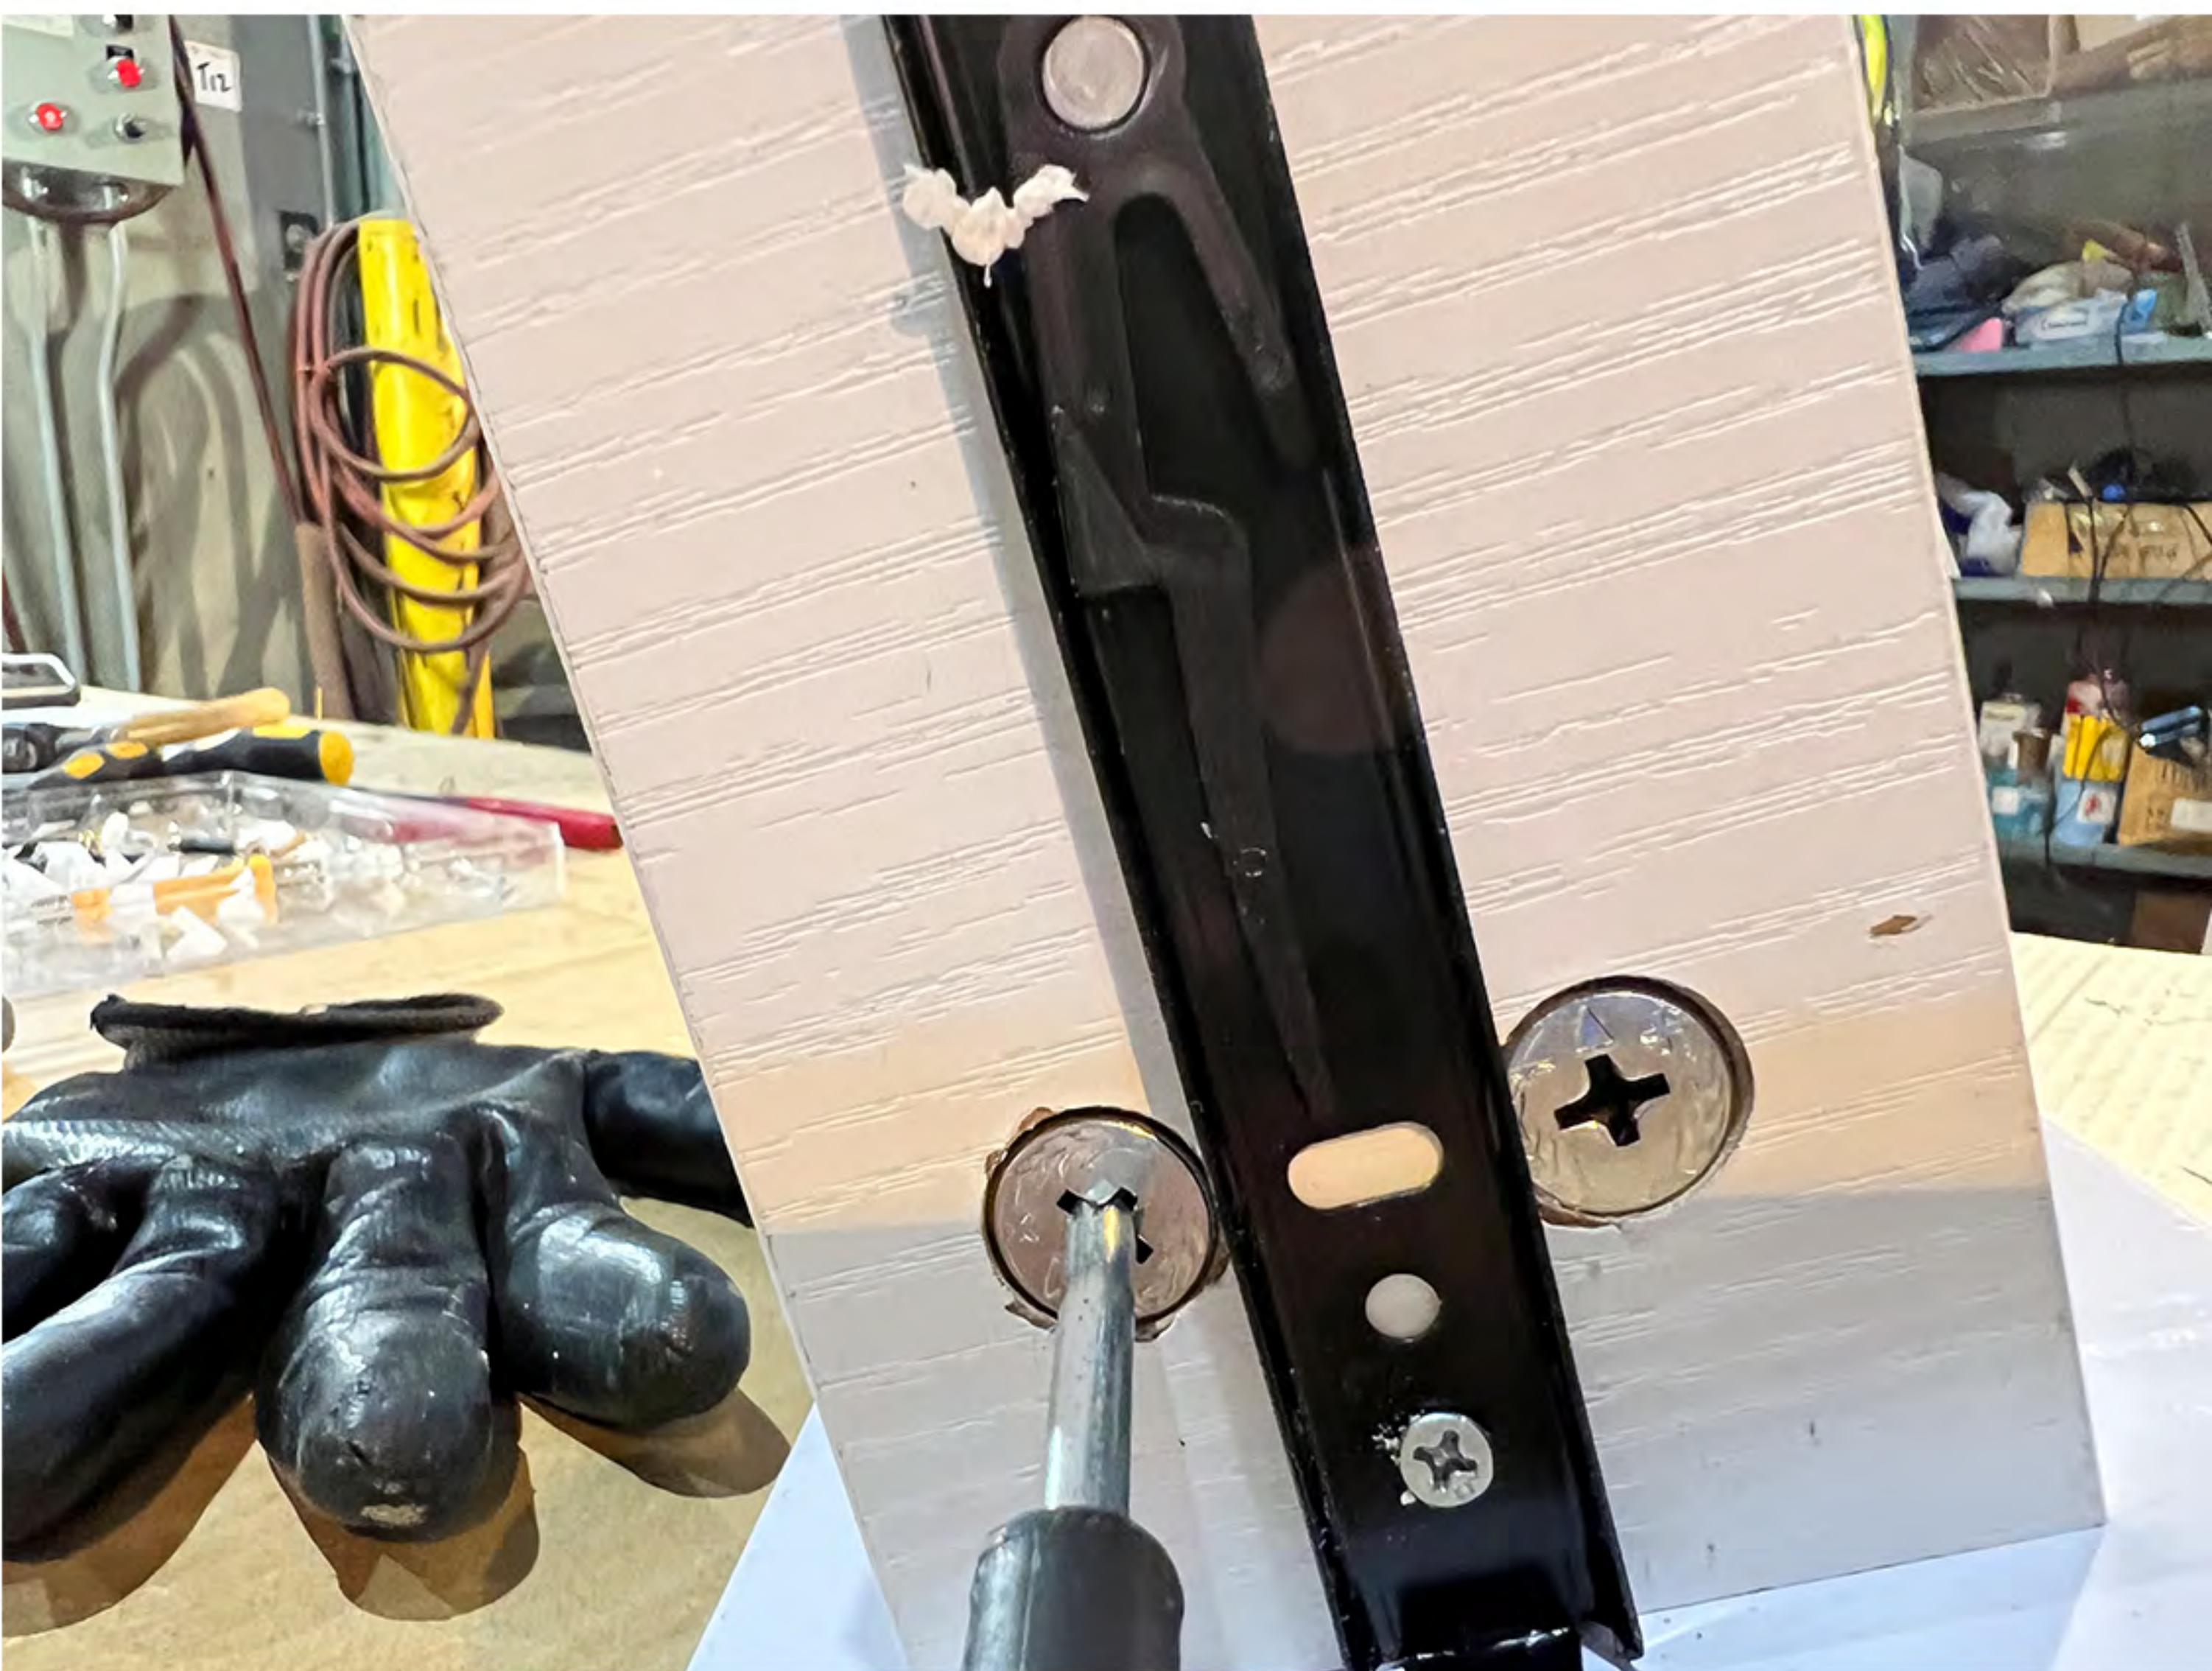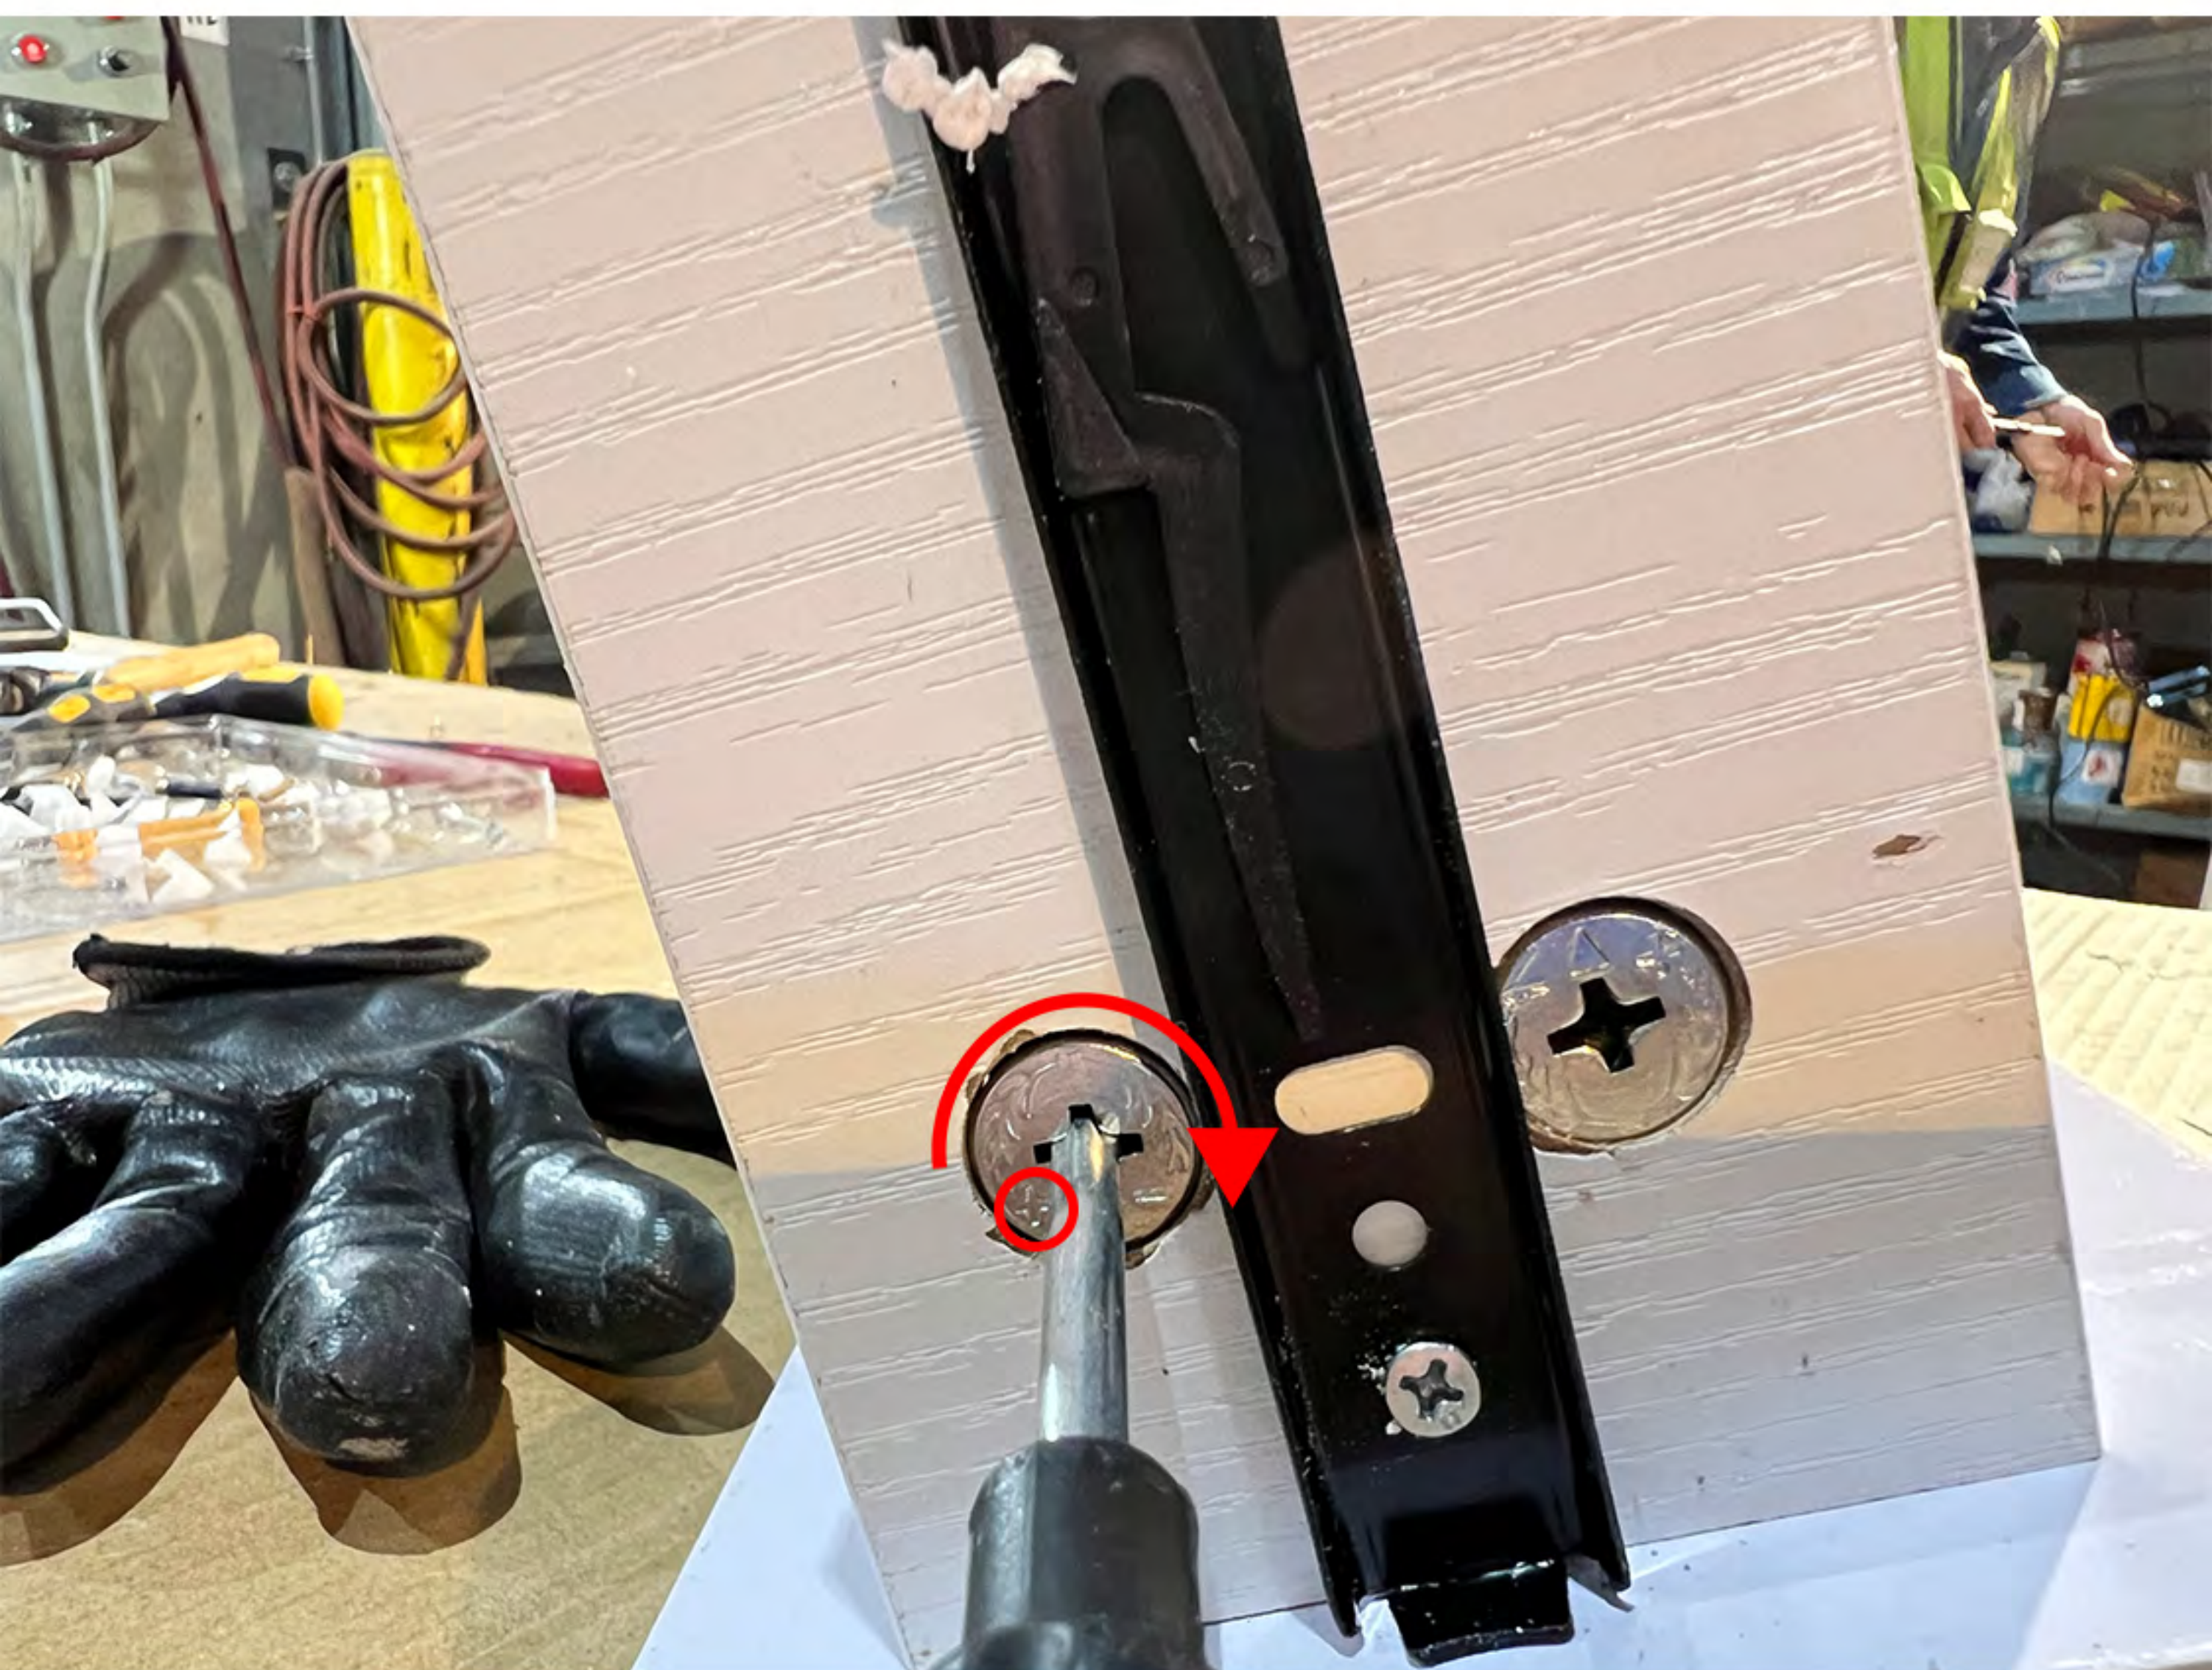

Panels and Hardware List

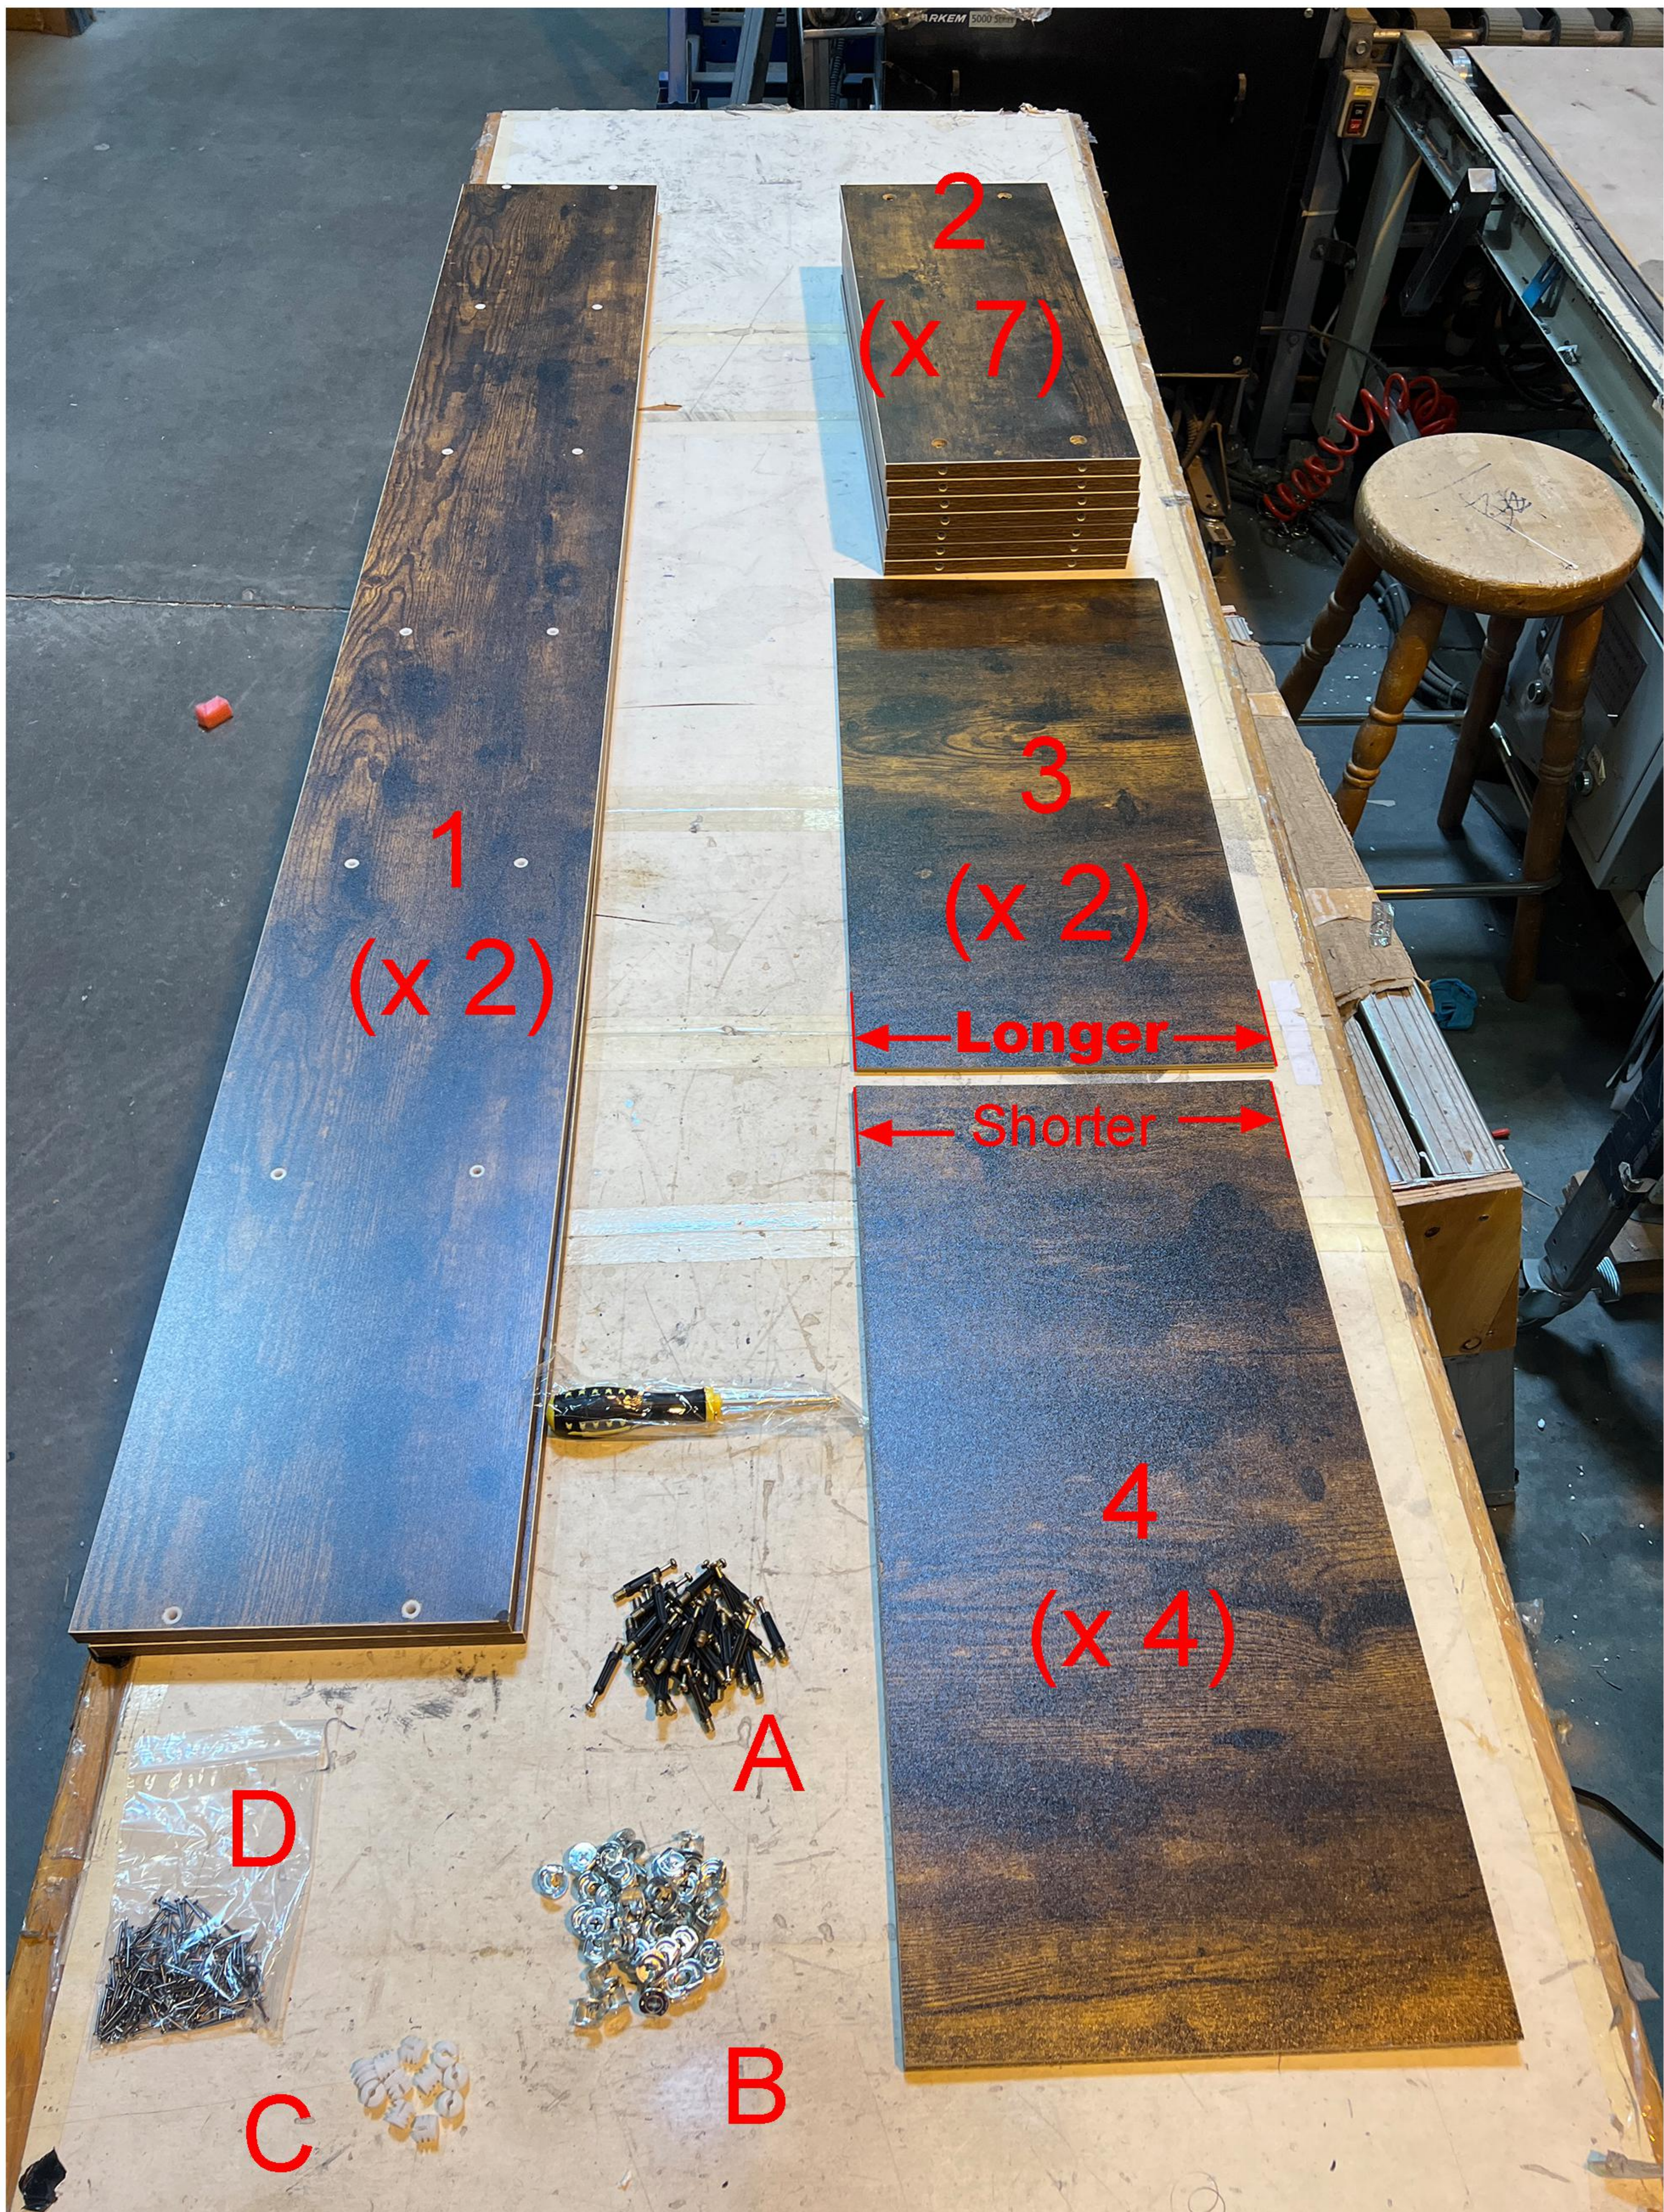

A hammer is required (not included).

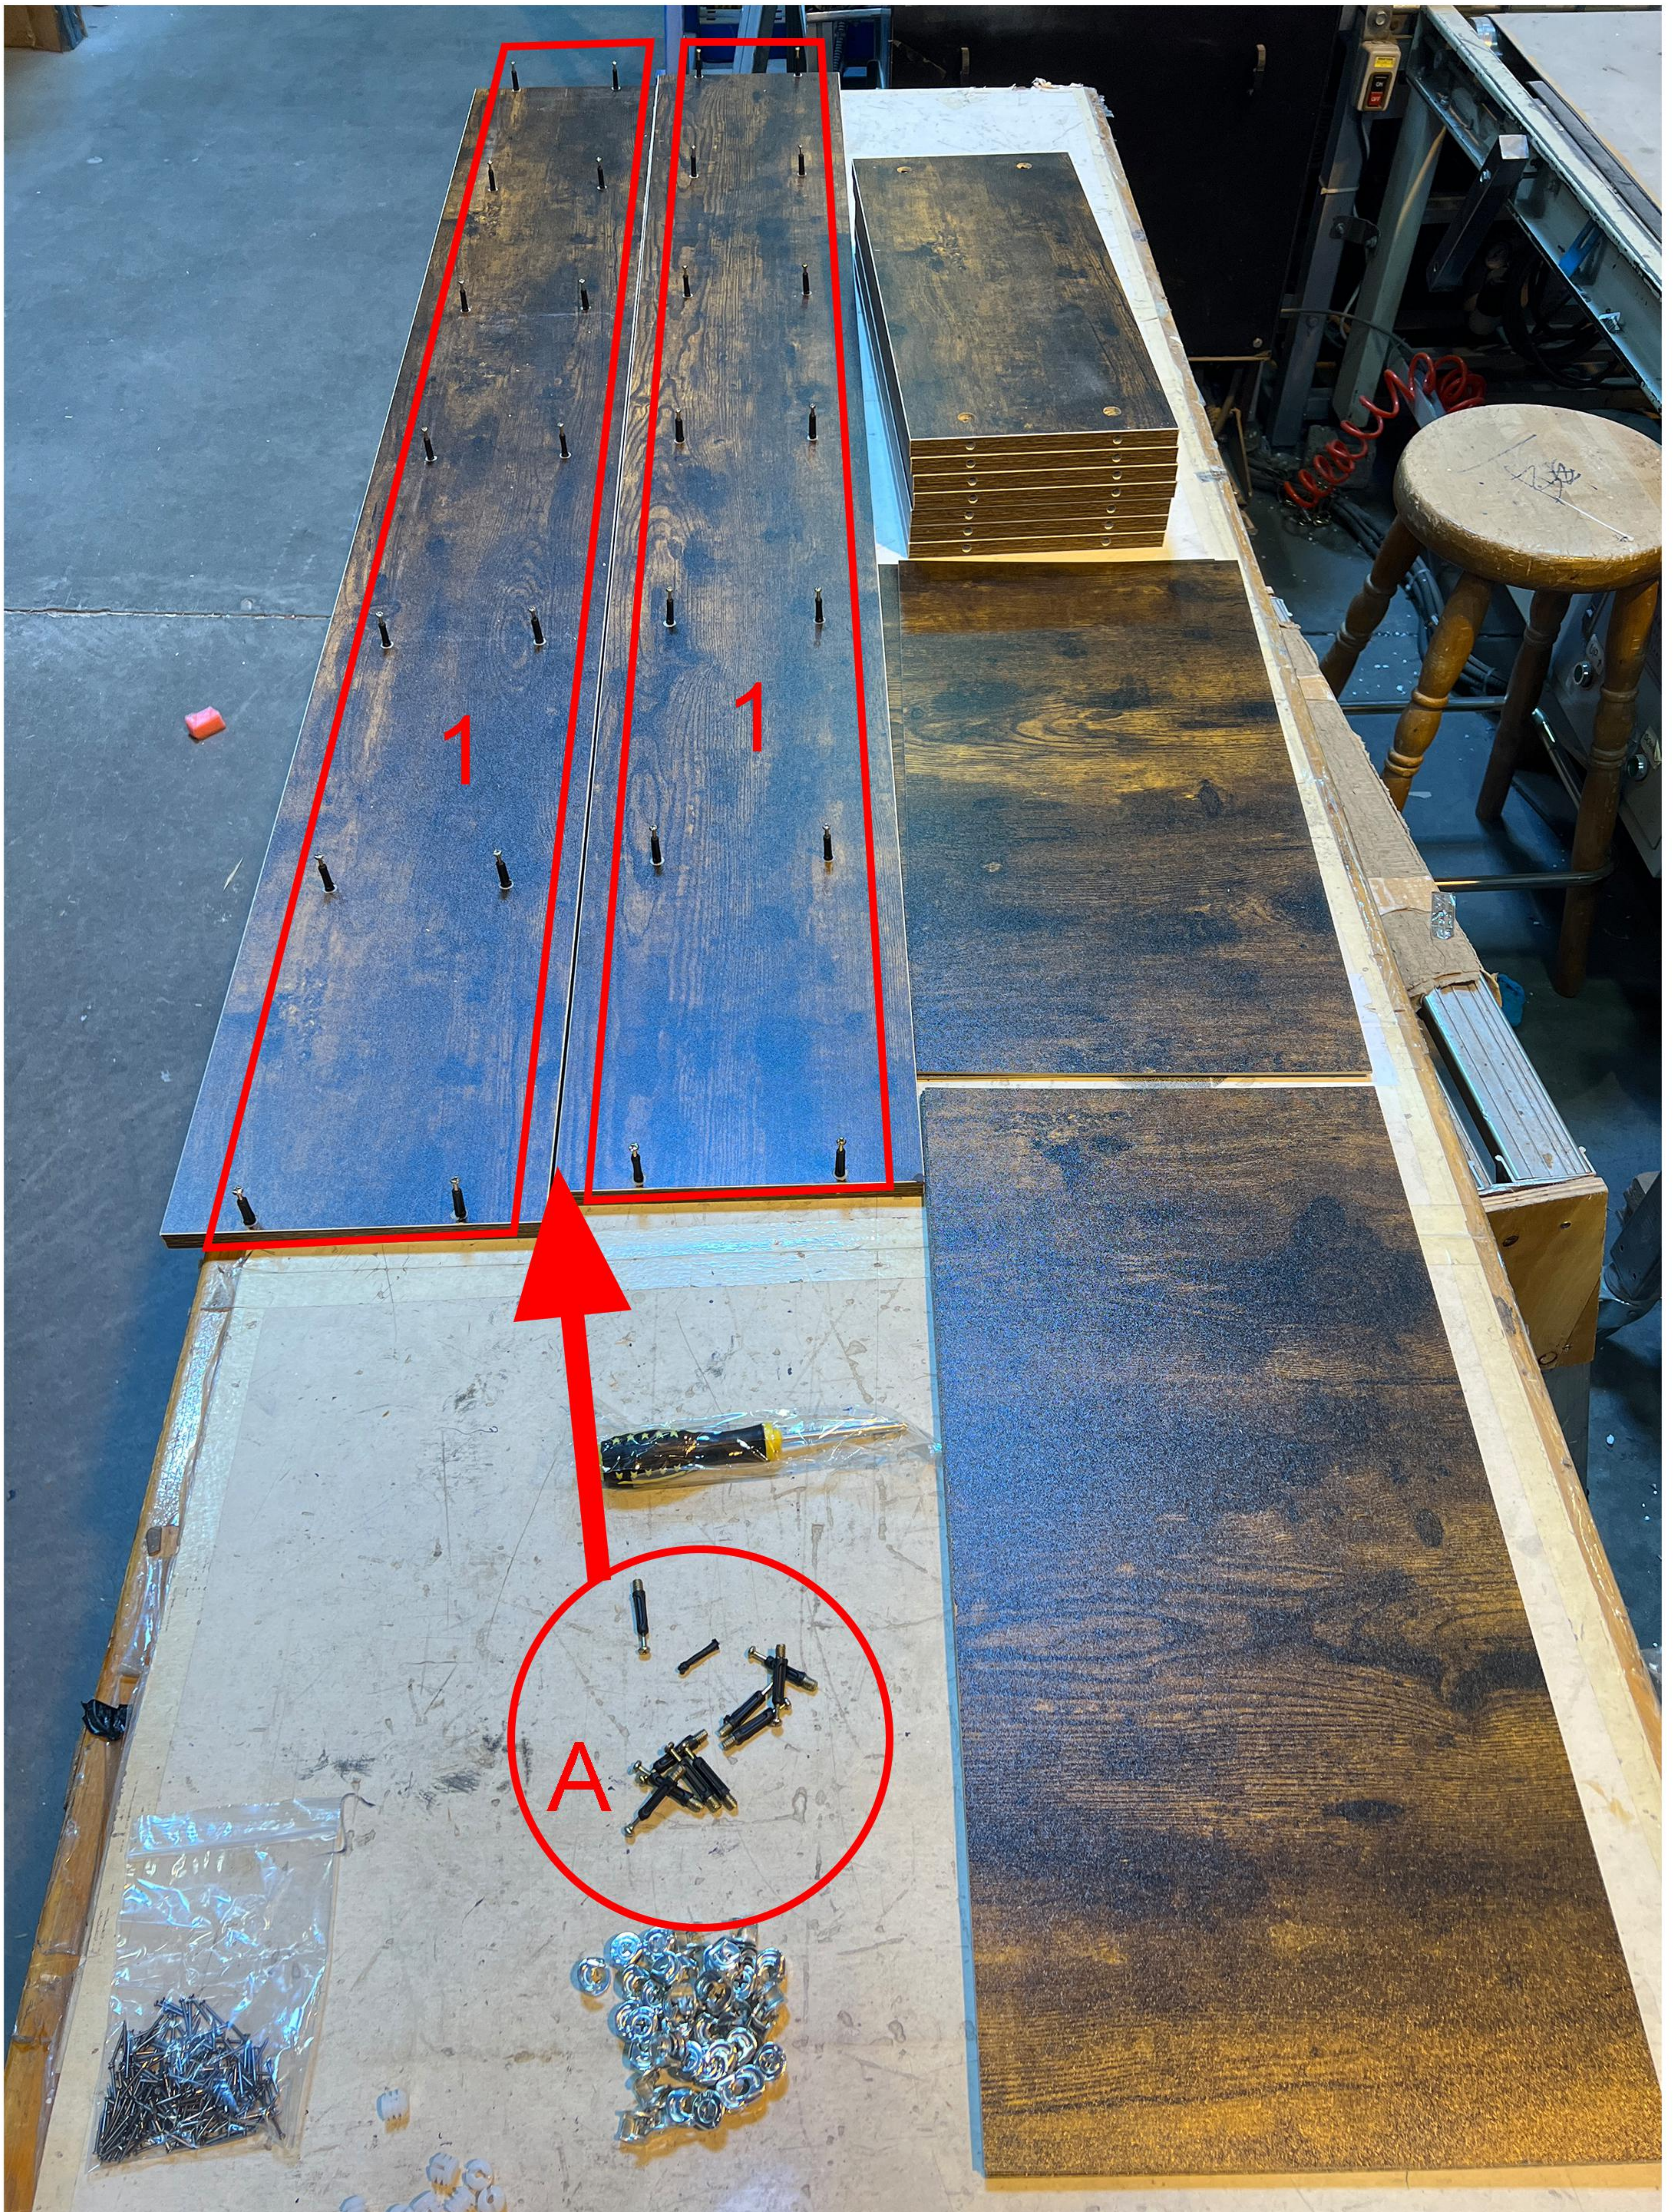








Secure all pre-drilled holes with part B. For how to use part B, please refer to the previous 'Instructions for using eccentric bolts.'



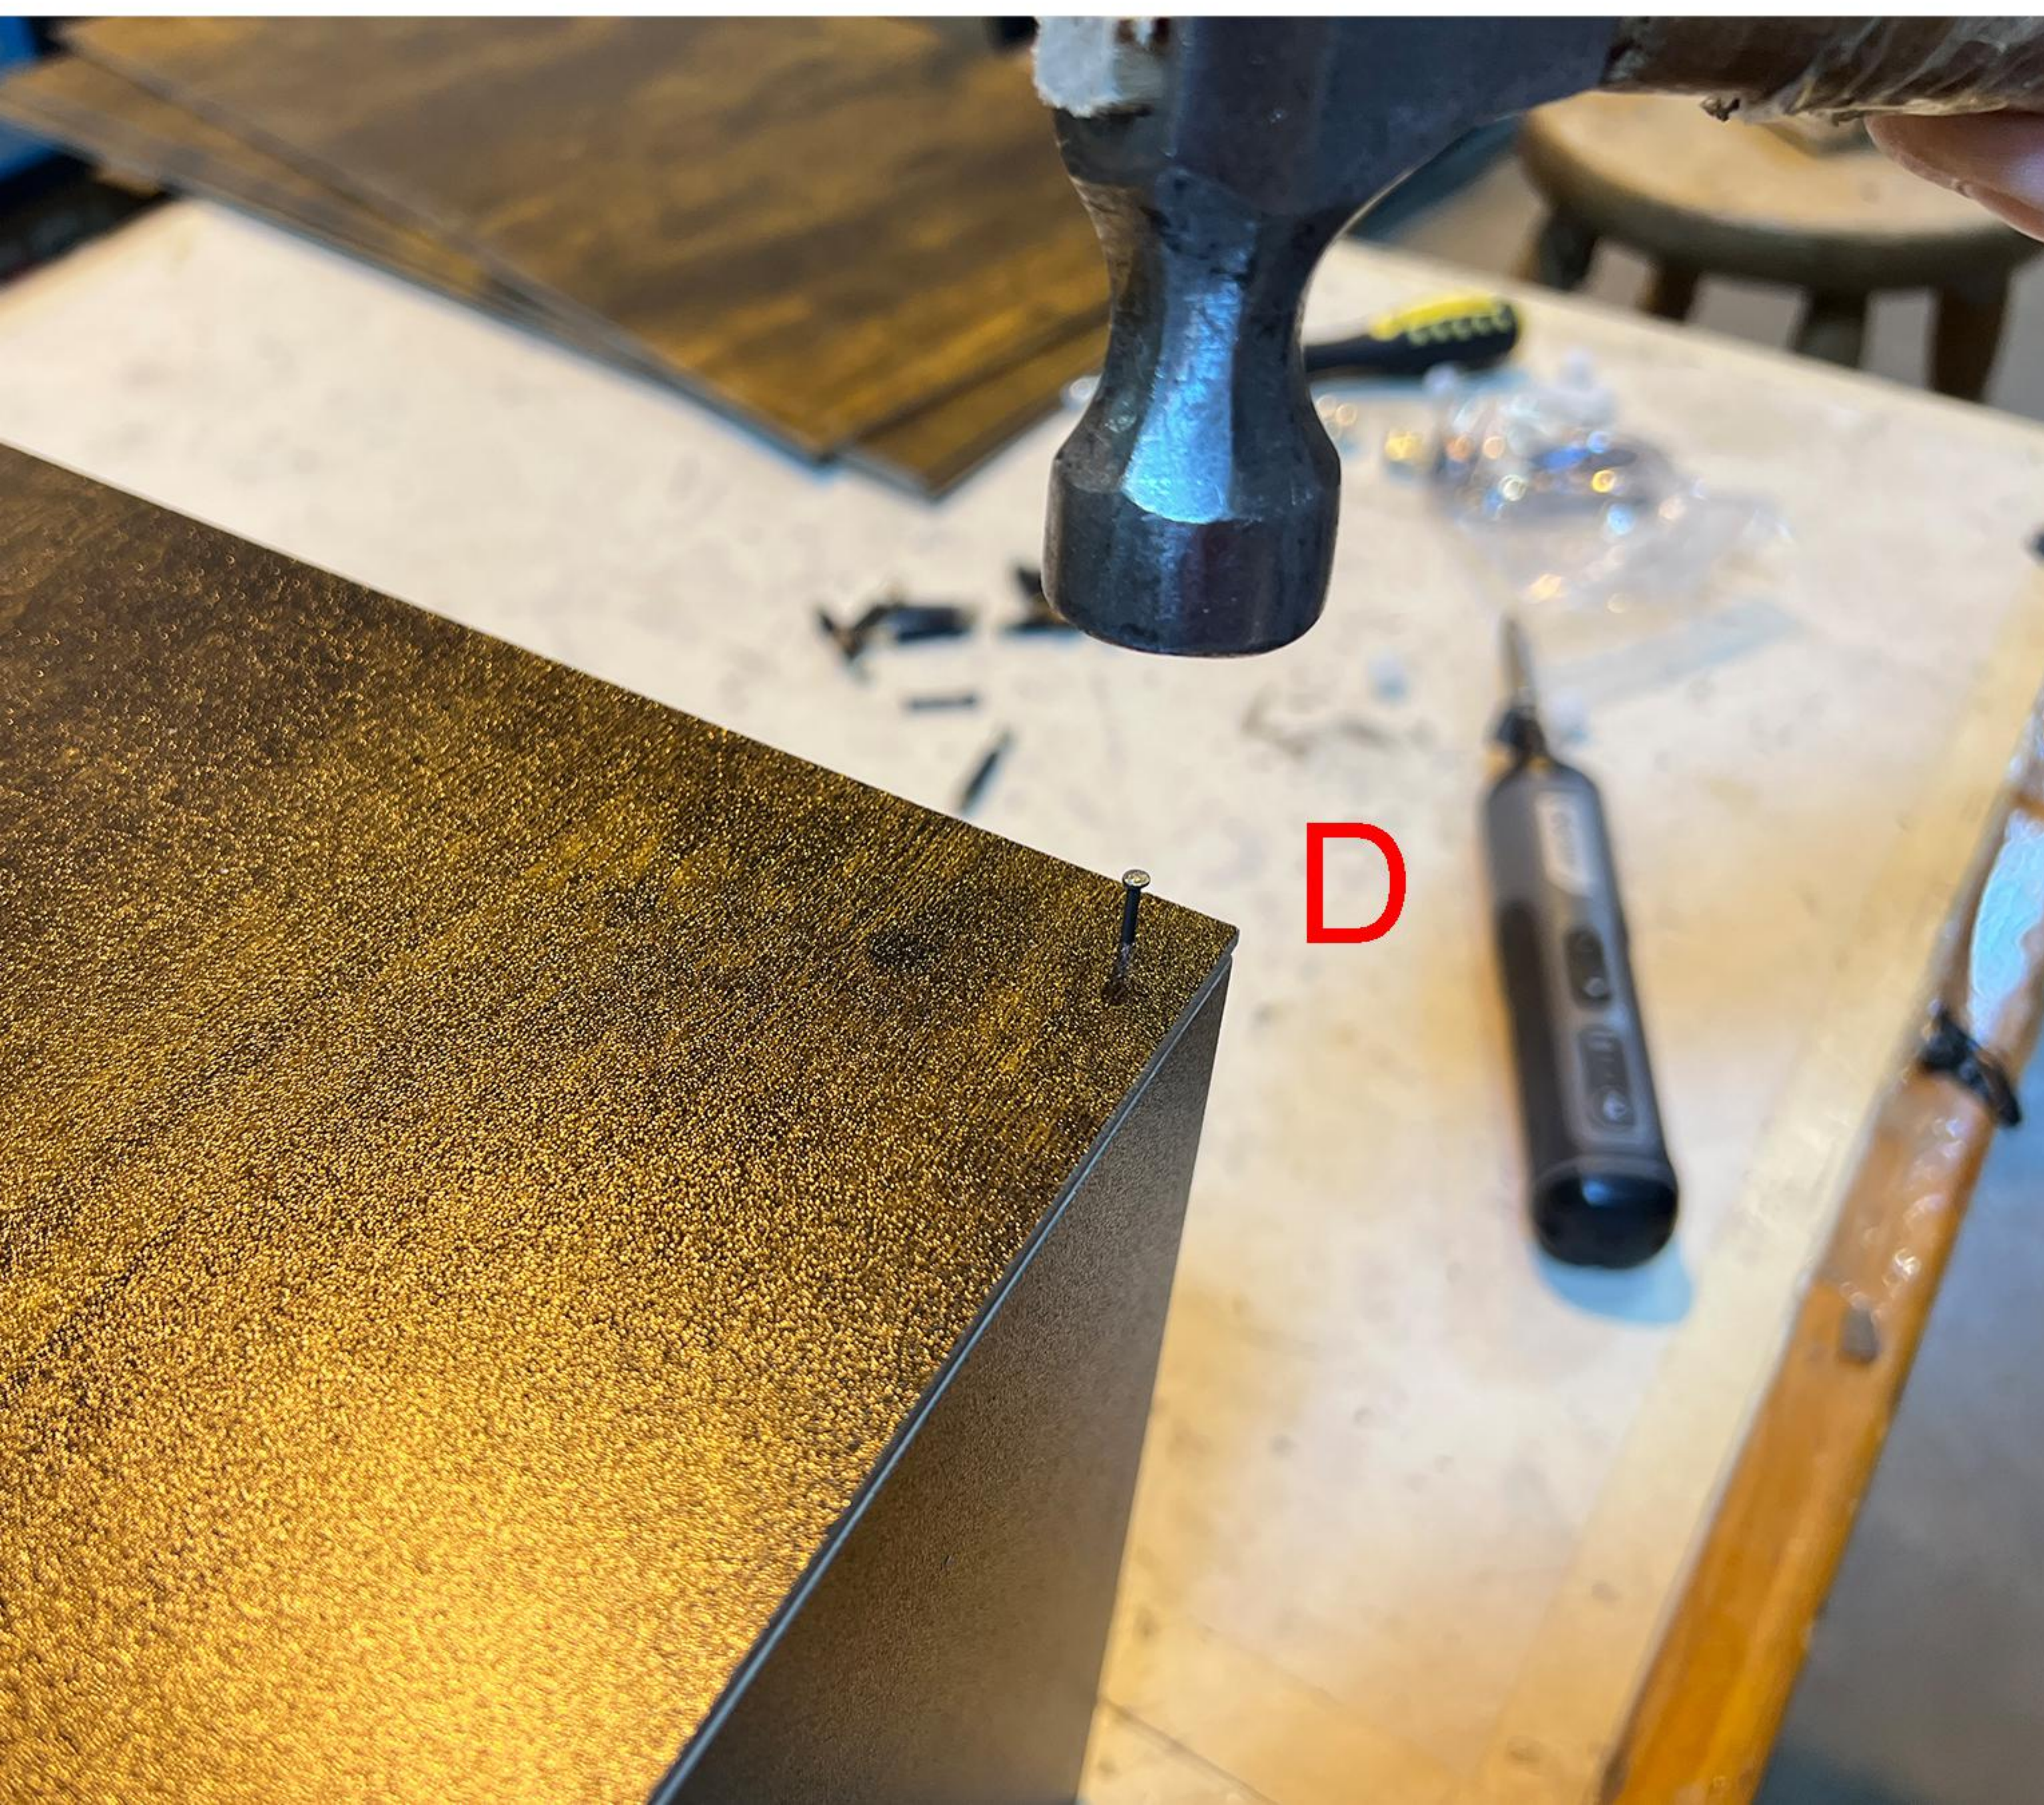

Flip the cabinet and lay it flat. Place panel 3 near the top and bottom edges. A small hammer (not included) is required. Secure it to the panel edges with part D as needed.

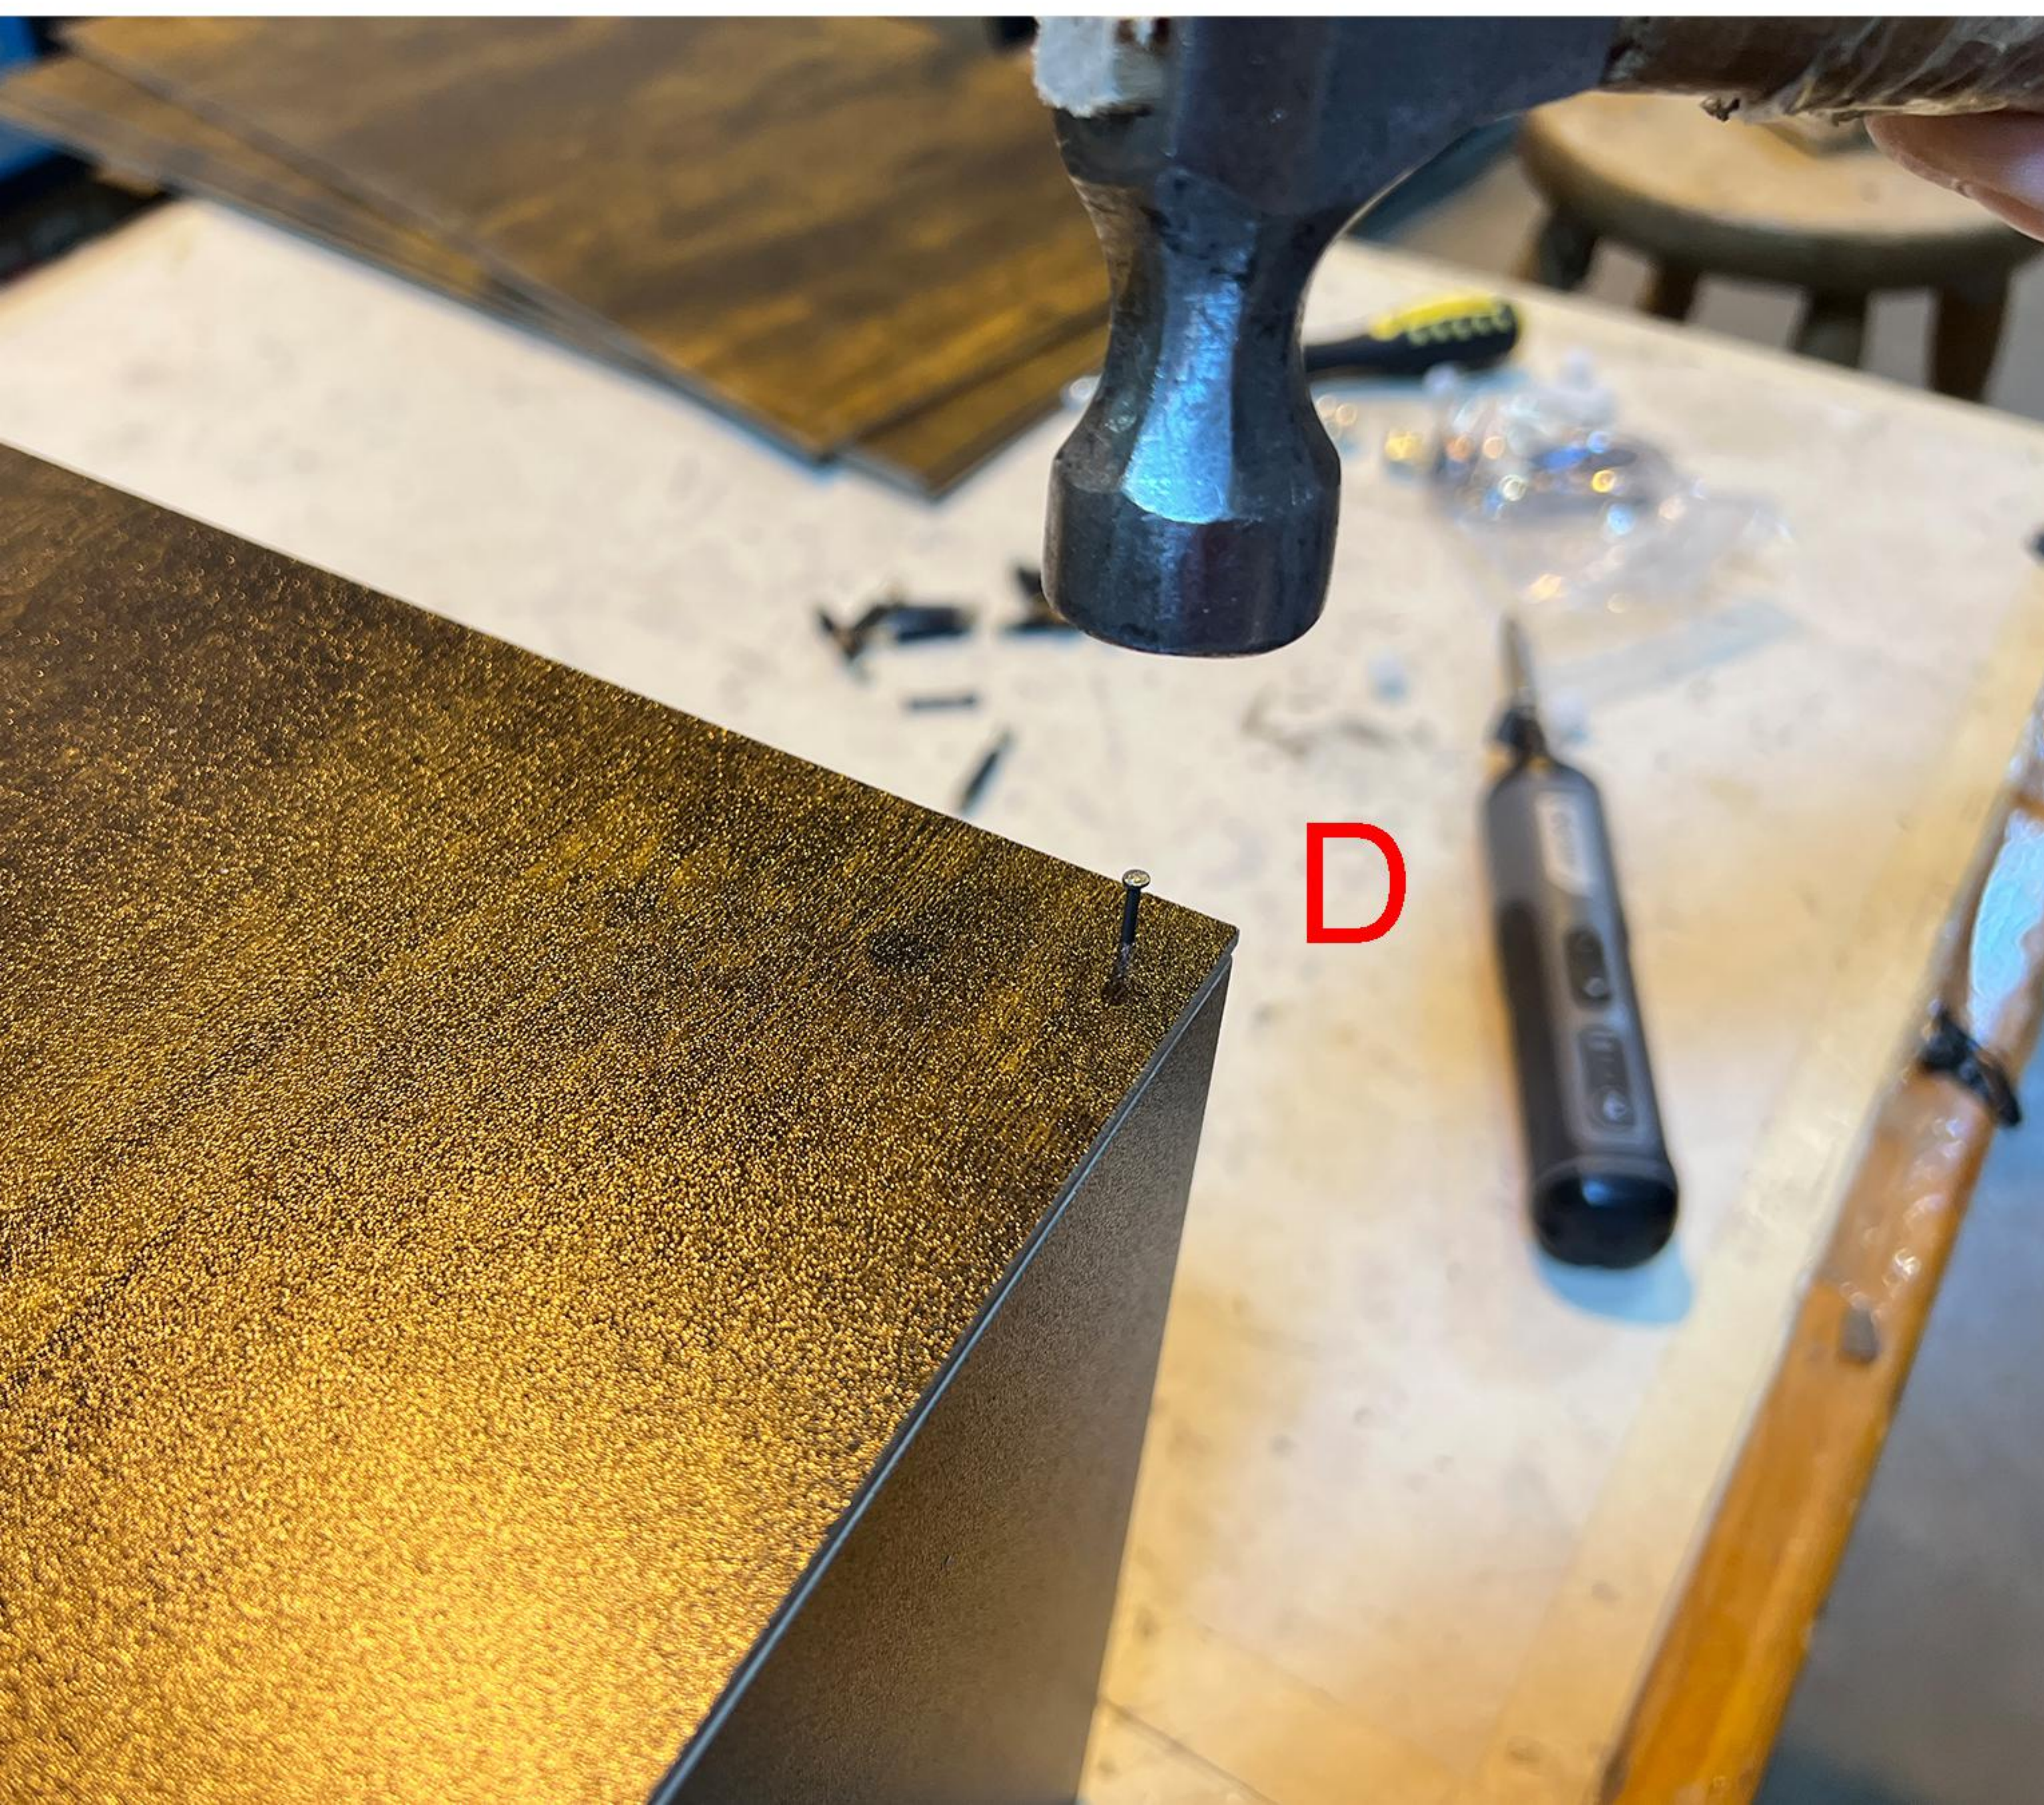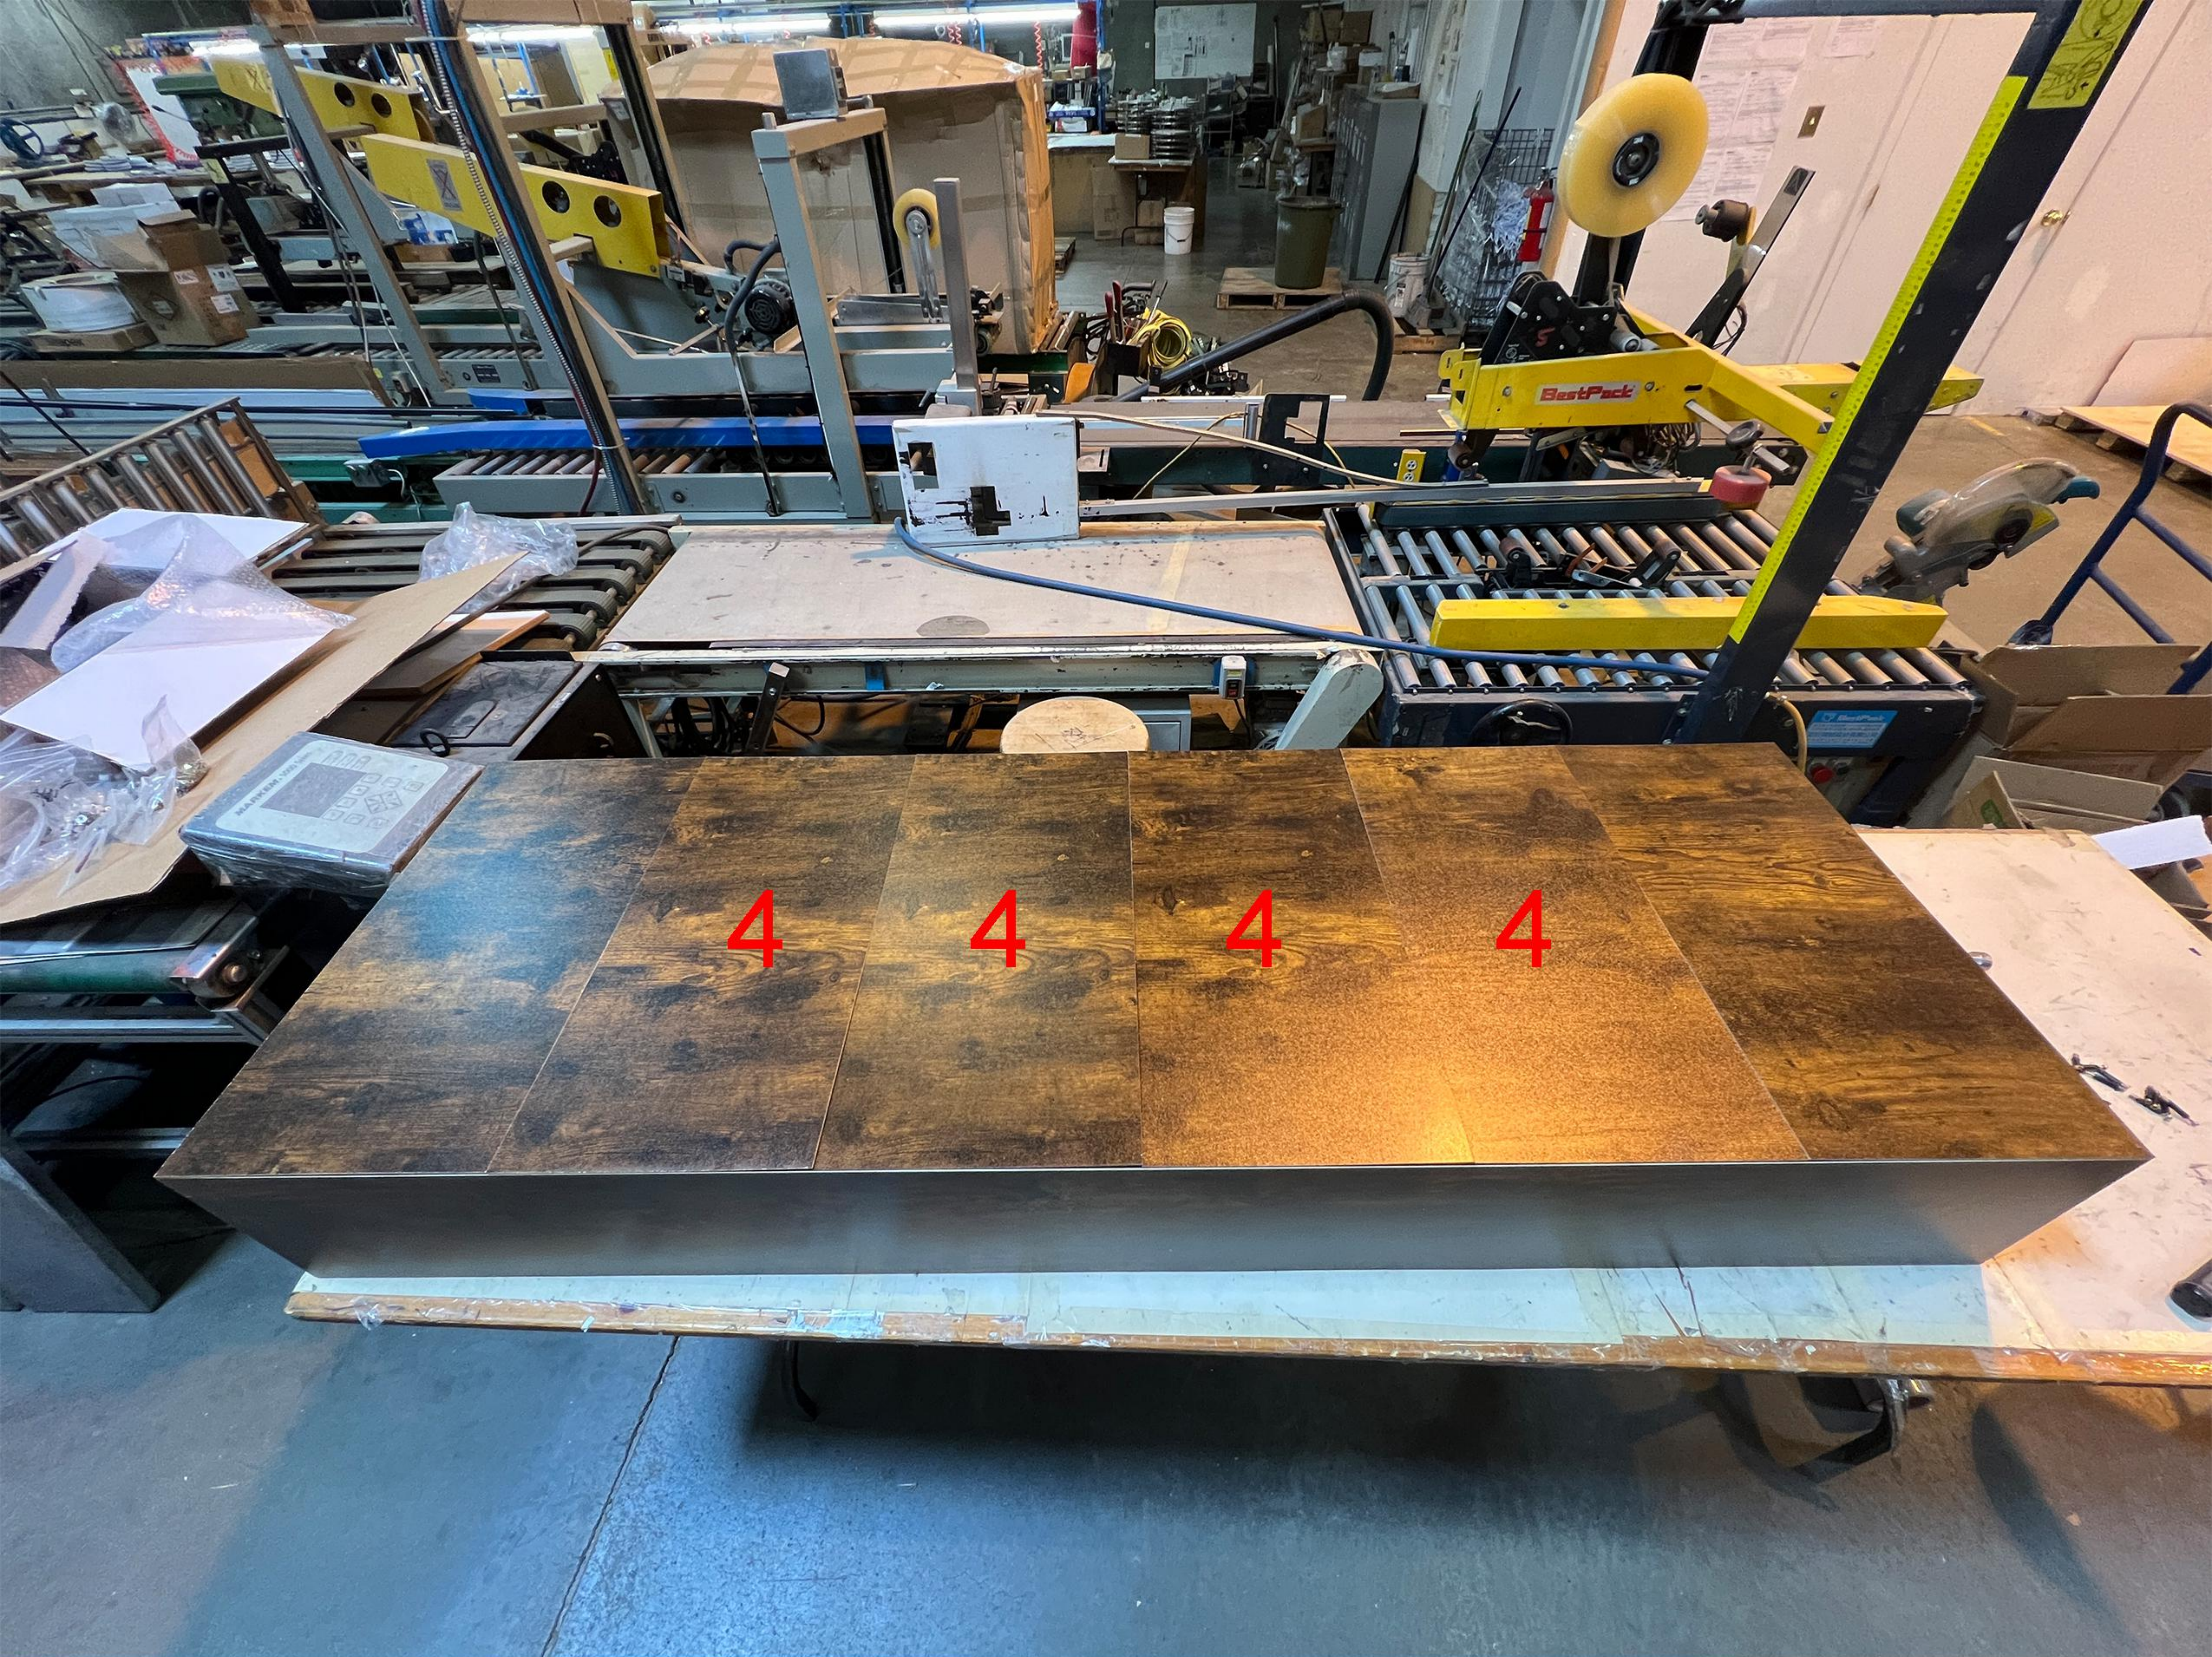

Install panel 4 in the remaining spaces and secure it with part D as well.



Assembly complete.