


WCK018-138/160CM Installation Instruction

Please read this instruction manual carefully before installation and use.

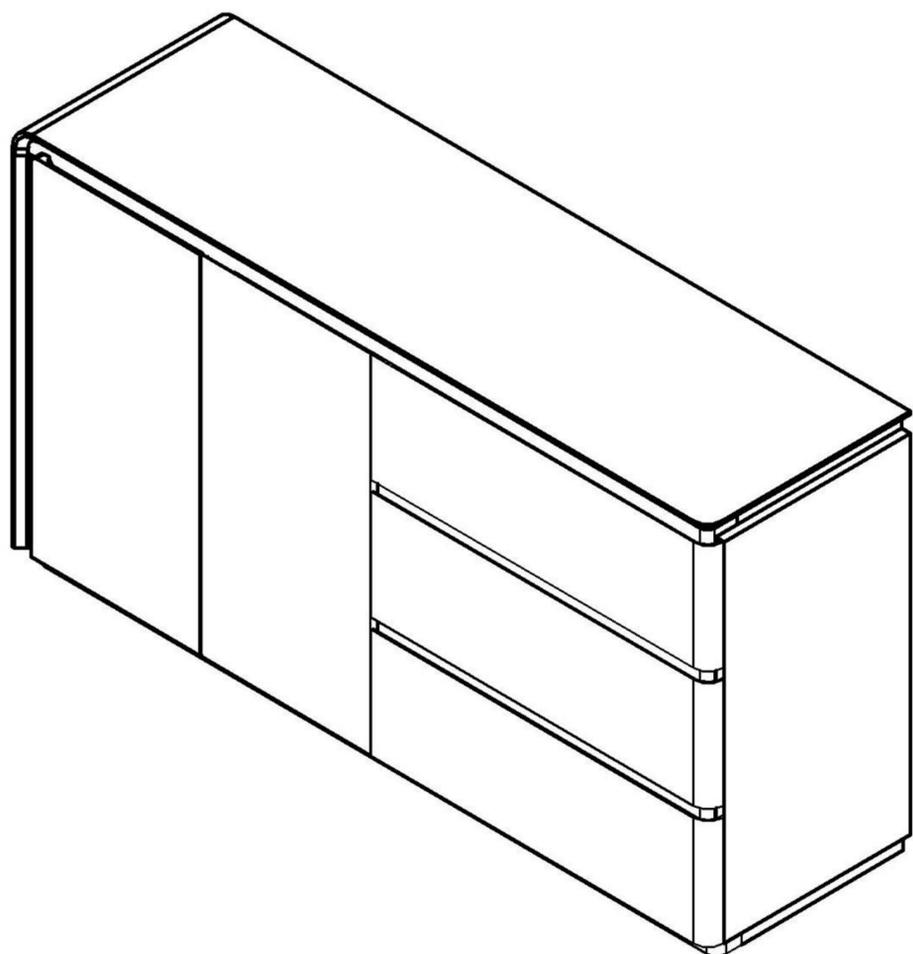

Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:

1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.


NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.



Scan the code to purchase ES001



Hardware List


Accessory Appearance	Code	Dimensions	Numbers	Unit	Accessory Appearance	Code	Dimensions	Numbers	Unit
	A	φ15*12mm	32	Piece		J	φ7*38mm	2	Piece
	B	φ7*40mm	32	Piece		K	φ14*4mm	10	Piece
	C	φ6*40mm	2	Piece	Anti-flipping Kits	L		1	Set
	D	φ12*10mm	12	Piece		M		4	Piece
	E	φ5*25mm	12	Piece		N	300*45mm	3	Pair
	F	φ3.5*12mm	24	Piece		O	φ6*25mm	7	Piece
	G	φ3.5*14mm	24	Piece		P	φ6*20mm	8	Piece
	H	φ3.5*40mm	24	Piece					
	I		4	Piece					

BoardMaterial List

Code	Dimensions(mm)	Numbers	Code	Dimensions(mm)	Numbers	Code	Dimensions(mm)	Numbers
①	1375*400*51	1	⑧	683*364*15	1	⑮	679*334*15	2
②	1341*60*34	1	⑨	1341*341.5*12	2	⑯	666*213*32	3
③	1341*384*15	1	⑩	673.5*300*15	1	⑰	300*145*15	6
④	665*400*17	1	⑪	1347*50*34	1	⑱	581*145*15	3
⑤	665*60*34	1	⑫	1247*50*34	1	⑲	593*294*8	3
⑥	679*367*17	1	⑬	319*50*34	2	⑳	300*50*15	3
⑦	324*60*15	1	⑭	651*60*34	2			


Detailed description of the main components, please read carefully

M (Hinge) Installation Instructions Install the hinge with screw G

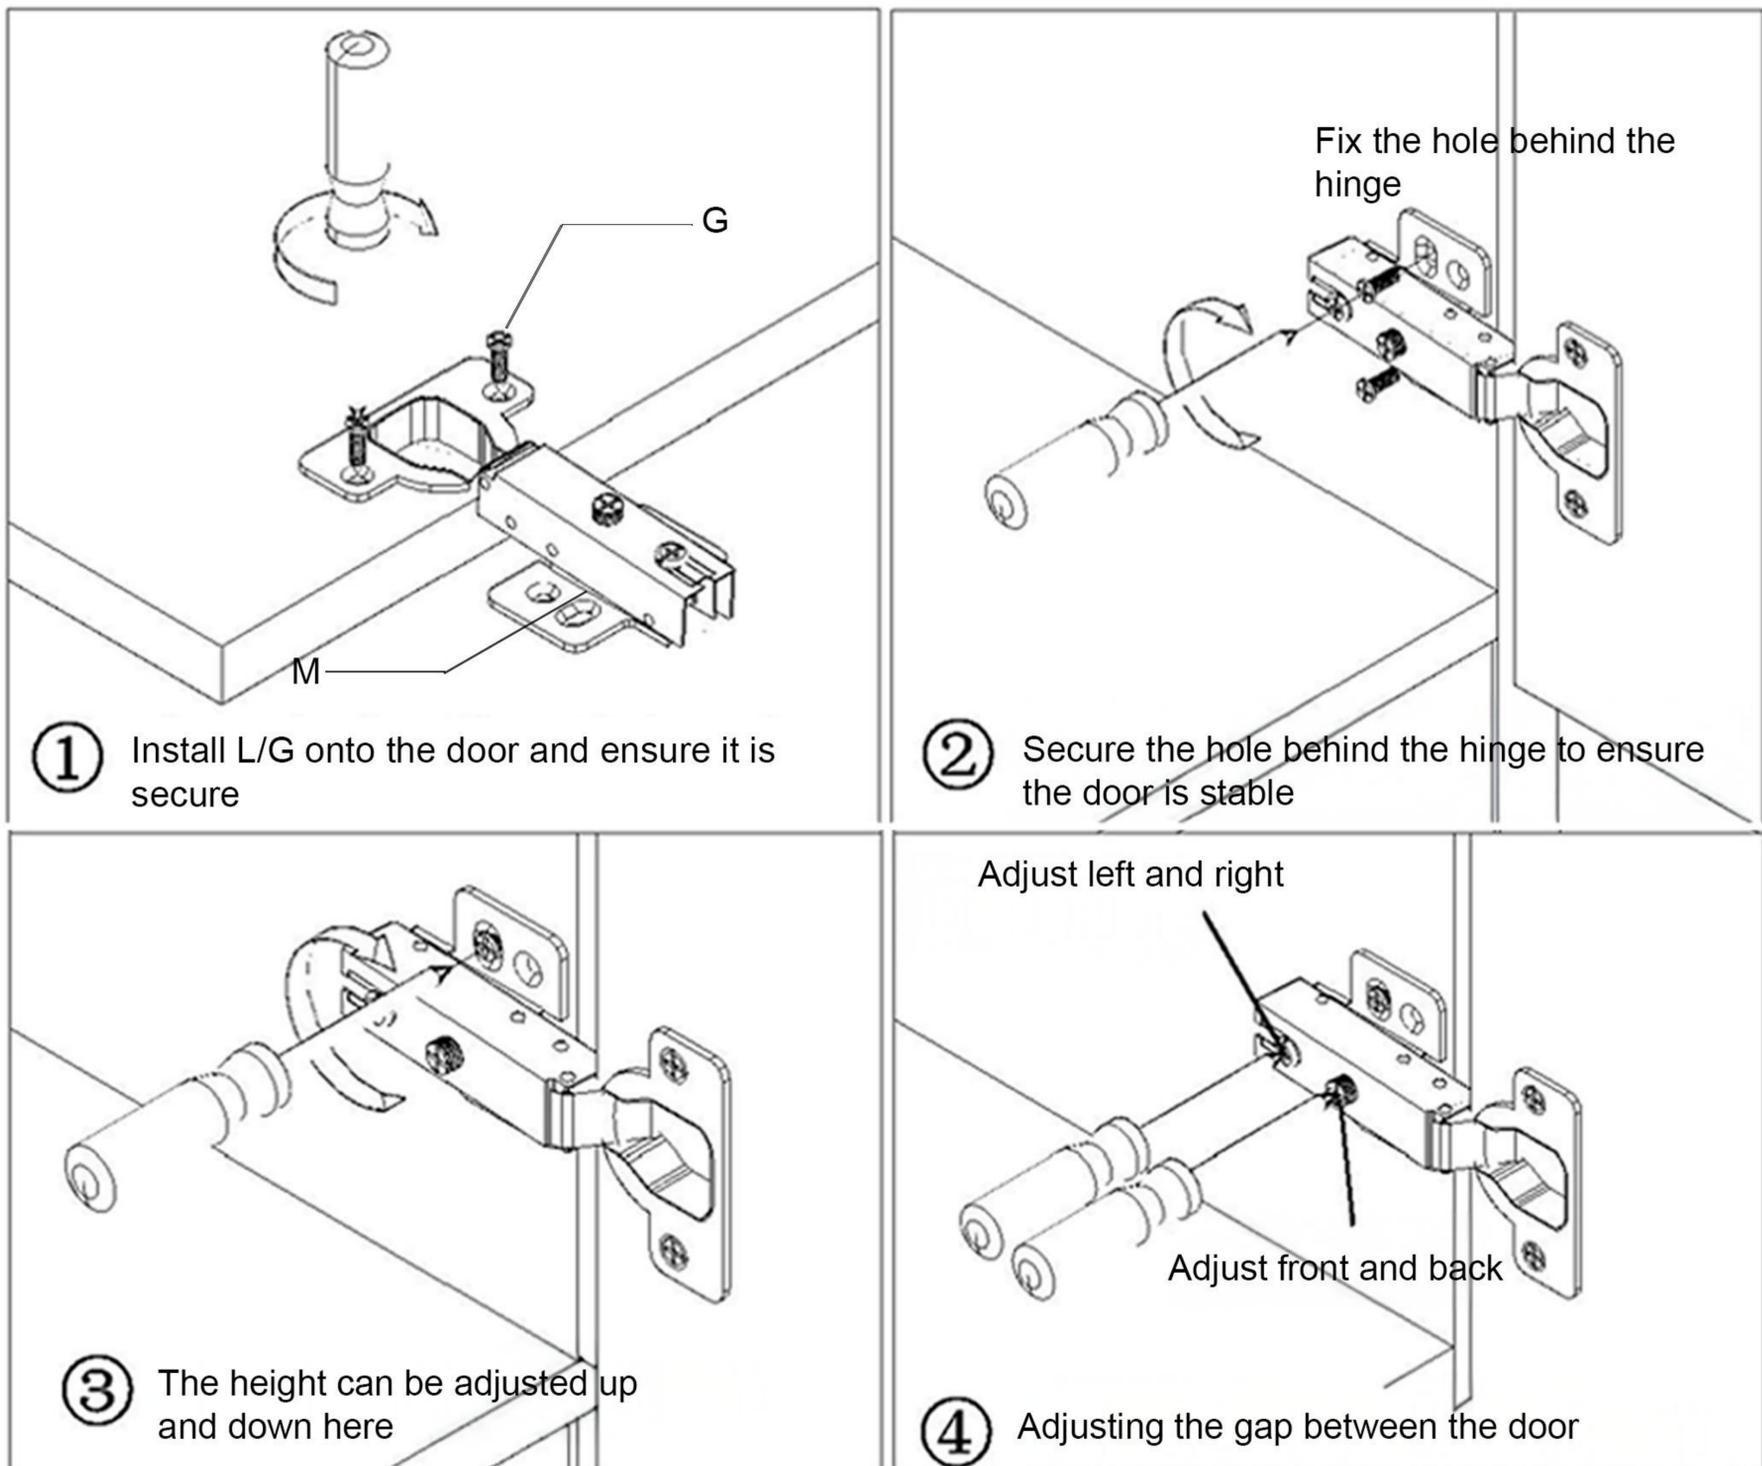

Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

A + B is large, **D + E** is small

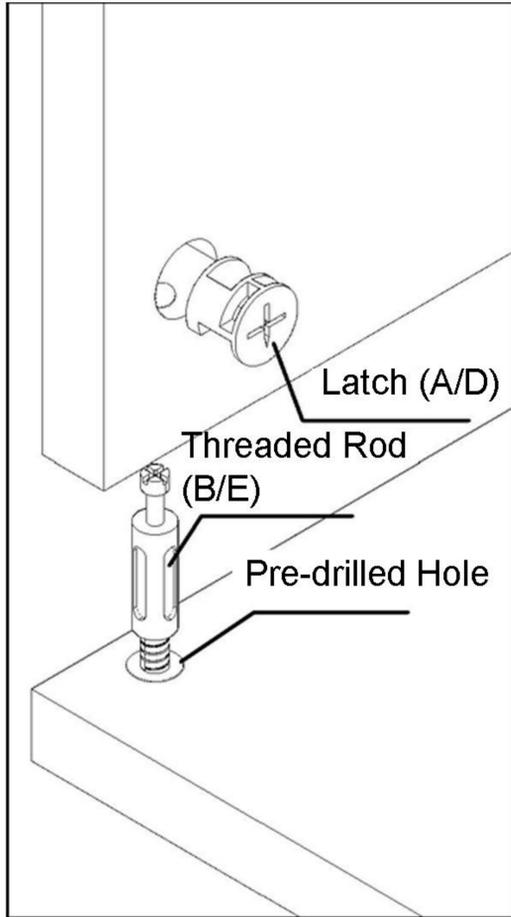

1. Screw the B/E (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed B/E into the corresponding hole of the other piece. Press A/D (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.

N (Sliding Rail) Installation Instructions


When installing N, use with screw F

1, Separate N (Sliding Rail)




The main body part

The pull-out part

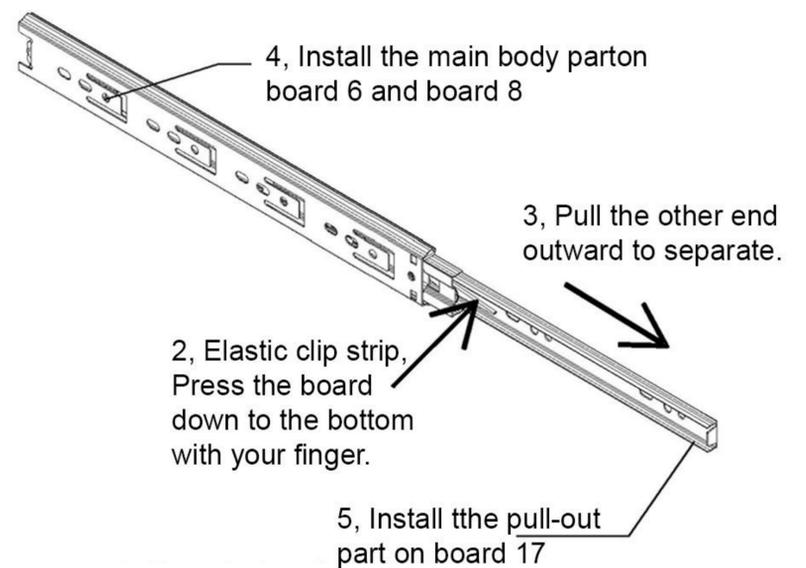


Step 2:

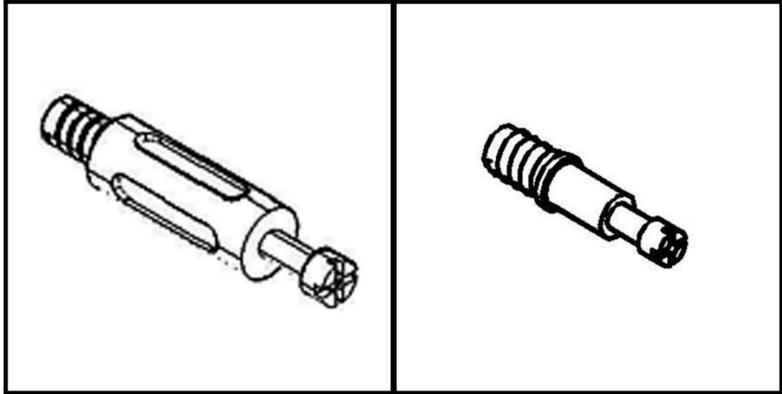


B

E

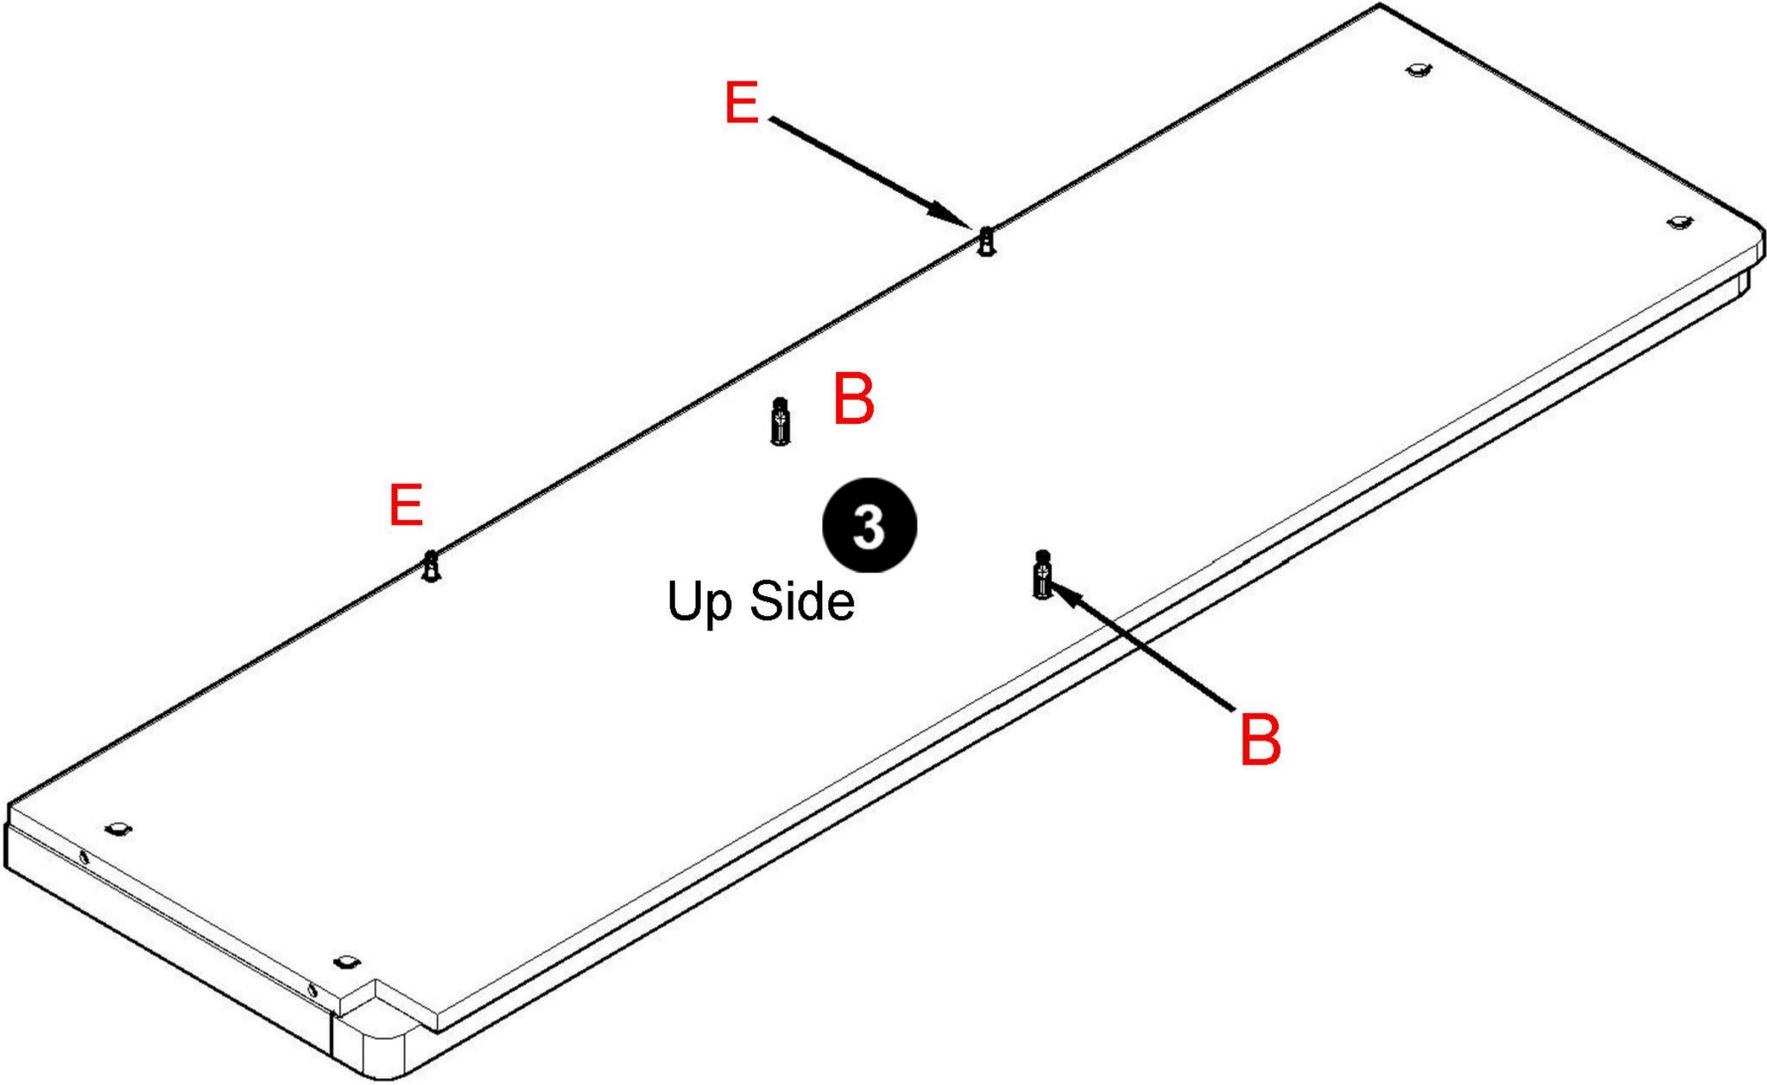


Step 3:

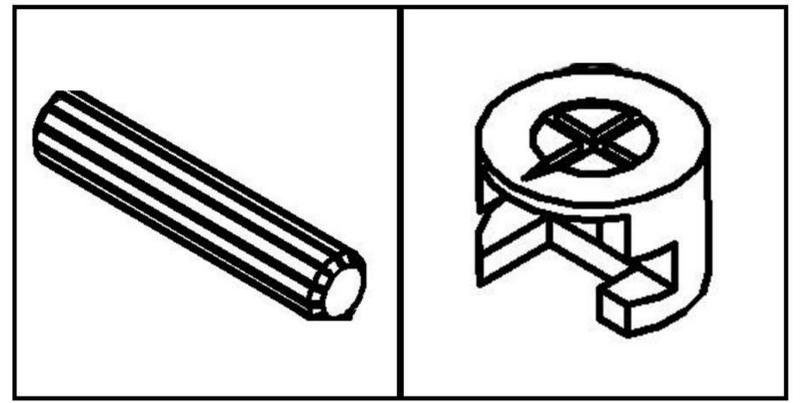


C

D

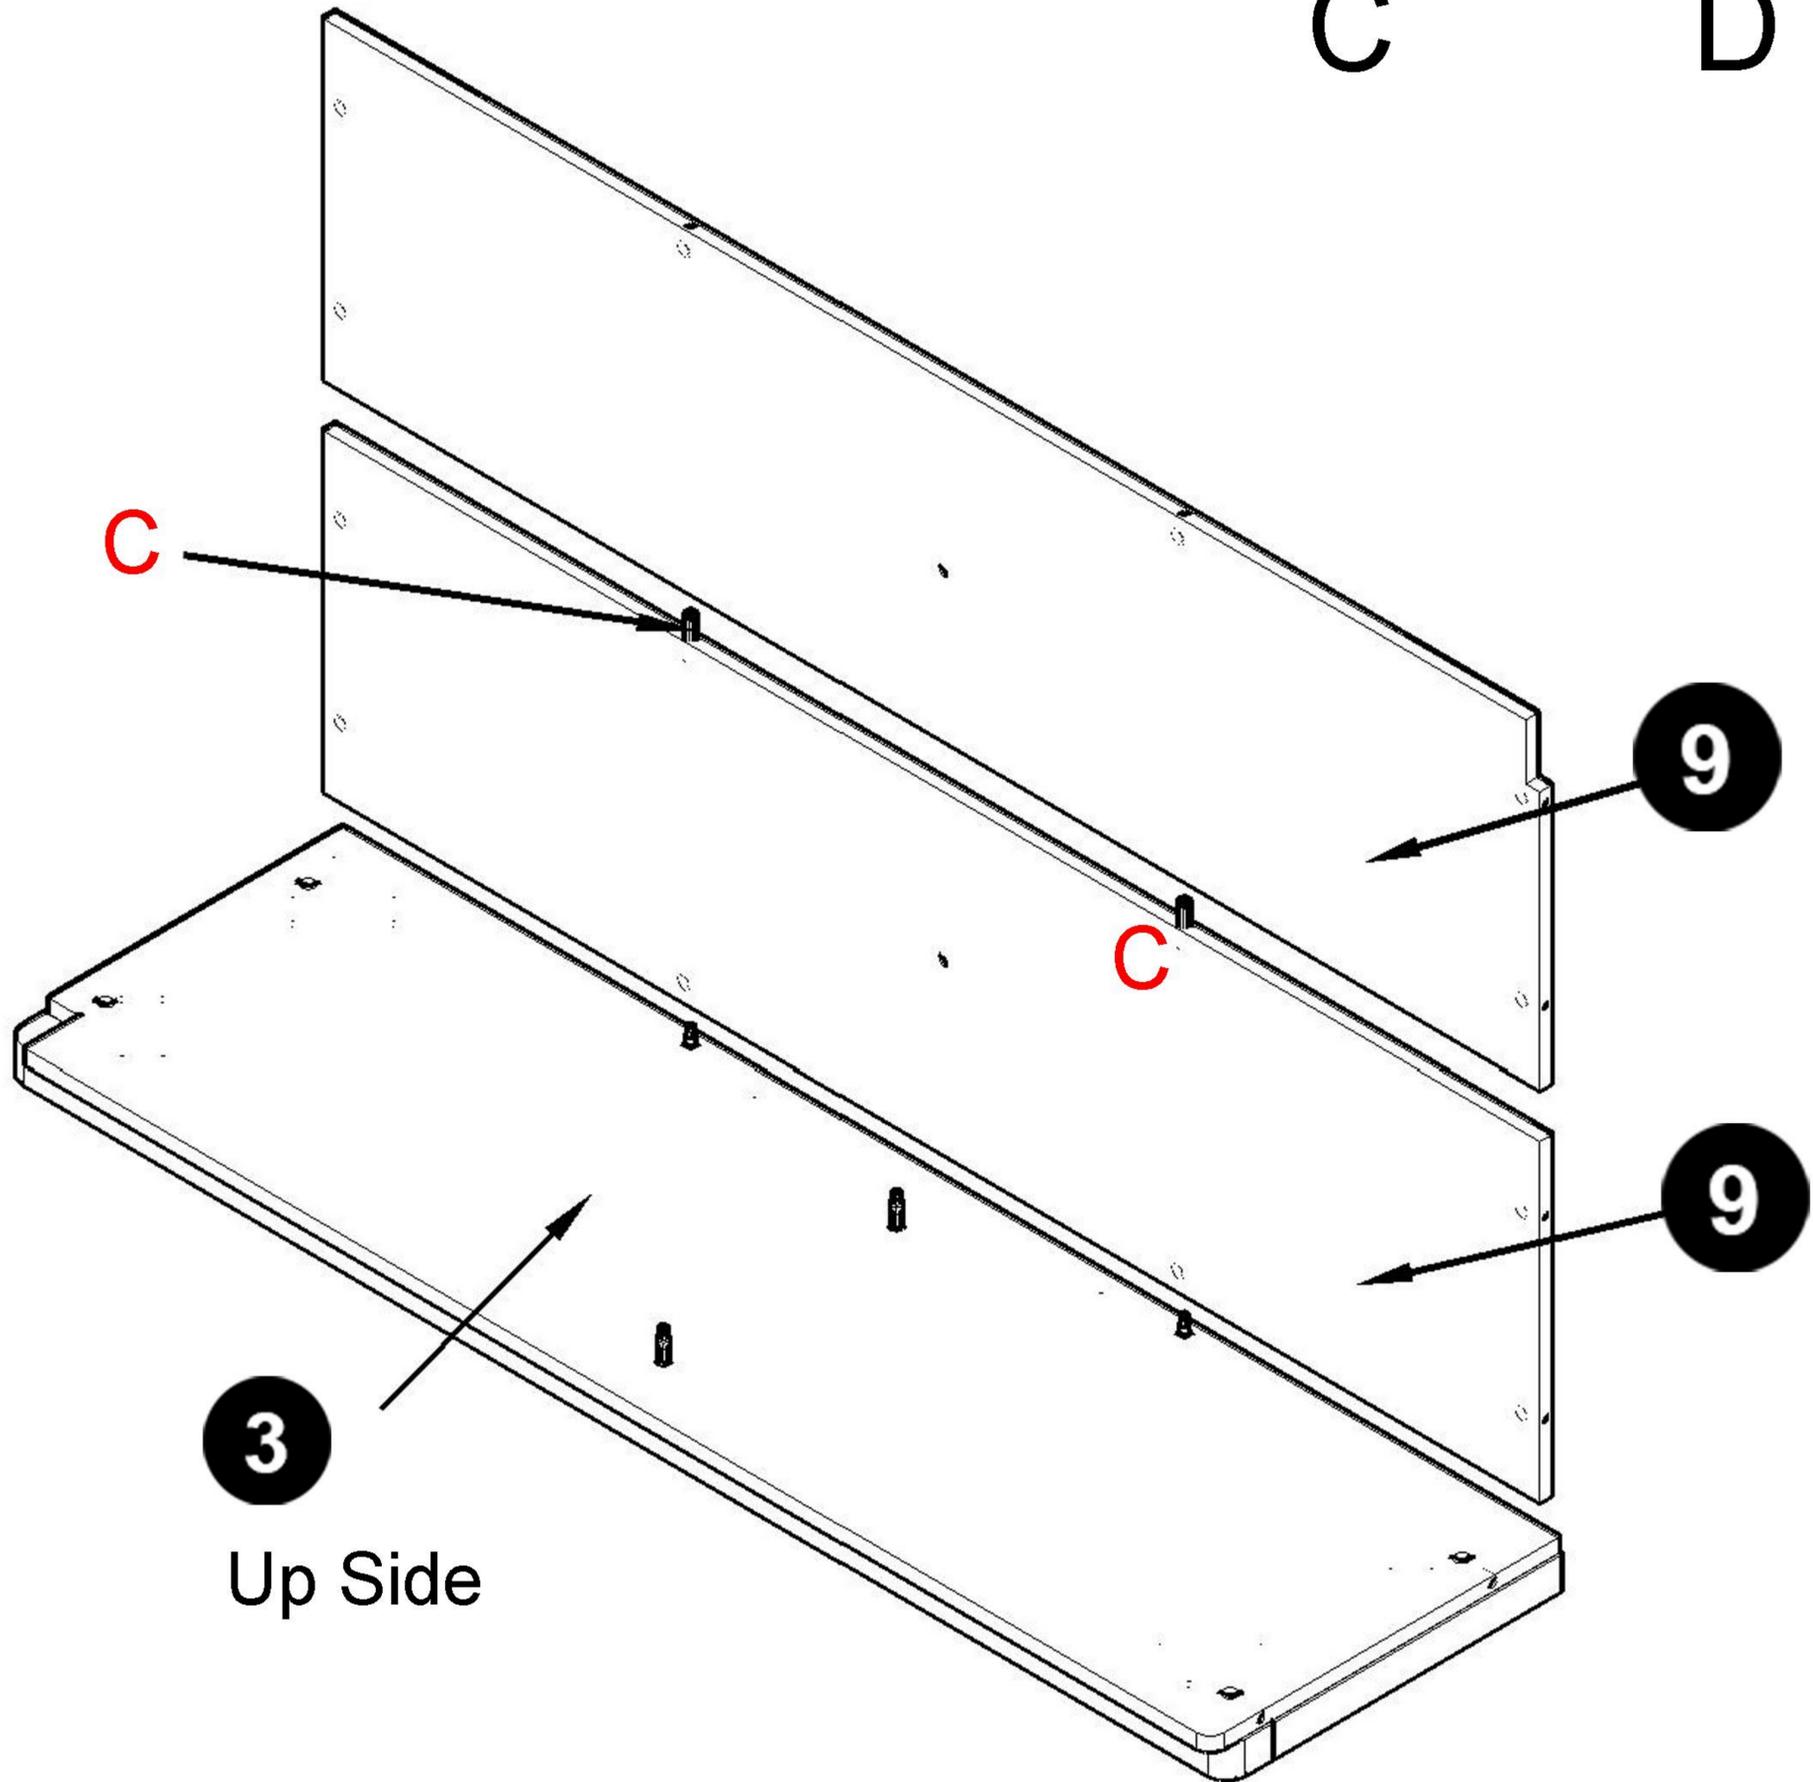

Use D to secure pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.


Step 4:

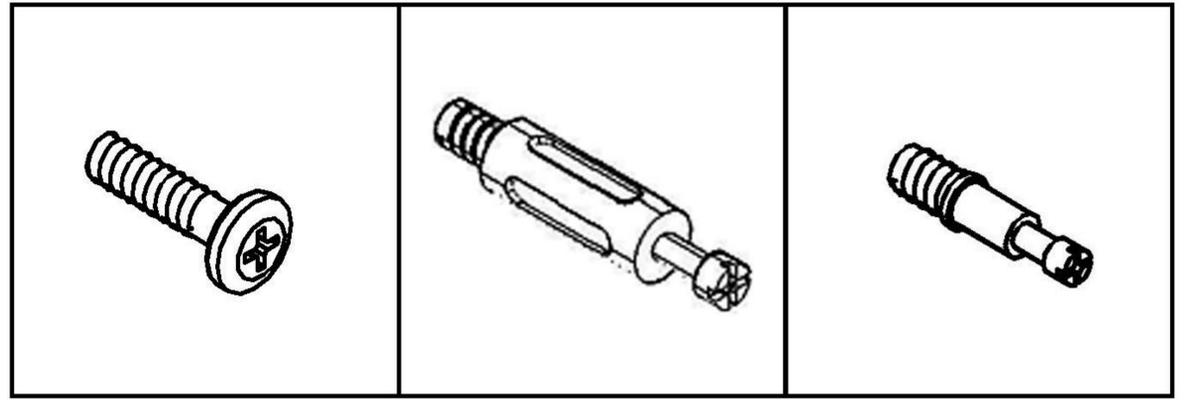


P

B


E

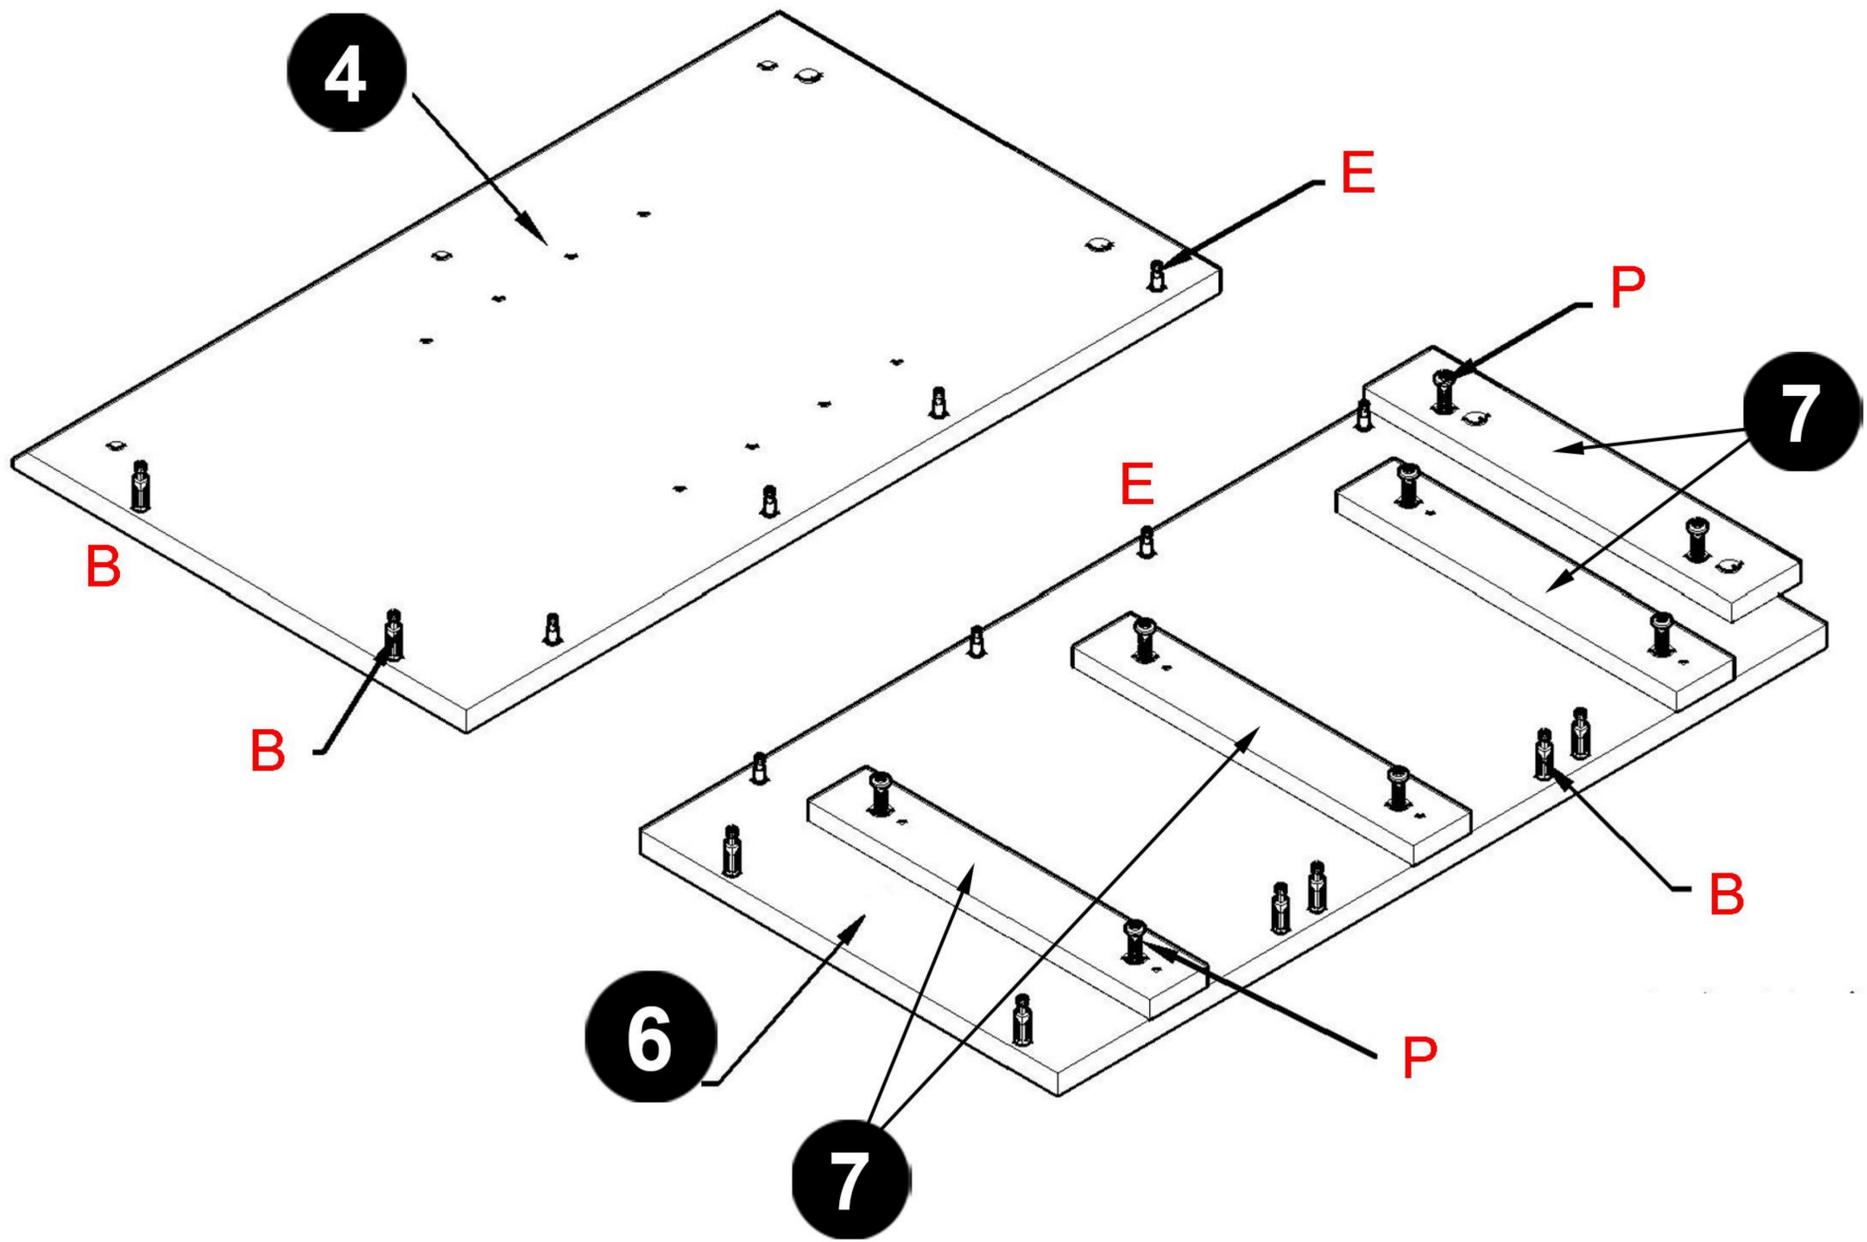

Step 5:


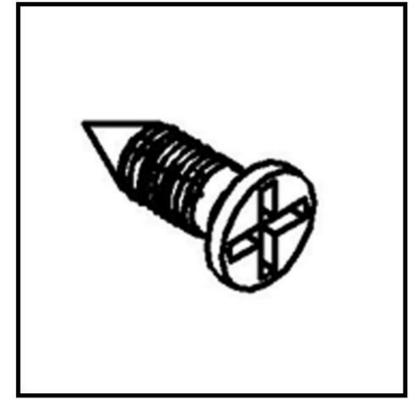


F

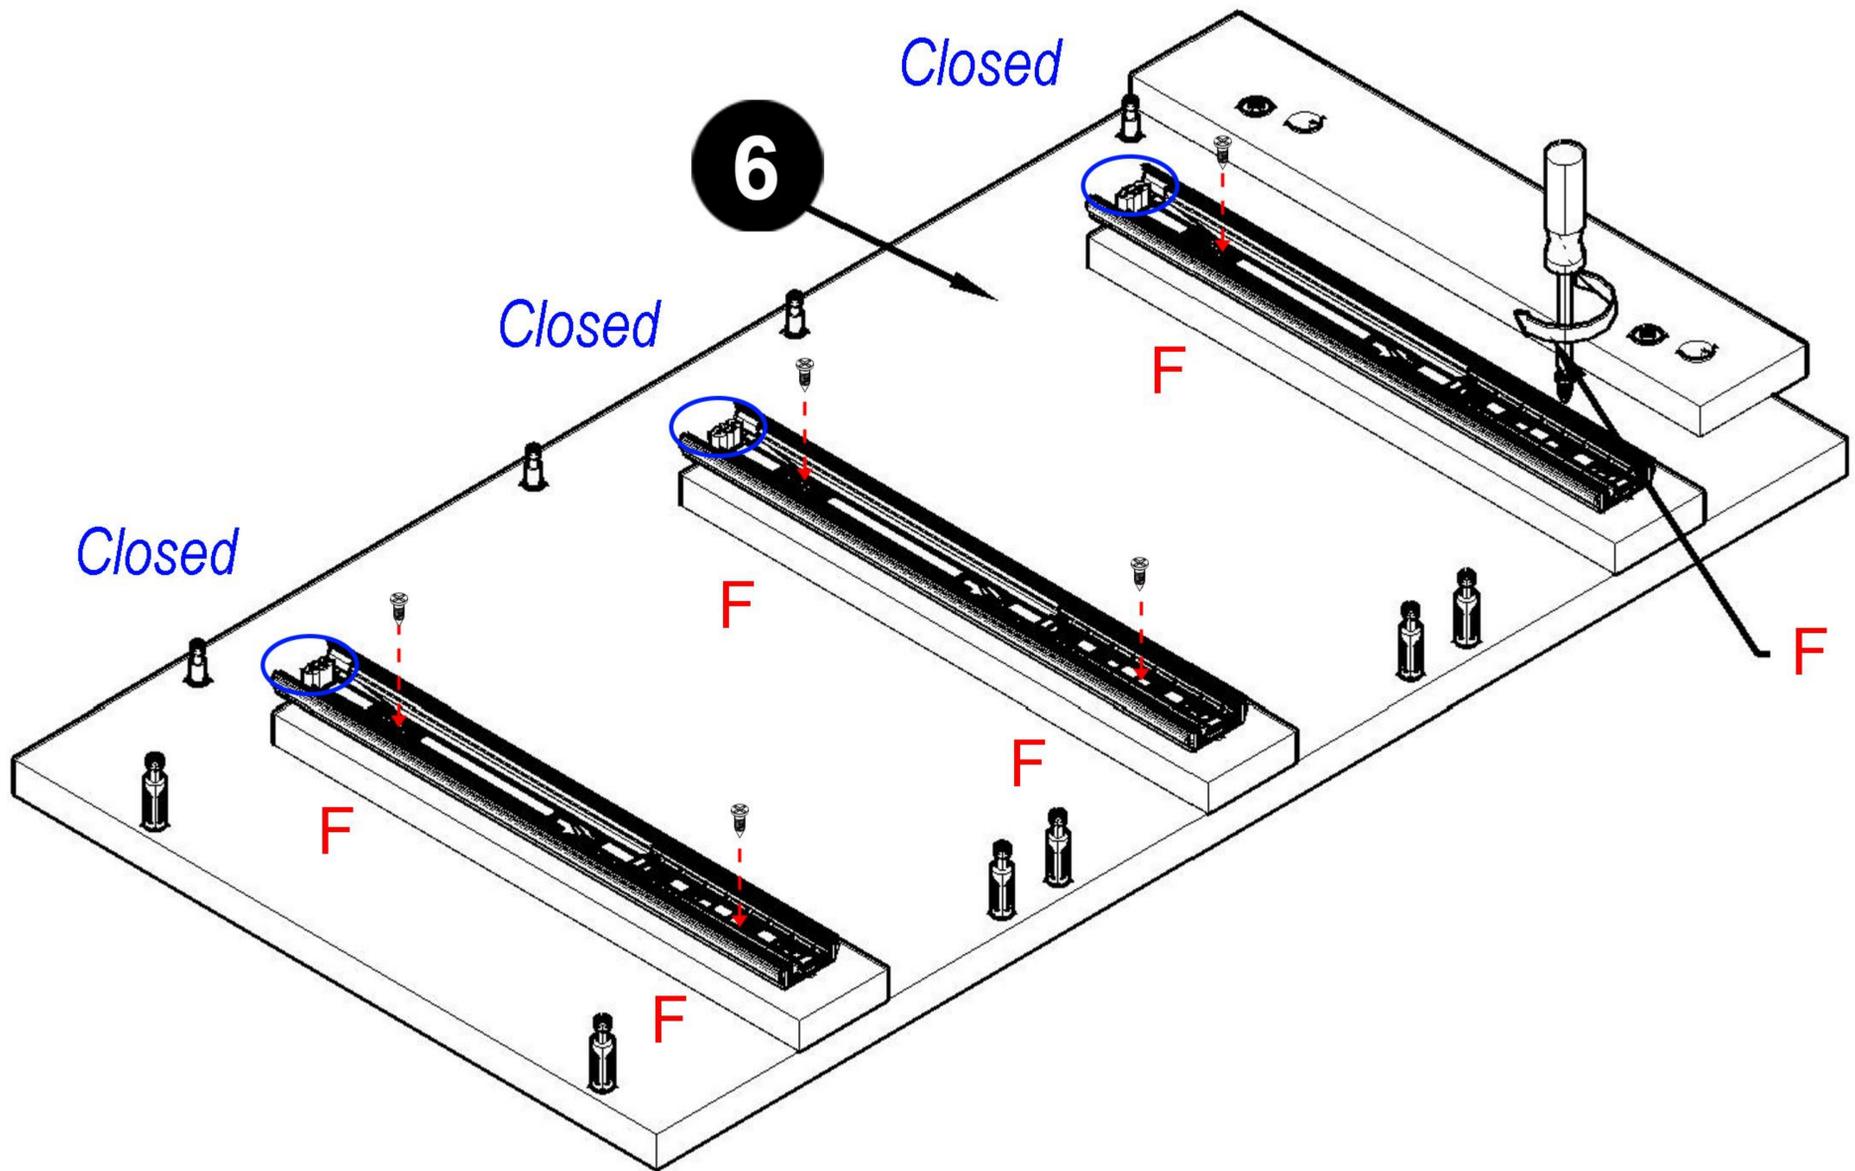


N The main body part X 3

Step 6:

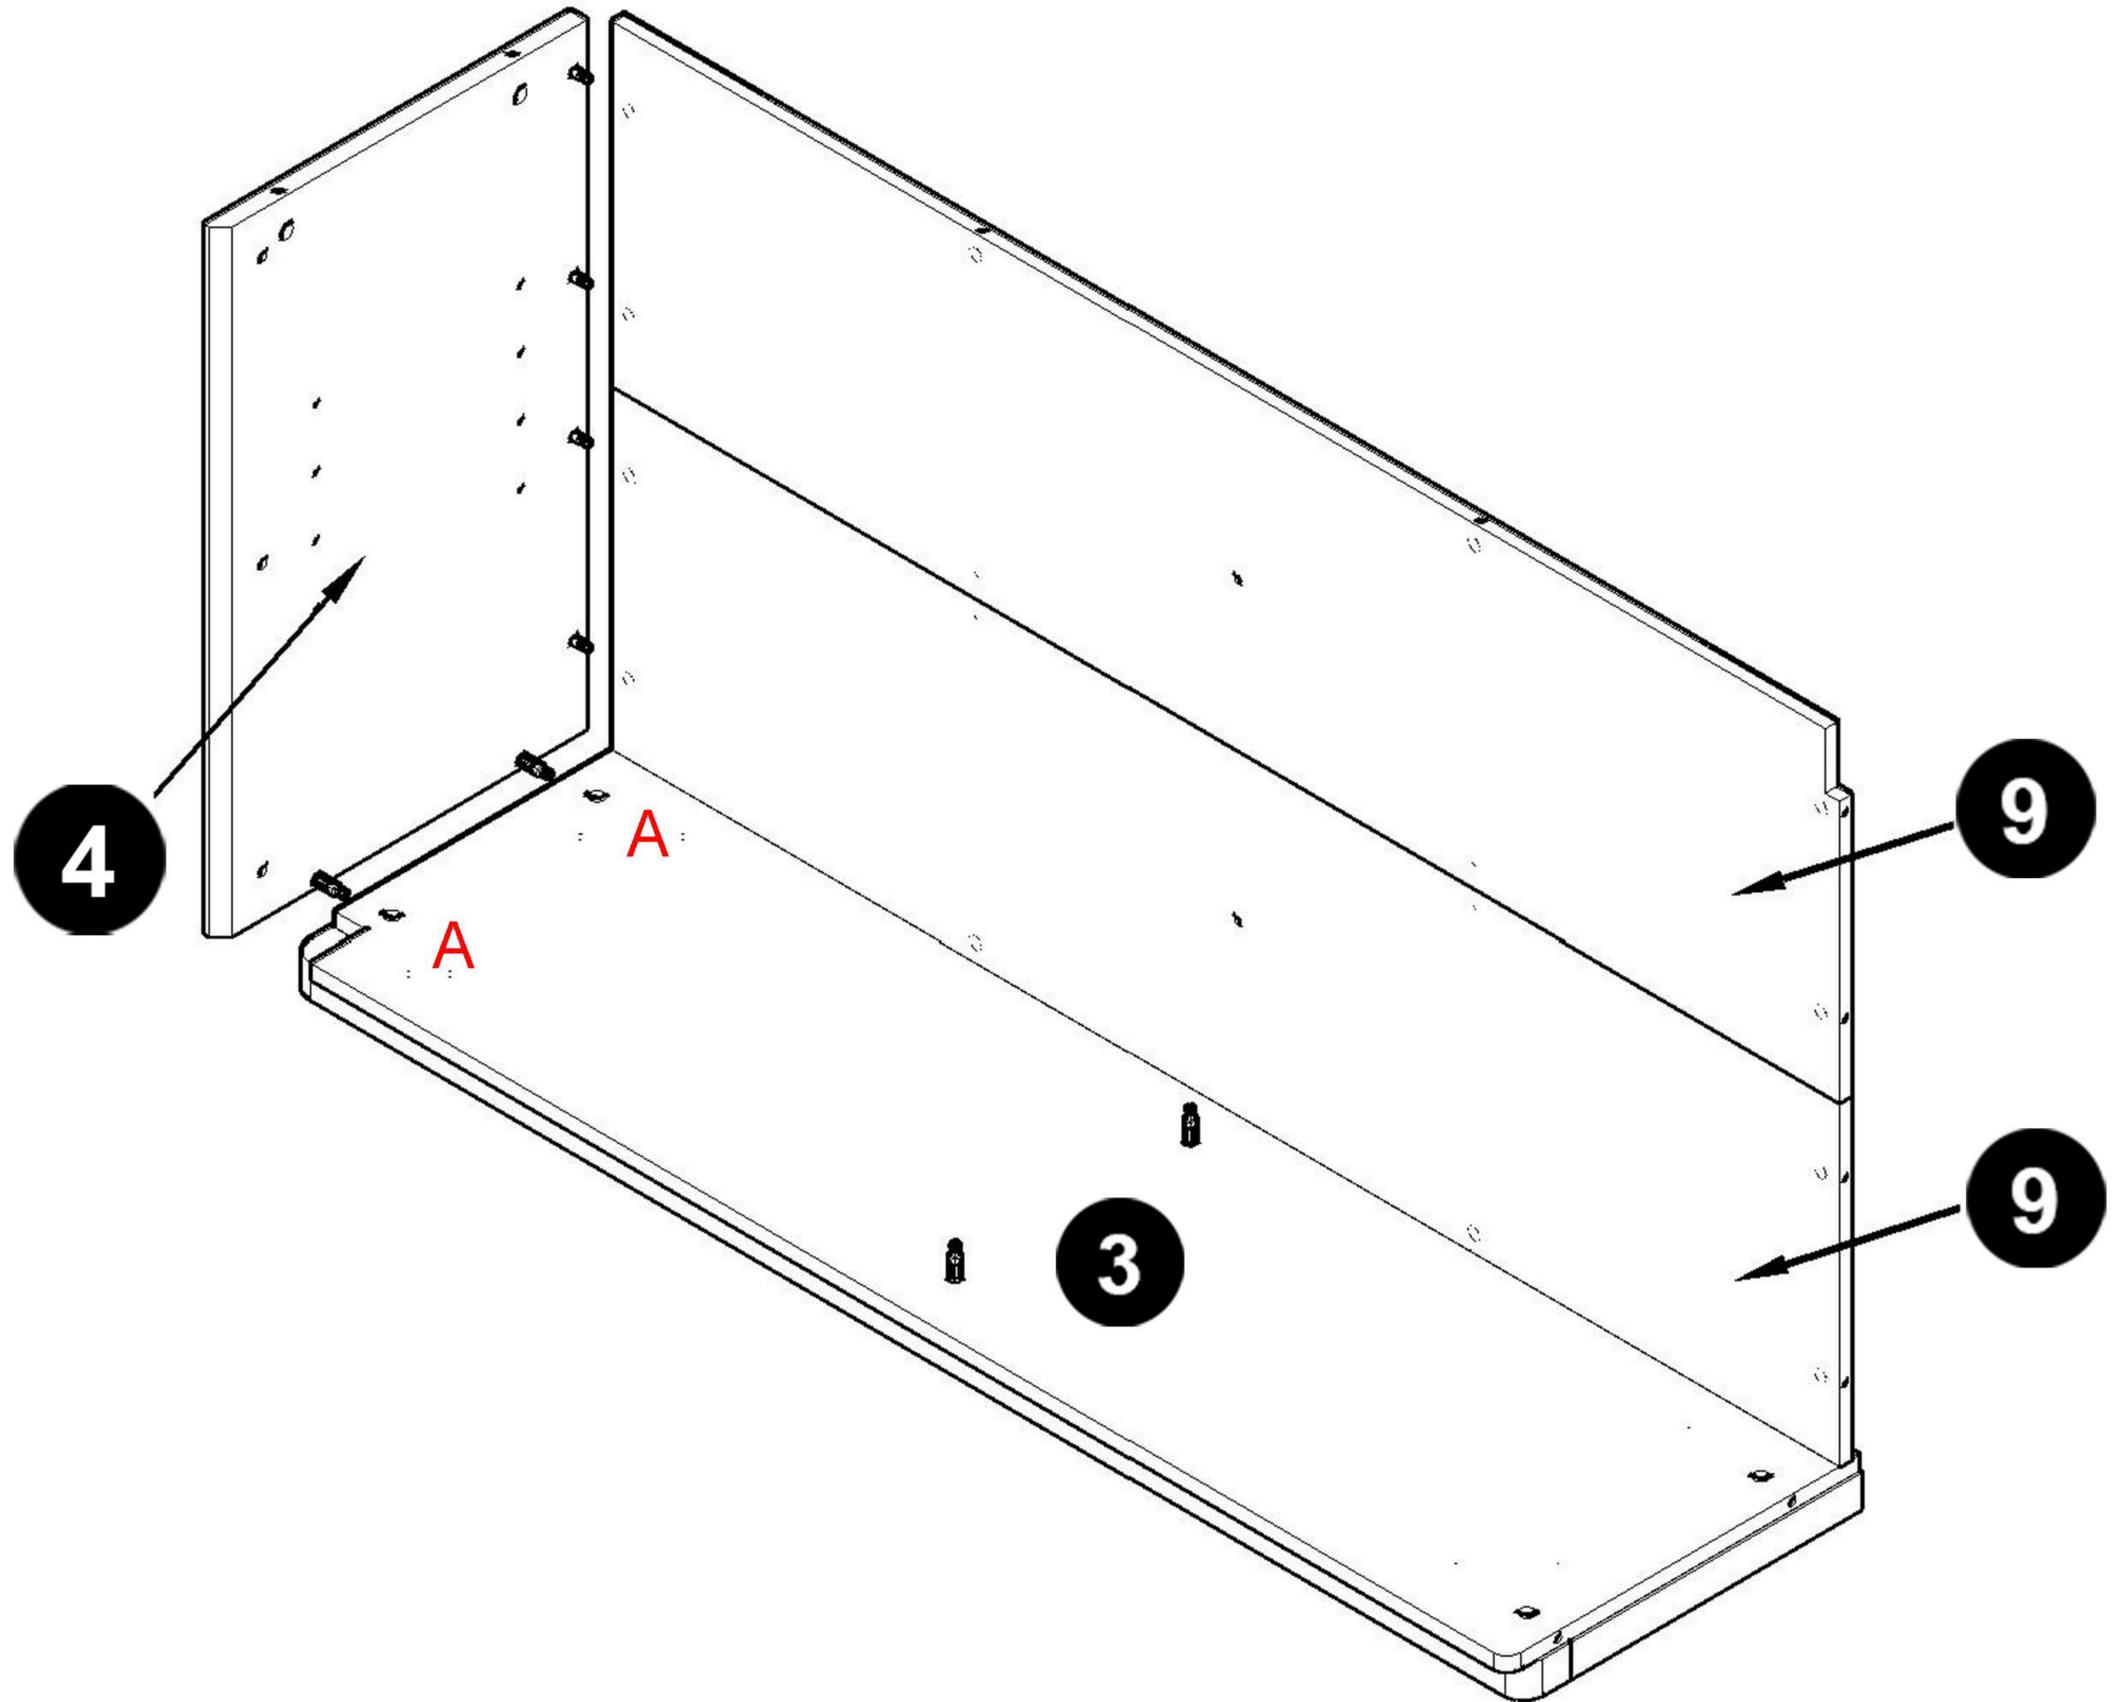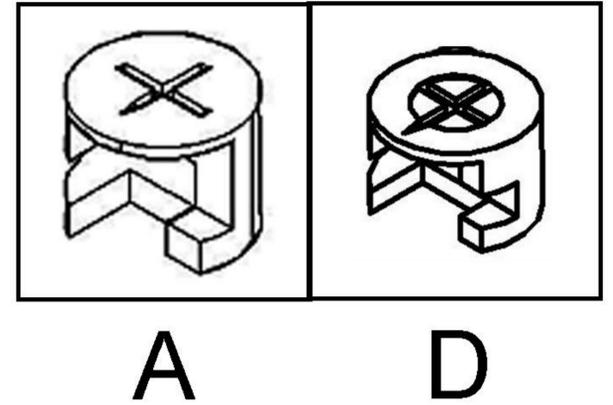


Use A and D to secure pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 7:

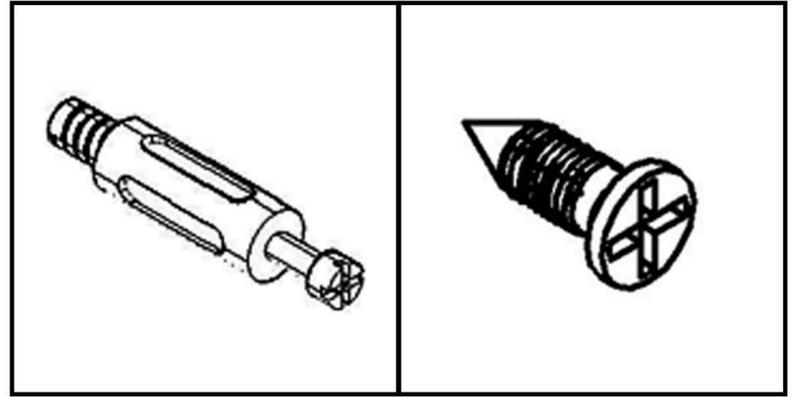


B

F

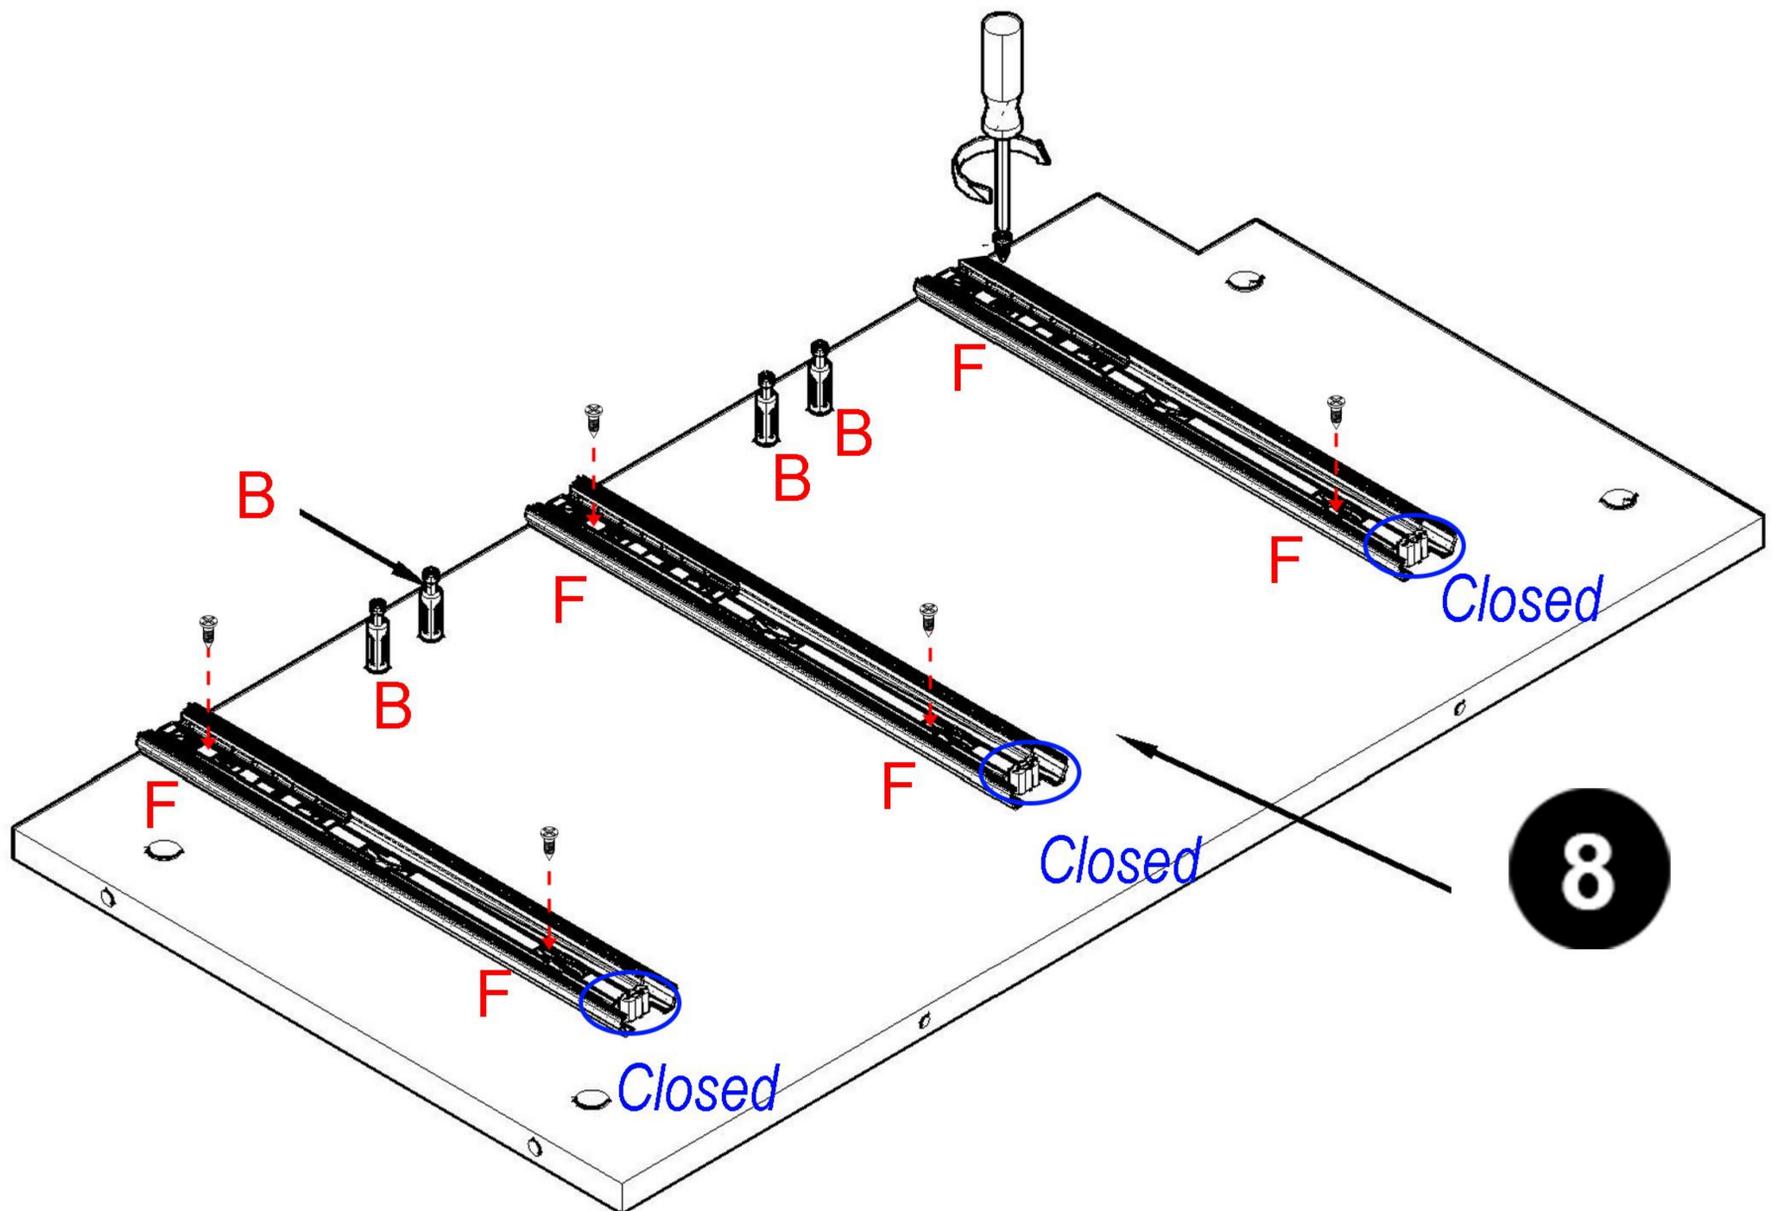


N The main body part X 3

Step 8:

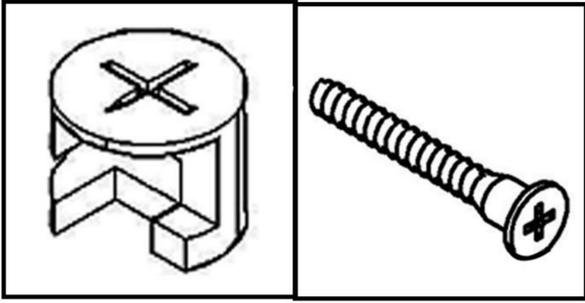

A

J

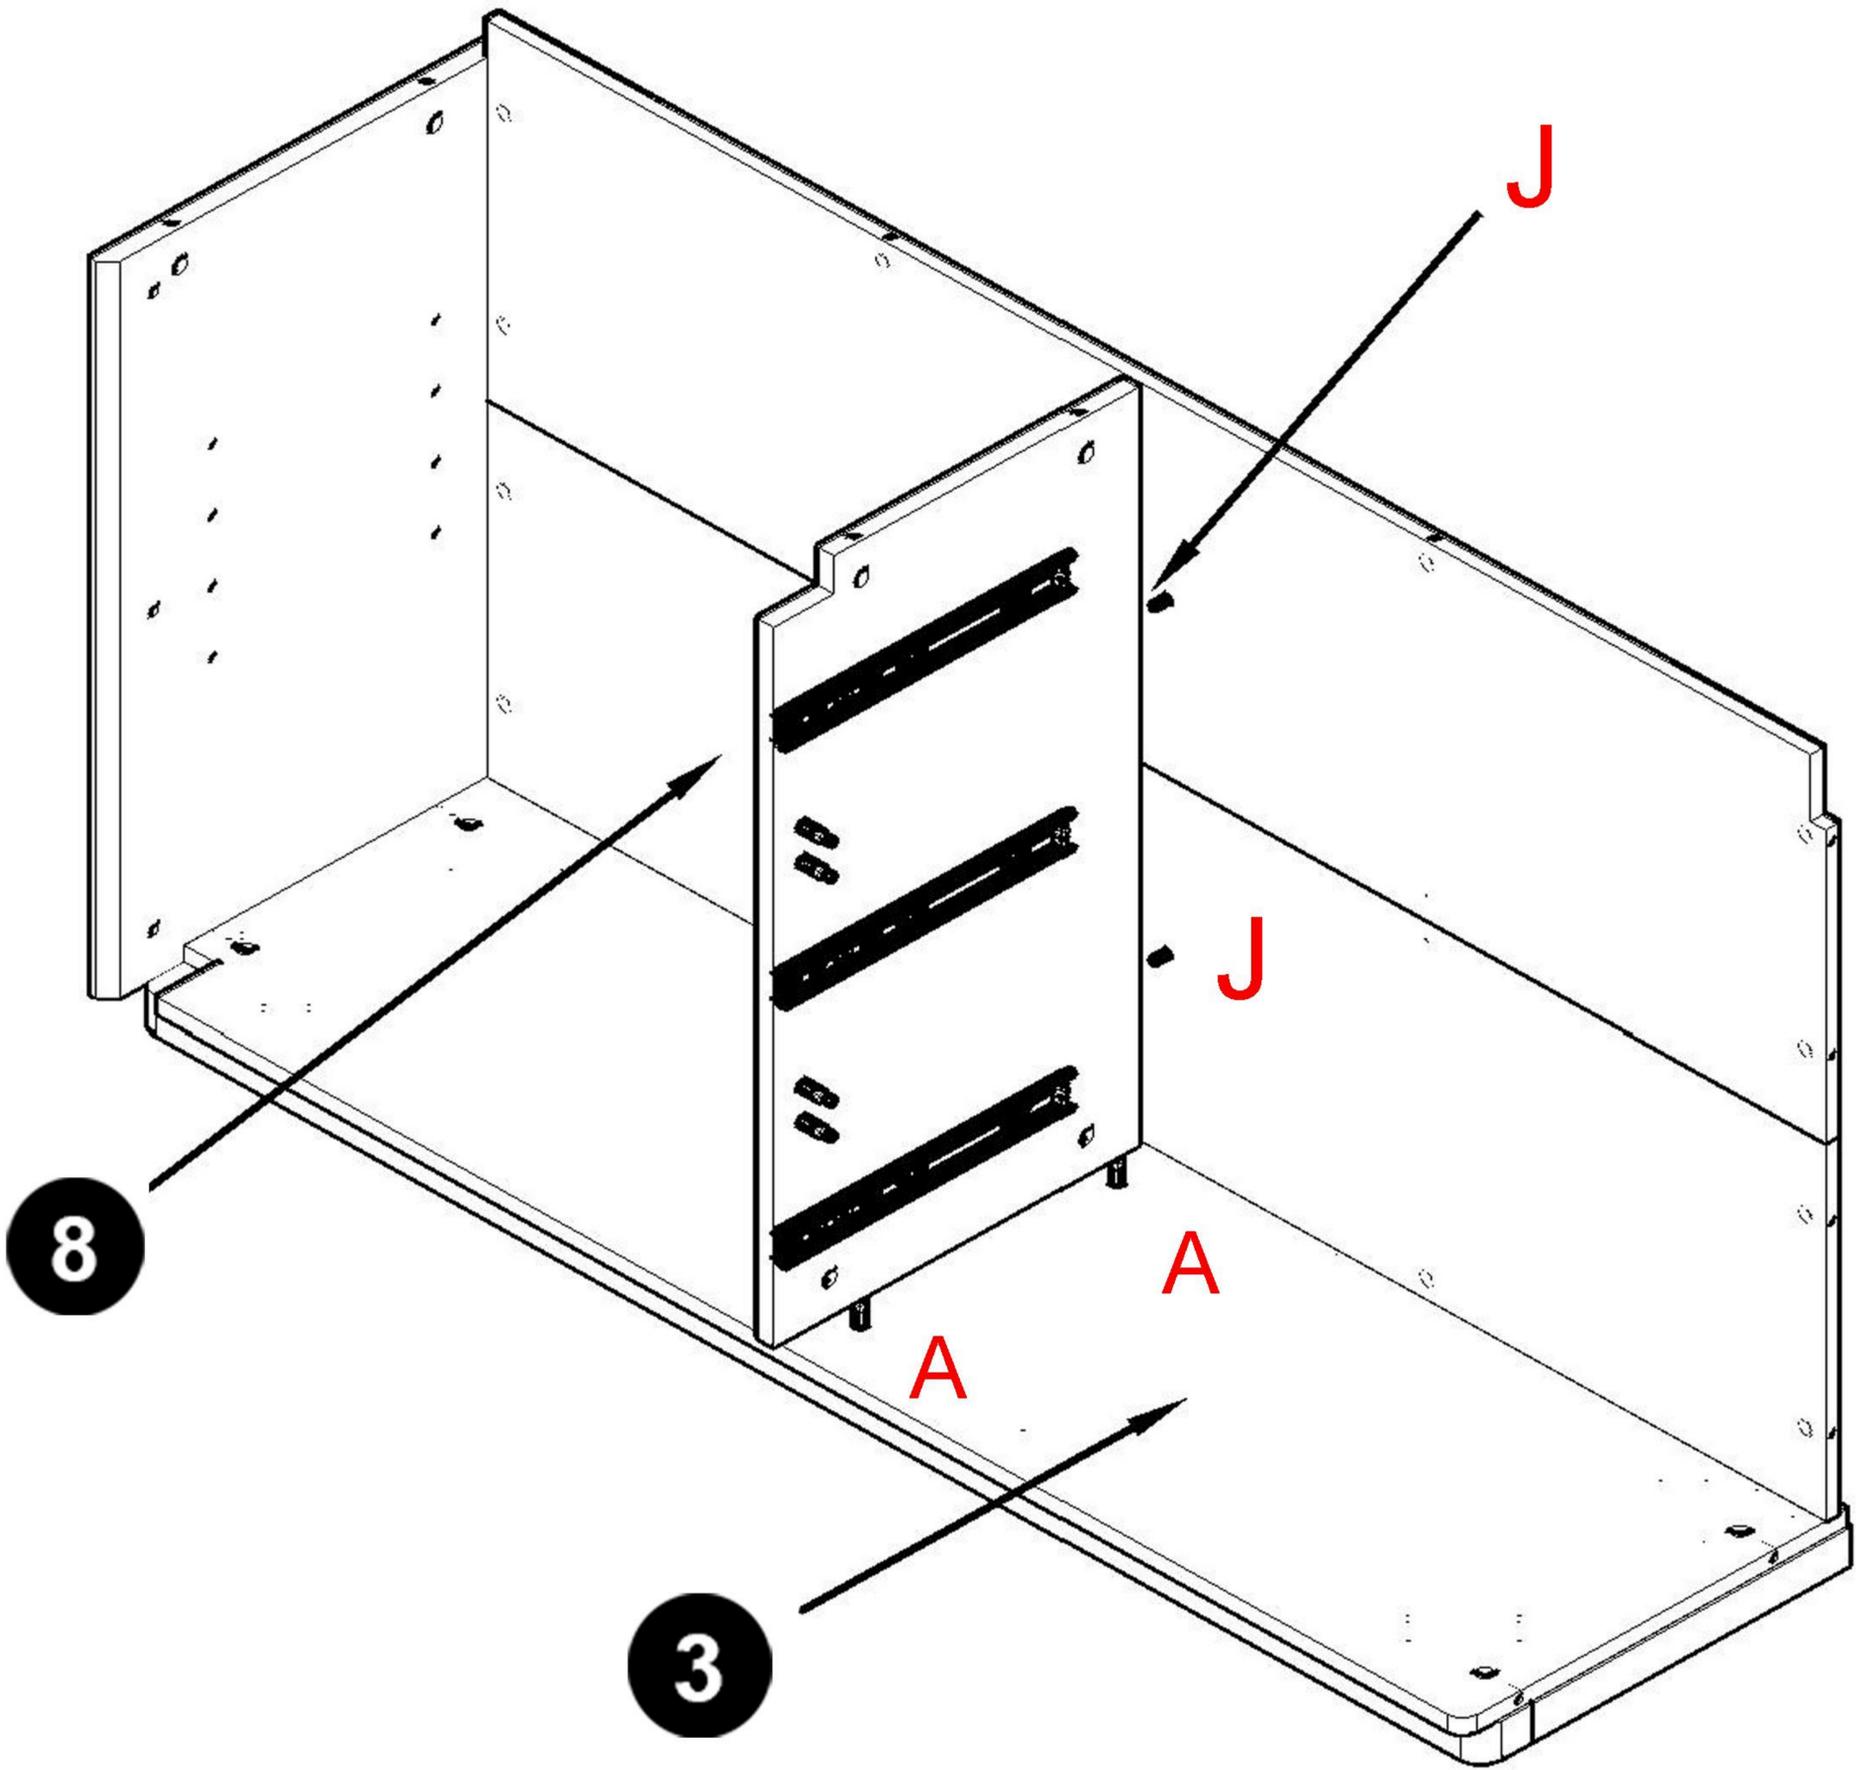

8

3


A

A


J

J

Step 9:

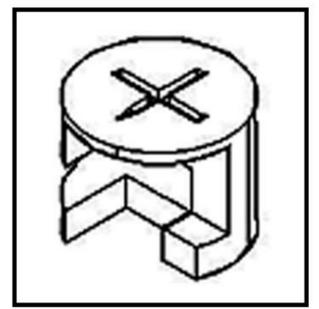


A

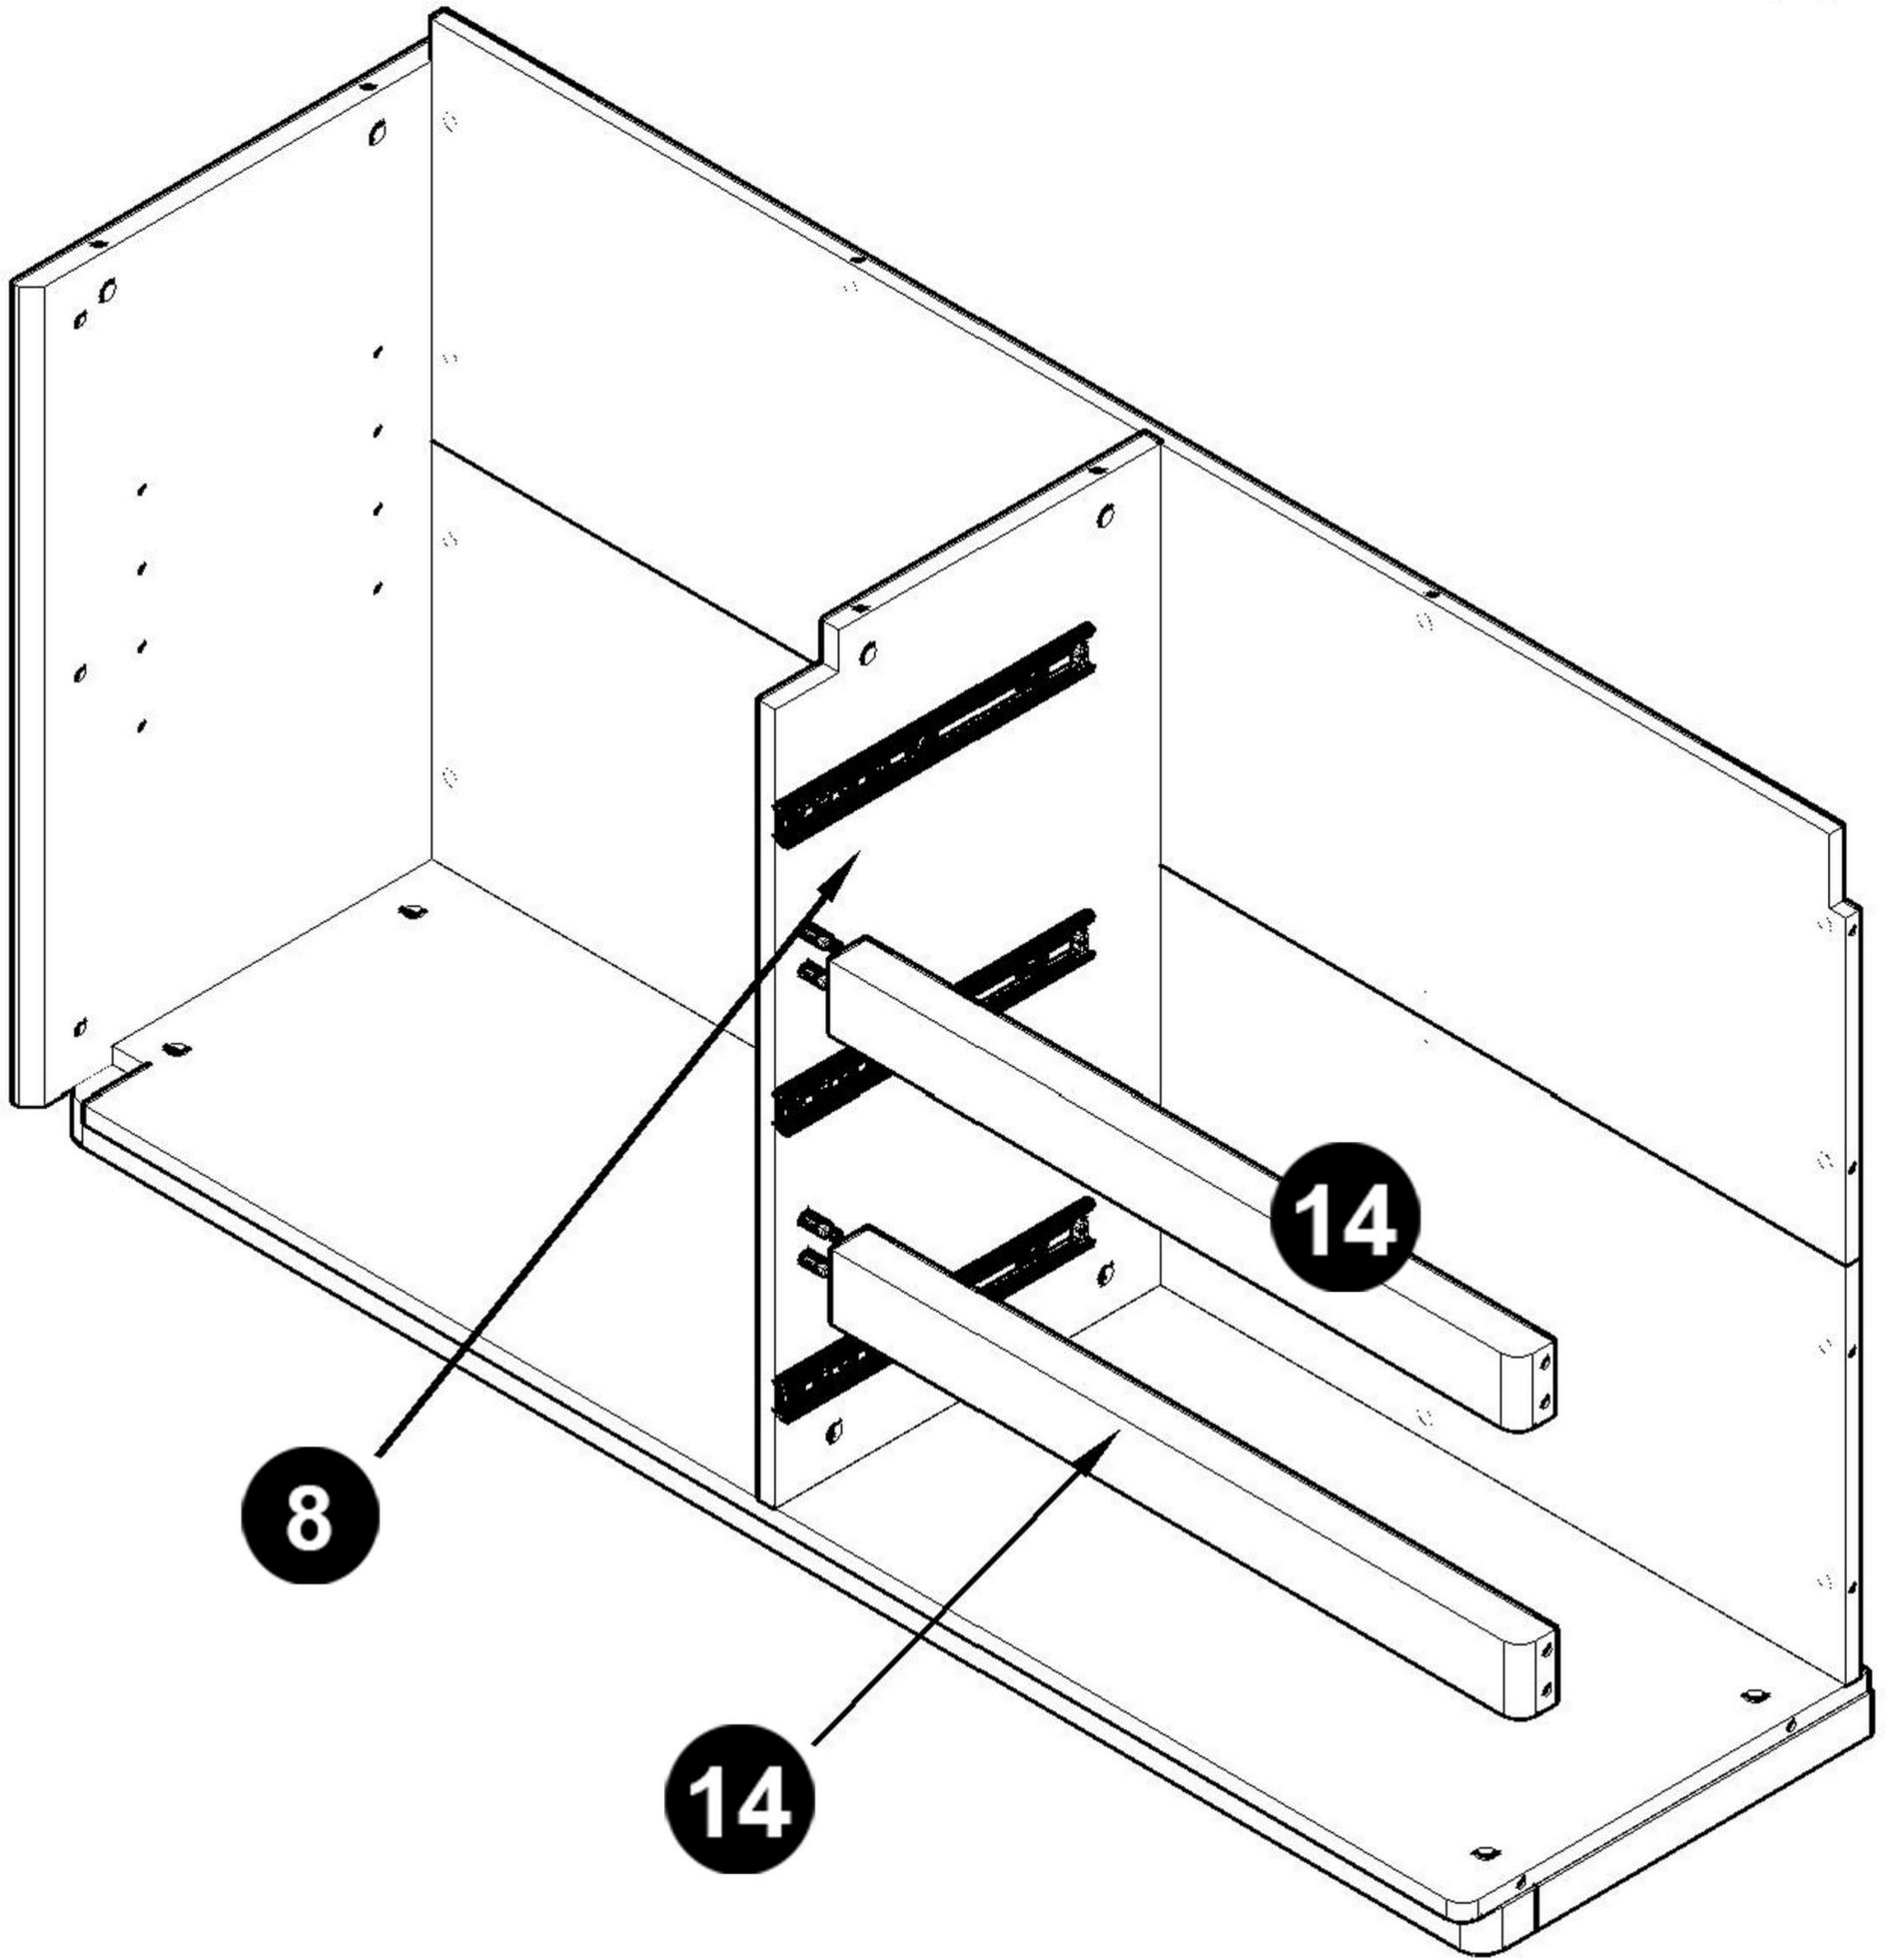


Use A to secure pre-drilled holes on the Panel 14

Step 10:

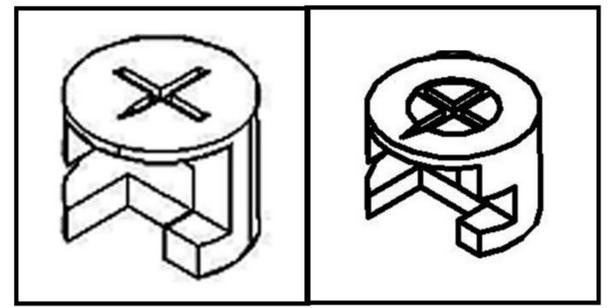


A

D

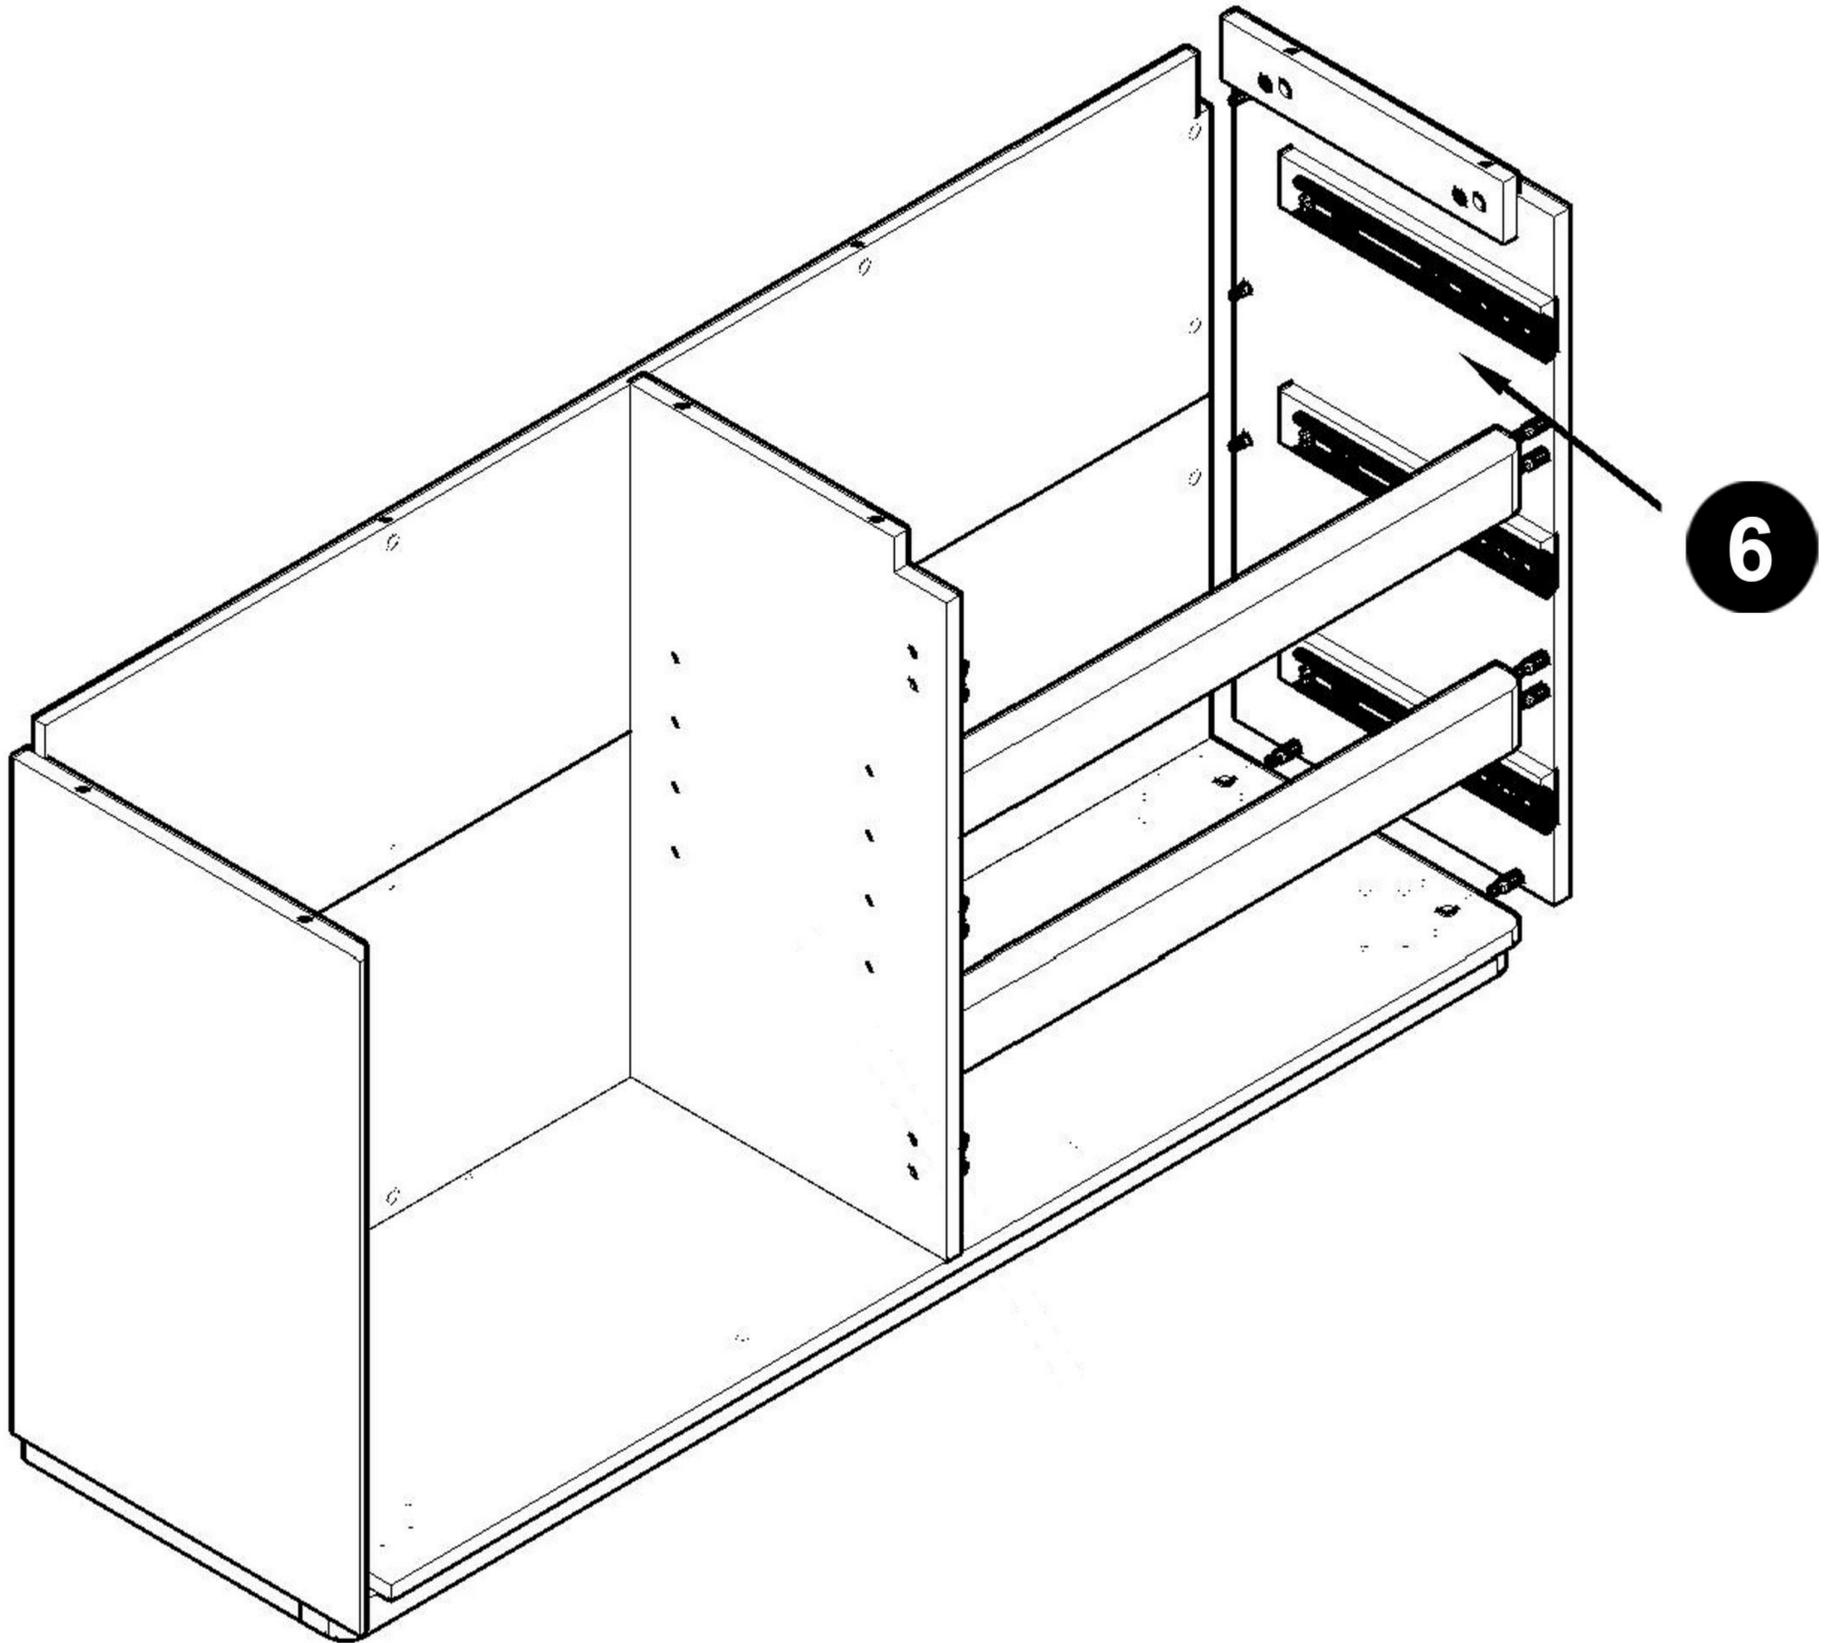

Use A and D to secure pre-drilled holes


Step 11:

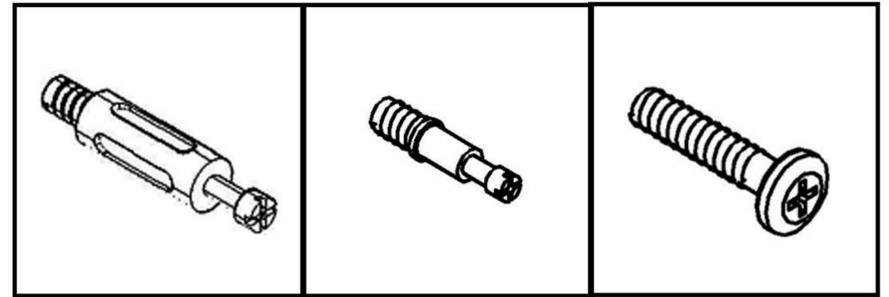


B

E

O

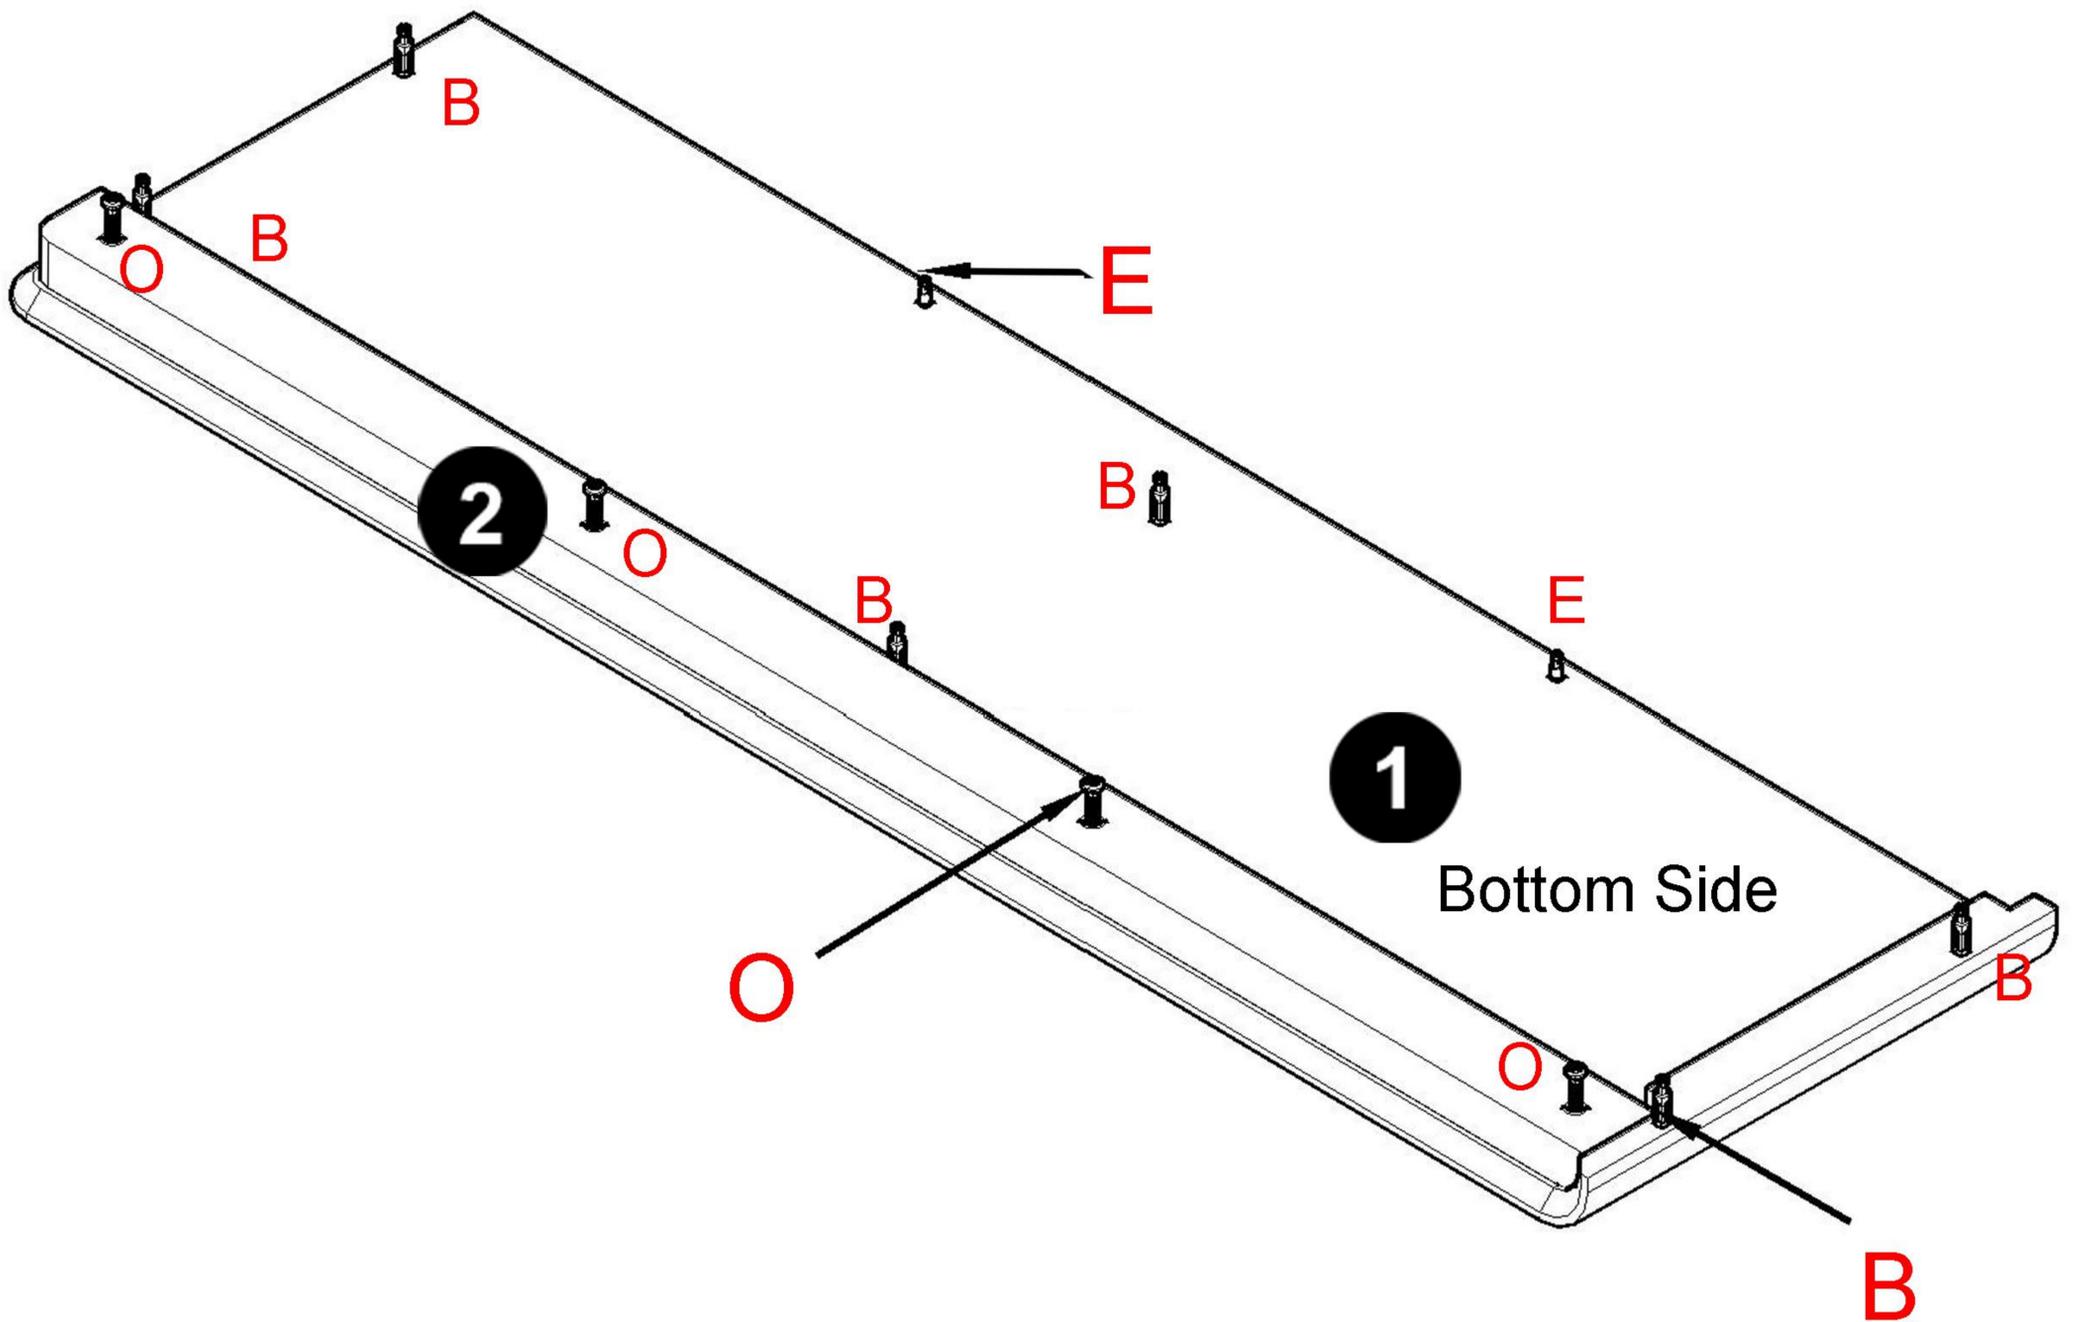


Step 12:

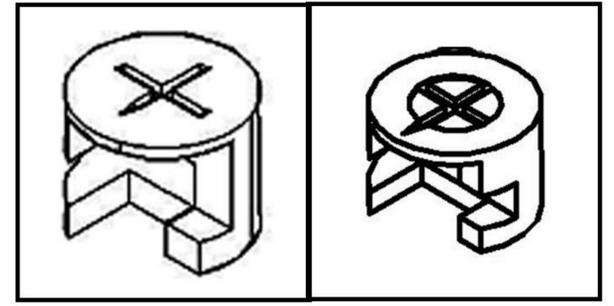

A

D

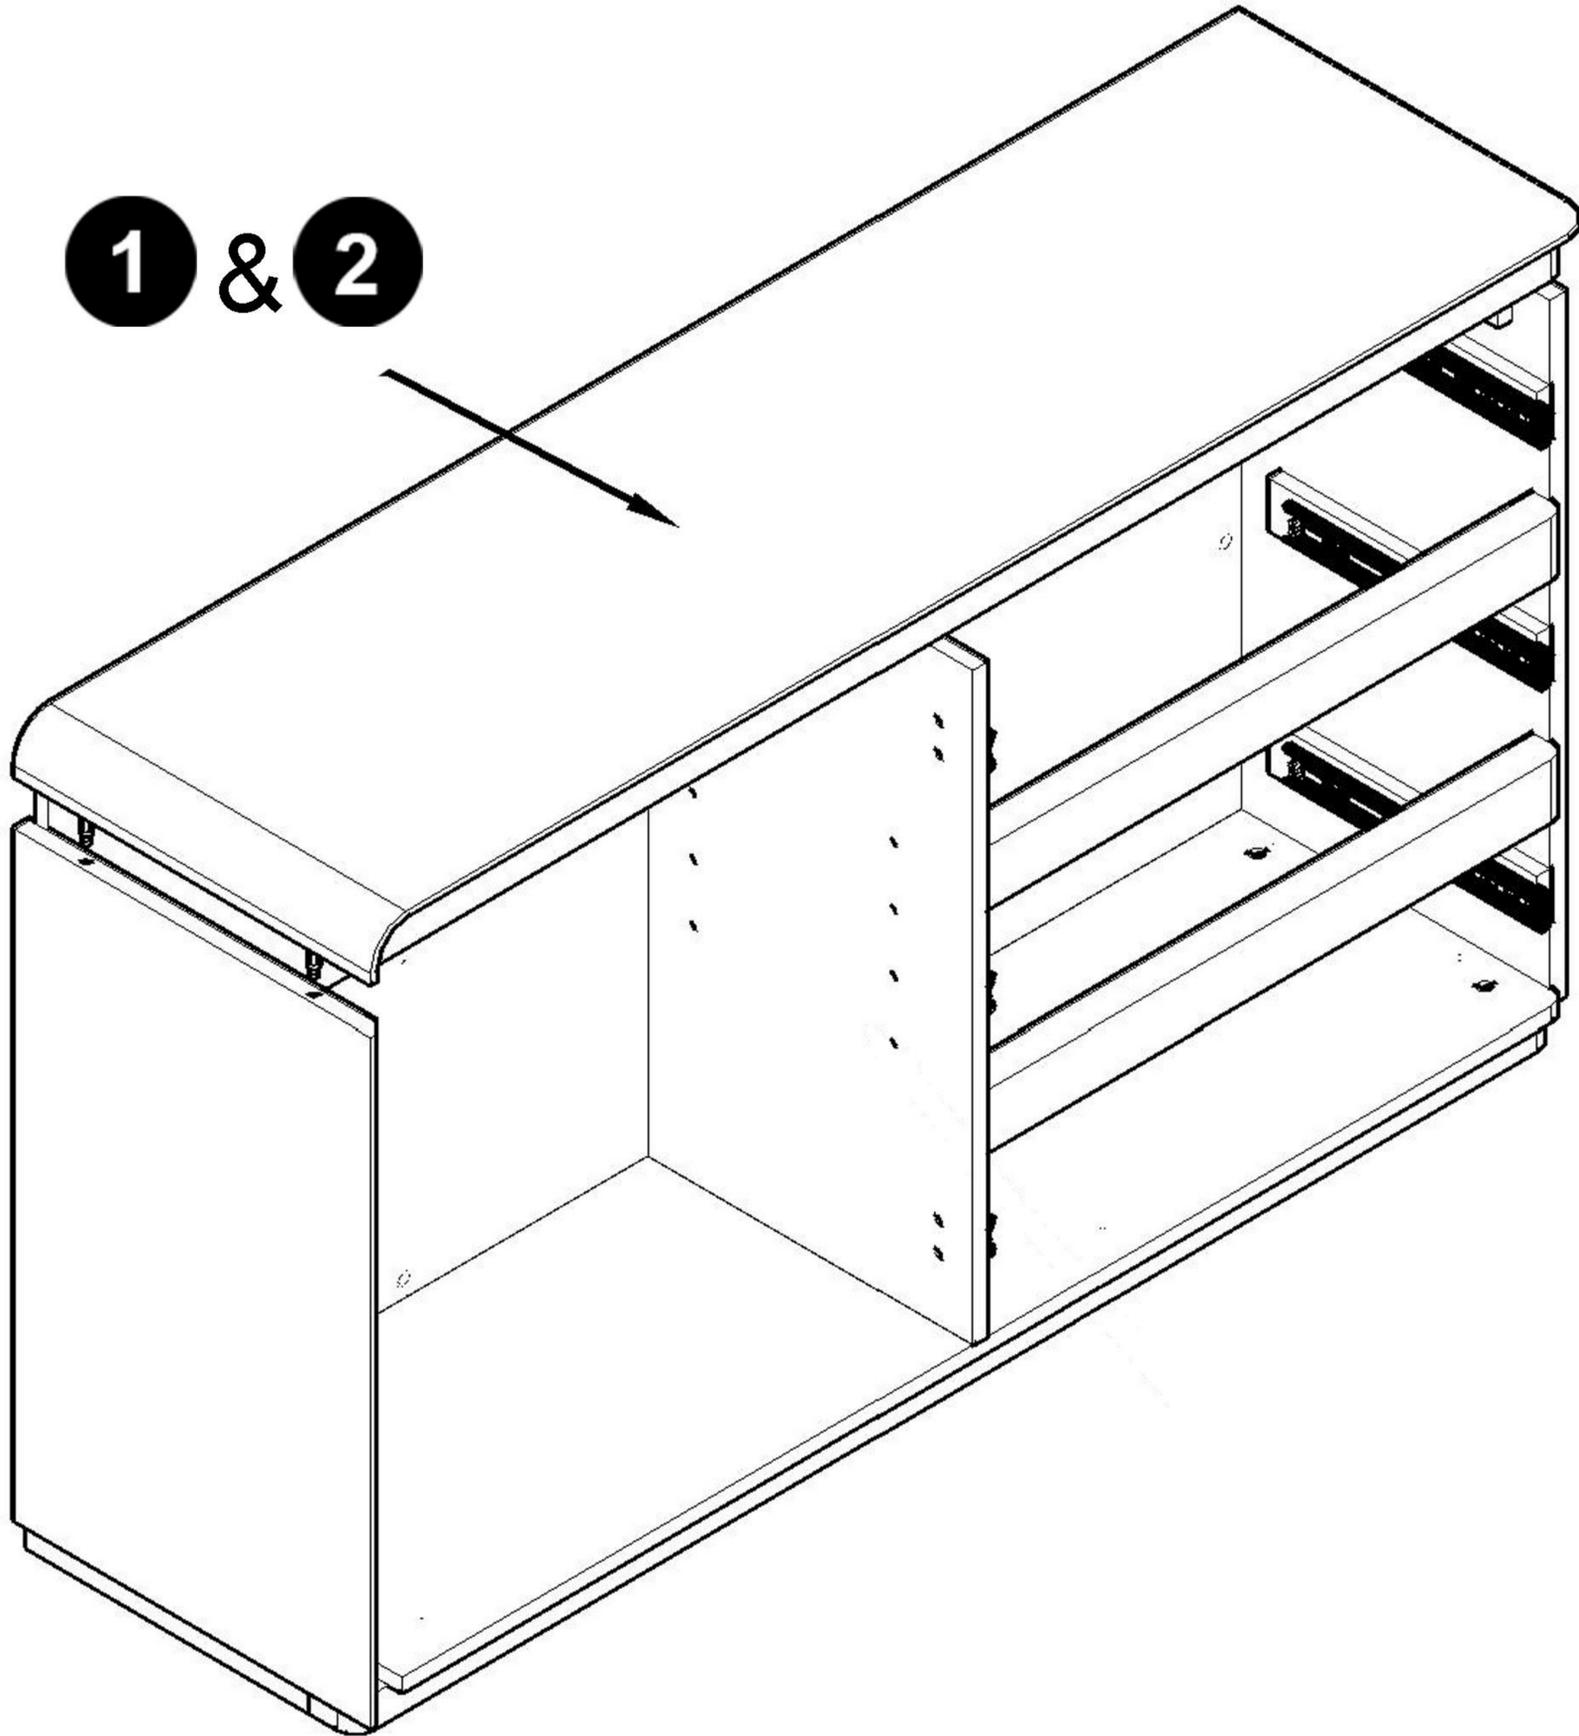


Use A and D to secure pre-drilled holes


Step 13:



0

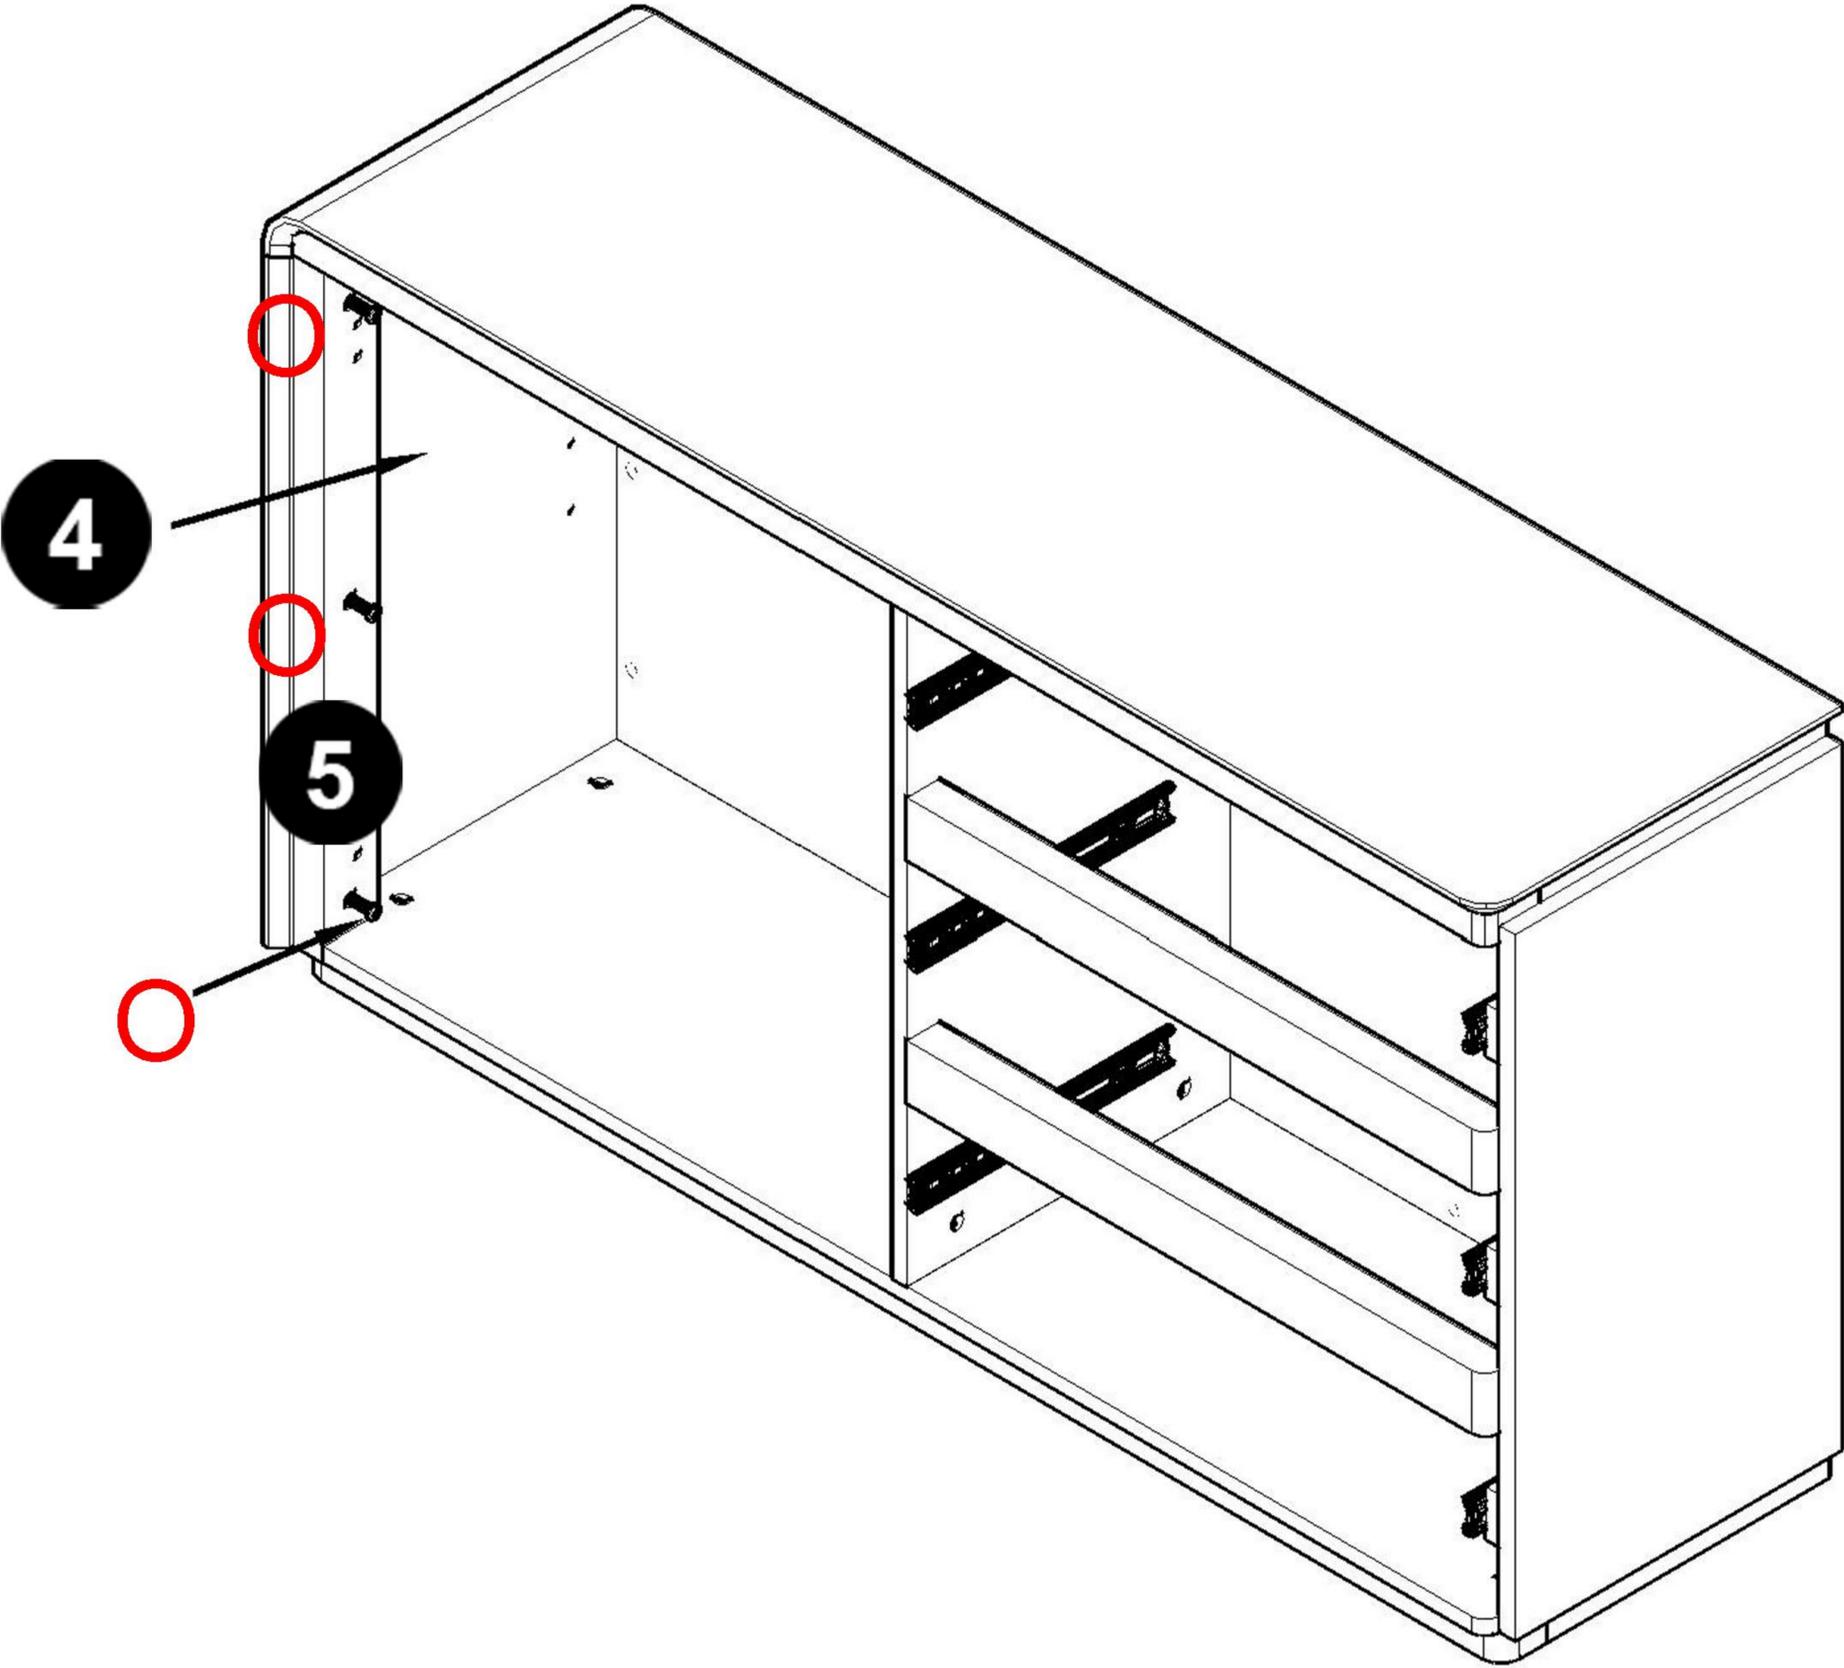


Step 14:

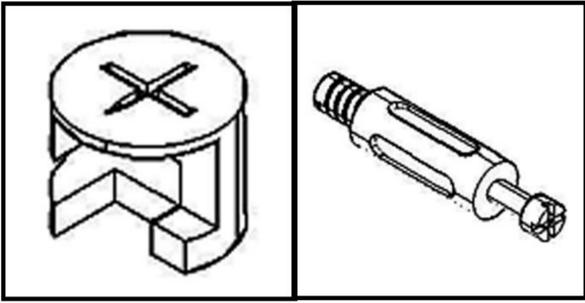


A


B

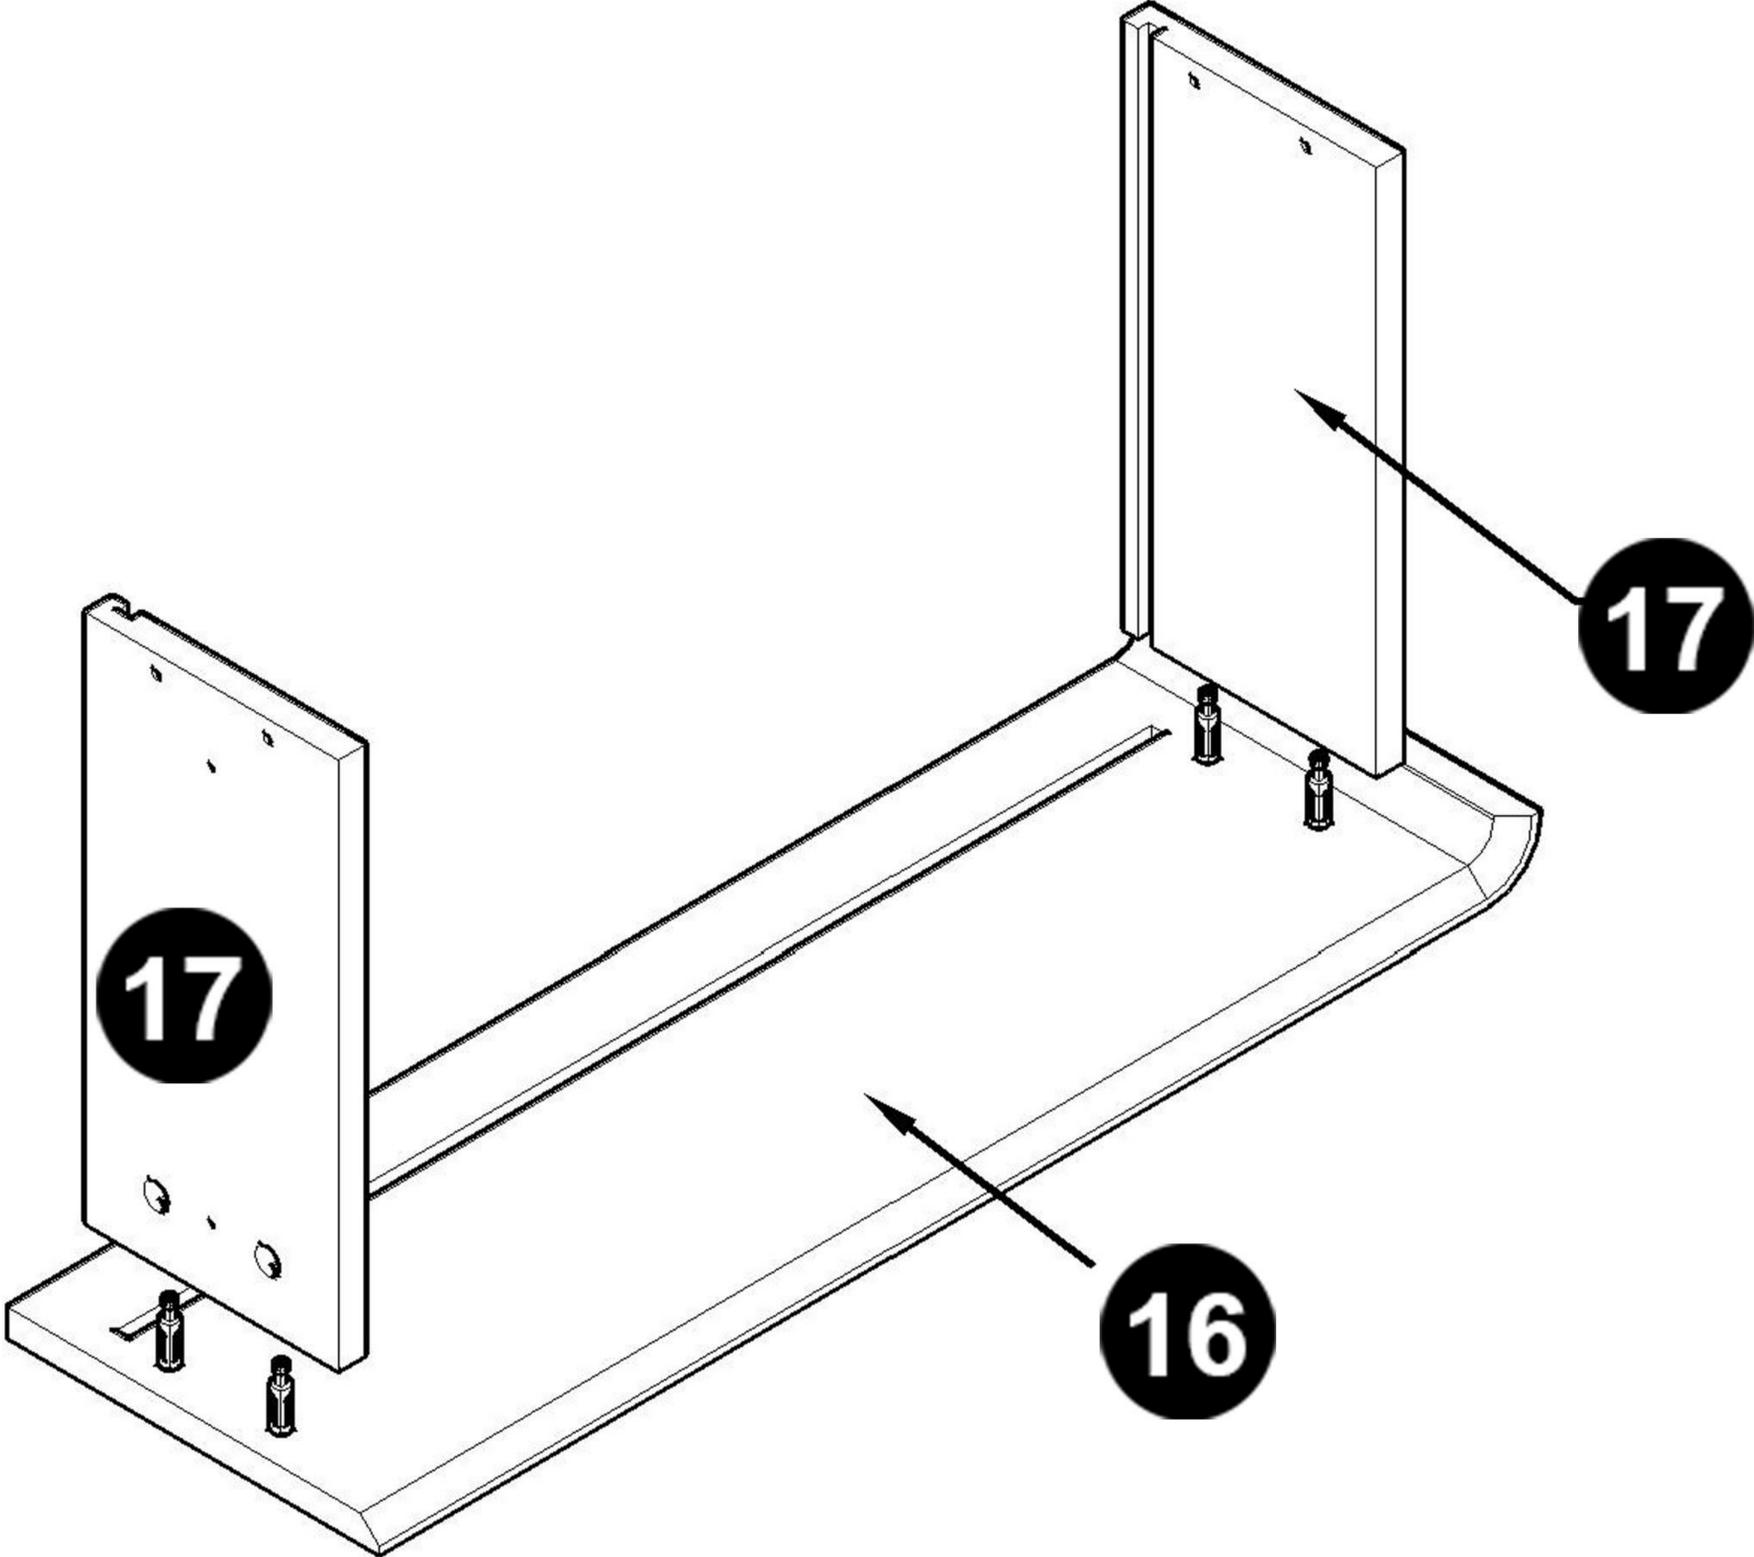

Step 15:

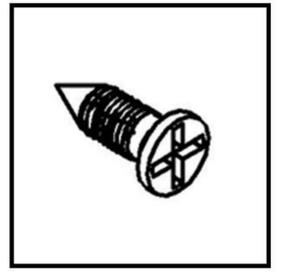


F

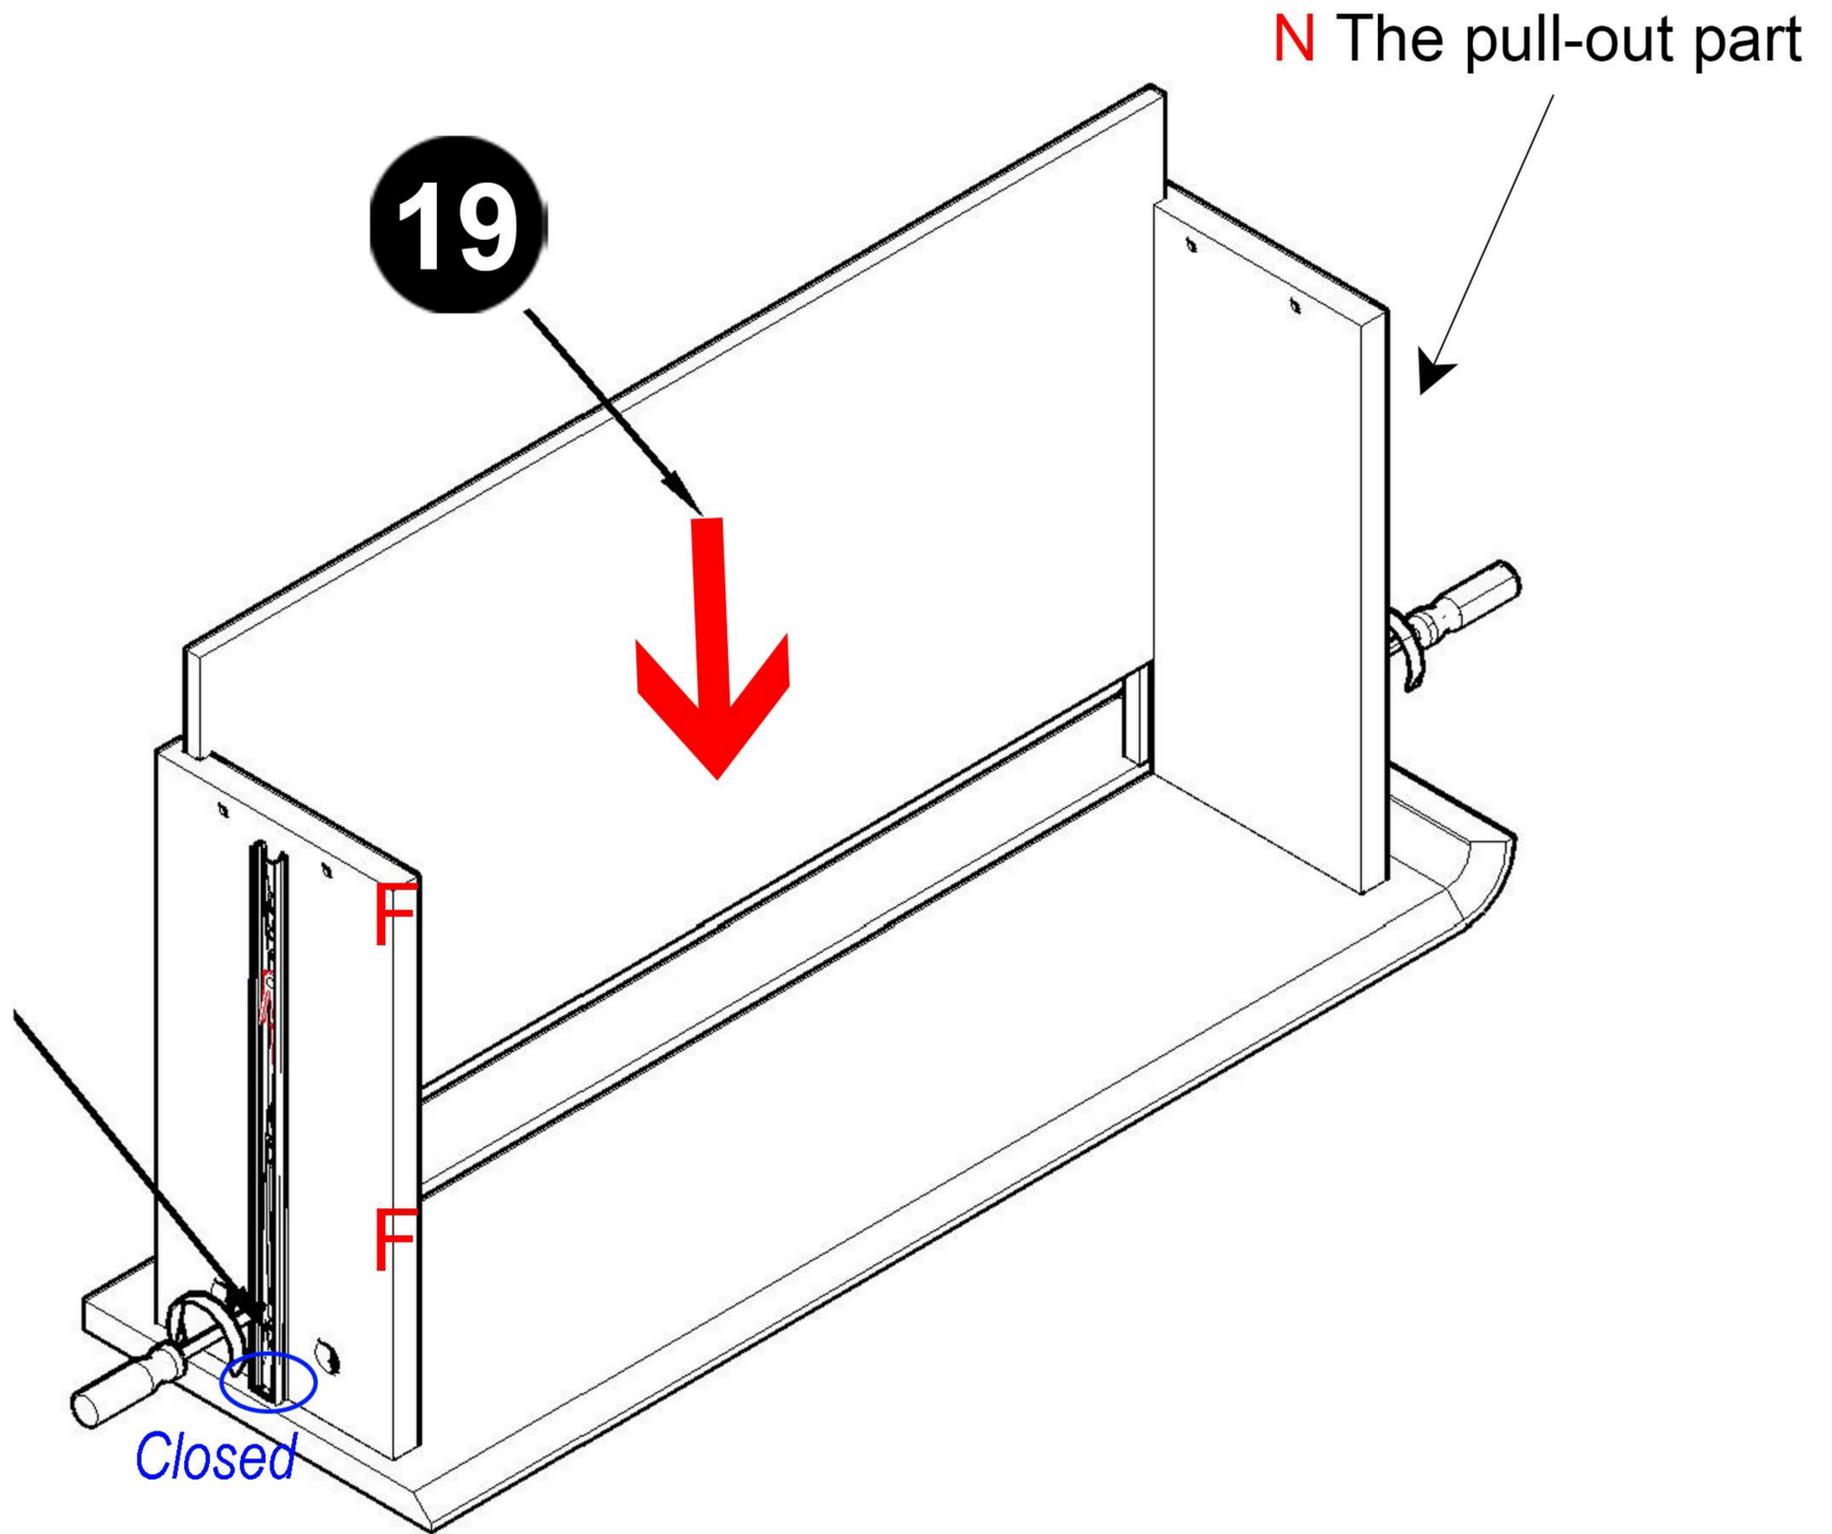


N The pull-out part


Step 16:

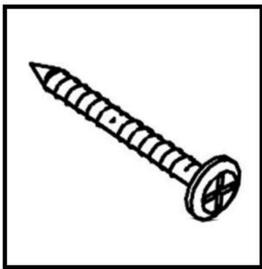

H


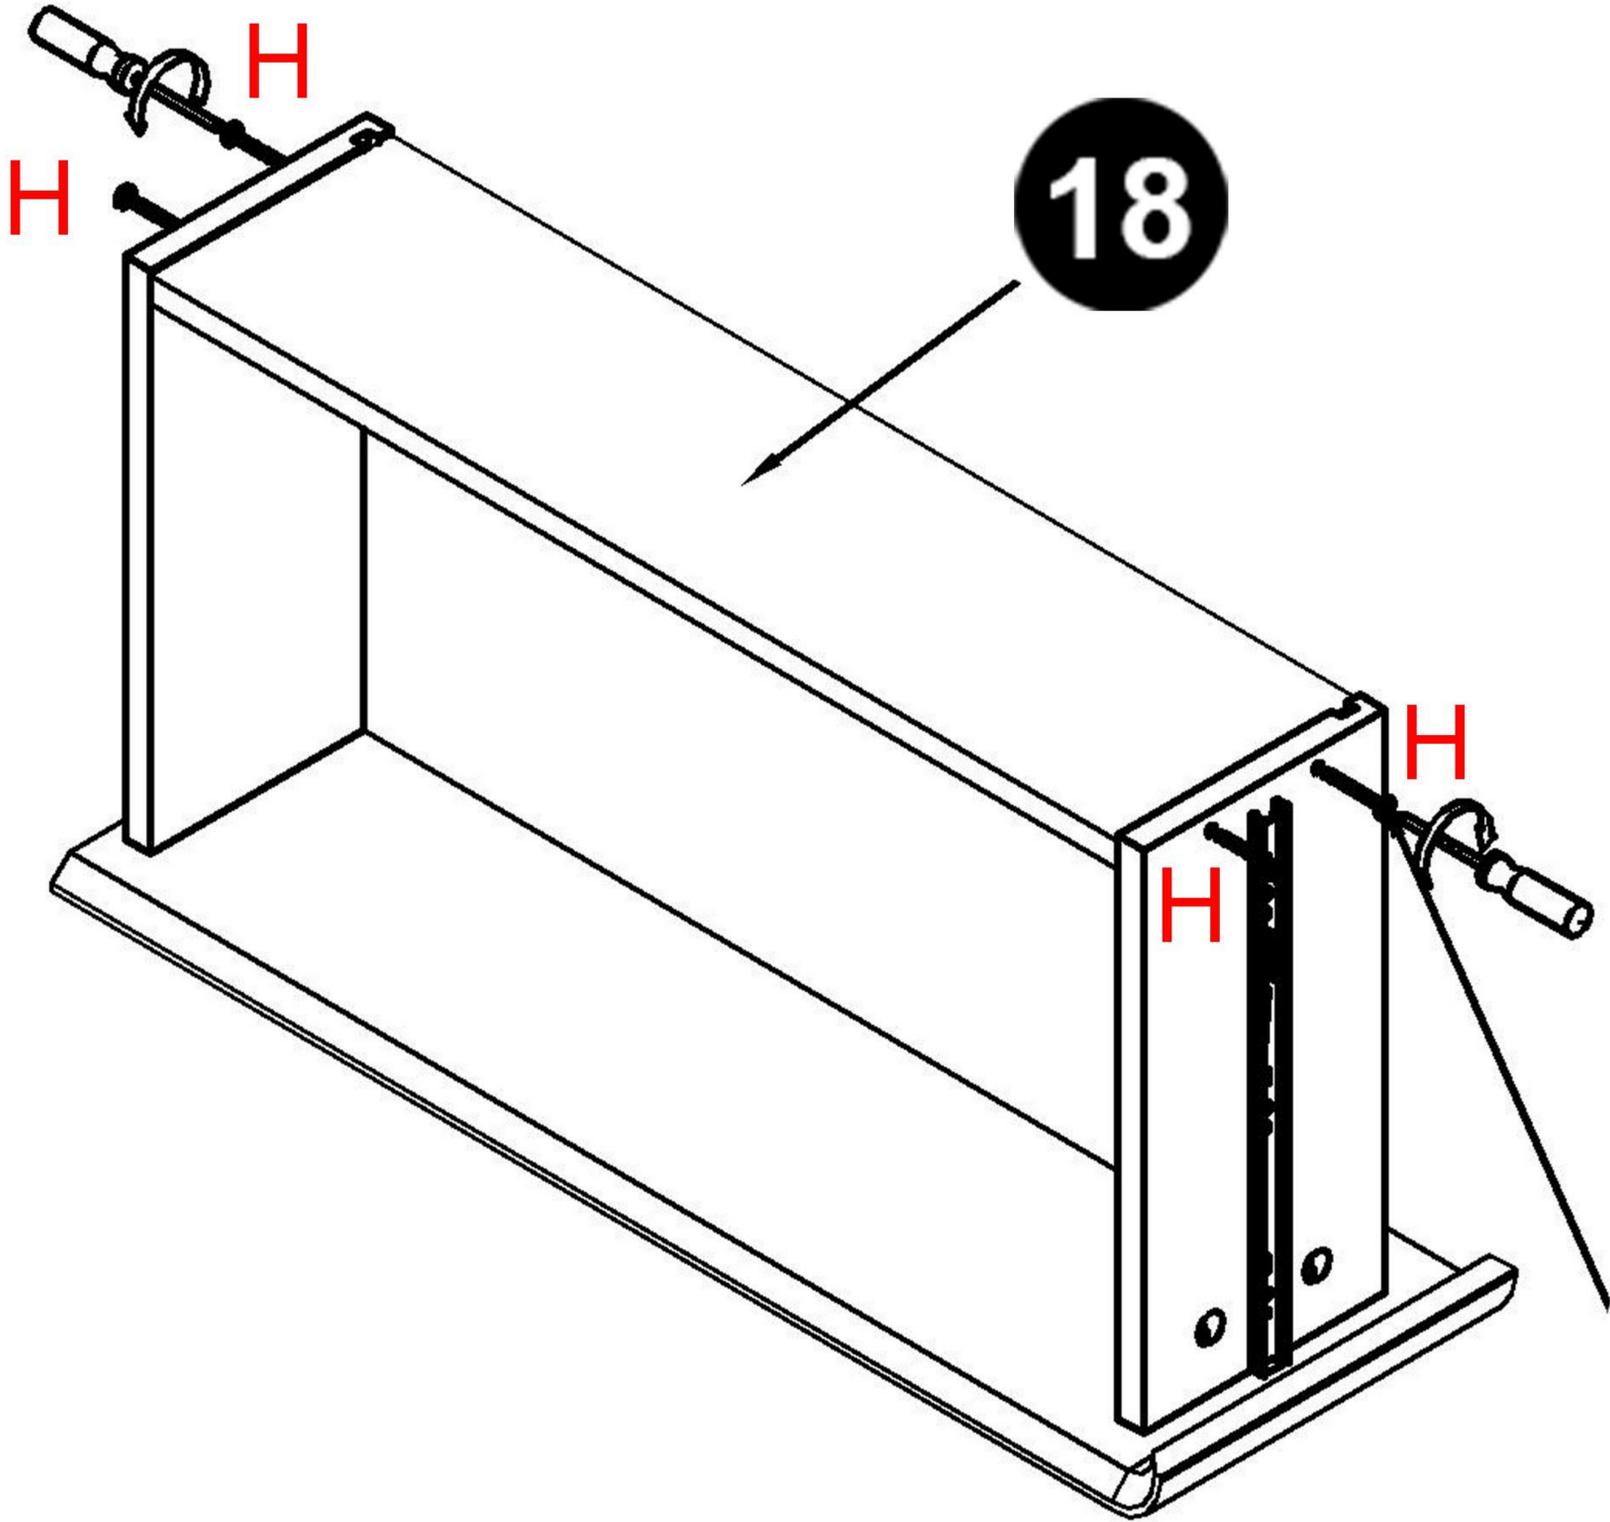


Step 17:

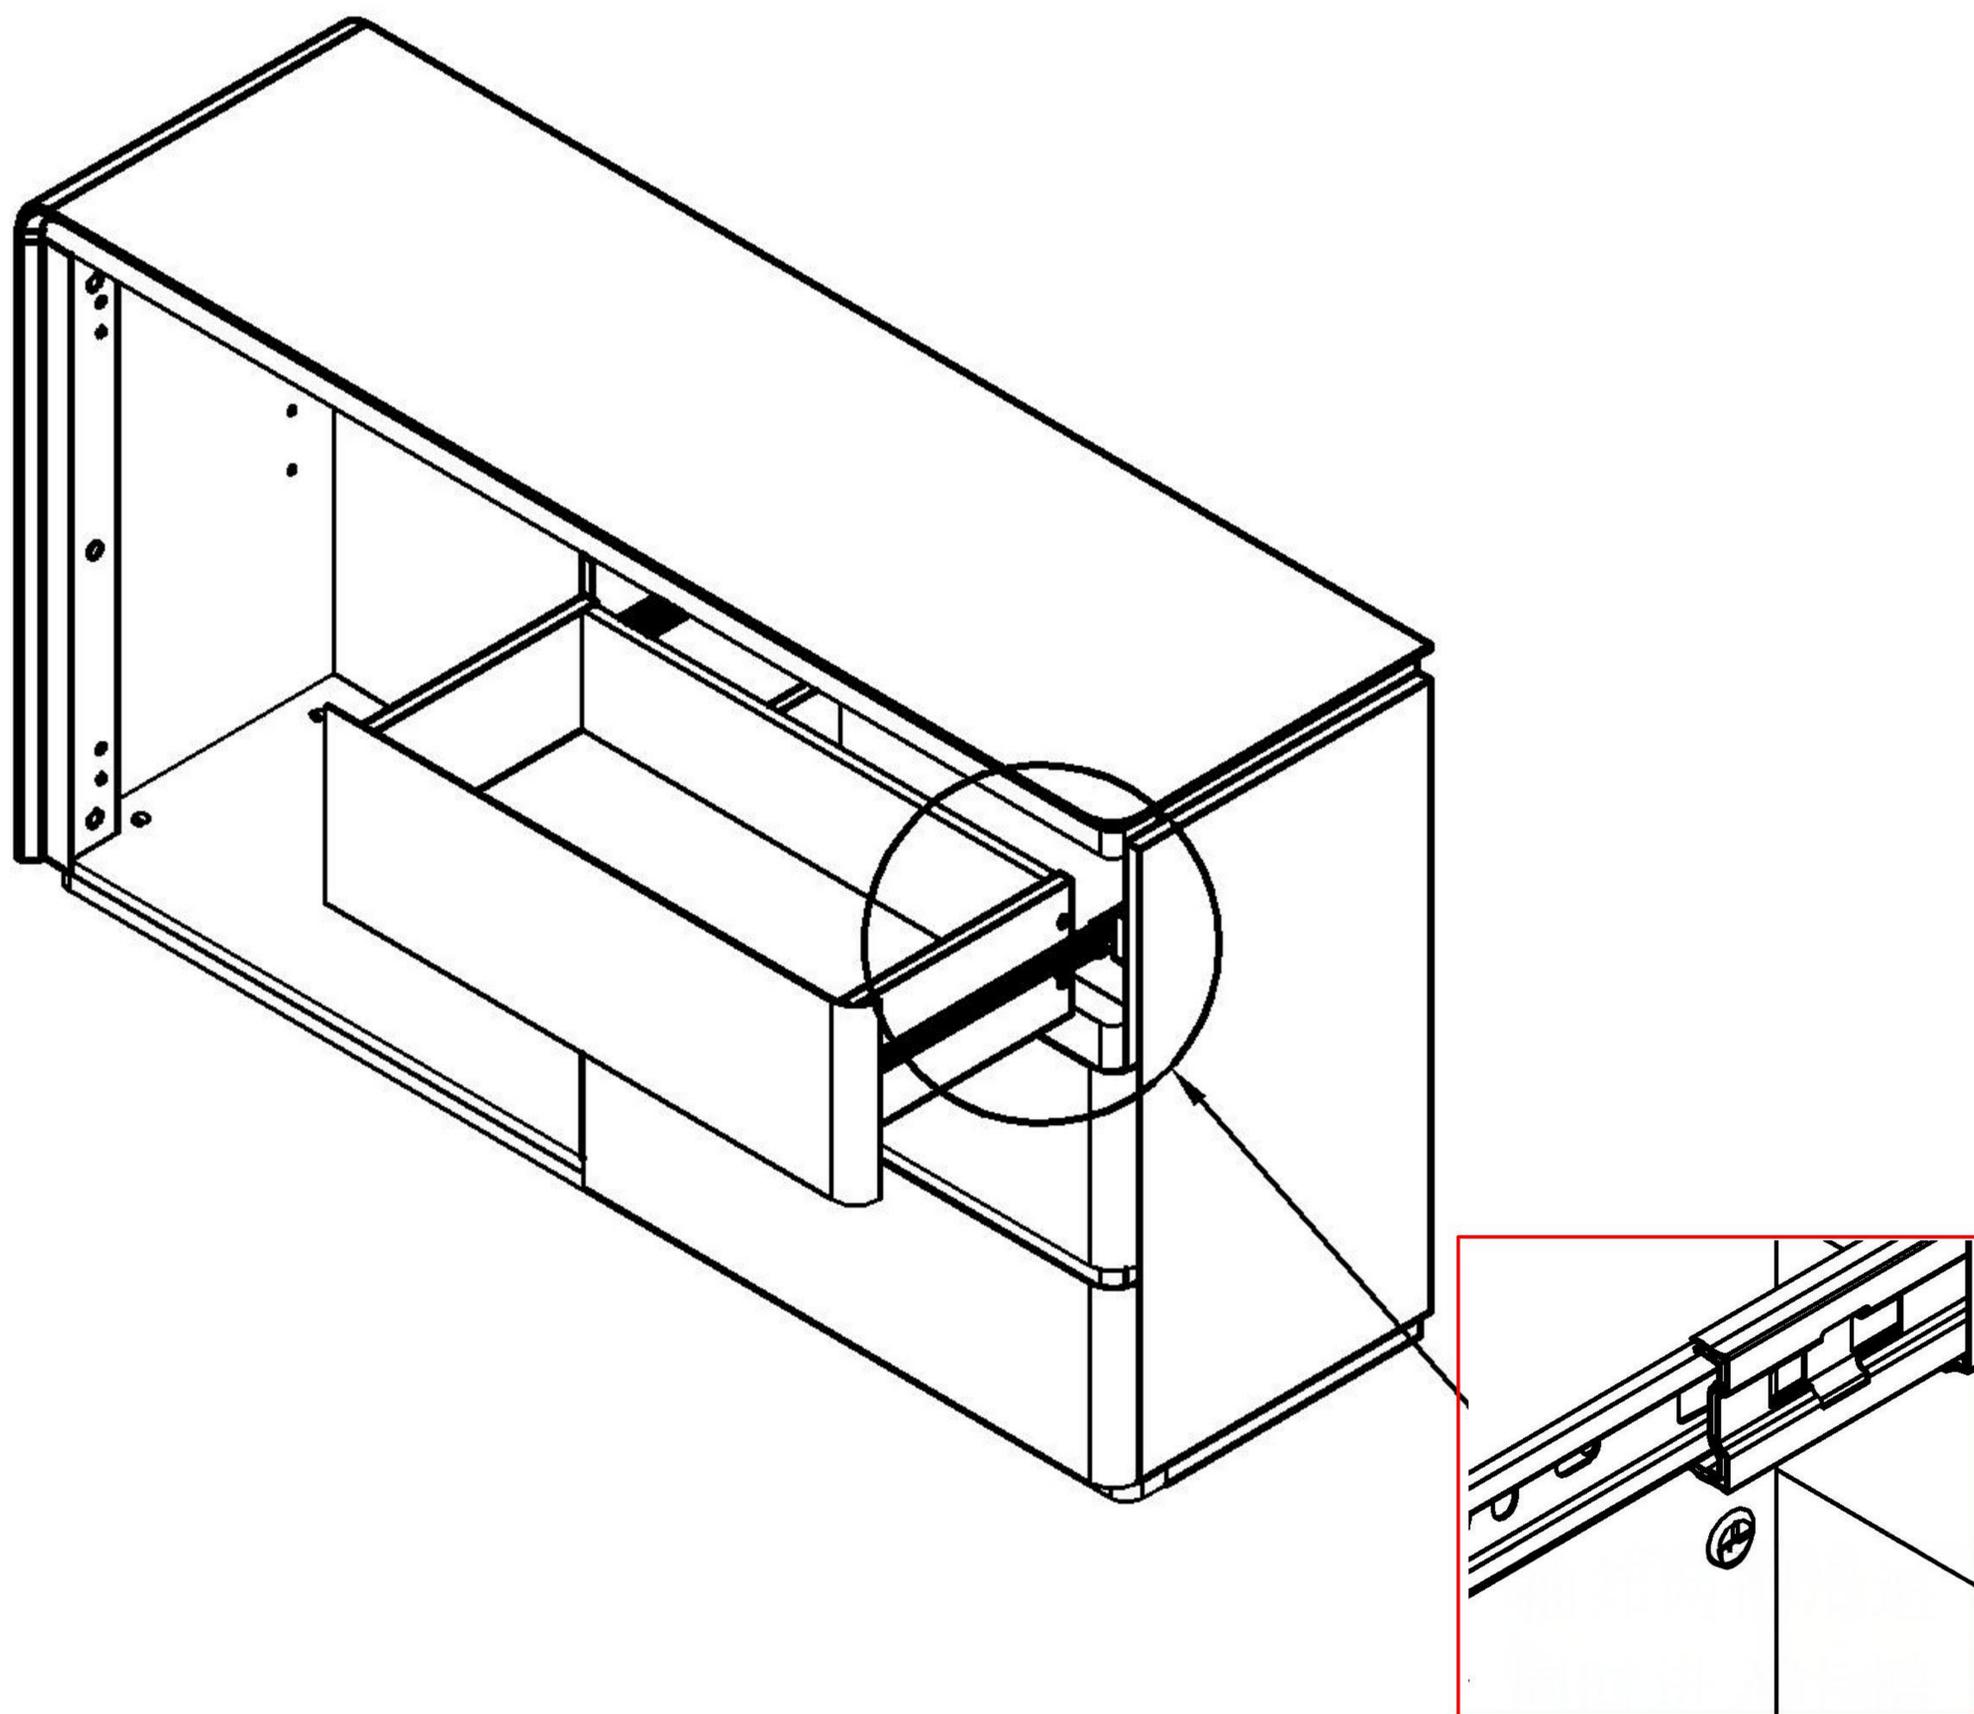


Insert into the slots on both sides at the same time.

Step 18:

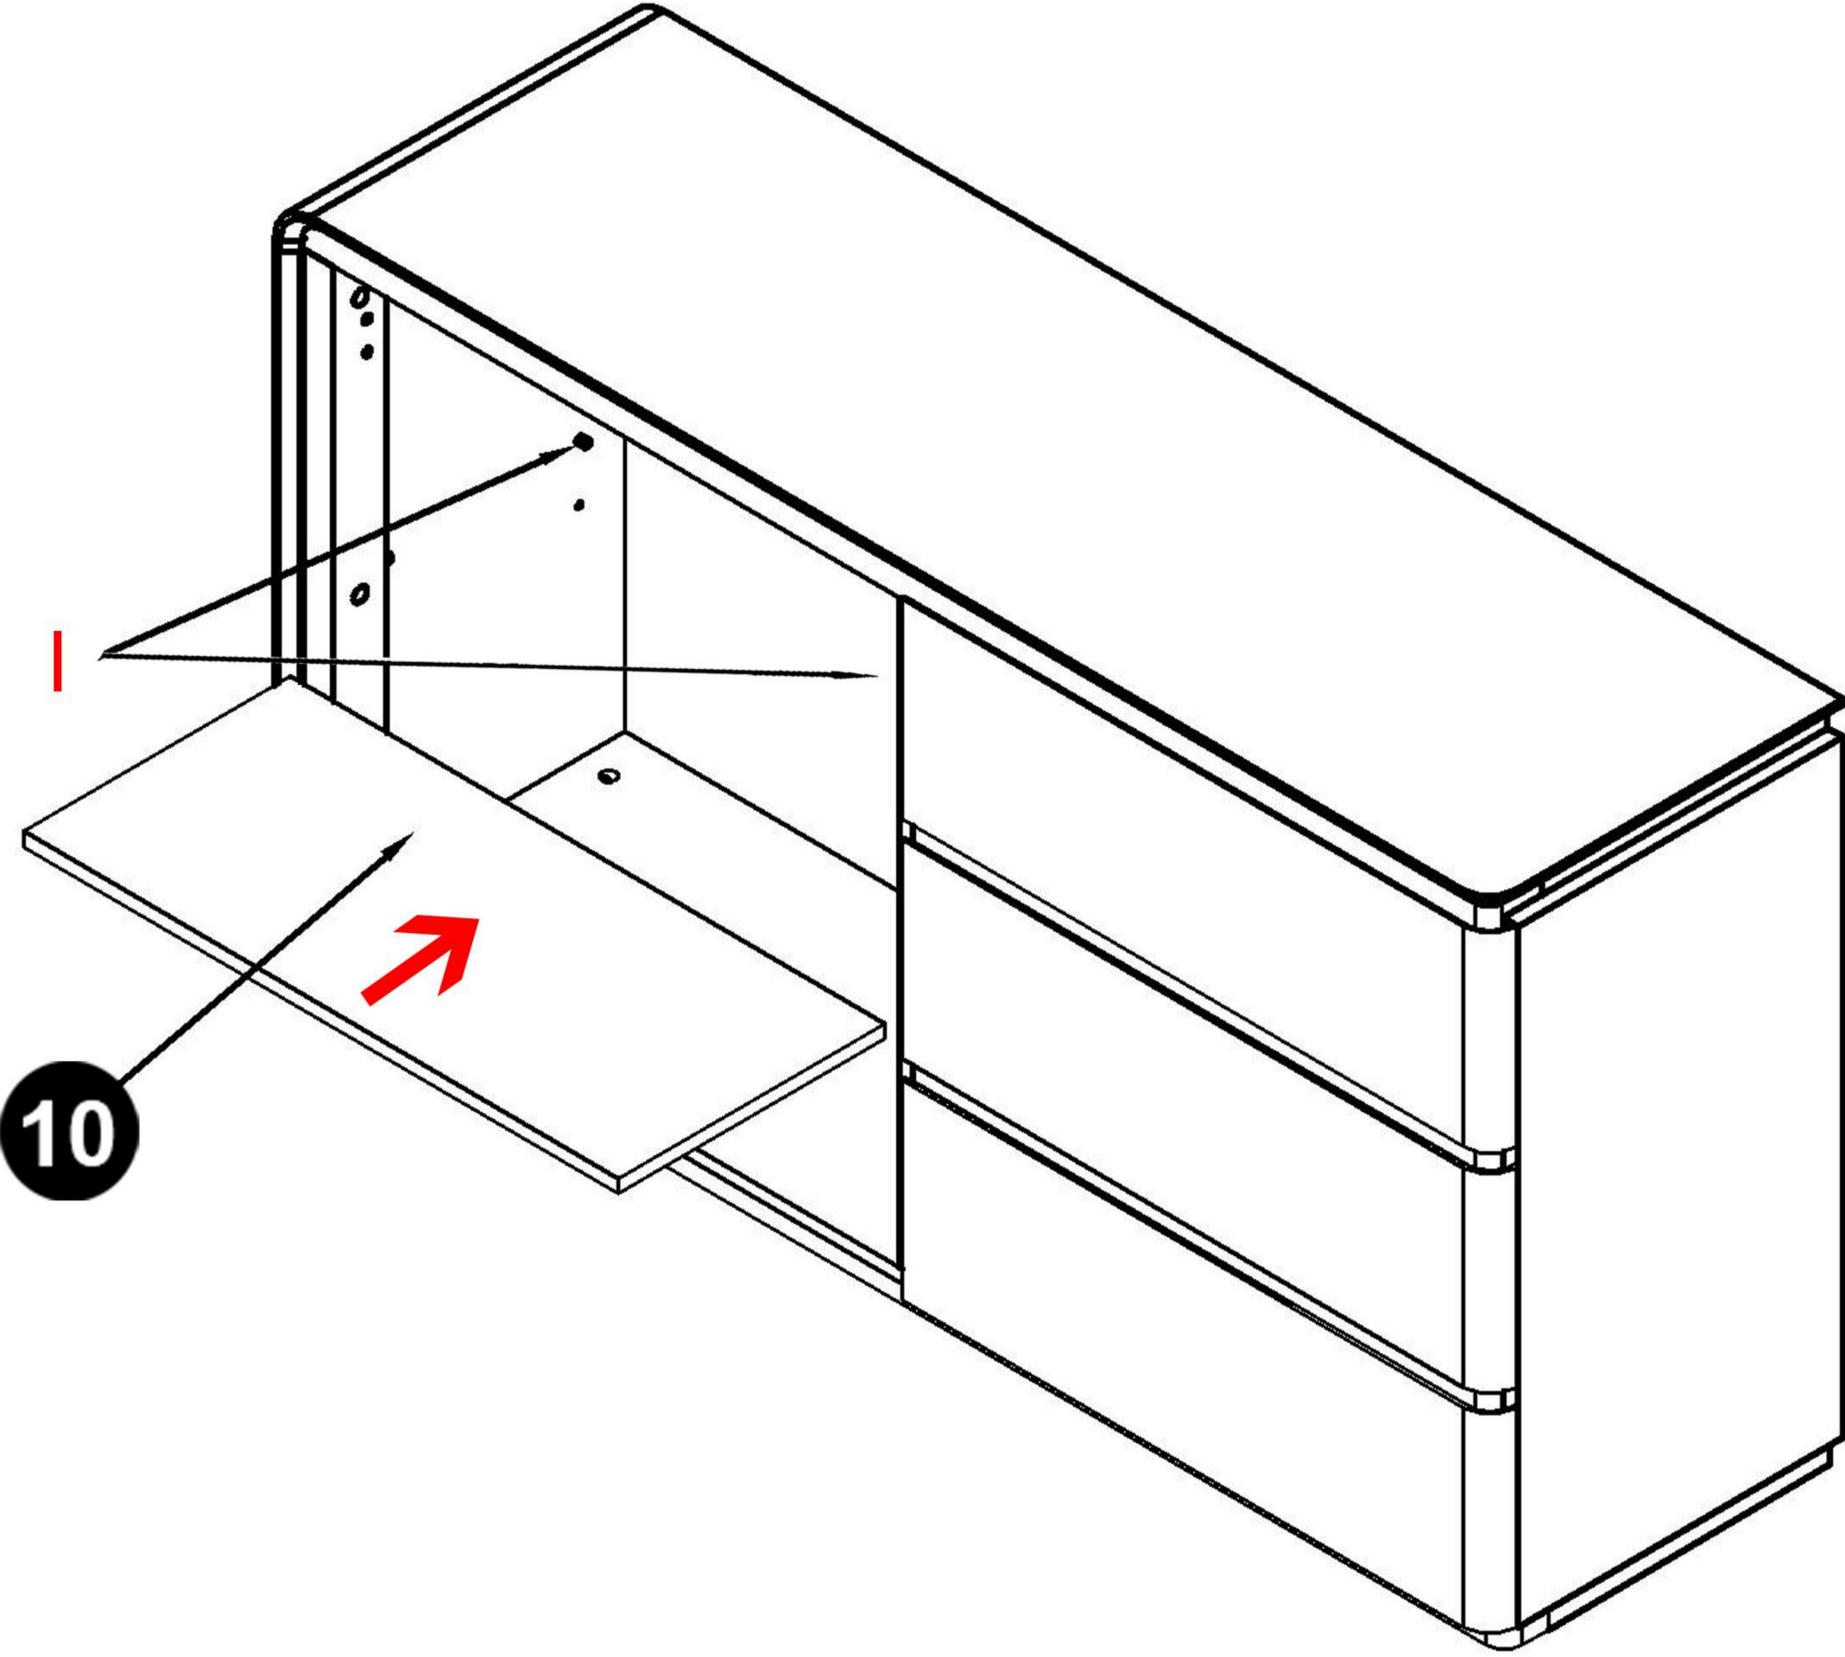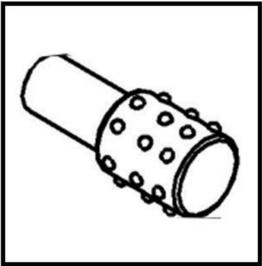


Step 19:

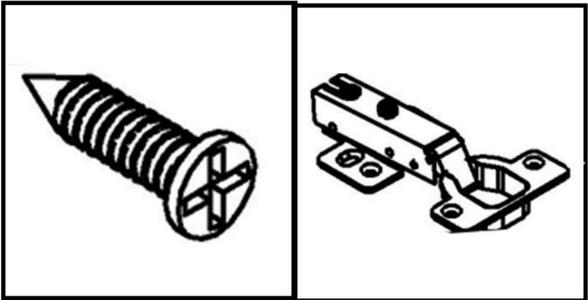


G


M

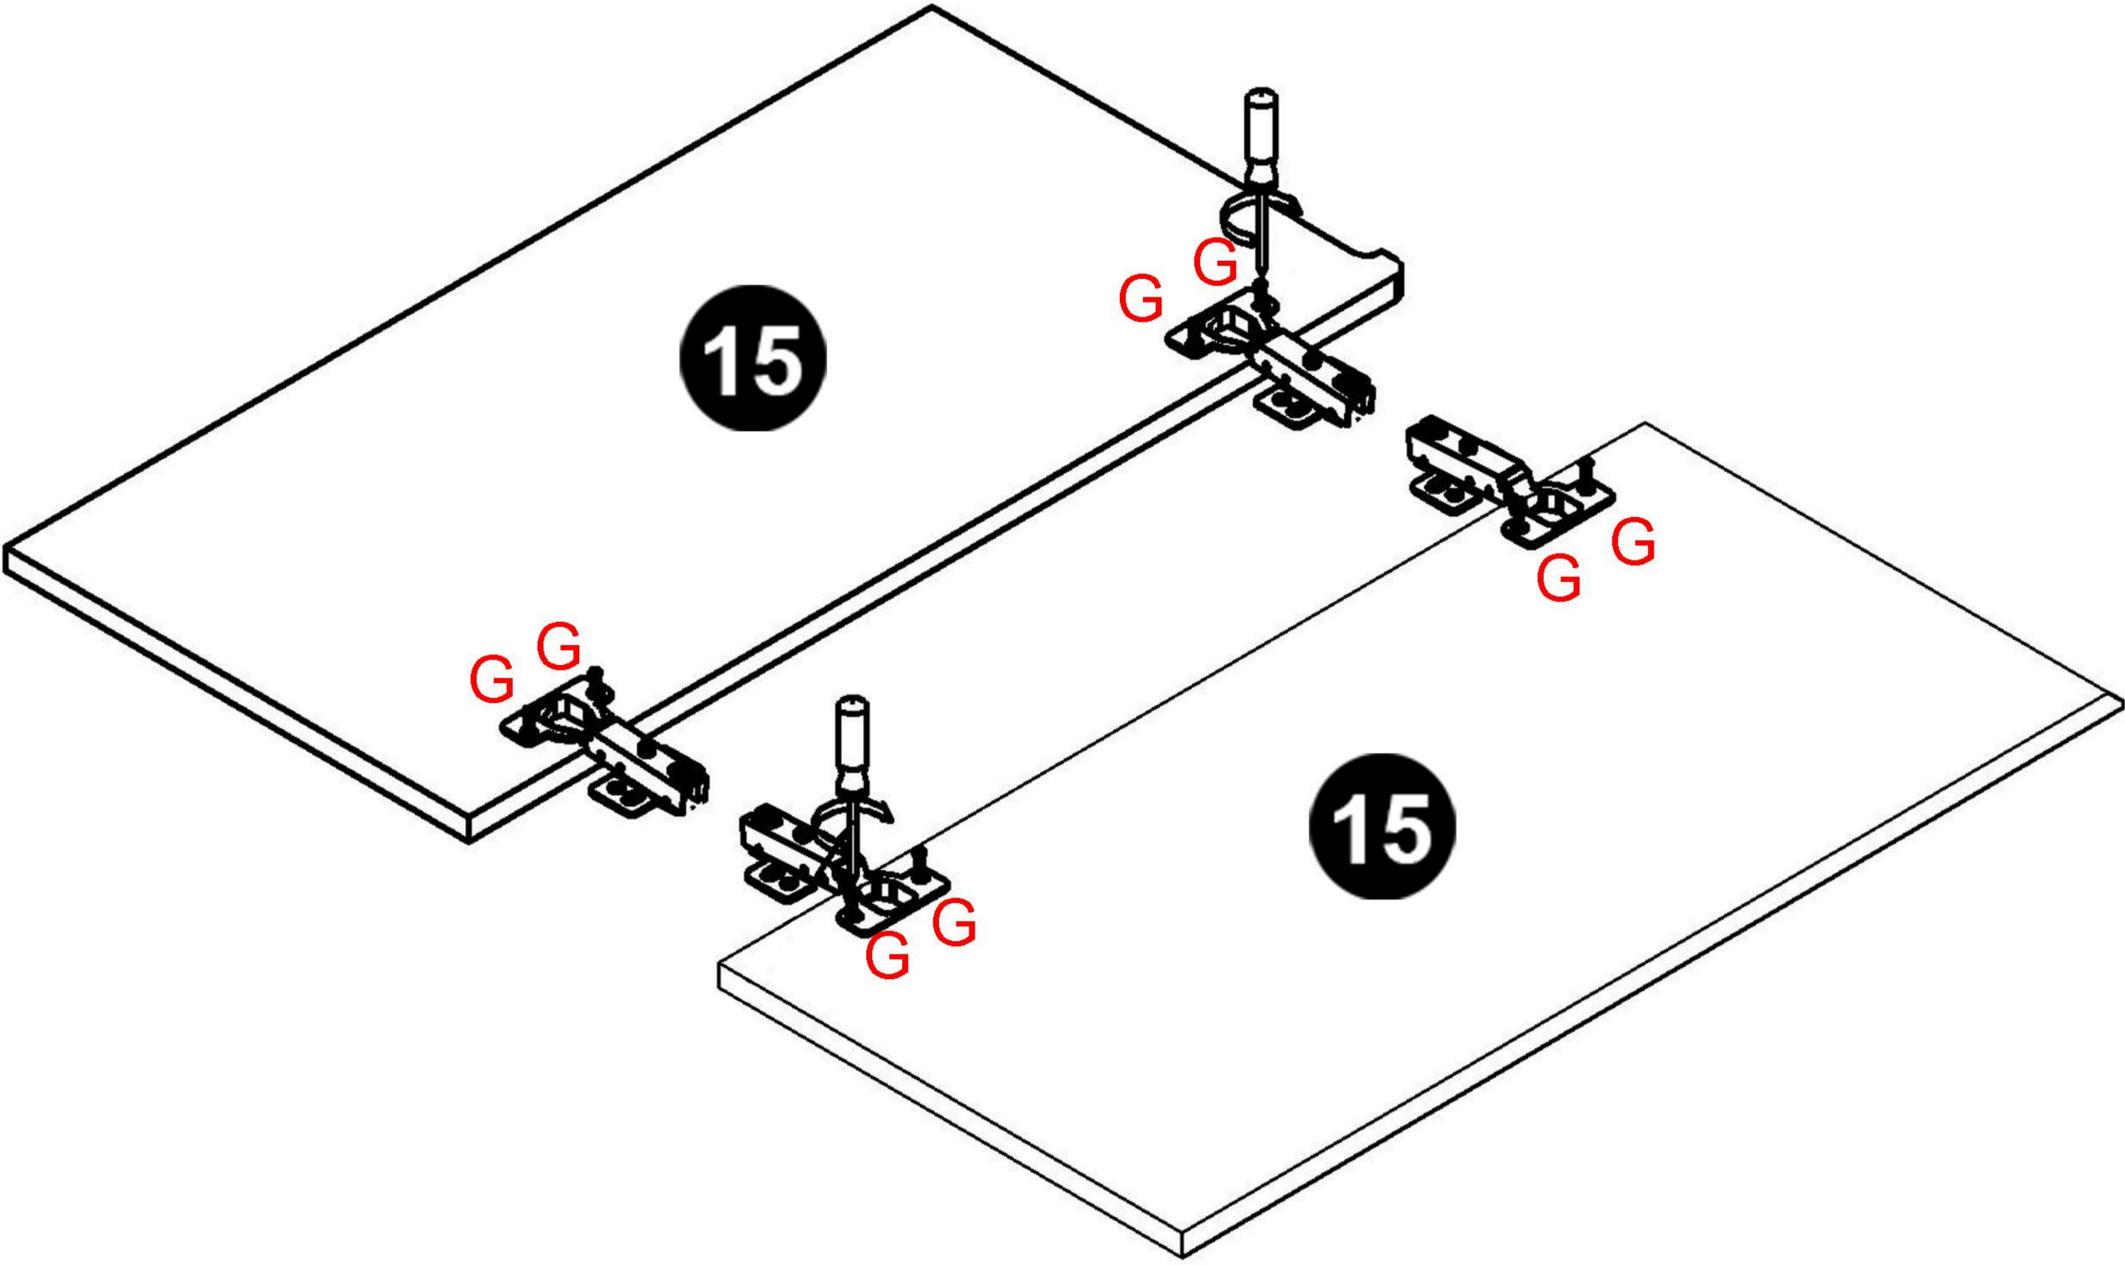


Step 20:

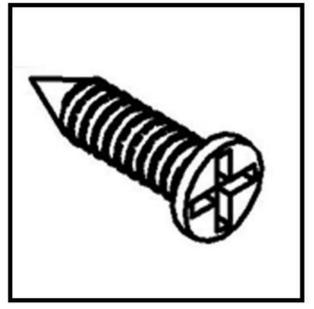

G

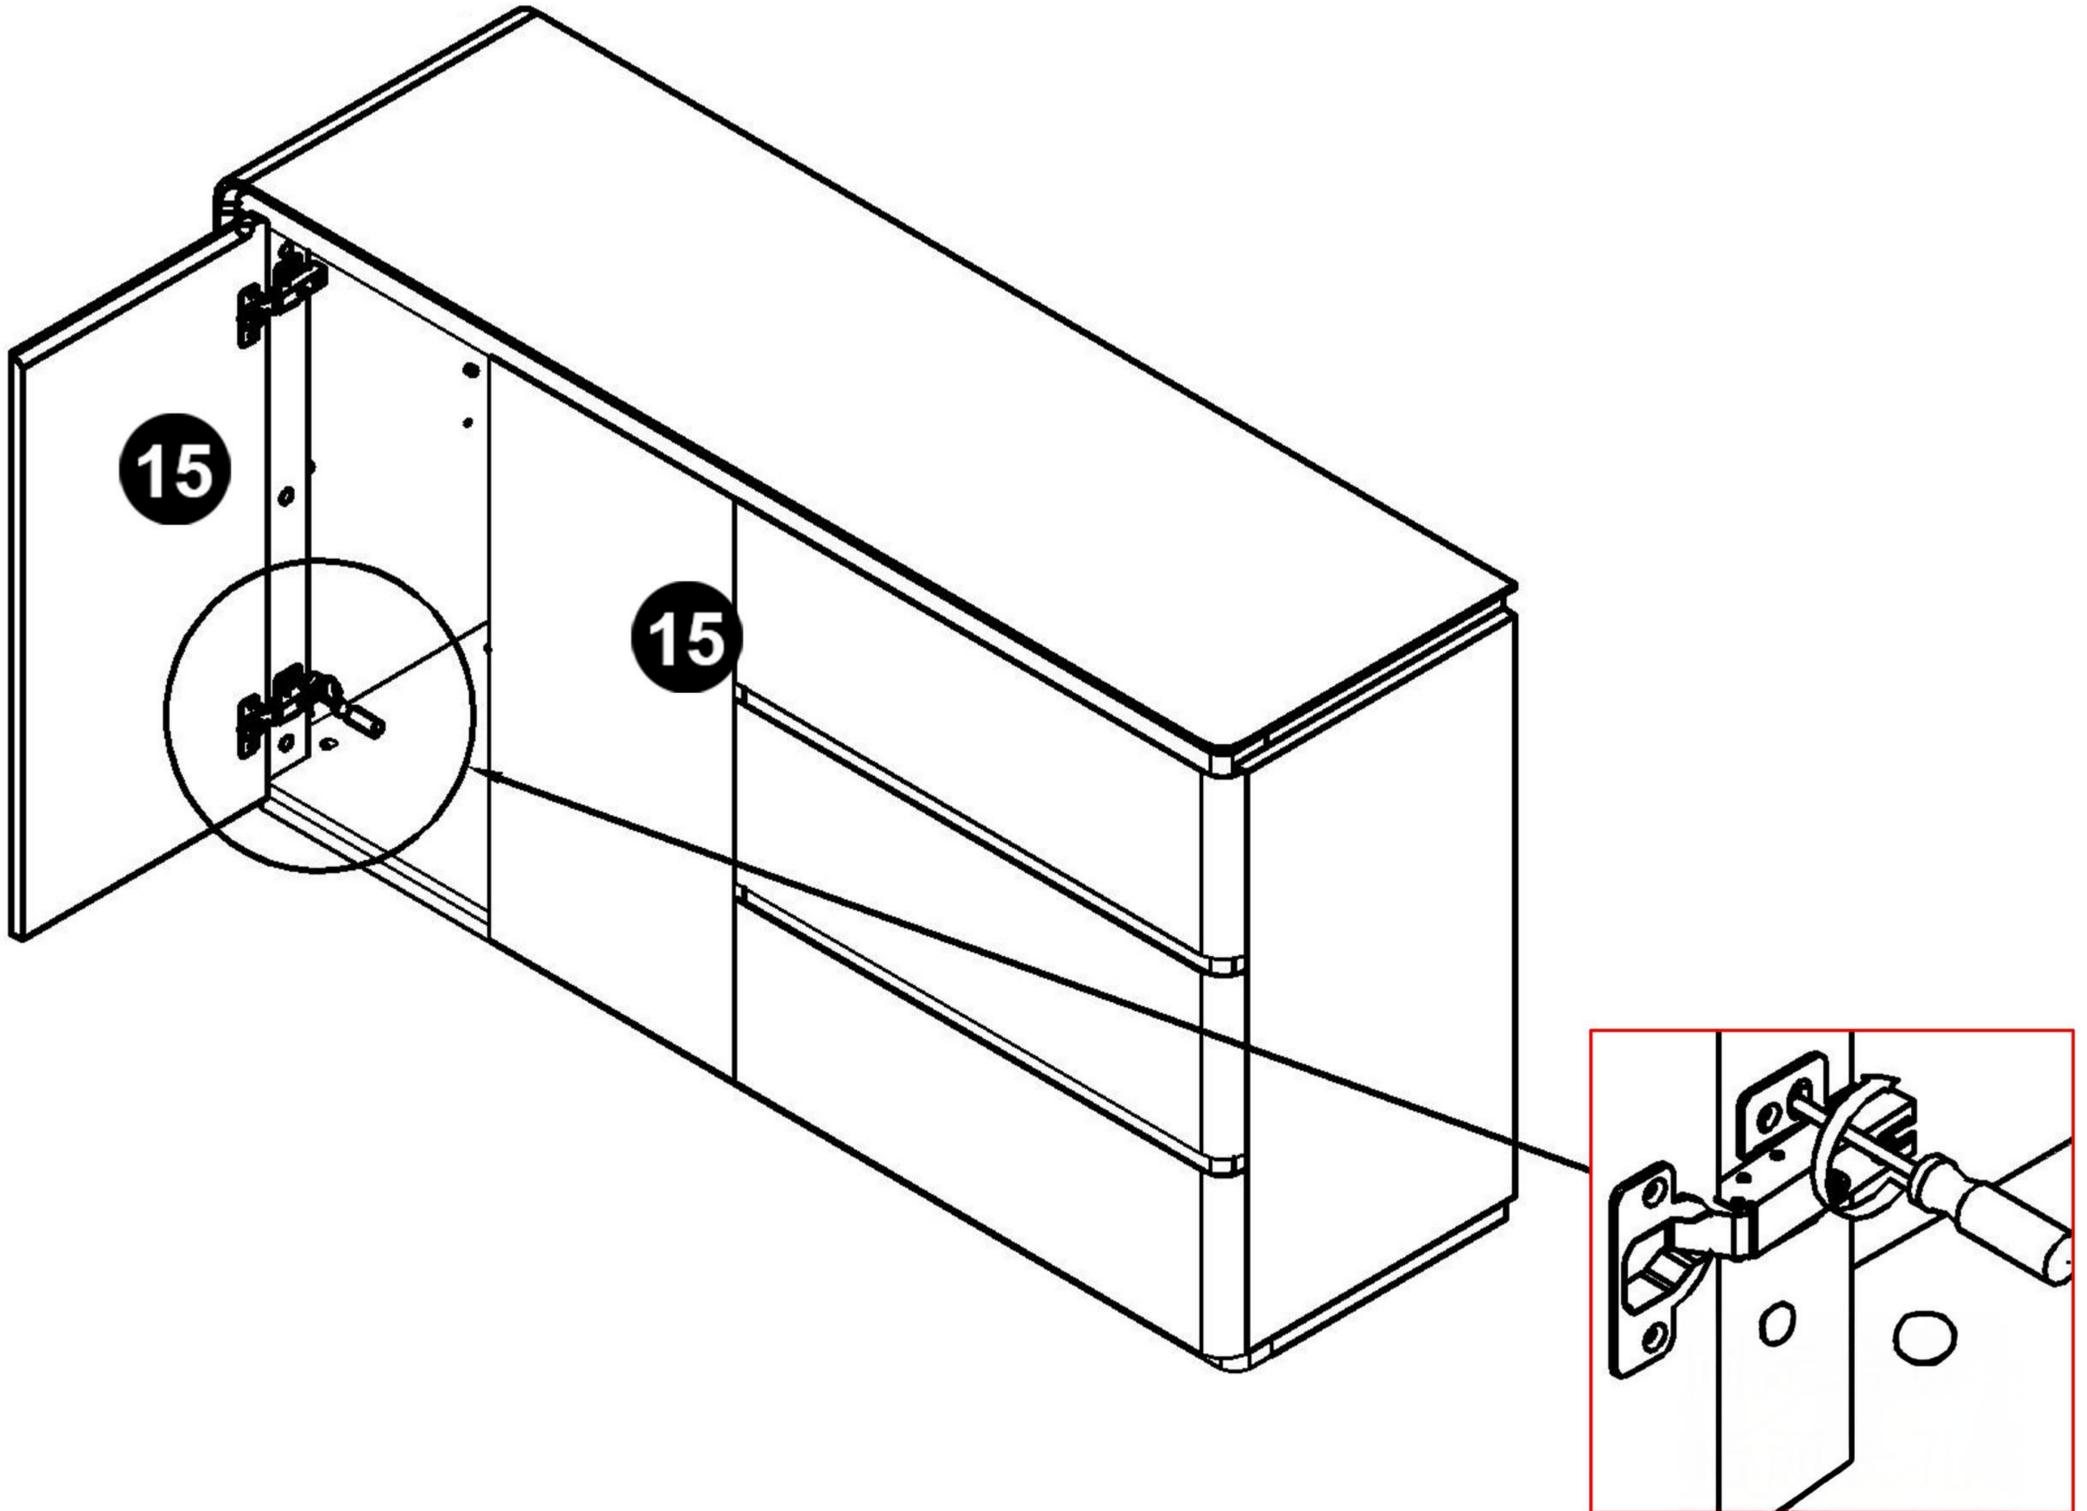

Refer to the previous Installation Guide: Hinge Installation Instruction

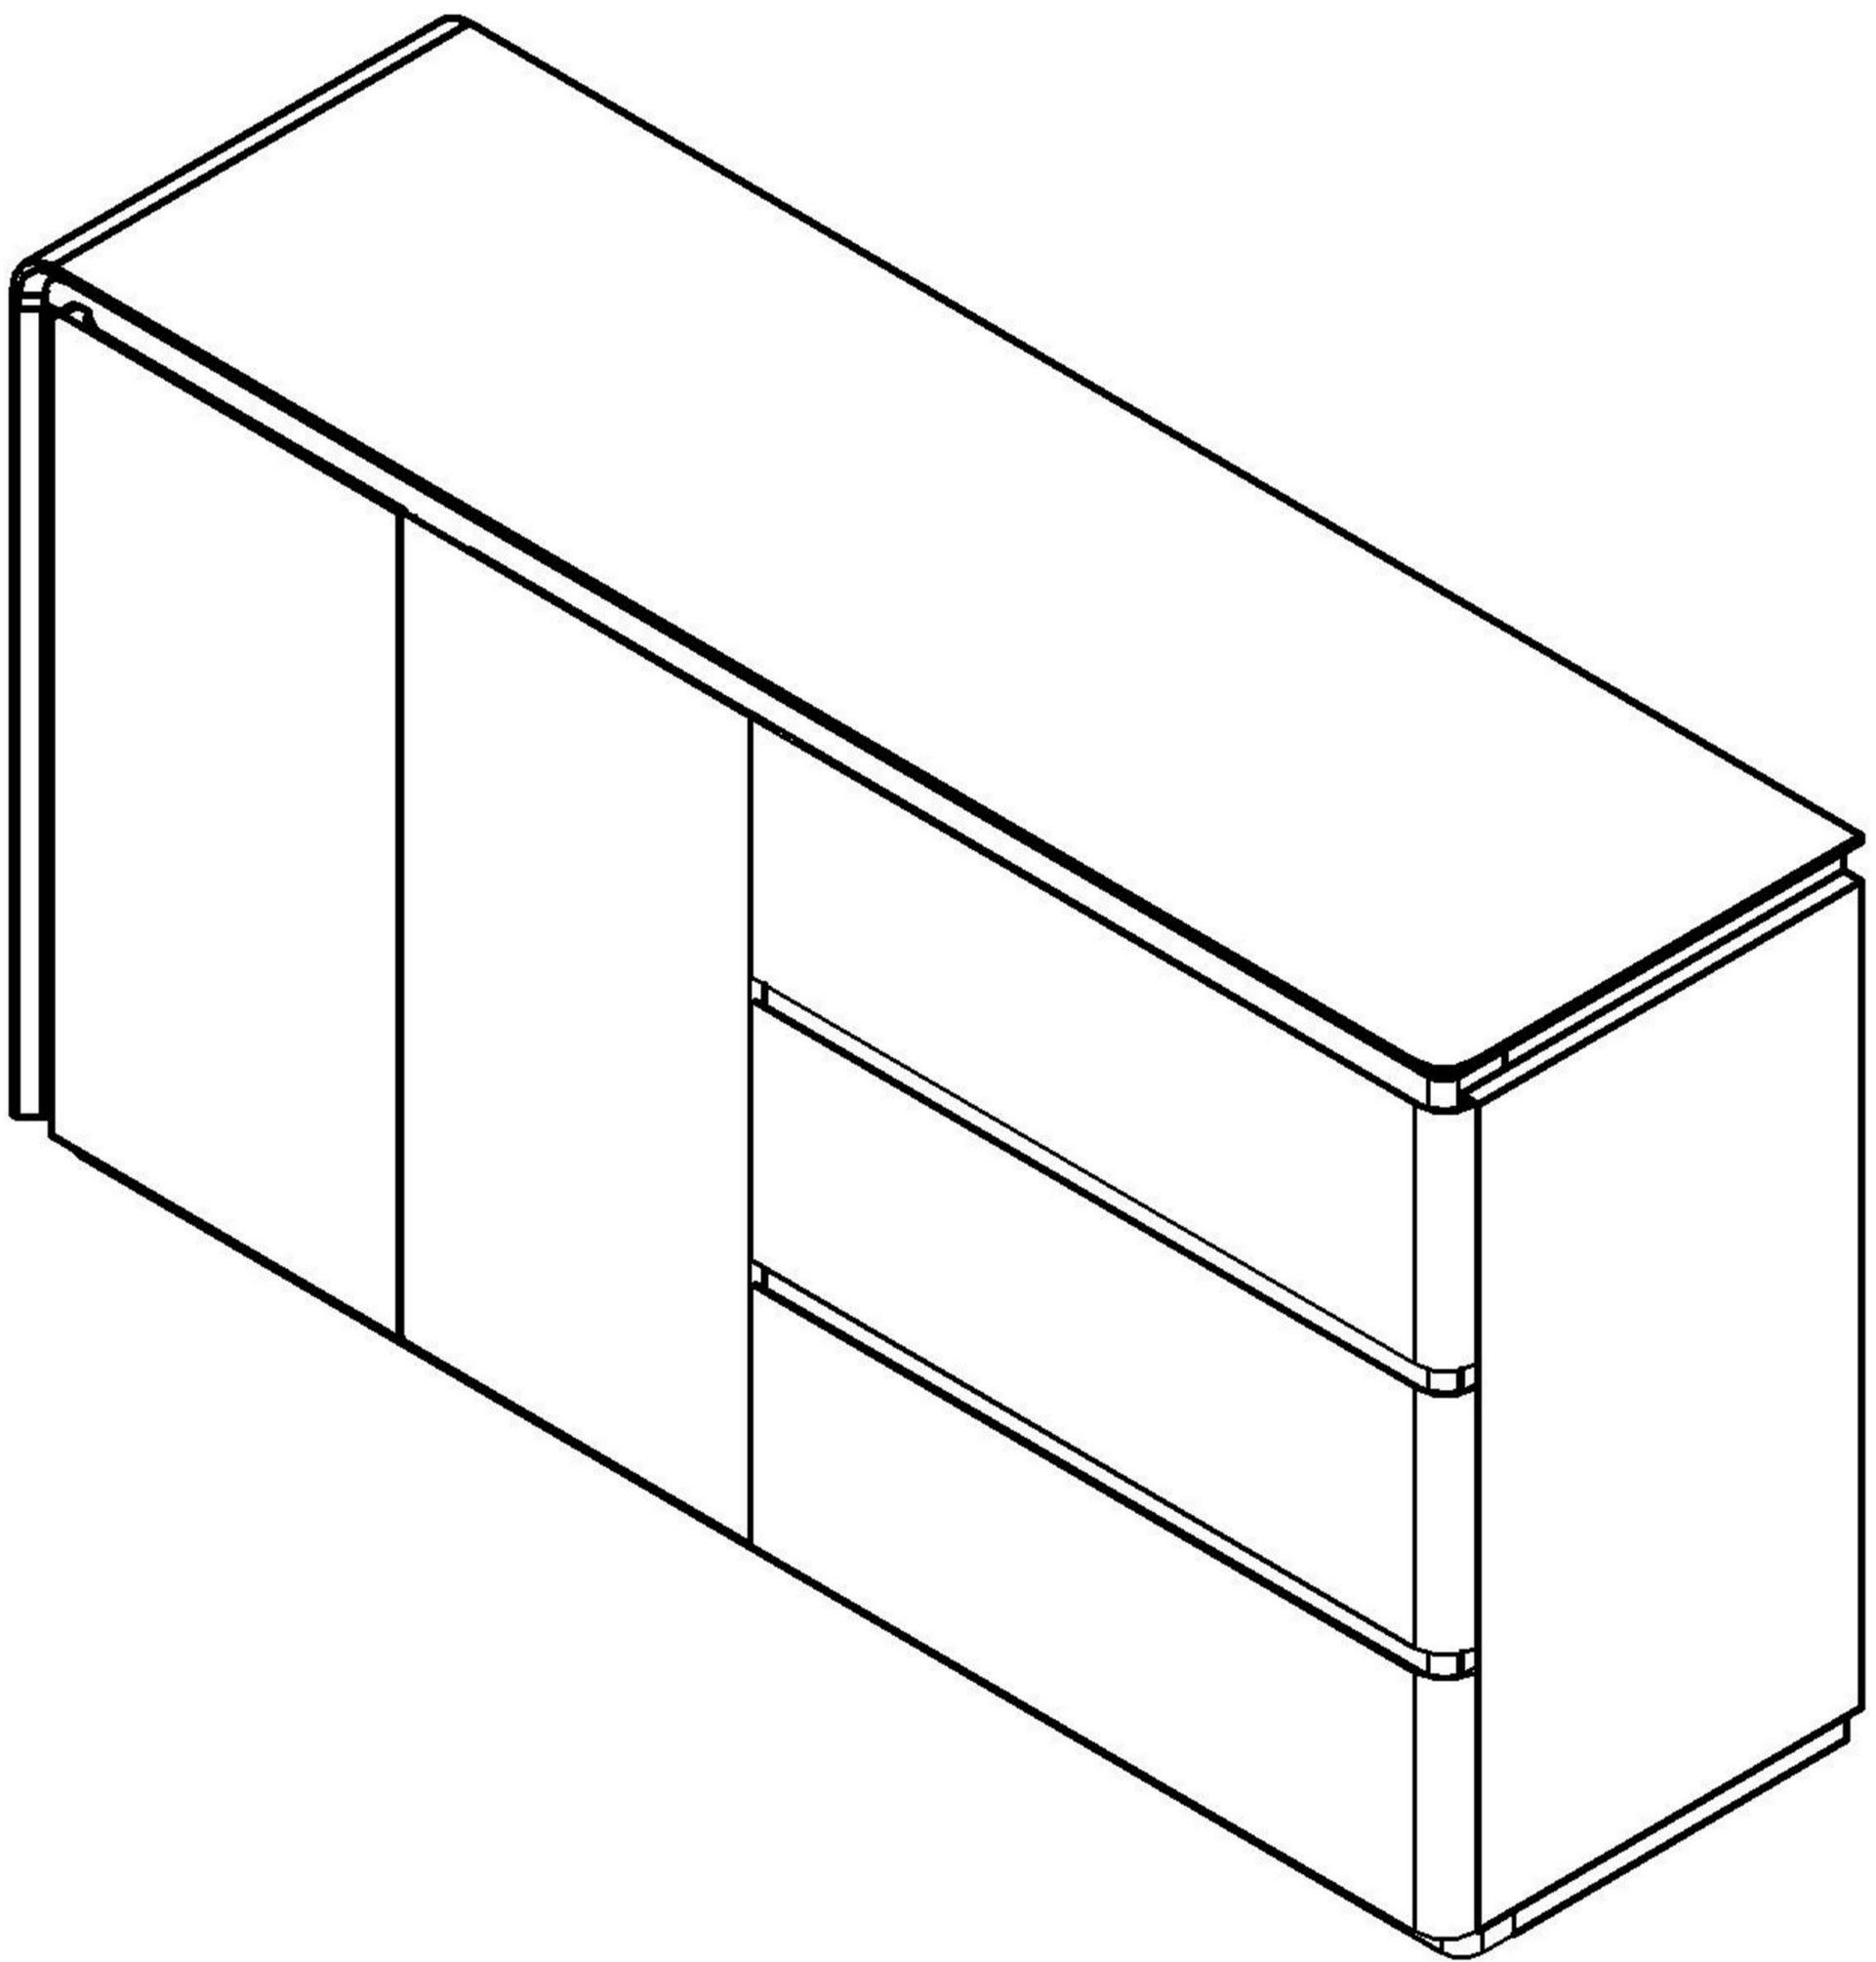

Installation Finished