

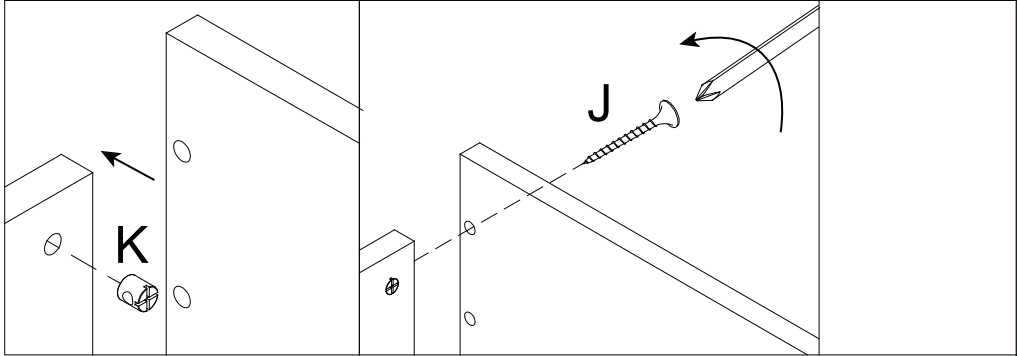




ASSEMBLY INSTRUCTION

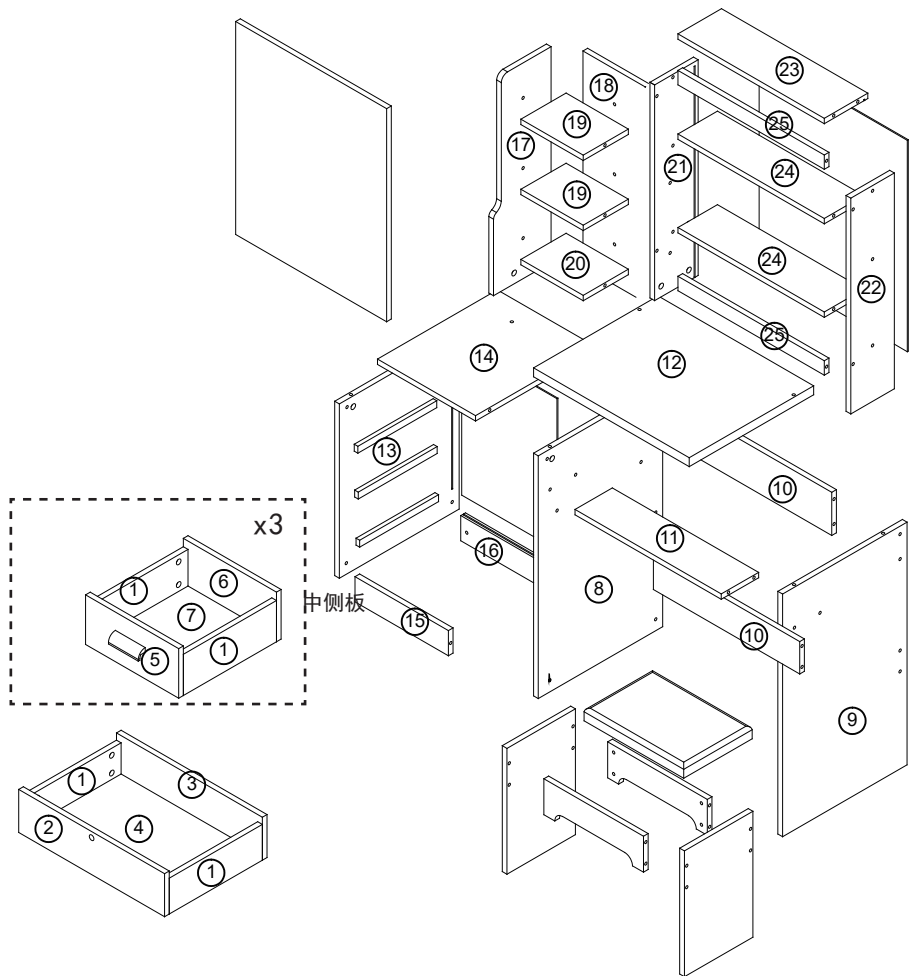


							
Ax41	Bx41	Cx8	Dx8	Ex40	Fx4	Gx8	Hx1
							
Jx41	Kx41	Lx2	Mx6				

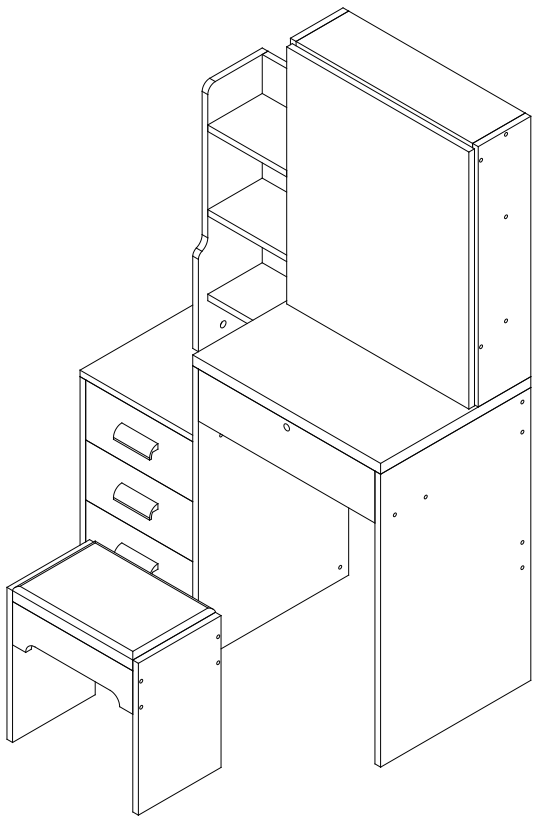

STEP 1

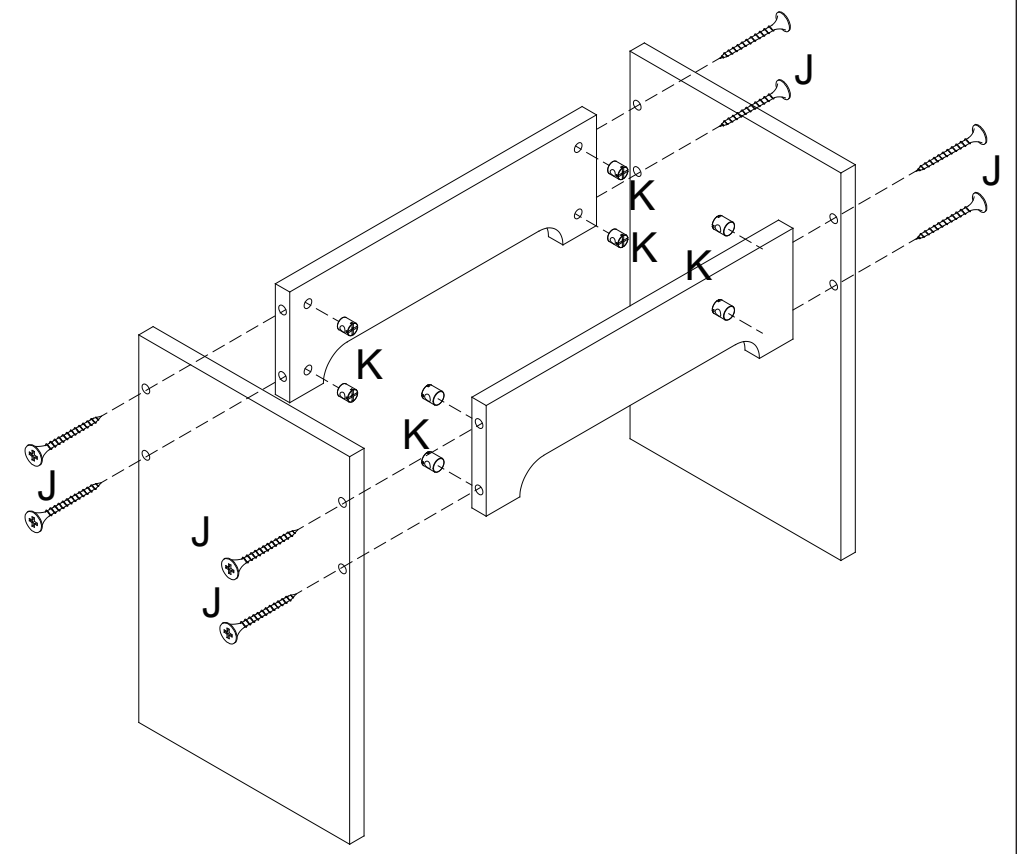


STEP 2

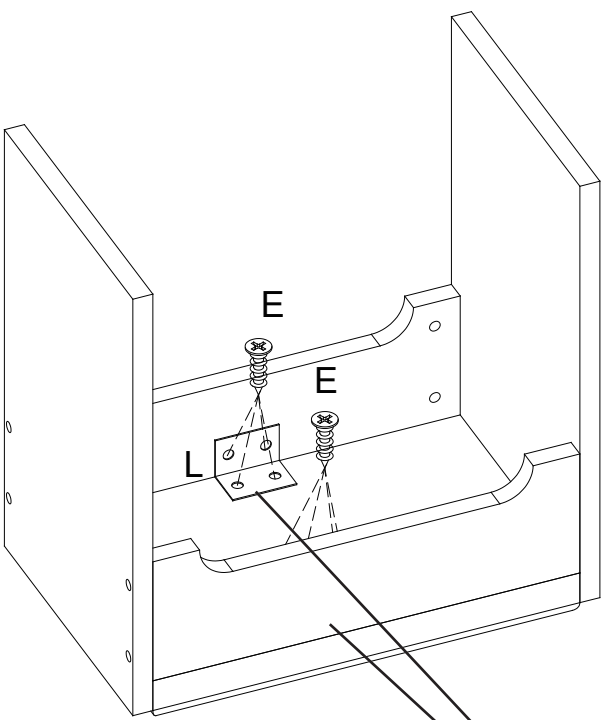


No holes, screws directly into the boards


STEP 3

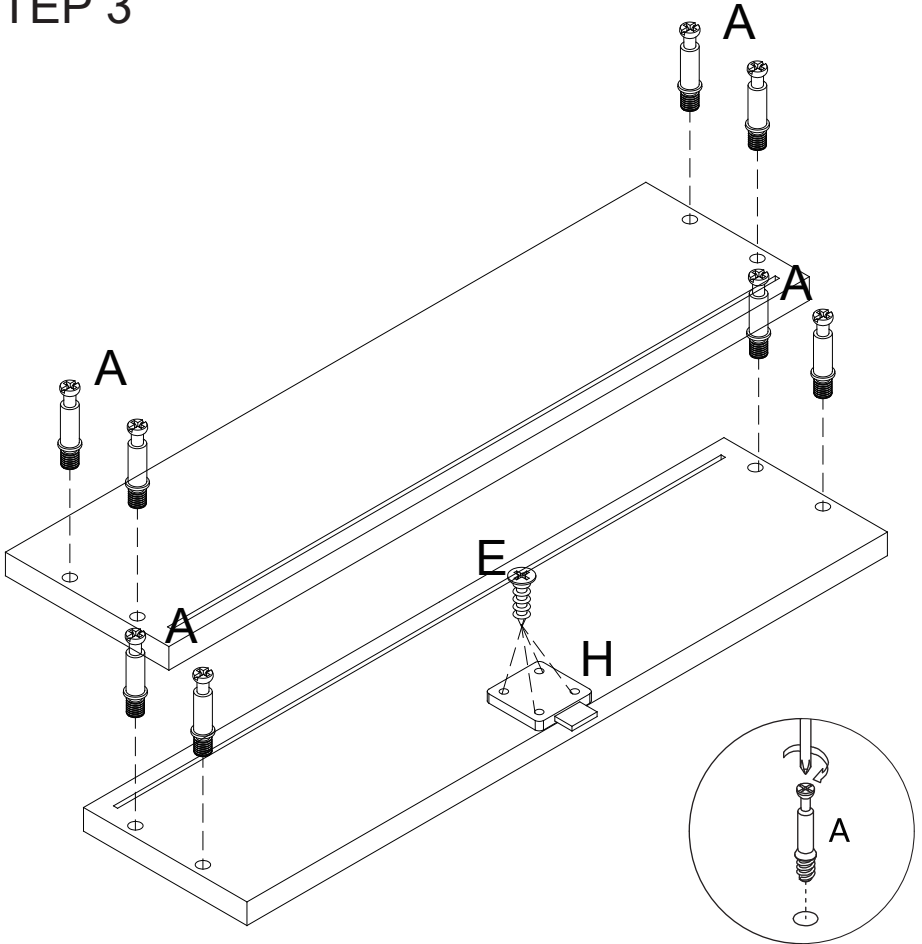

STEP 4

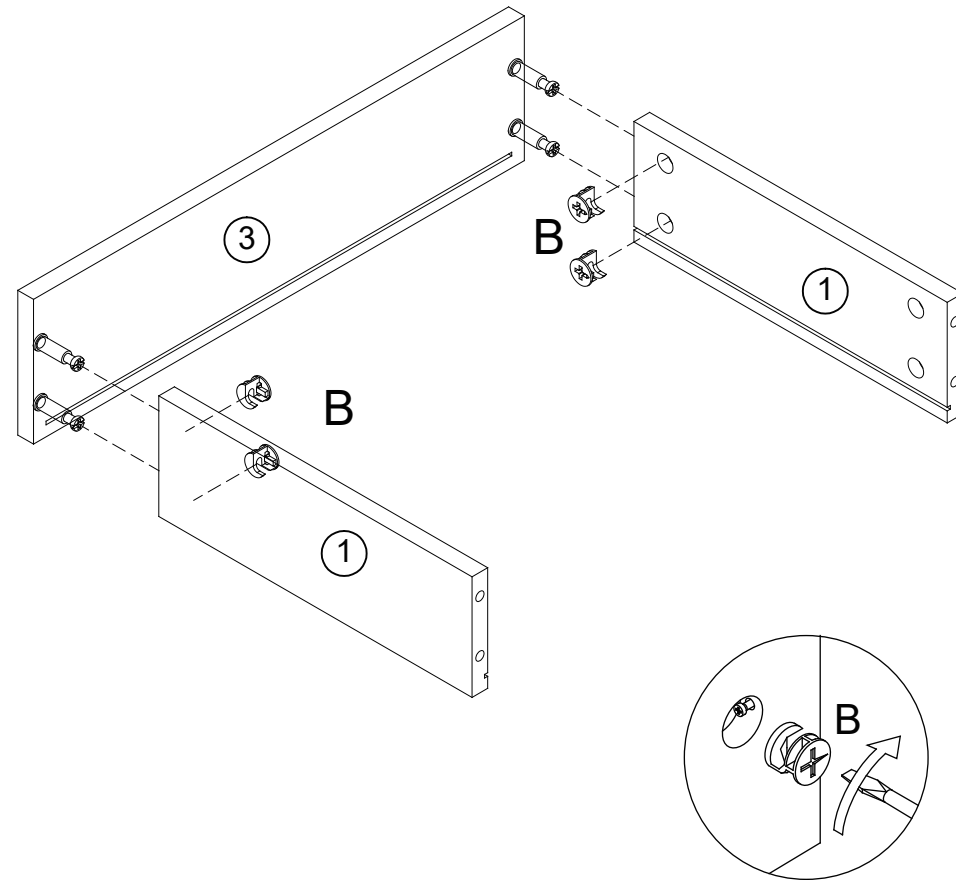


STEP 5

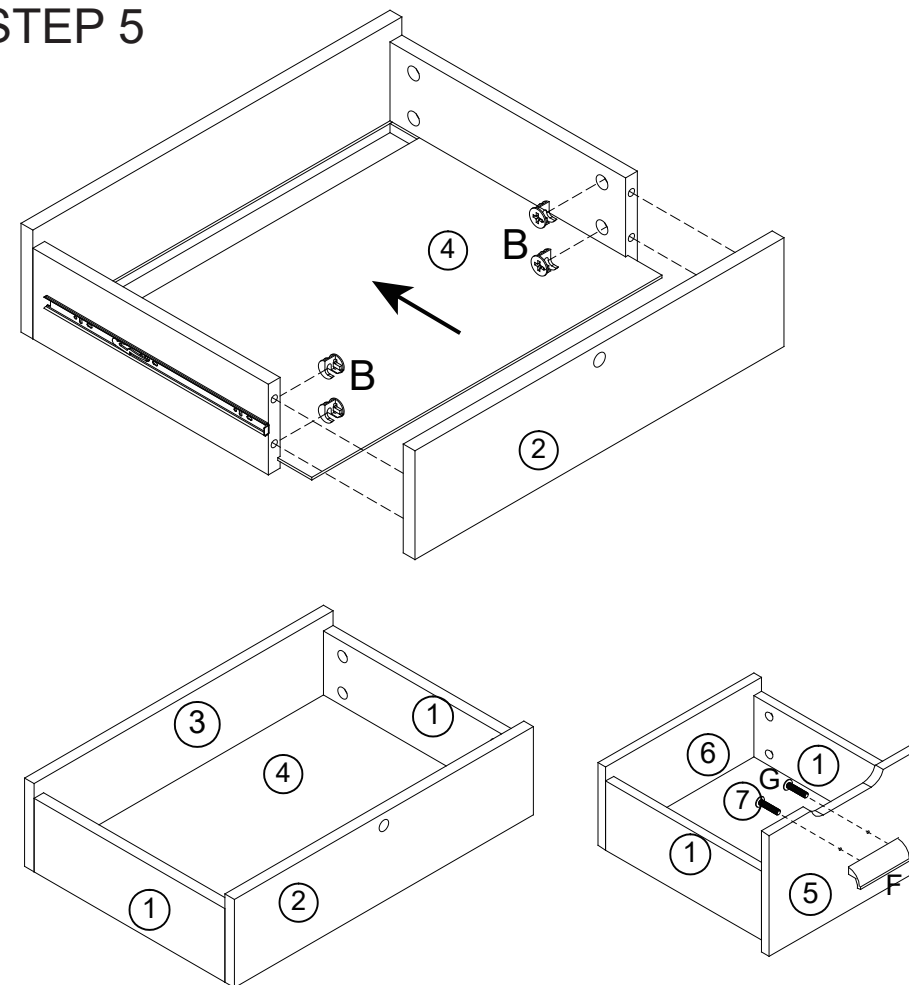


Three drawers are installed in the same way


STEP 6

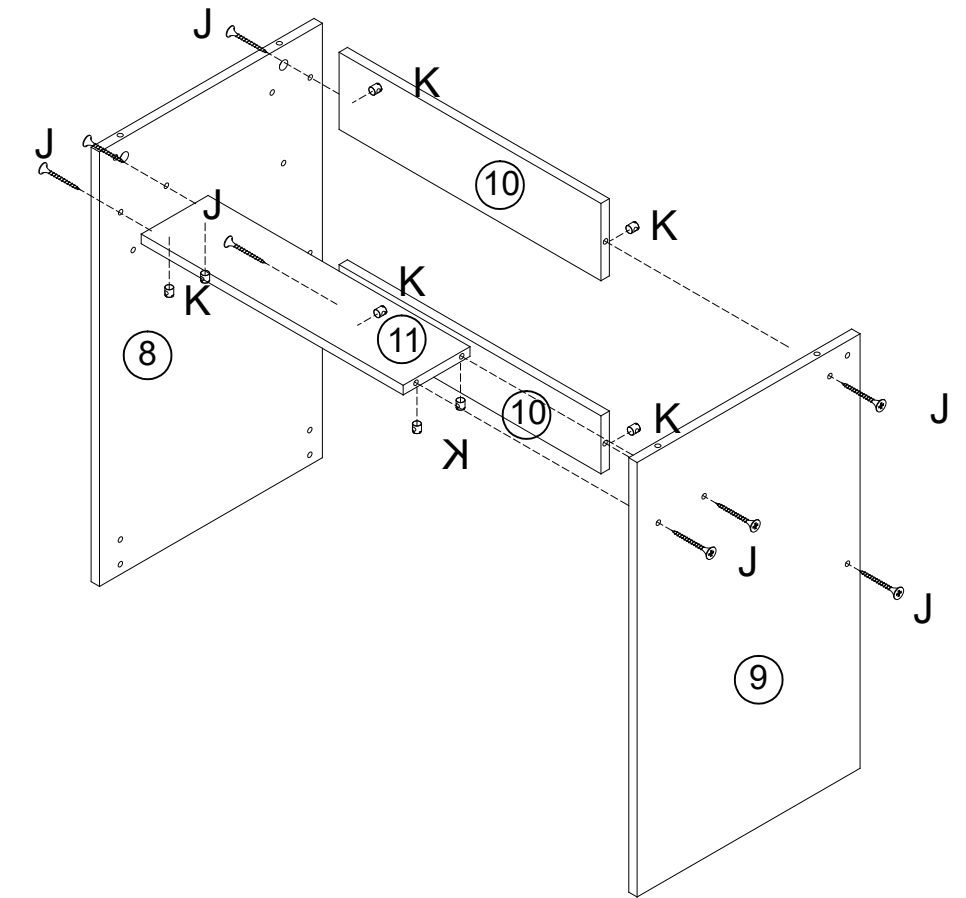


STEP 7

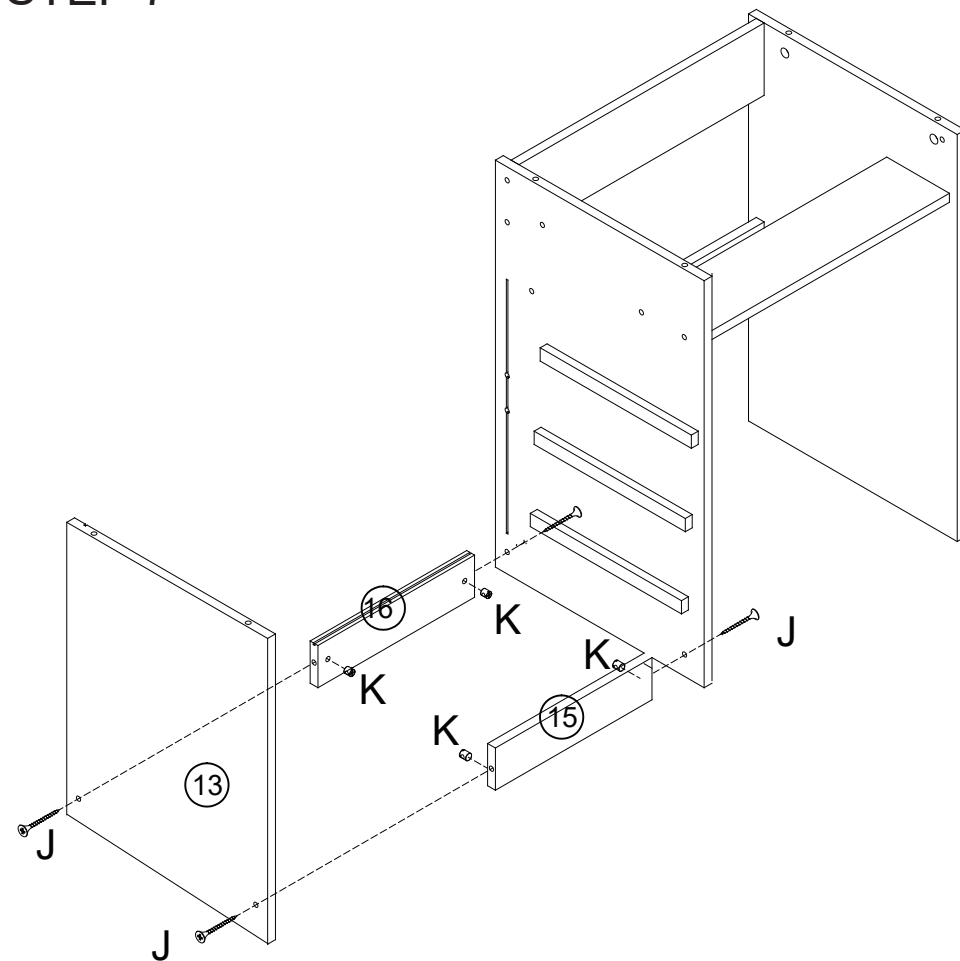


STEP 8

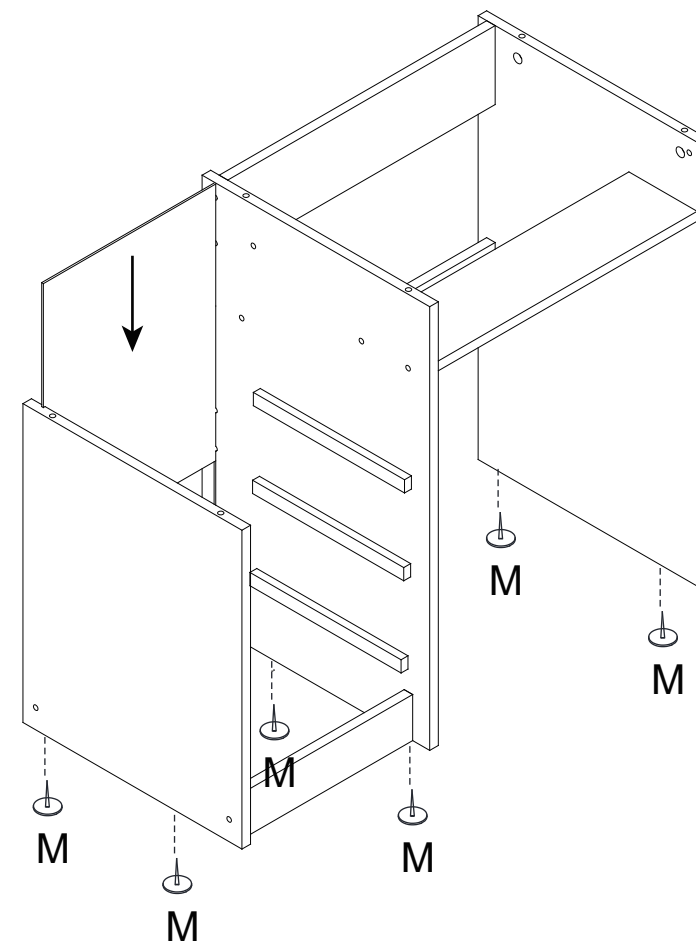


STEP 9

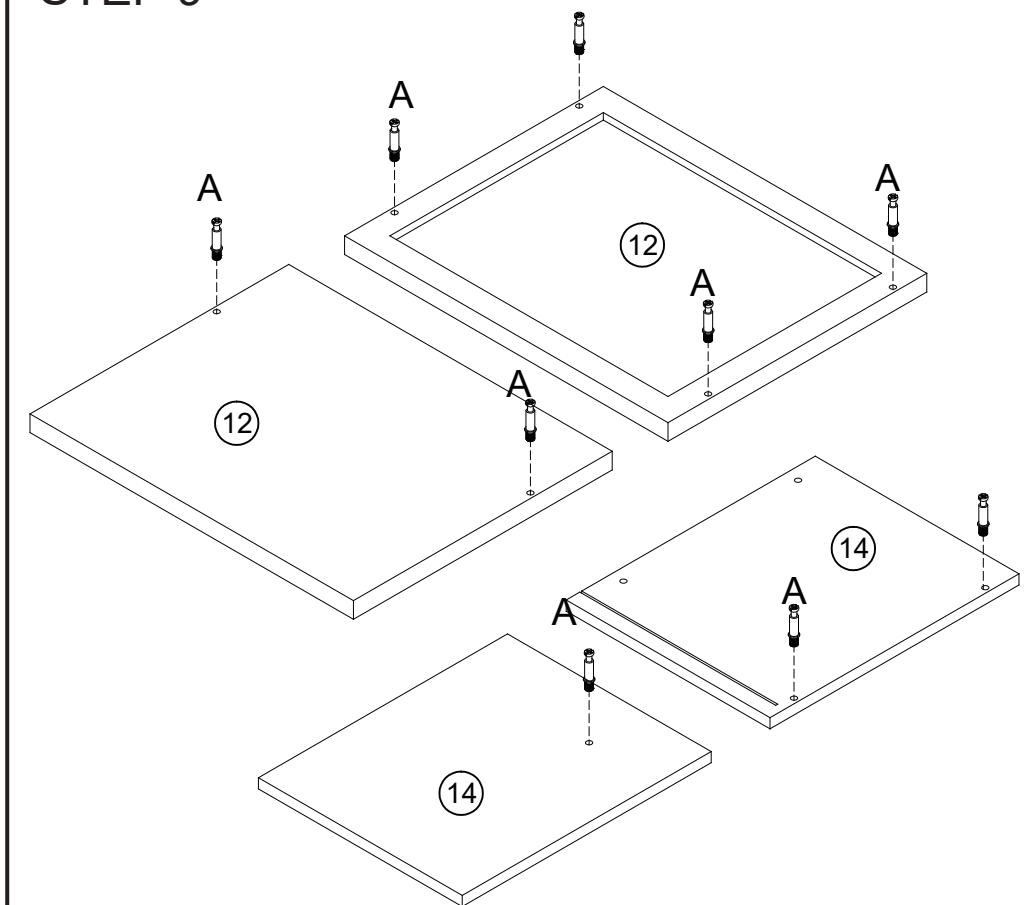


STEP 10

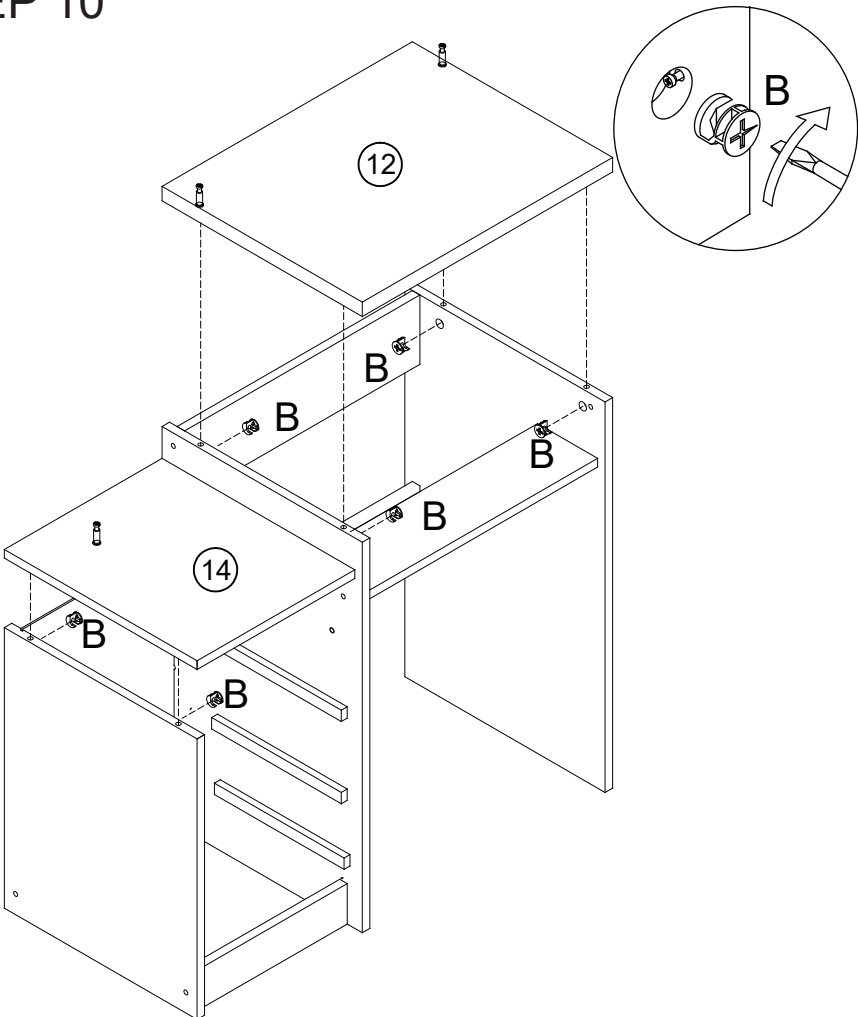


STEP 11

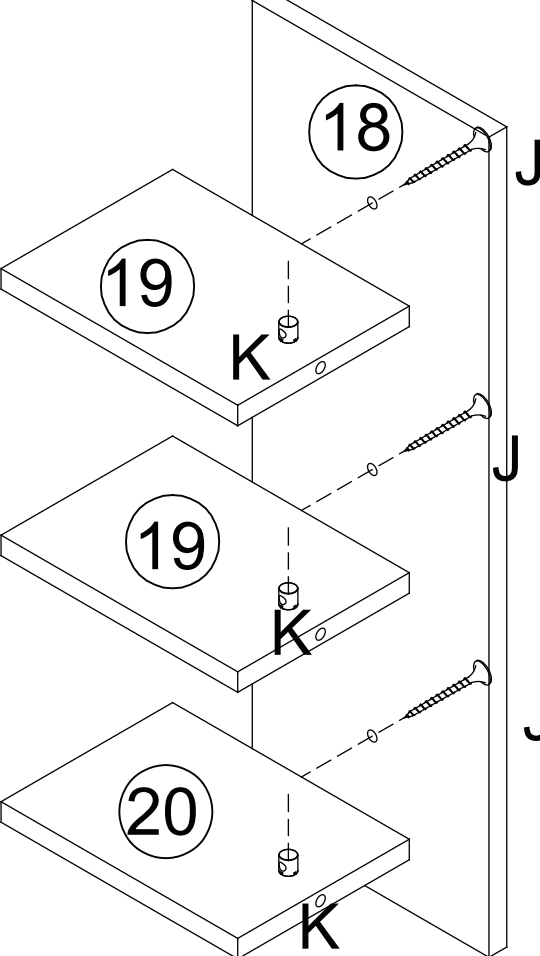


STEP 12

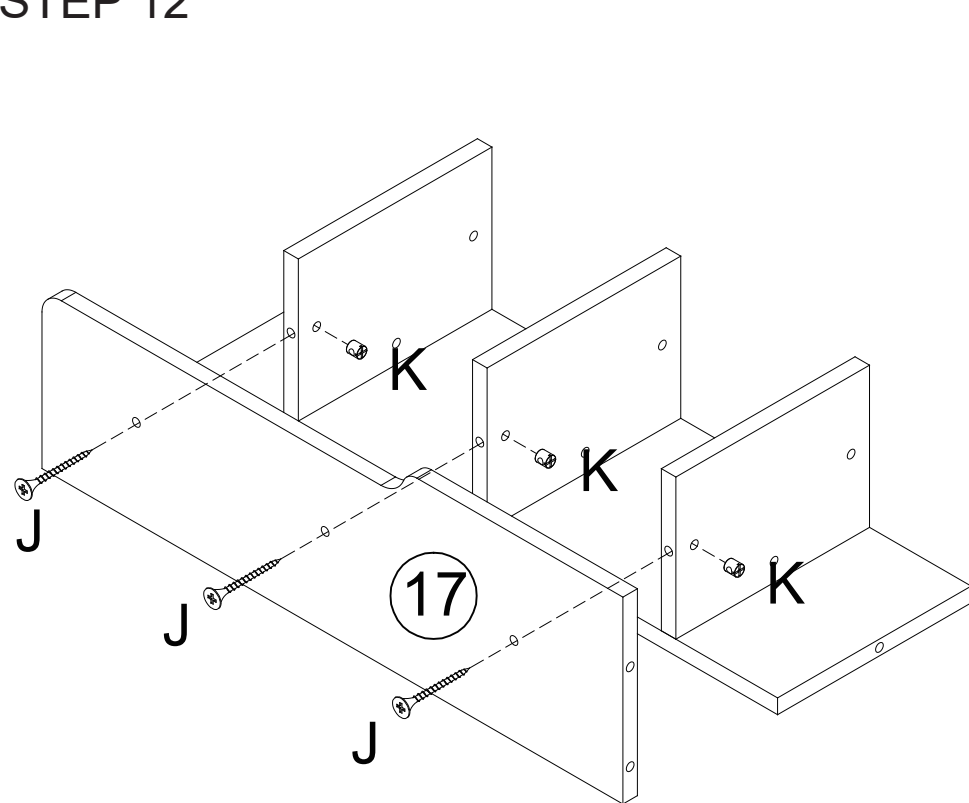


STEP 13

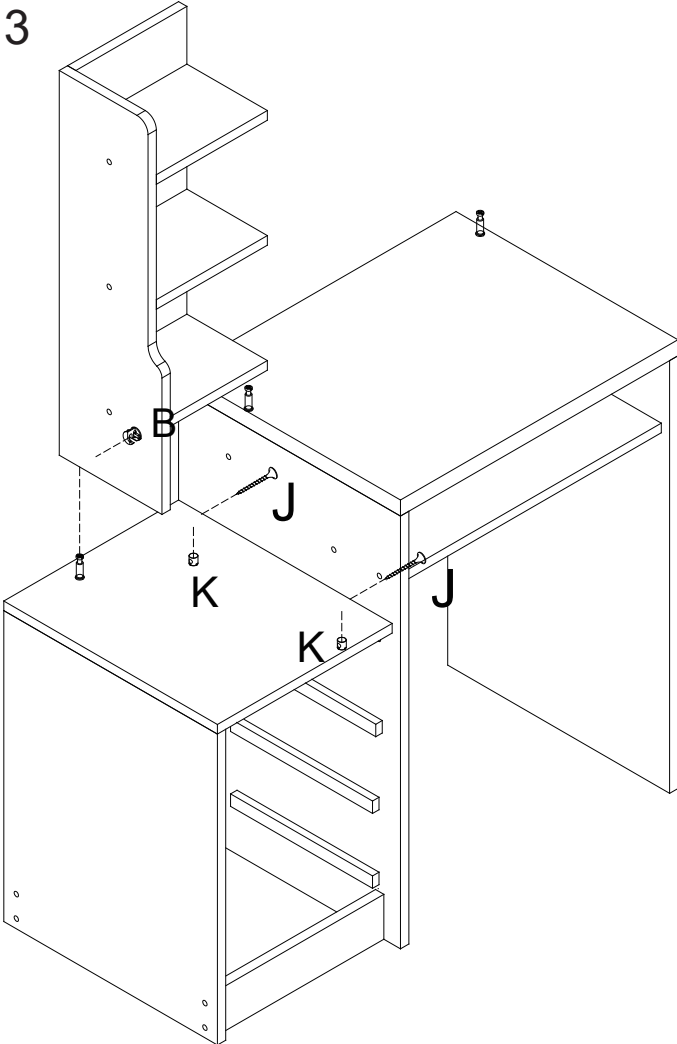


STEP 14

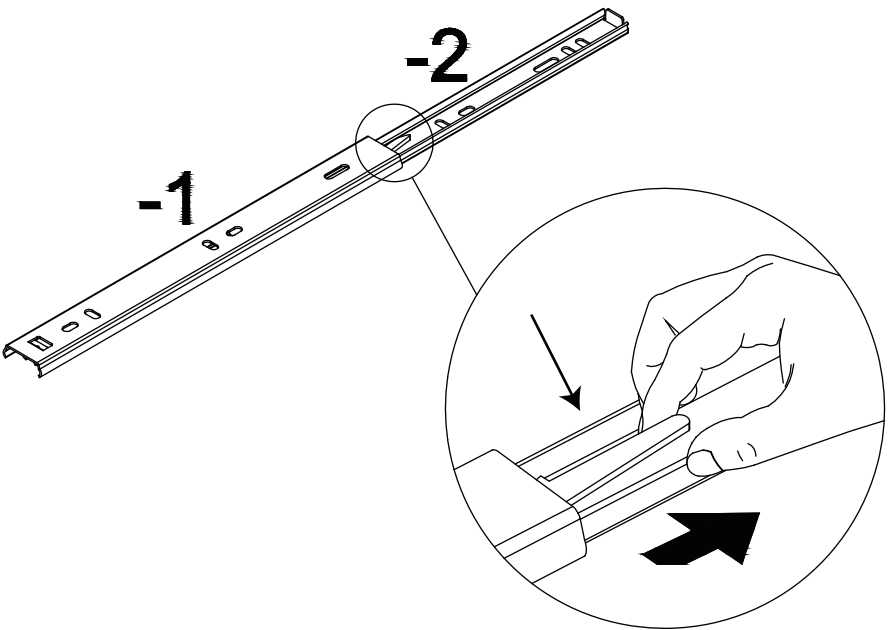


STEP 15

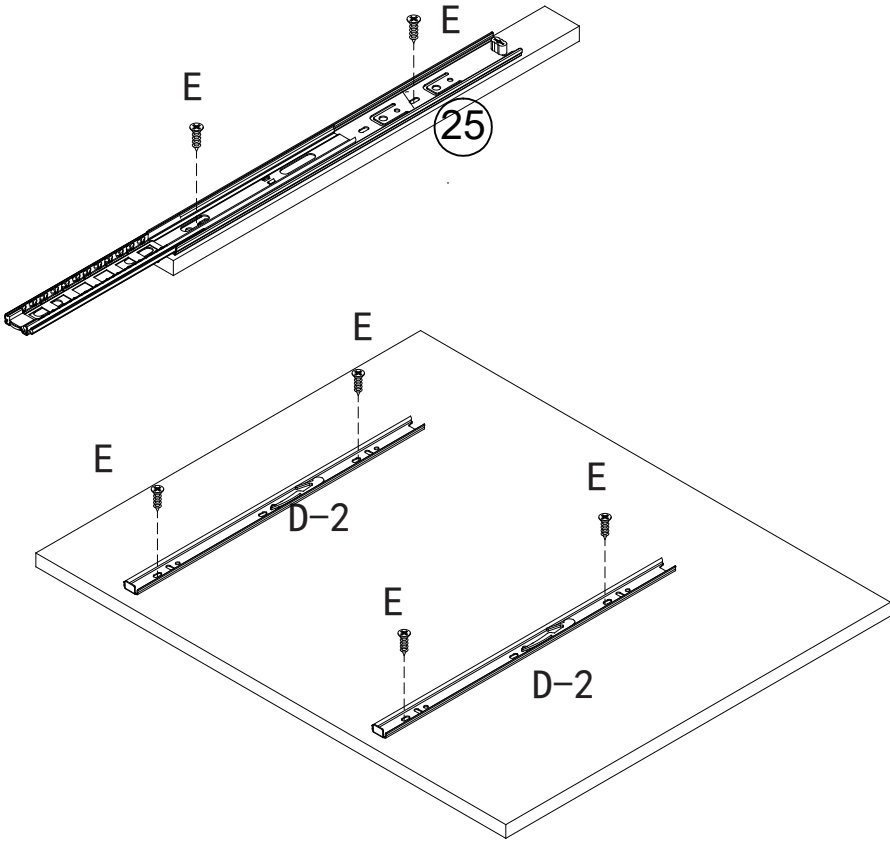


STEP 16

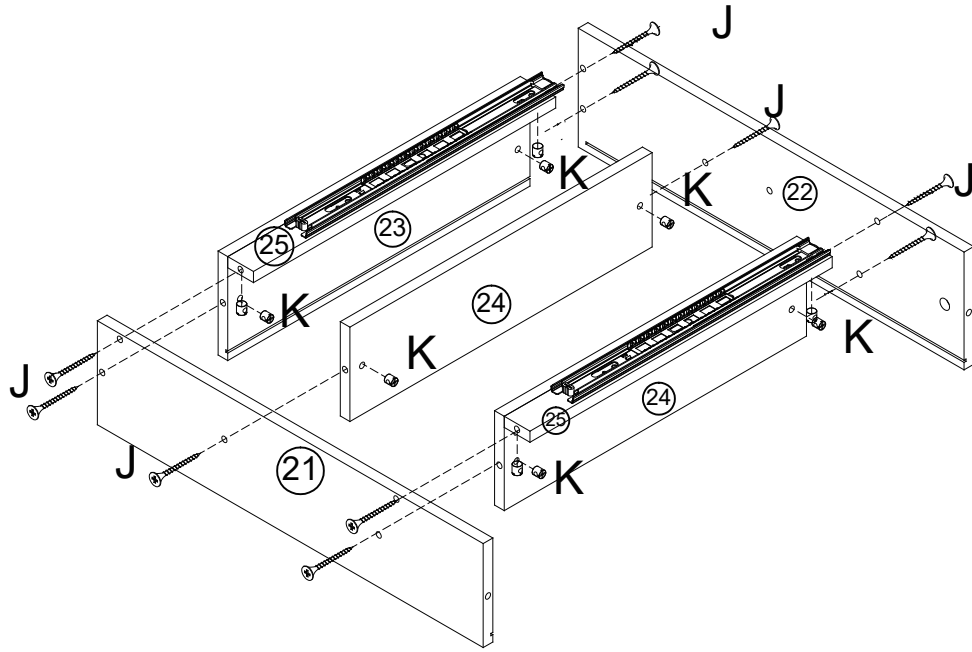


STEP 17

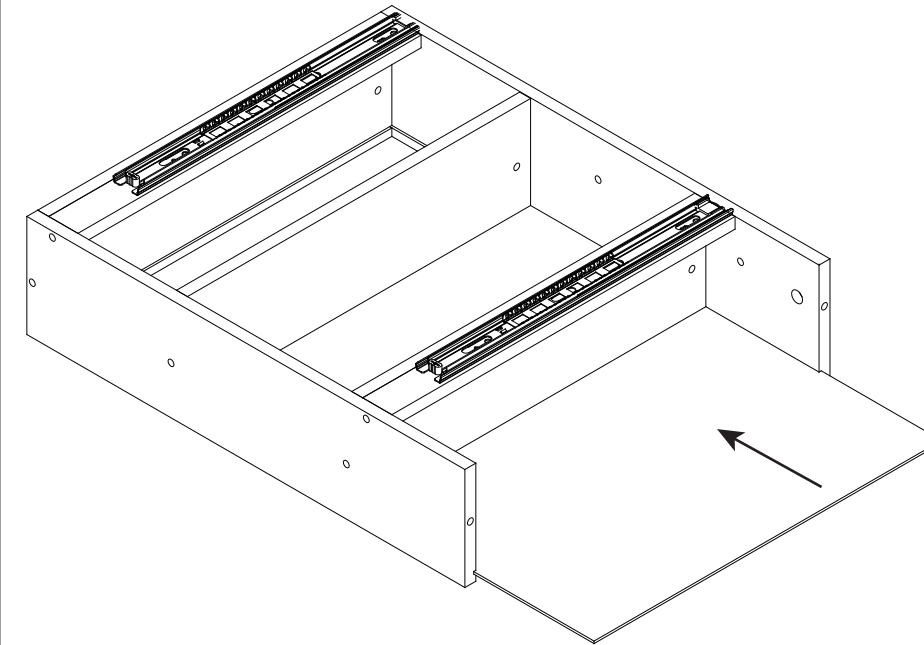


STEP 18

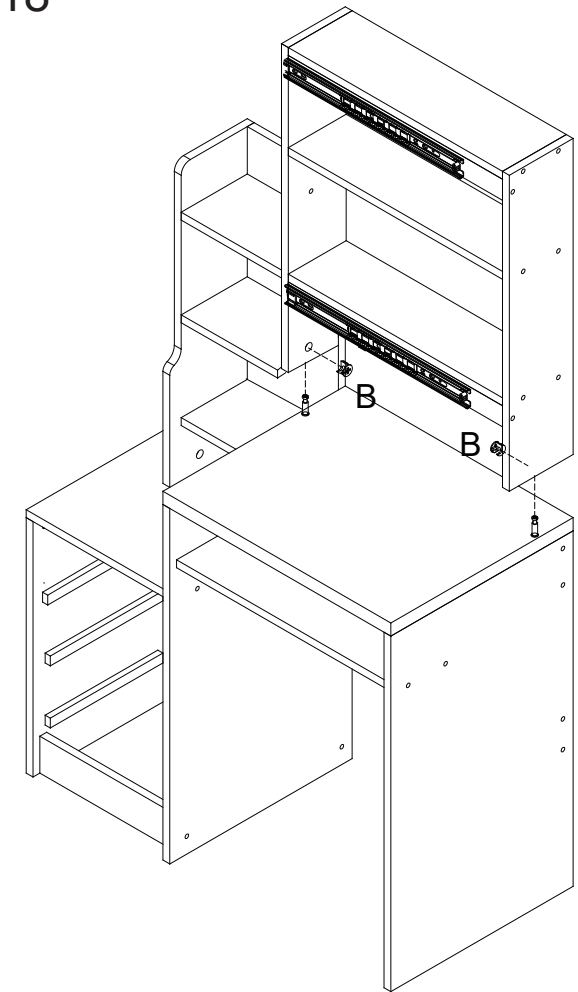

STEP 19

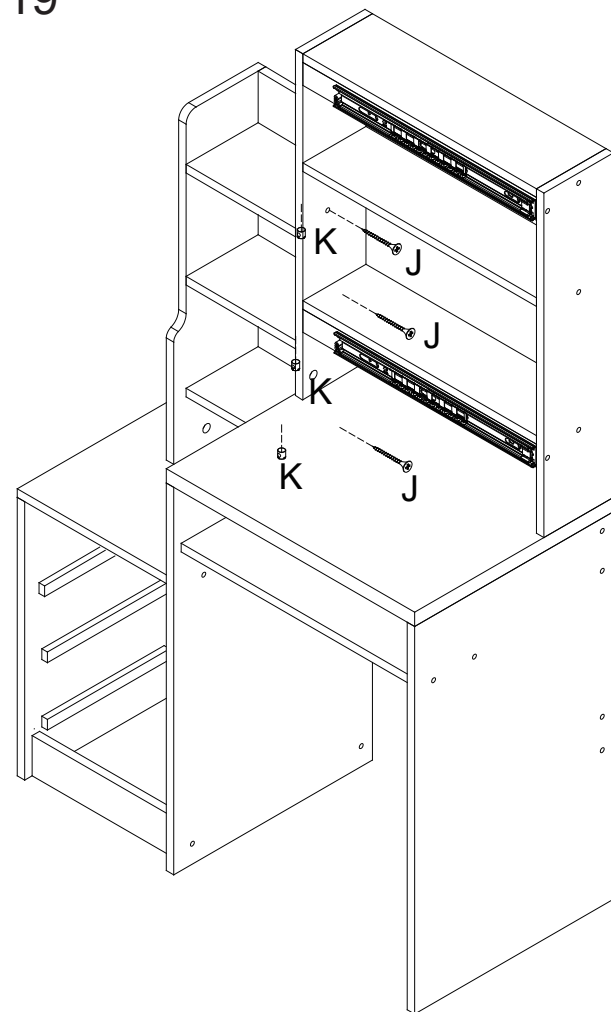

STEP 20

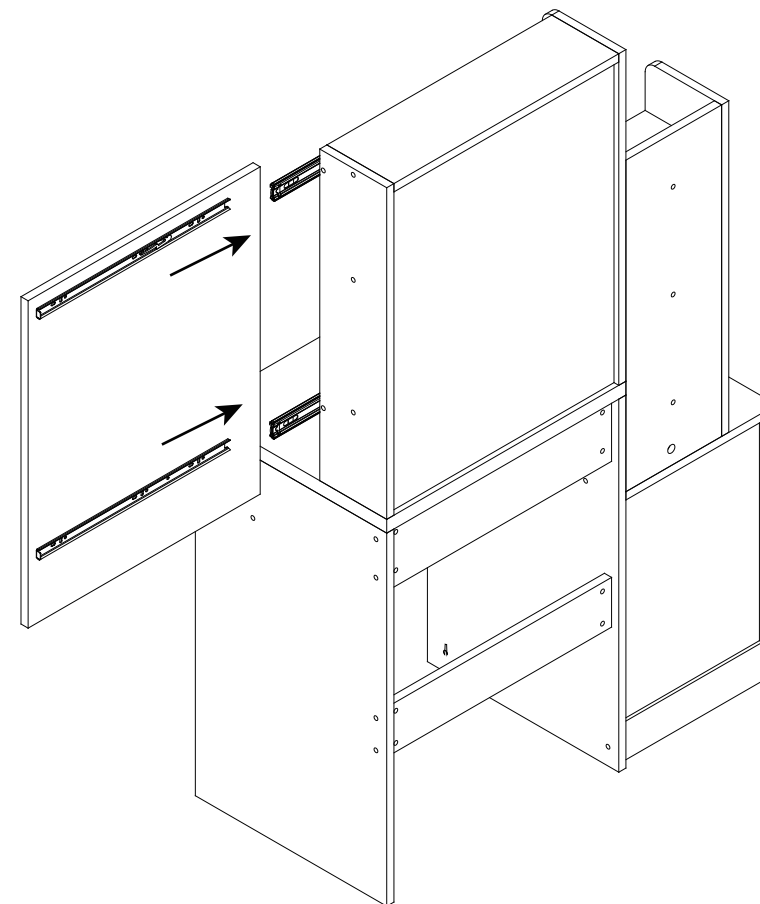

STEP 21

