



DR023

Installation Instruction

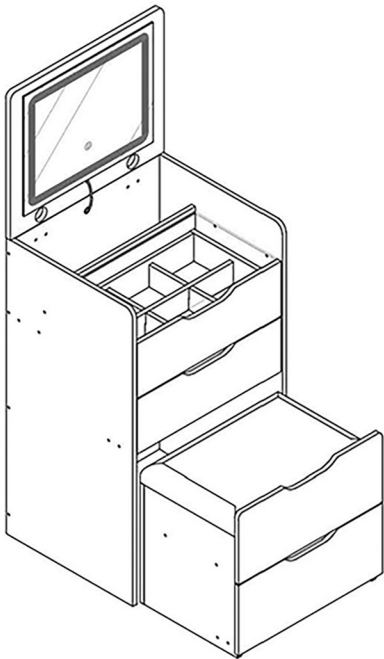

Scan the code to purchase ES001

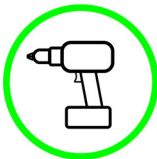

Please read this instruction manual carefully before installation and use.

Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.


Precautions after assembly:

1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

Hardware List

	(A)	(B)	(D)	(E)	(F)	(G)	(H)	(I)	(J)	(K)
name	Three in one	Two in one	Door hinge	Silent track	Laminate support	Self-tapping screws			Hole Cover Sticker	Foot nails
graphics	 Screw with self-tapping	 Raised Head						 Flat Head		
specification	Ø12/L=40	Ø10/M5*15	Straight bend	10"	Ø8*18	M3. 5*12	M3. 5*14	M3. 5*35		

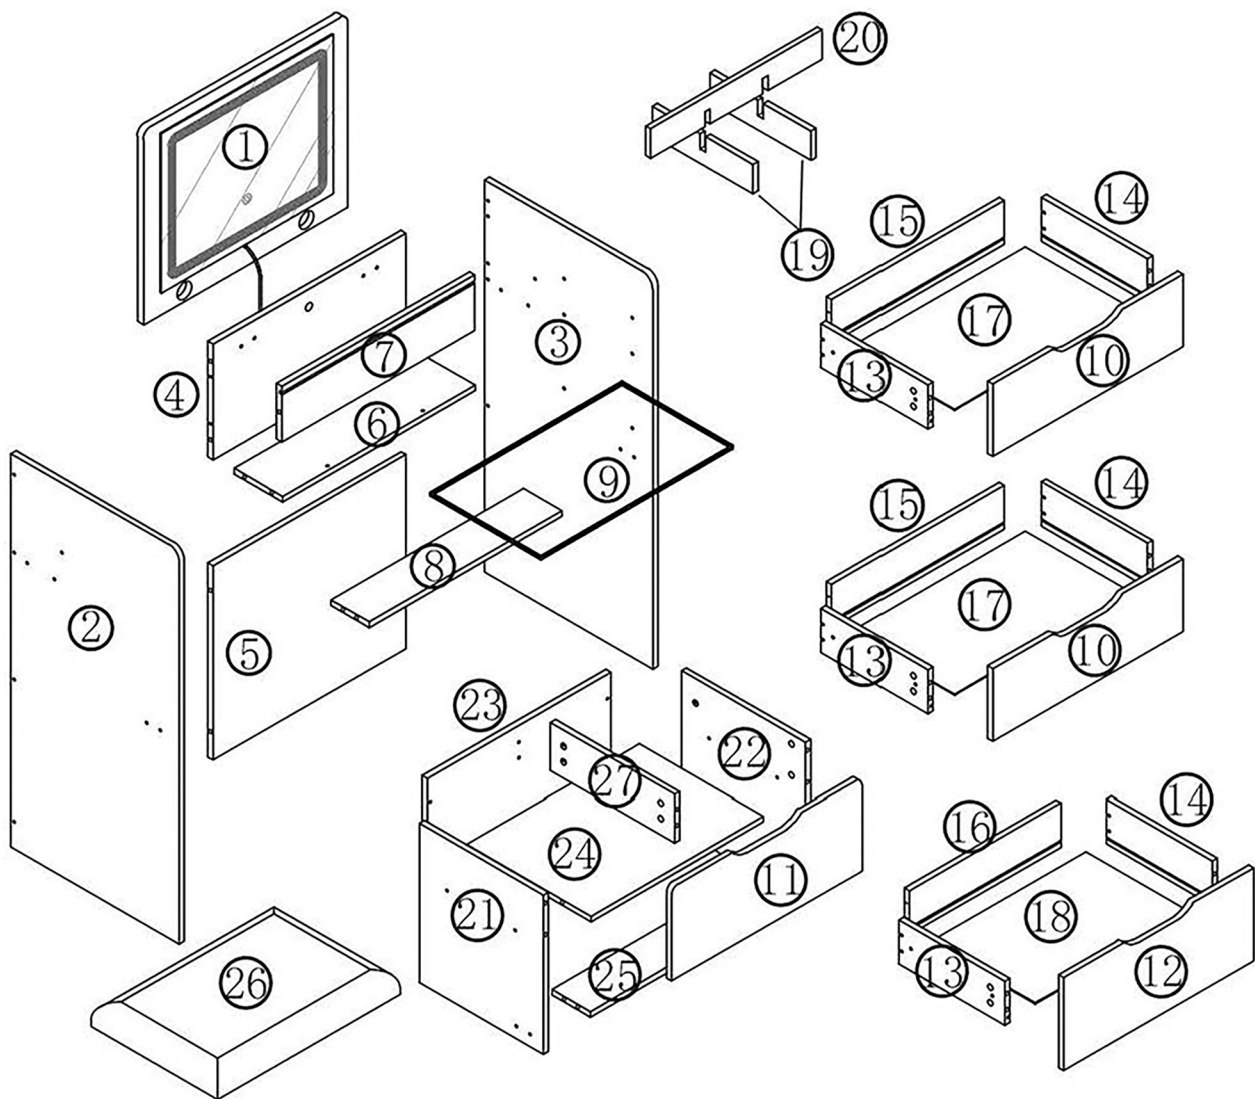





Parts List

① Drawing board	X 1	② Left panel	X 1	③ Right panel	X 1	④ Lower back panel	X 1	⑤ Lower back panel	X 1	⑥ Laminate	X 1
⑦ Partition	X 1	⑧ Pull strip	X 1	⑨ Layered glass	X 1	⑩ Upper drawing surface(narrow)	X 2	⑪ Fake drawing surface (wide)	X 1	⑫ Lower drawing surface (wide)	X 1
⑬ Left pumping side	X 3	⑭ Right side	X 3	⑮ Top draw	X 2	⑯ Top and bottom	X 1	⑰ Top and bottom	X 2	⑱ Bottom draw	X 1
⑲ Lattice vertical board	X 2	⑳ Lattice horizontal	X 1	㉑ Left side of the makeup stool	X 1	㉒ Right side of the makeup stool	X 1	㉓ Makeup stool back panel	X 1	㉔ Makeup stool laminate	X 1
㉕ Makeup stool pull strip	X 1	㉖ Makeup stool cushion	X 1	㉗ Makeup stool partition	X 1						


Detailed description of the main components, please read carefully

D (Hinge) Installation Instructions



Install the hinge with screw H

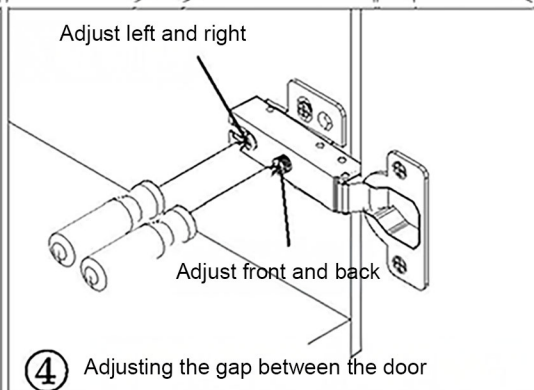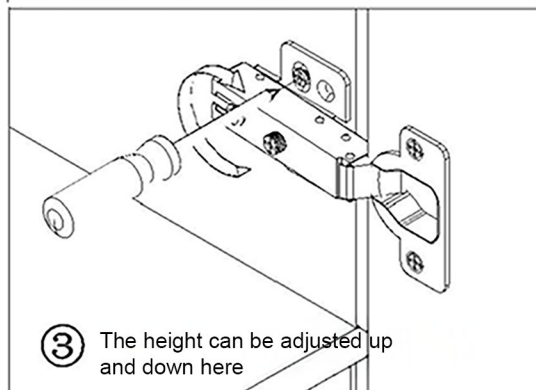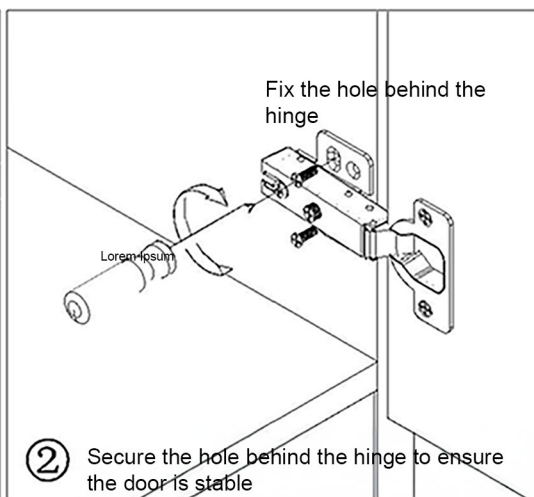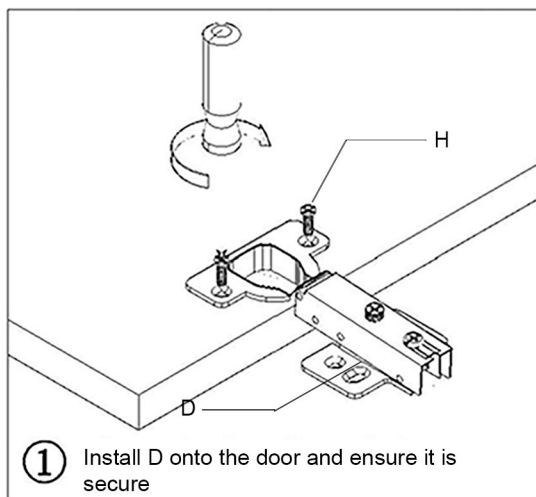

2-in-1 Assembly Instructions (B)

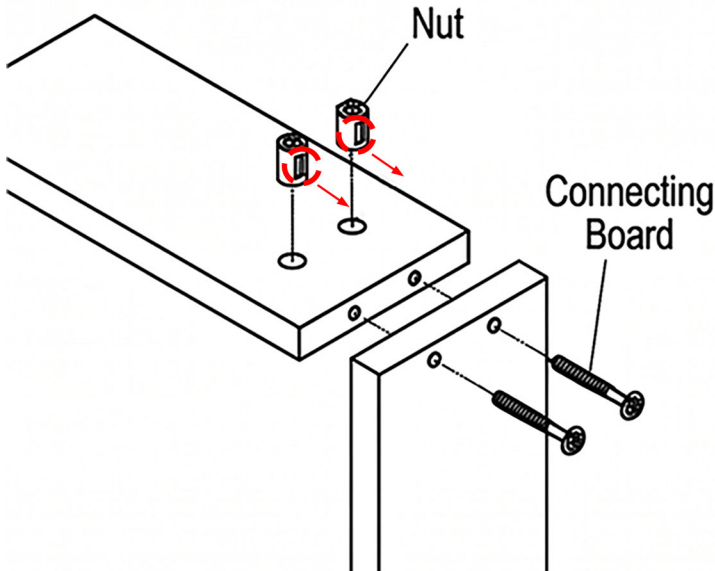


1. Insert the rubber nut into the large hole.
2. Align the side hole of the insert with the screw hole.
3. Insert the long screw through the side hole.
4. Tighten the screw until secure.

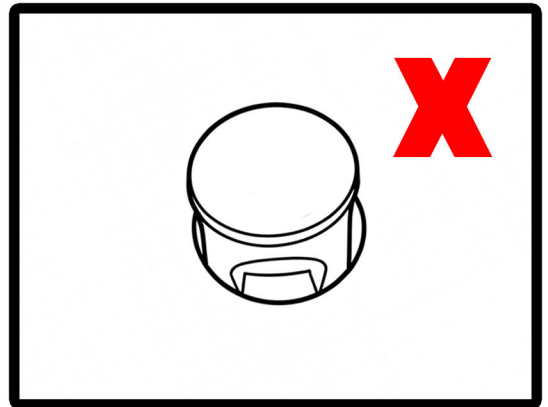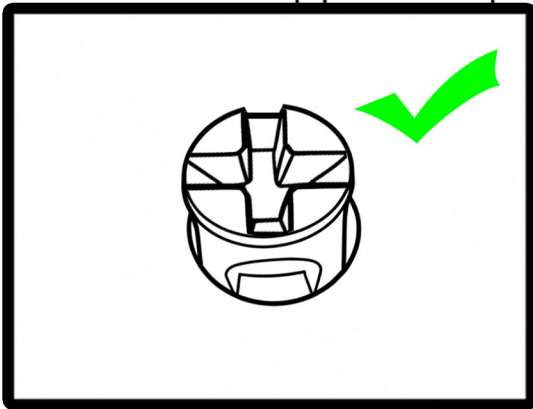

IMPORTANT ORIENTATION

Make sure the cross (+) slot on the rubber nut is facing up / outward.

If not aligned first, it cannot be adjusted later.

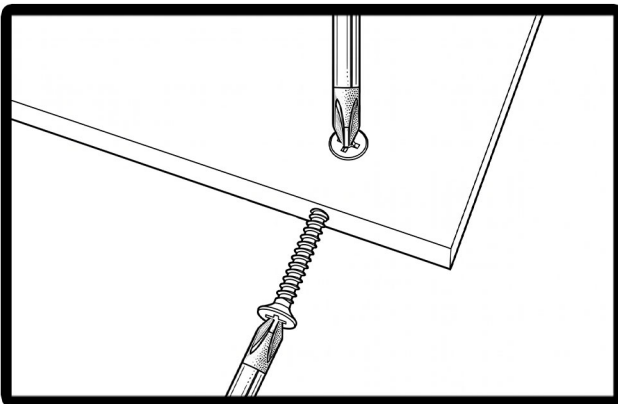


Tip

If the insert rotates, hold it in place with a screwdriver while tightening the screw with another screwdriver.

Important

Make sure the insert is fully seated.
Do not overtighten.

Installation Guide: Threaded Rod, Latch, Pre-drilled Hole (A)

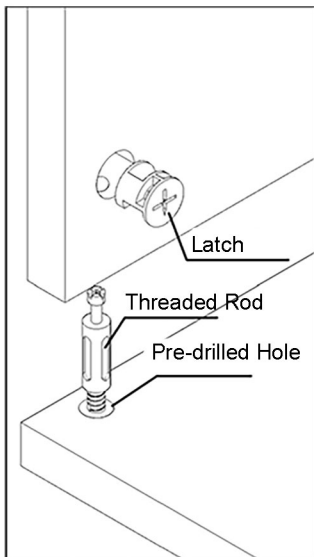

1. Screw the Threaded Rod into the Pre-drilled Hole
2. Insert the installed Threaded Rod into the corresponding hole of the other piece. Press Latch into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.

E (Sliding Rail) Installation Instructions


When E, use with screw **G**

1, Separate I (Sliding Rail)




The main body part

The pull-out part

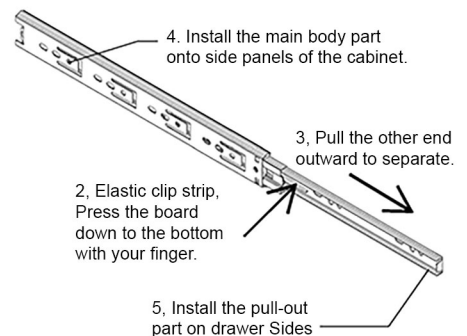




Step 1:

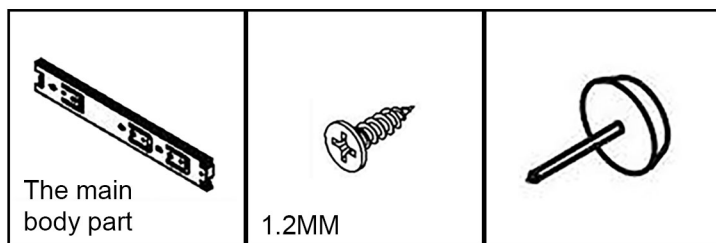

E


G

K

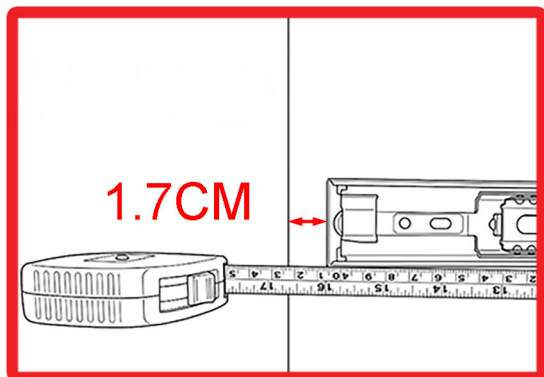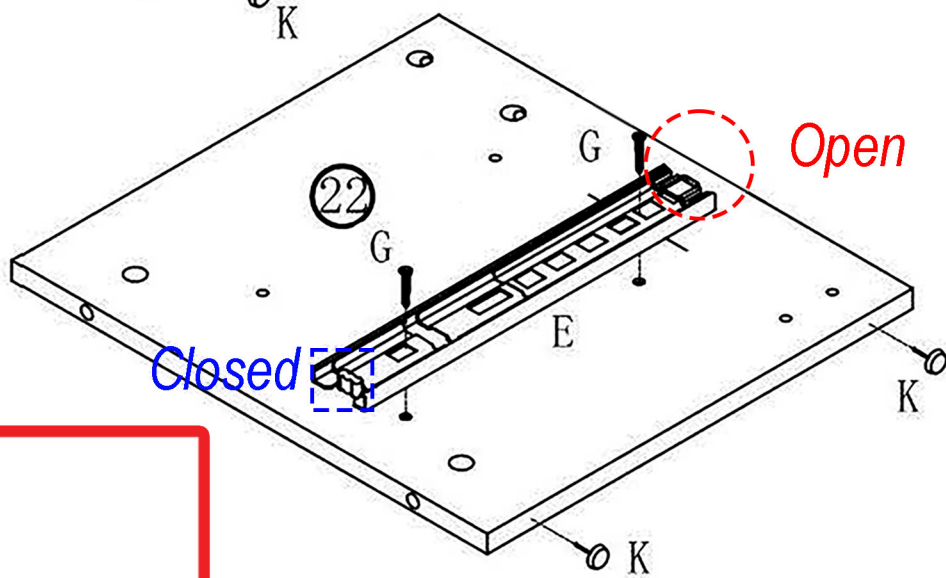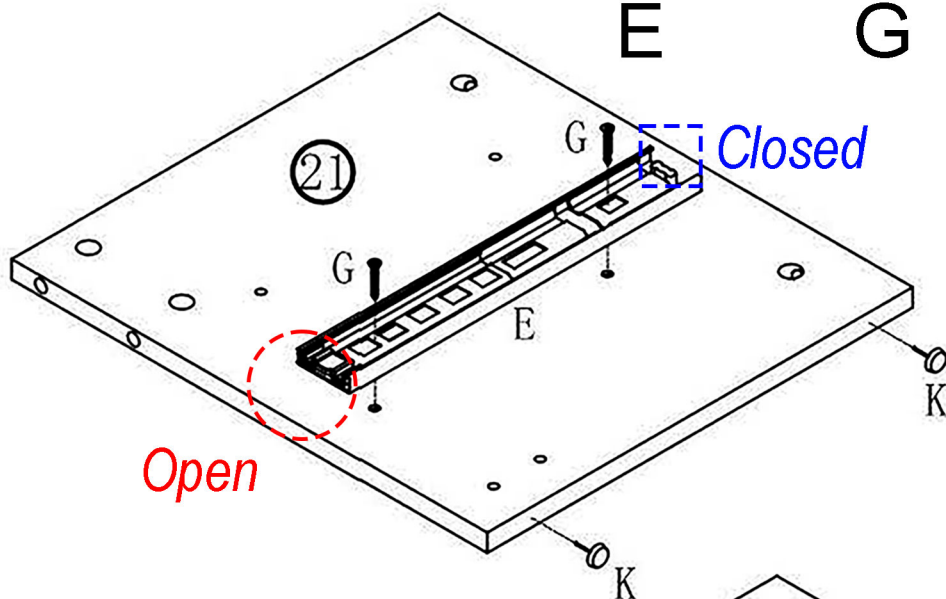


Install the E main body parts, leaving a 1.7cm gap from the edge.

Step 2:

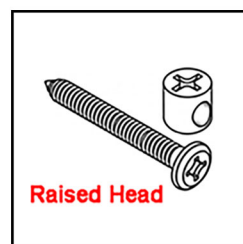


B


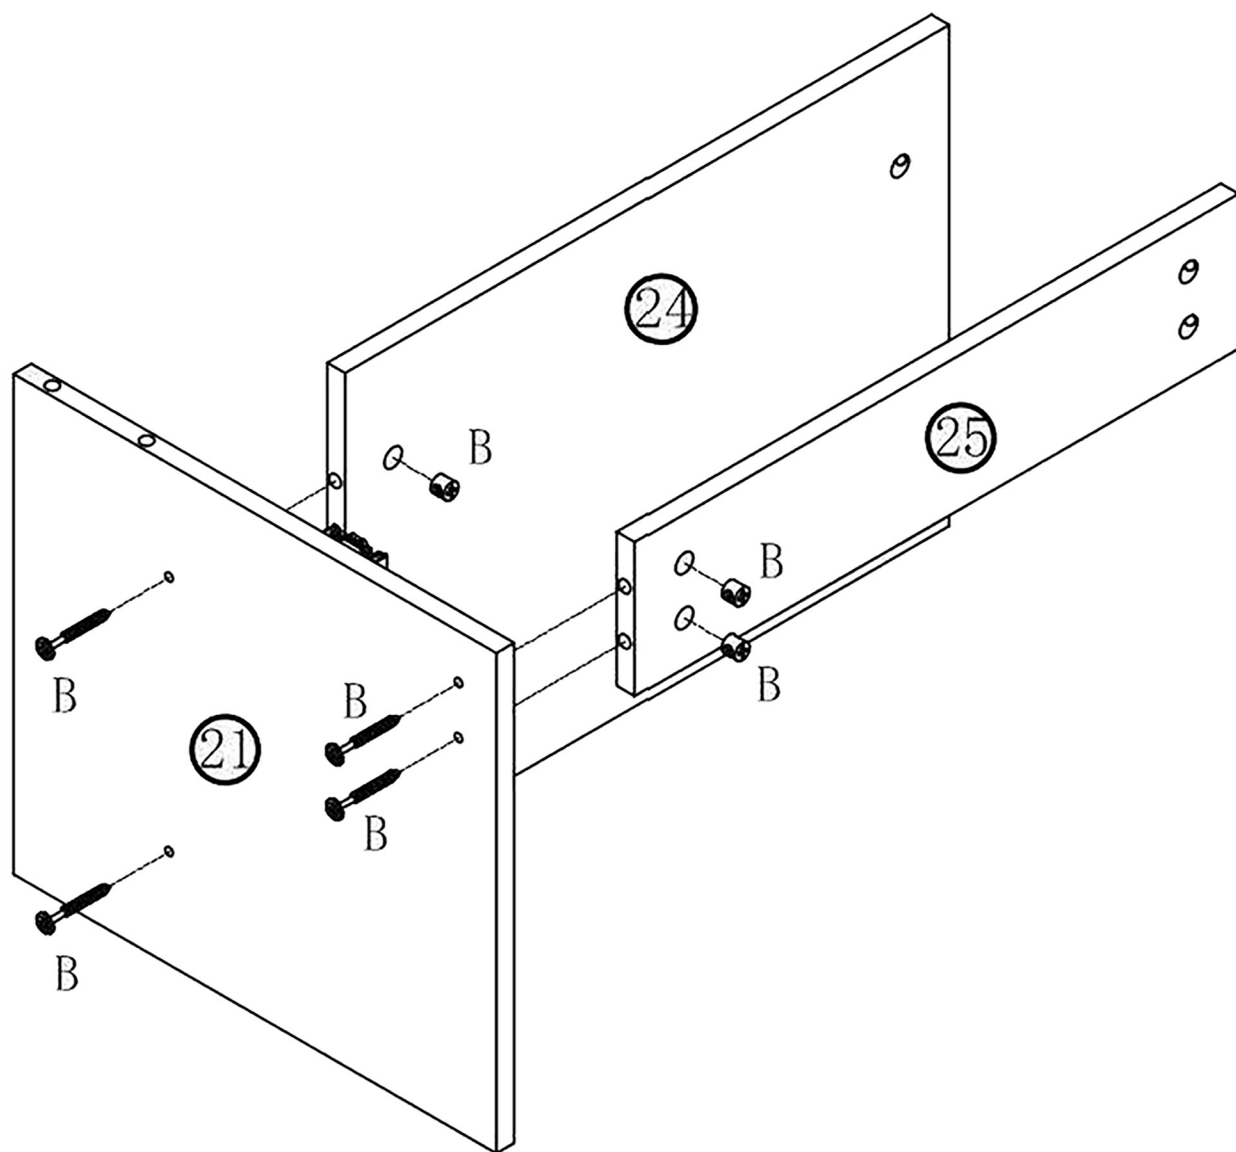





Step 4:

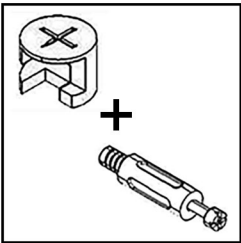

A

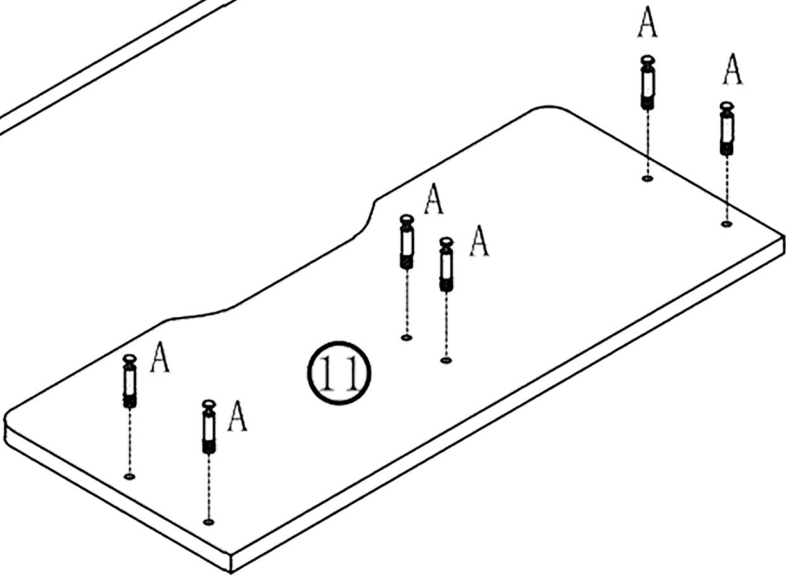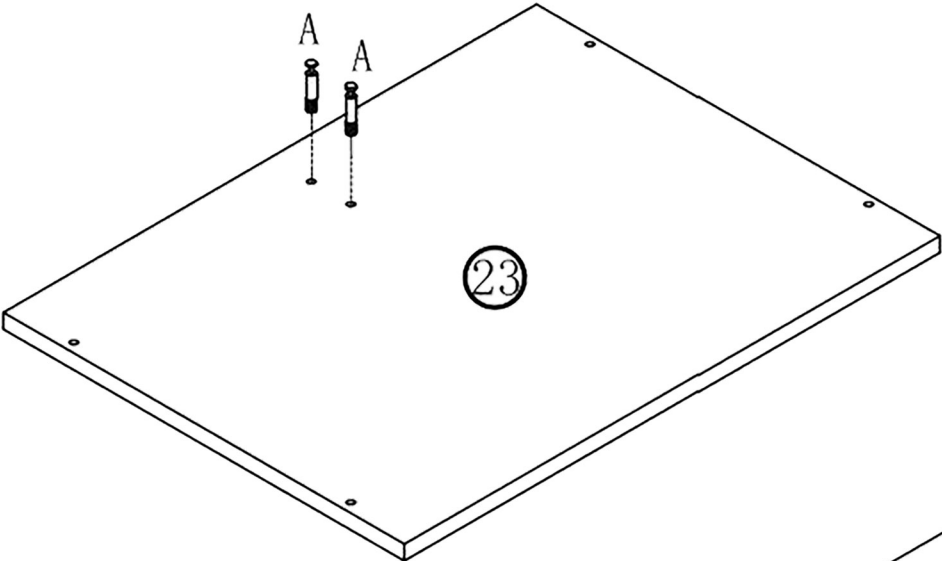


Step 5:

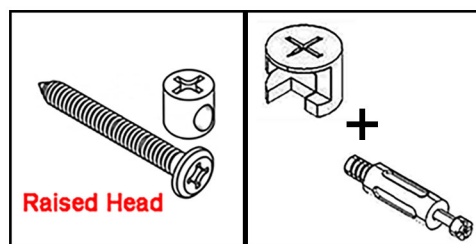


B


A

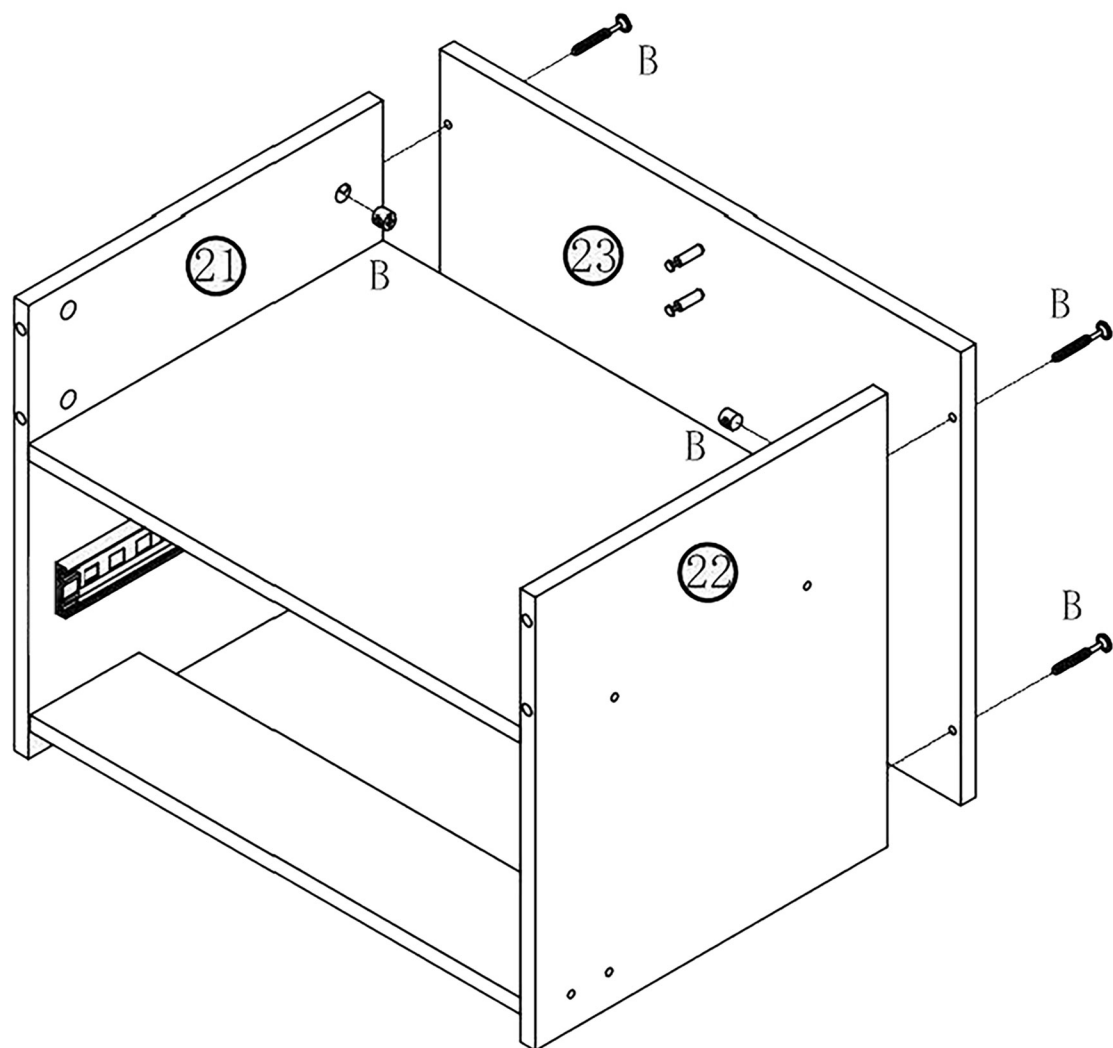


Step 6:

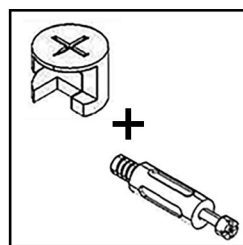


A

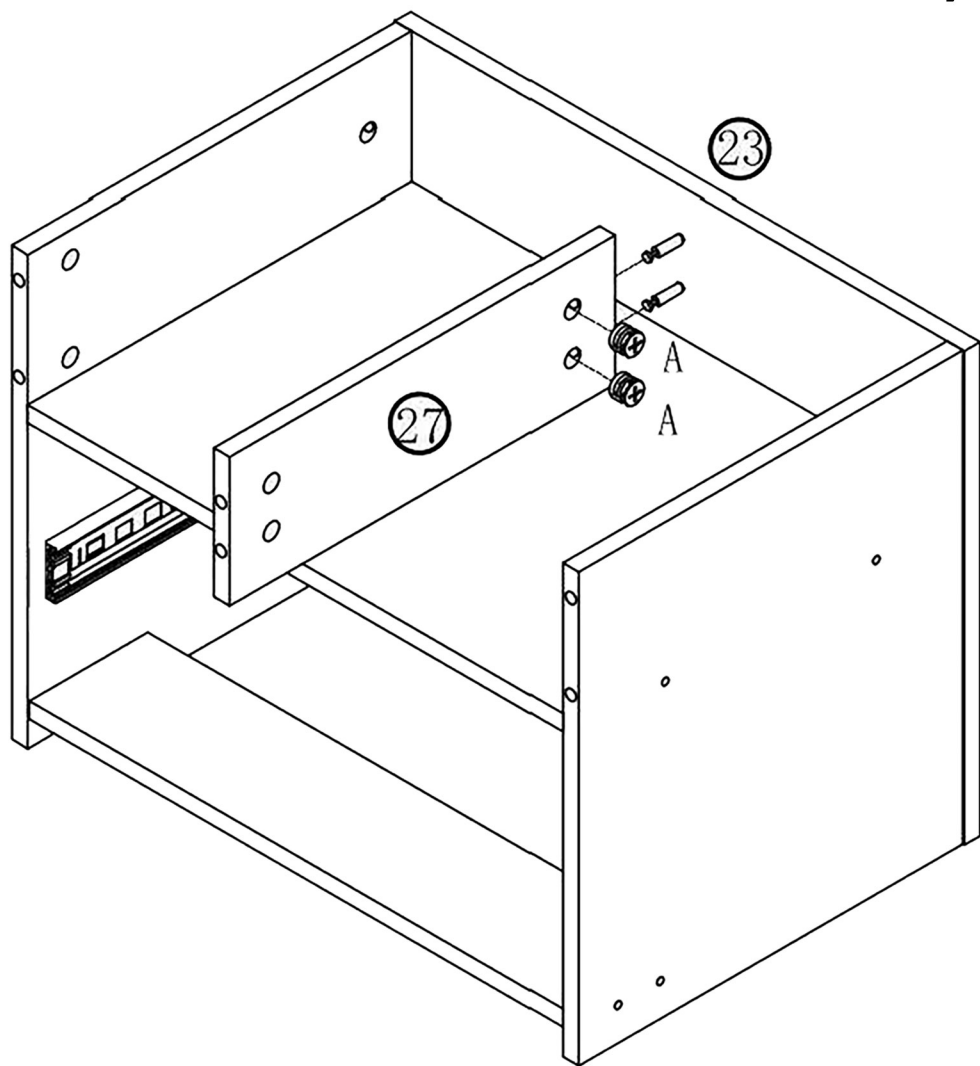


Step 7:

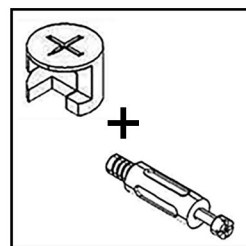


A

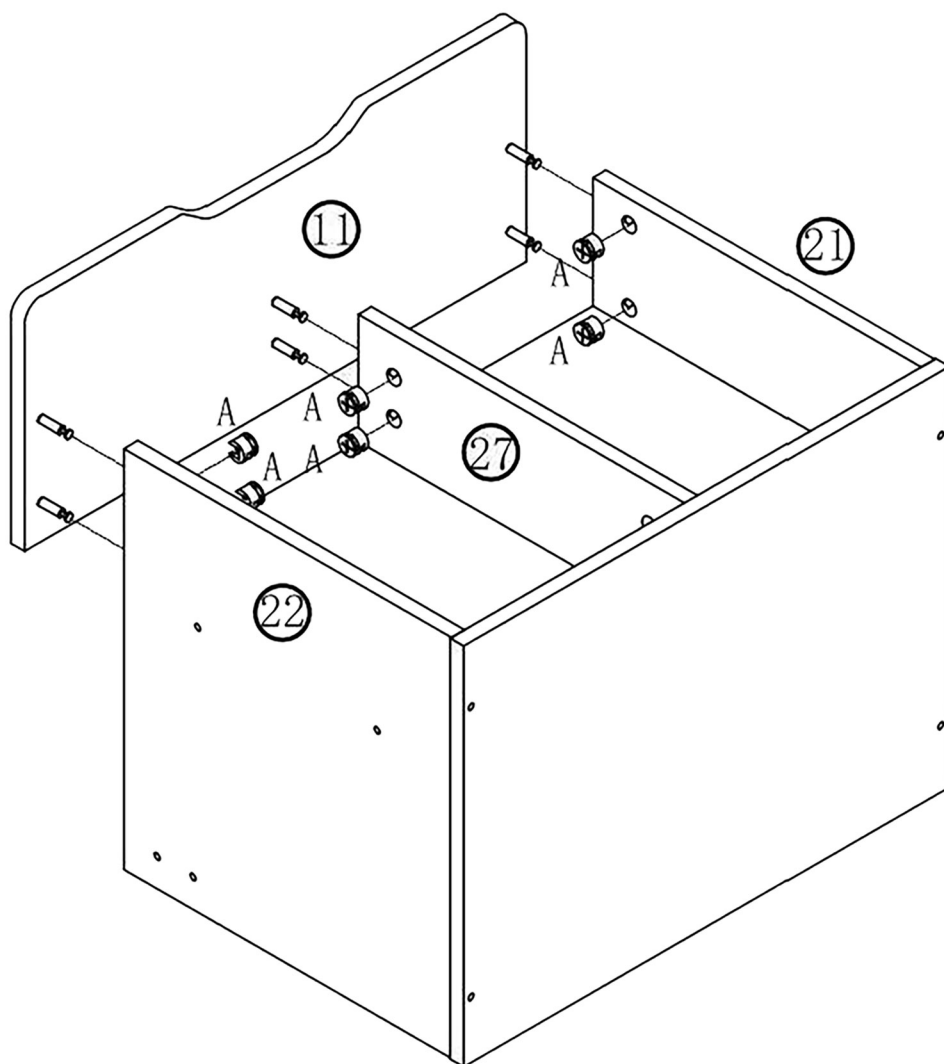


Step 8:

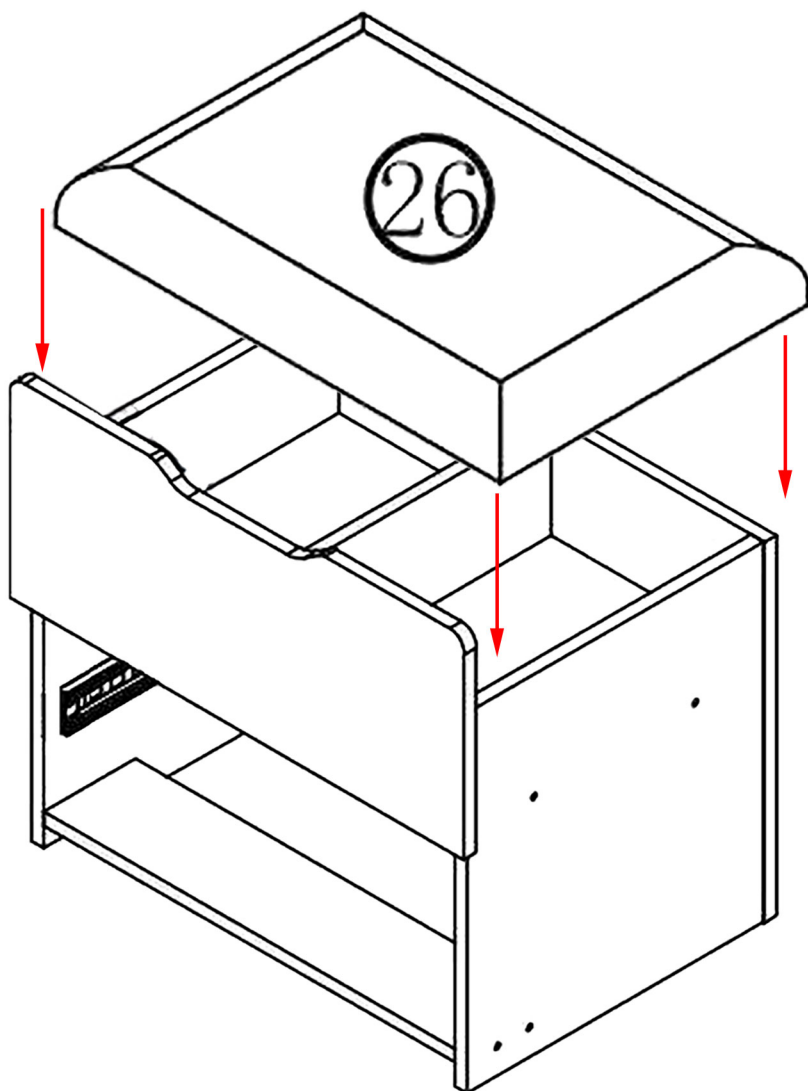


Step 9:

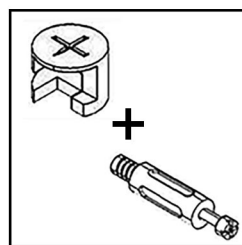


A

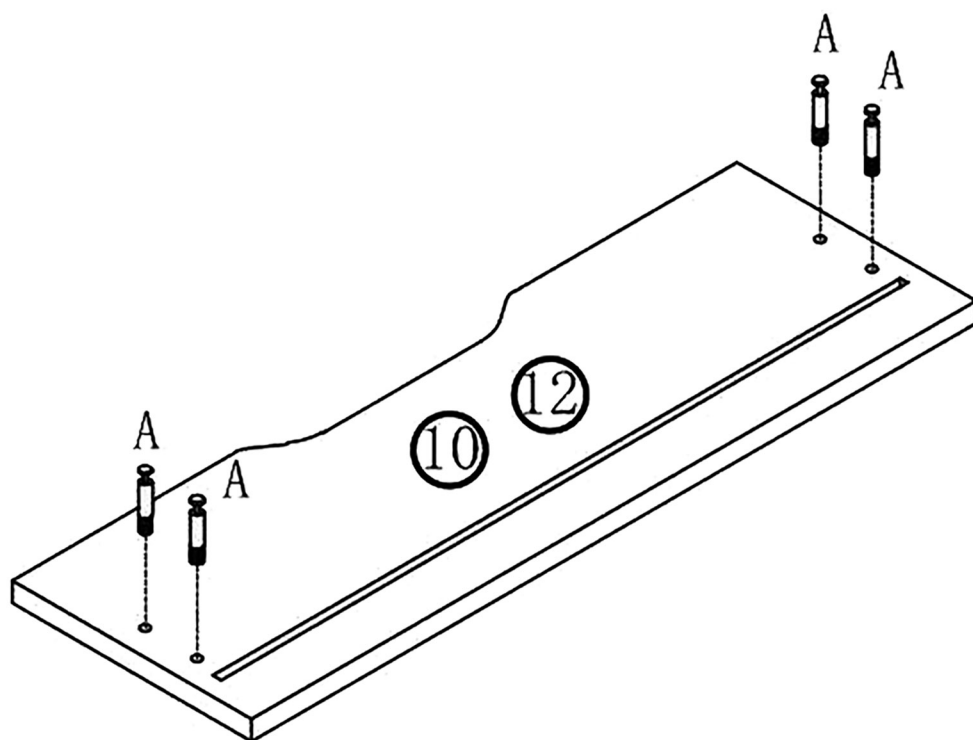

Step 10:

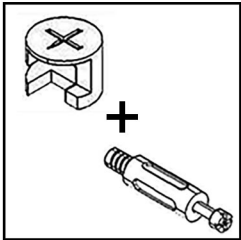


A

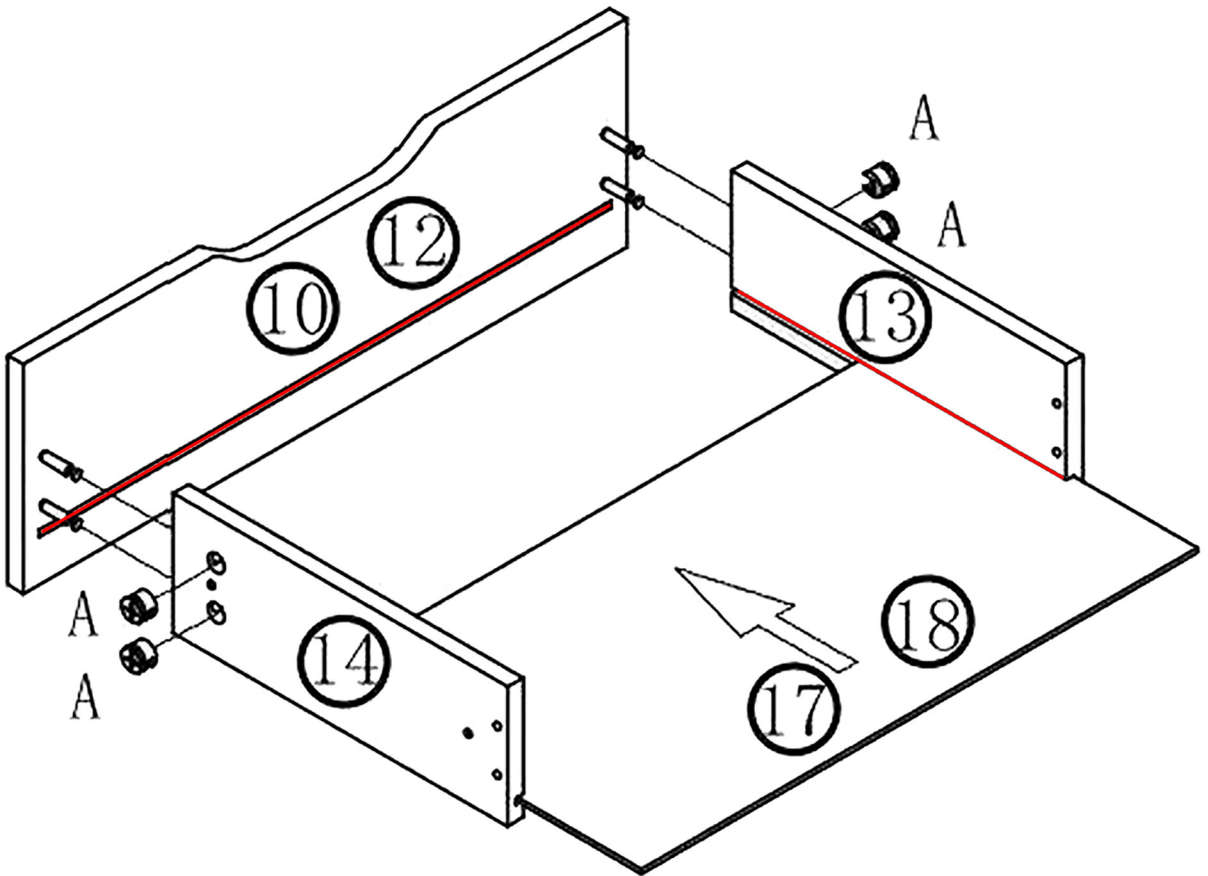


Note: Make sure all grooved edges are aligned in the same position. Pay attention to the panel orientation.


Step 11:

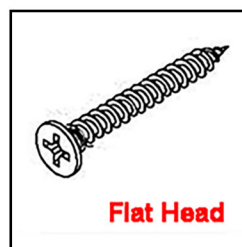


I

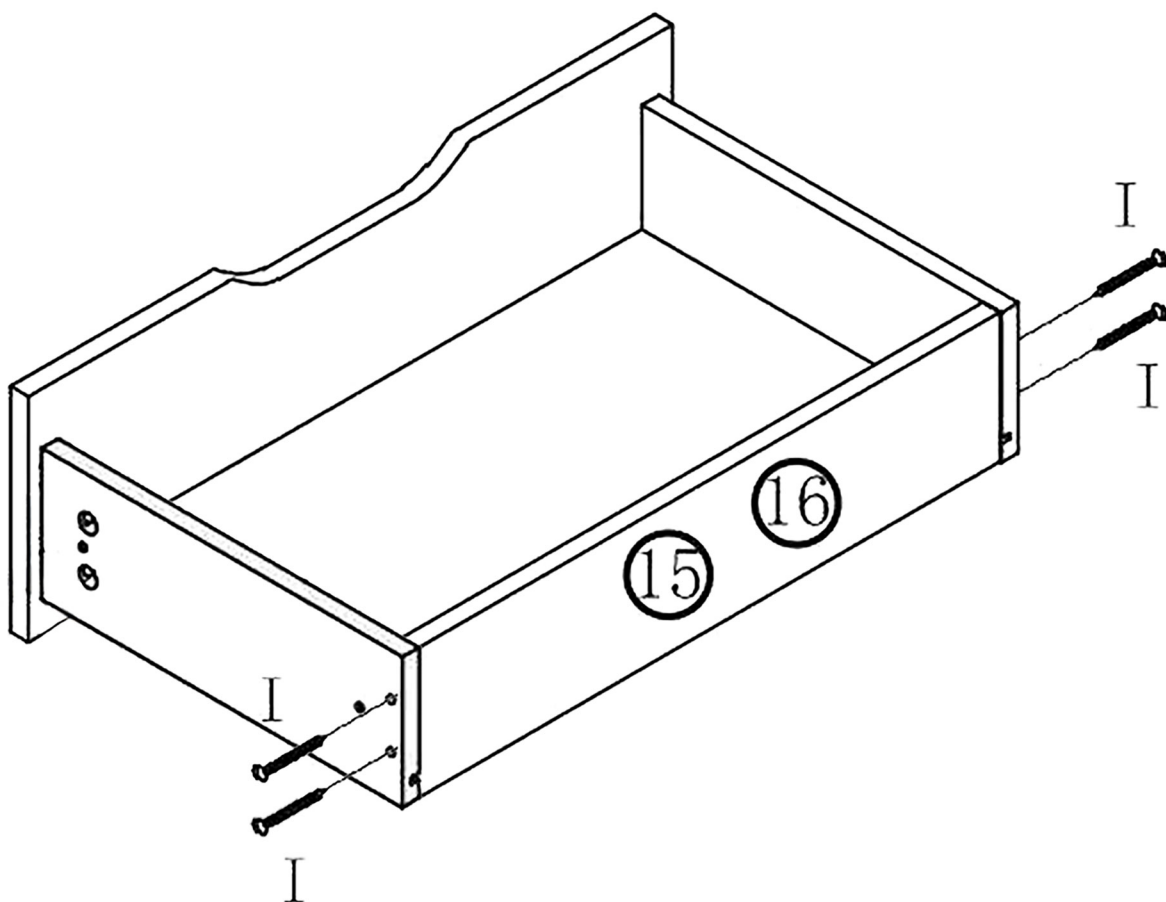

Step 12:




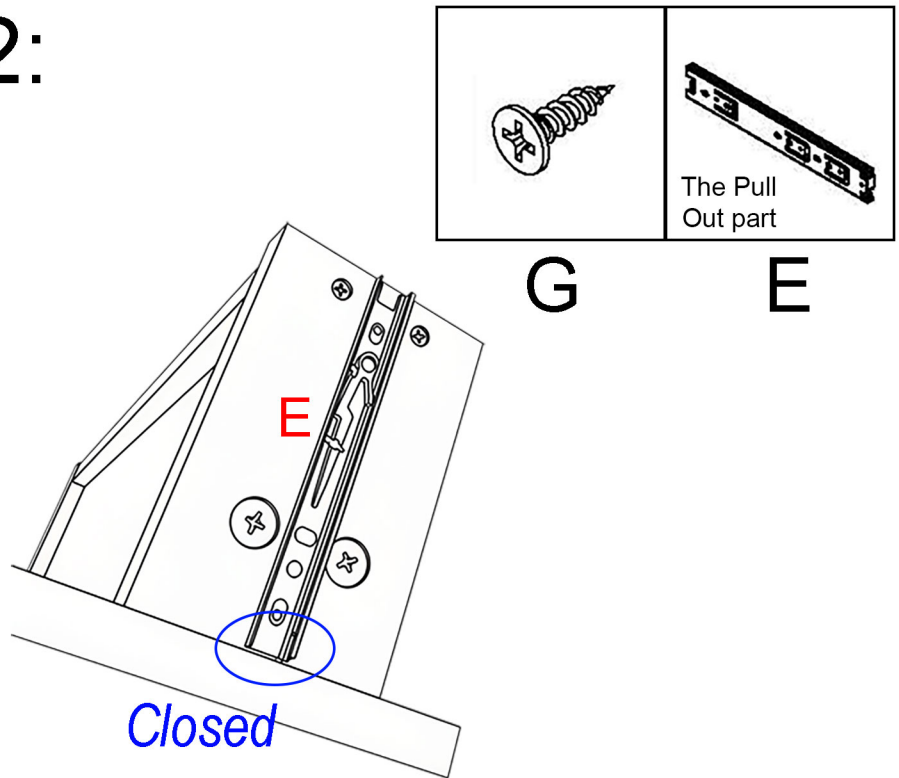


Note: The E pull-out part should be positioned with the closed side close to Drawer Front.

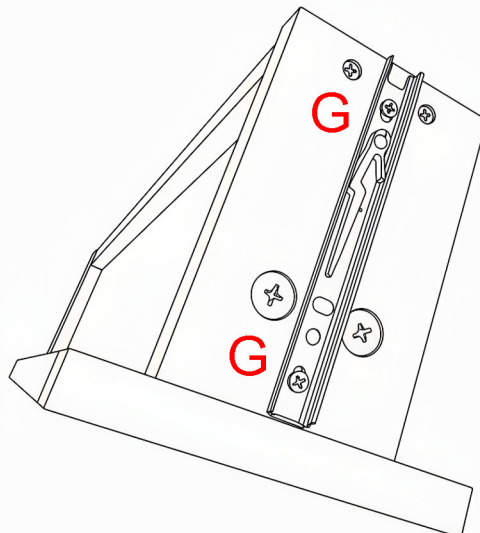


Then secure it with G.

Step 13:

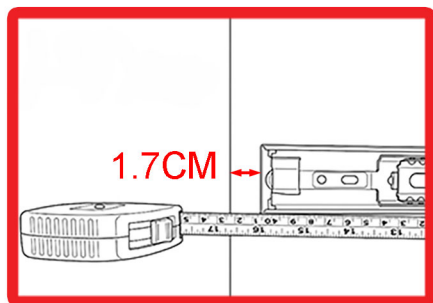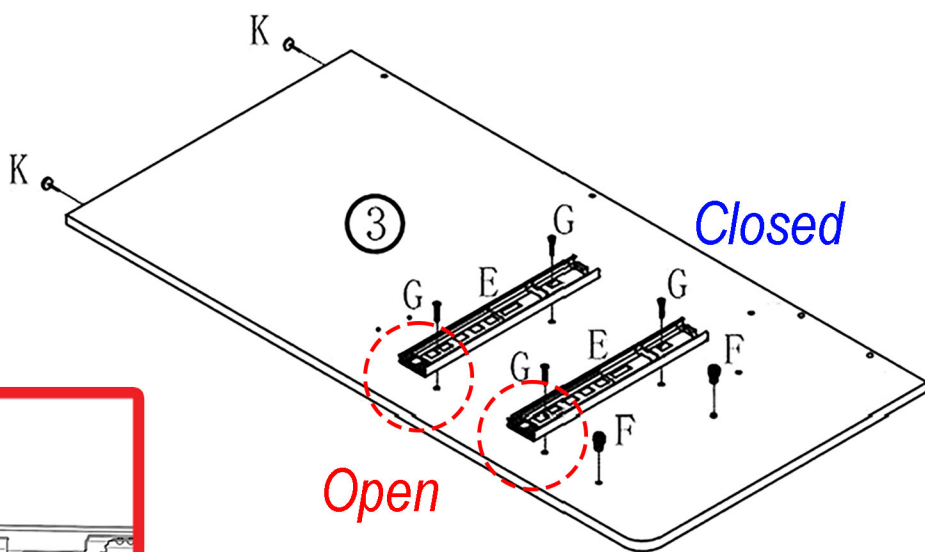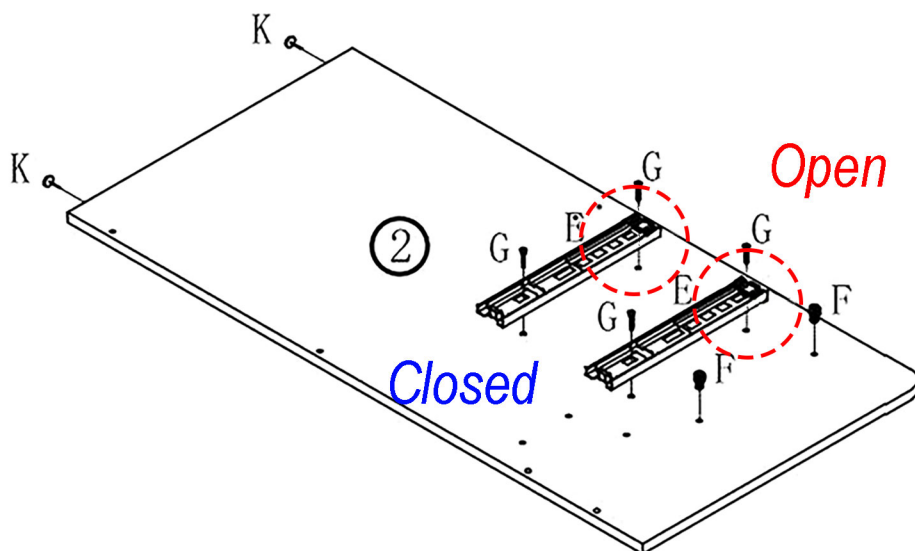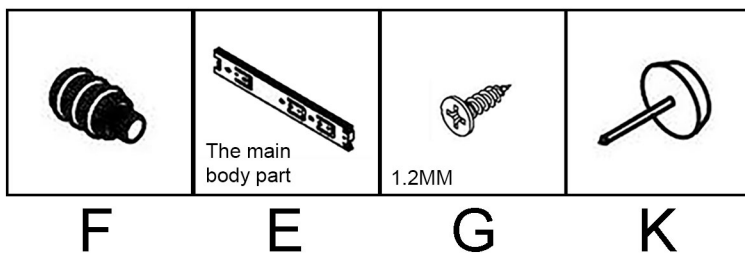


Install the E main body parts, leaving a 1.7cm gap from the edge.


Step 14:

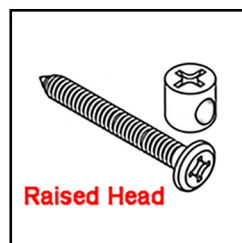


B

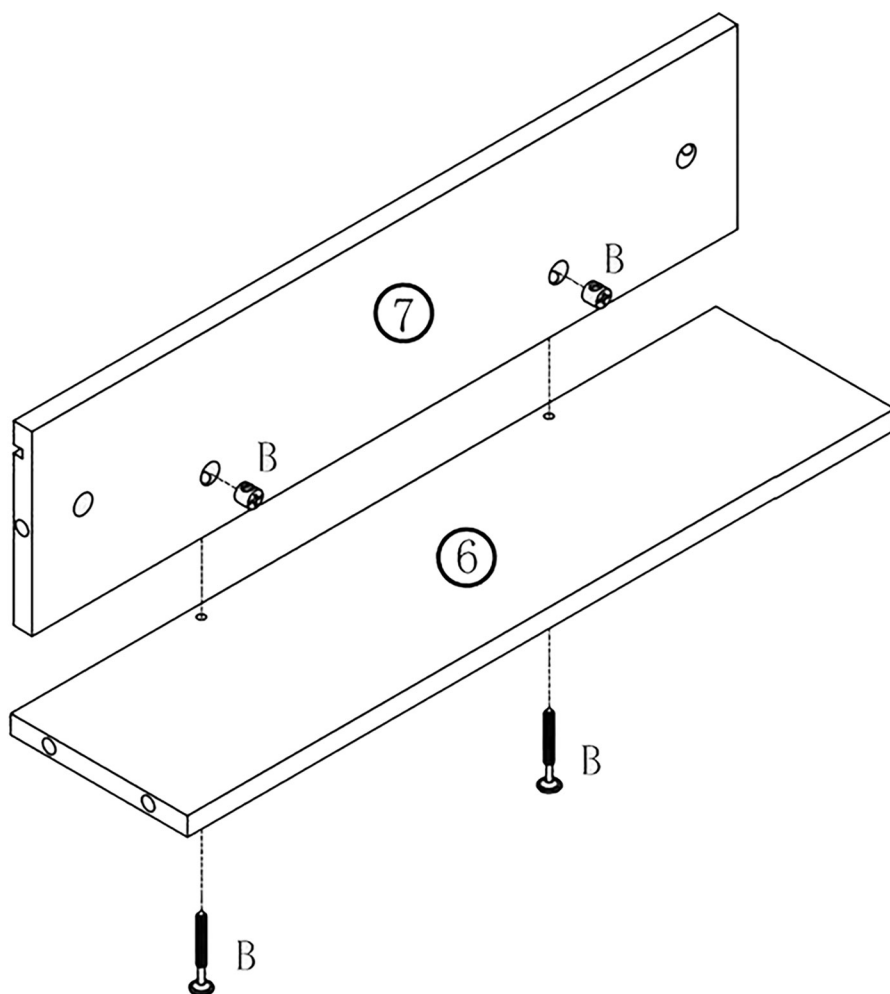


Step 15:

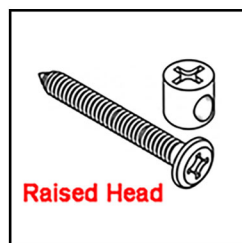


B

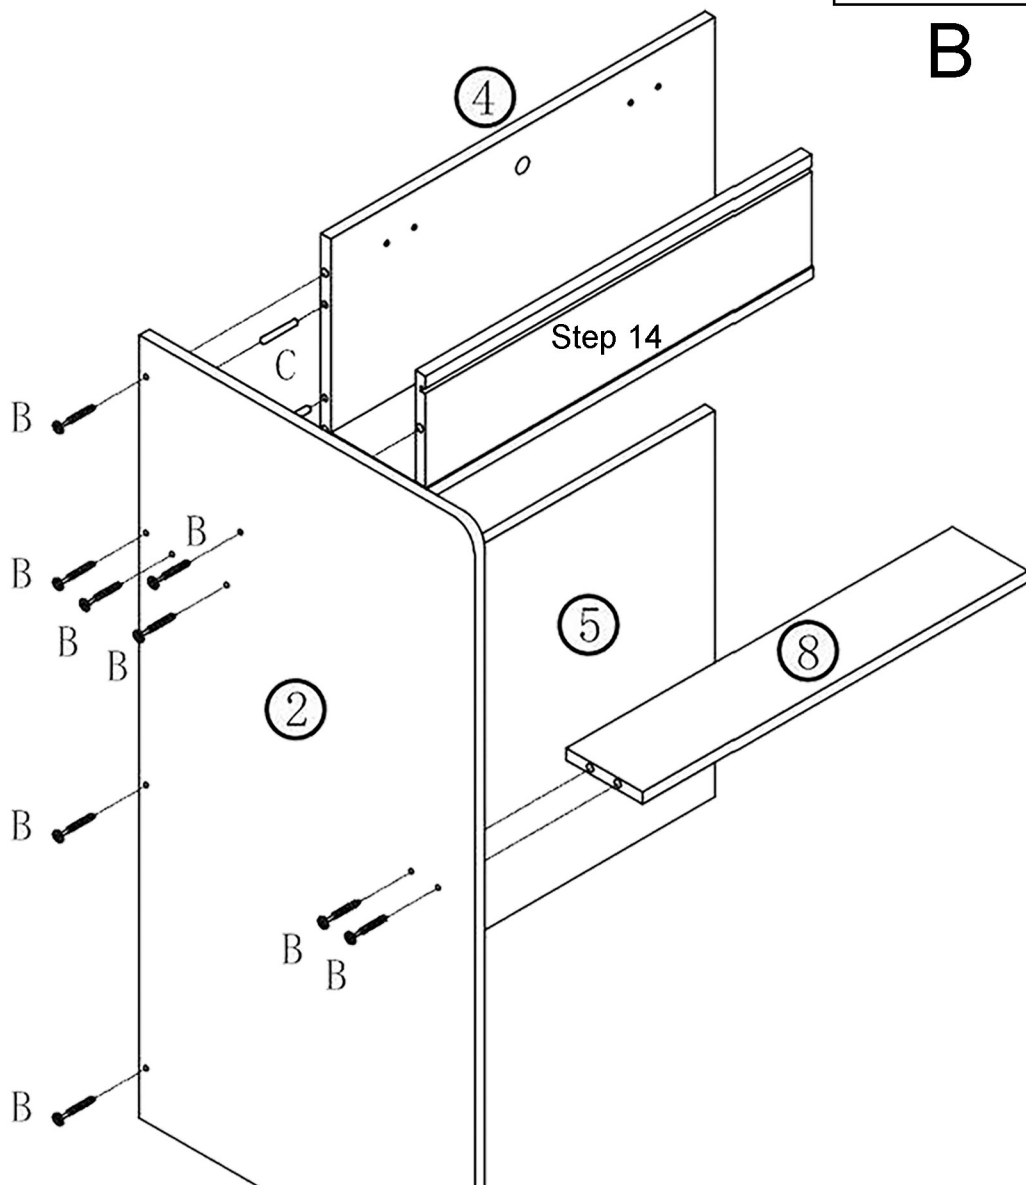


Step 16:

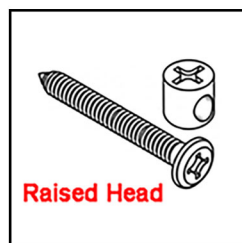

B

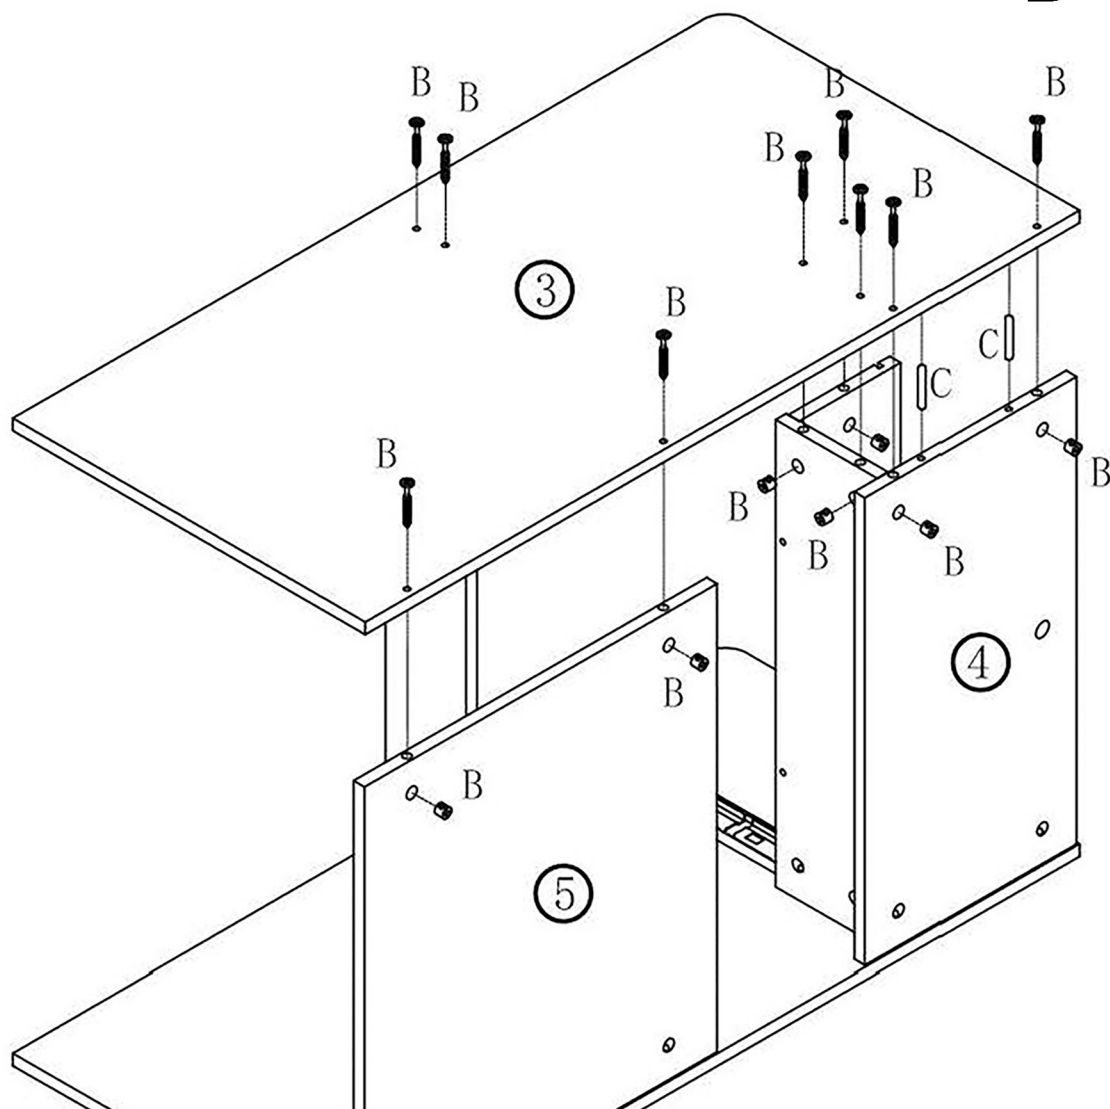


Step 17:


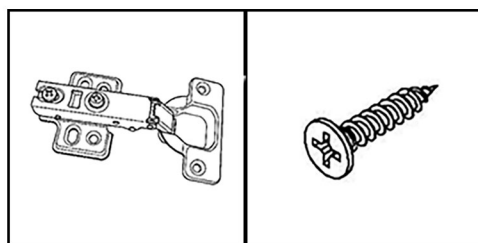


D

H

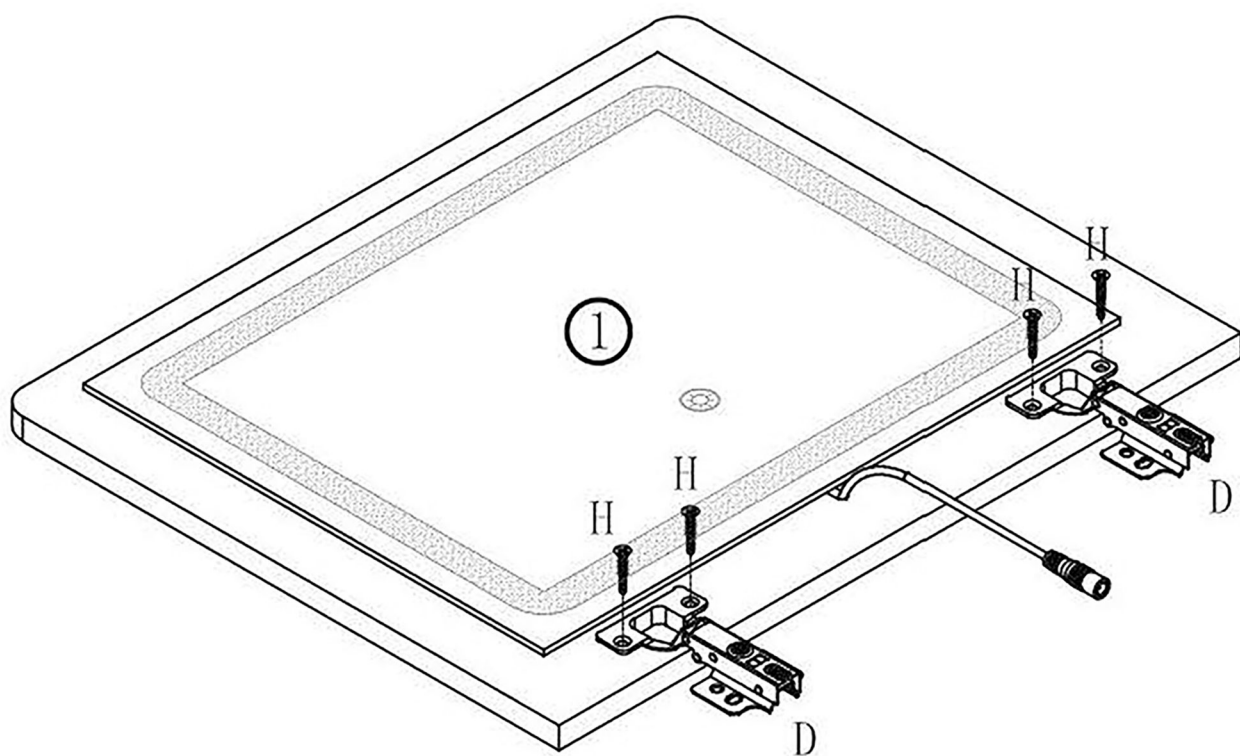


Step 18:

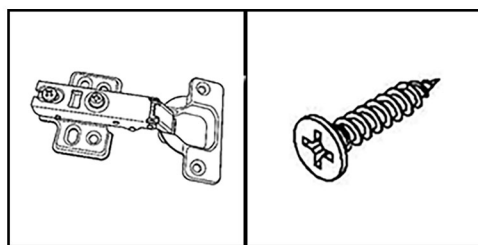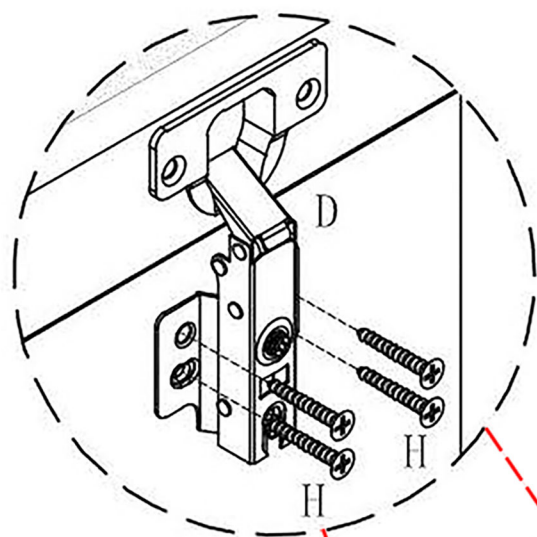


D


H

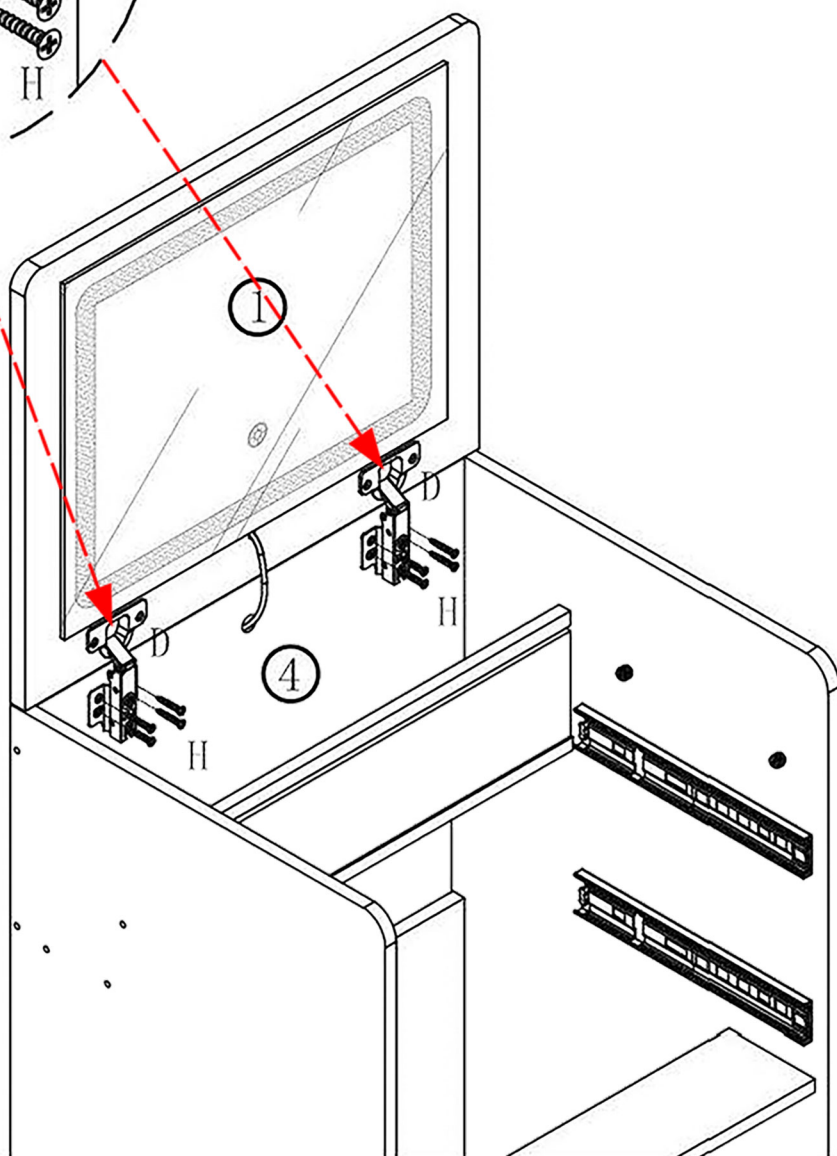


Step 19:

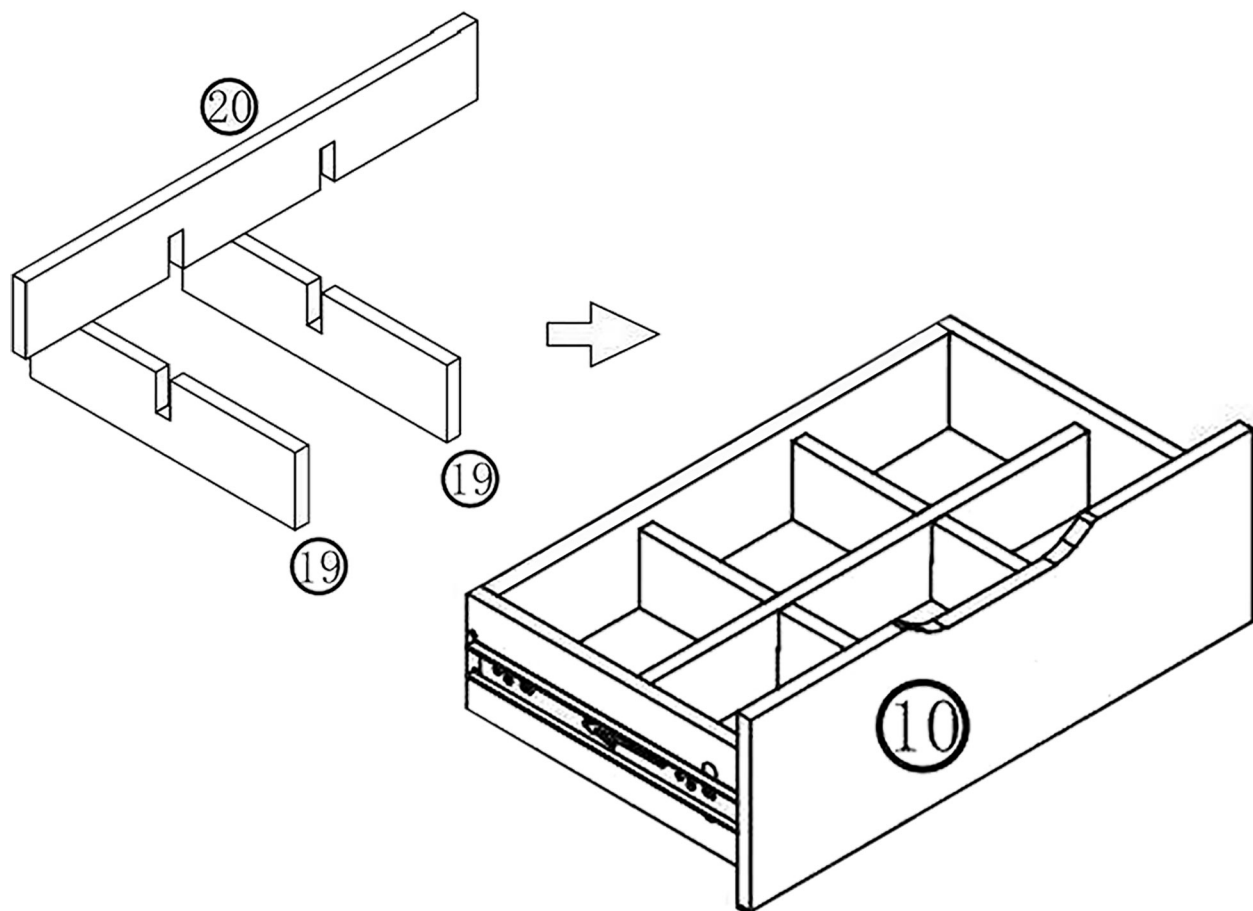


Step 20:

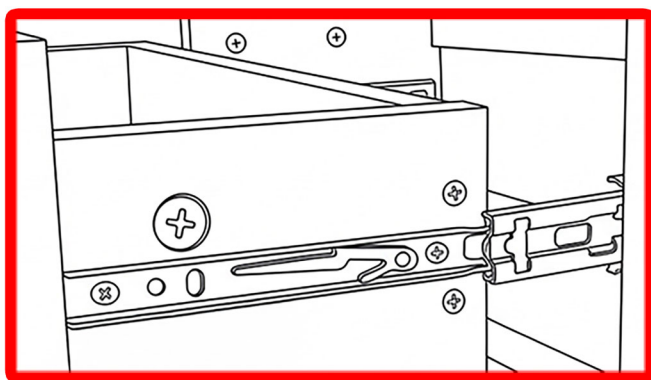


Insert into the slots on both sides at the same time.

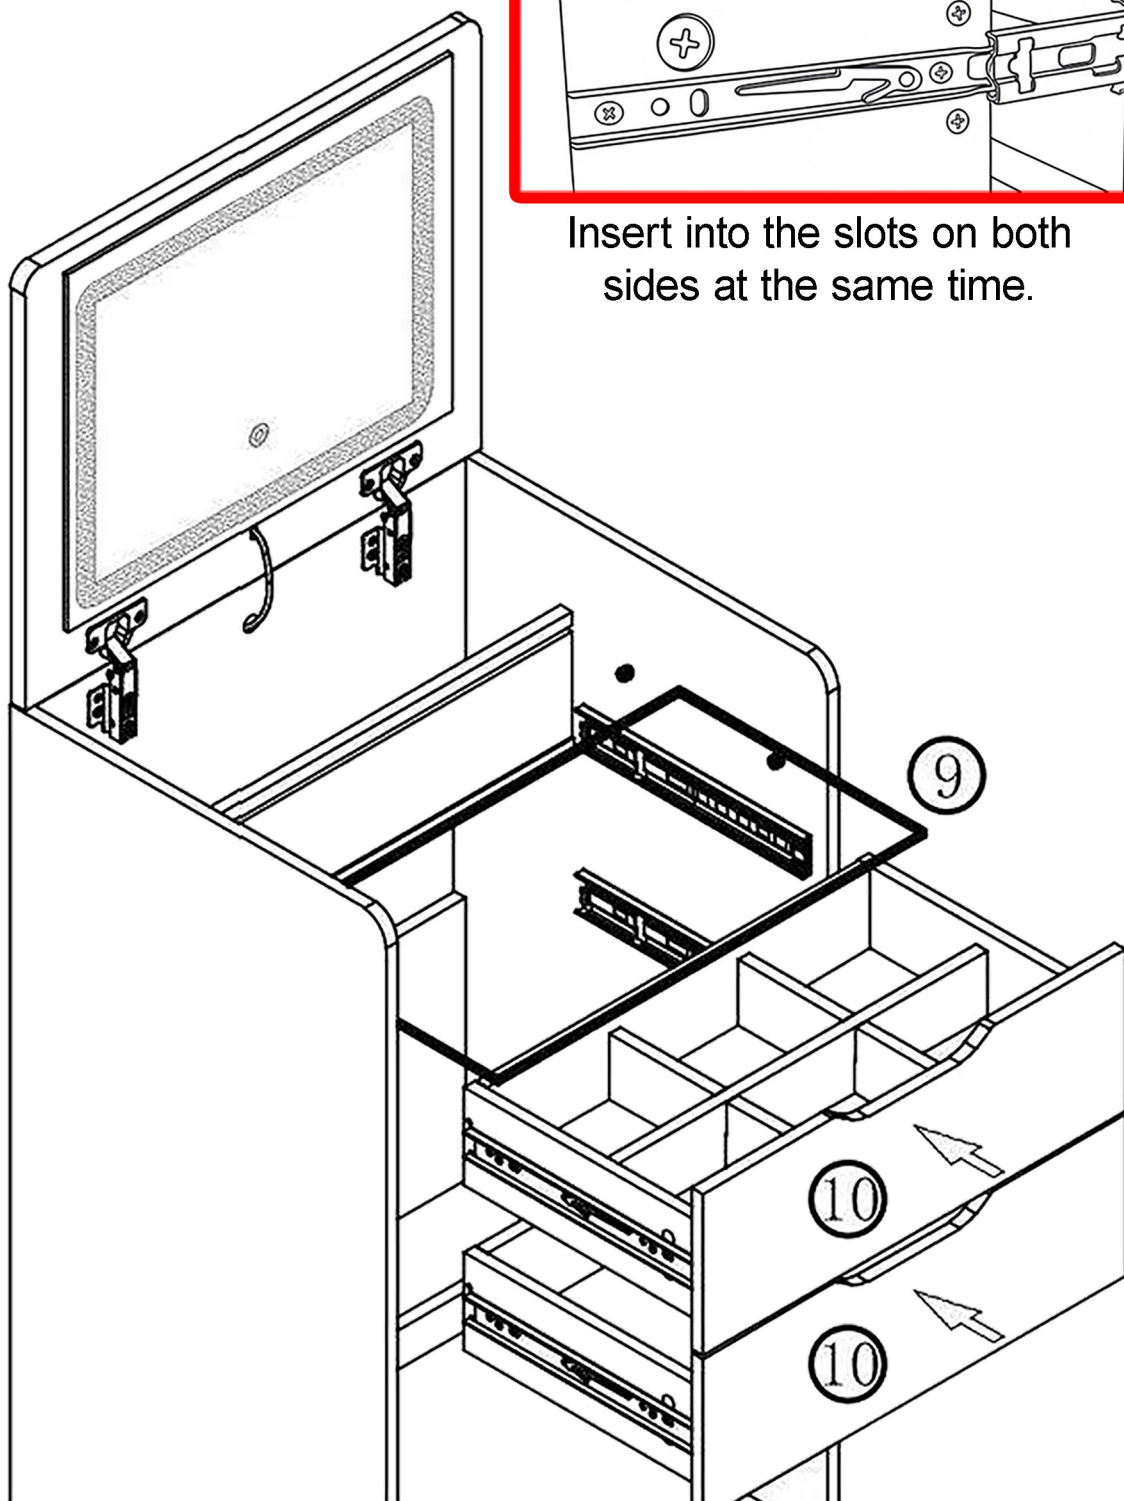

Step 21:

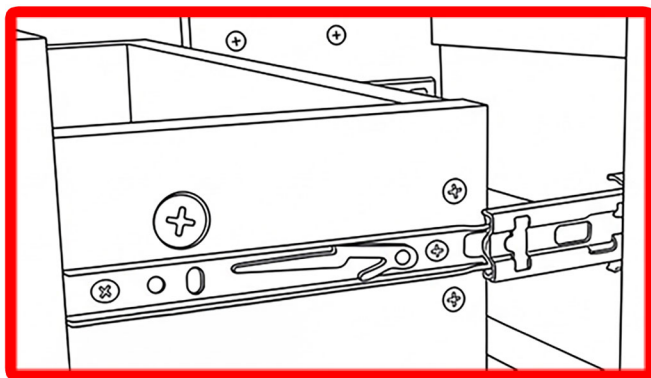

Insert into the slots on both sides at the same time.

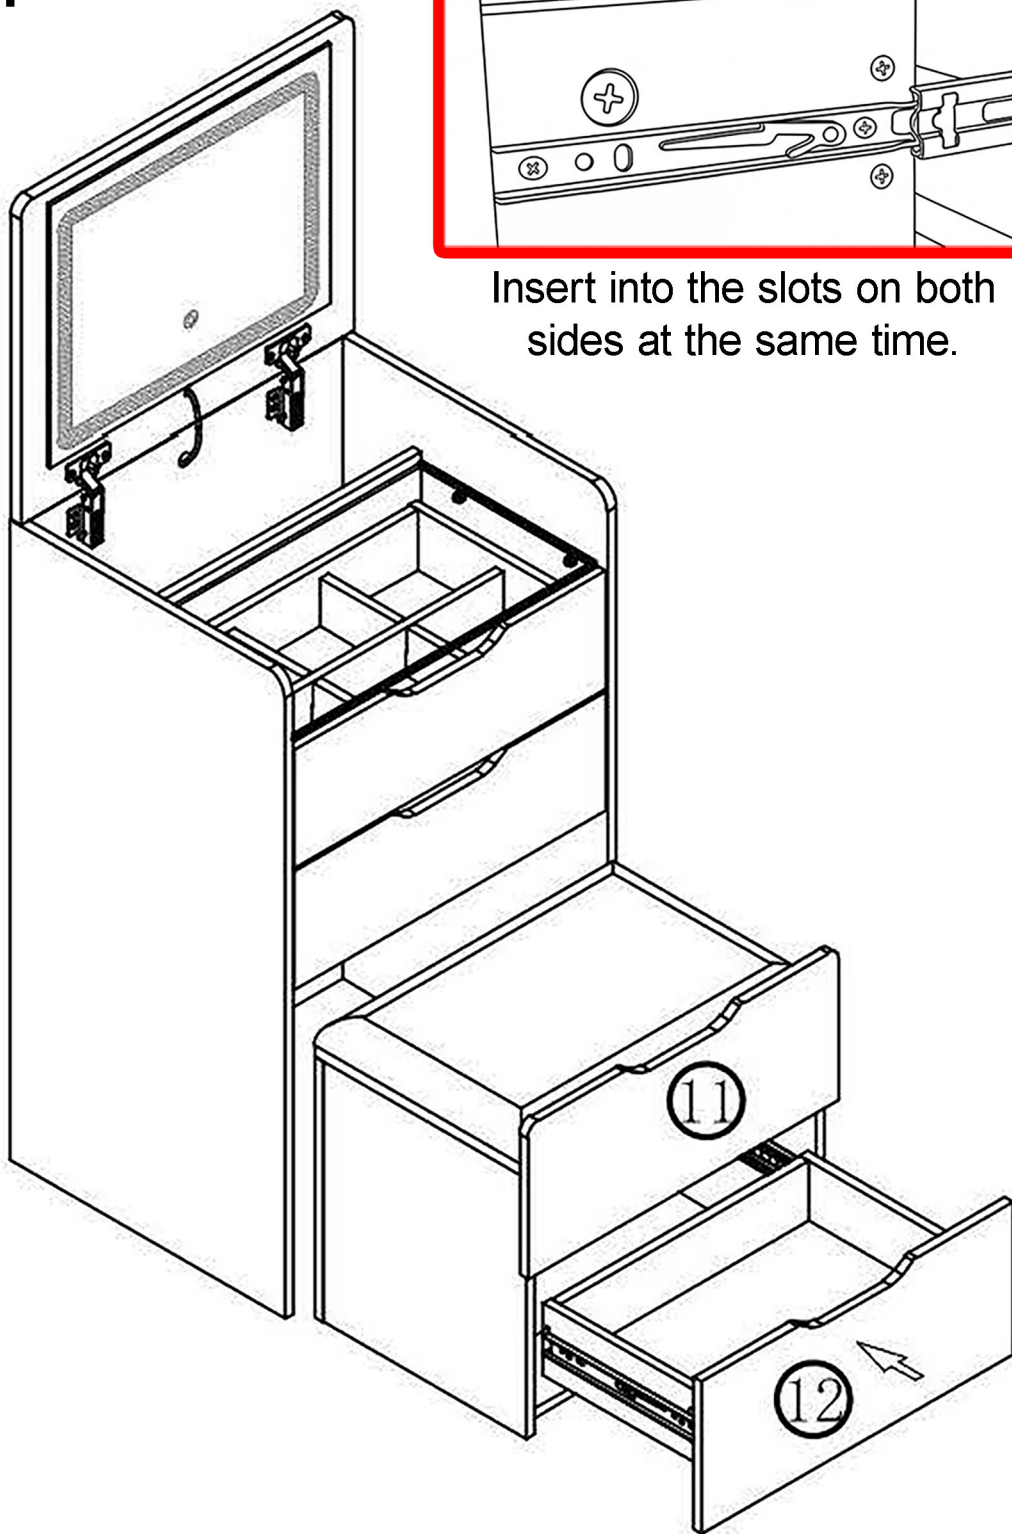

Installation Finished

