

TV011

Installation Instruction


Please read this instruction manual carefully before installation and use.

Assembly notes:


- 1. First, make sure that all panels and parts are not damaged or missing.
- 2. During the installation process, be careful not to bump or scratch the panel surface.
- 3. Please read the instructions carefully before installation and install in order.
- 4. Please use each screw accessory strictly according to the instructions.
- 5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
- 6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:






- 1. After installation, check whether all parts are installed and the locks are locked.
- 2. Check the overall stability of the cabinet to see if there is any vibration.
- 3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

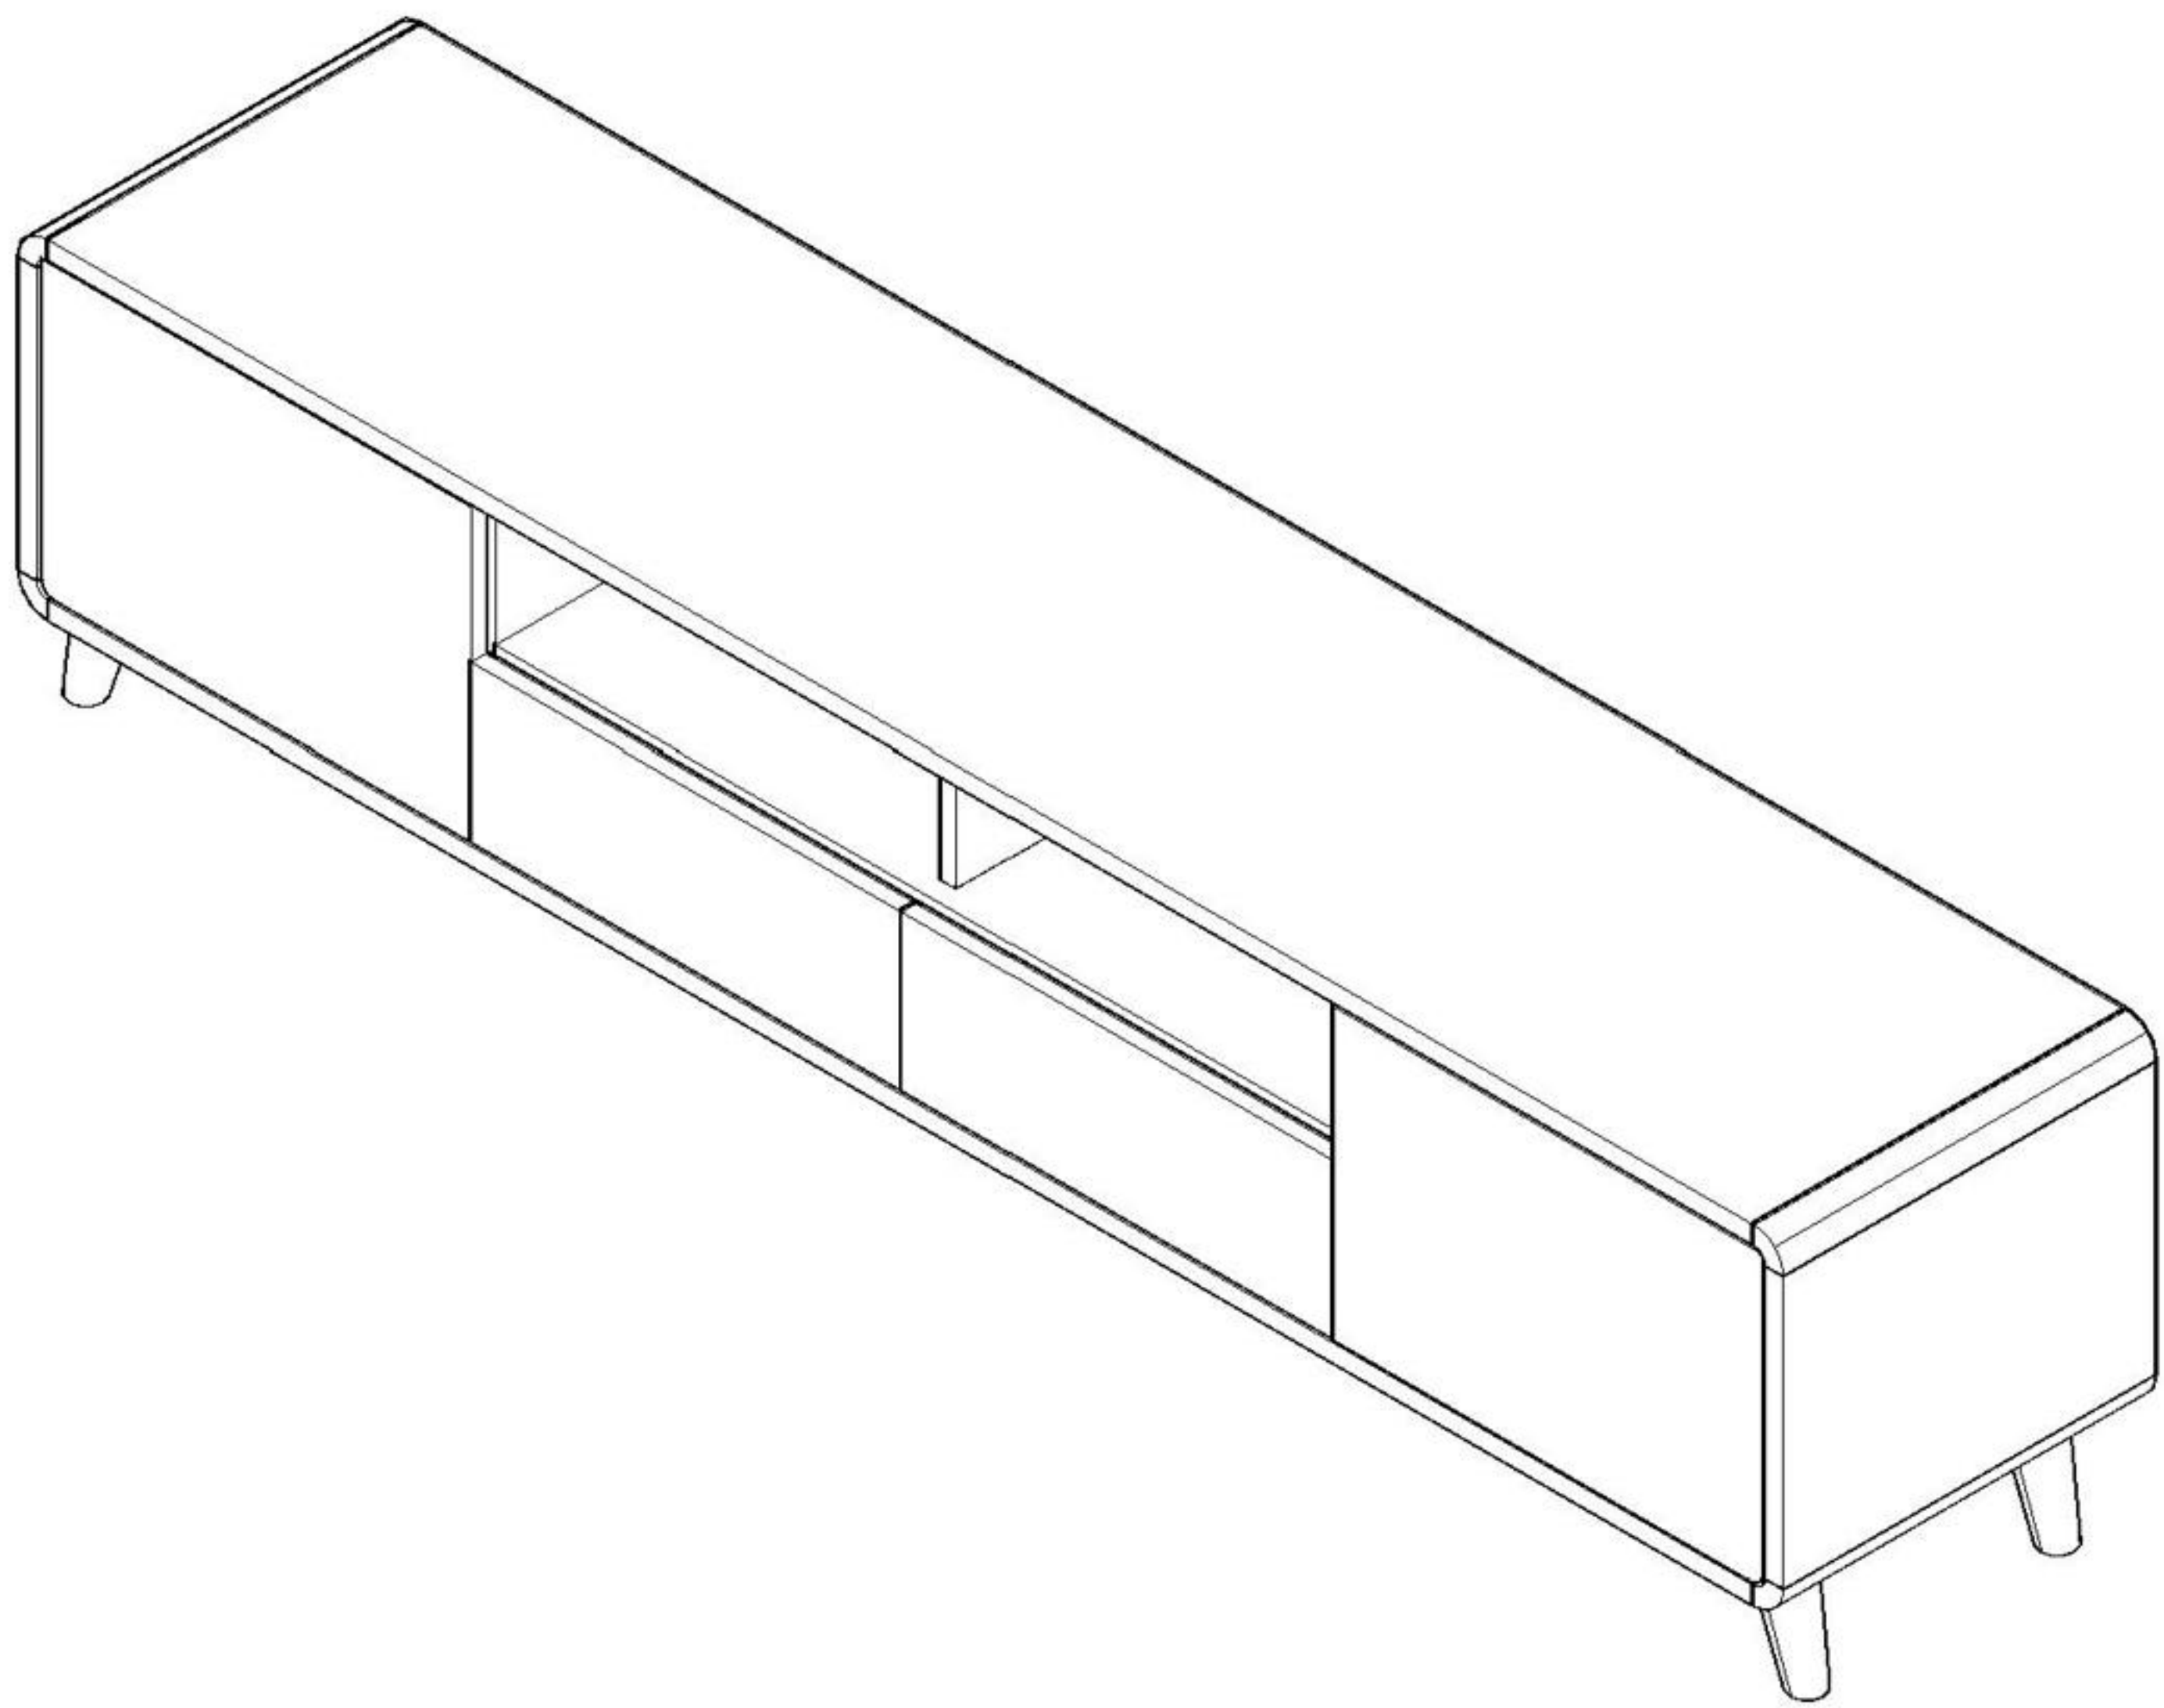

Scan the code to purchase ES001

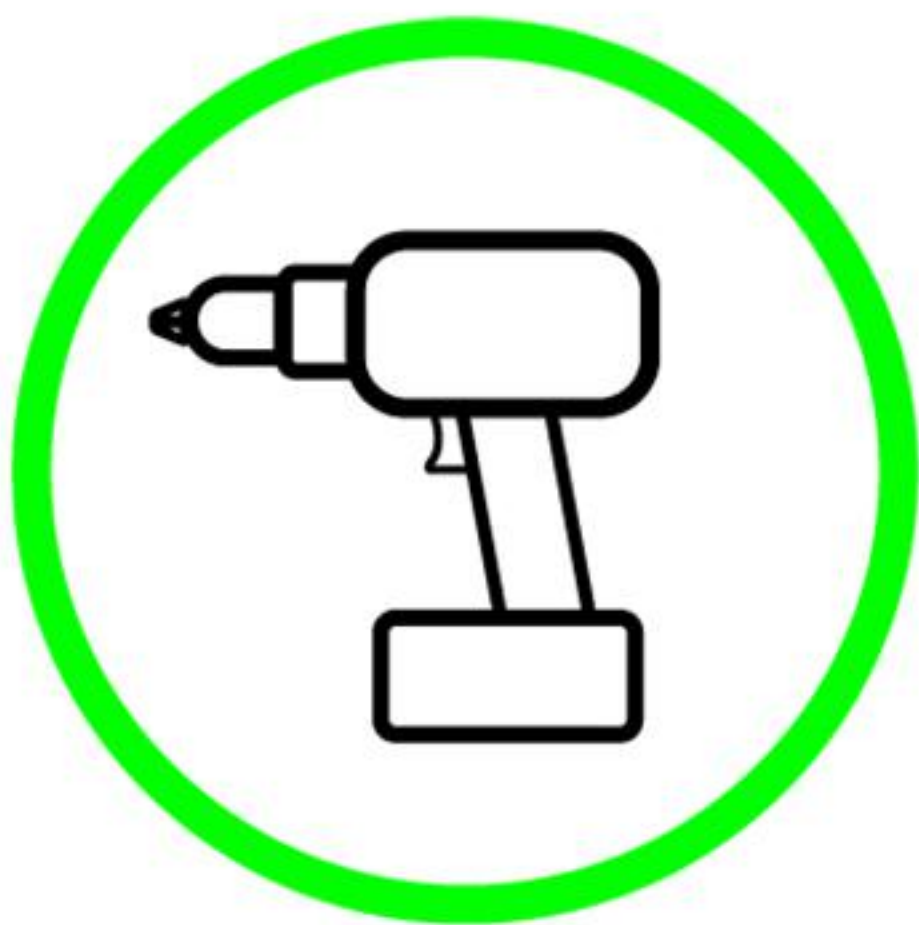

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

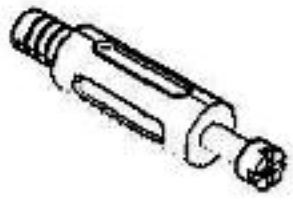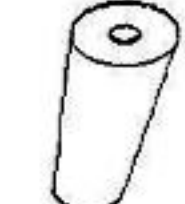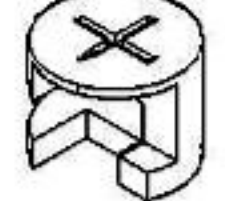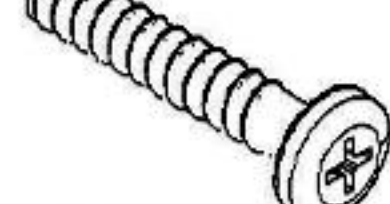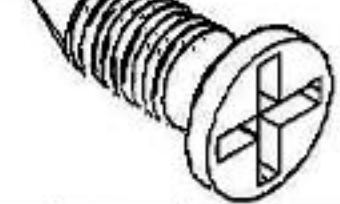Hardware List									
Accessory Appearance	Code	Dimensions	Numbers	Unit	Accessory Appearance	Code	Dimensions	Numbers	Unit
	A	ø7*40mm	16	Piece		H	120mm ^{Height}	4	Piece
	B	ø15*12mm	54	Piece		I		4	Piece
	C (with rubber plug)	ø7*40mm	38	Piece		J	ø8*40mm	4	Piece
	D	ø3.5*14mm	40	Piece		K	ø8*40mm	16	Piece
	E	ø3.5*35mm	10	Piece		L	250mm ^{Length}	2	Pair
	F	120mm ^{Height}	2	Piece	Non-slip pad	M		6	Piece
	G	ø6*35mm	2	Piece	Cable hole	N		2	Piece

BoardMaterial List					
Code	Dimensions	Numbers	Code	Dimensions	Numbers
①	380*30*30	4	⑨	2162*299*15	1
②	2138*378*18	1	⑩	535.8*293*15	2
③	2138*378*18	1	⑪	535.8*156*15	2
④	275*378*18	2	⑫	115*300*15	4
⑤	299*299*15	2	⑬	479.2*115*15	2
⑥	138*278*15	1	⑭	489.2*292*8	2
⑦	144*299*15	1			
⑧	1081.5*299*15	1			

Detailed description of the main components, please read carefully

I(Hinge) Installation Instructions
Install the hinge with screw D

① Install I onto the door and ensure it is secure

② Secure the hole behind the hinge to ensure the door is stable


③ The height can be adjusted up and down here

Adjust left and right

Adjust front and back

④ Adjusting the gap between the door

Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

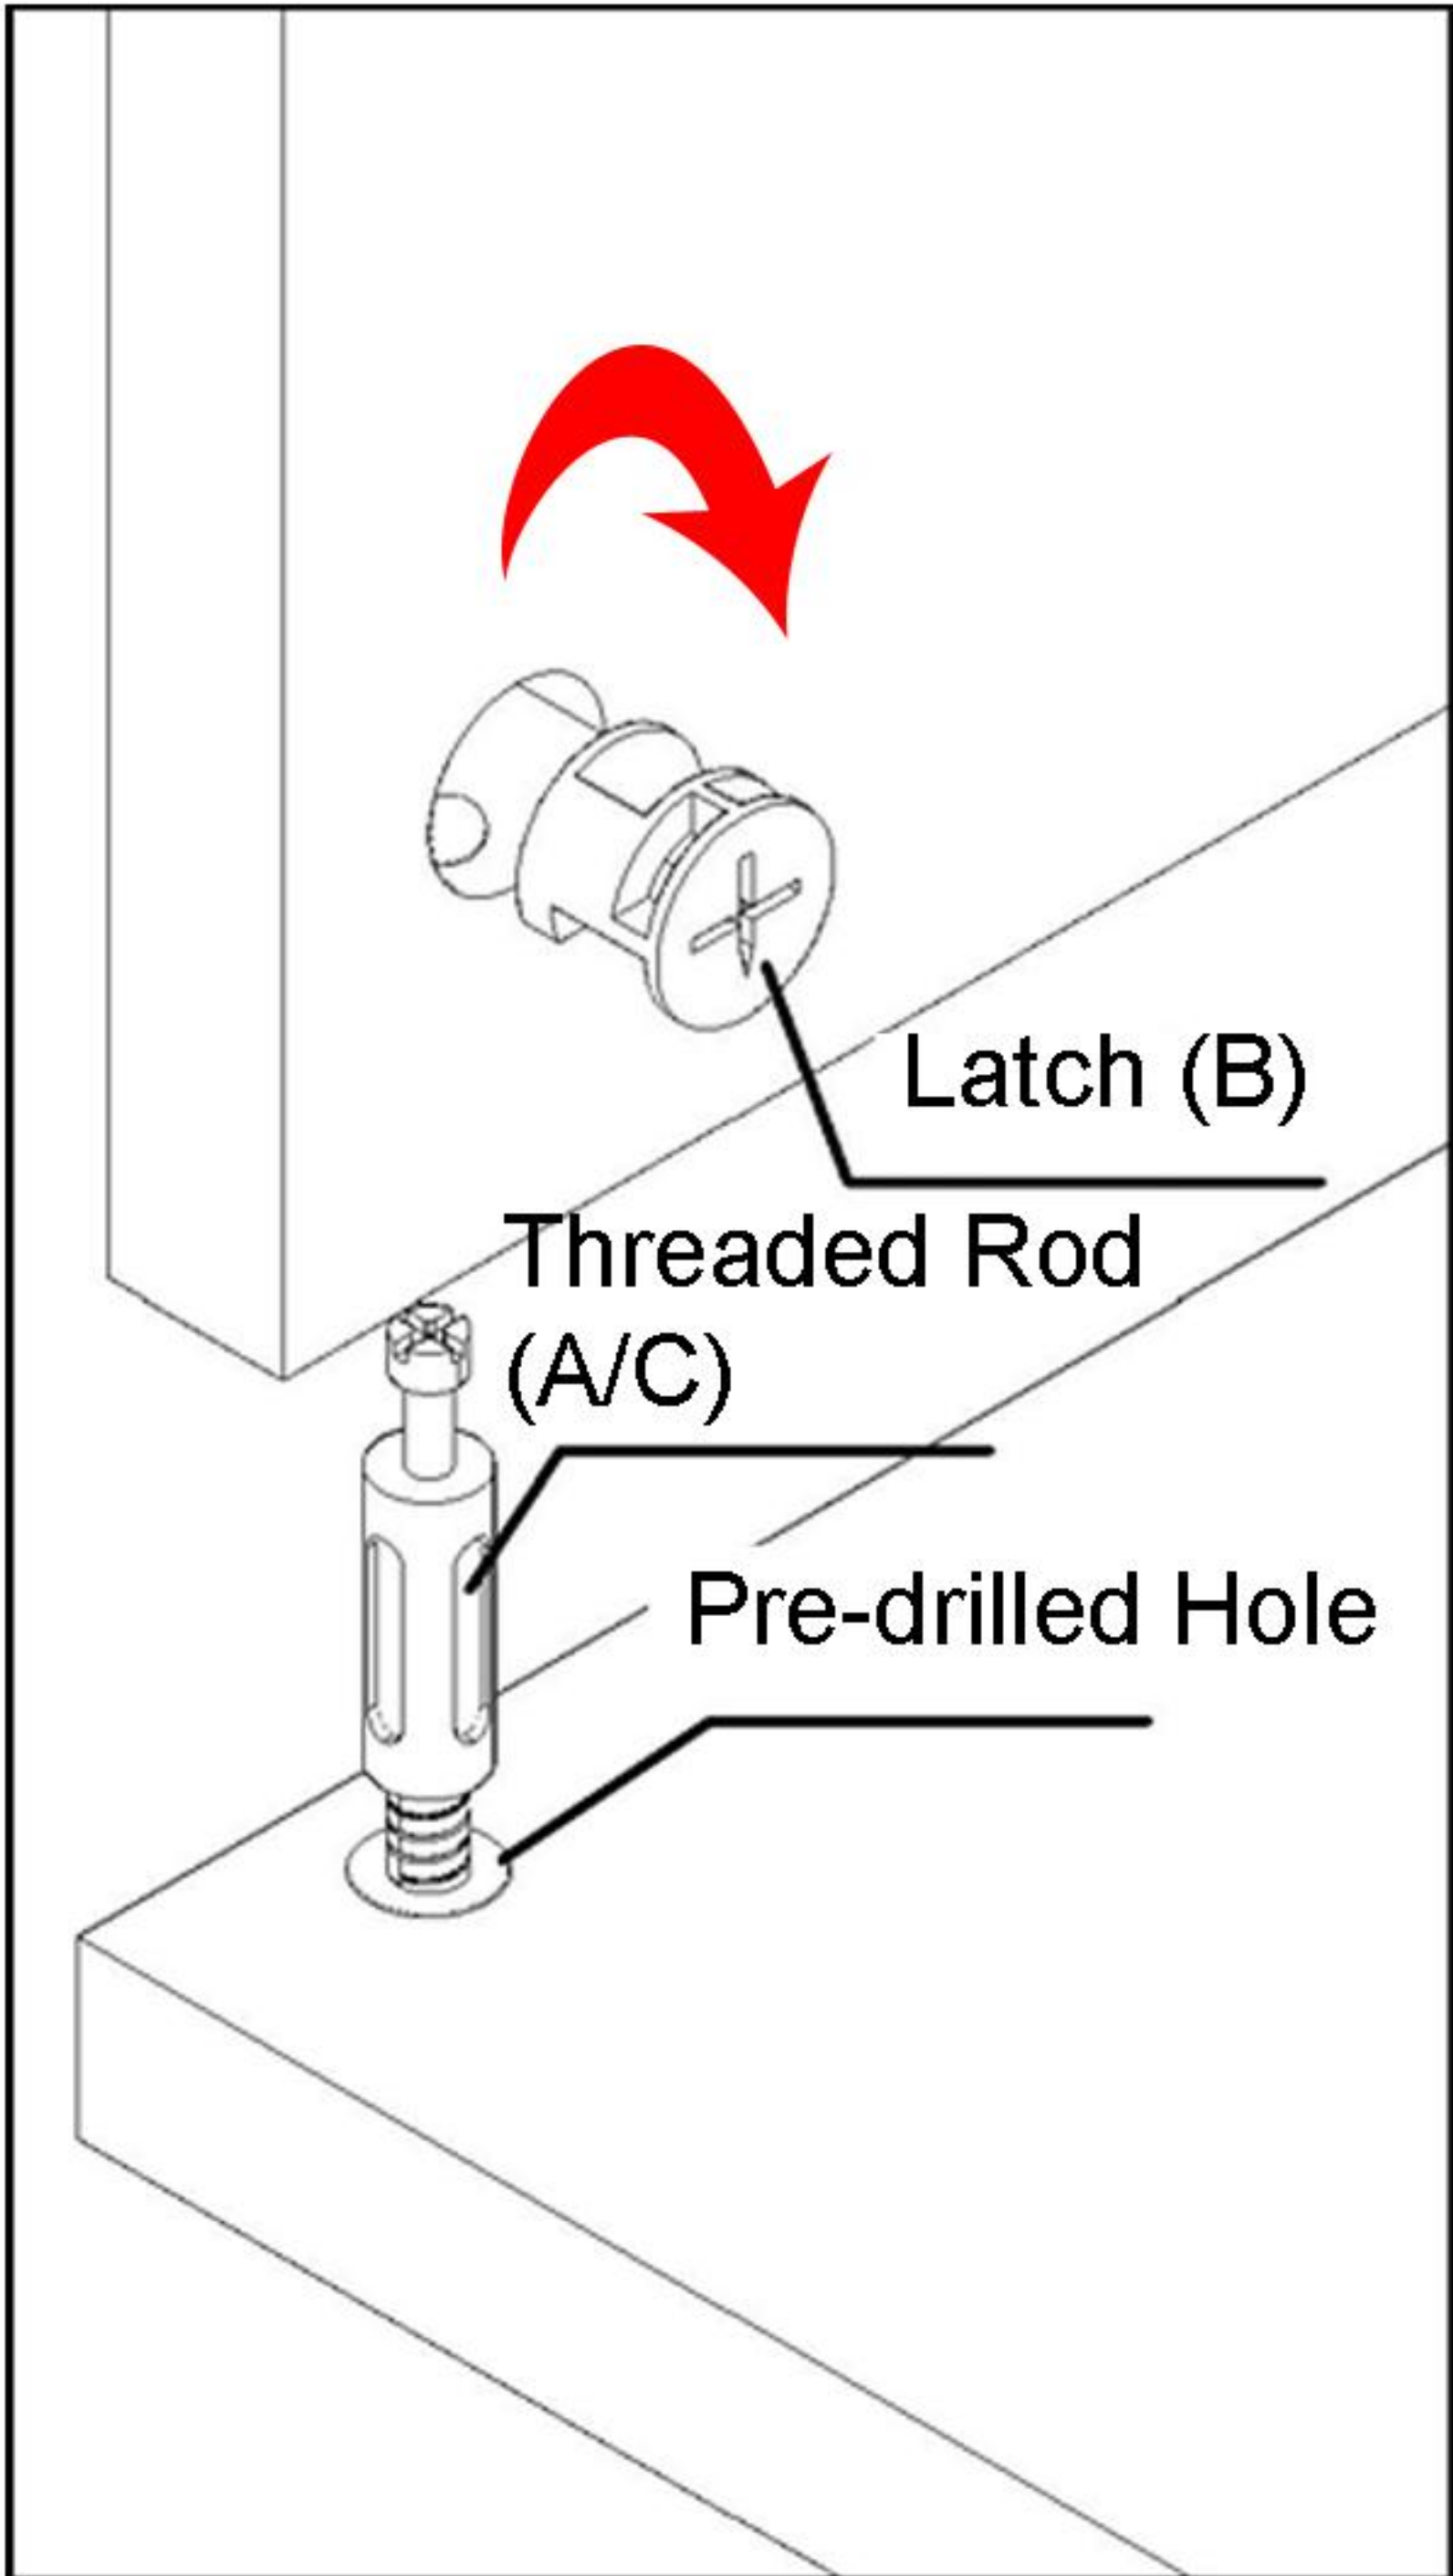

- 1. Screw the A/C (Threaded Rod) into the Pre-drilled Hole
- 2. Insert the installed A/C into the corresponding hole of the other piece. Press B (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
- 3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.


L (Sliding Rail) Installation Instructions
When installing L, use with screw D

1, Separate L (Sliding Rail)





The main body part

The pull-out part


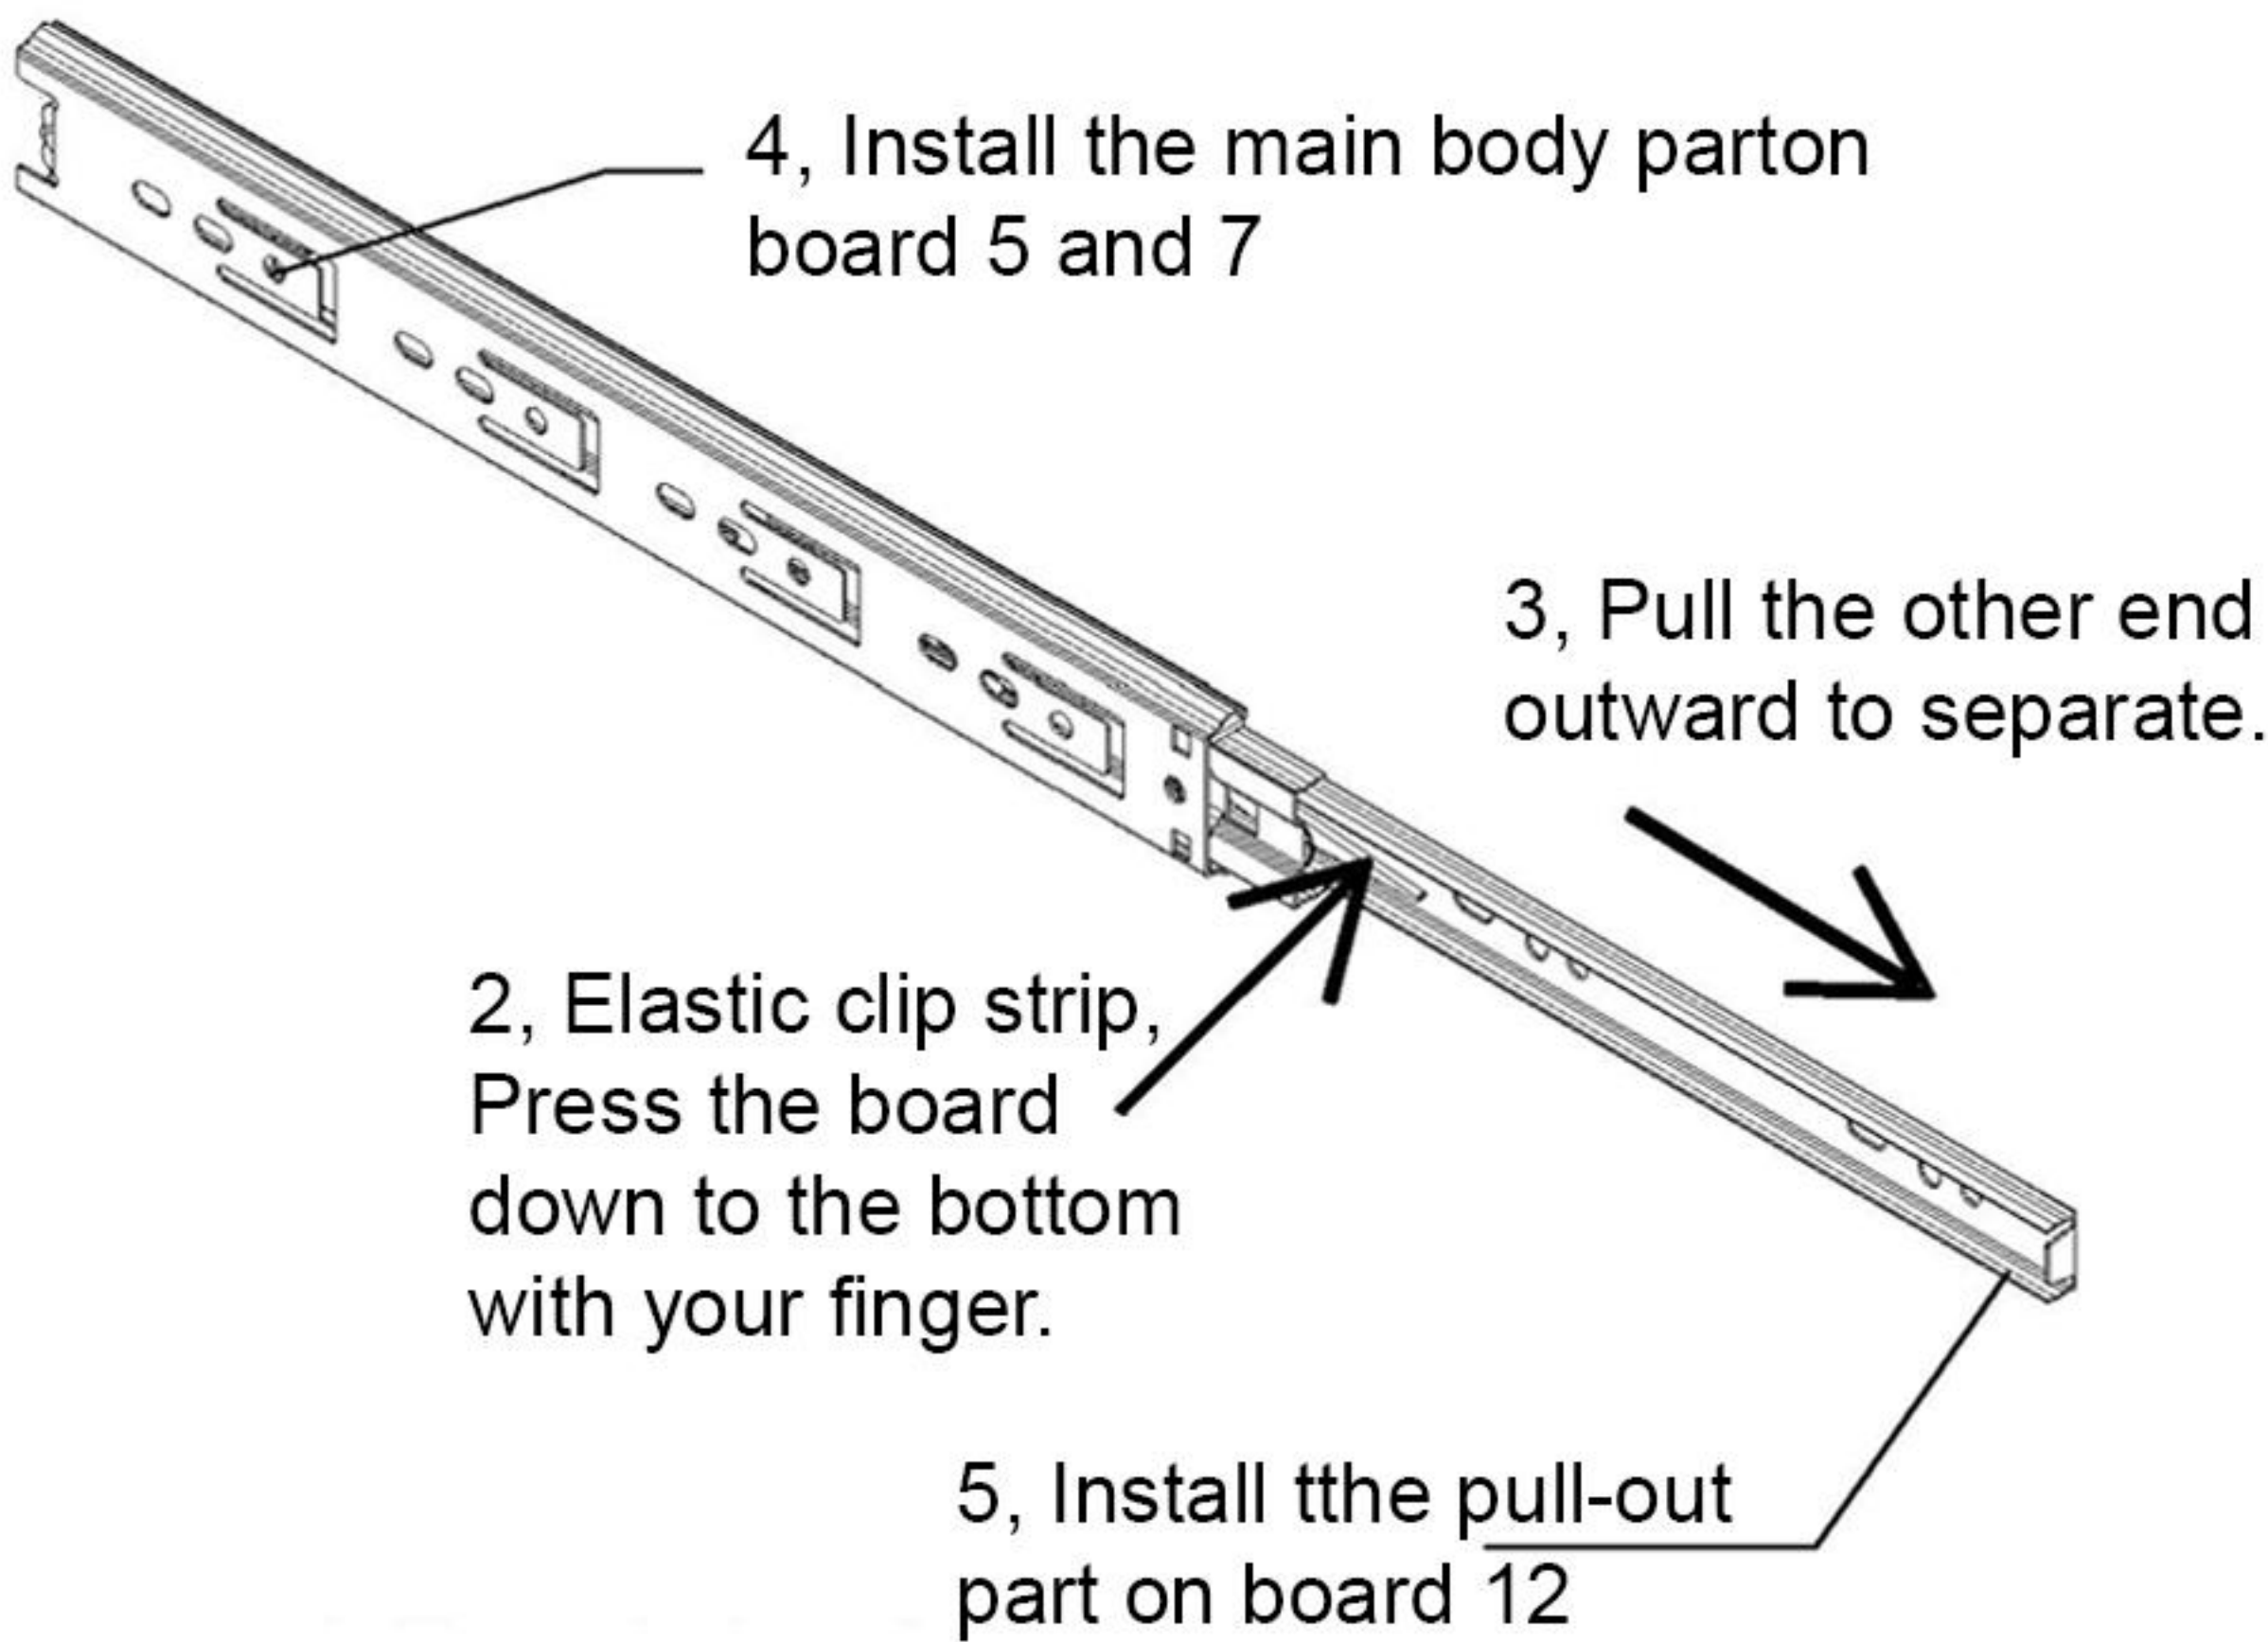


Step 1:

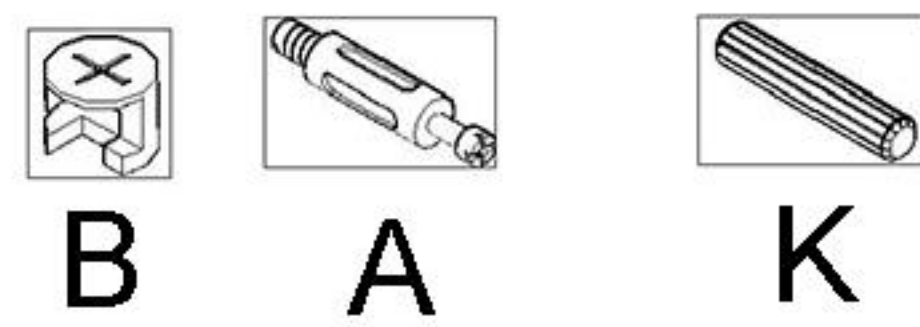
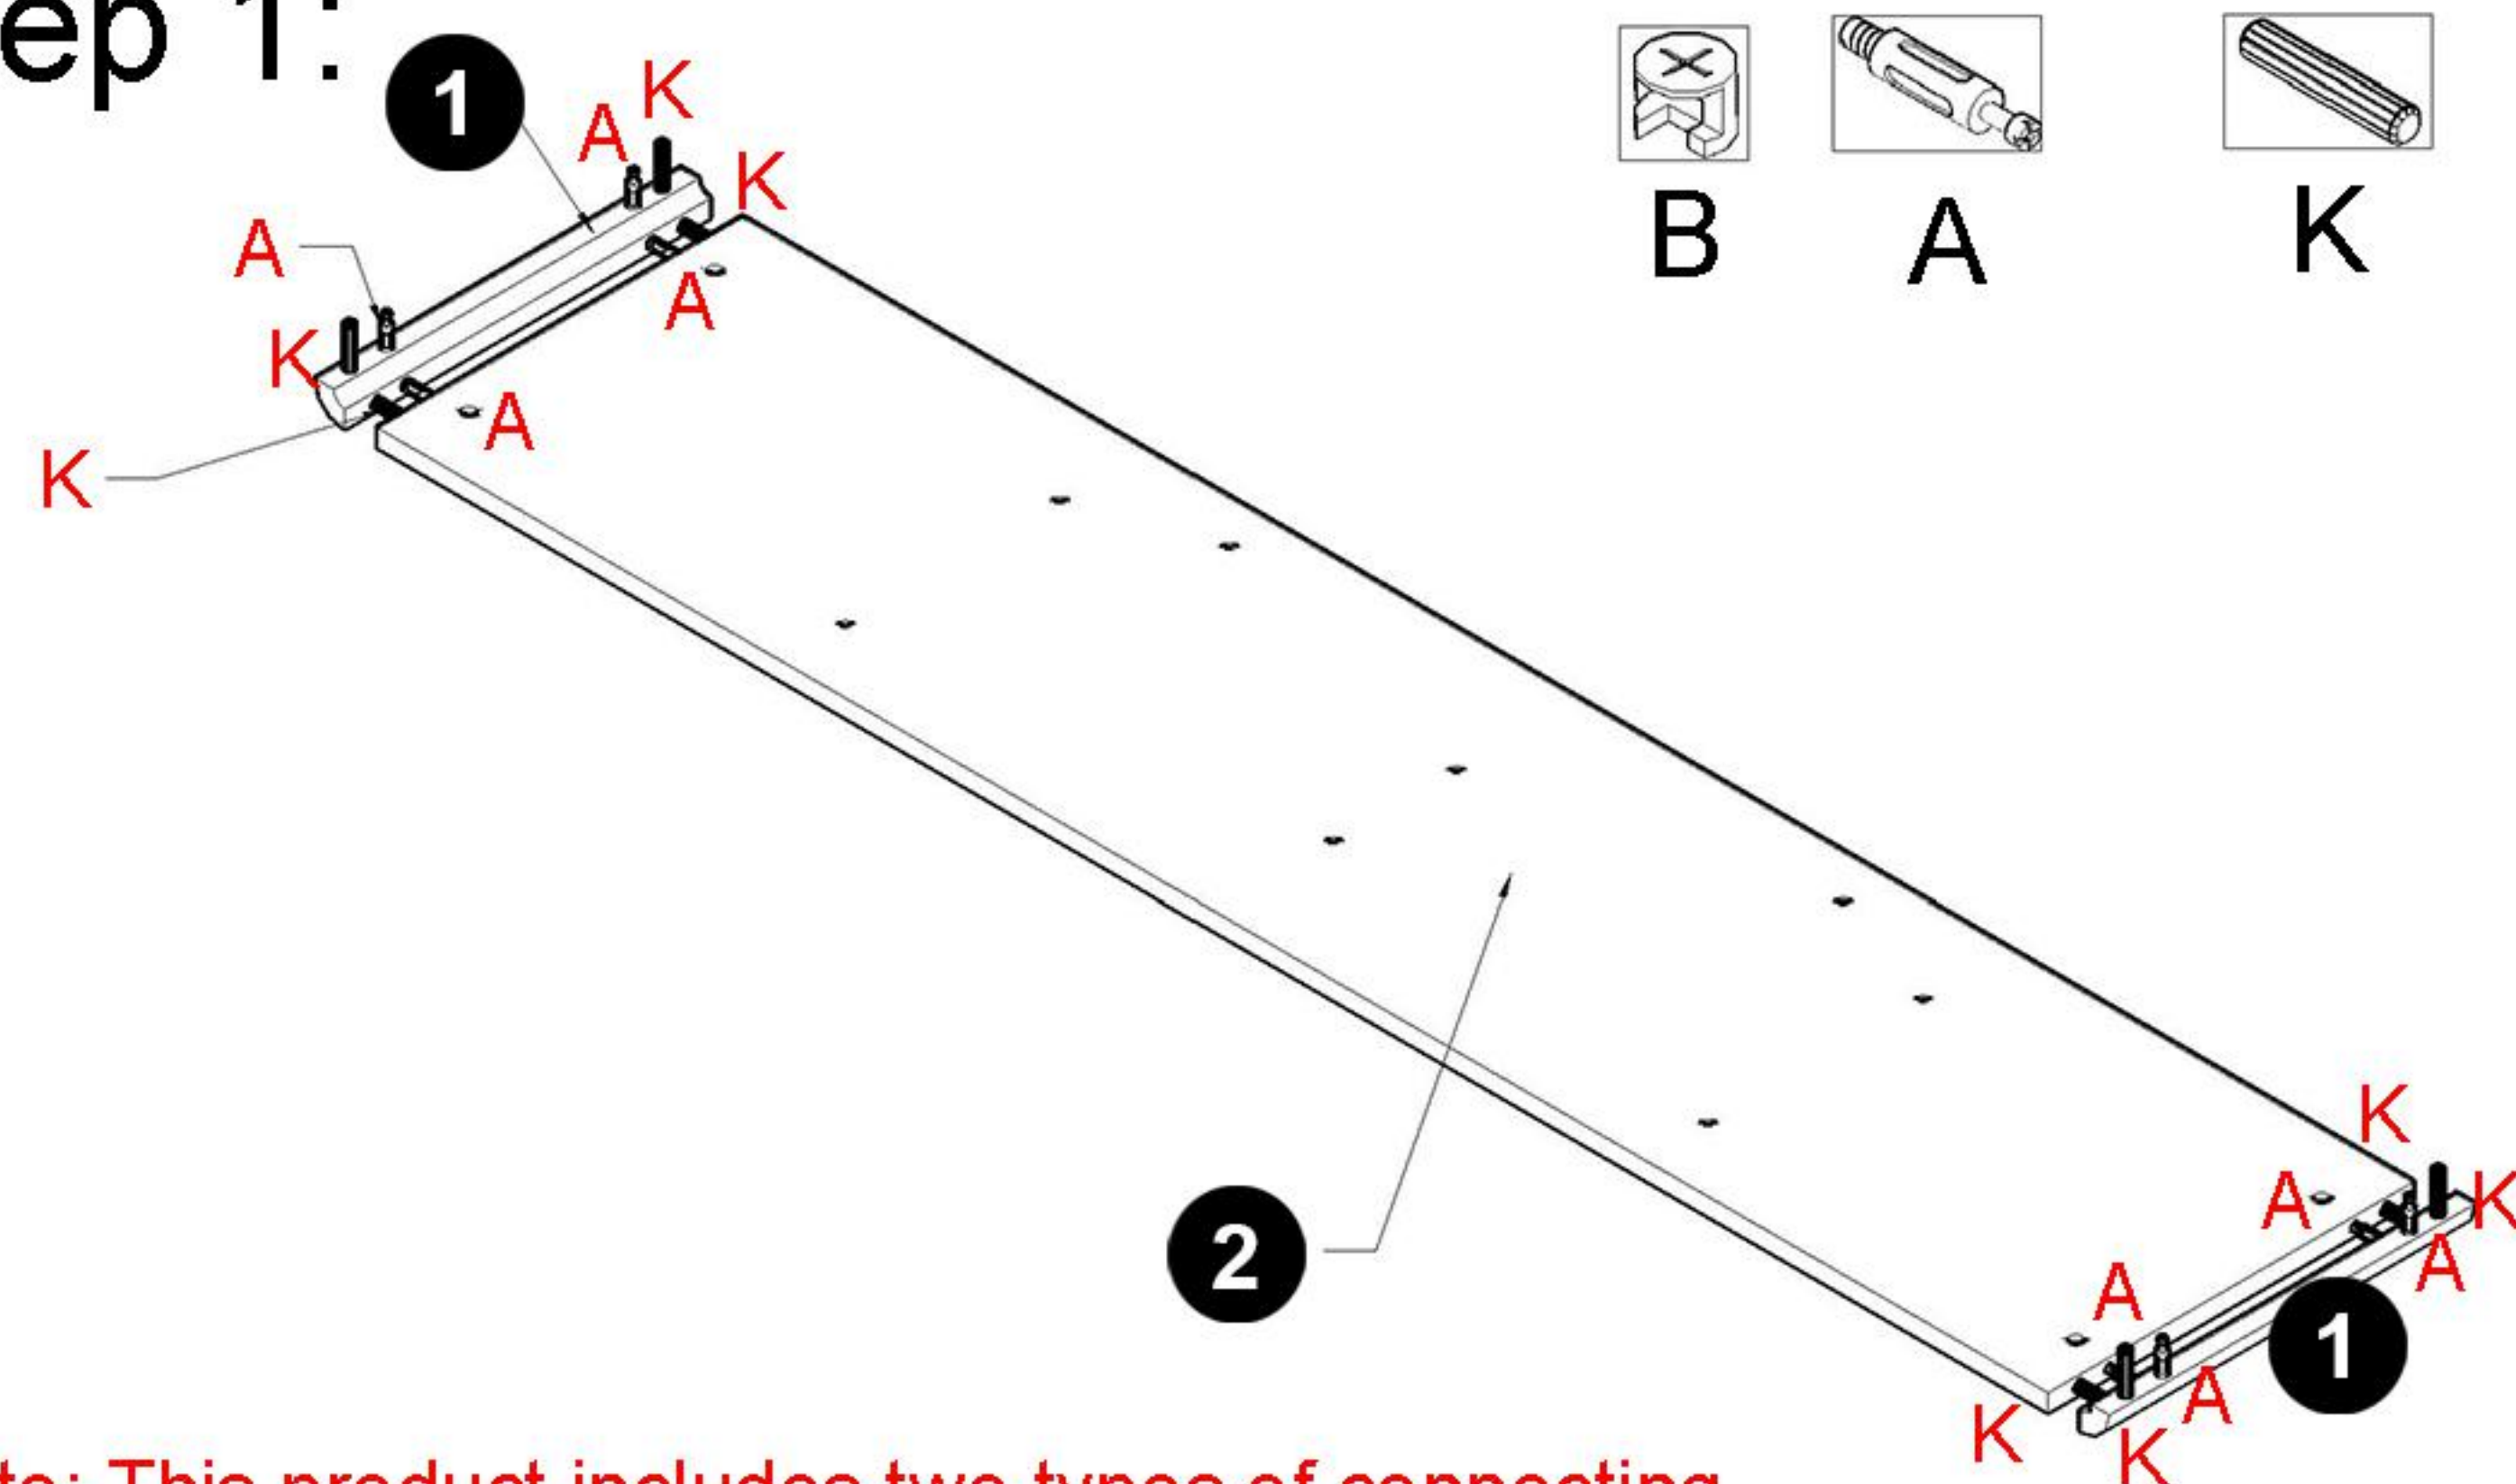


Note: This product includes two types of connecting screws. Use the standard black type A for all connections with Panel 1. For all other connections, use the orange type C with the rubber plug.



Step 2:

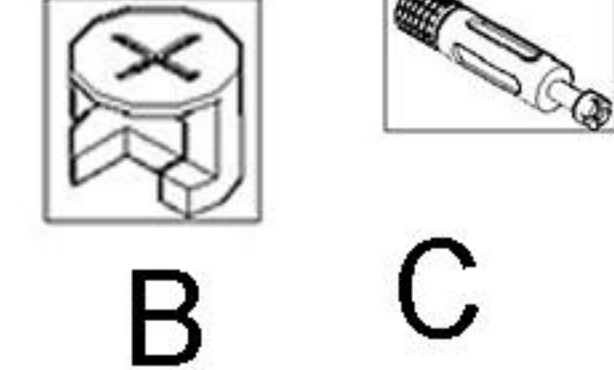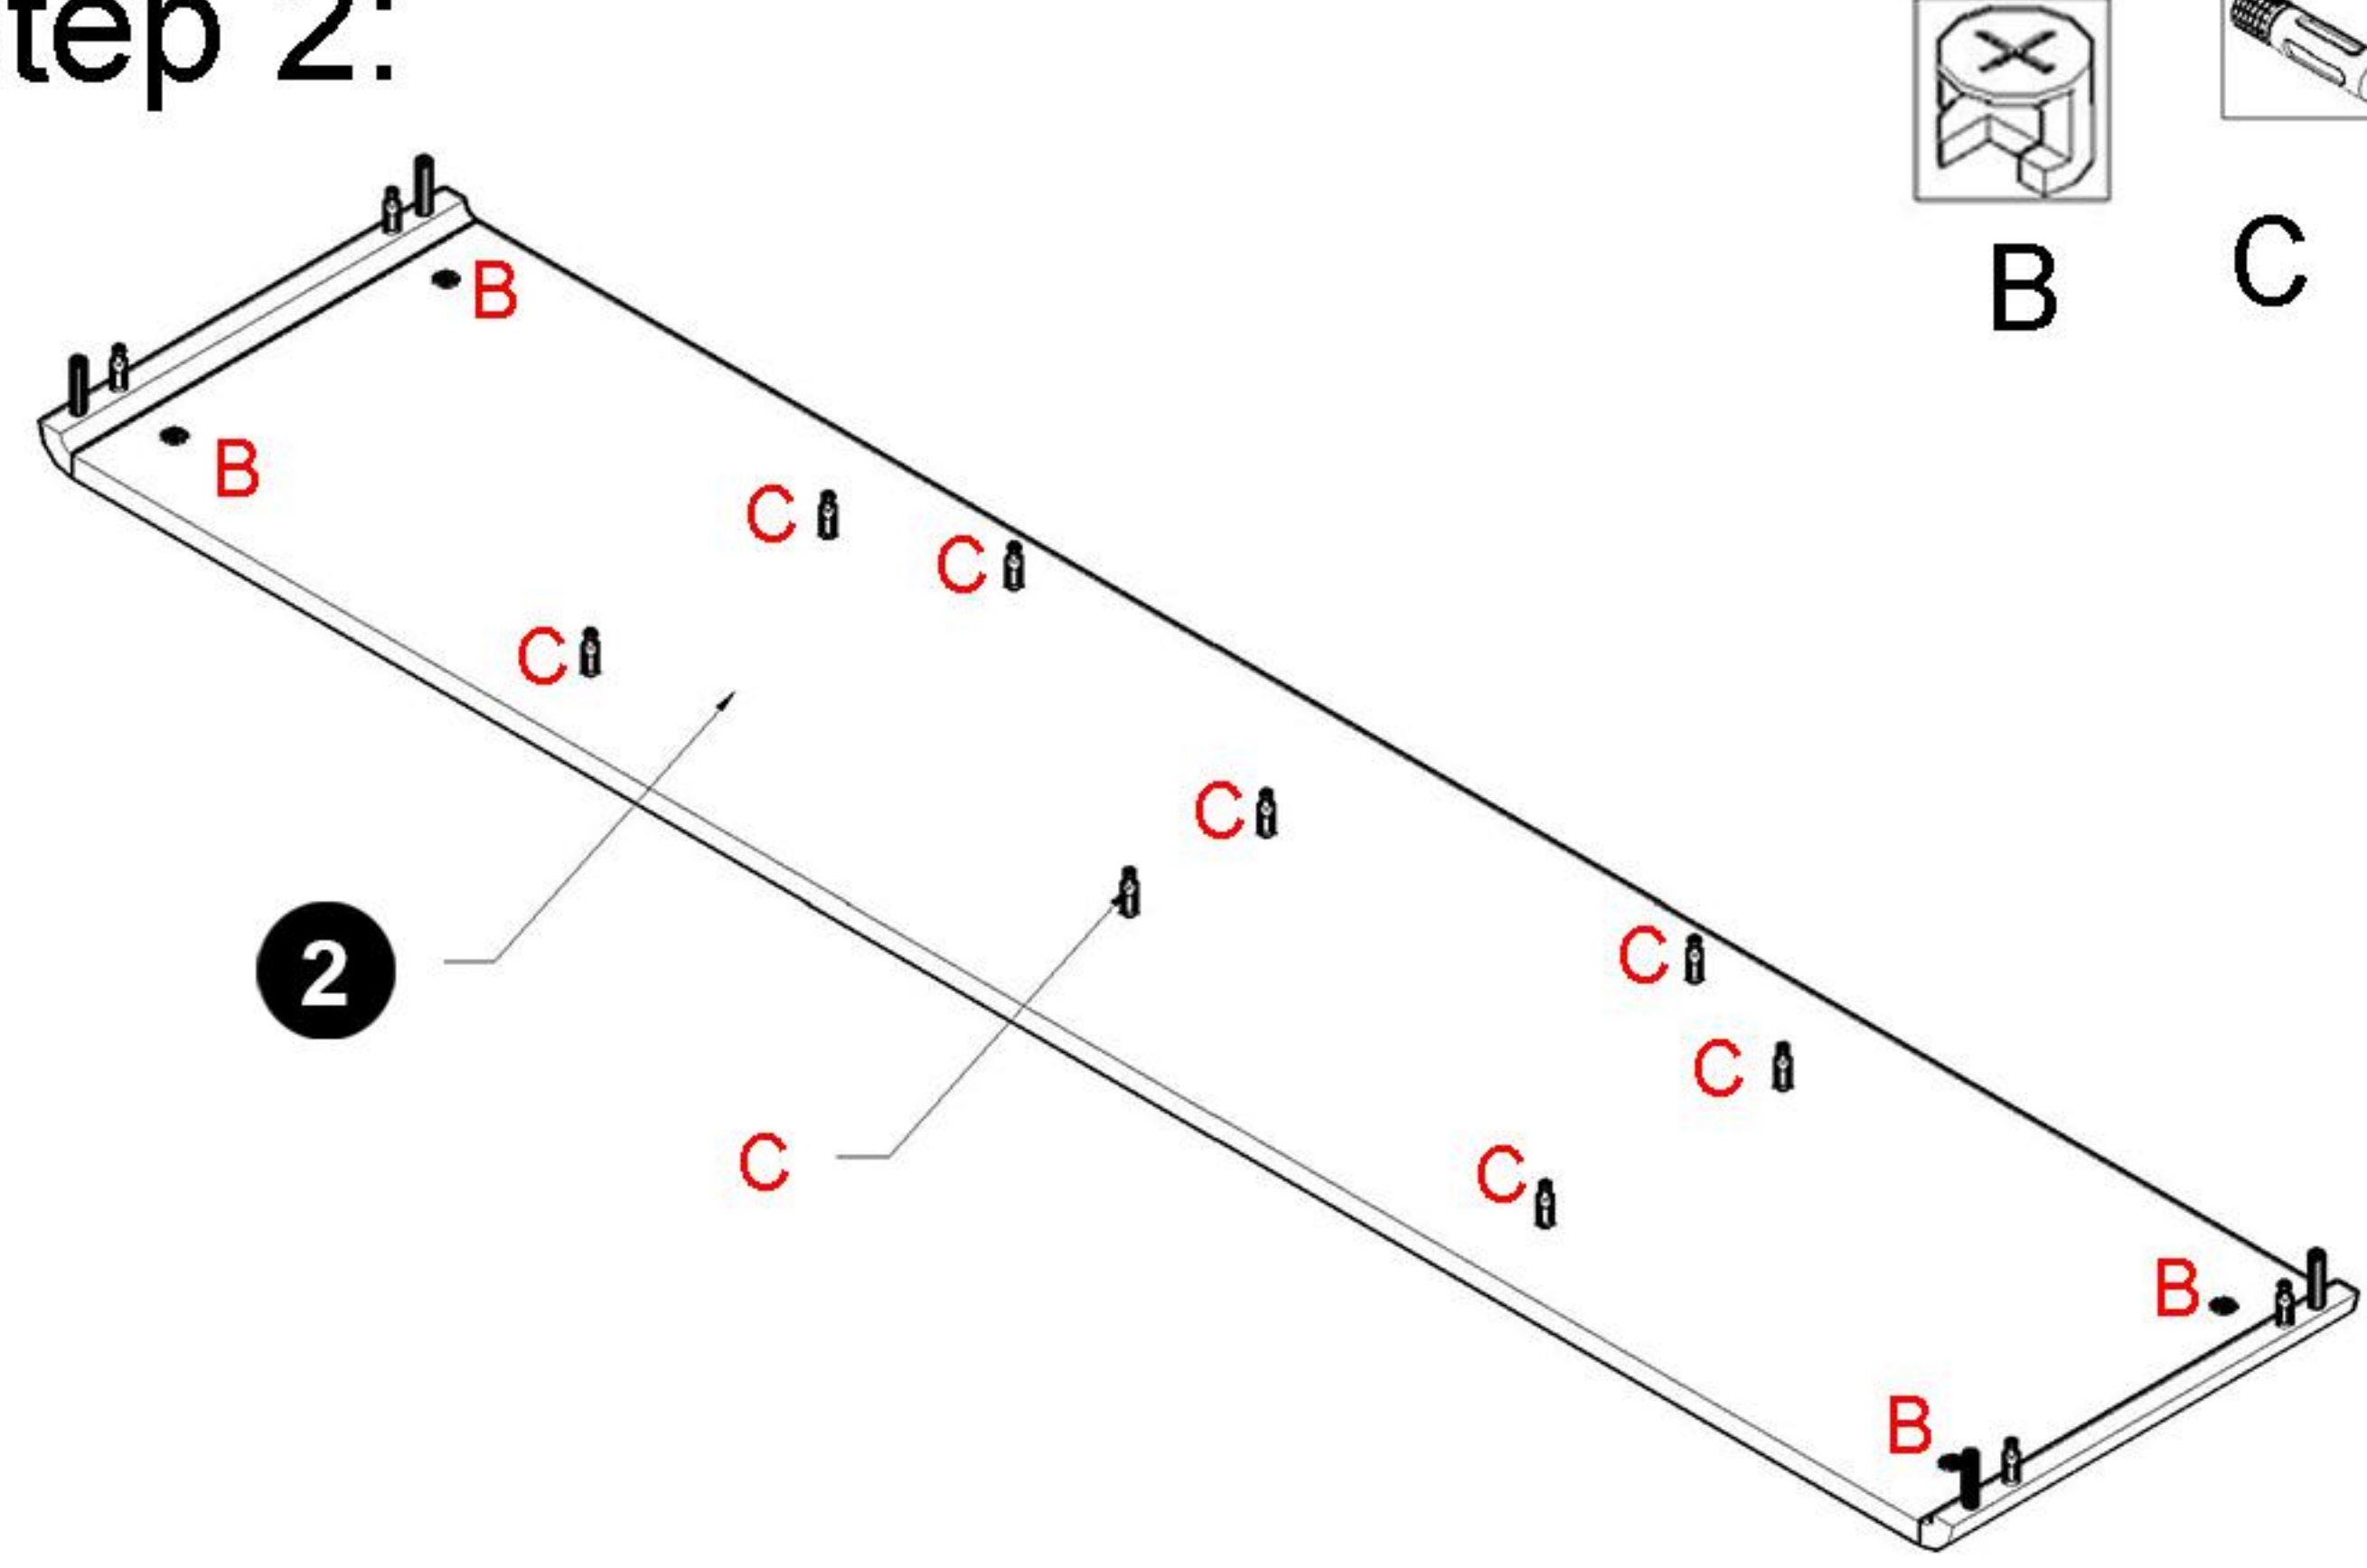



Step 3:

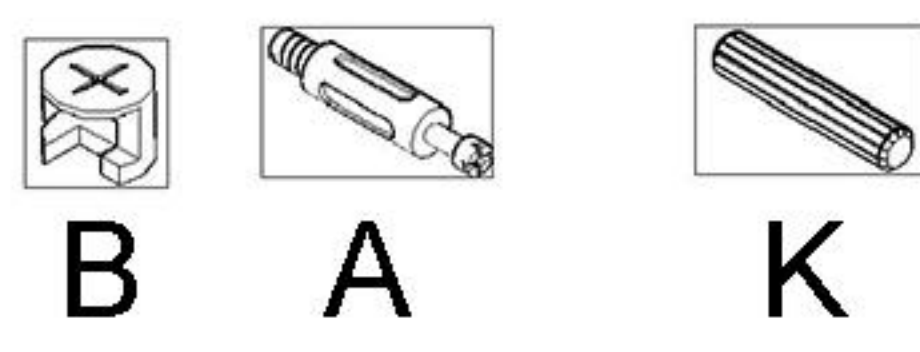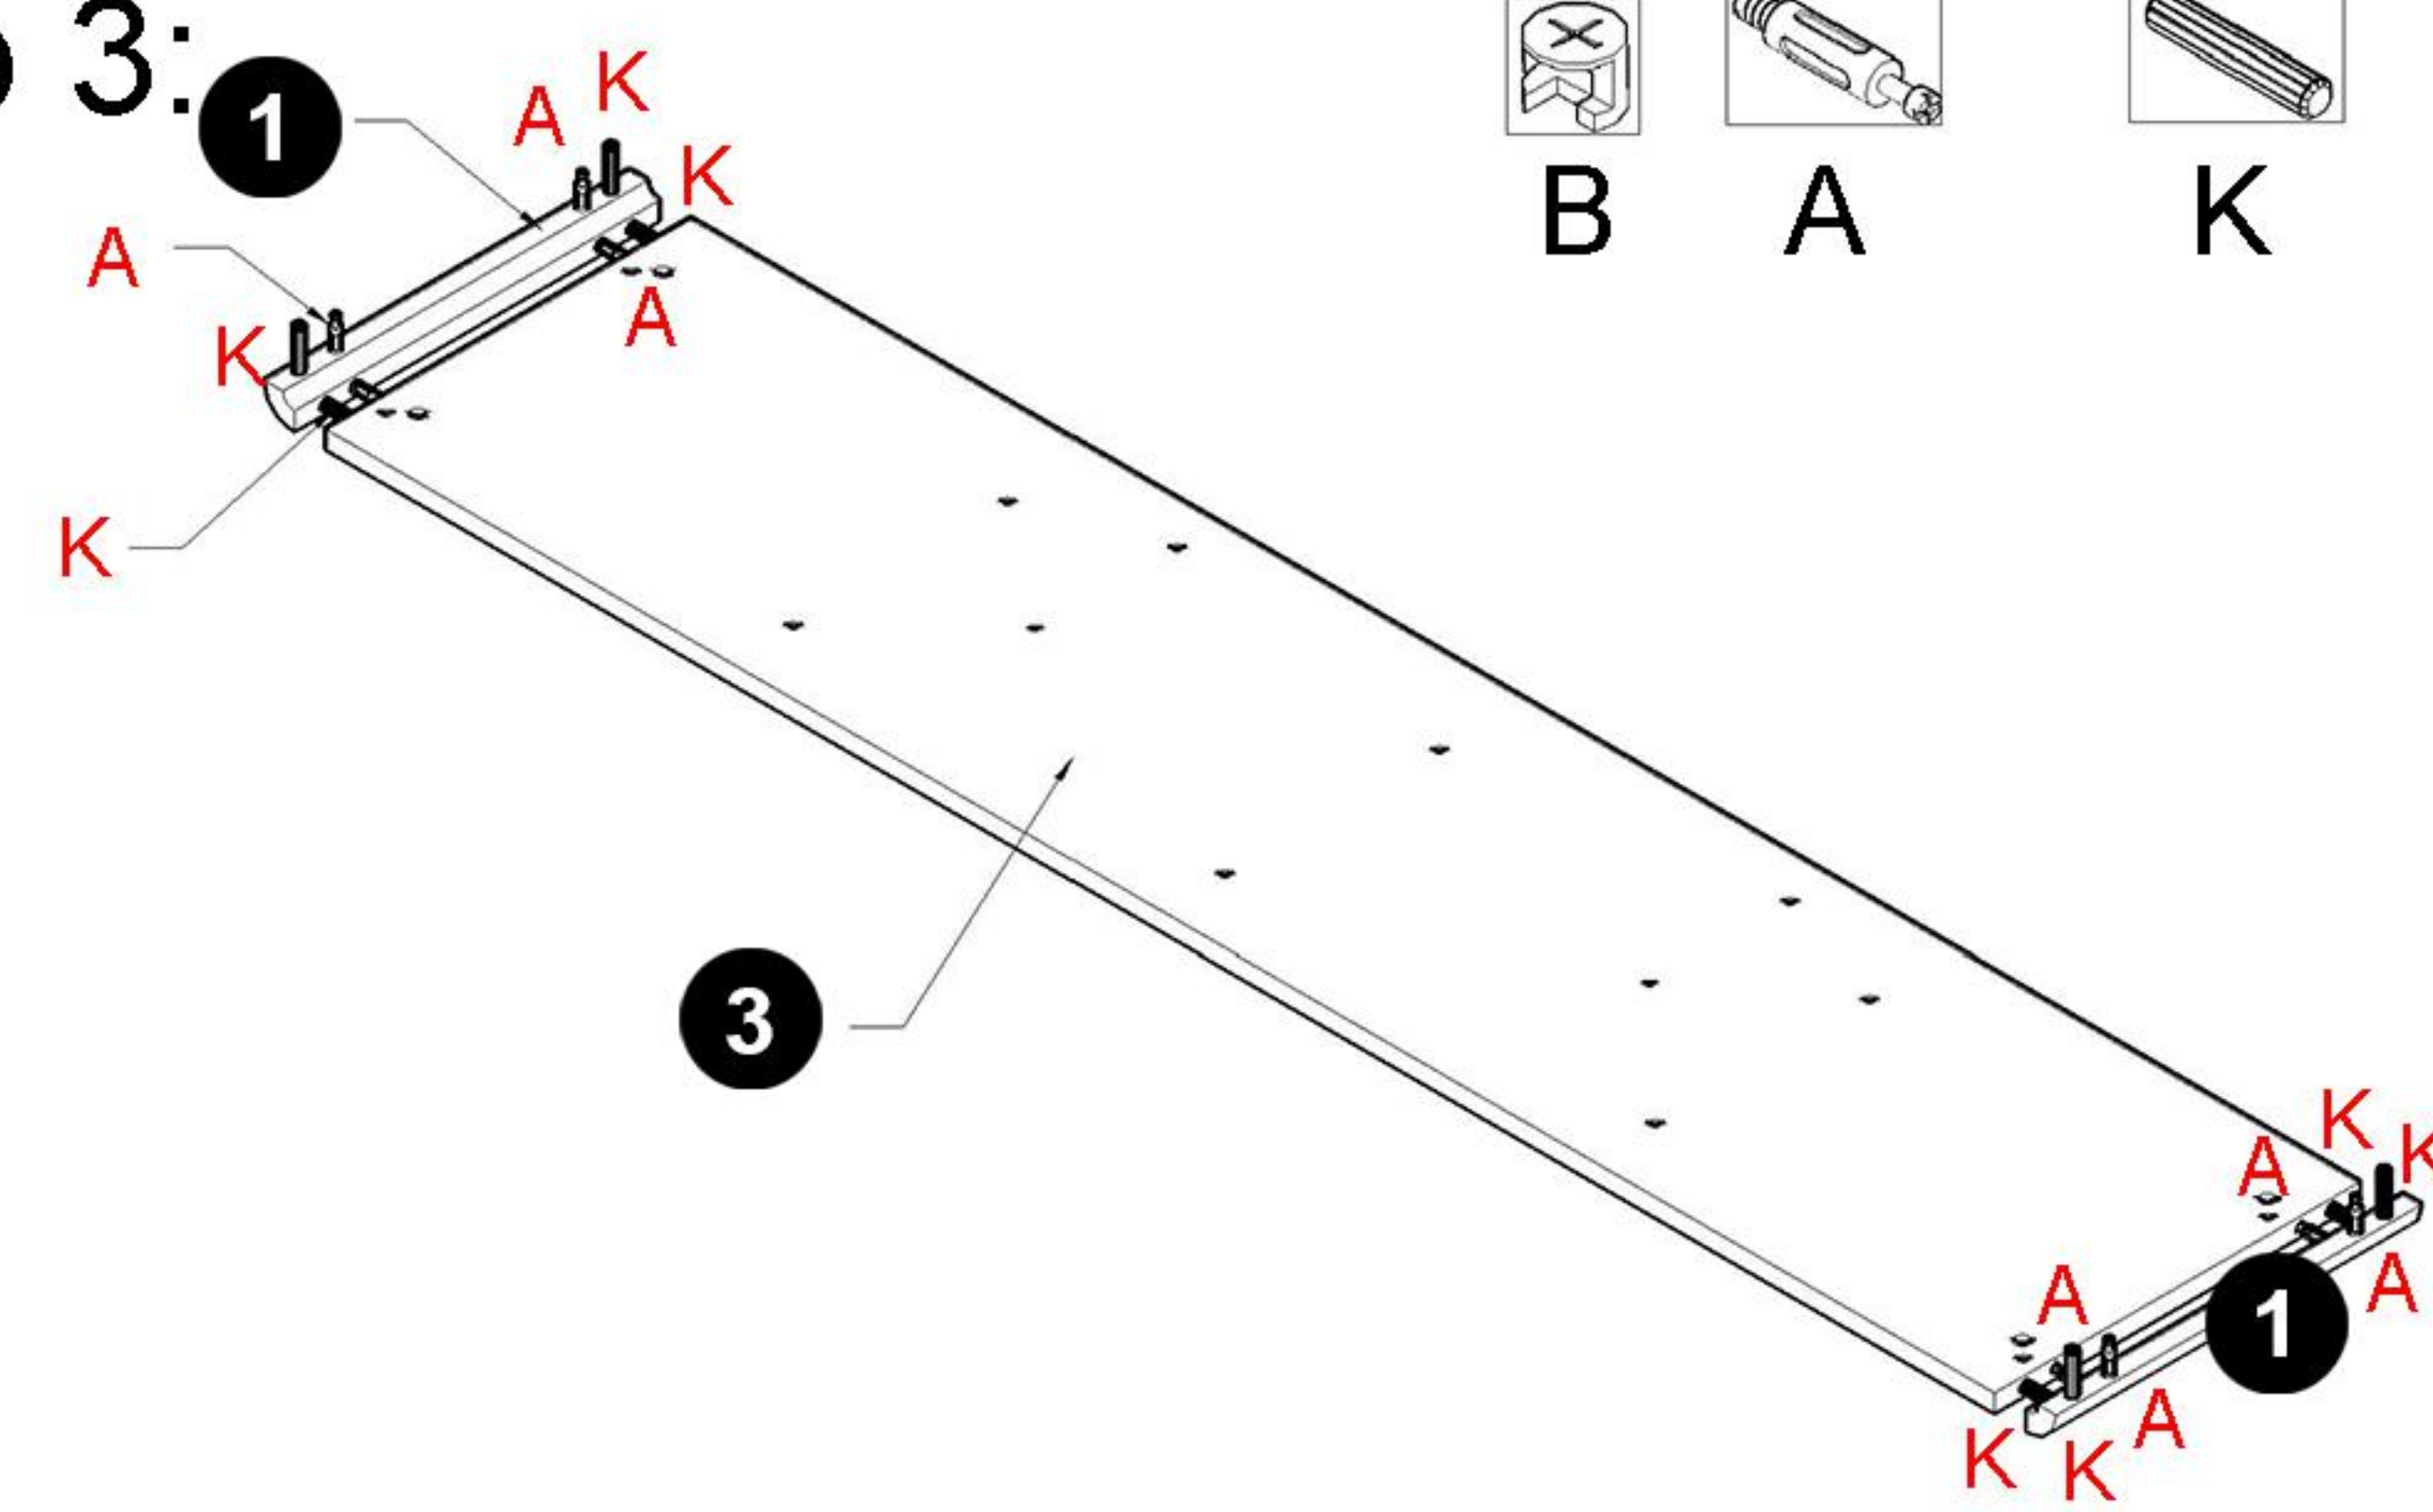

Step 4:

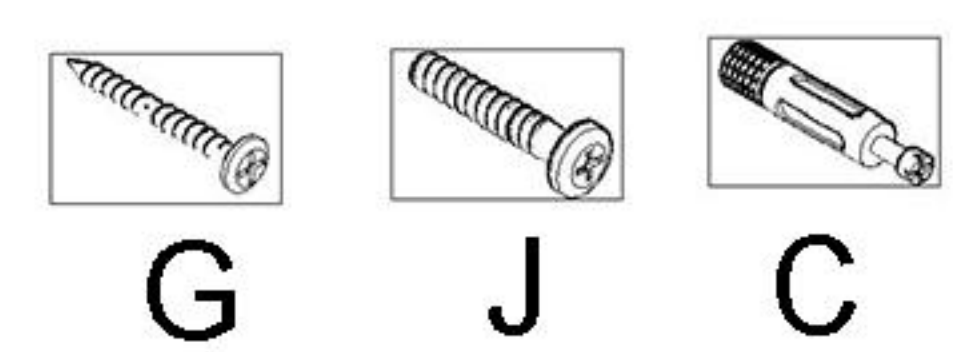
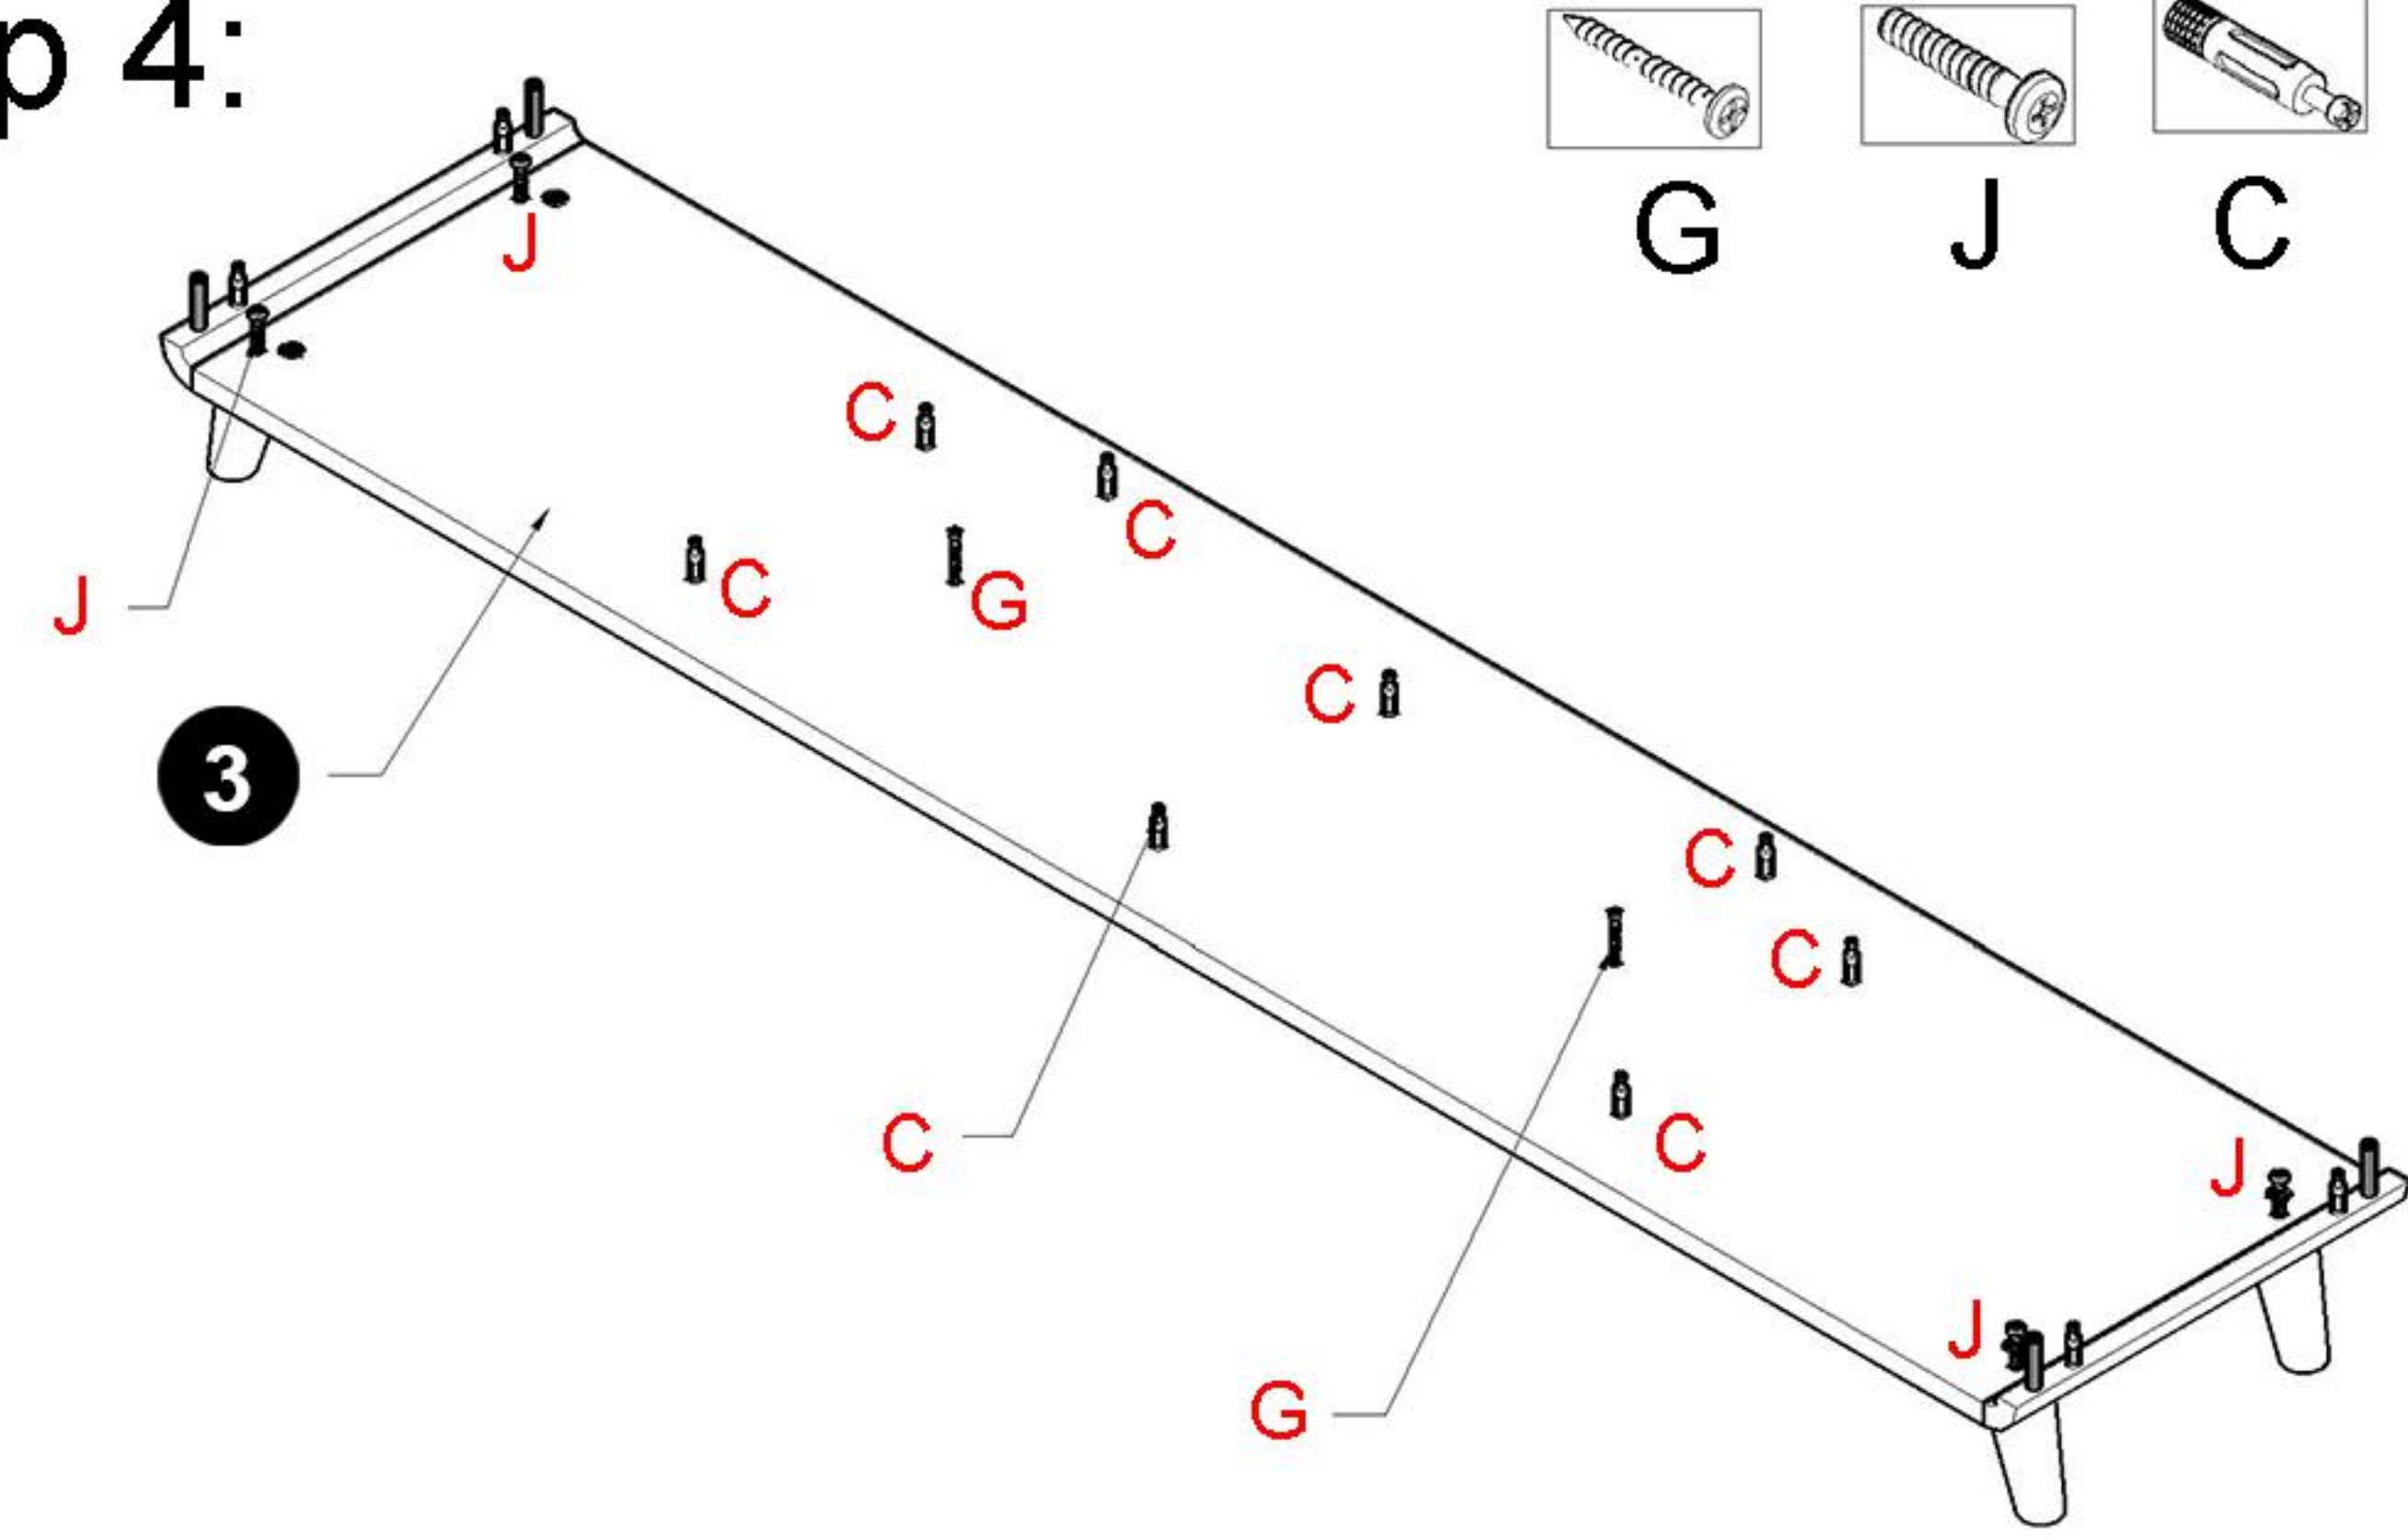


Step 5:

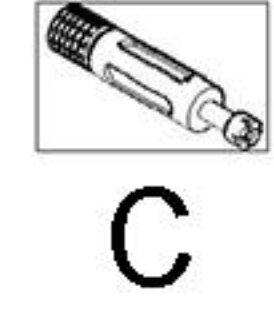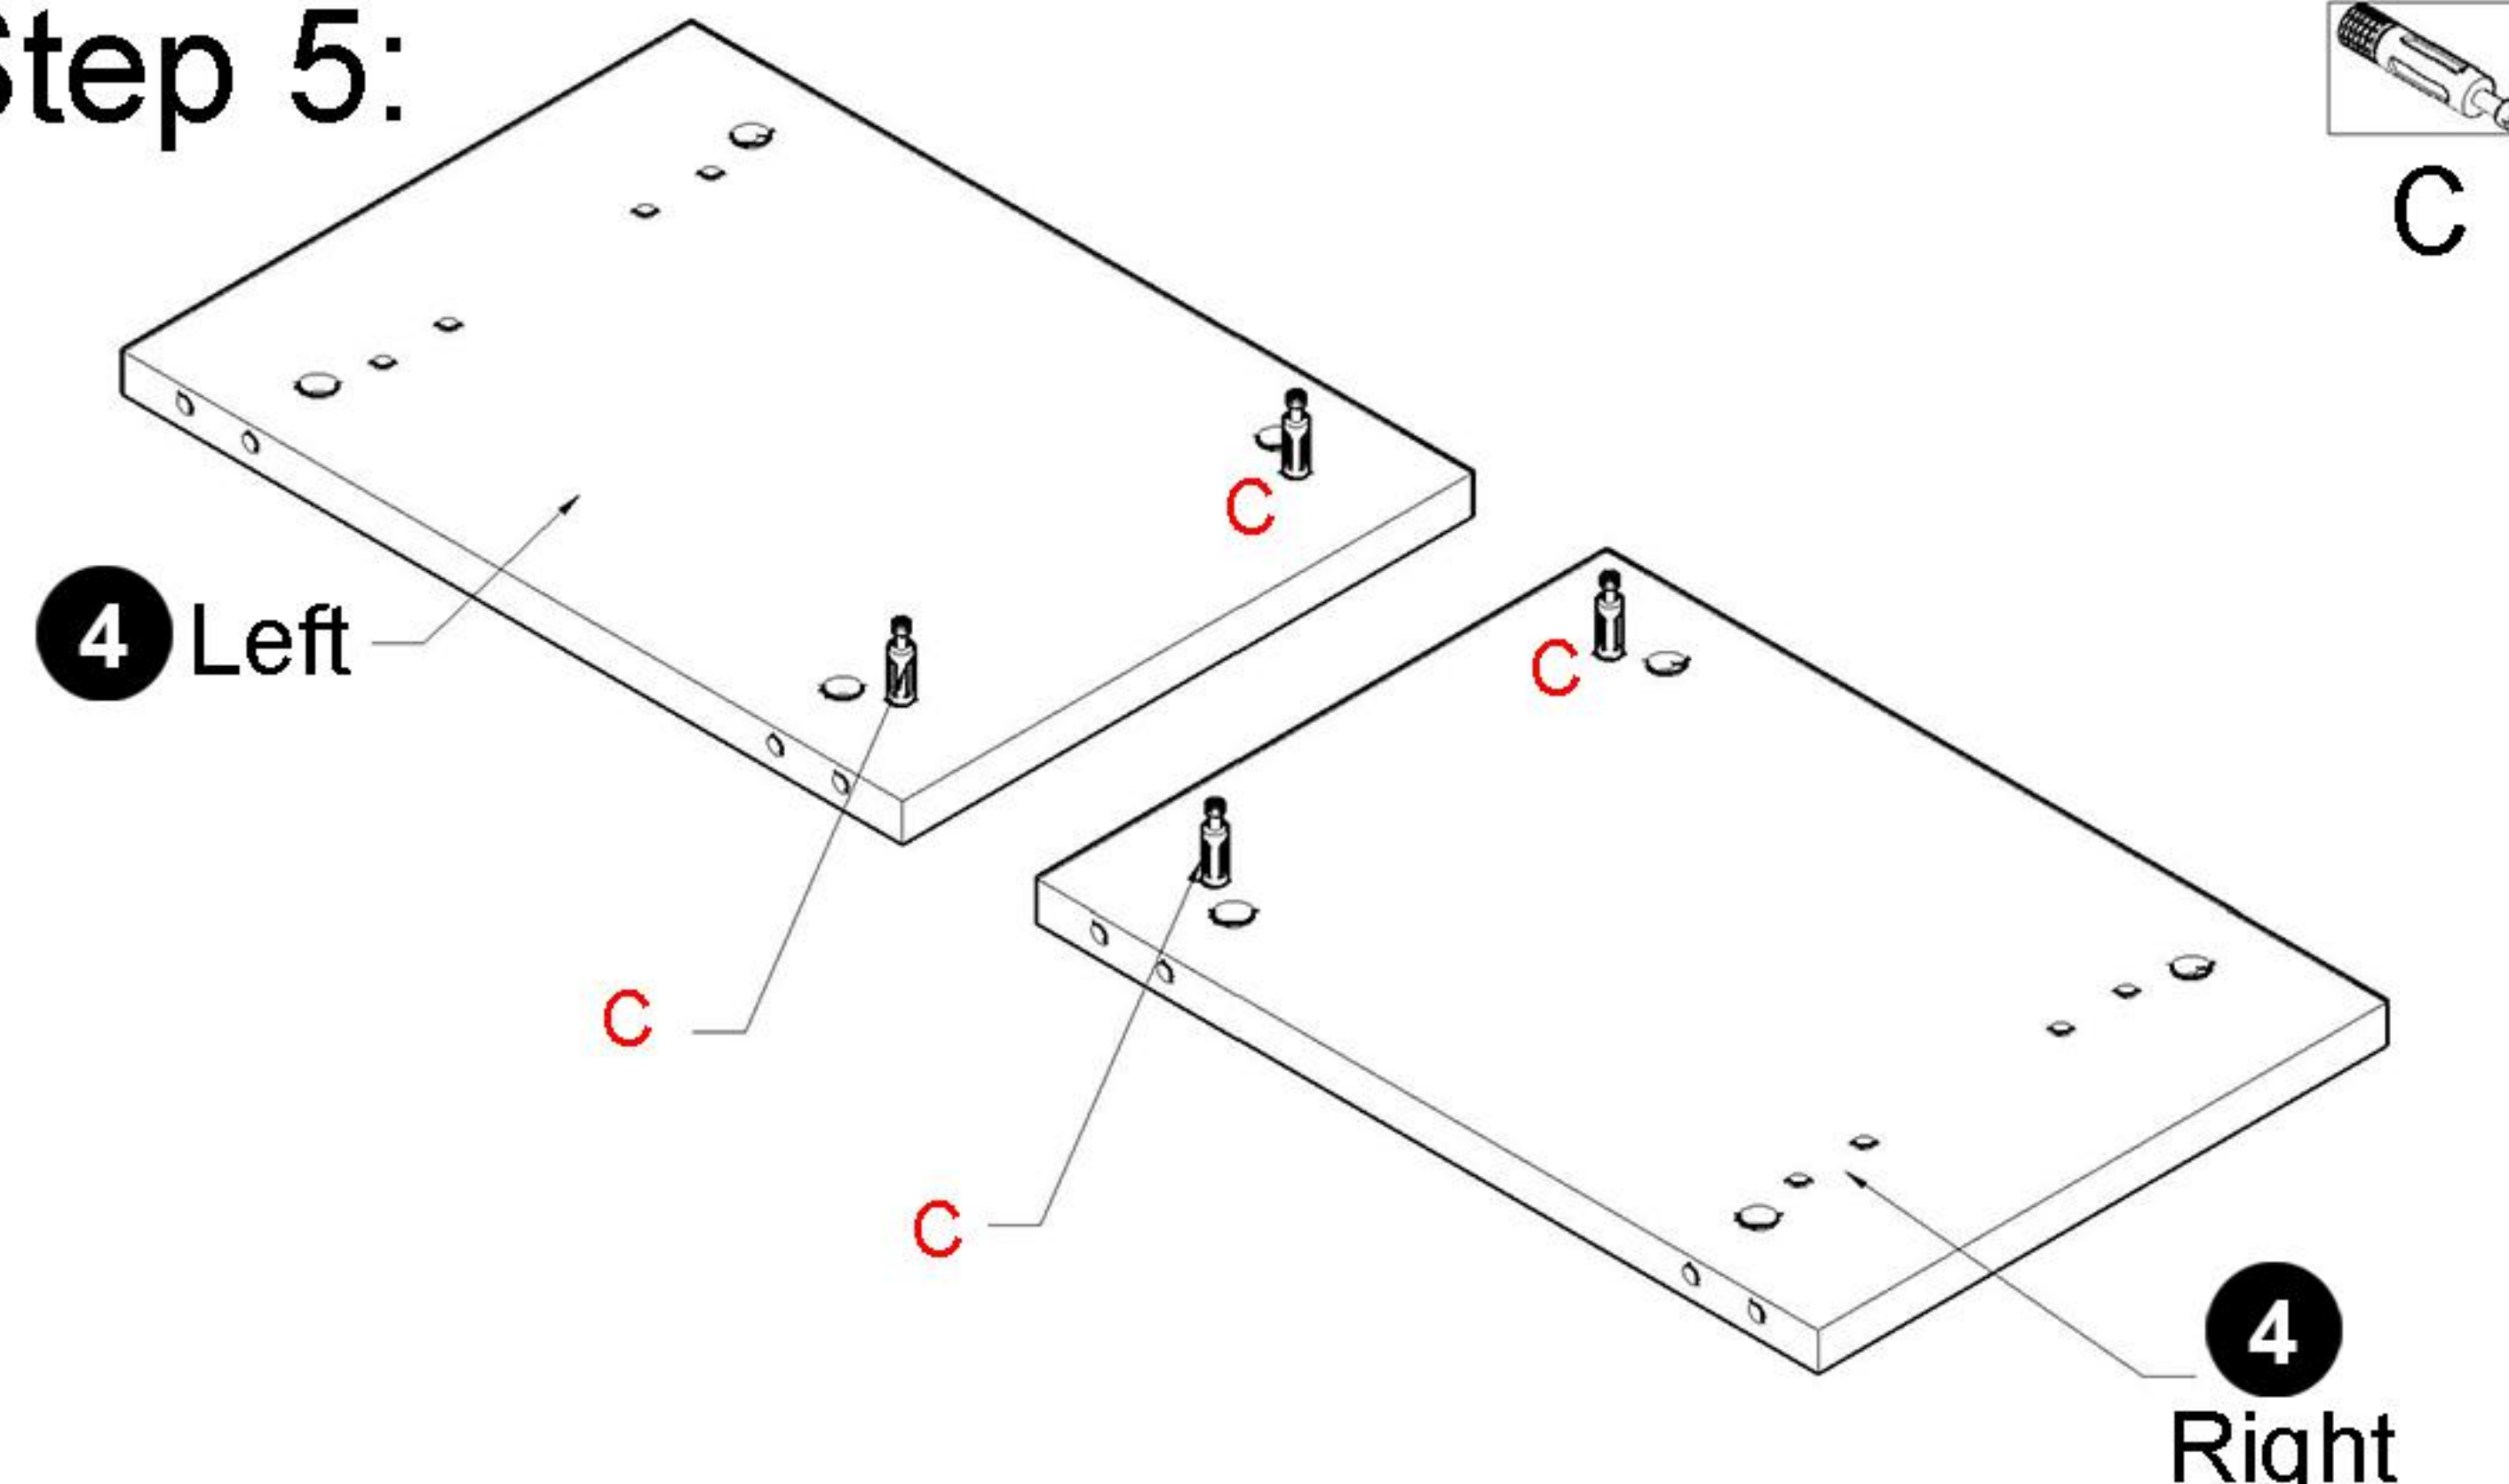



Install the K main body part using D. Make sure the blocked/closed side of the K part faces the back.

Step 6:

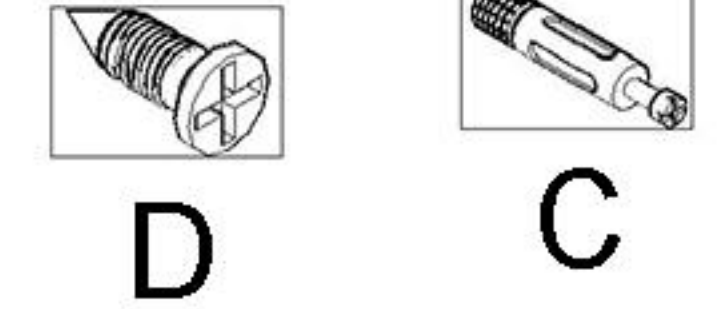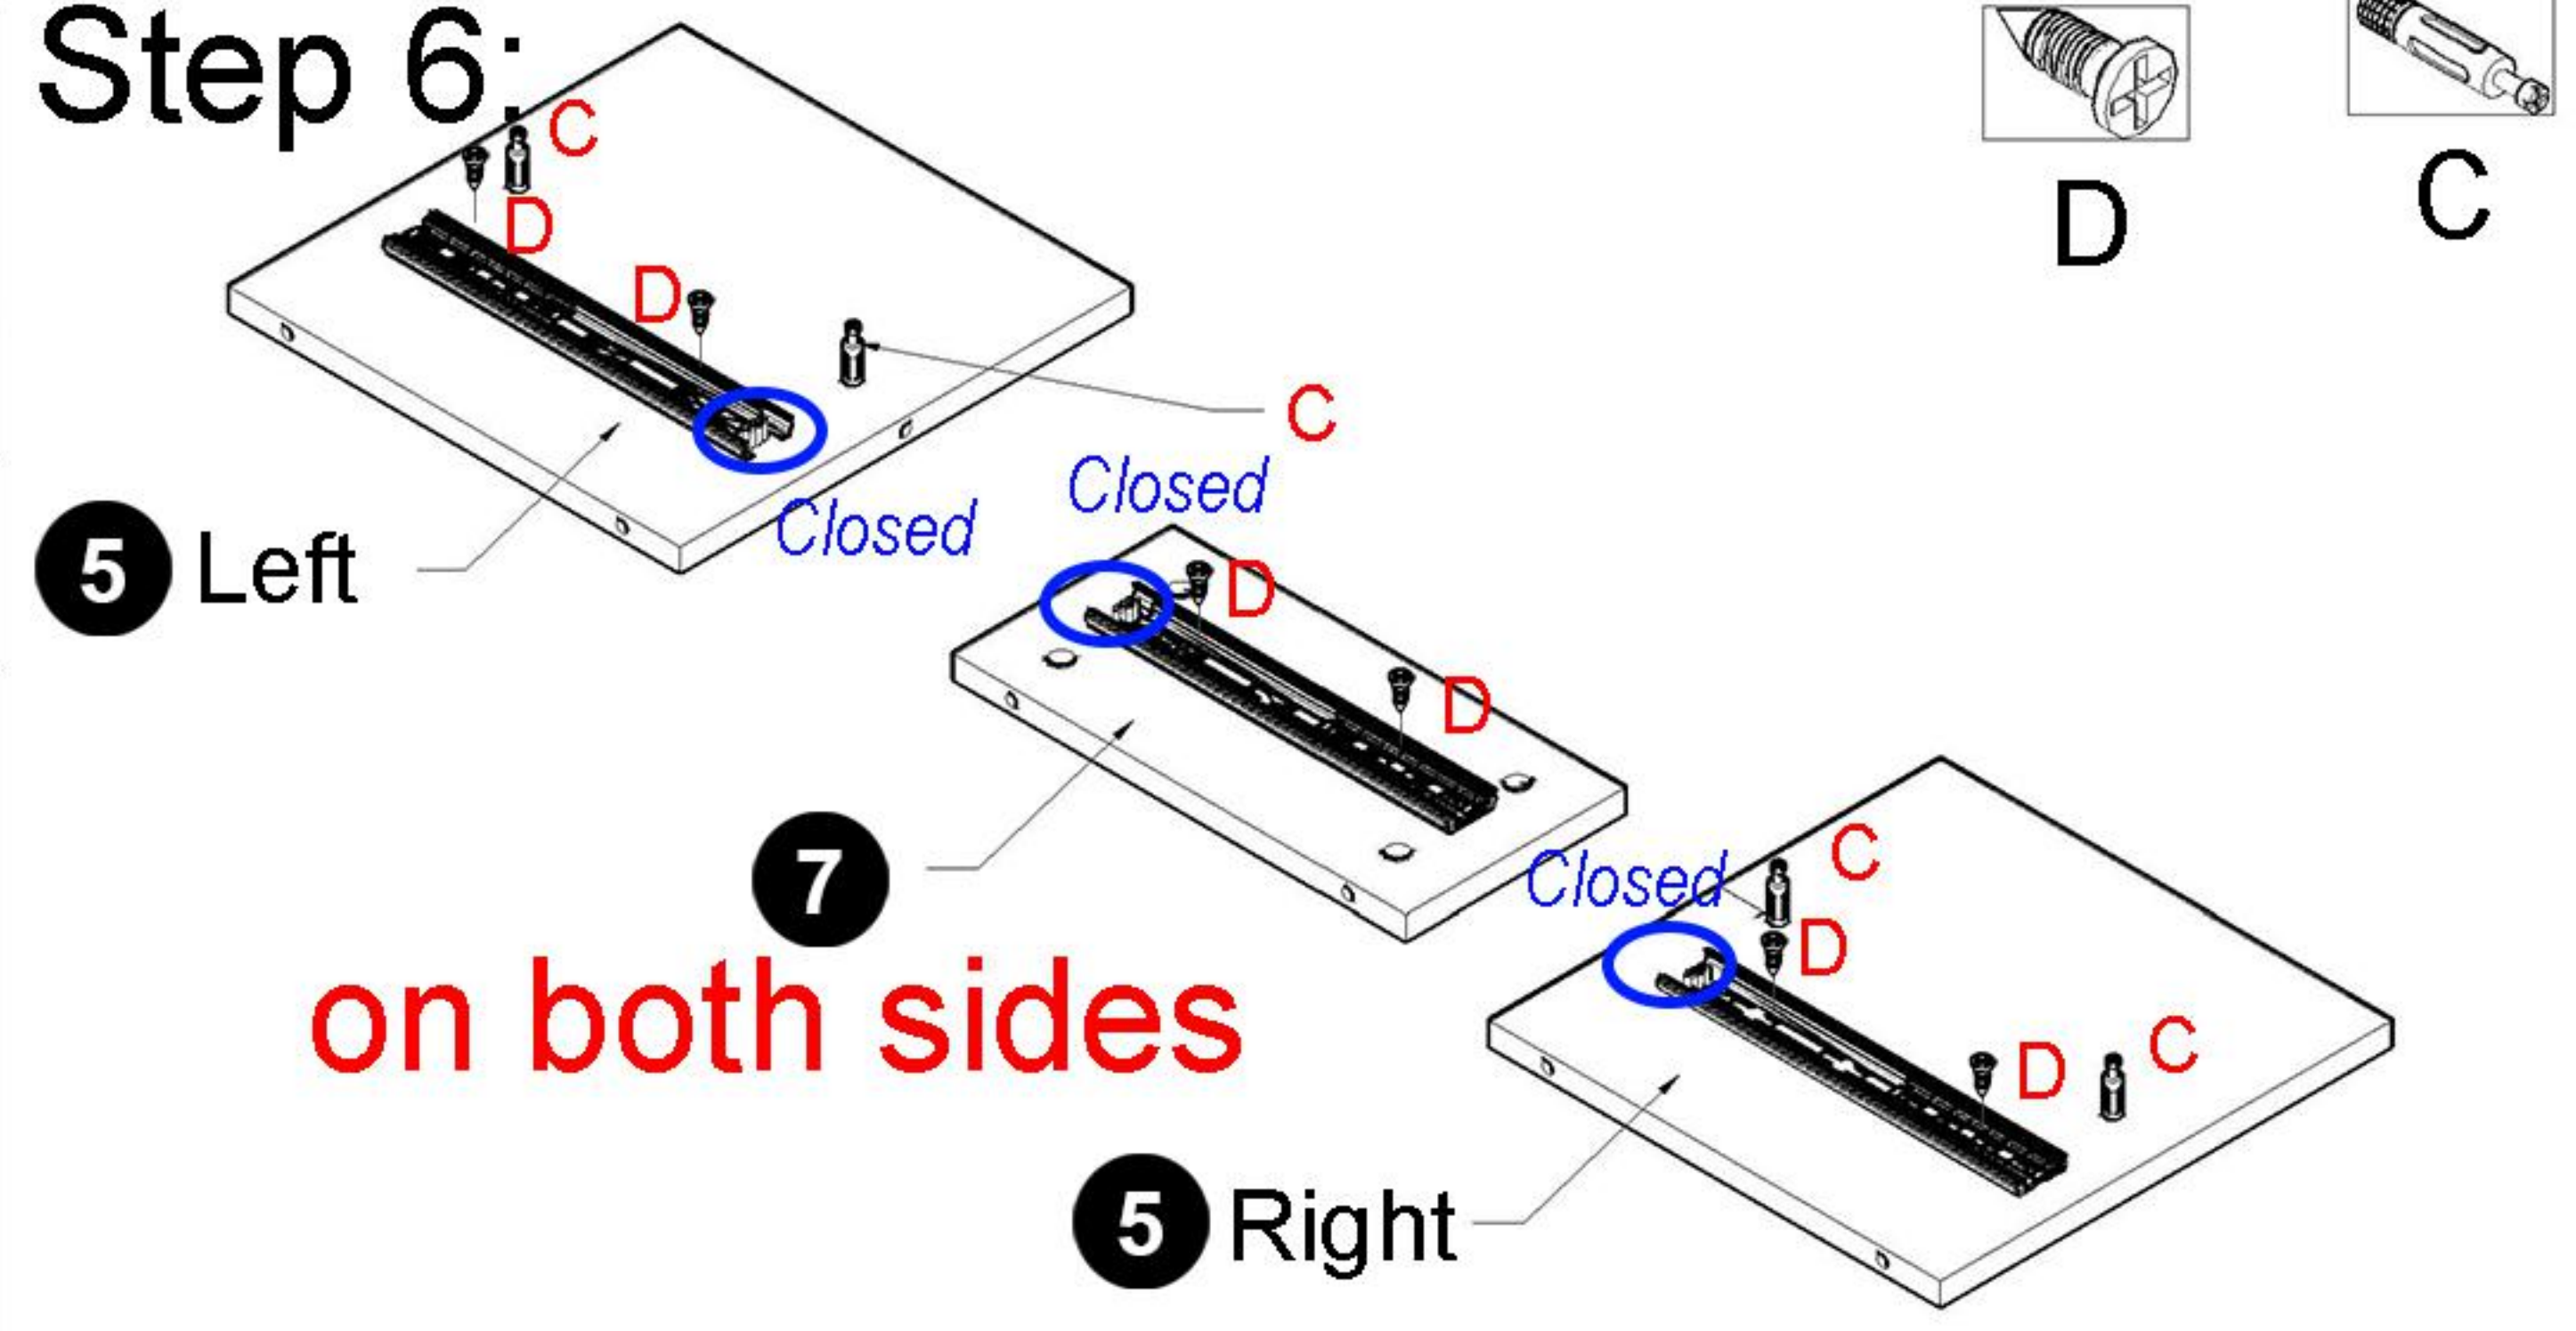


Install the L main body parts on both sides of Panel 7.

Step 7:

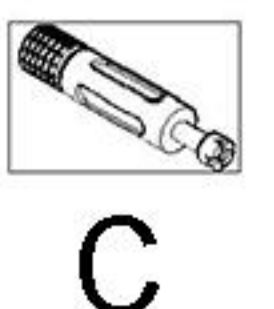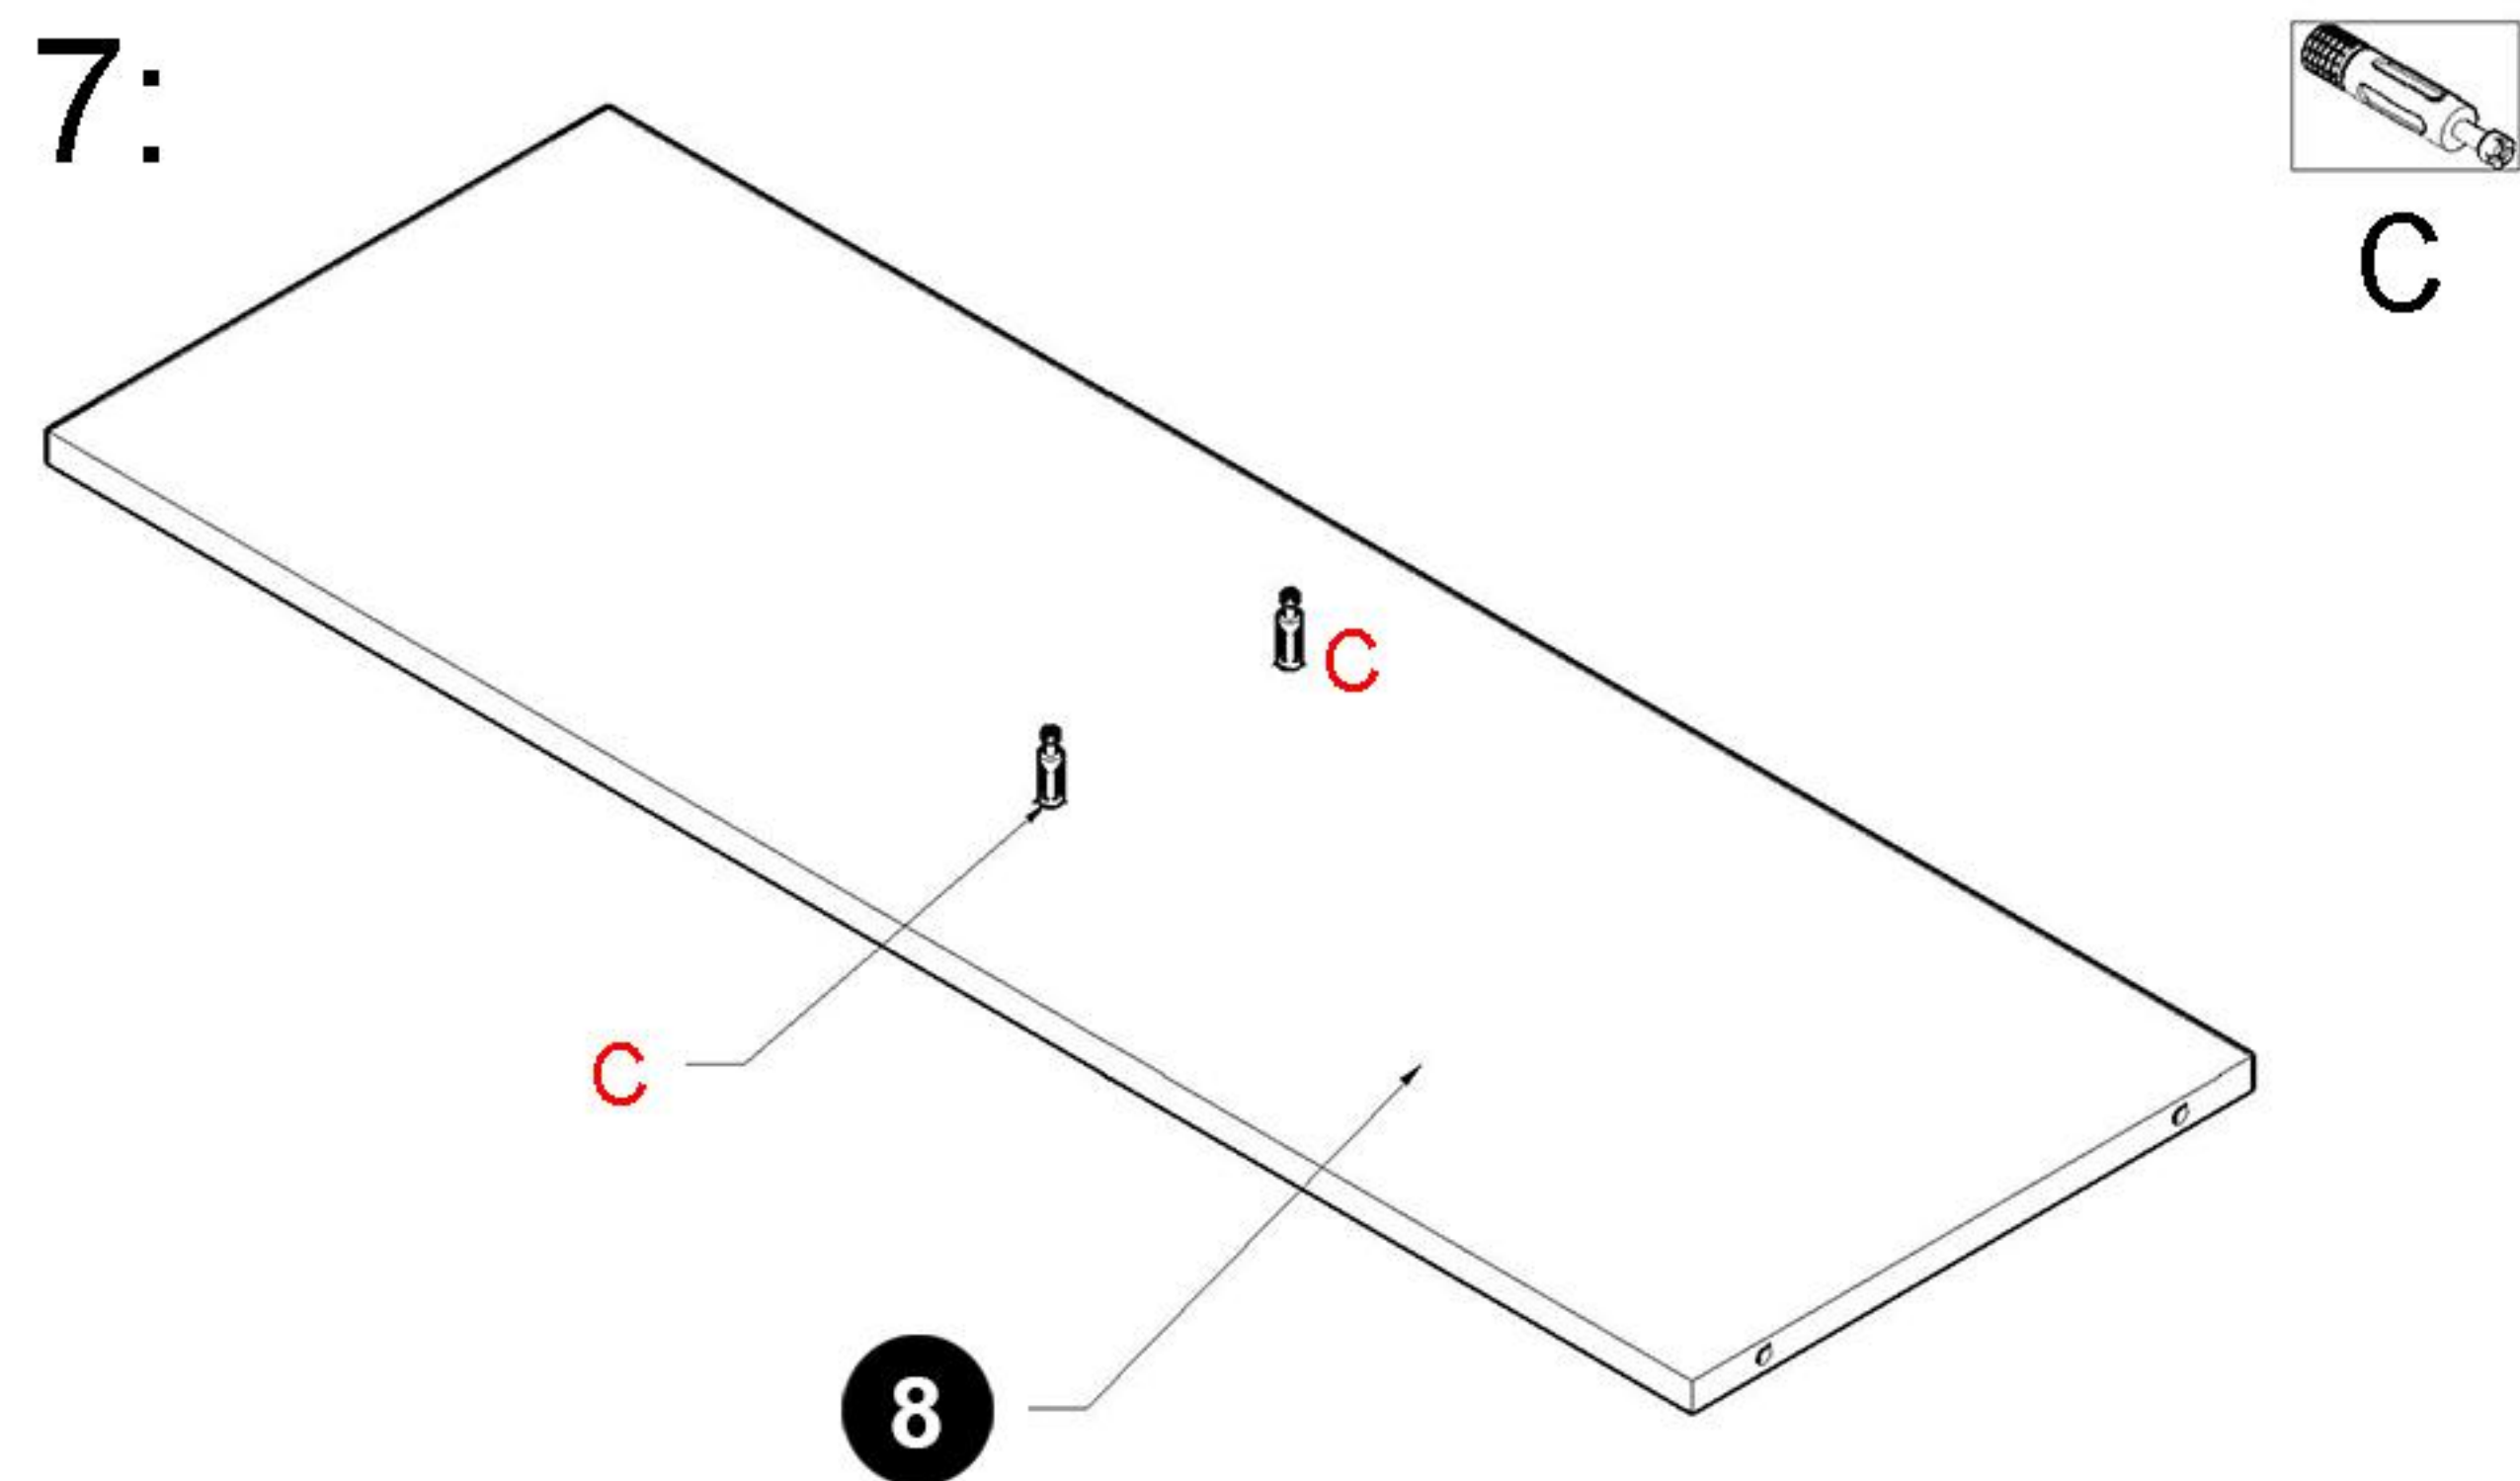


Secure from the back using part B.

Step 8:

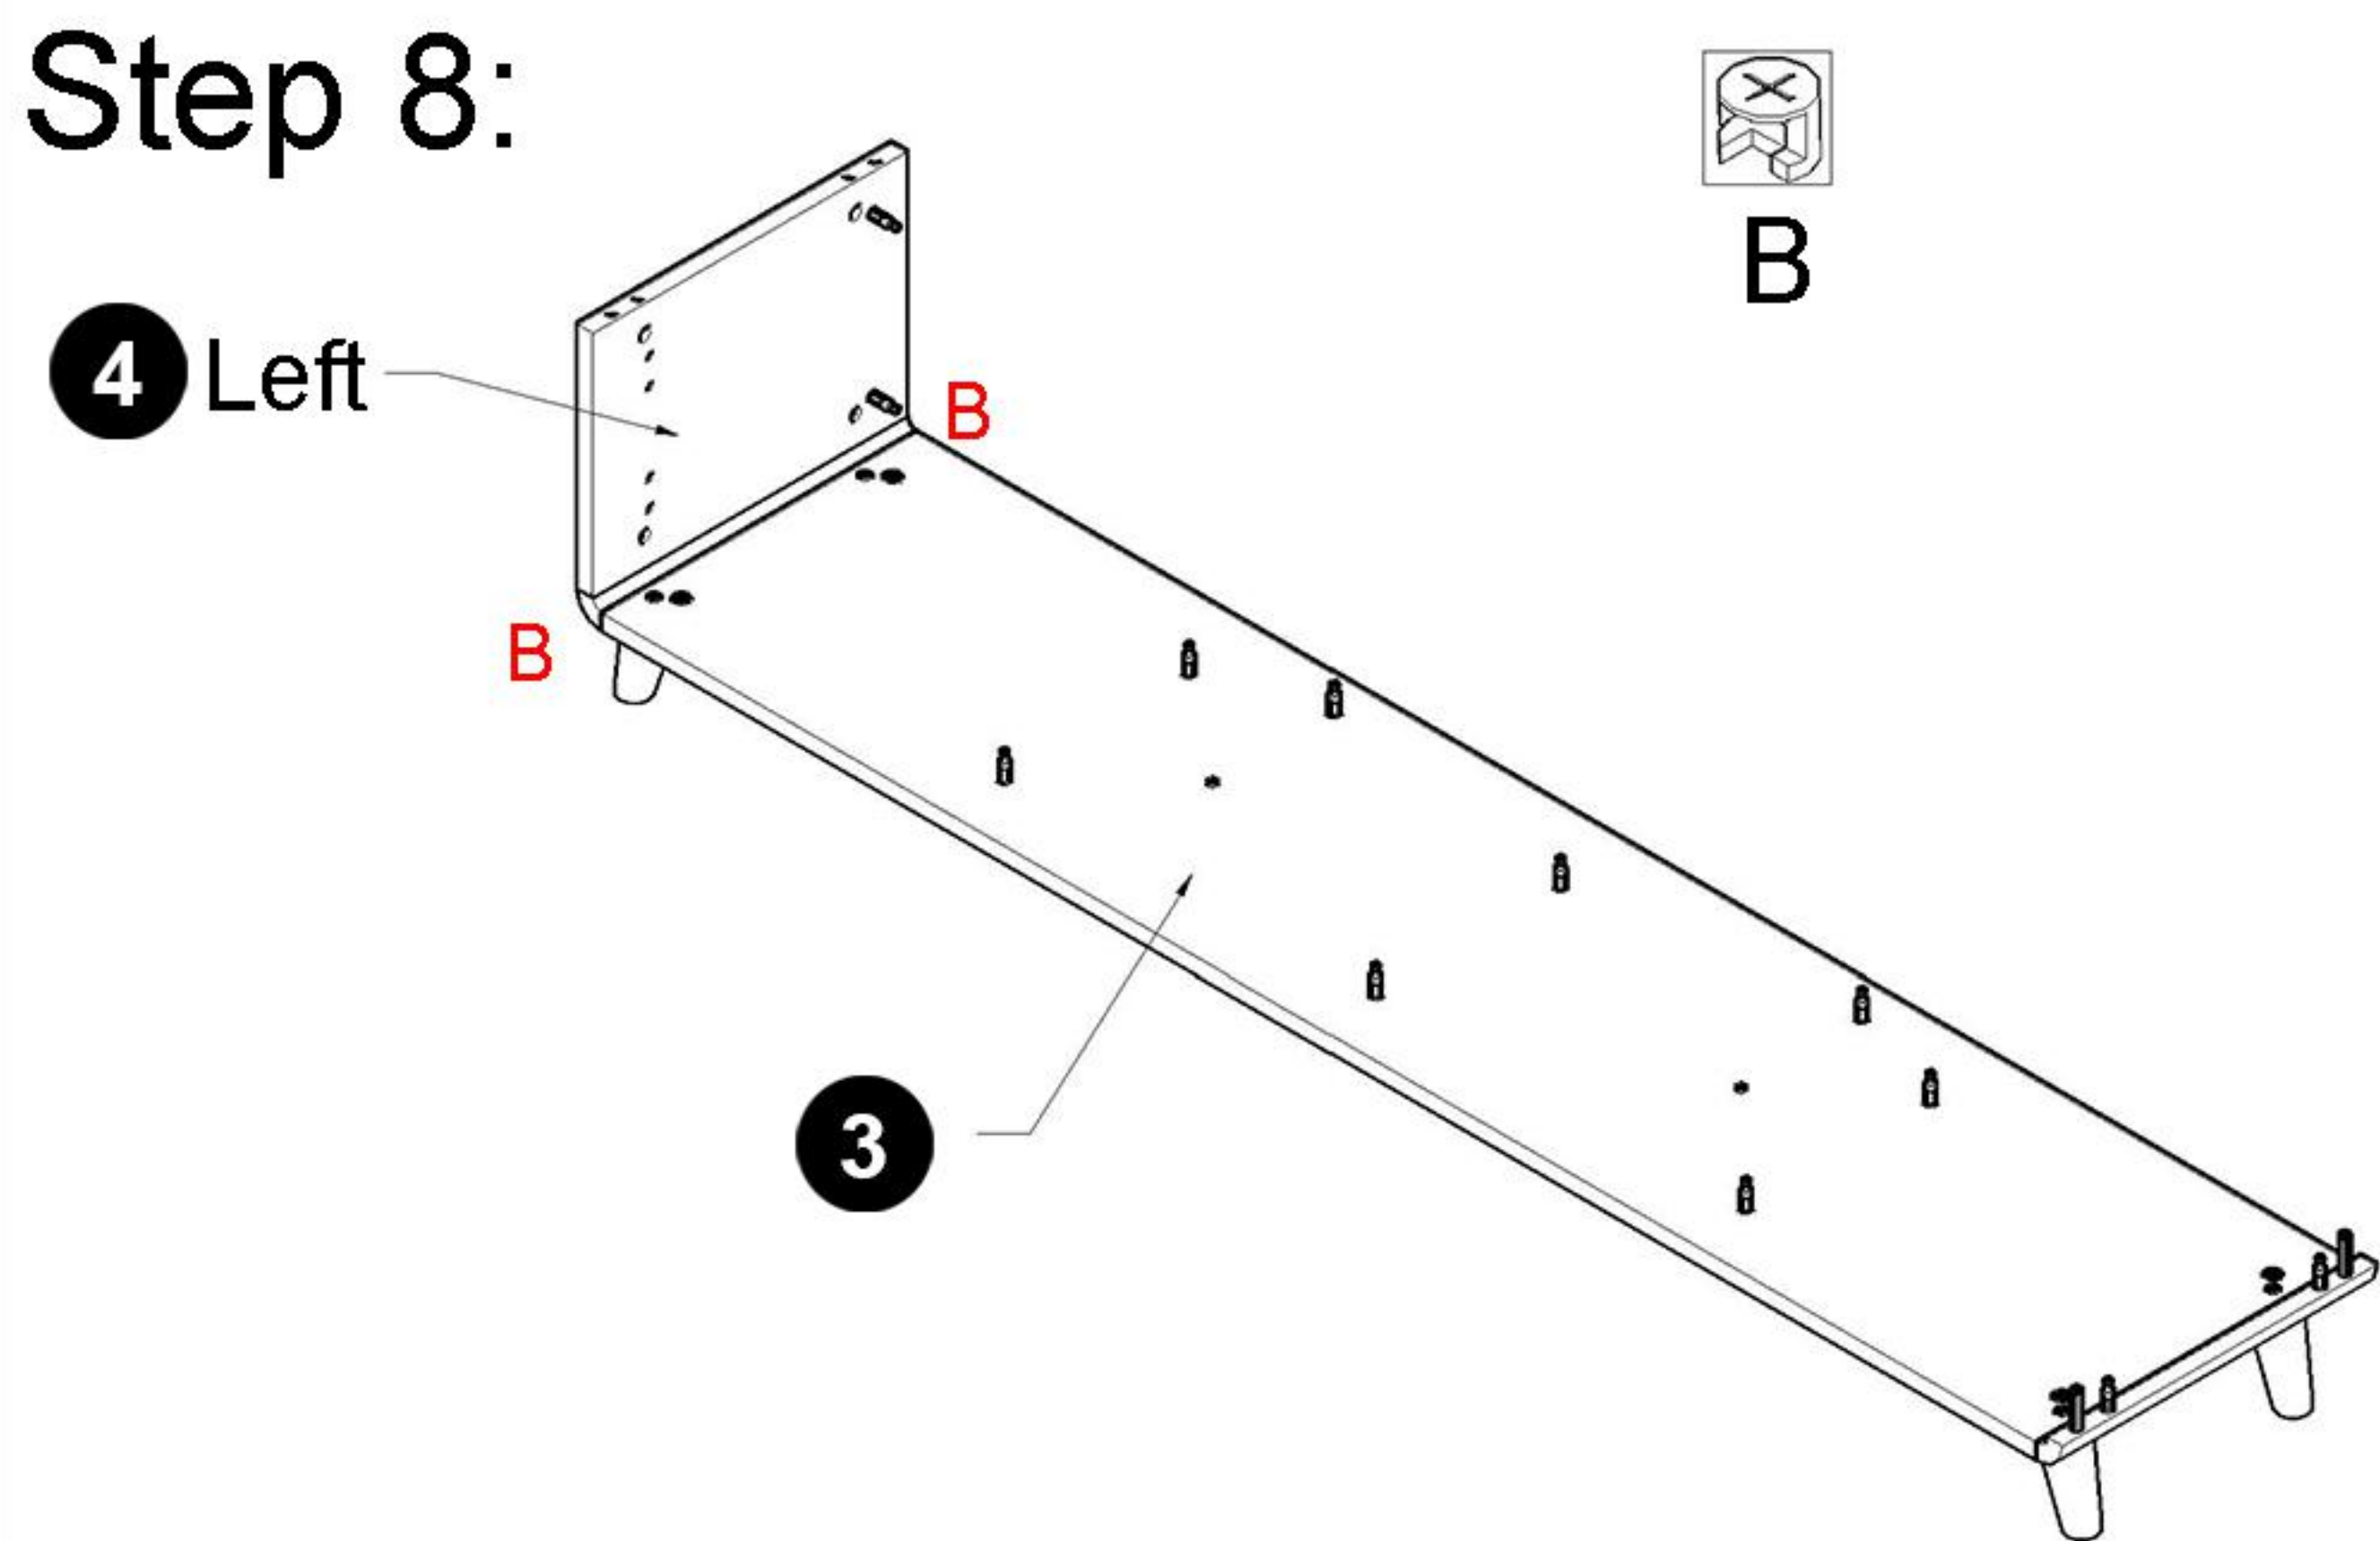


Secure the connection with part B.

Step 9:

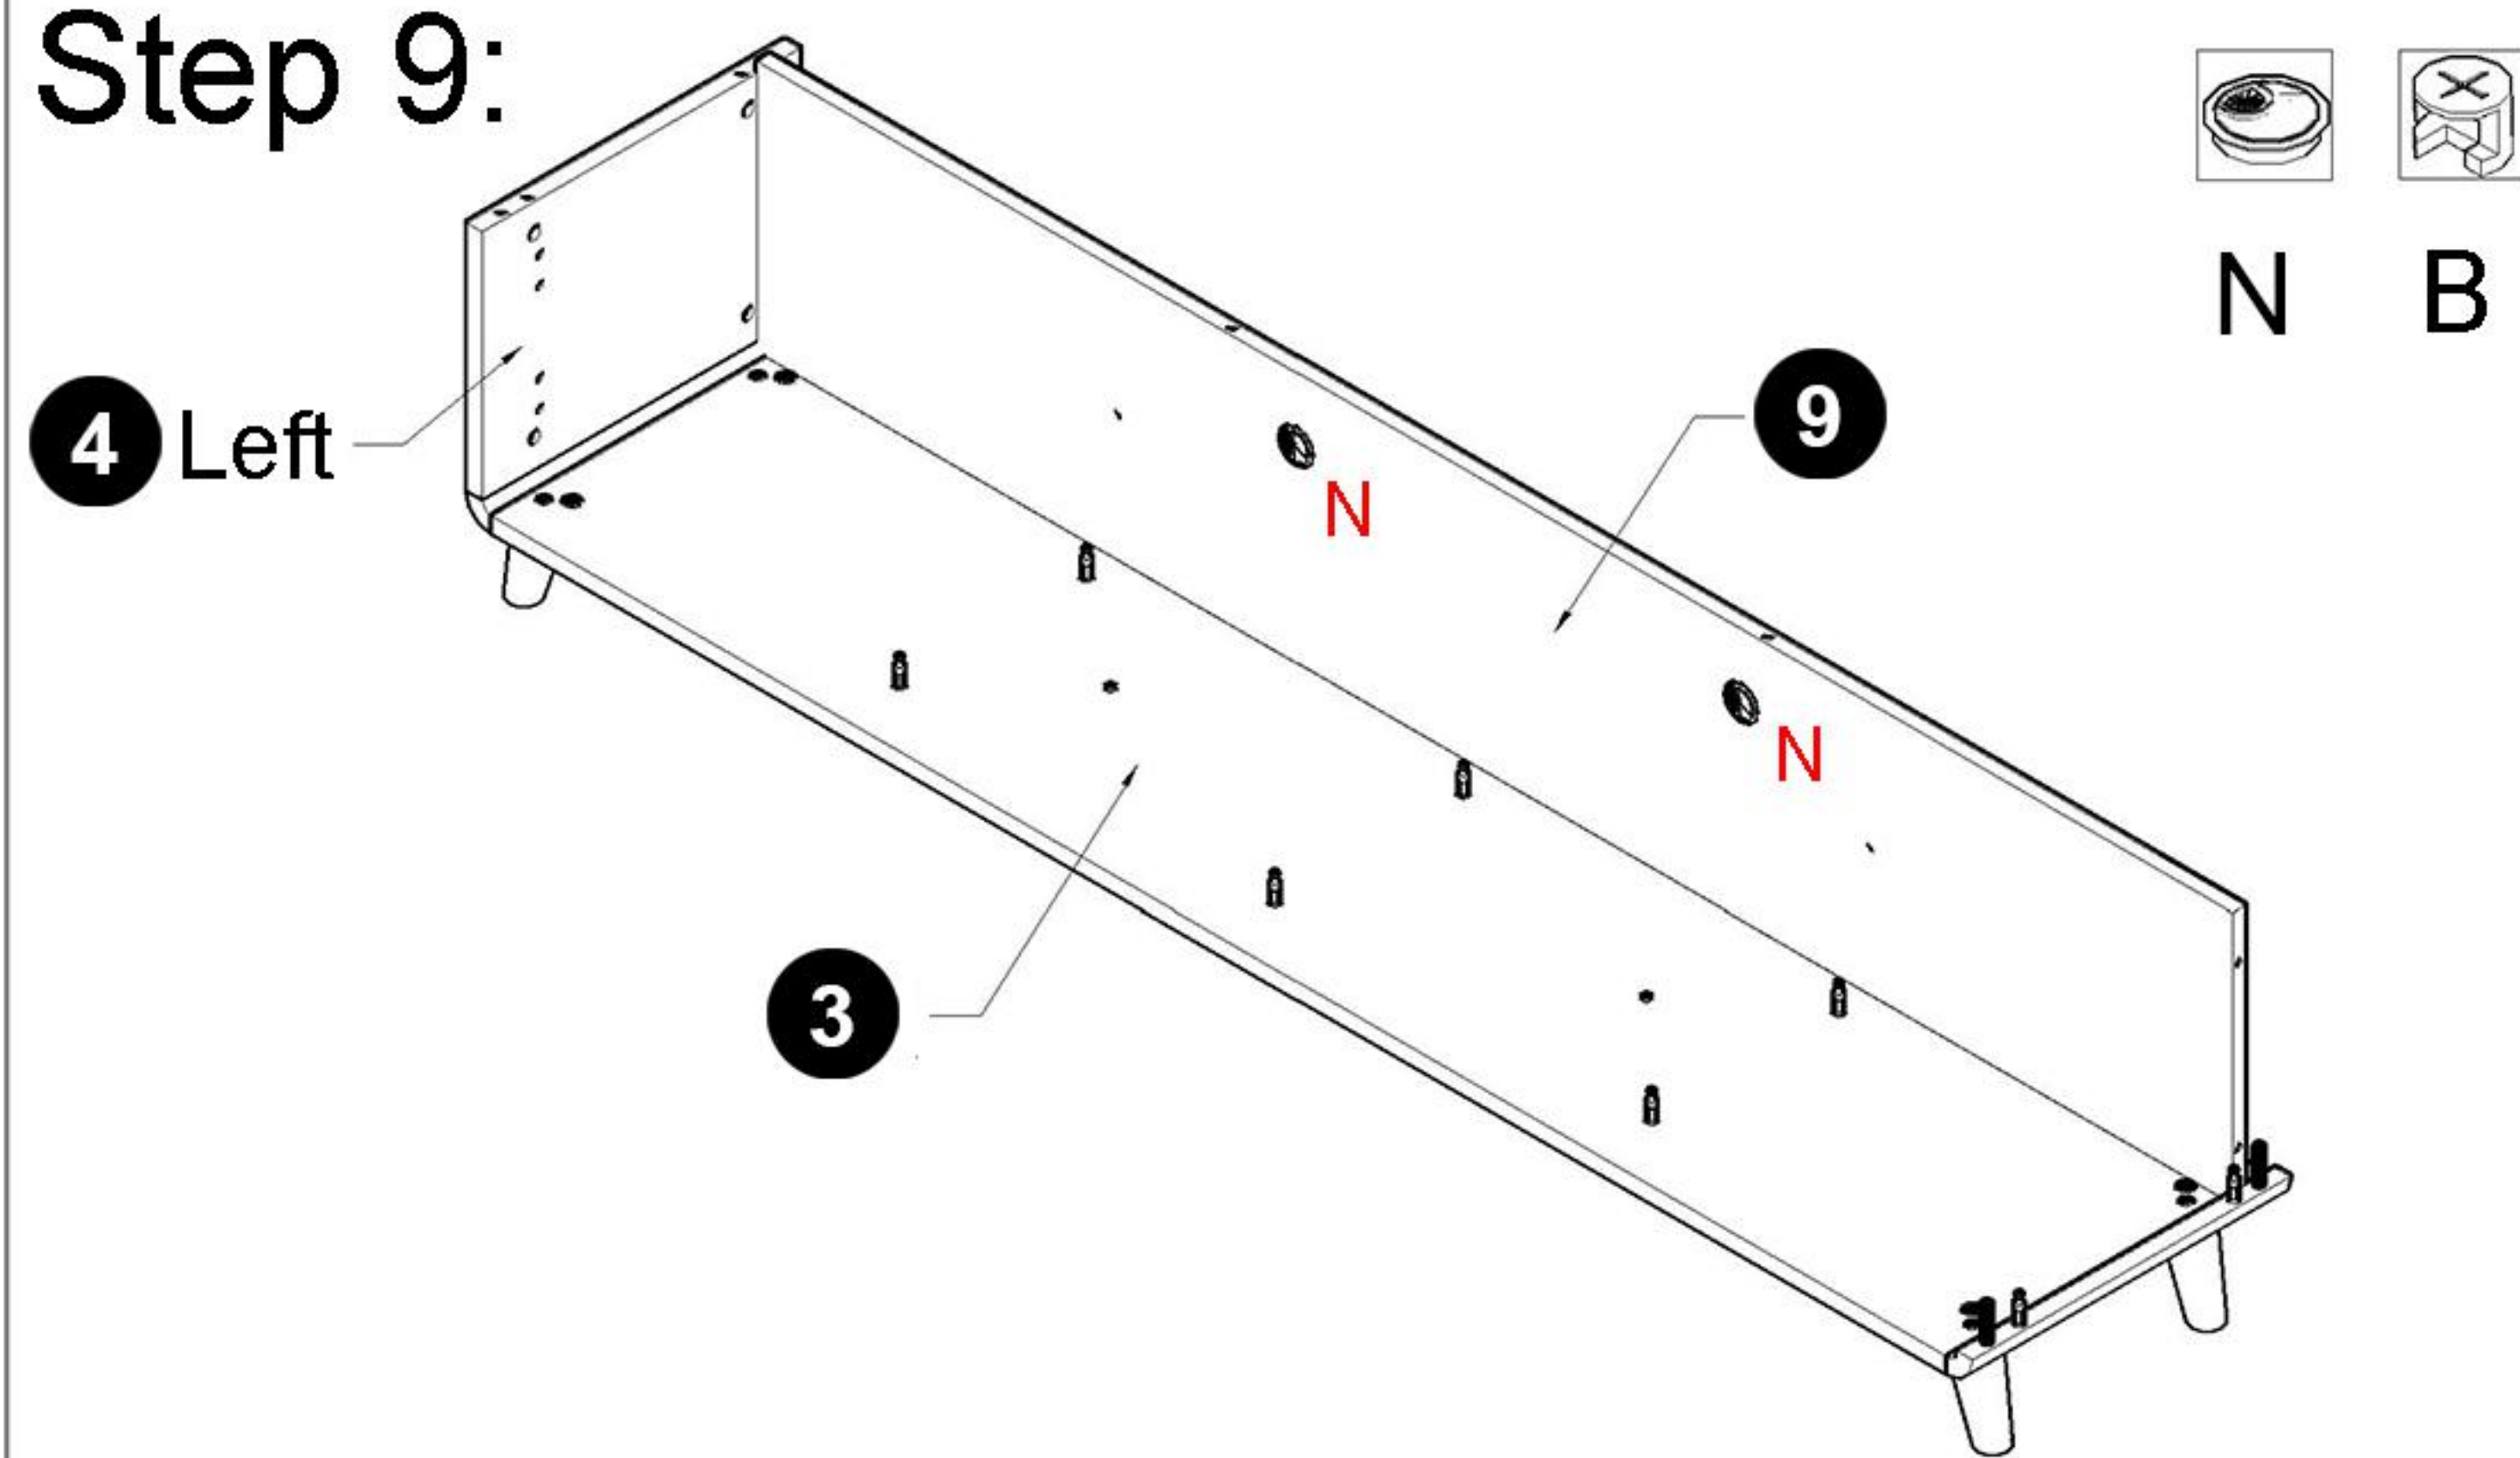


Secure the connection with part B.

Step 10:

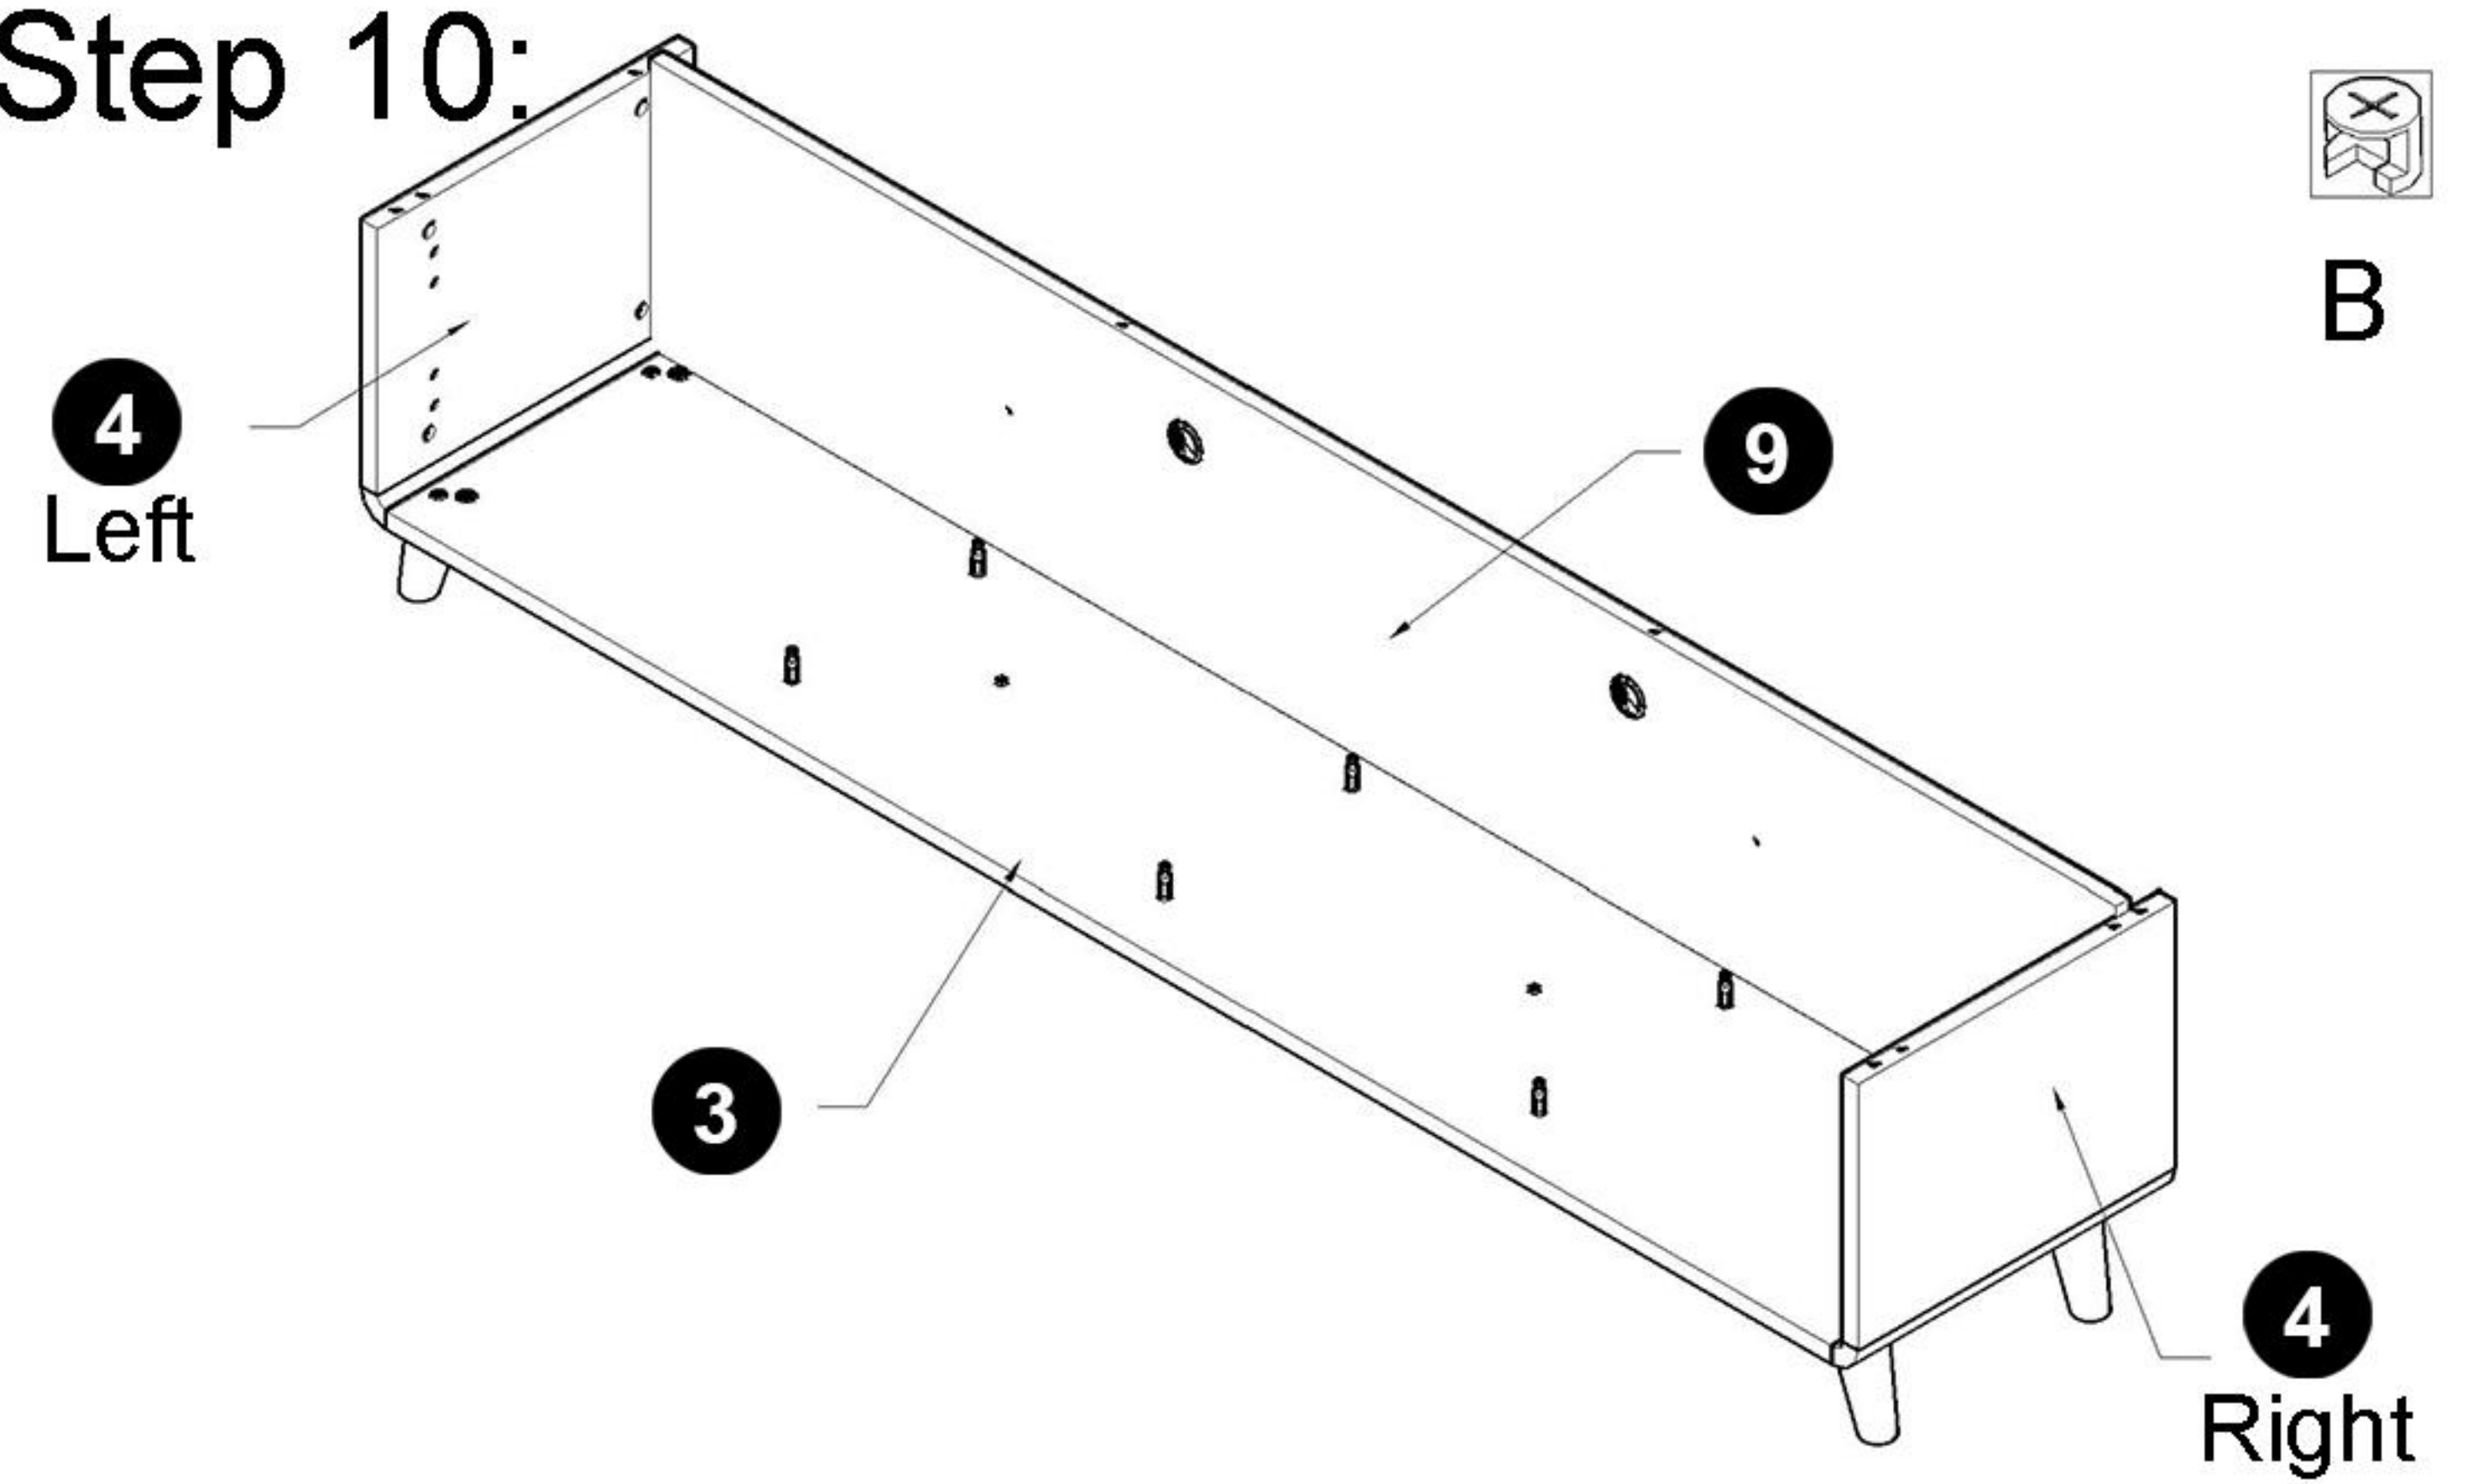


Secure the connection with part B.

Step 11:

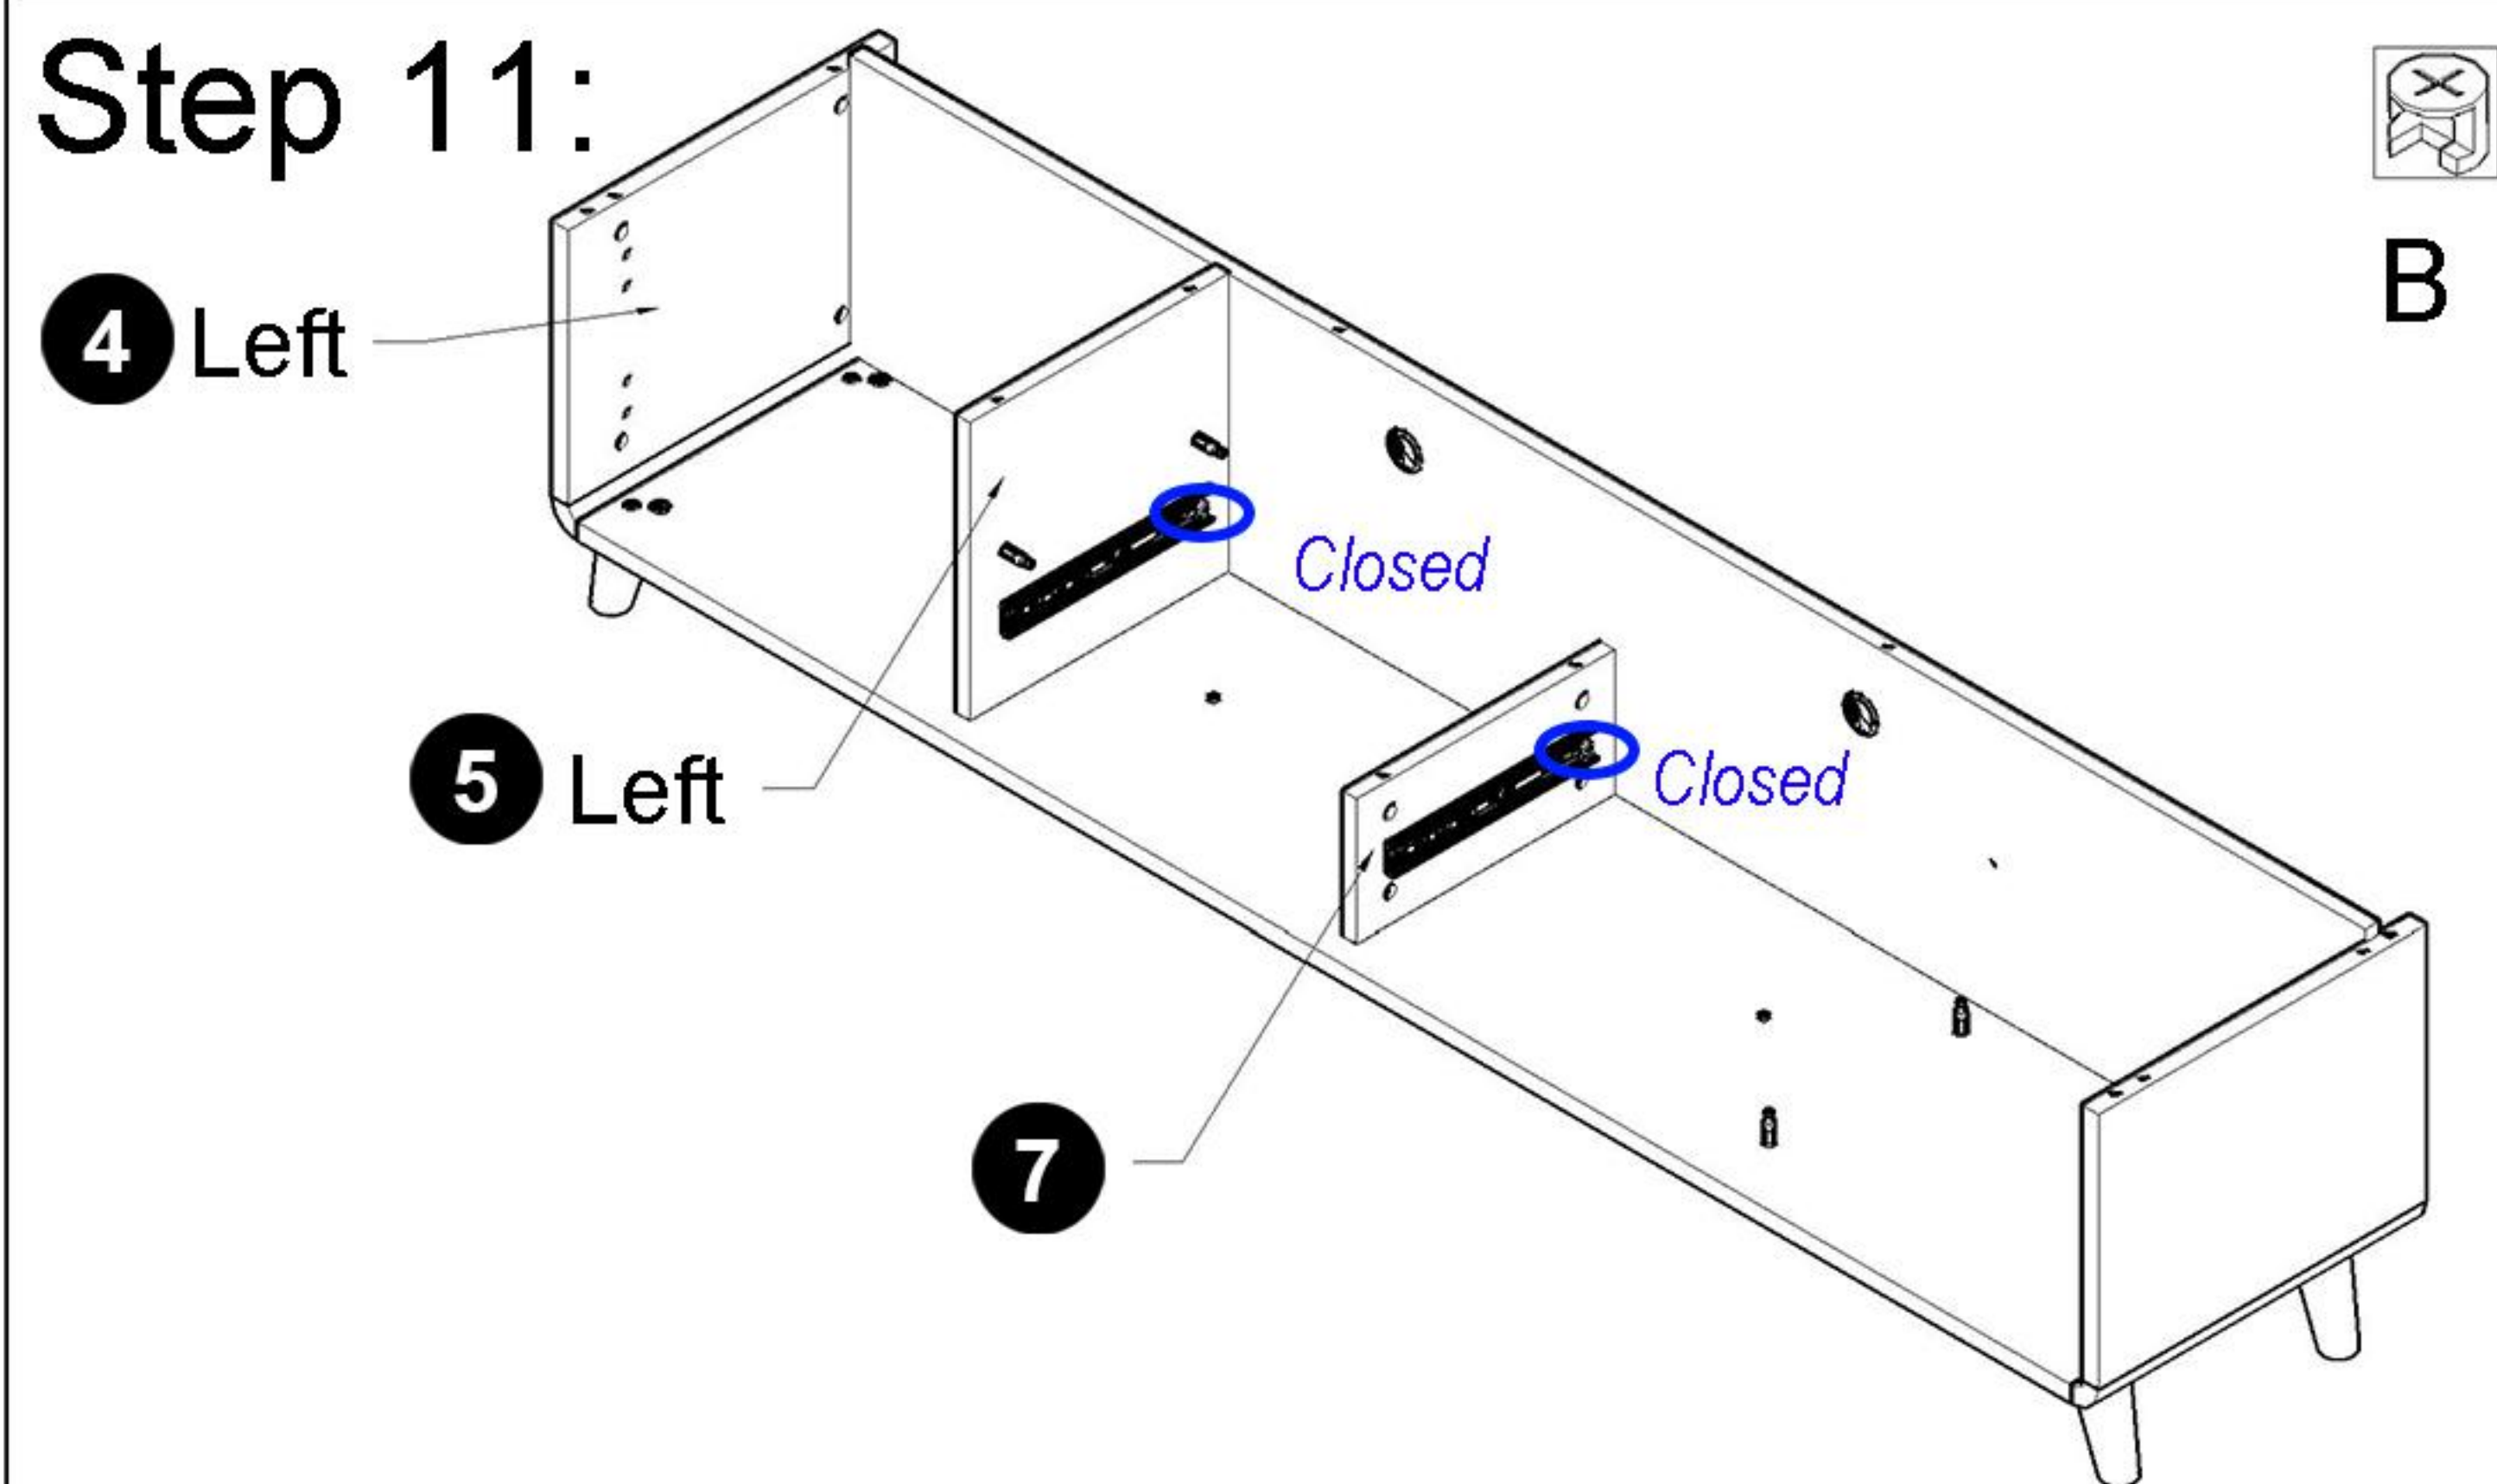


Secure all joints with B

Step 12:

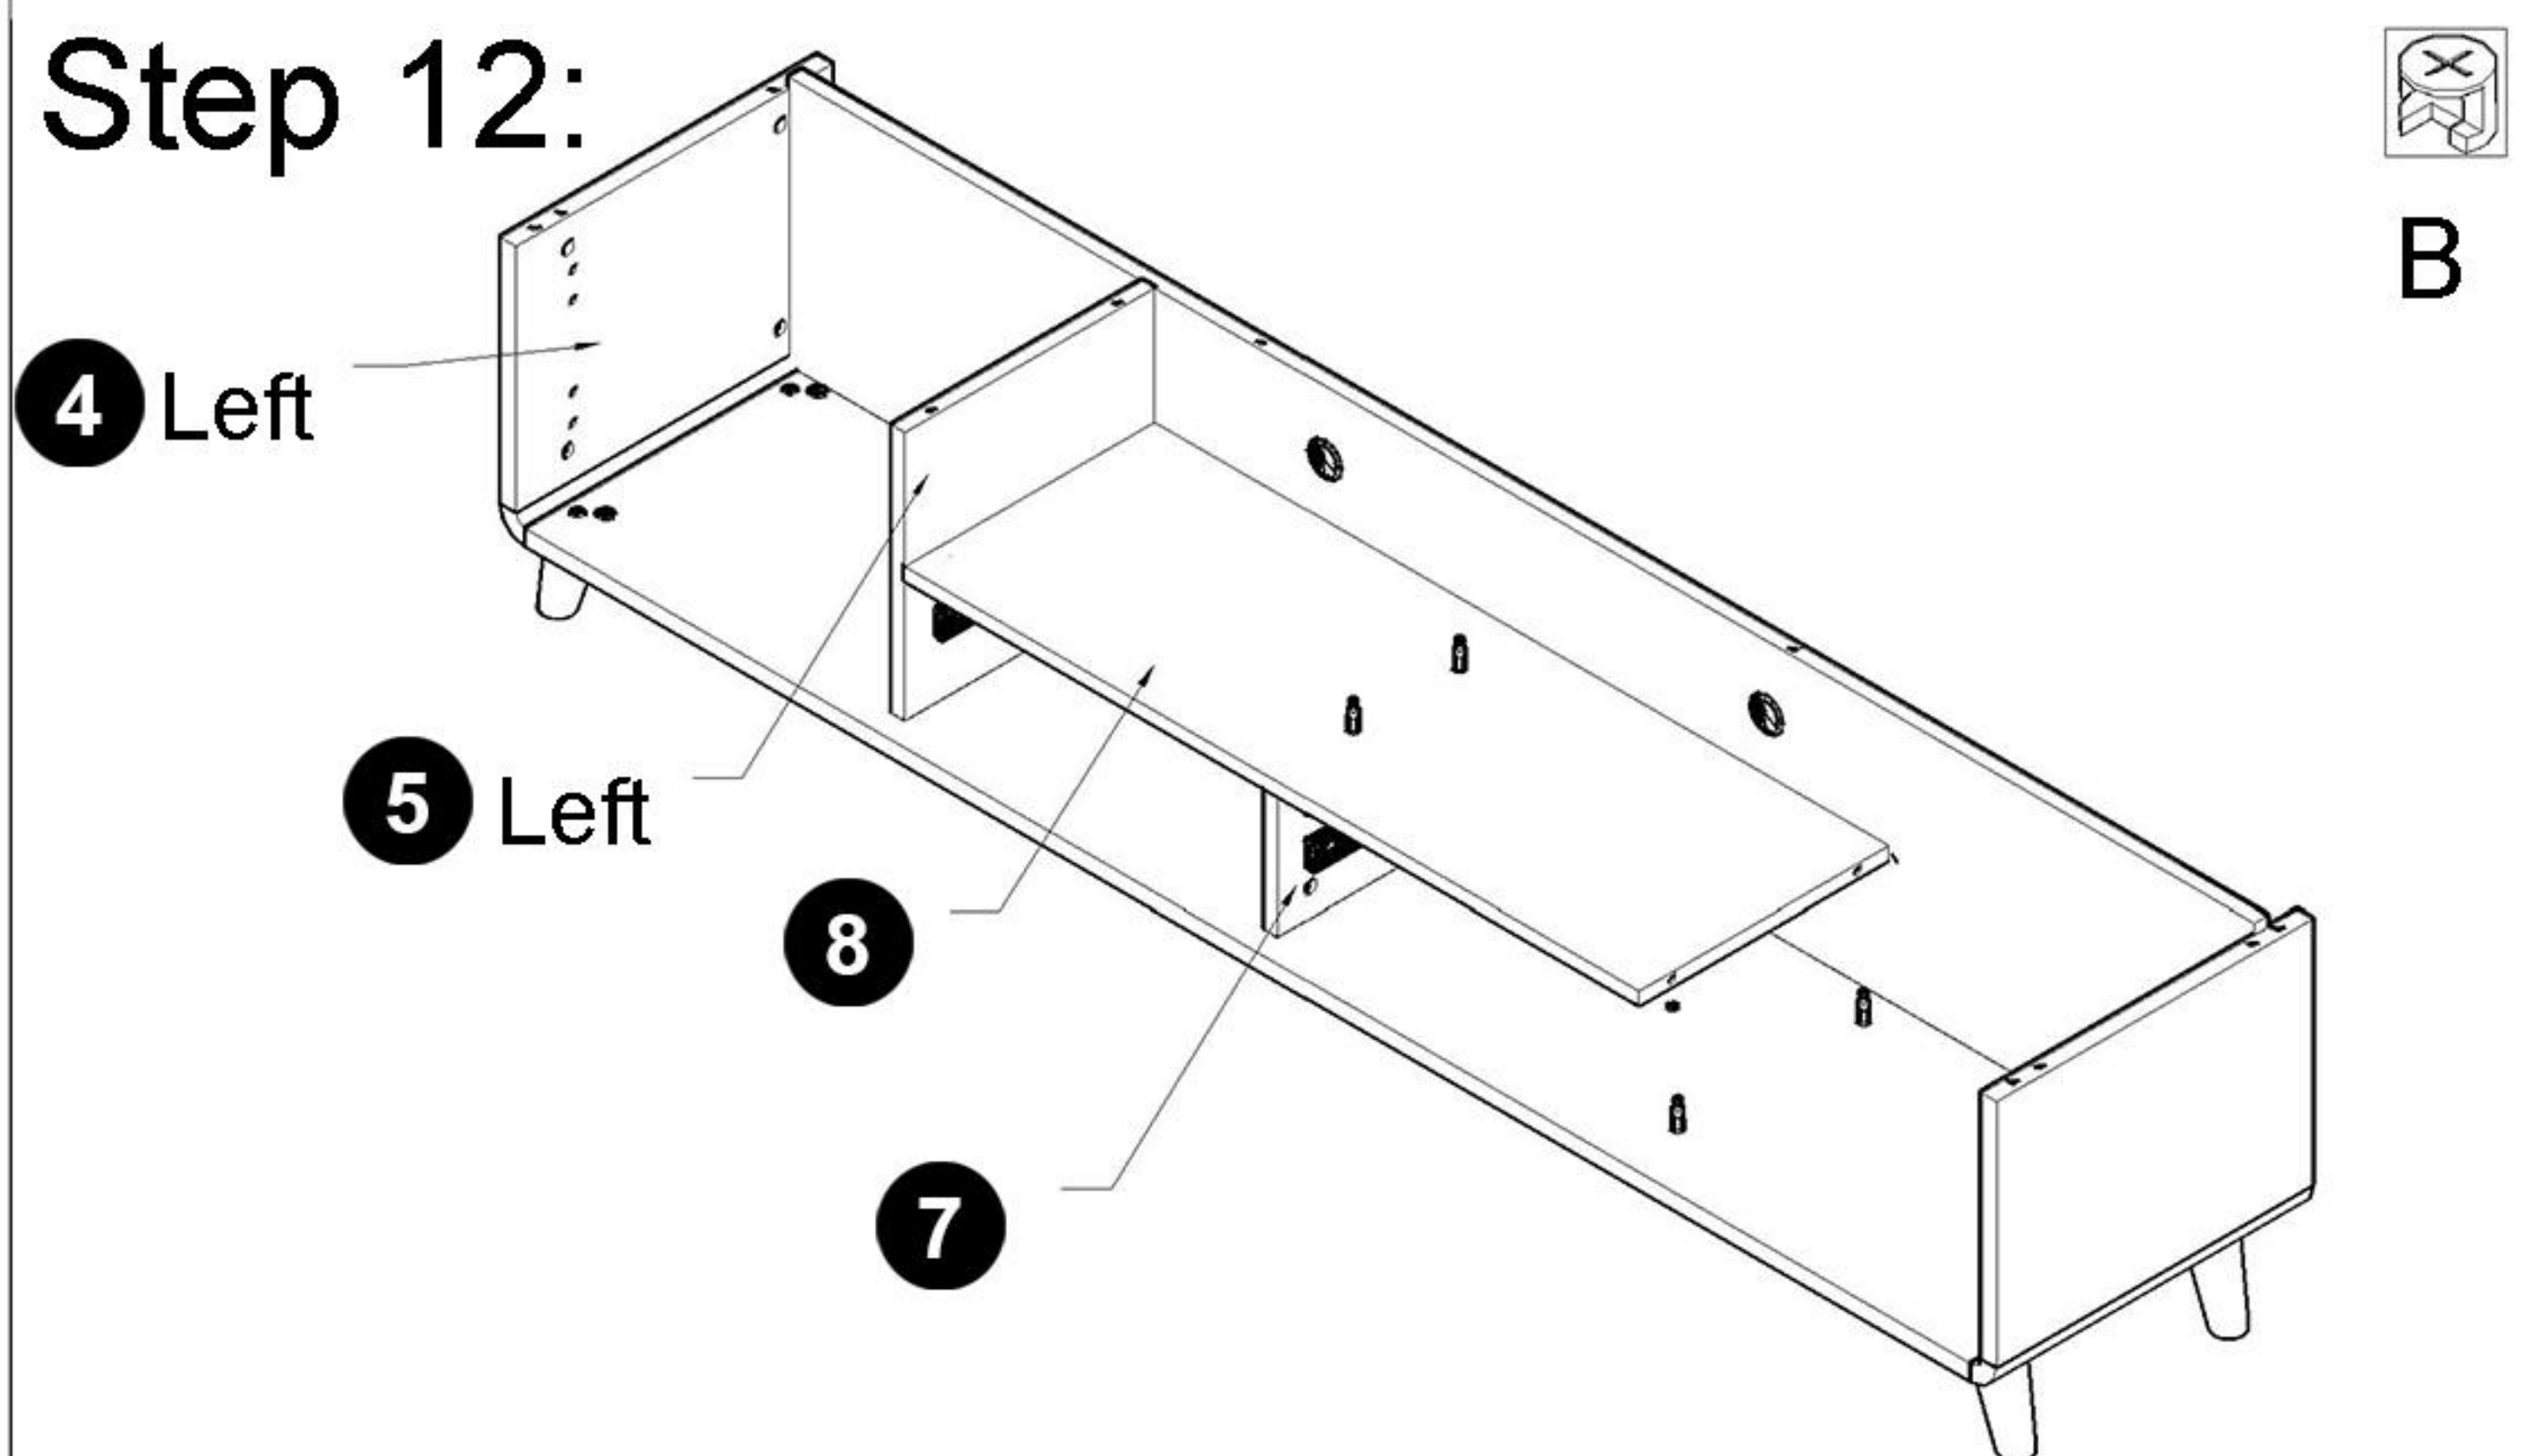


Secure all joints with B

Step 13:

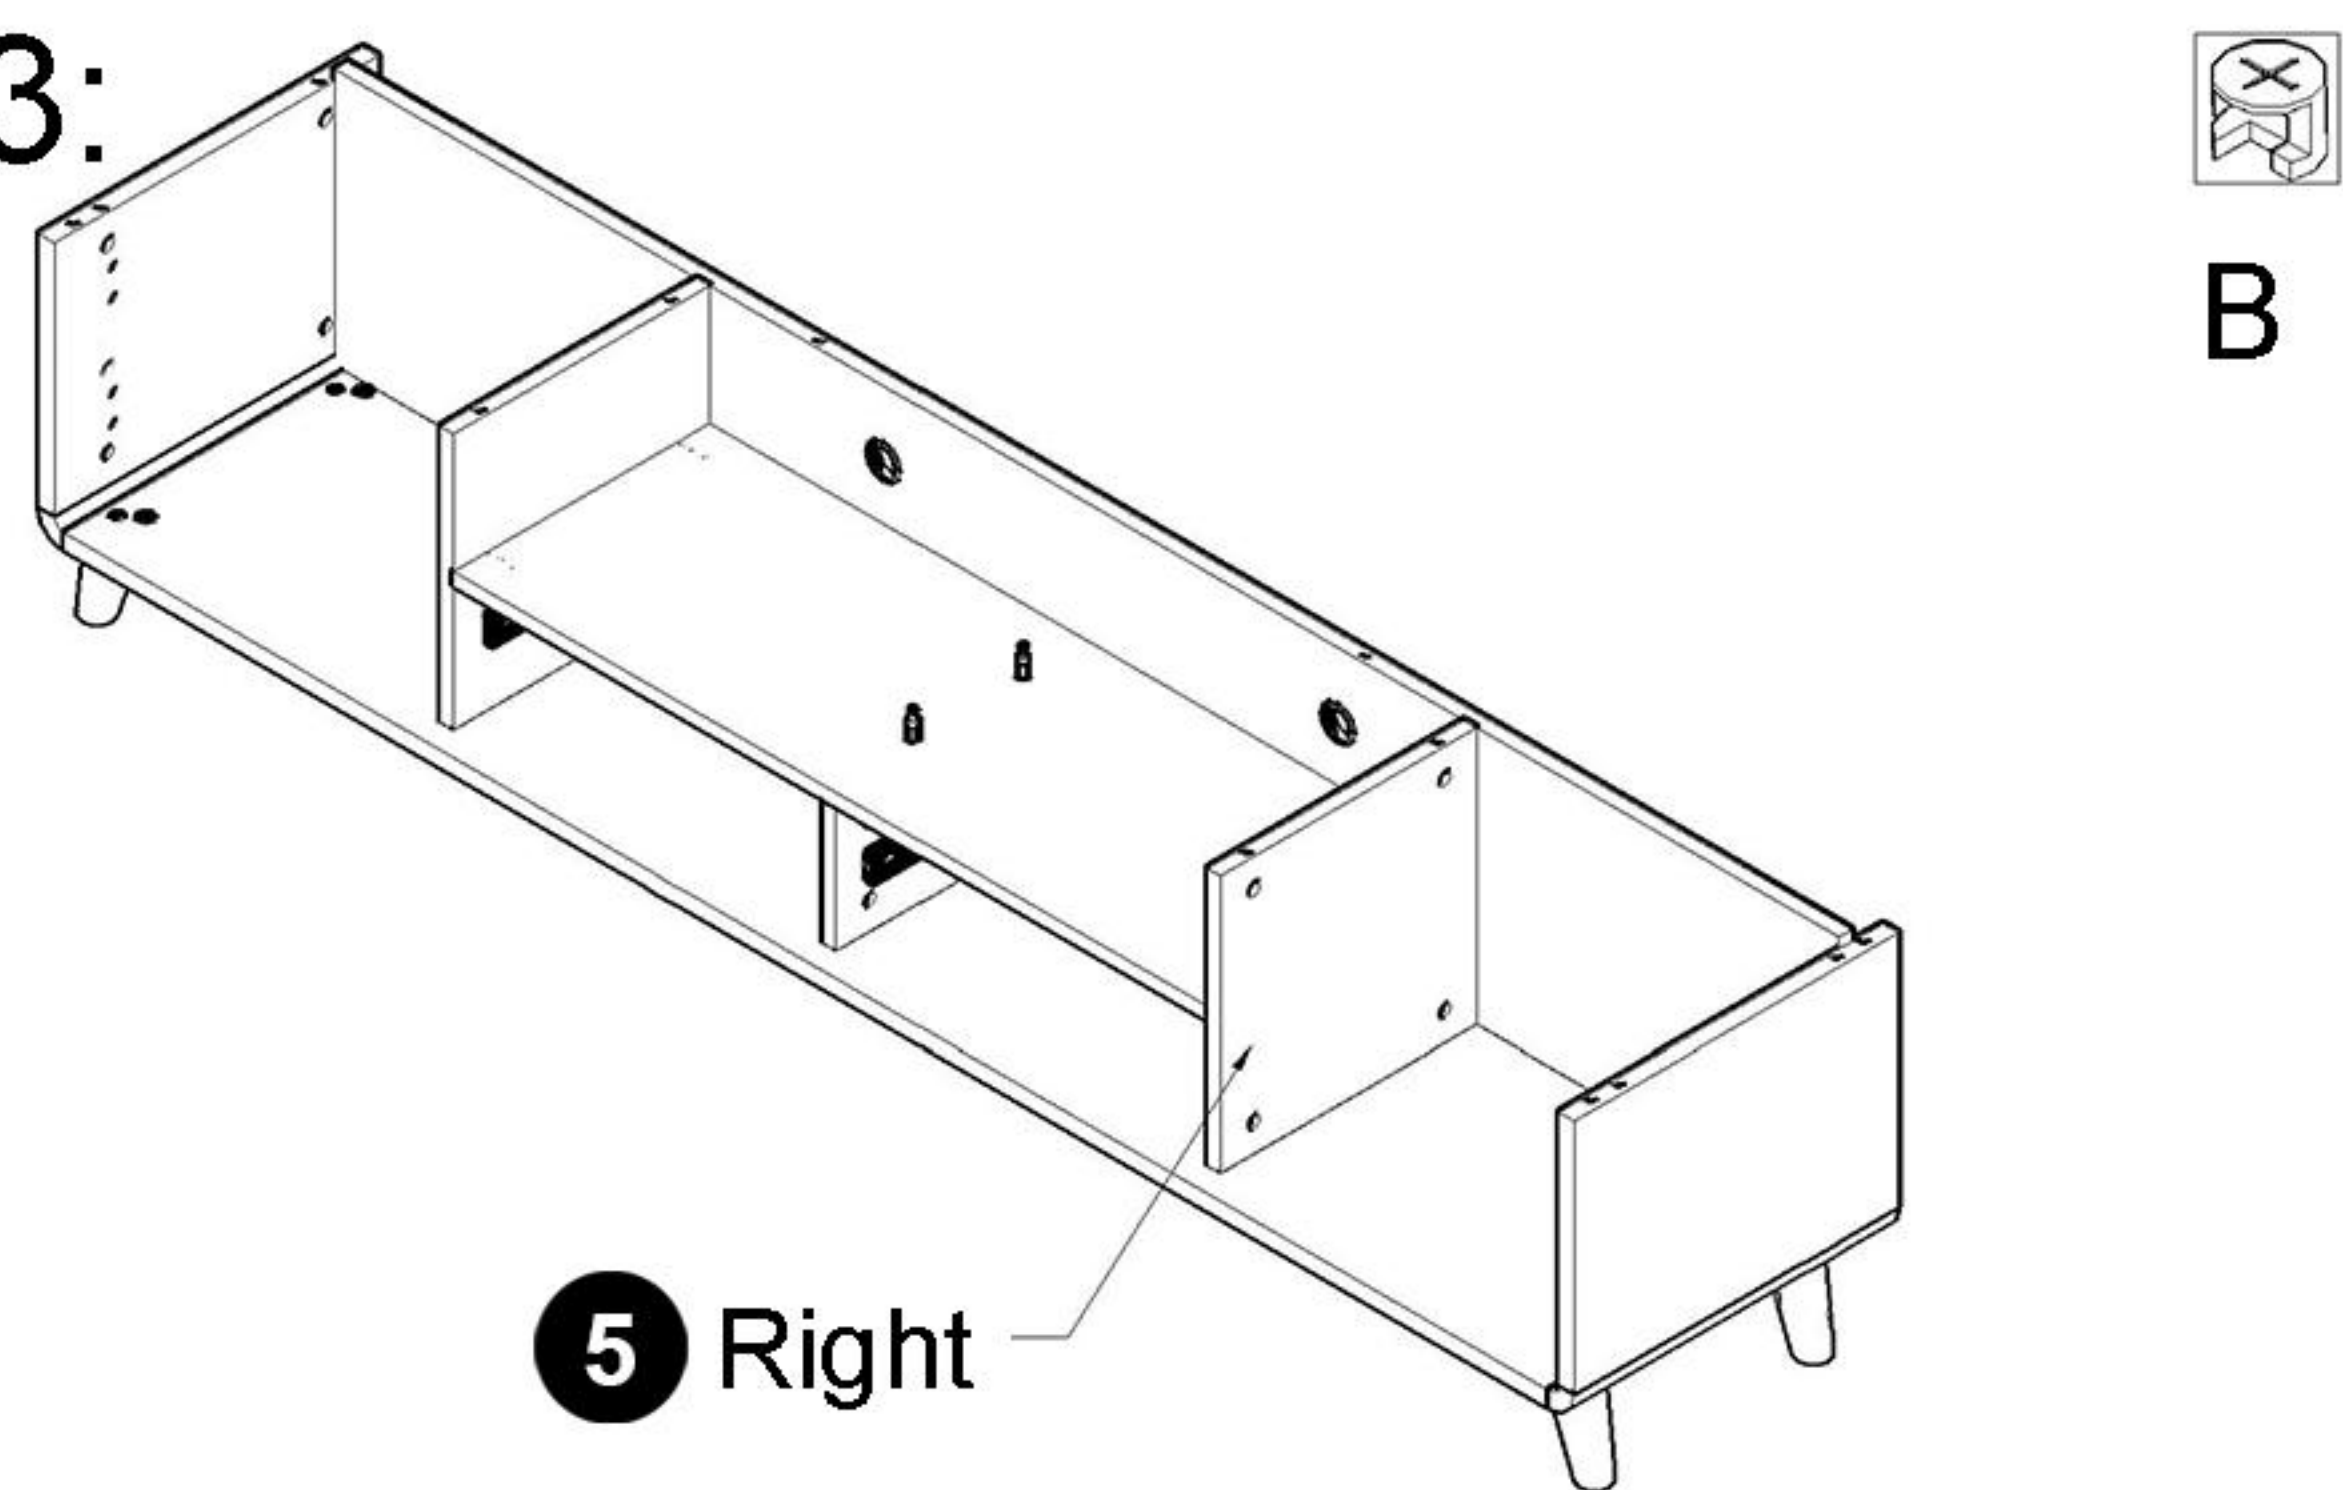


Secure all joints with B

Step 14:

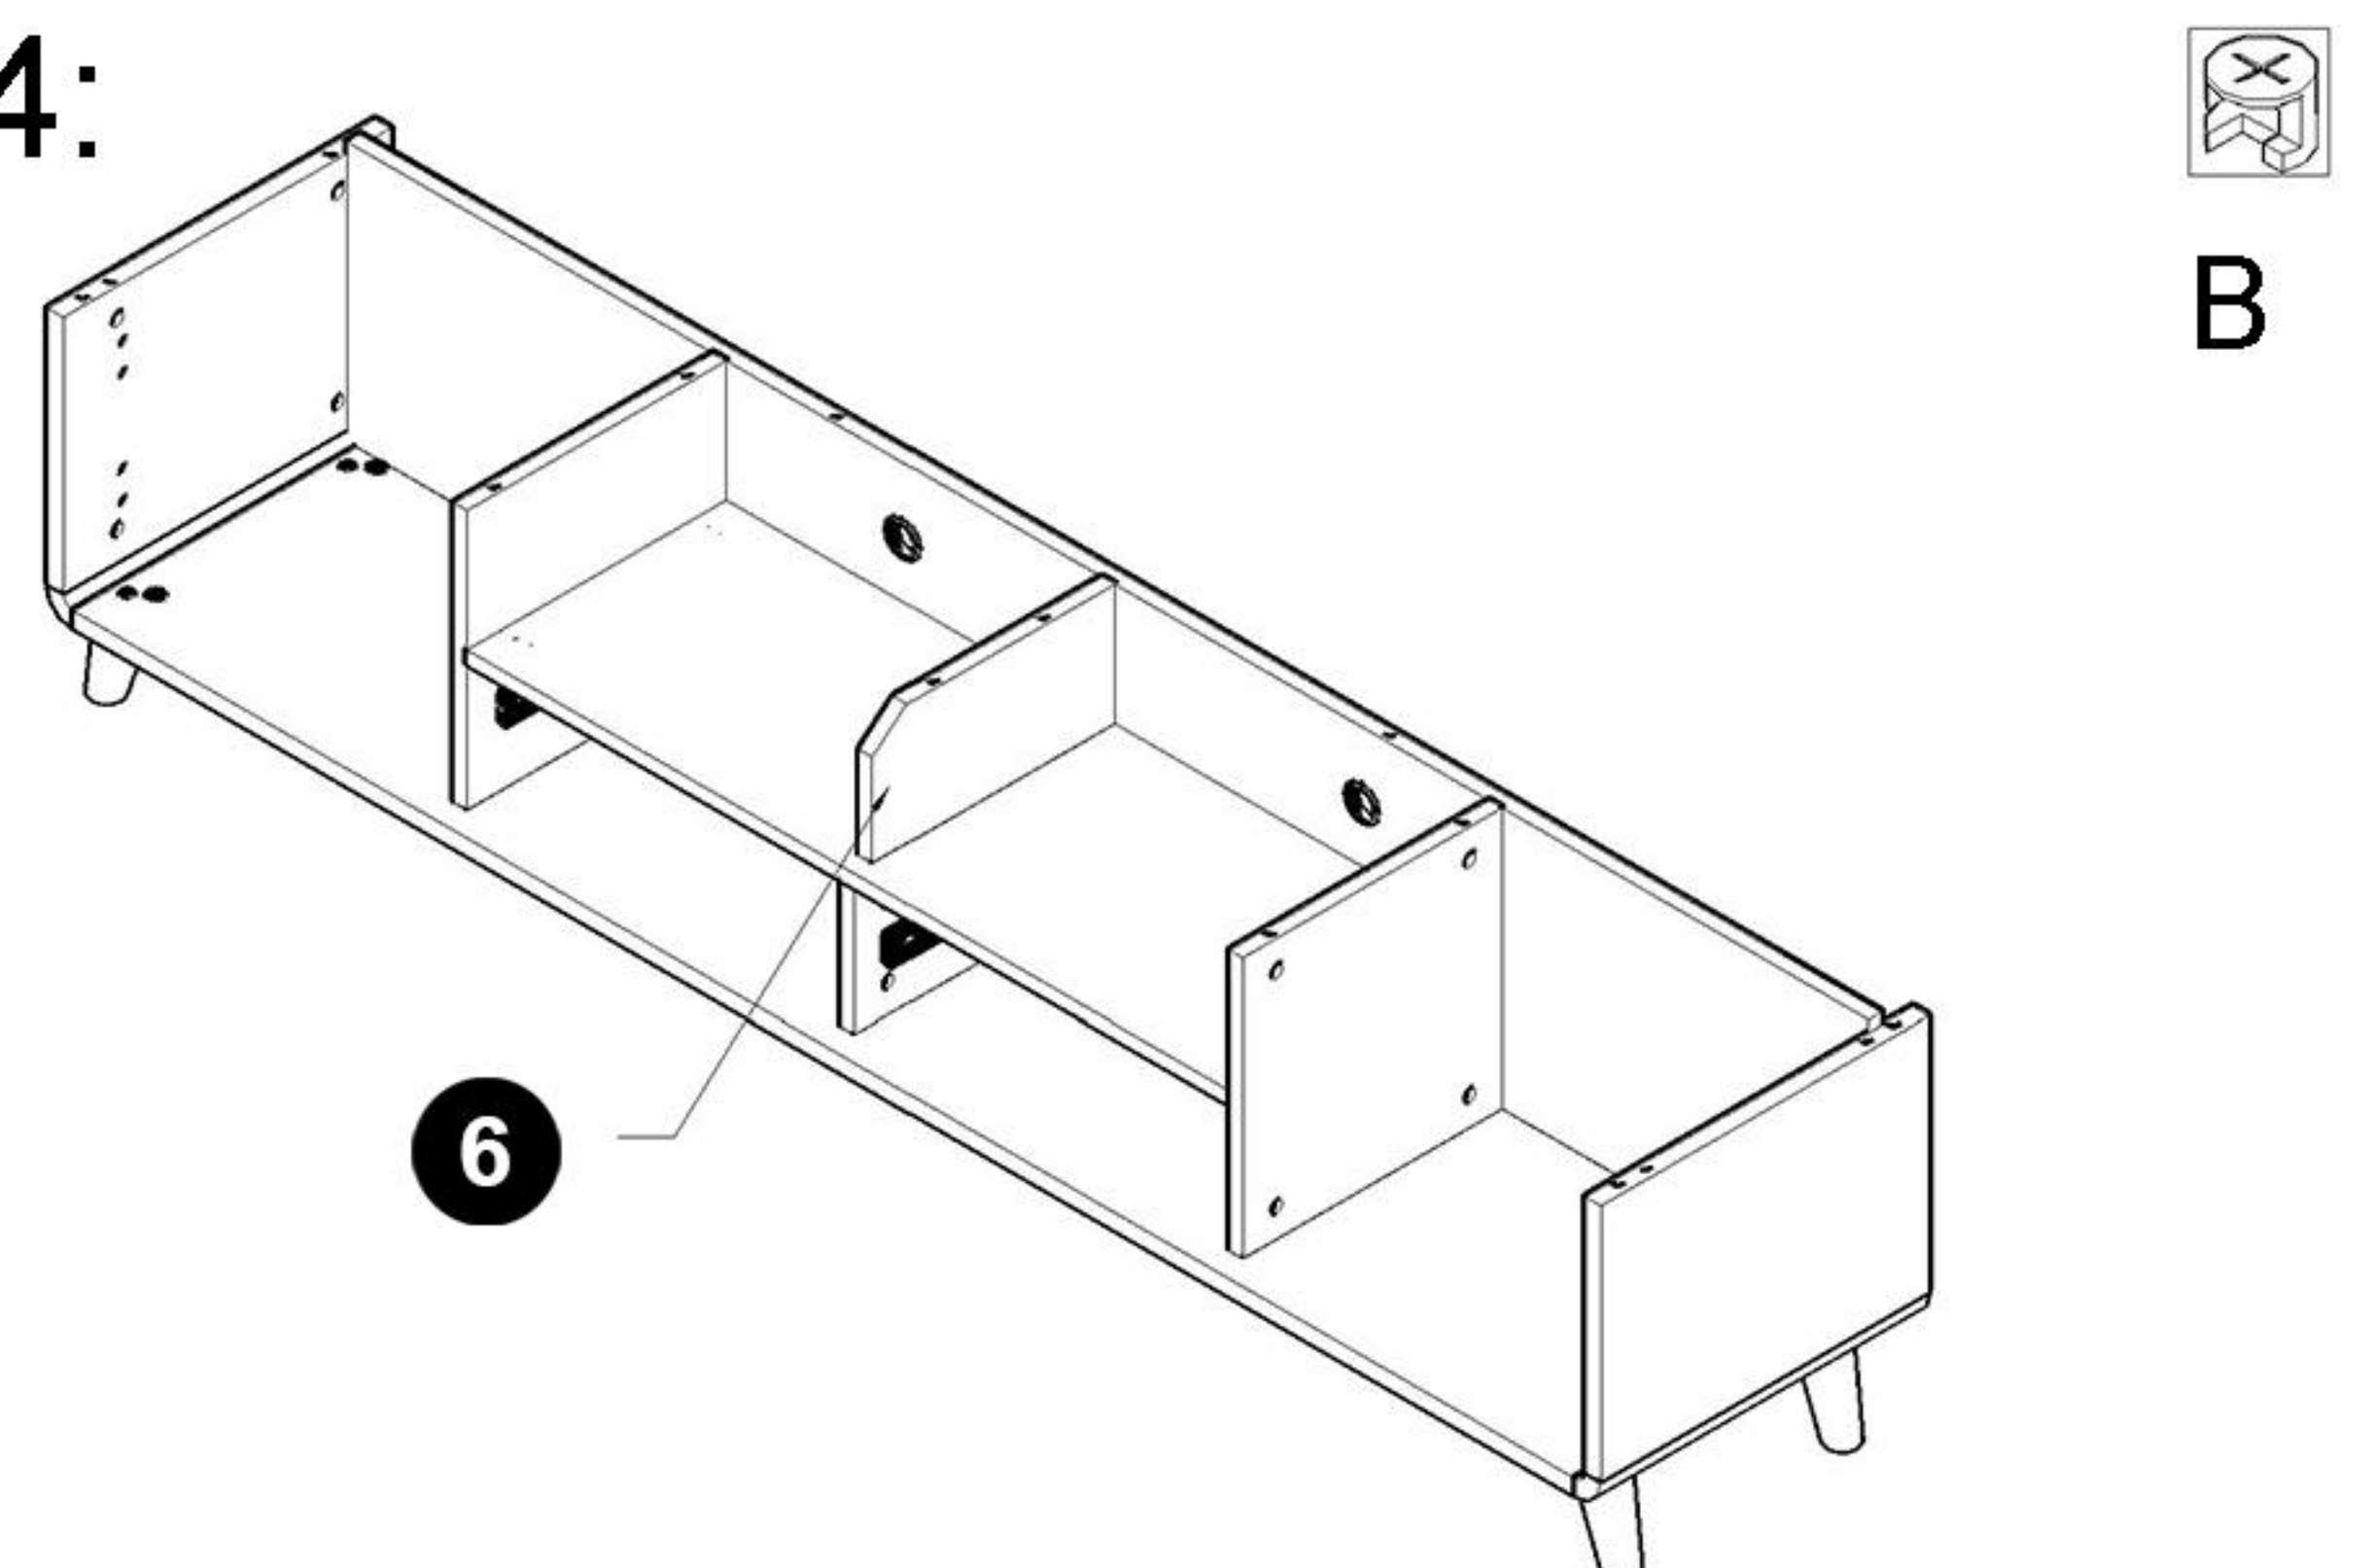


Secure all joints with B

Step 15:

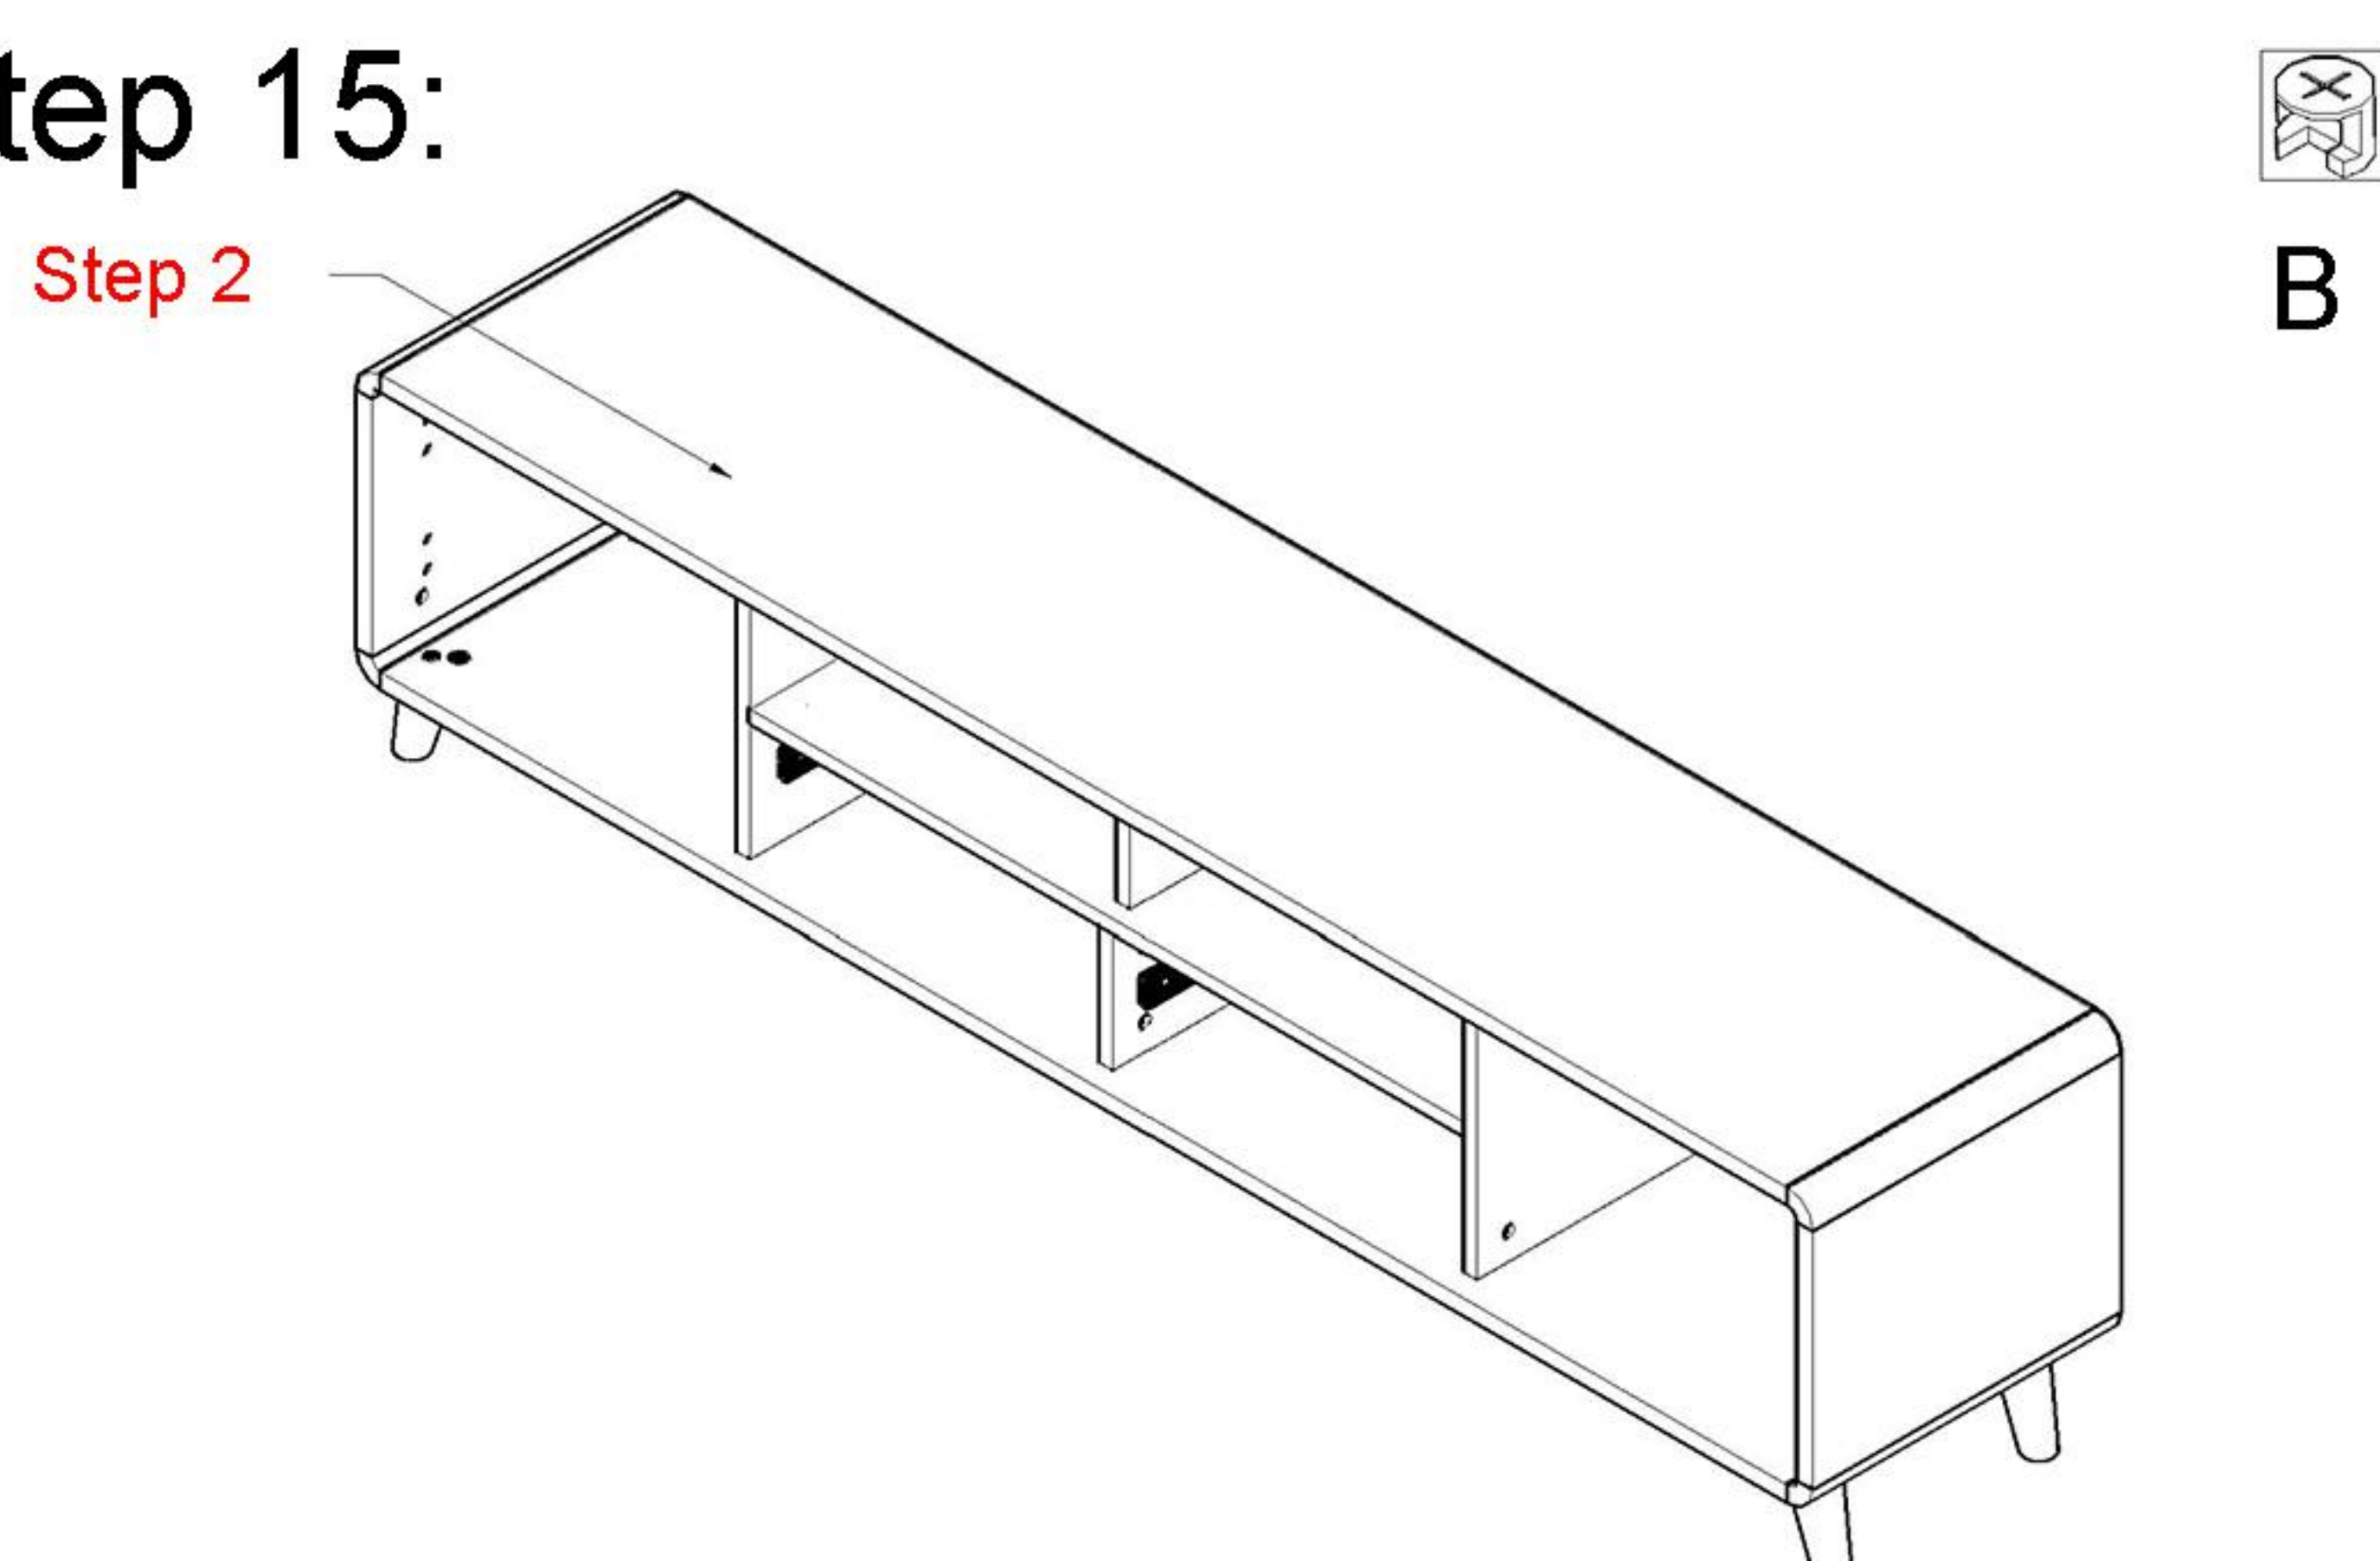


Secure all joints with B

Step 16:

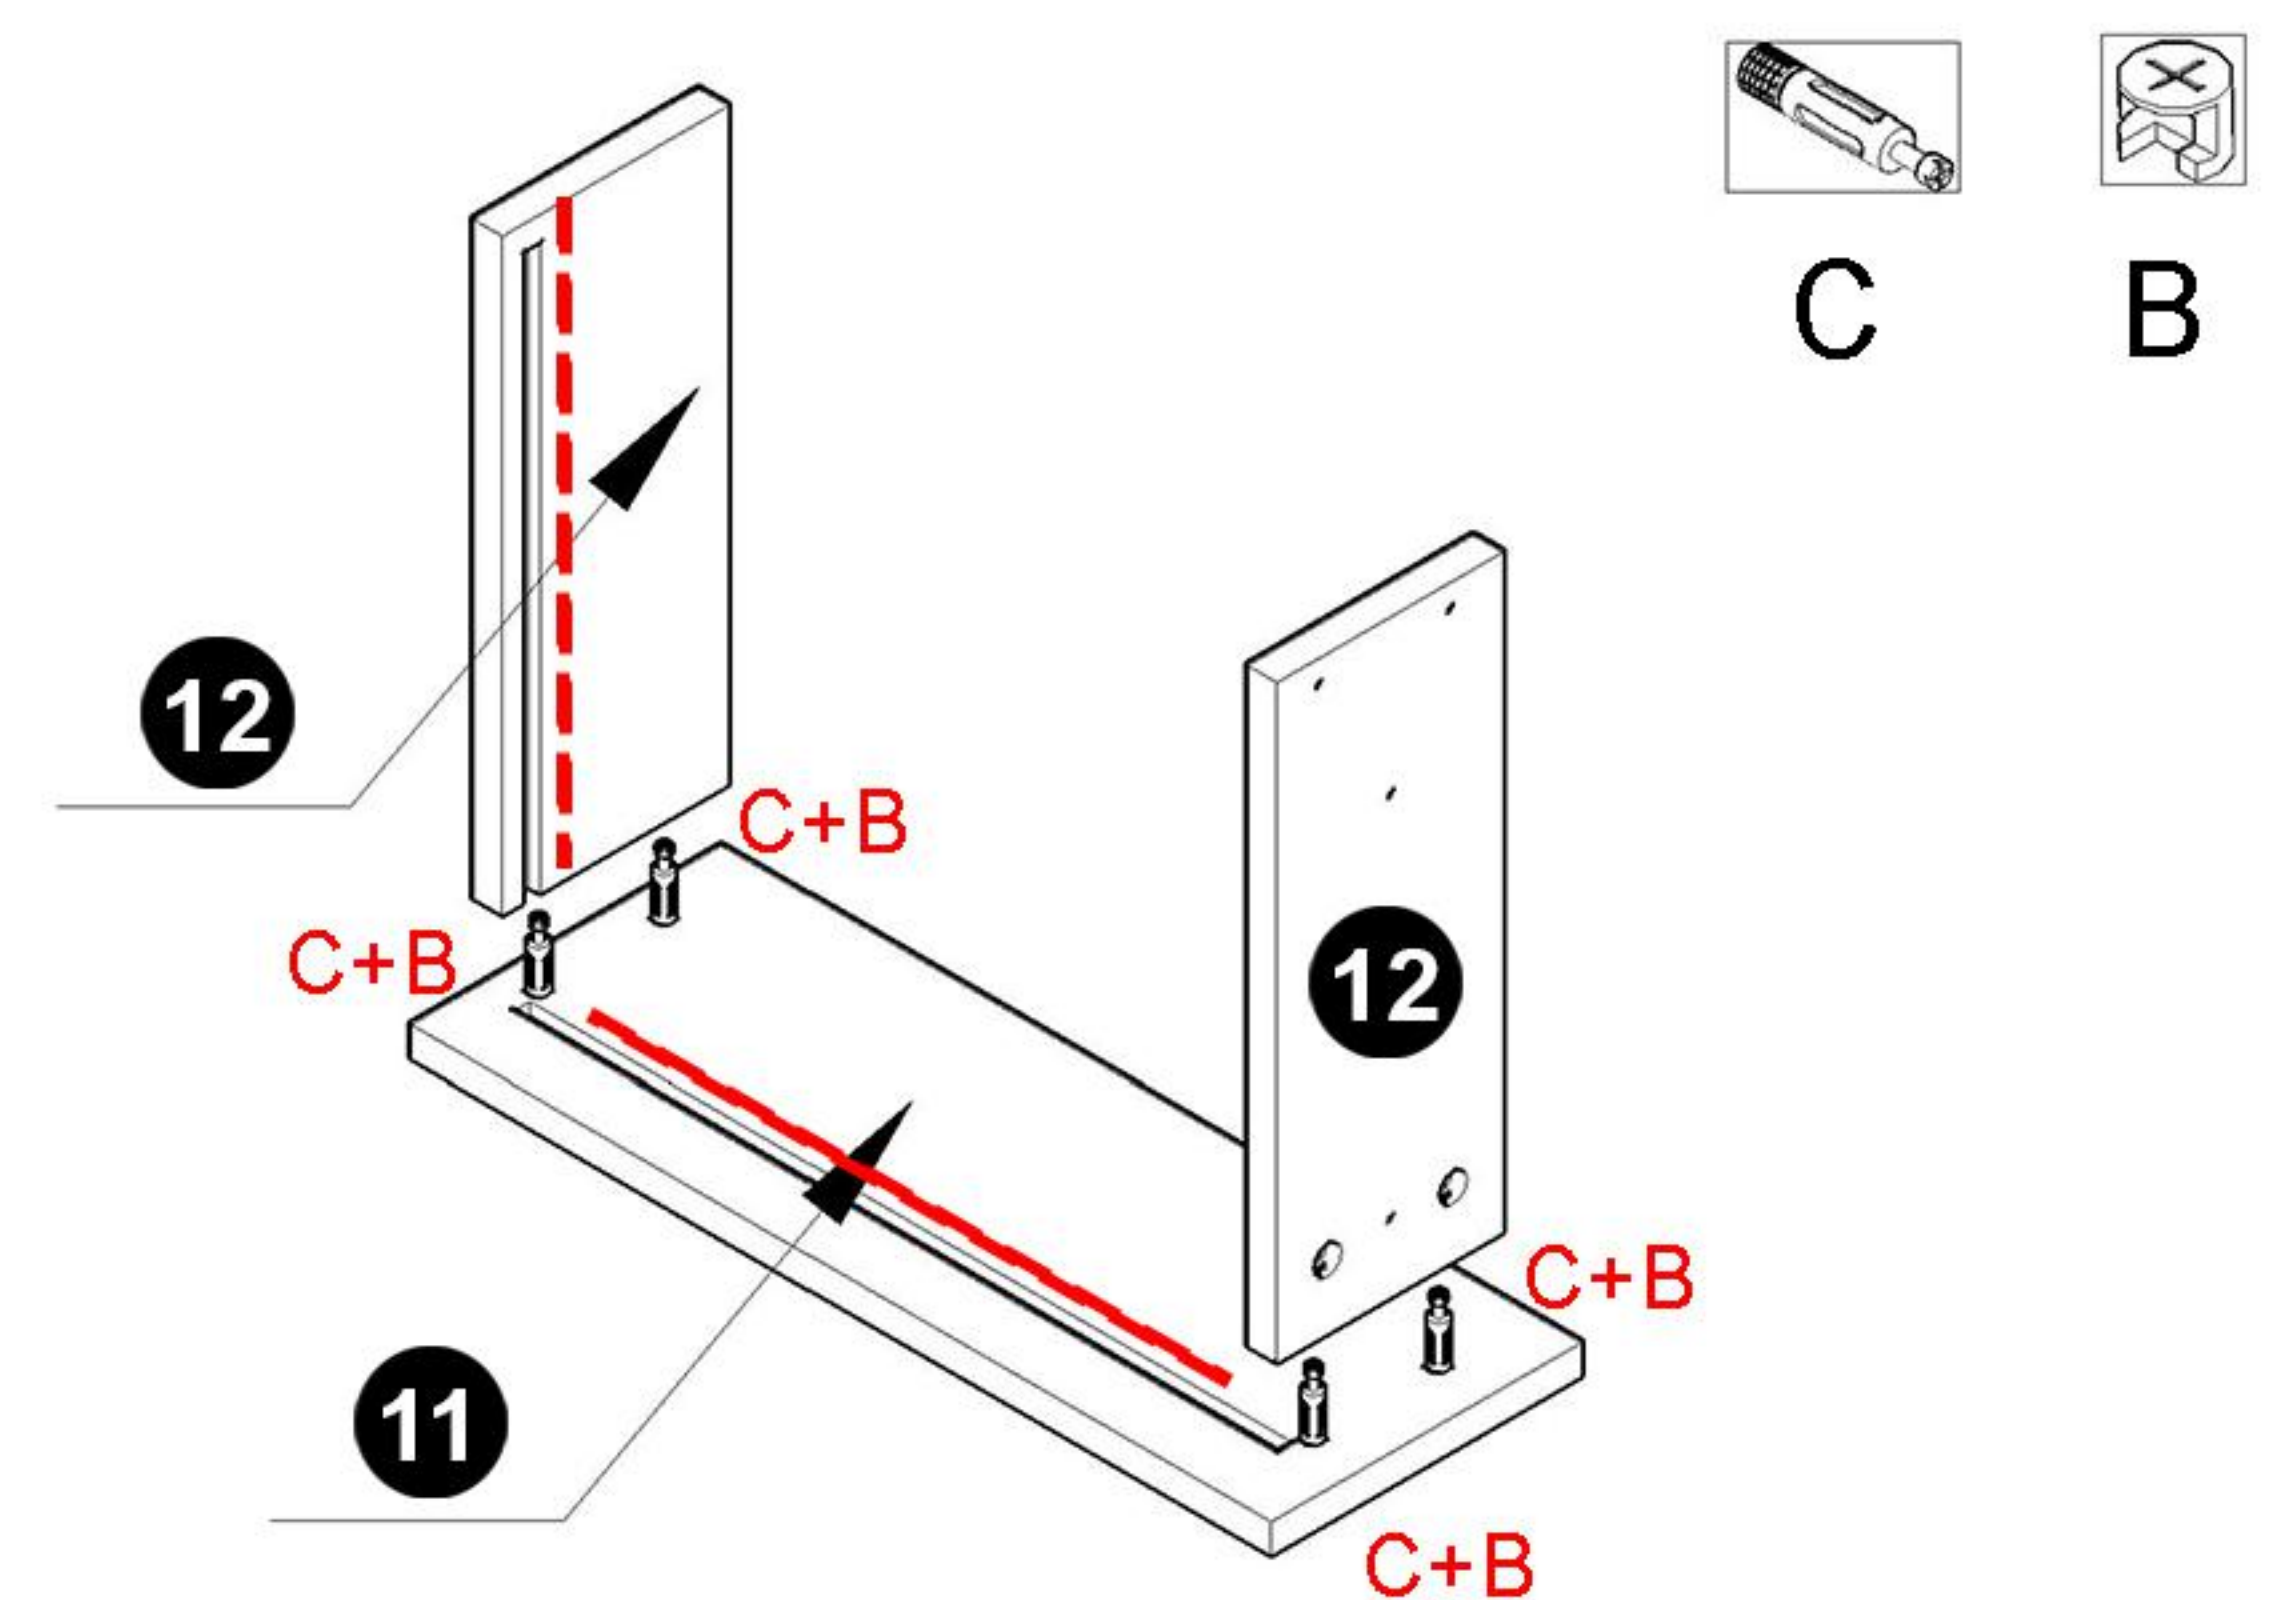

Note: The grooves on panel 12 must align with the grooves on panel 11, and secure all joints with B


Step 17:

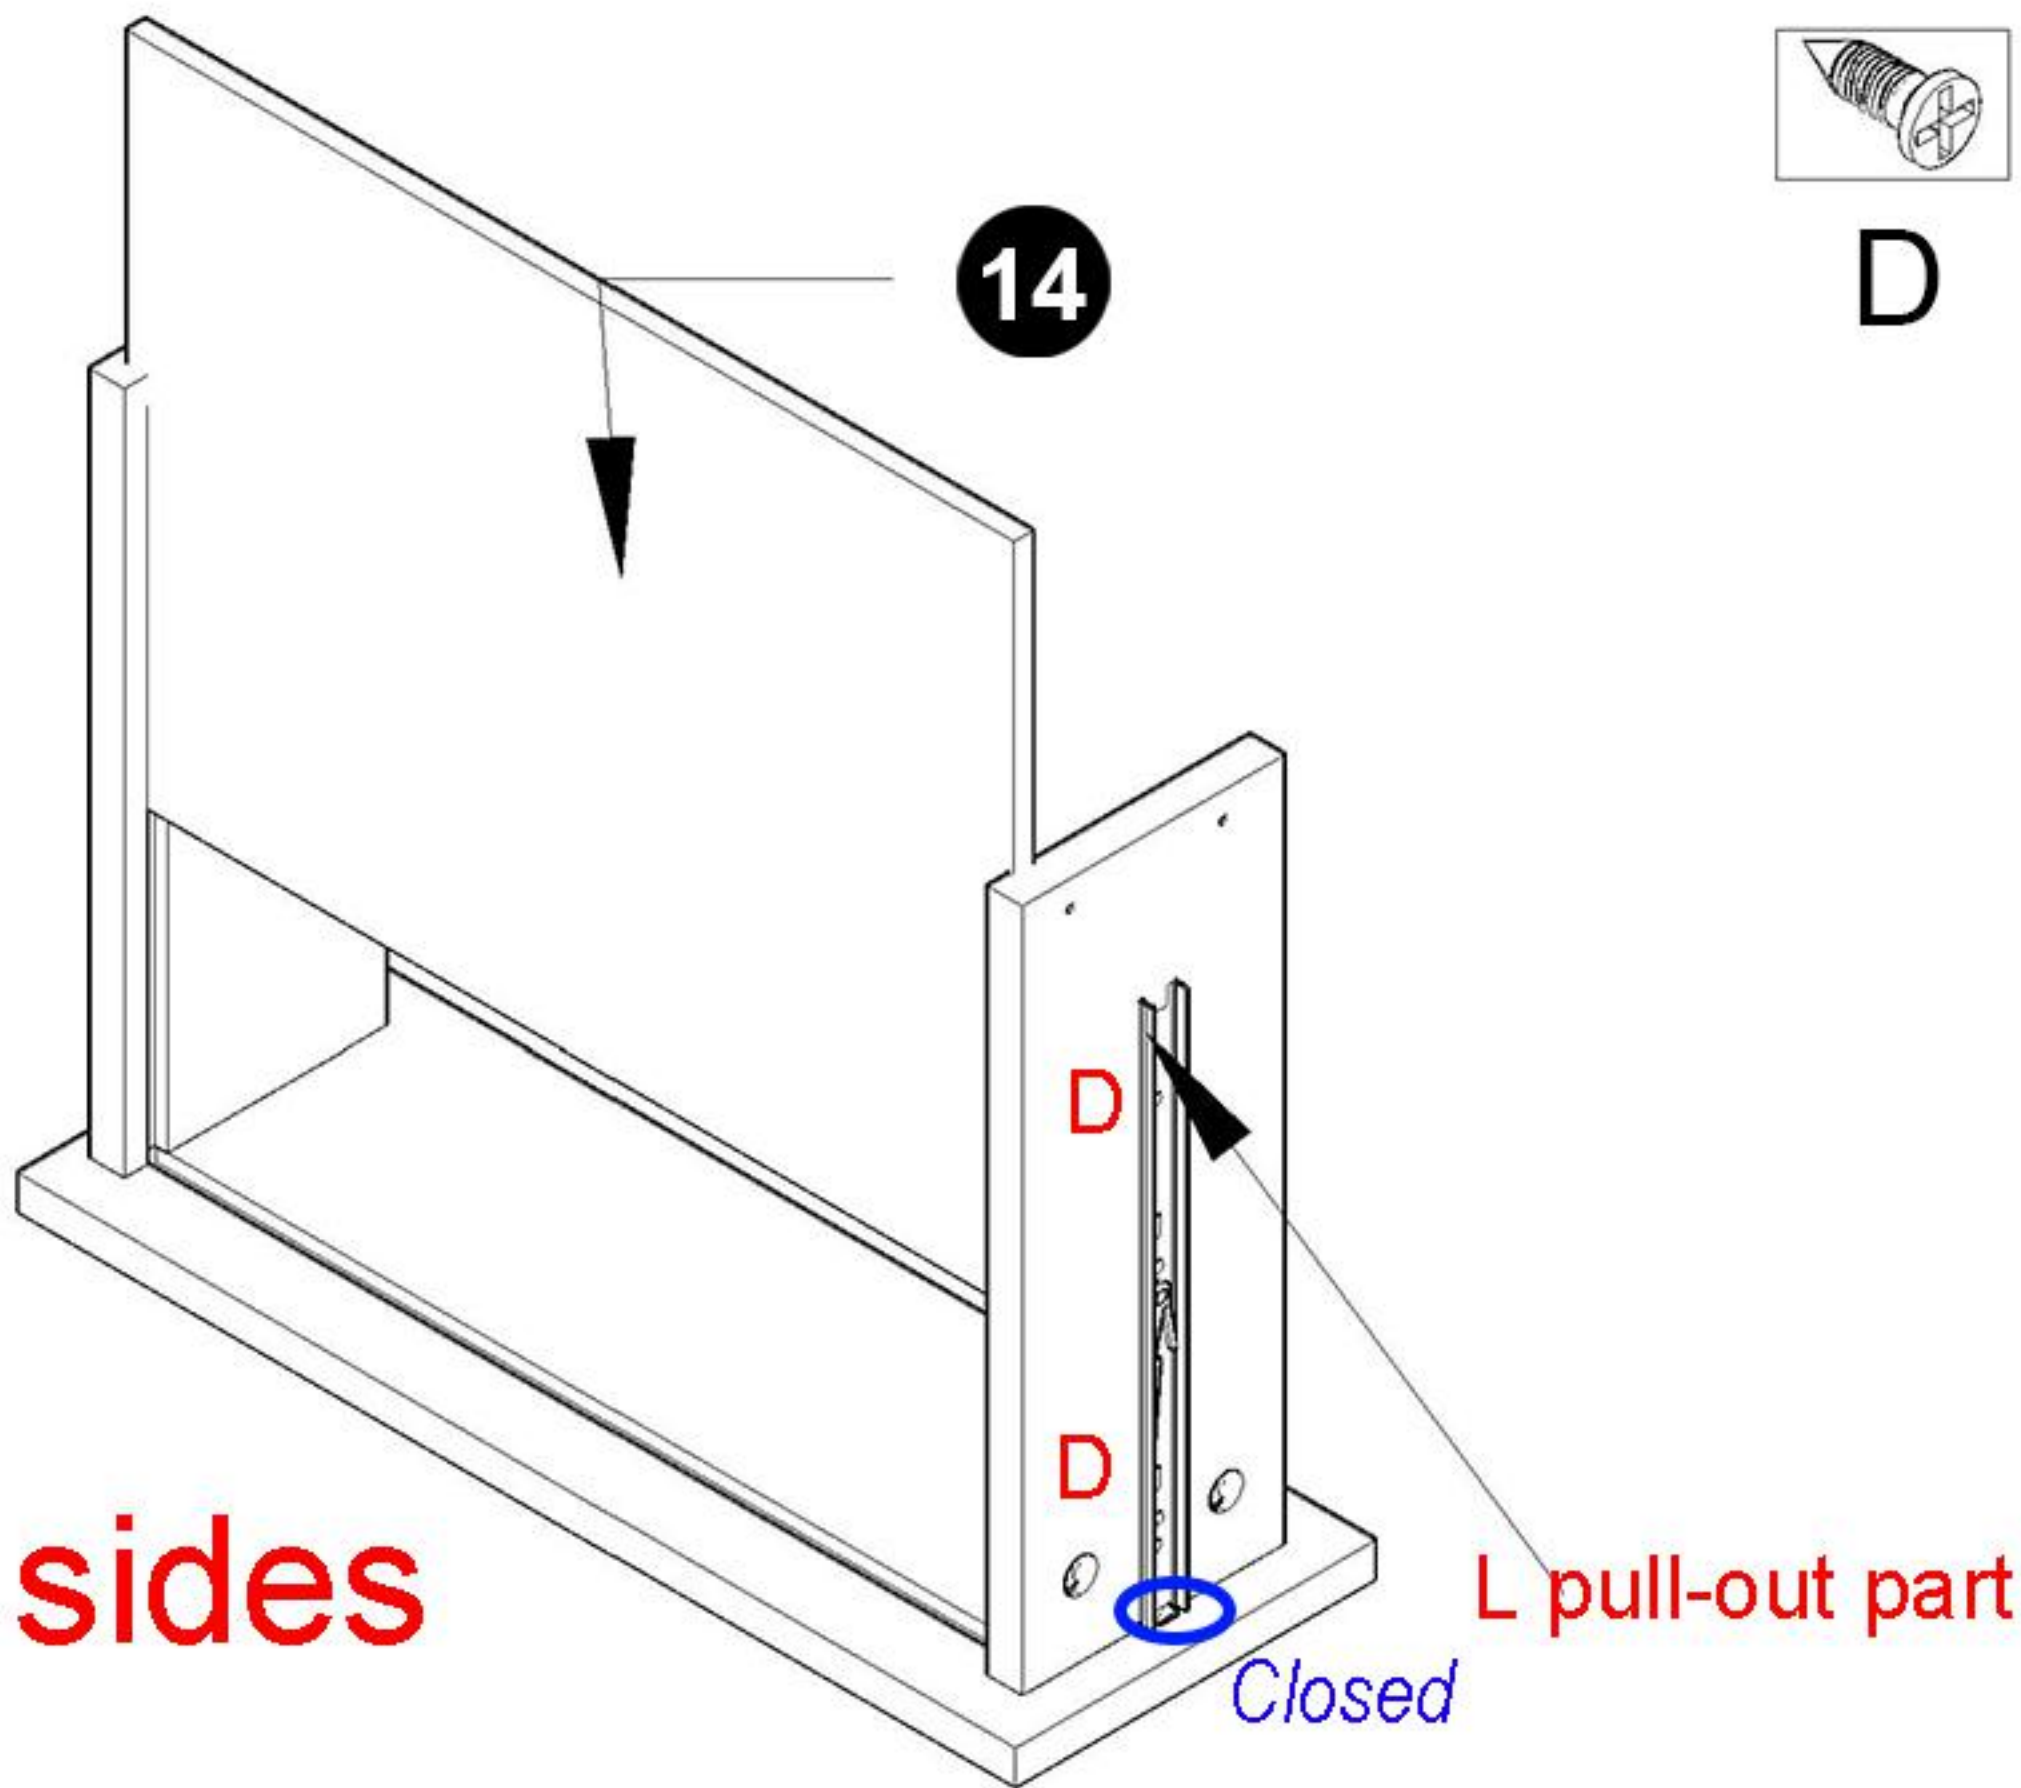


on both sides

Insert panel 14 as indicated by the arrow. Position the pull out part of L on the outside of both panel 12s. Ensure the stopper side of L rests against panel 11

Step 18:

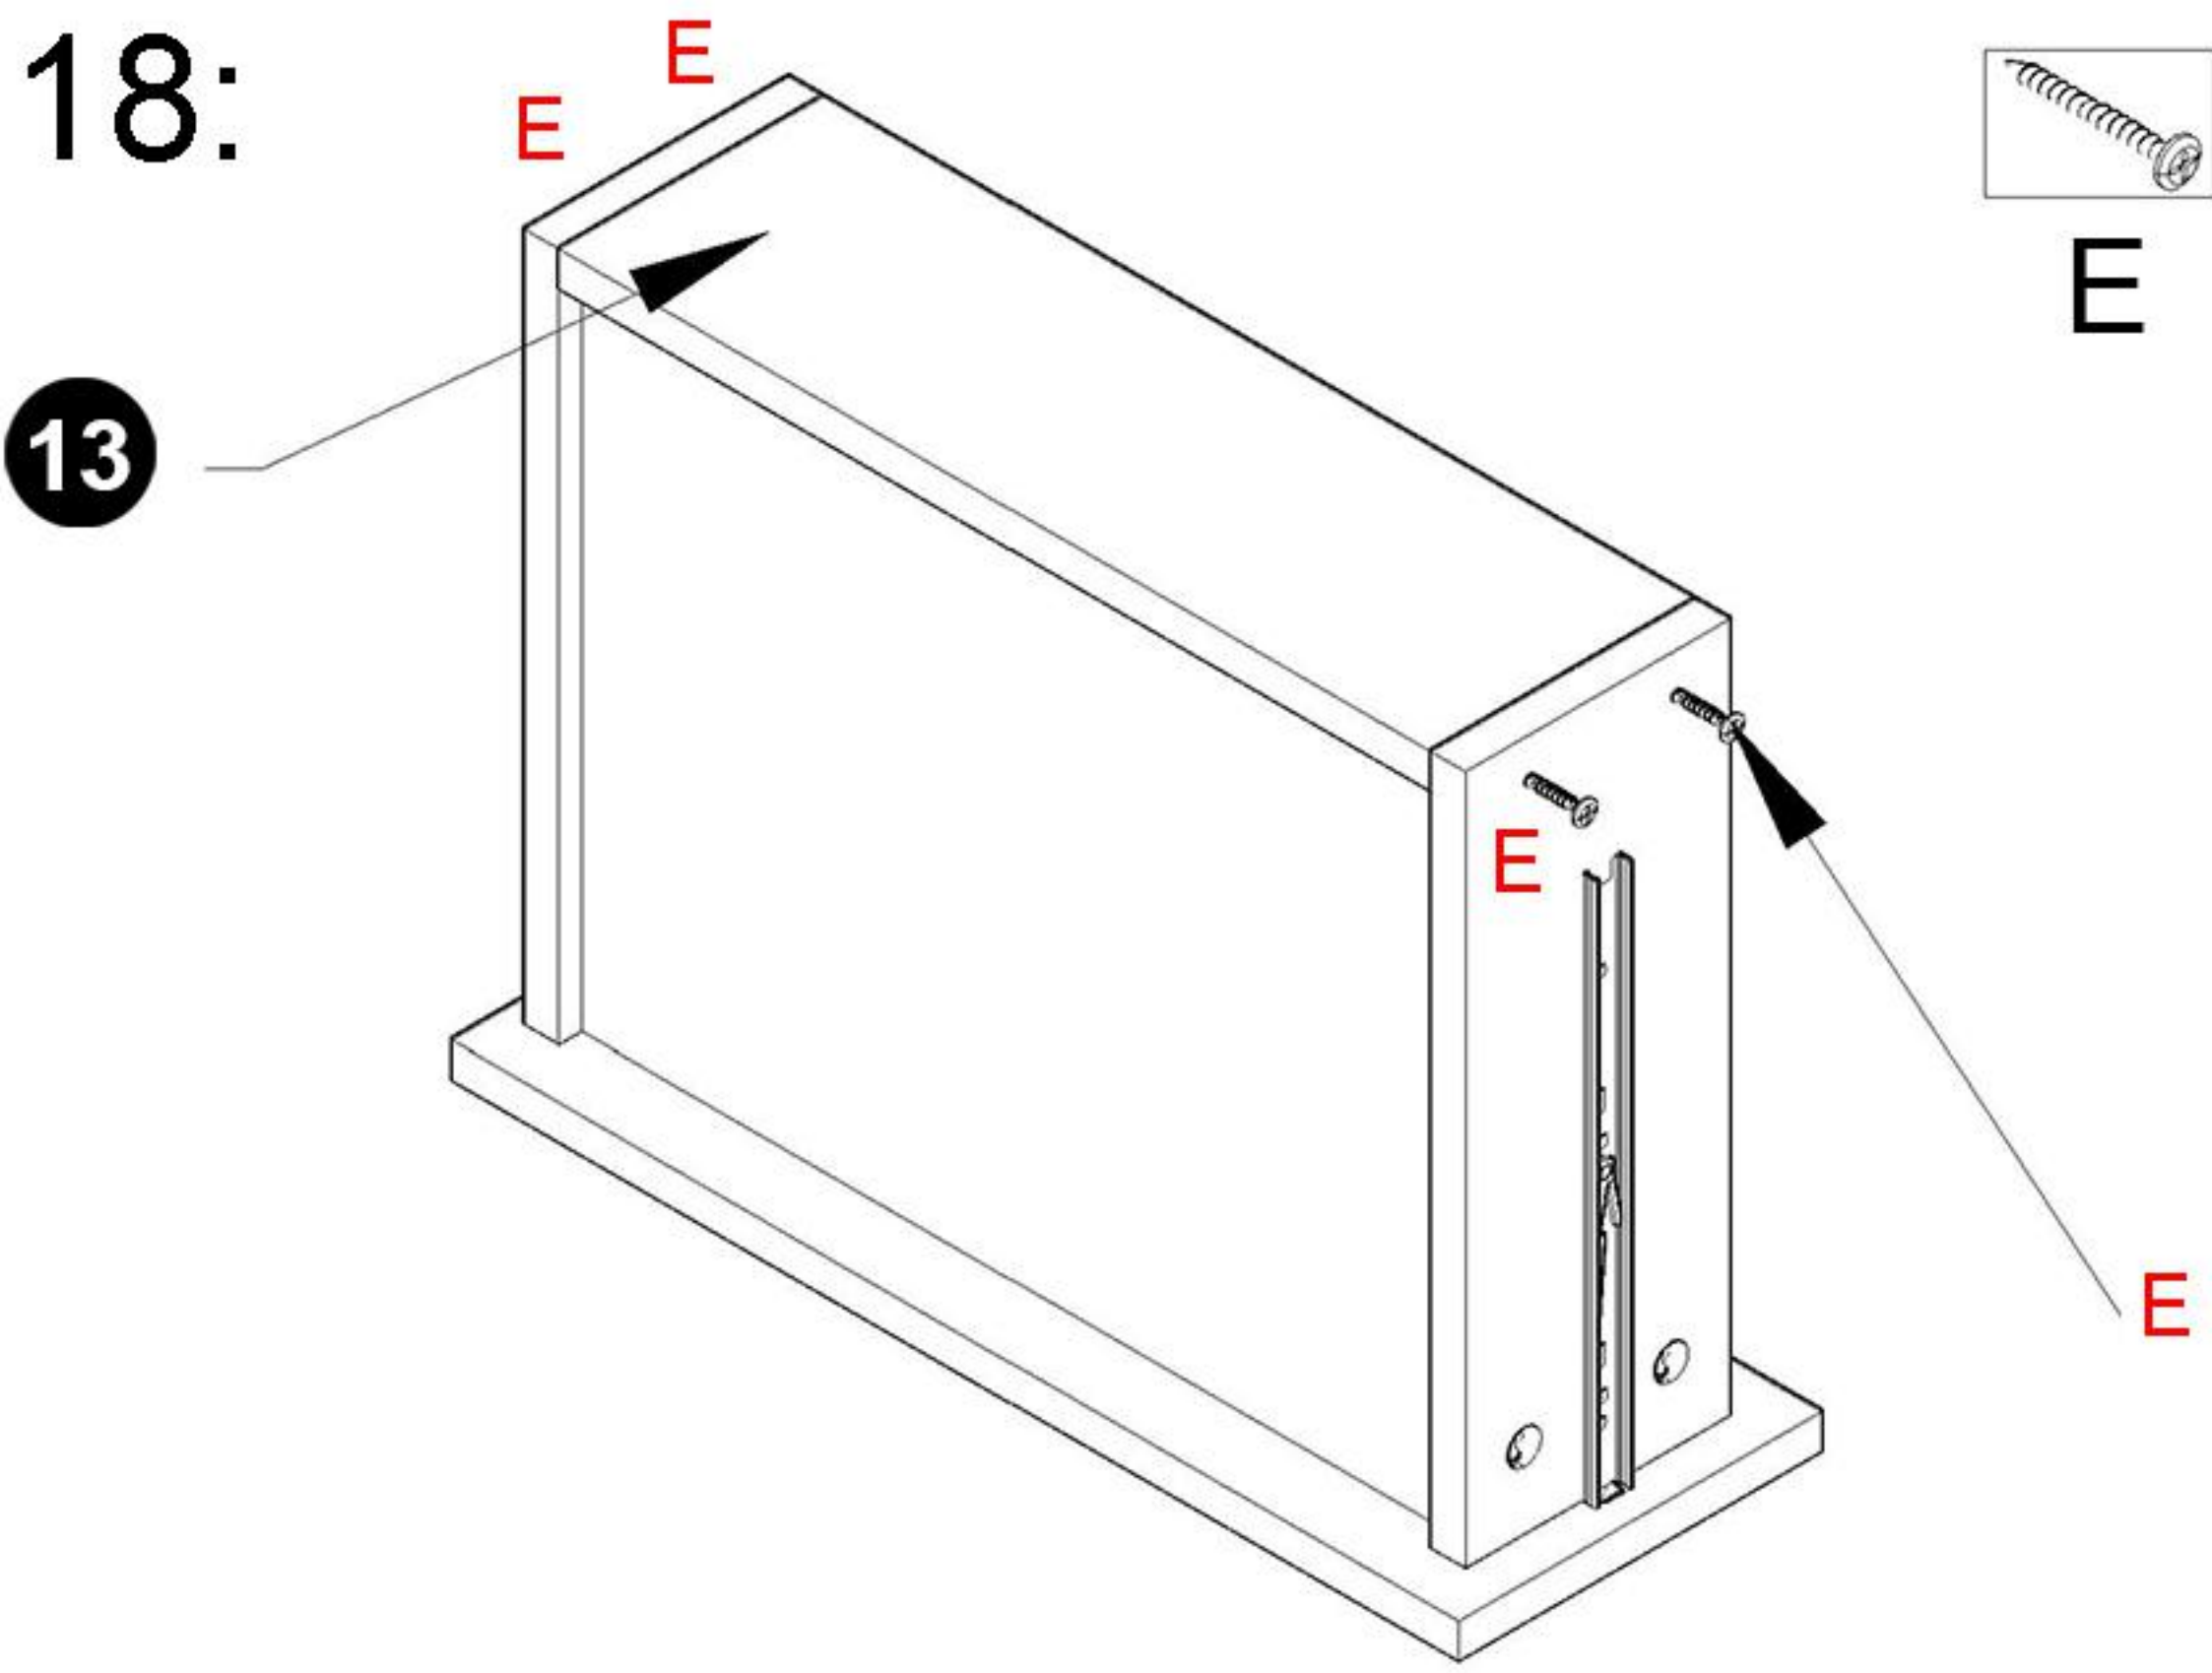


Step 19:

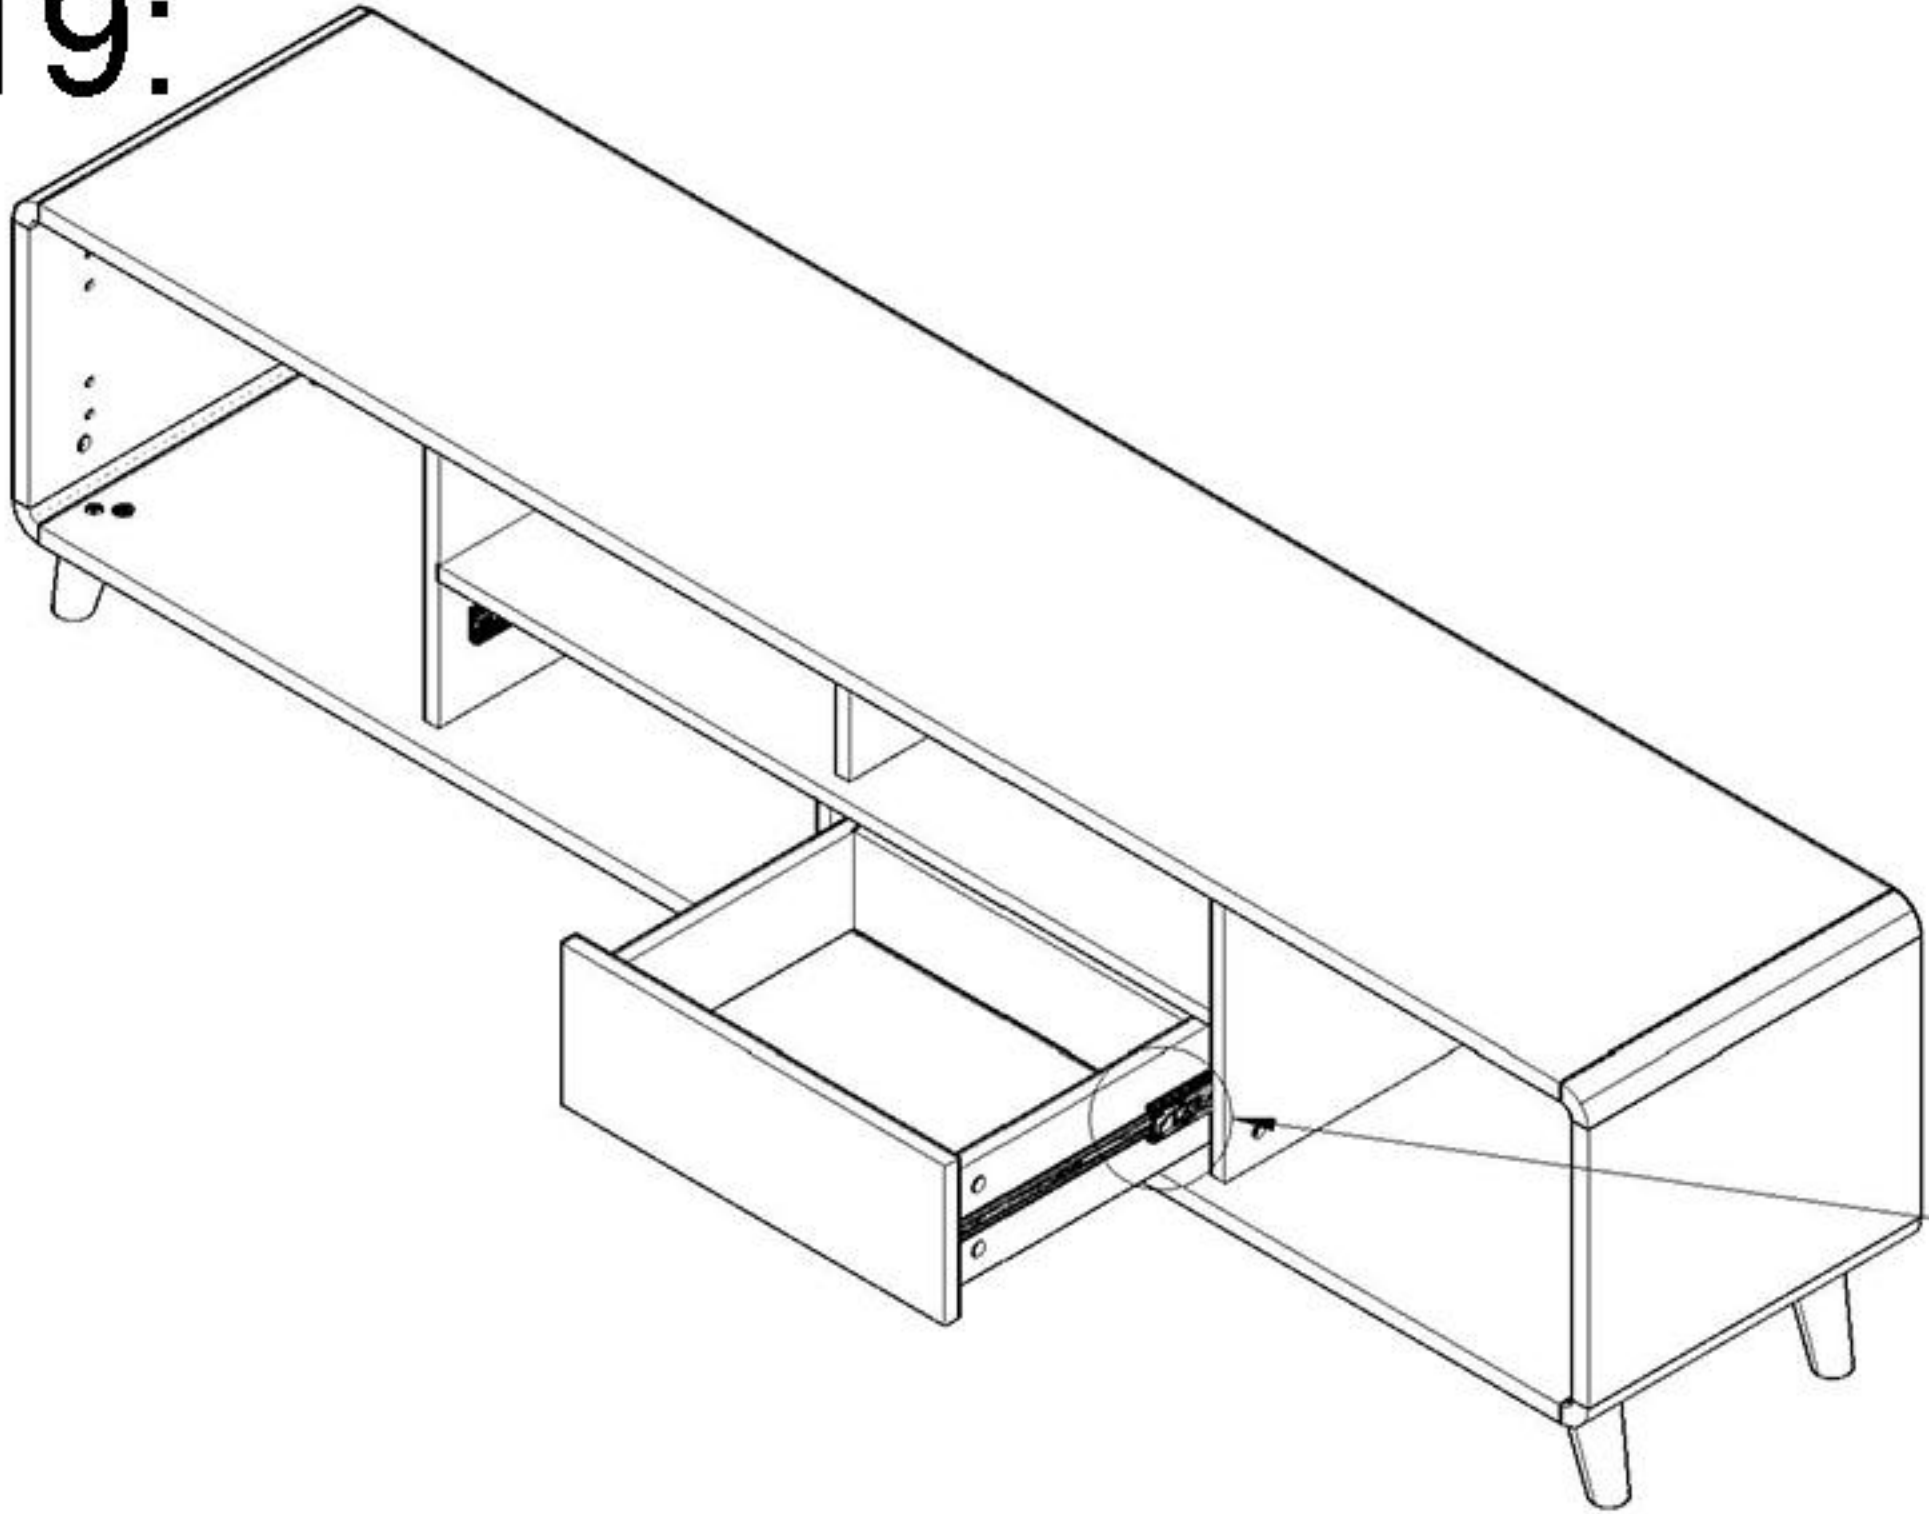


Pull the L main body parts to its full length, with the silver ball-bearing section at the front. Insert the L pull-out parts on both sides of the drawer into the slots, then gently push to secure.

Step 20:

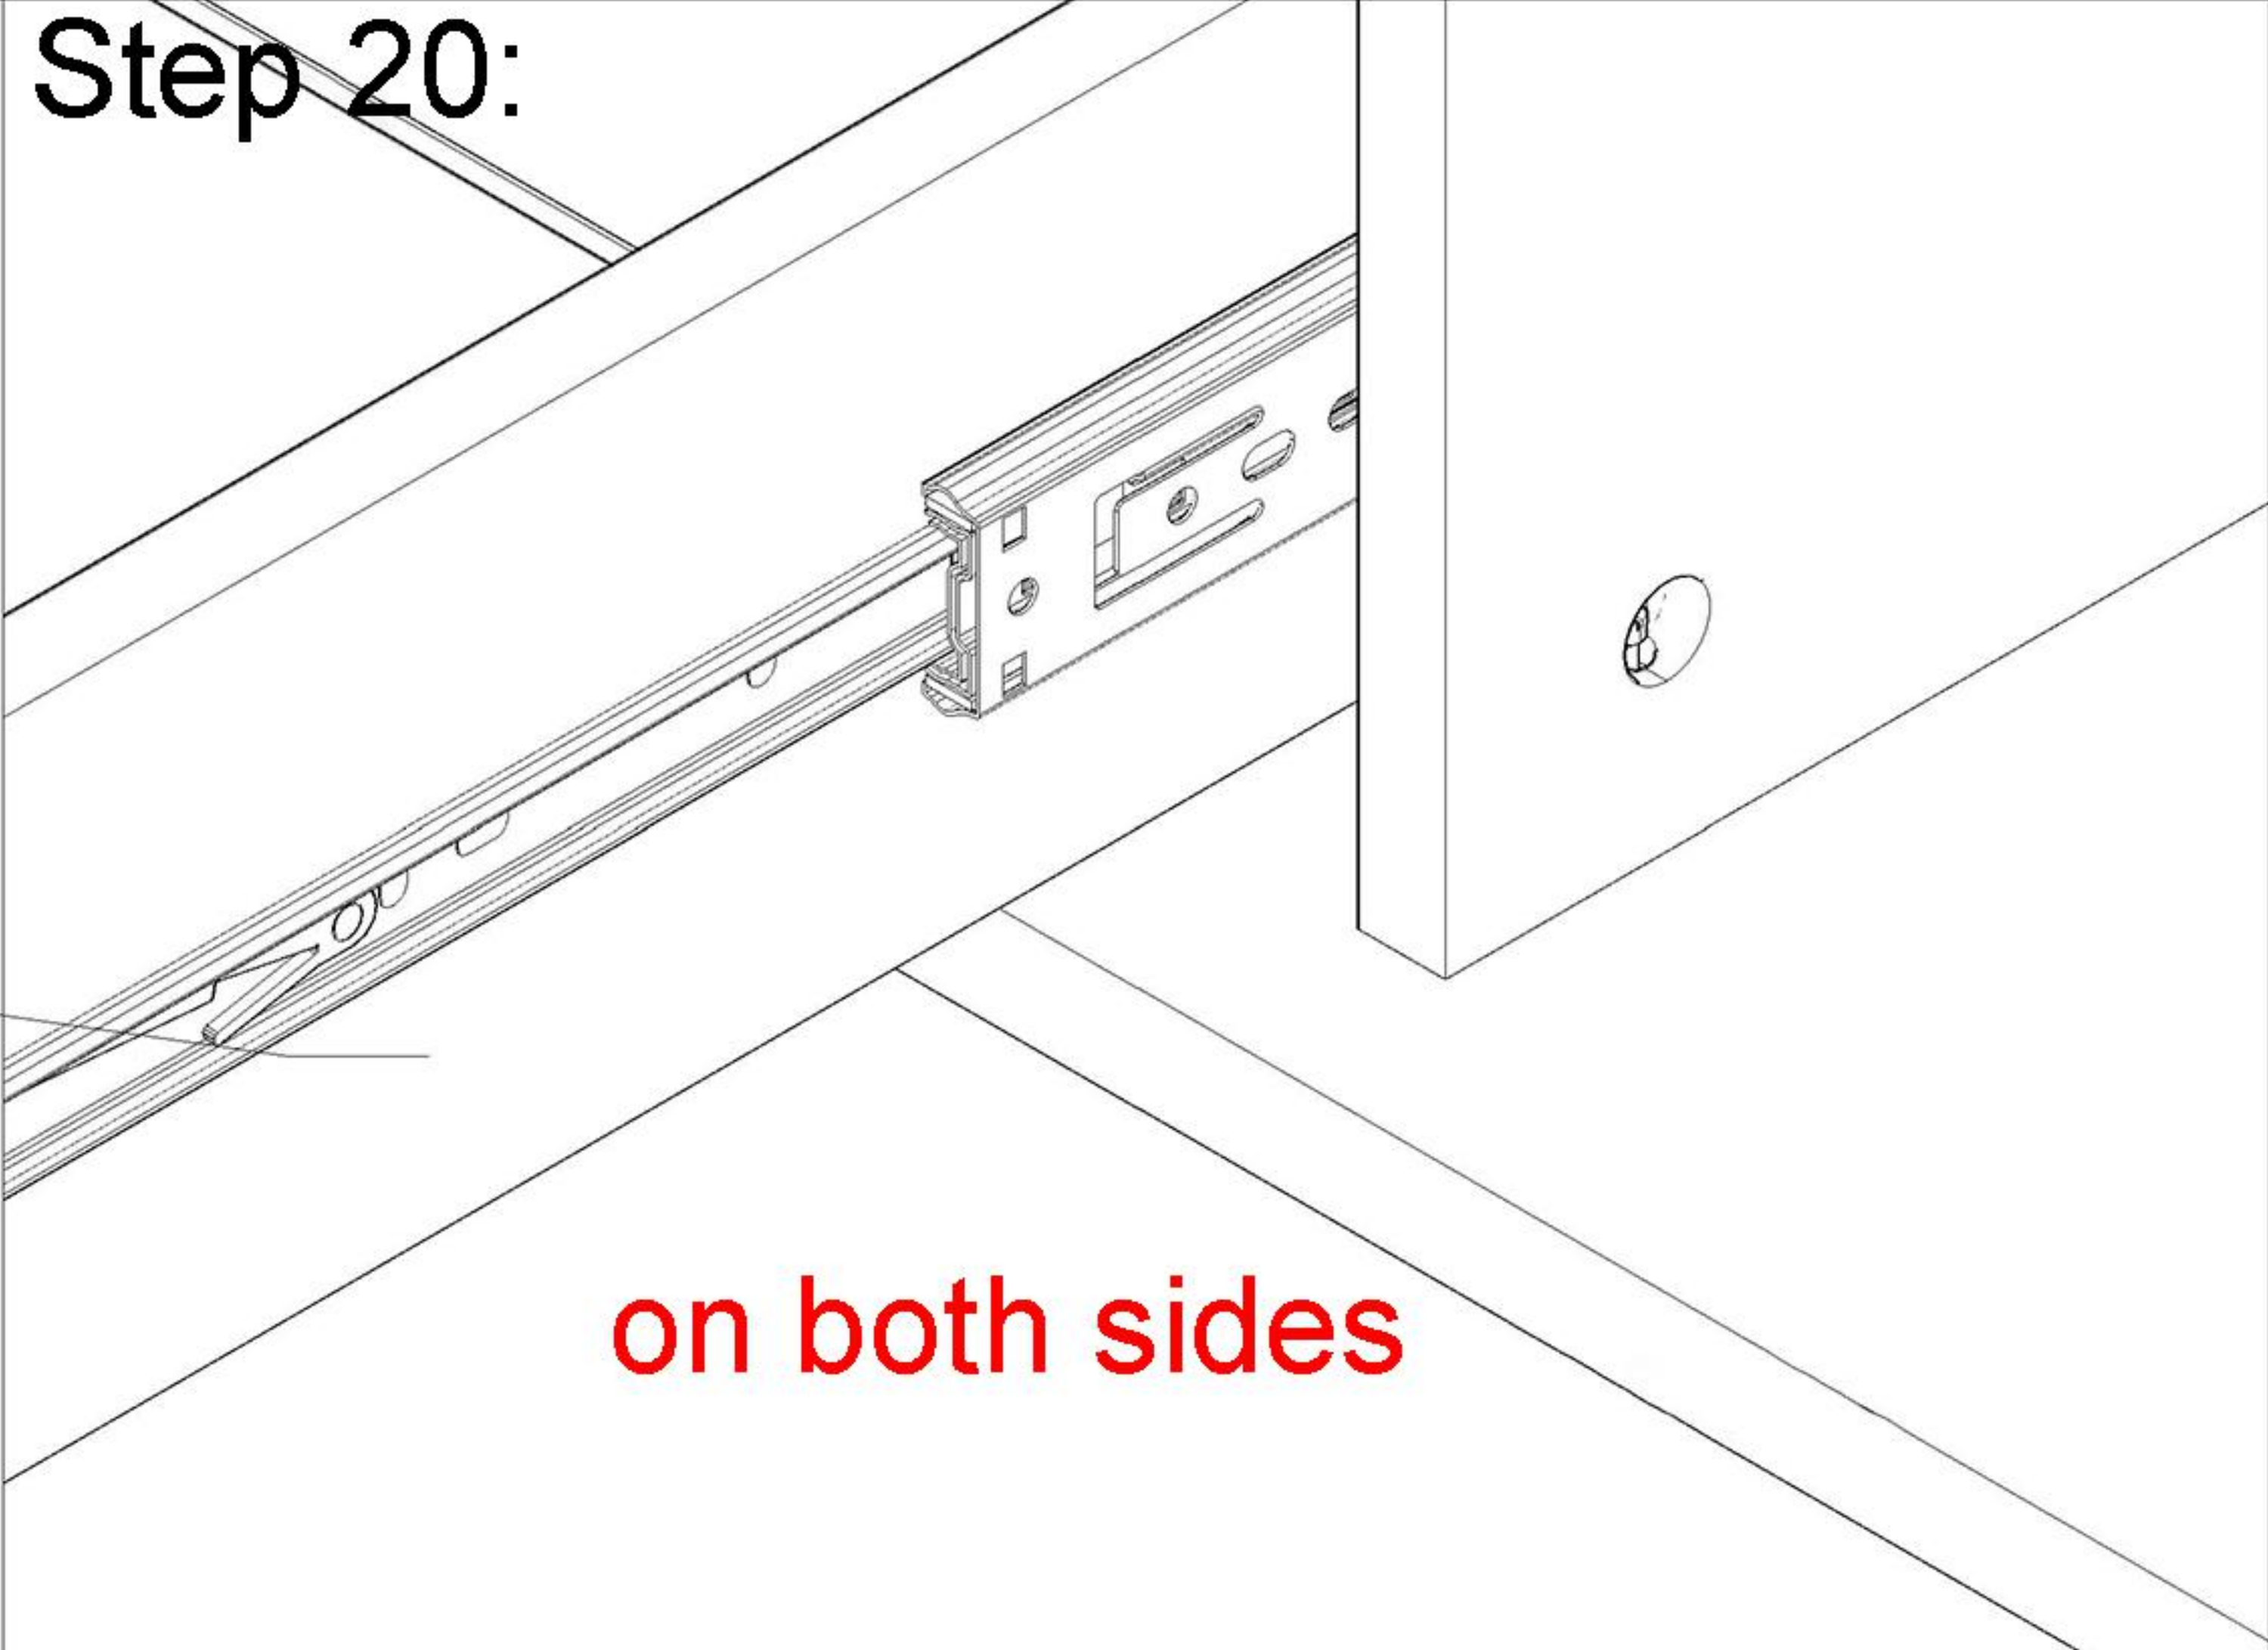


Step 21:

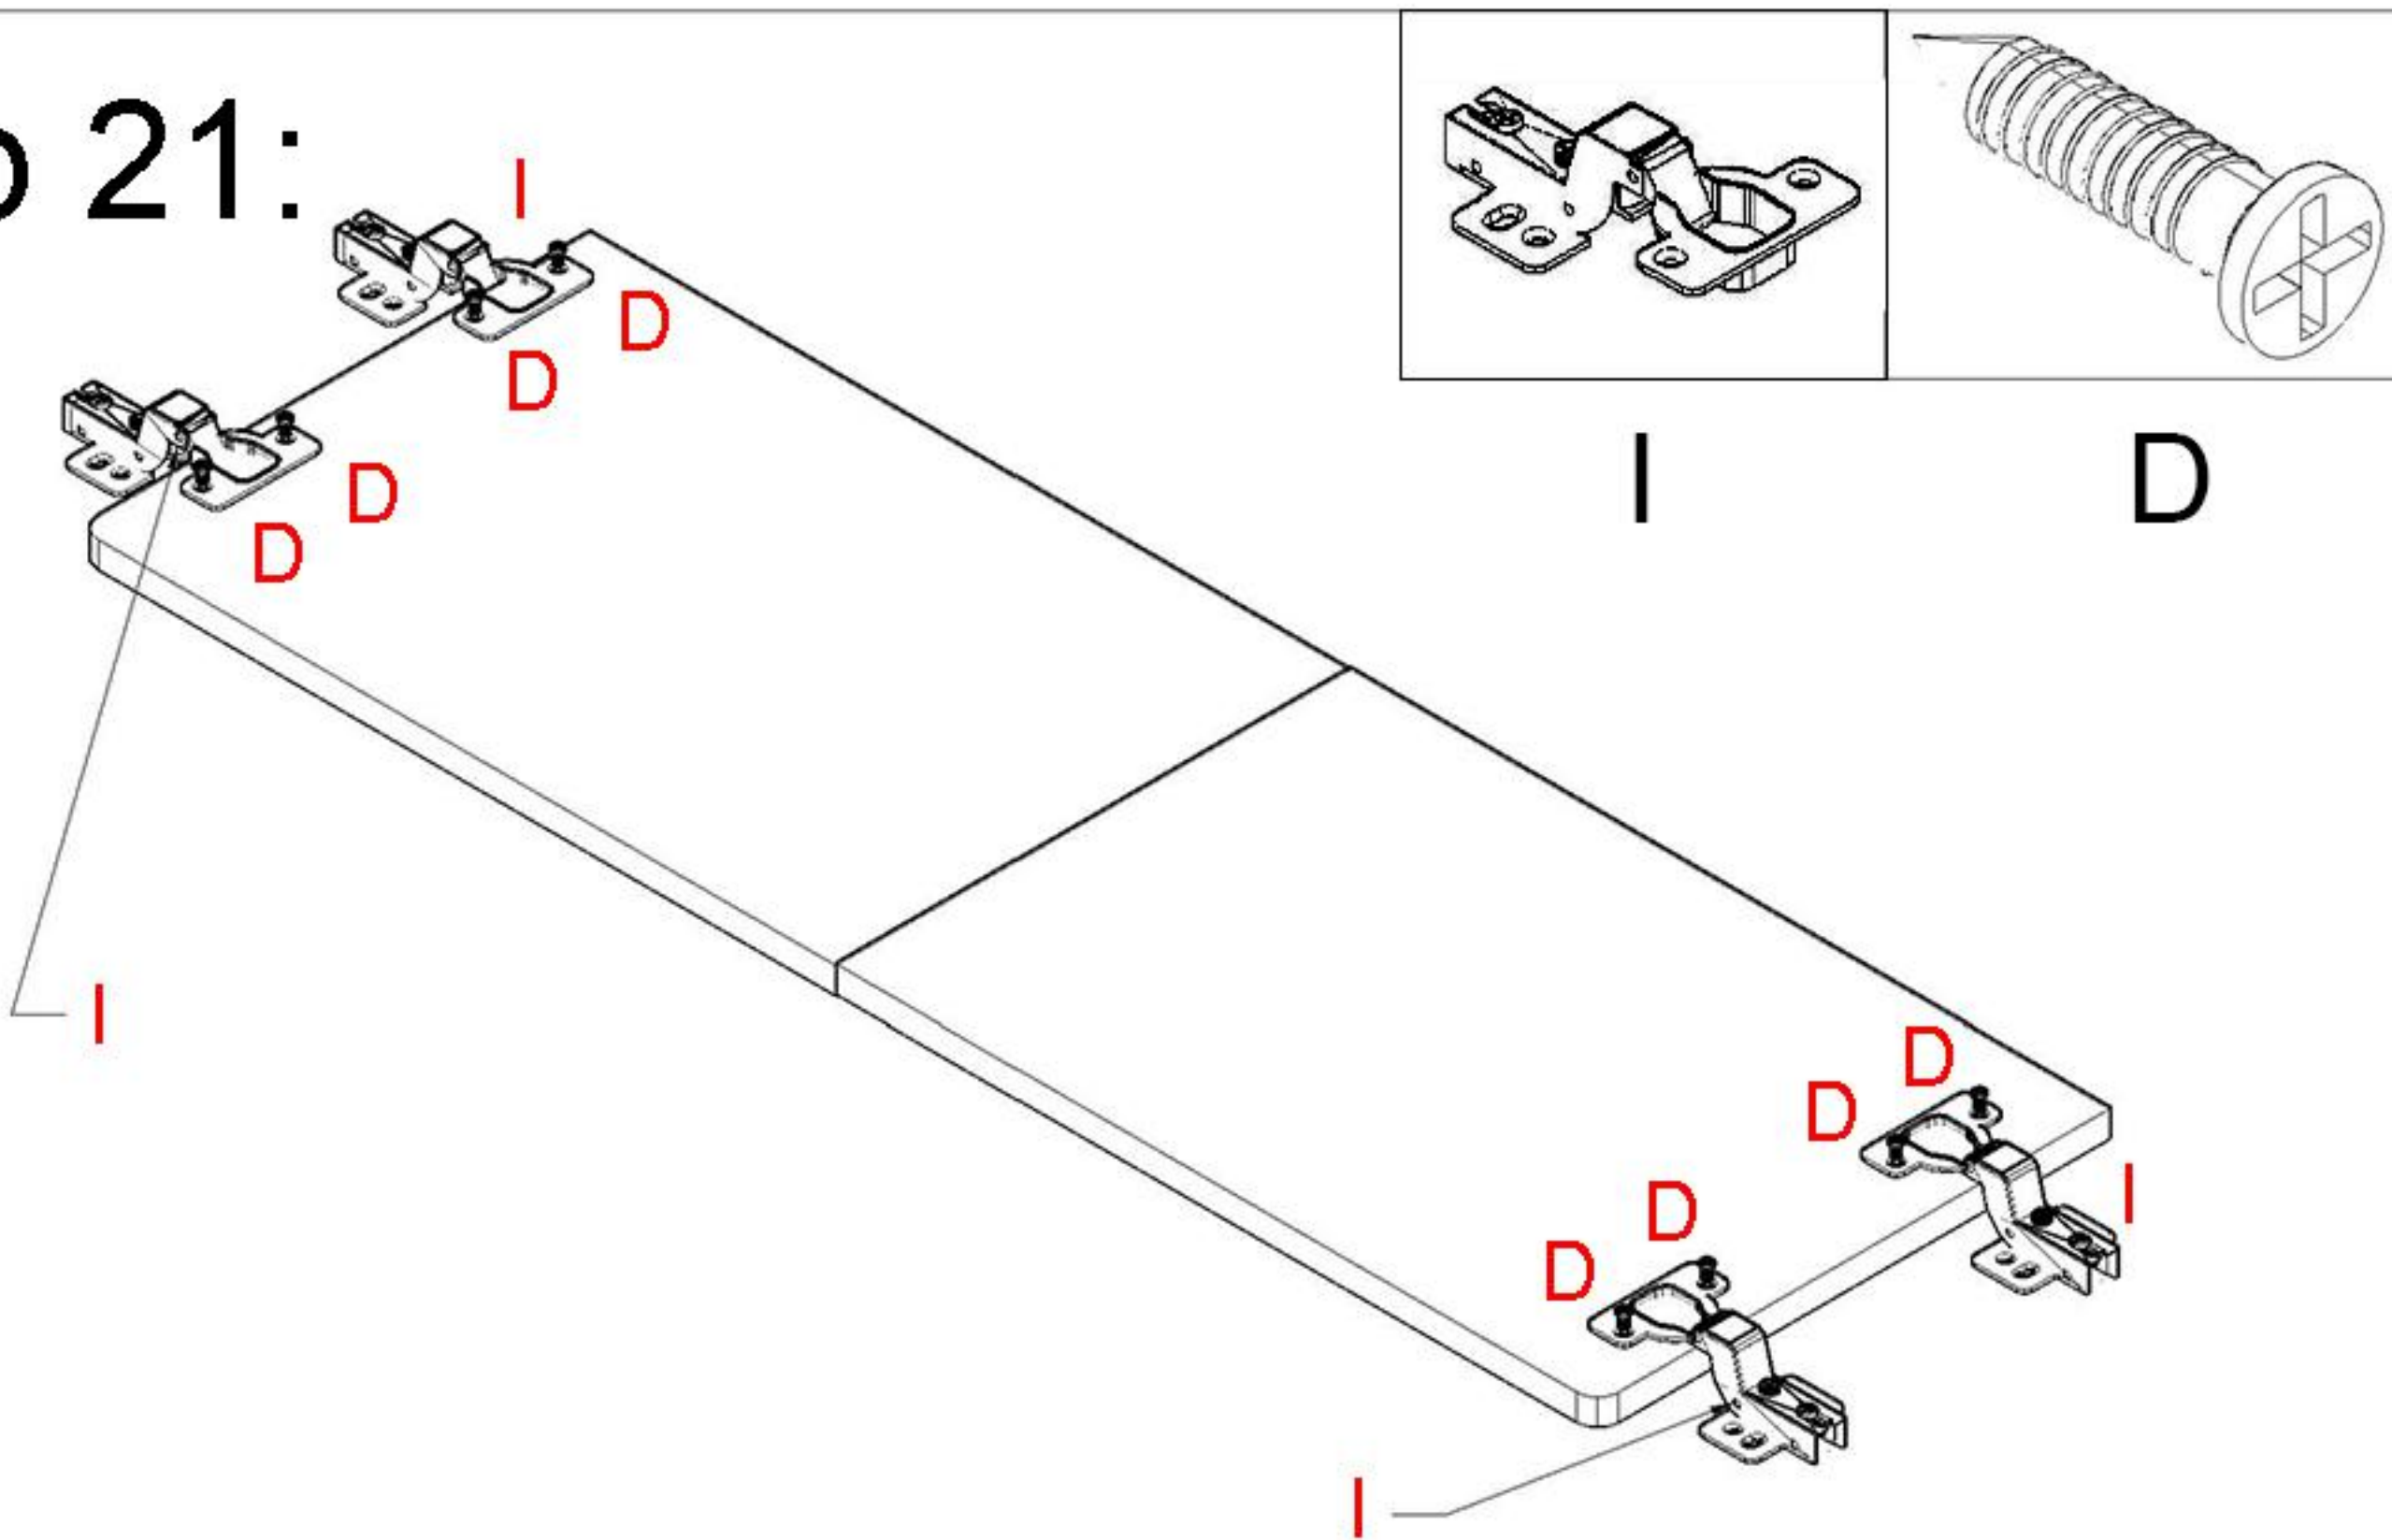

First, secure the rear two holes of I, then install the front two holes. Refer to the initial hinge installation instructions to adjust the door's height and gap.

Step 22:

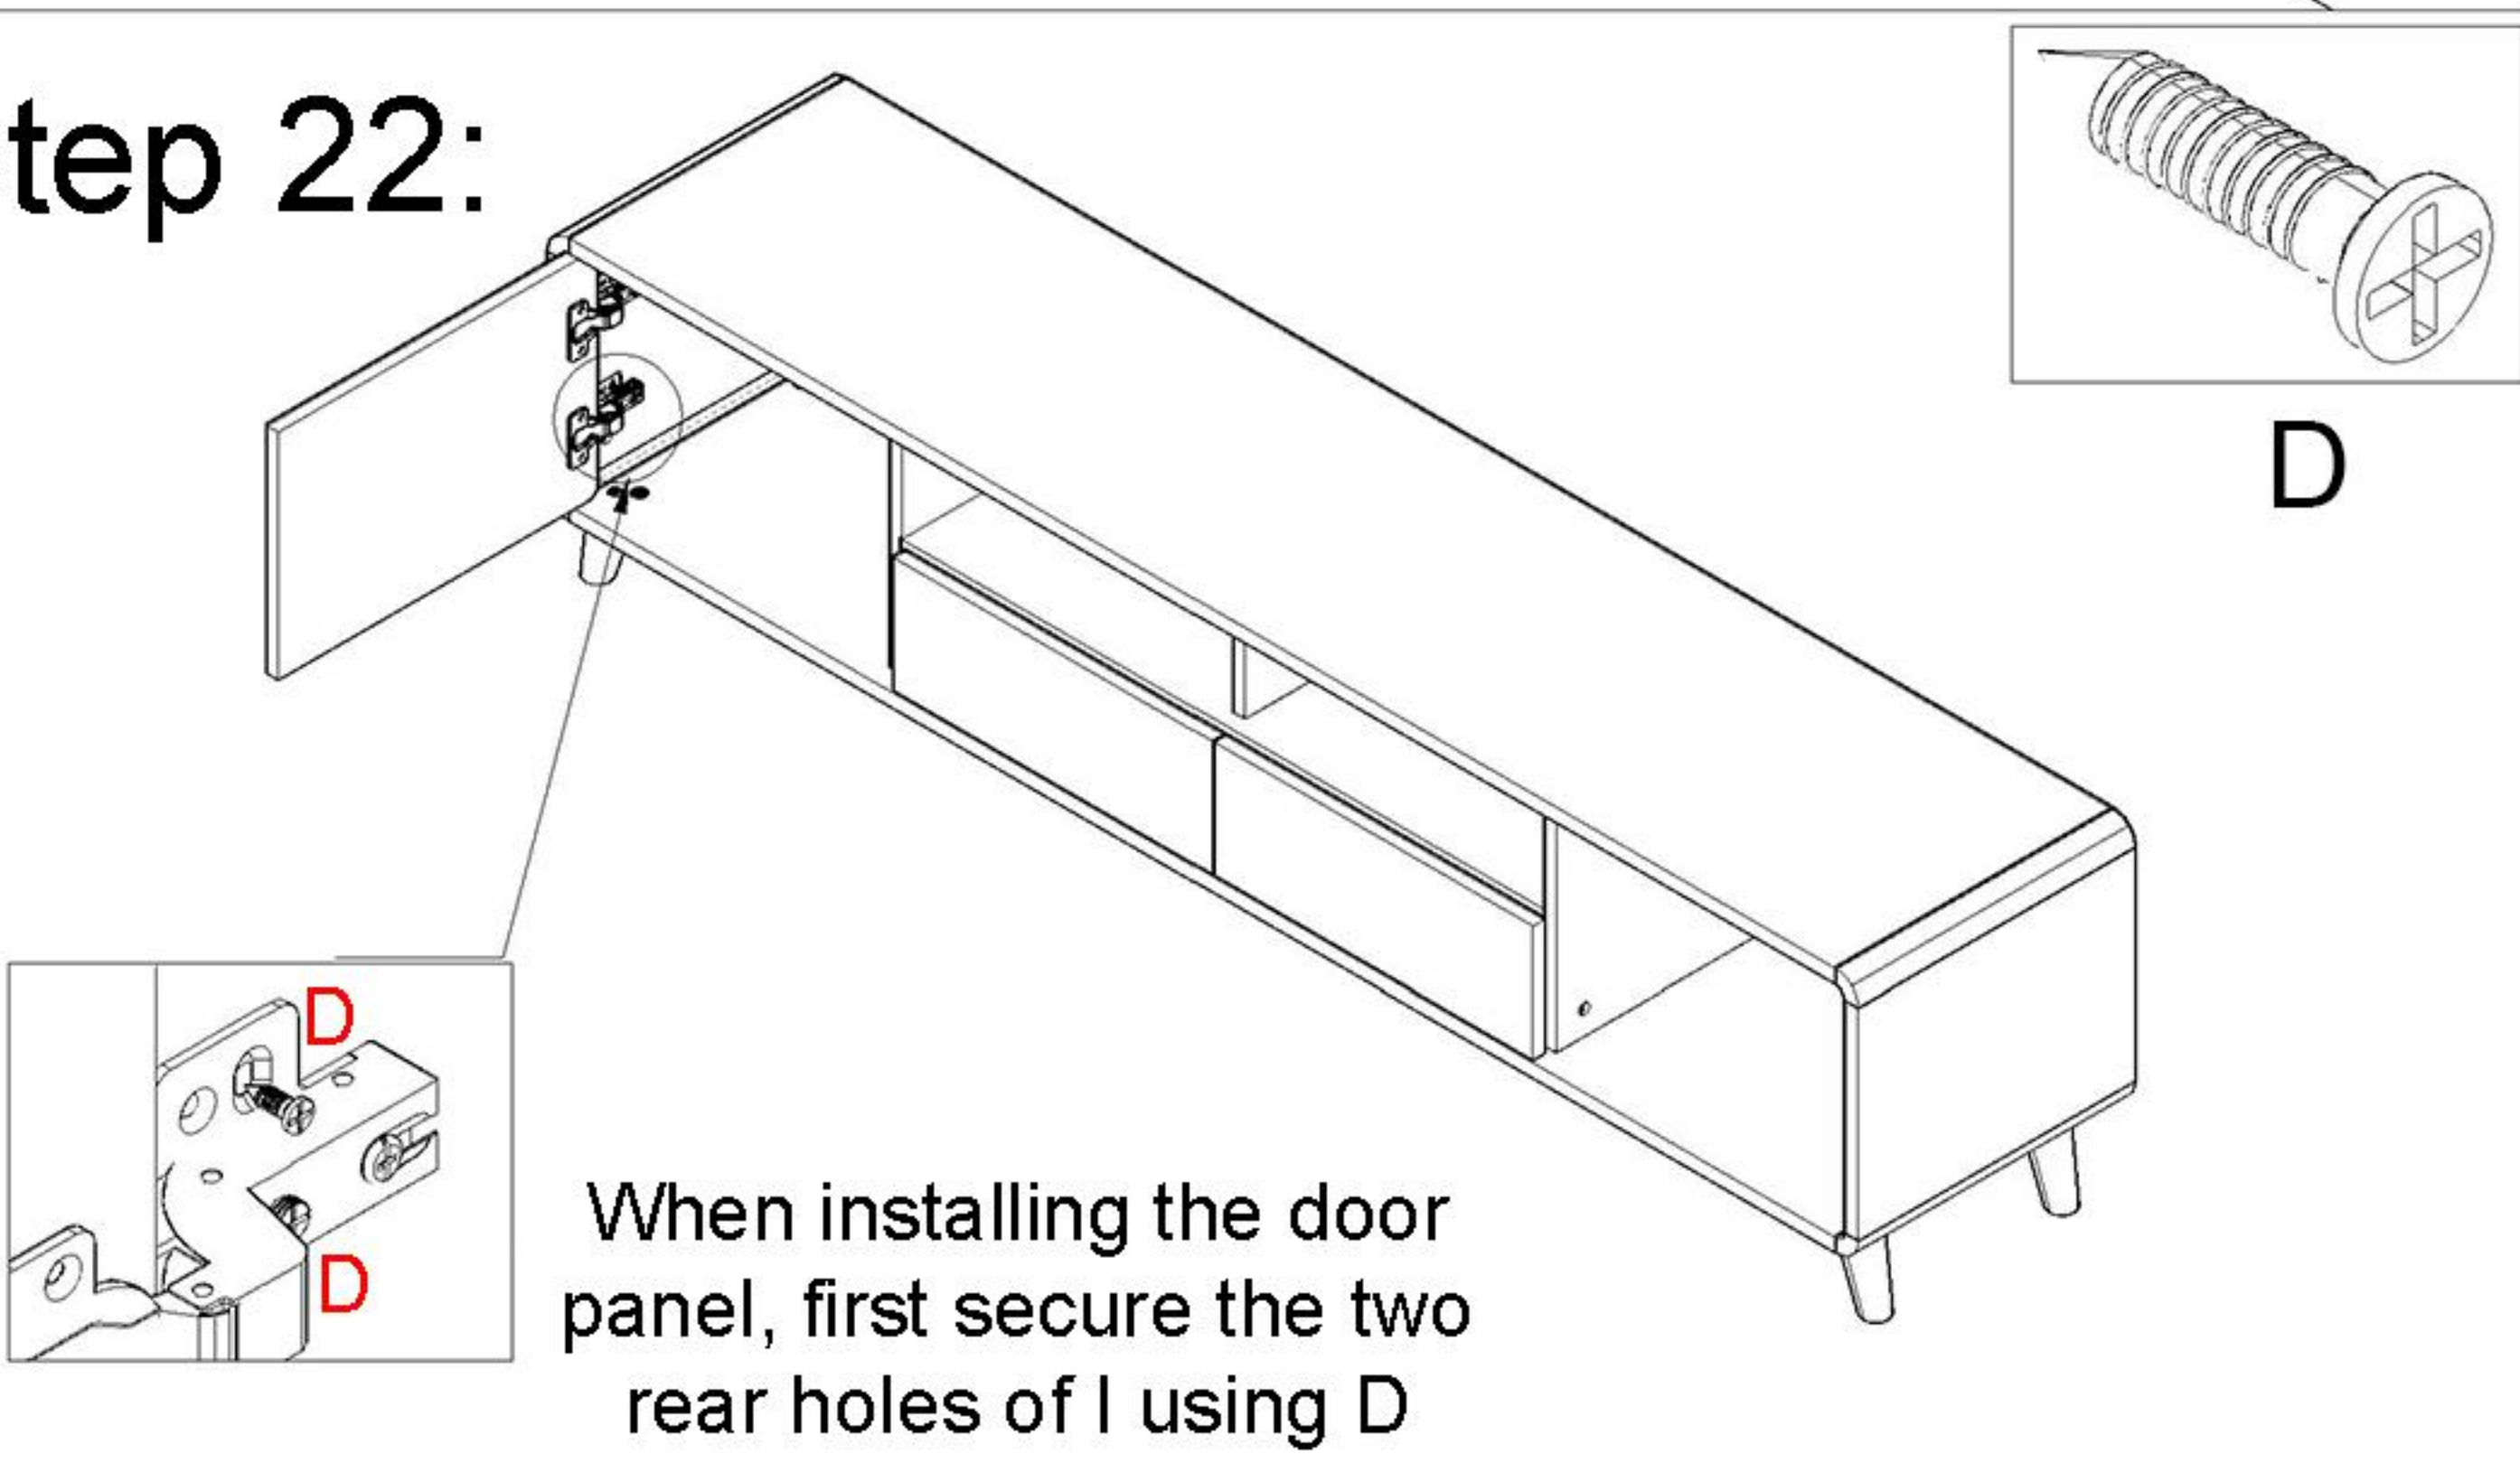

When installing the door panel, first secure the two rear holes of I using D

Note: When installing I, if you encounter resistance while tightening the screws, stop immediately. Continuing to apply force may cause the threads to strip or damage the mechanism.

