

# SOCE058-120

## Installation Instruction

Please read this instruction manual carefully before installation and use.



### Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

### Precautions after assembly:


1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

**NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.**

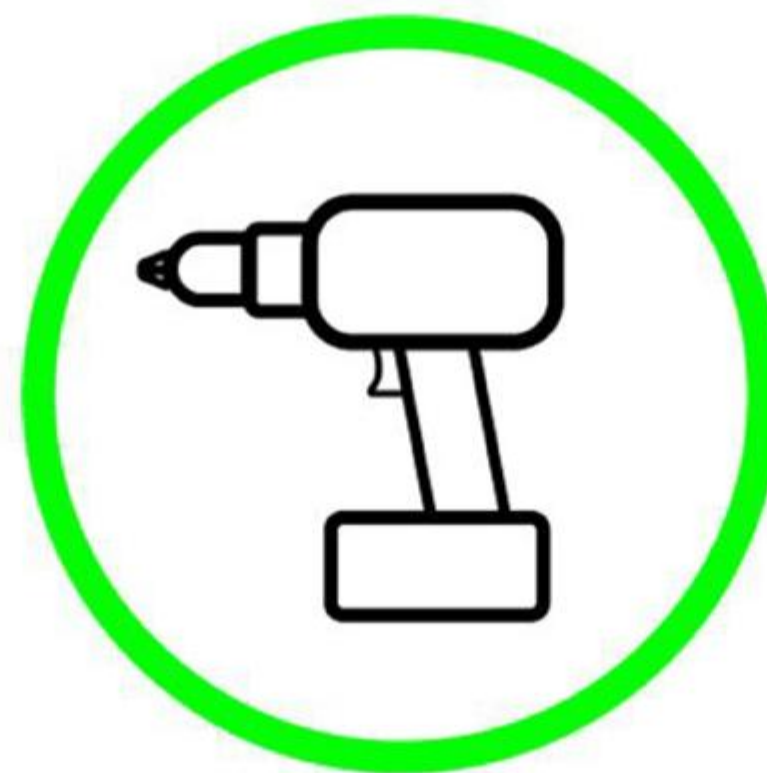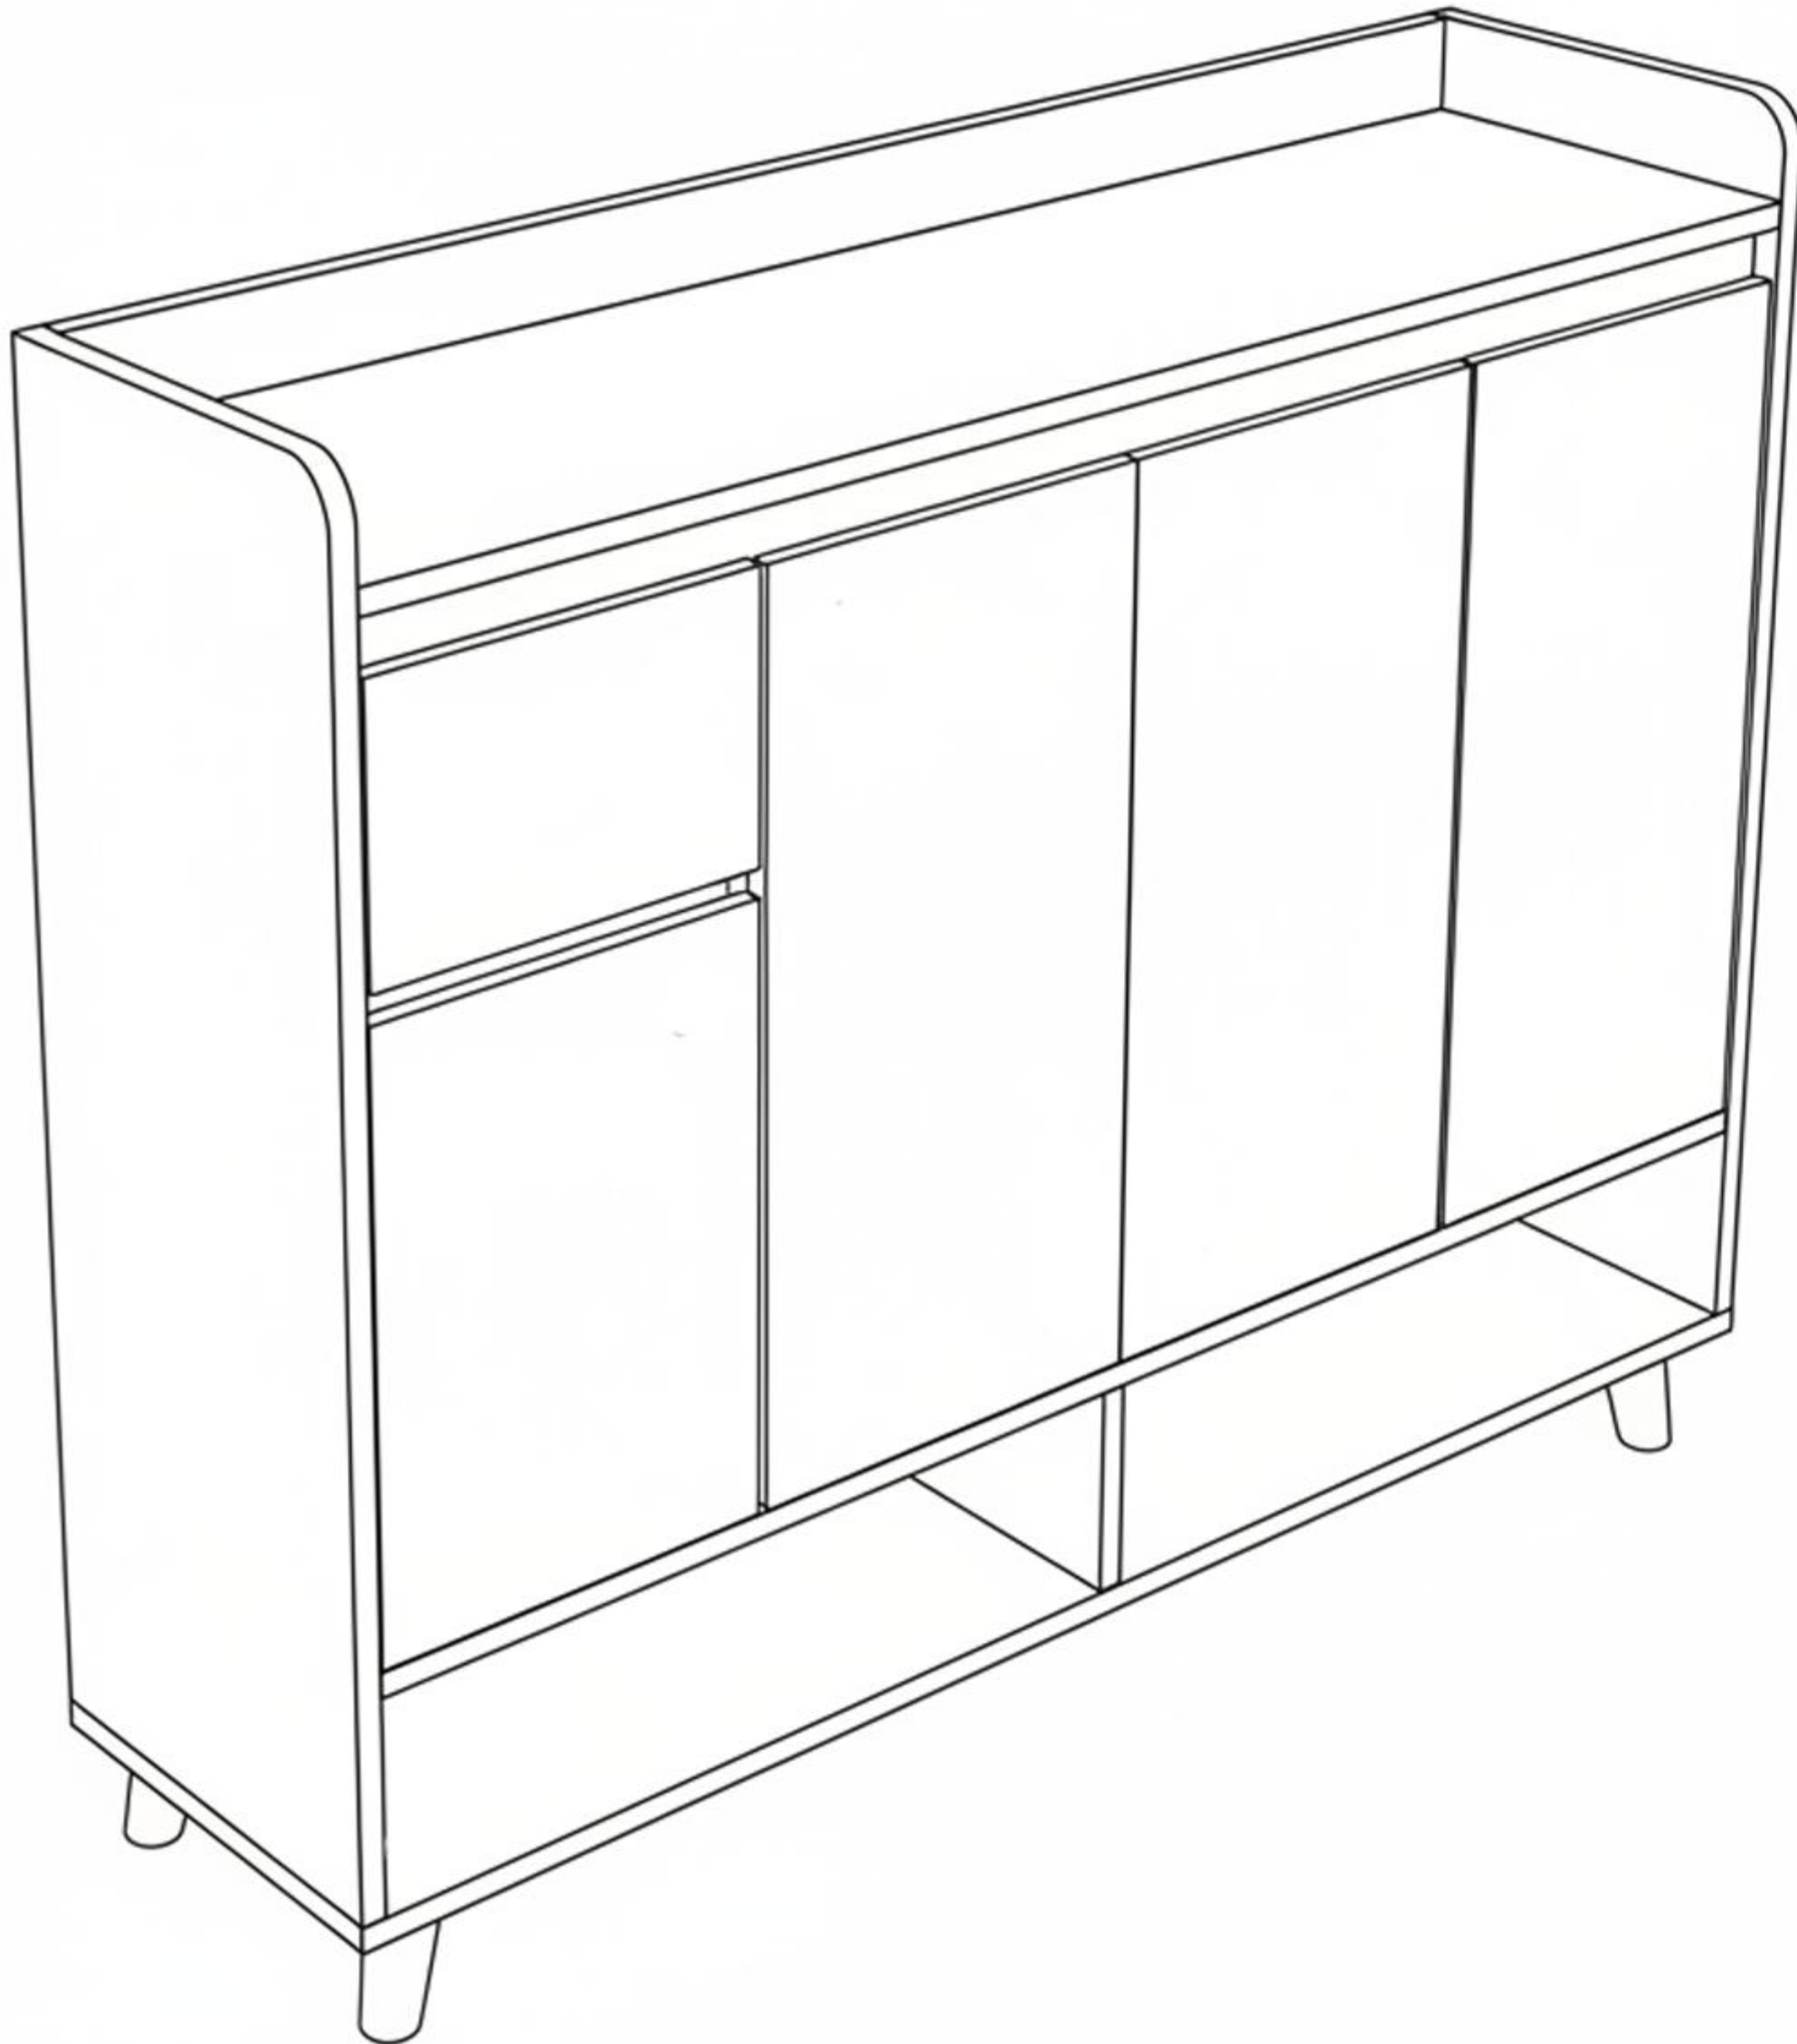

Scan the code to purchase ES001







# CAUTION

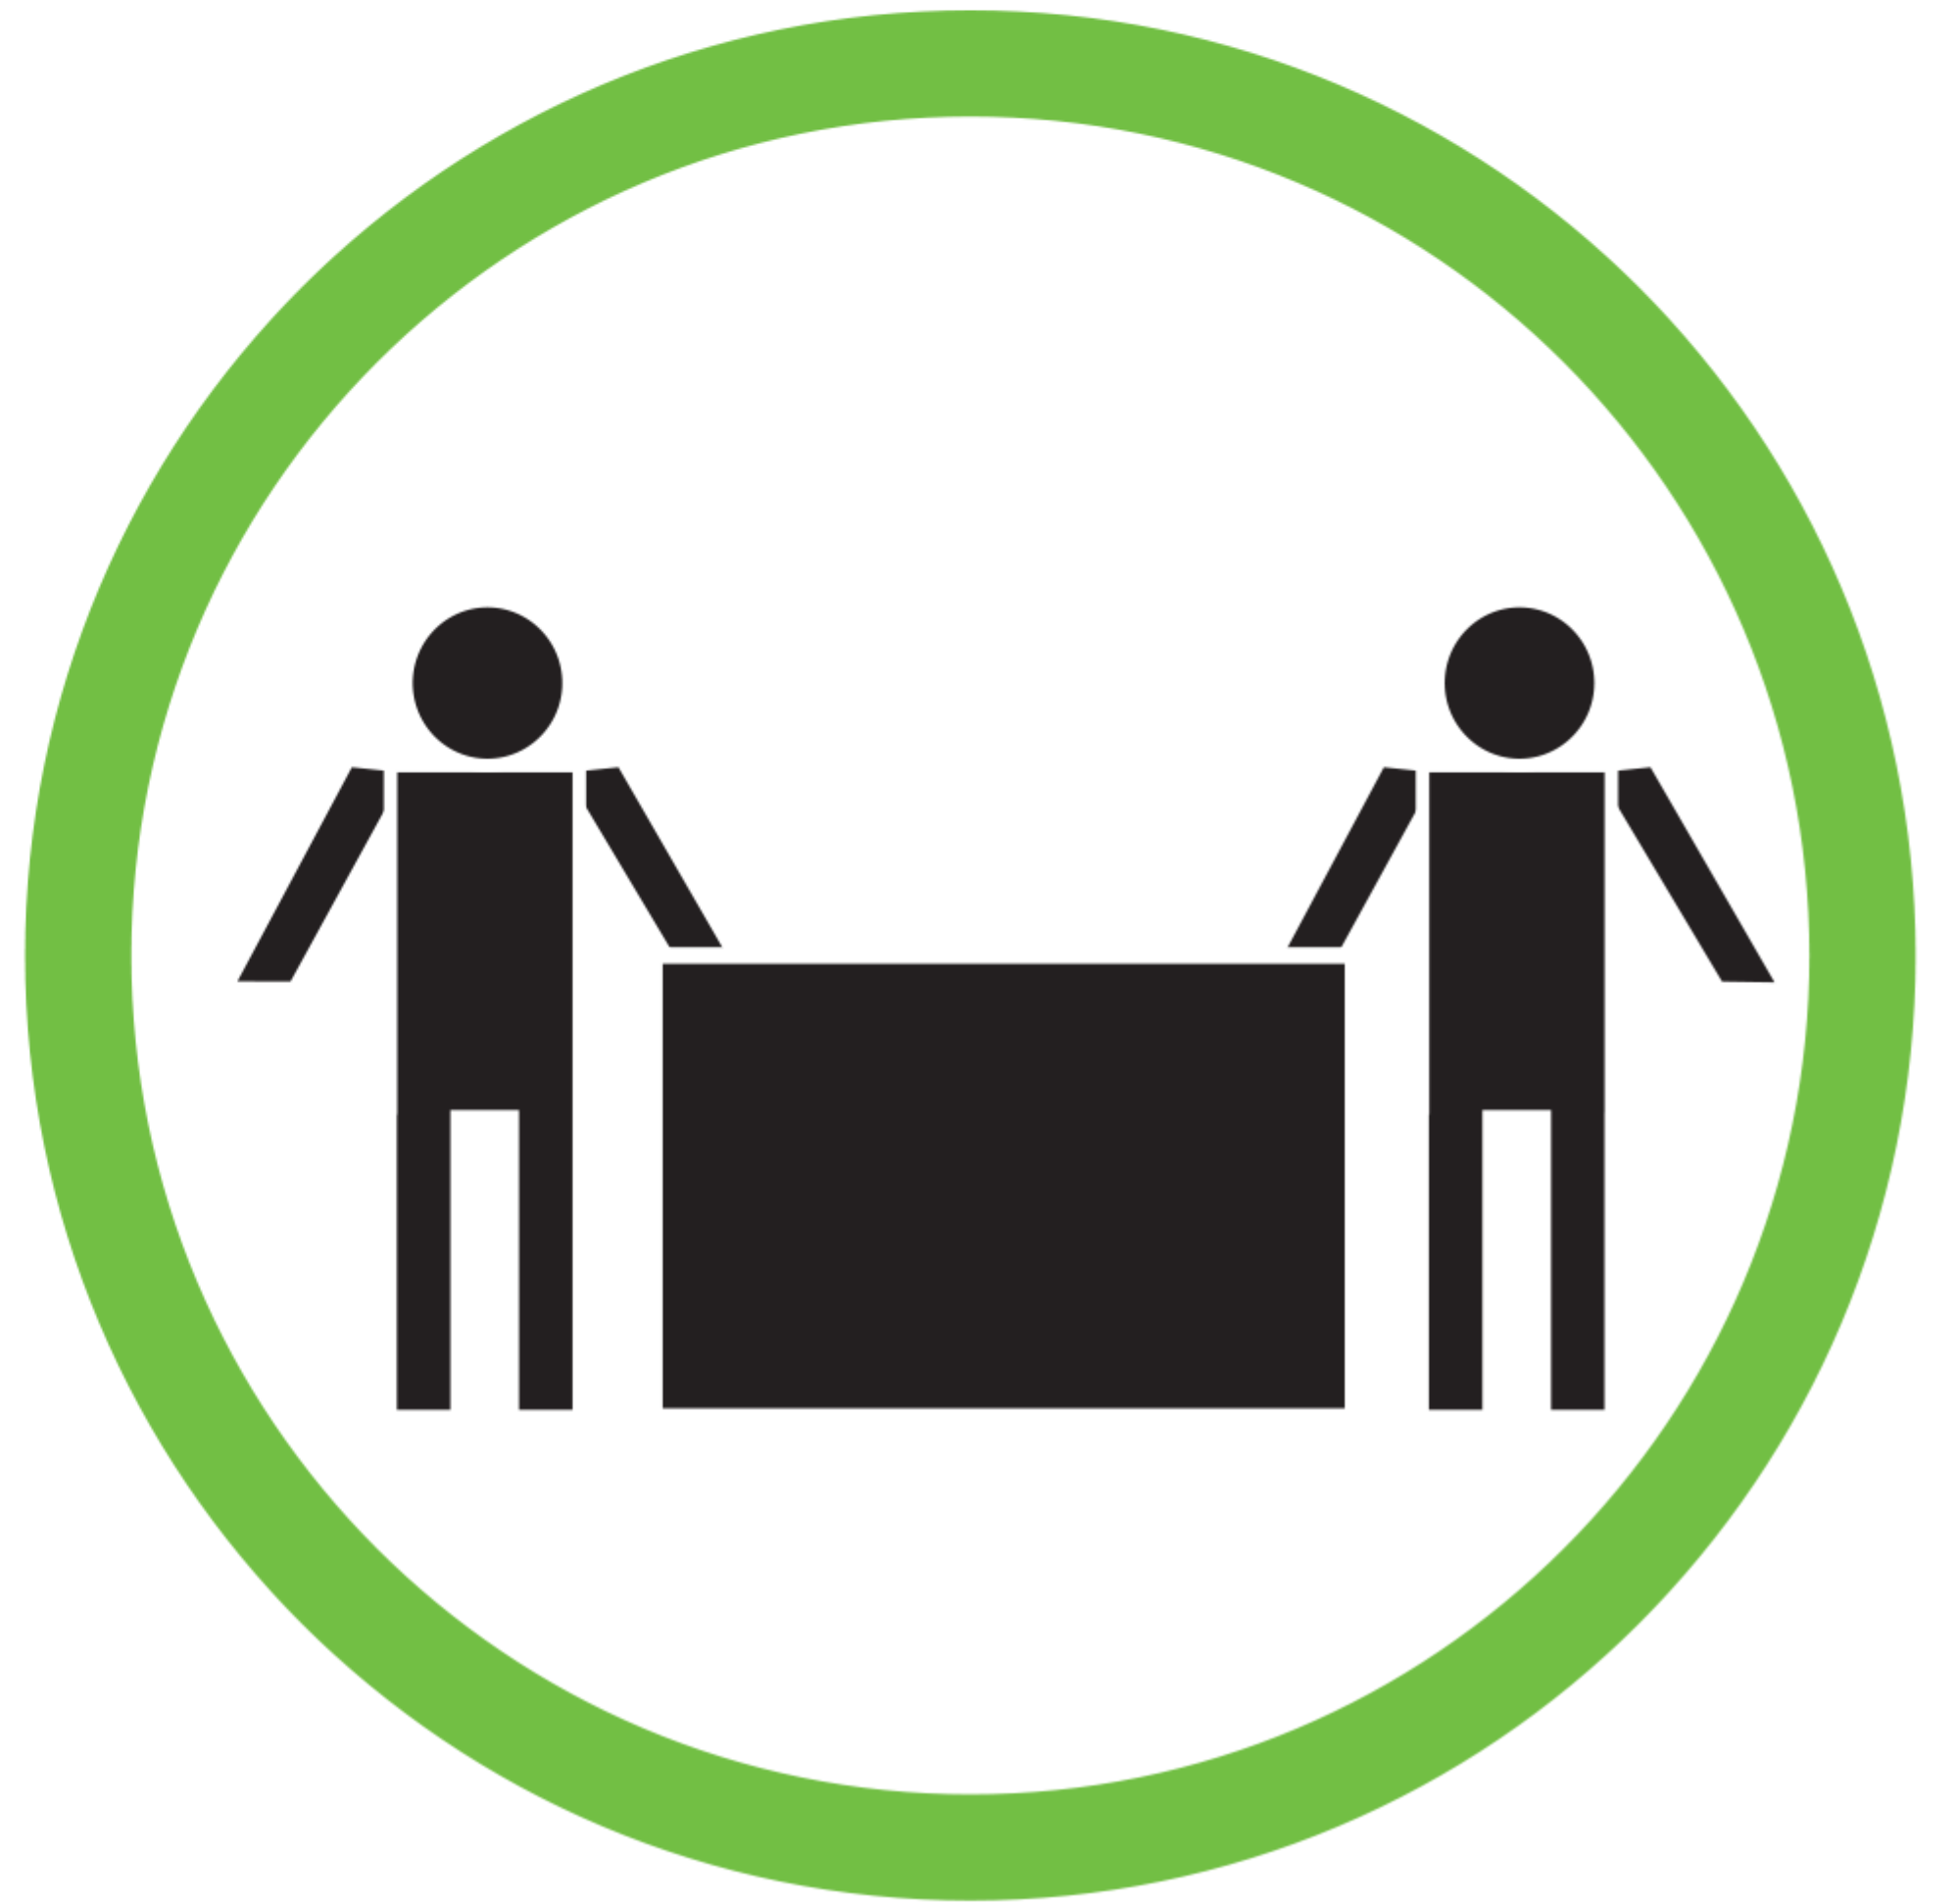

## TWO PERSONS LIFT & INSTALLATION

**Important: This product is oversized and heavy. For safe assembly and to avoid damage, at least two people are required. When flipping or moving the item, always lift carefully. Never drag, drop, or handle it roughly.**


# Hardware List
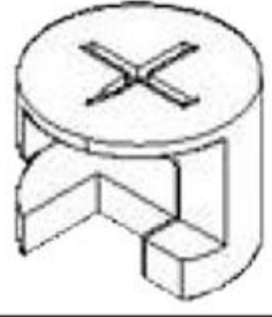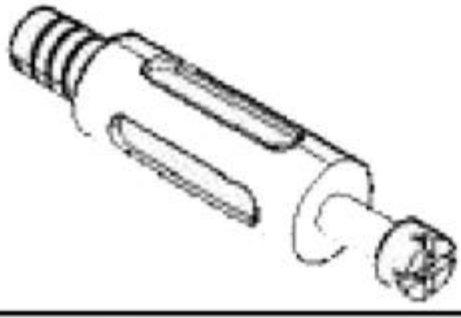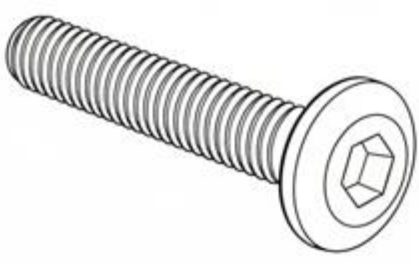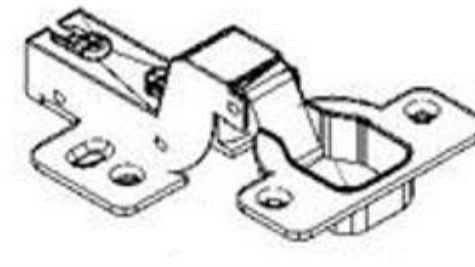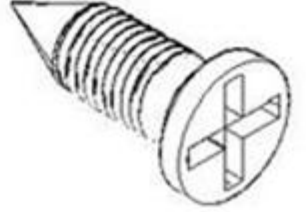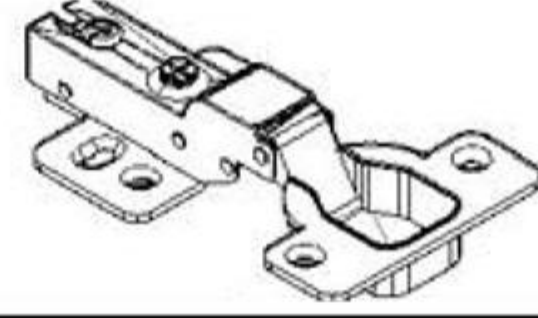
| Accessory Appearance                                                                      | Code | Accessory Appearance                                                                                        | Code |
|-------------------------------------------------------------------------------------------|------|-------------------------------------------------------------------------------------------------------------|------|
|          | A    |                          | G    |
|          | B    |                          | H    |
|          | C    |                          | I    |
|          | D    |                          | J    |
|  Silver | E    |  Different hinge angles | K    |
|  Gold  | F    |                                                                                                             |      |


**Detailed description of the main components, please read carefully**

## J/K (Hinge) Installation Instructions

Install the hinge with screw F (Gold)

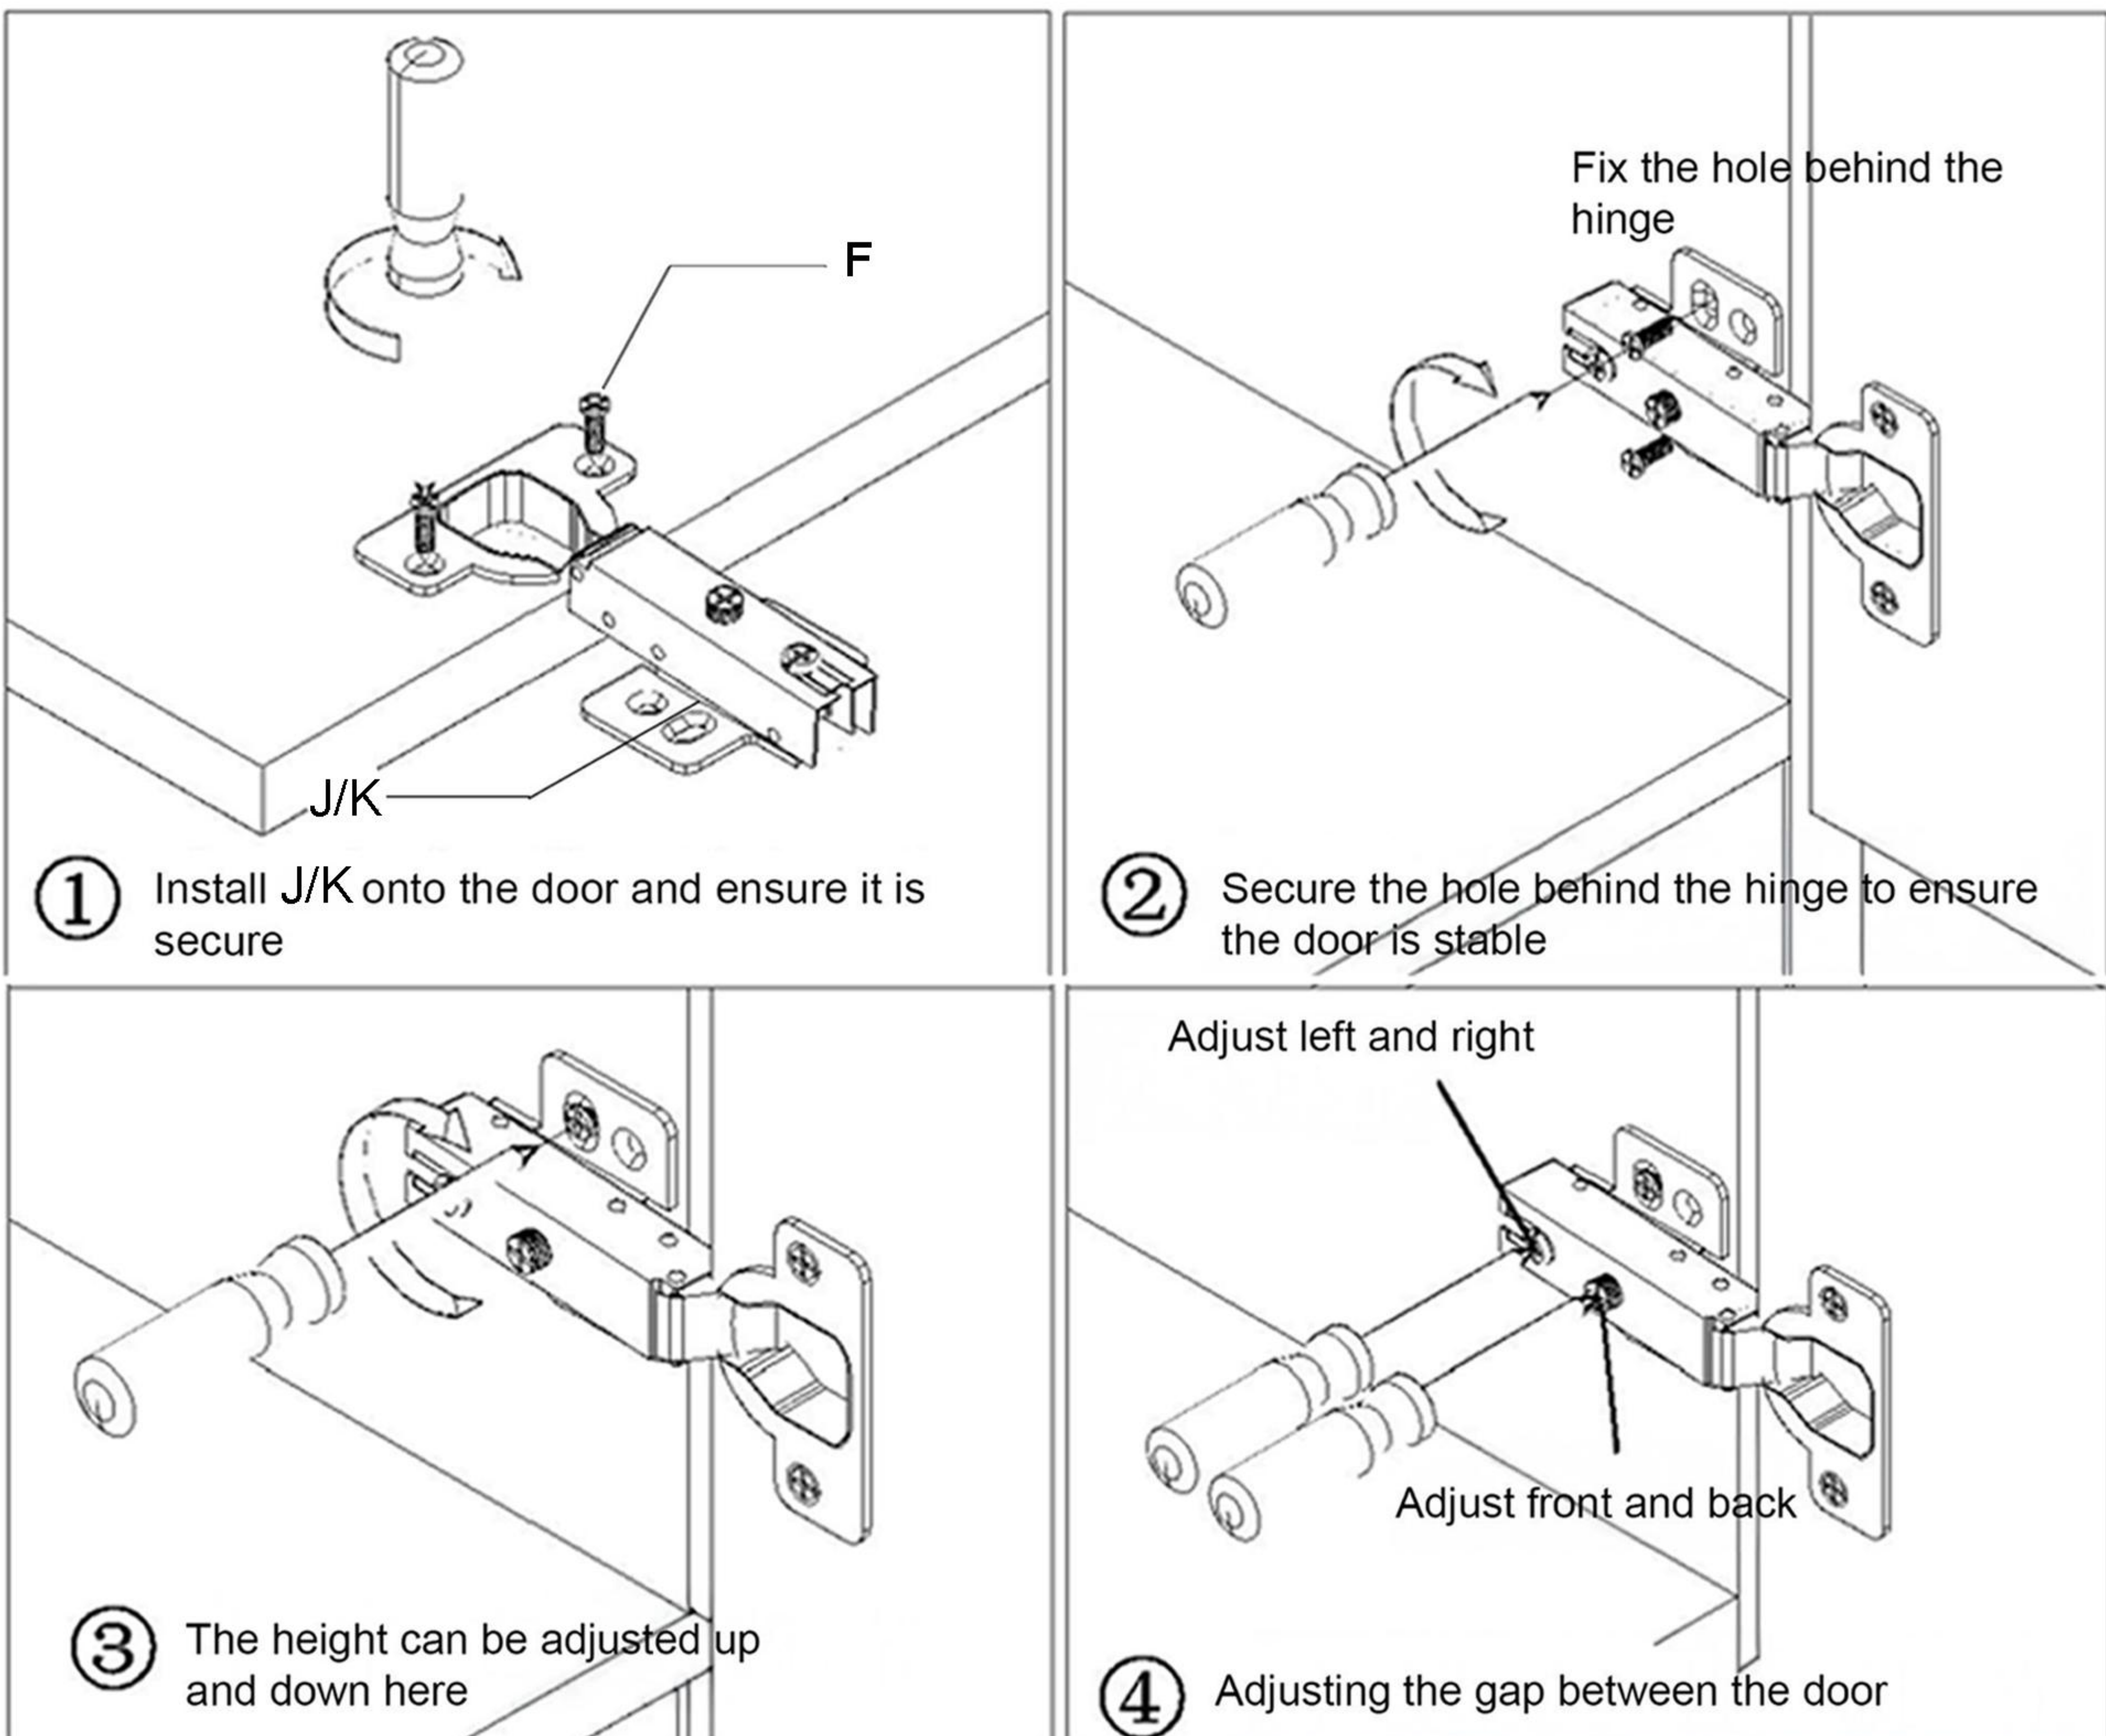

## Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

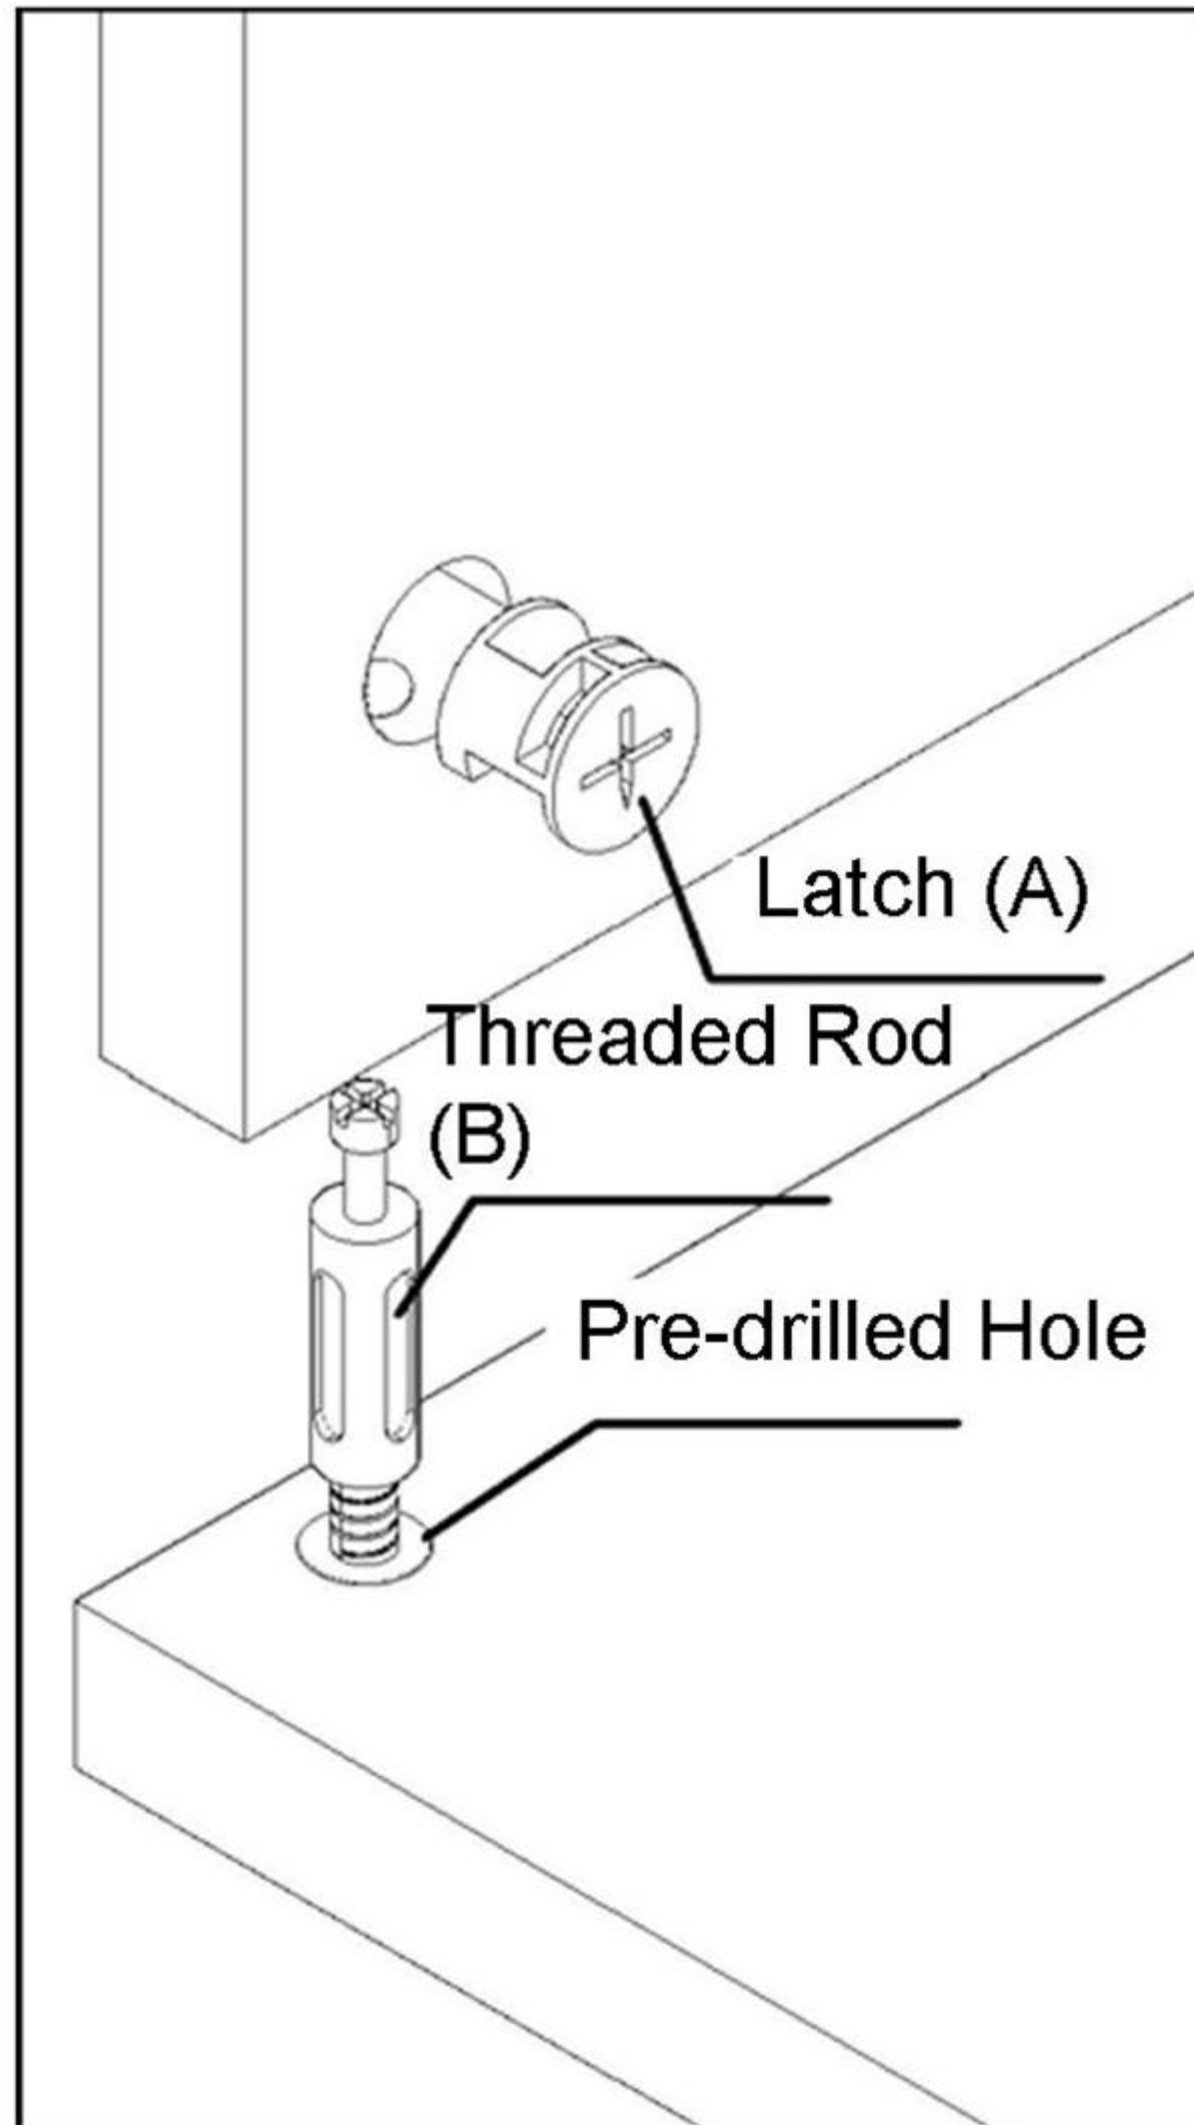

1. Screw the B (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed A into the corresponding hole of the other piece. Press A (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.

## Sliding Rail Installation Instructions


When installing **sliding rail**, use with screw **E (Silver)**

1, Separate Sliding Rail




The main body part


The pull-out part

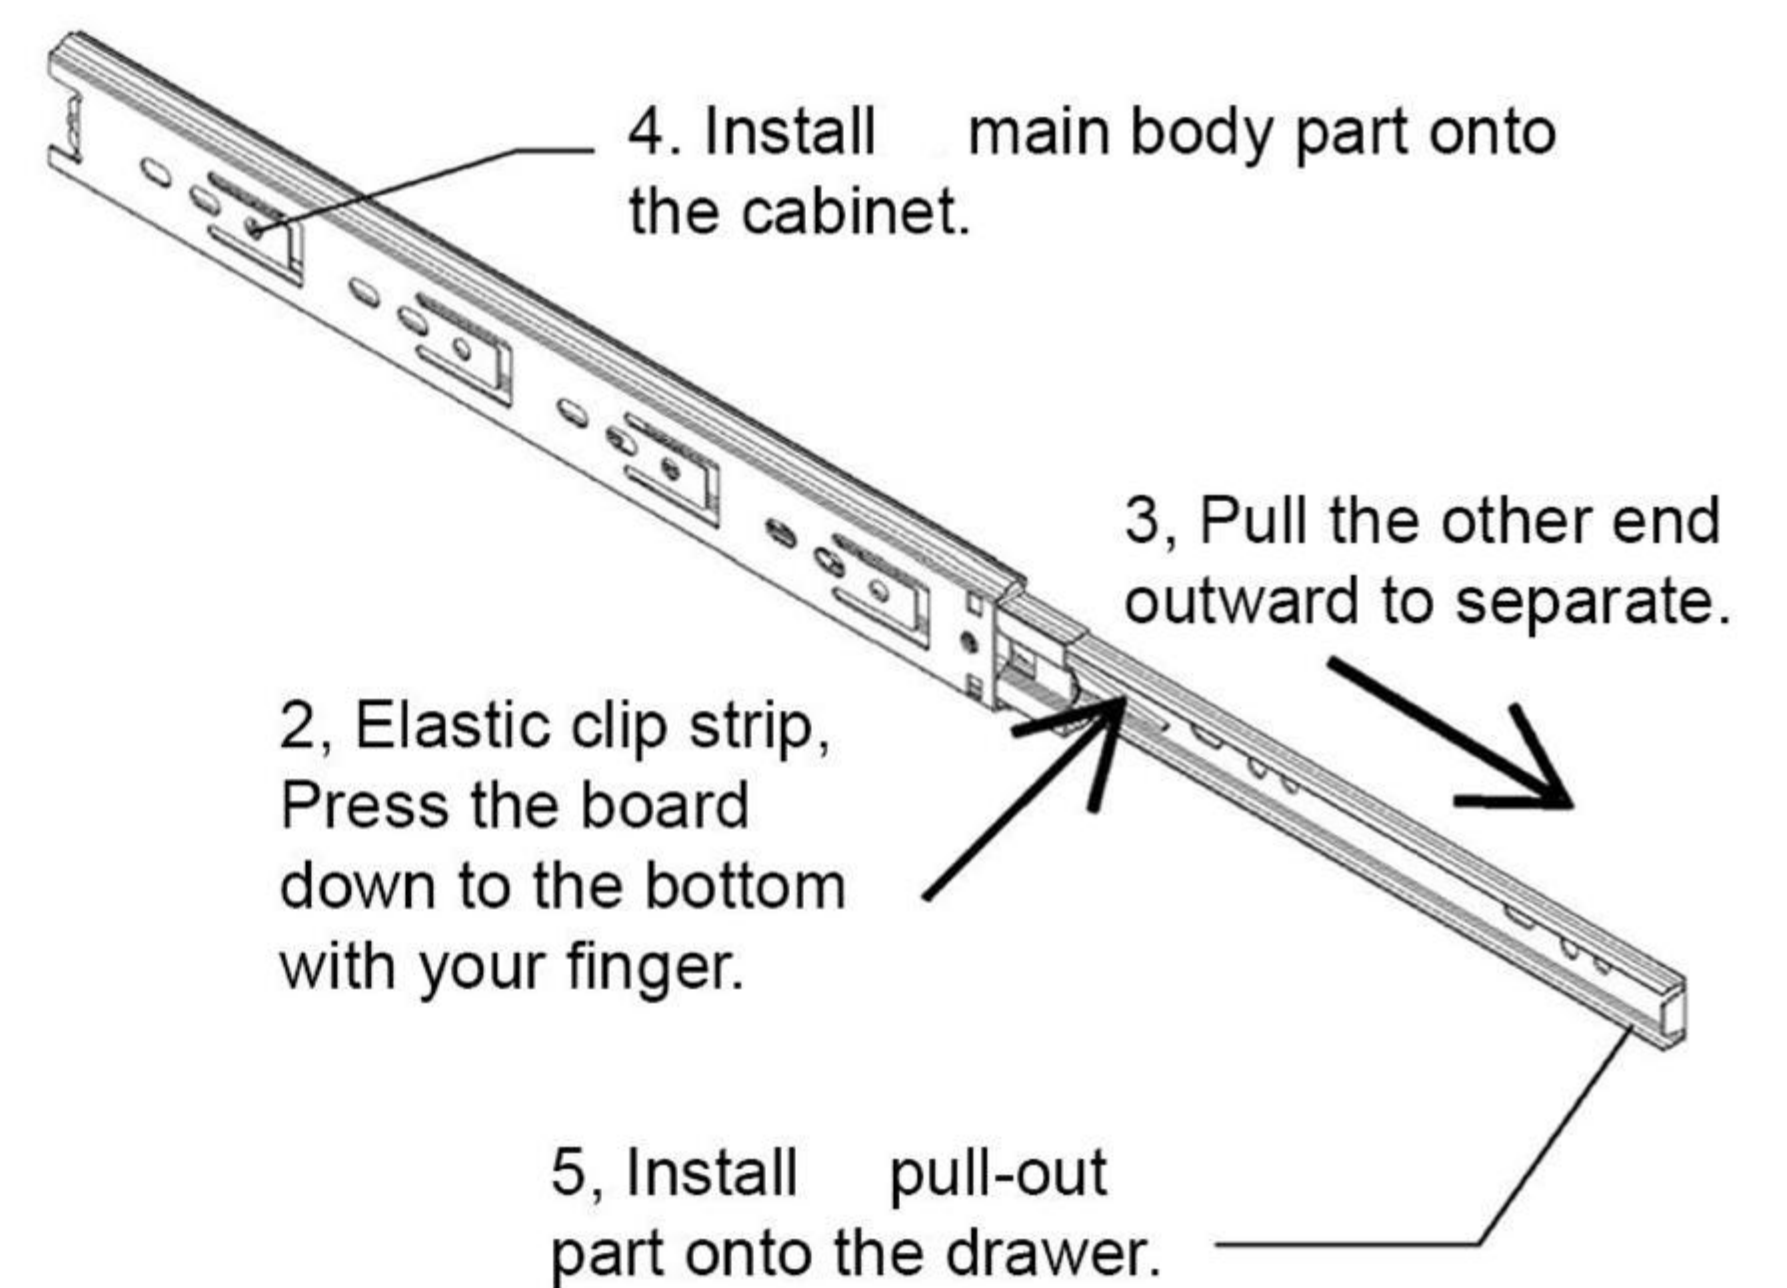


## Step 1:

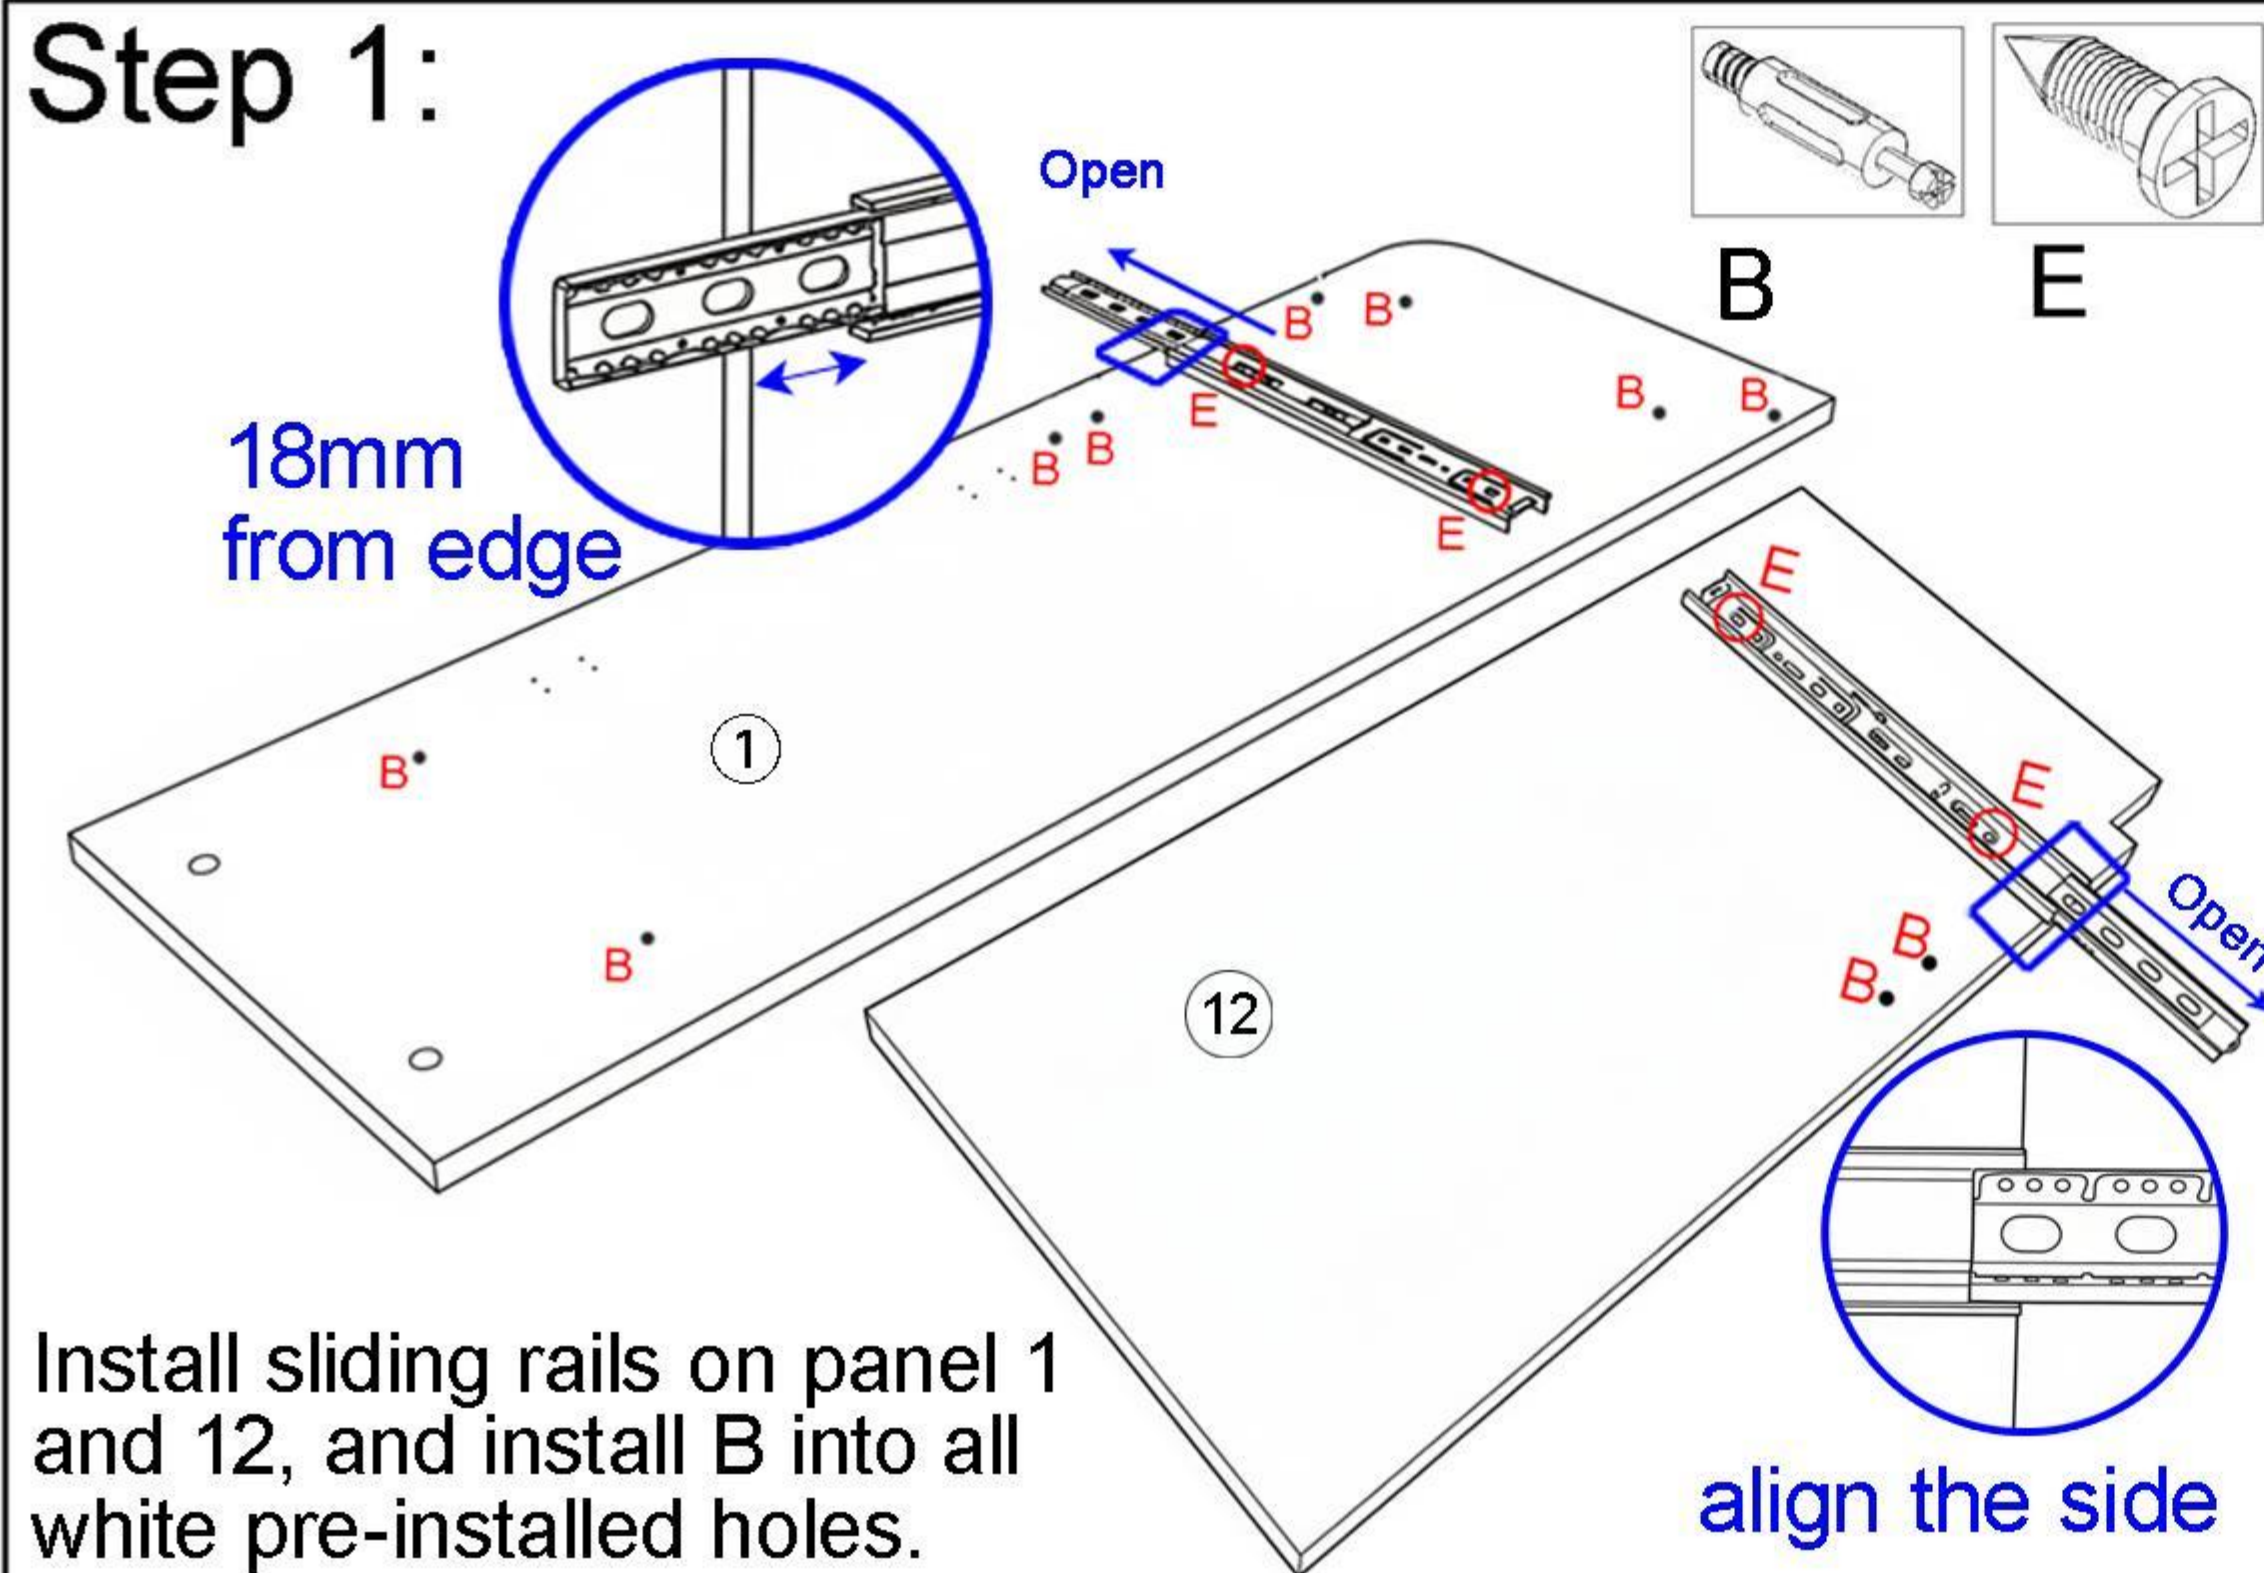


## Step 2:

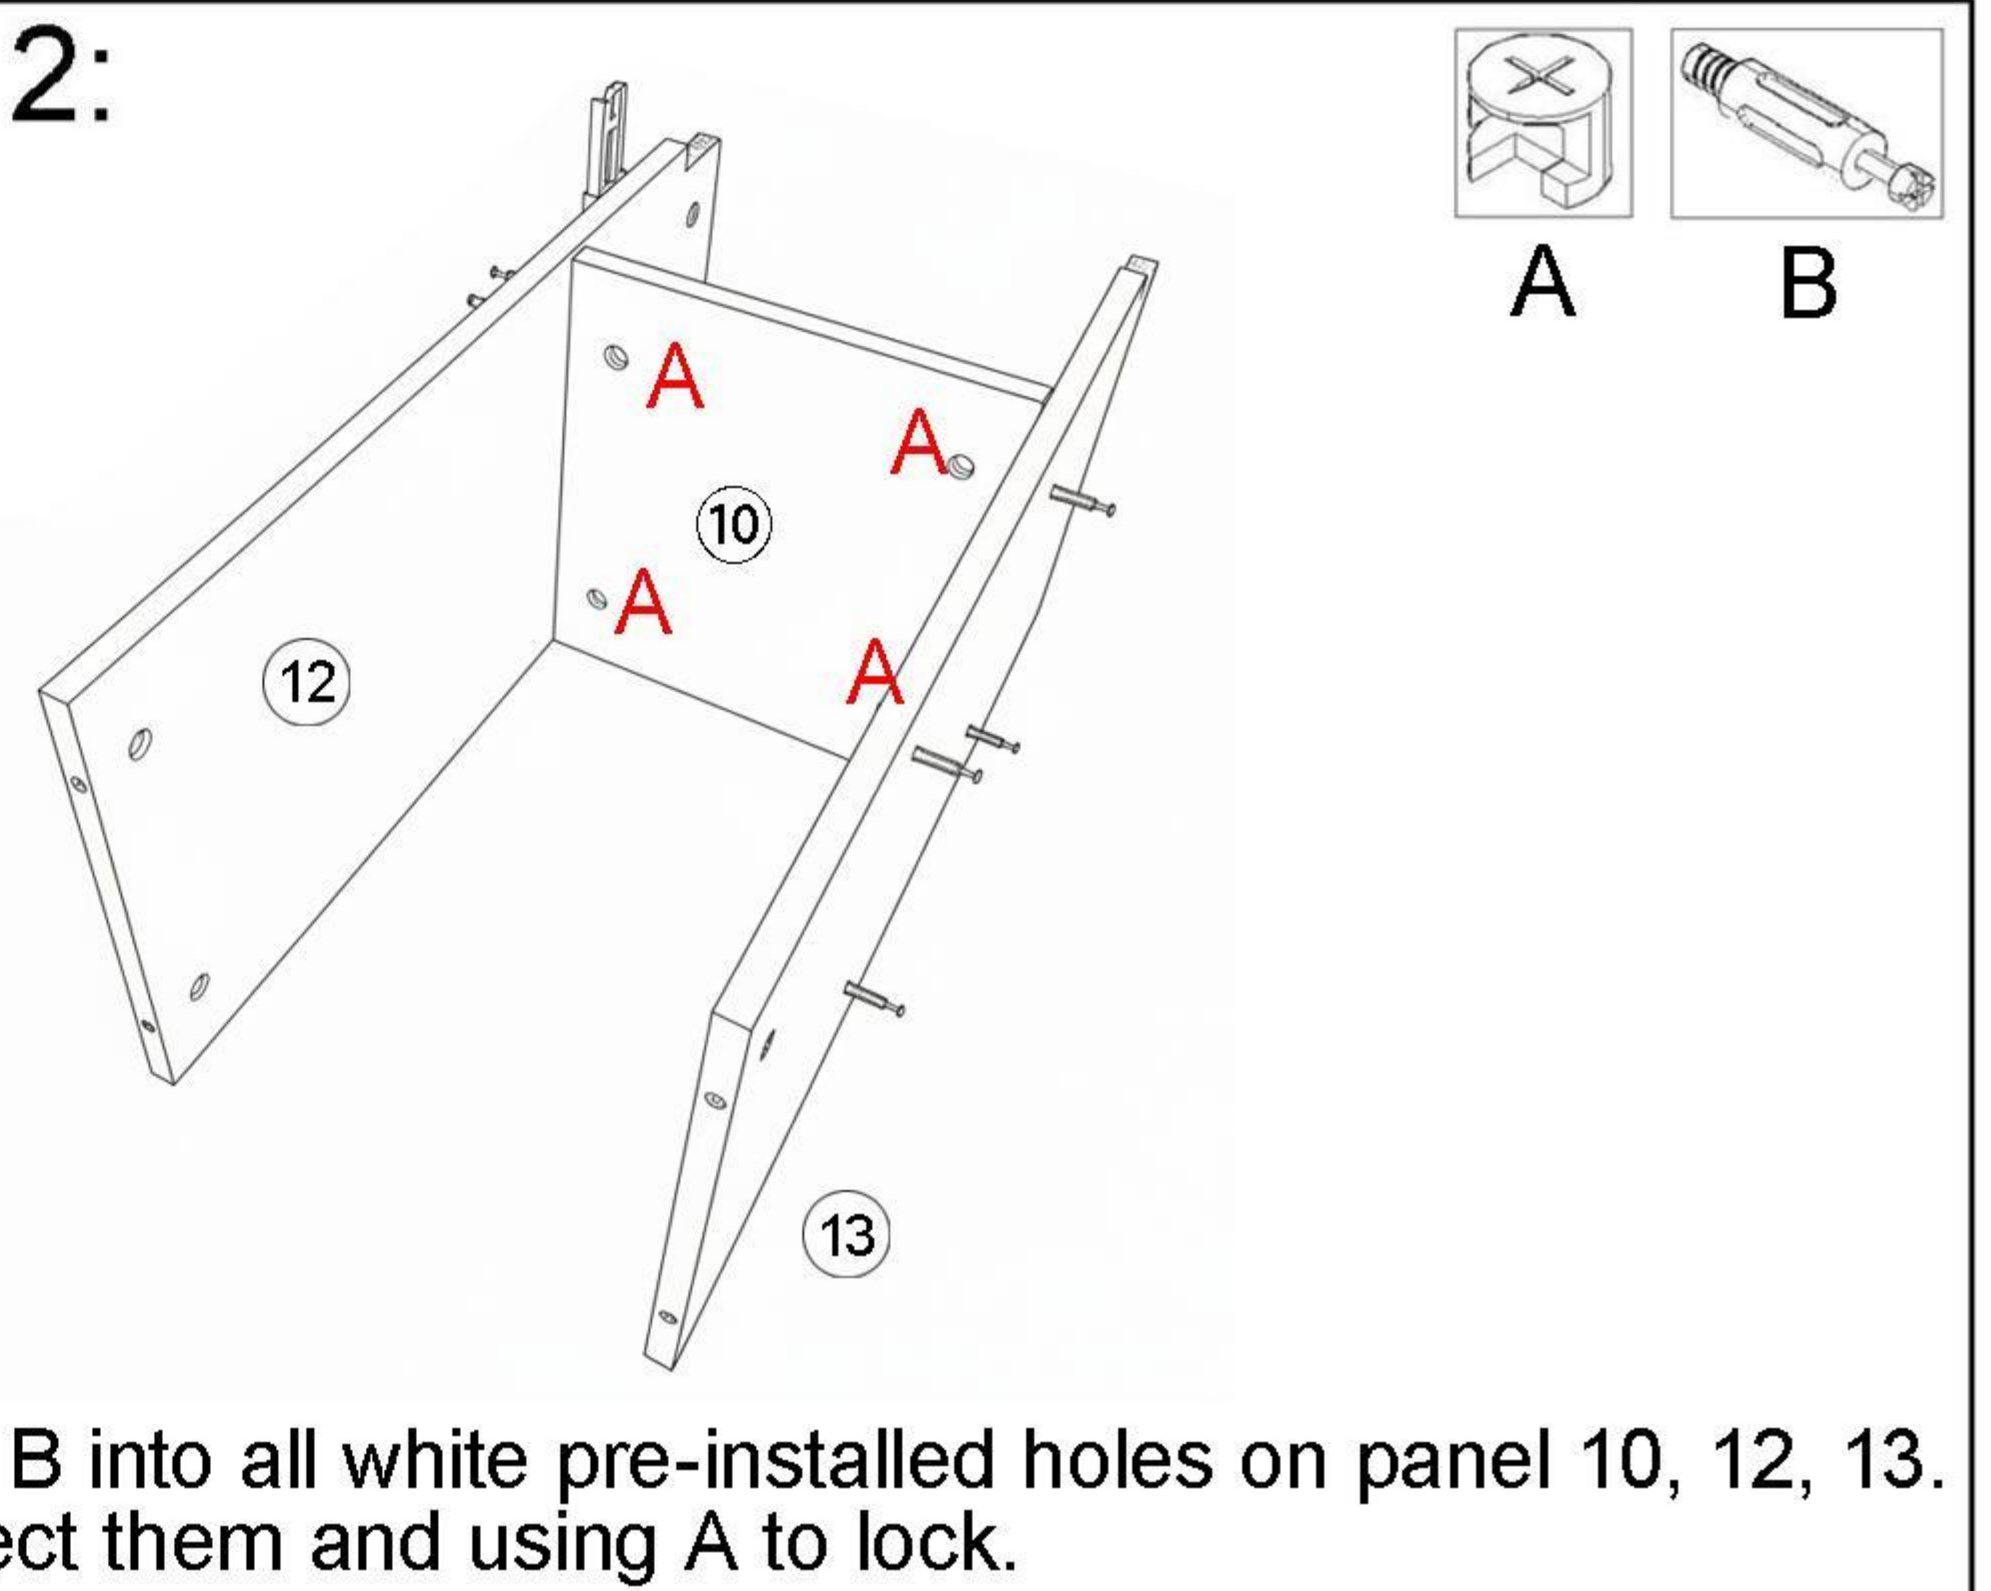


## Step 3:

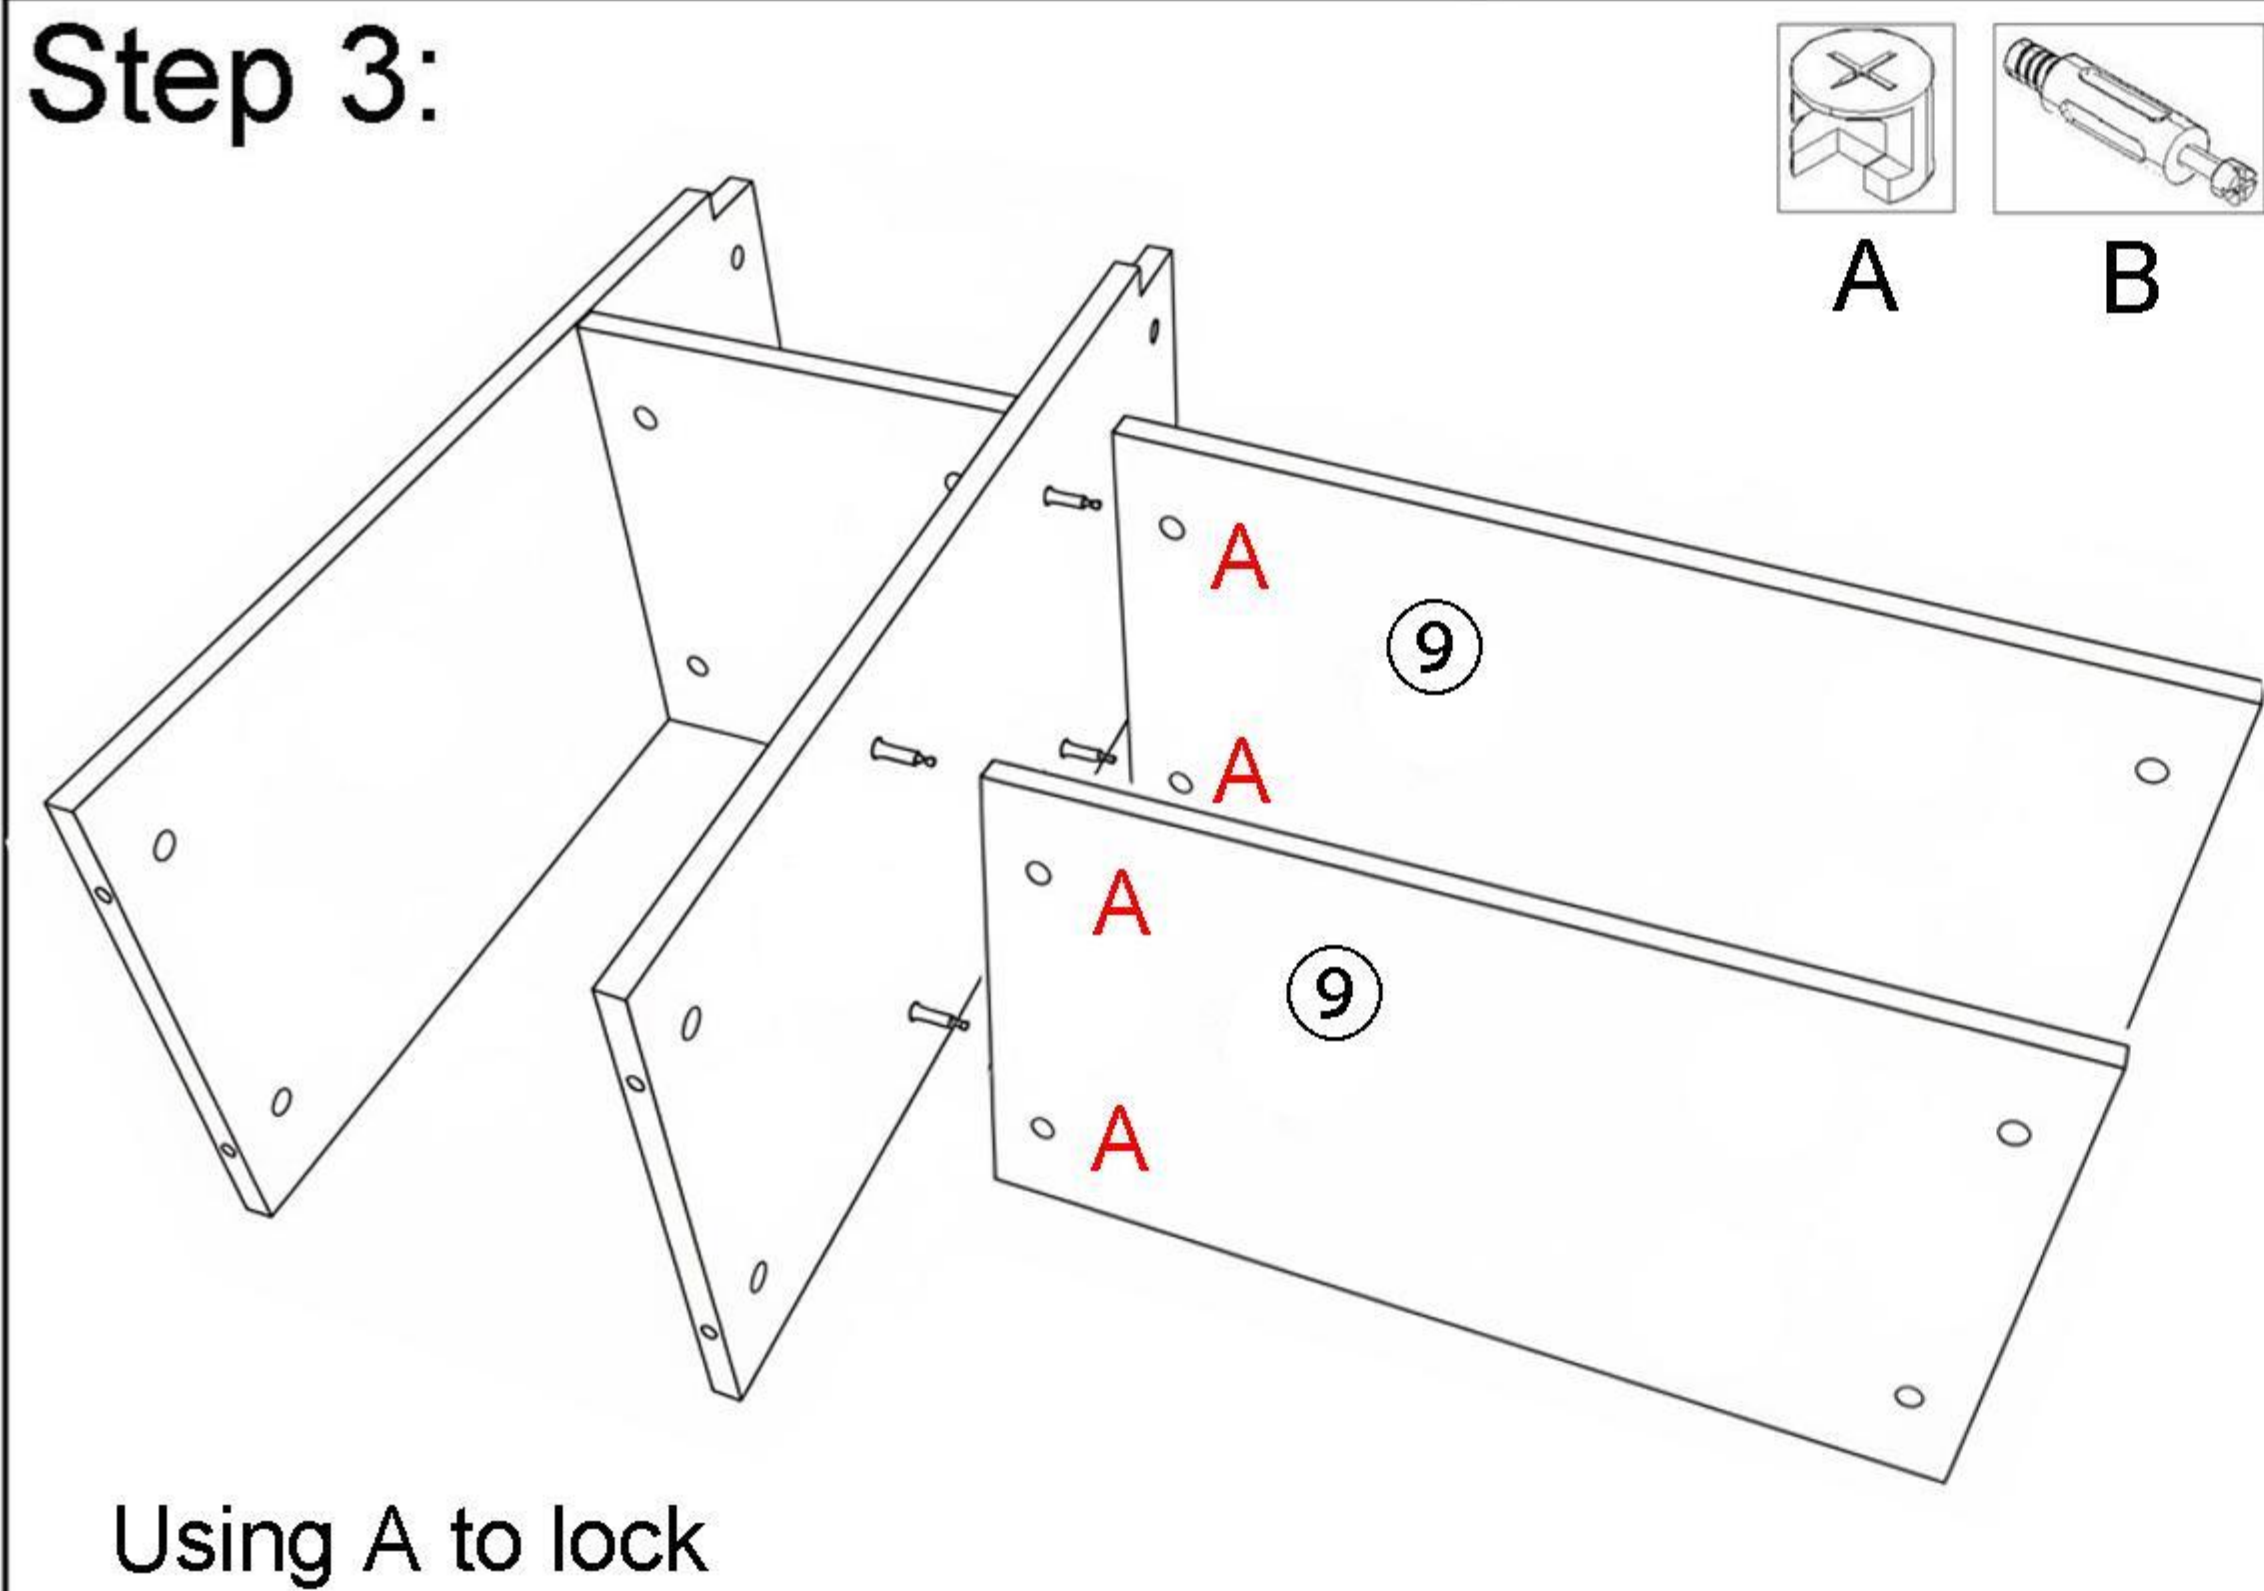


## Step 4: Front

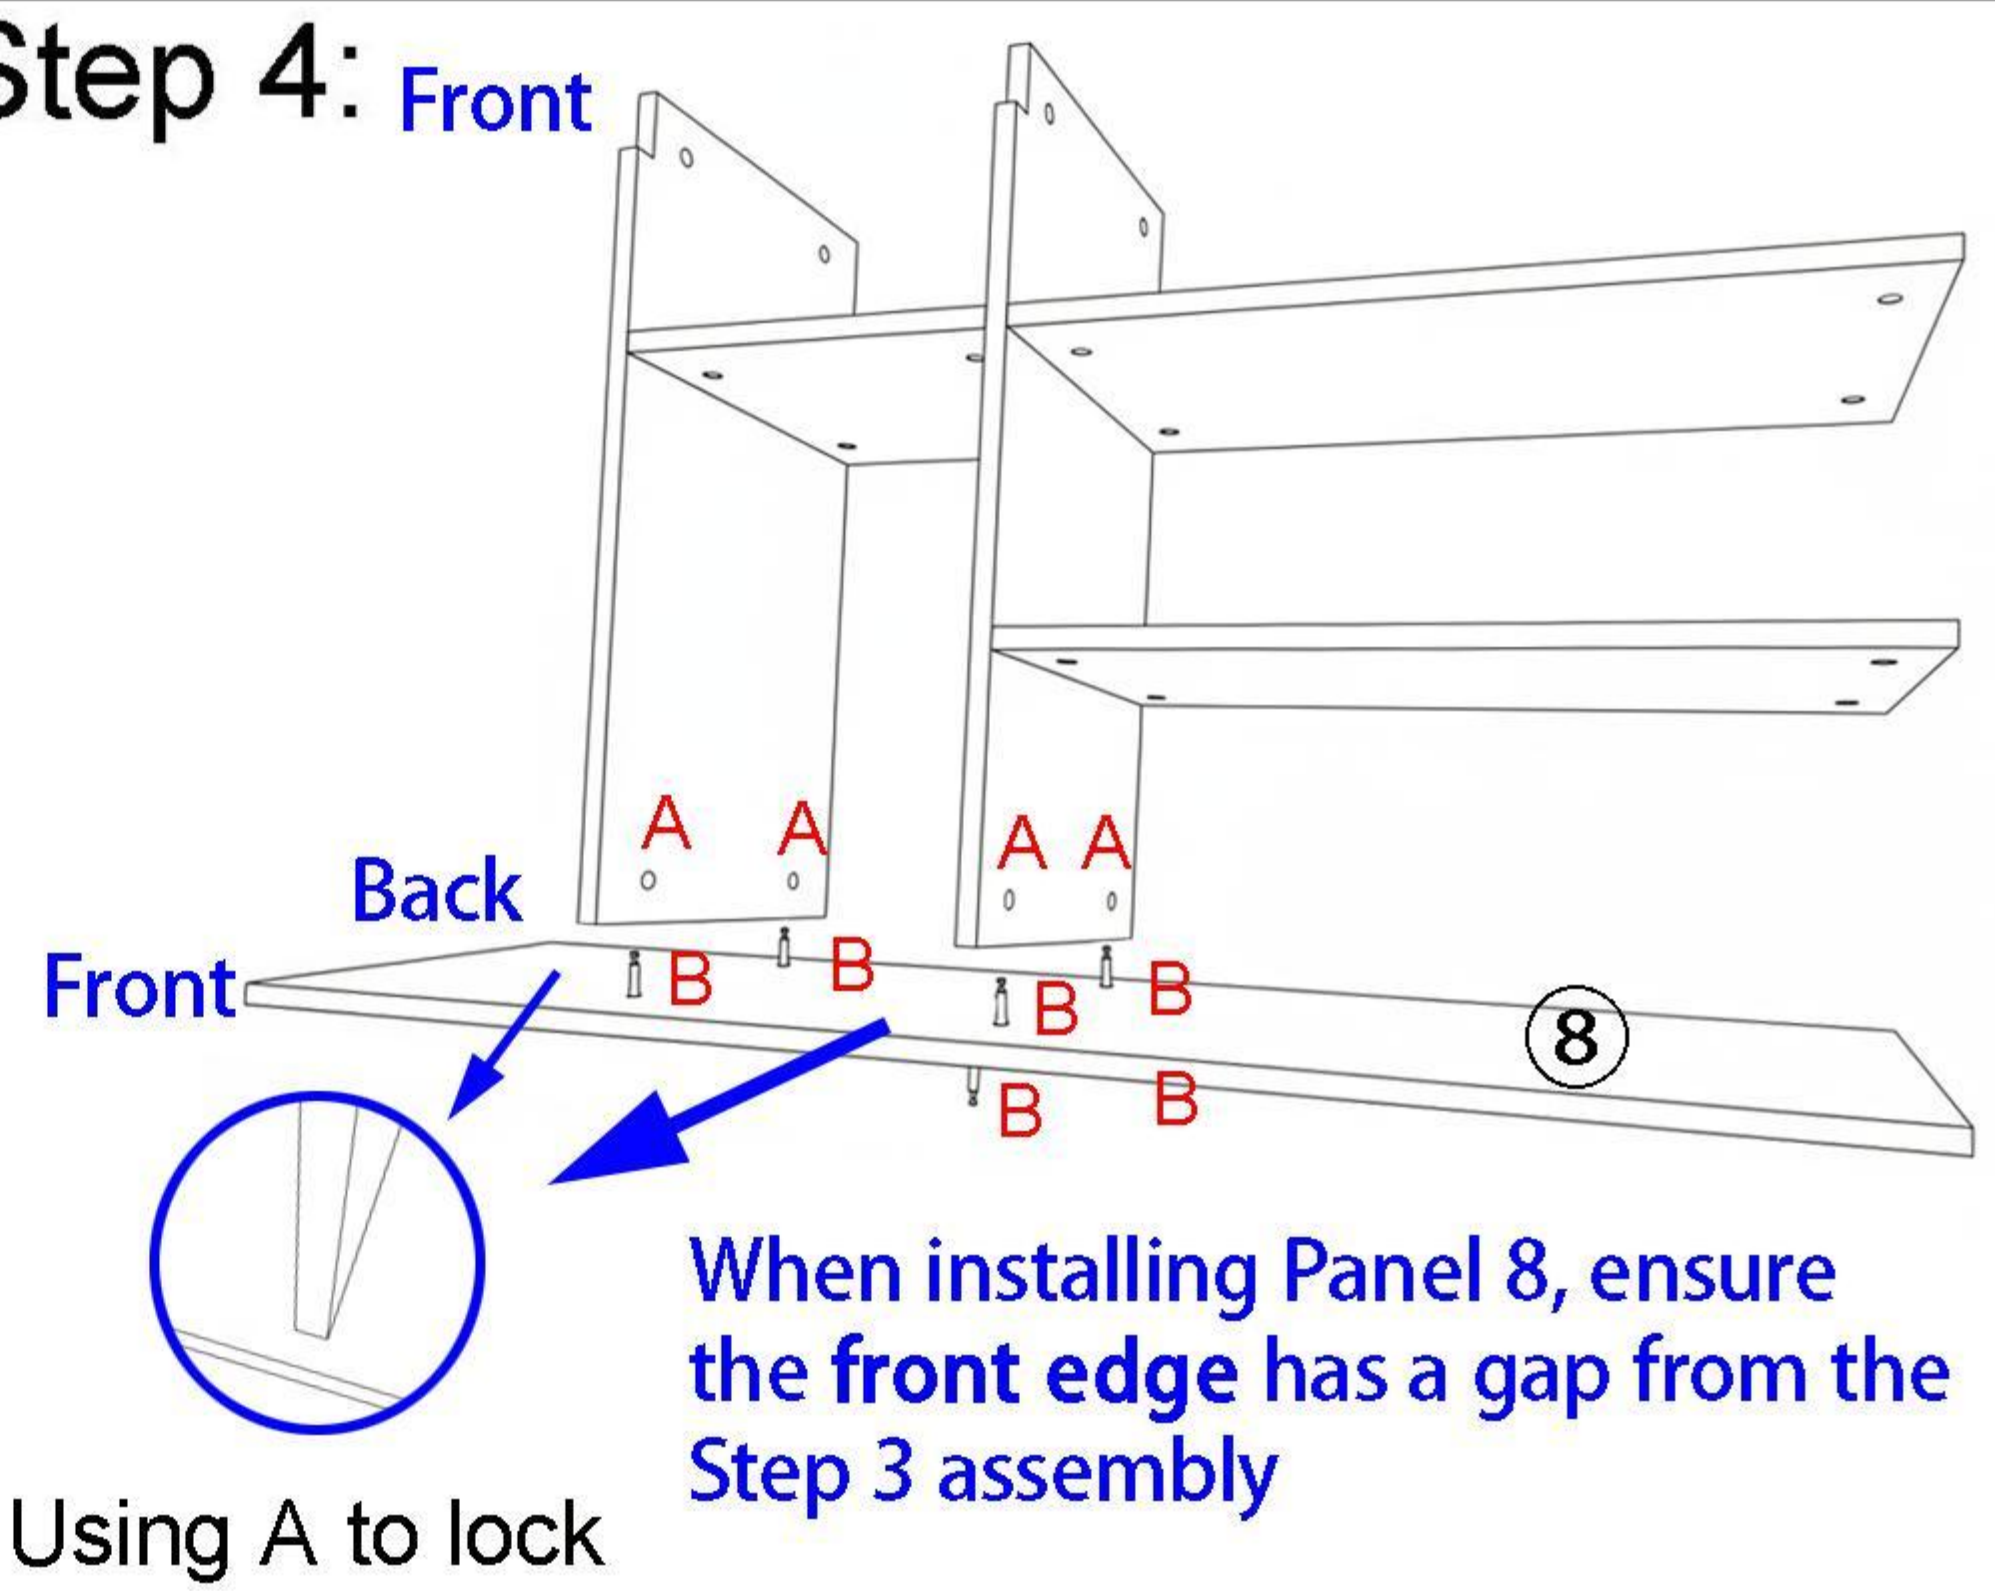


## Step 5:

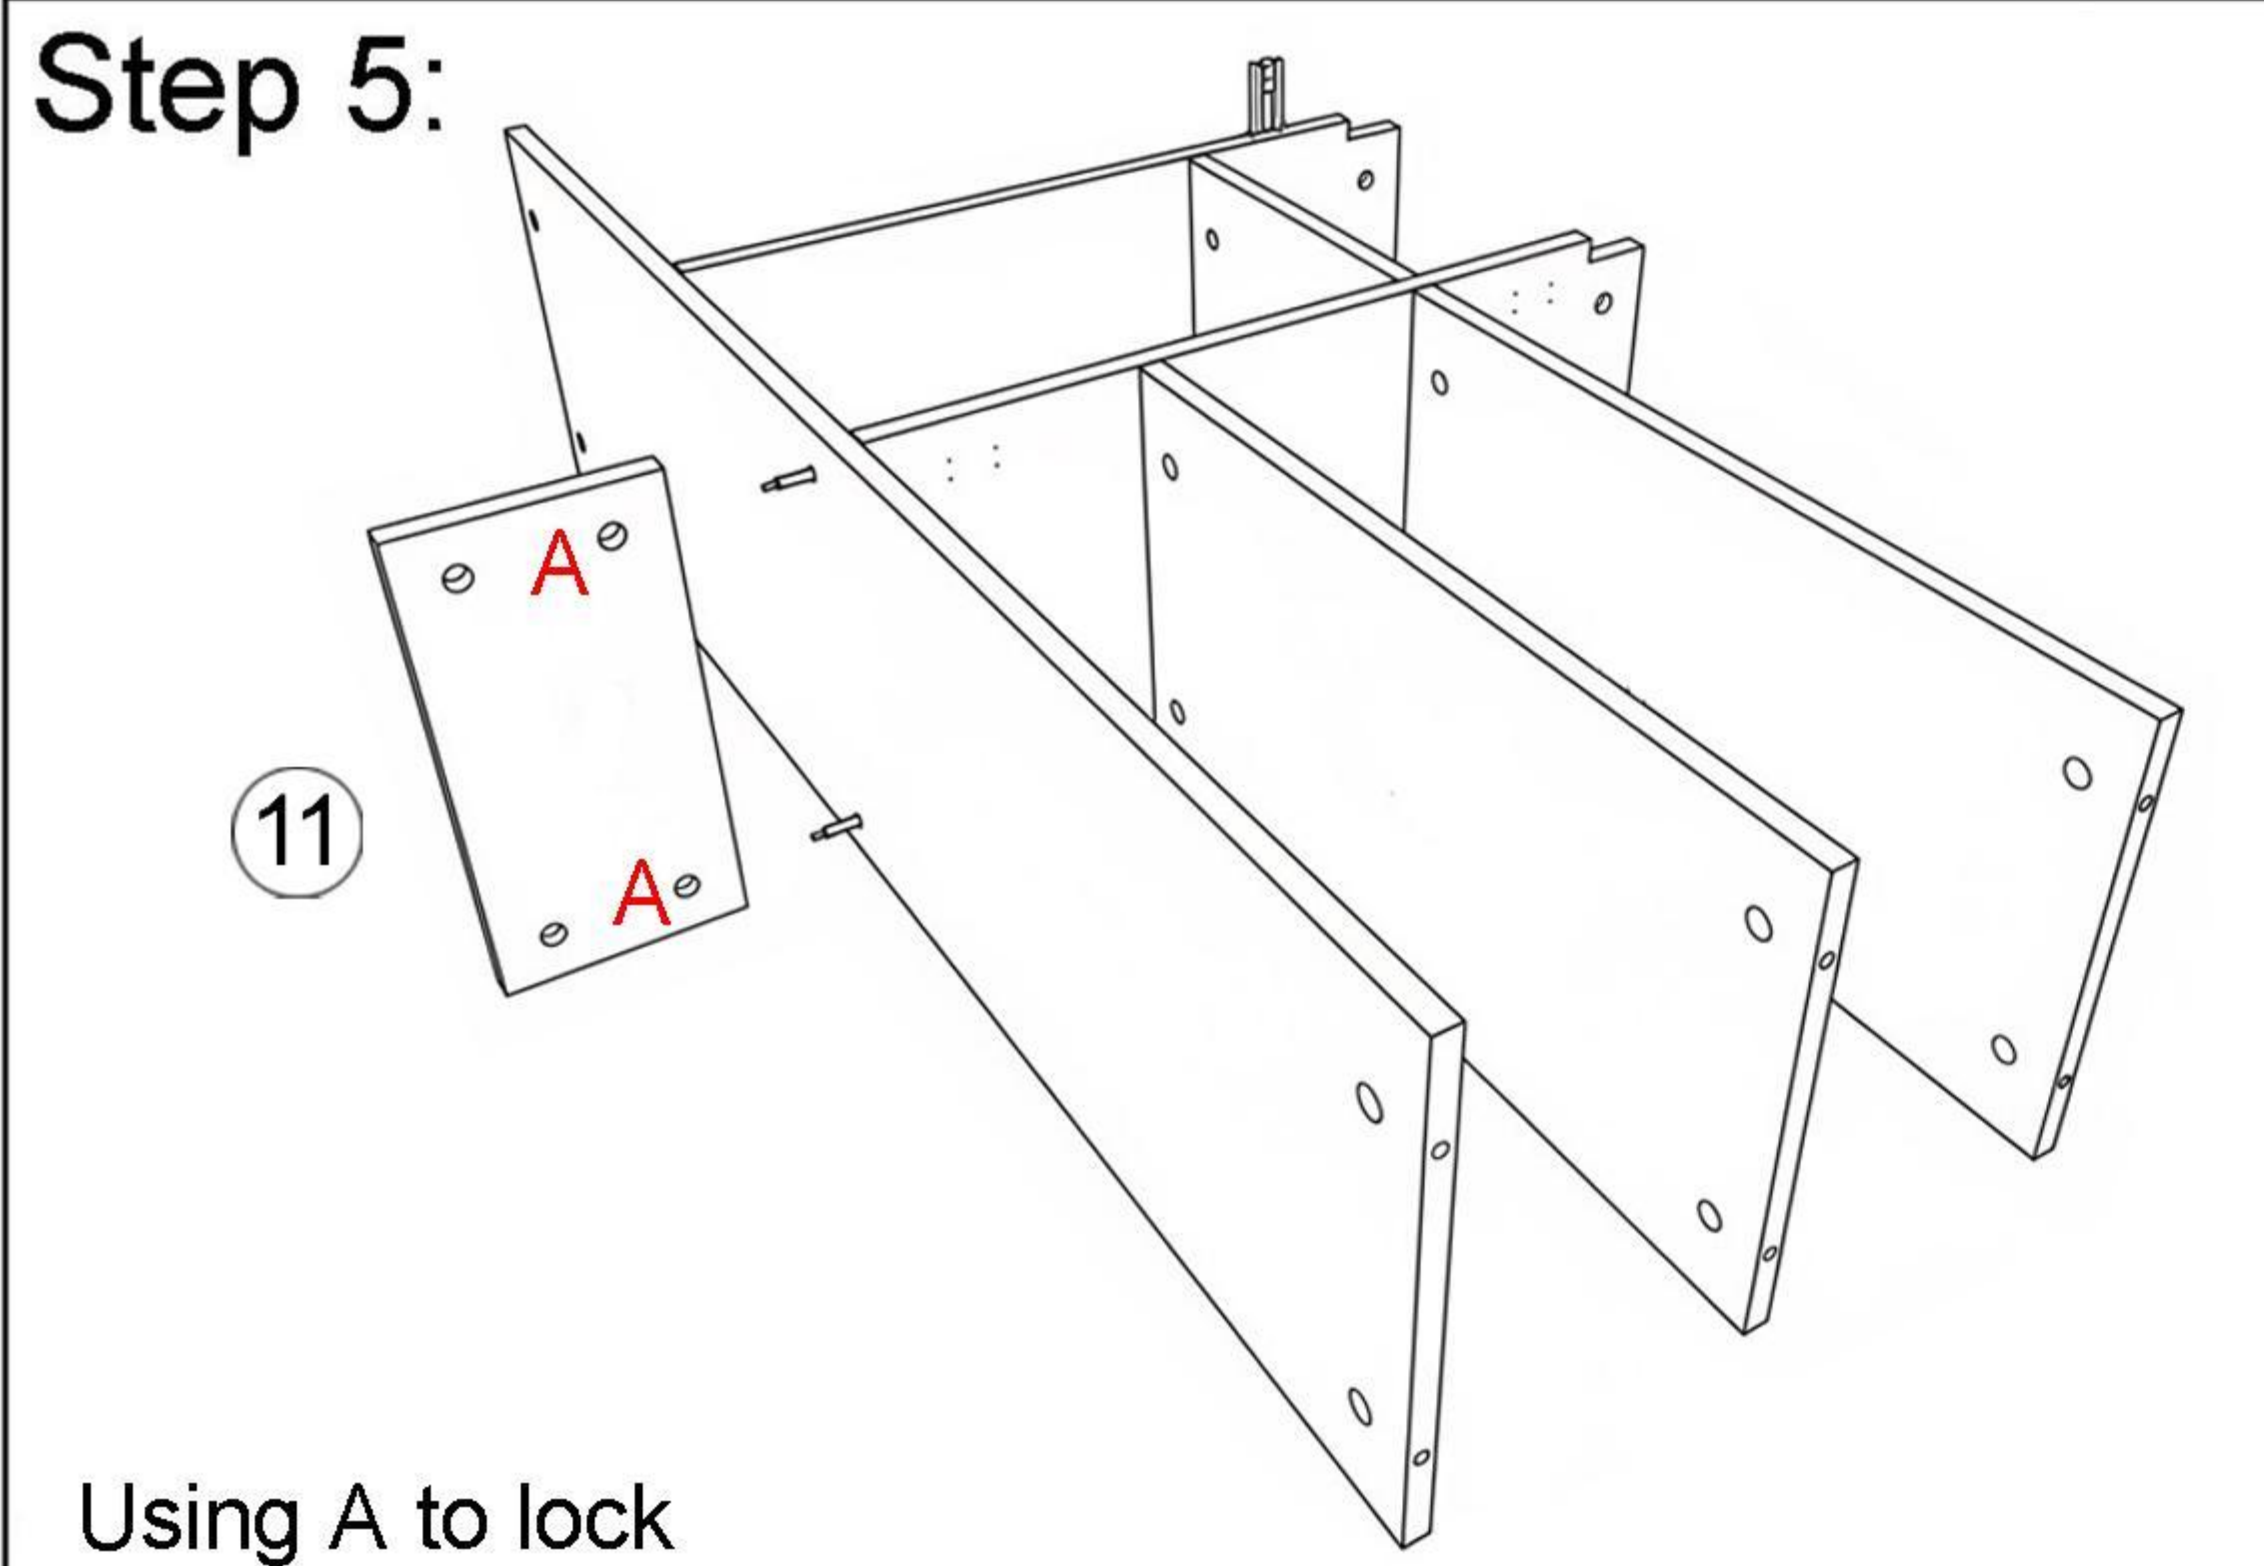


## Step 6:

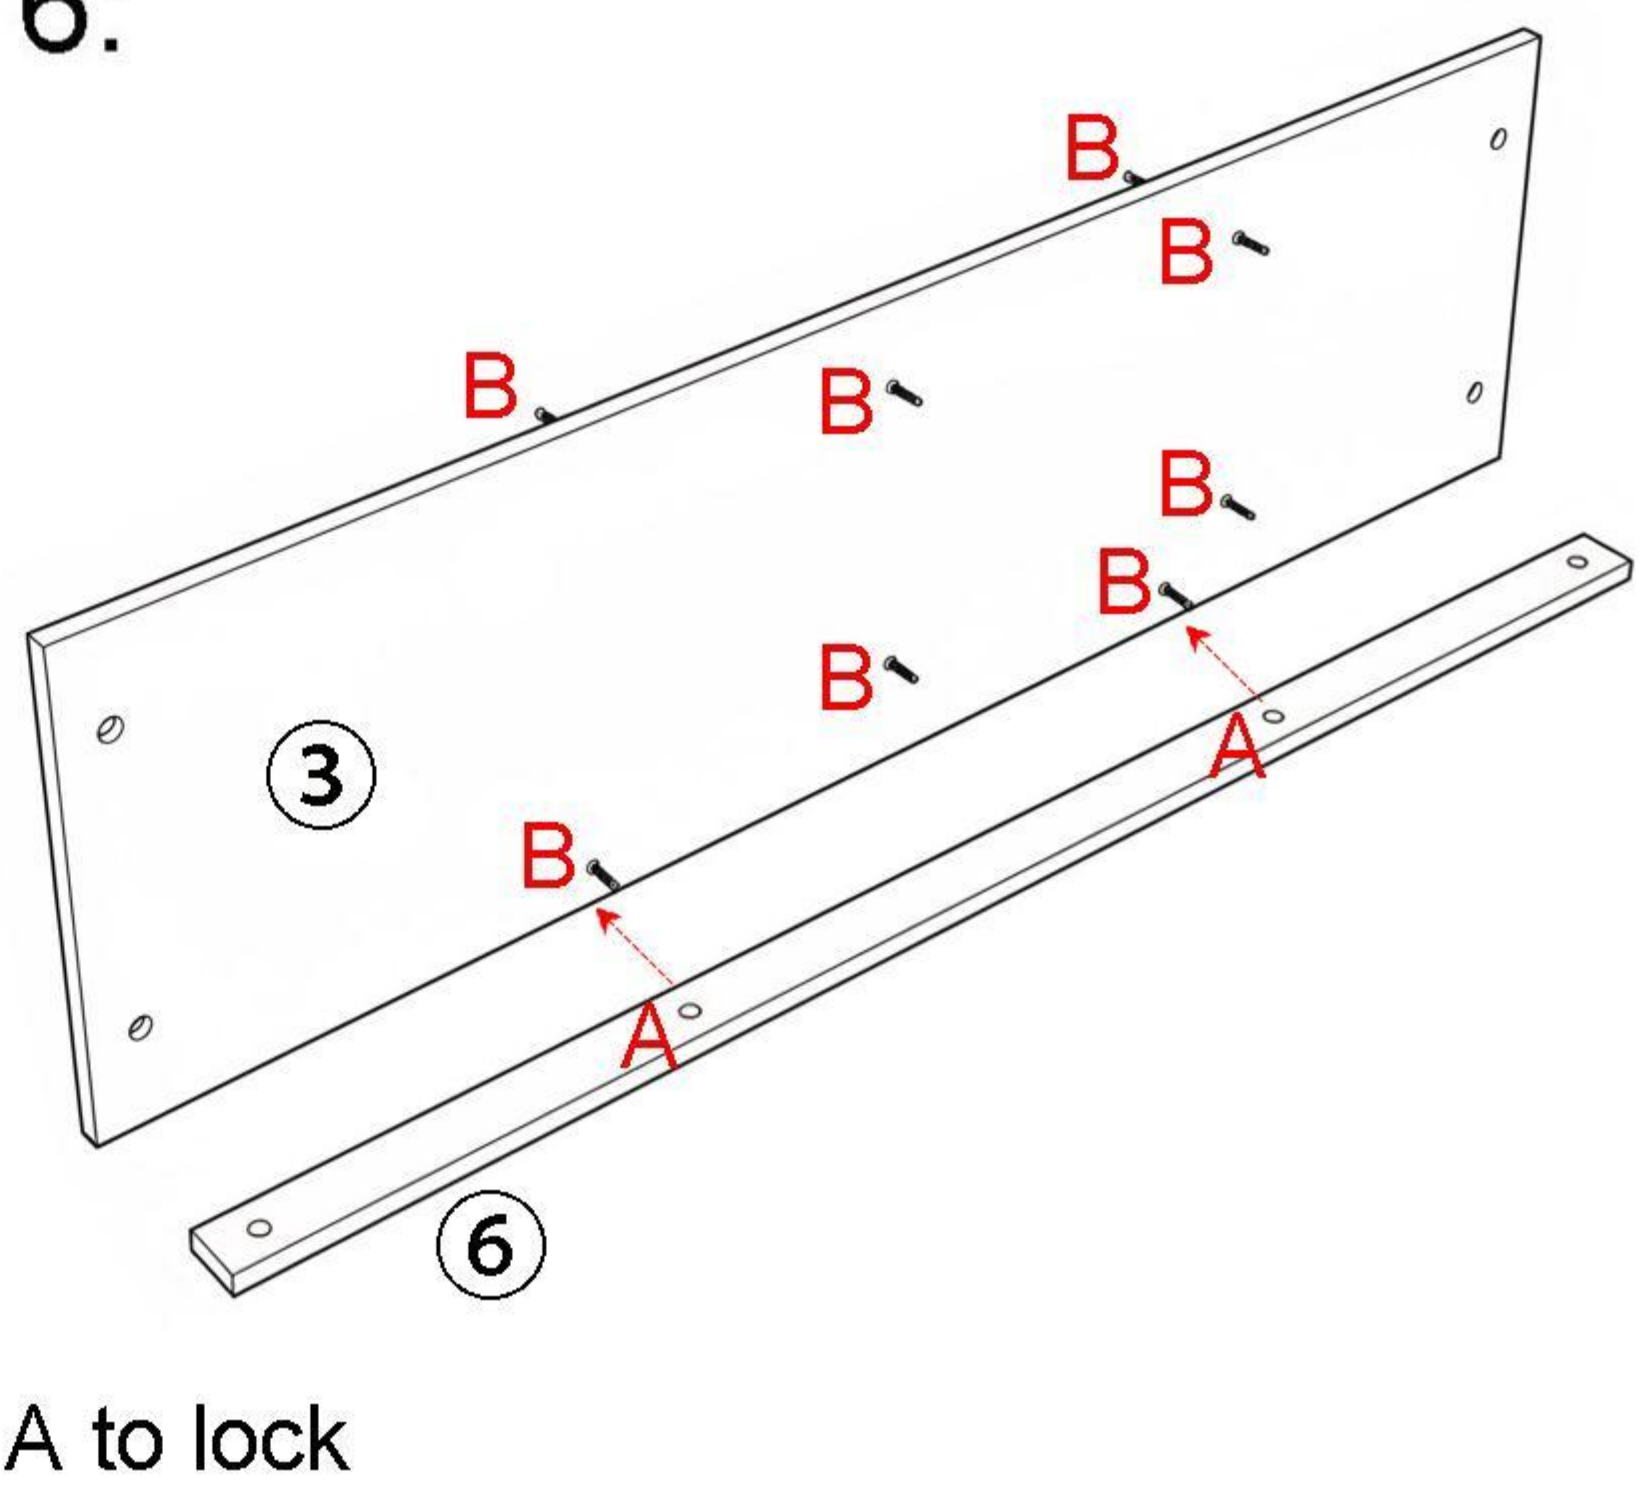


## Step 7:

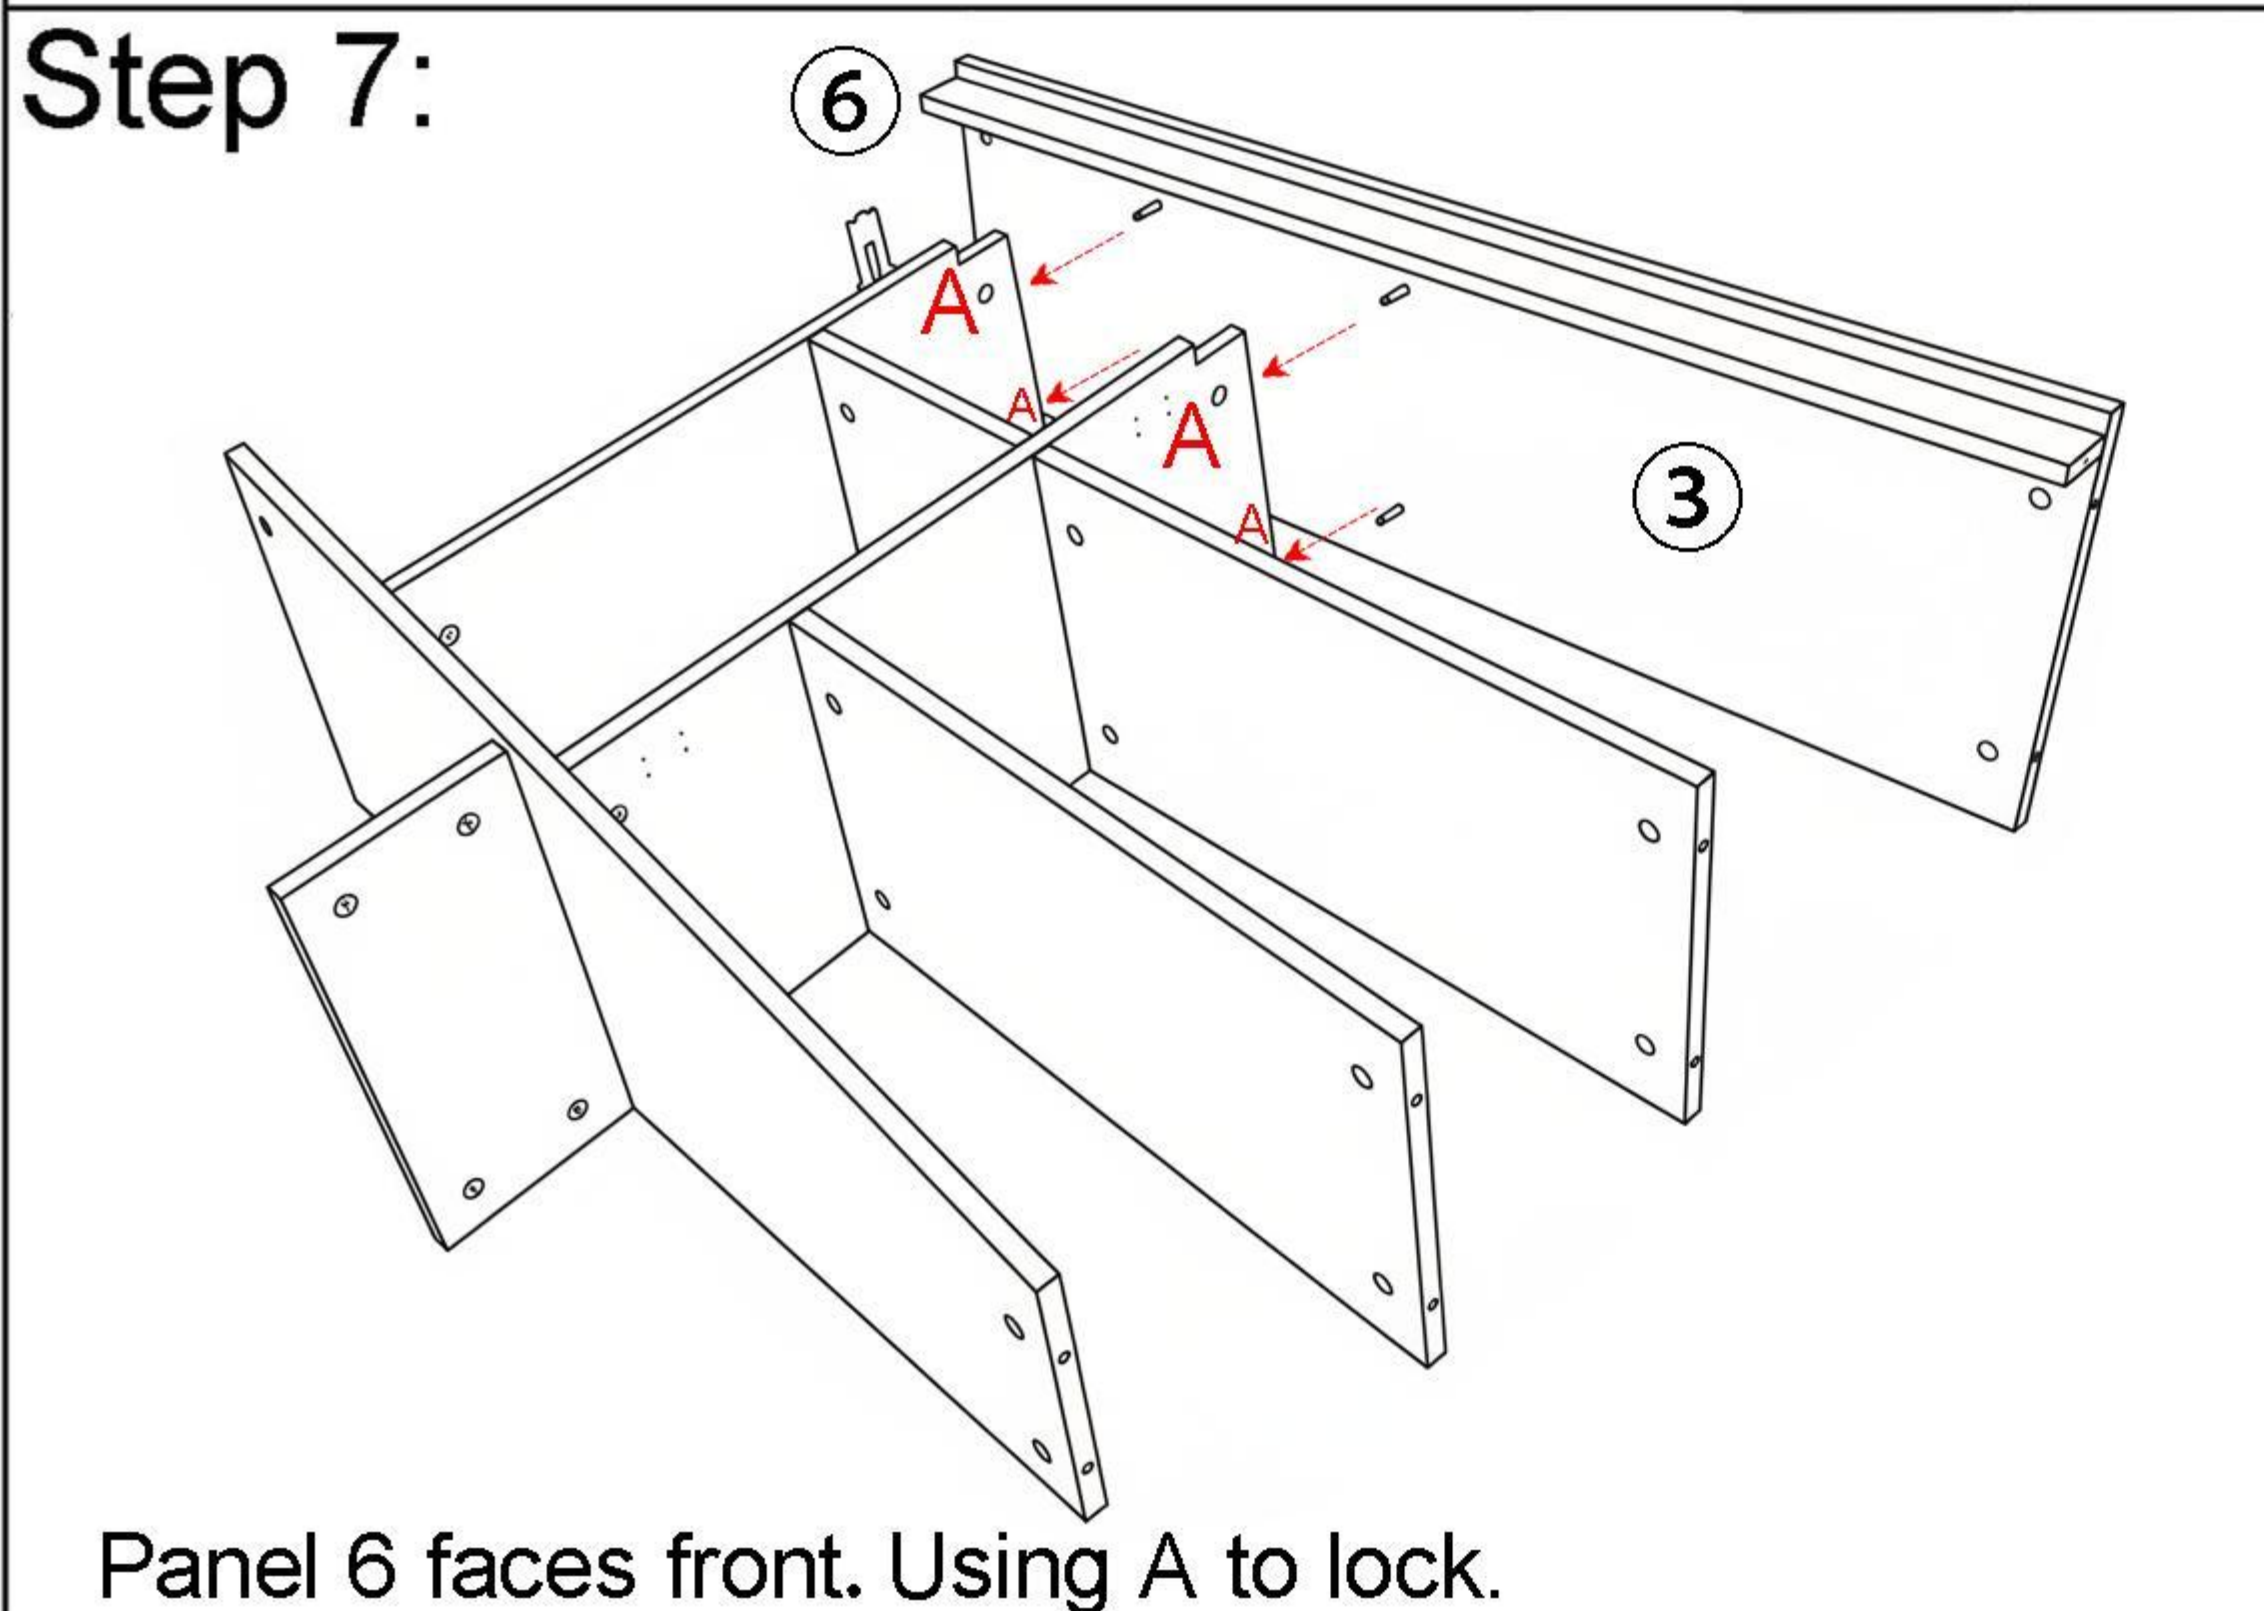

## Step 8:

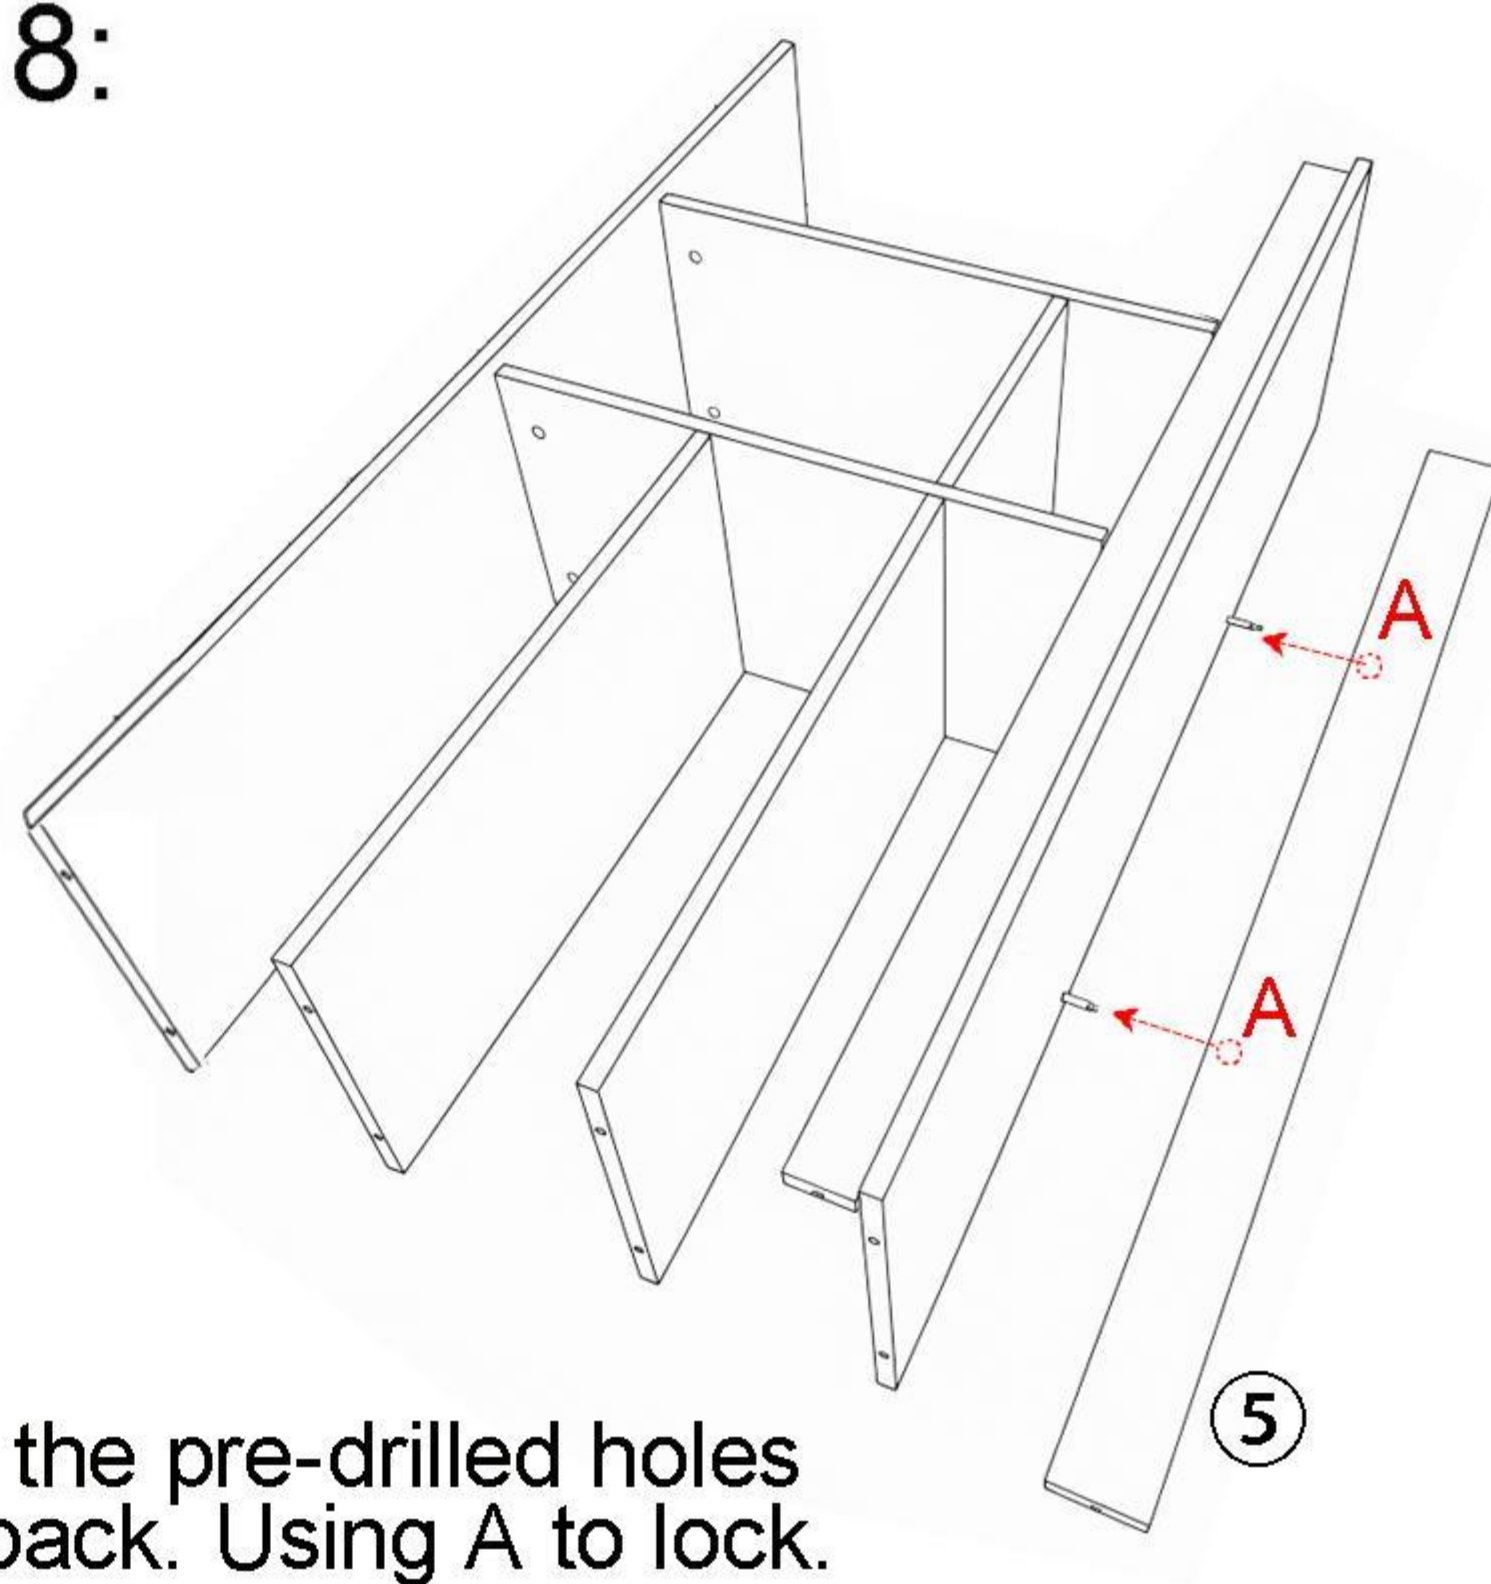


Step 9:

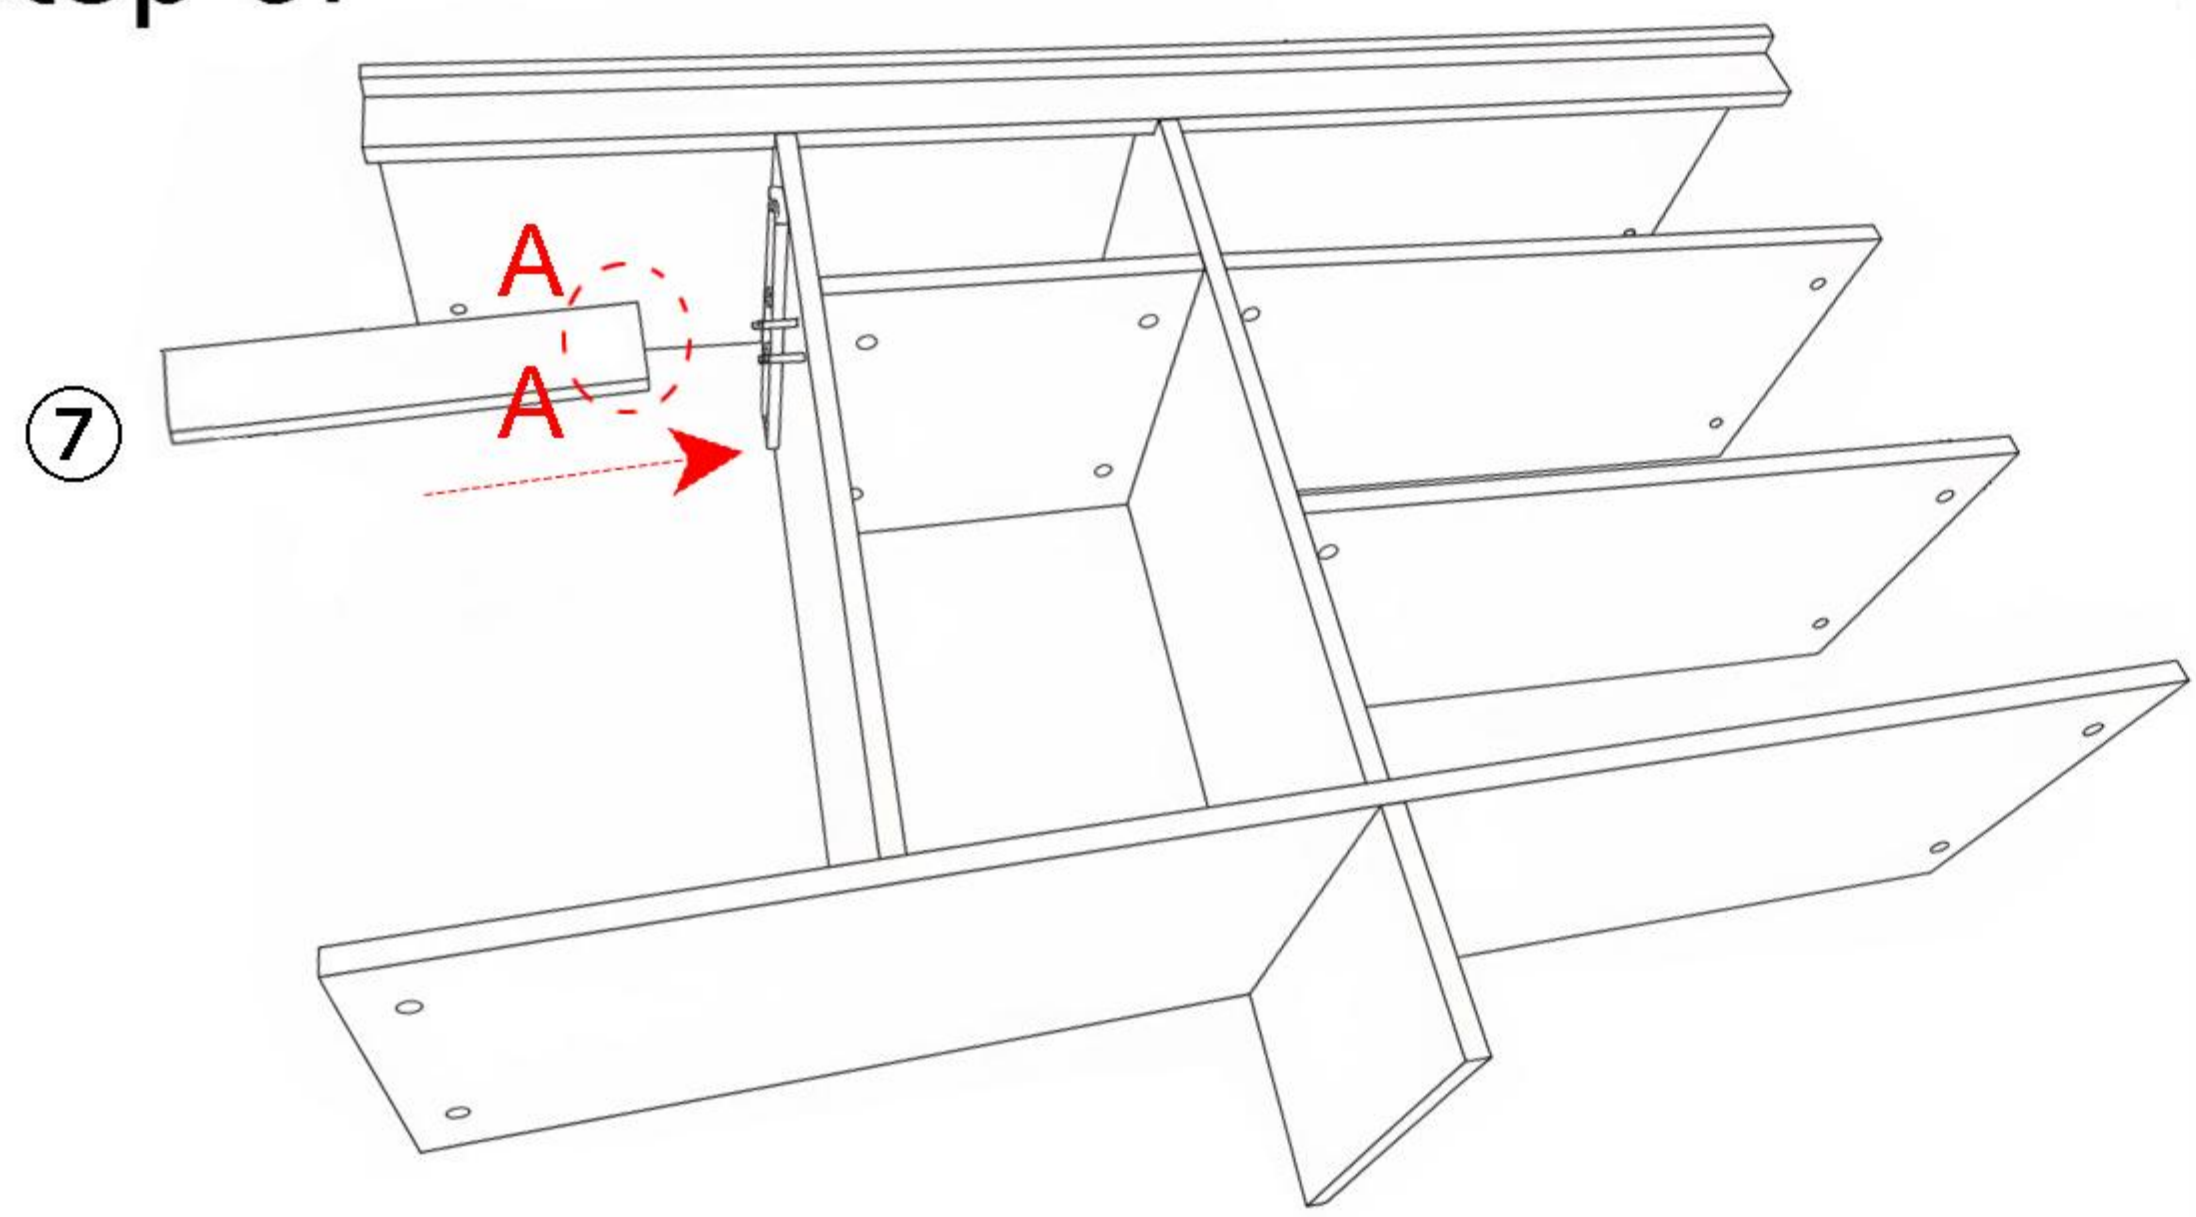


The pre-drilled holes facing to the back.  
Using A to lock.

Step 10:

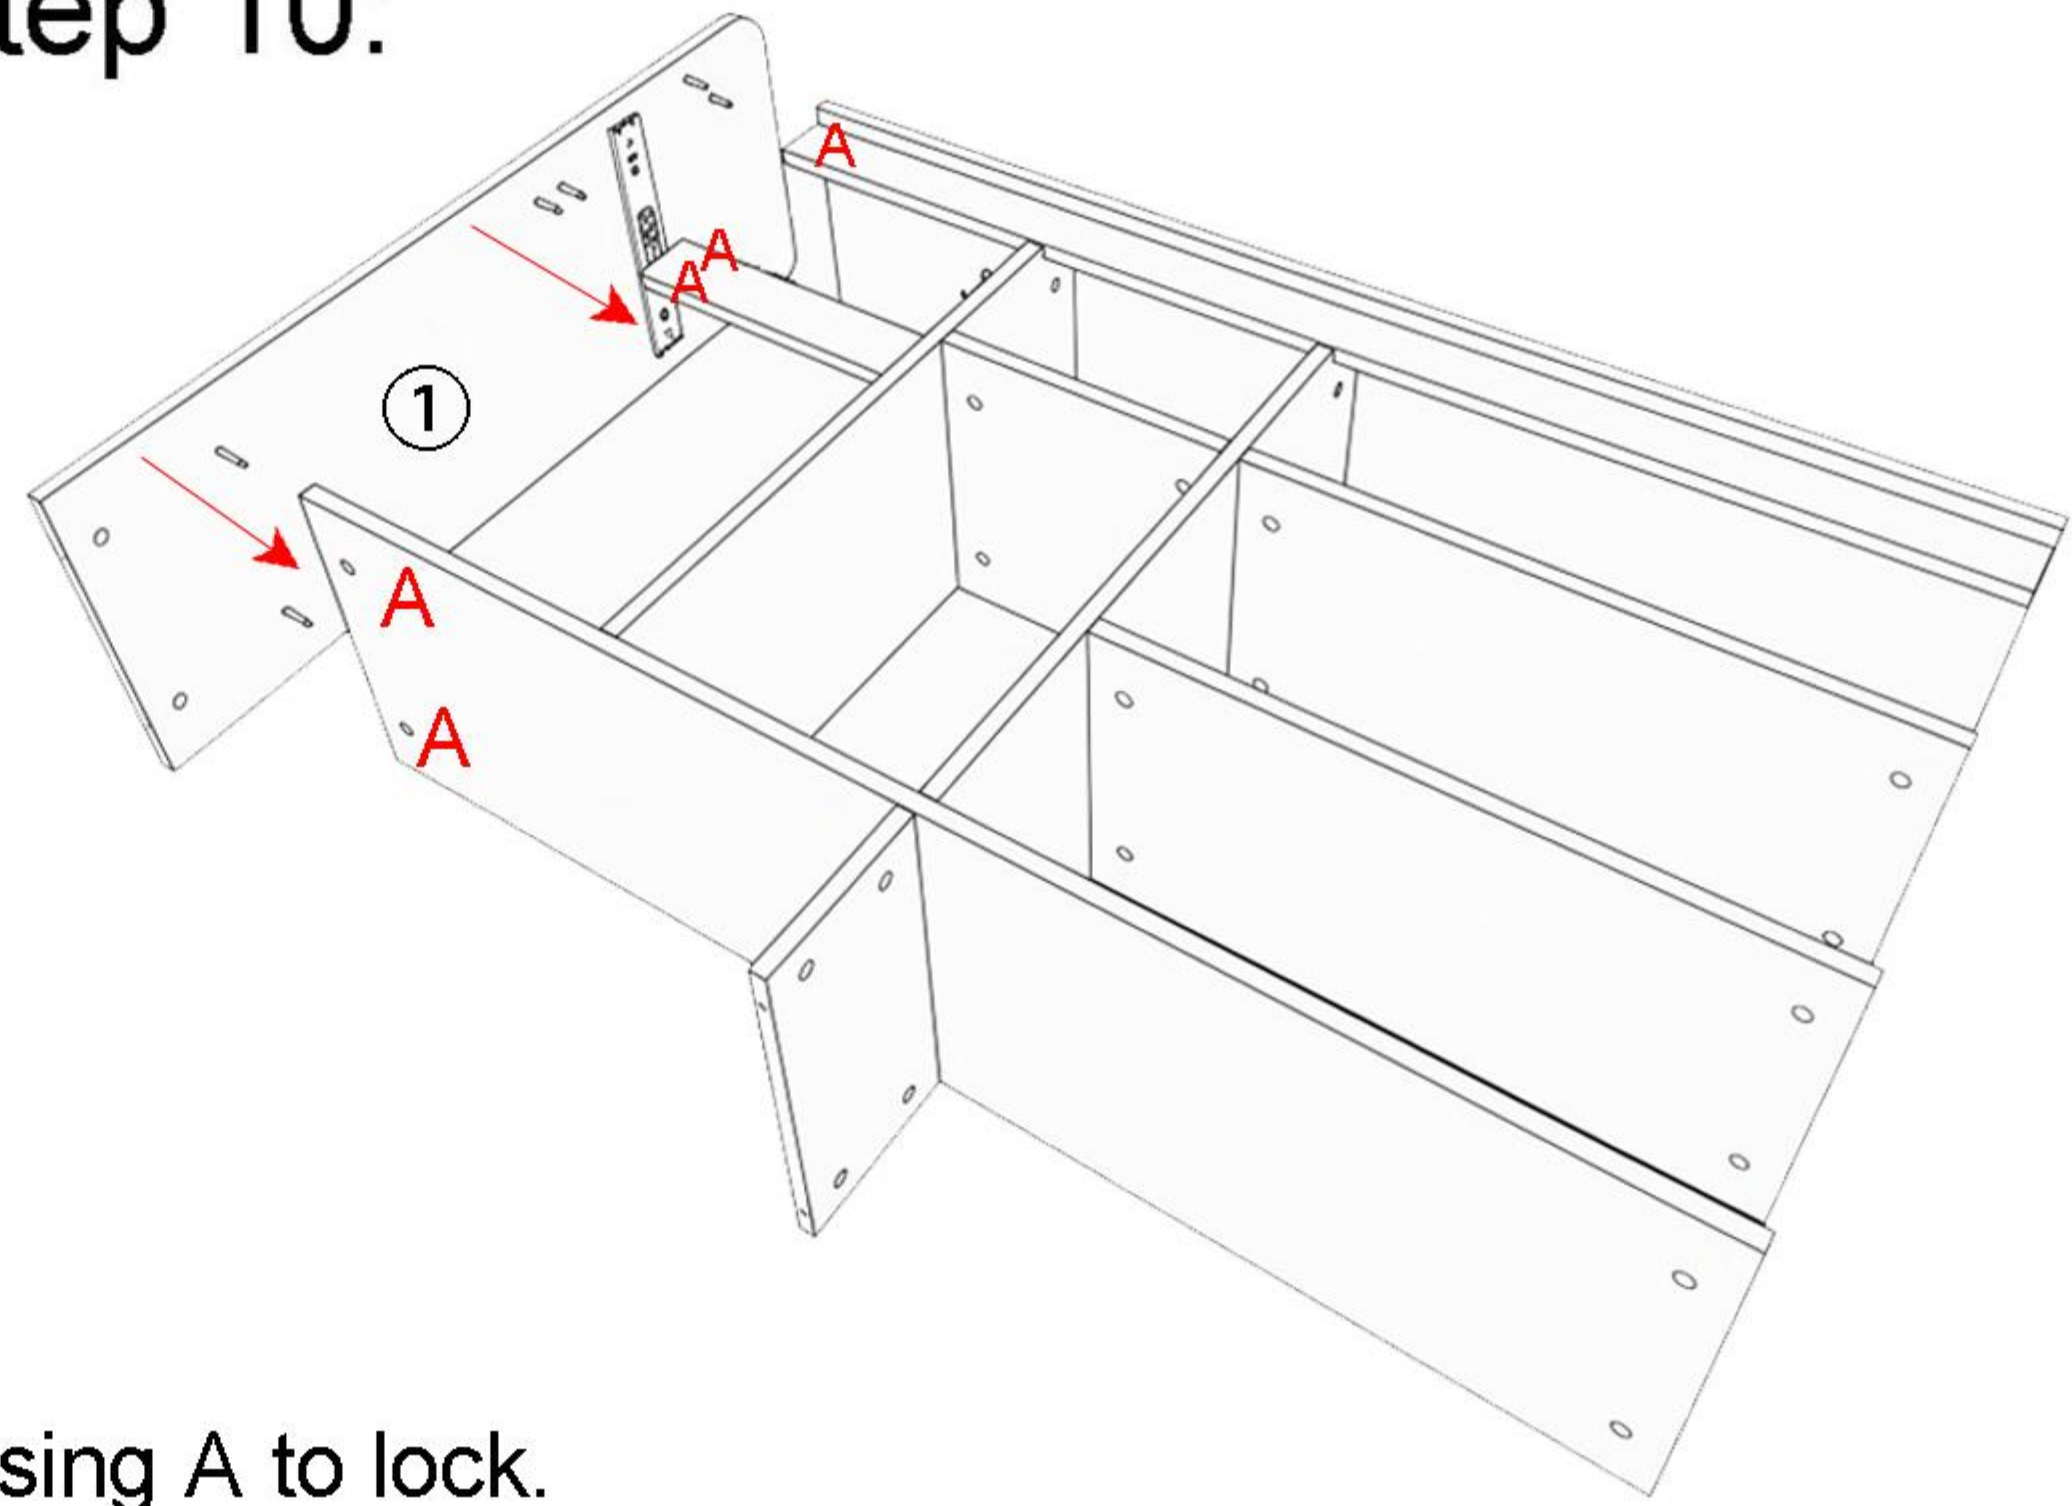


Using A to lock.

Step 11:

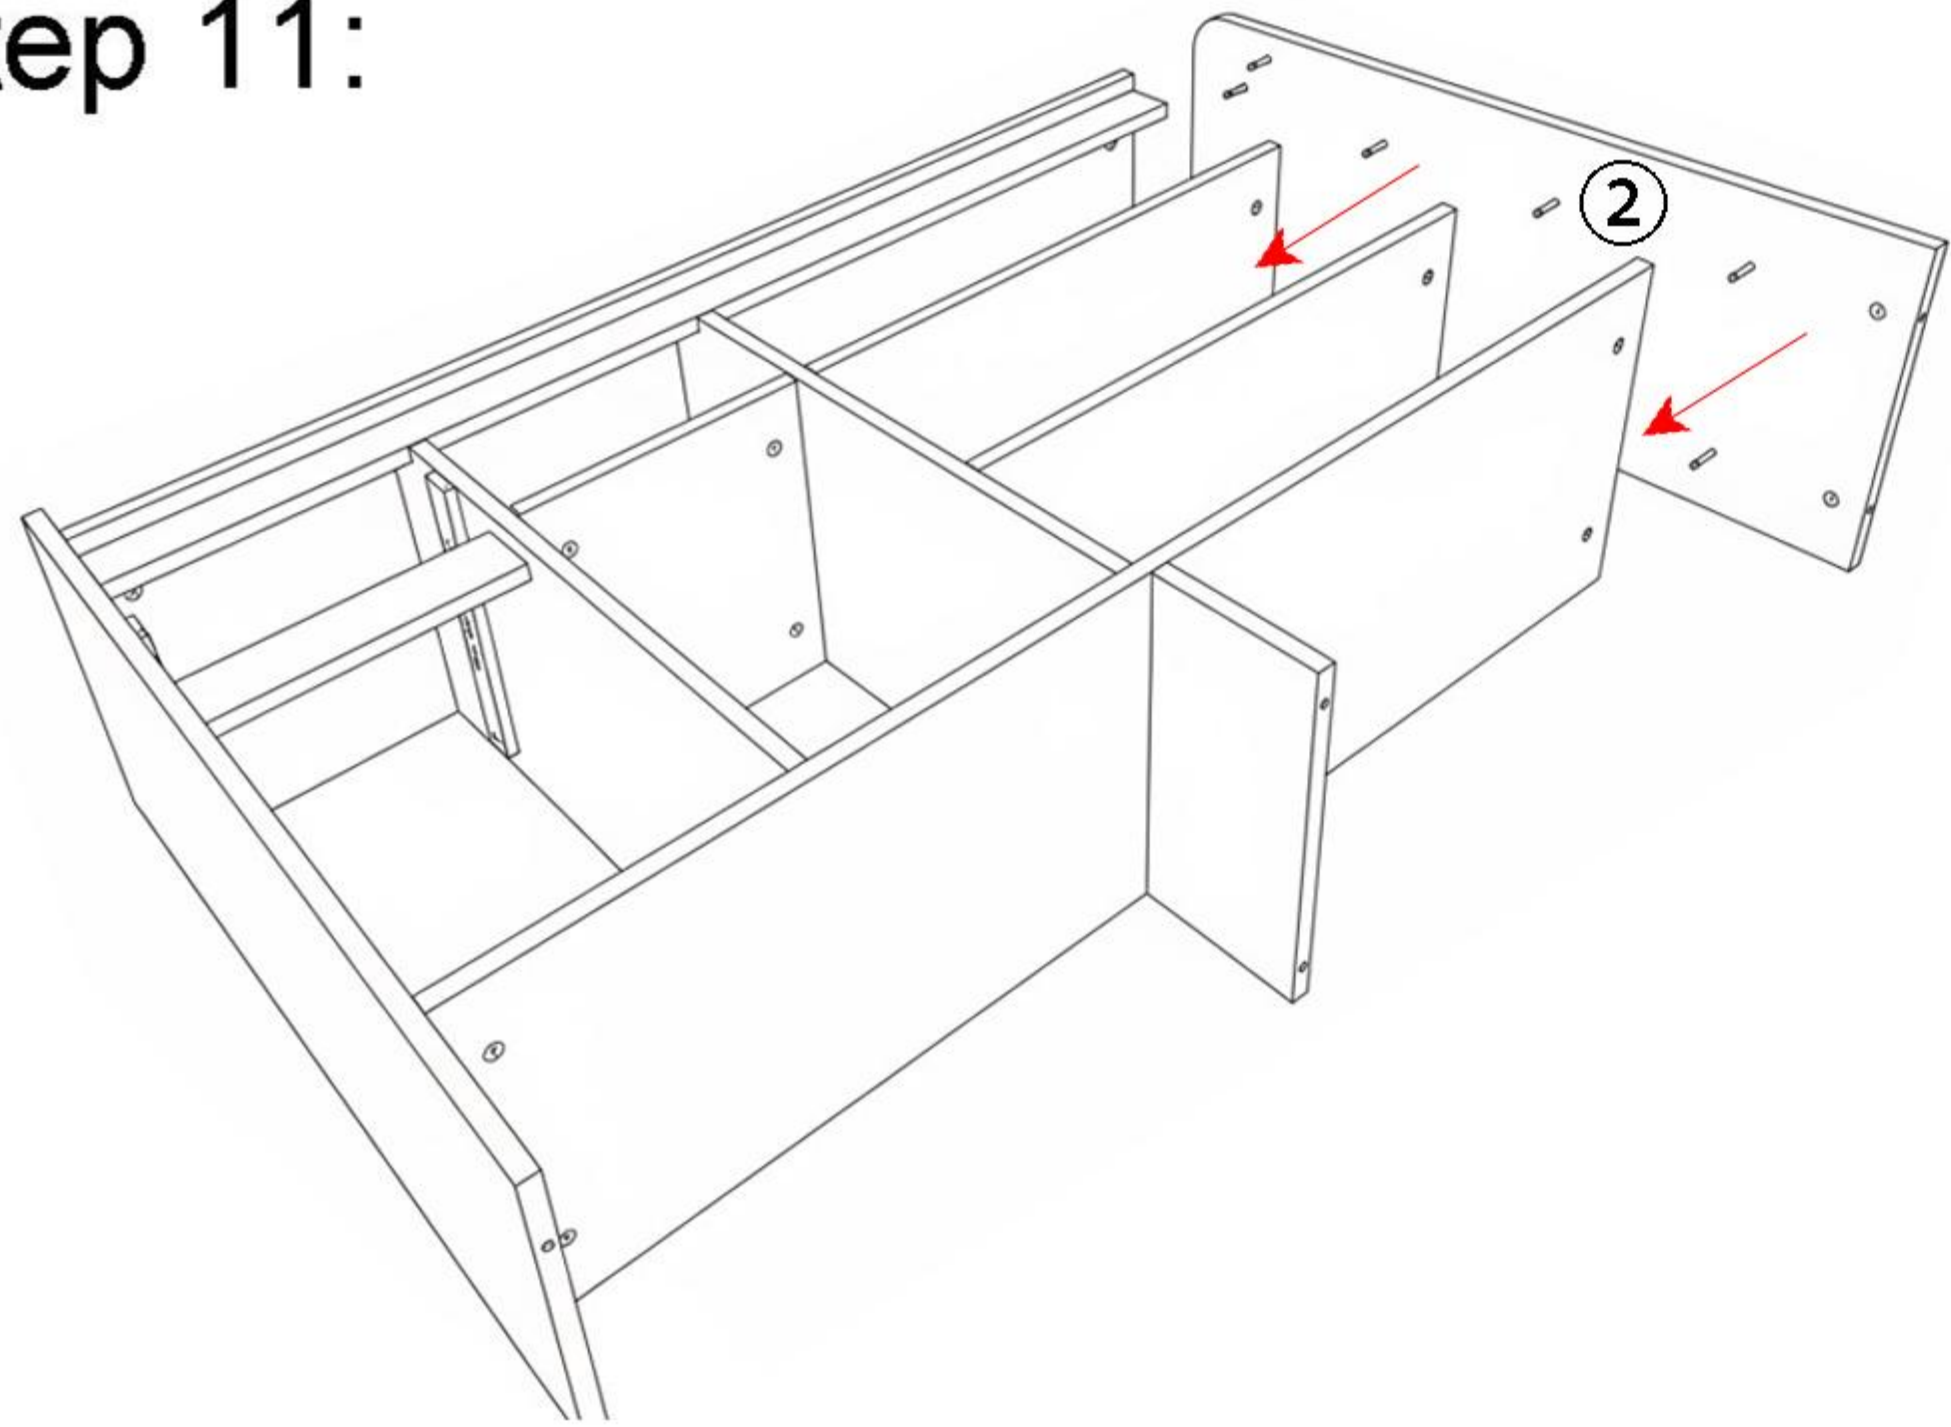


Using A to lock.

Step 12:

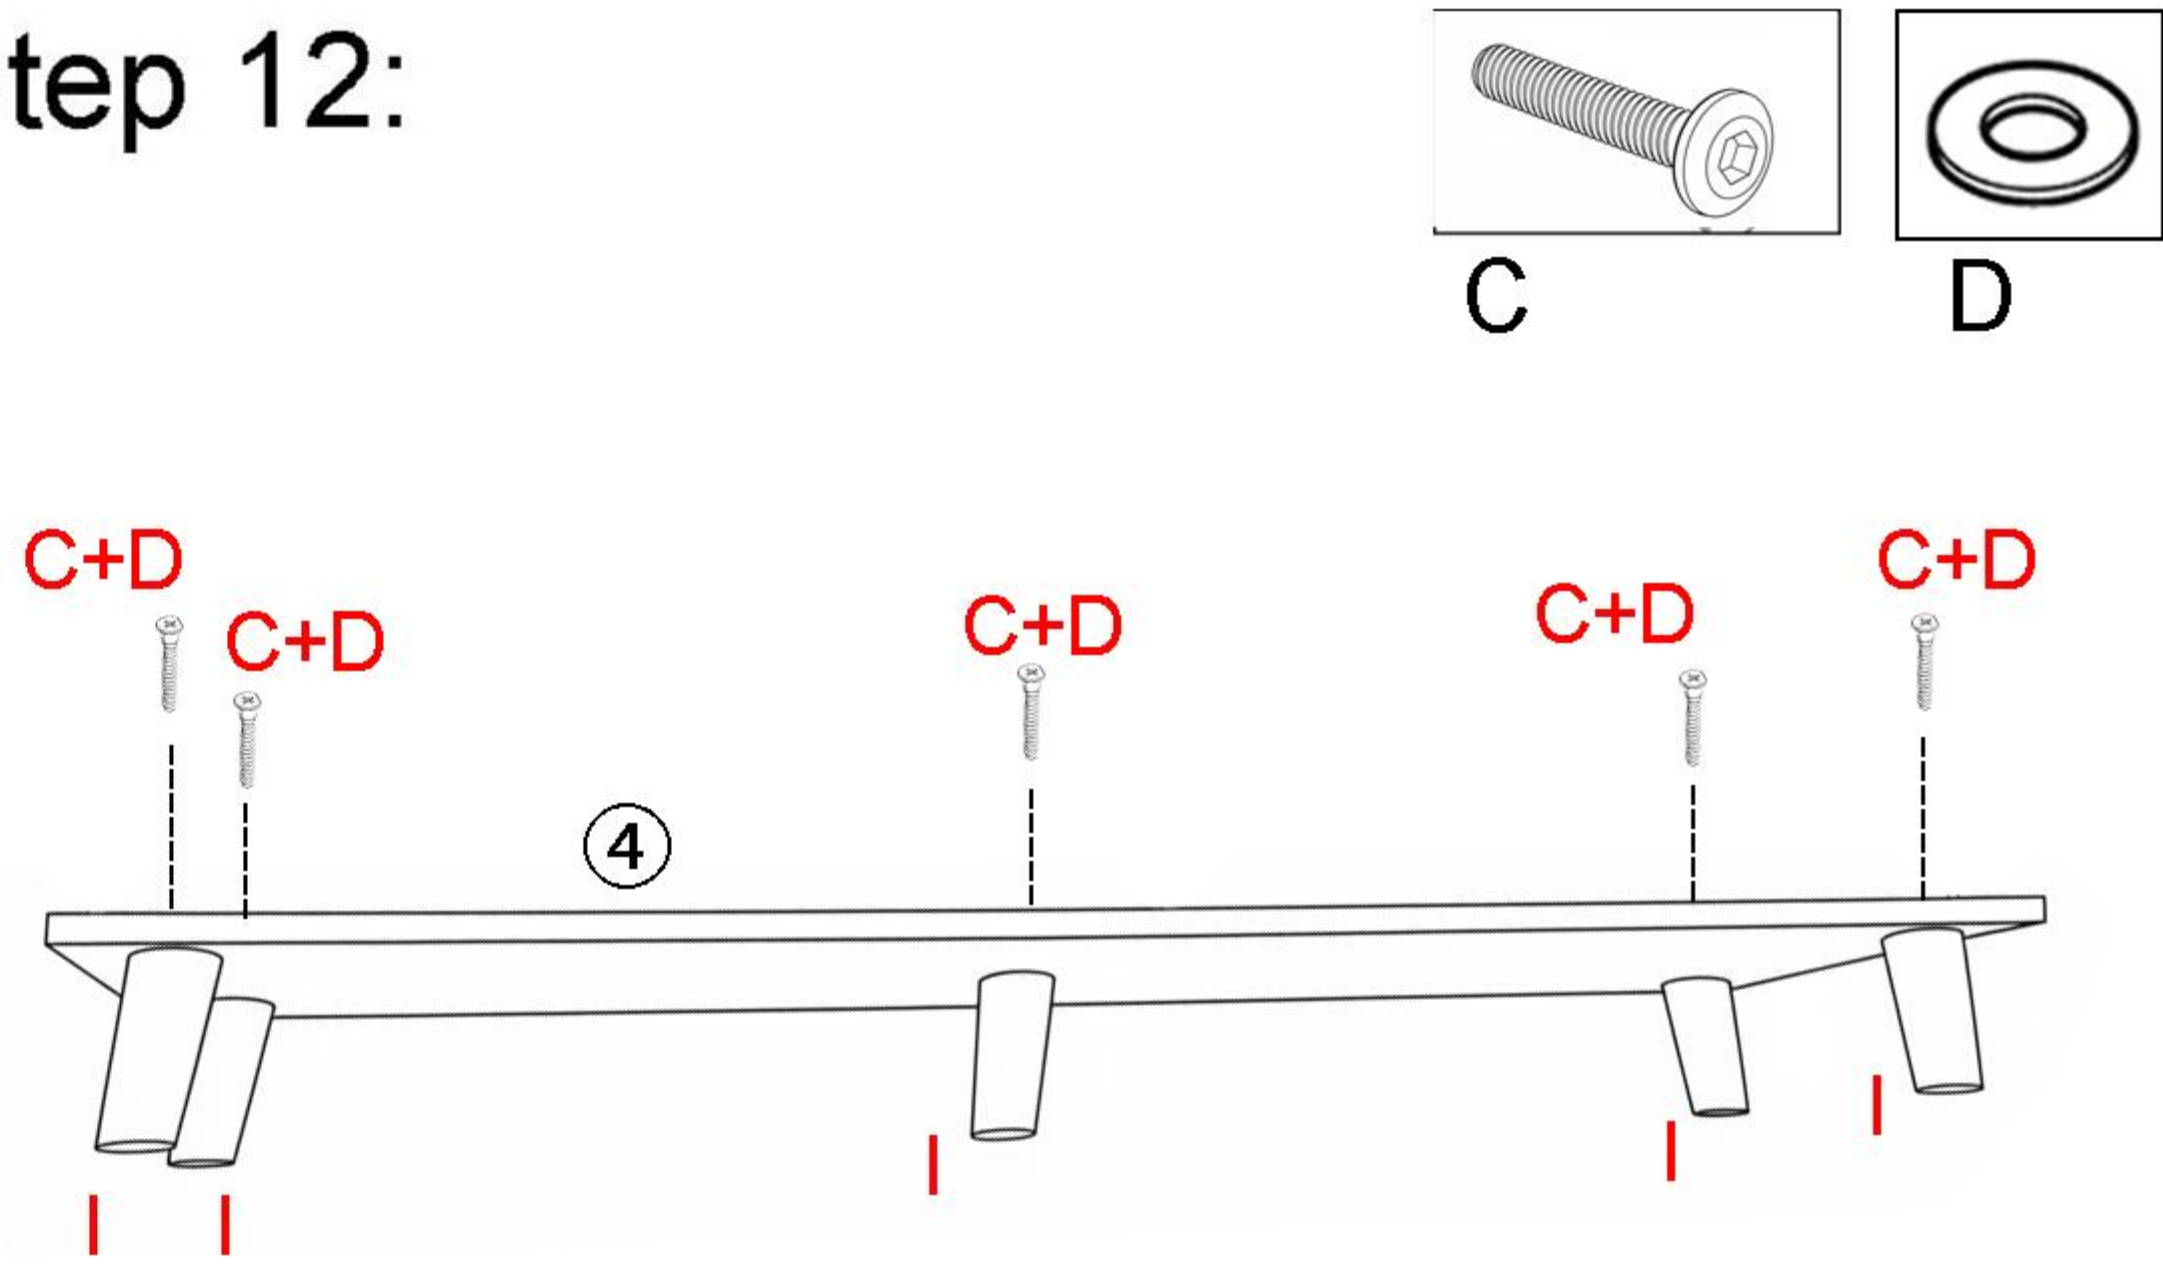


Using C&D to install I on the Panel 4.

Step 13:

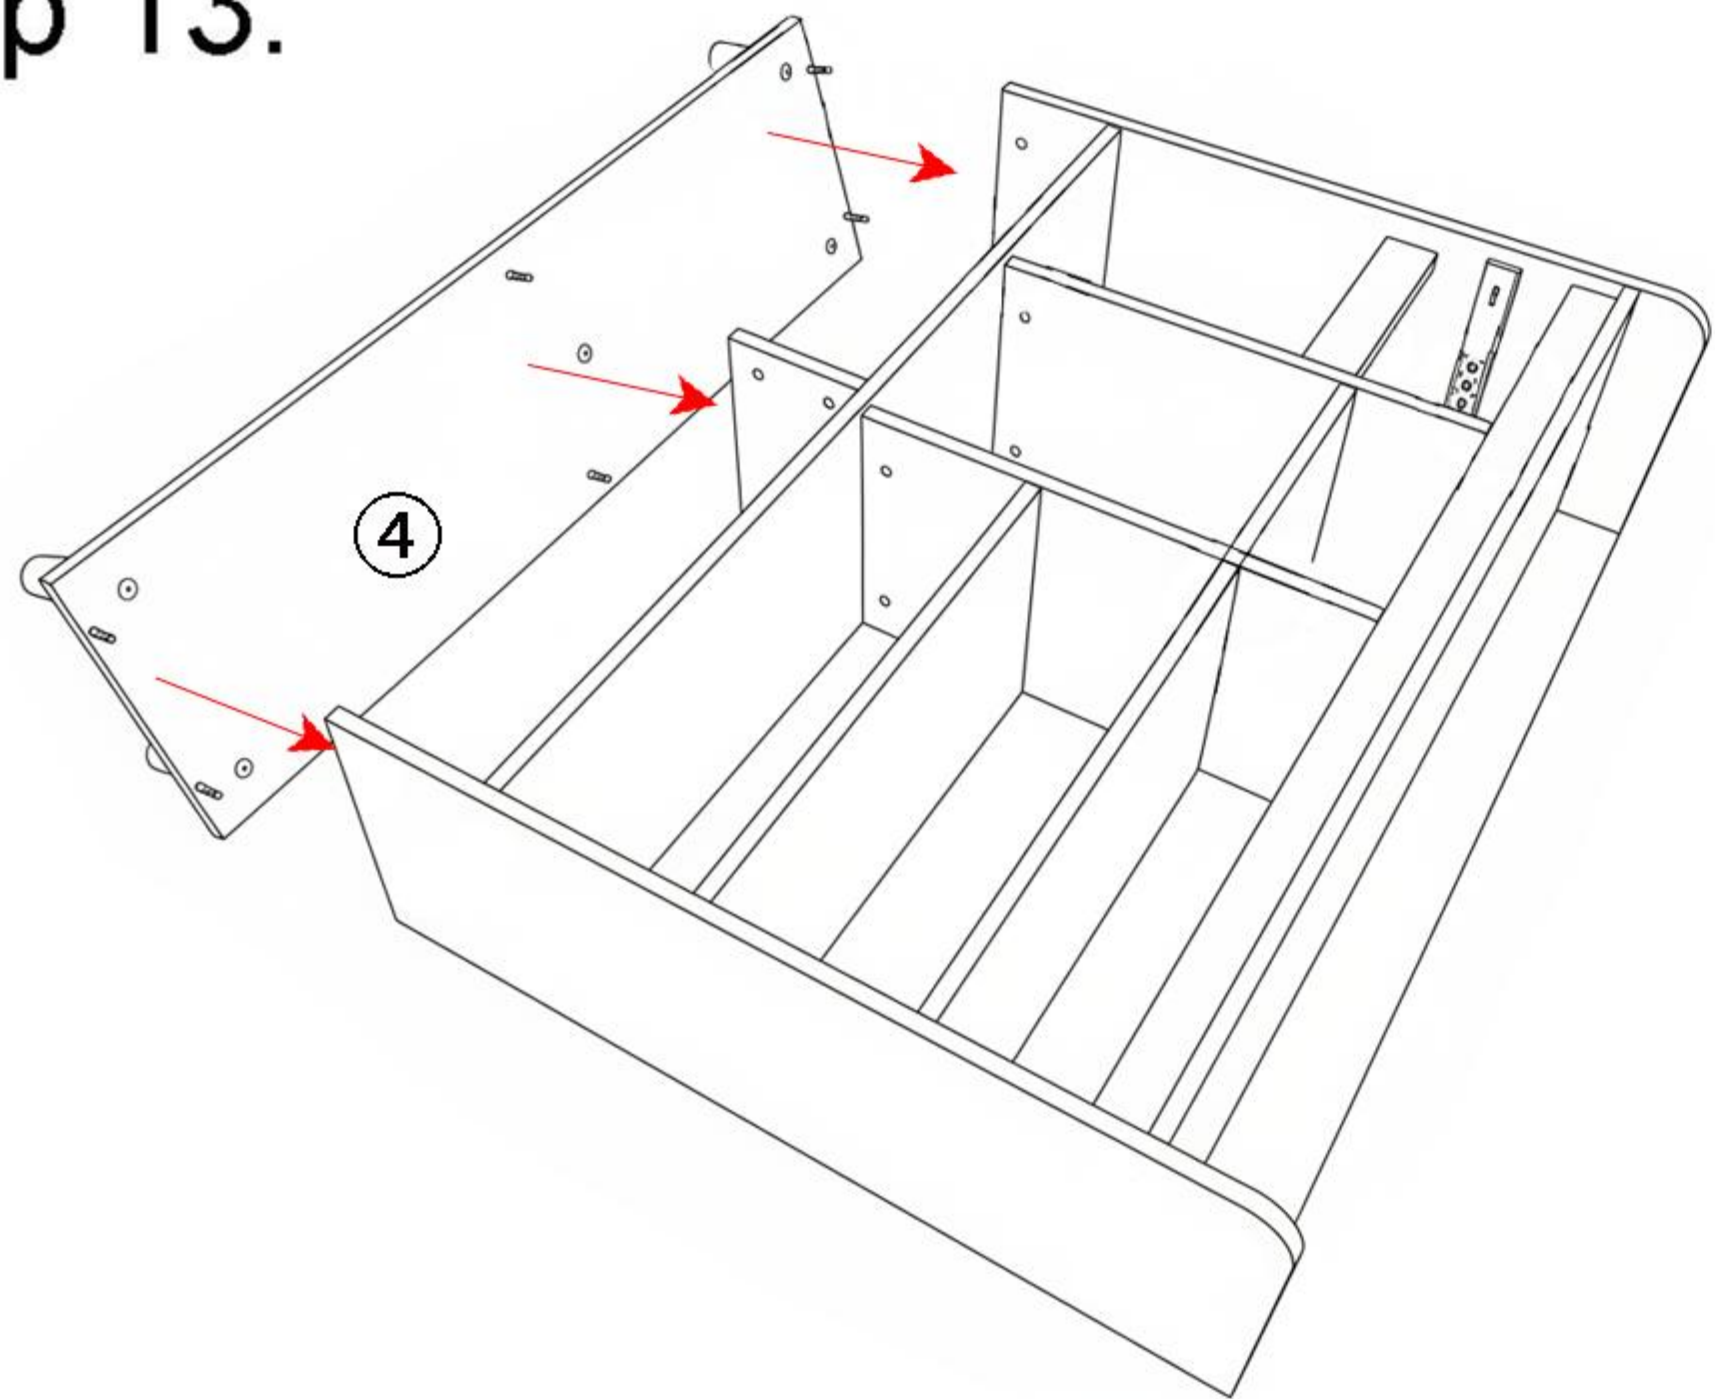


Using A to lock.

Step 14:

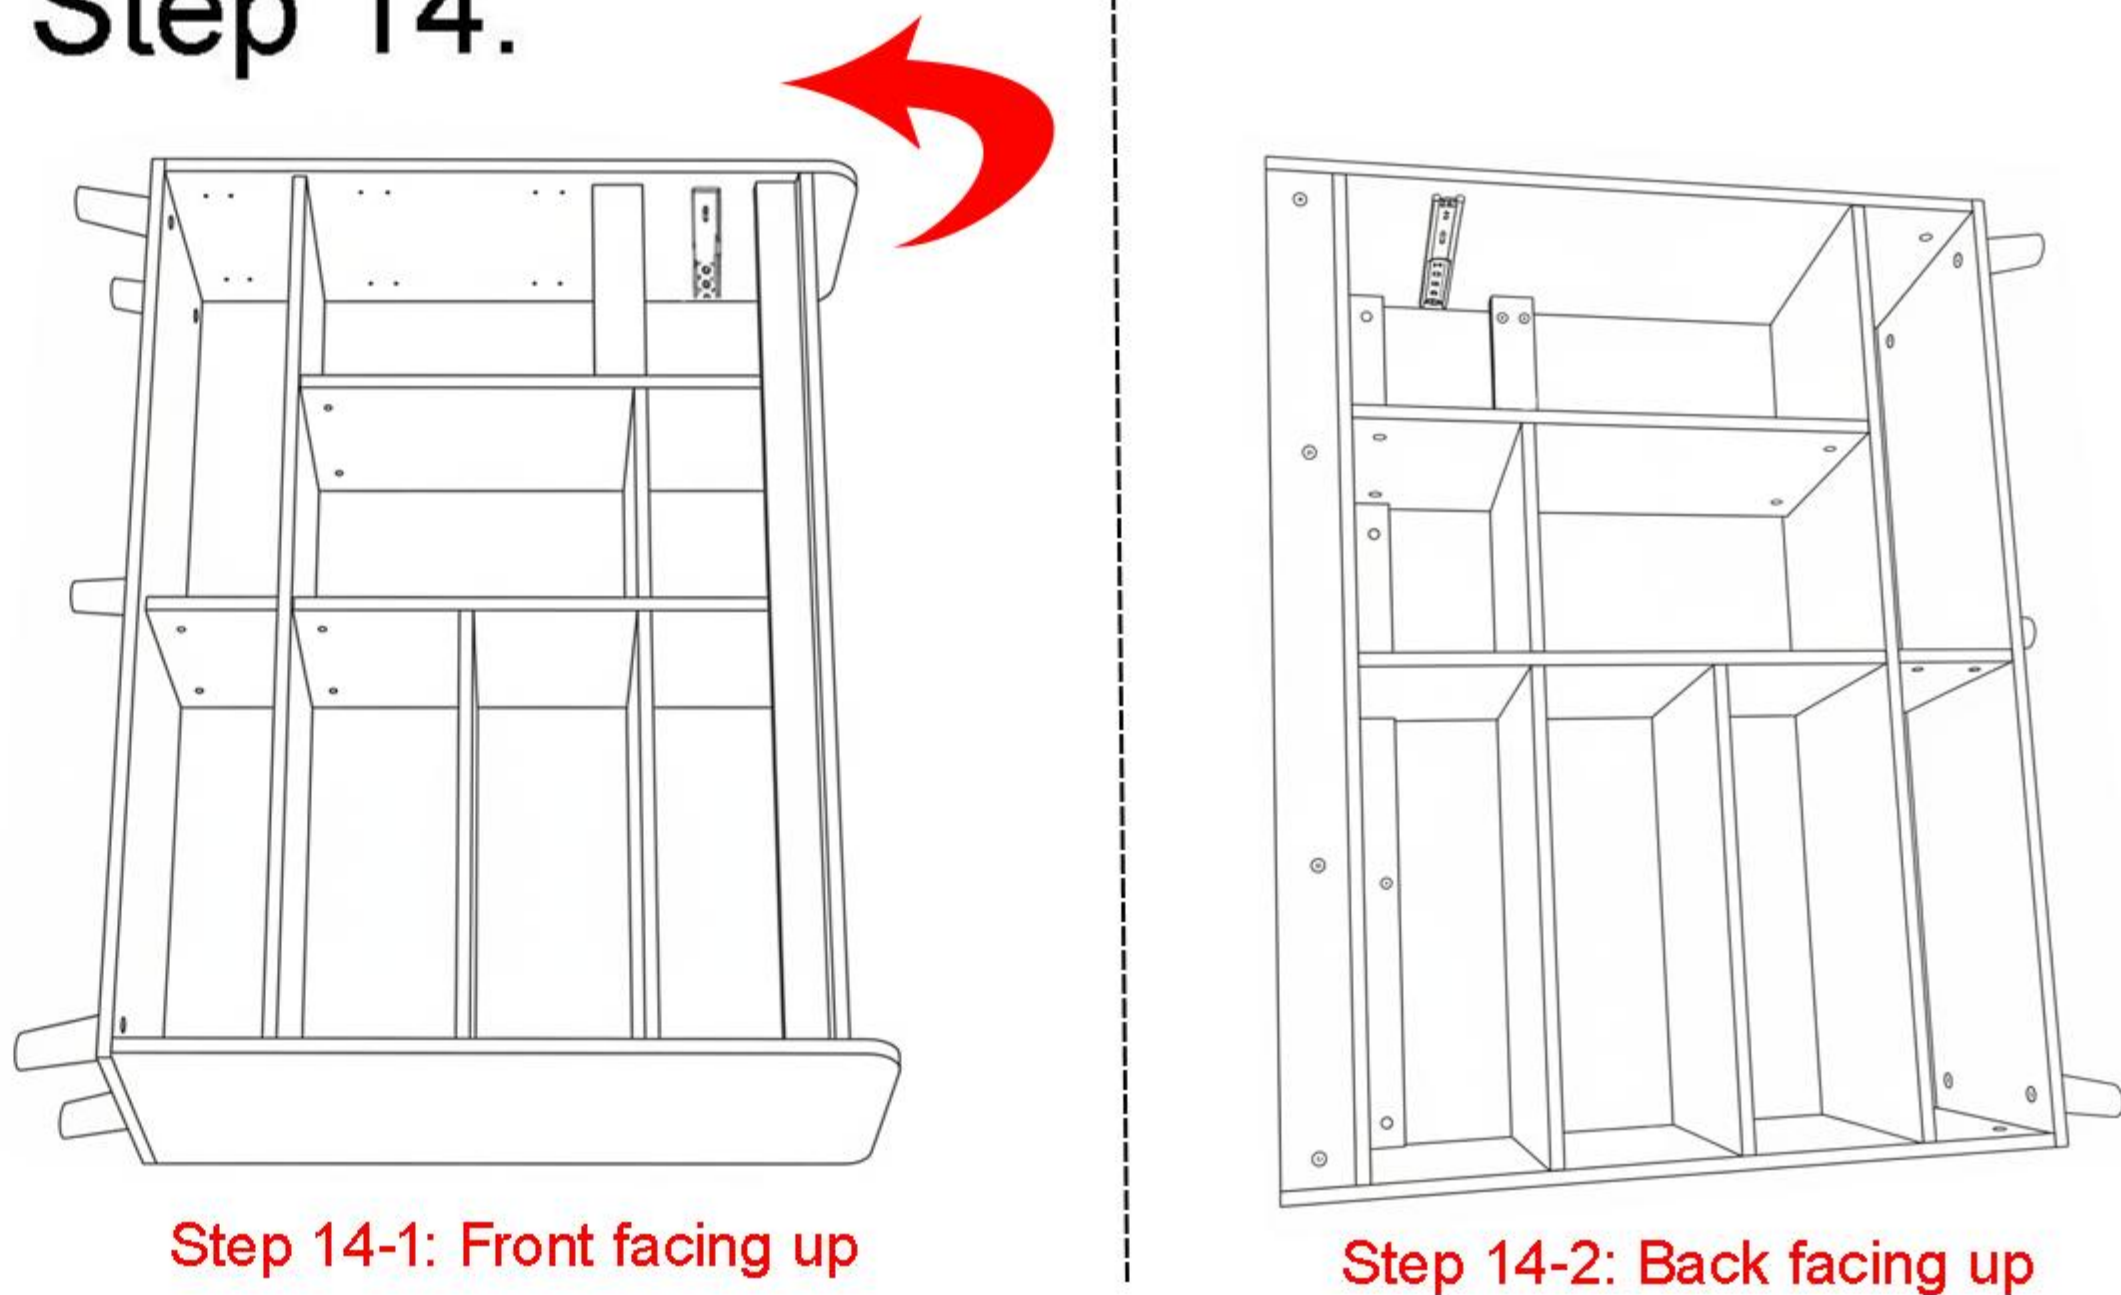


Flip the cabinet with the back facing up.

Step 15: Disassemble part H as shown in the diagram, then attach it to the three back panels.

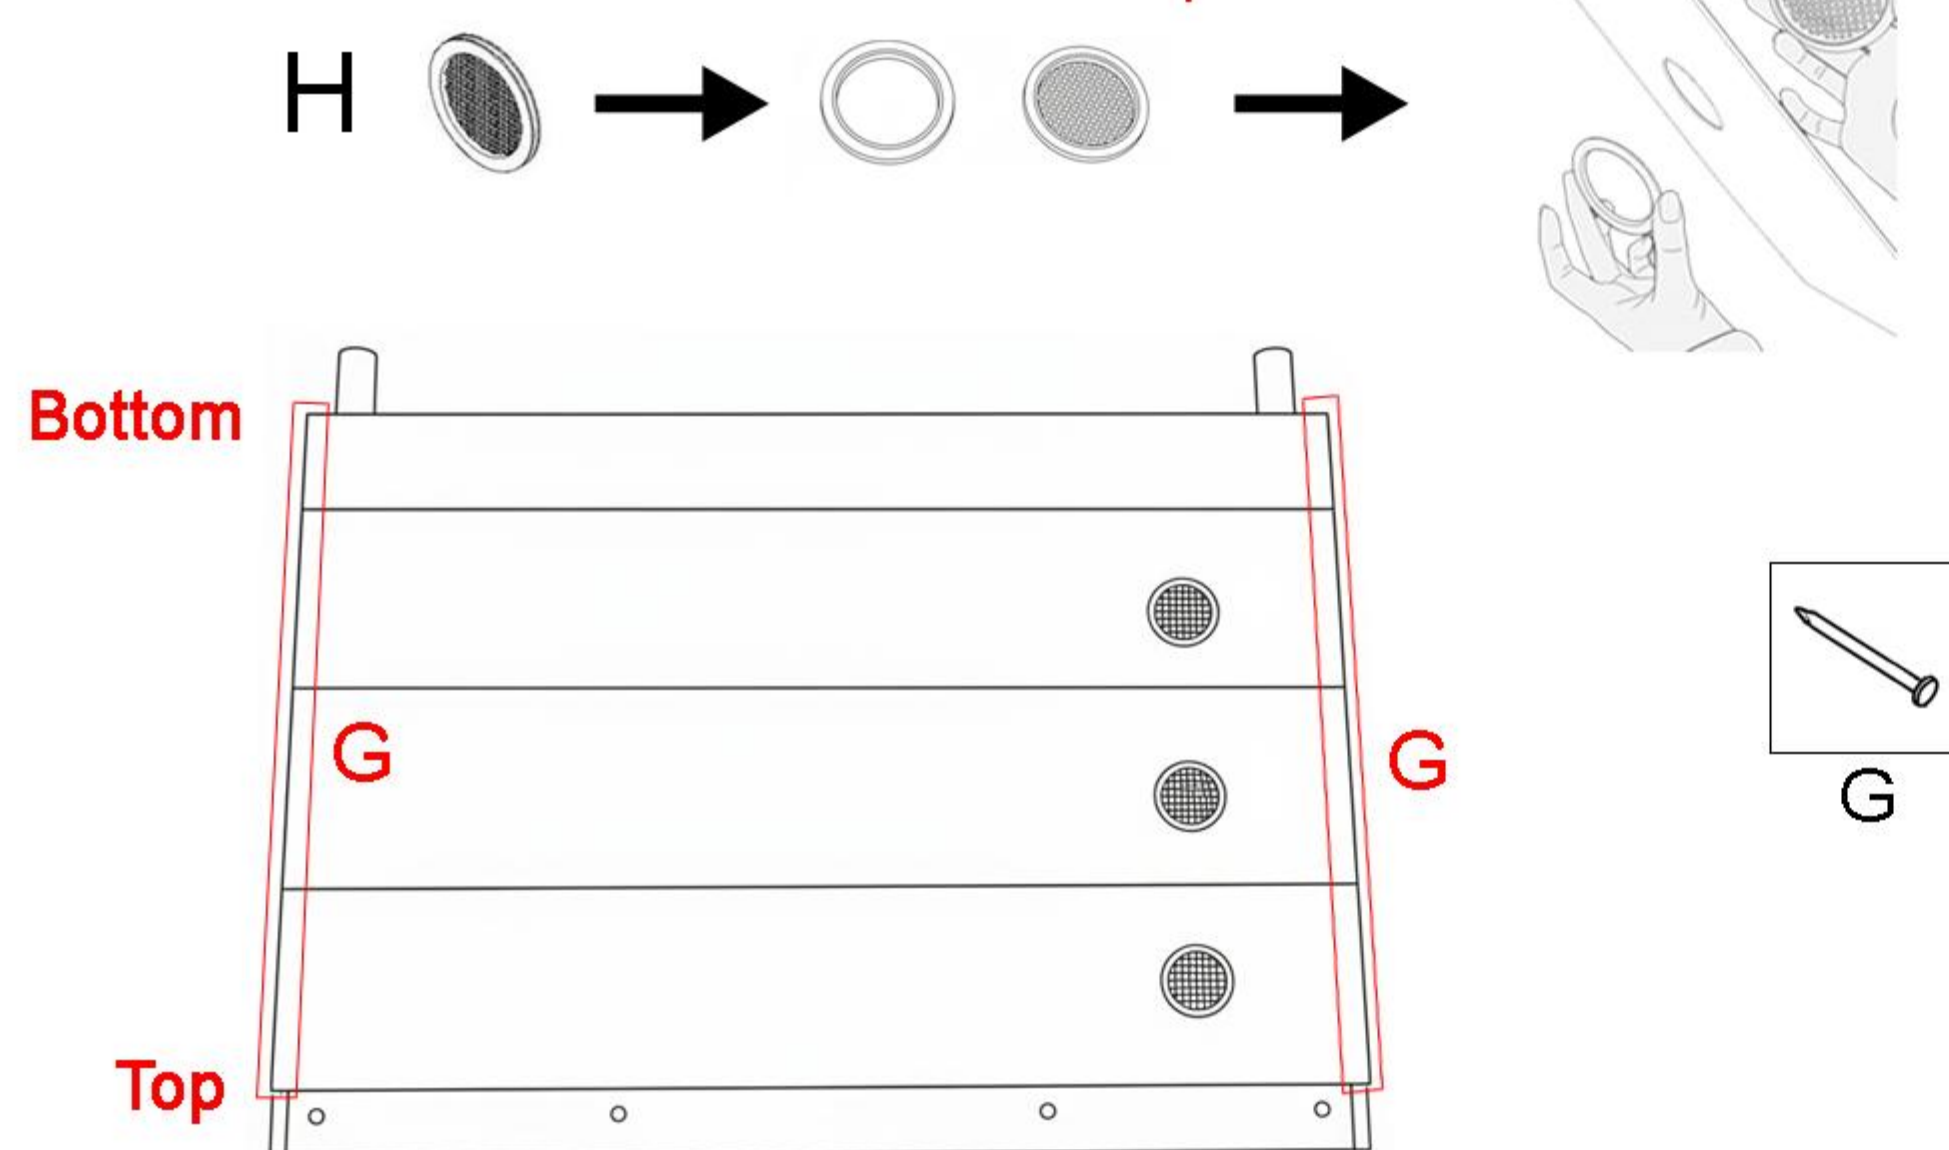


Place all back panels as shown in the diagram, use G to secure them to the frame.

Step 16:

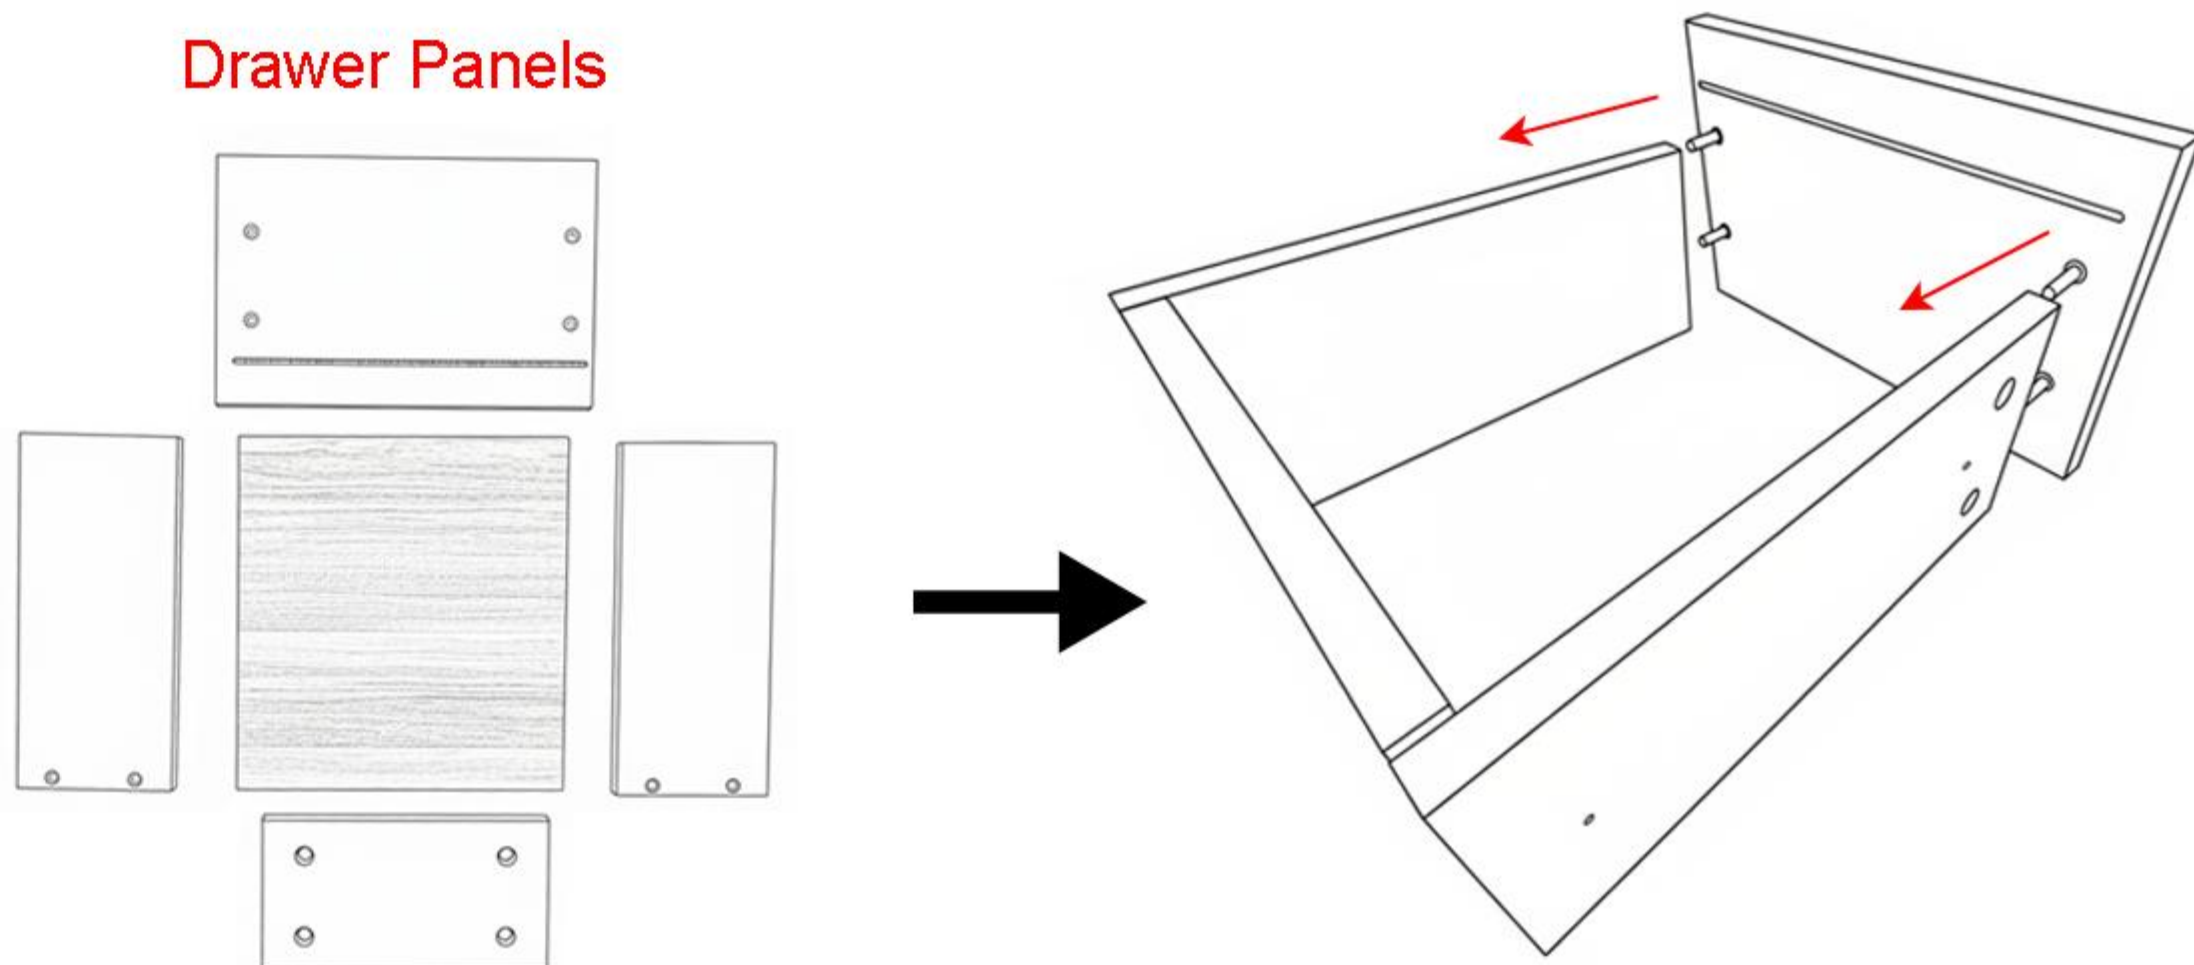


Install B into all white pre-installed holes, use A to lock.

Step 17:

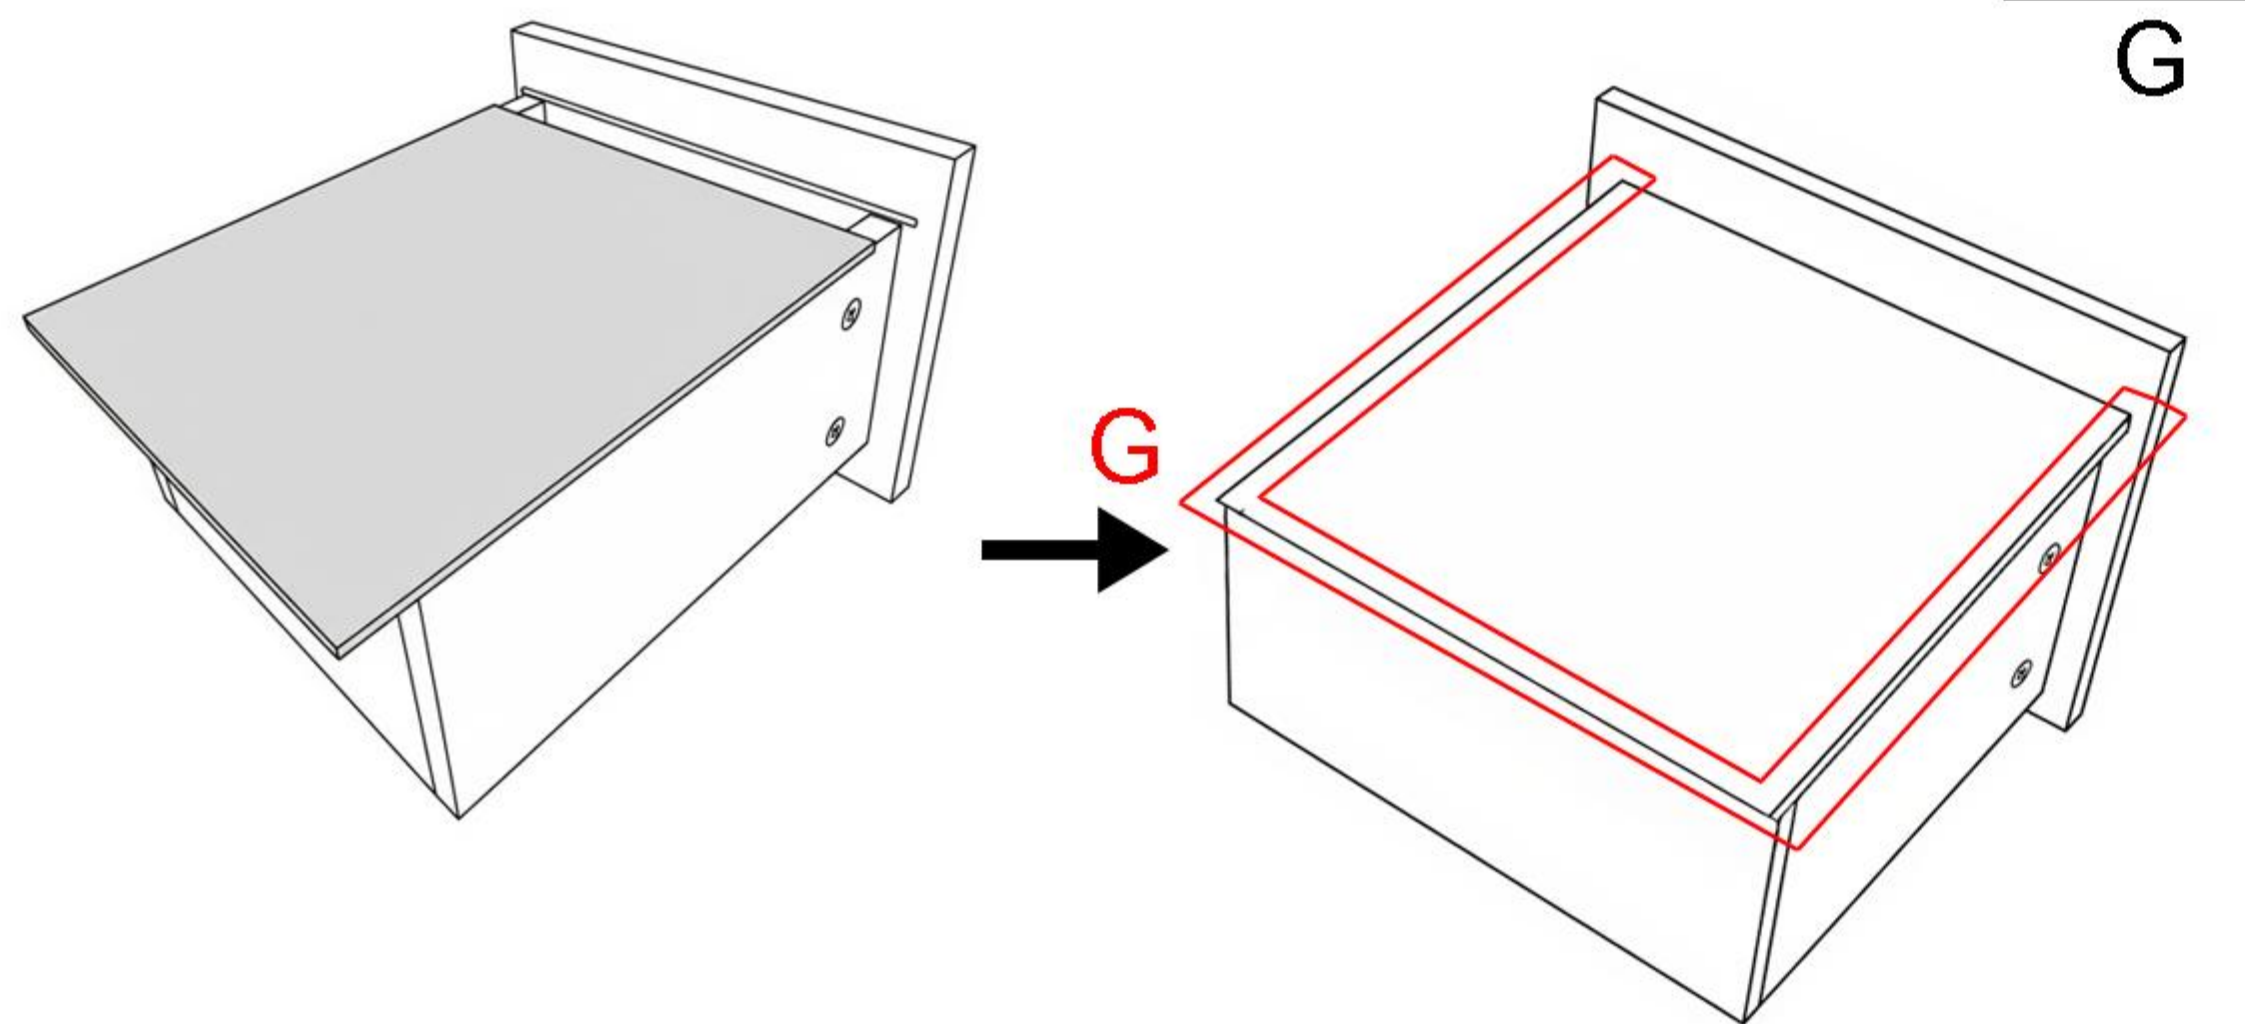


Align the reserved grooves and install the drawer bottom panel, use G to secure it to the frame.

Step 18:

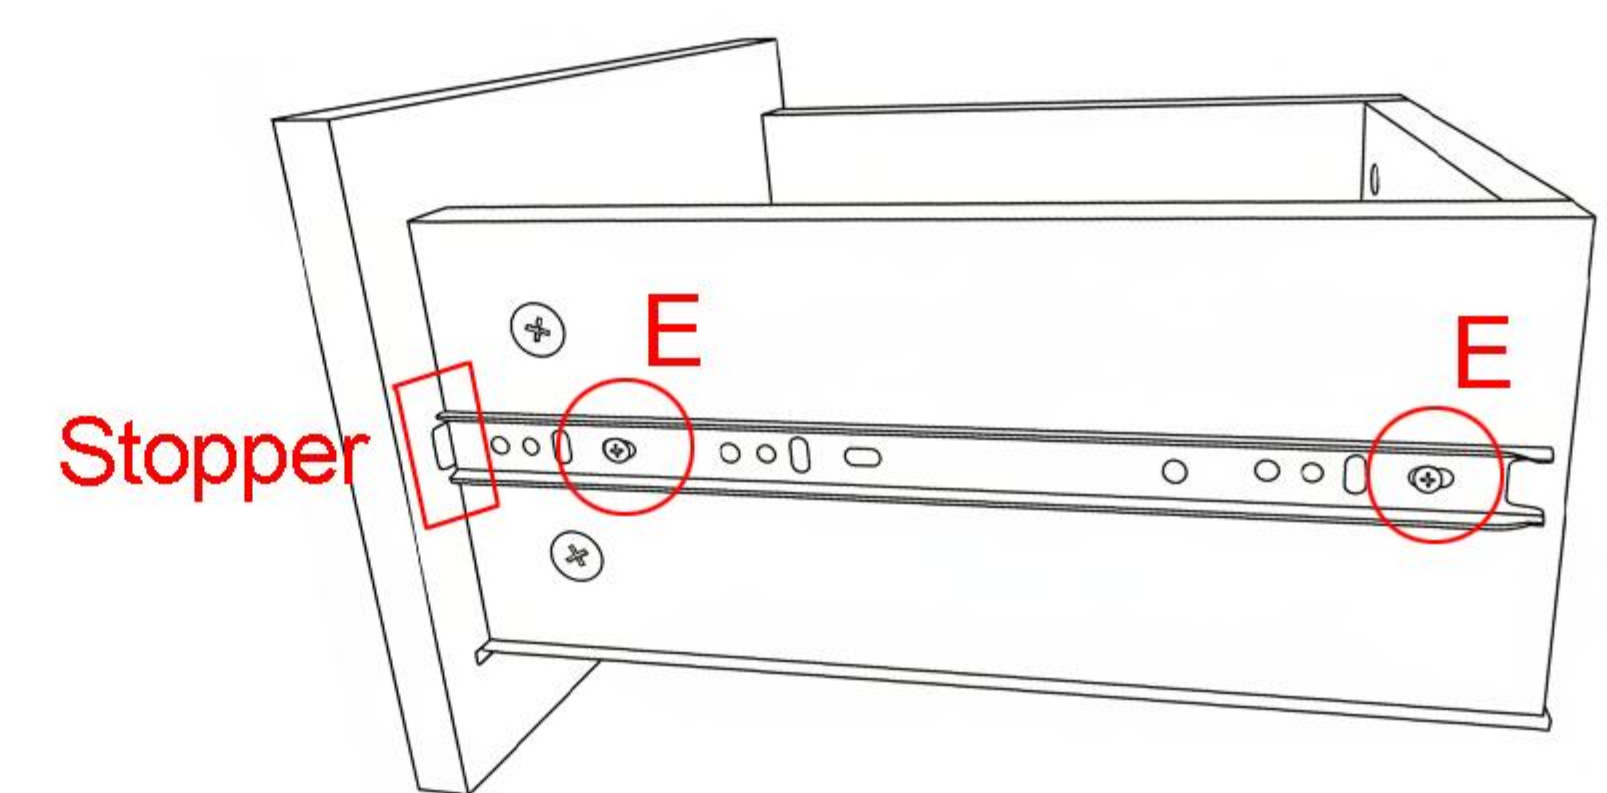


Position the pull-out part of sliding rails on the **both** side of drawer. Ensure the stopper of the slide rail is aligned with the drawer front panel. Secure with screws E.

Step 19:

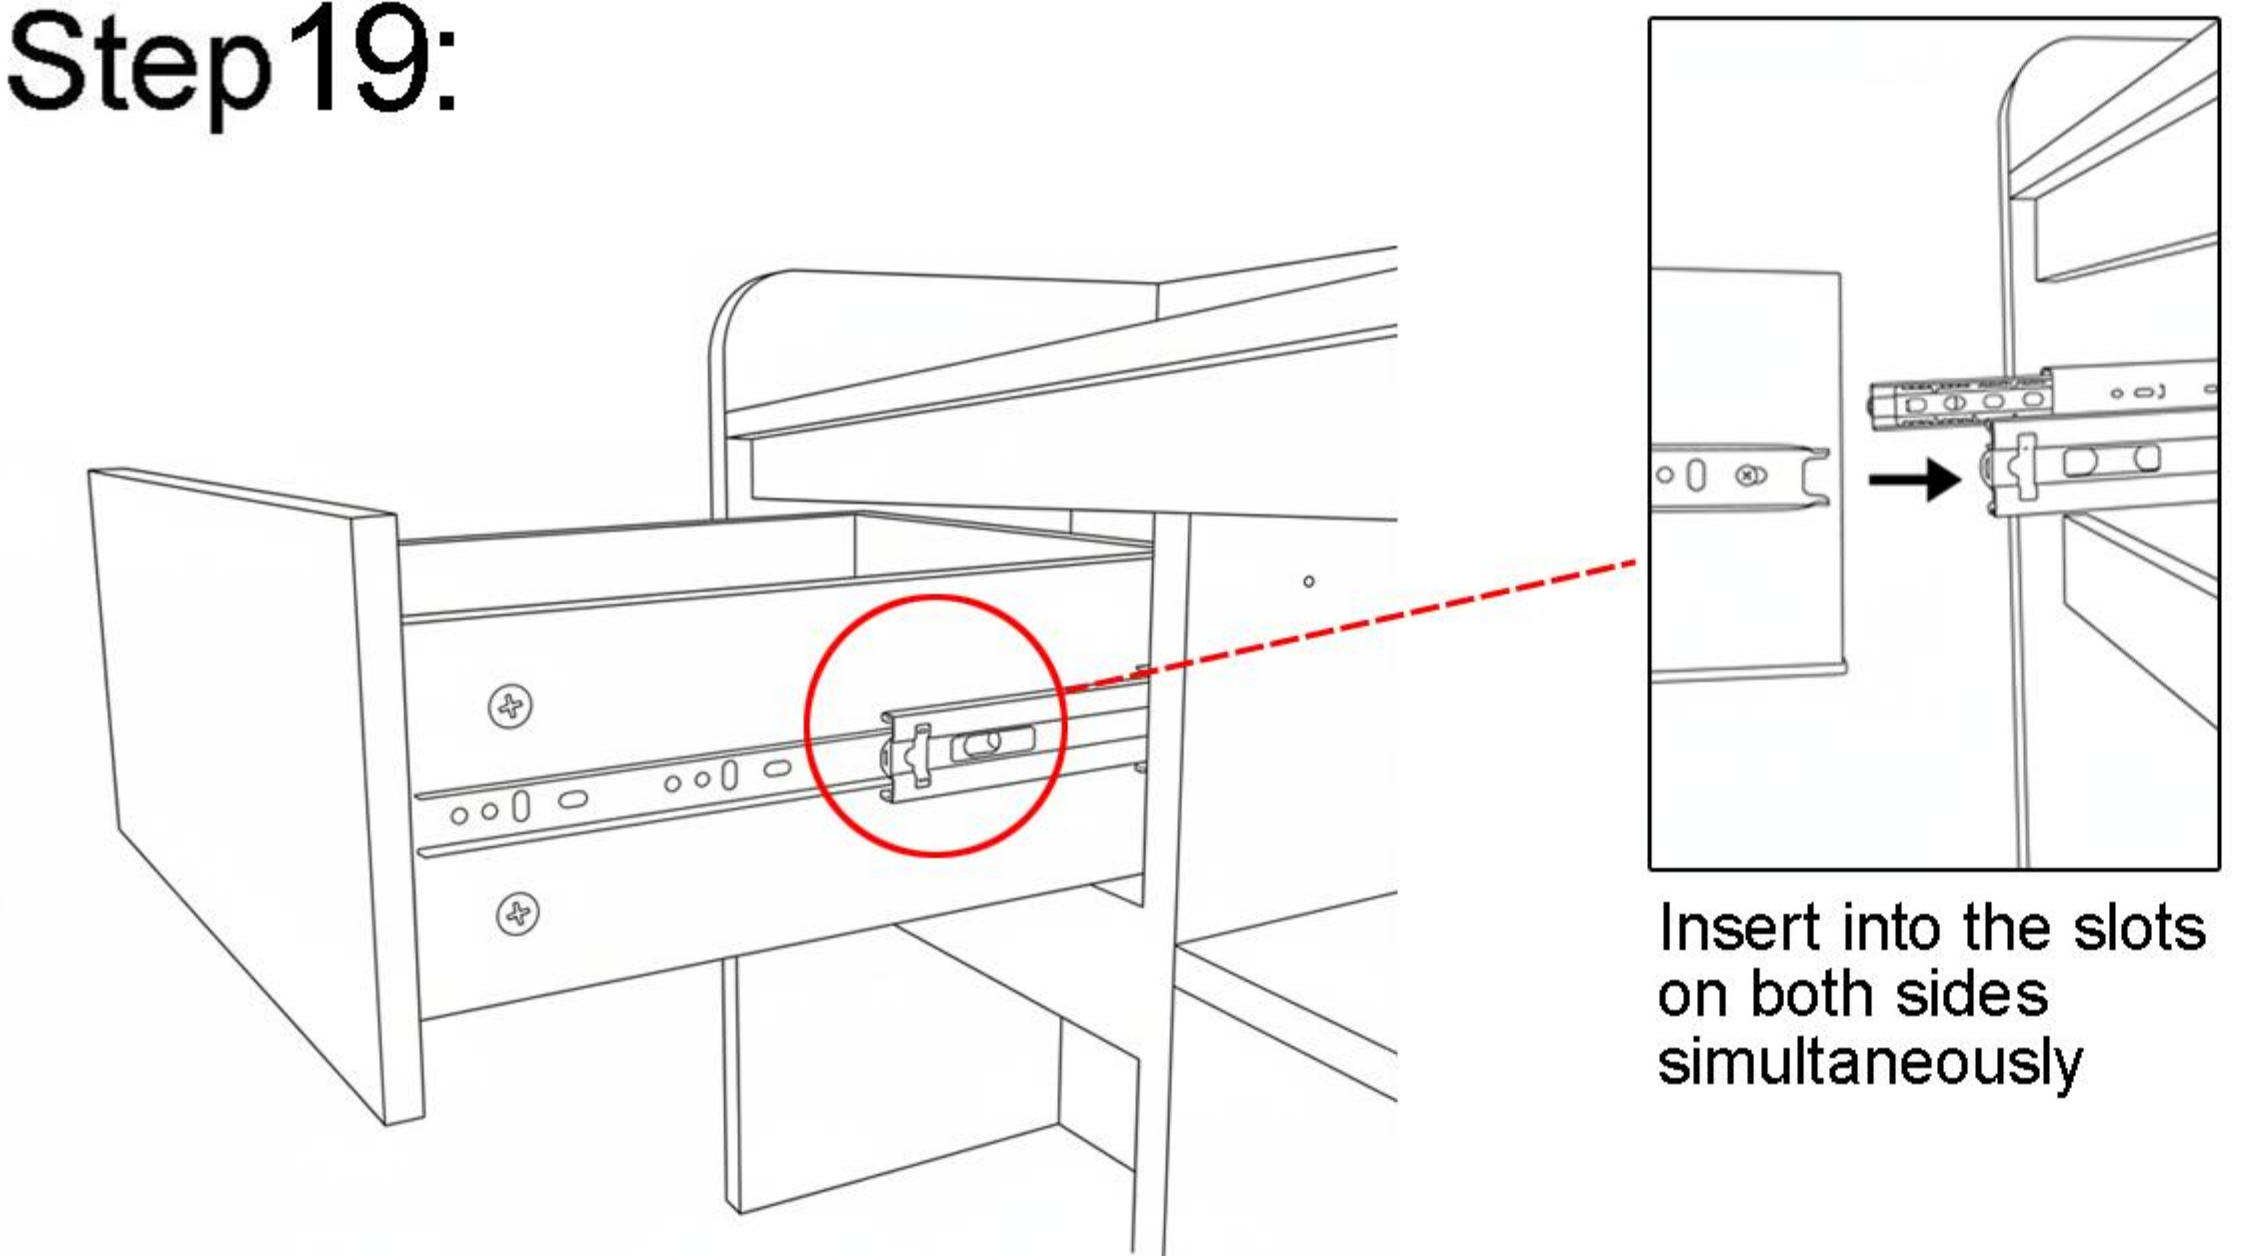


Pull the sliding rails main body part part fixed to its full length, with the silver ball-bearing section at the front. Insert the pull out part on both sides of the drawer into the slots, then gently push to secure.

Step 20:

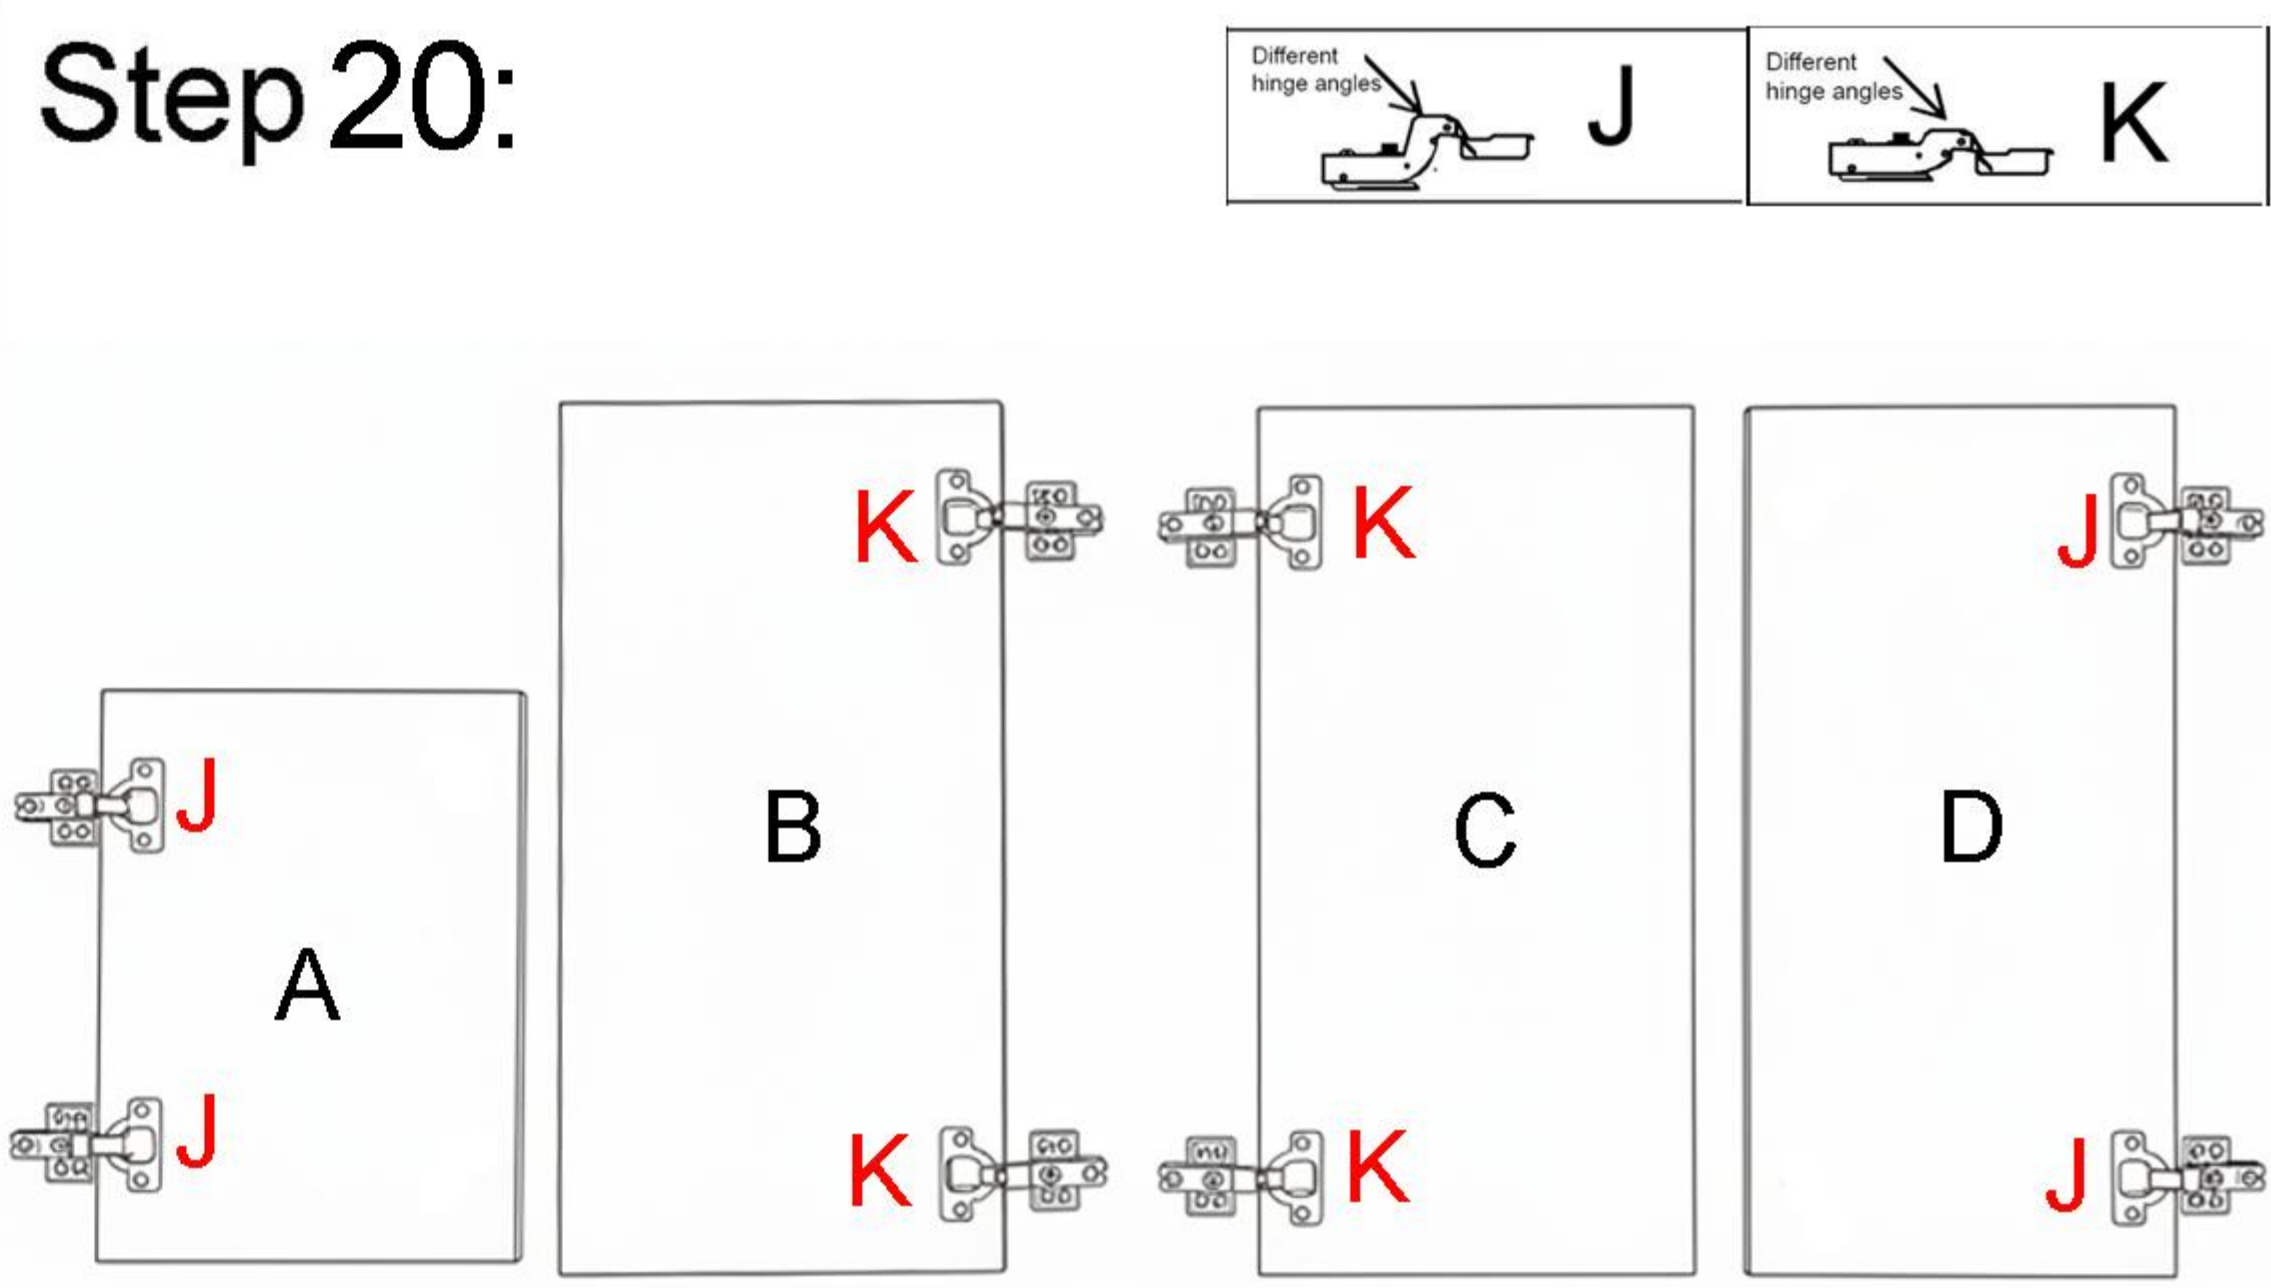

Use hinge J for door panels A and D, and hinge K for door panels B and C. Secure the hinges with screws F.

Step 21:

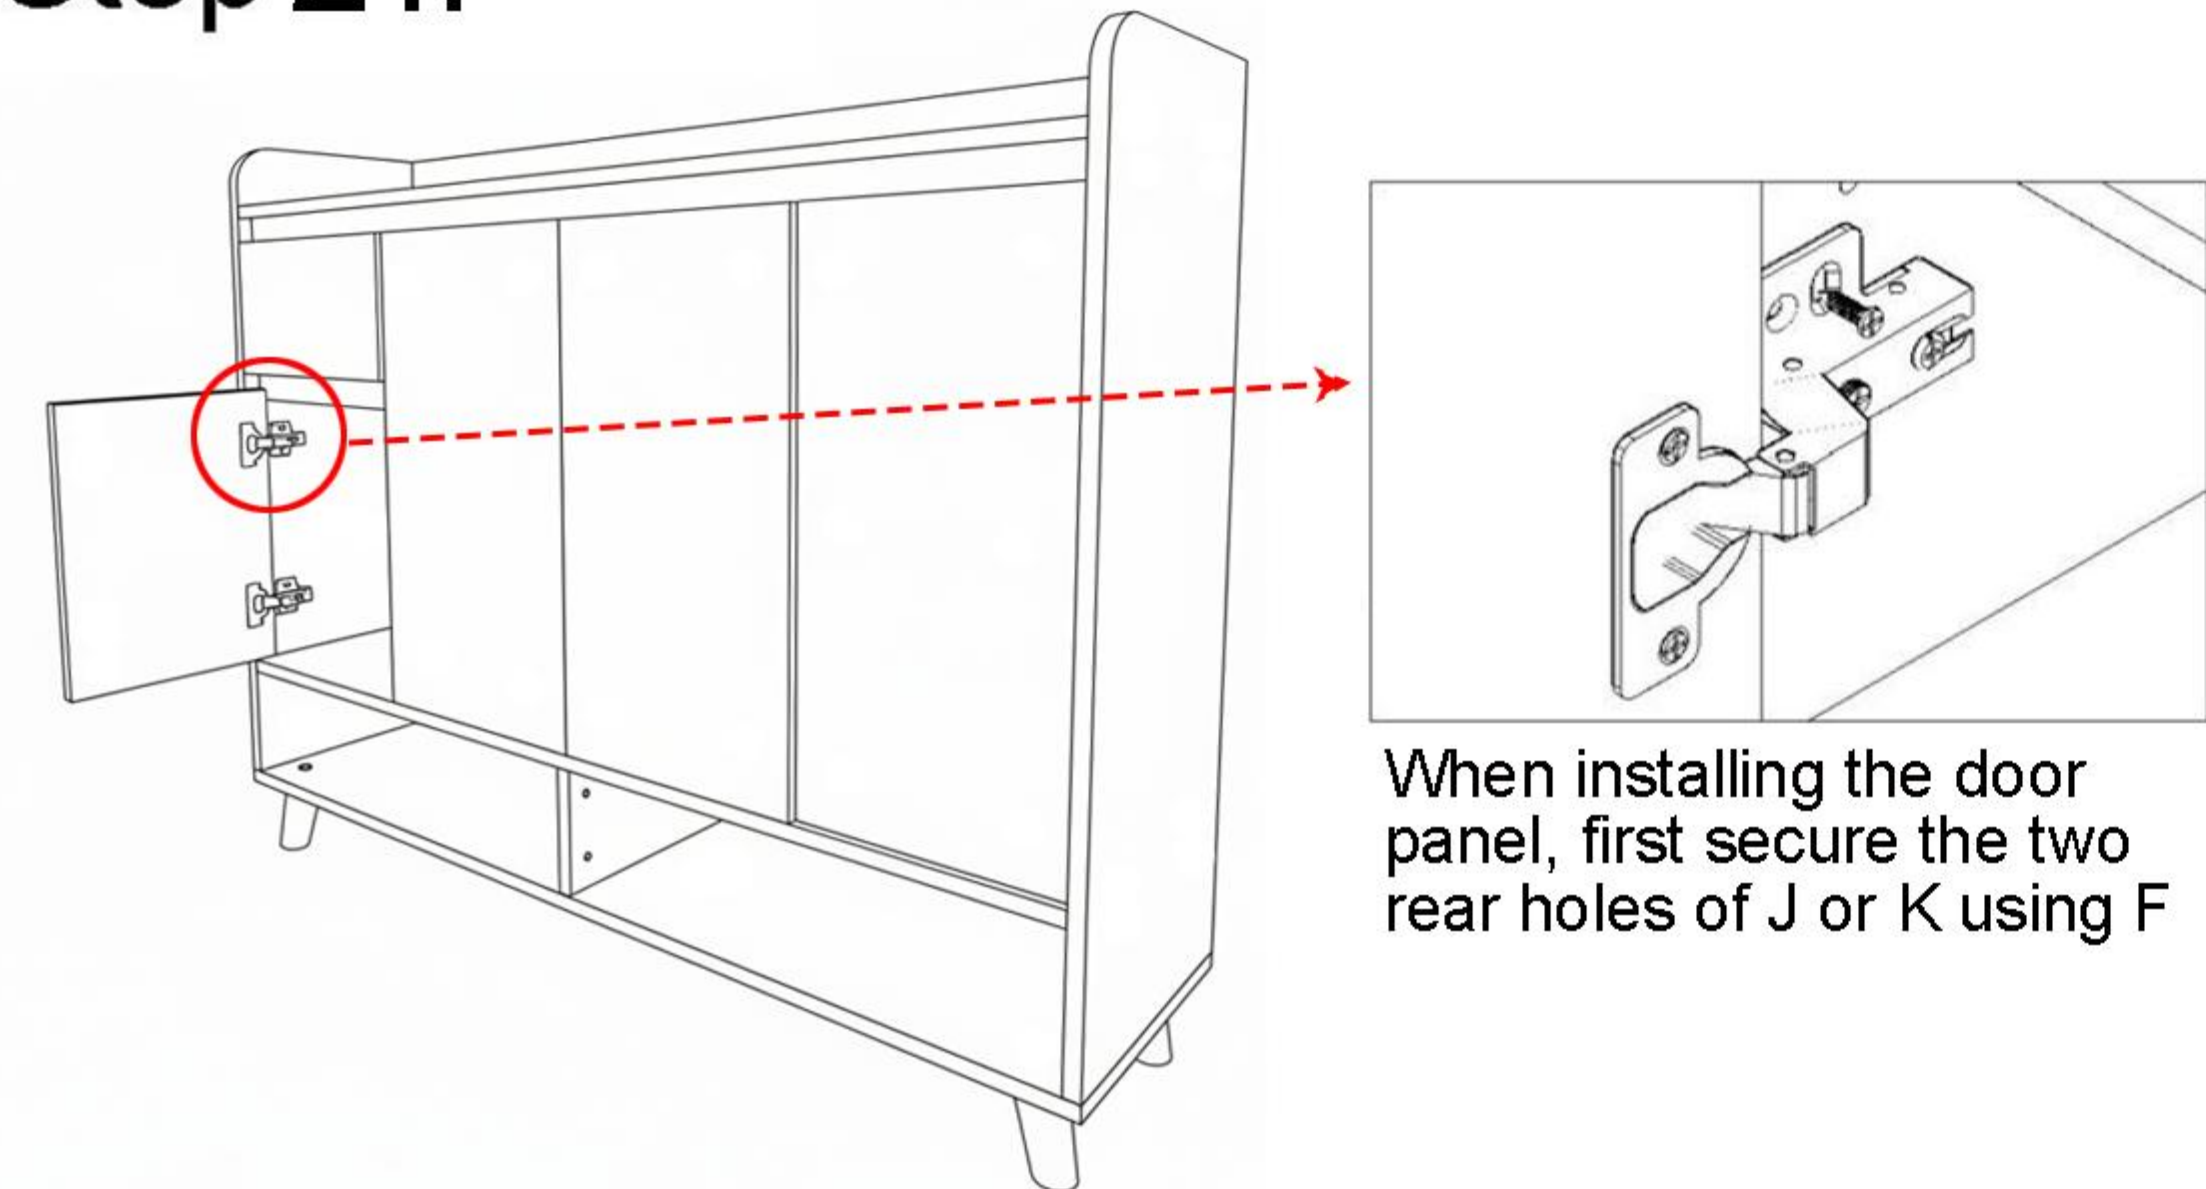

First, secure the rear two holes of J or K with F, then install the front two holes. Refer to the initial hinge installation instructions to adjust the door's height and gap. Repeat the steps to install all four doors.

