


TV013

Installation Instruction

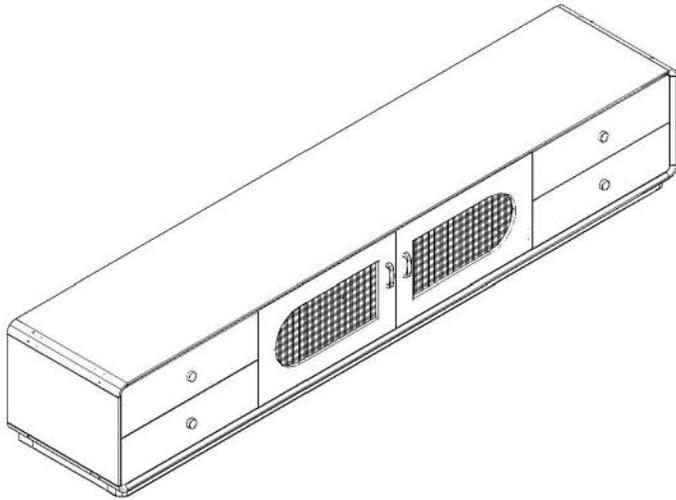

Scan the code to purchase ES001



Please read this instruction manual carefully before installation and use.

Assembly notes:


1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:

1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

Hardware List

Accessory Appearance	Code	Dimensions	Numbers	Unit	Accessory Appearance	Code	Dimensions	Numbers	Unit
	A	Ø15*12mm	40	Piece		L	Ø3.5*14mm	24	Piece
	B	Ø7*40mm	40	Piece		M	Ø6*20mm	8	Piece
 	C+D		10	Set		N	Ø6*30mm	10	Piece
	E	Ø8*40mm	16	Piece		O	--	4	Piece
	F	45mm	4	Pair		P	--	2	Piece
	G	Ø7*28mm	2	Piece		Q	Ø4*20mm	6	Piece
	H	Ø3.5*12mm	32	Piece		R	Ø5*20mm	2	Piece
	I	Ø3.5*40mm	16	Piece		S	Non-slip pad	14	Piece
	J		4	Piece		T	Ø60	4	Piece
Woven rattan	K	220*410	2	Piece		U	4 angled legs + 1 center straight leg	5	Piece


BoardMaterial List

Code	Dimensions(mm)	No.	Code	Dimensions(mm)	No.	Code	Dimensions(mm)	No.
①	1940*400*15	1	⑥	354*304*15	1	⑩	489.5*149*15	4
②	1940*400*15	1	⑦	268*50*30	2	⑪	300*116*15	8
③	1969*304*12	1	⑧	1946*50*30	2	⑫	430*116*15	4
④	354*304*15	2	⑨	489.5*300*15	2	⑬	442*294*08	4
⑤	401*30*30	4						


Detailed description of the main components, please read carefully

J (Hinge) Installation Instructions

Install the hinge with screw L

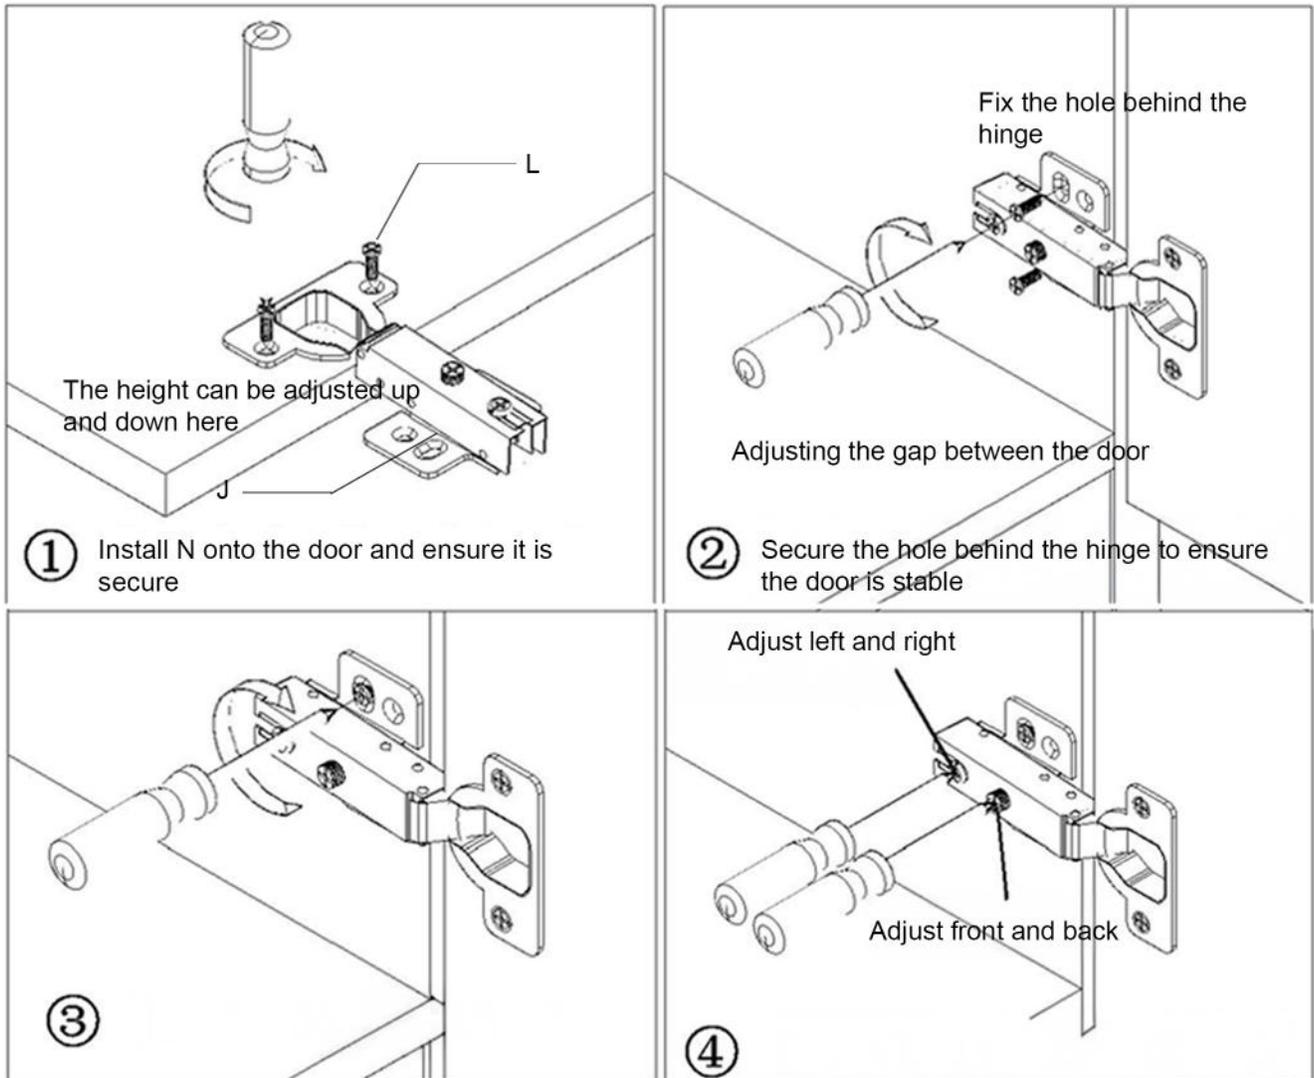



Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

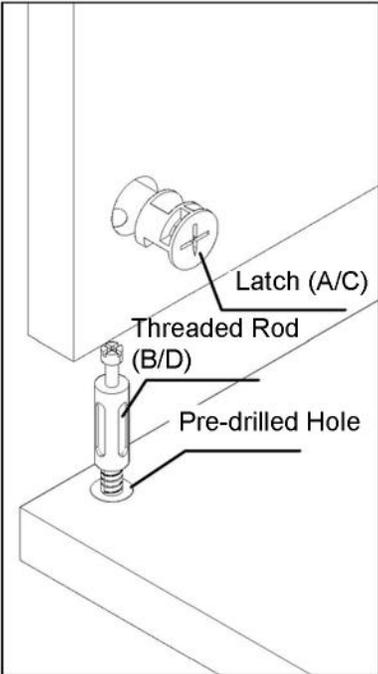


1. Screw the B/D (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed B/D into the corresponding hole of the other piece. Press A/C (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.

F (Sliding Rail) Installation Instructions

When installing F, use with screw H

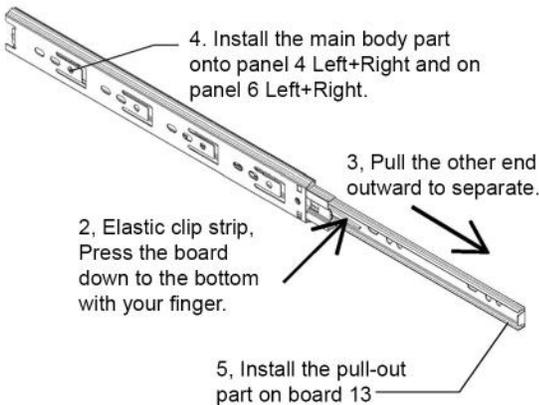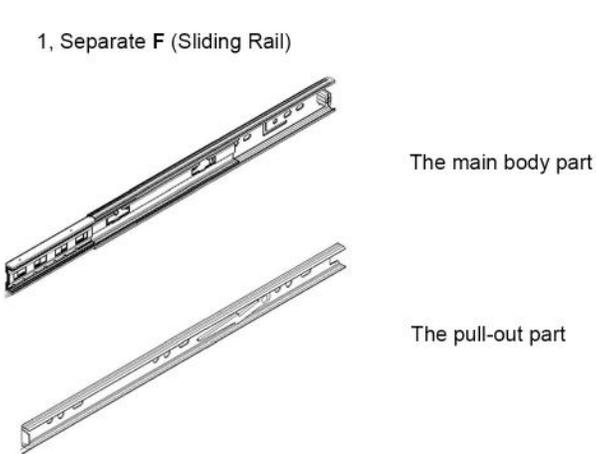

Step 1:

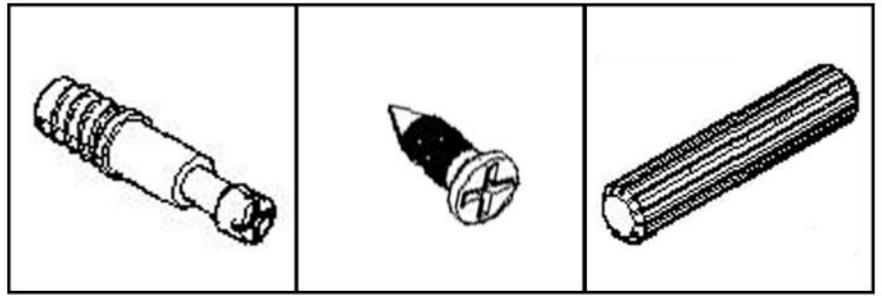


D

H


E

4 Right

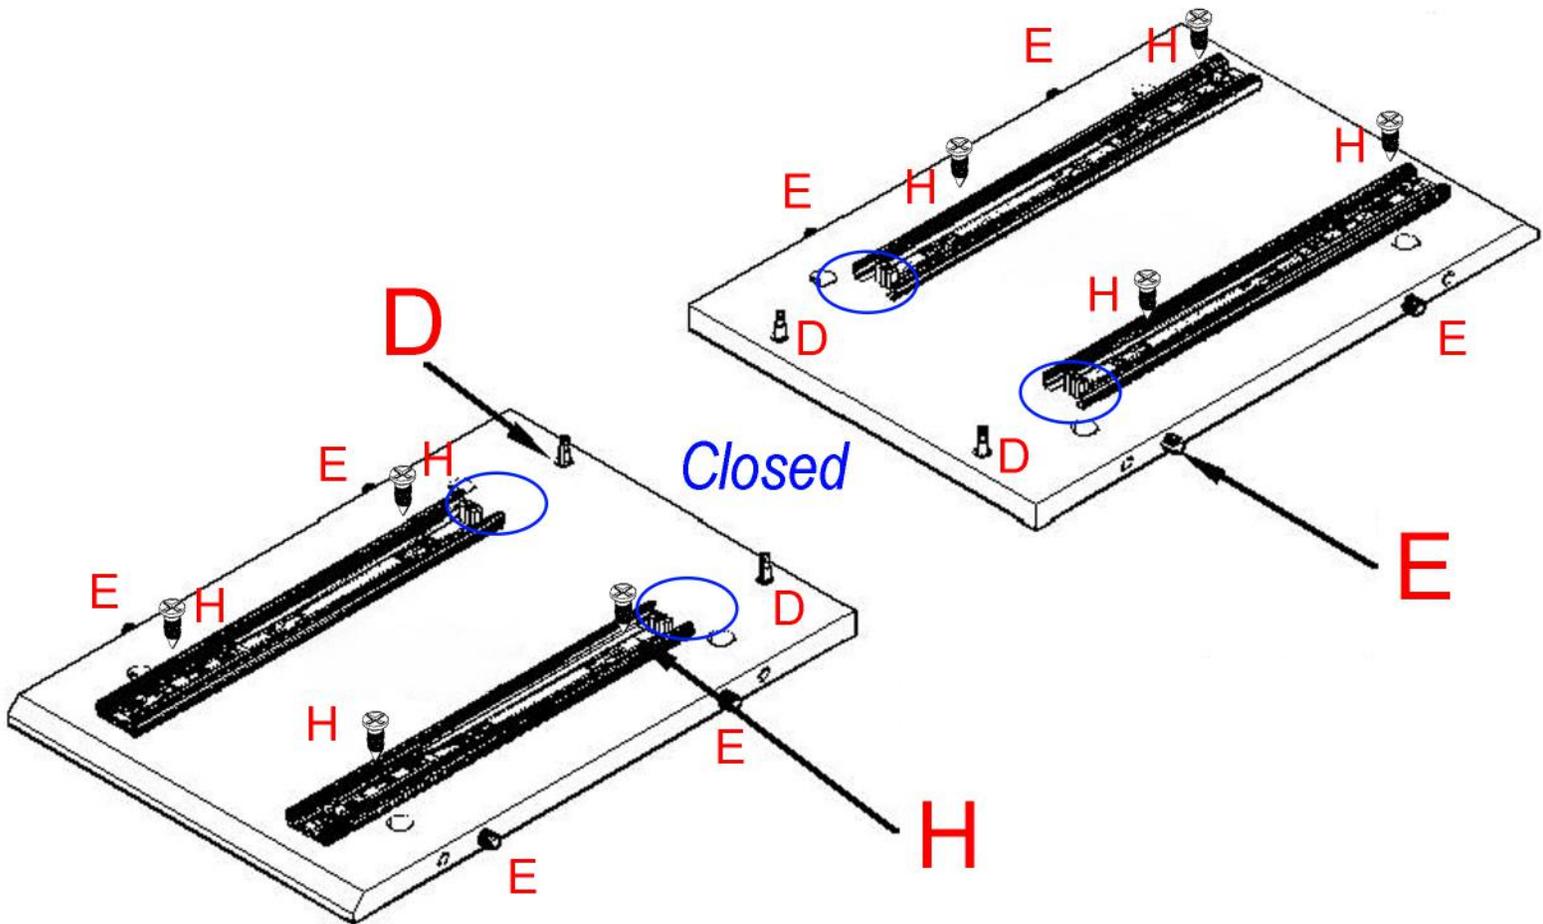


4 Left

Step 2:

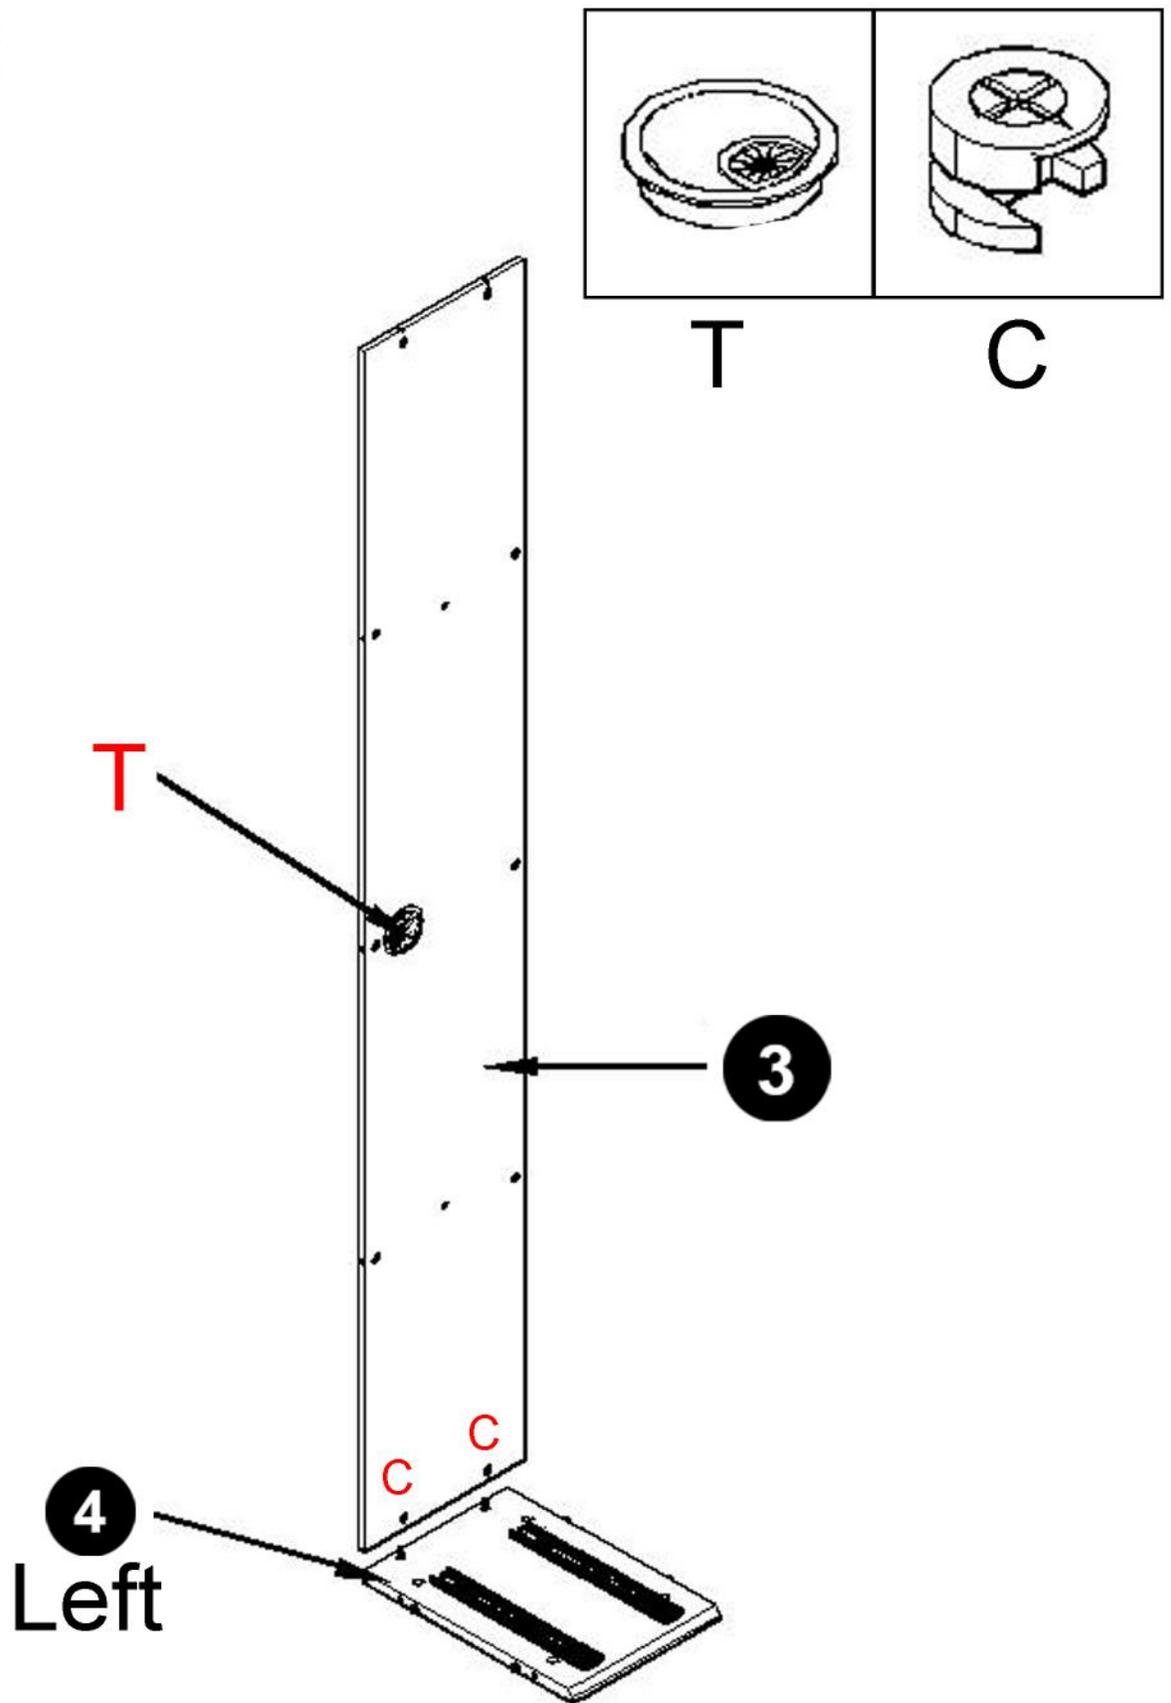


Lock all large pre-drilled holes with C. For detailed instructions, refer to the previous section: Instructions for using eccentric bolts.

Step 3:

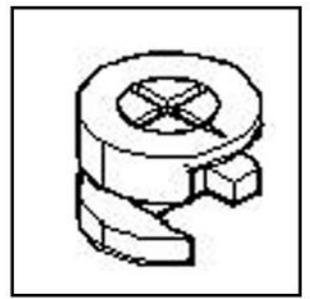

C

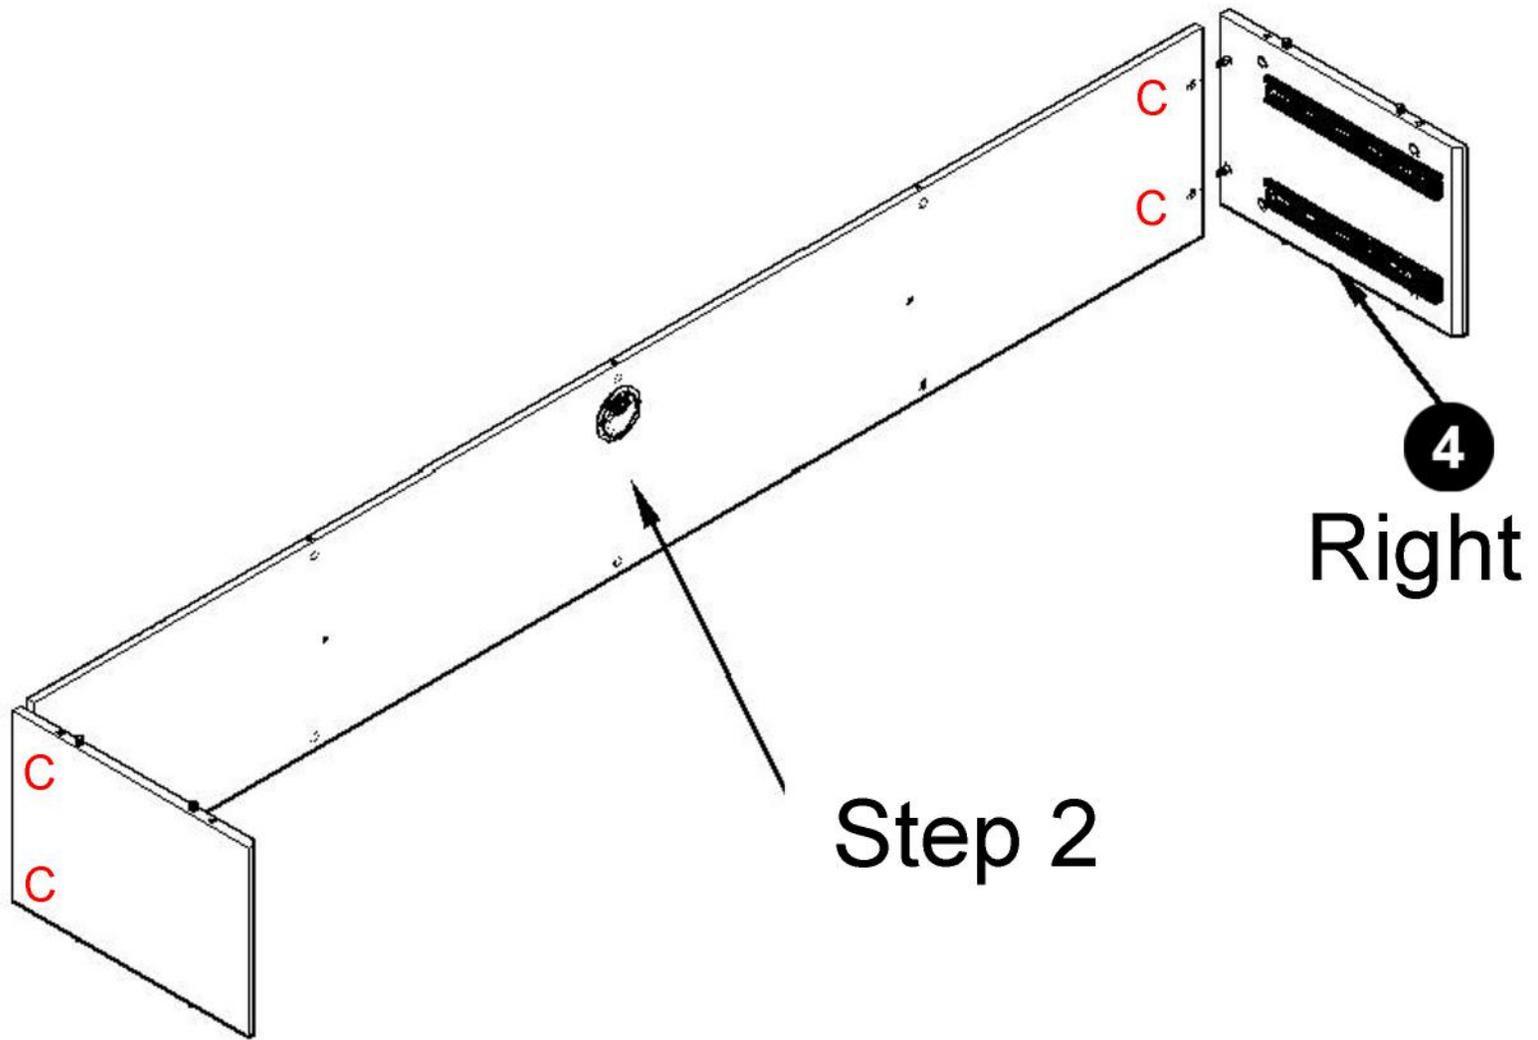


Step 2

4
Right

Secure with C

Step 4:

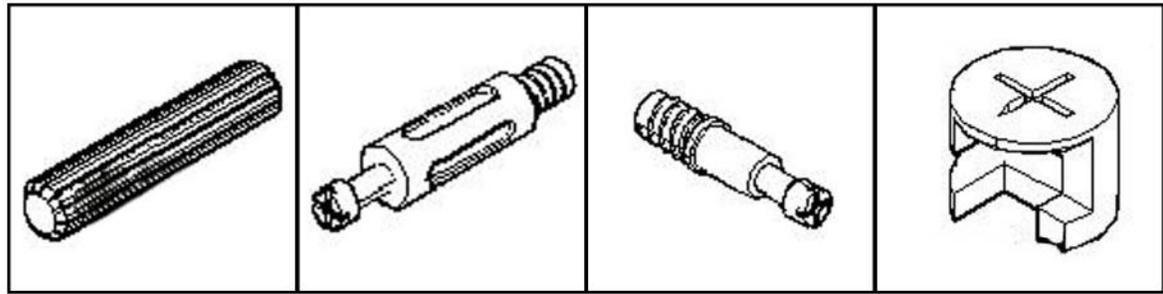


E

B

D

A

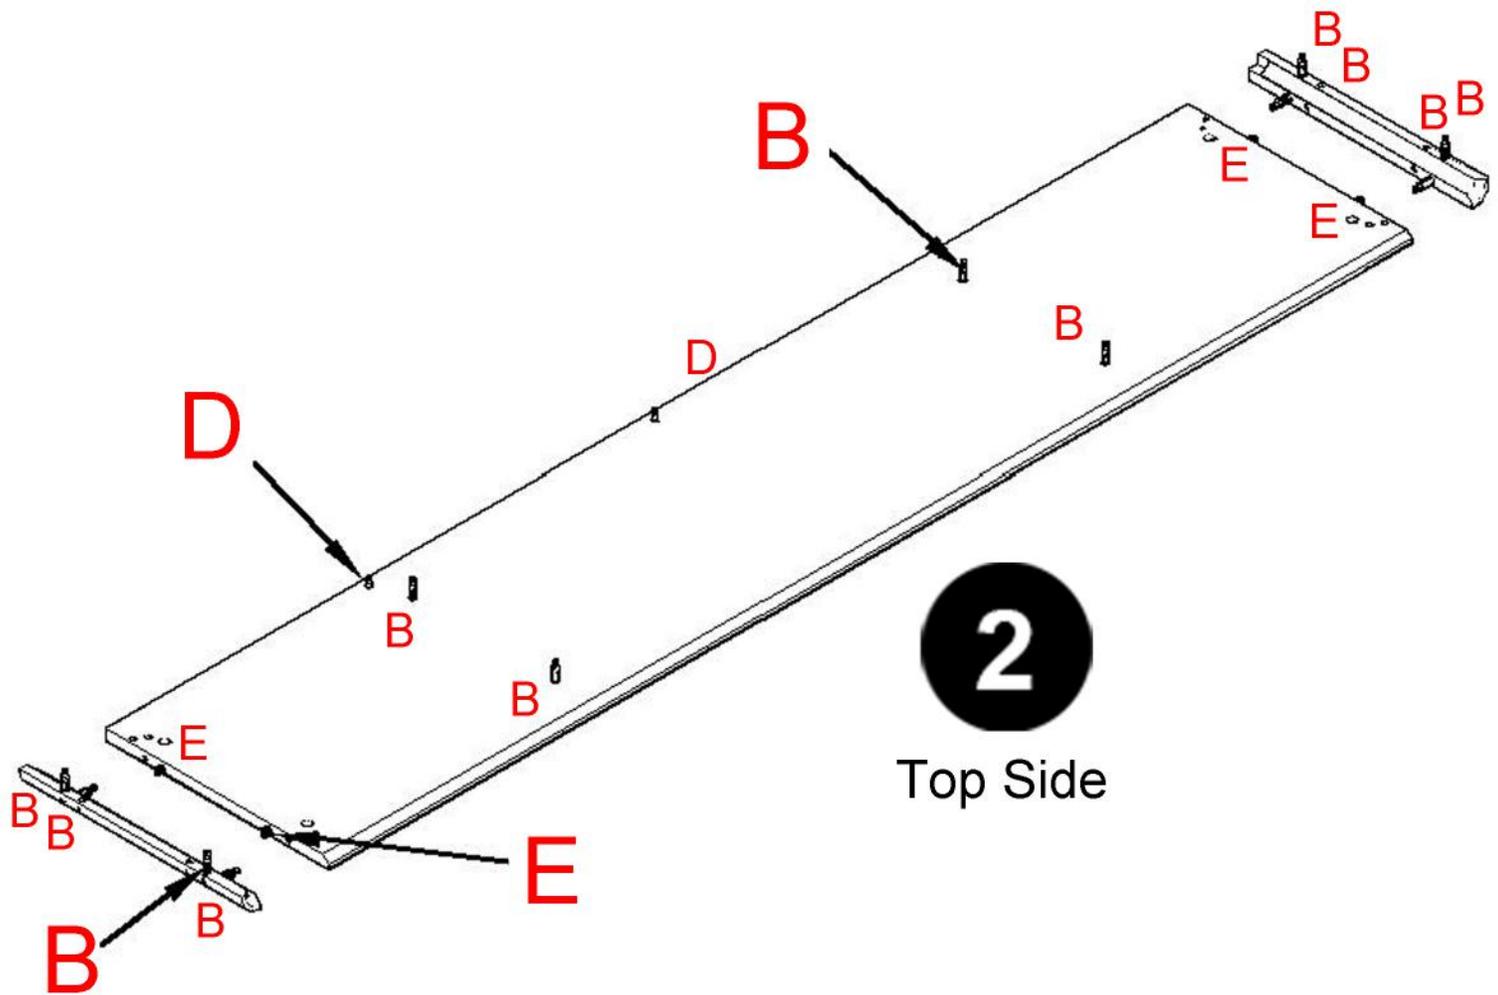


2

Top Side

Secure with A


Step 5:

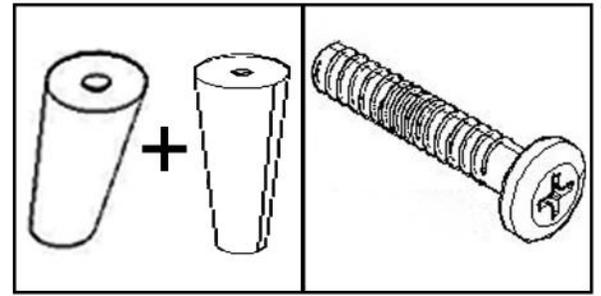


U

N

Cabinet leg installation options:
Option 1

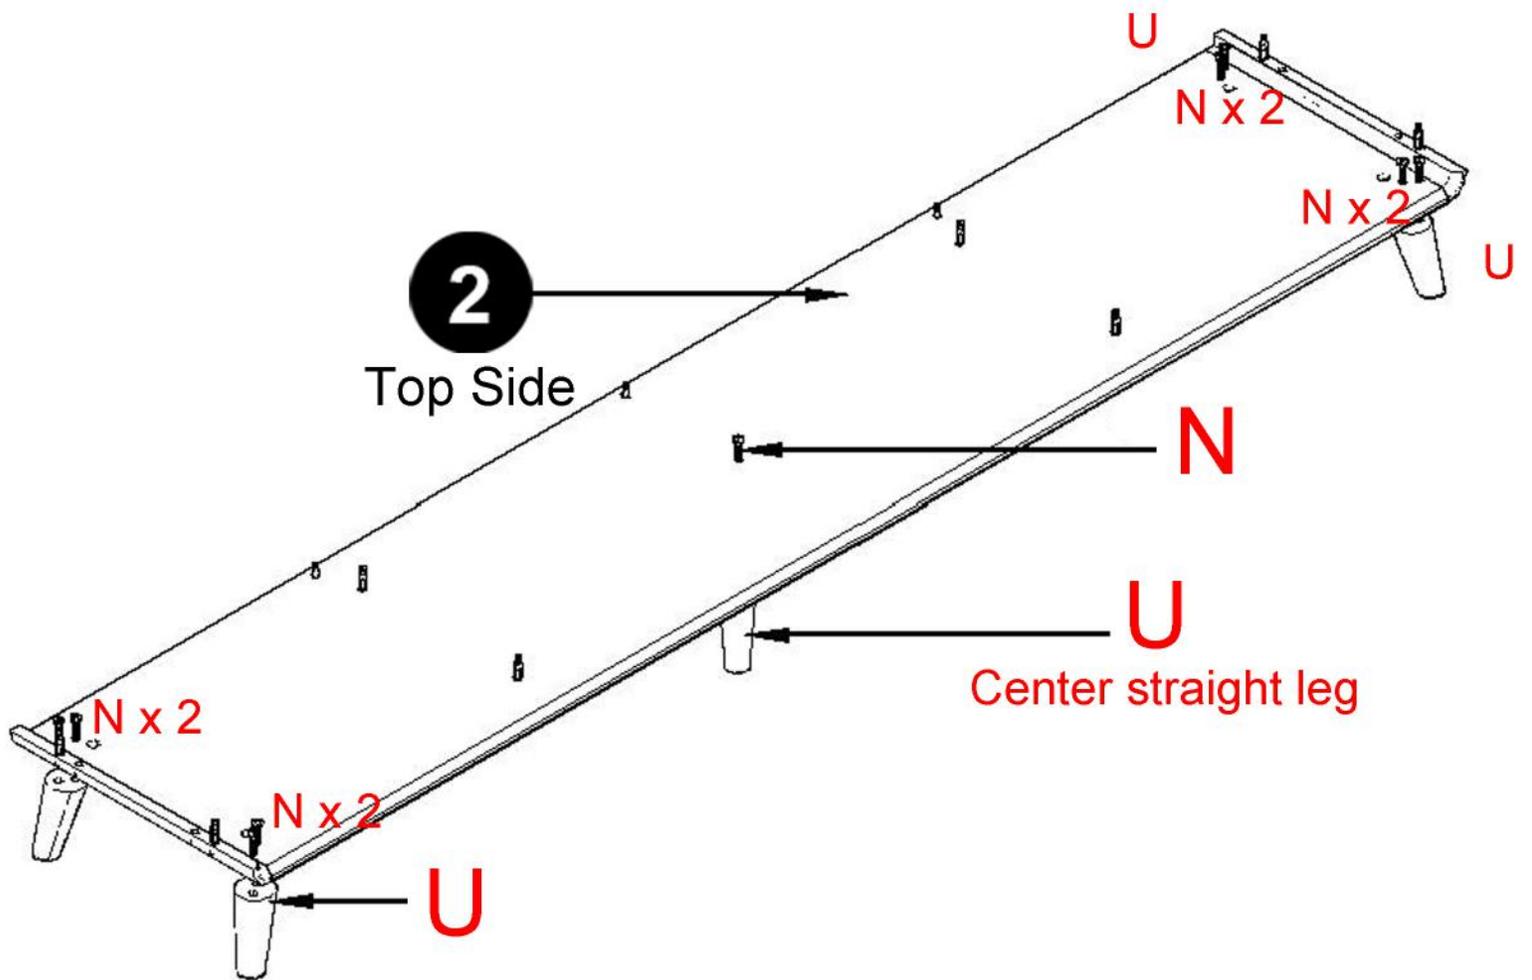


Step 6:

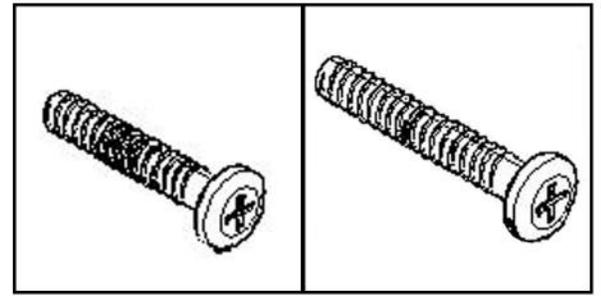


M

N

Cabinet leg installation options:
Option 2

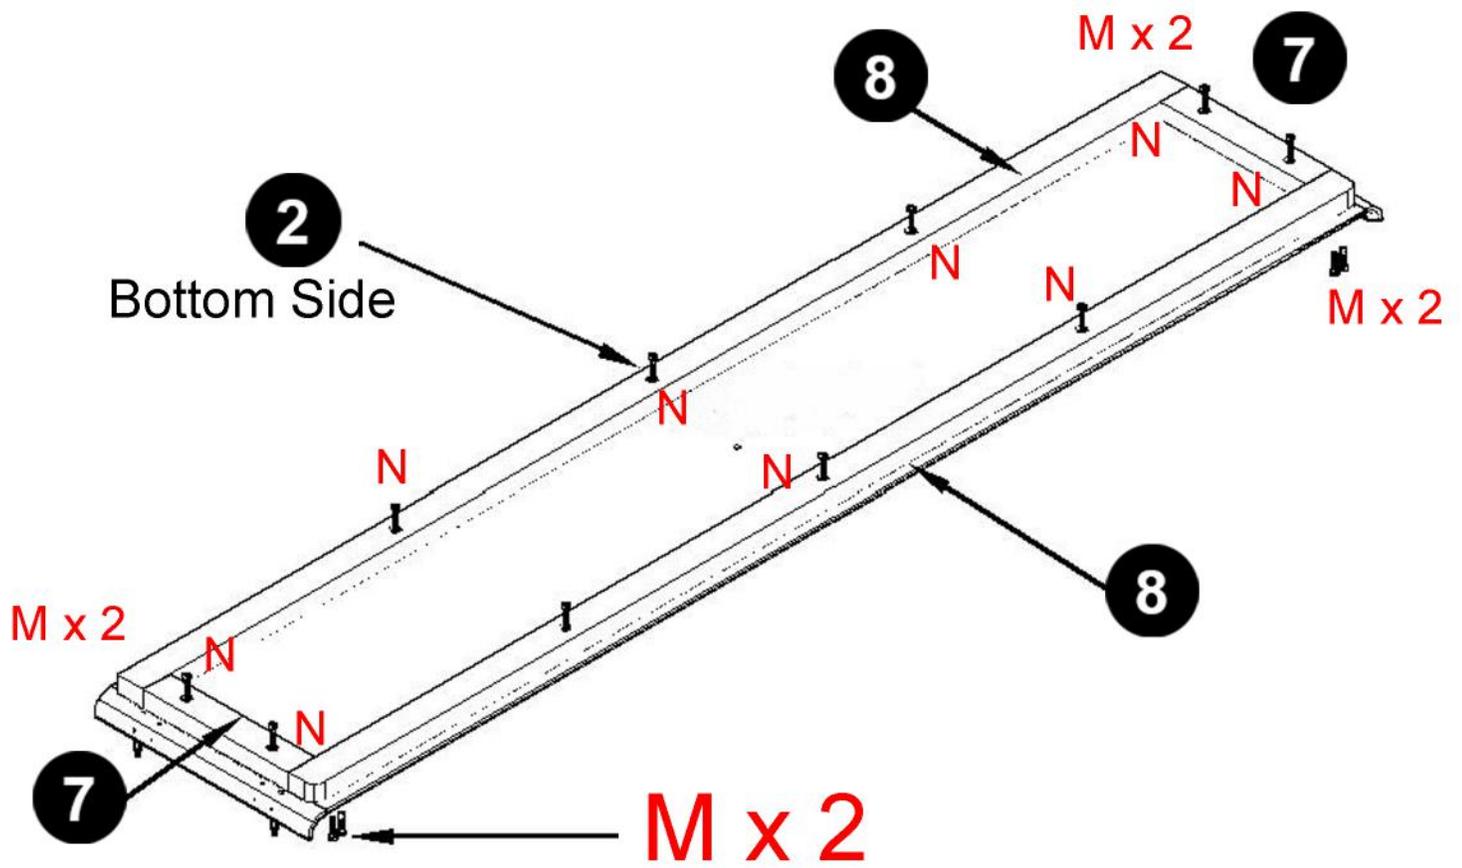


Step 7:

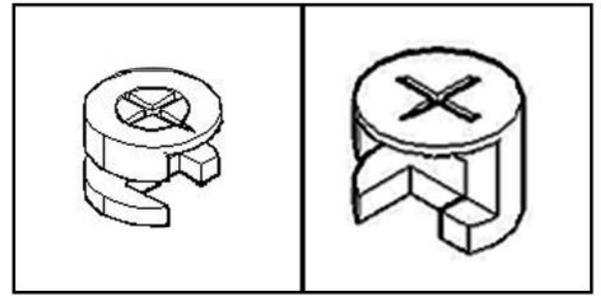

C

A

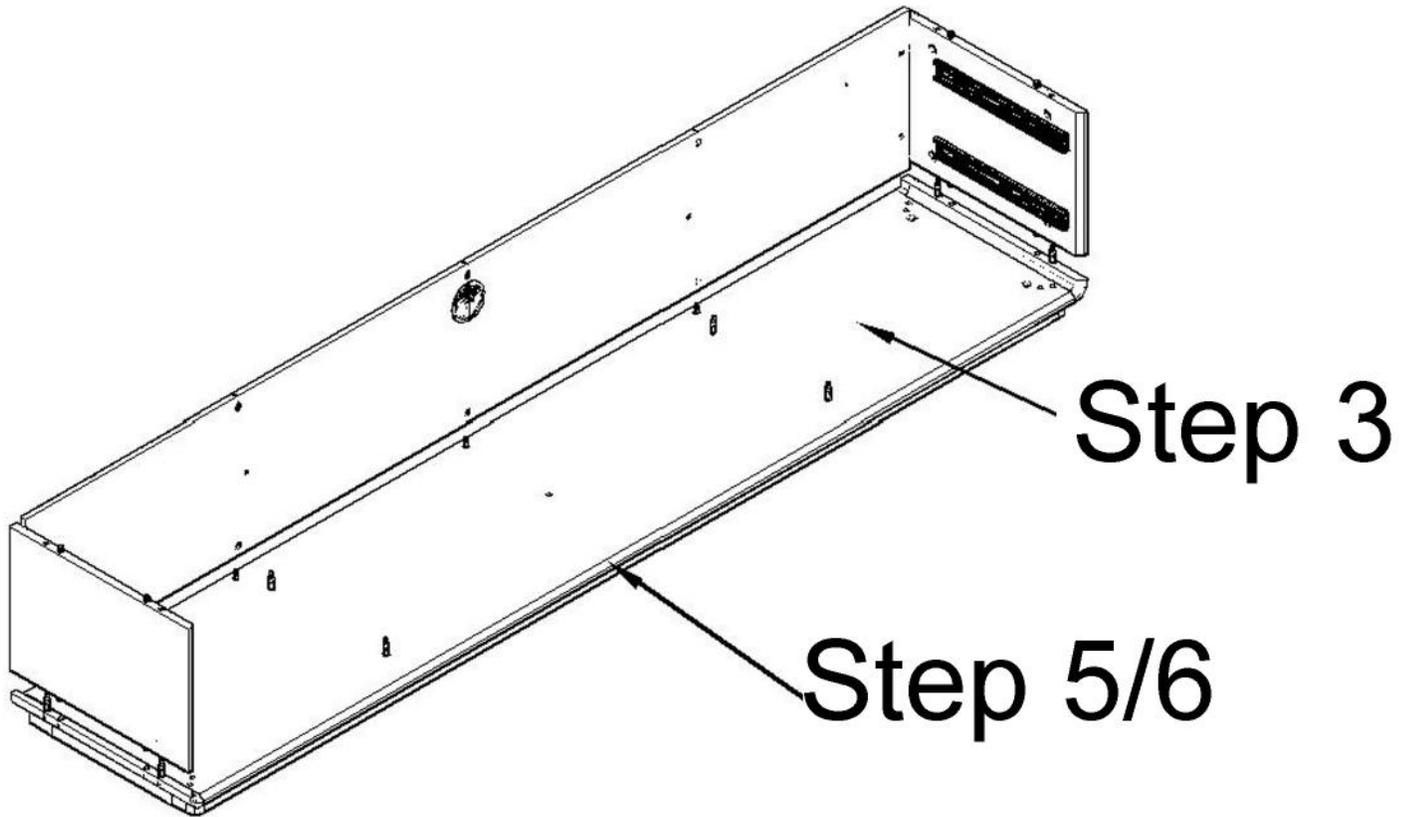


Step 3

Step 5/6


Secure with A and C

Step 8:

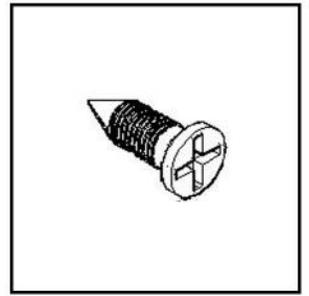


H

F the main body parts x 4

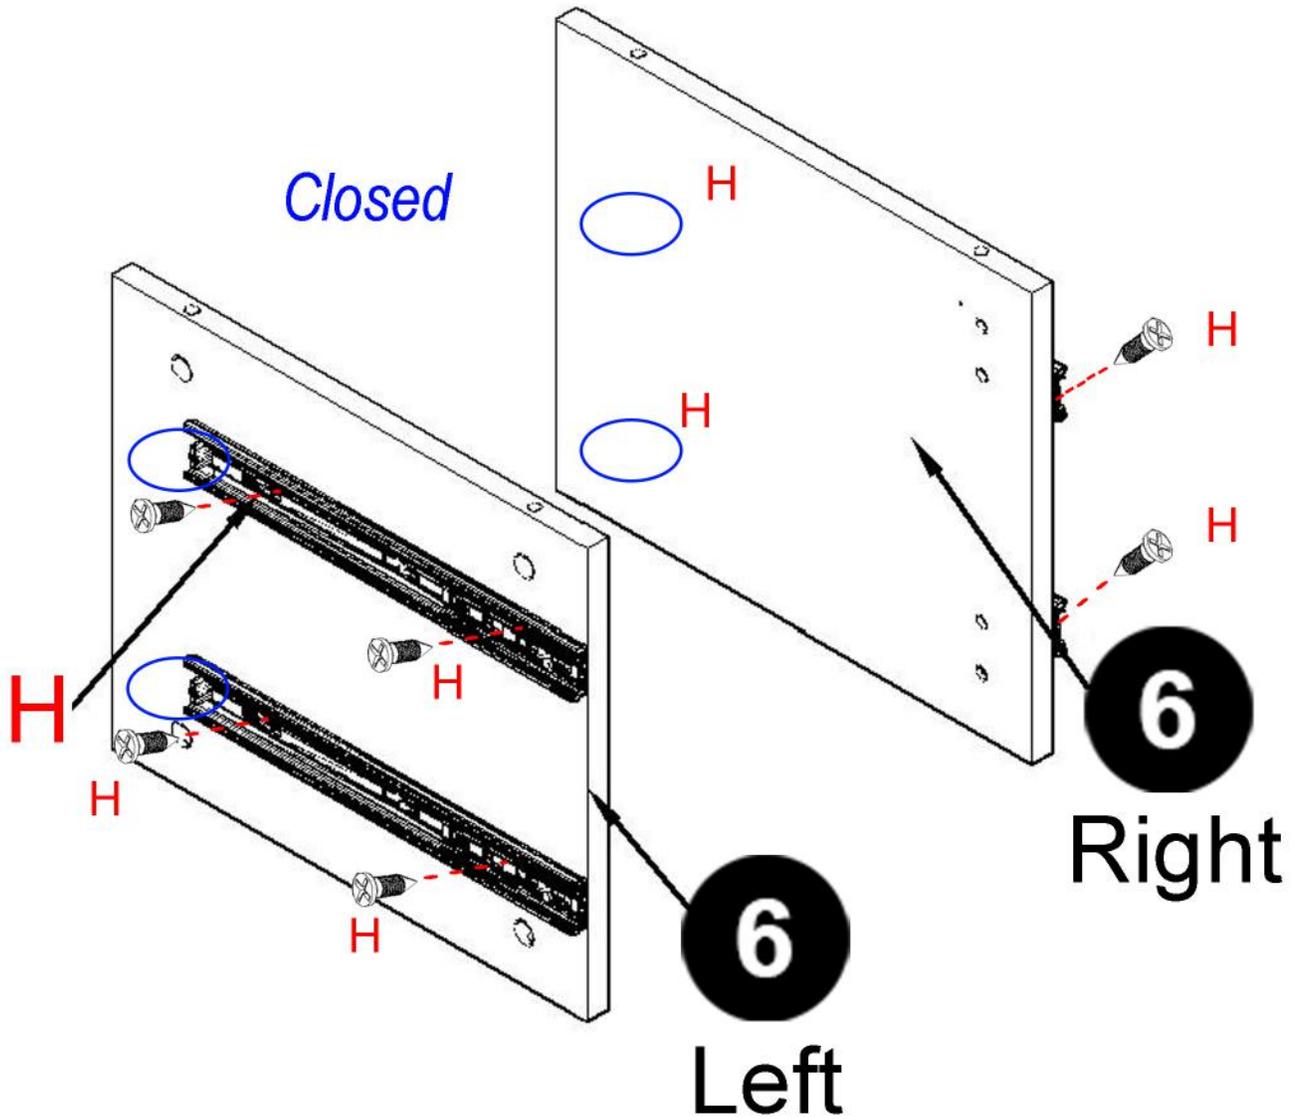


Step 9:

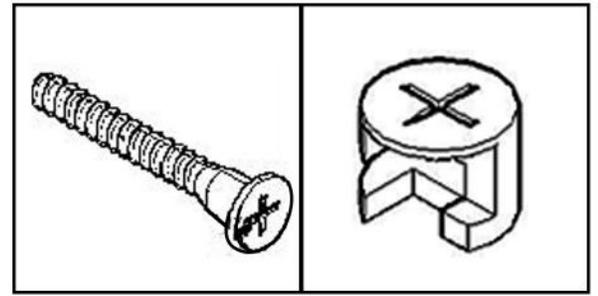

G

A

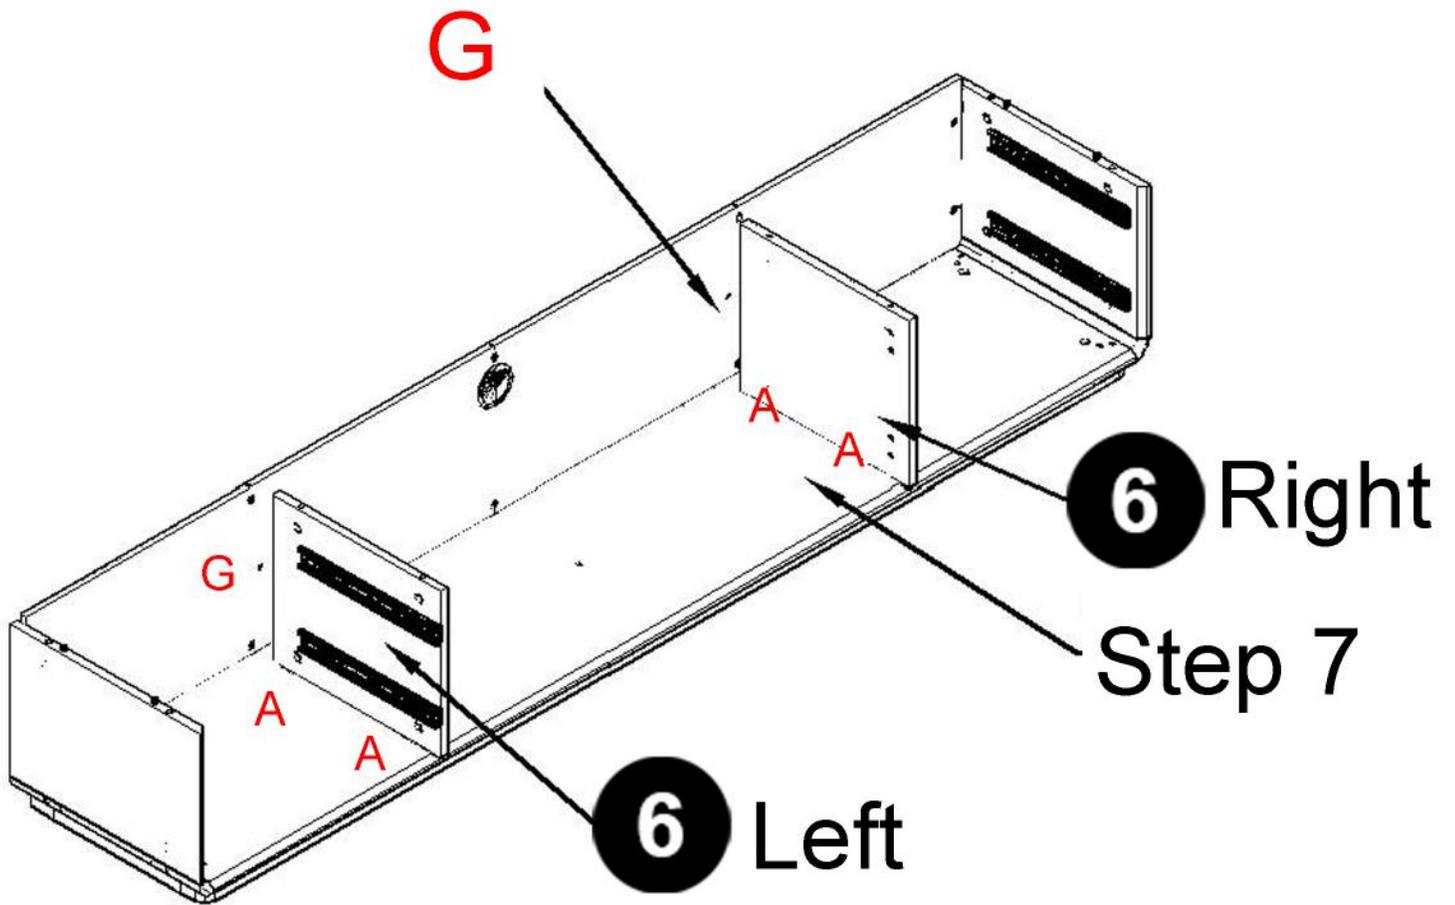


6 Left

6 Right

Step 7

Secure with A.

Step 10:

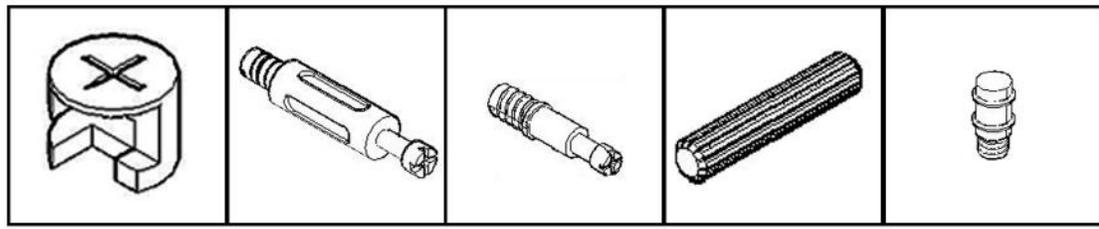


A

B

D


E

R

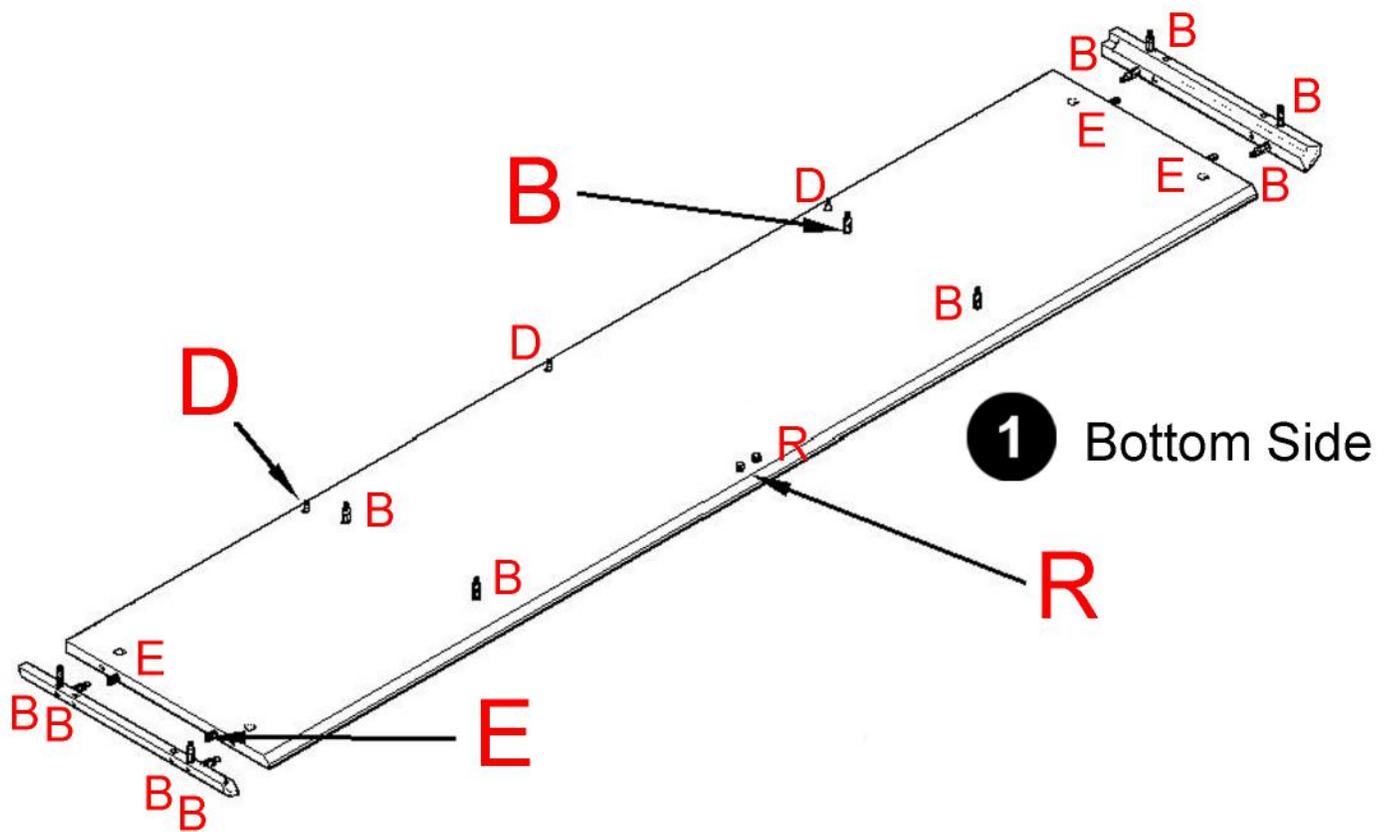


Secure with A.

Step 11:

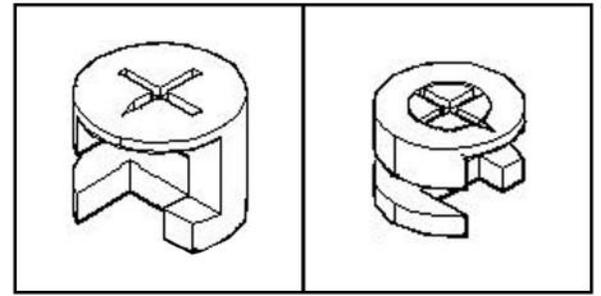

A


C

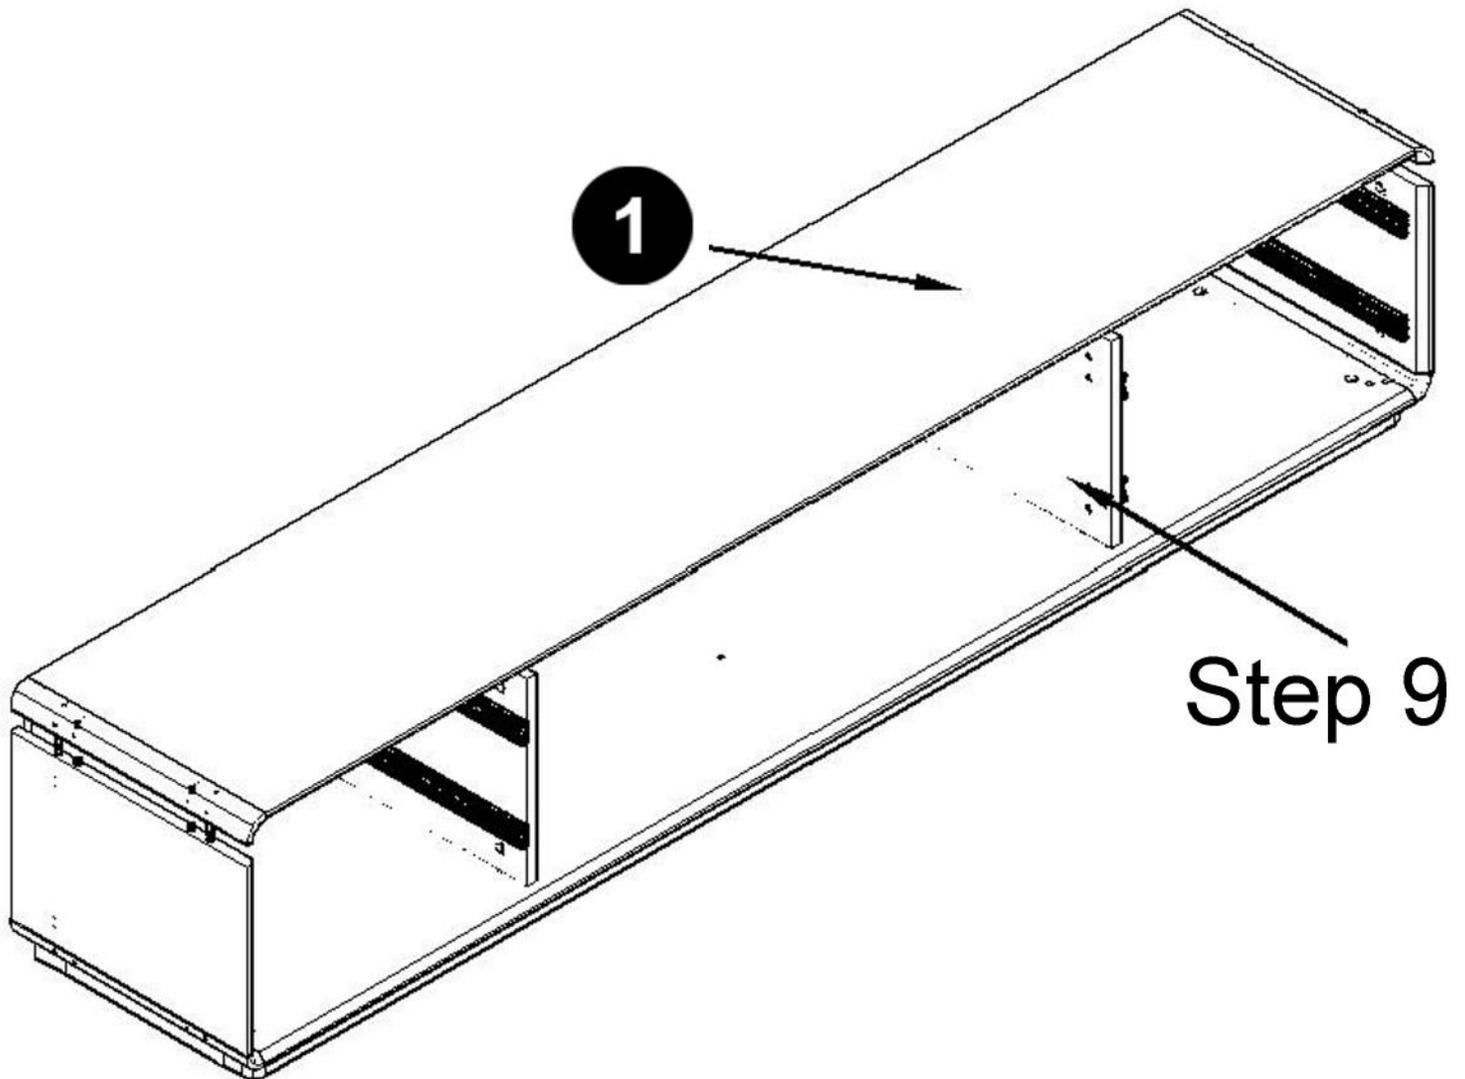

Step 9


Secure with A and C.

Step 12:

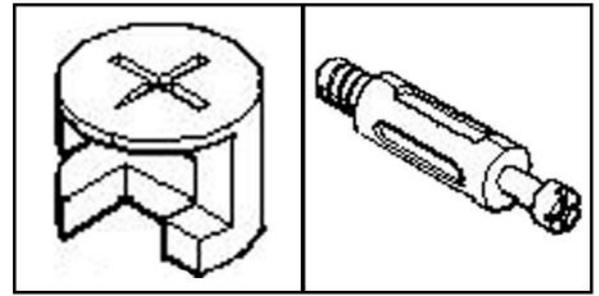



A

B

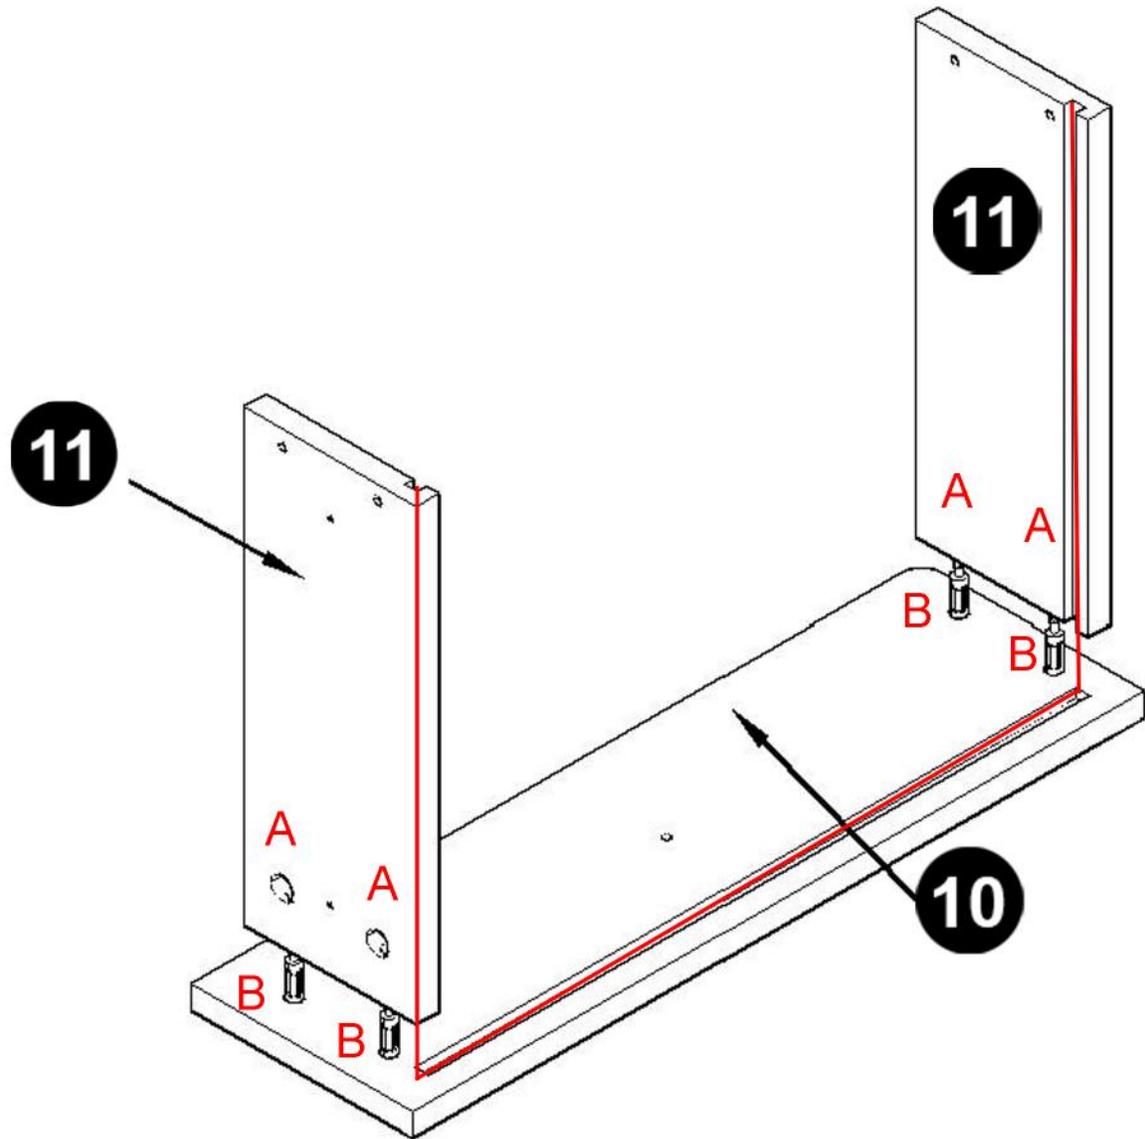


Ensure the grooves on all three sides are aligned. Secure with A.

Step 13:

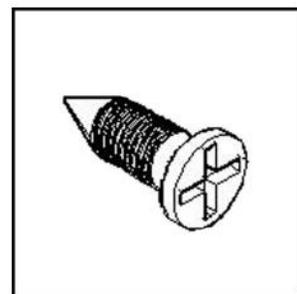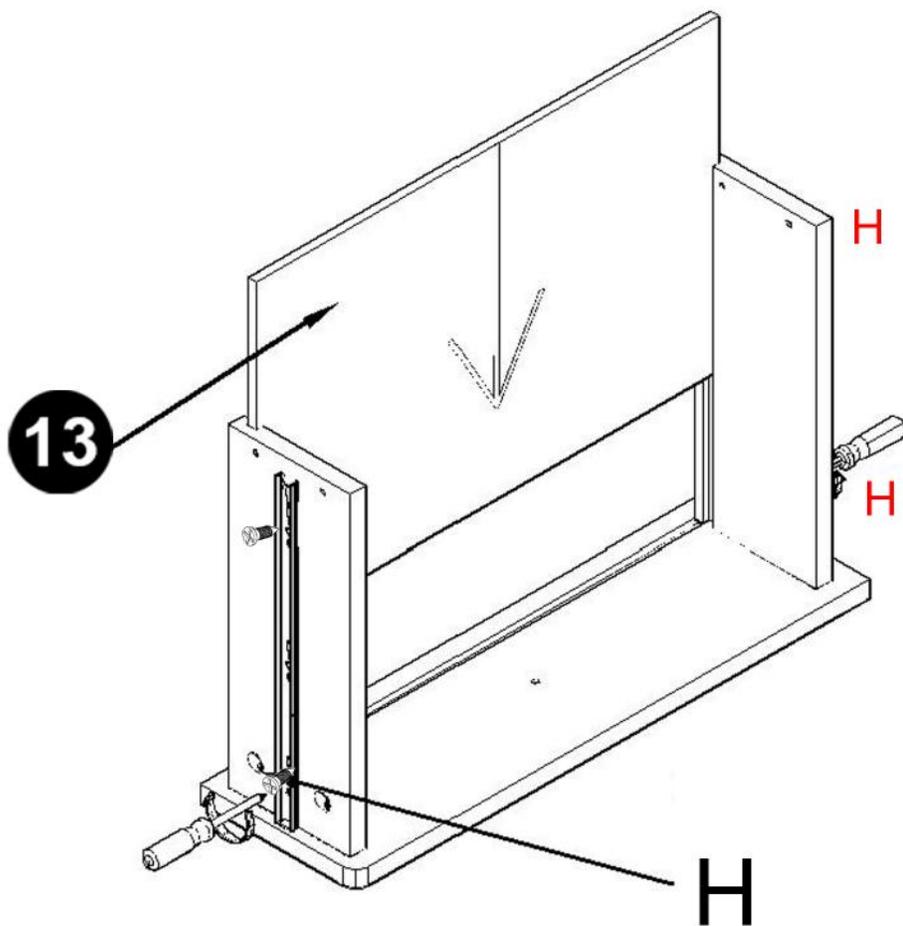


H

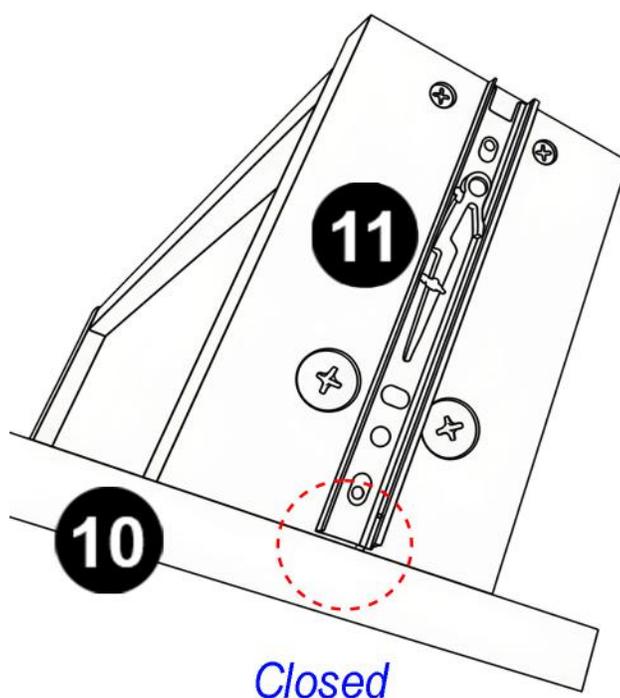

Note: The F pull-out part should be positioned with the closed side close to Panel No.10.


Step 14:

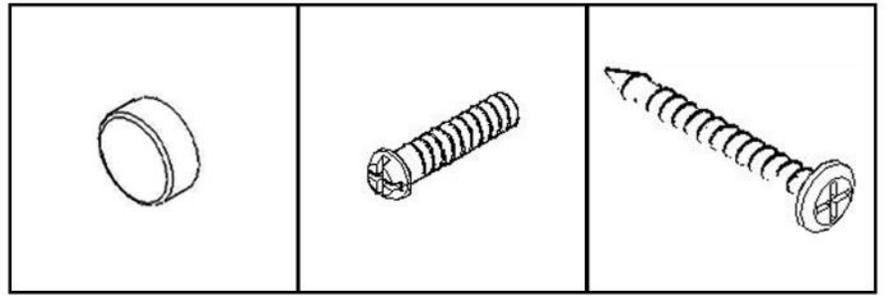


O

Q

I

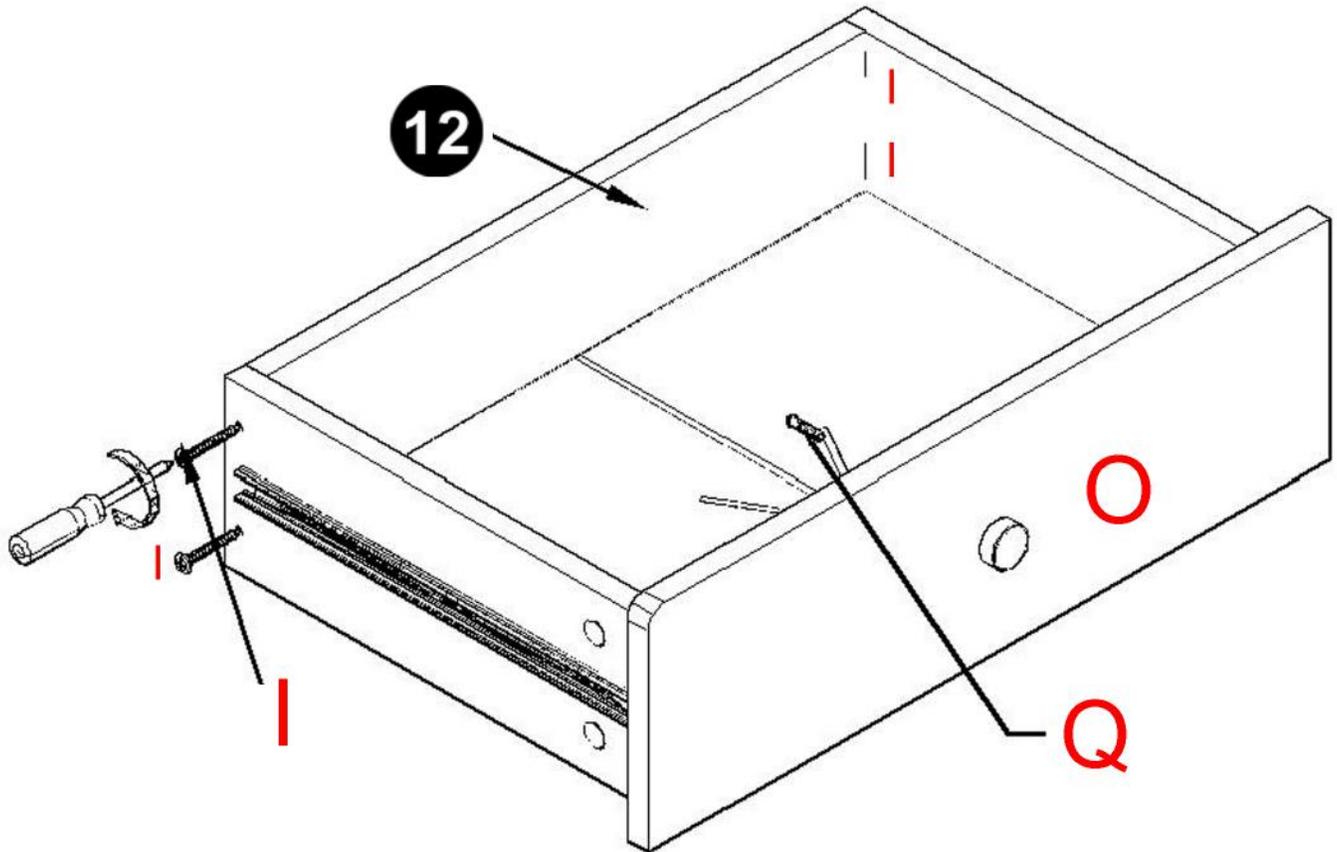


Step 15:

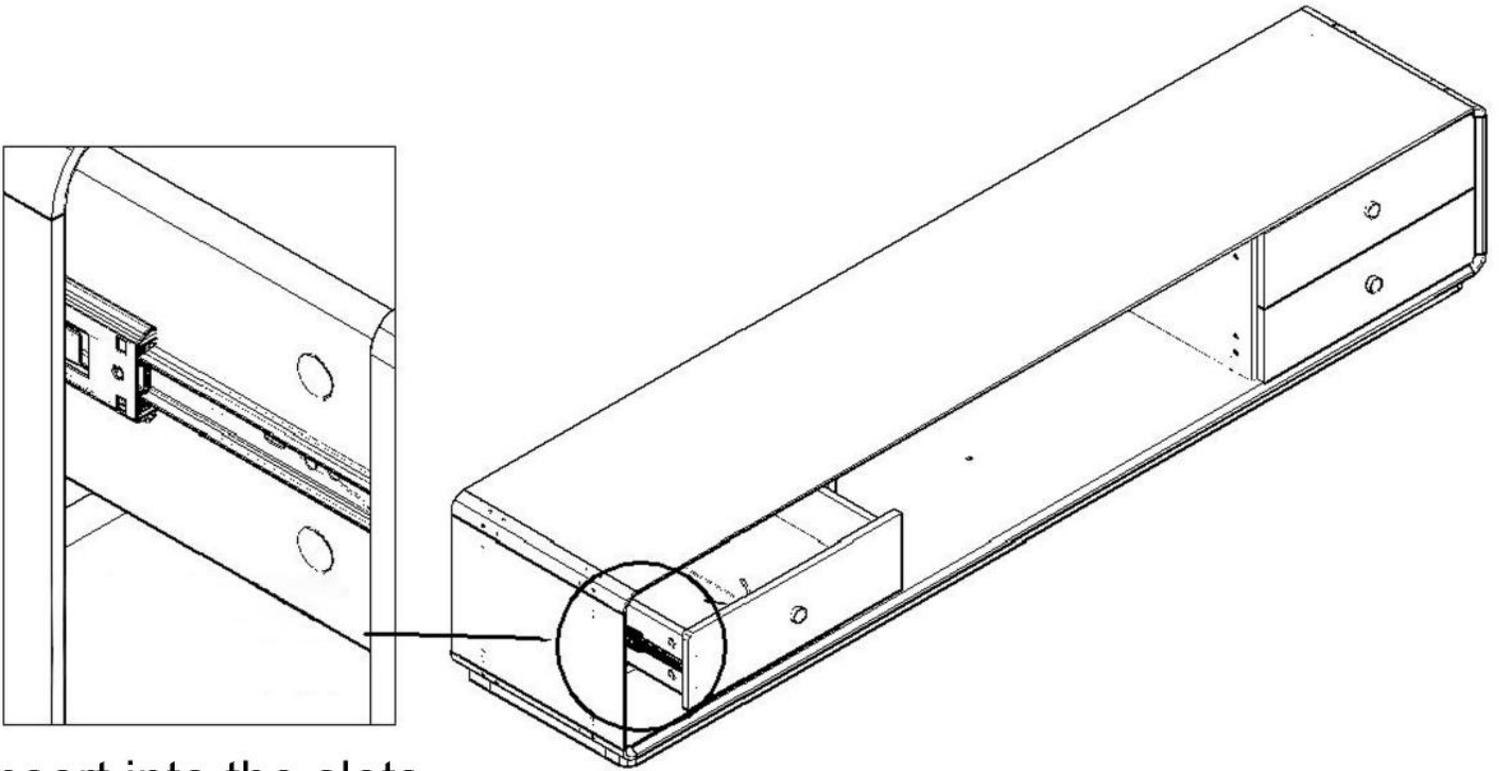


Insert into the slots
on both sides
simultaneously

Step 16:

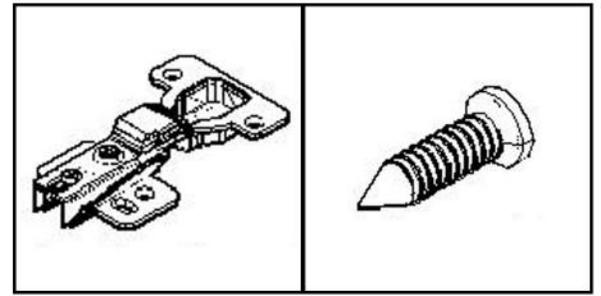

J

L

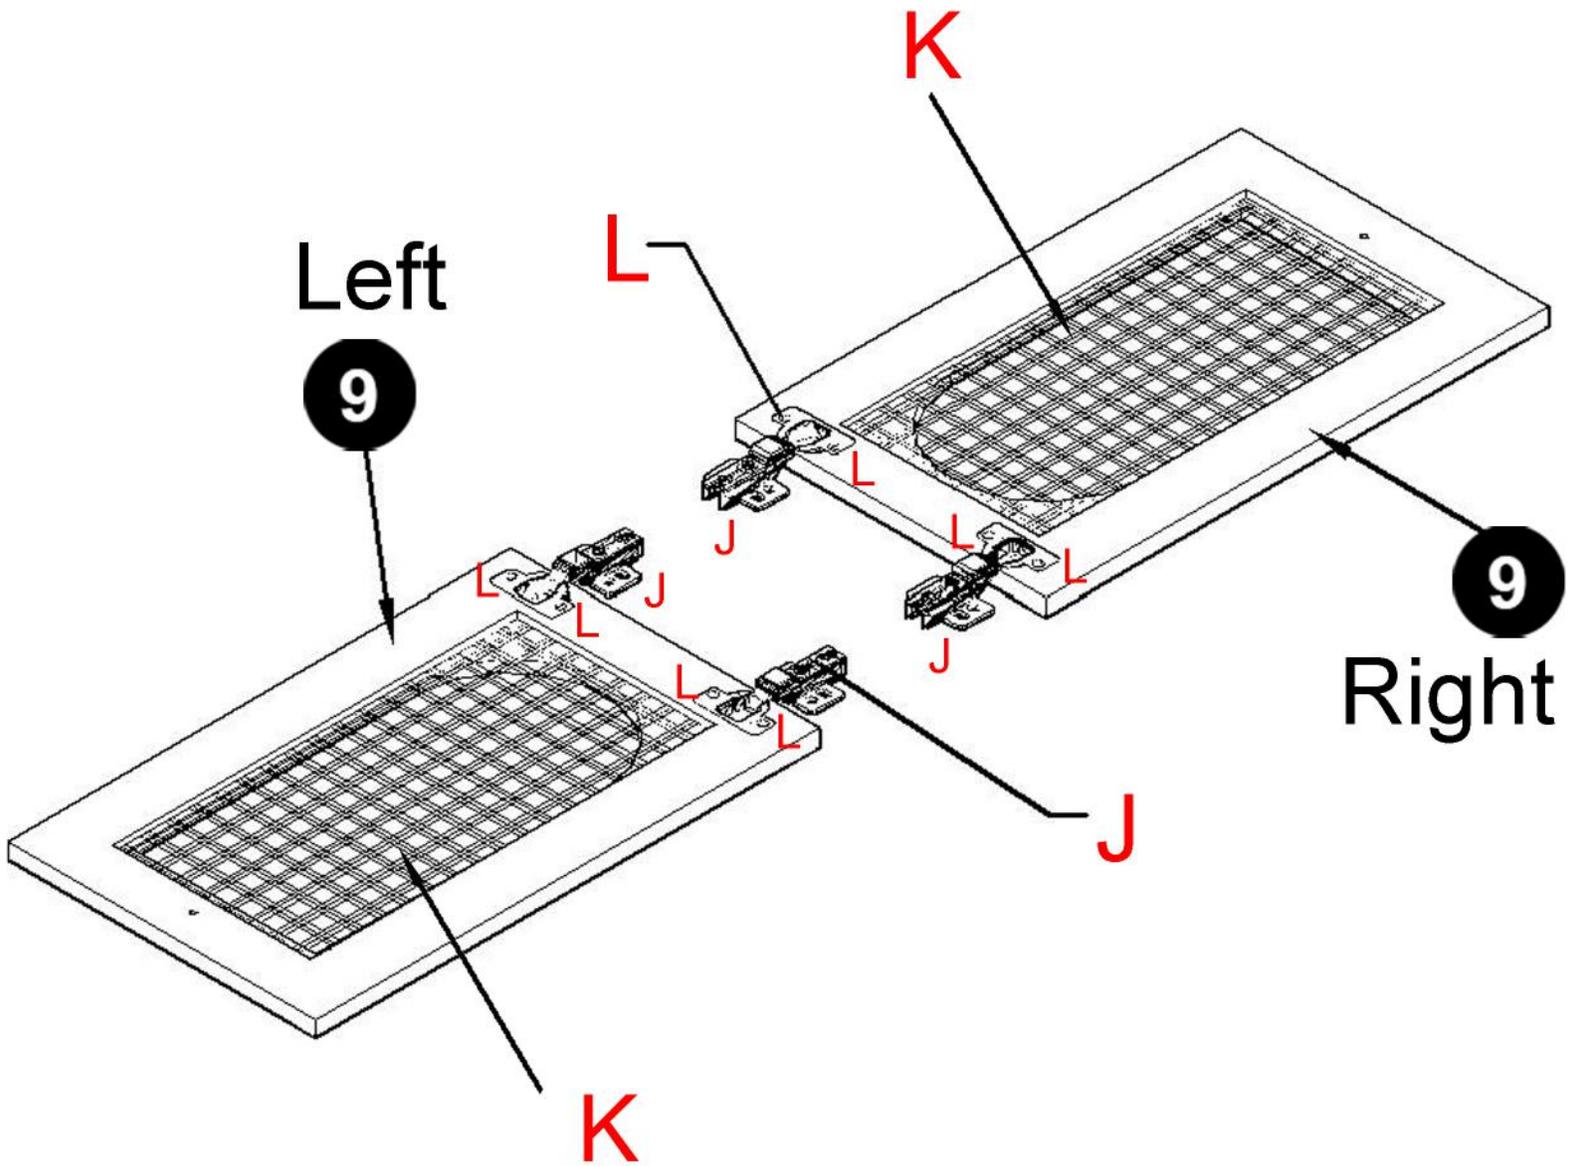

Left

9

K

L

J

J


9

Right

J

K


Step 17:

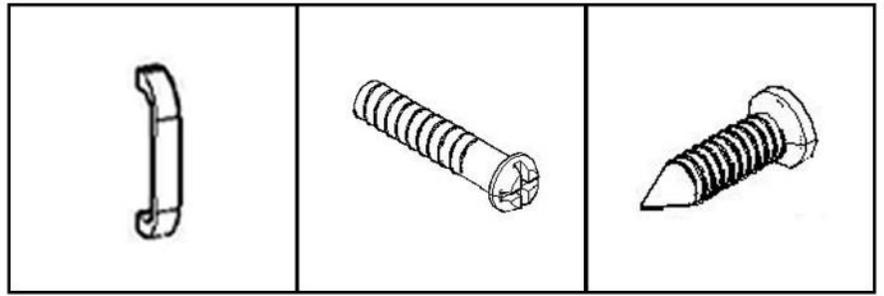

P

J

L

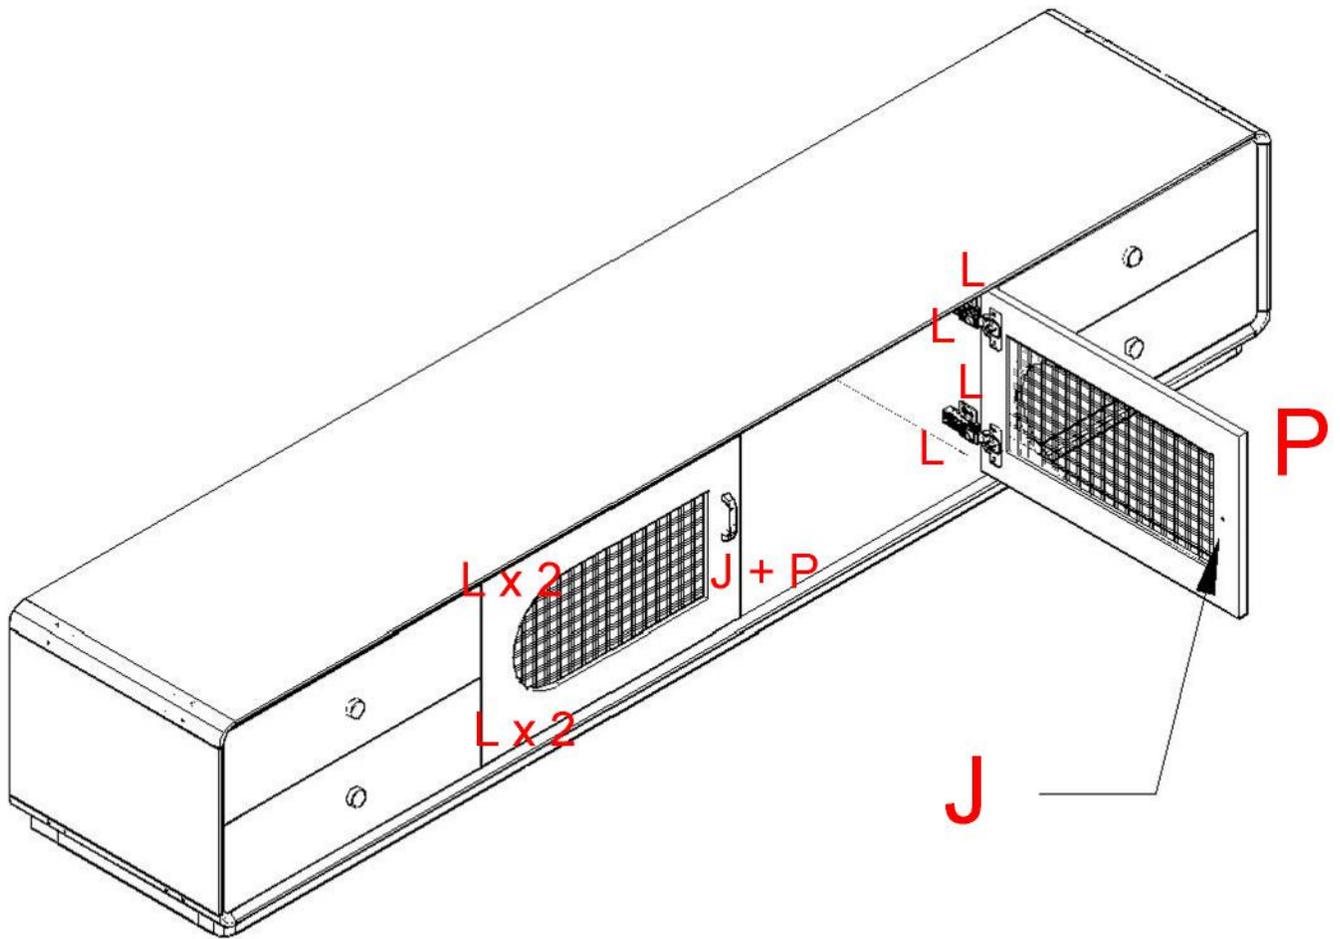

Installation finished

