


BS042-4T

Installation Instruction

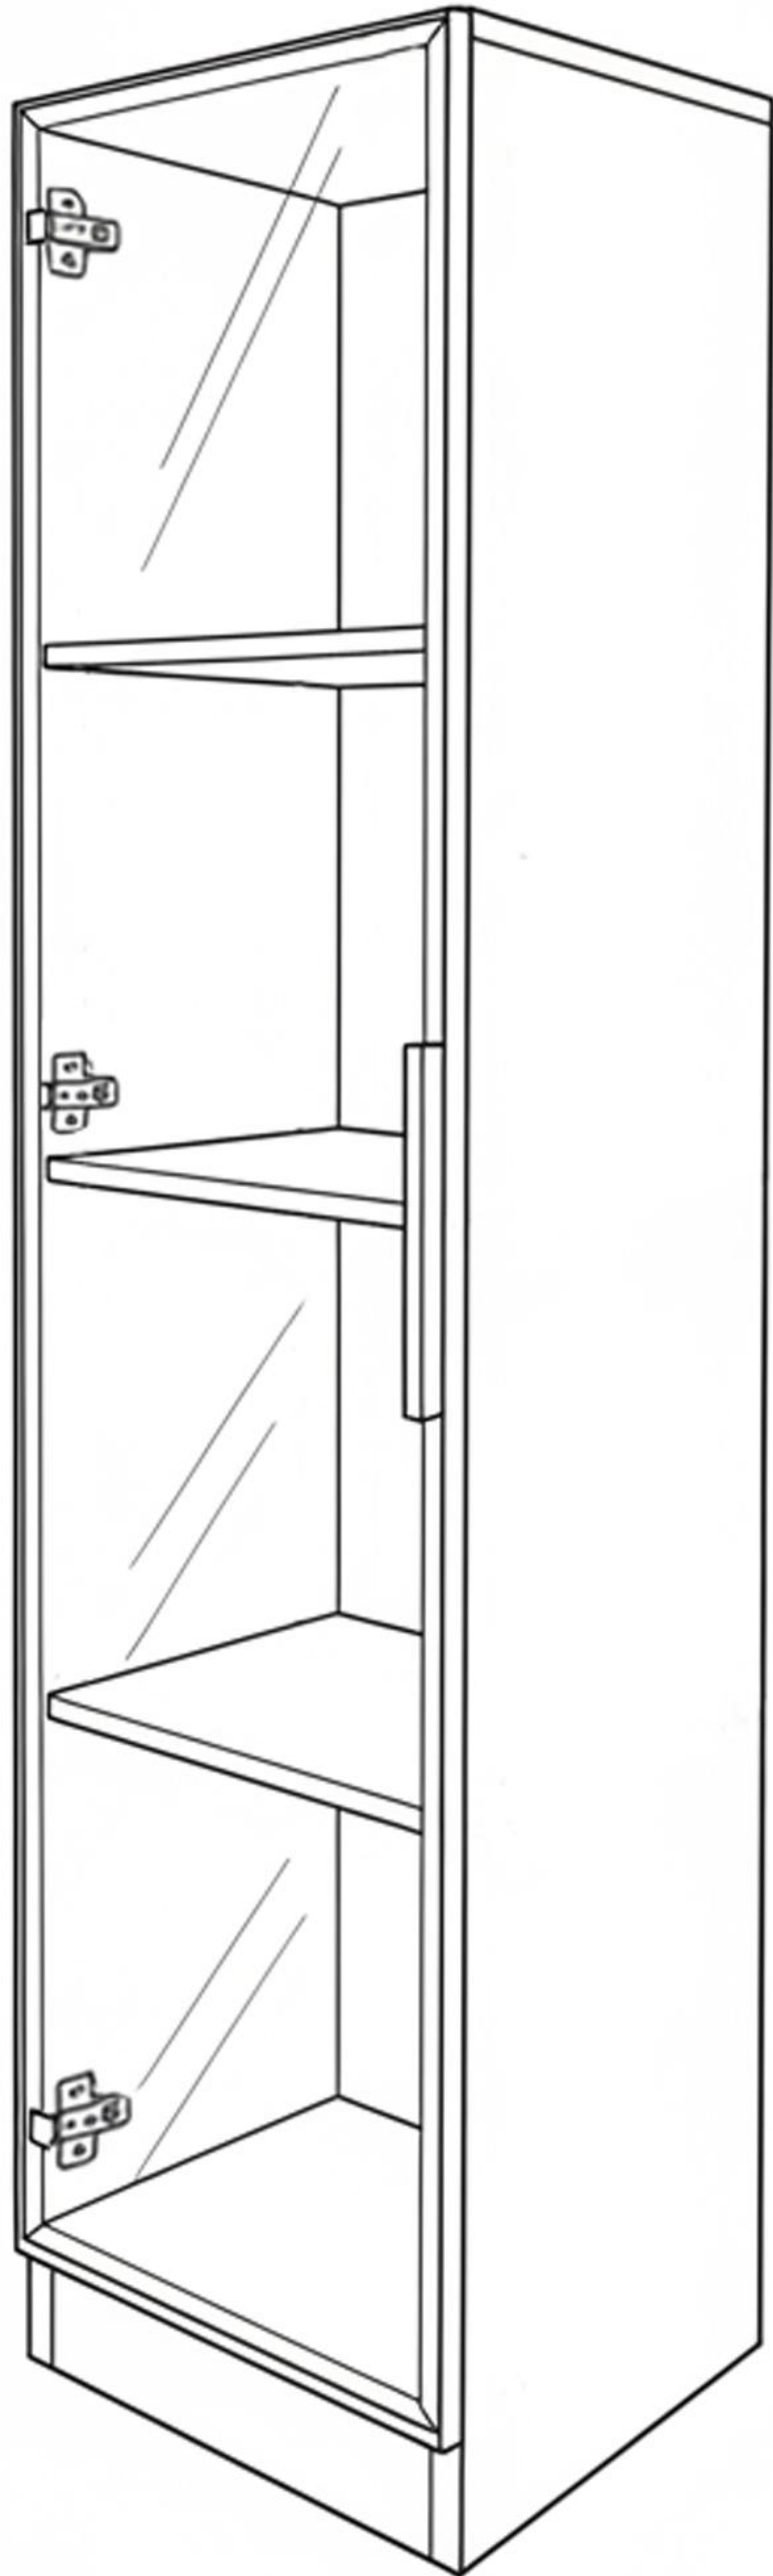

Please read this instruction manual carefully before installation and use.


Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:






1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

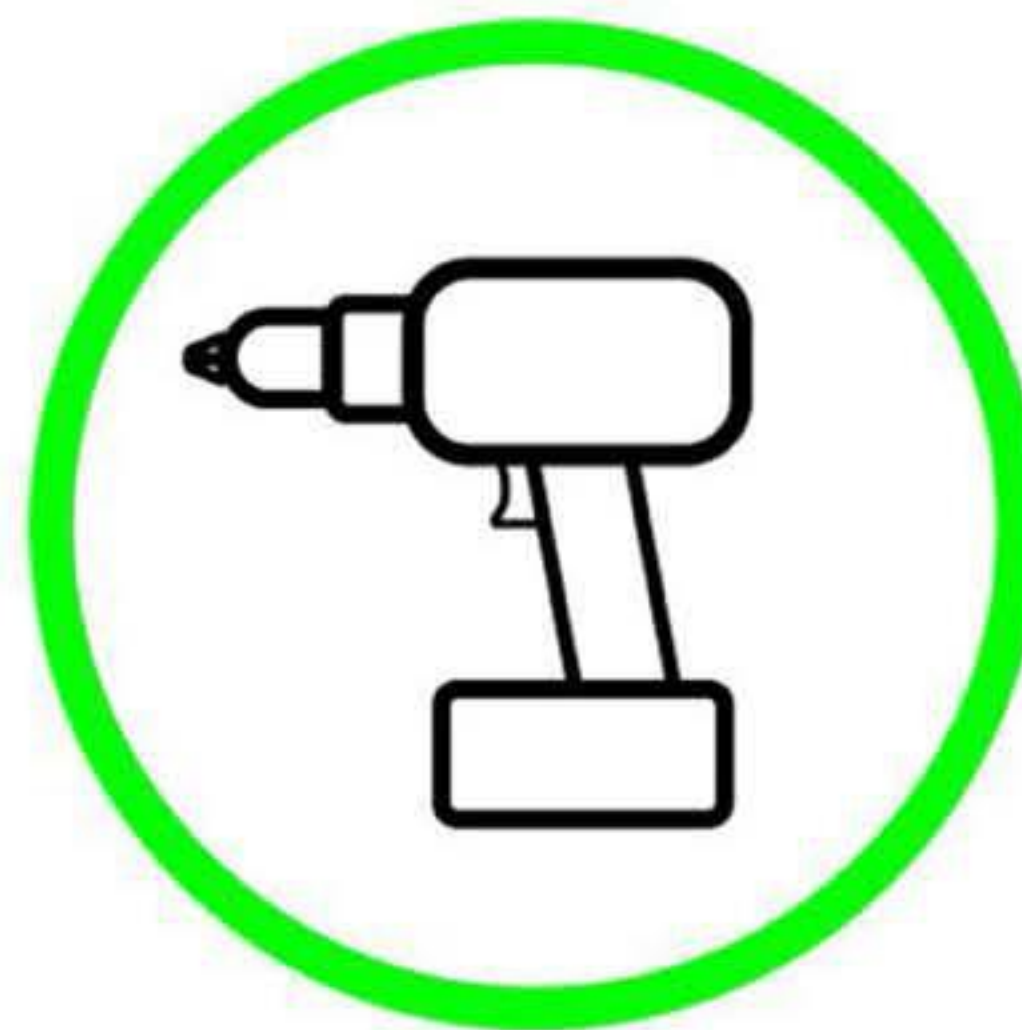


Scan the code to purchase ES001

Hardware List

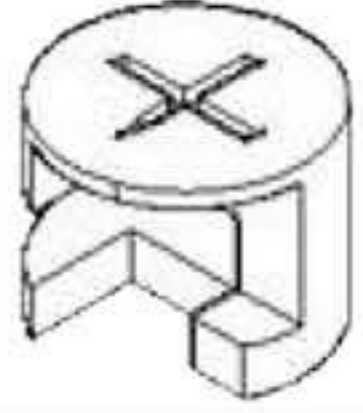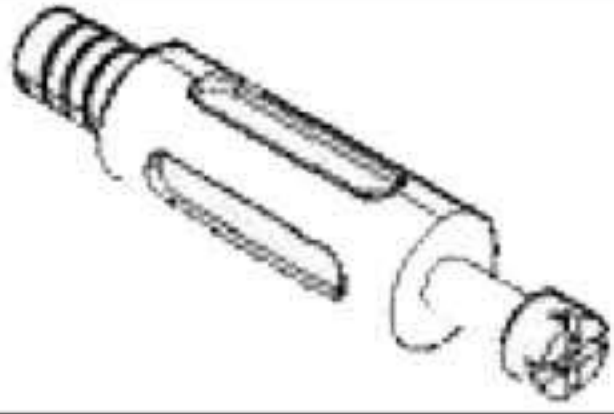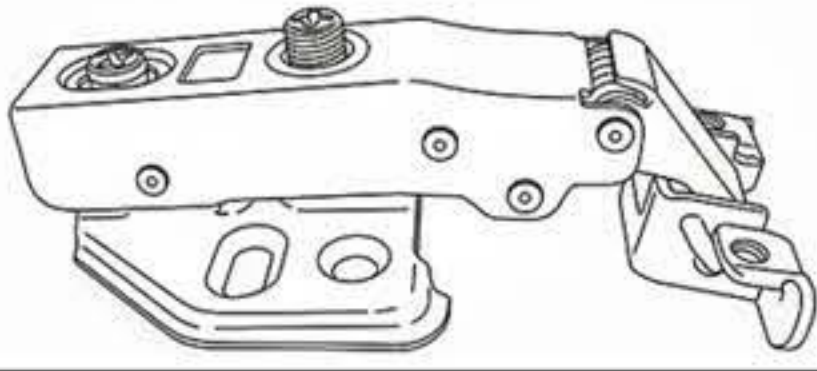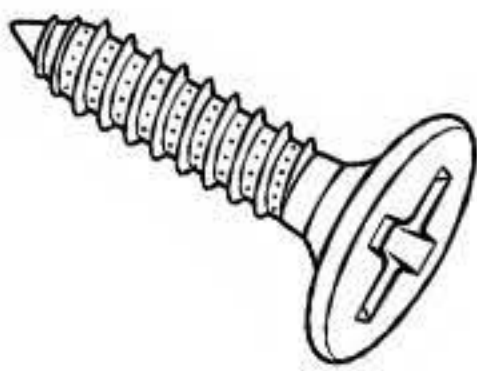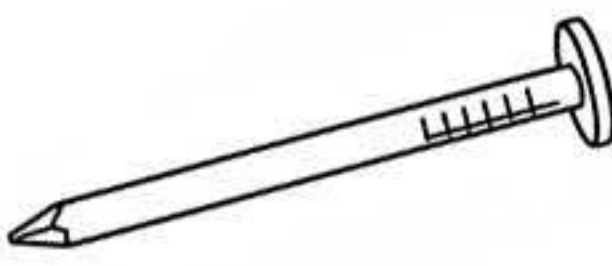Accessory Appearance	Code	Accessory Appearance	Code
	A	 Black	D
	B		E
 Black	C		F


Detailed description of the main components, please read carefully
Hinge Installation Instructions

1.

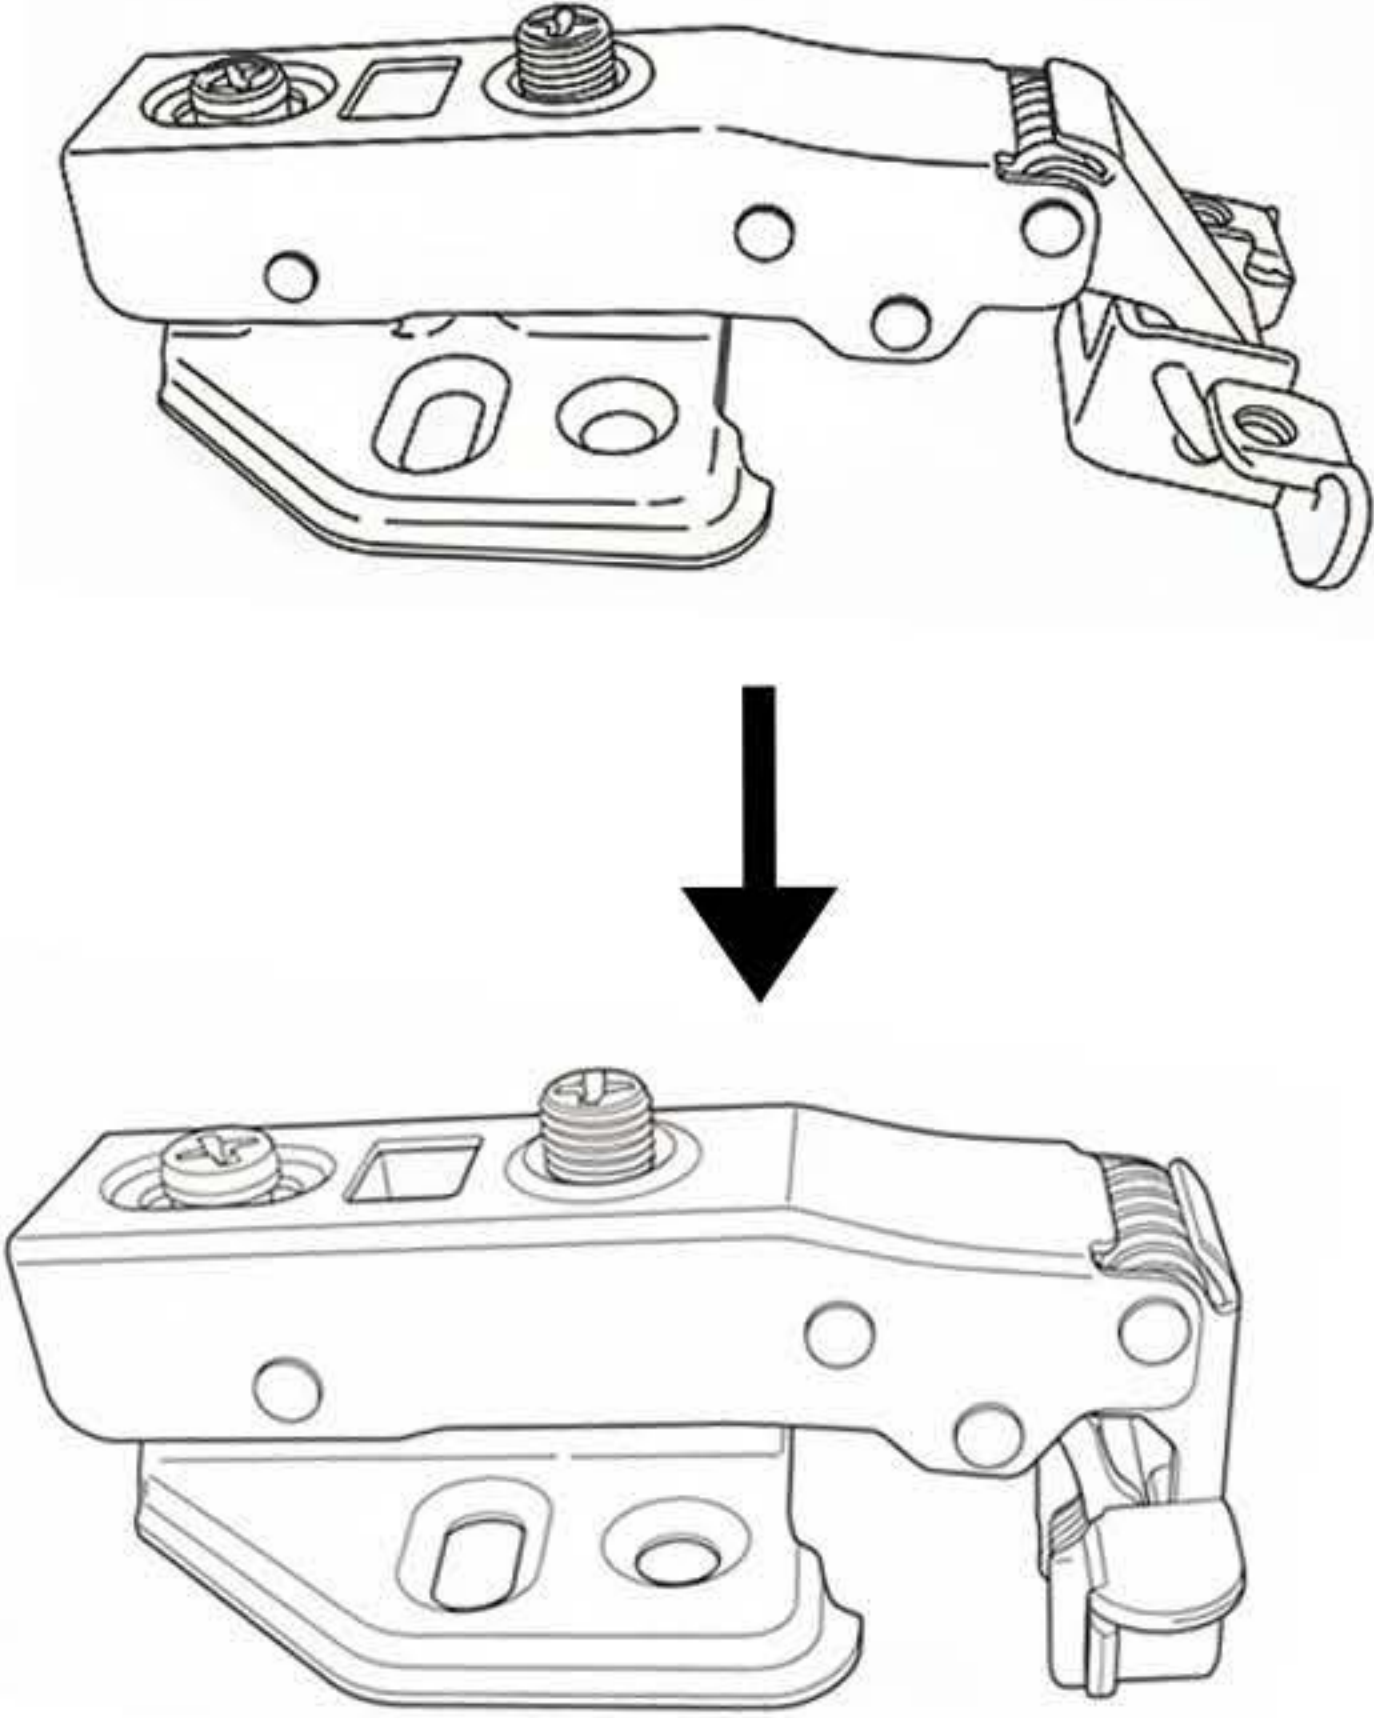


Fold the hinges as shown in the diagram.

2.

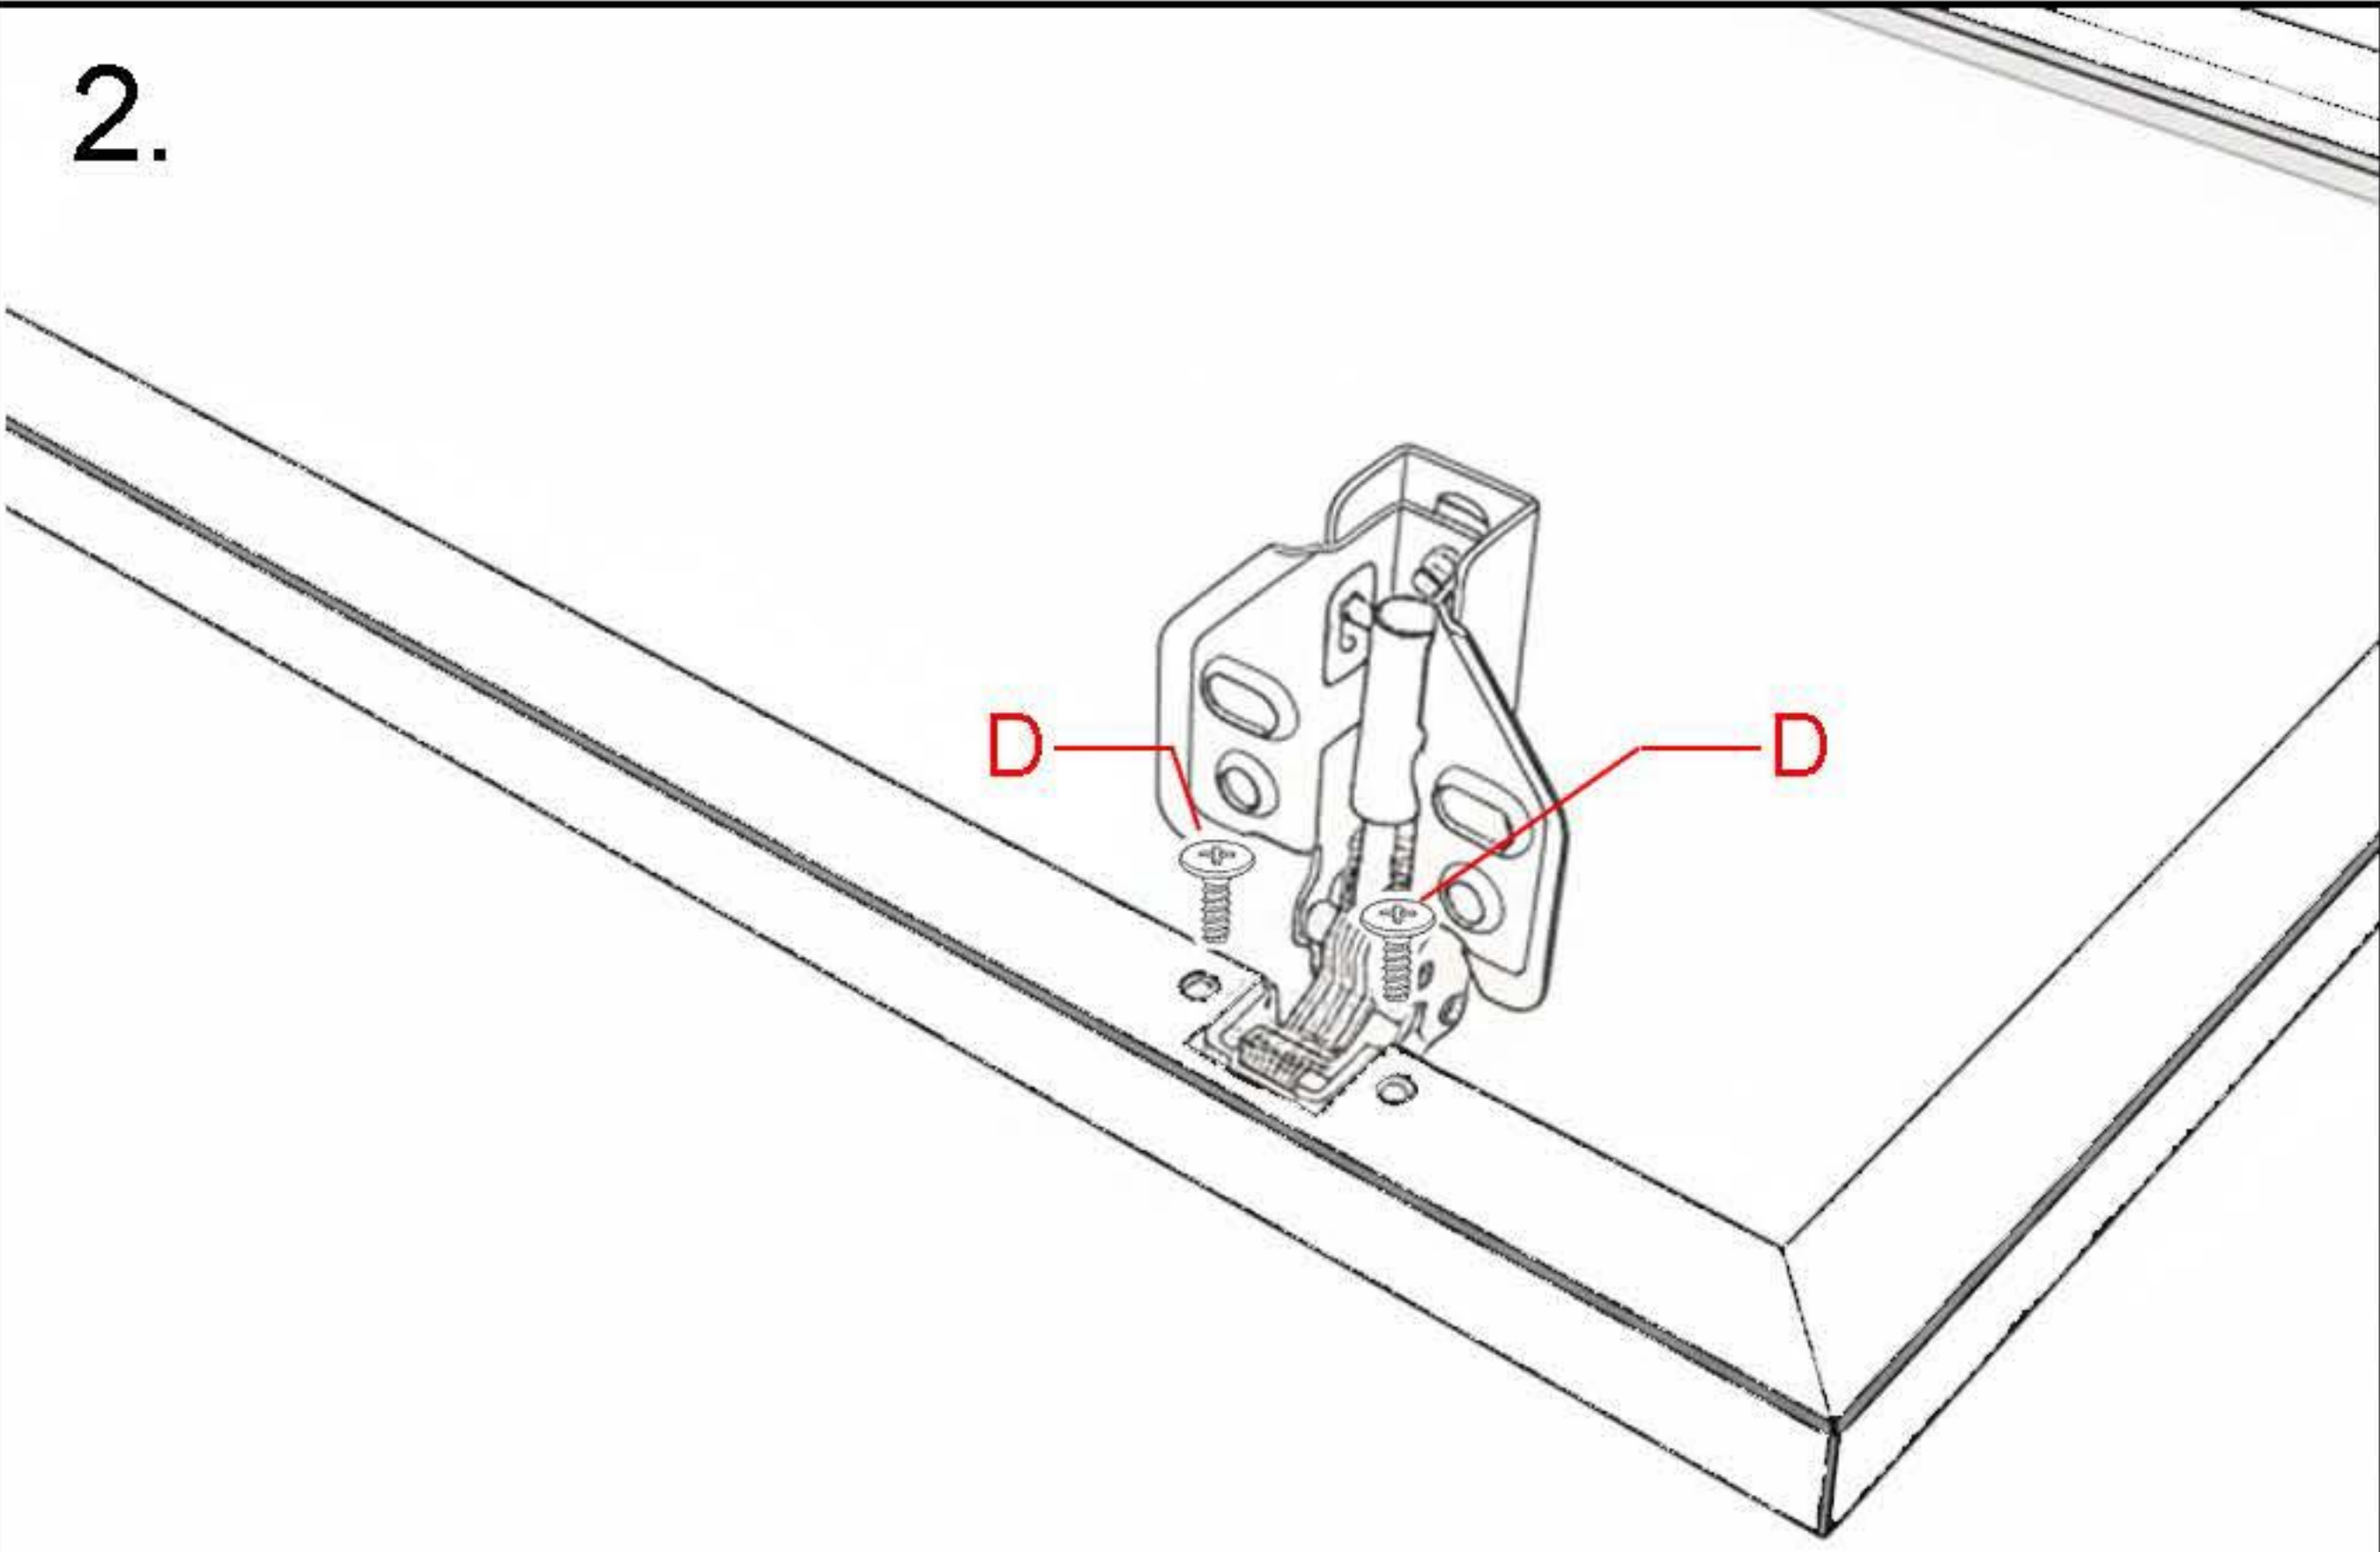


Install the hinge onto the door and ensure it is secure.

3.

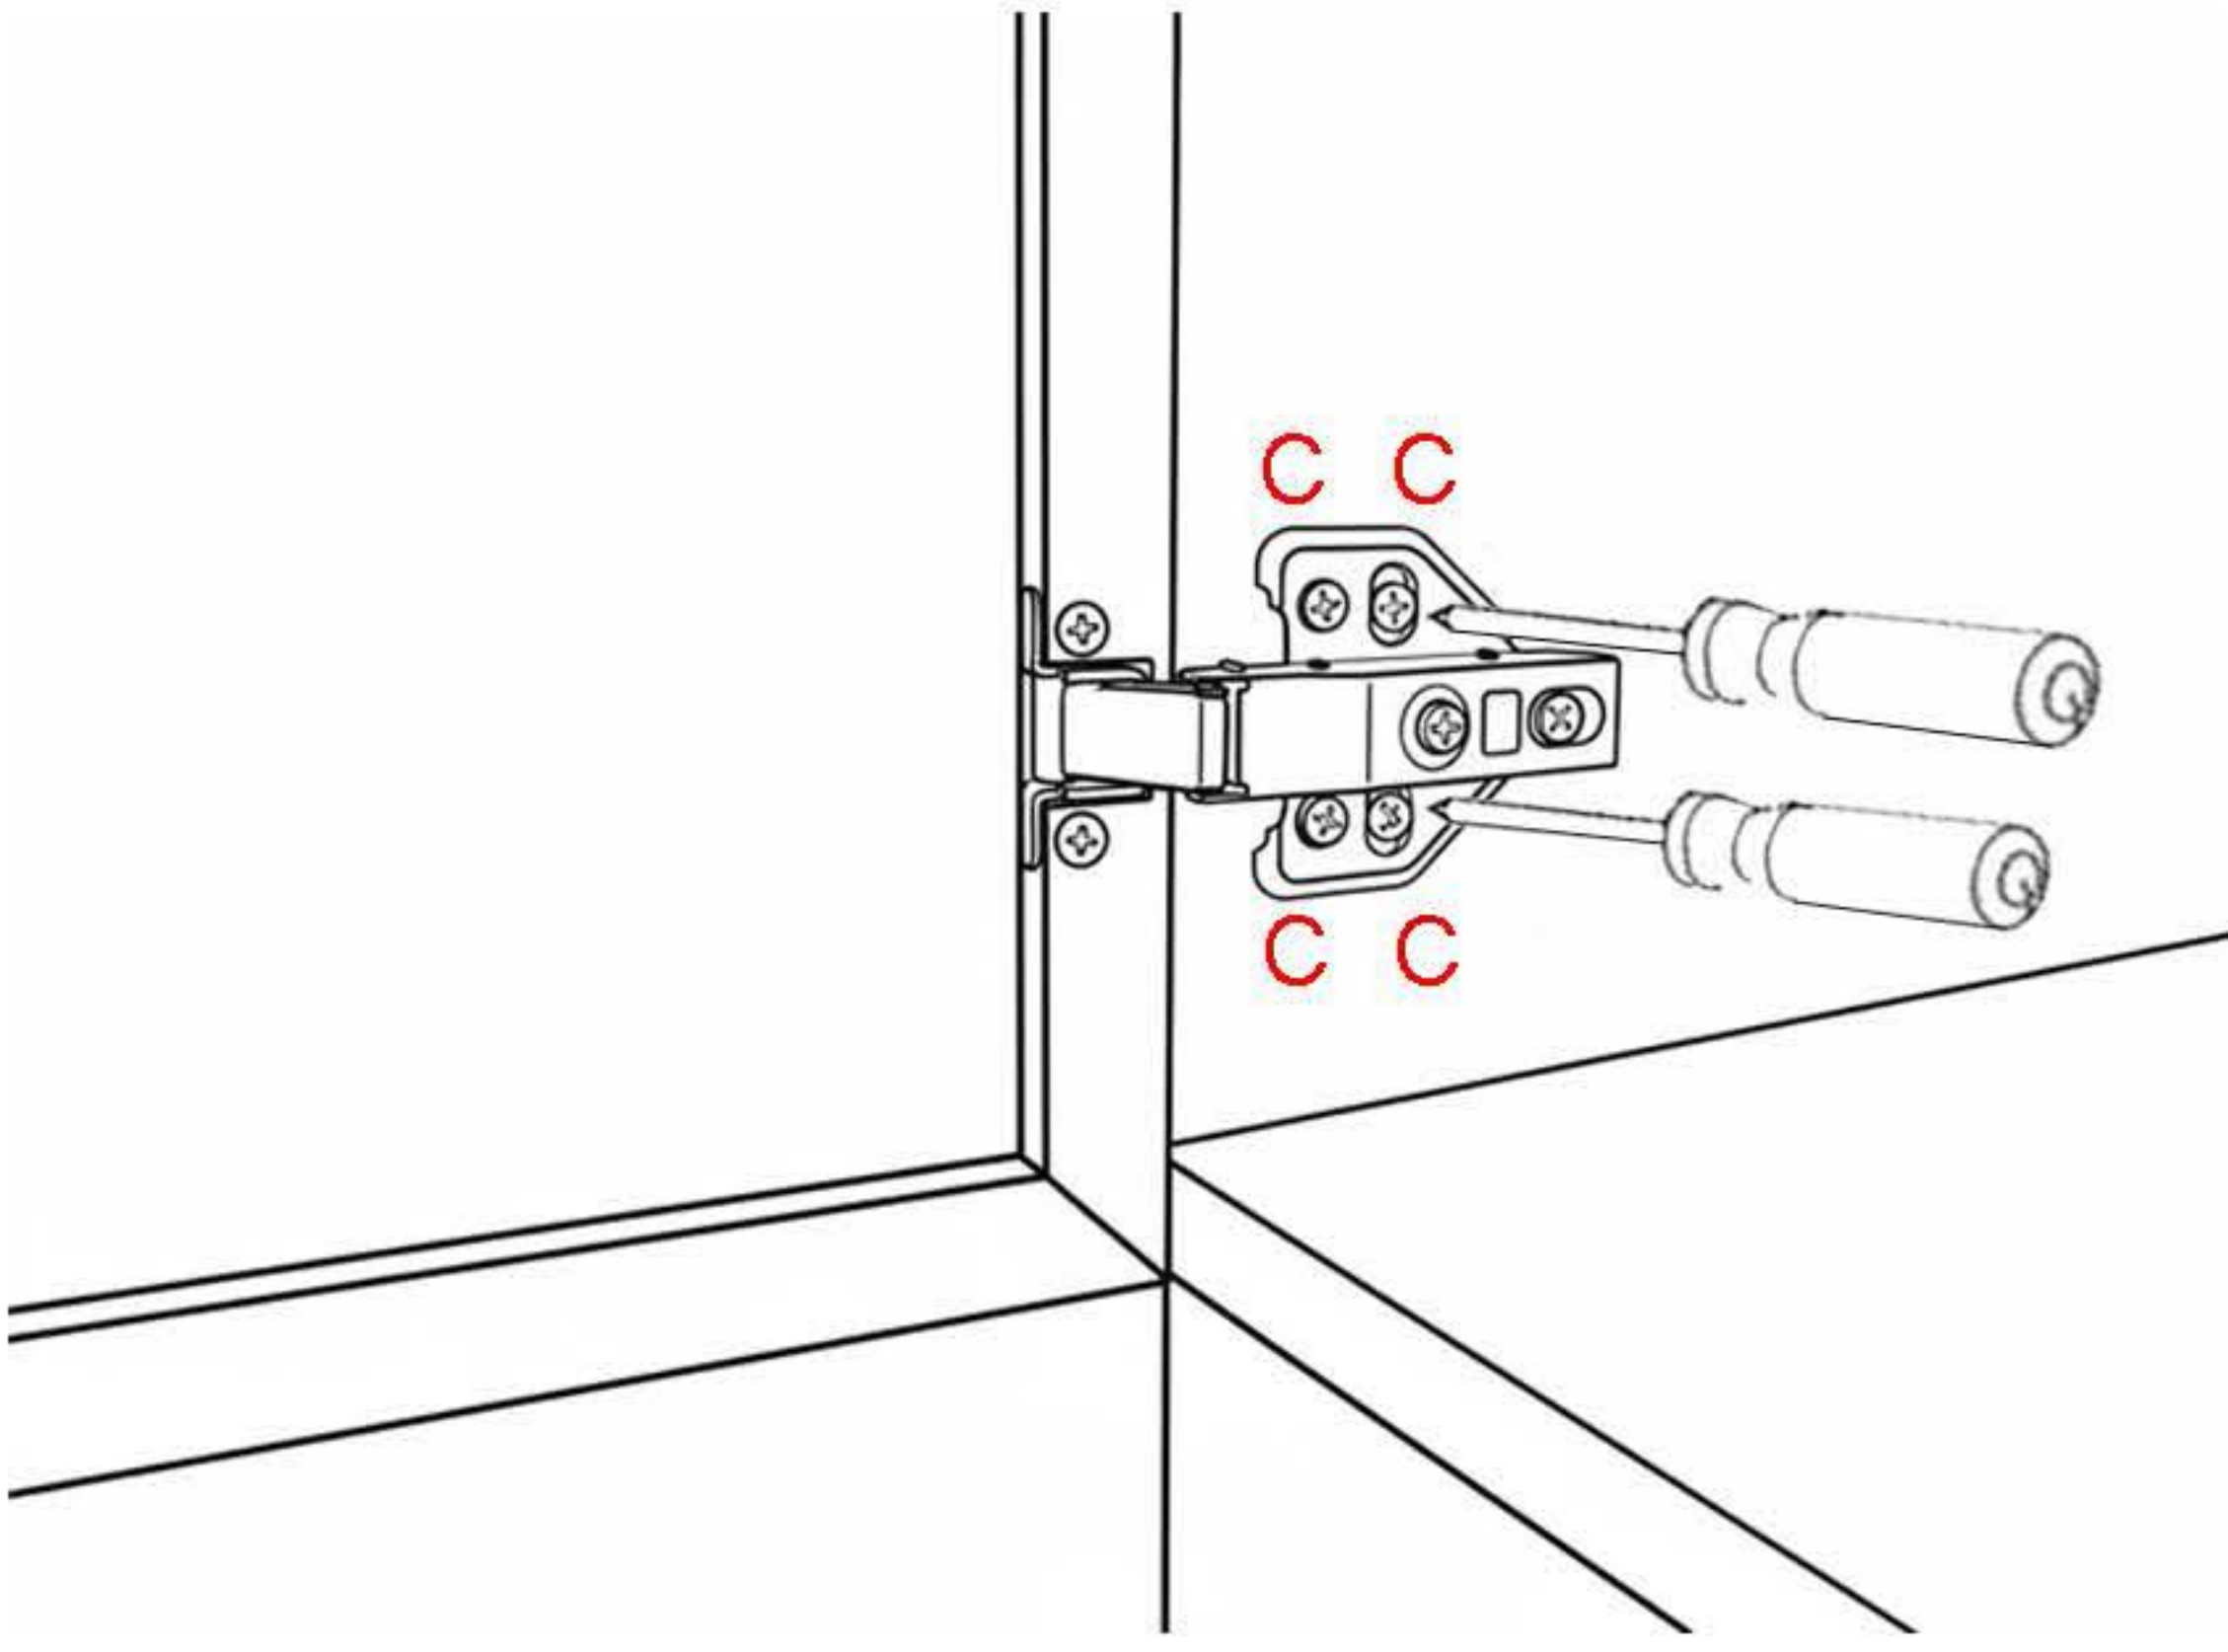


The height can be adjusted up and down here.

4.

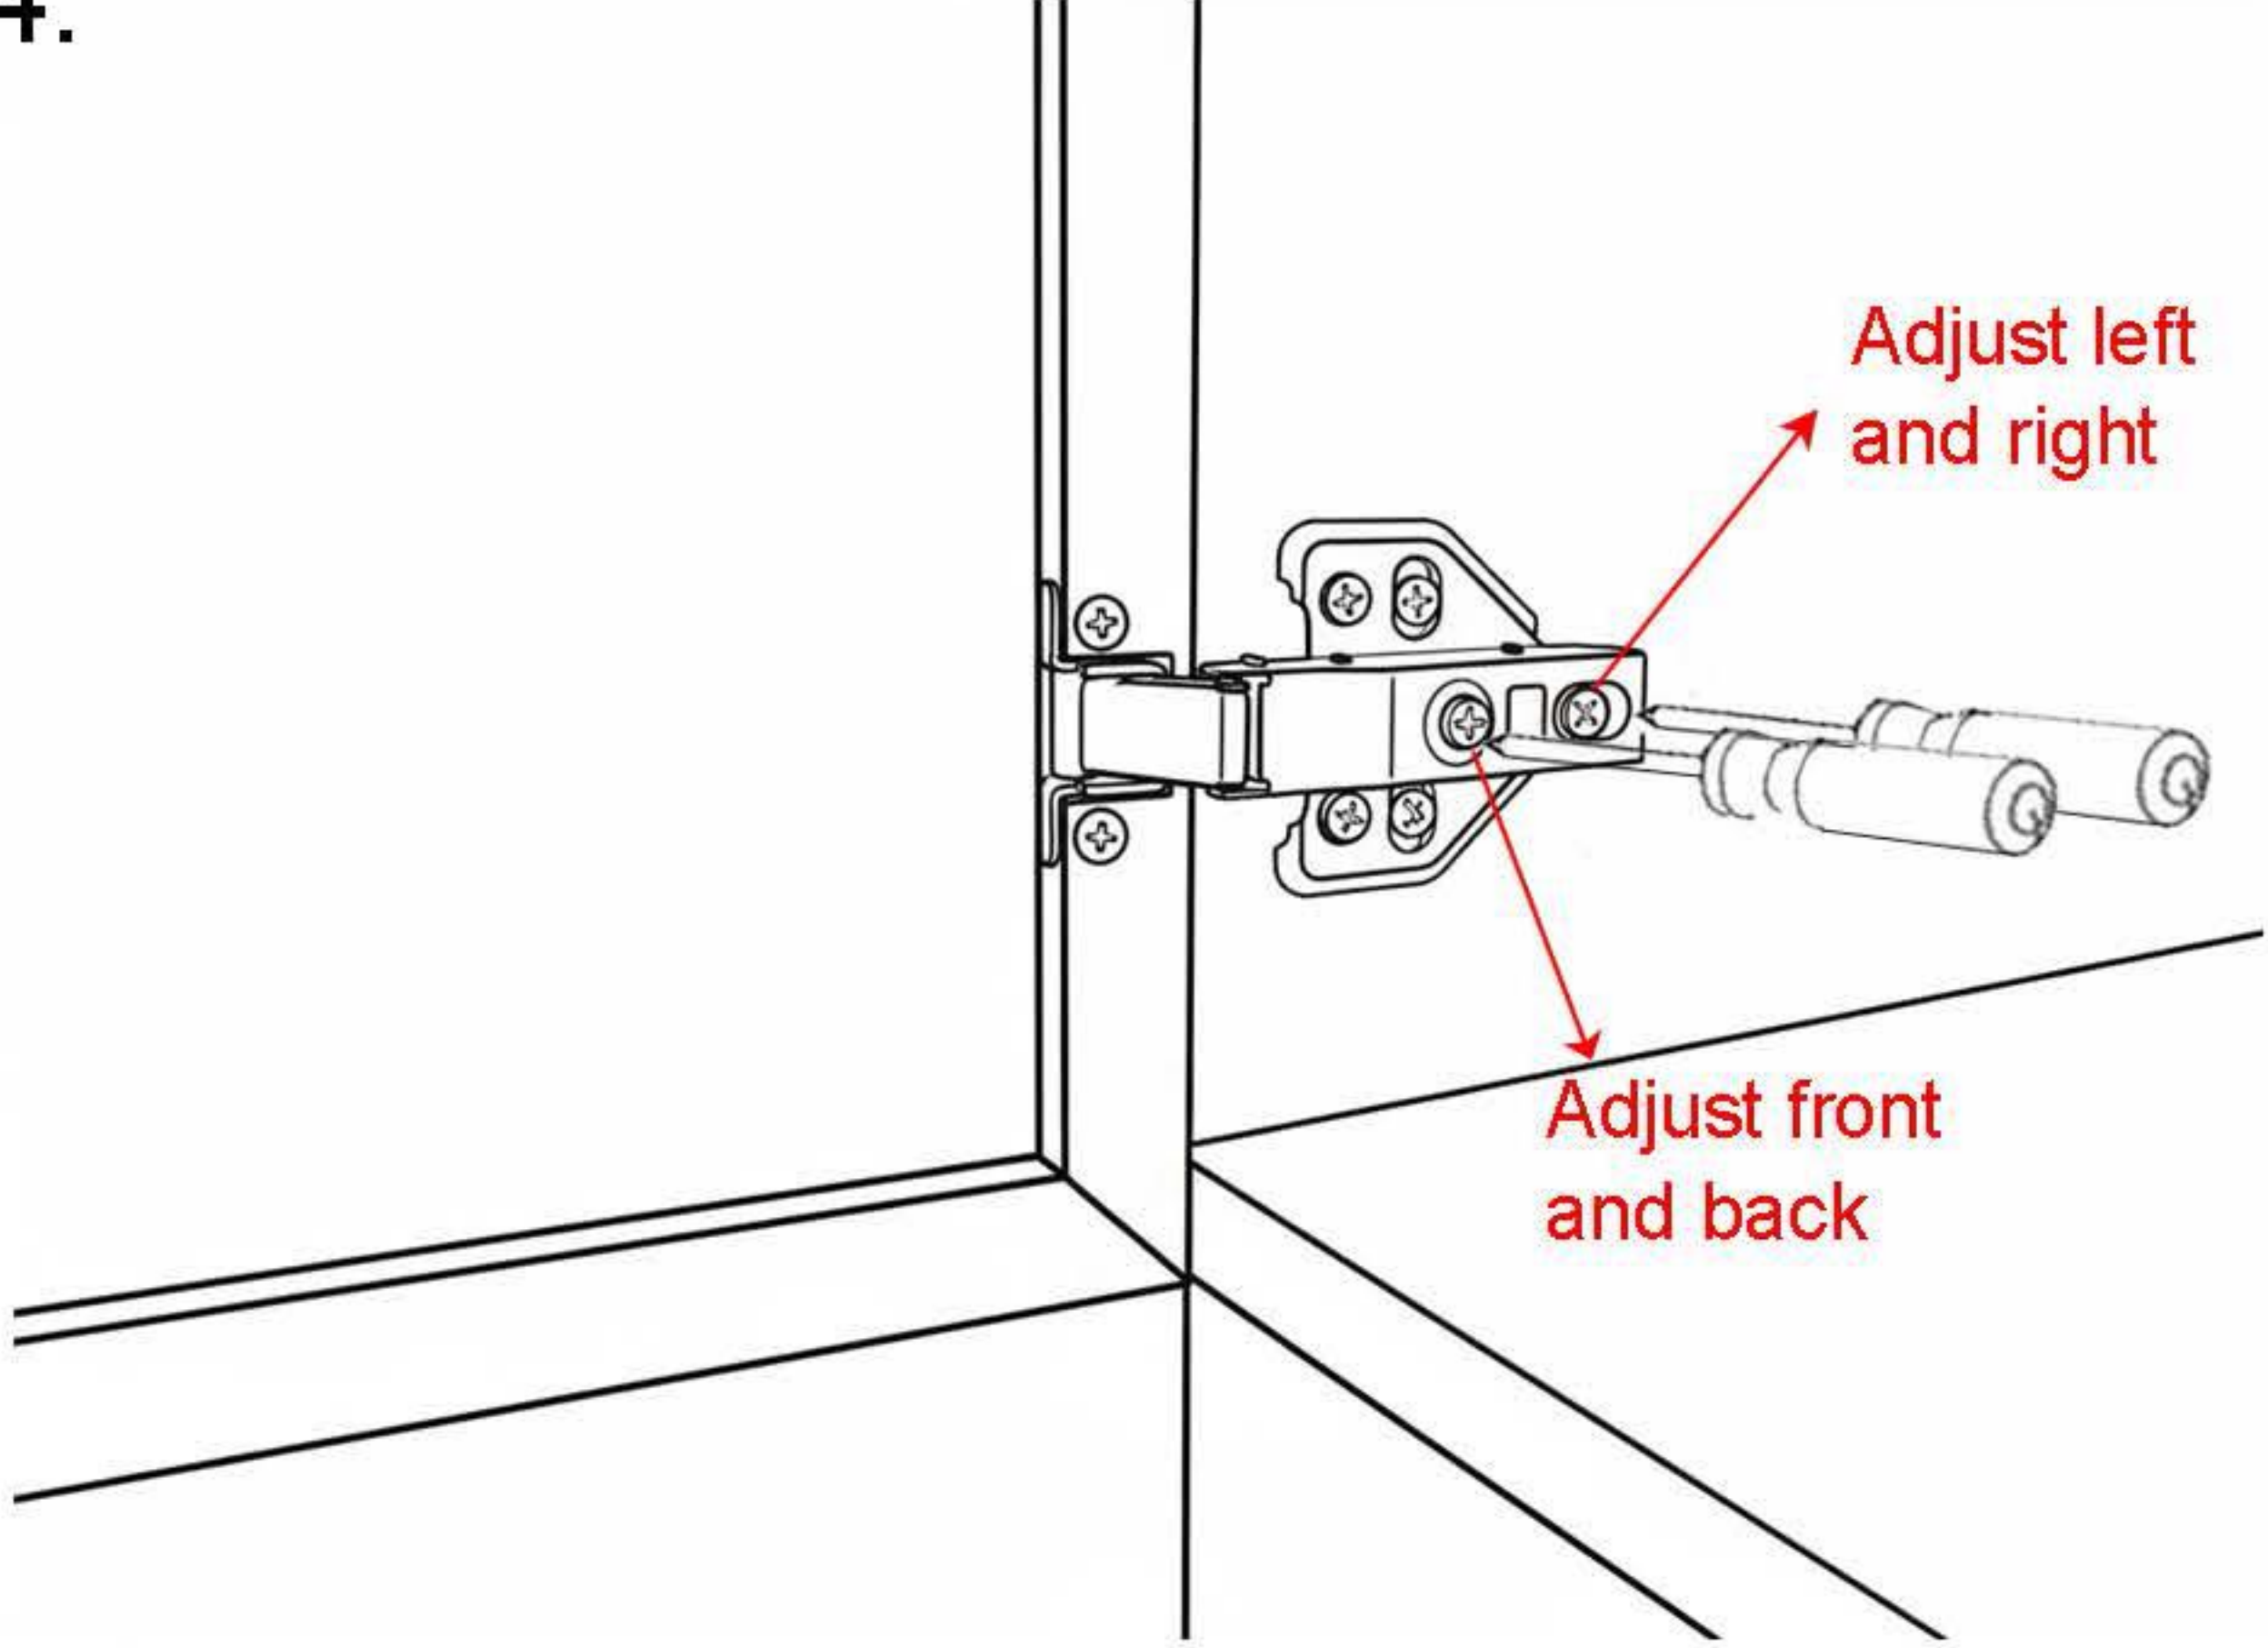

Adjusting the gap between the door.


Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

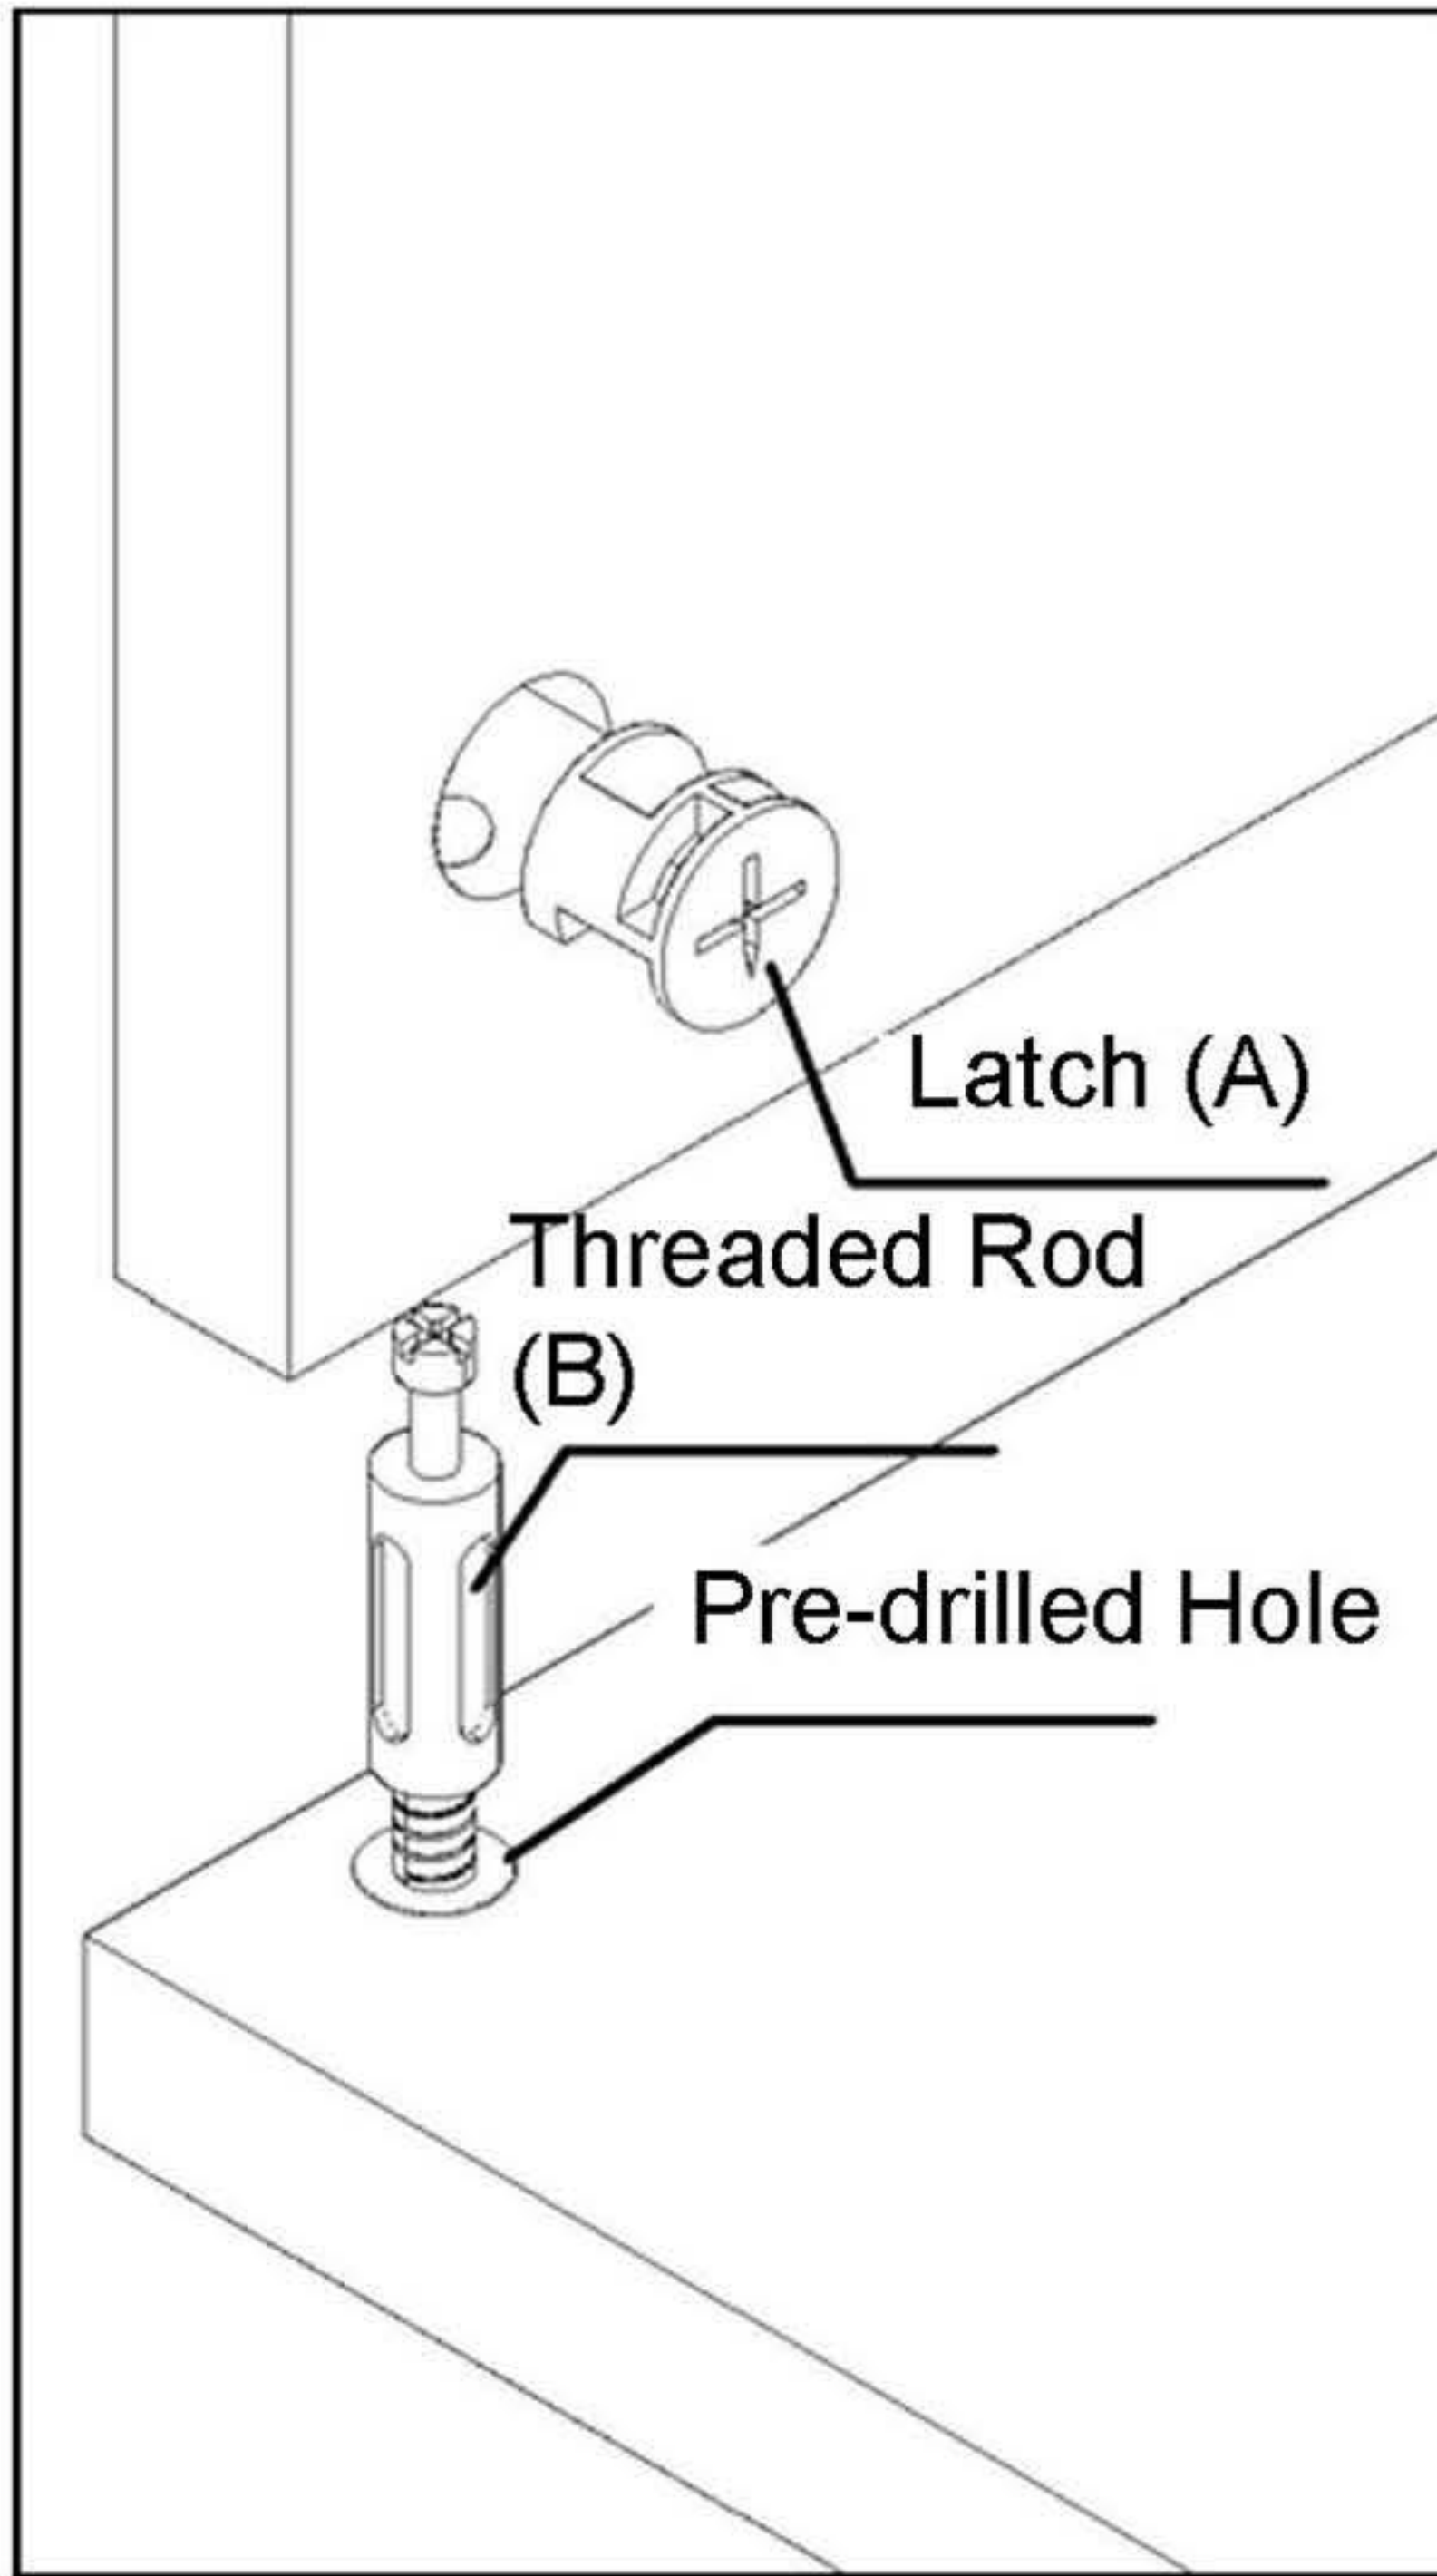

1. Screw the B (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed A into the corresponding hole of the other piece. Press A (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.


Step 1:

Panel No. 2: the side with pre-drilled holes faces the front.

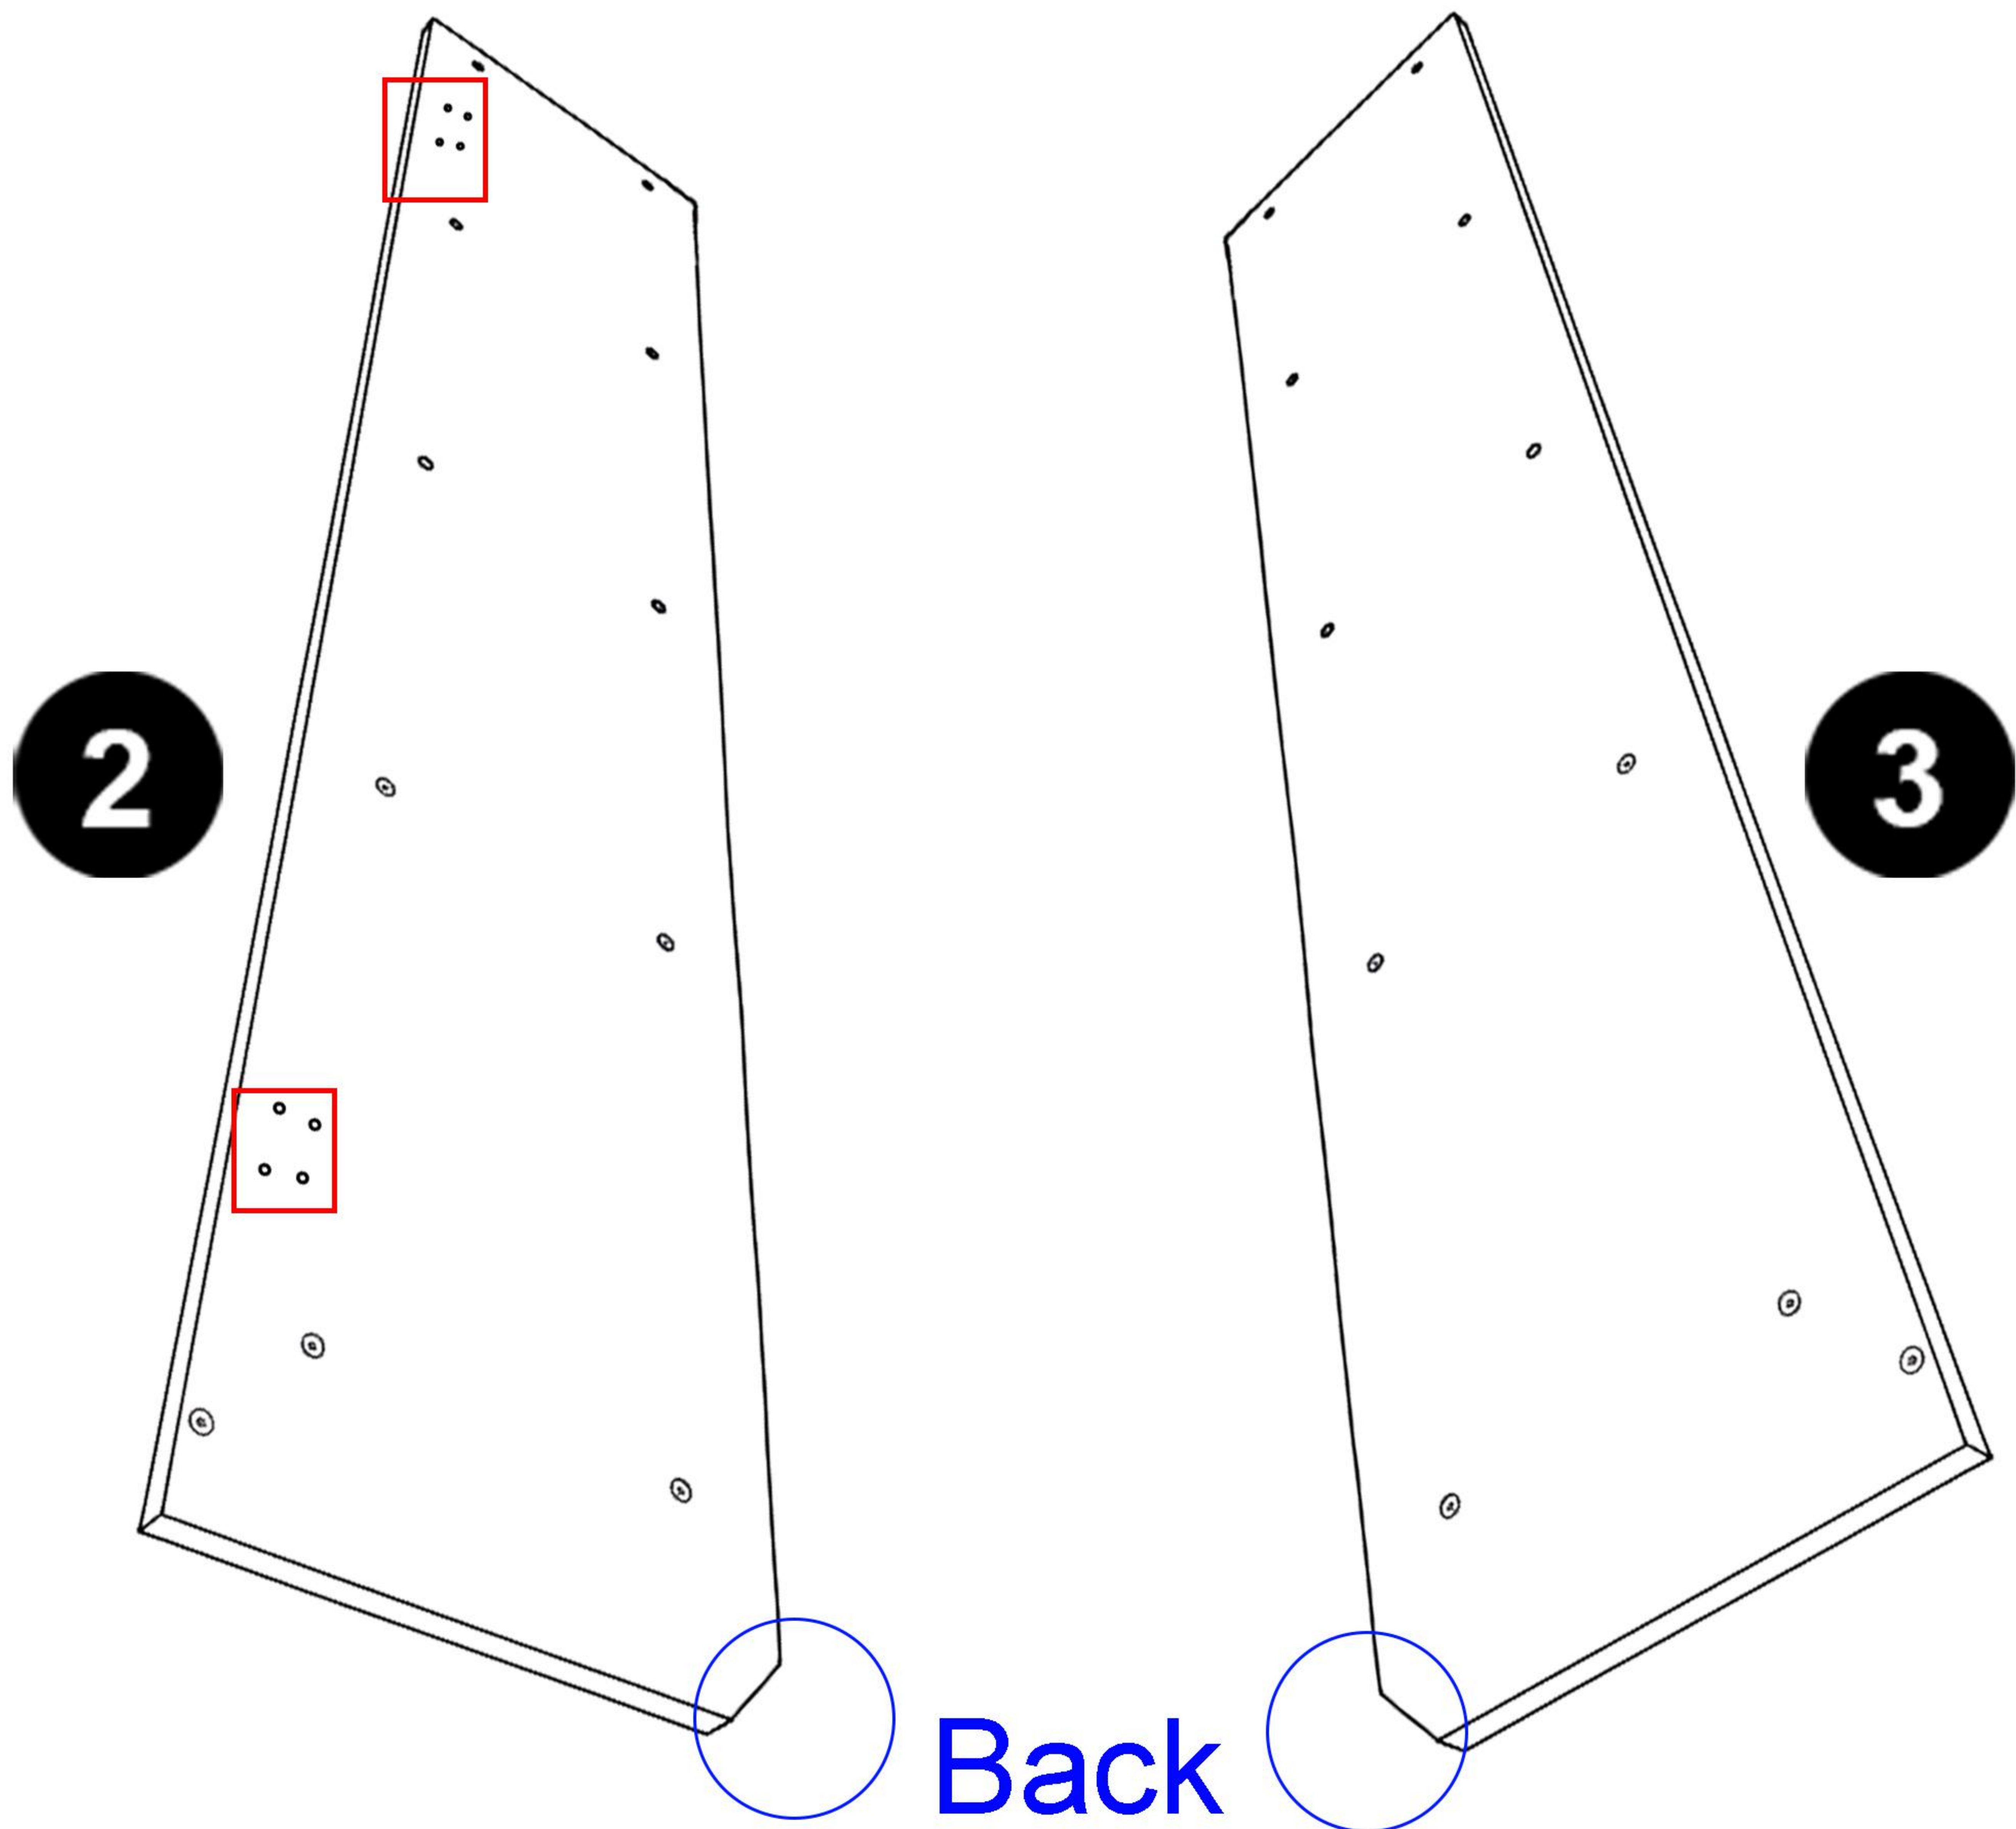


Note: All beveled edges must face the same direction, toward the back.

Step 2:

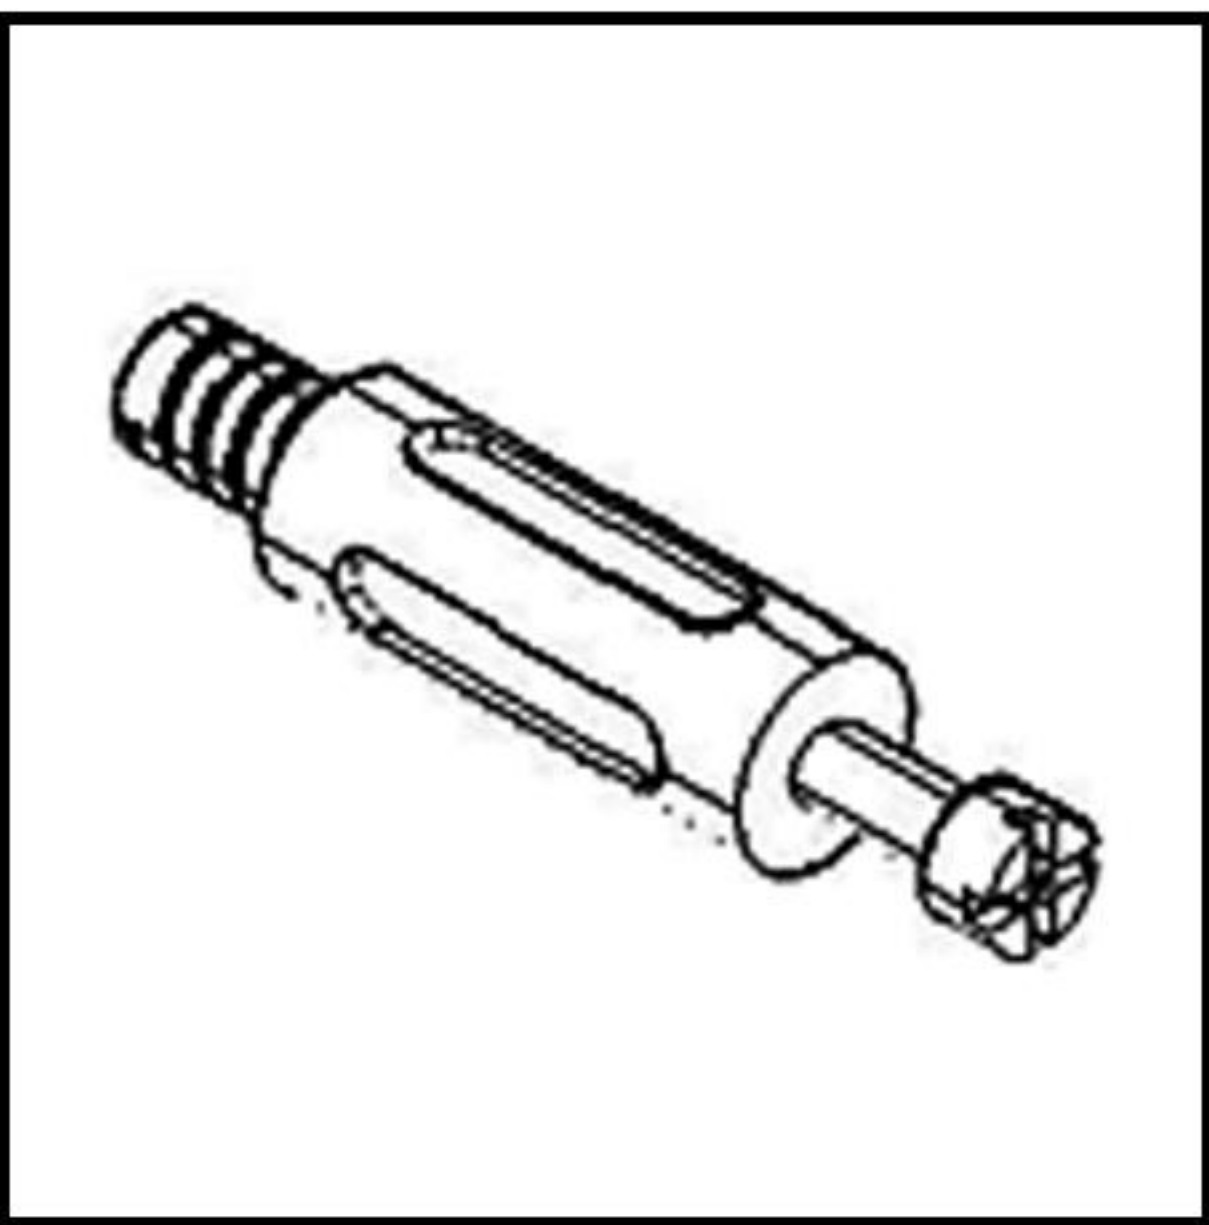


B


2

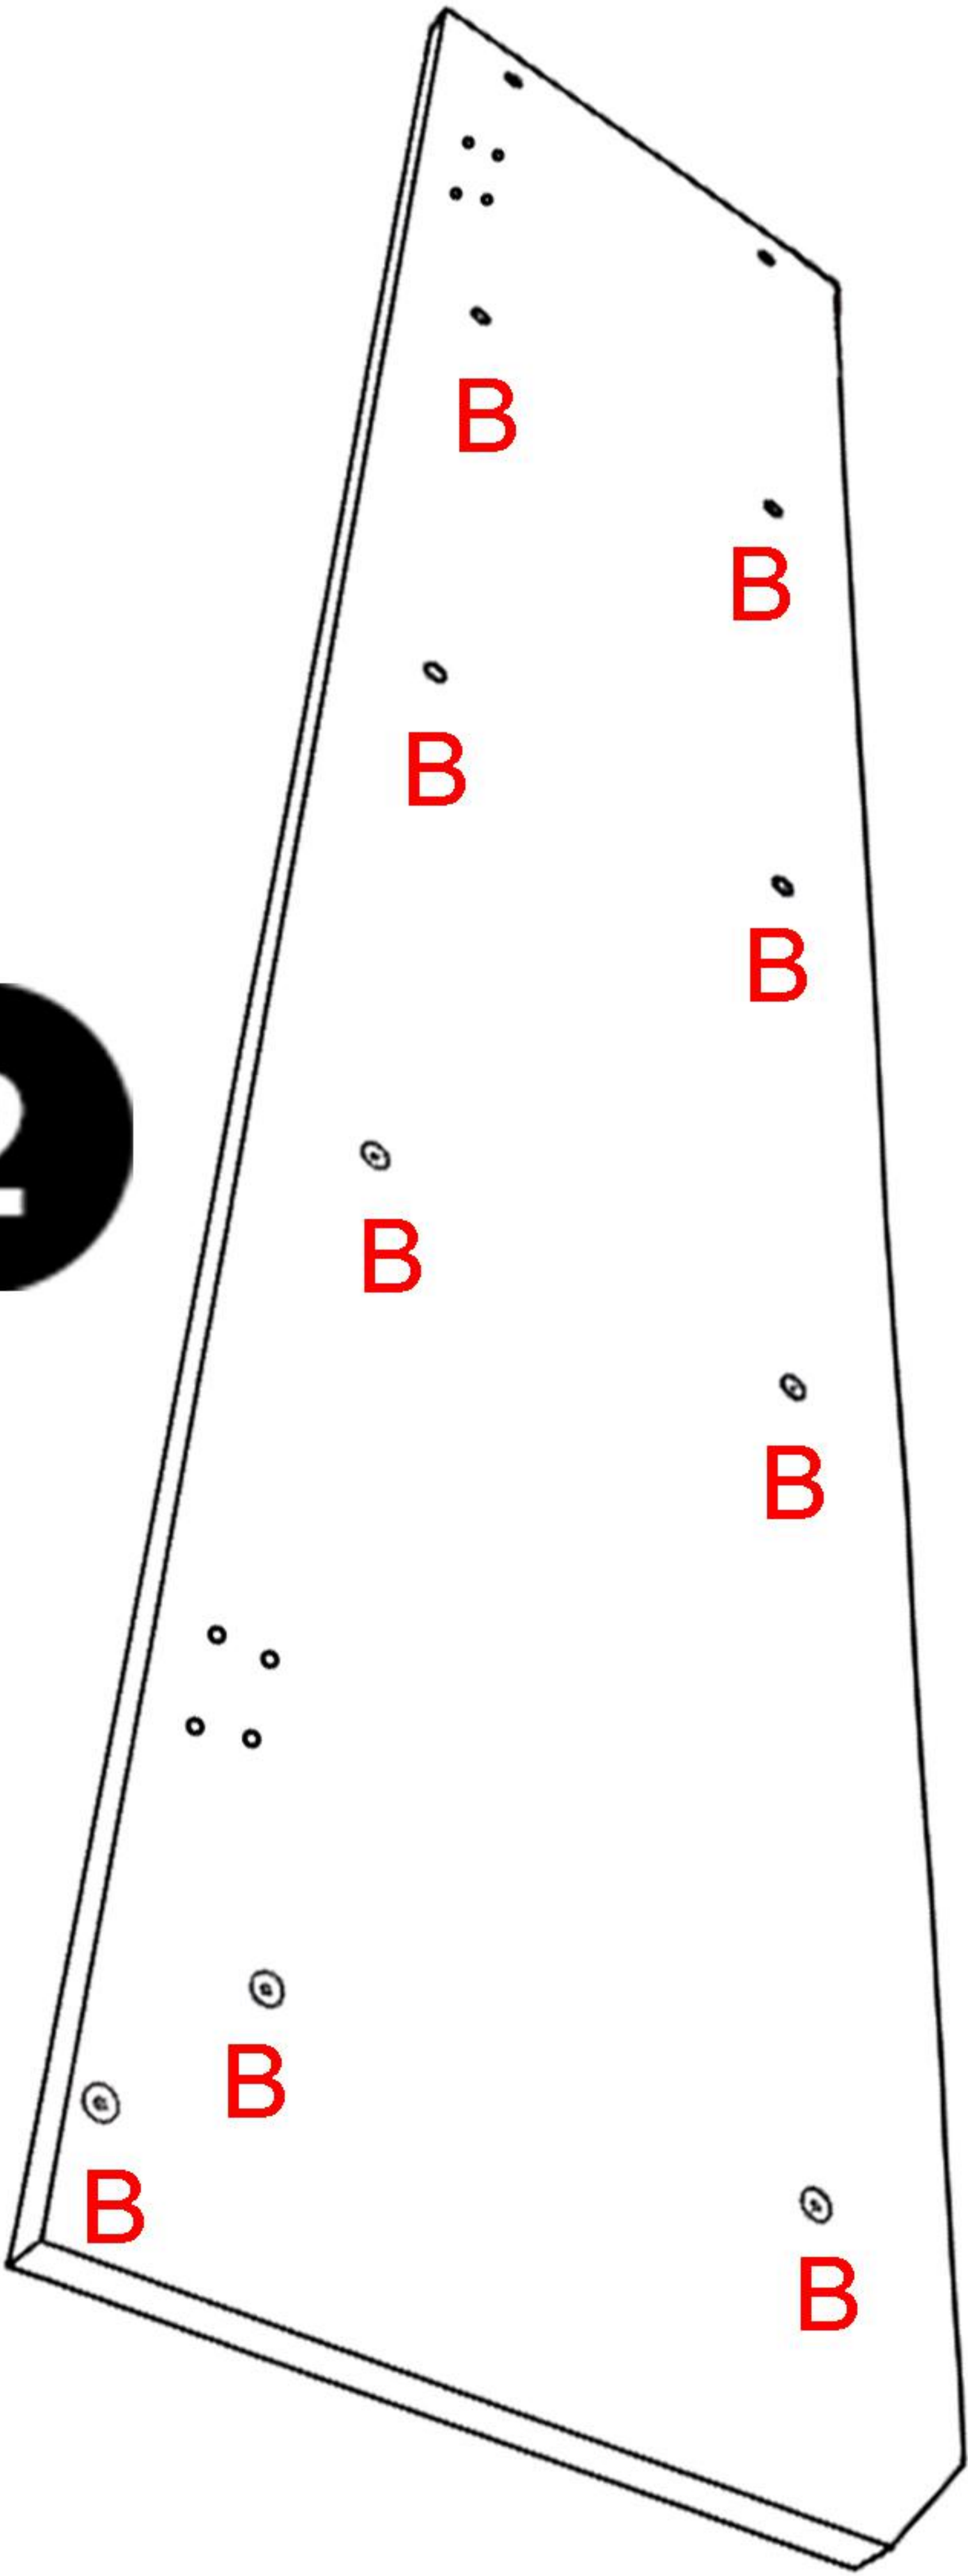


3

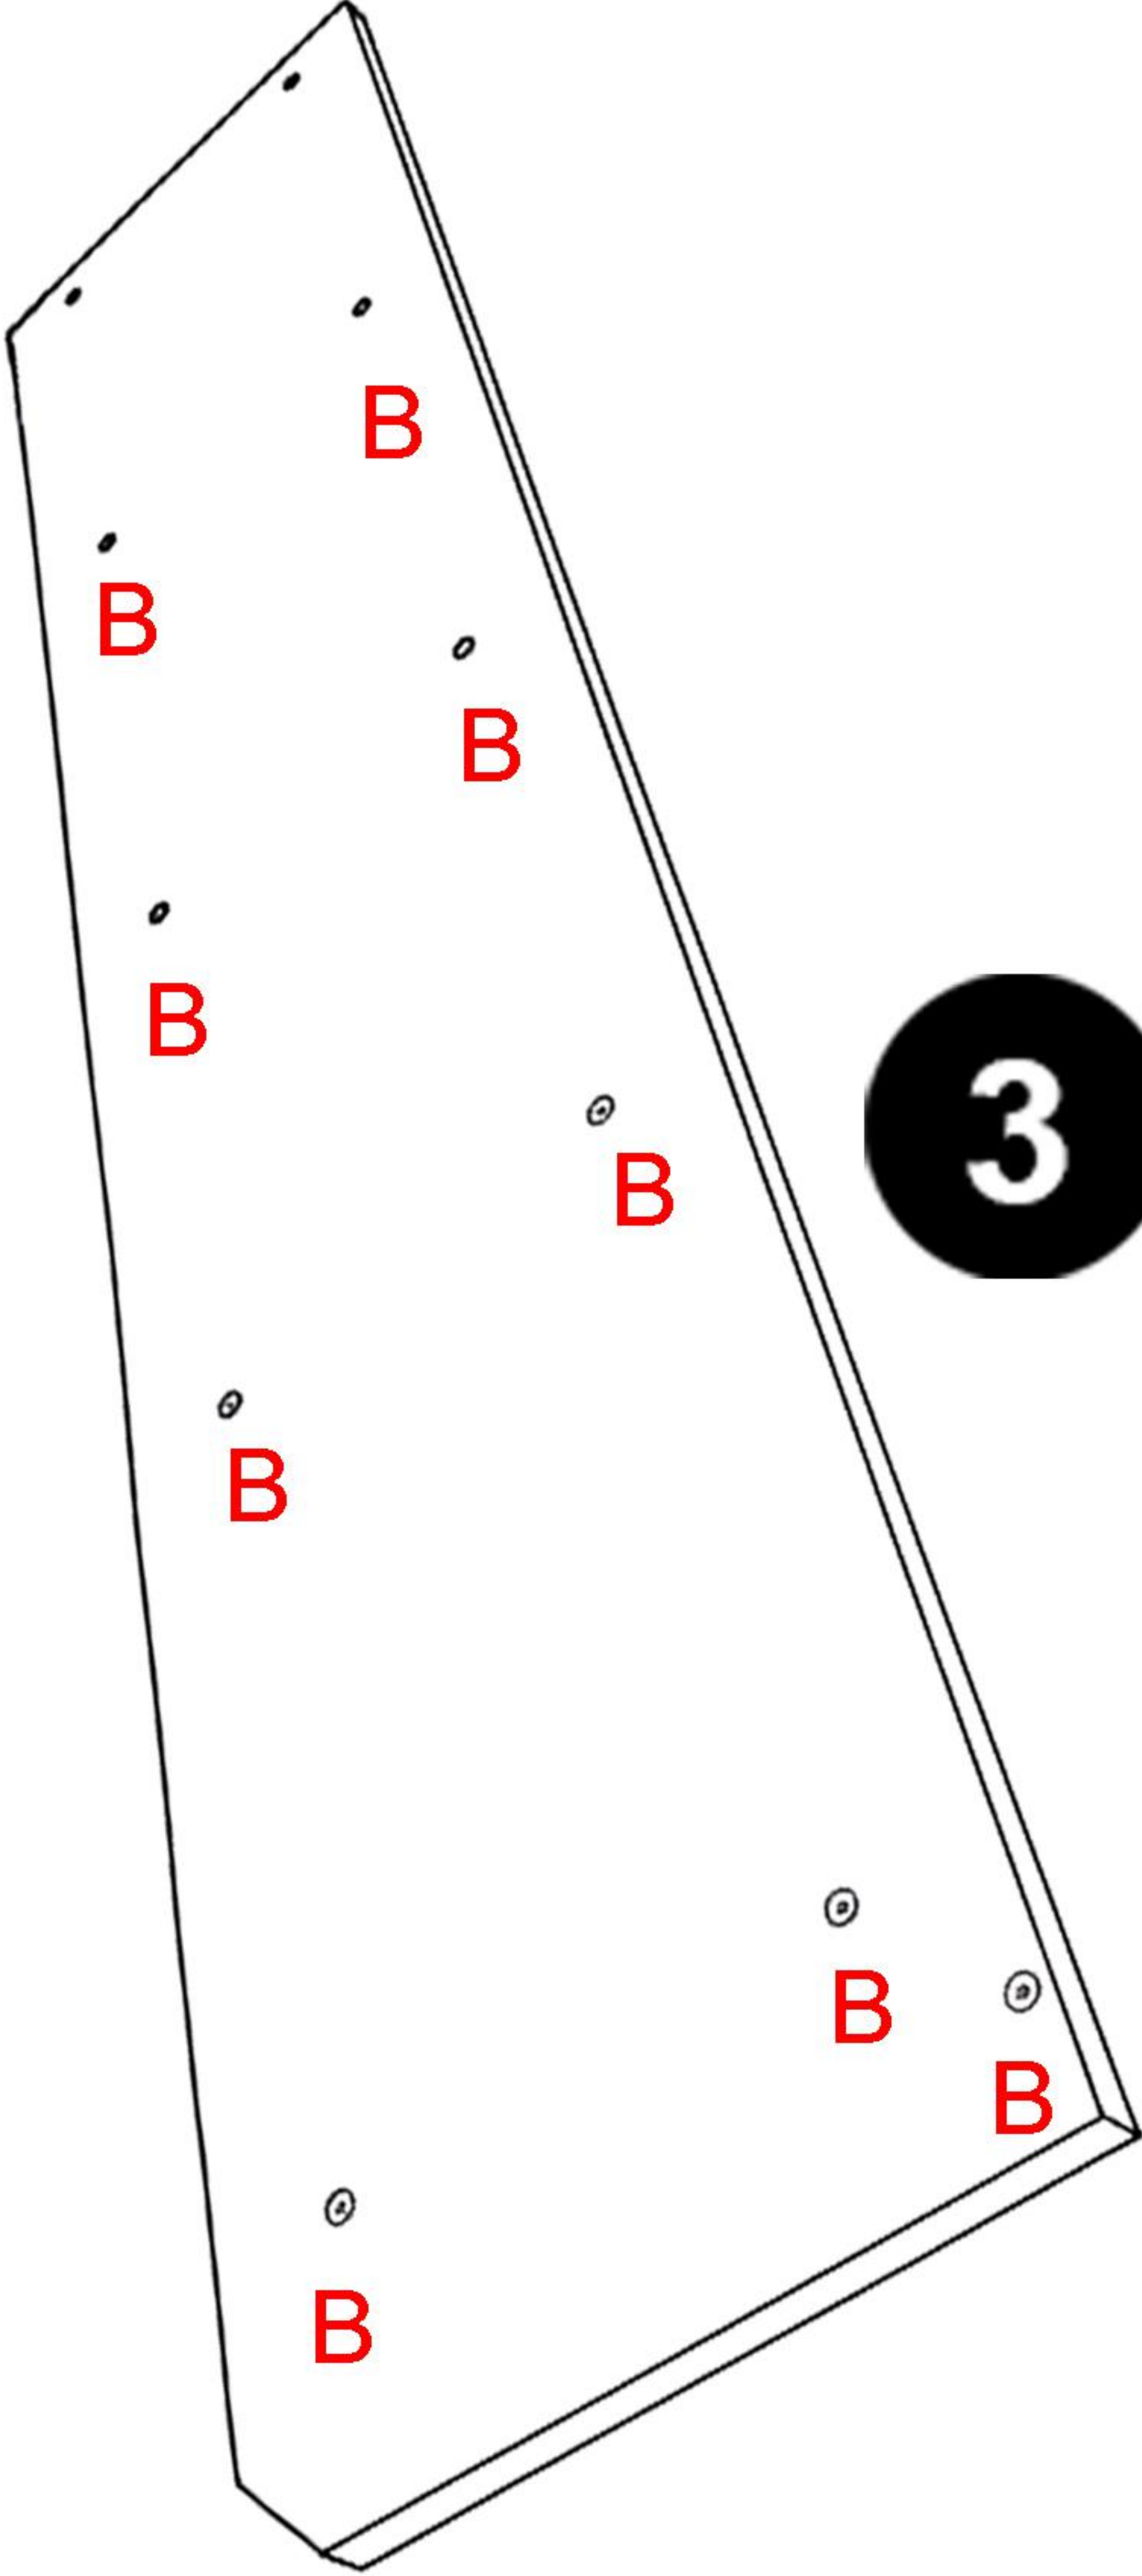

Step 3:

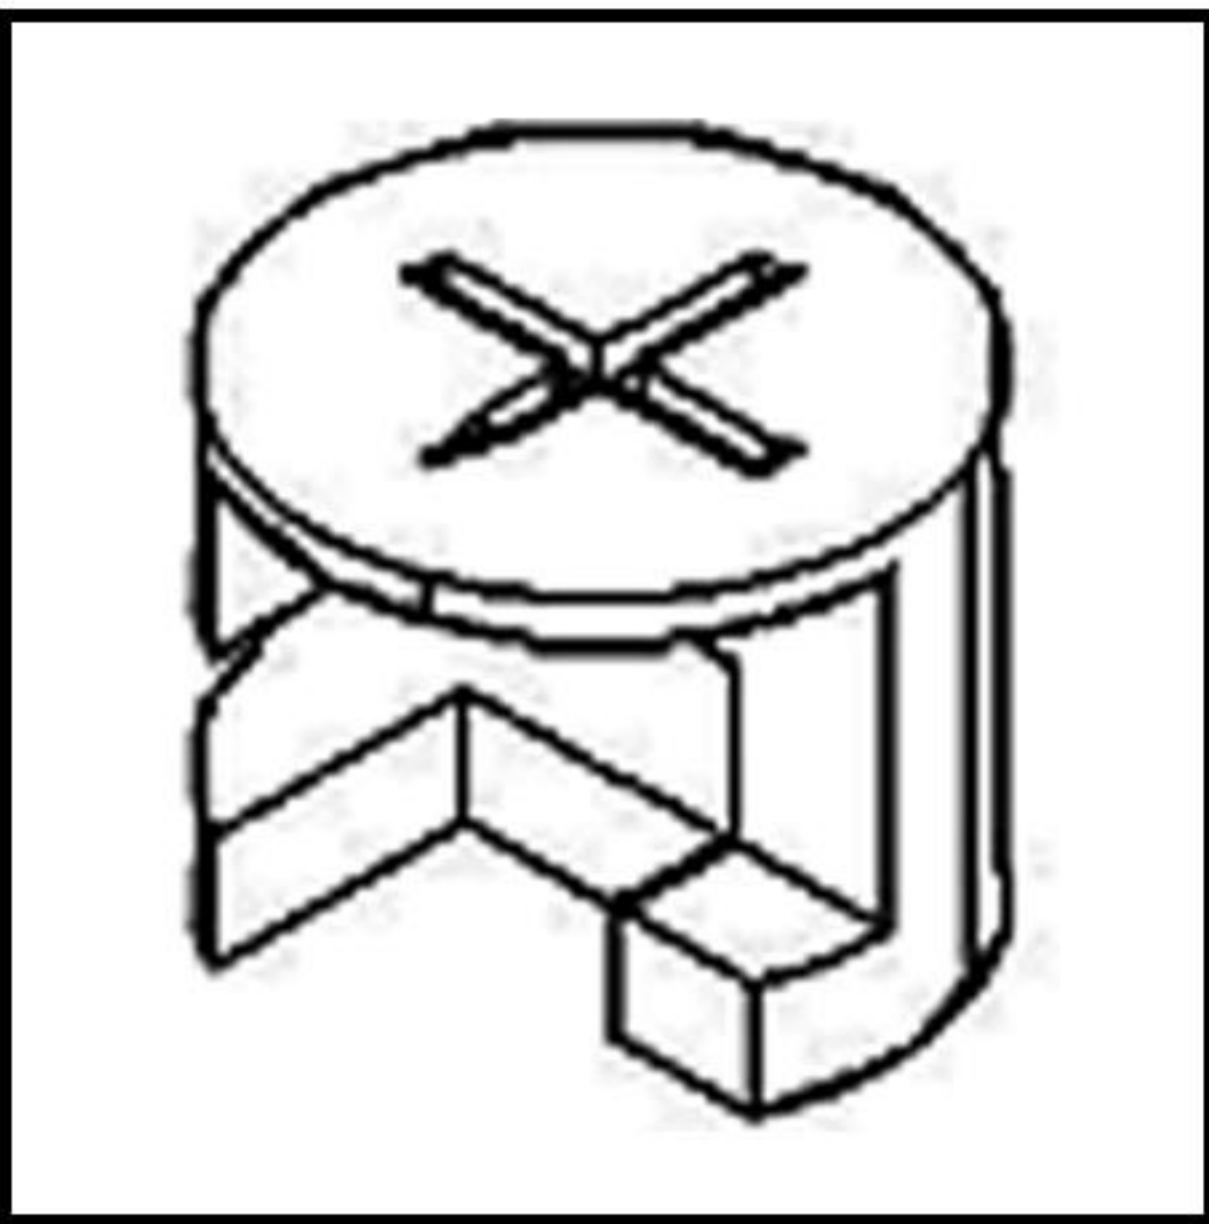


A

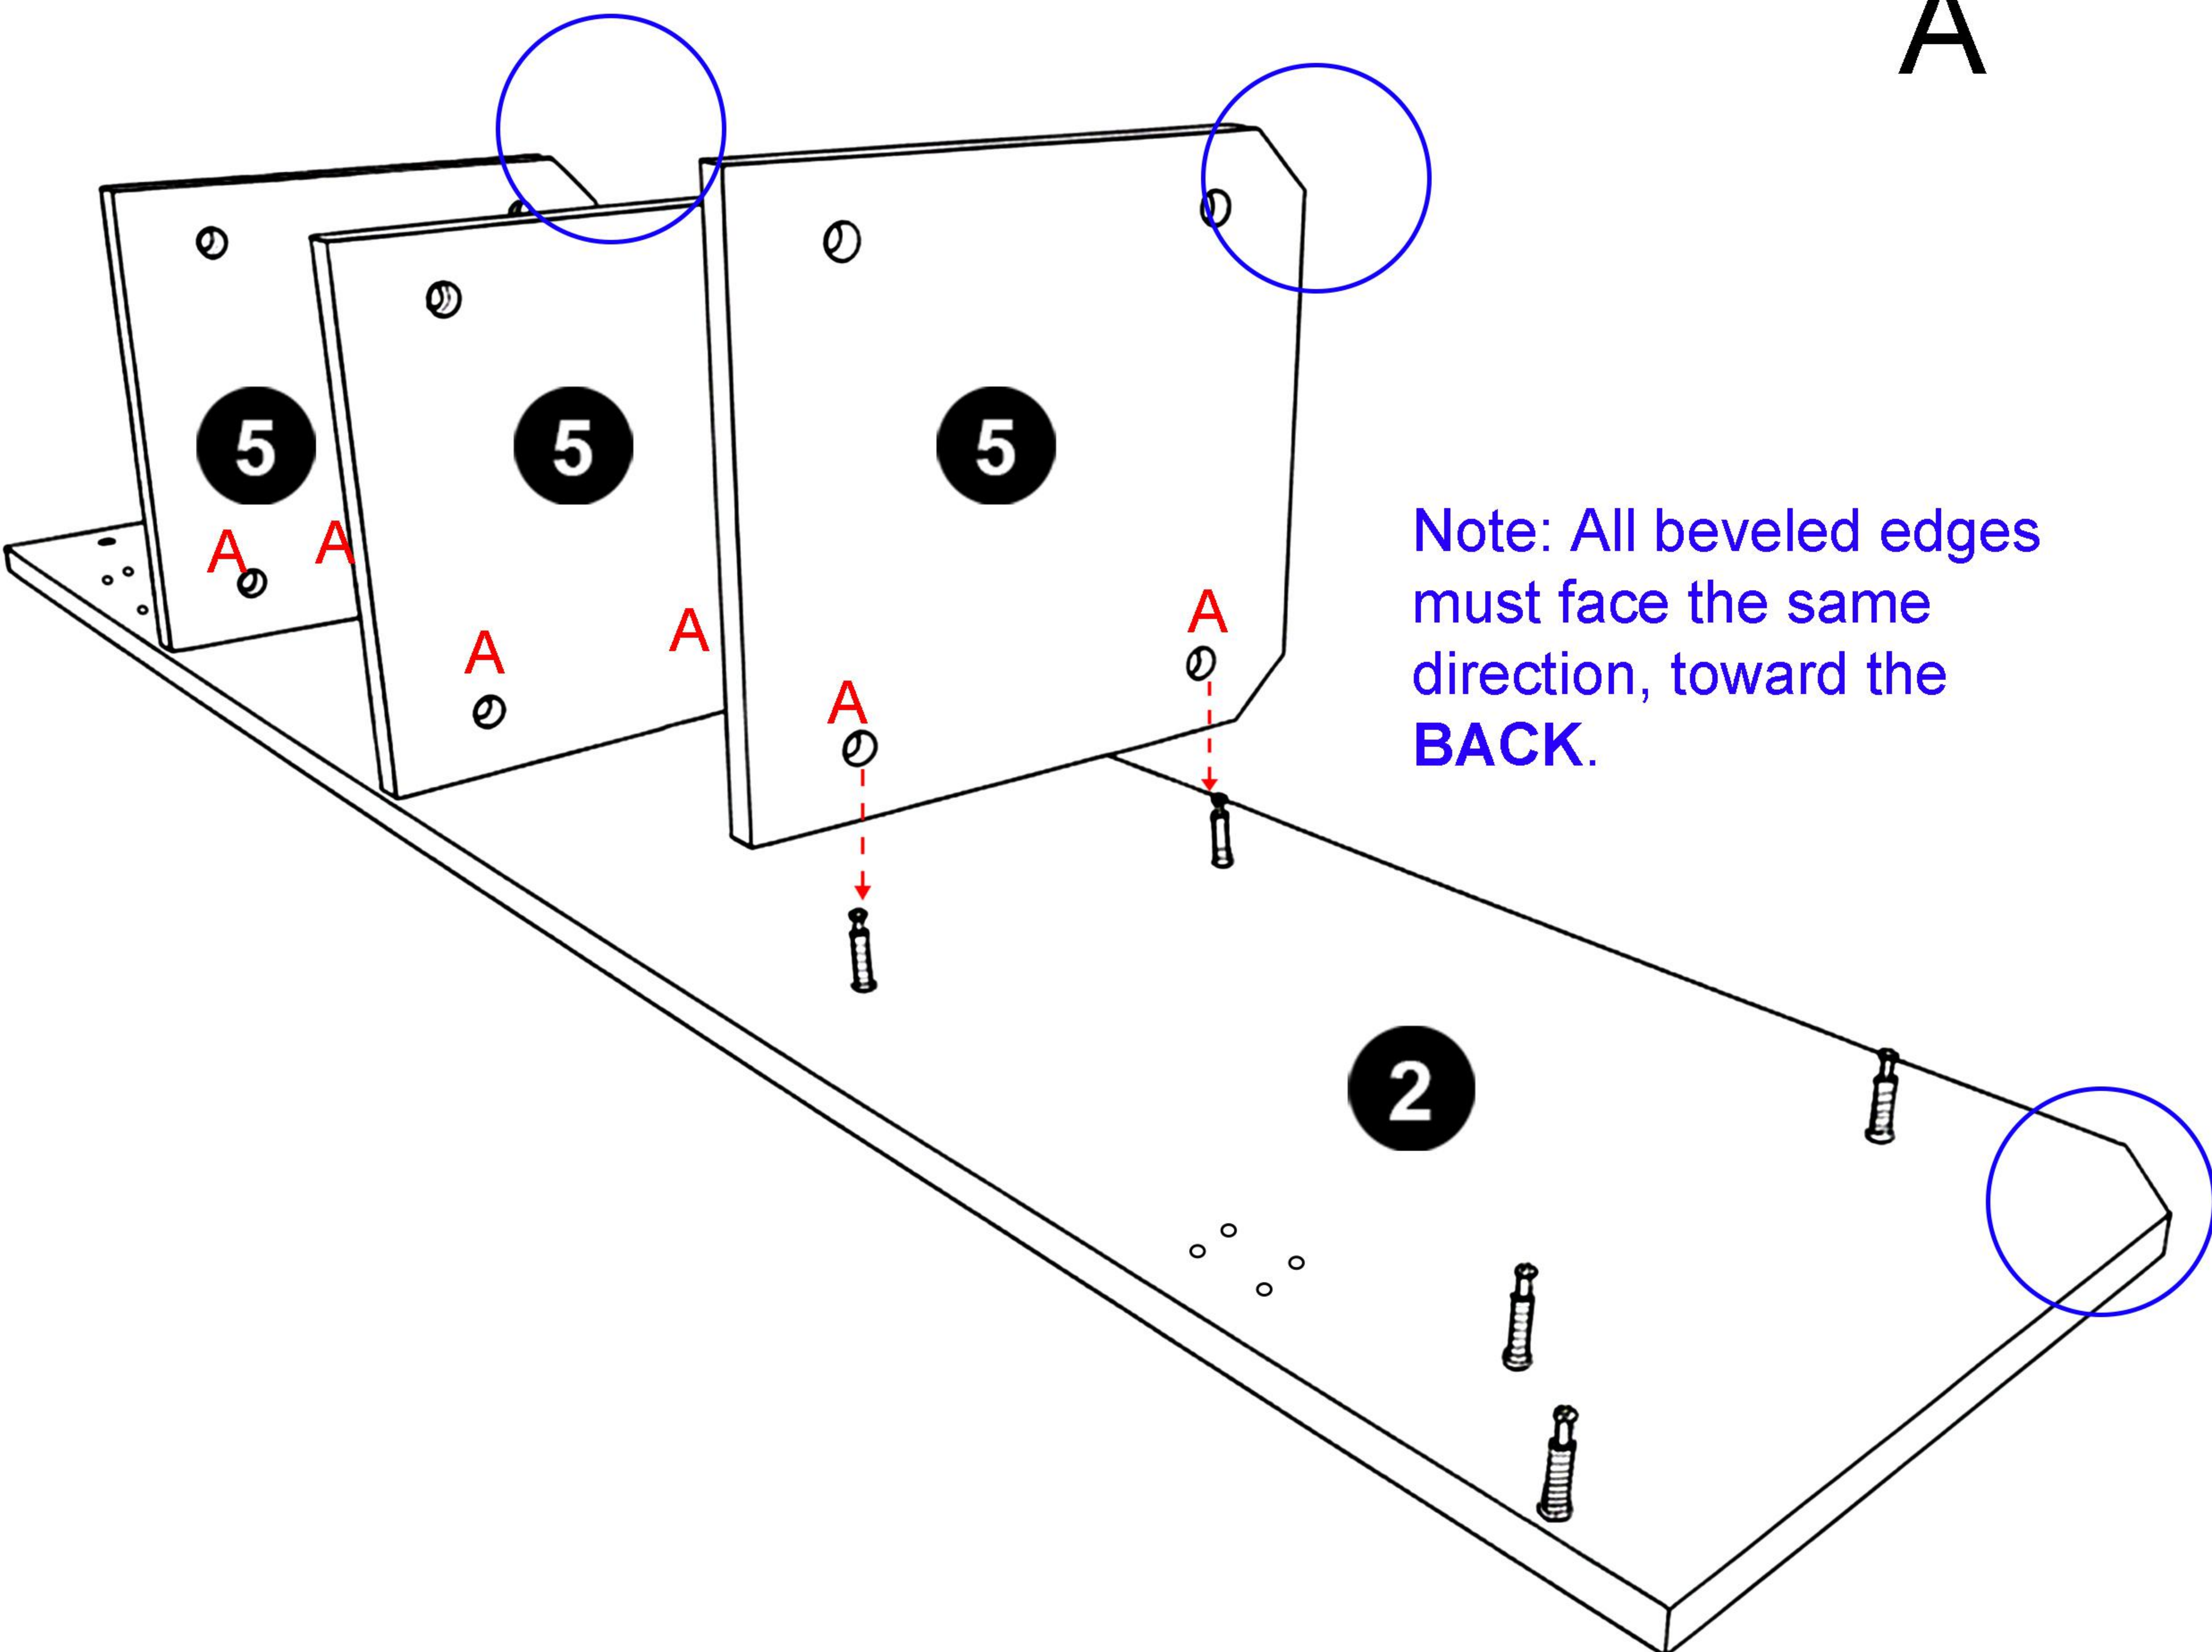

Note: All beveled edges must face the same direction, toward the **BACK**.



Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 4:

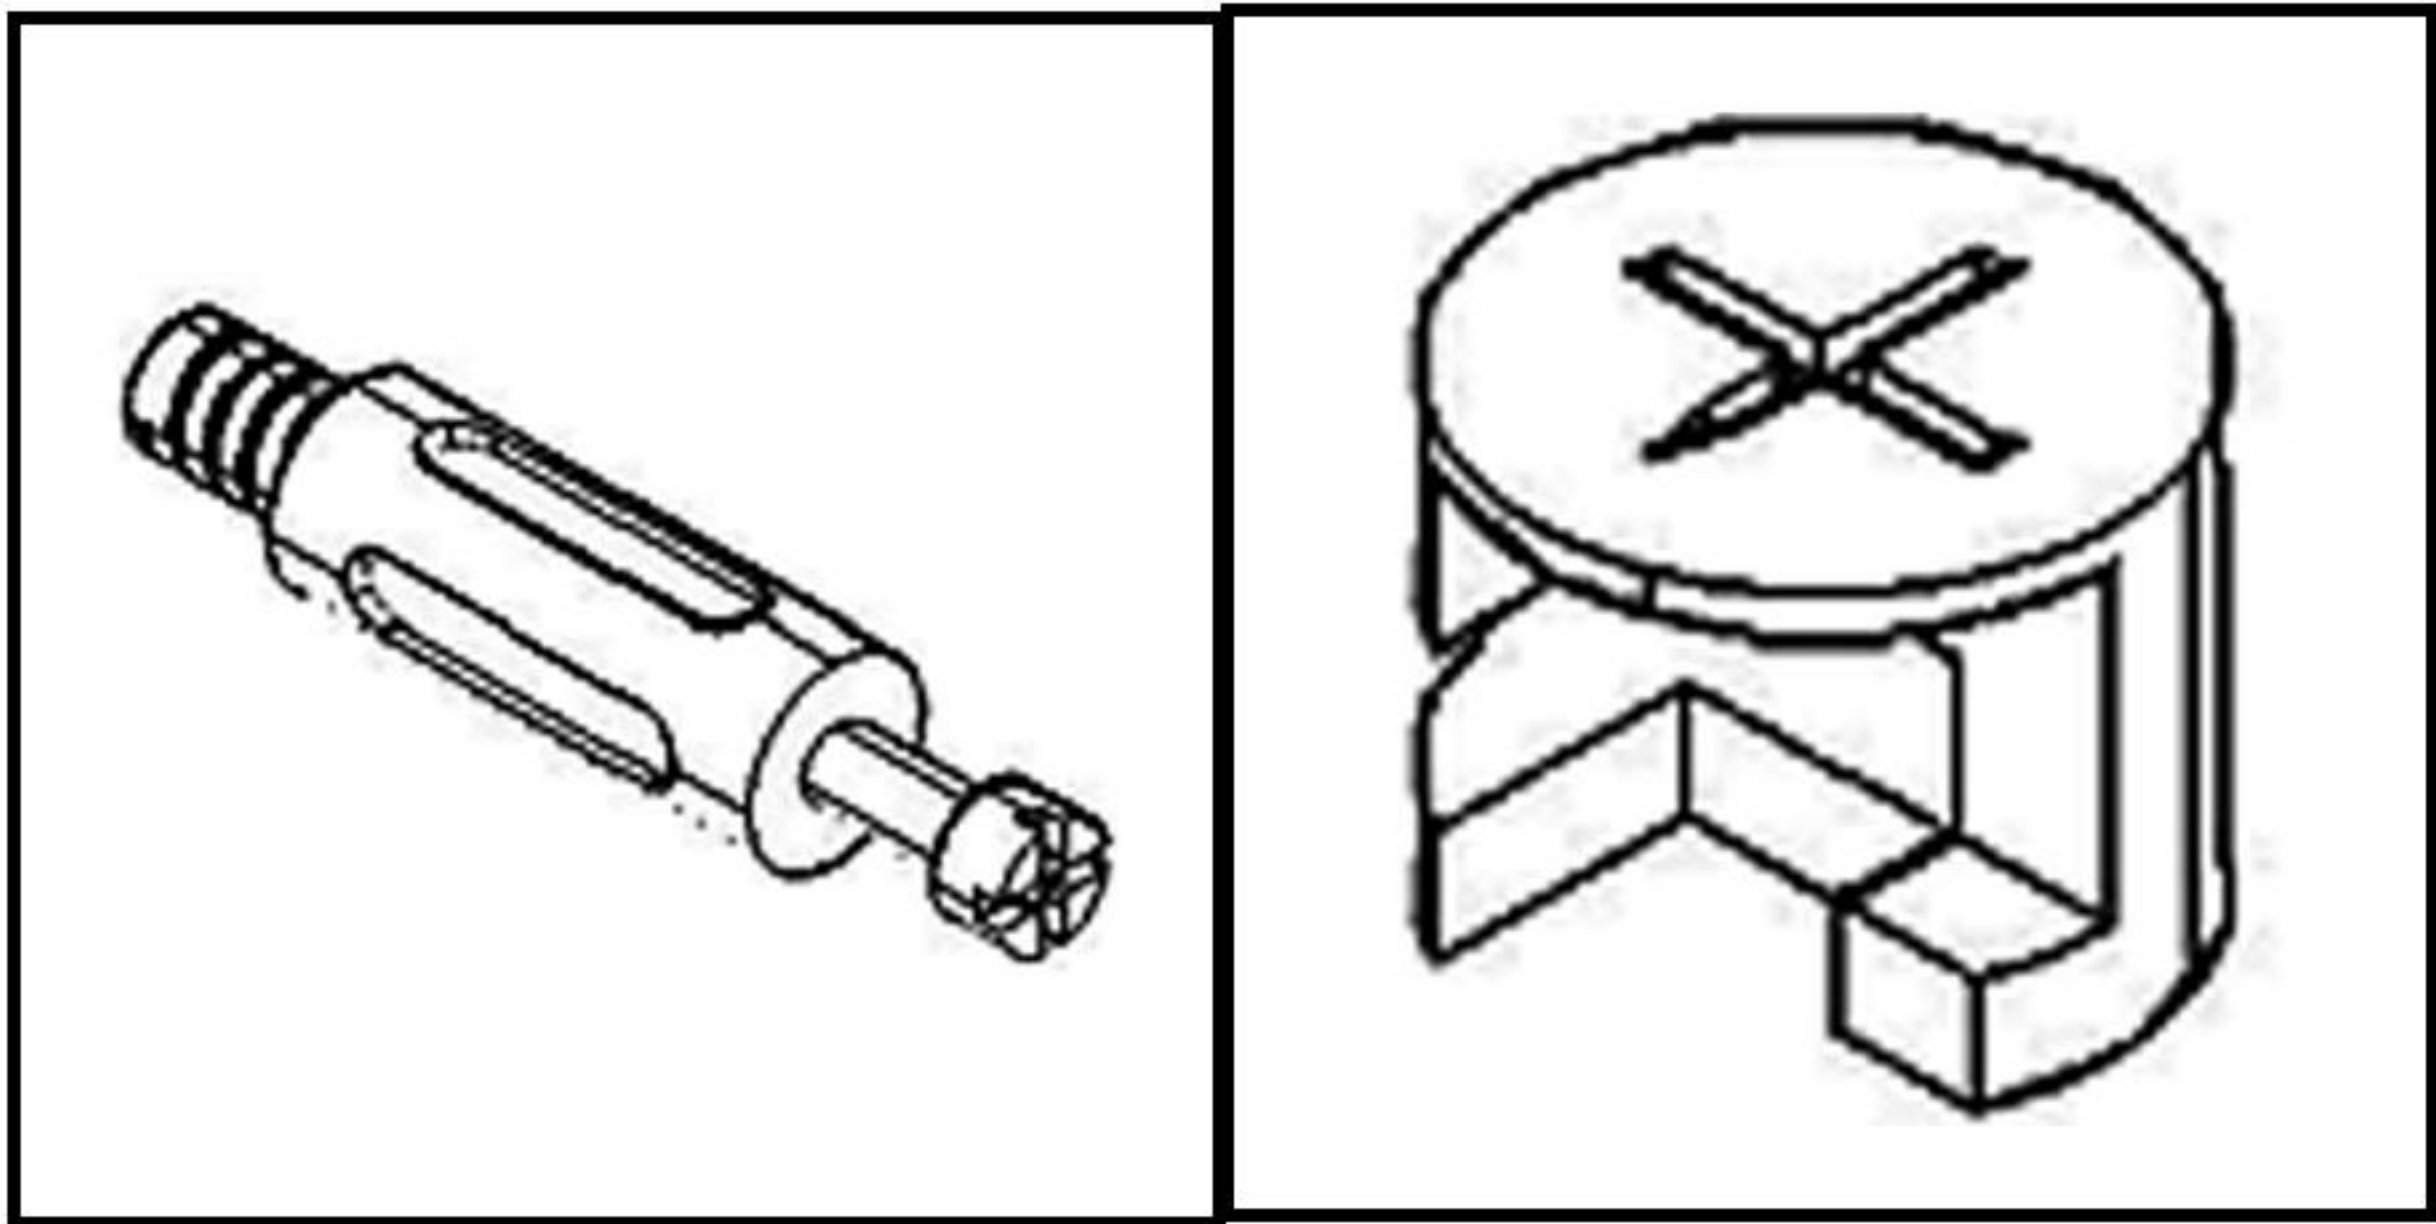


B

A

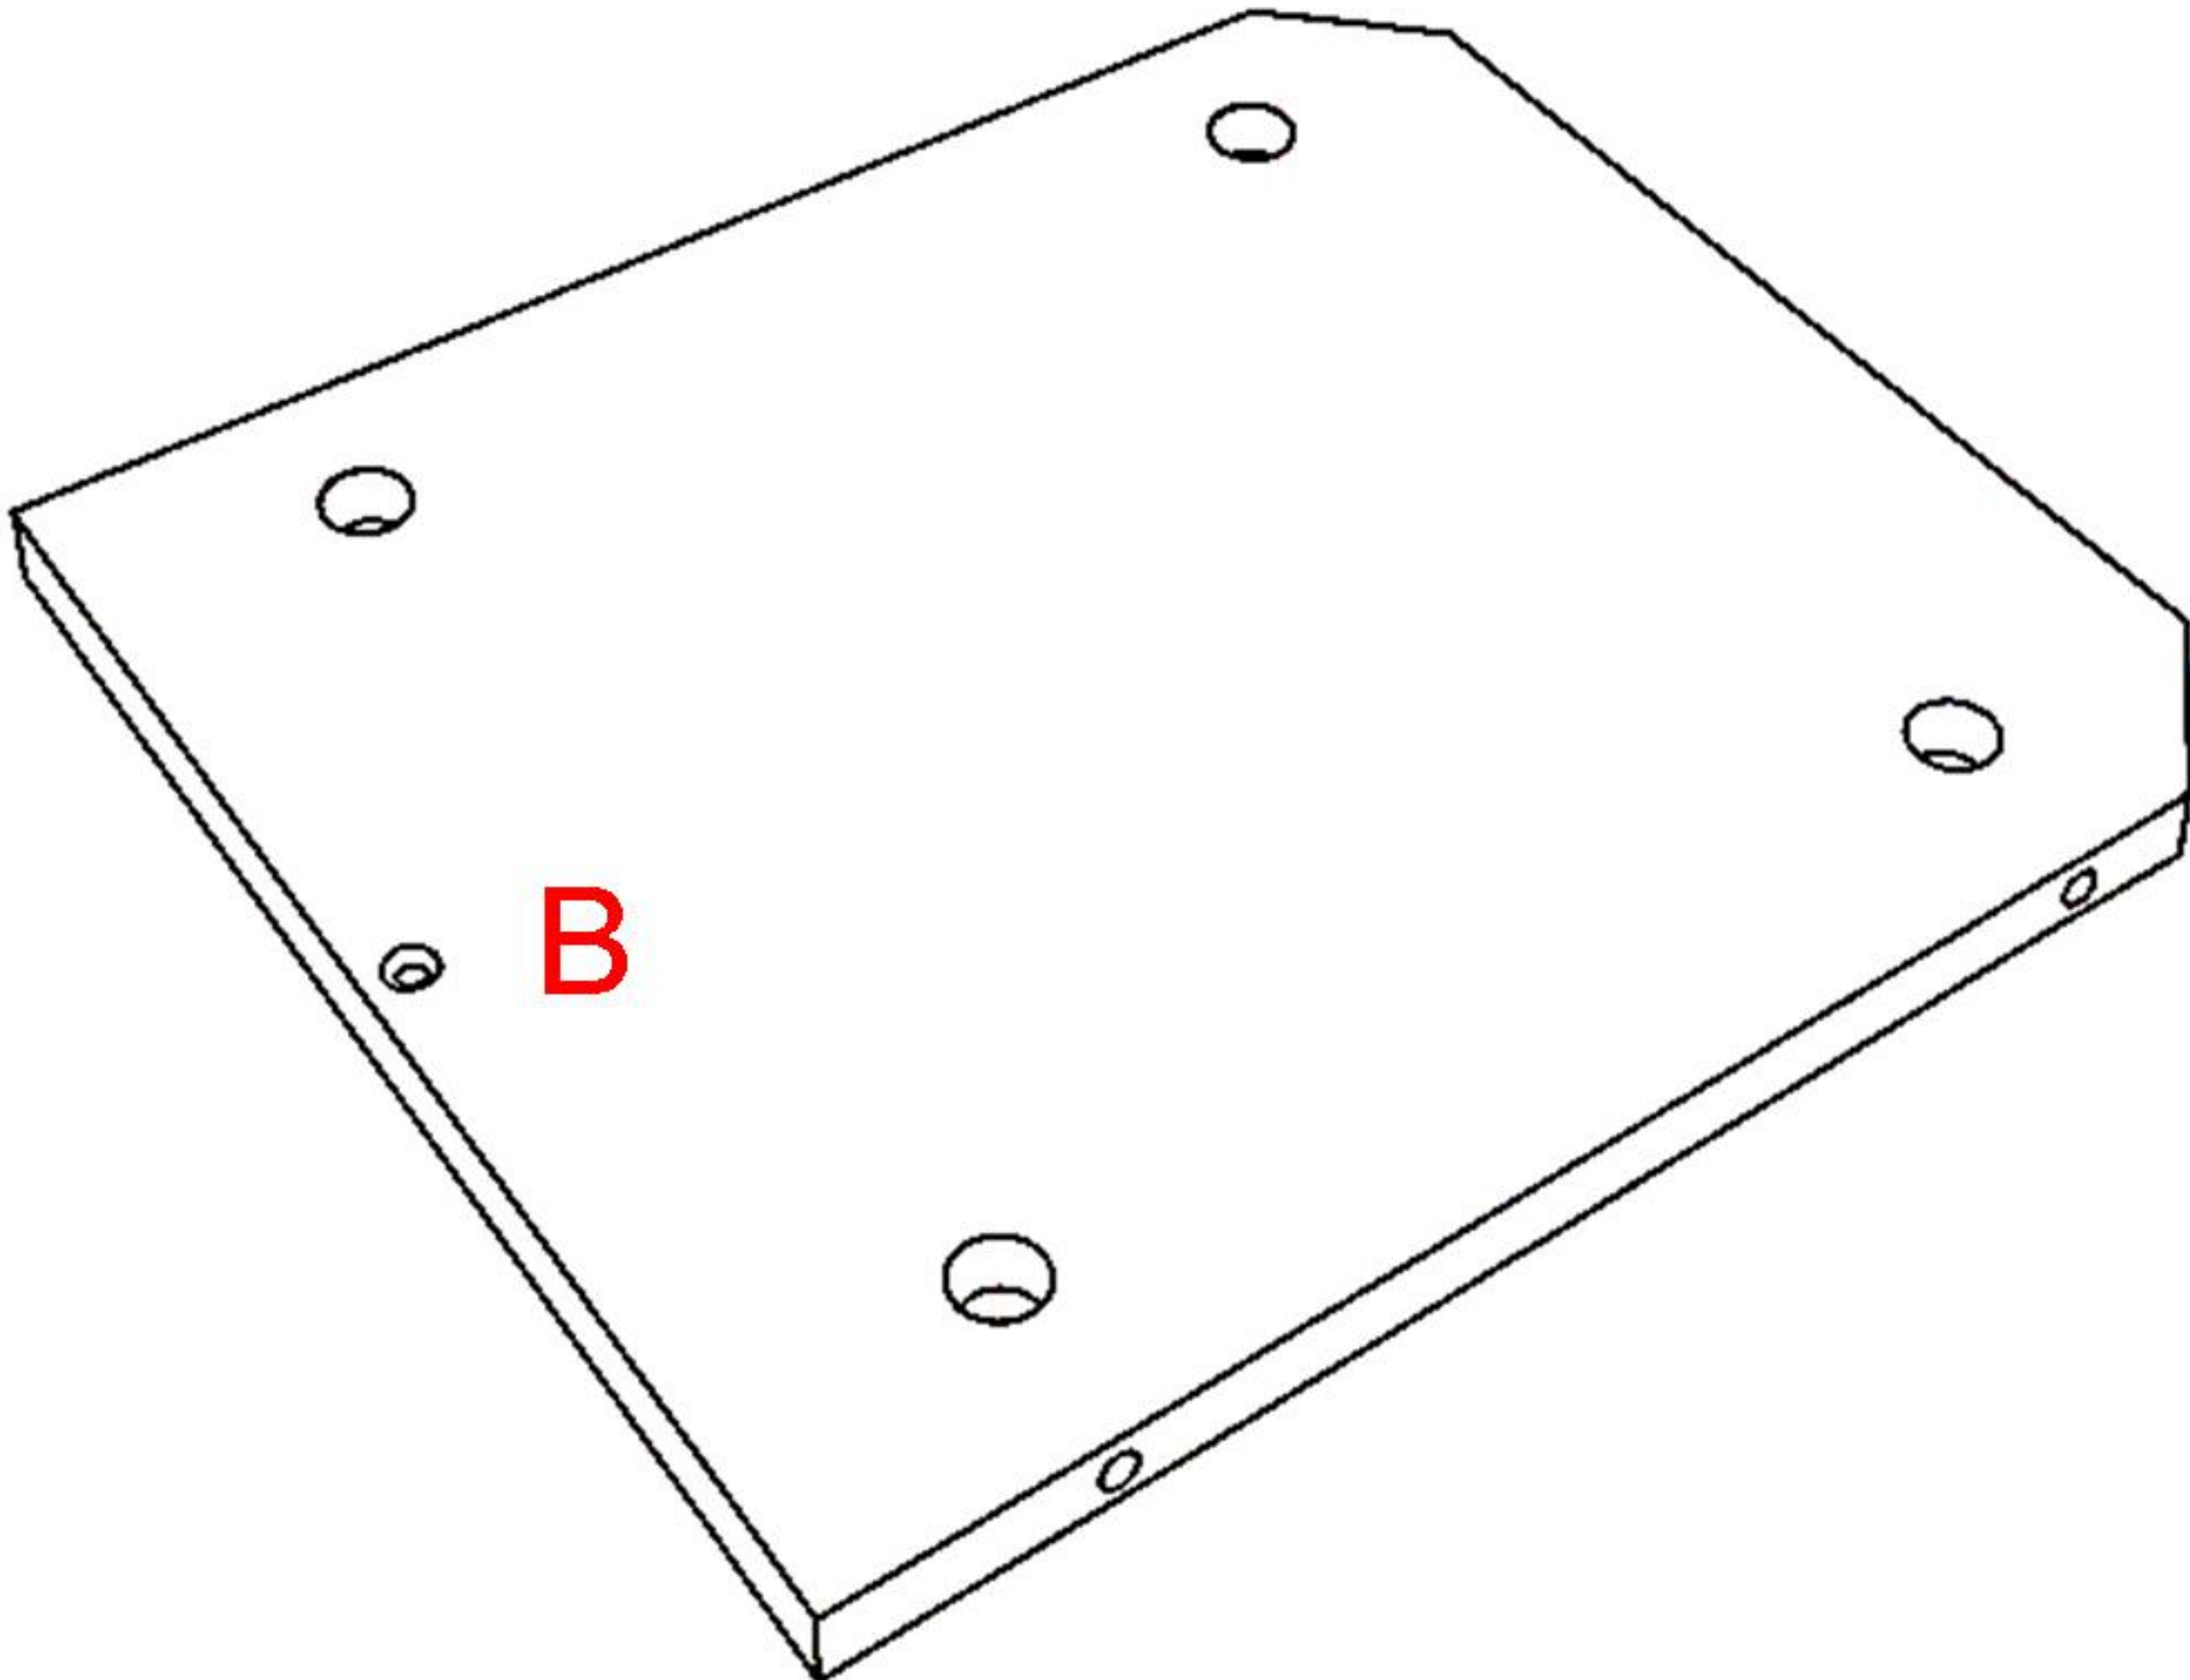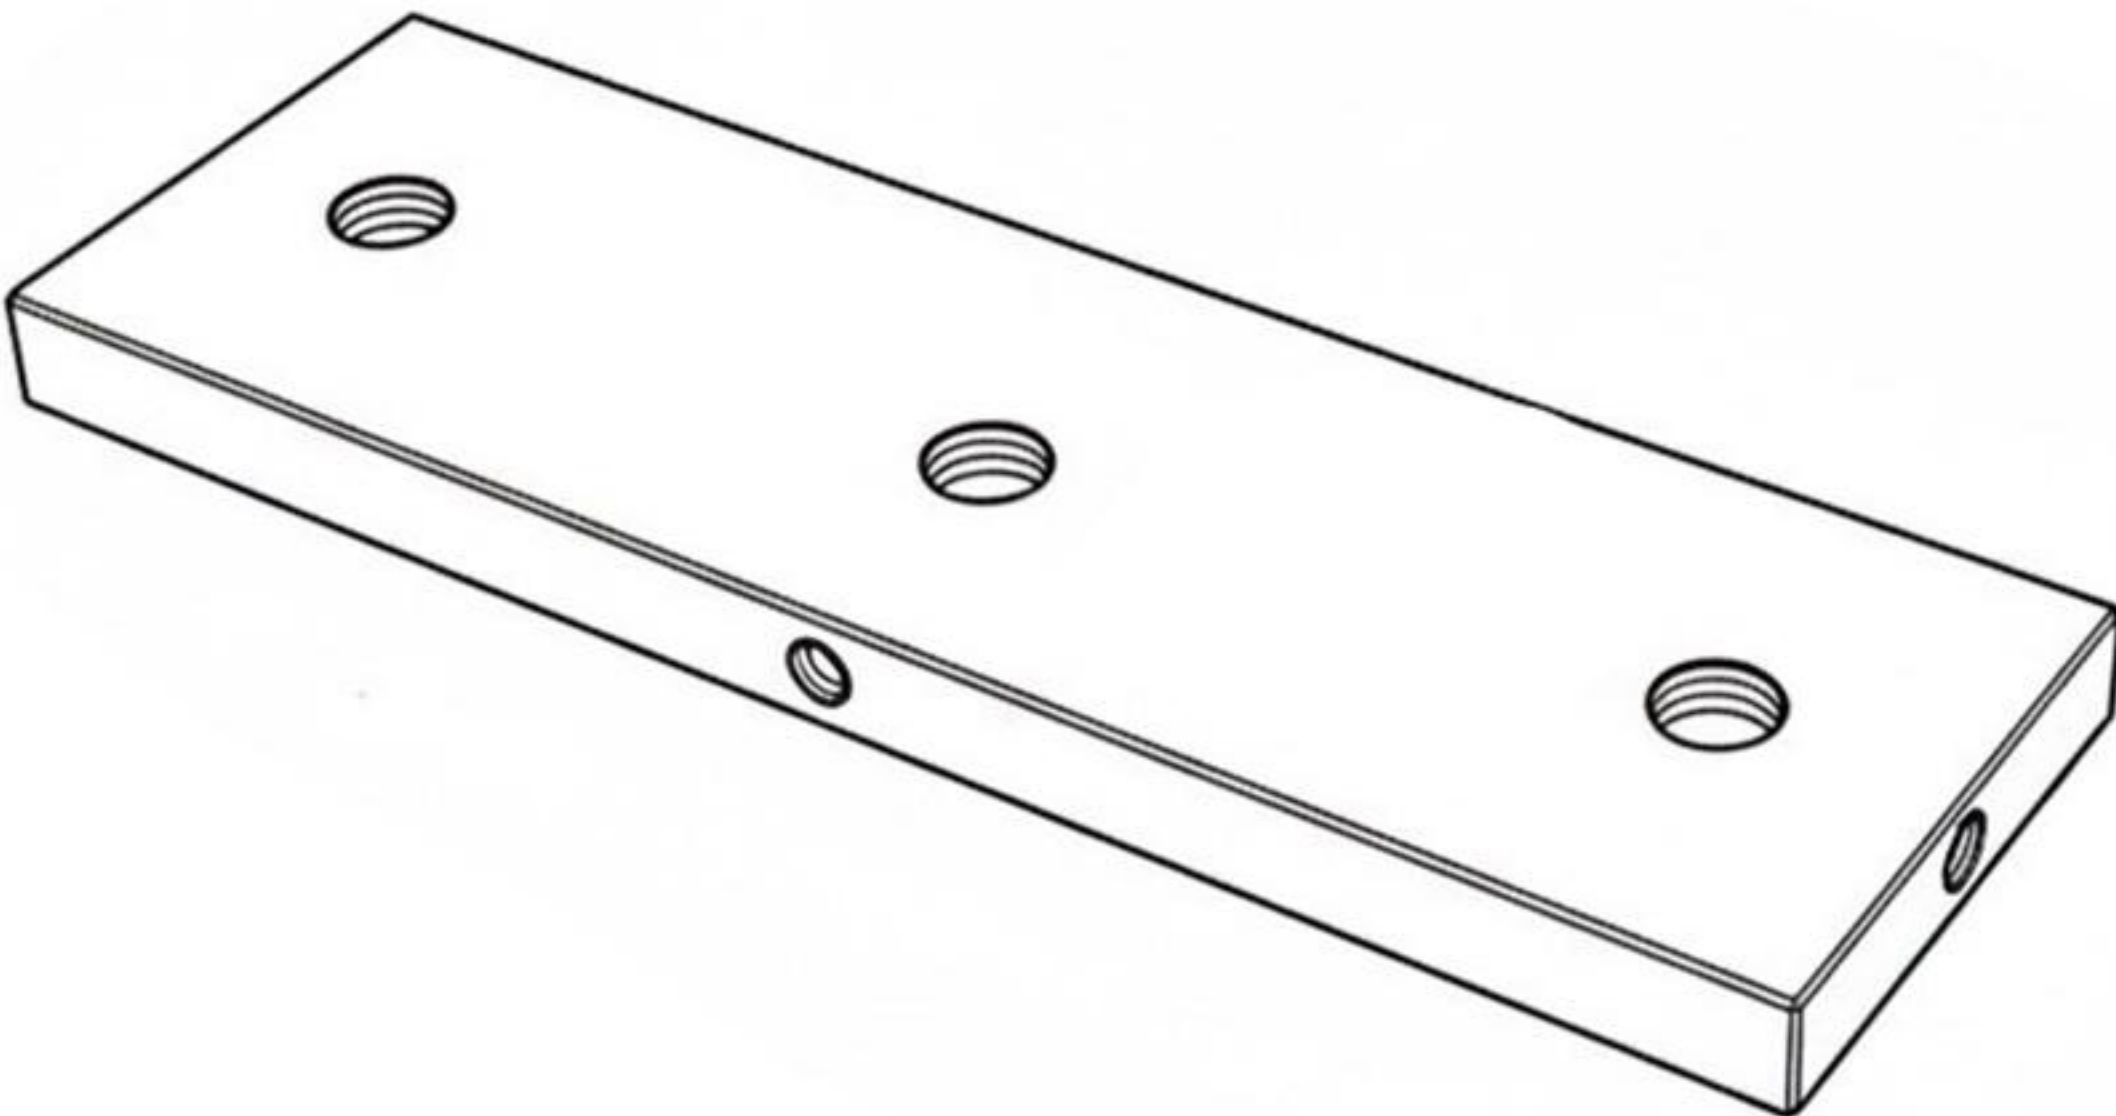


6


4

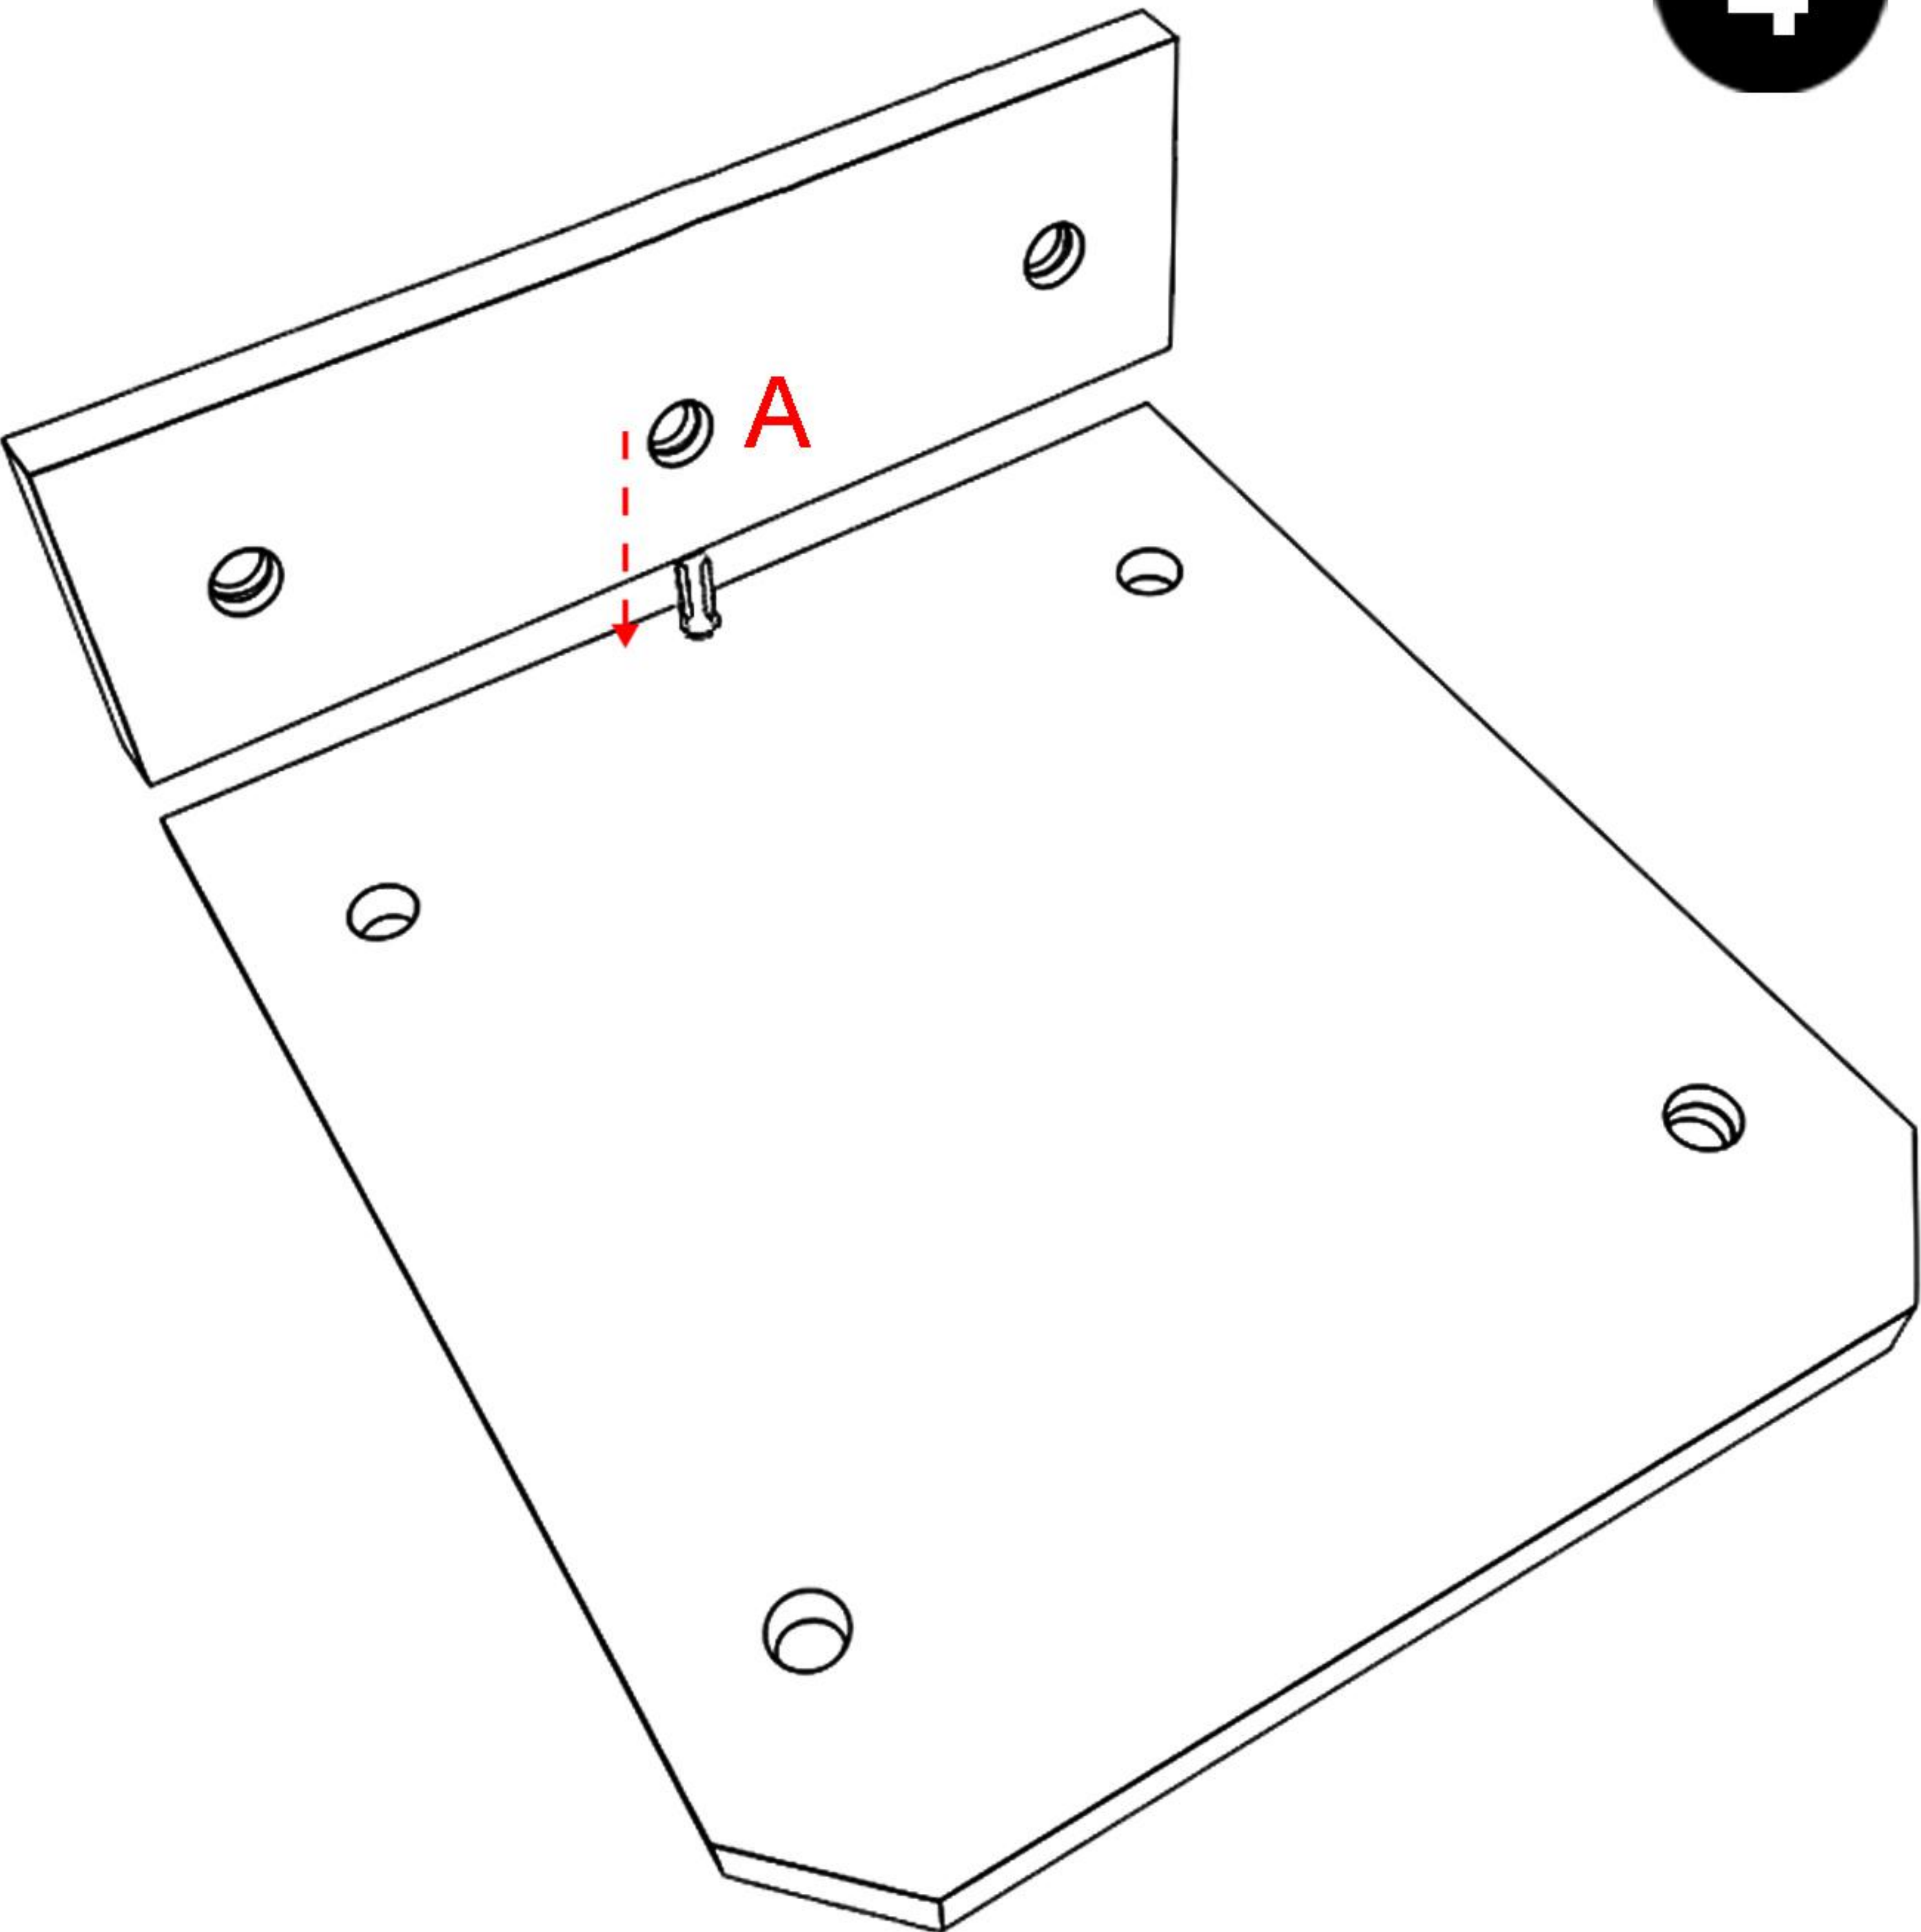

Step 5:

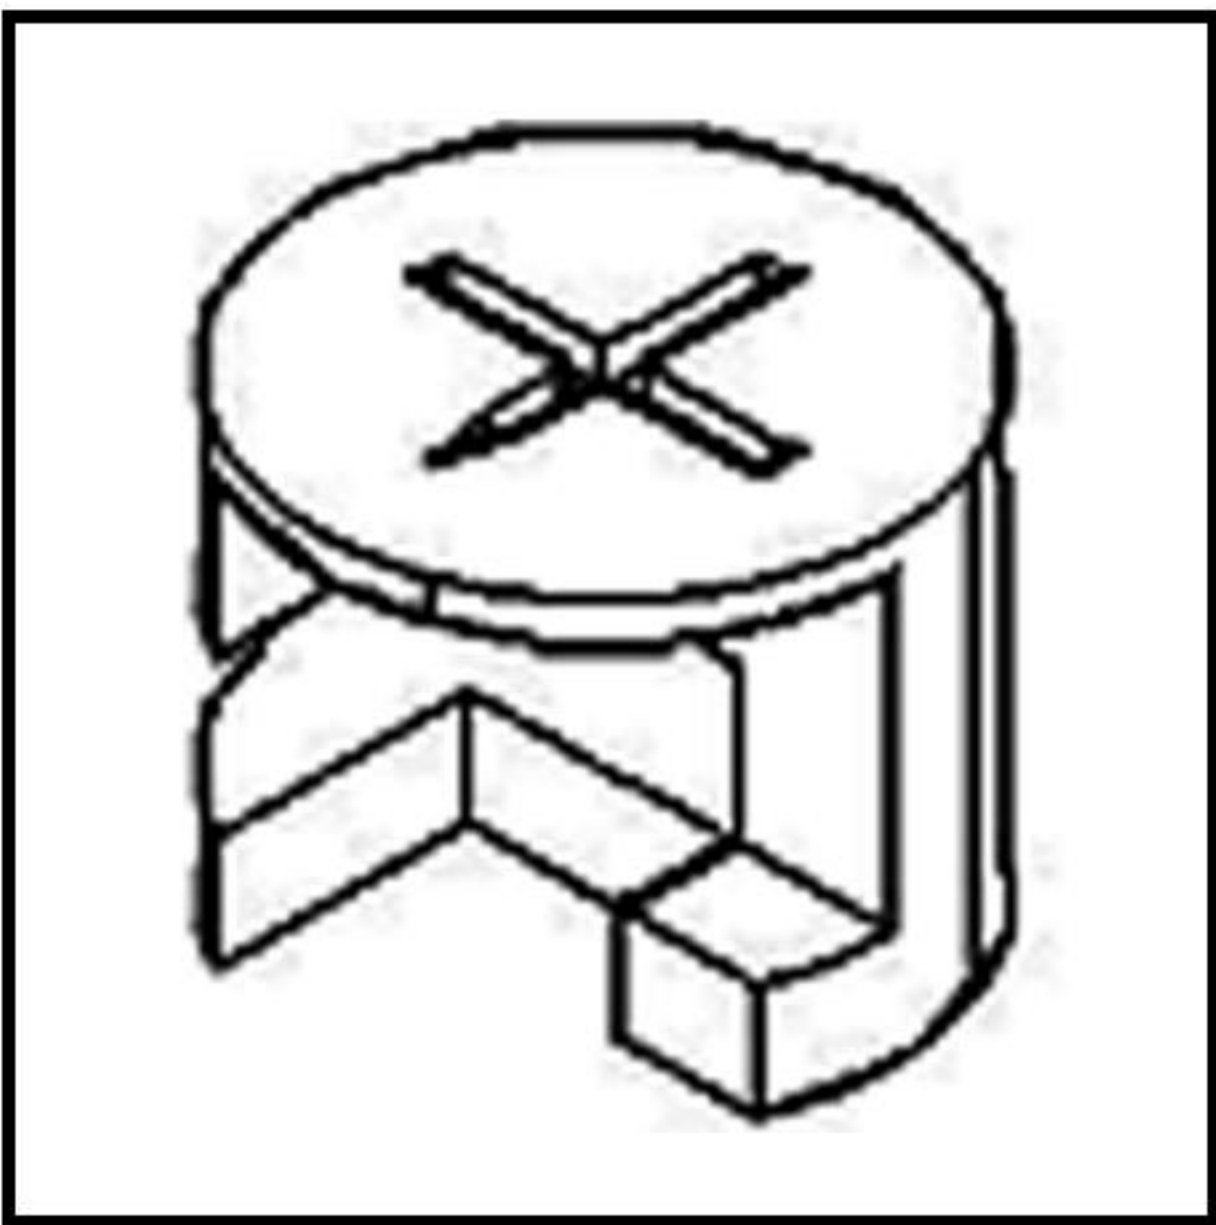


A

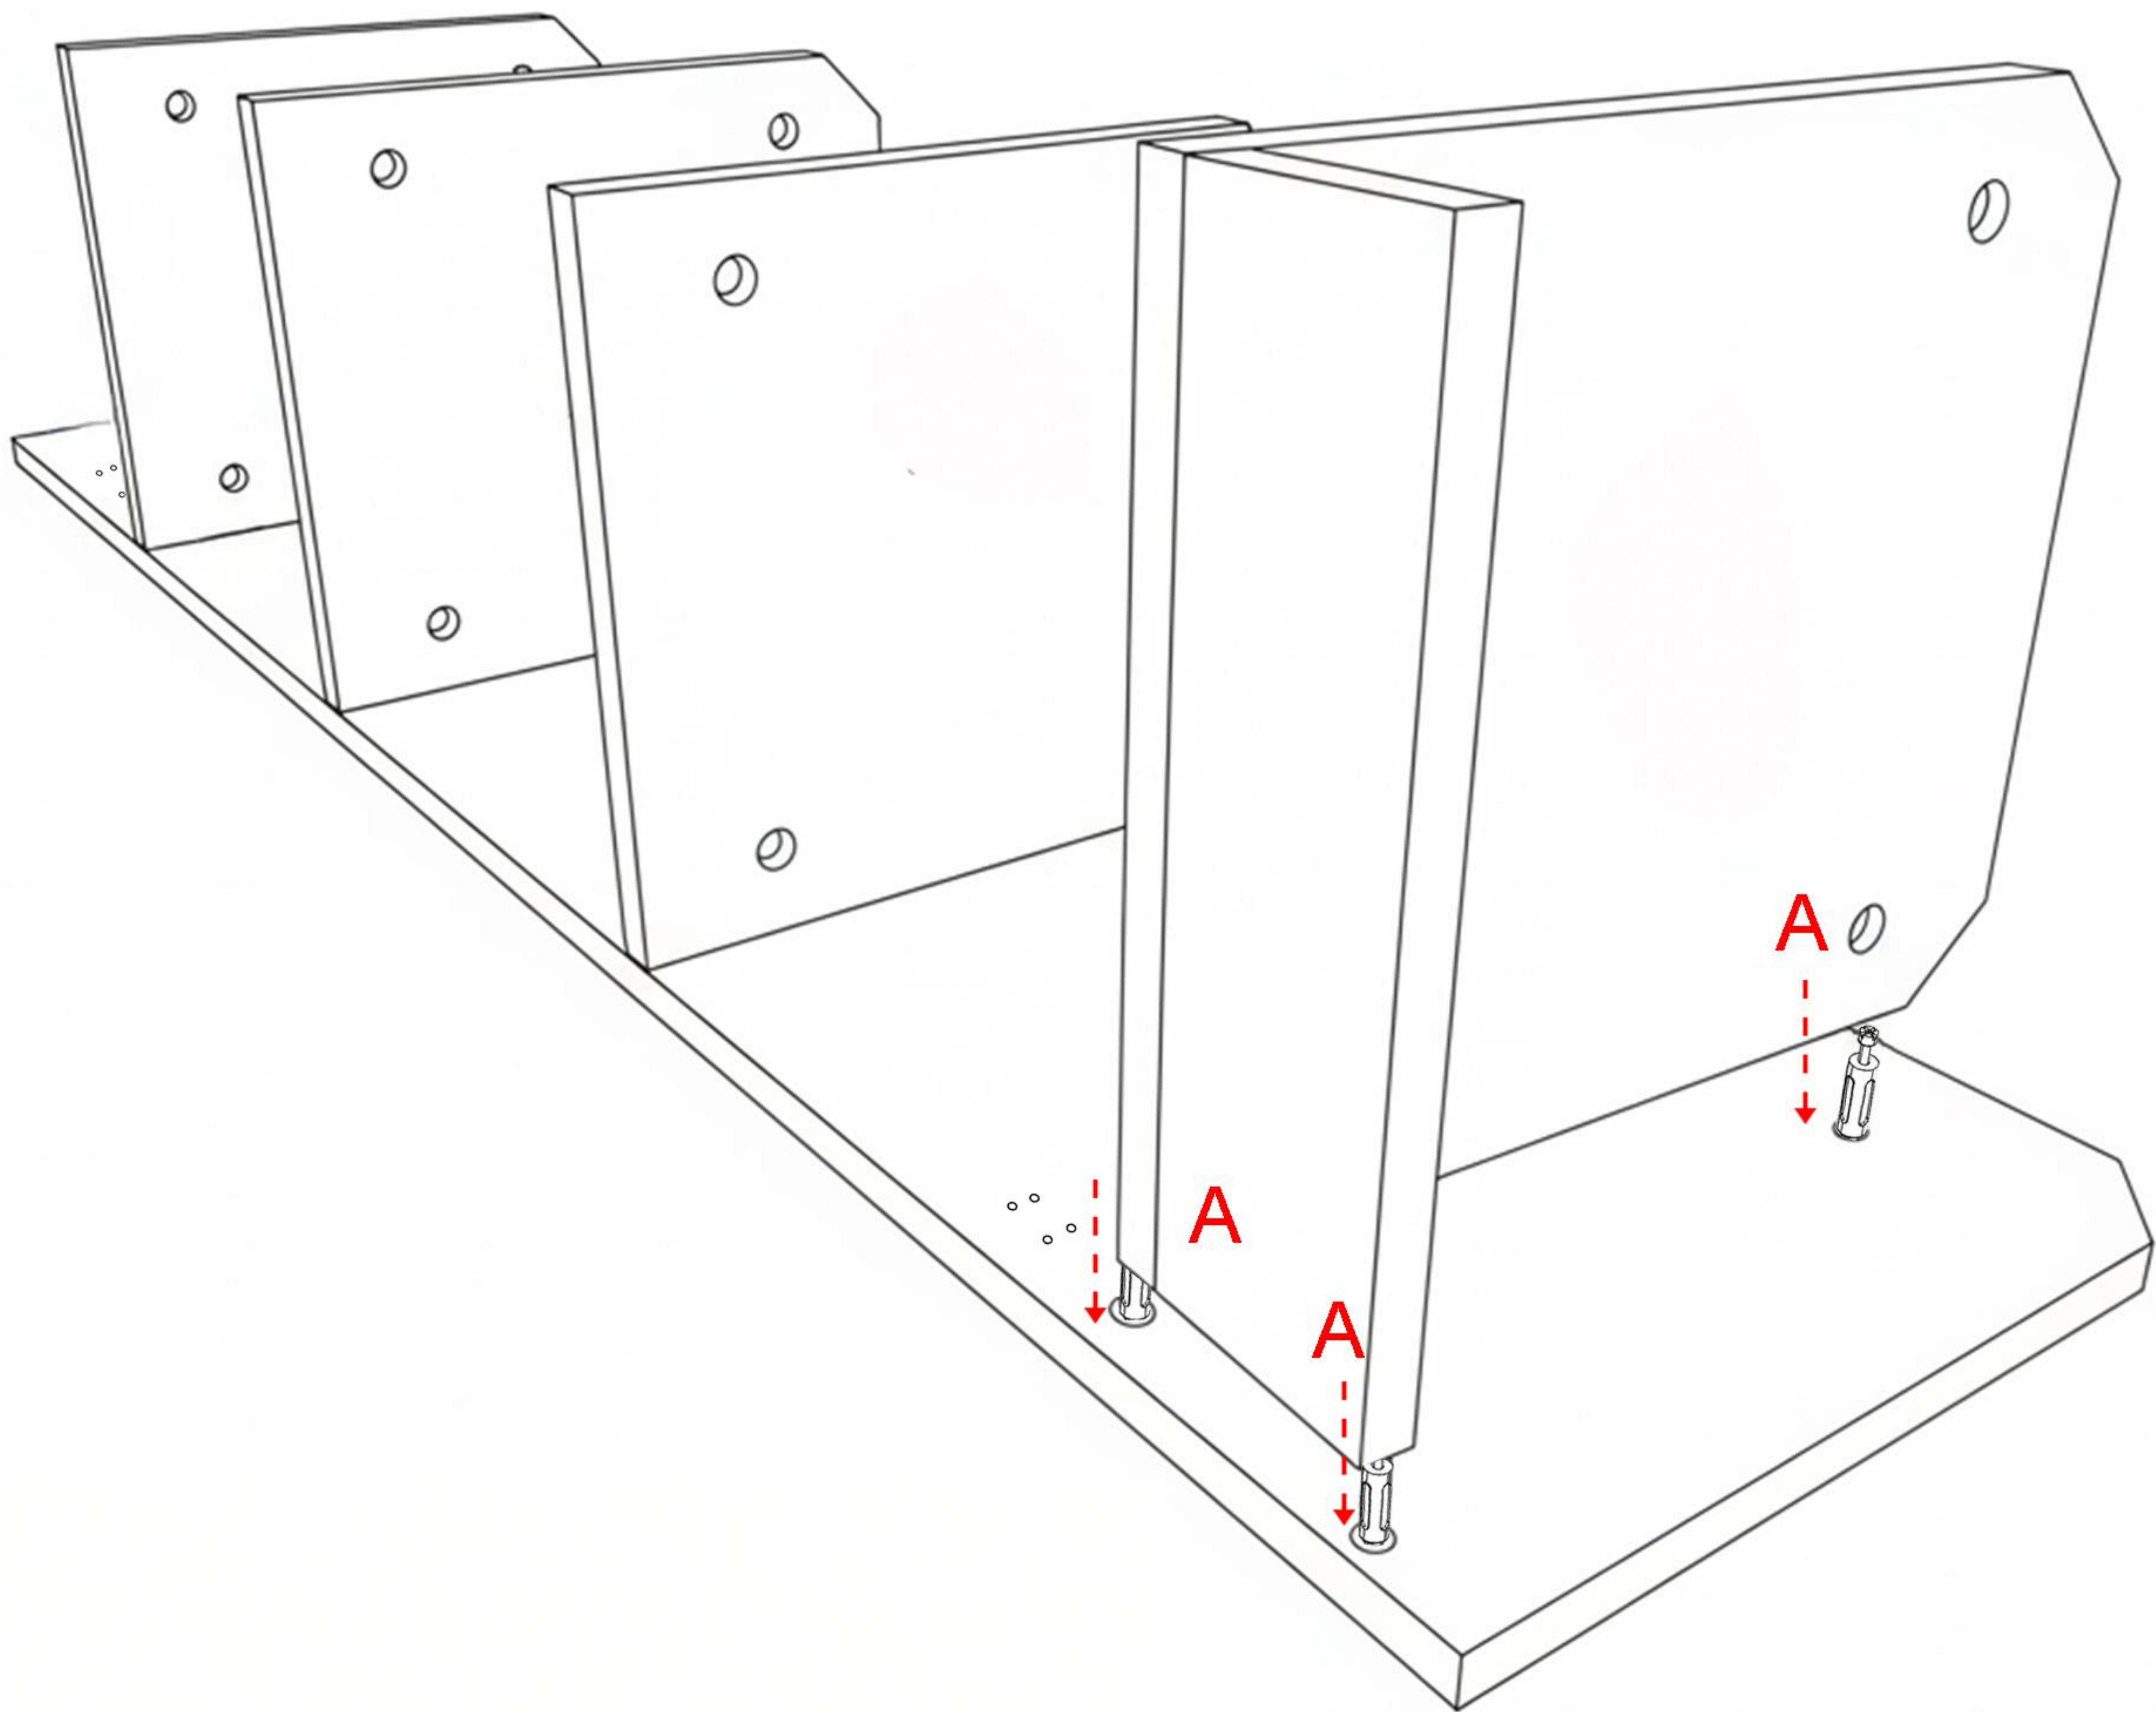


Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 6:

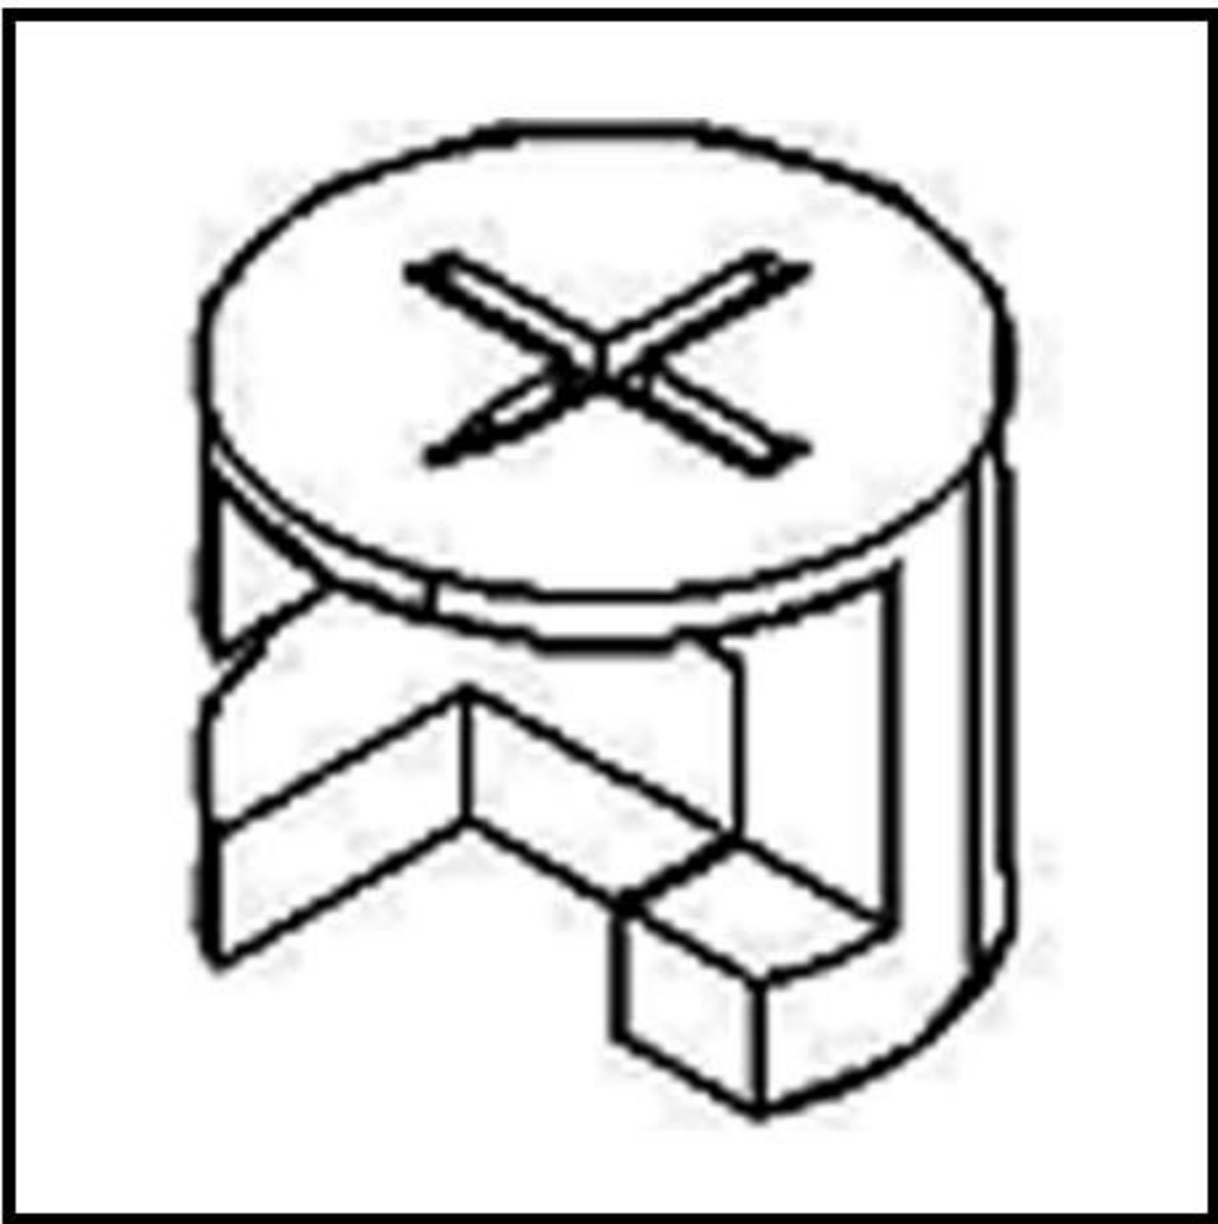


A

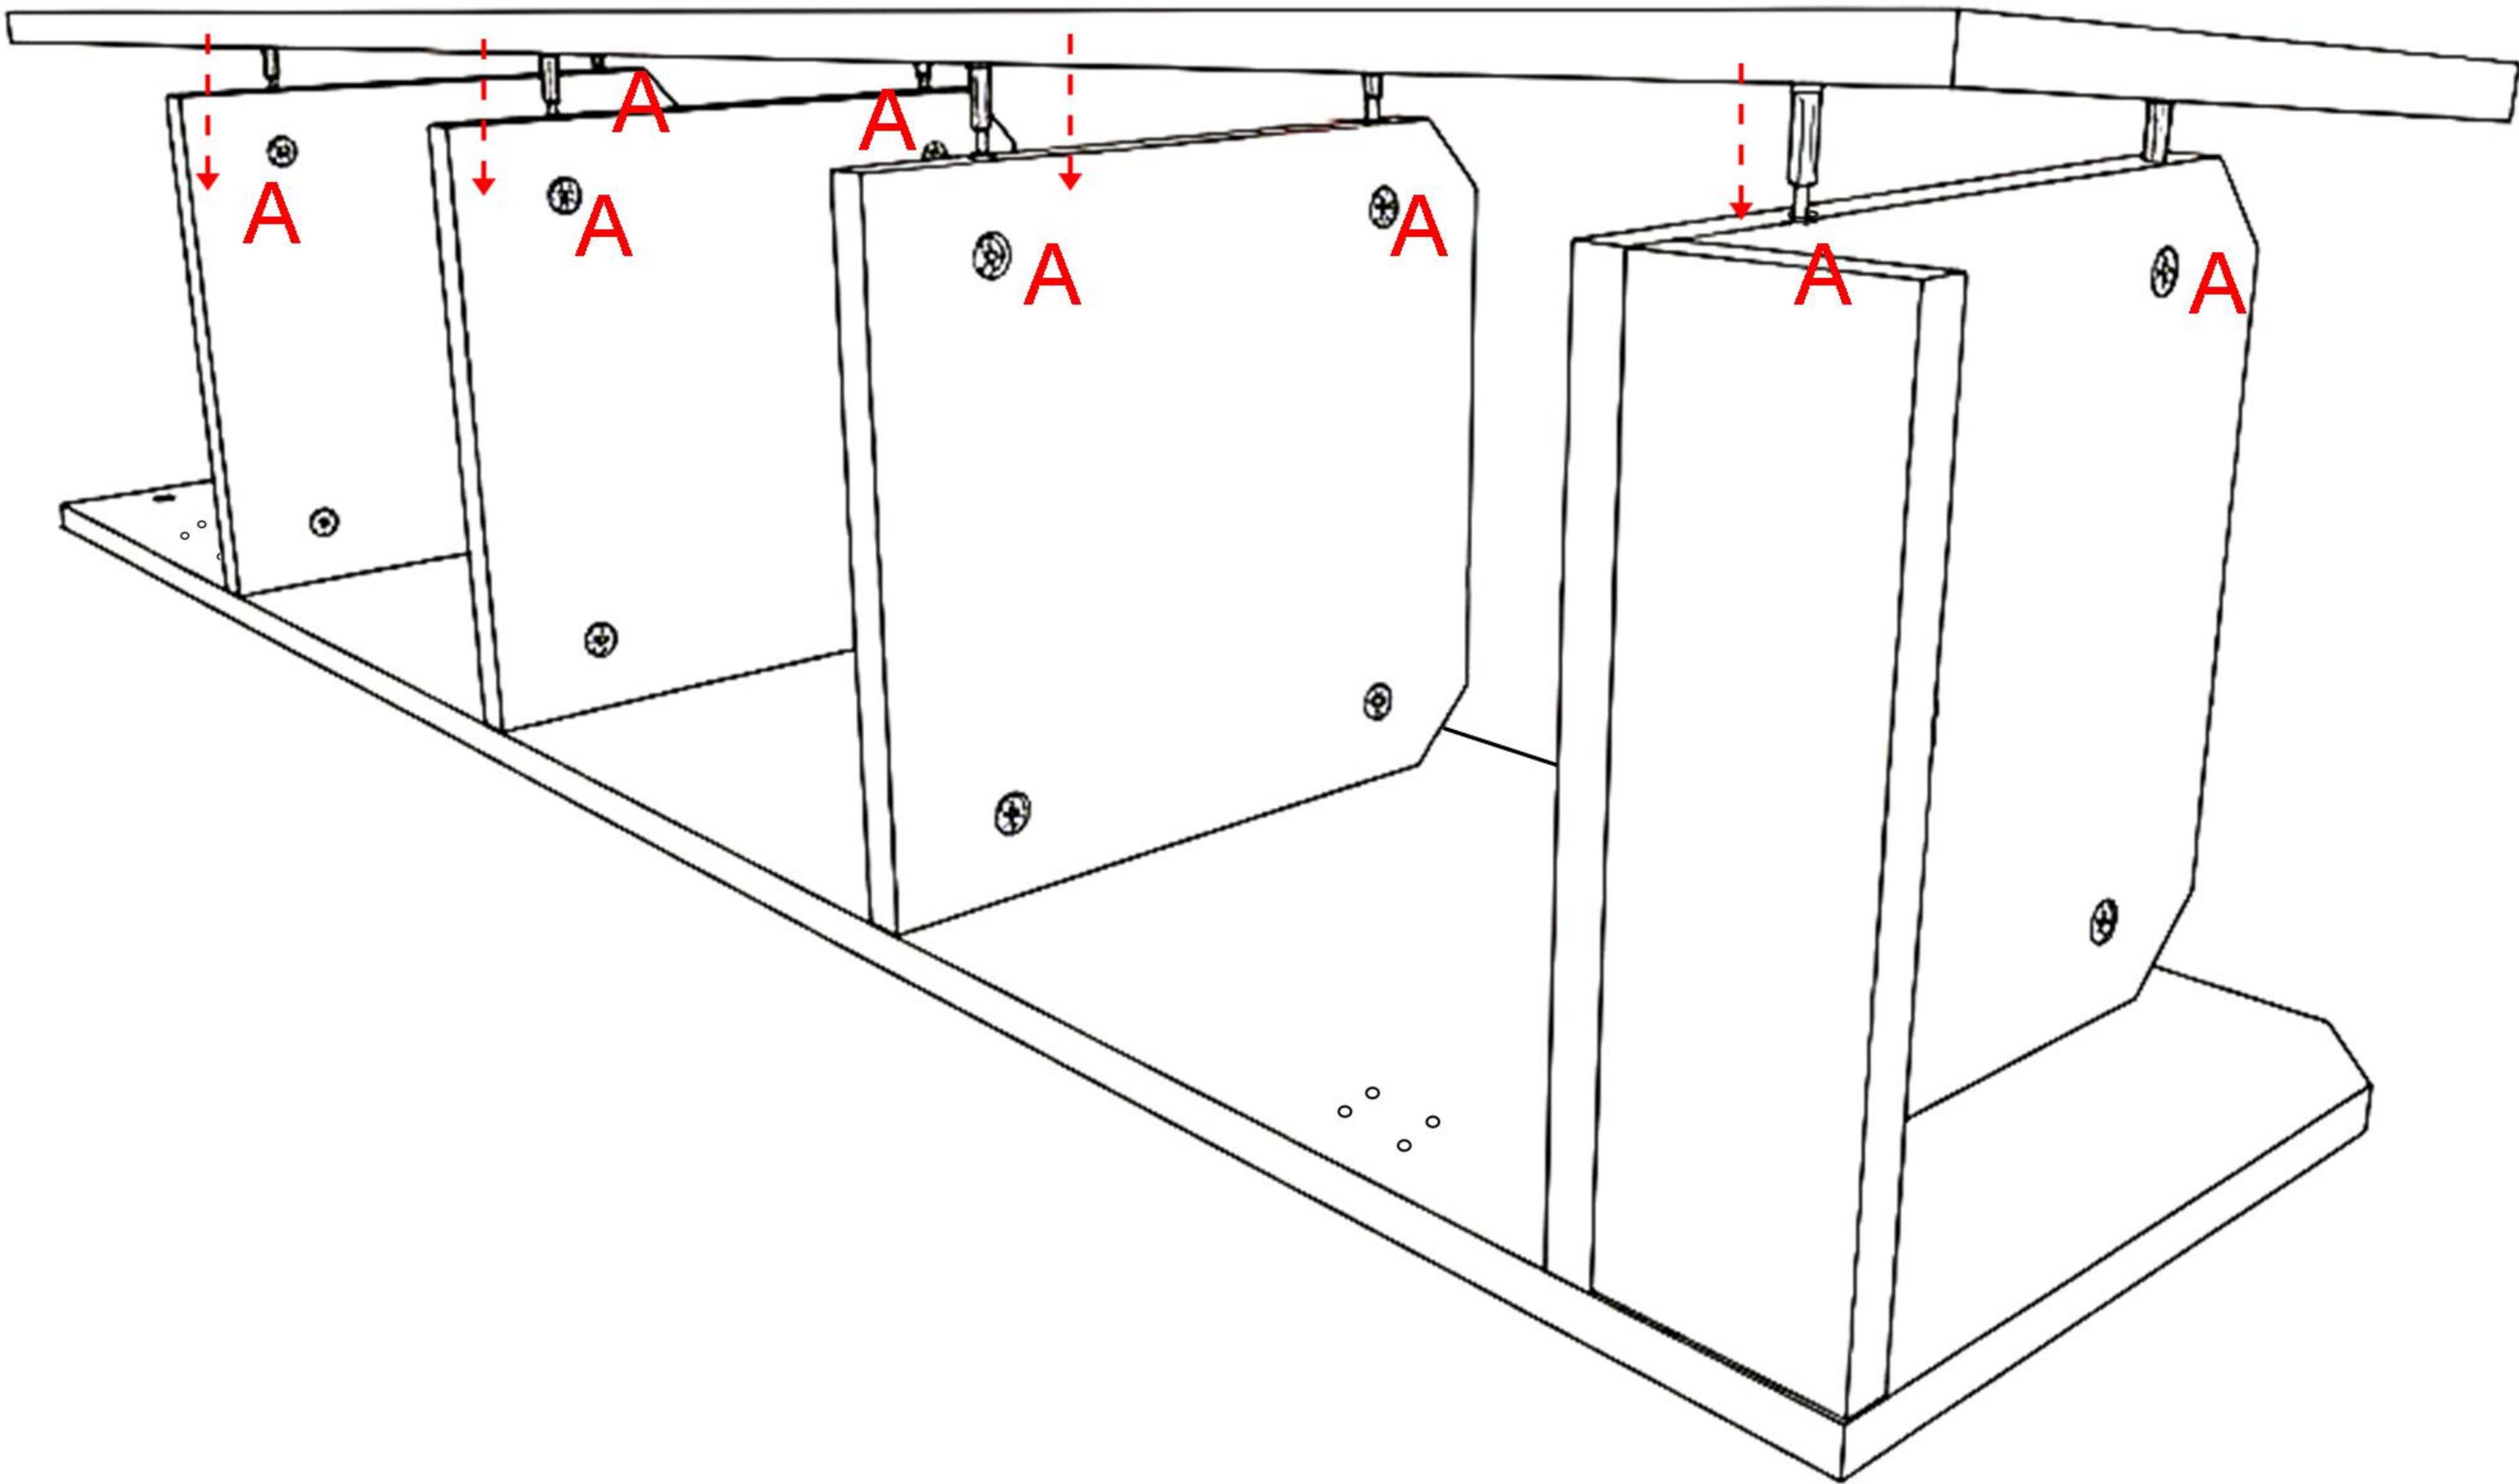


Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 7:

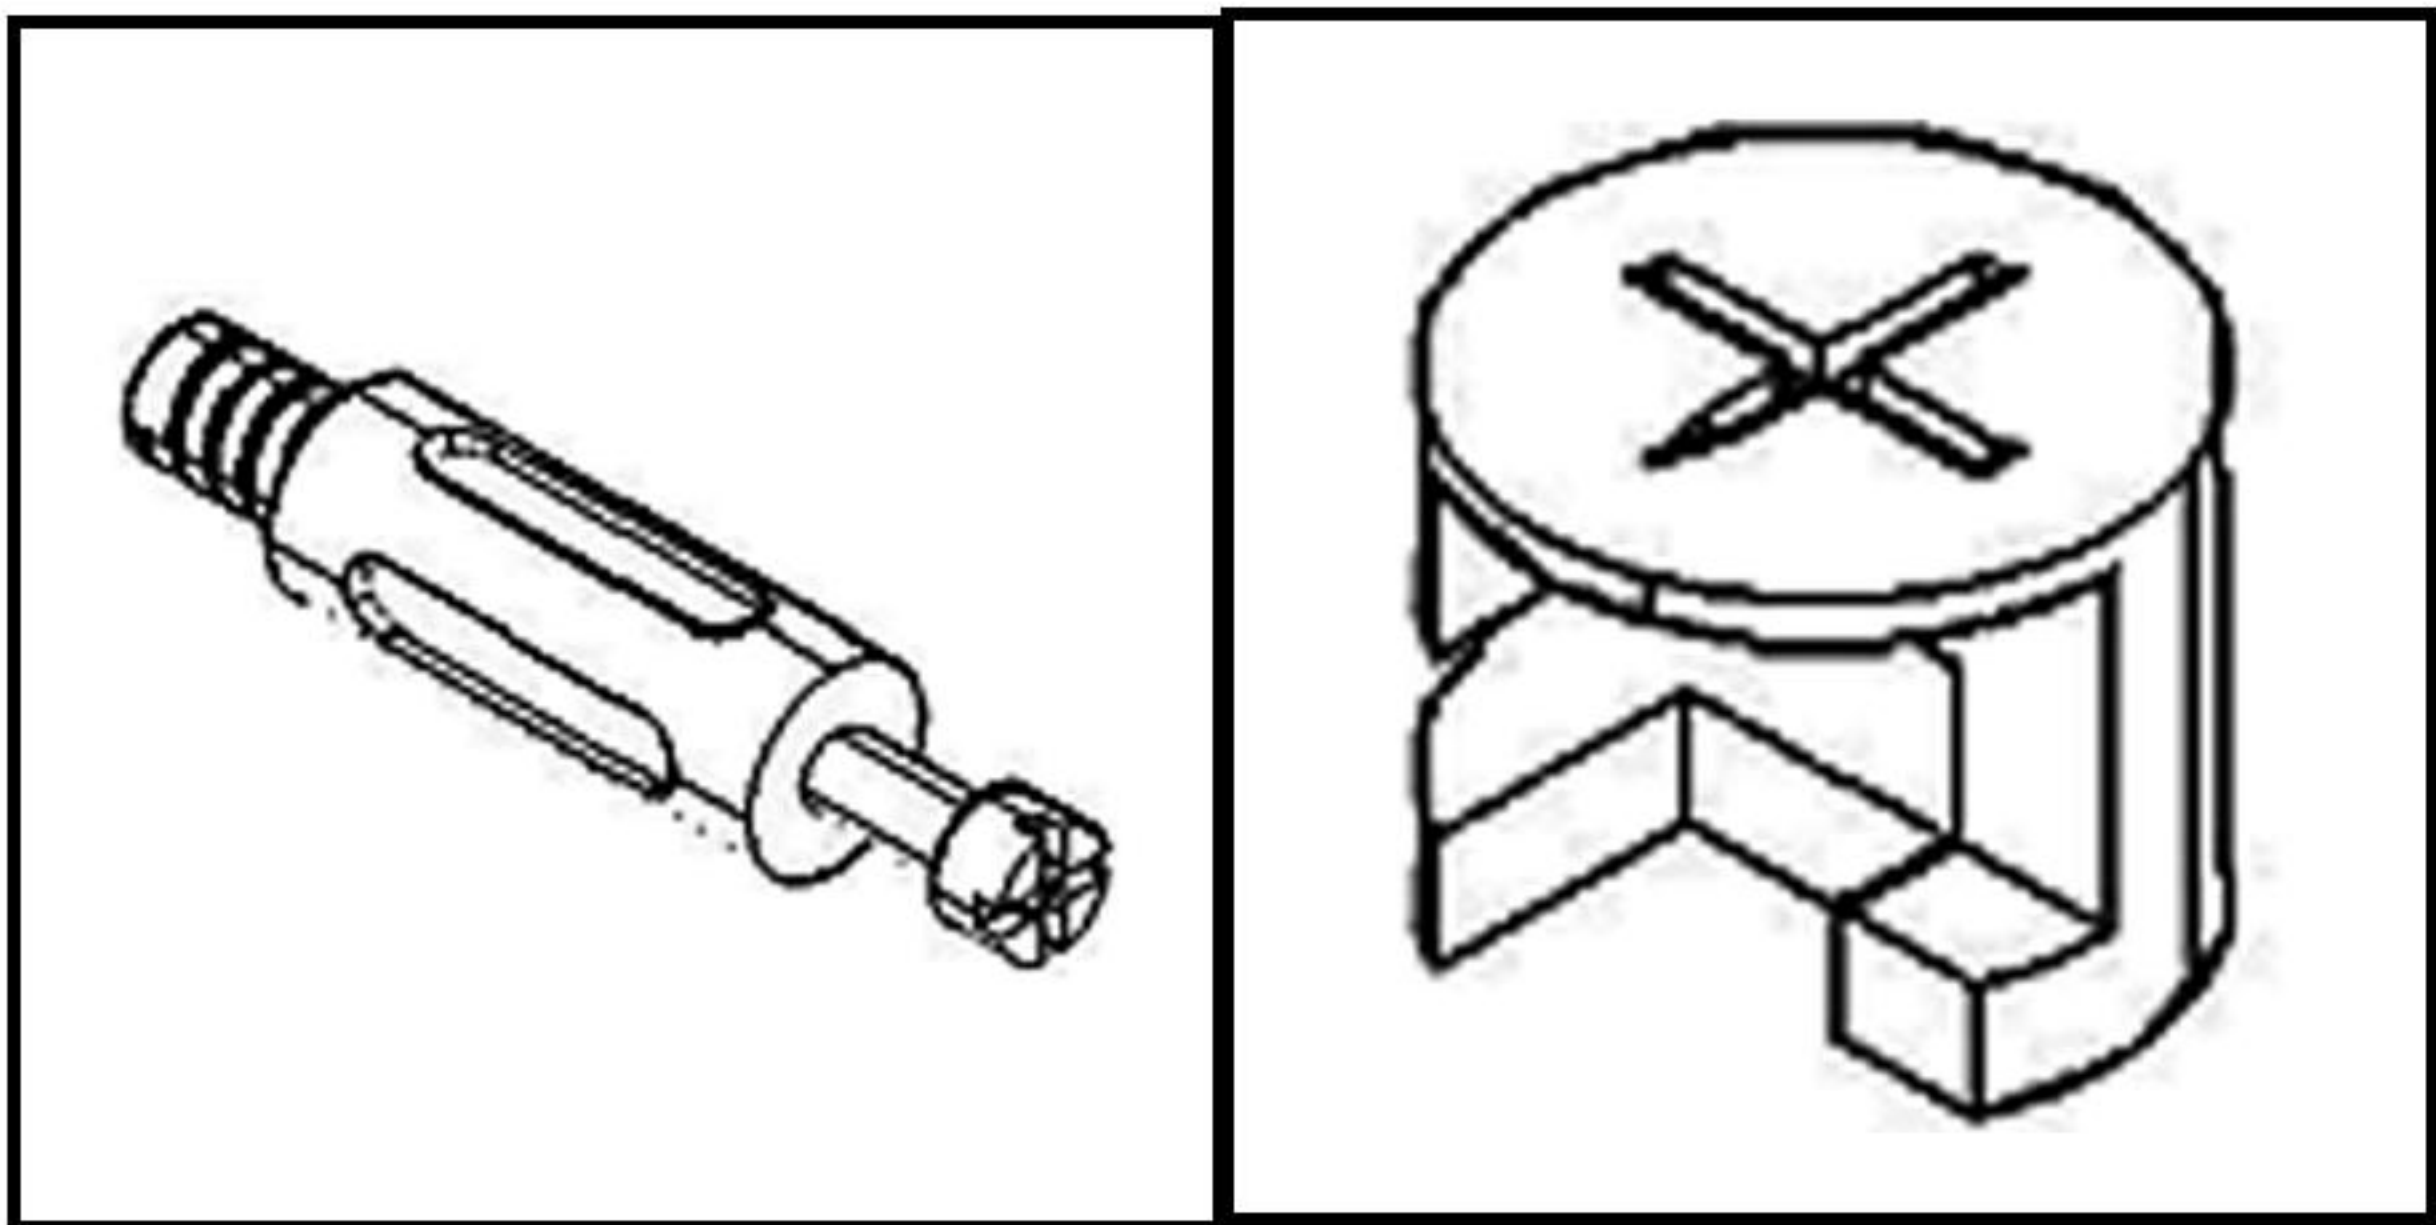


B


A

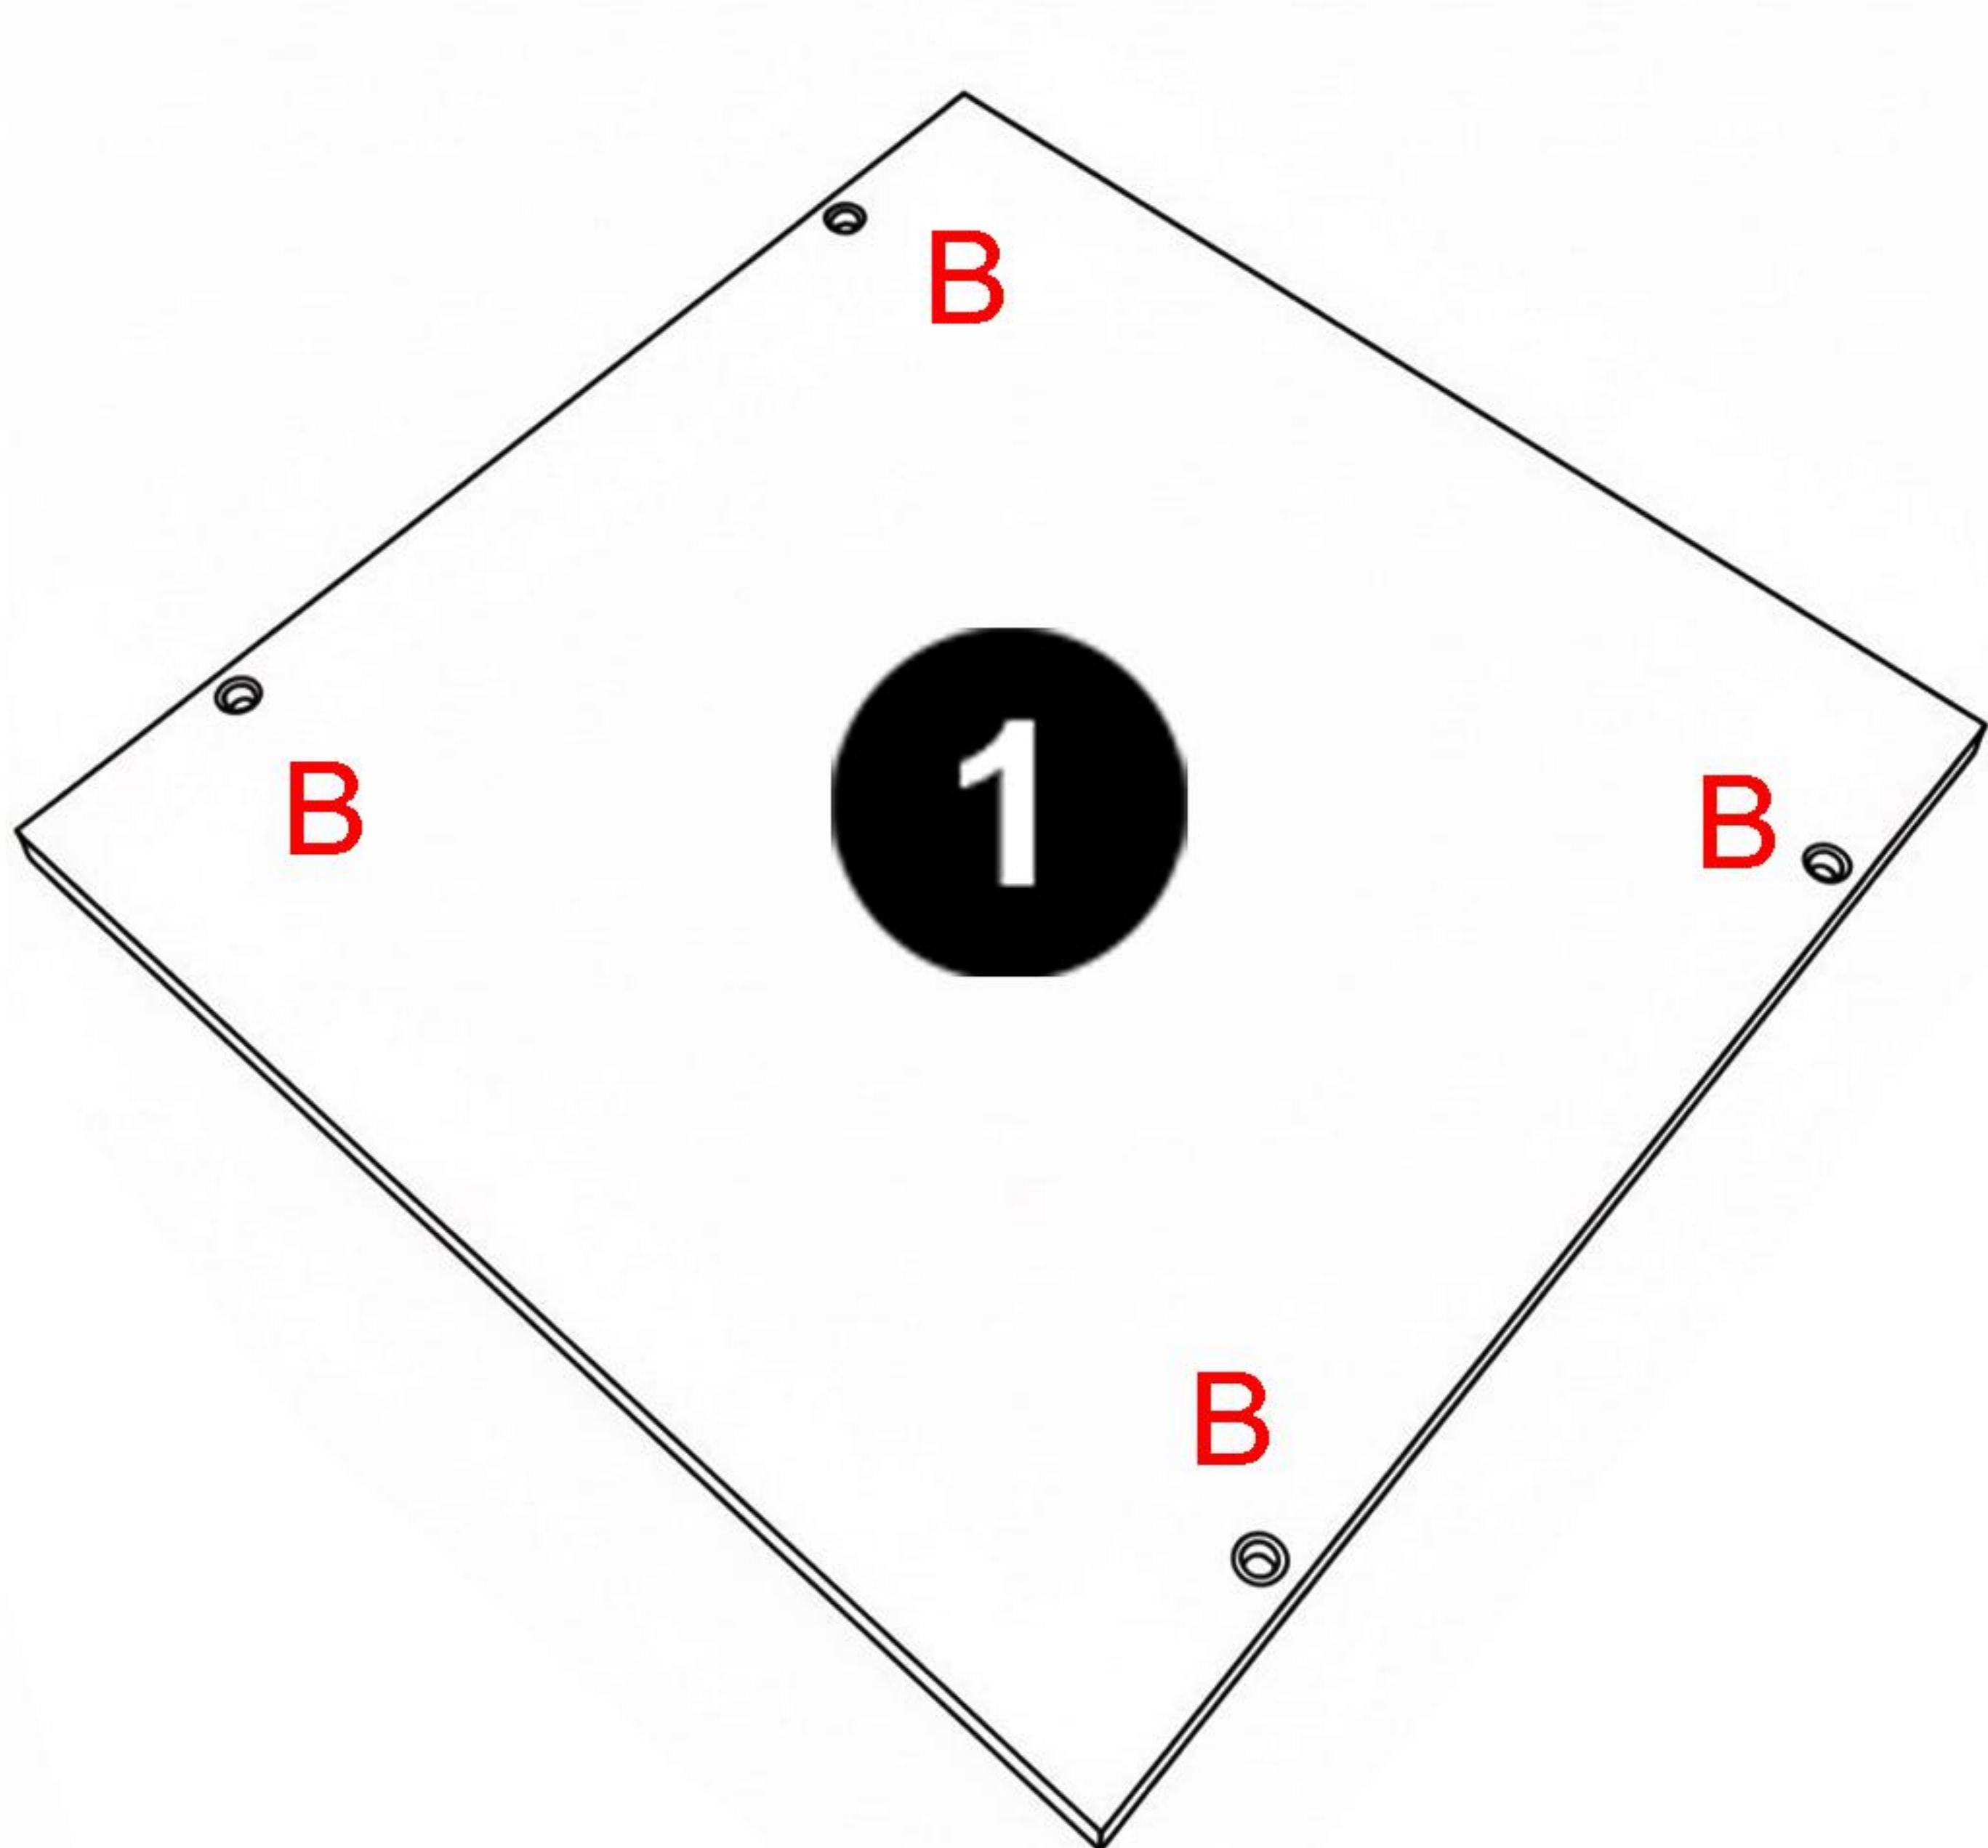

Top

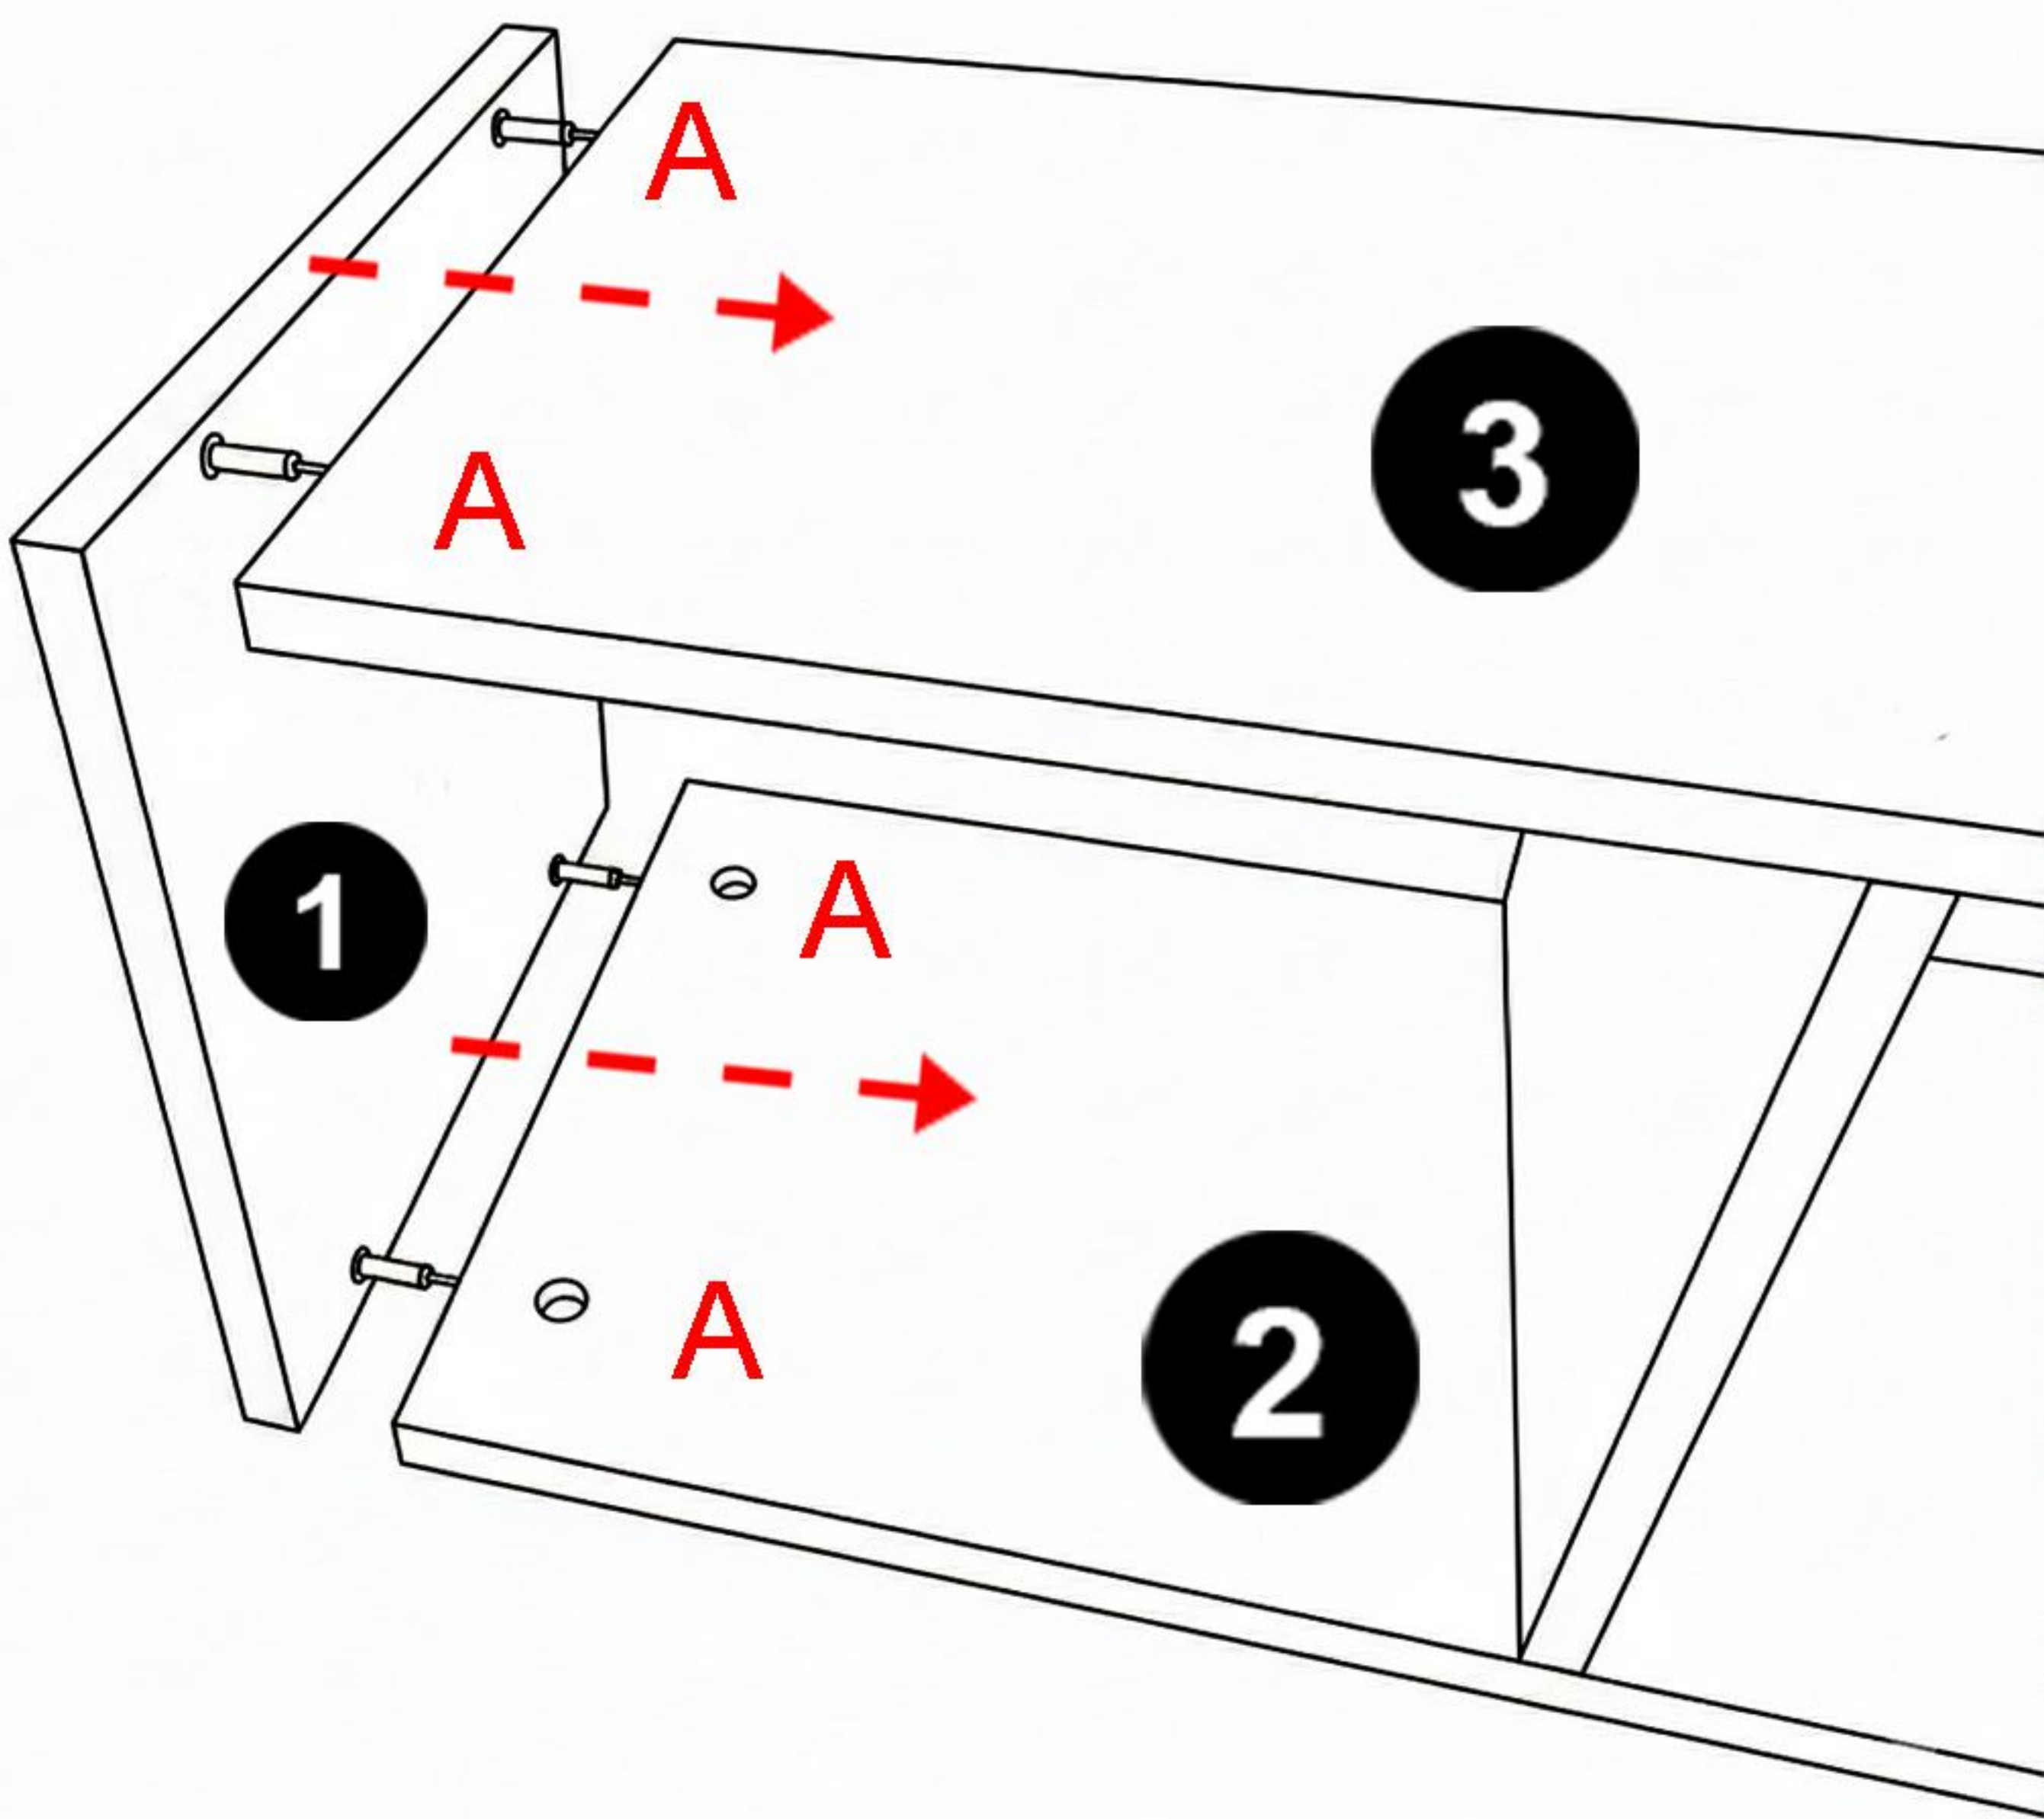


Bottom

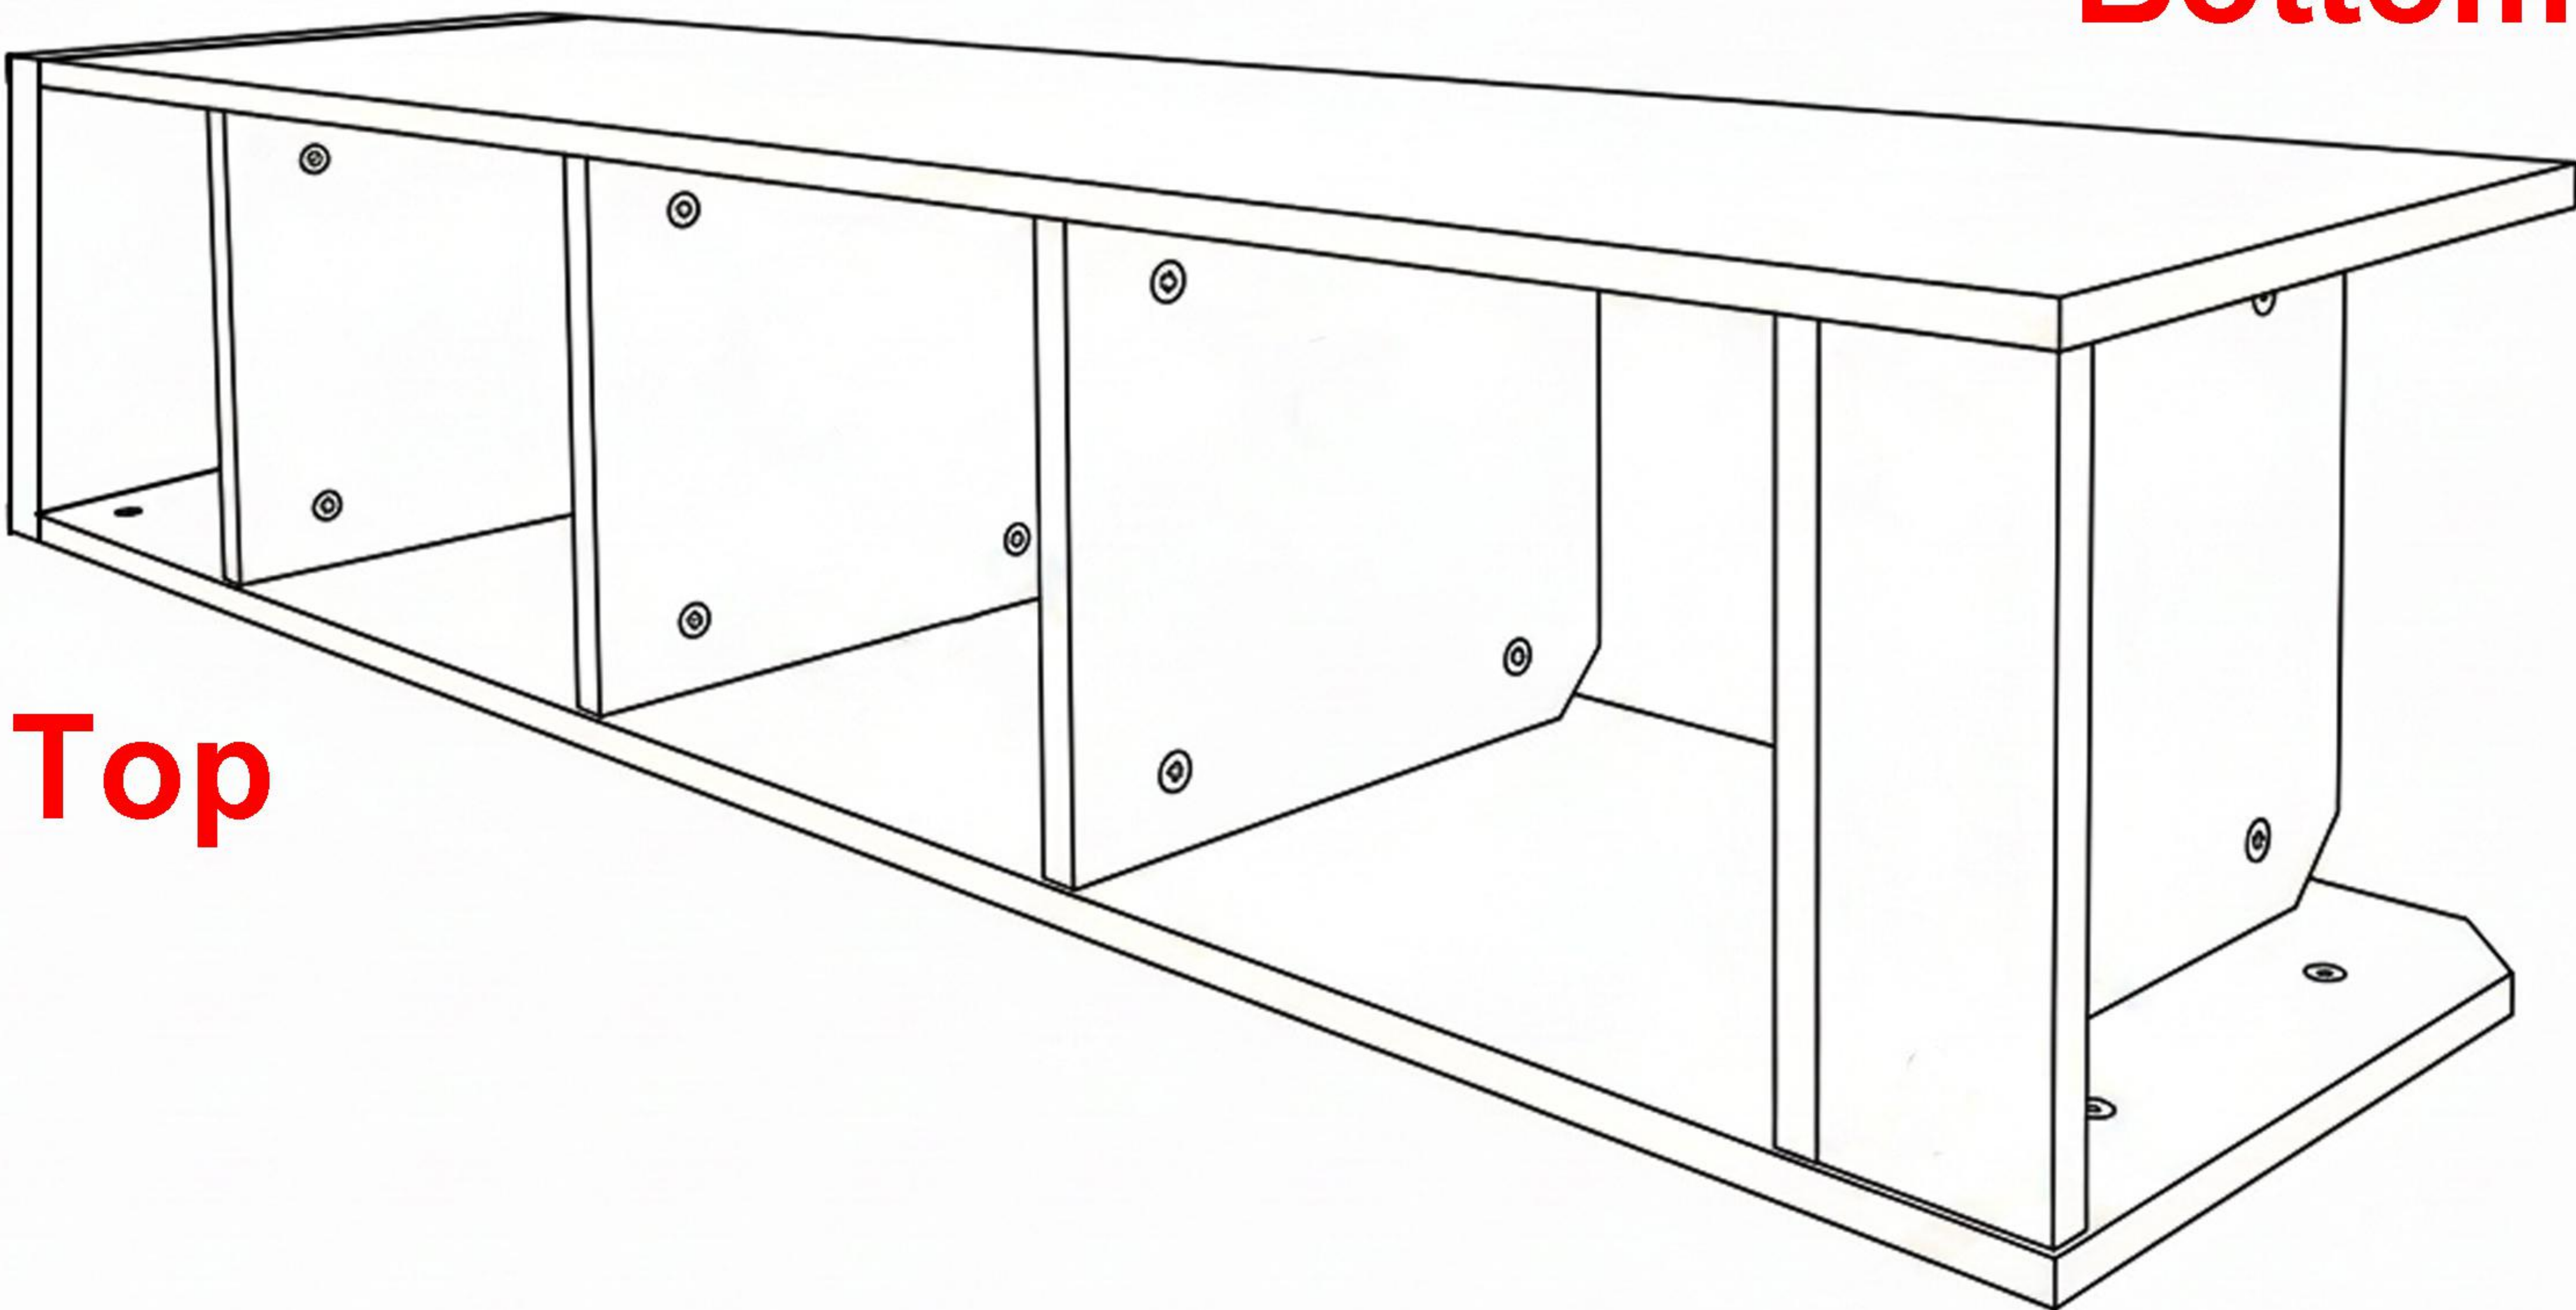


Top

Step 8:

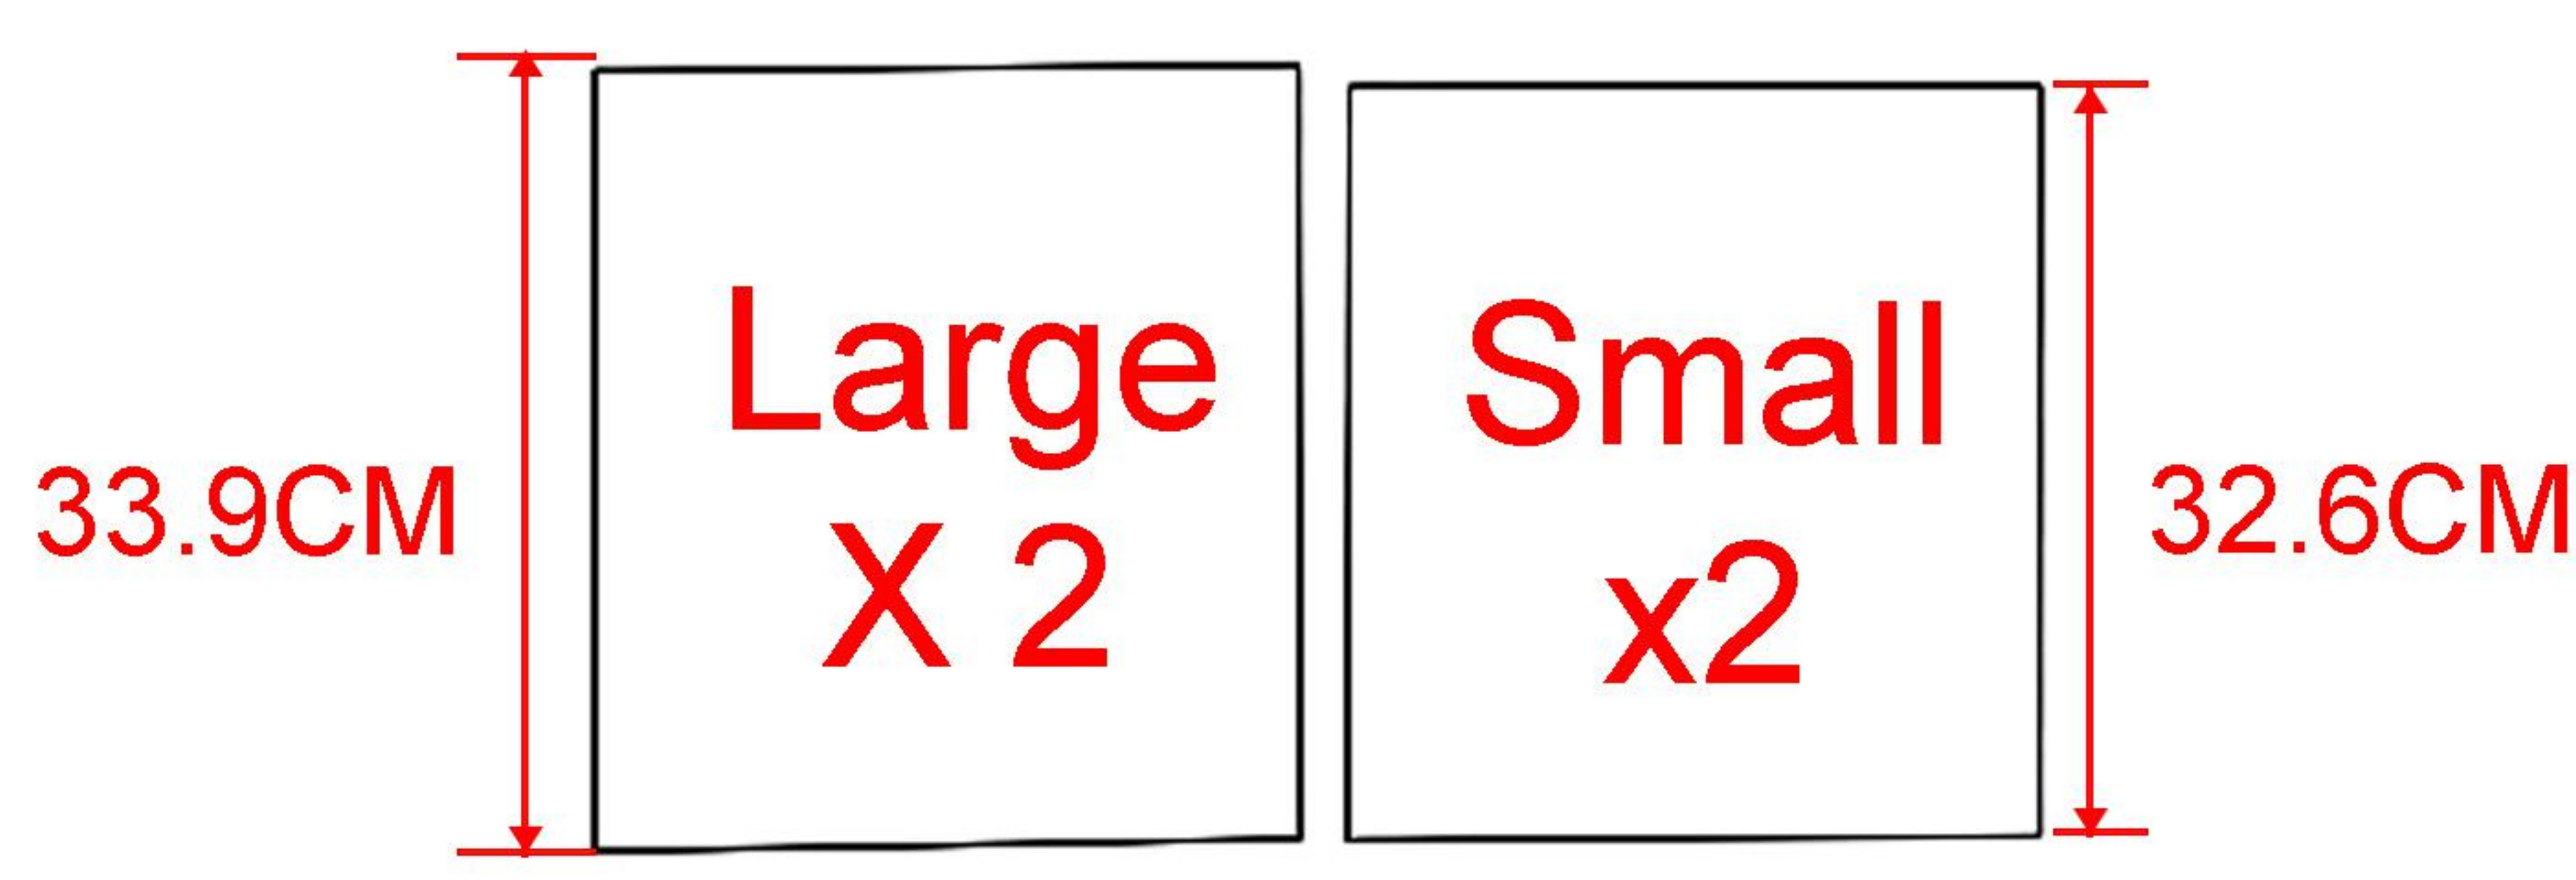

The two back panels are very similar in size. Please distinguish them carefully.

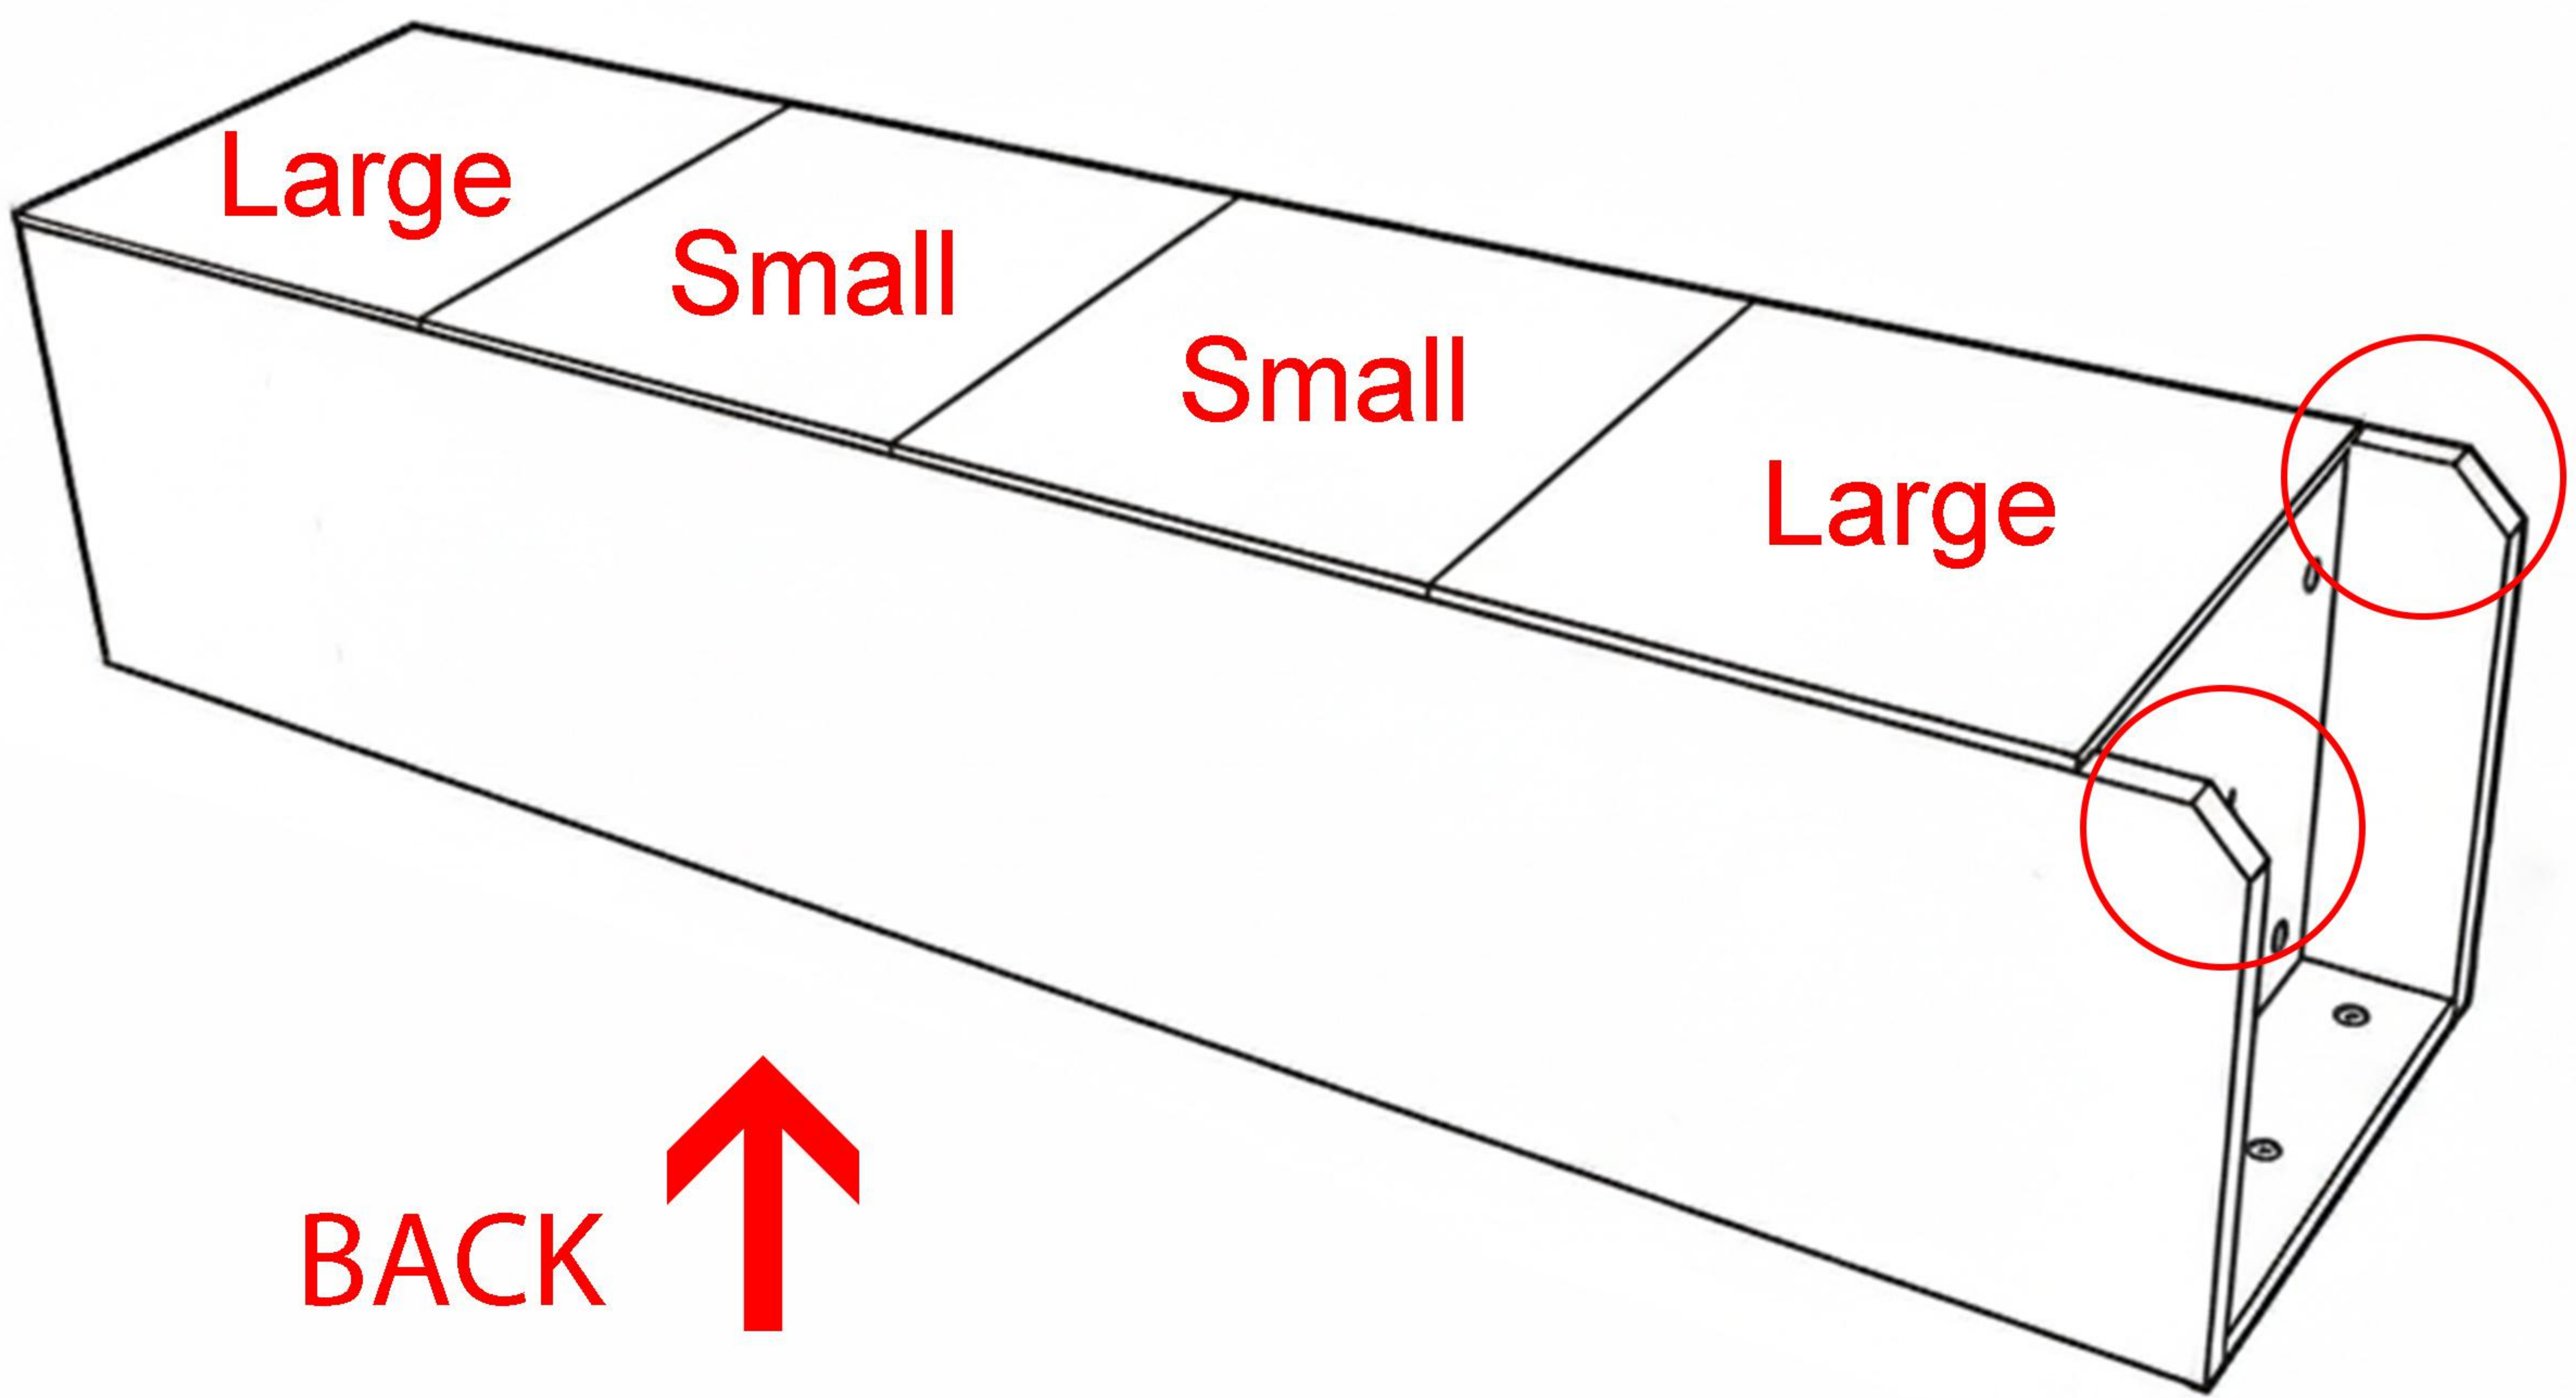


Note: All beveled edges must face the back. Currently, the **BACK** is facing up.

Step 9:




F

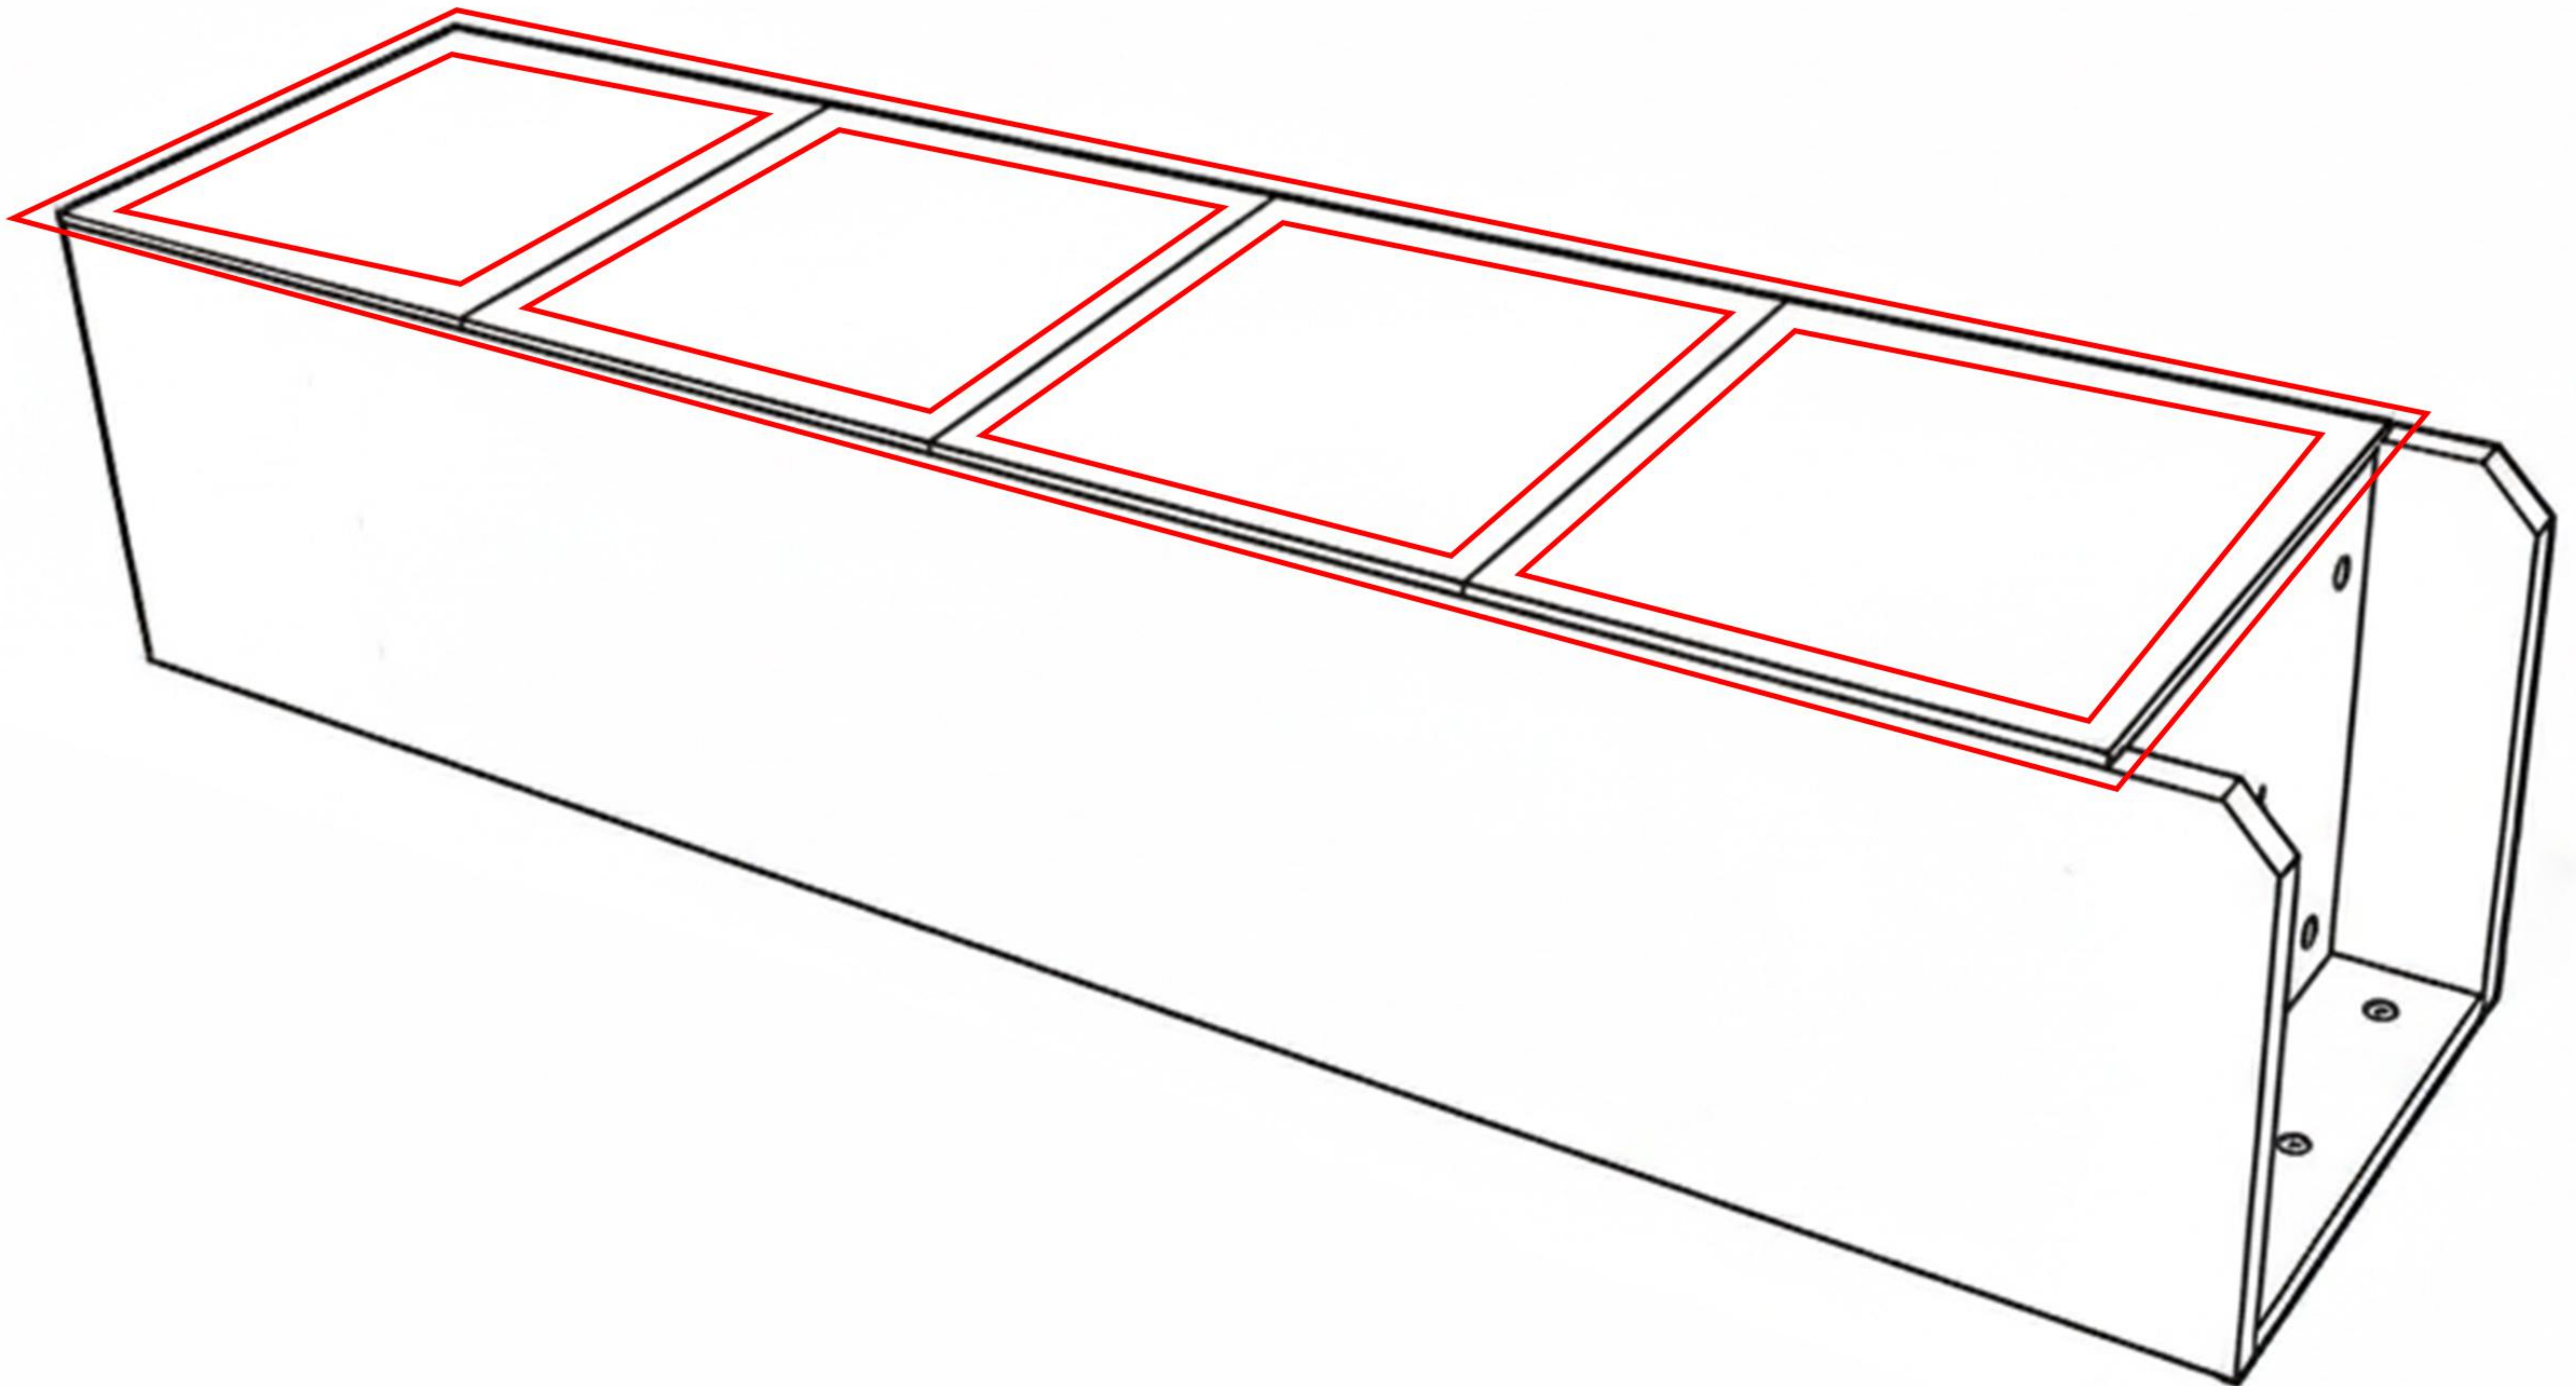


Secure the back panel with F nails. A small hammer is required (not included).



Step 10:

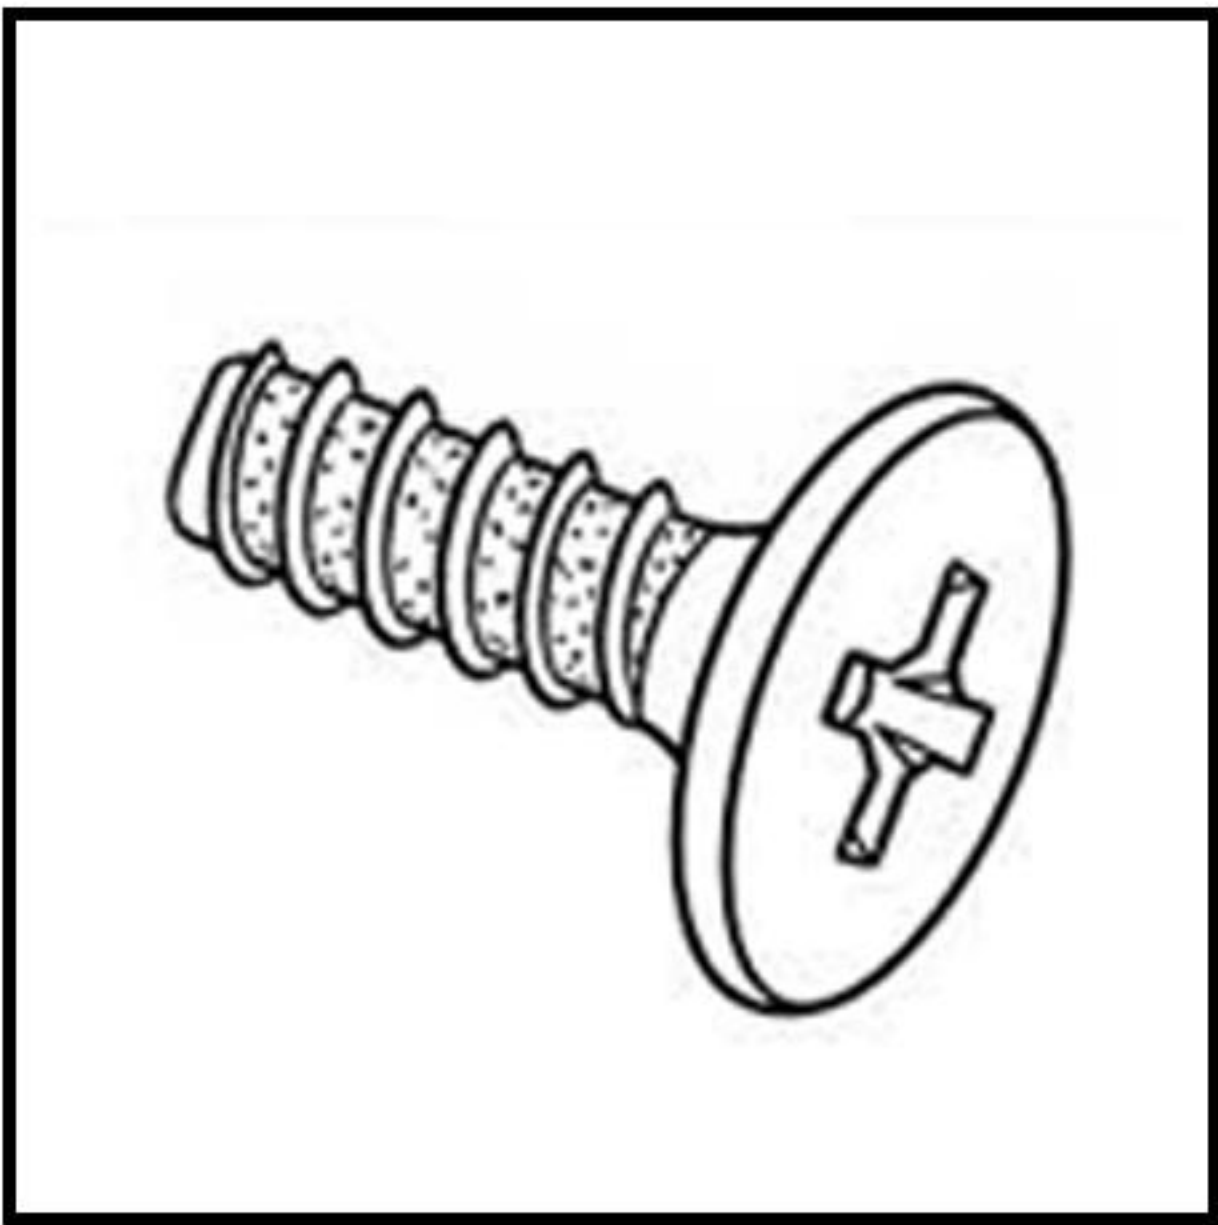

D

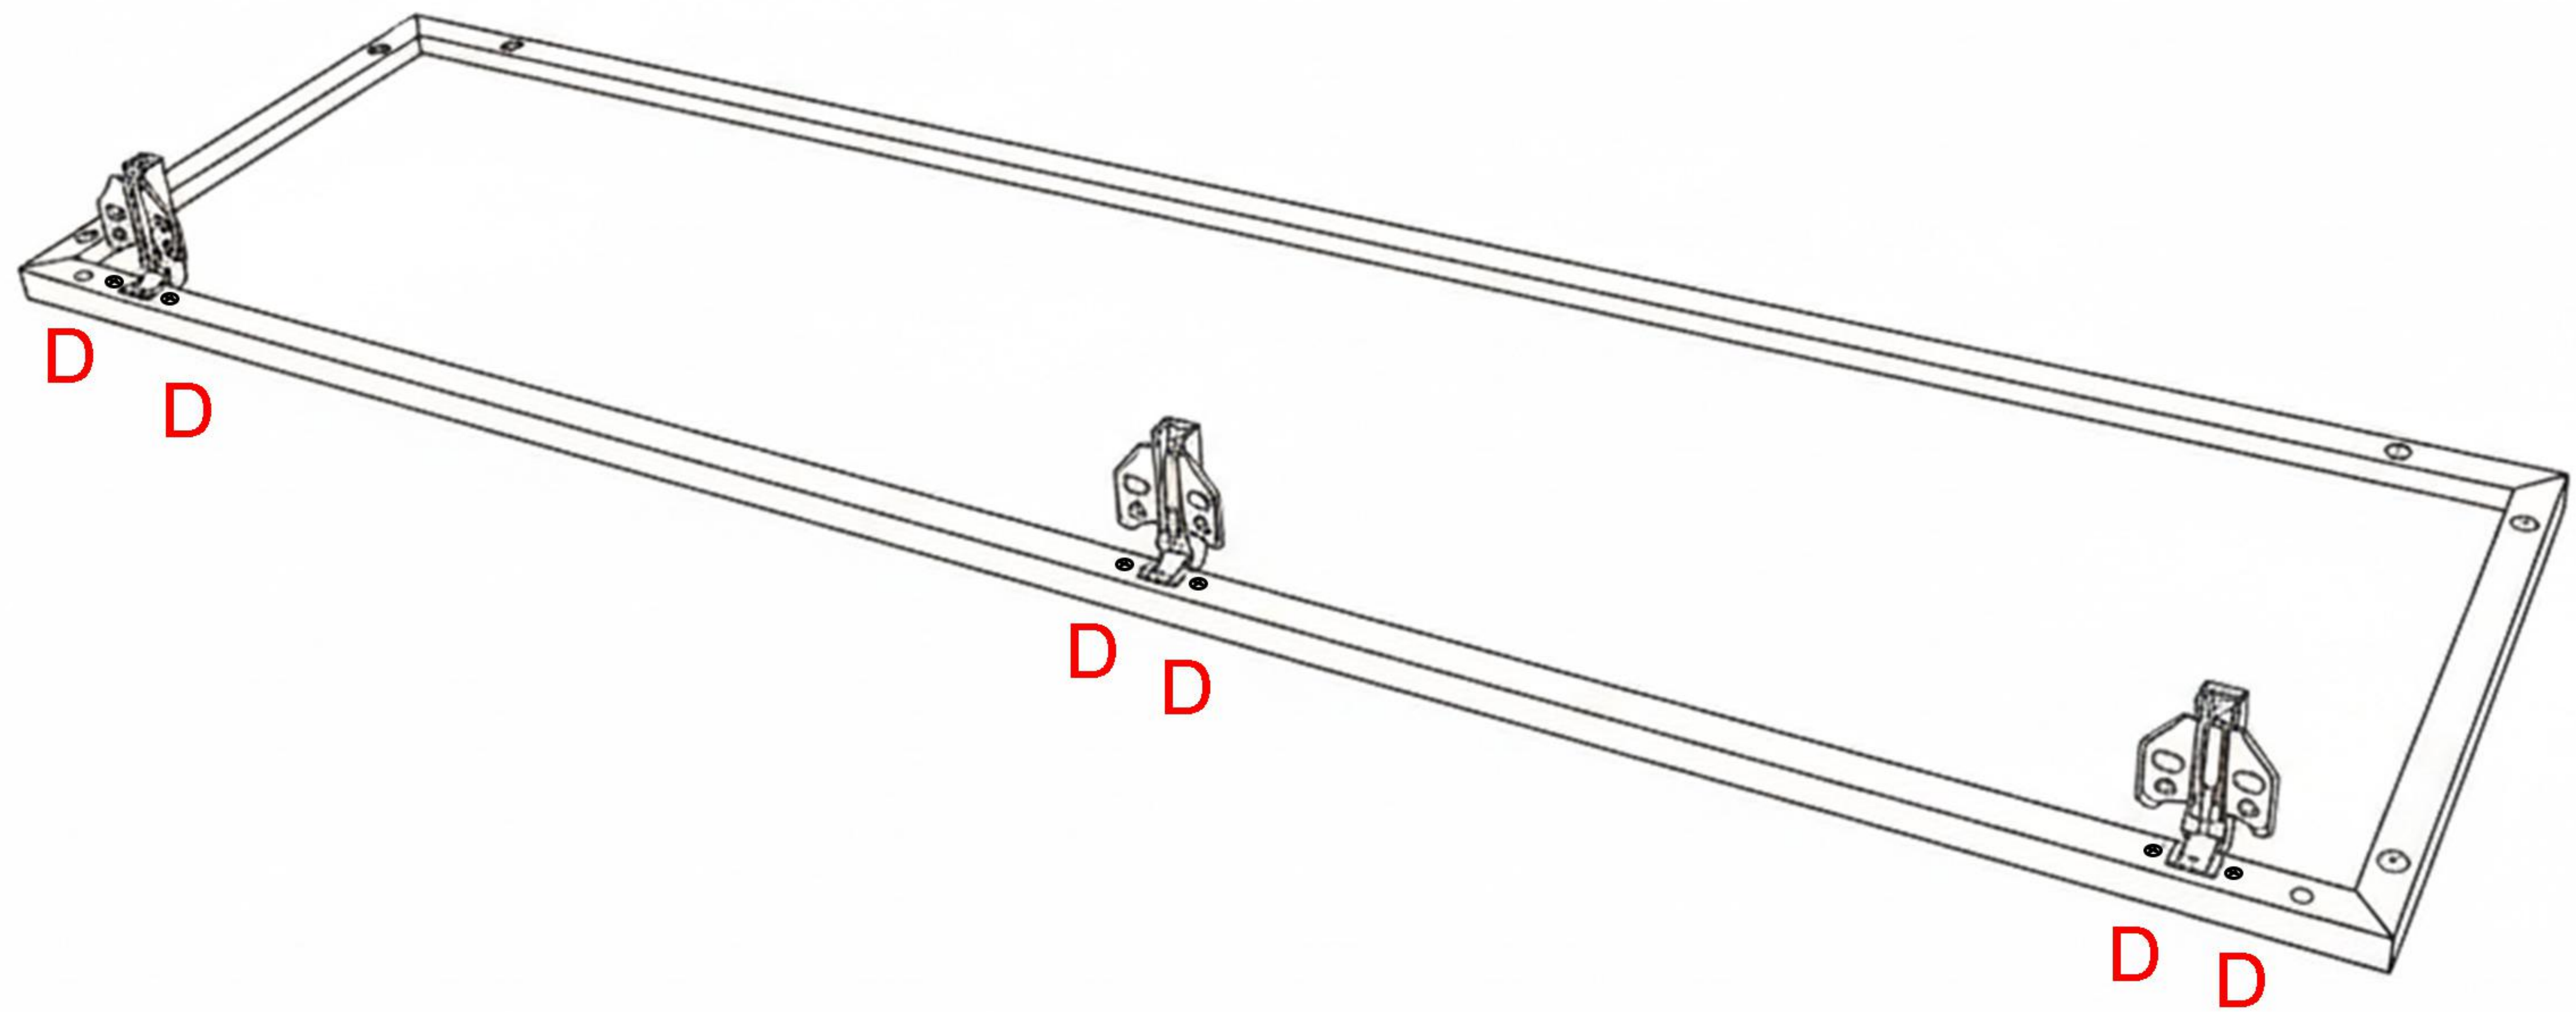


Step 11:

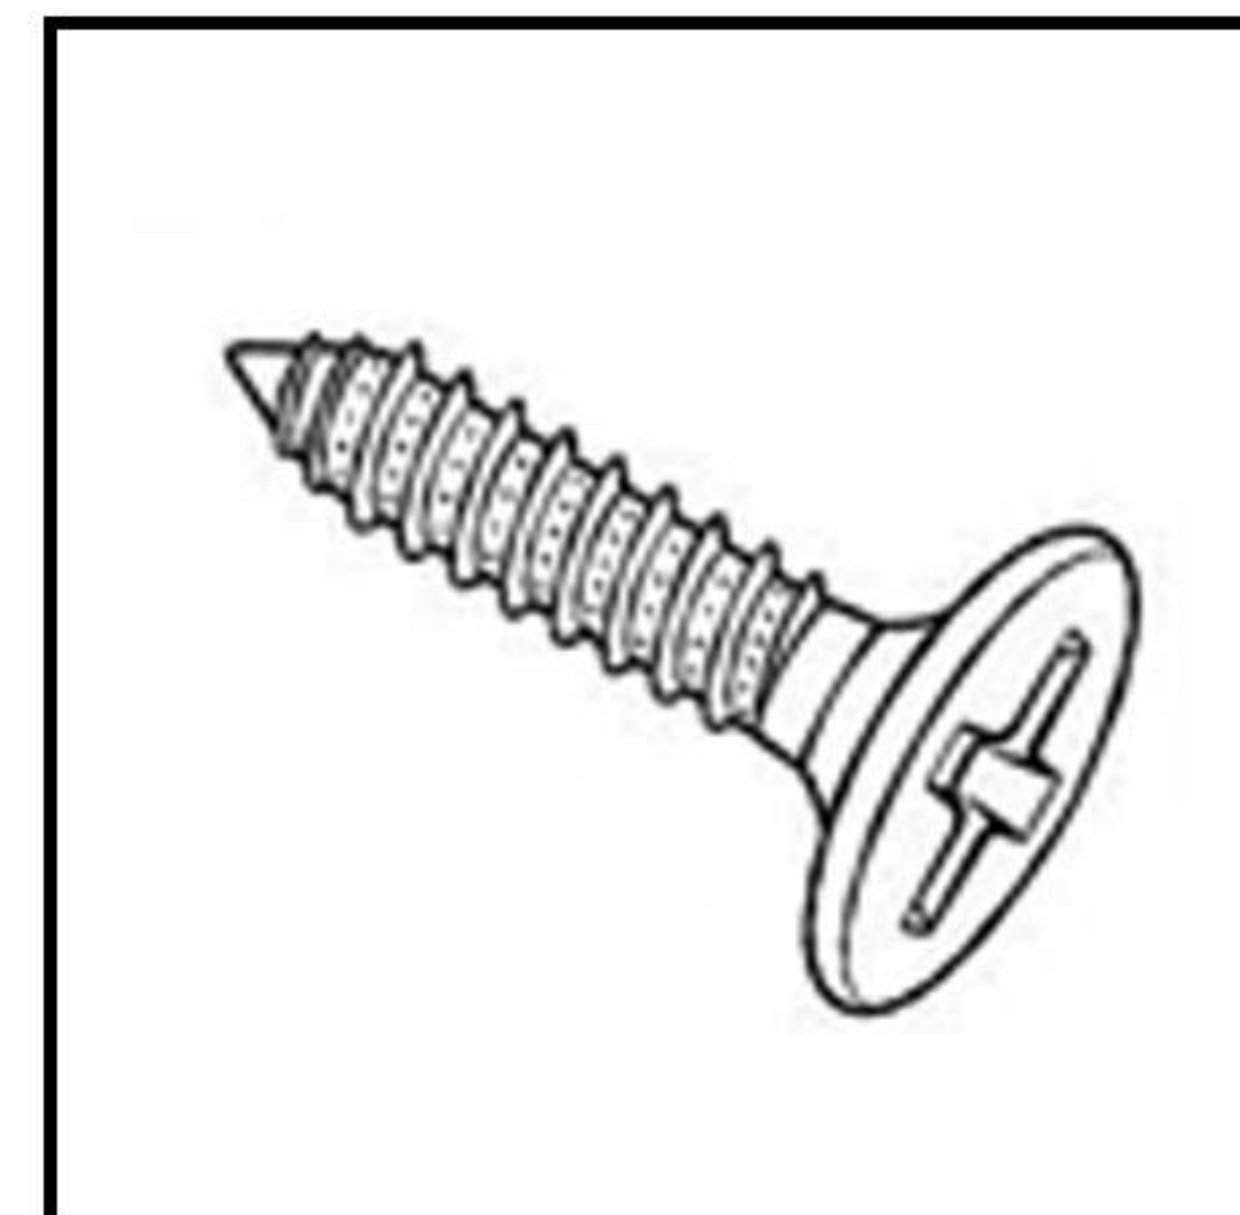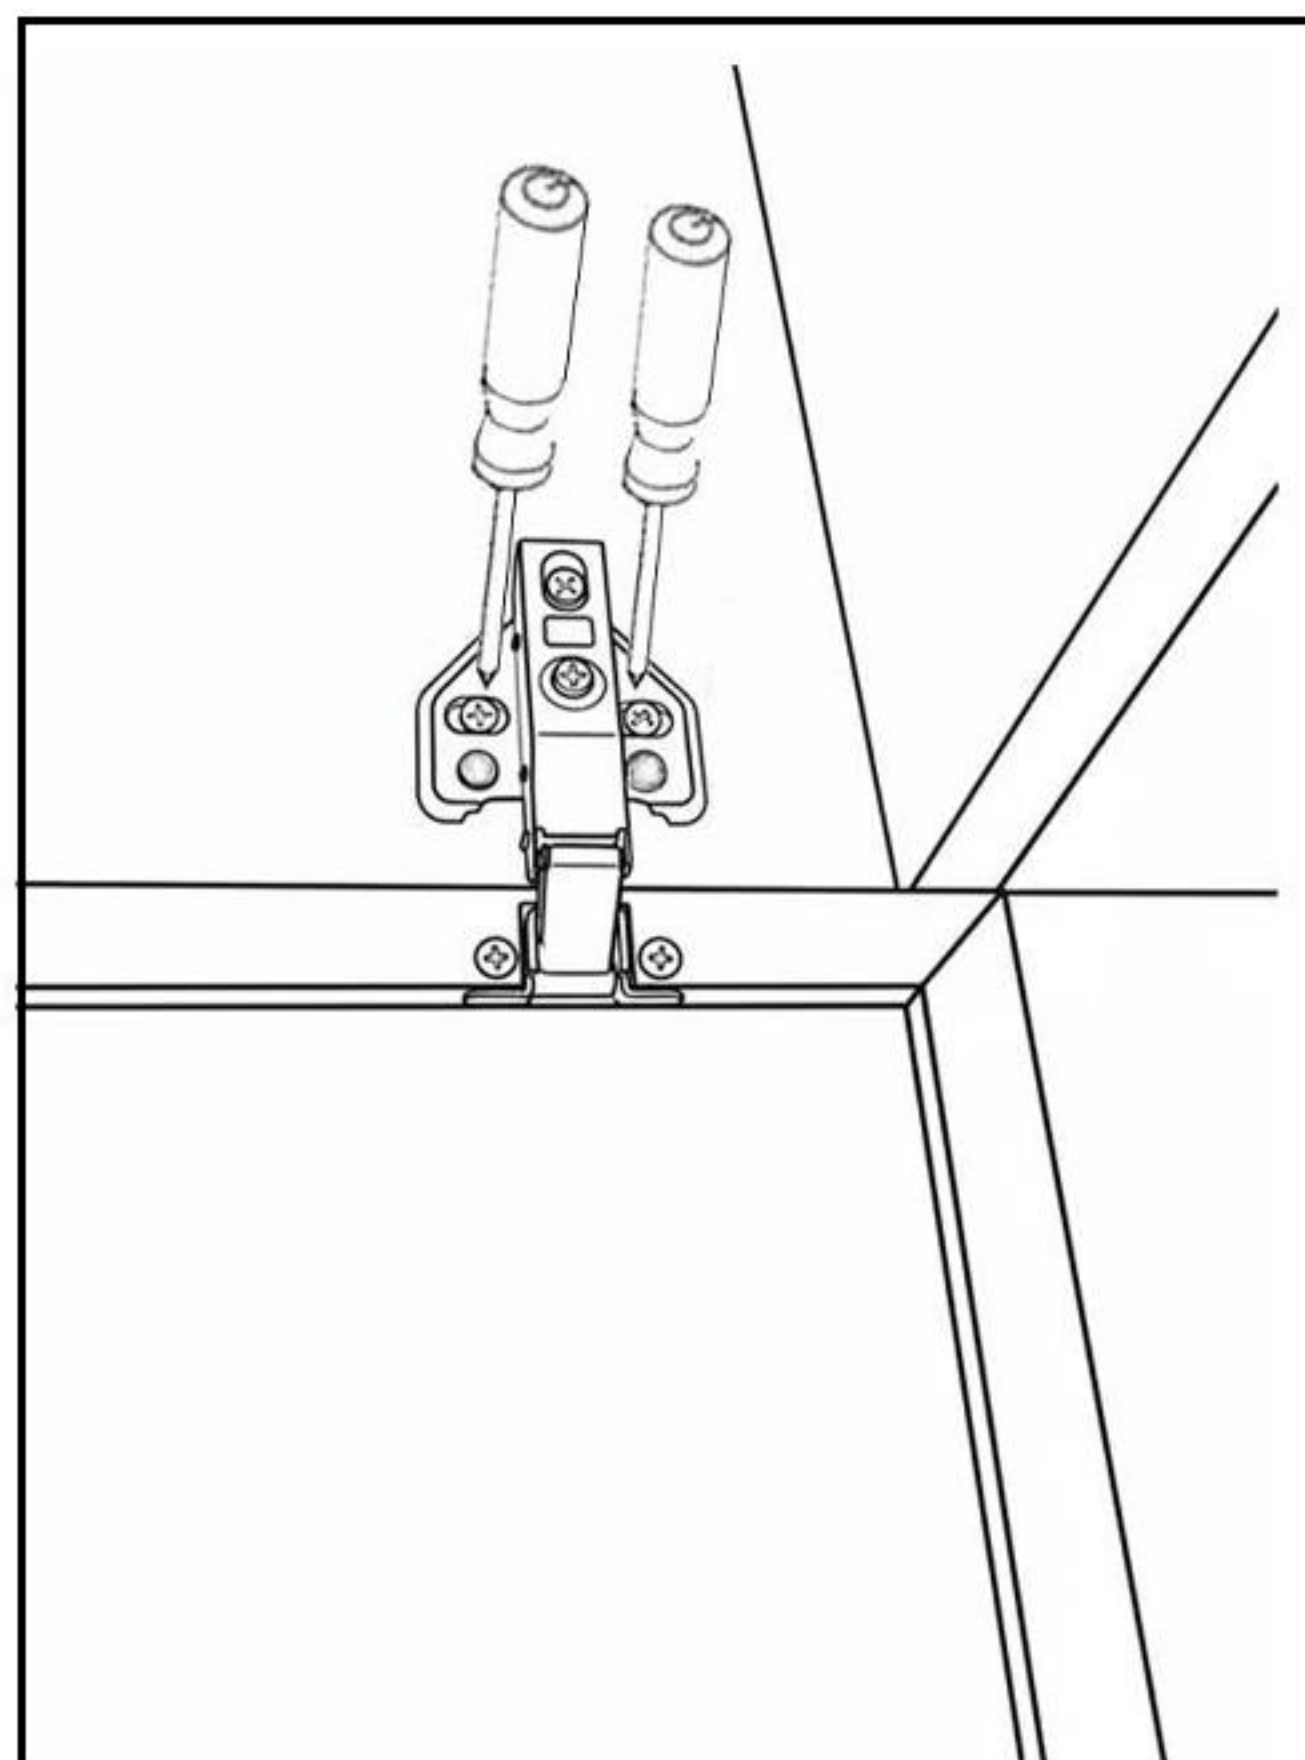

C



First, secure the rear two holes of E with C, then install the front two holes. Refer to the initial hinge installation instructions to adjust the door's height and gap.

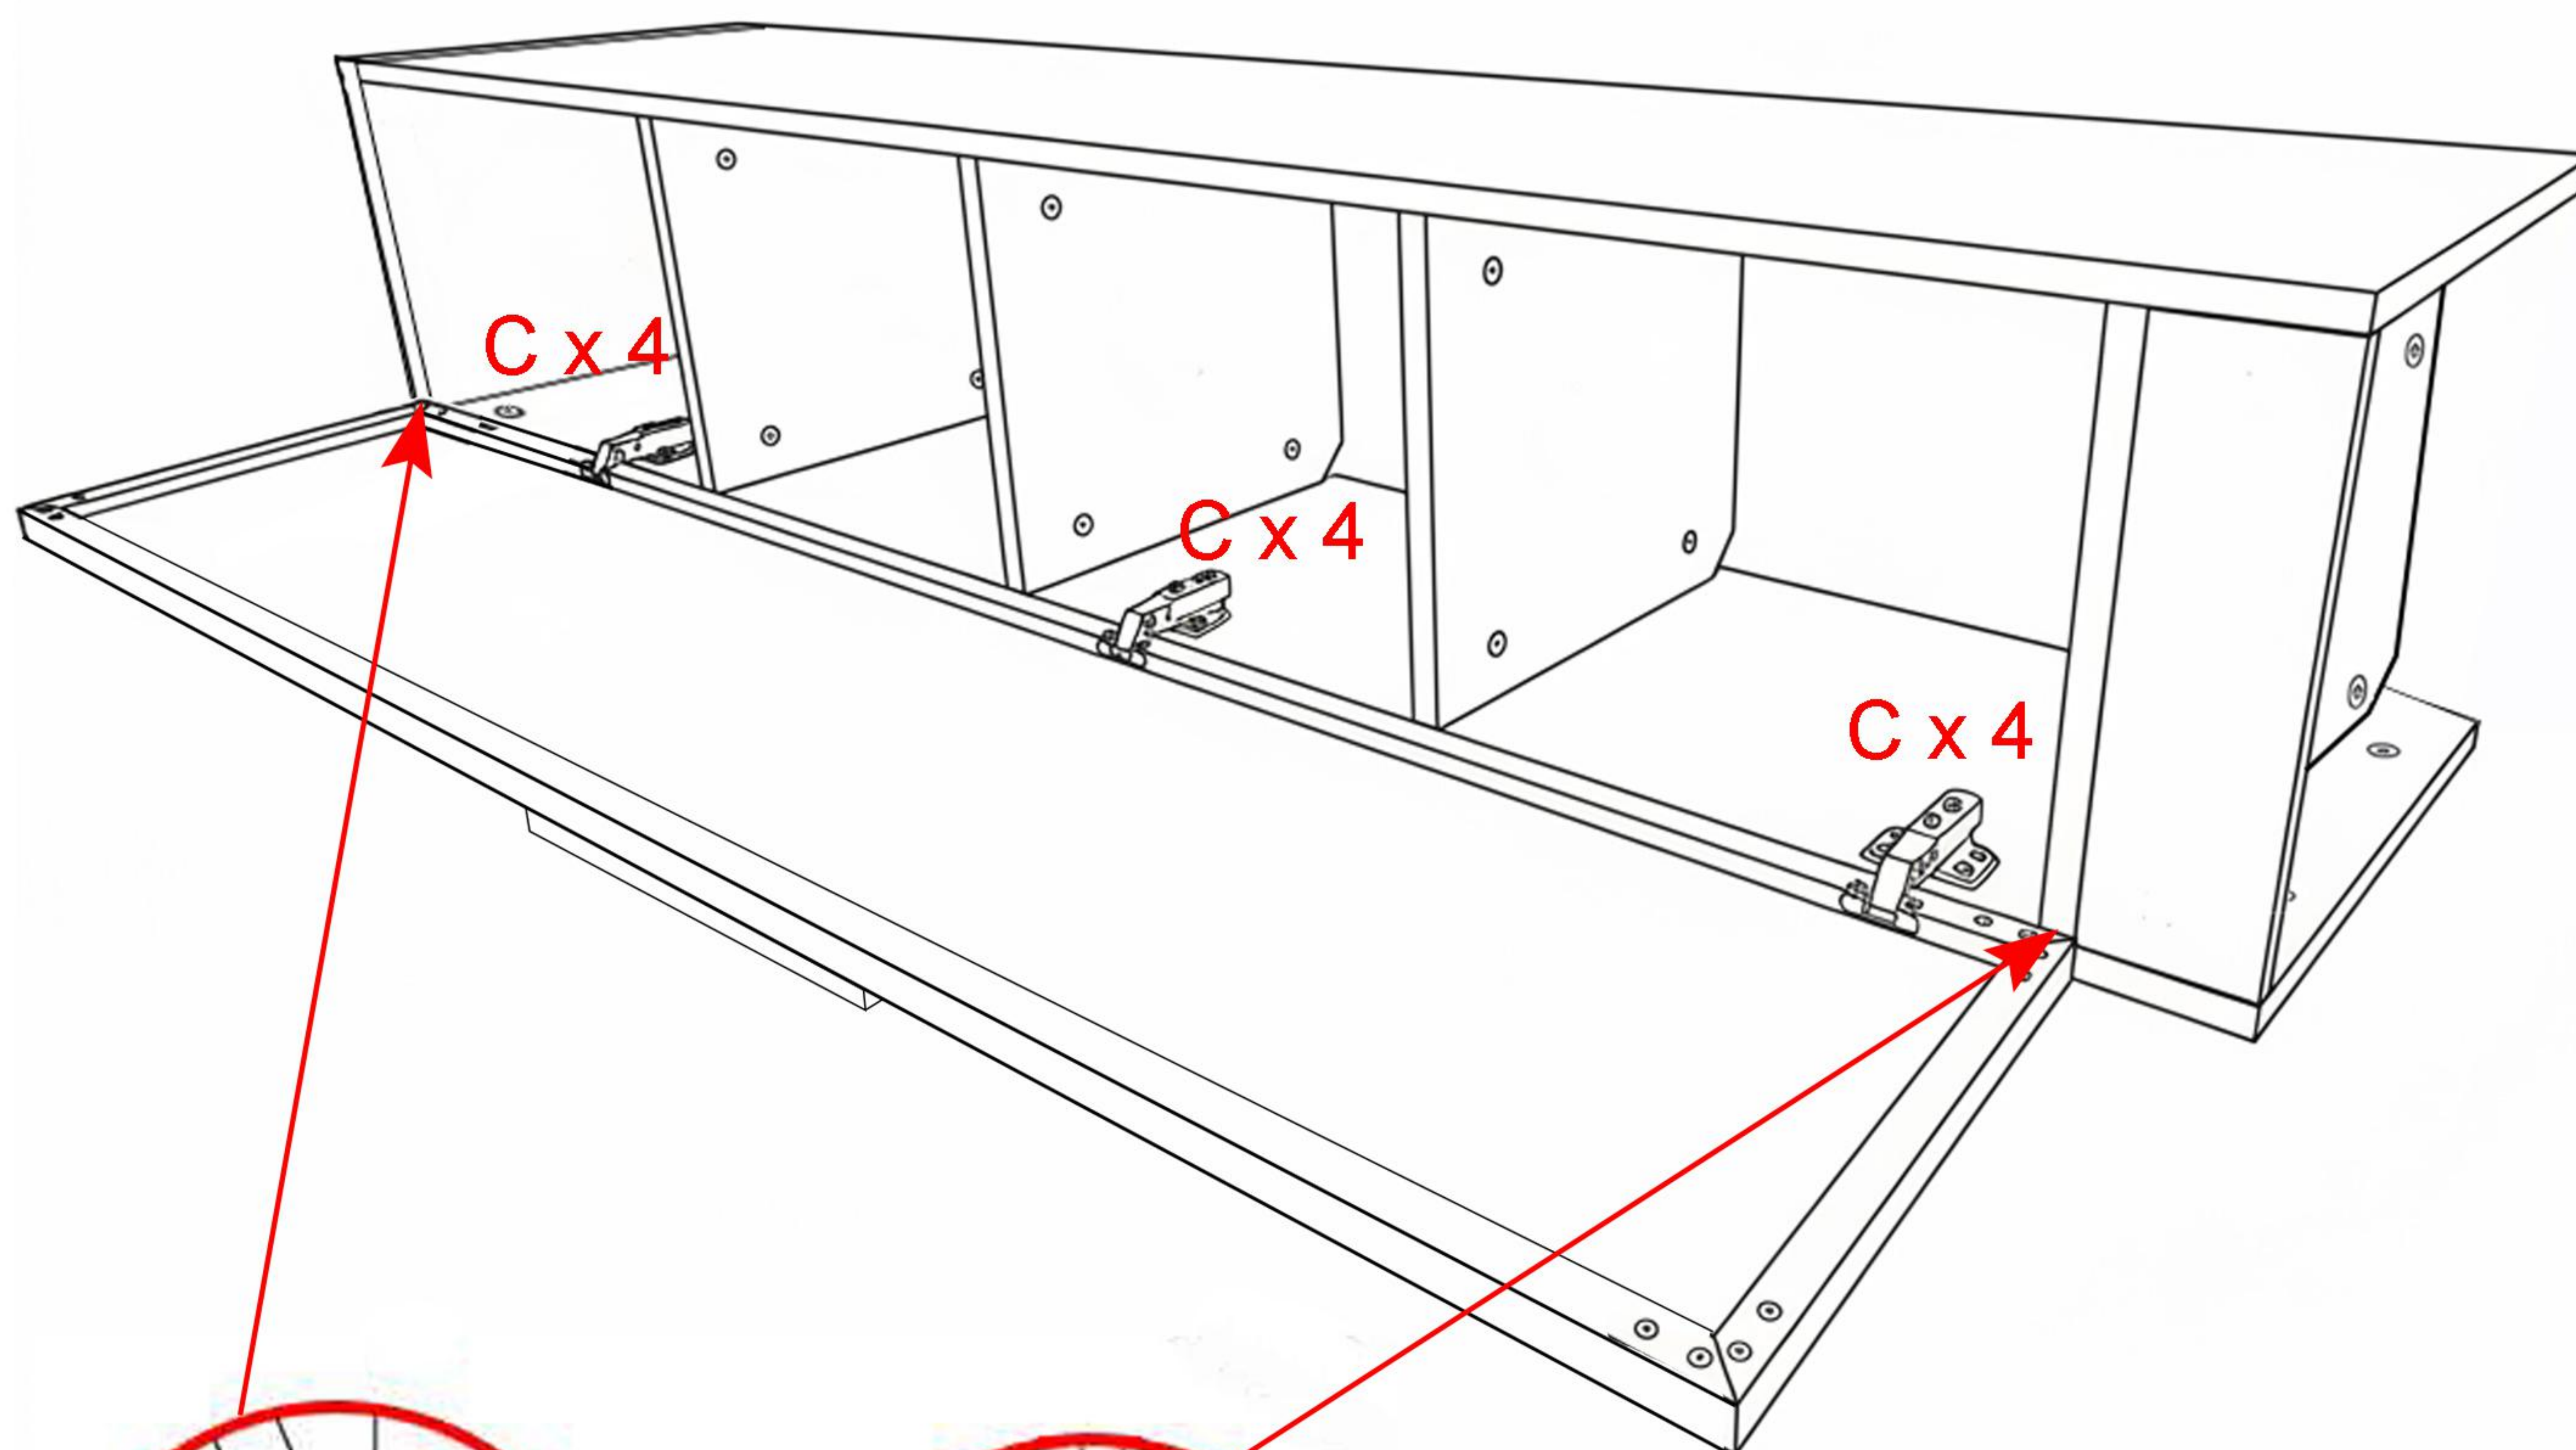


C x 4

C x 4

C x 4

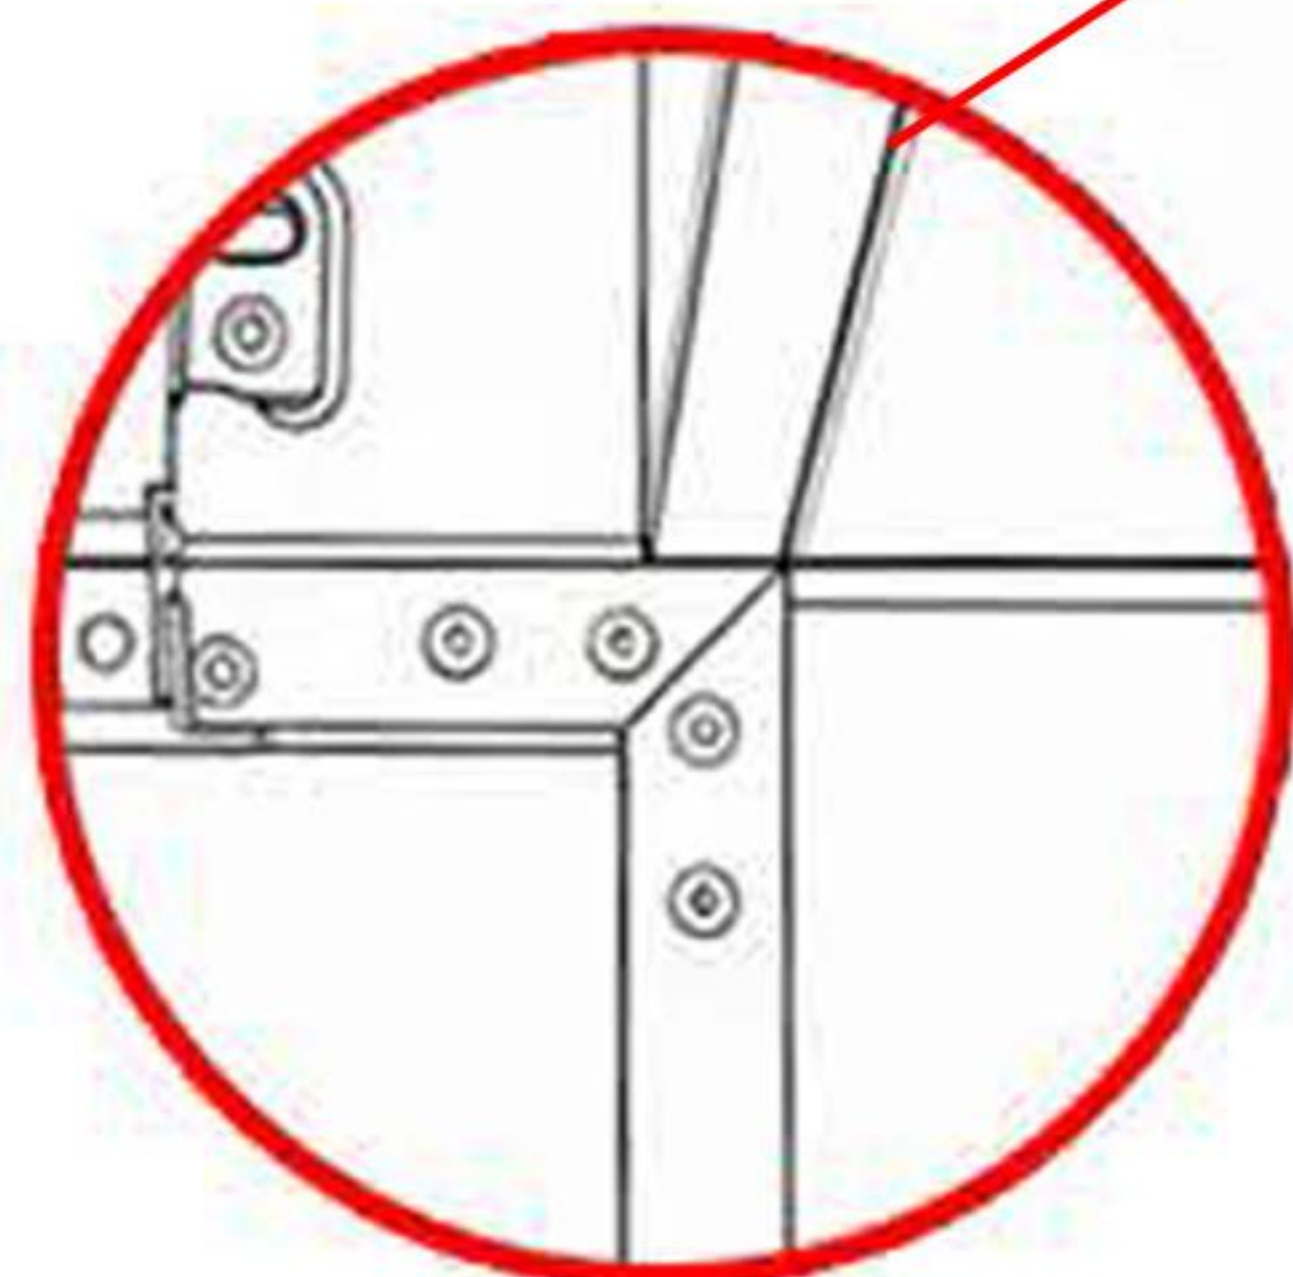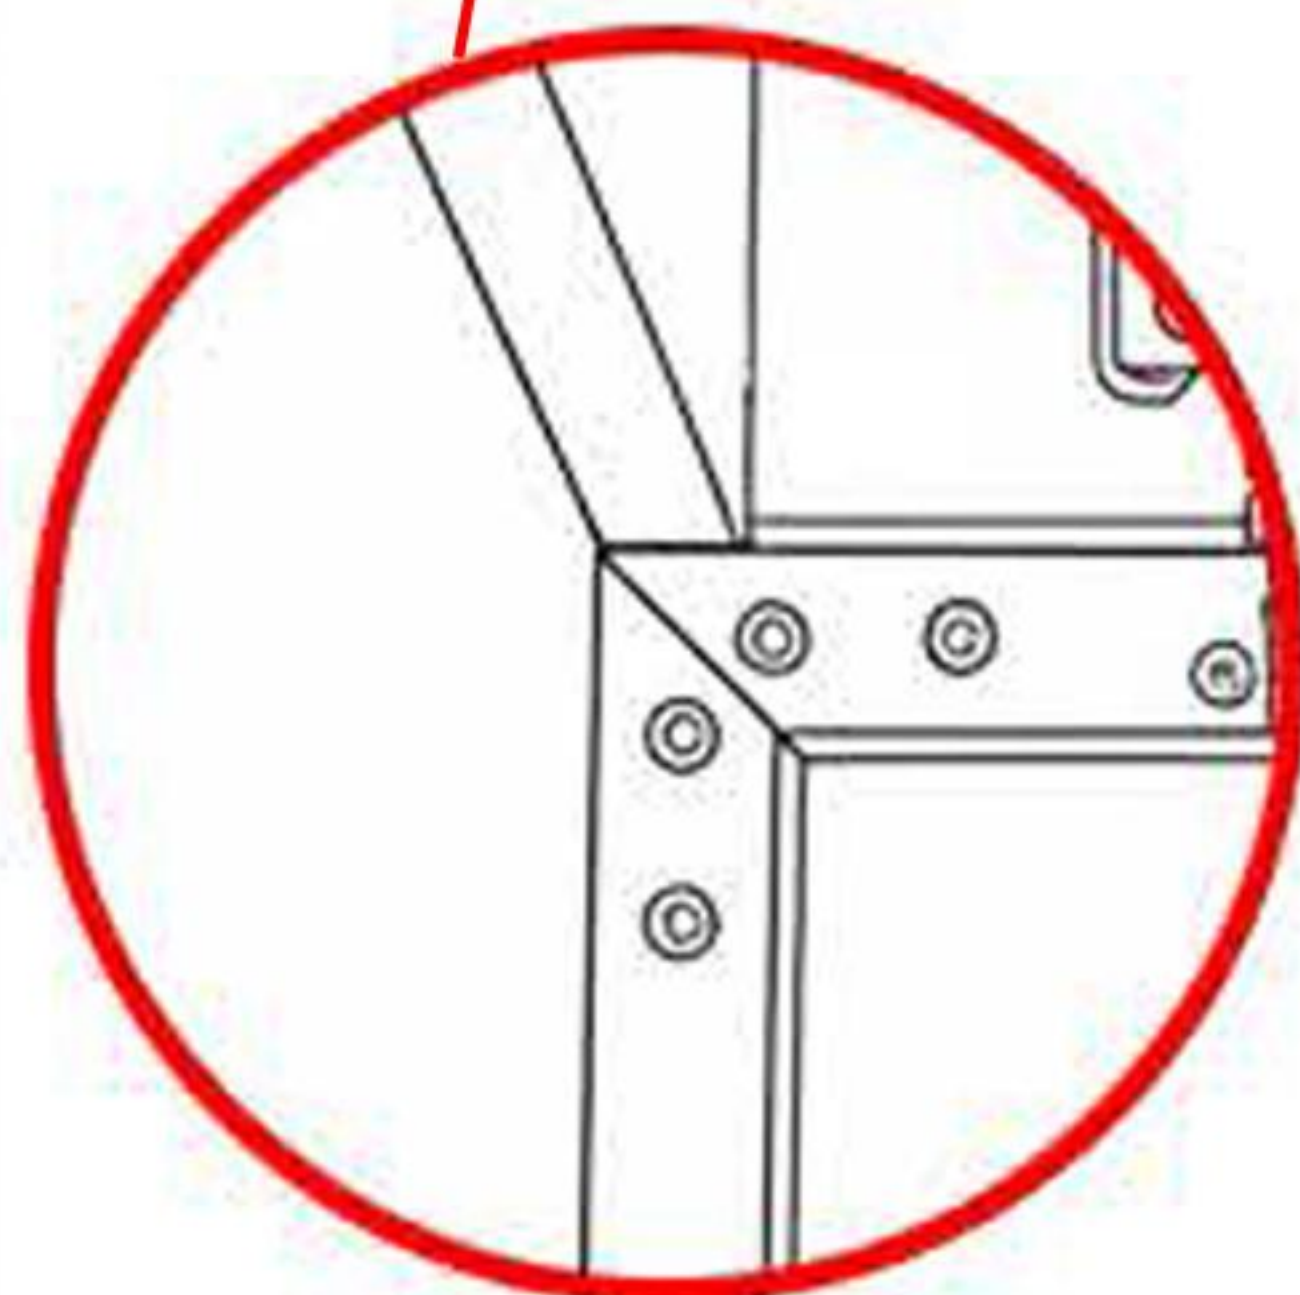

Align the door panel edge with the cabinet as shown, then install C. If the pre-drilled holes don't match E exactly, just disregard them.

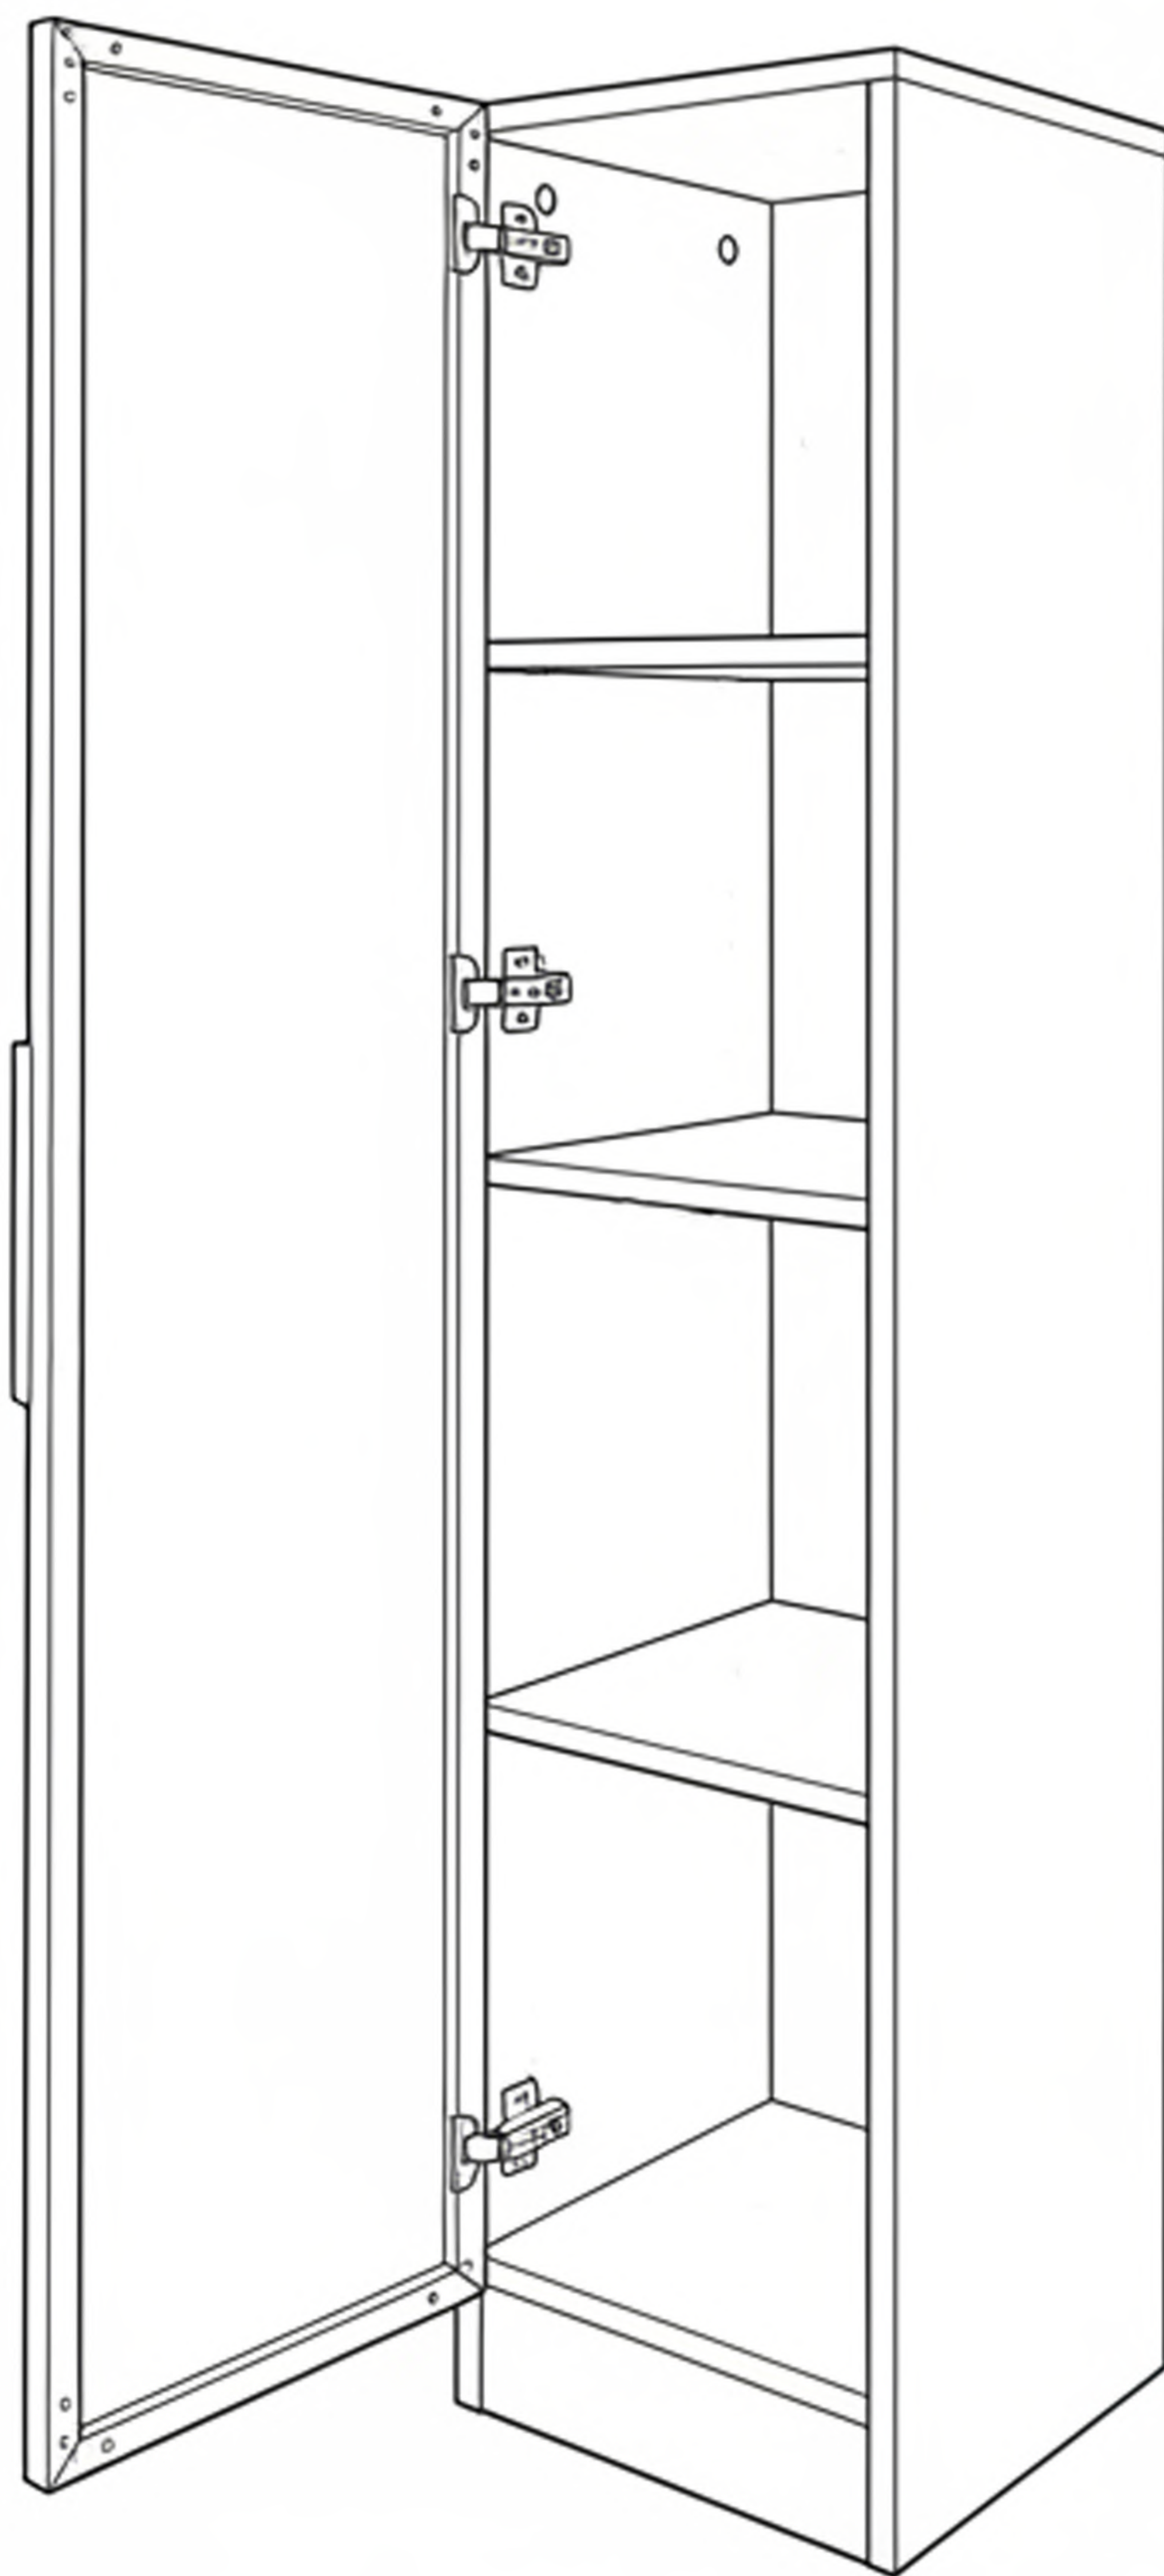

Installation finished