



SOCE061-82CM

Installation Instruction

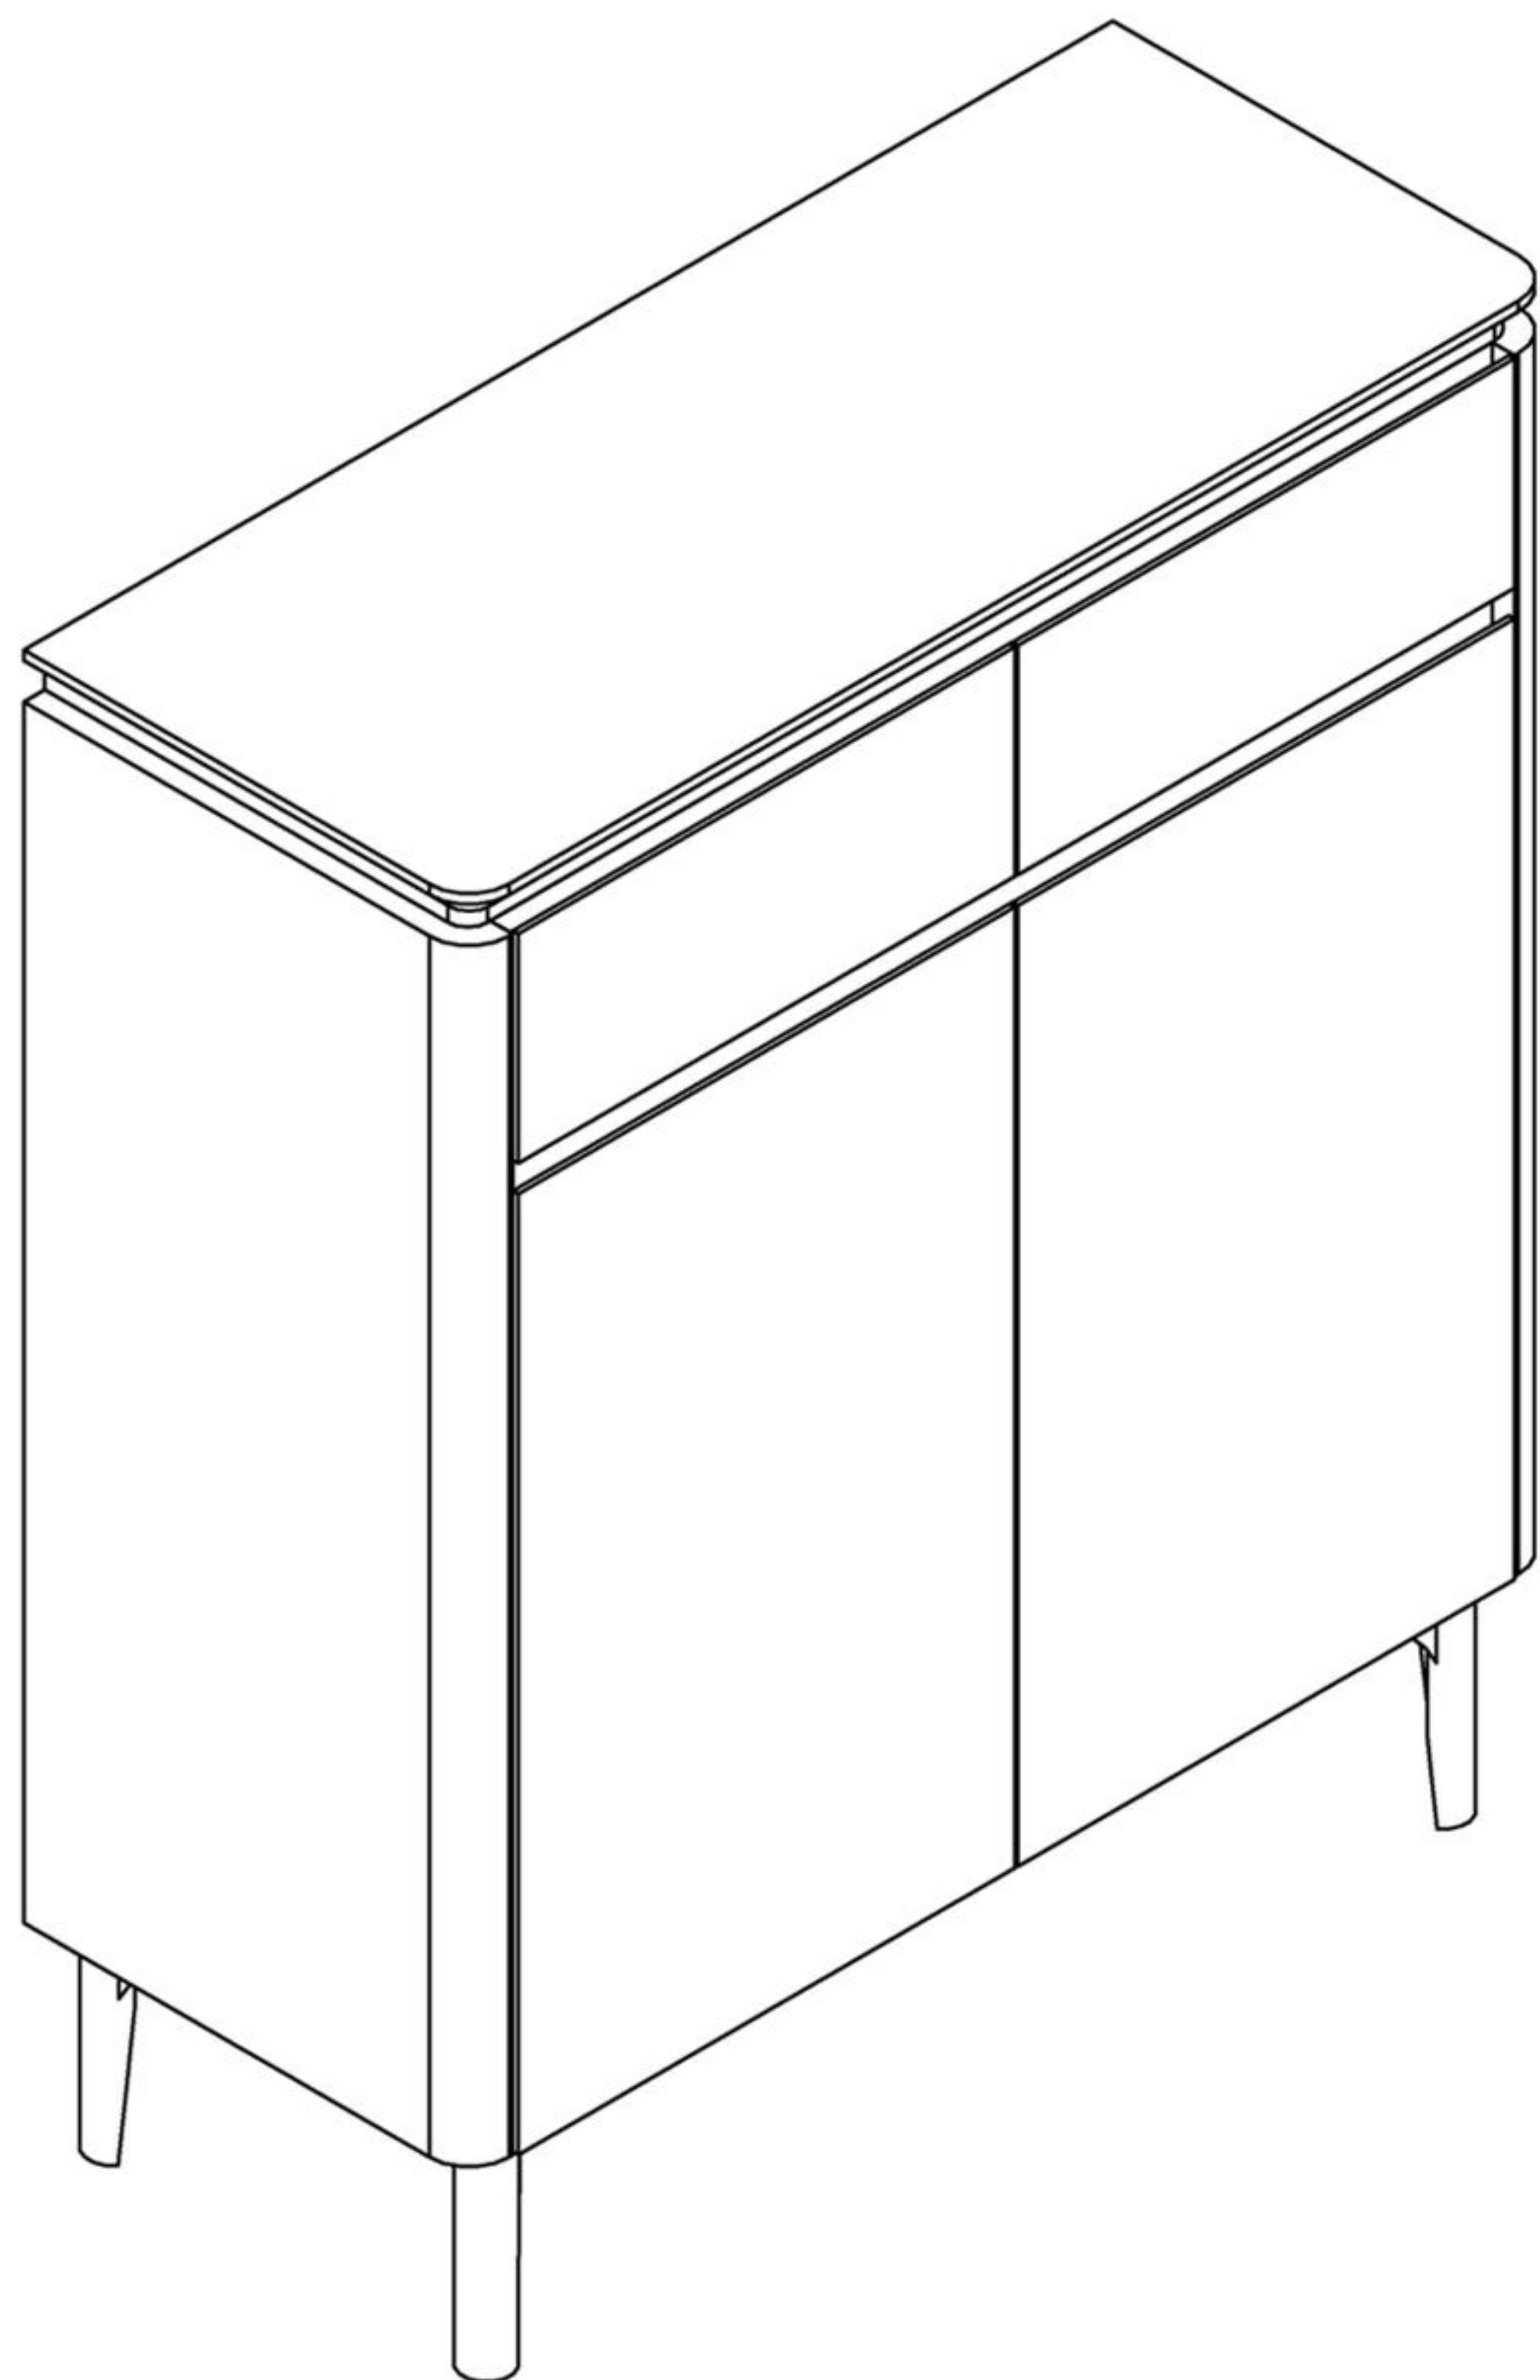

Scan the code to
purchase ES001

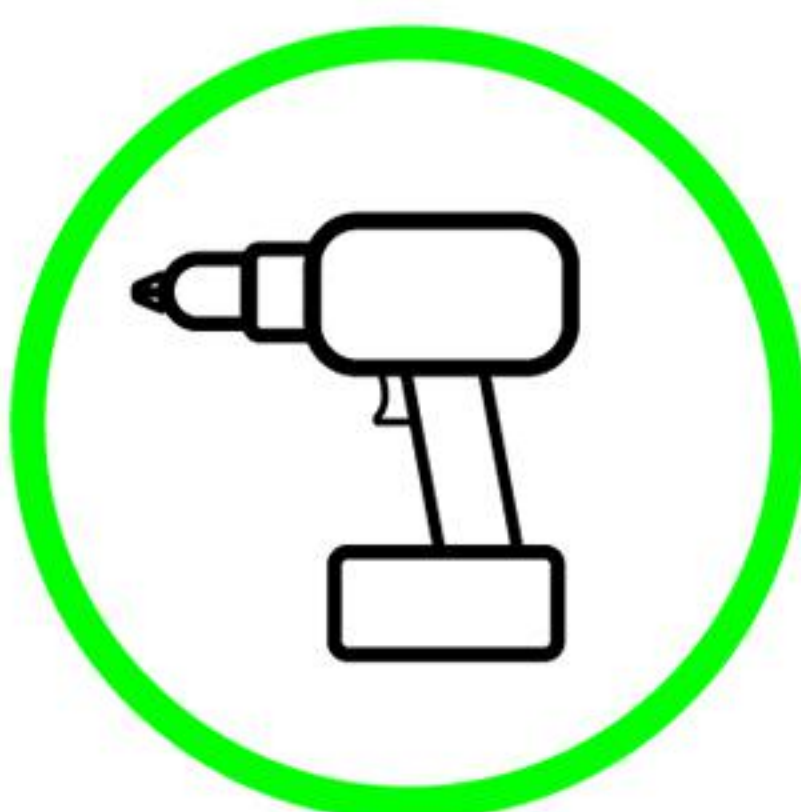

Please read this instruction manual carefully before installation and use.





Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:

1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.


NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

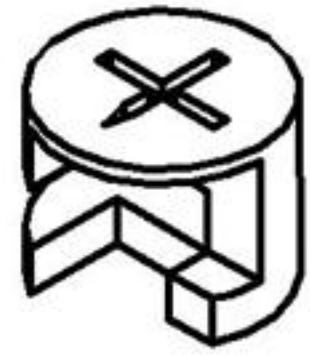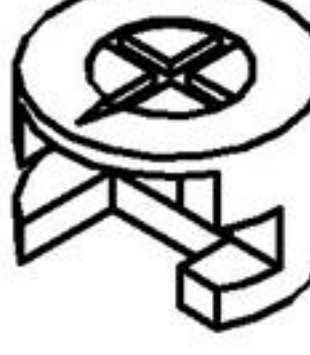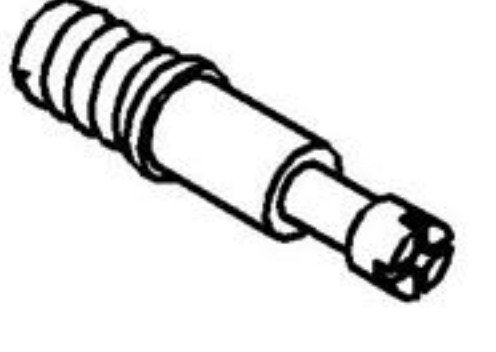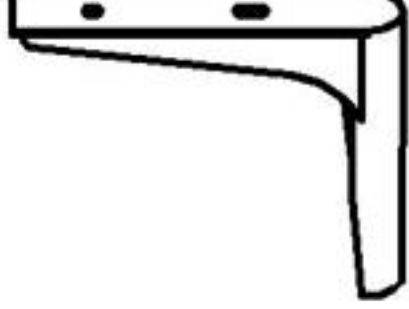Hardware List									
Accessory Appearance	Code	Dimensions	Numbers	Unit	Accessory Appearance	Code	Dimensions	Numbers	Unit
	A	ø15*12mm	21	Piece	 Gold	G	ø3.5*14mm	40	Piece
	B	ø7*40mm	21	Piece	 Blue	H	ø3.5*12mm	24	Piece
	C	ø12*10mm	10	Piece		I		2	Pair
	D	ø5*15mm	10	Piece		J	ø60mm	1	Piece
	E	ø5*15mm	12	Piece		K	ø7*38mm	1	Piece
	F	ø8*40mm	4	Piece		L	Height 168mm	4	Piece


Hardware List									
Accessory Appearance	Code	Dimensions	Numbers	Unit	Accessory Appearance	Code	Dimensions	Numbers	Unit
	M	φ6*40mm	2	Piece		O	Length 240mm	2	Pair
	N	φ3.5*40mm	8	Piece		P	φ6*13mm	8	Piece

Detailed description of the main components, please read carefully


I (Hinge) Installation Instructions
Install the hinge with screw G

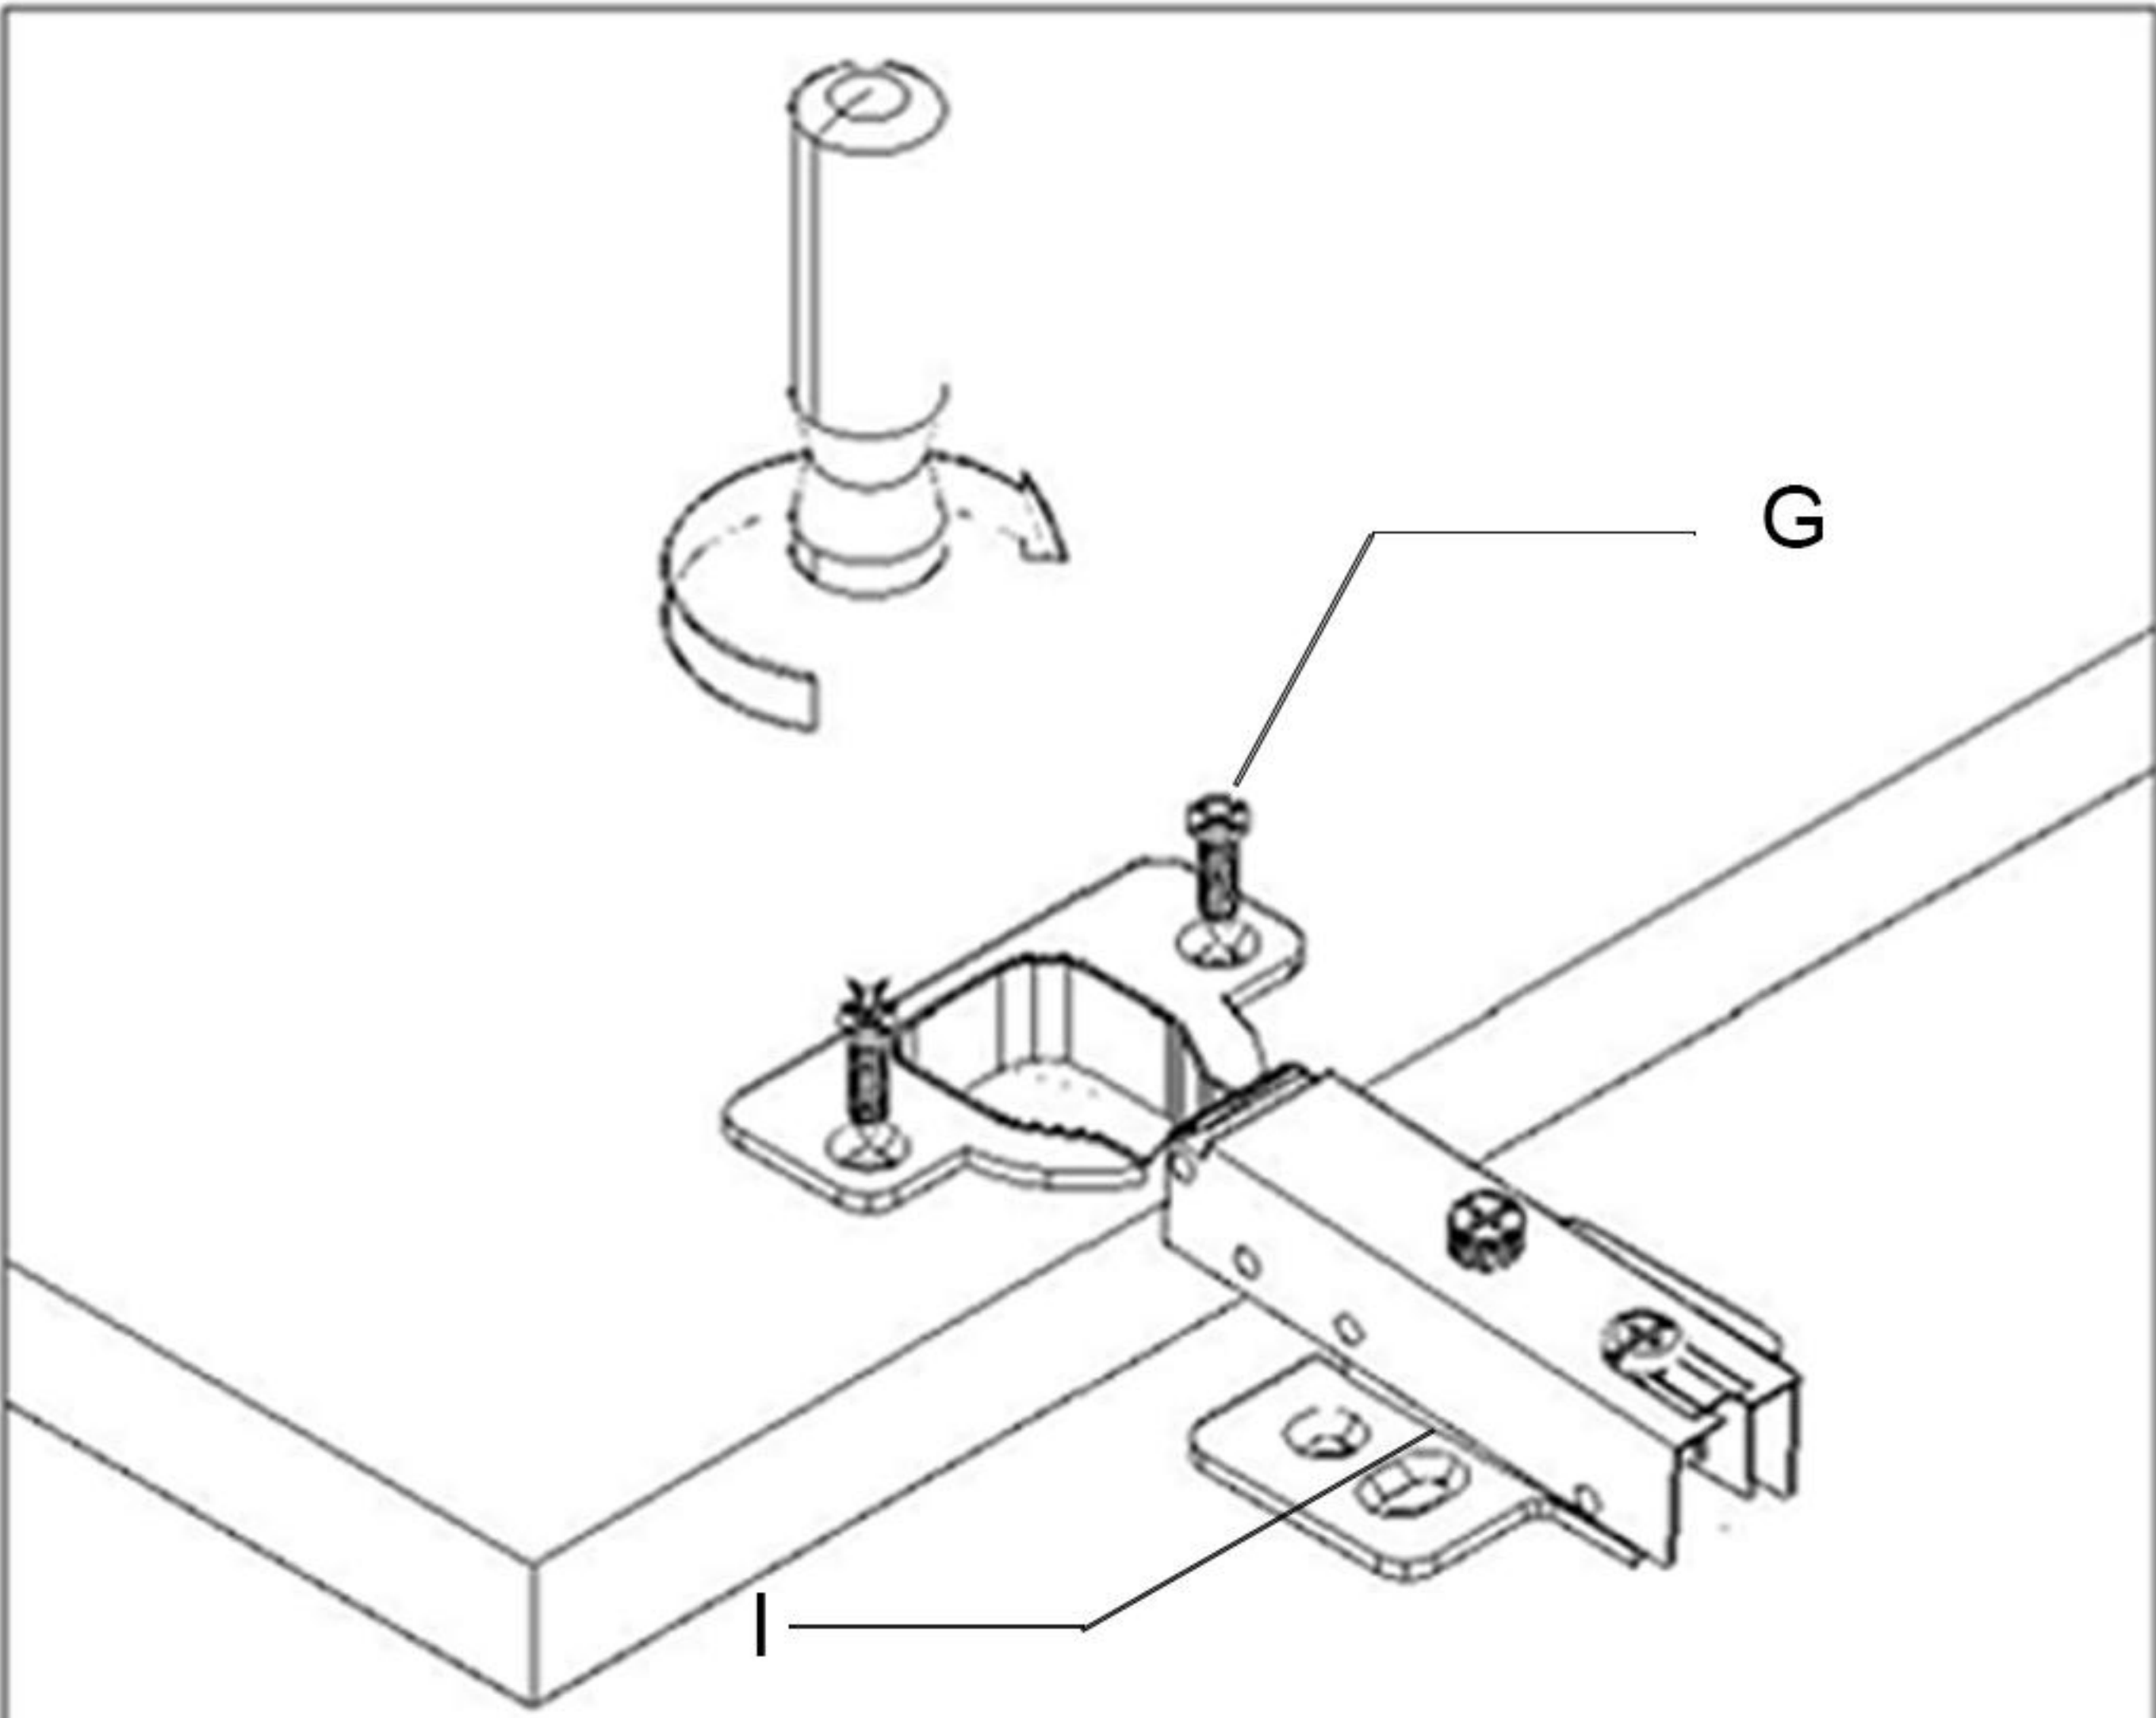


1 Install K/L onto the door and ensure it is secure

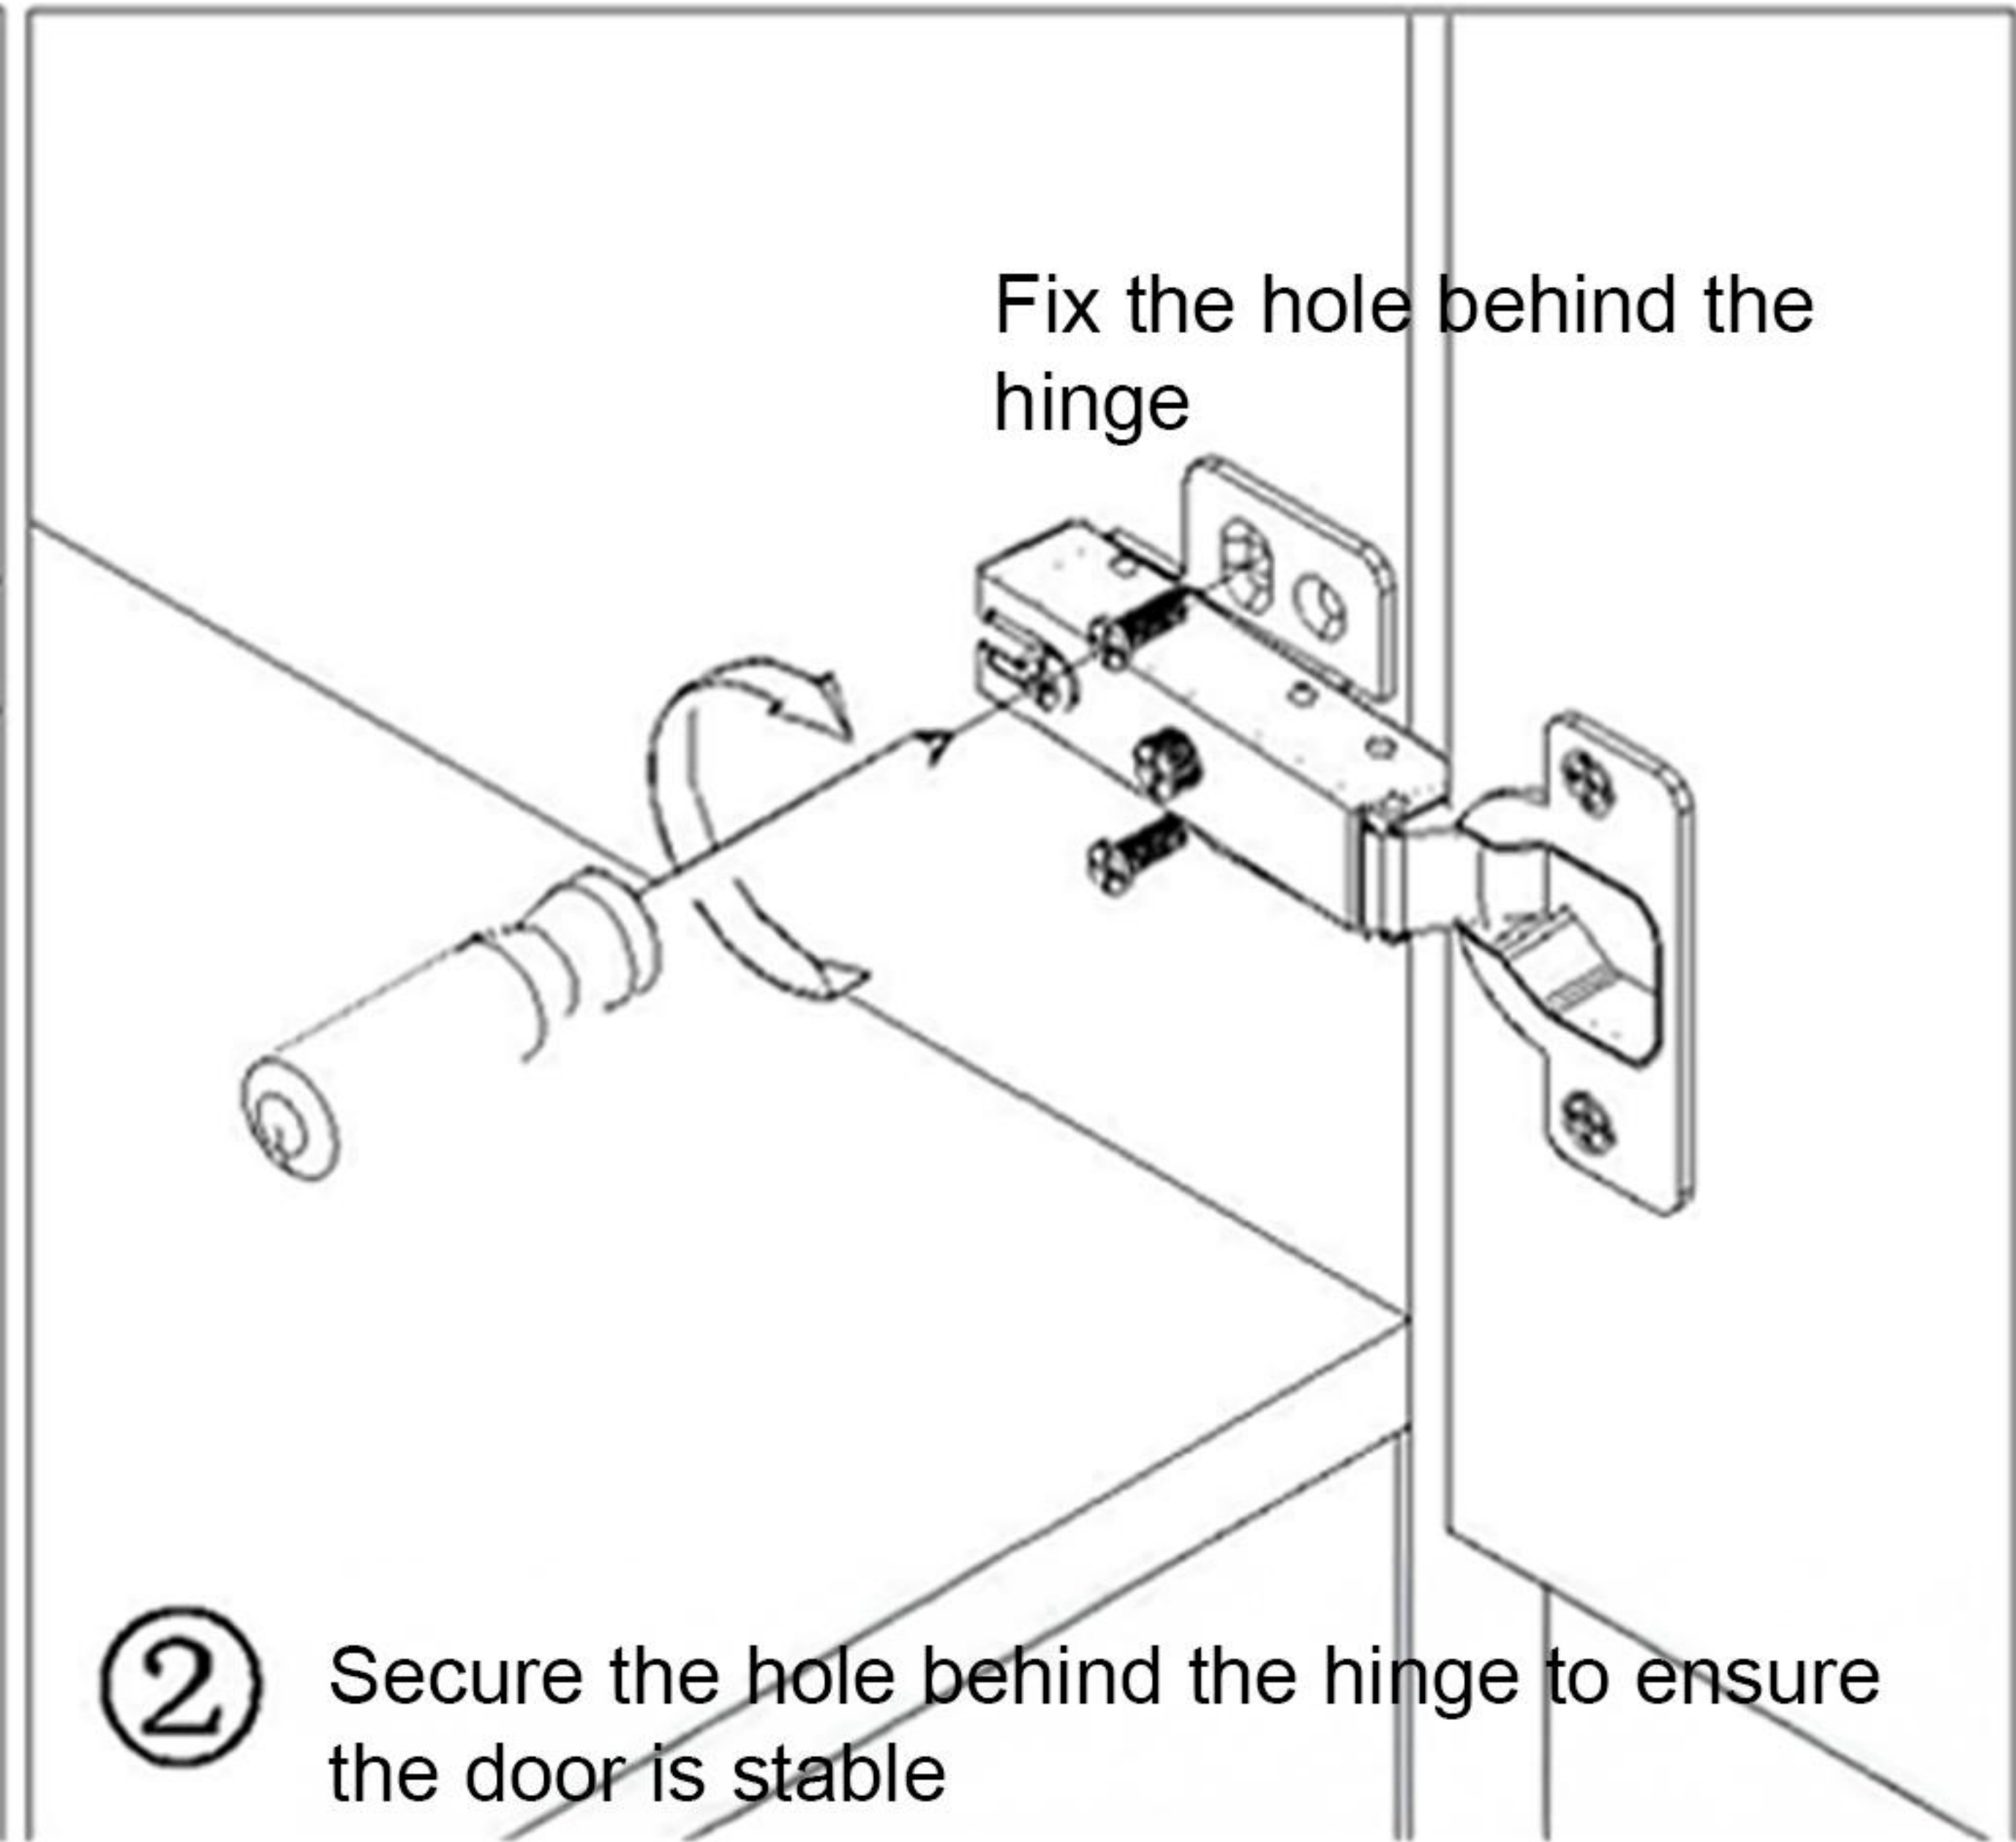

2 Secure the hole behind the hinge to ensure the door is stable

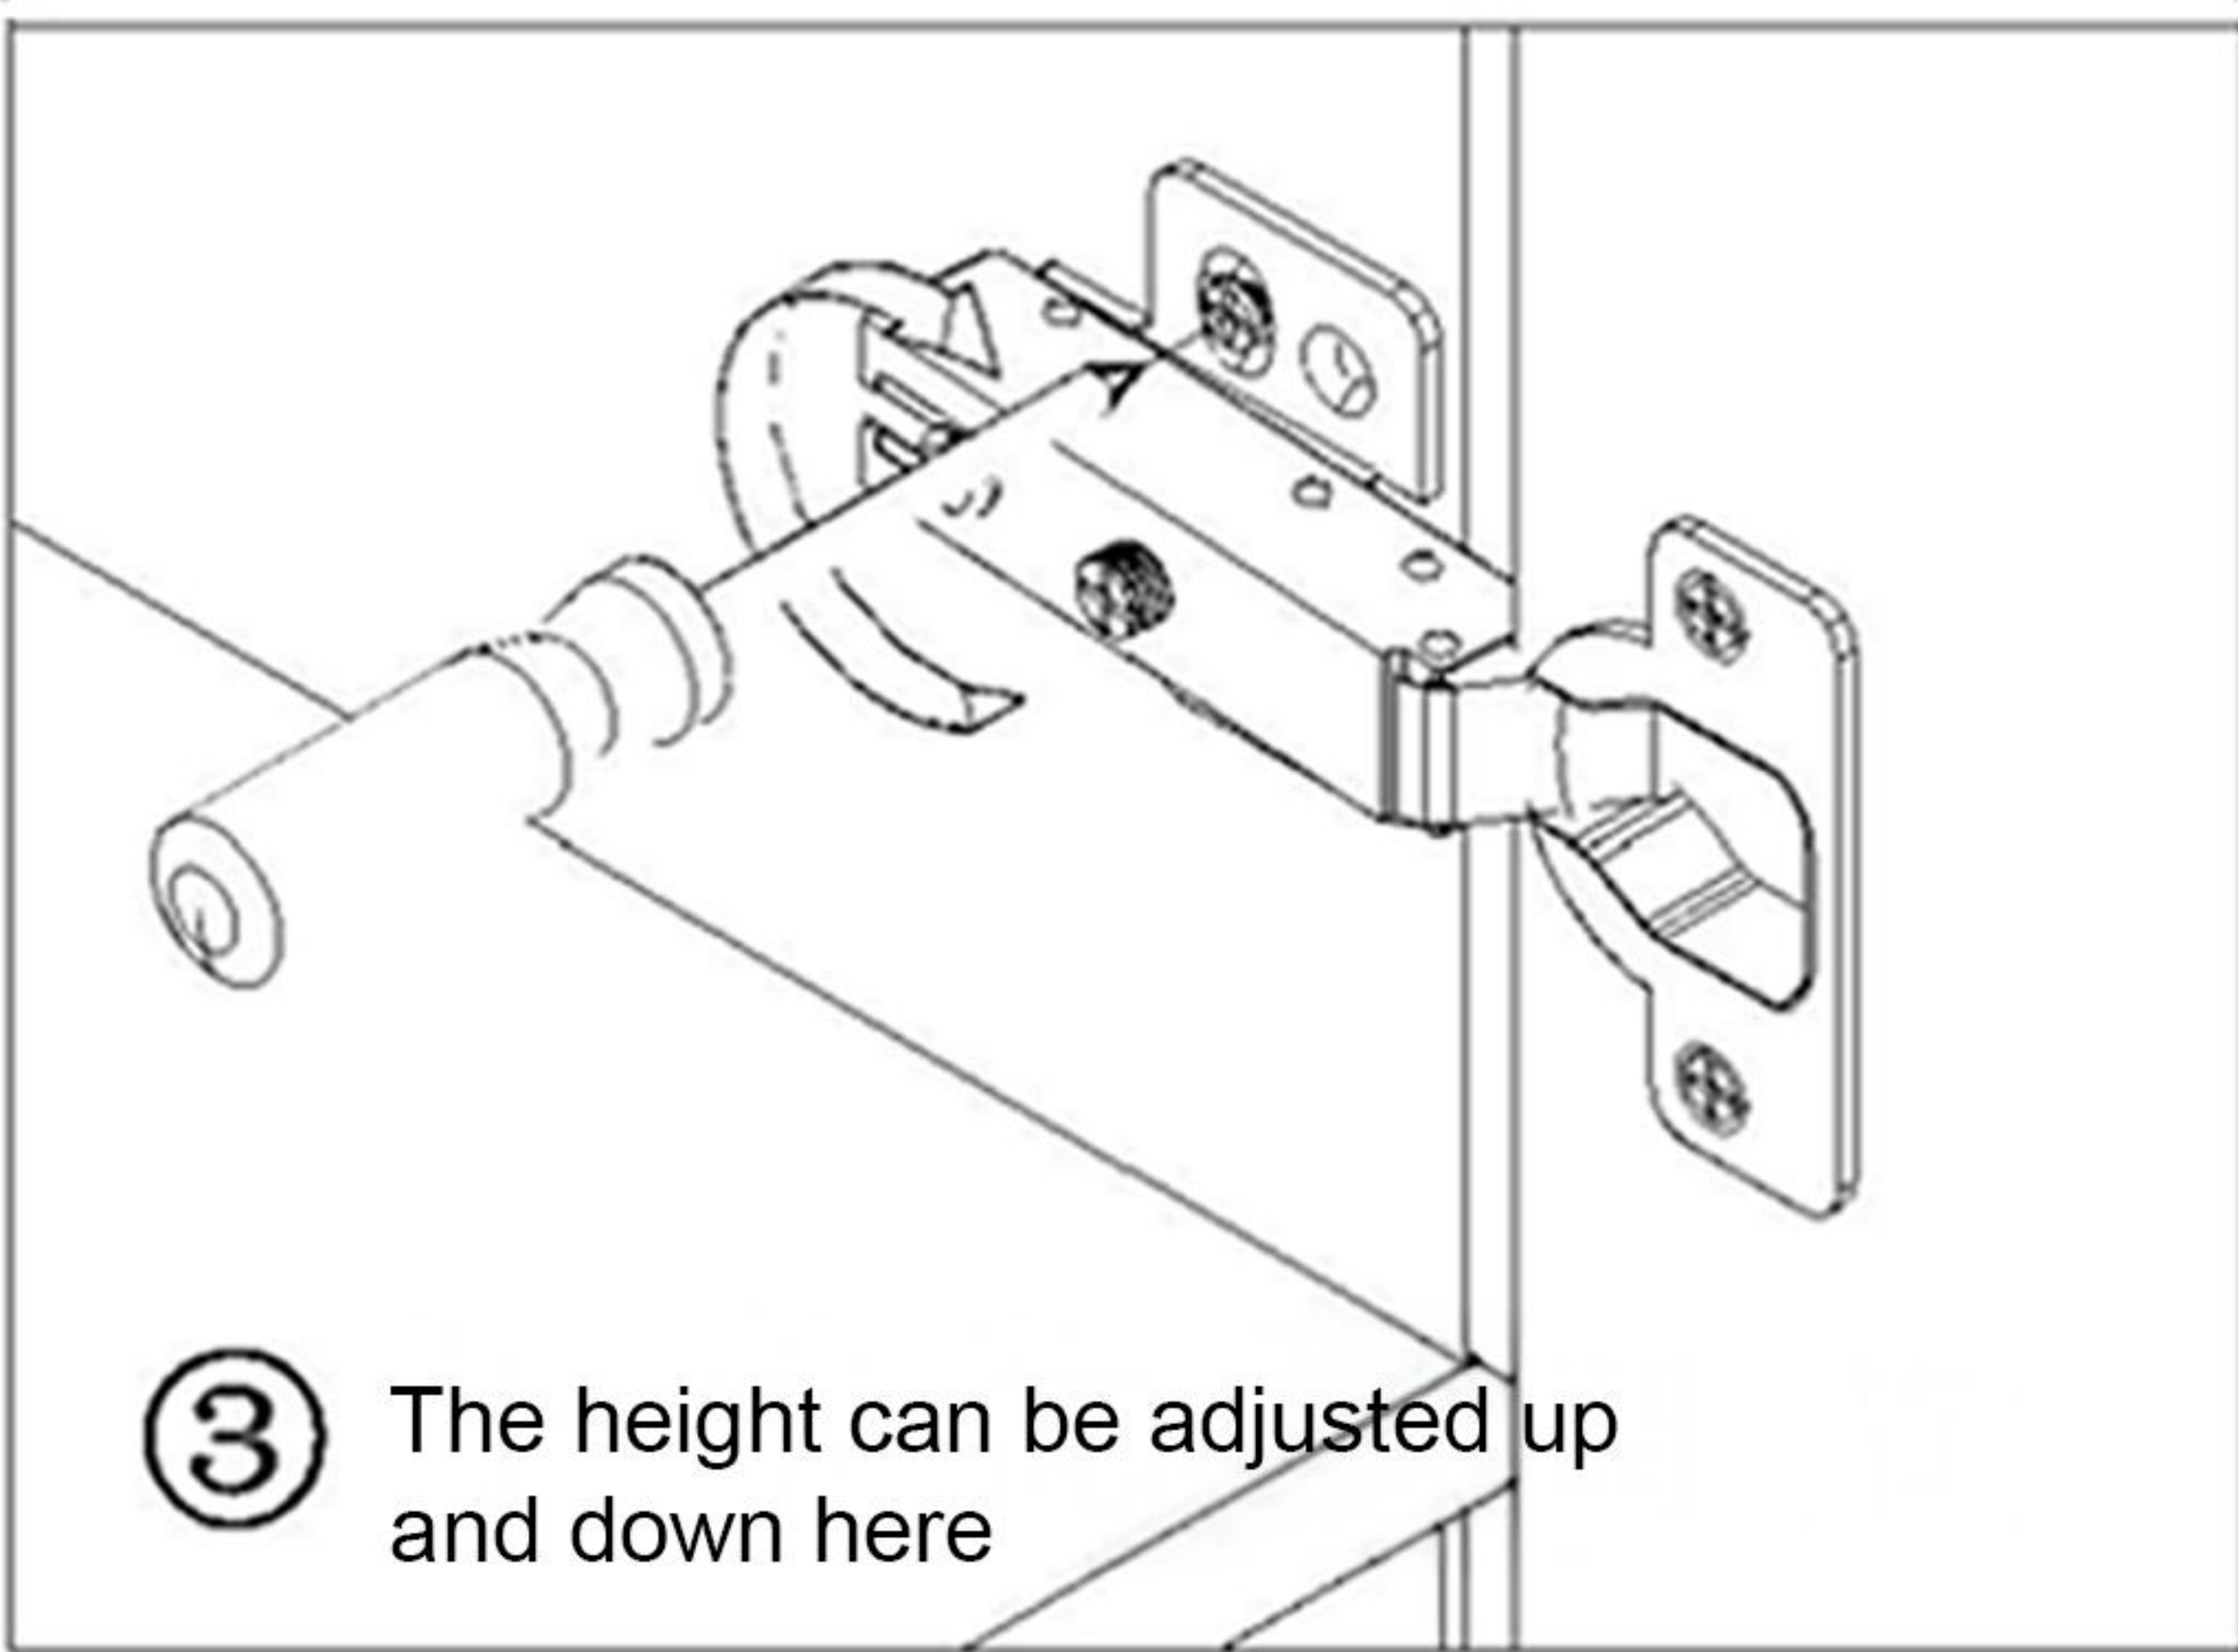

3 The height can be adjusted up and down here

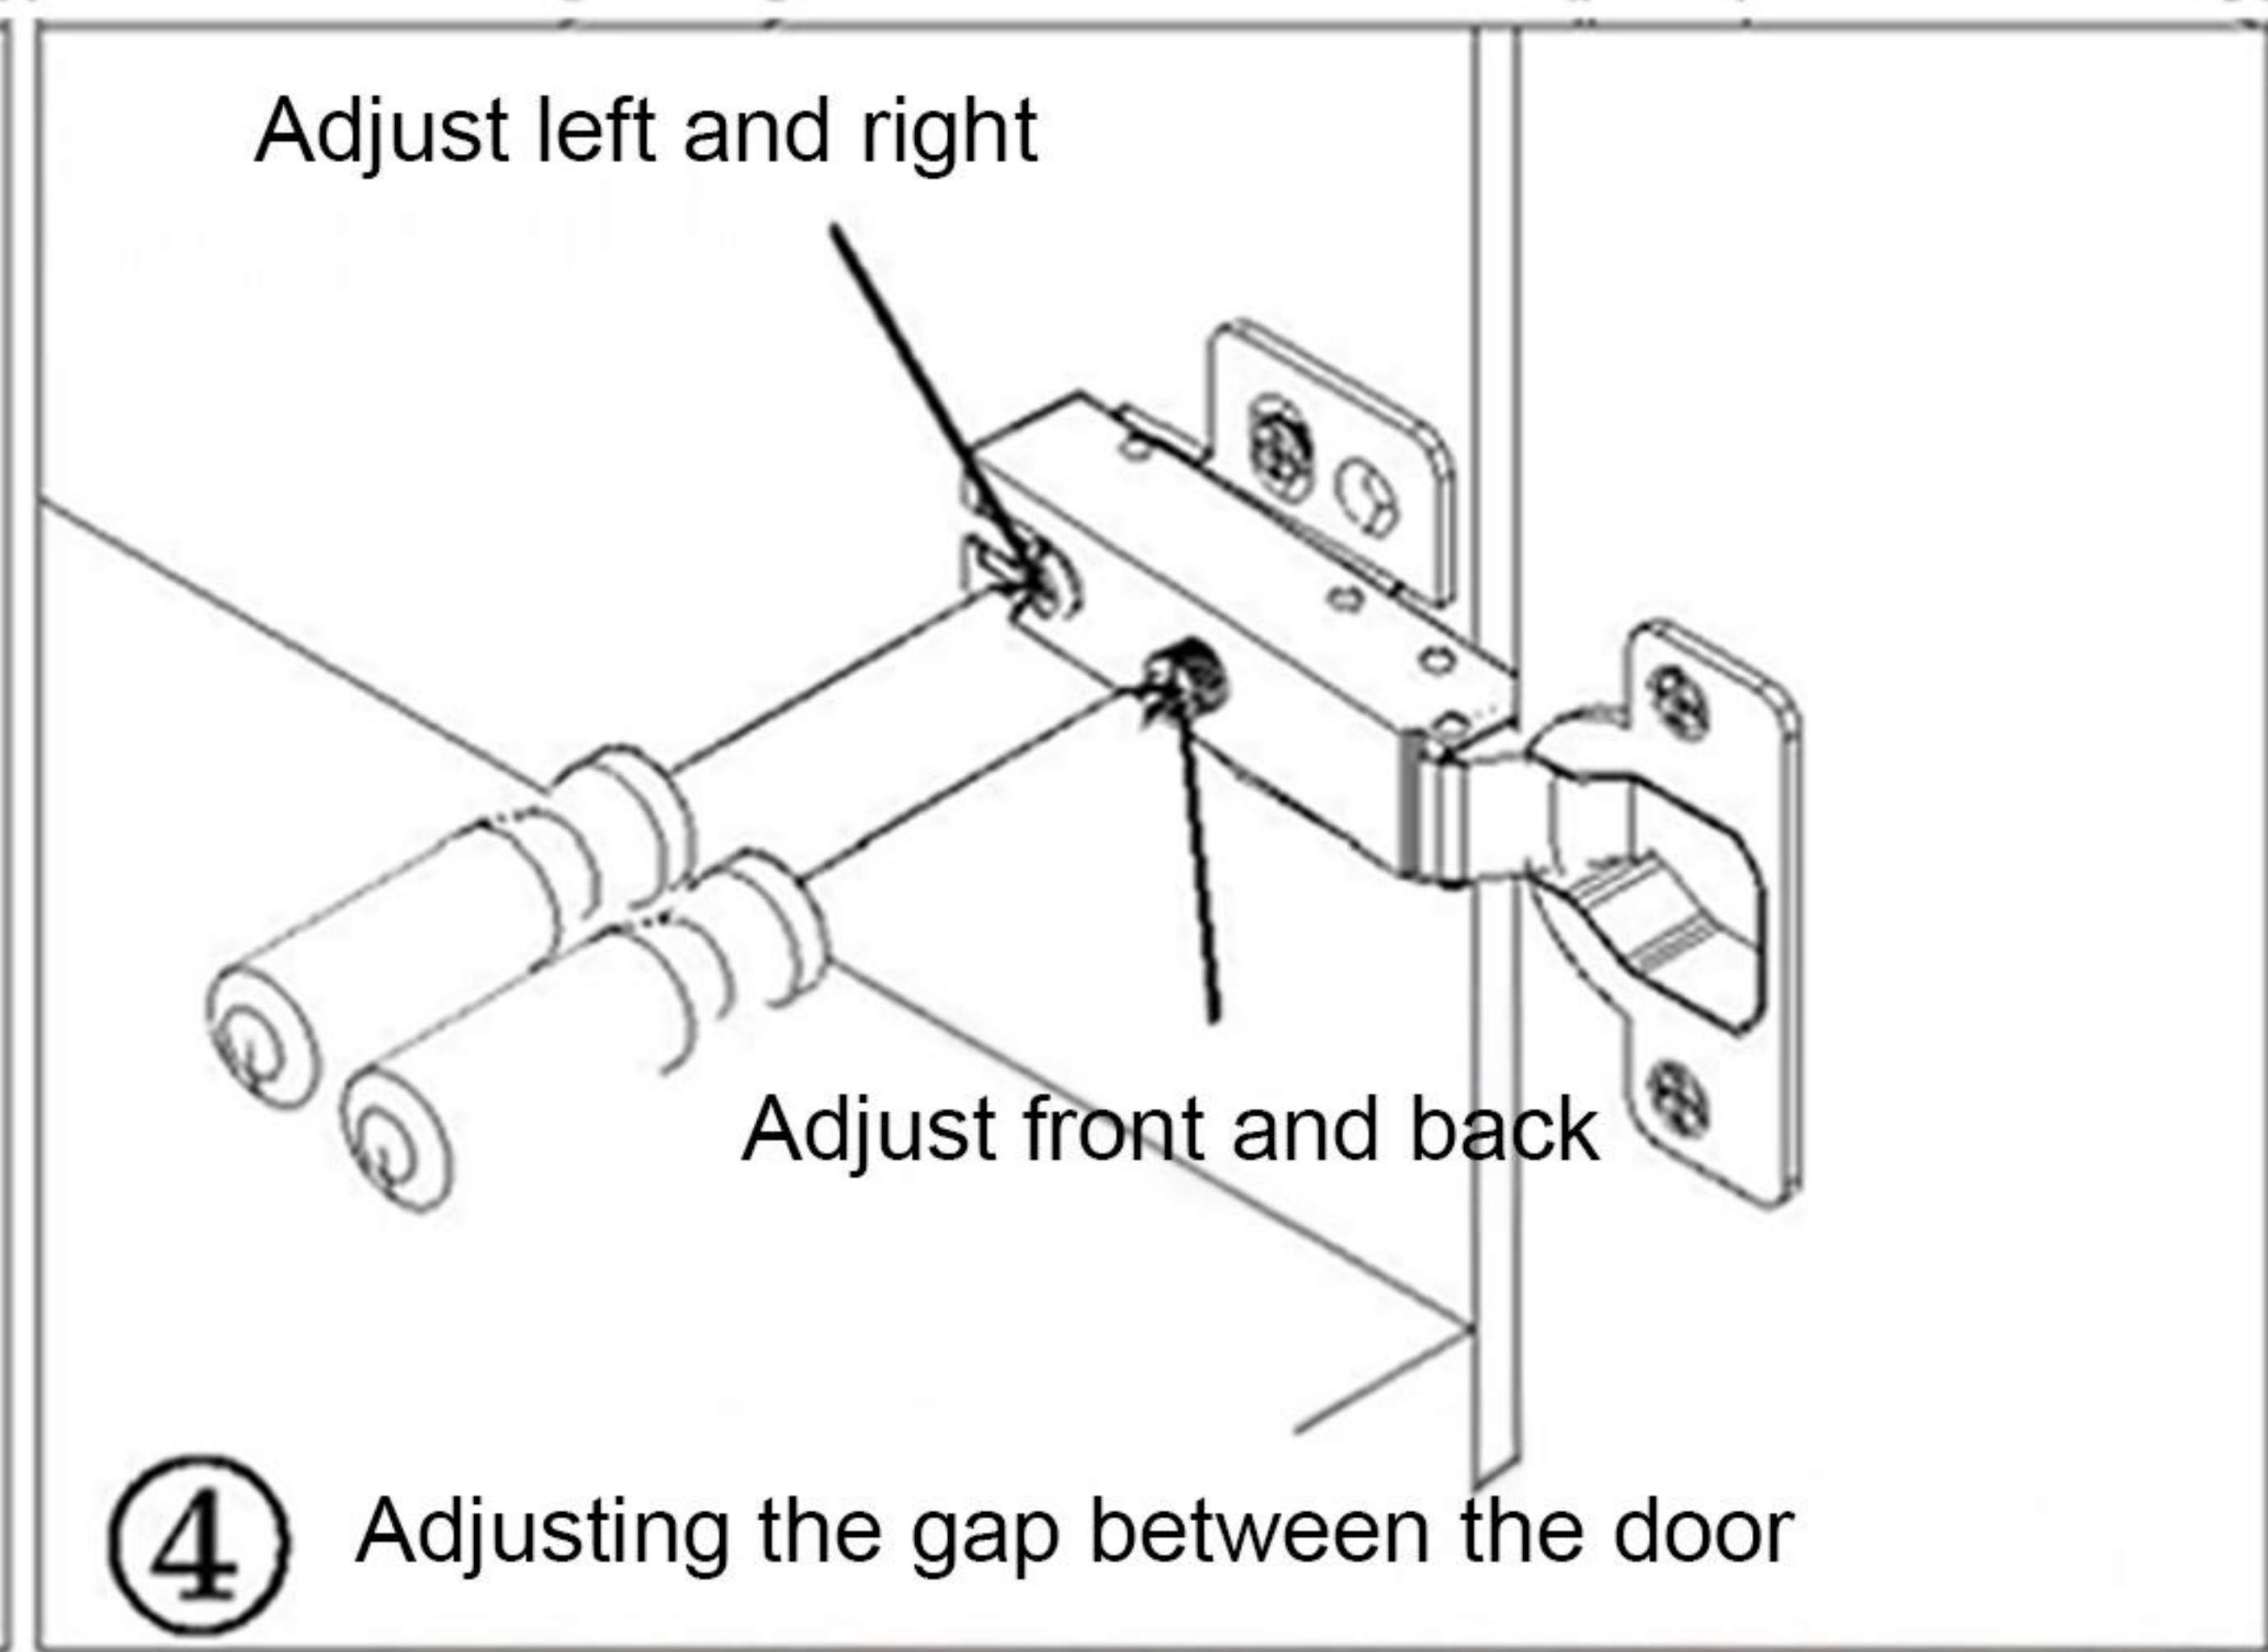


4 Adjusting the gap between the door

Adjust left and right

Adjust front and back

Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

A + B is large, **C + D** is small

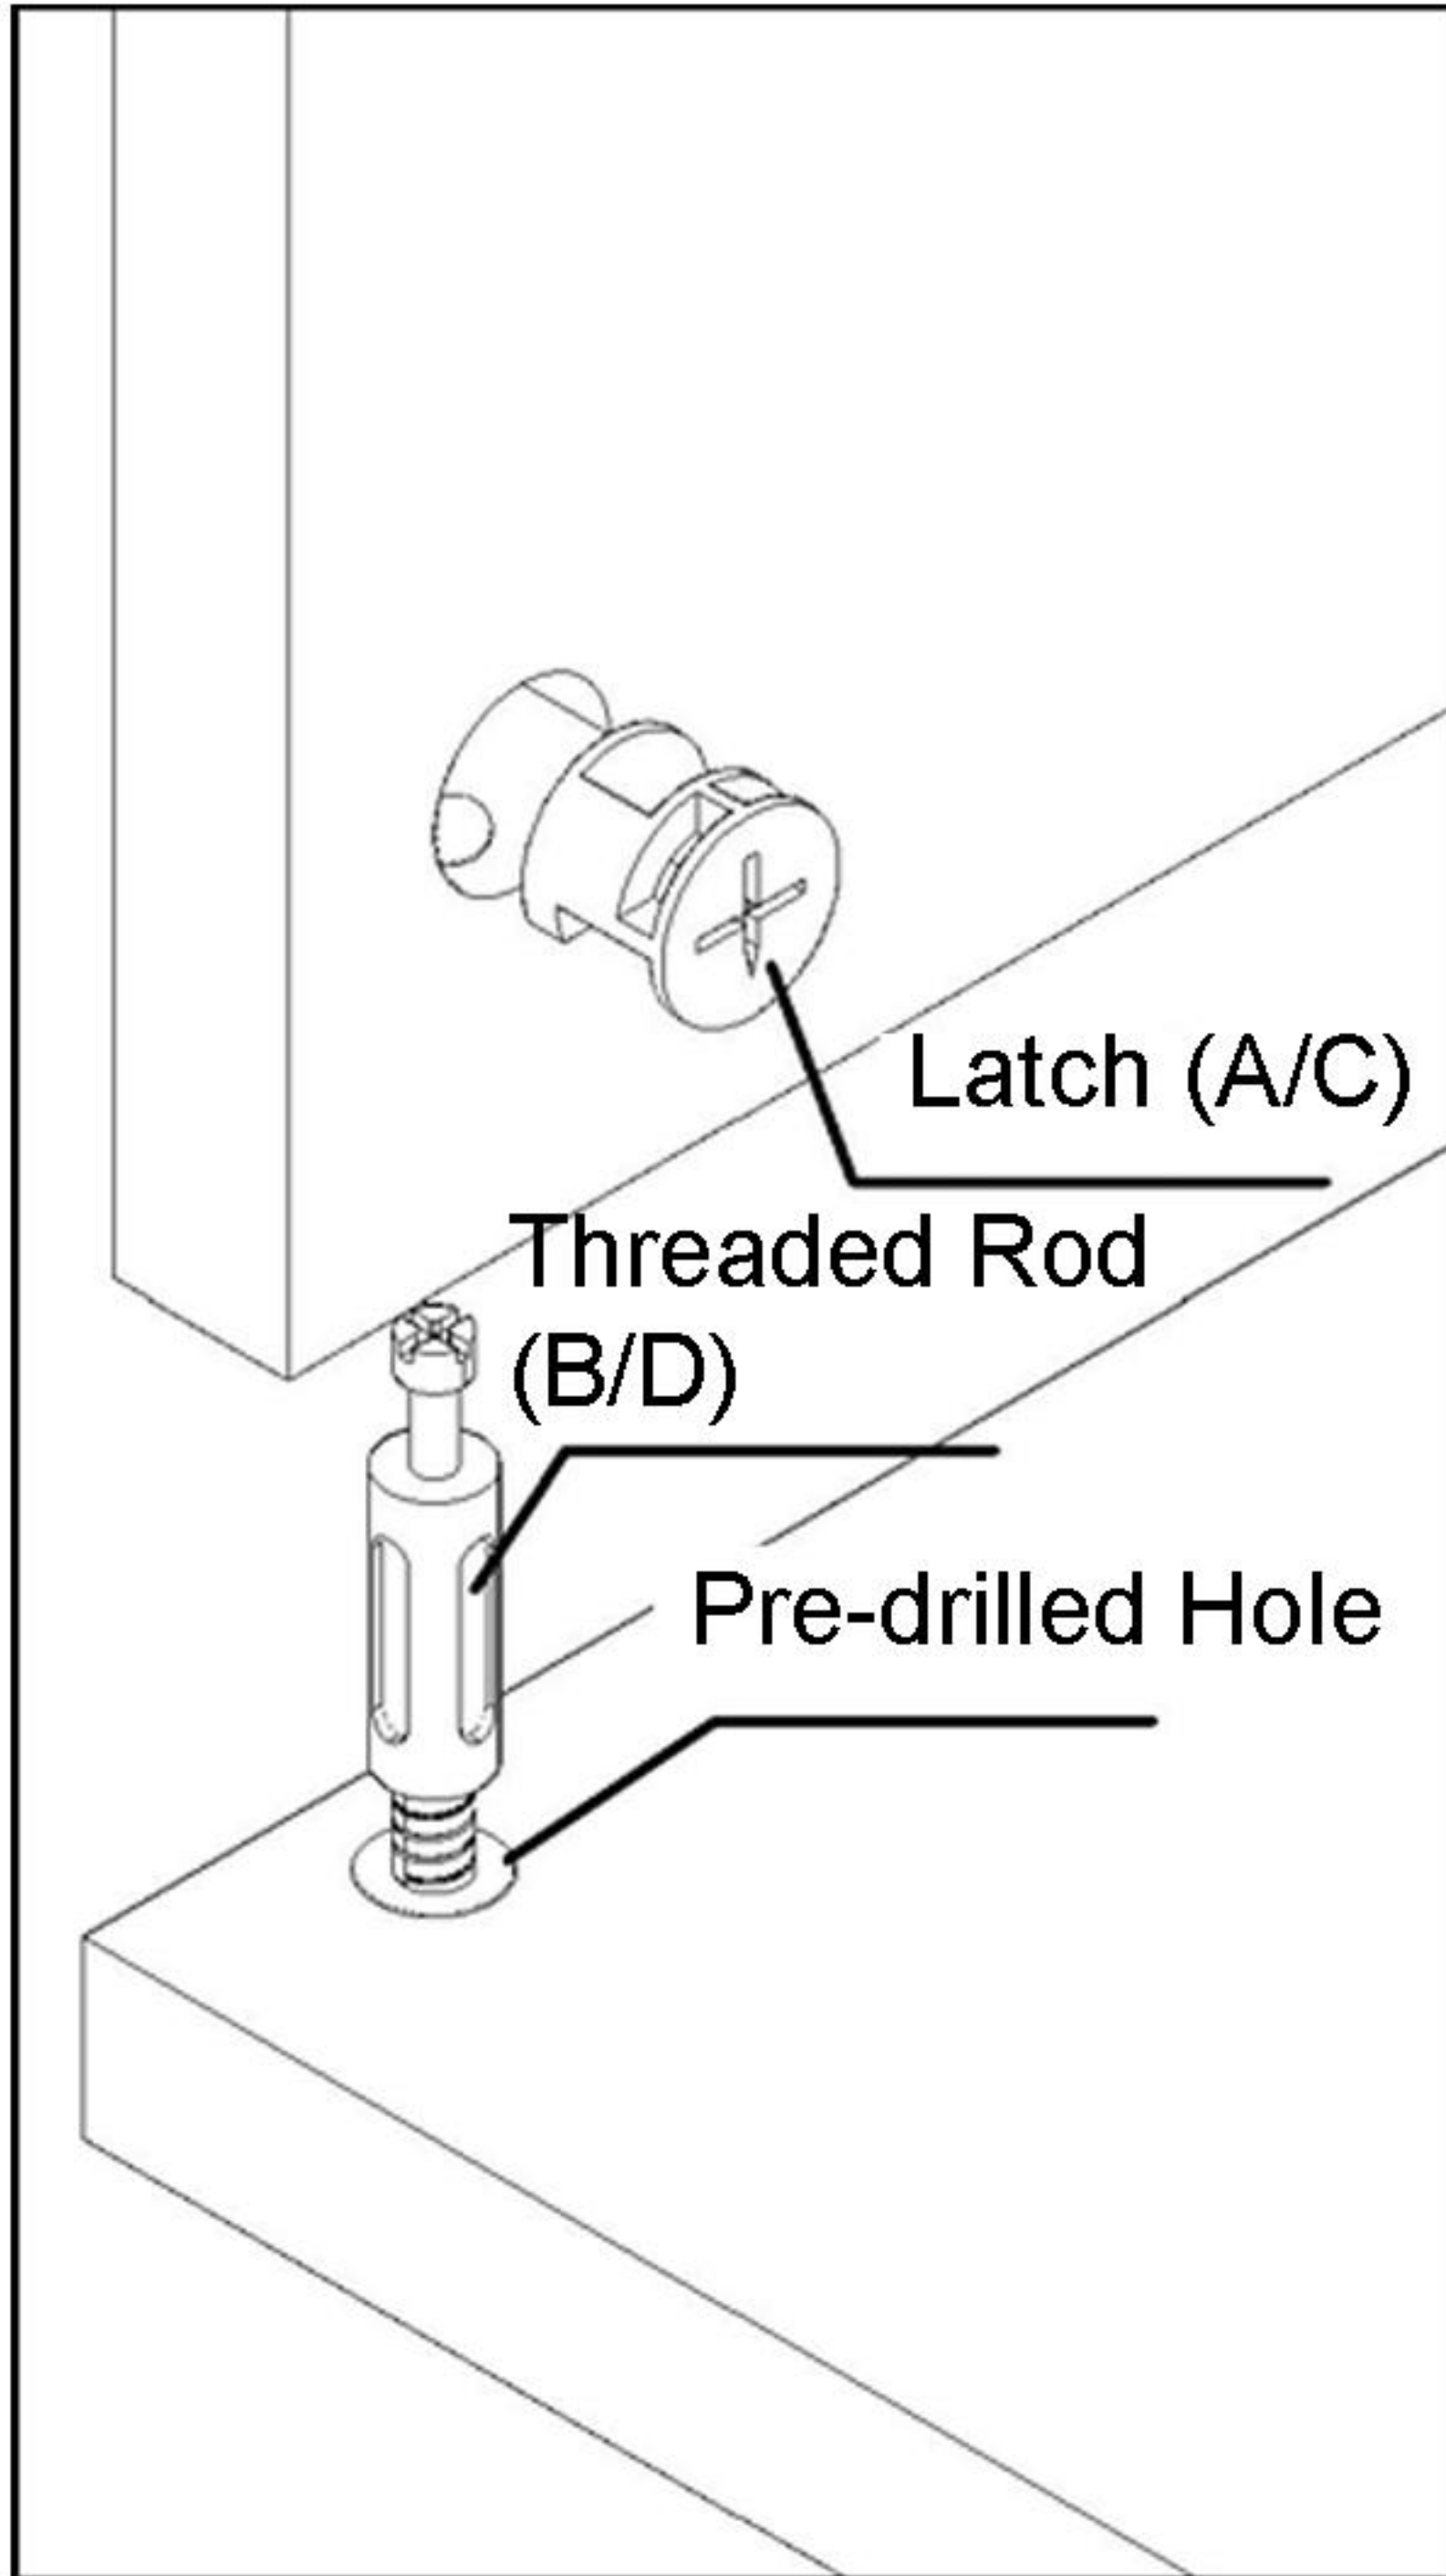


1. Screw the B/D (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed B/D into the corresponding hole of the other piece. Press A/C (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.


O (Sliding Rail) Installation Instructions

When installing **O**, use with screw **H**

1, Separate **O** (Sliding Rail)

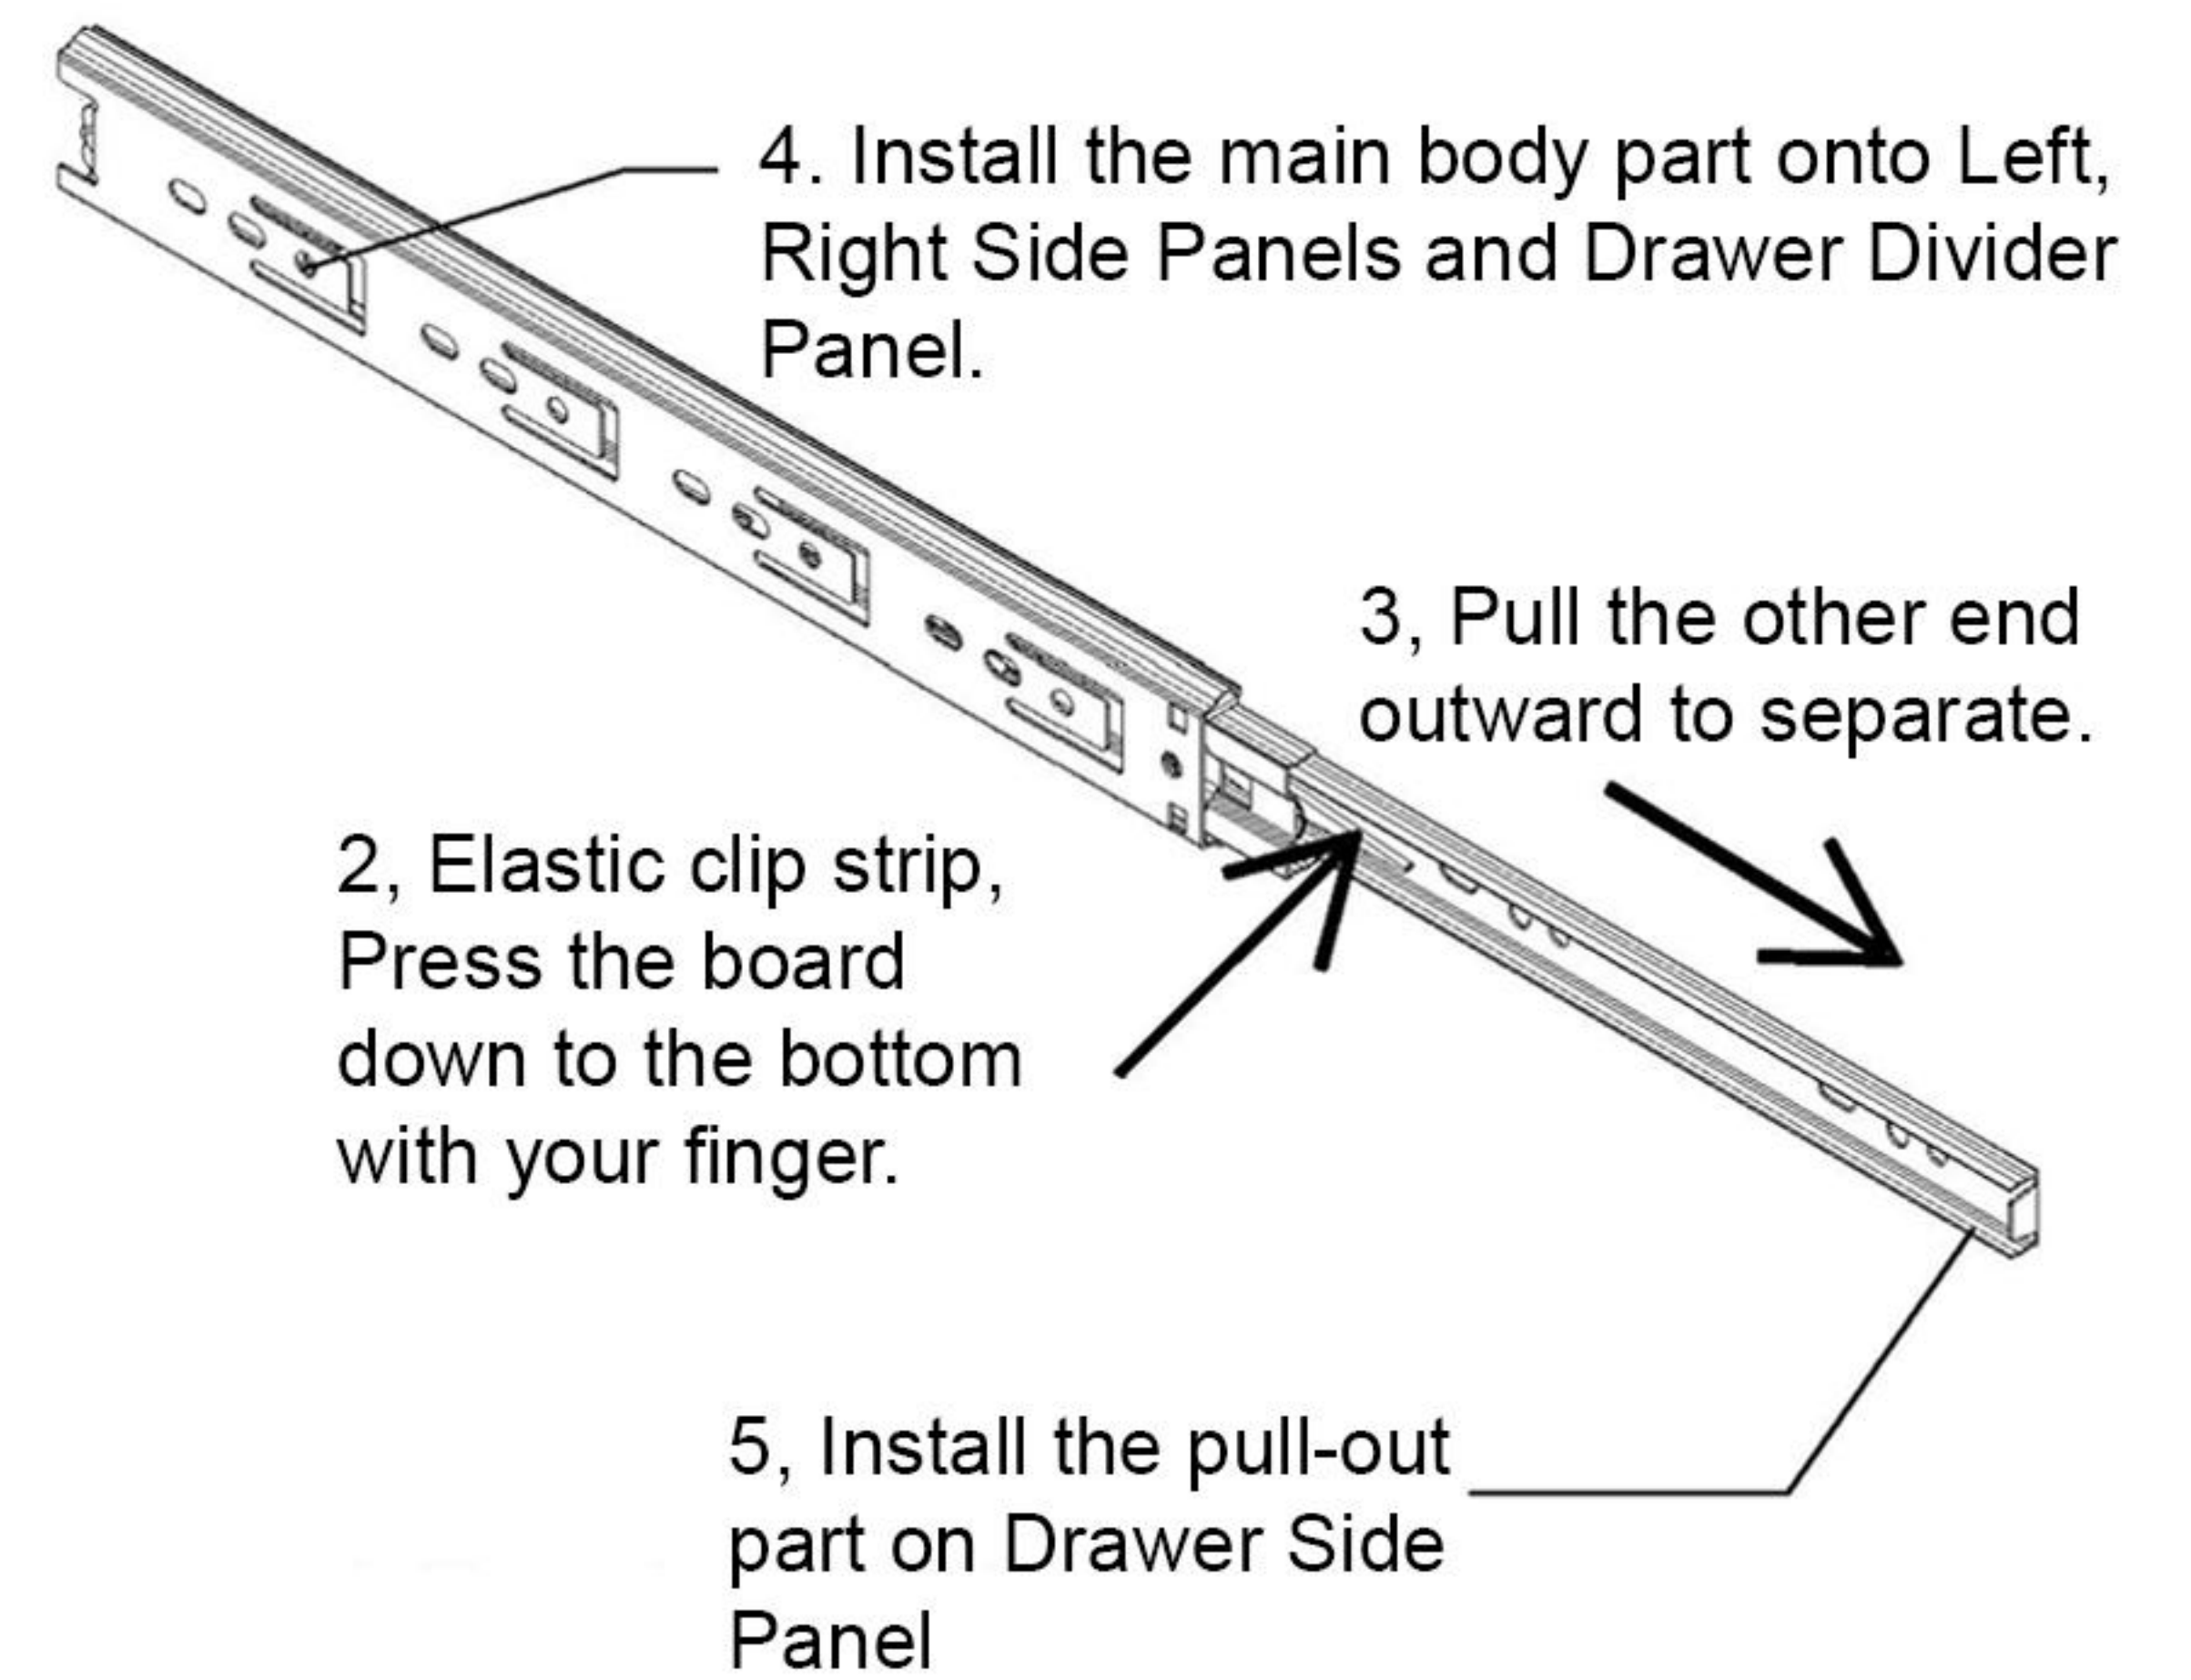


Step 1:

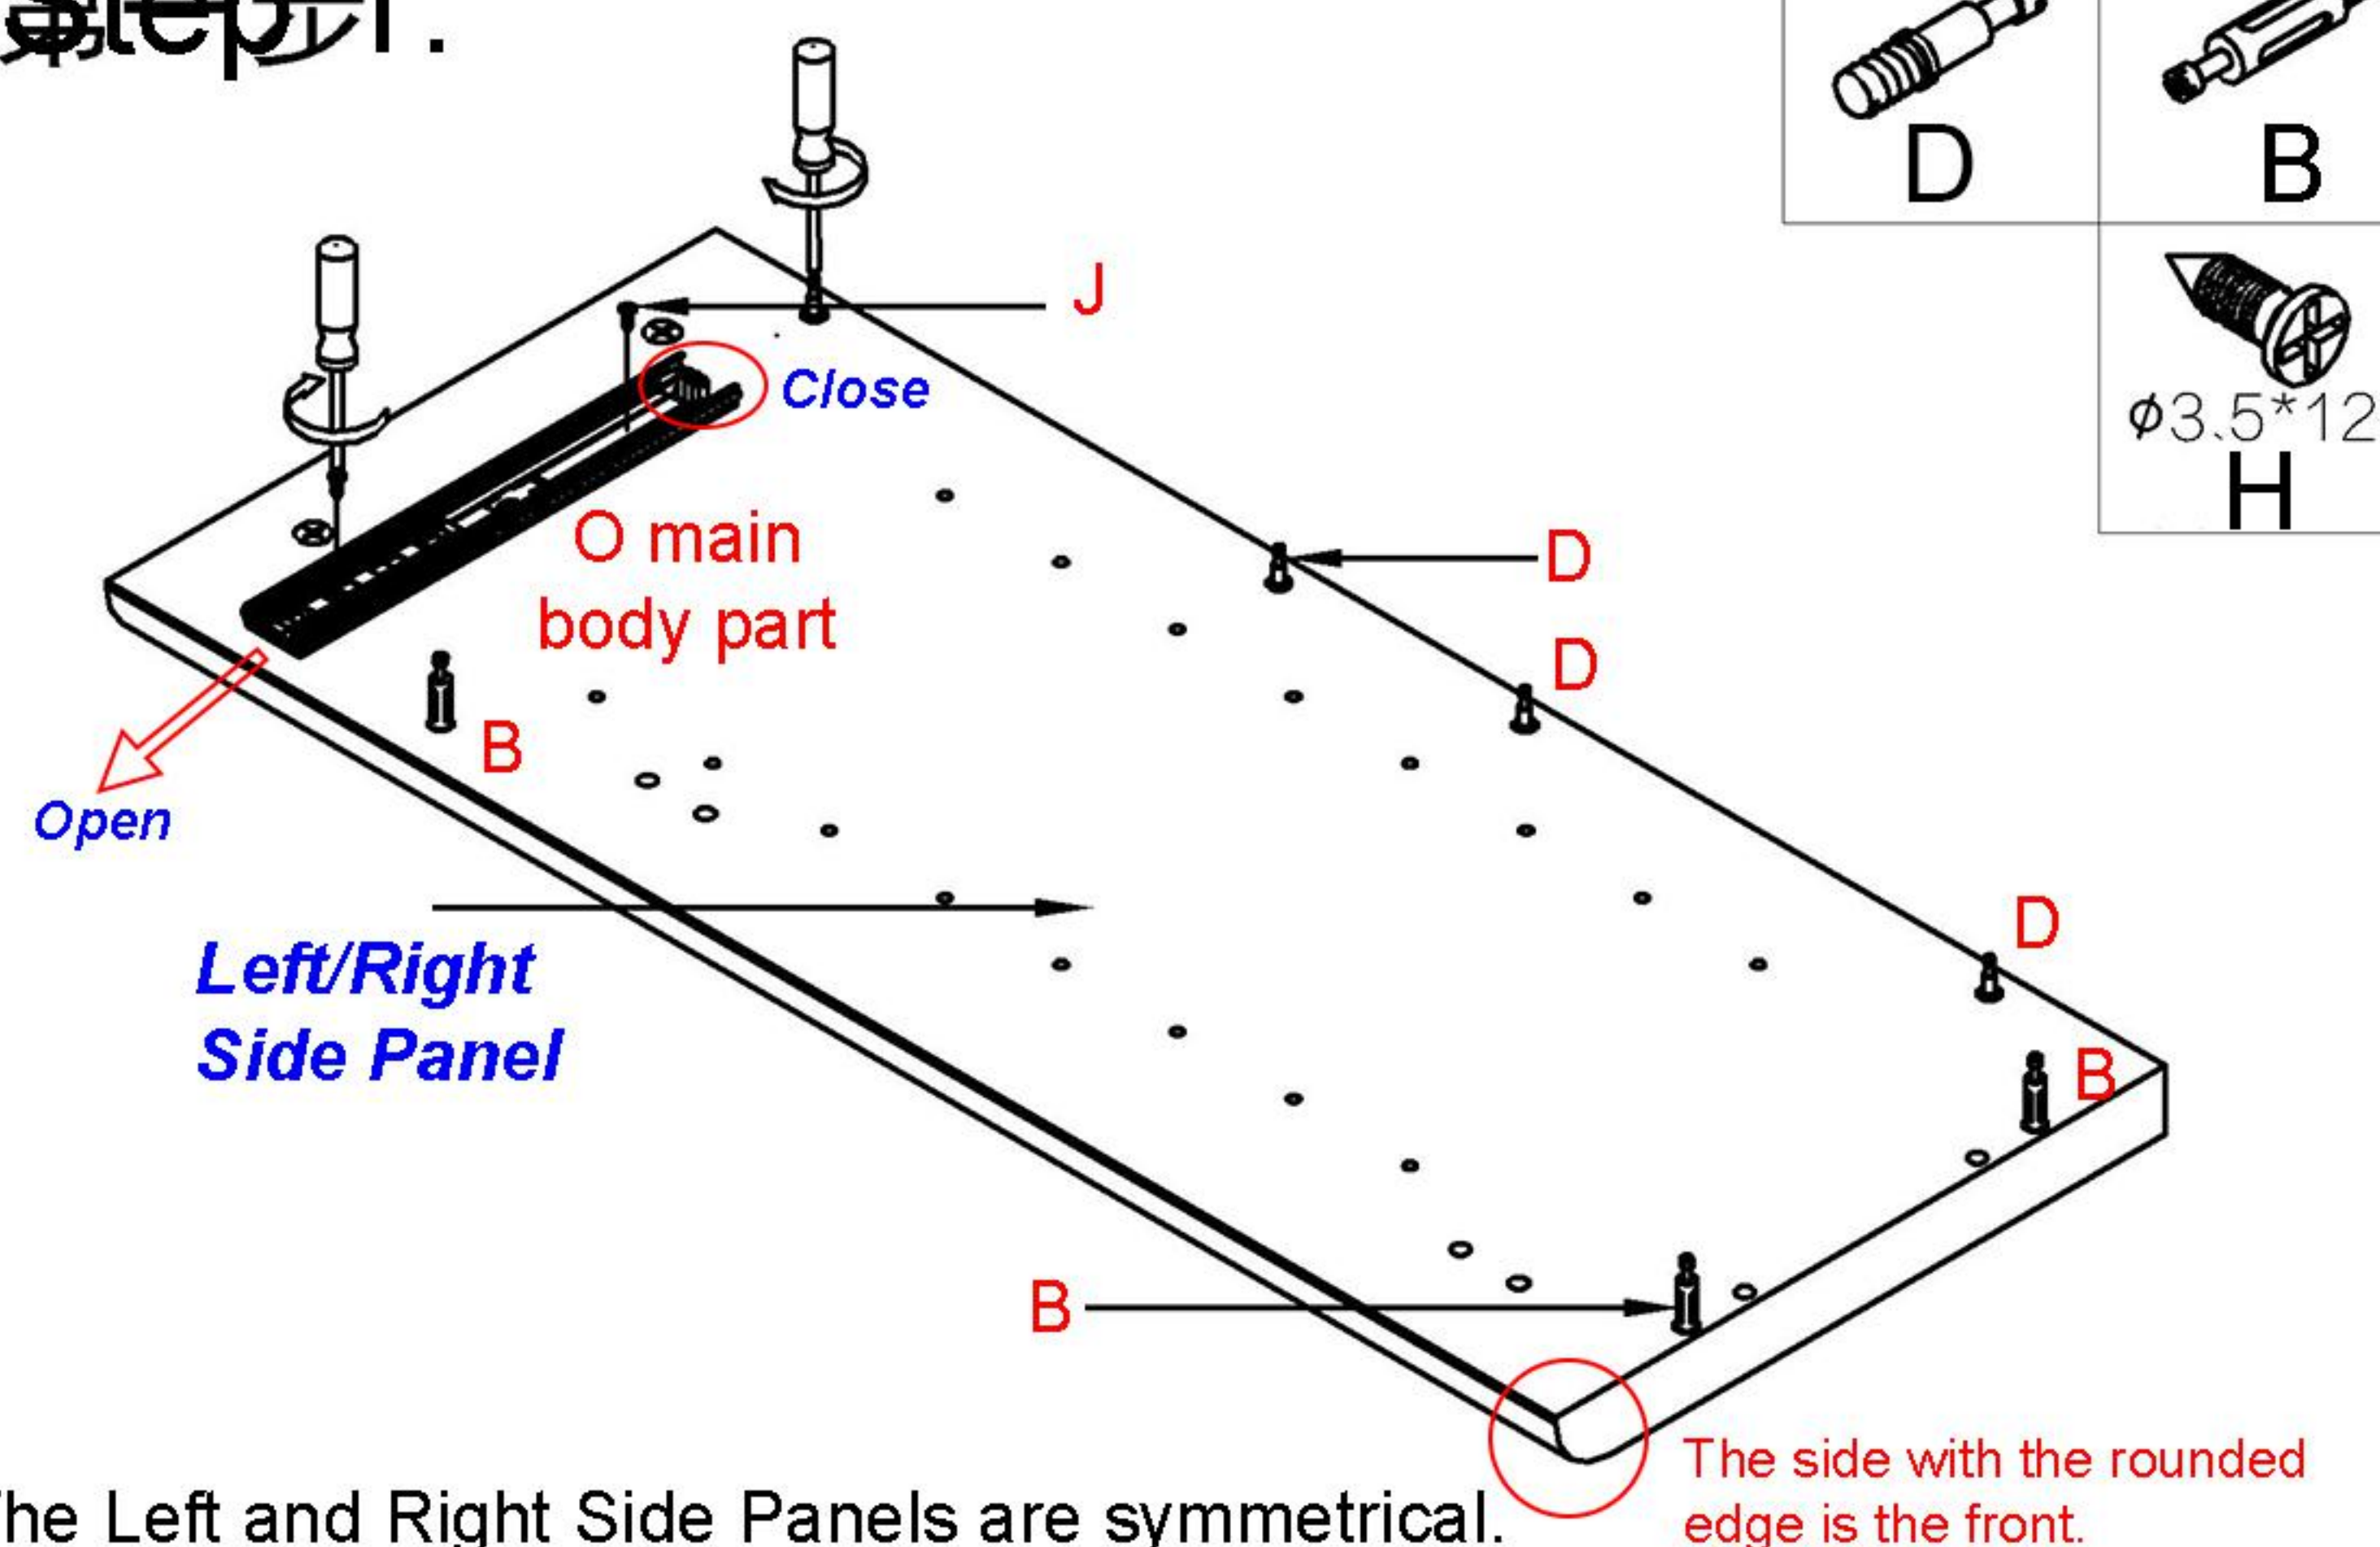


The Left and Right Side Panels are symmetrical.
Install the main body part of O on both panels.

Step 2:


Note: Please distinguish the upper and lower back panels according to the hole positions

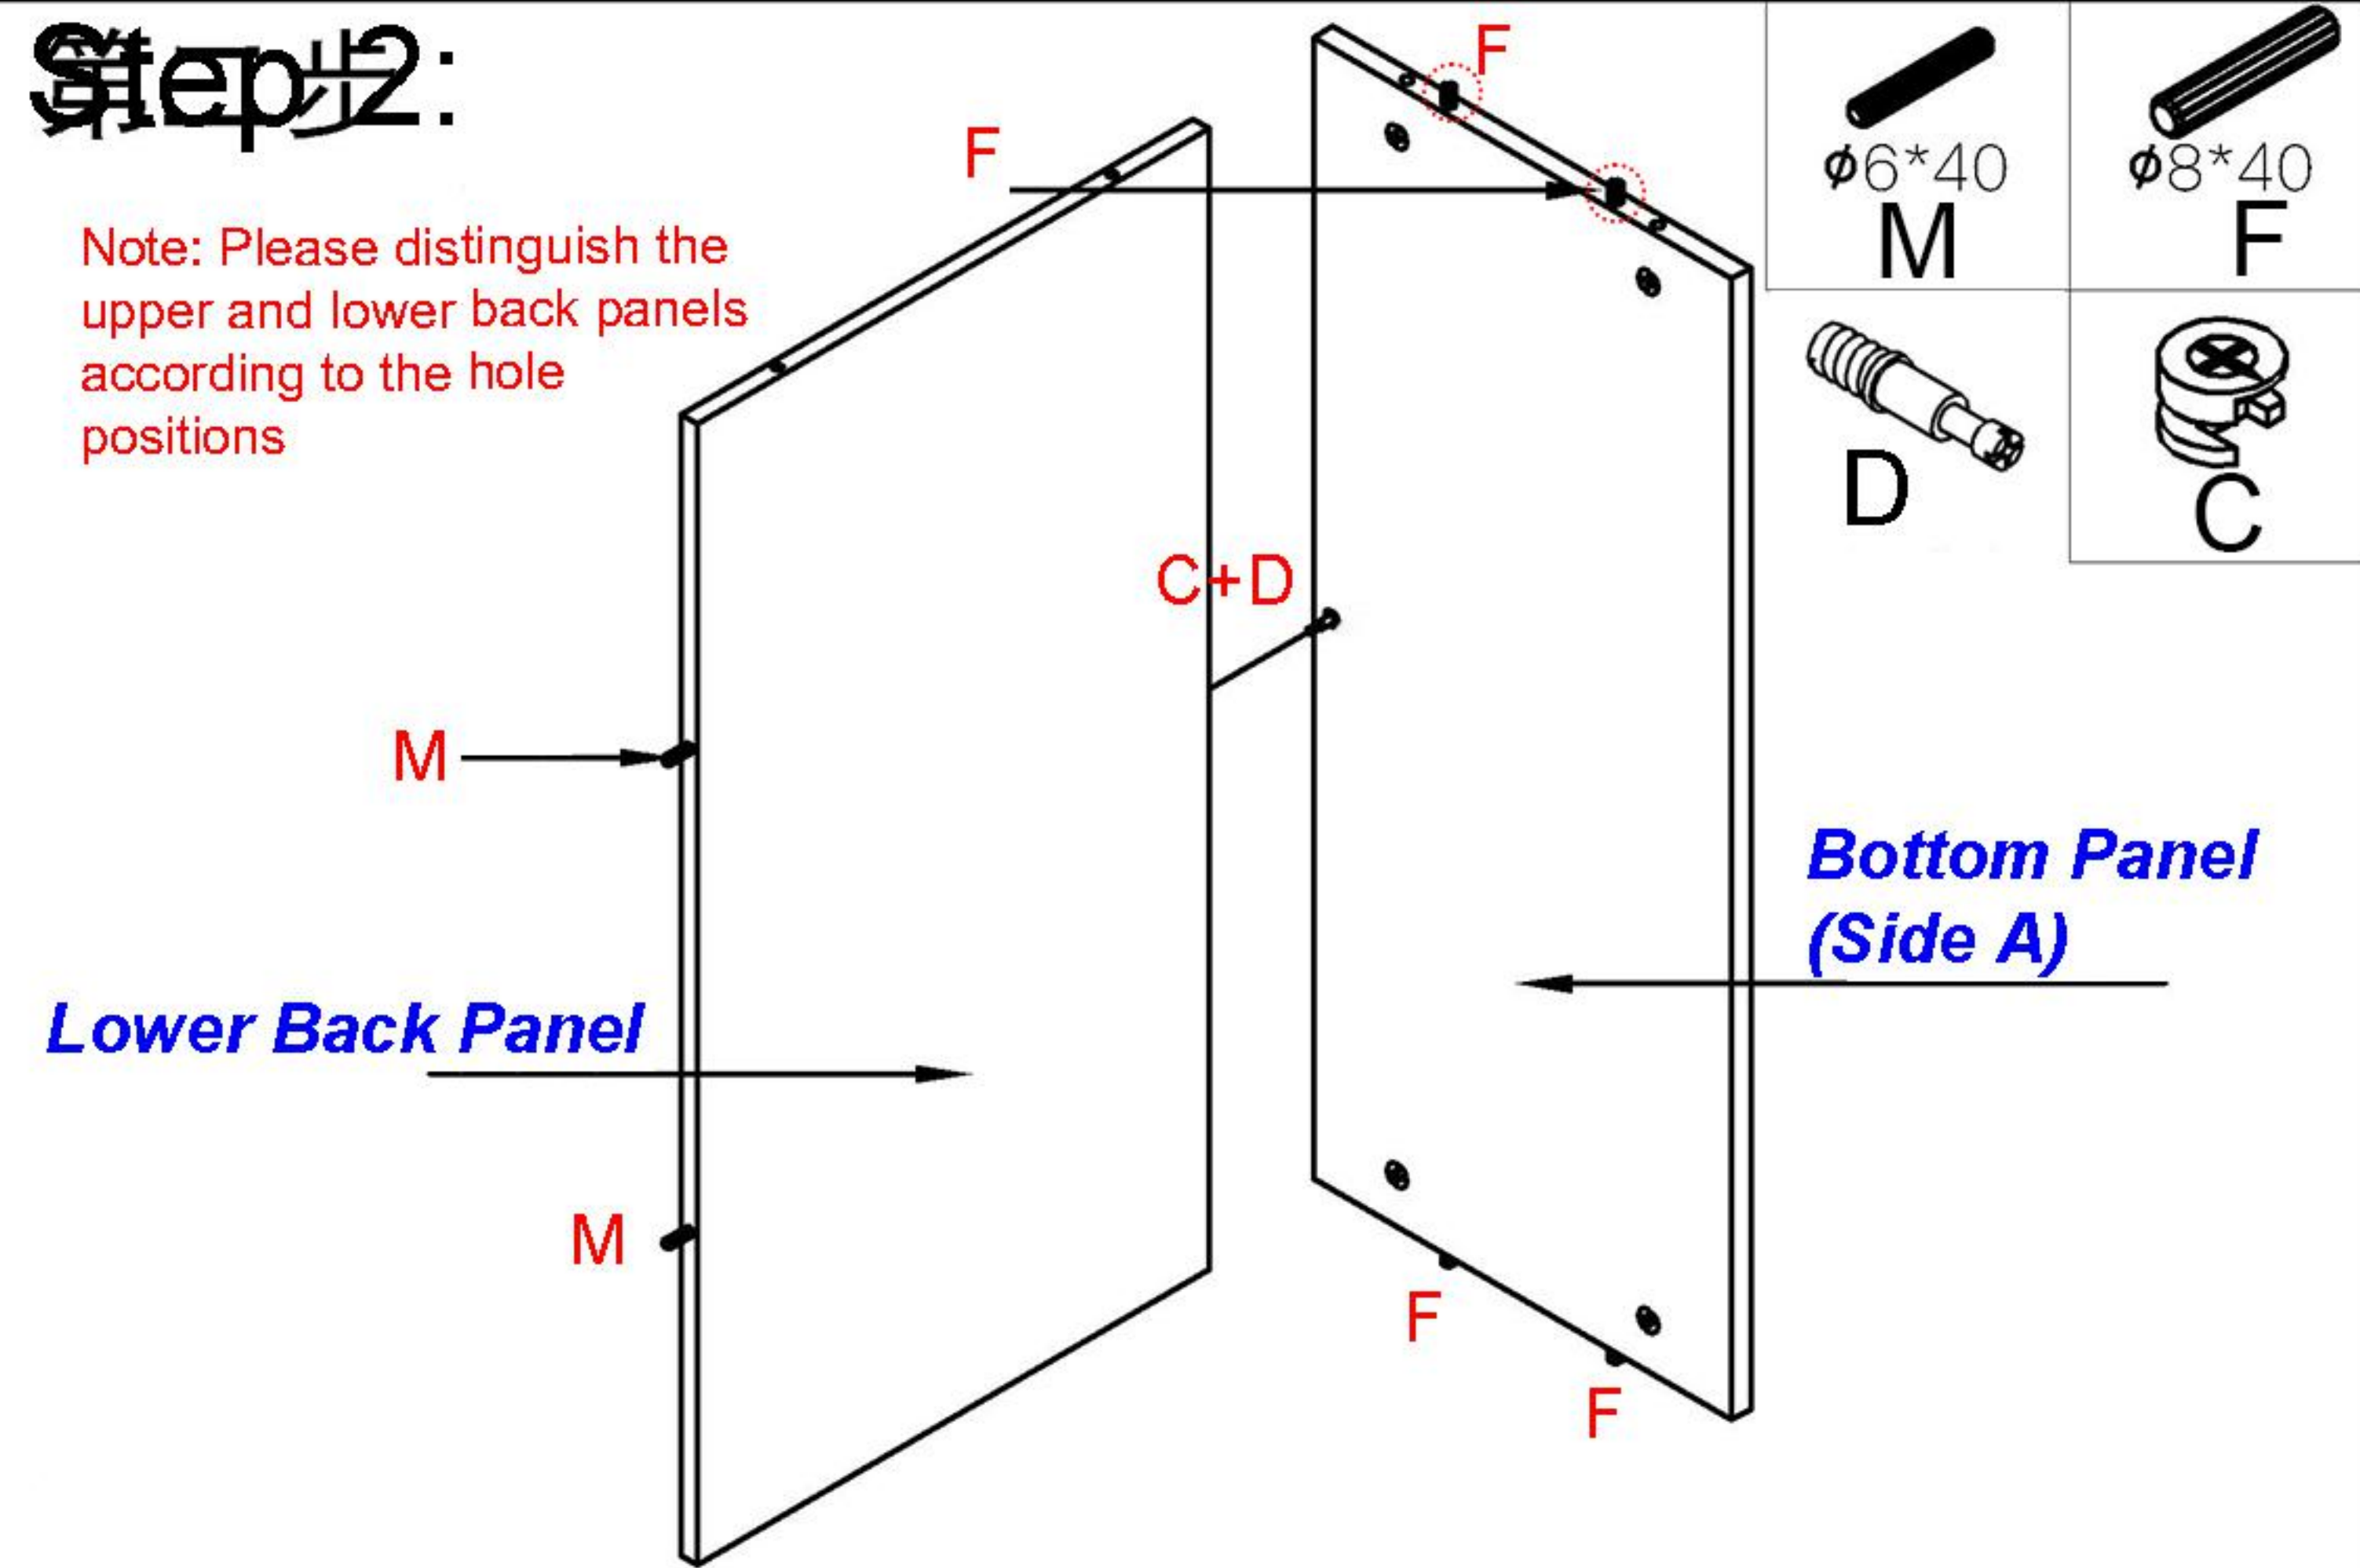

Step 3:

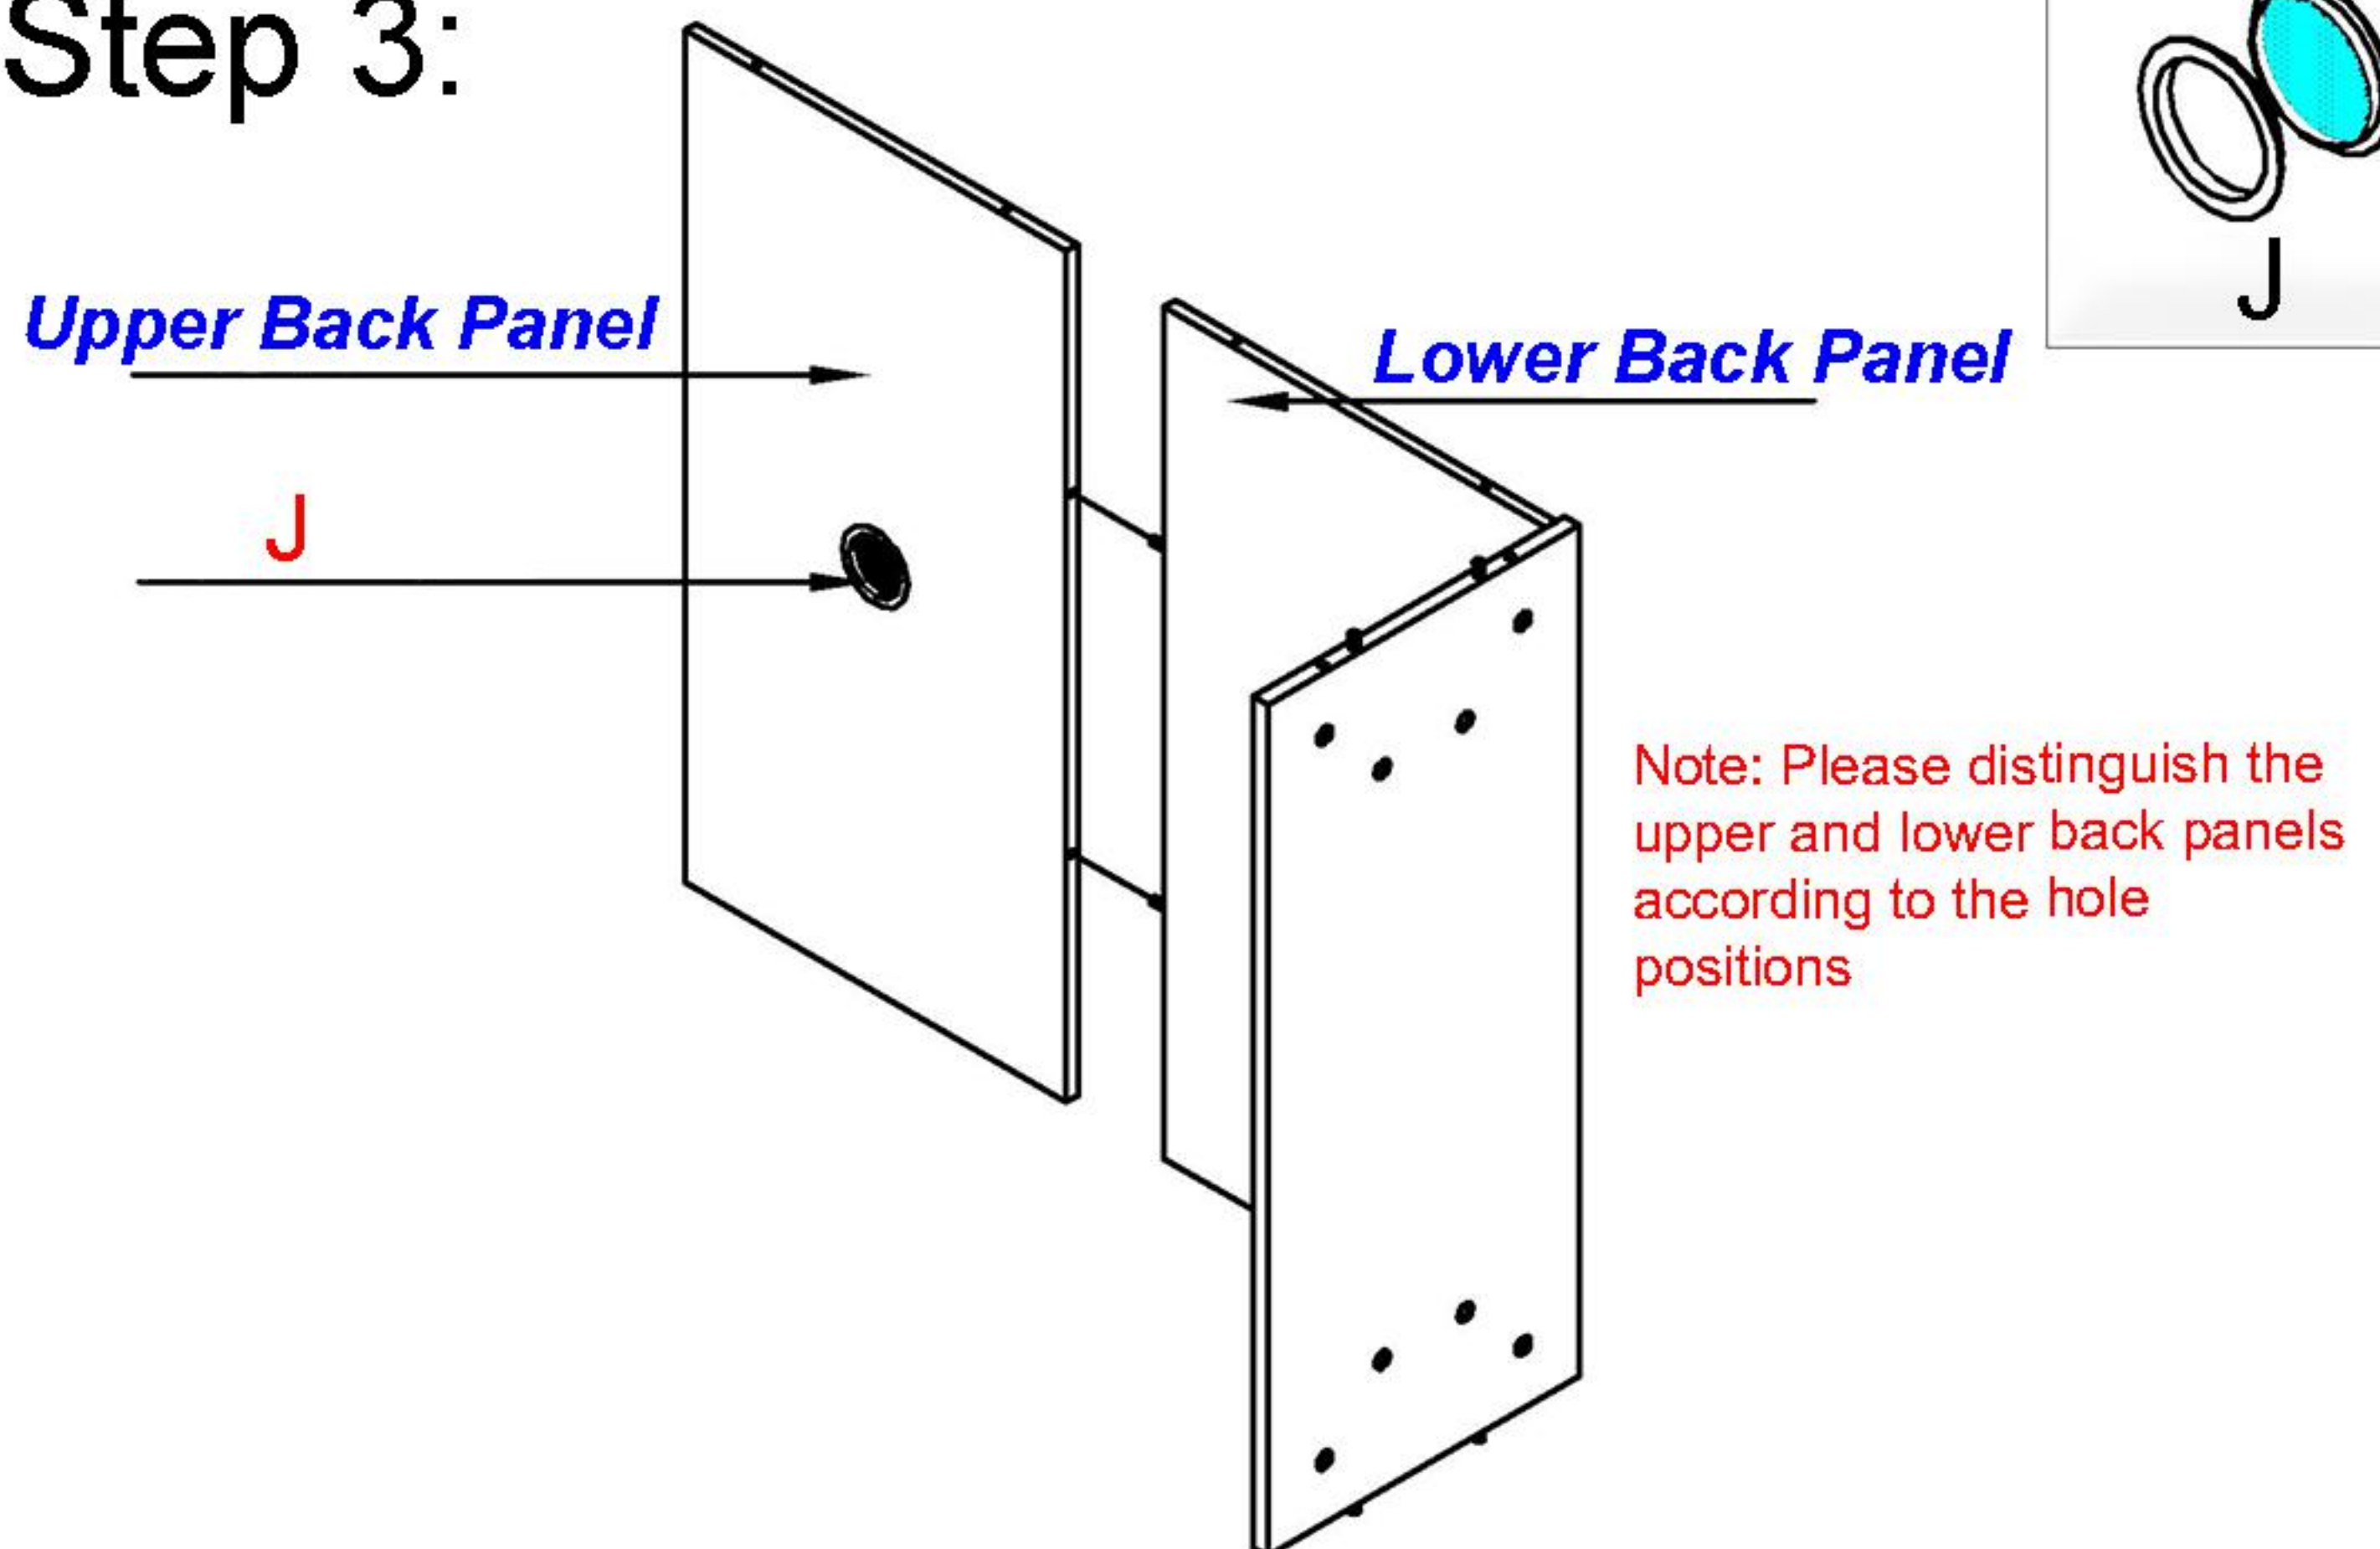


Step 4:

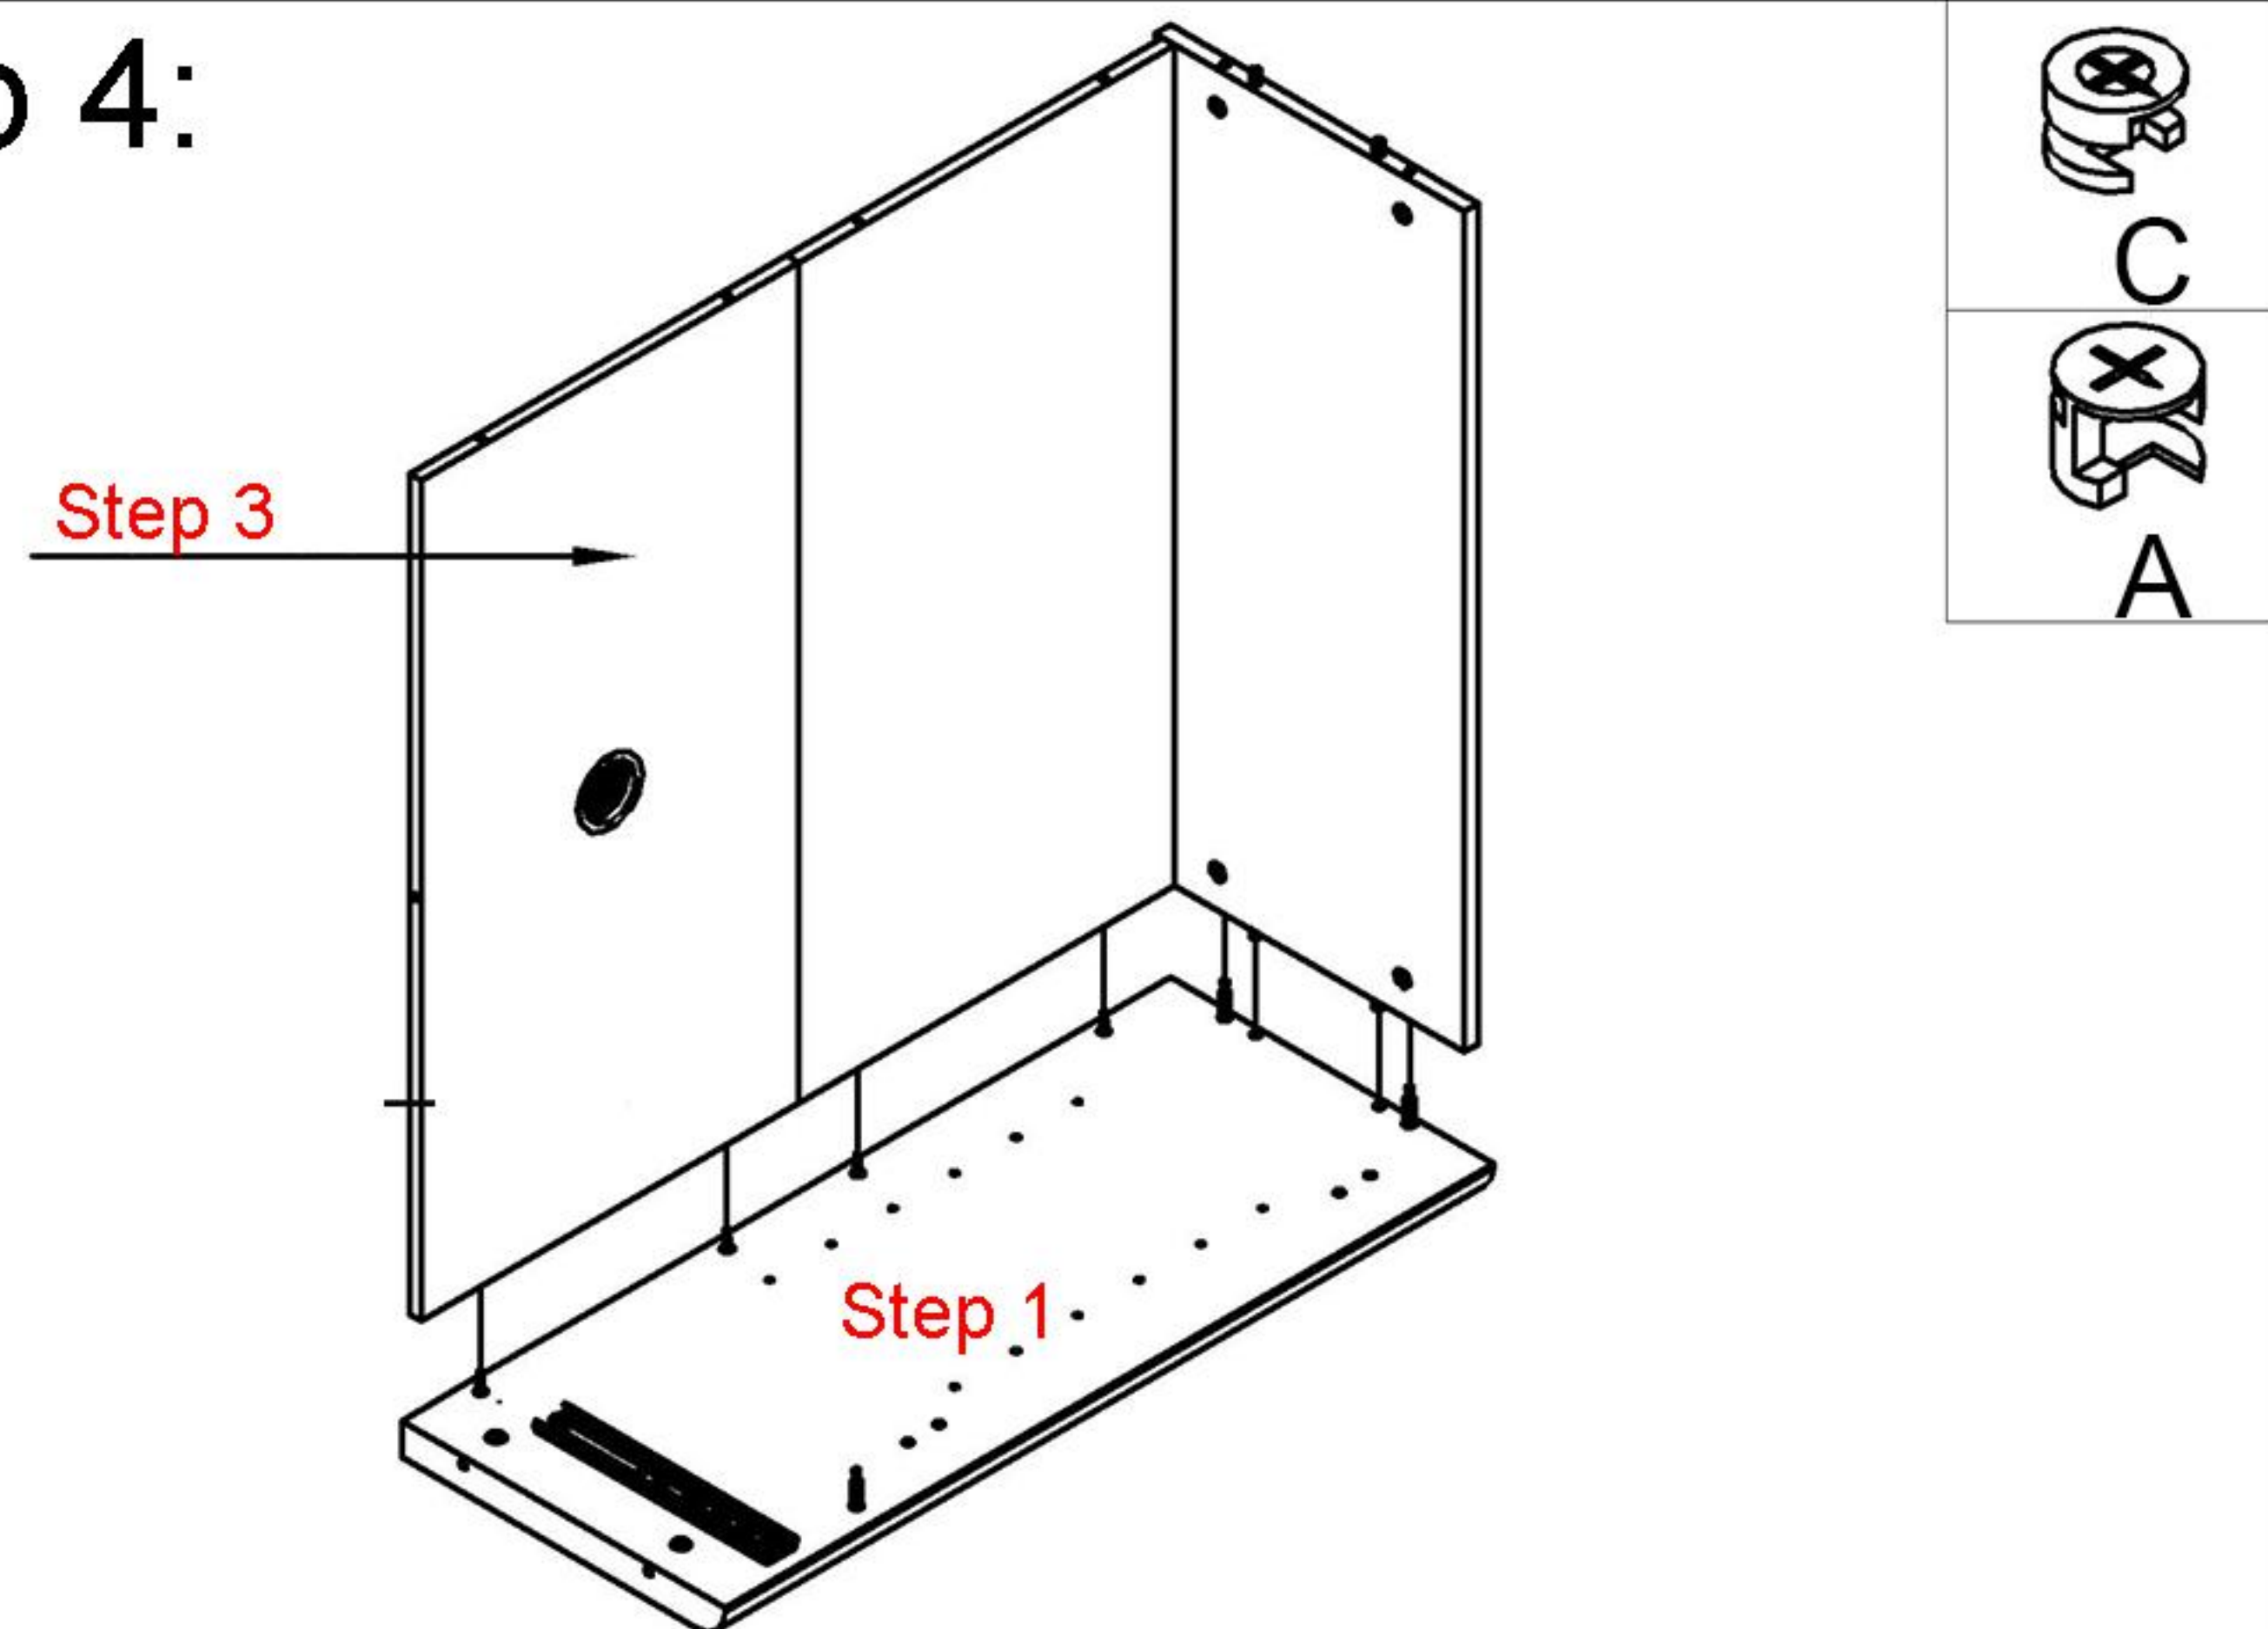


Lock by combining A with B, and C with D.

Step 5:

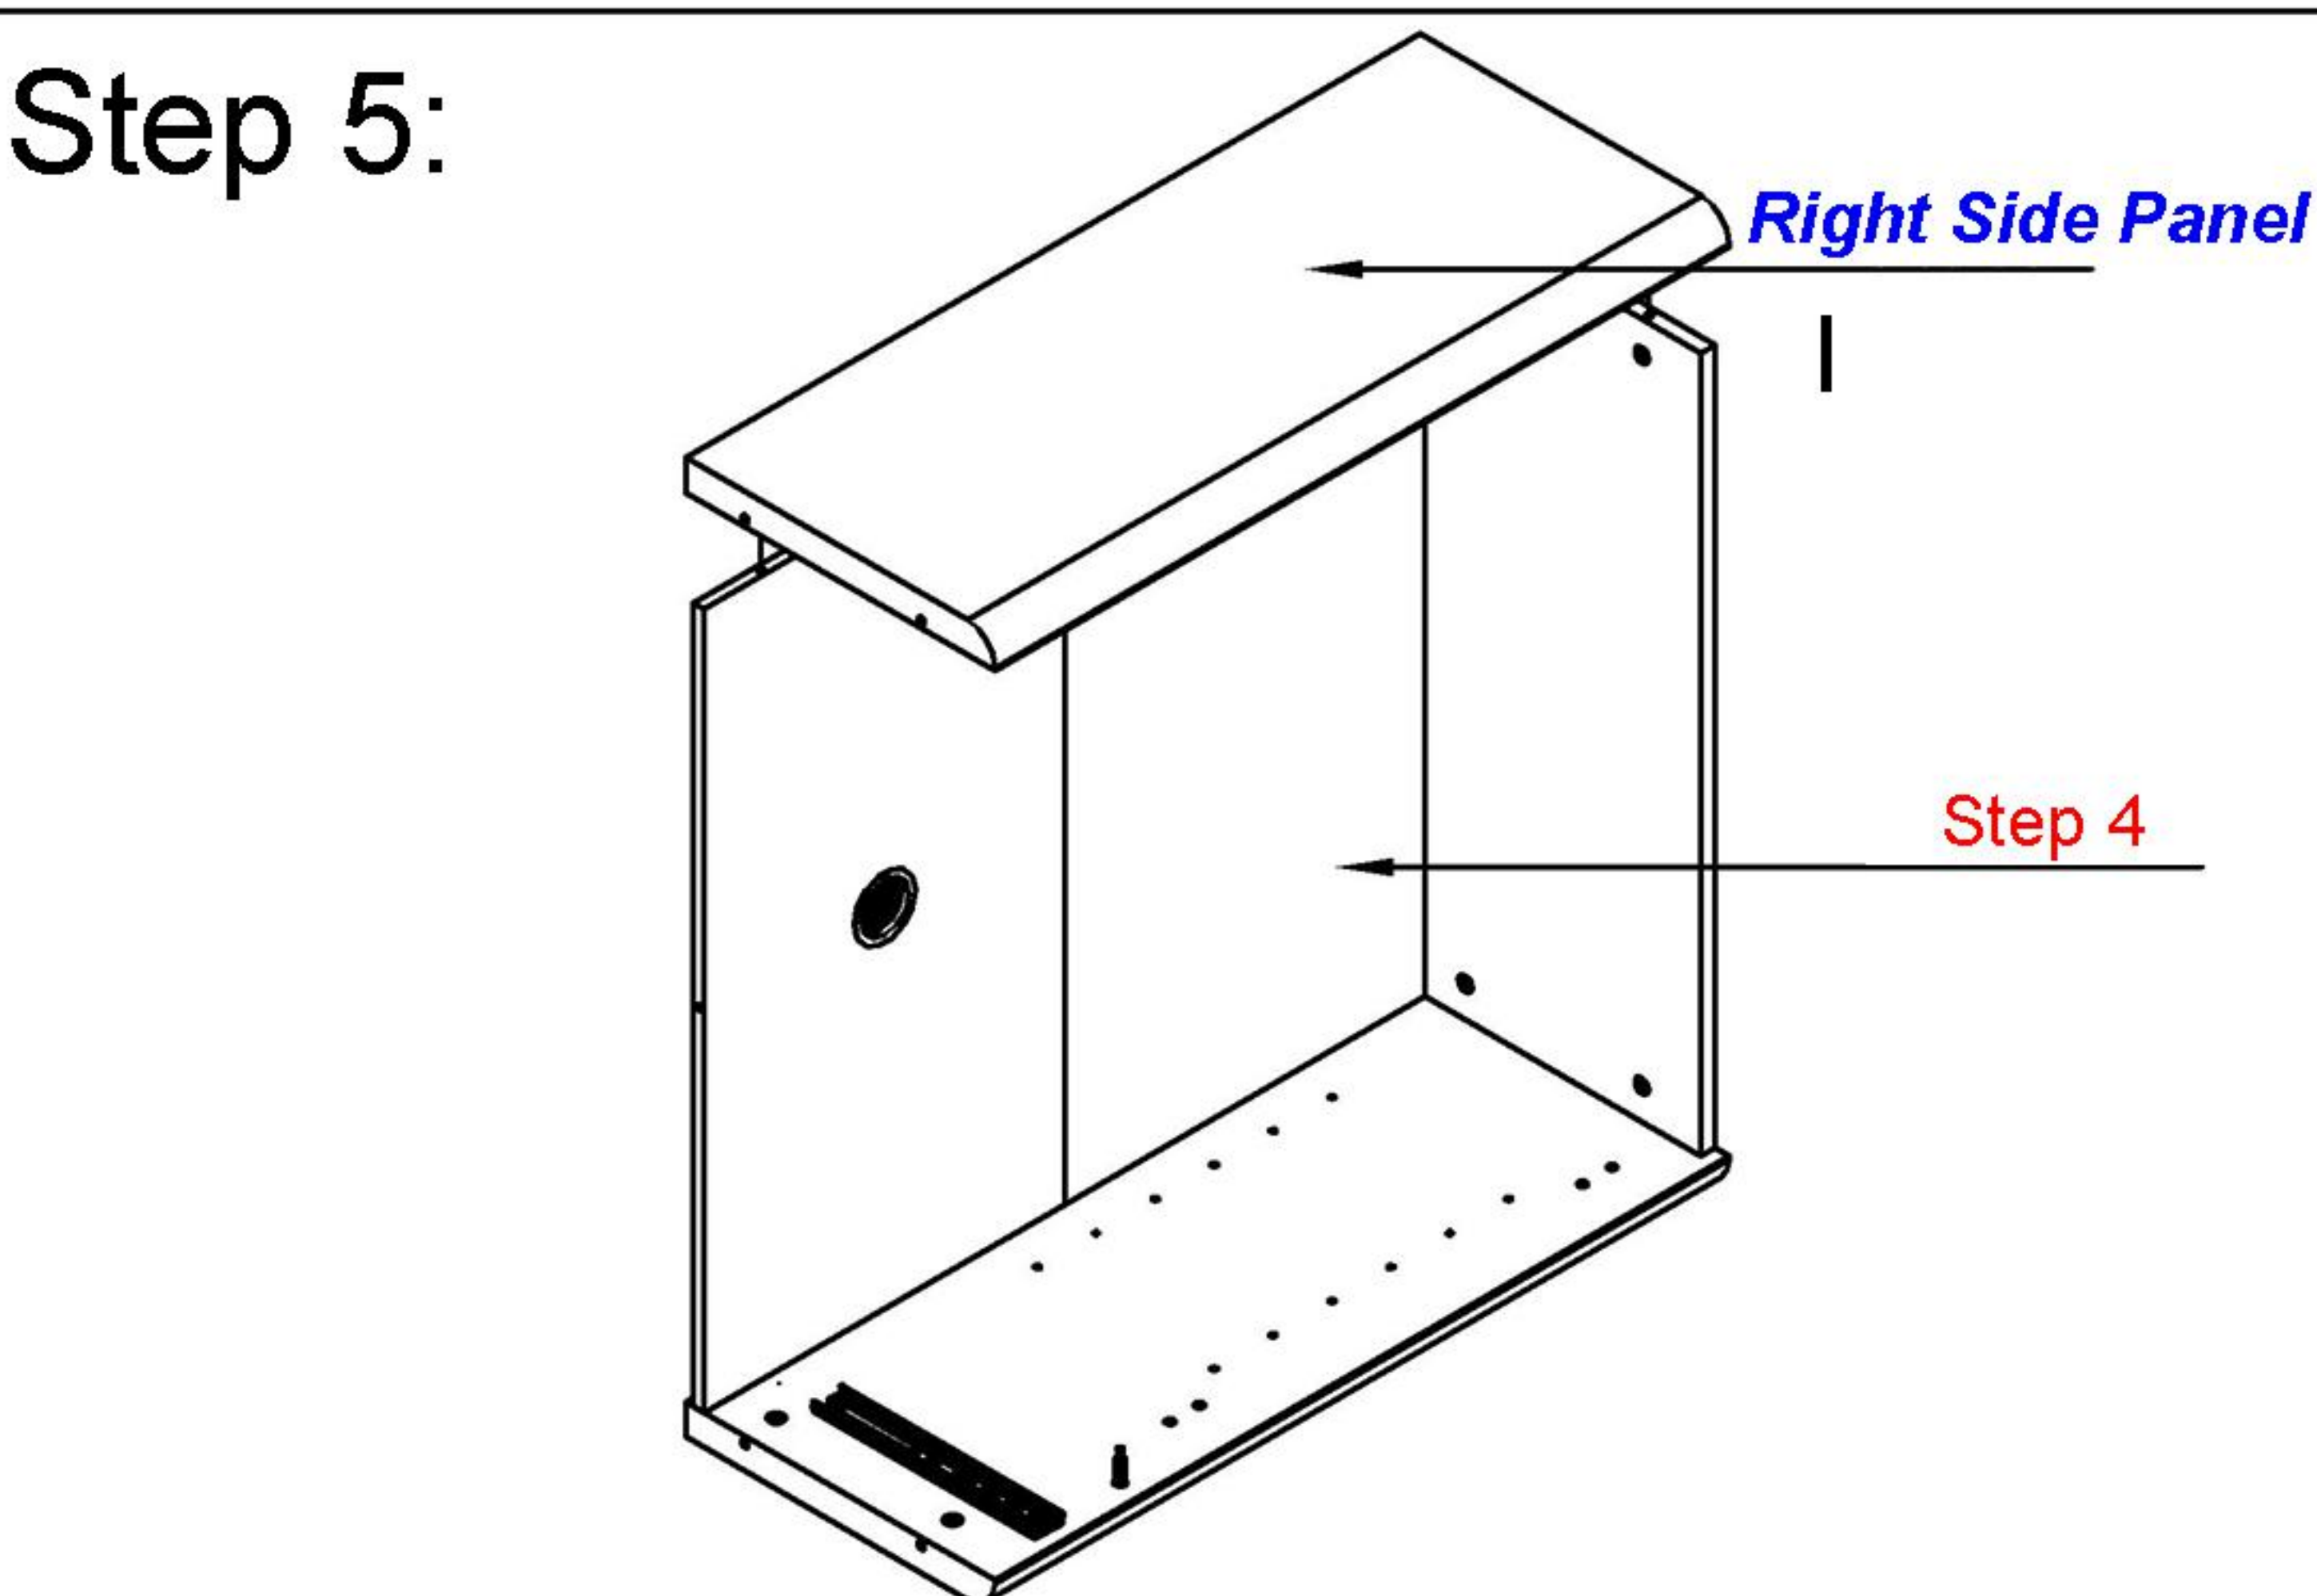


Lock by combining A with B, and C with D.

Step 6:

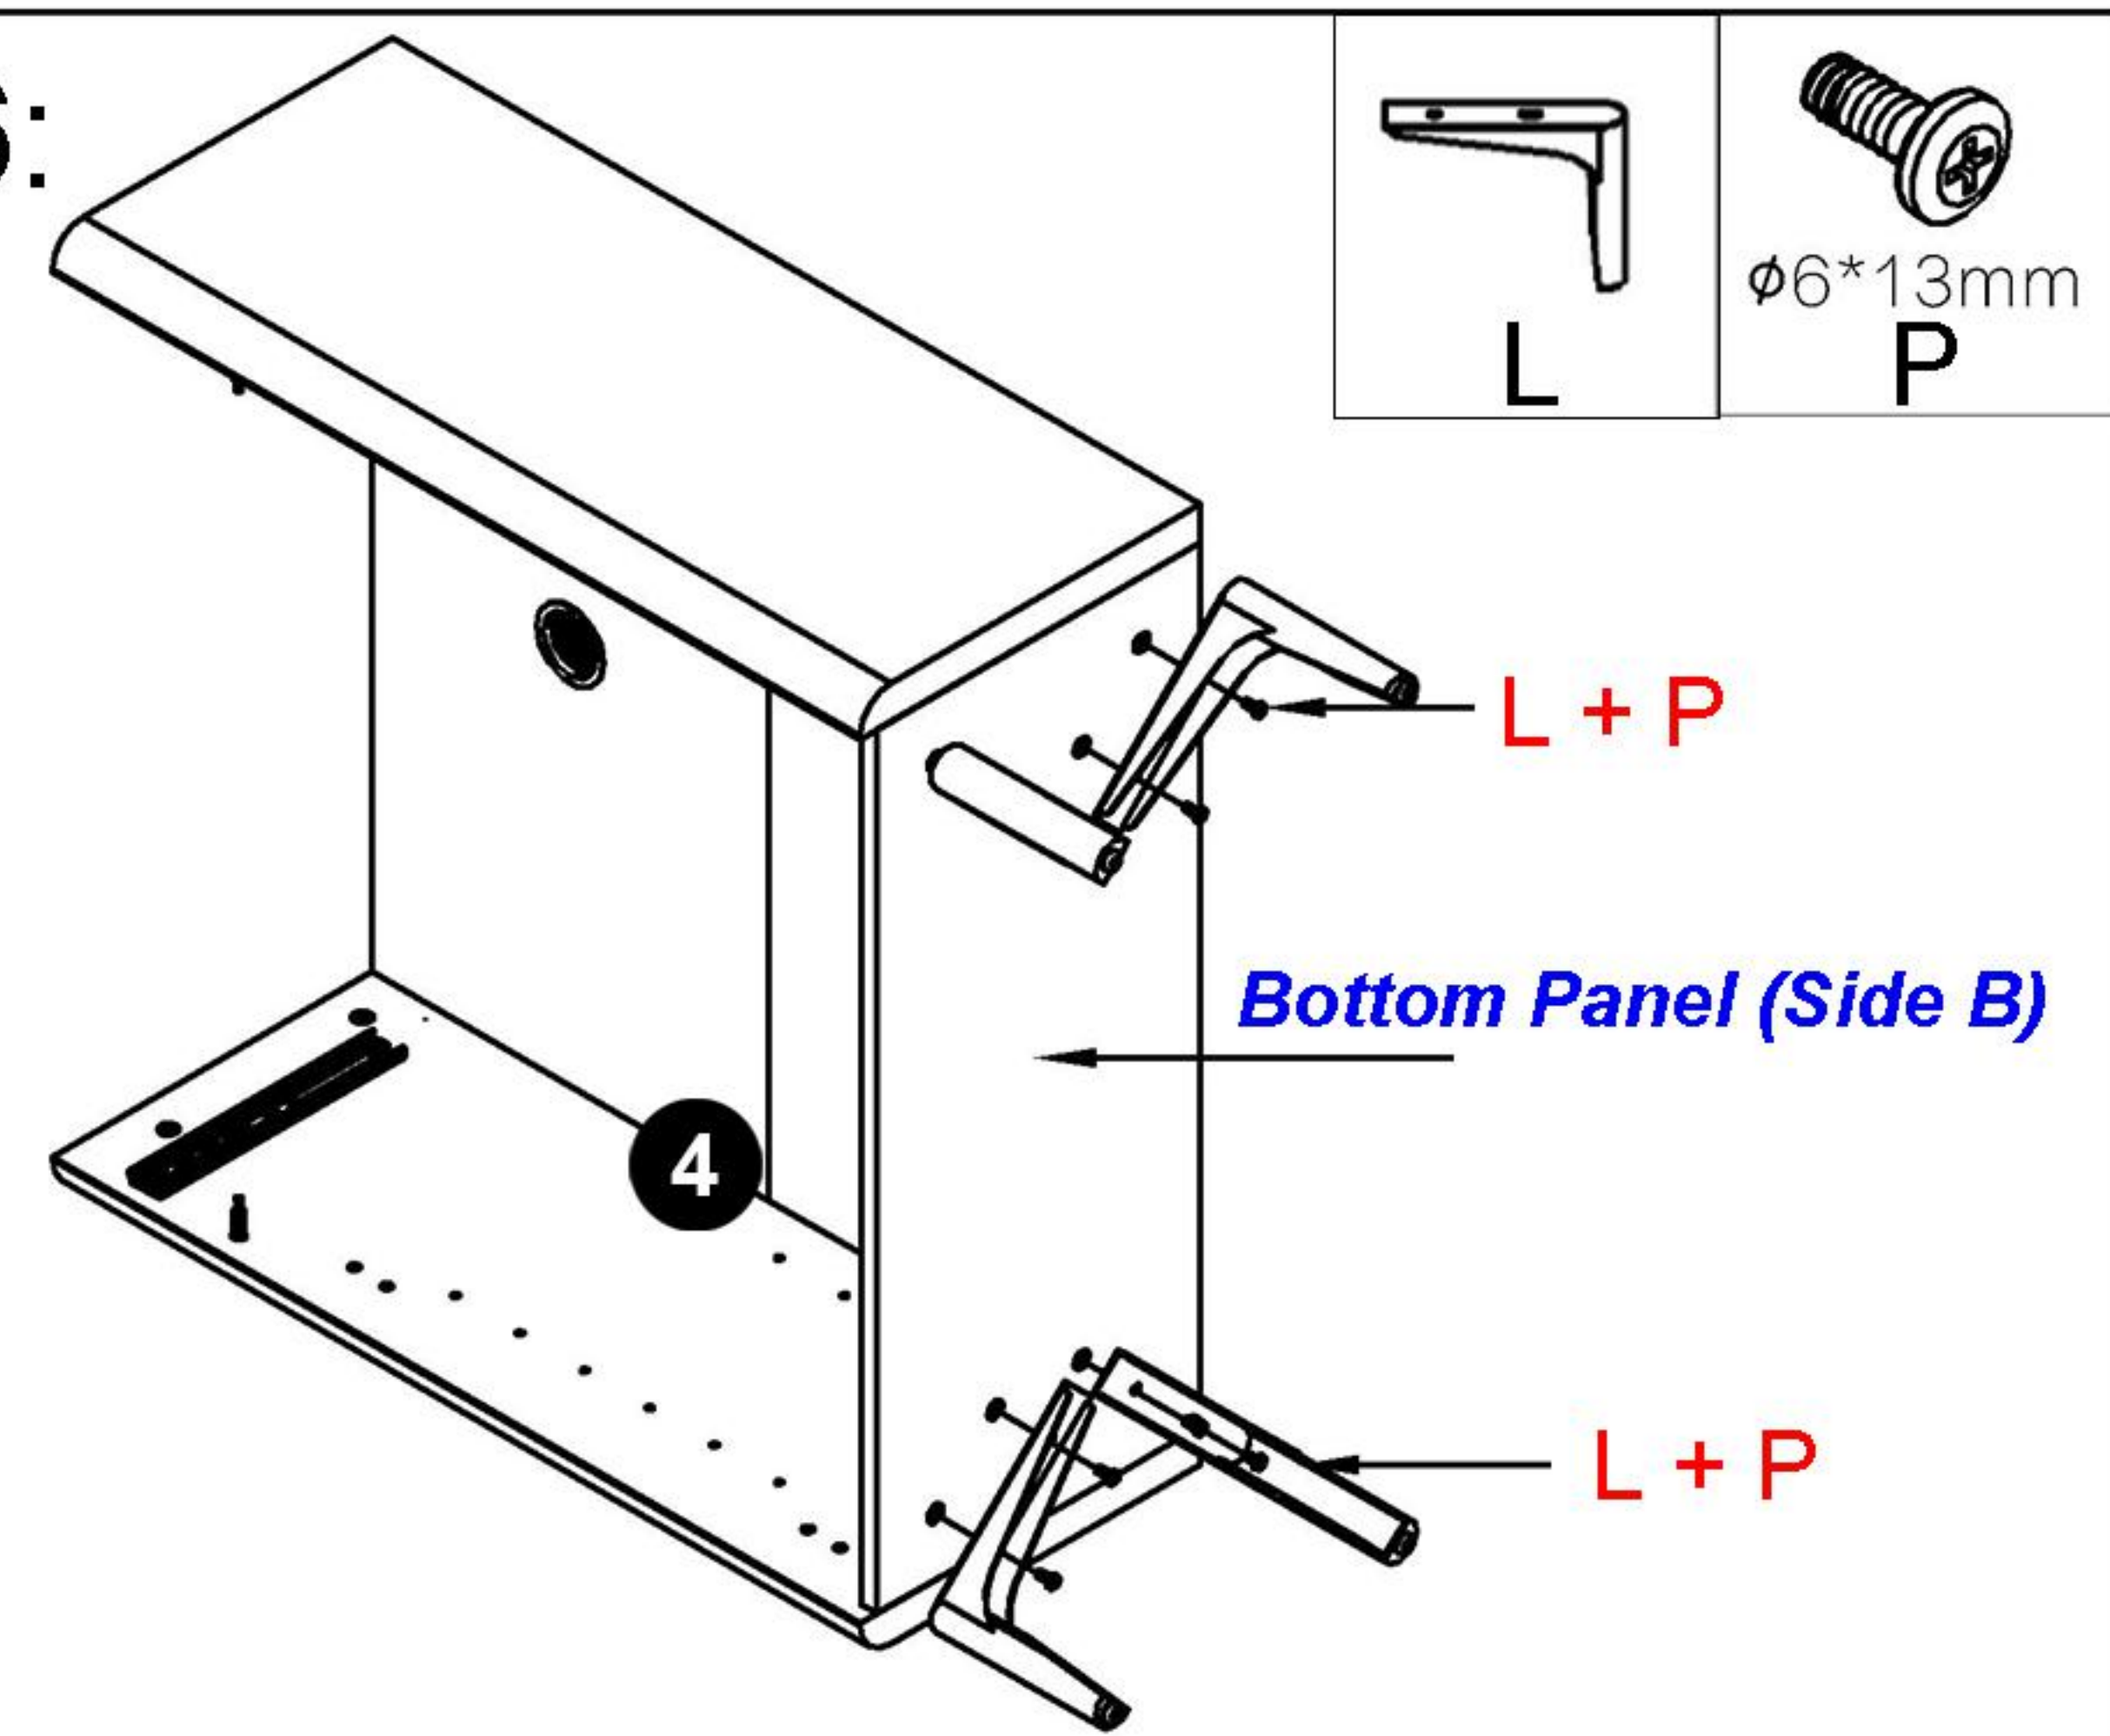


Step 7:

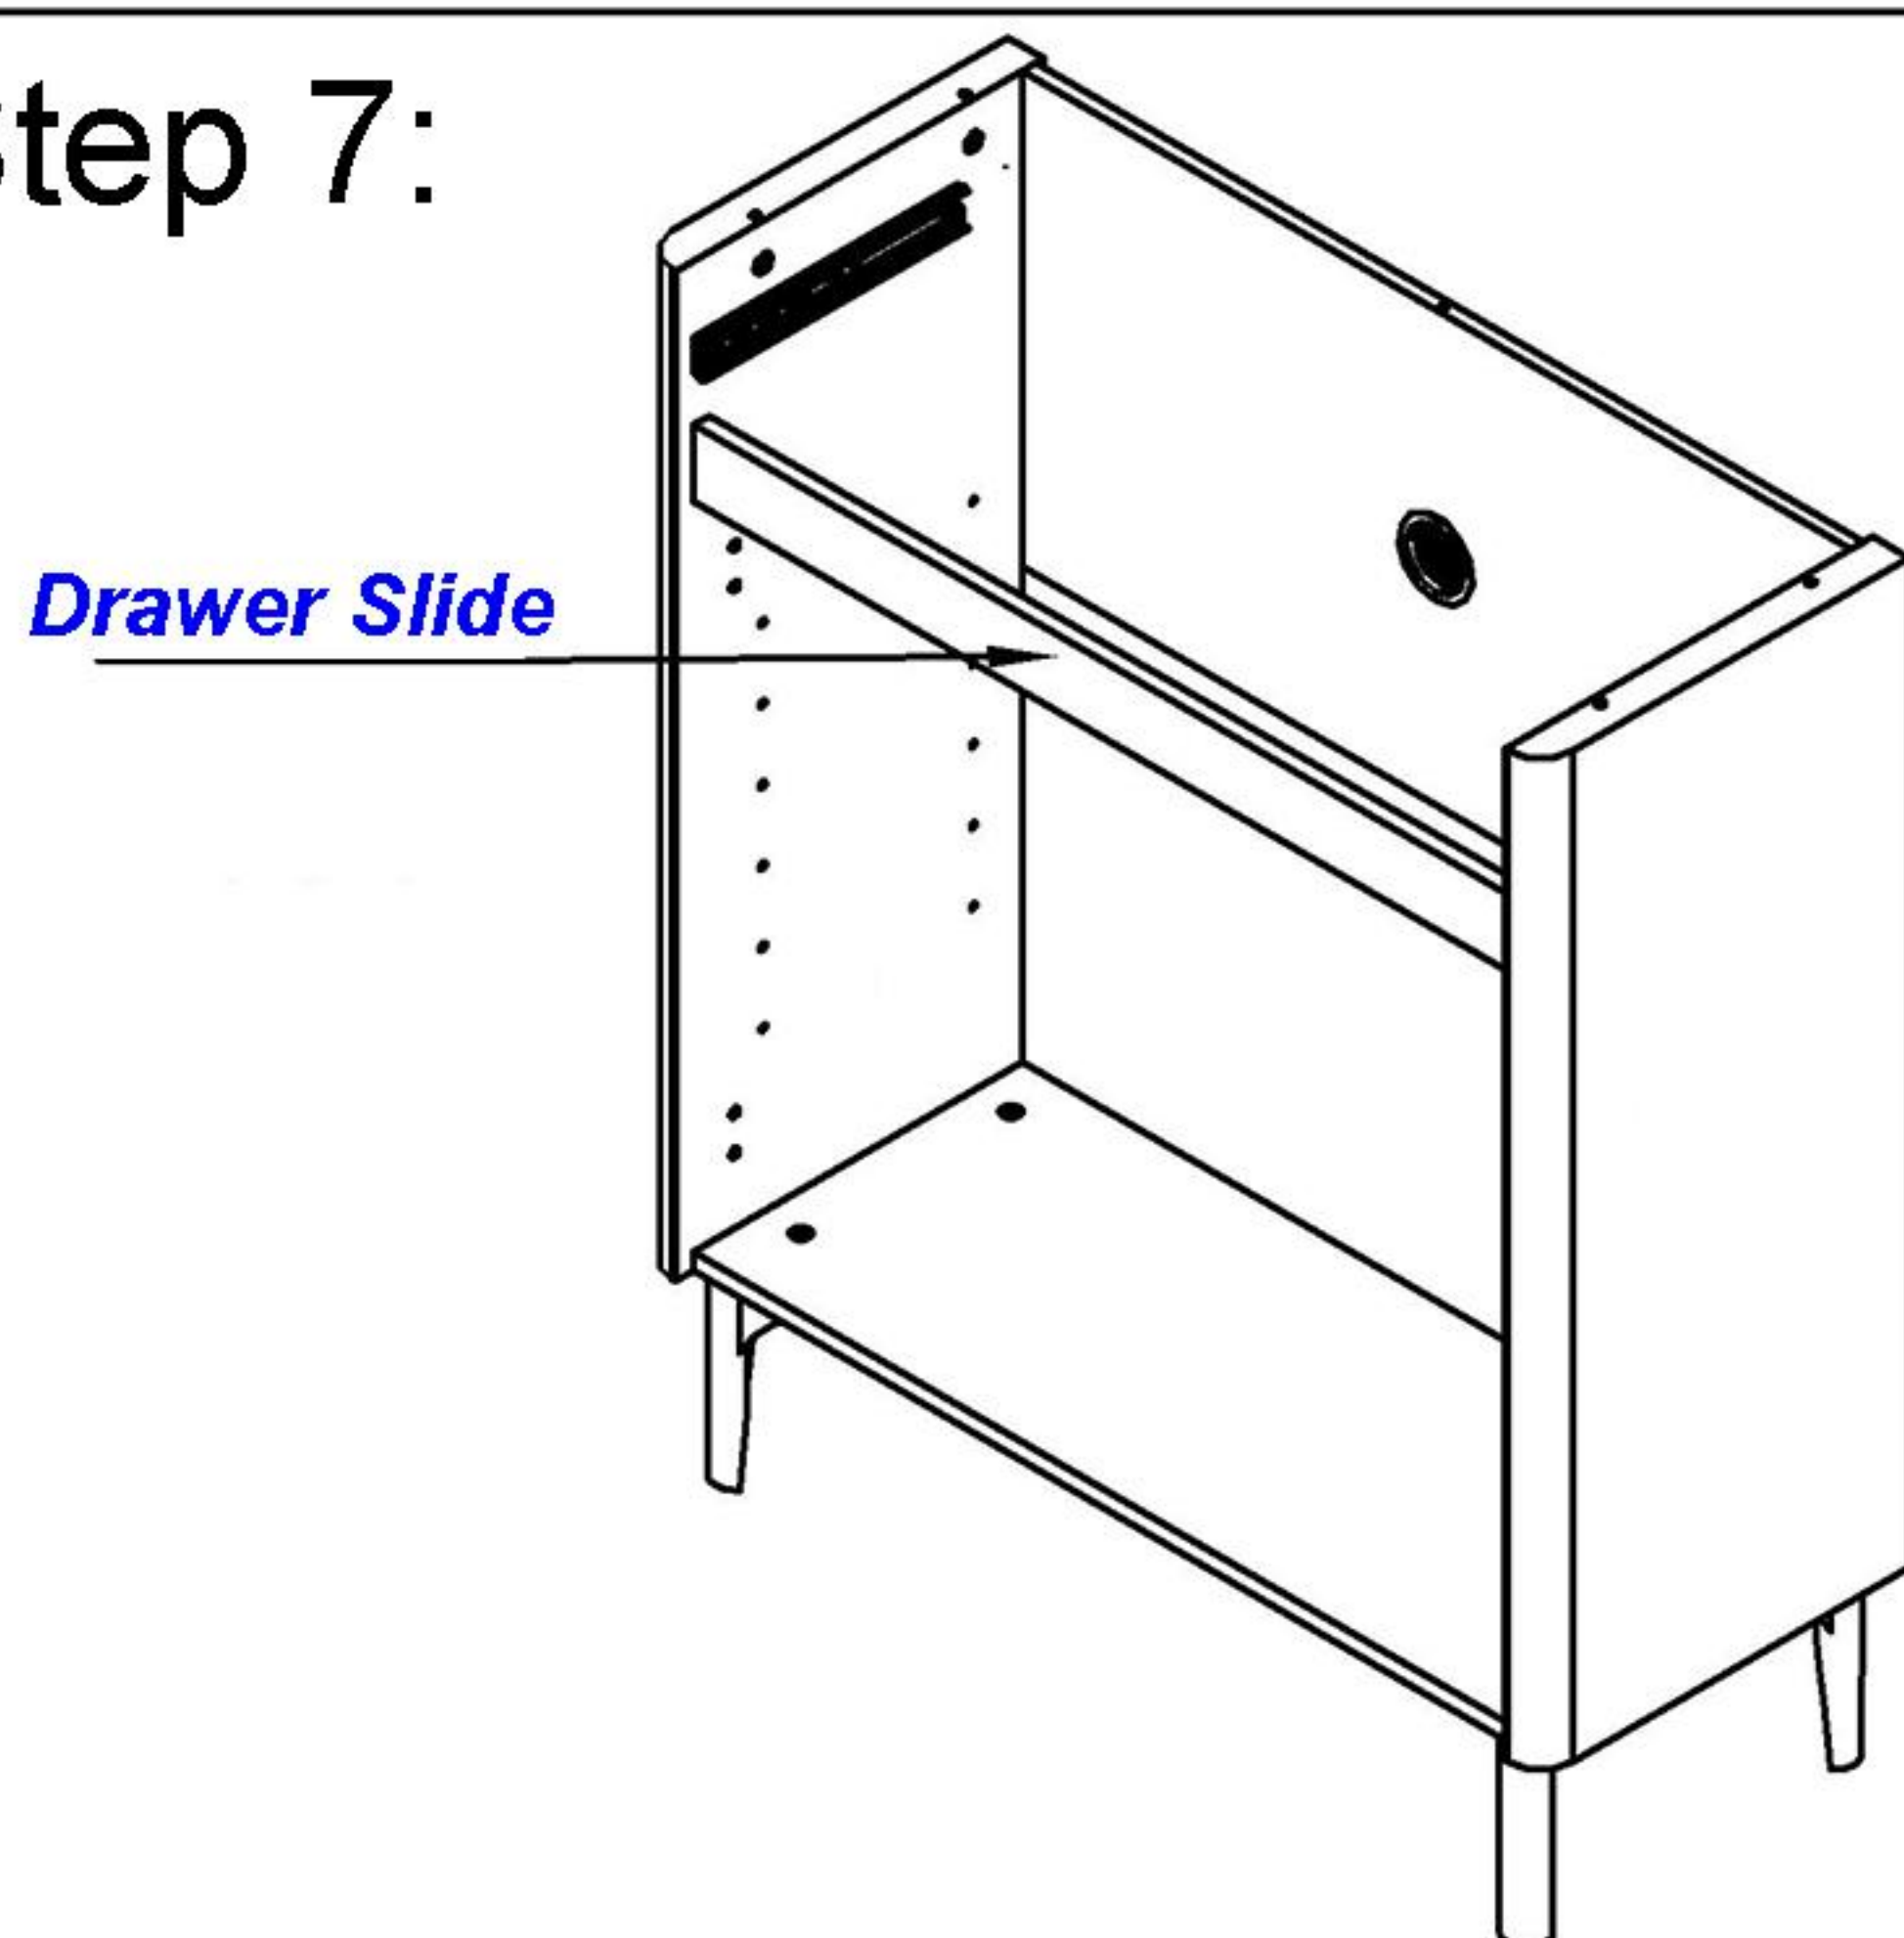


Lock by combining A with B, and C with D.

Step 8:

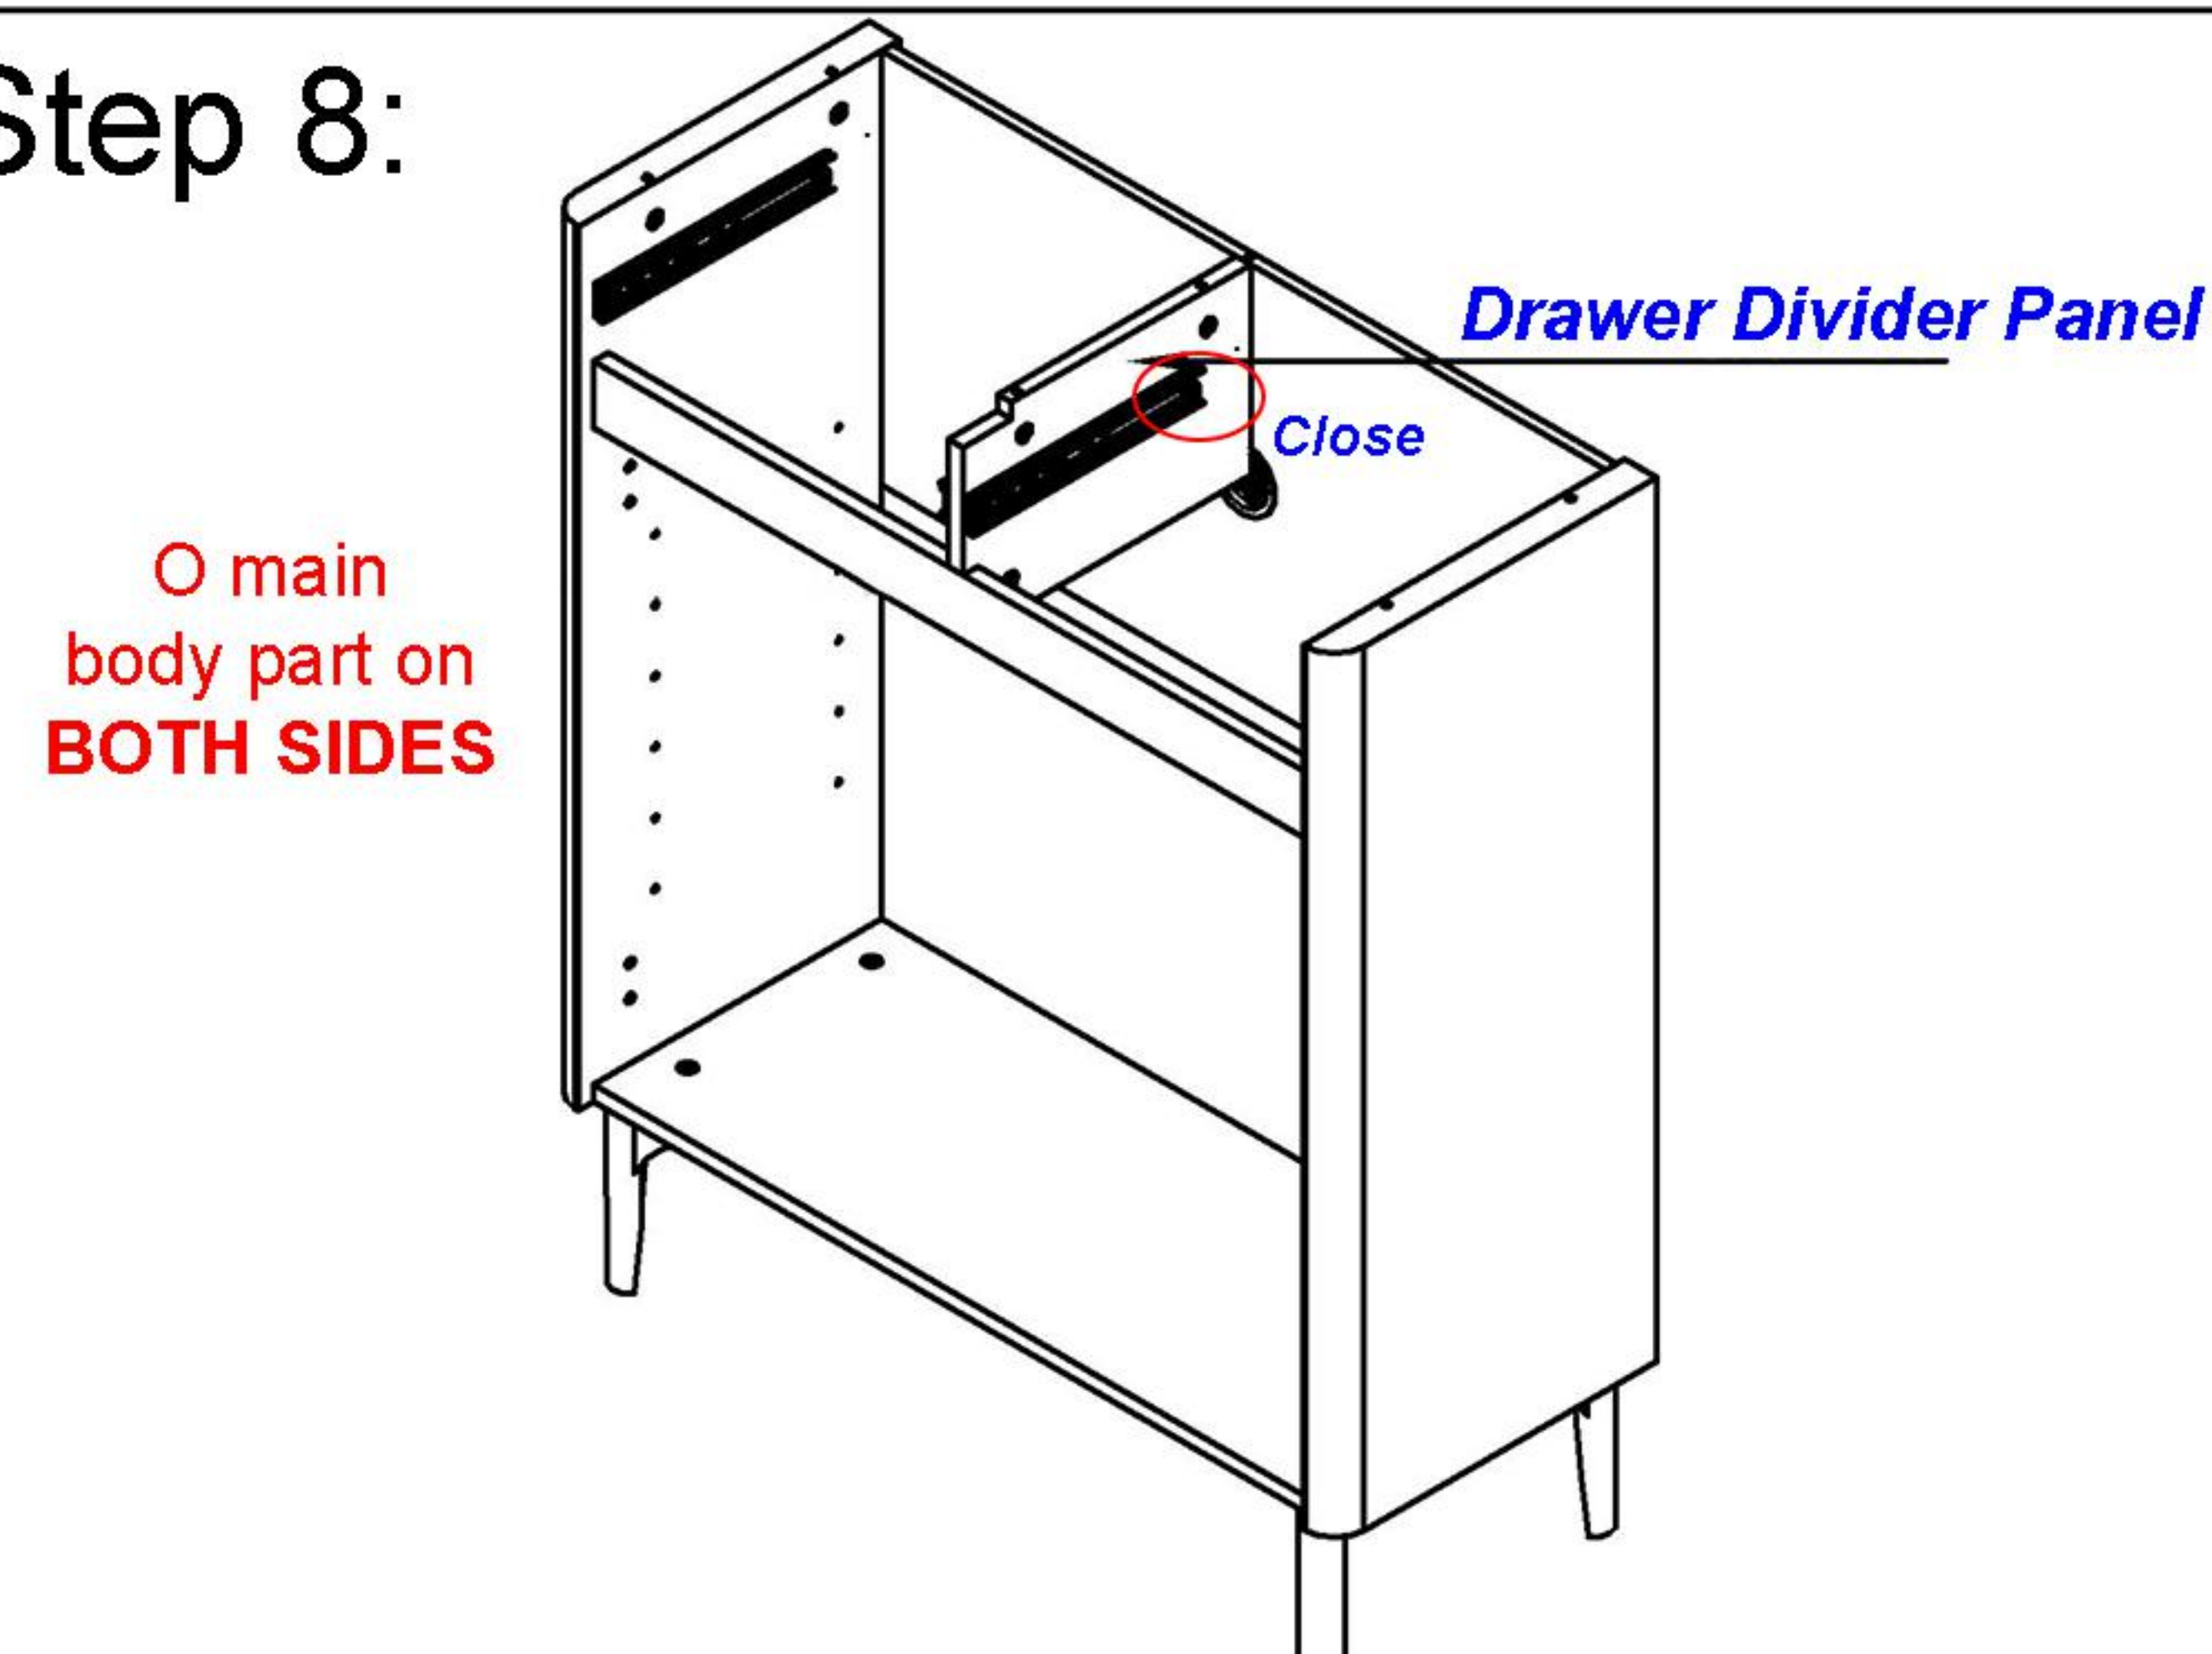


Lock by combining A with B, and C with D.

Step 9:

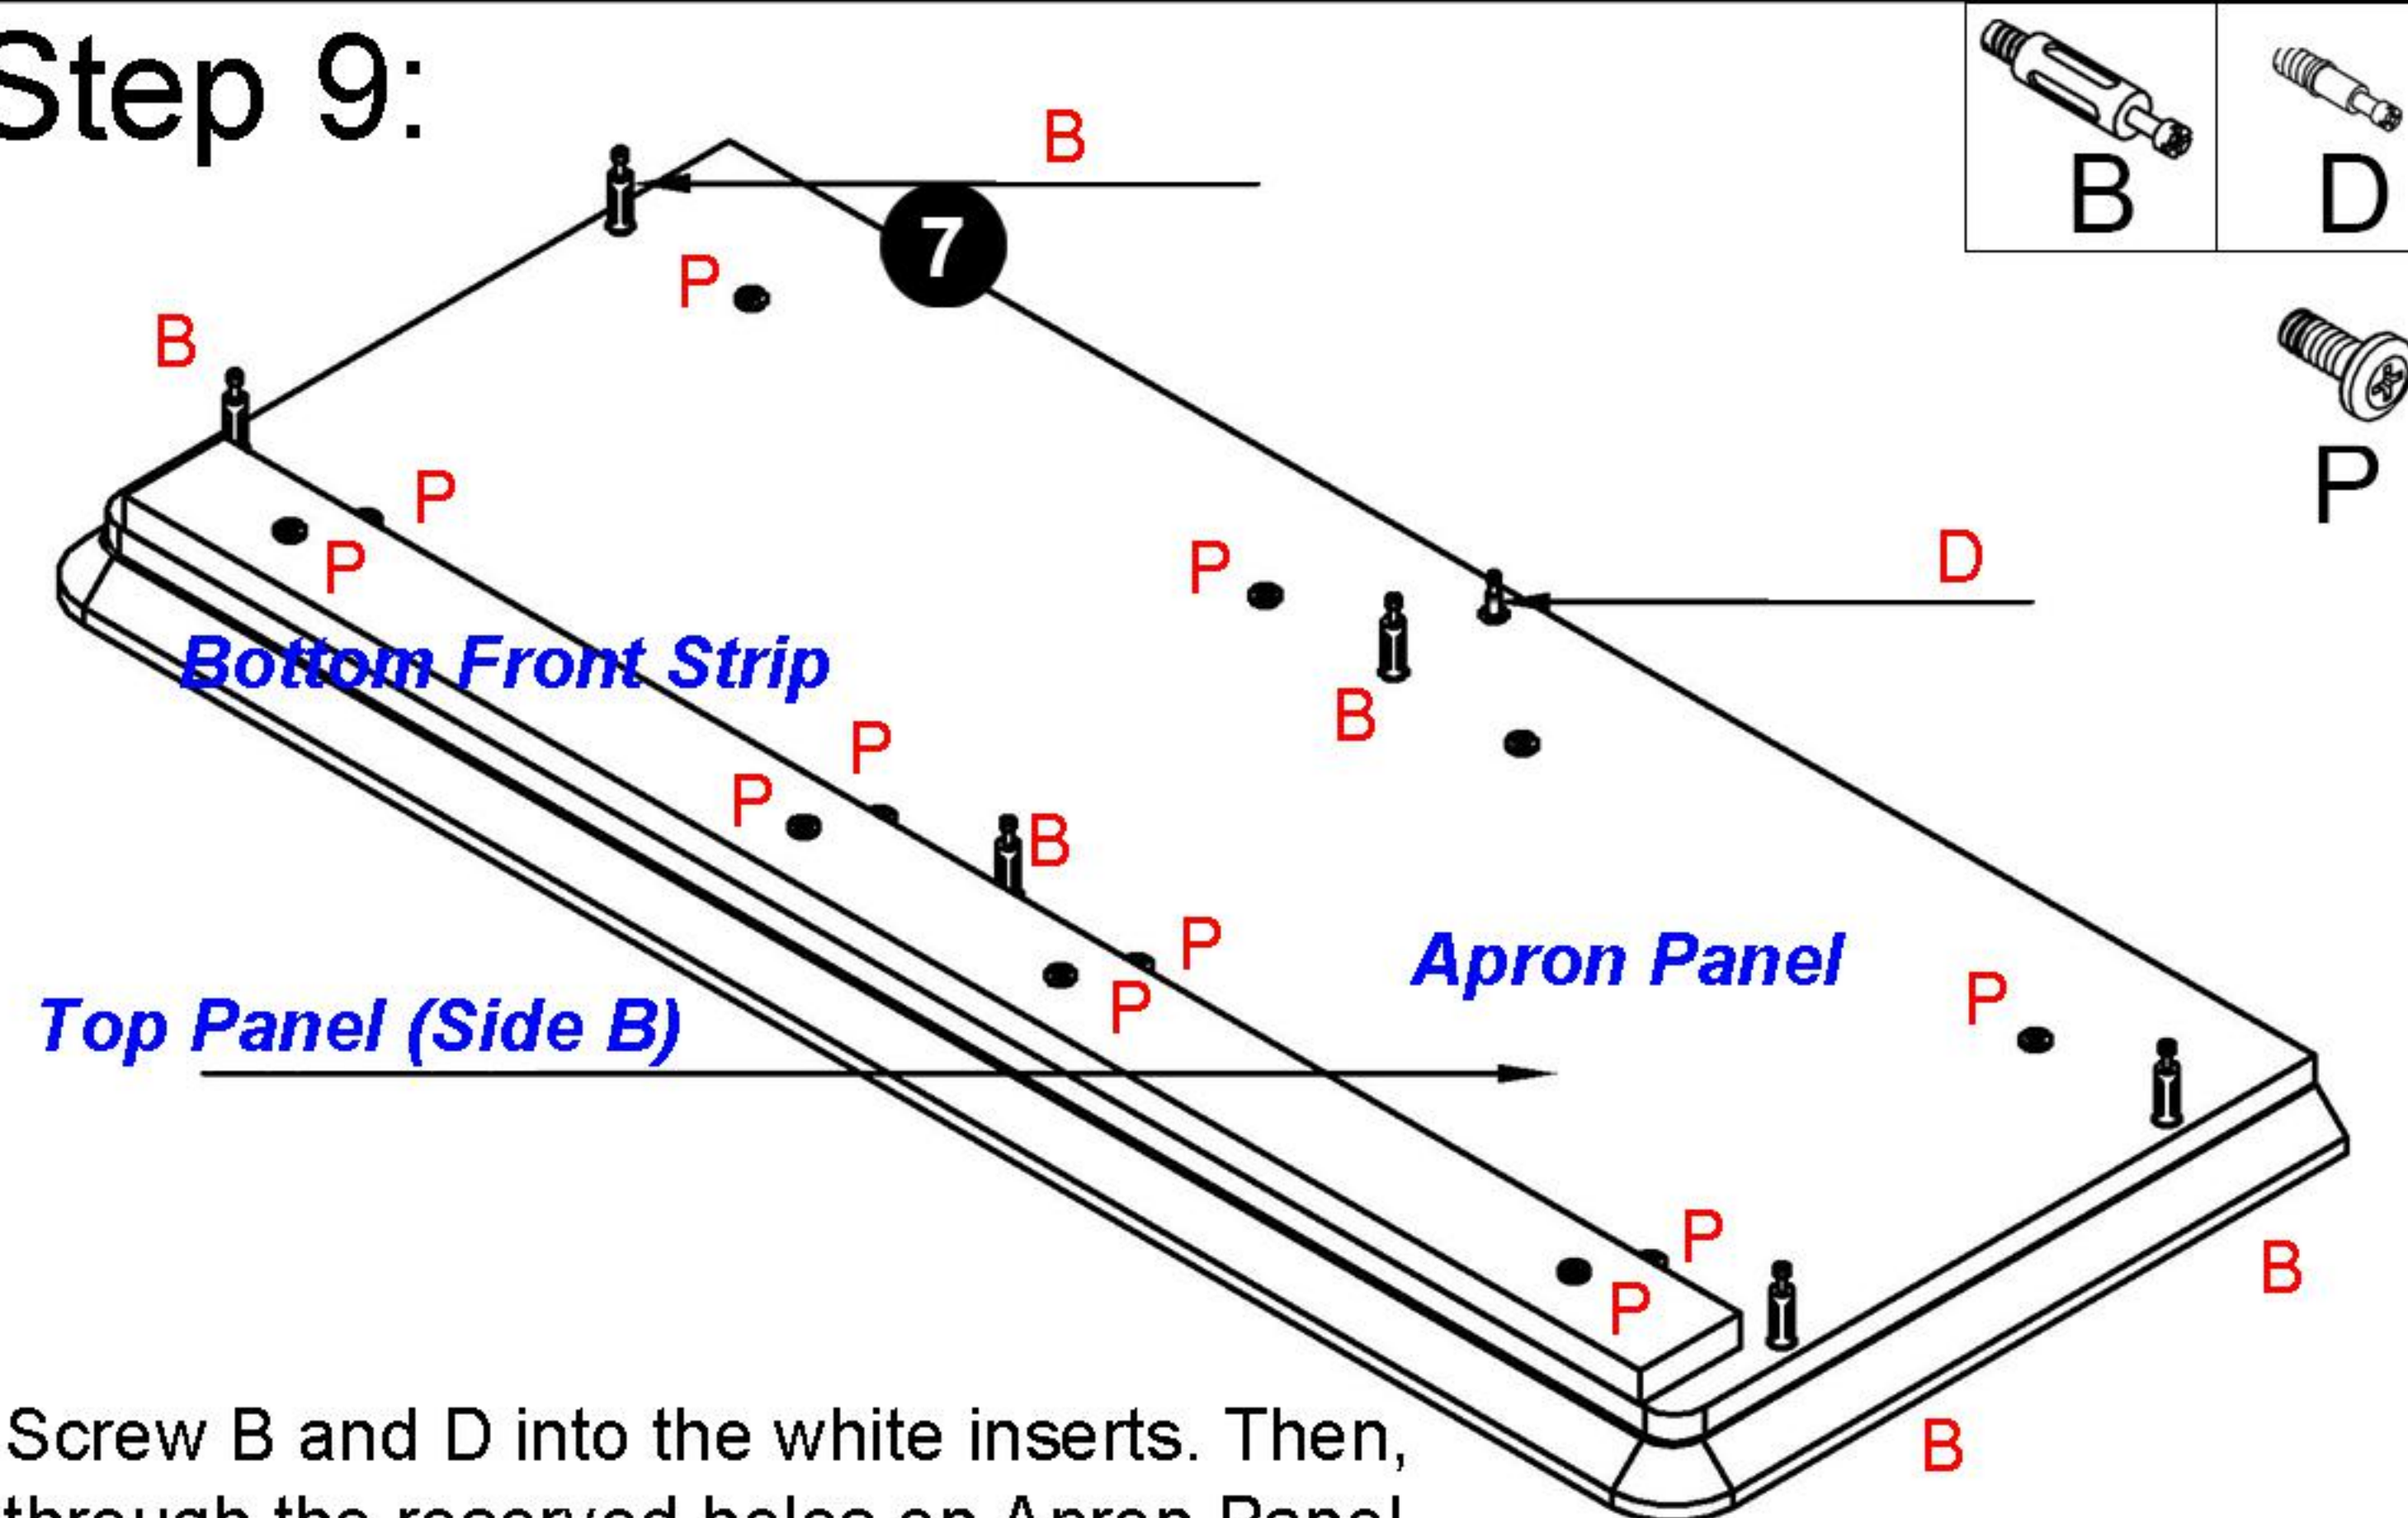


Screw B and D into the white inserts. Then, through the reserved holes on Apron Panel and Bottom Front Strip, tighten P into the corresponding white inserts on Top Panel.

Step 10:

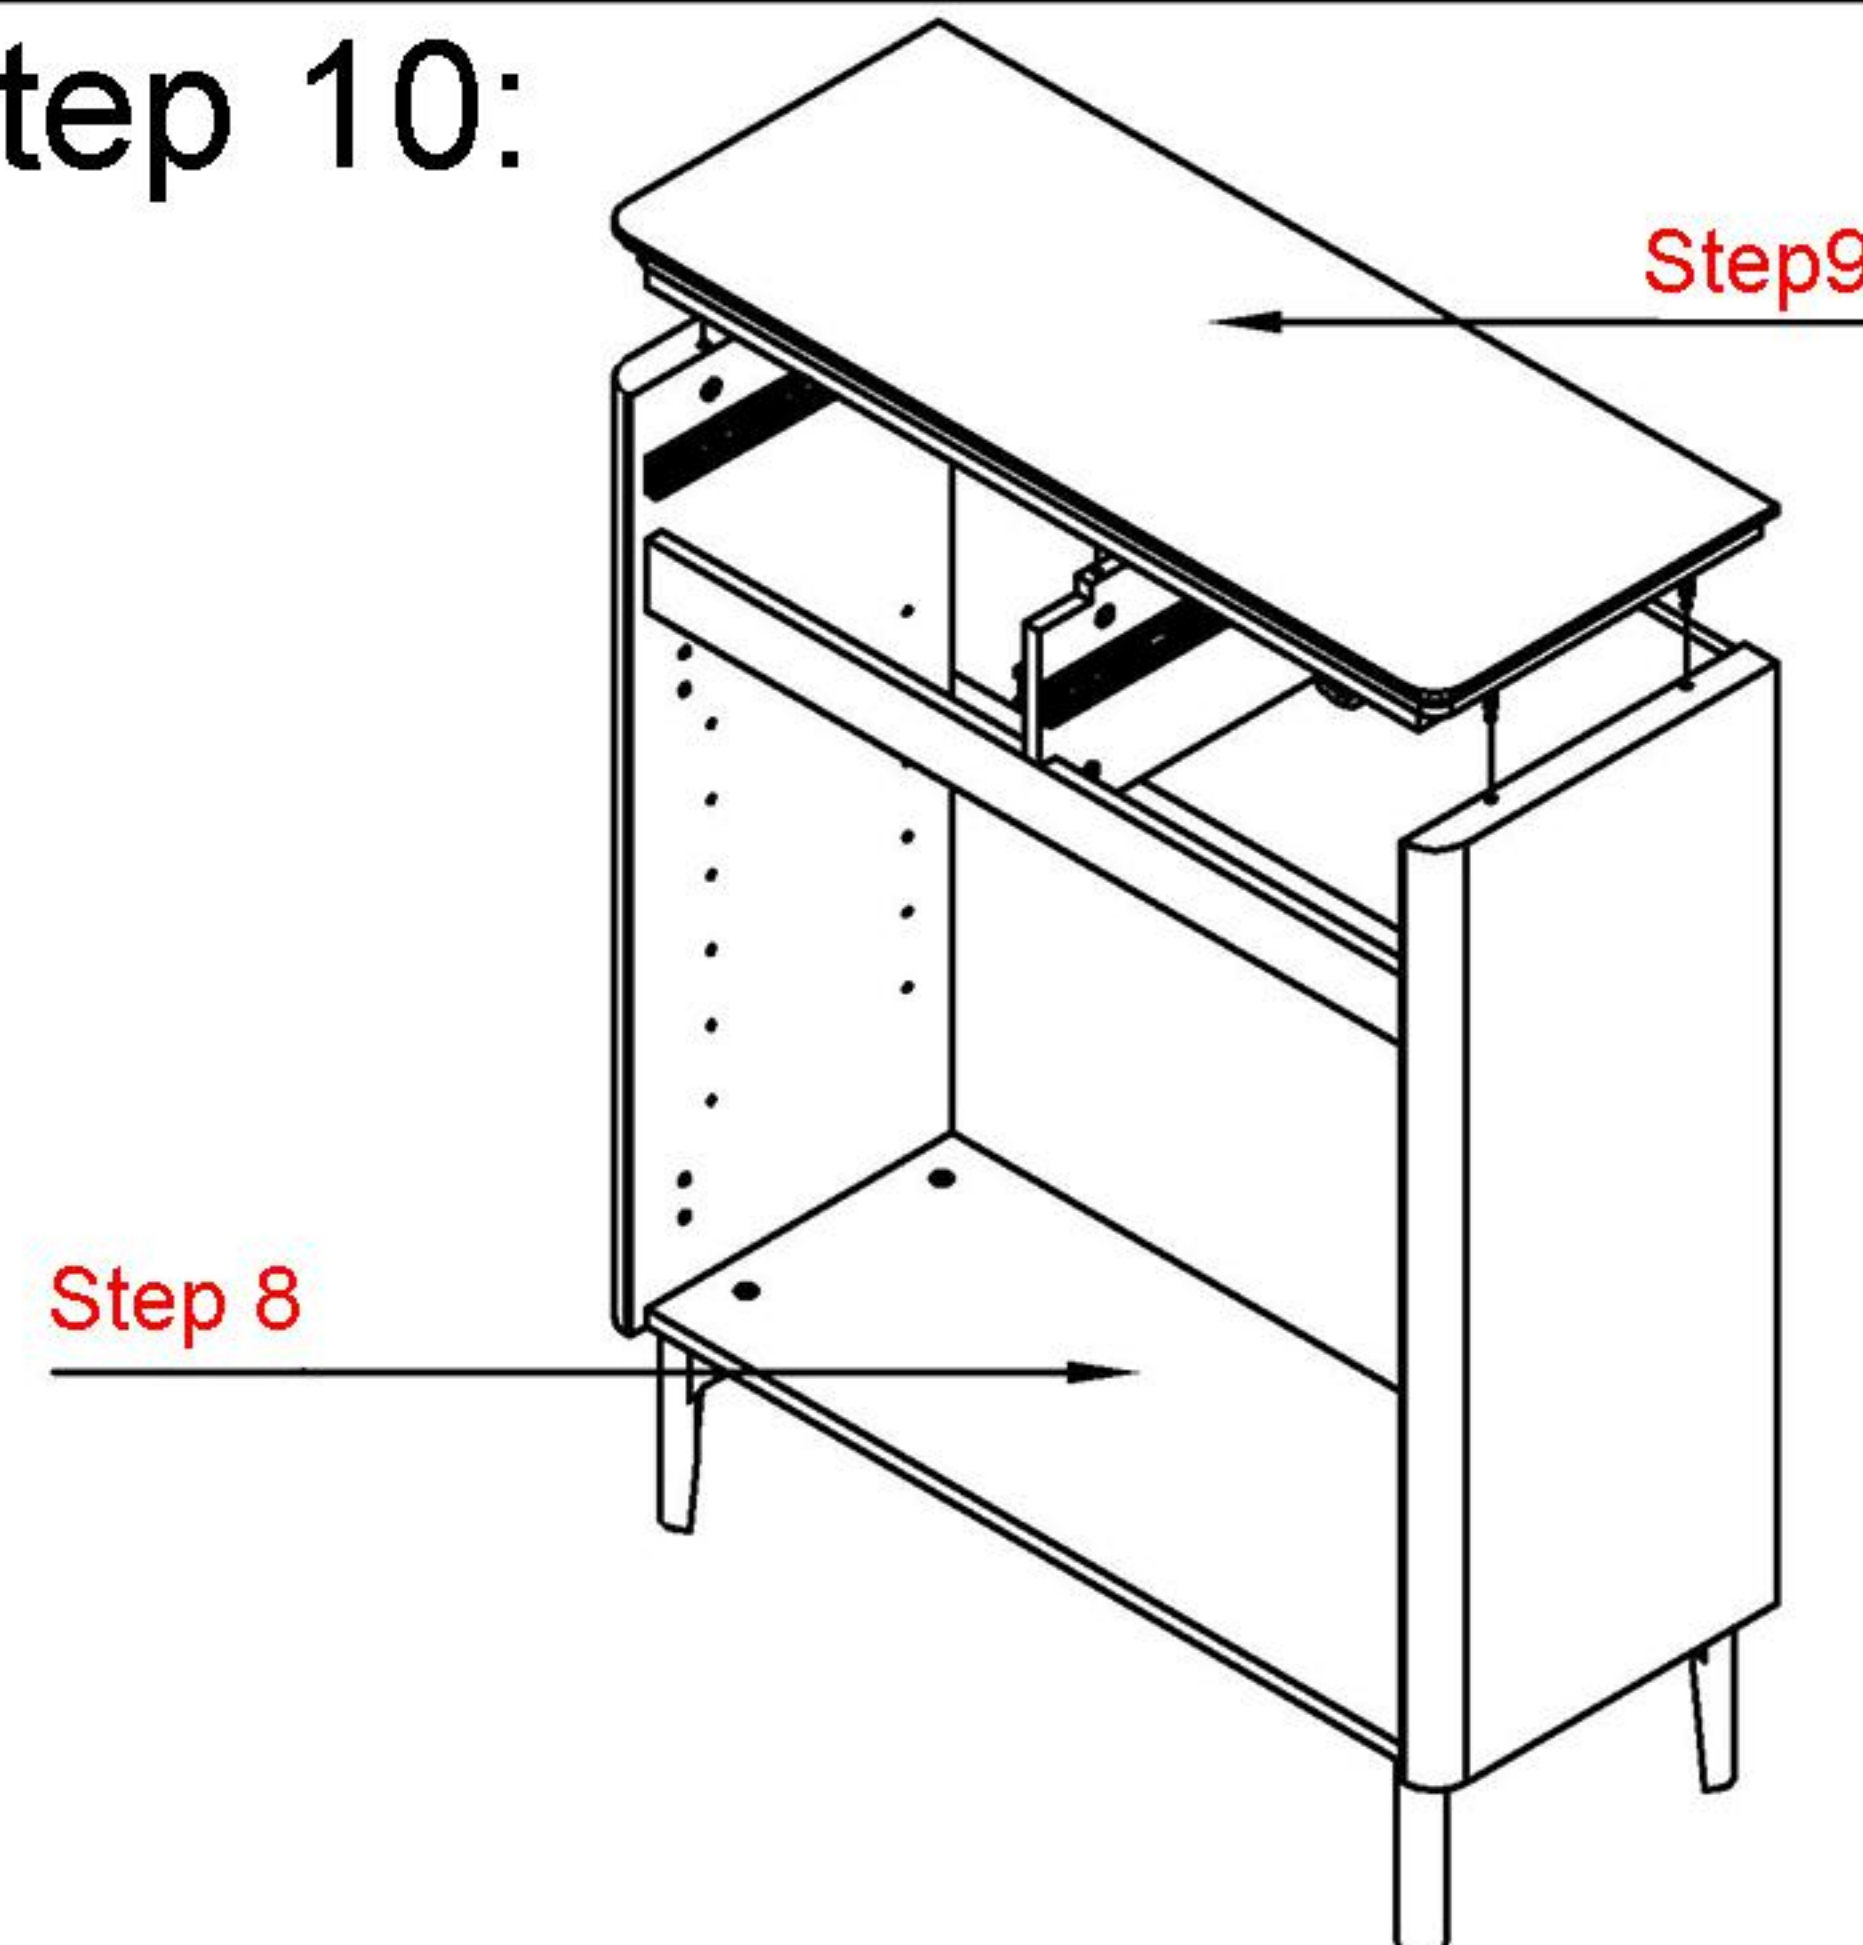


Lock by combining A with B, and C with D.

Step 11:

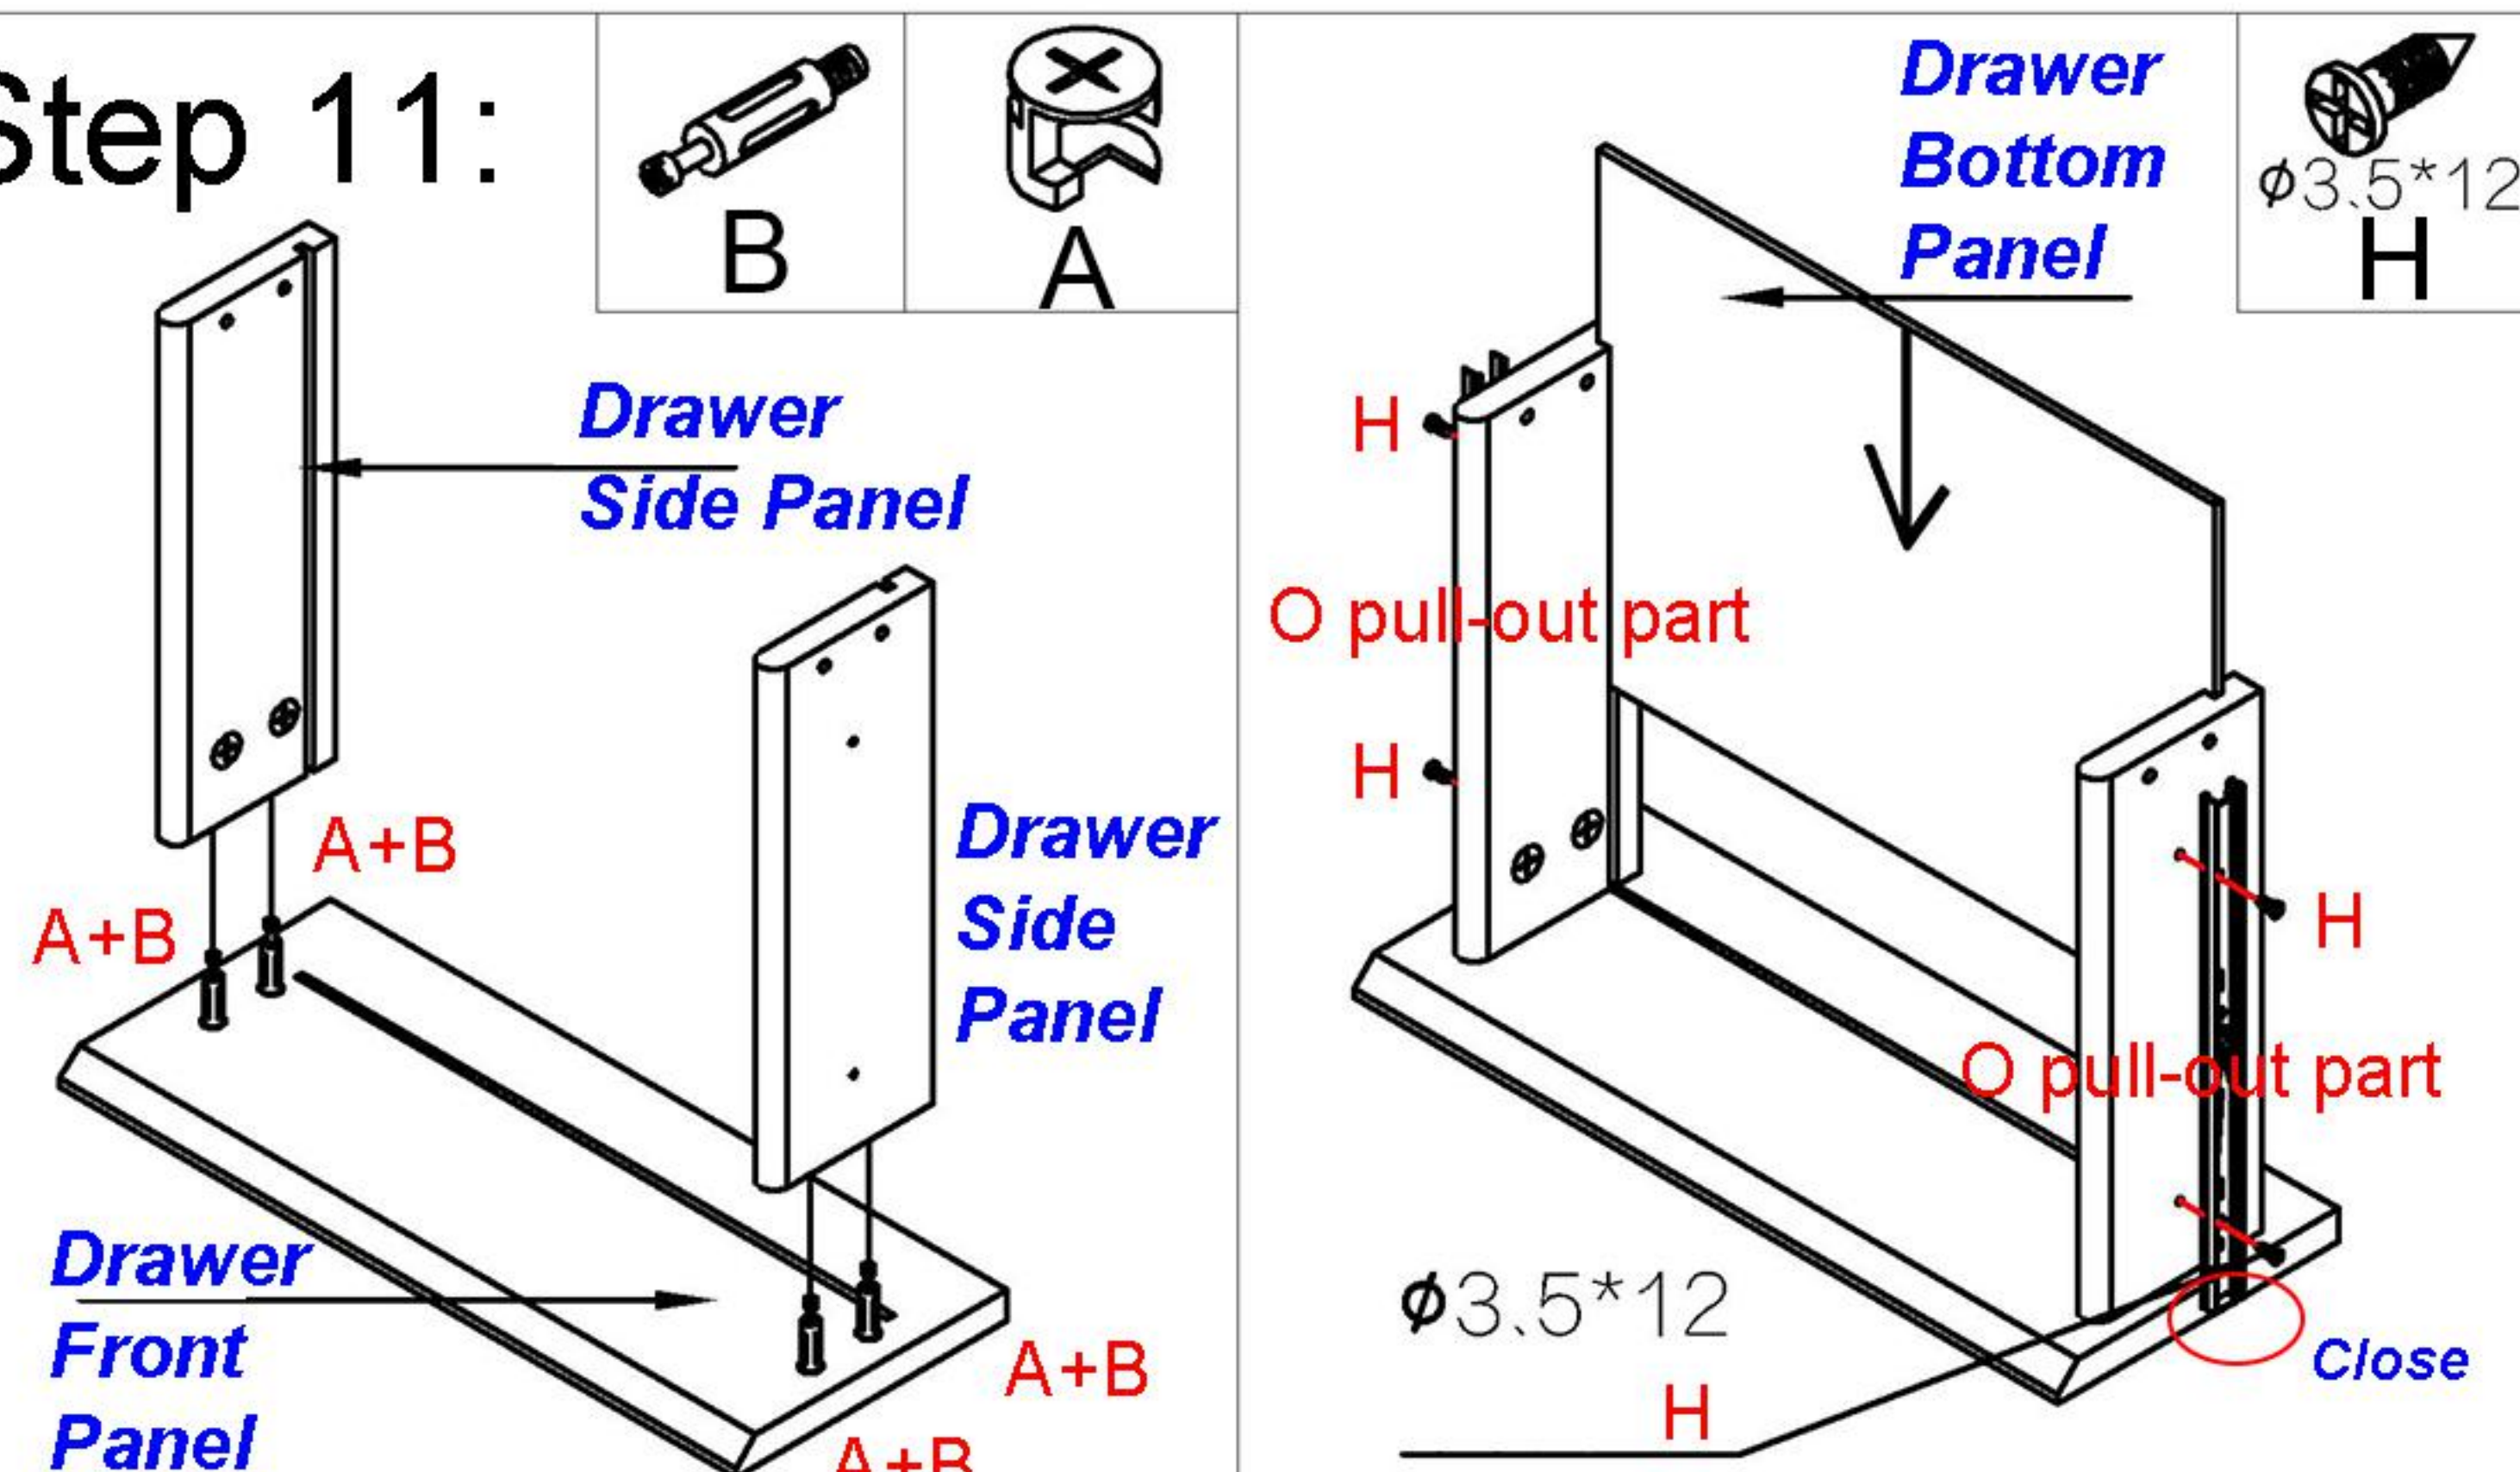


Install the O pull-out part on Drawer Side Panels. Make sure the opening faces upward, and the blocked end rests against Drawer Front Panel. Pay attention to the orientation.

Step 12:

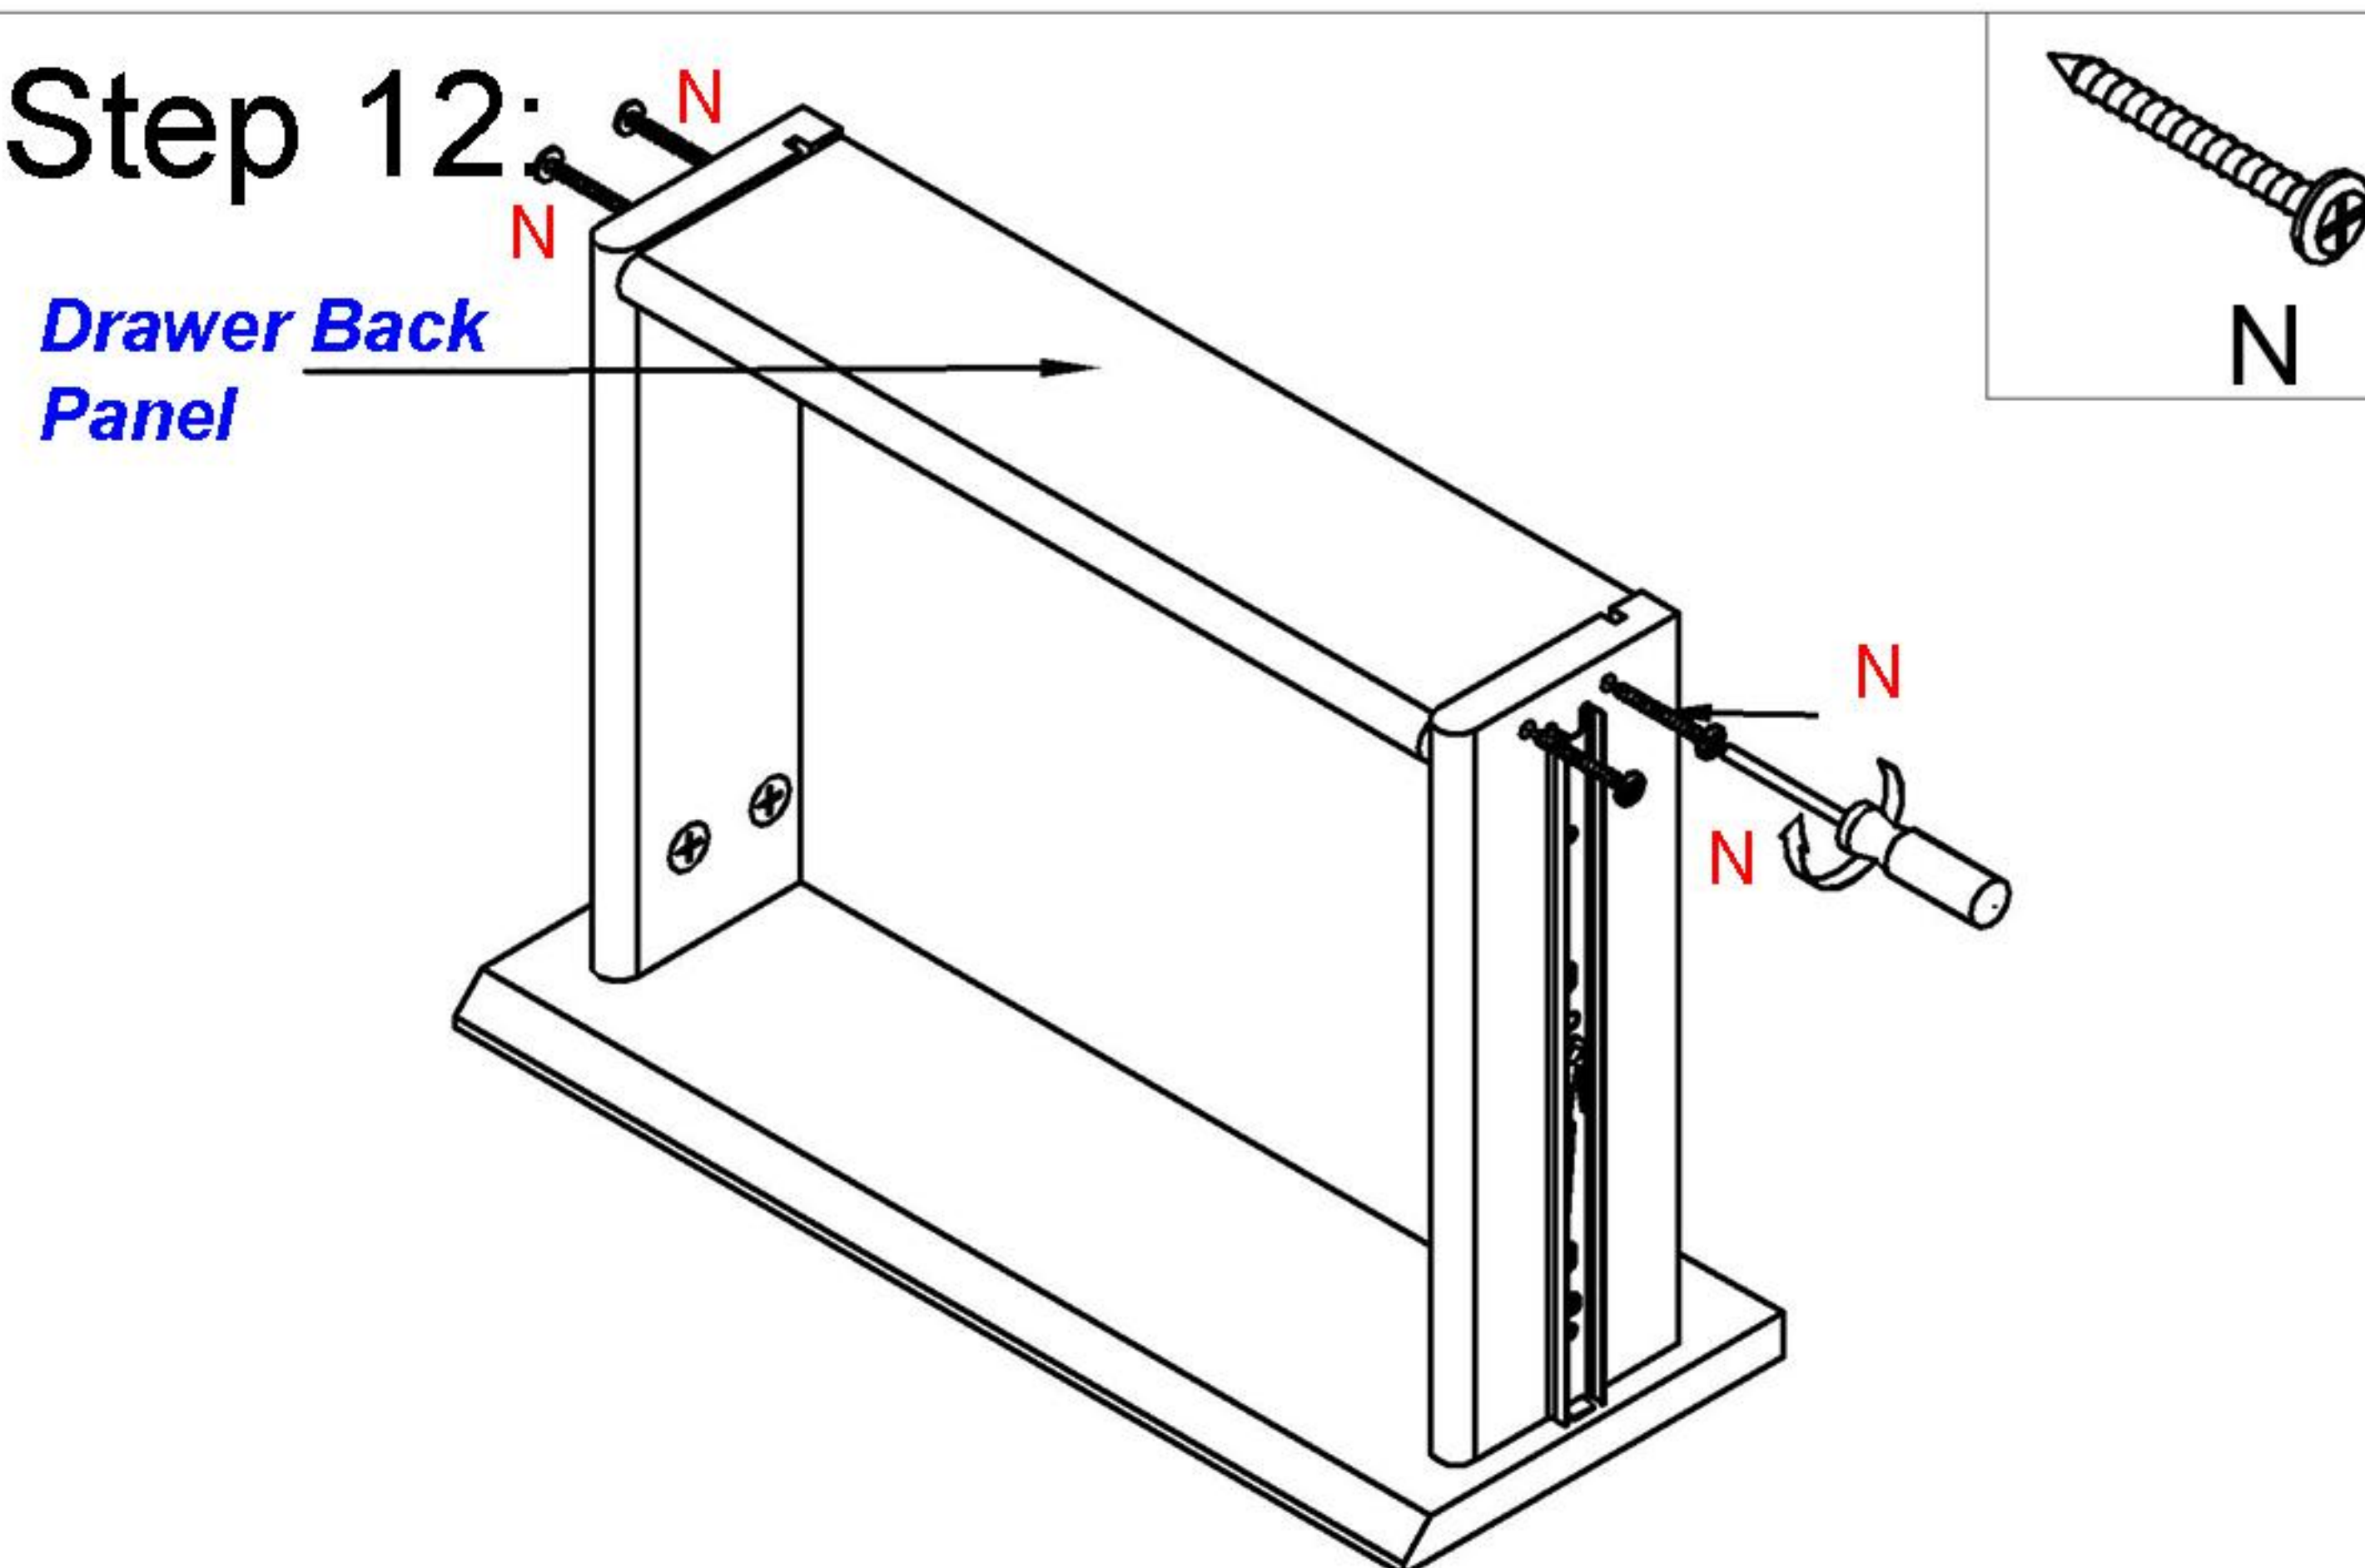


Step 13:

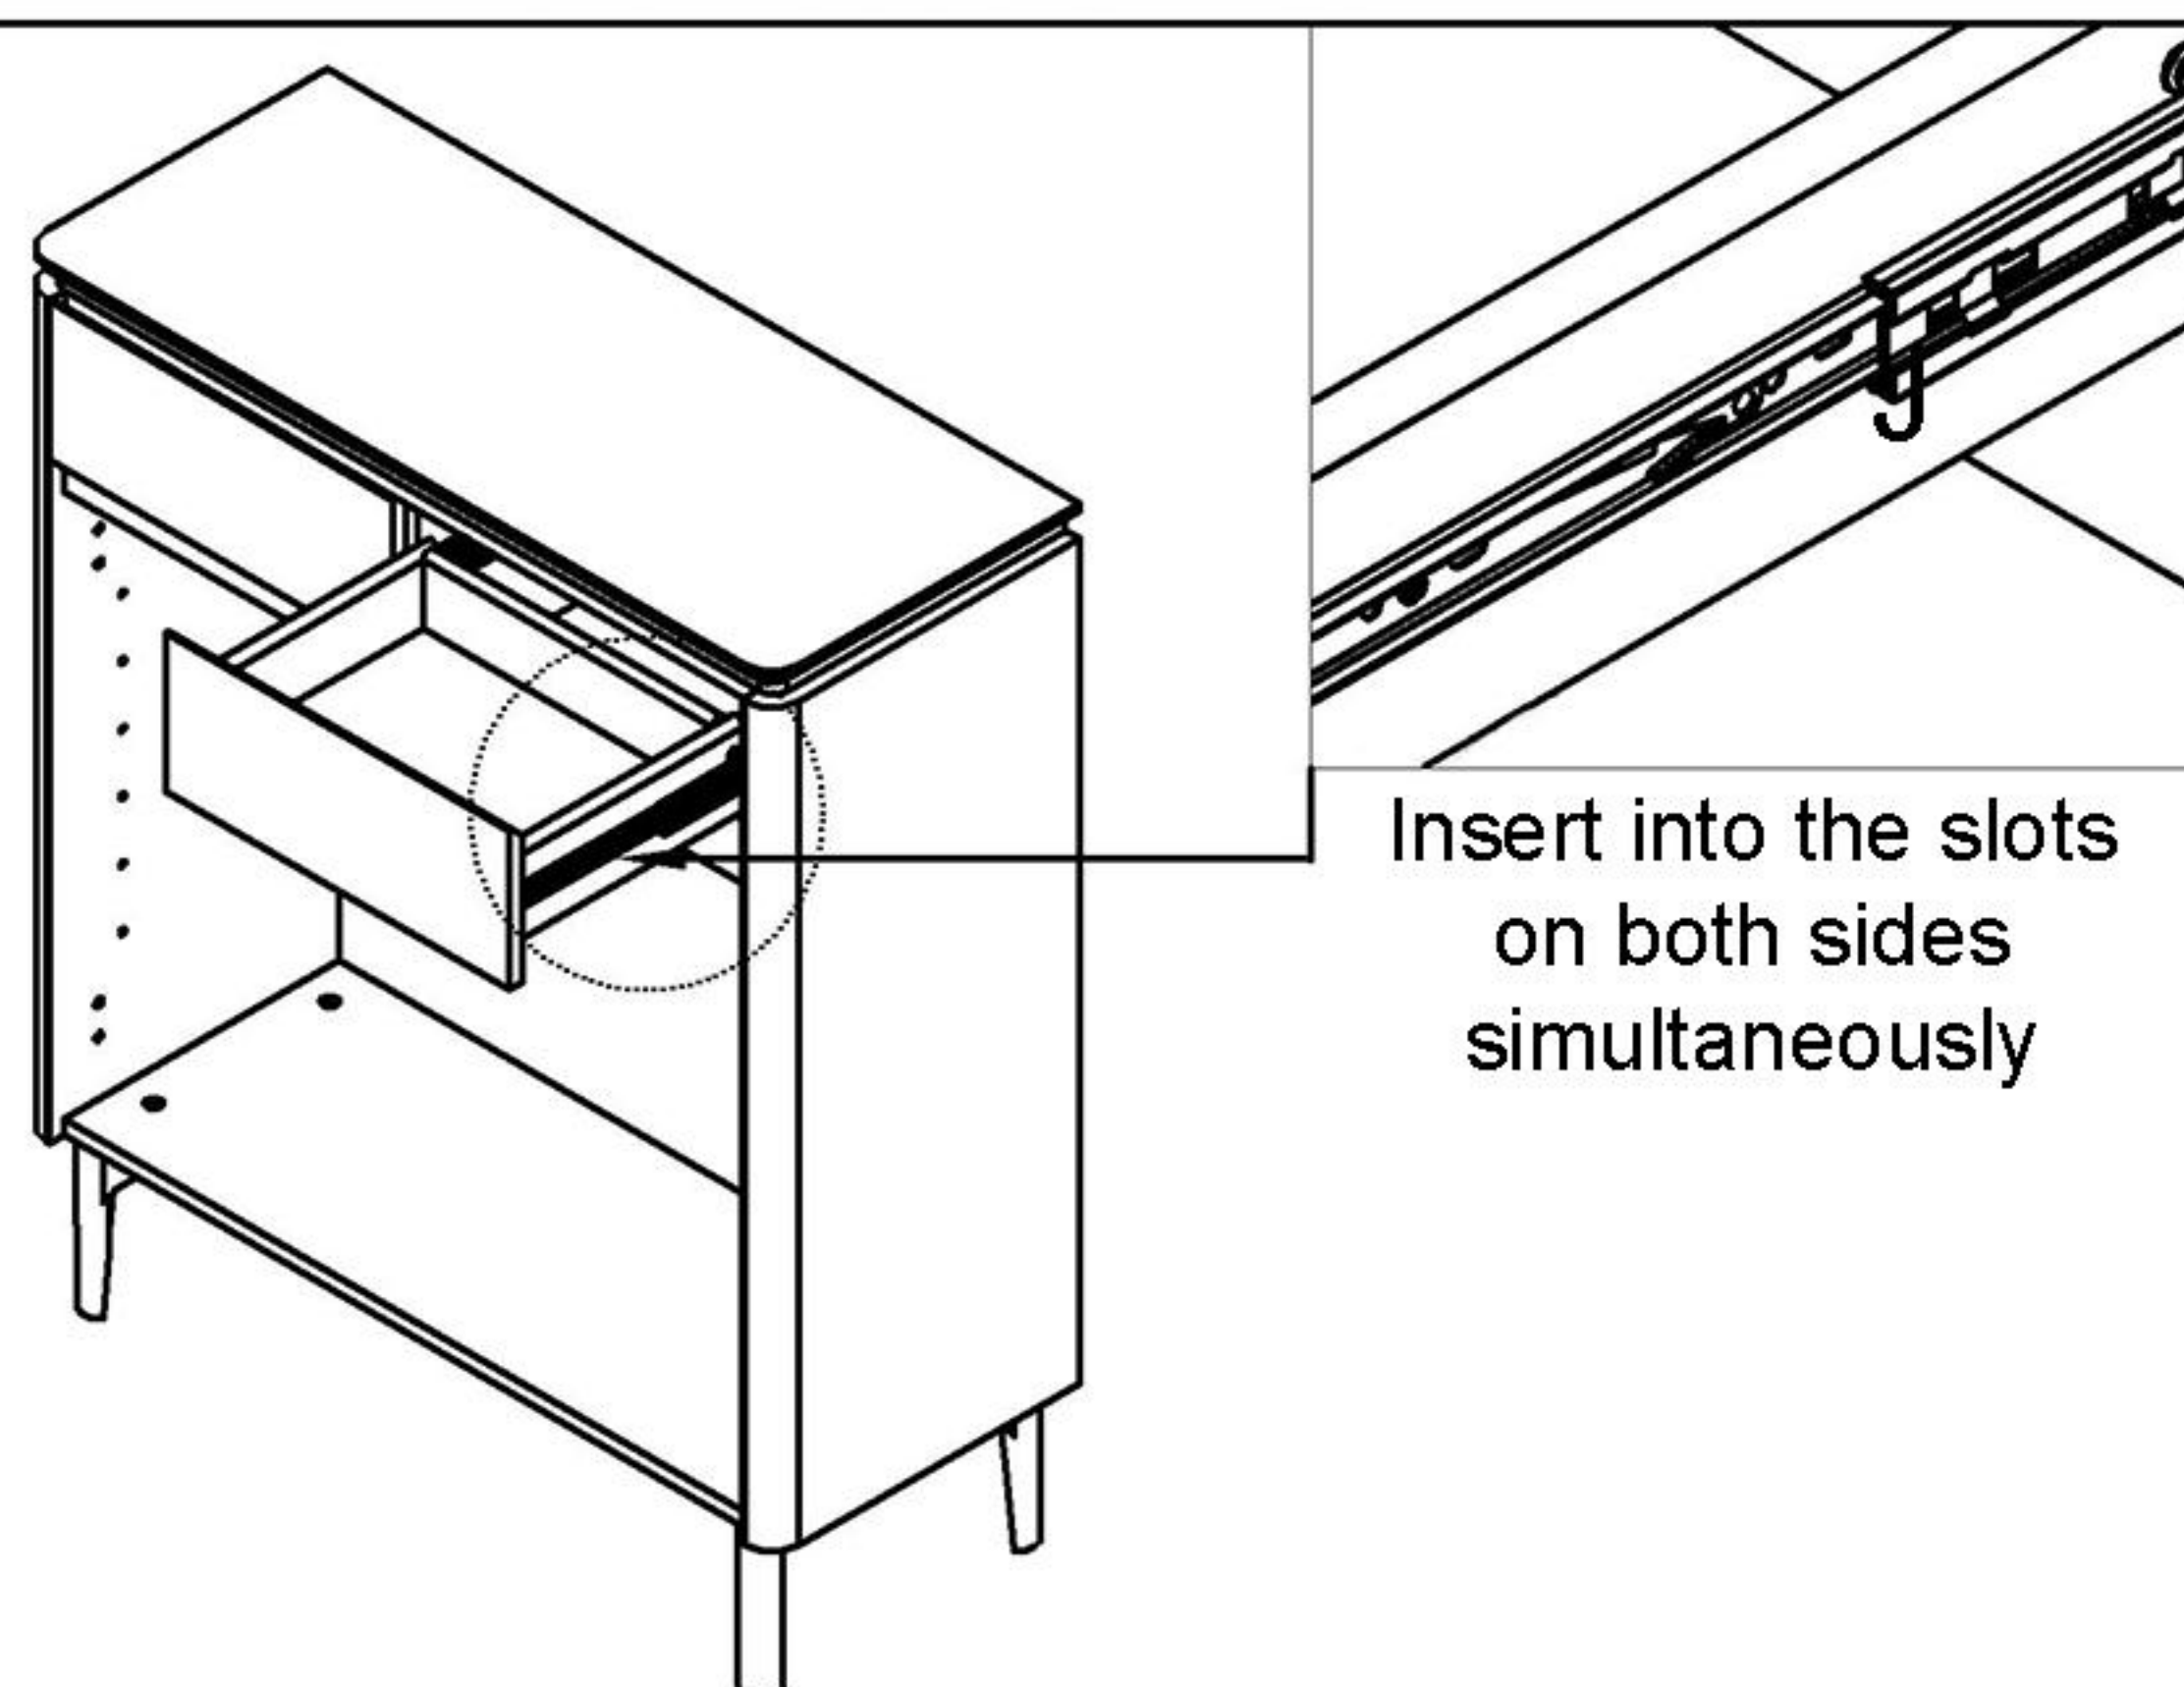


Pull the O main body part fixed to its full length, with the silver ball-bearing section at the front. Insert the O pull out part on both sides of the drawer into the slots, then gently push to secure.

Step 14:

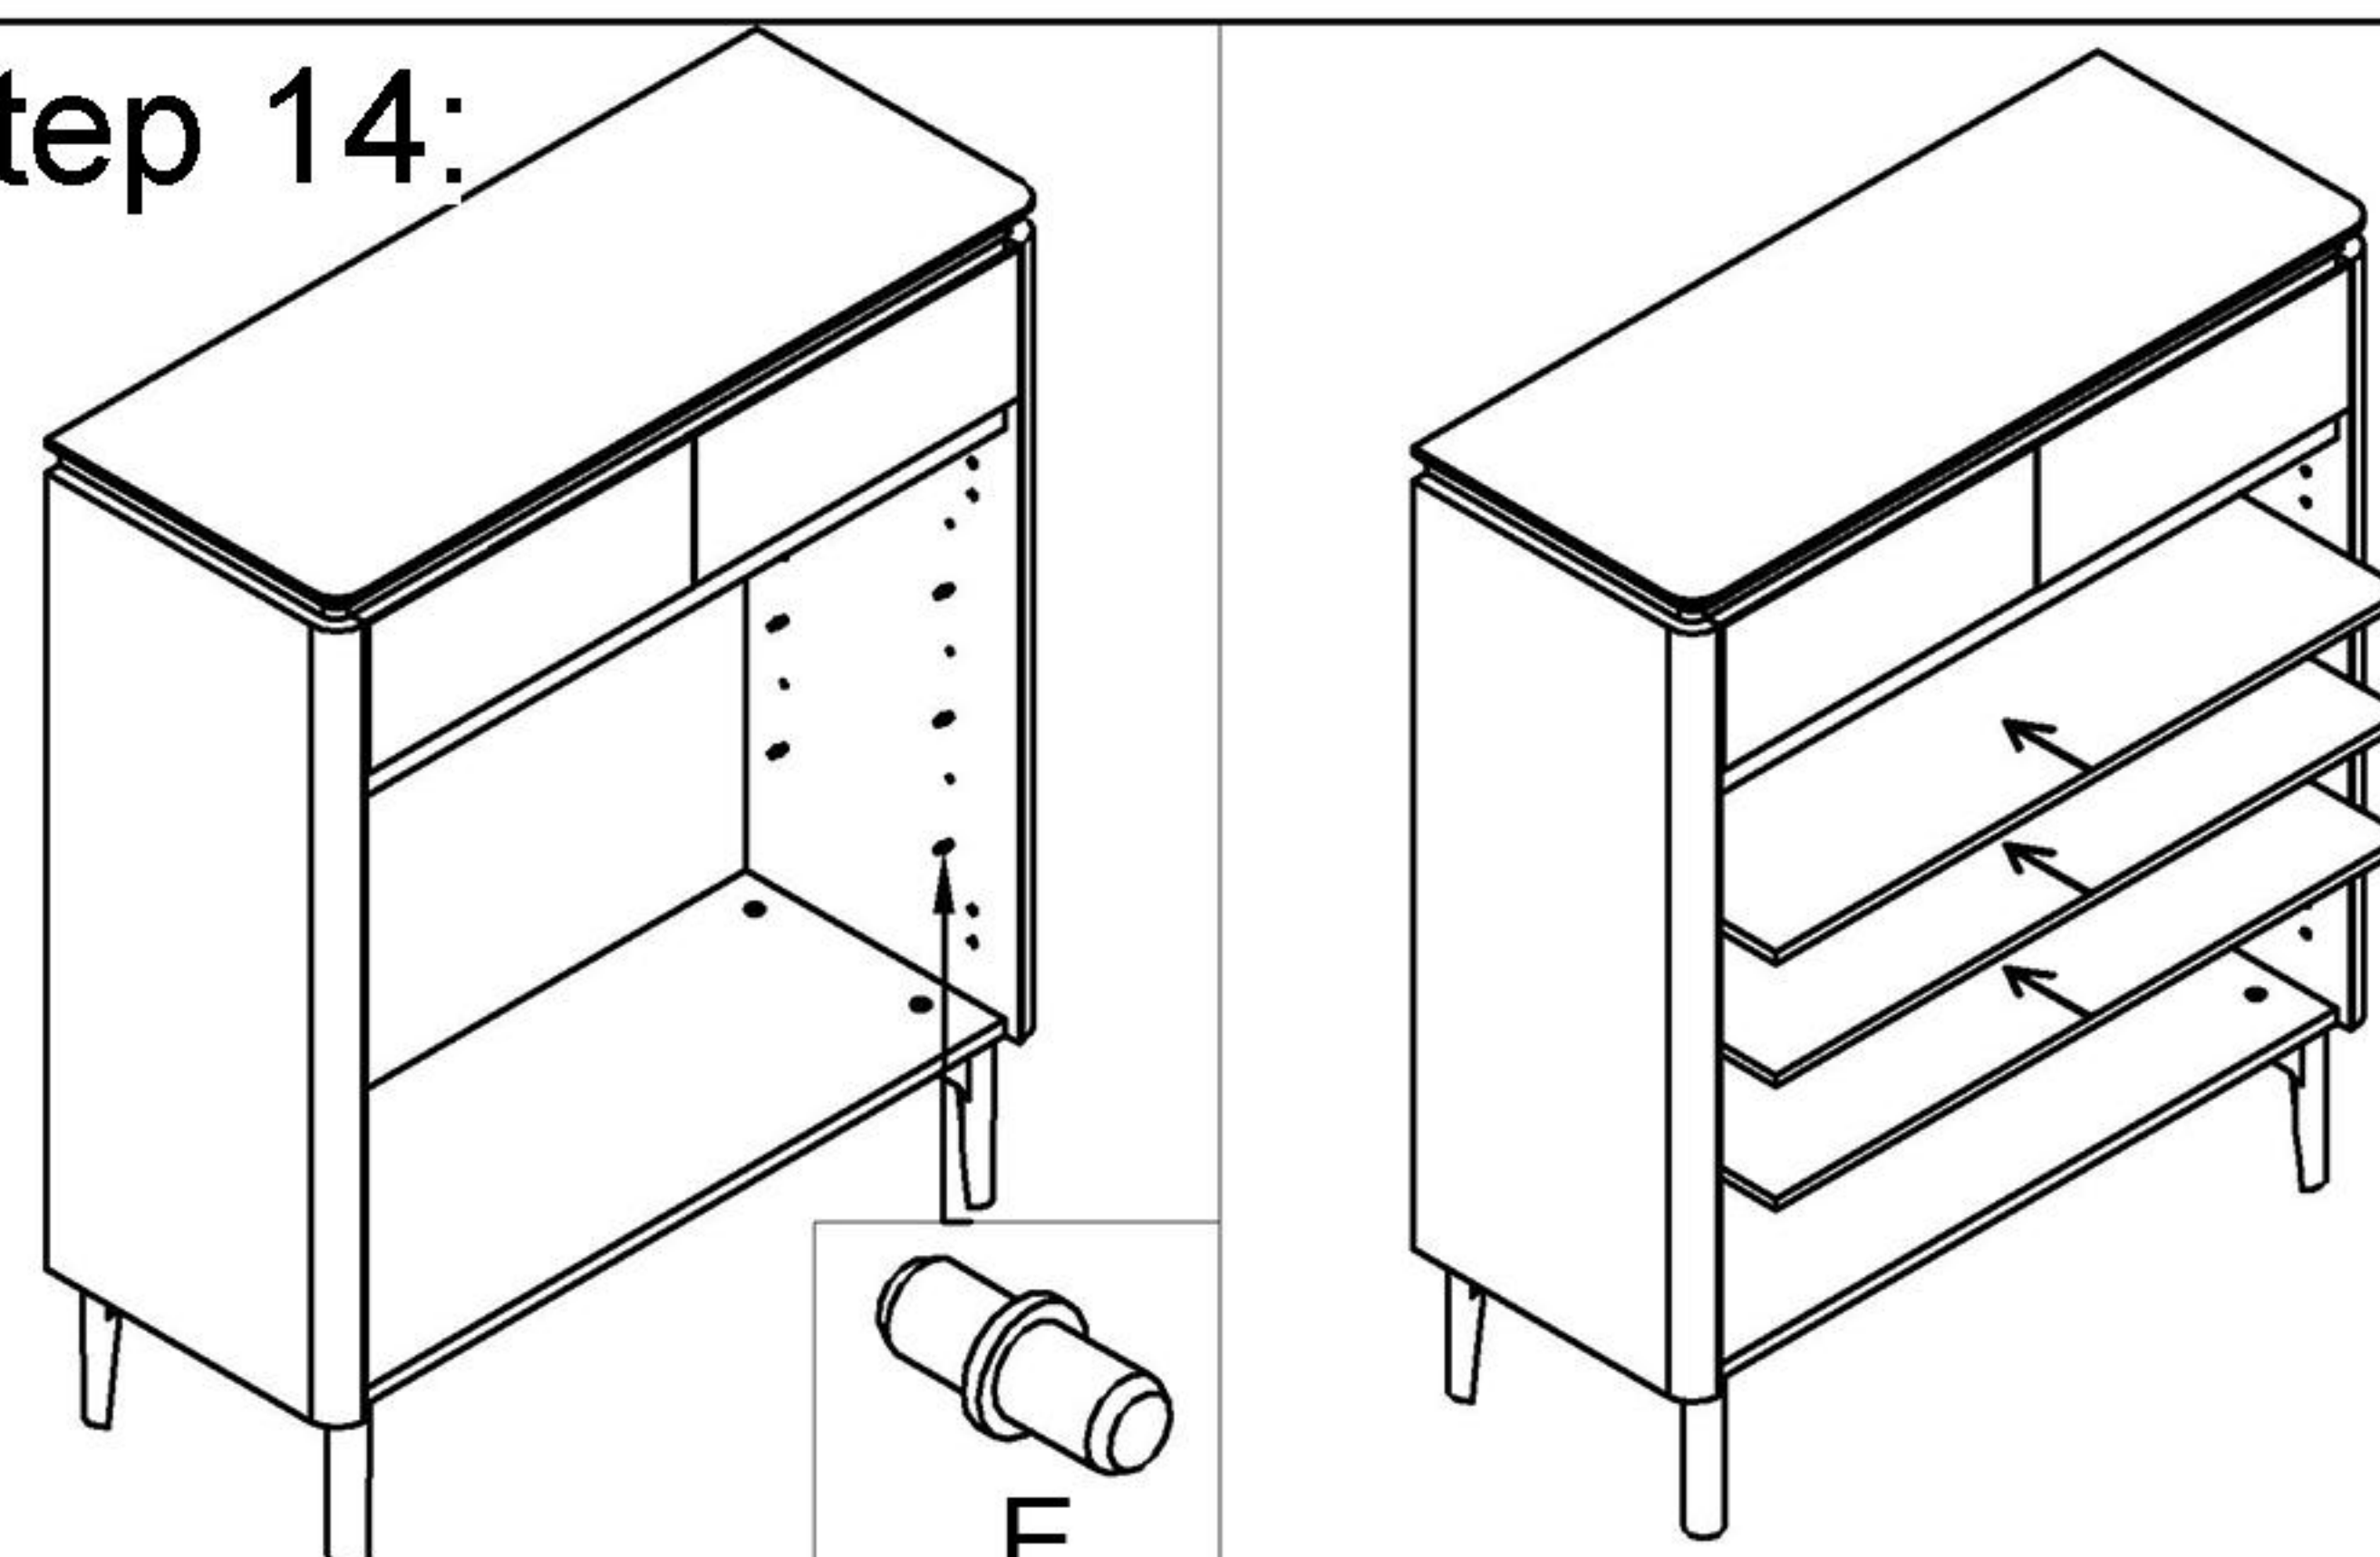


Place part E in the desired position inside the cabinet, then insert Adjustable Shelves.

Step 15:

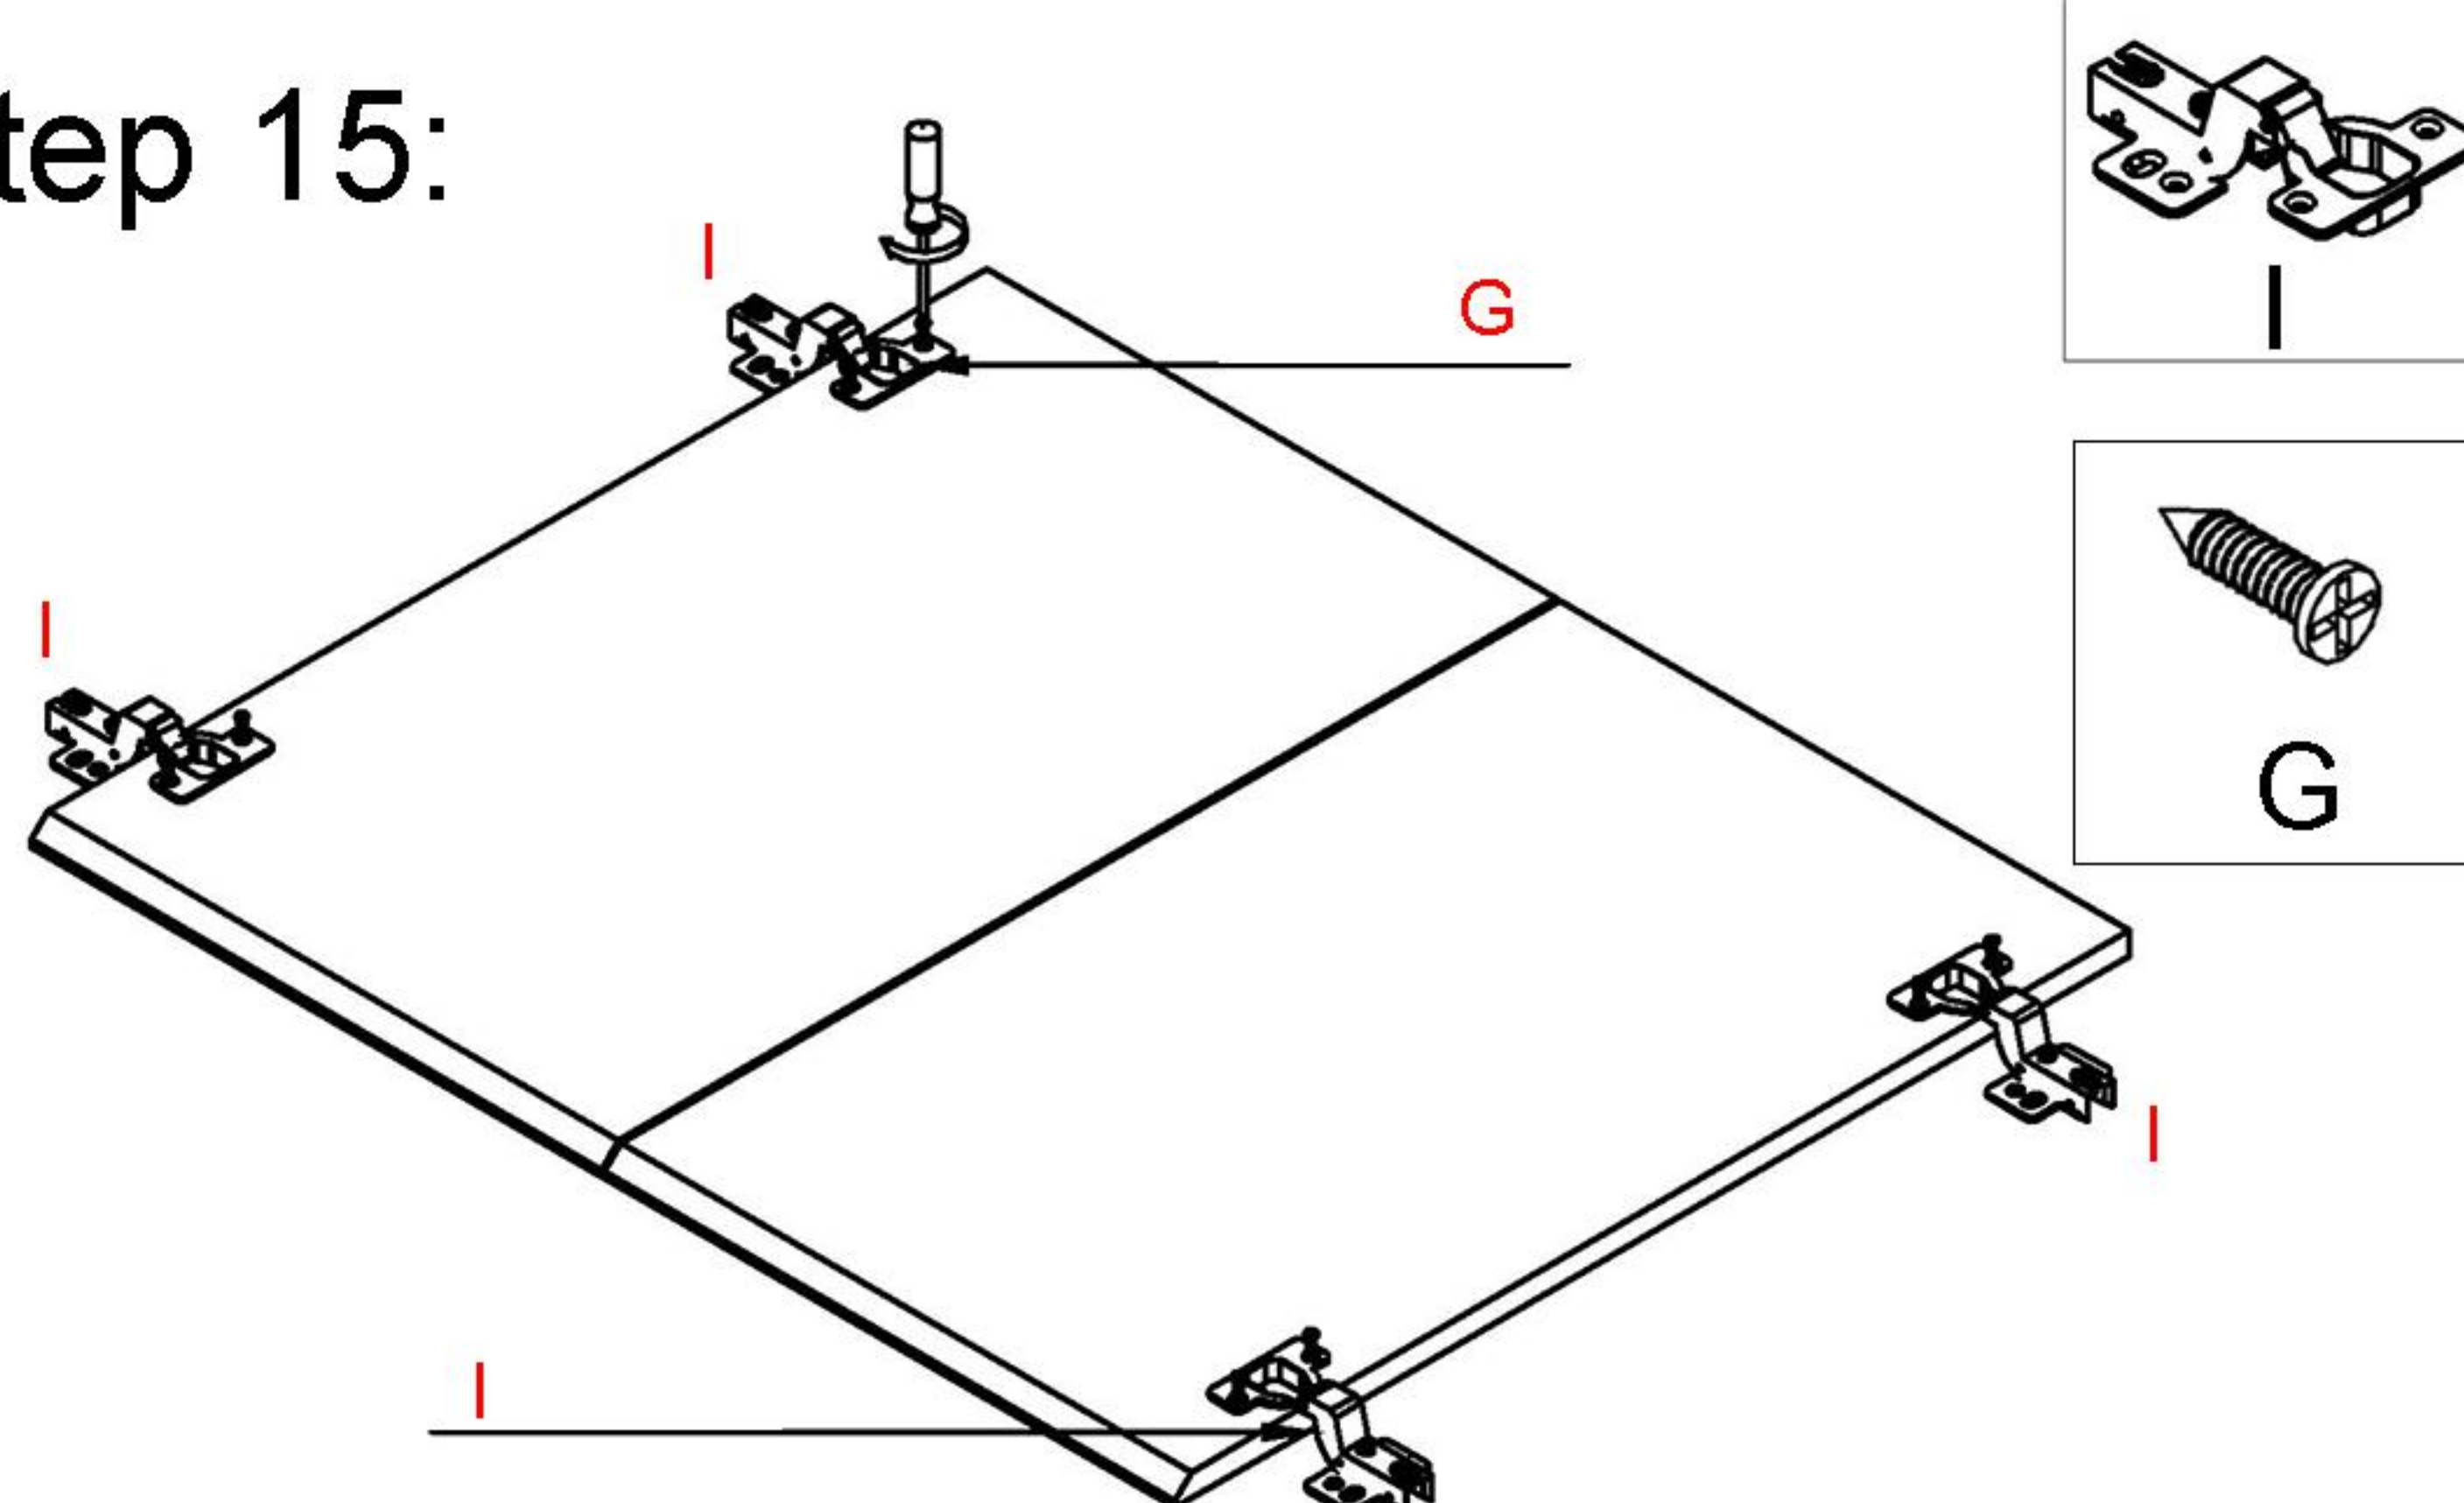

Use G (Gold) to install I. **DO NOT overtighten** to avoid damage—tighten only until resistance is felt.

Step 16:

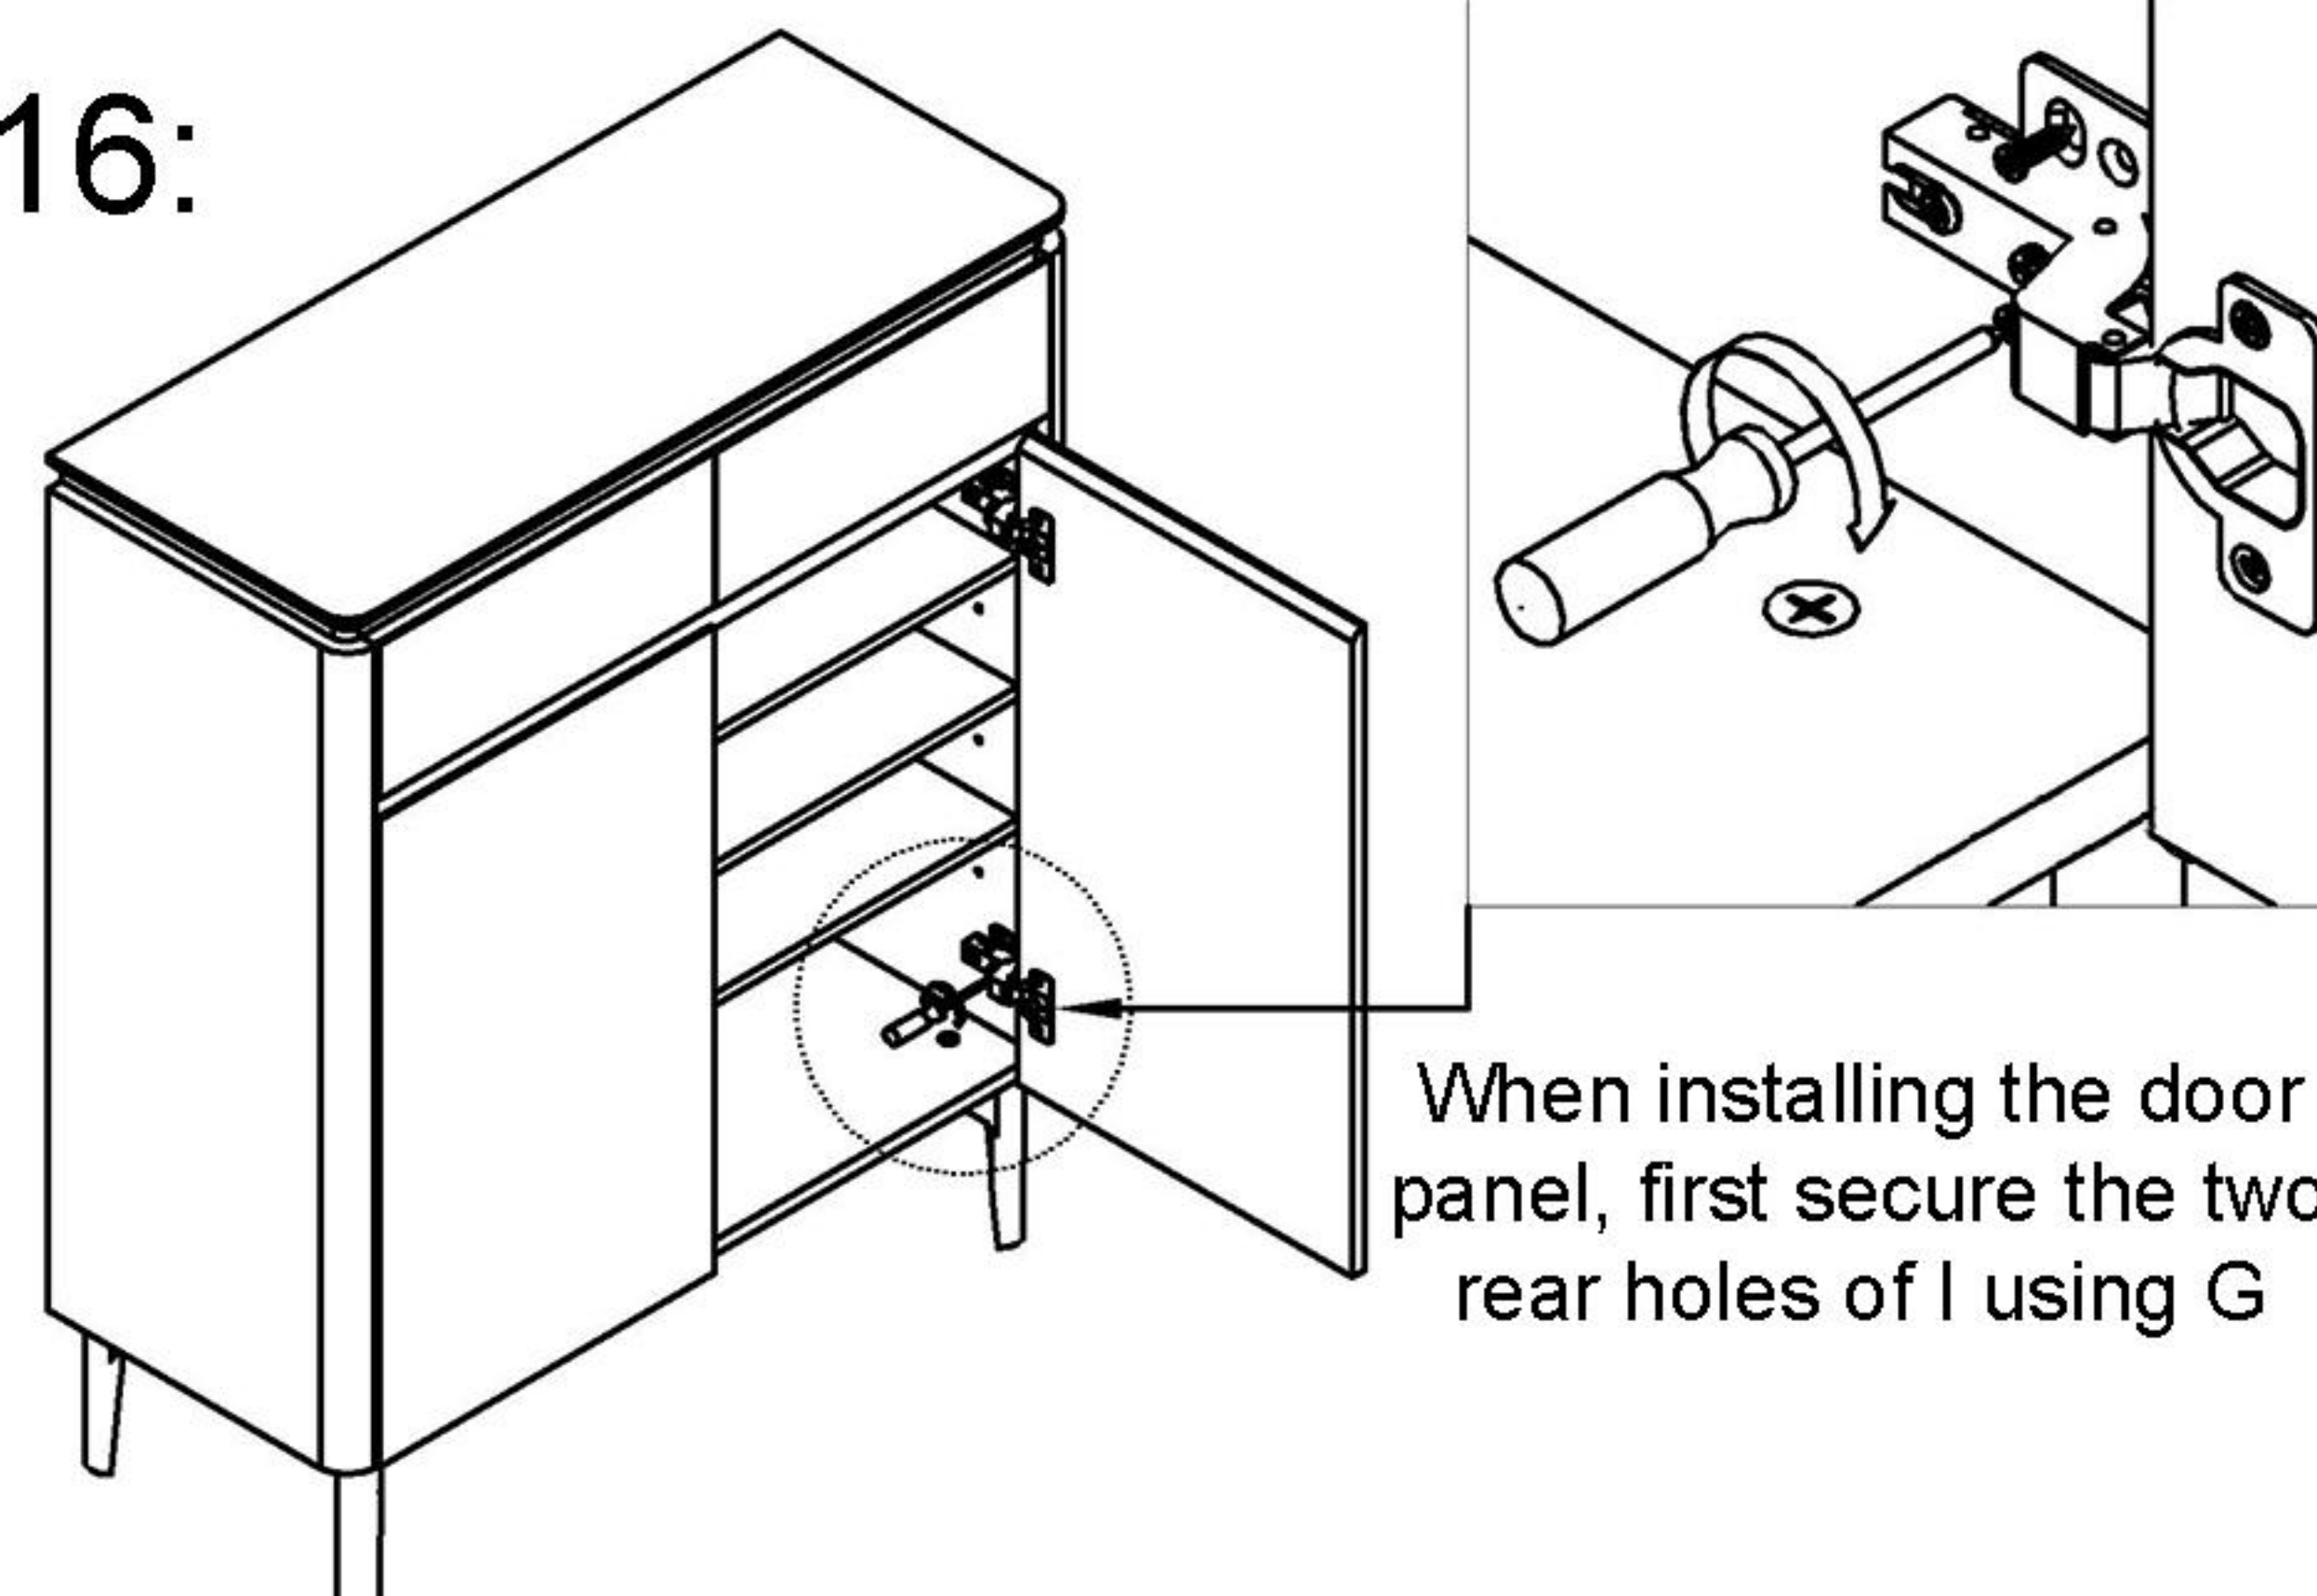

First, secure the rear two holes of I with G, then install the front two holes. Refer to the initial hinge installation instructions to adjust the door's height and gap.