


SOCE055-2D

Installation Instruction

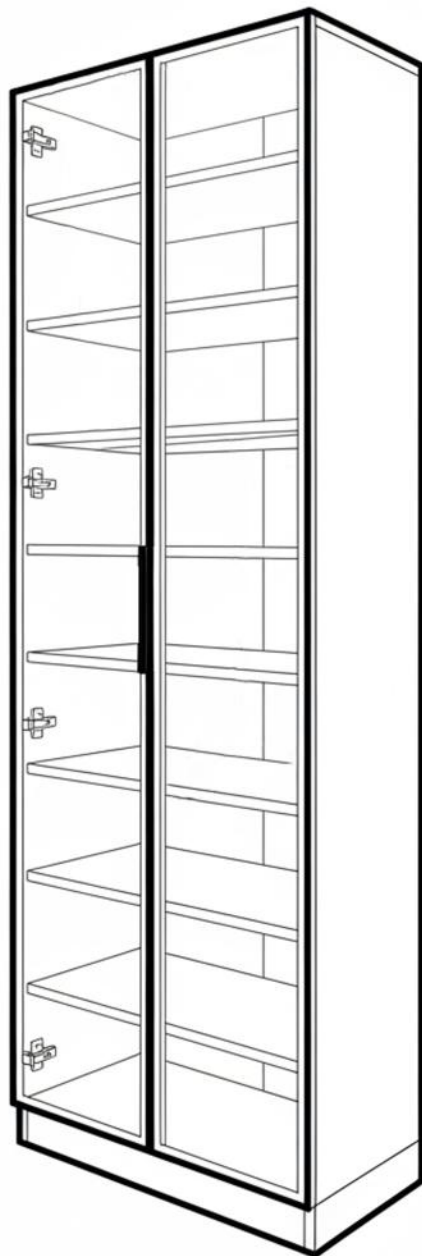

Please read this instruction manual carefully before installation and use.

Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:


1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.



Scan the code to purchase ES001


CAUTION

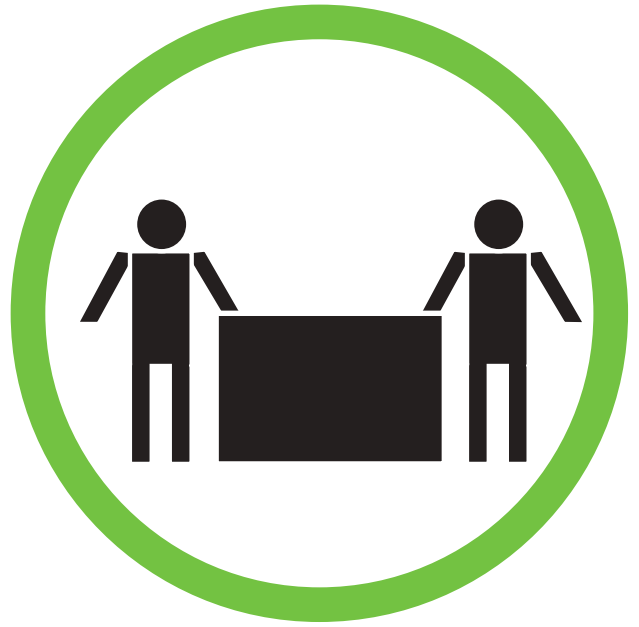

TWO PERSONS LIFT & INSTALLATION


Important: This product is oversized and heavy. For safe assembly and to avoid damage, at least two people are required. When flipping or moving the item, always lift carefully. Never drag, drop, or handle it roughly.

Hardware List

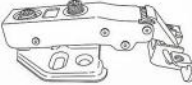Accessory Appearance	Code	Accessory Appearance	Code
	A	 Black	D
	B		E
 Black	C		F


Detailed description of the main components, please read carefully
Hinge Installation Instructions

1.

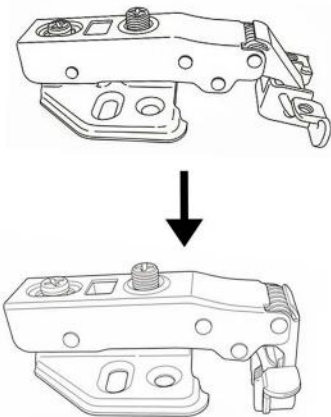


Fold the hinges as shown in the diagram.

2.

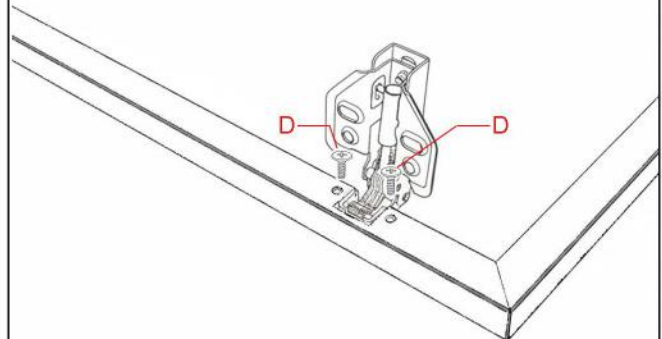


Install the hinge onto the door and ensure it is secure.

3.

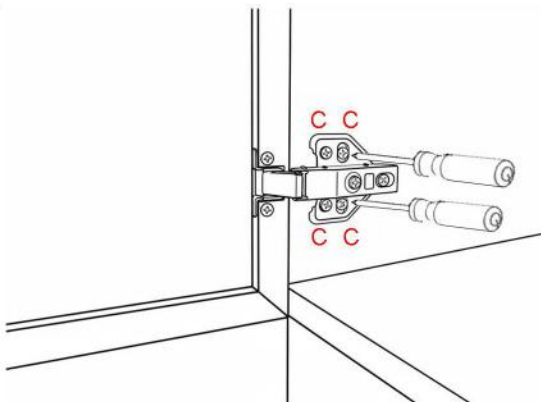


The height can be adjusted up and down here.

4.

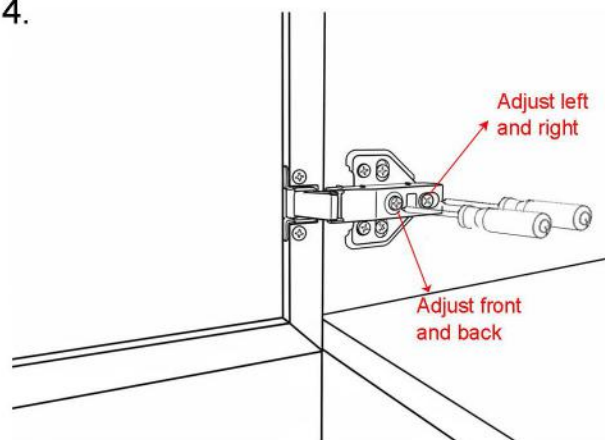


Adjusting the gap between the door.

Installation Guide: Threaded Rod, Latch, Pre-drilled Hole


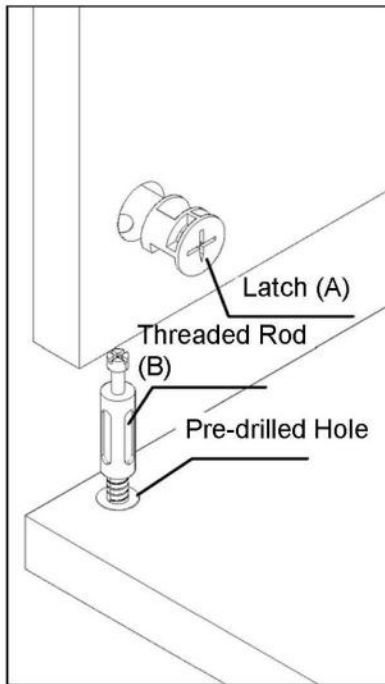


1. Screw the B (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed A into the corresponding hole of the other piece. Press A (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.


Step 1:

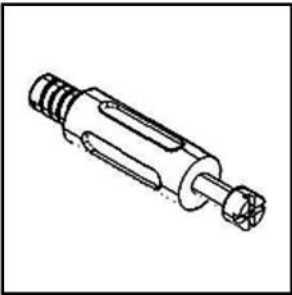

B

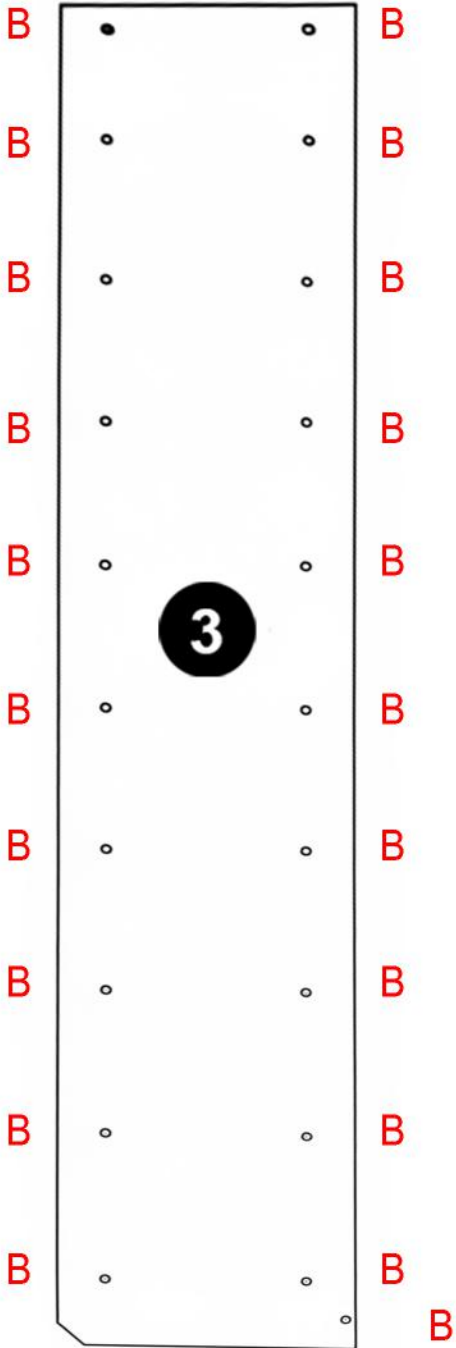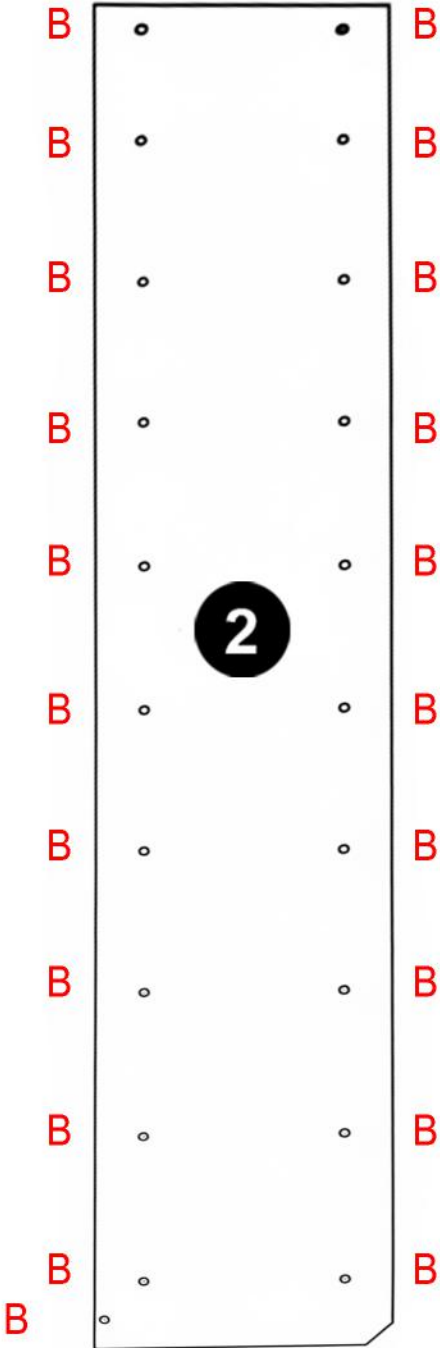


Step 2:

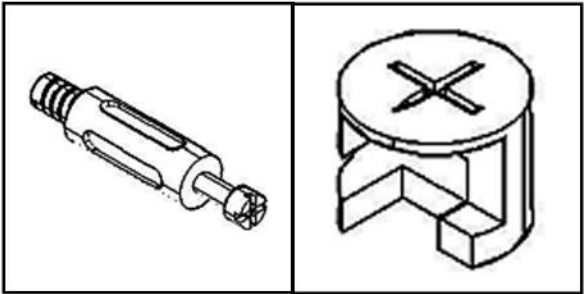


B

A

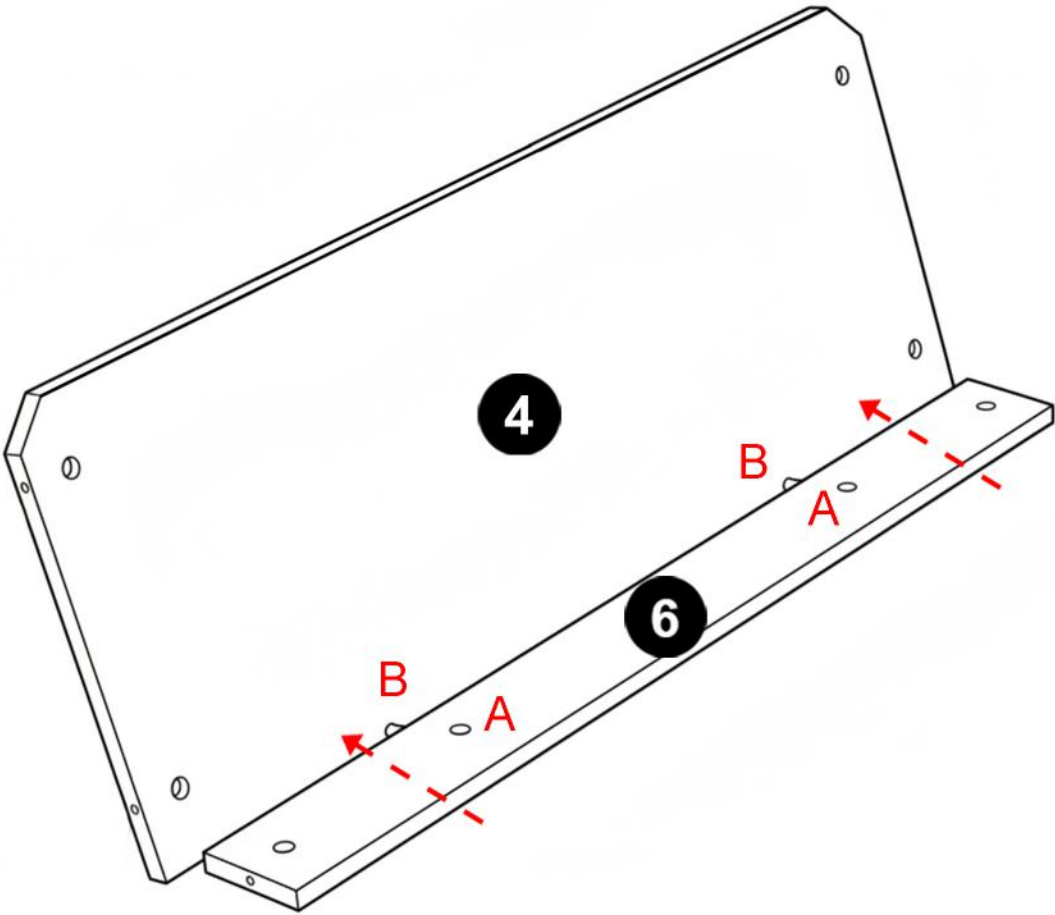


Step 3:

Install all Panel No.5 pieces in the same direction onto Panel No.2.

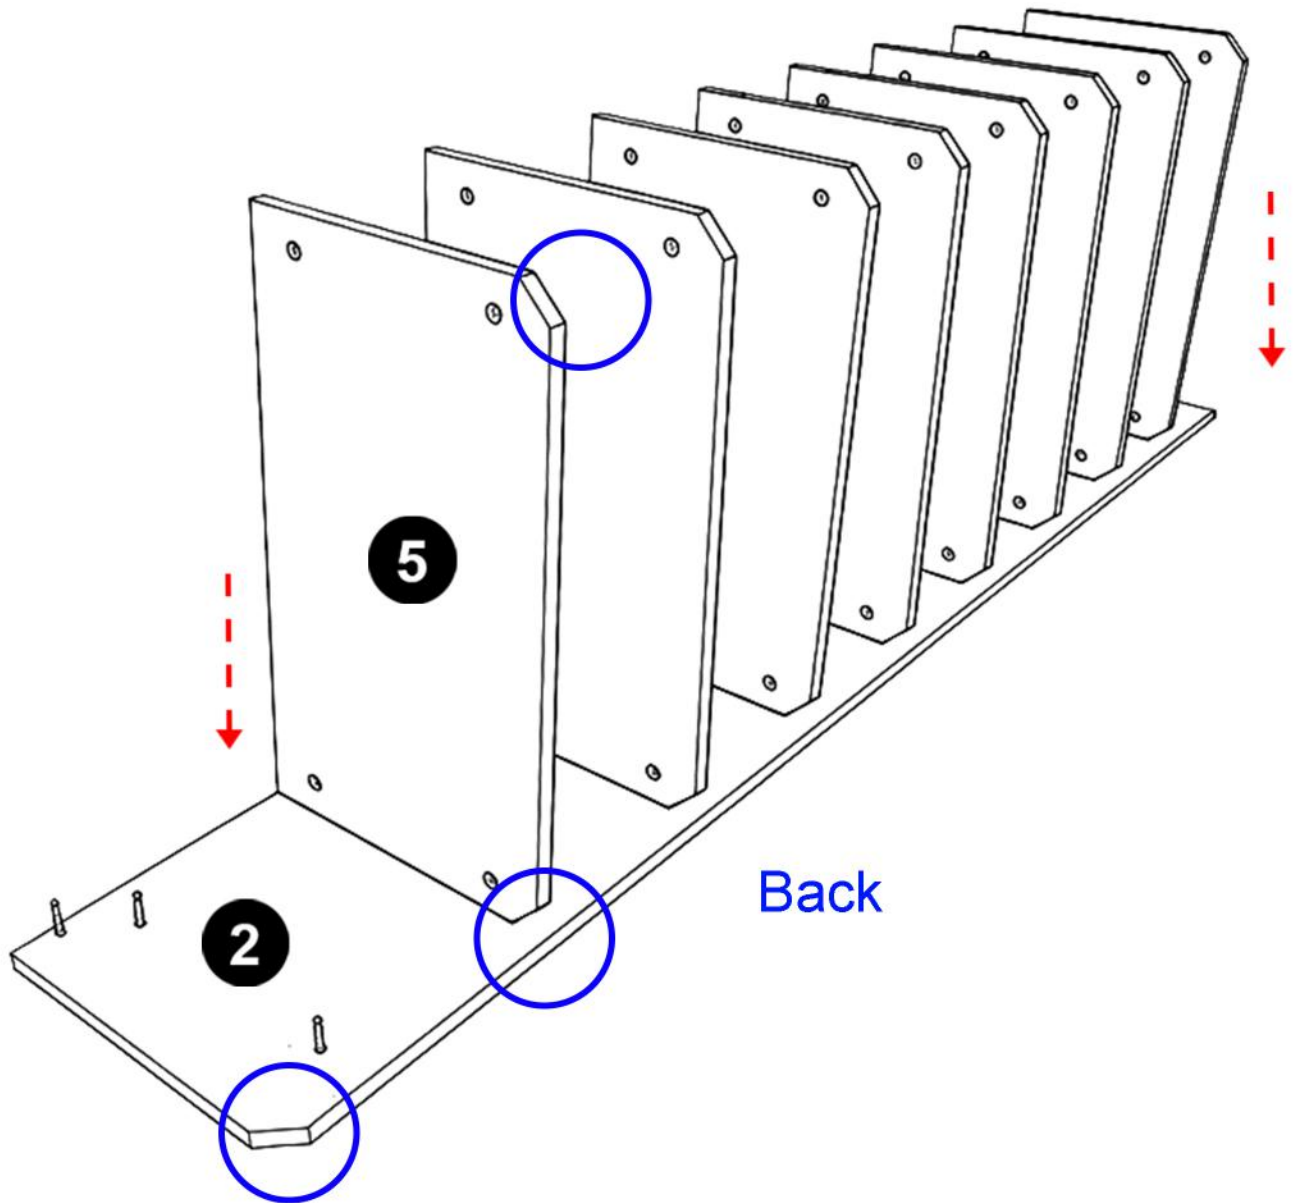


Note: All beveled edges must face the same direction, toward the back.

Step 4:

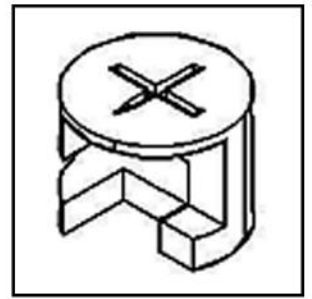


A

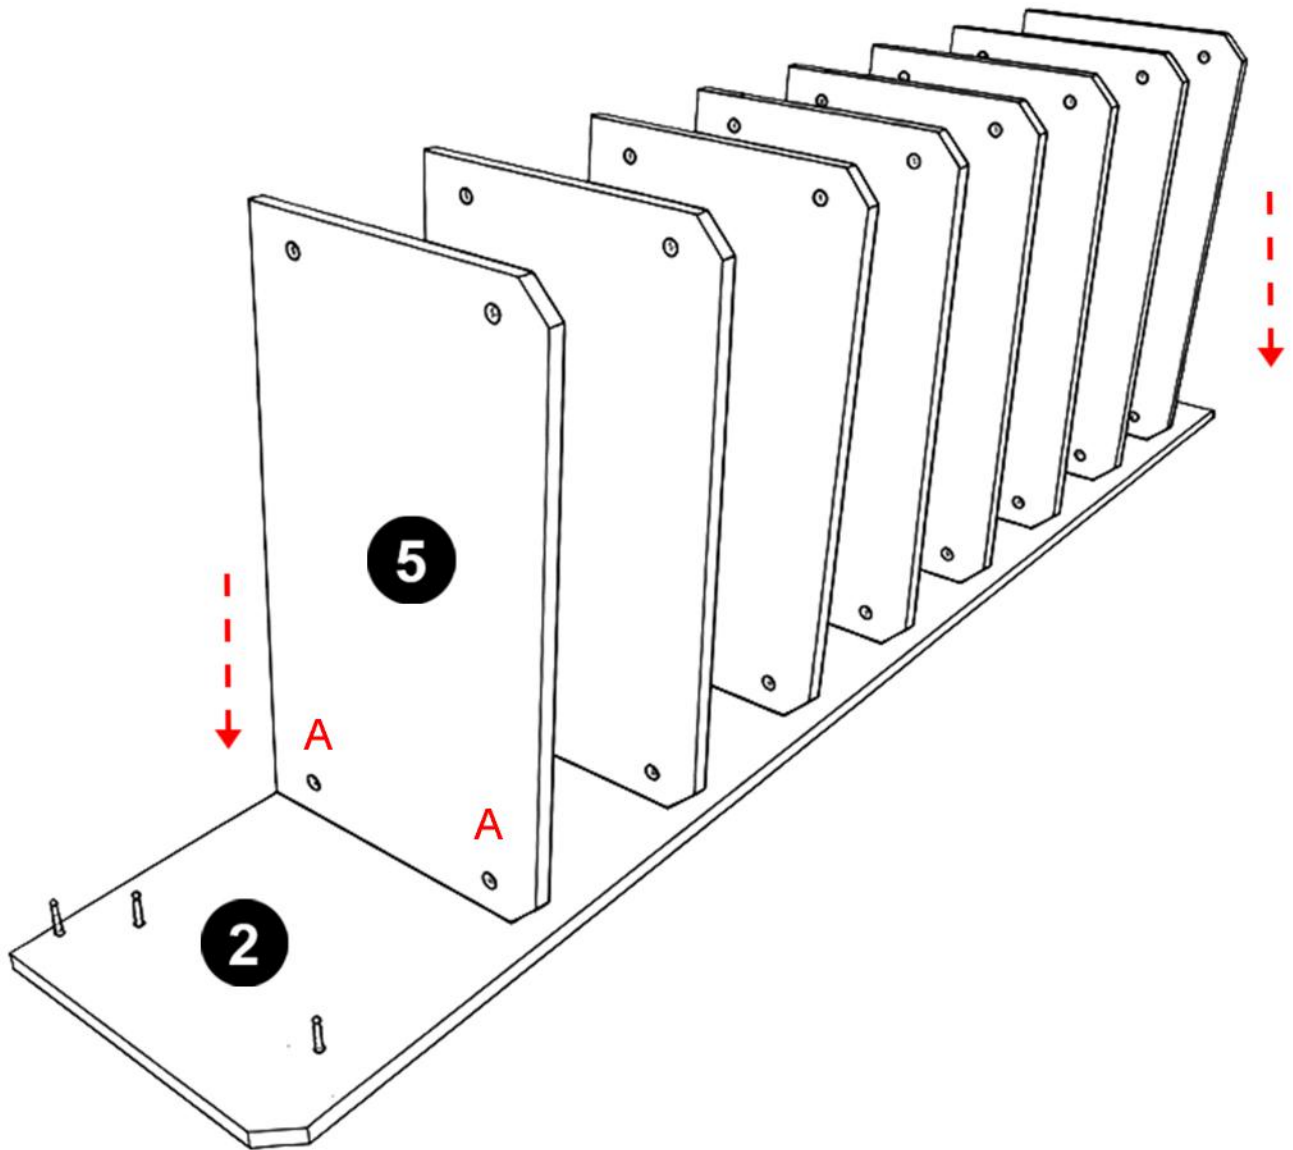


Use A to secure all large pre-drilled holes.
Refer to the previous Installation Guide:
Threaded Rod, Latch, Pre-drilled Hole.

Step 5:

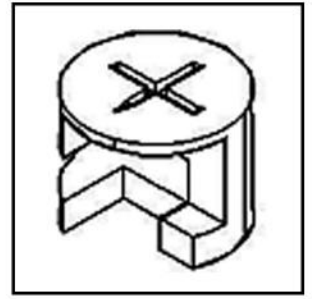


A

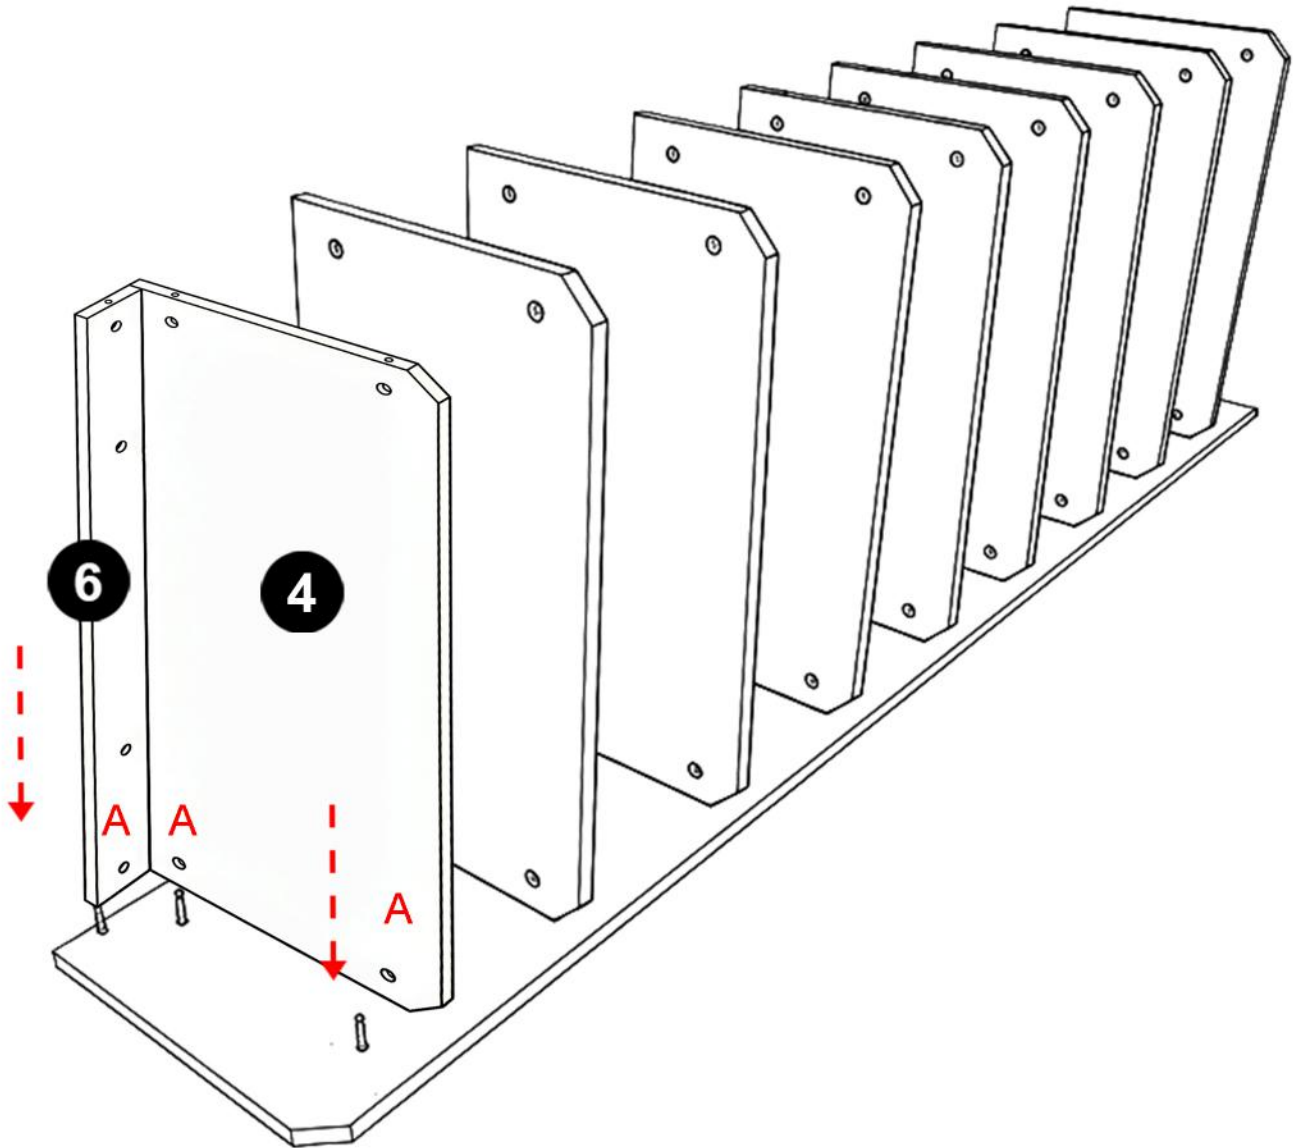


Use A to secure all large pre-drilled holes.
Refer to the previous Installation Guide:
Threaded Rod, Latch, Pre-drilled Hole.

Step 6:

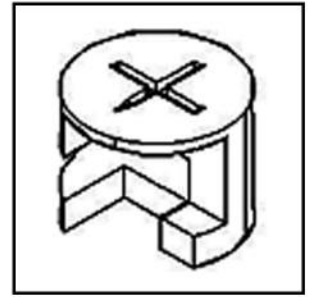


A

3

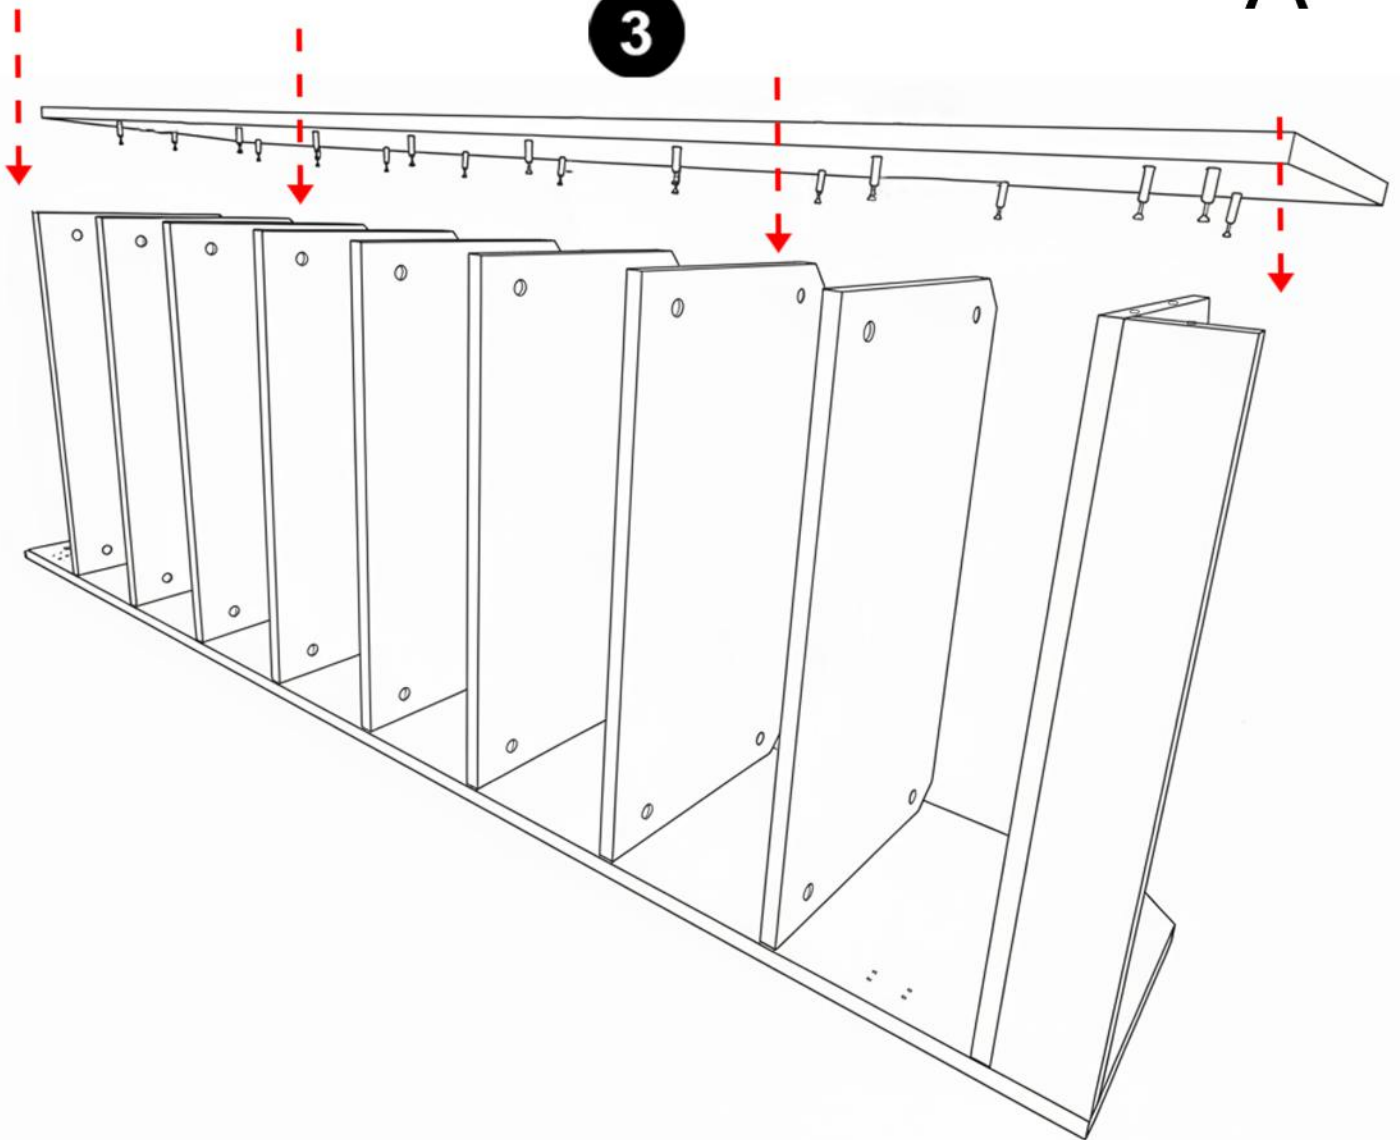


Use A to secure all large pre-drilled holes.
Refer to the previous Installation Guide:
Threaded Rod, Latch, Pre-drilled Hole.

Step 7:

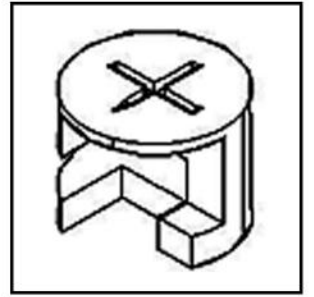


A

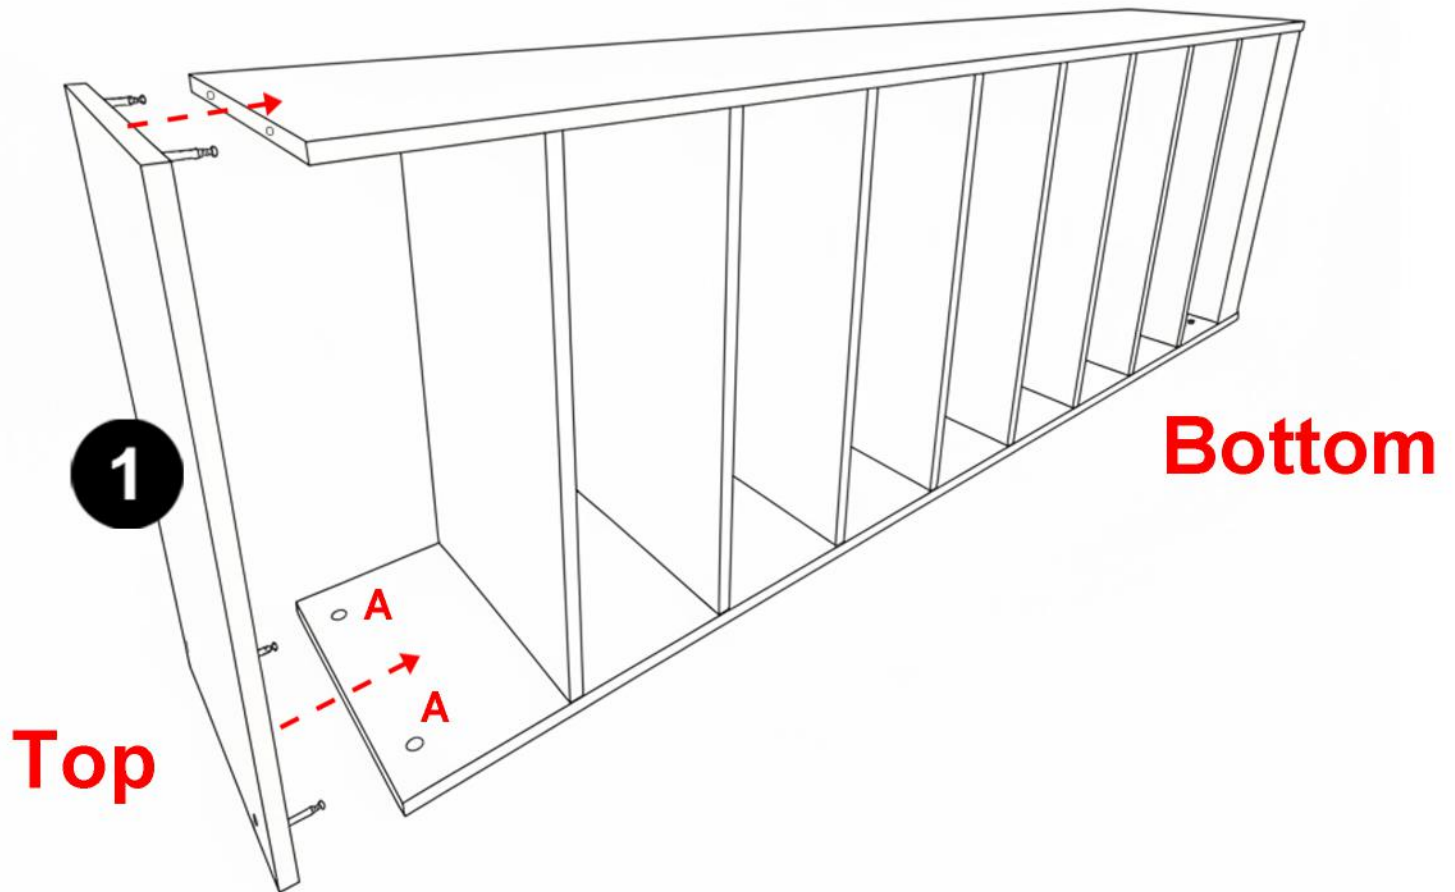


Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 8:

Note: The beveled edges should all face the back of the cabinet. The back is currently facing up—make sure all directions stay consistent.

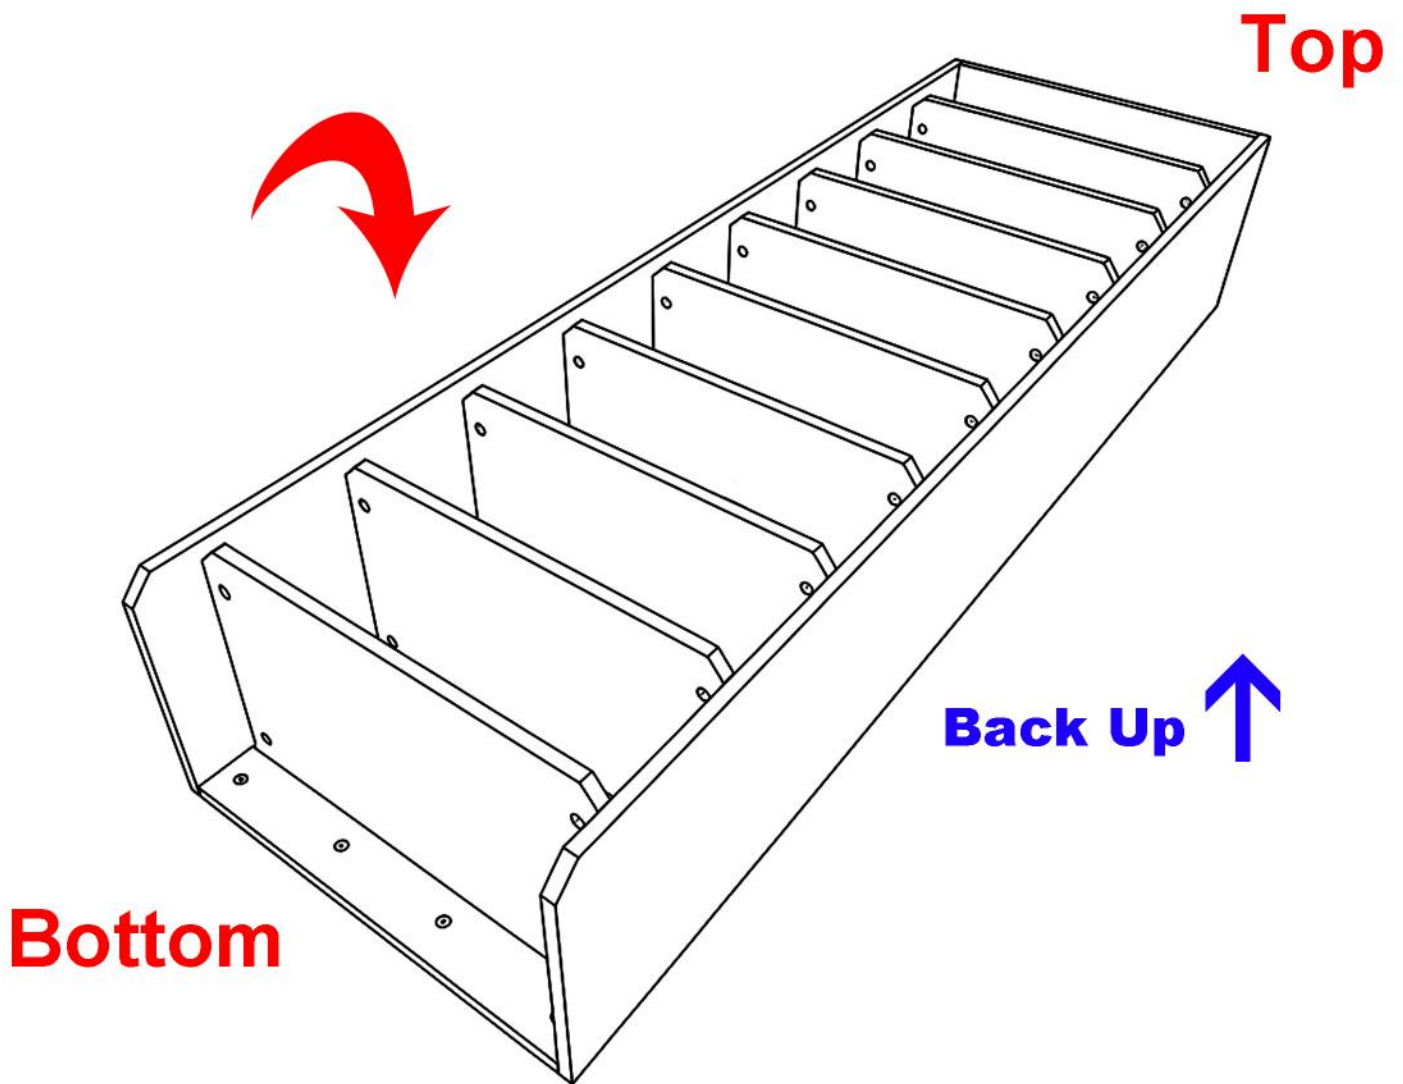


Step 9:

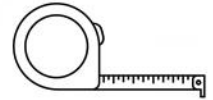

**Ruler not
included**

Use a ruler to measure the diagonals on the back. If both measurements are the same, the cabinet is square and you can continue assembly. If they differ:


- 1, Check if any panels are installed incorrectly or reversed.
- 2, Ensure all panels are tightly connected and properly aligned.
- 3, Make sure all A fittings are fully tightened.
- 4, Gently adjust the cabinet by pushing it into alignment.

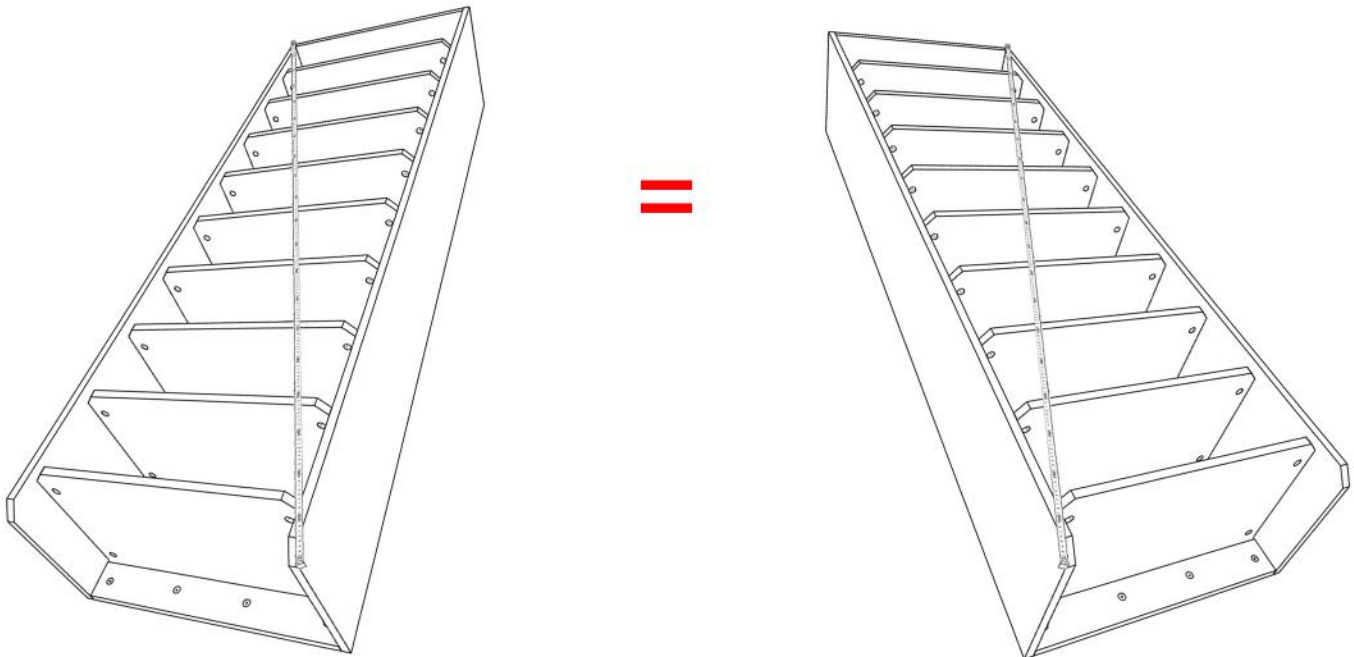

Step 10:




F

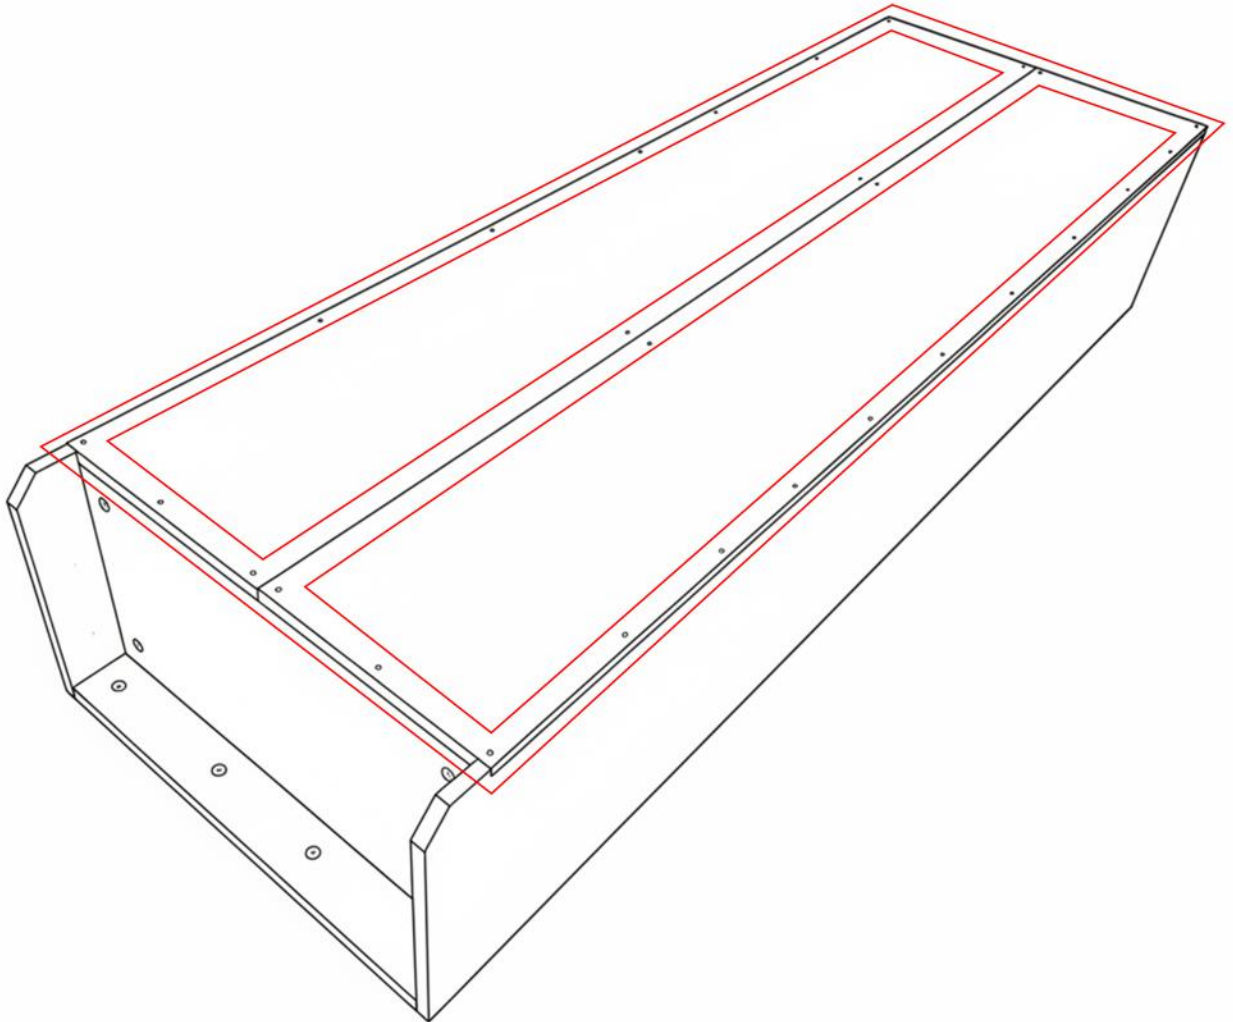

Use F to secure the back panel. A small hammer is required (not included).


Step 11:

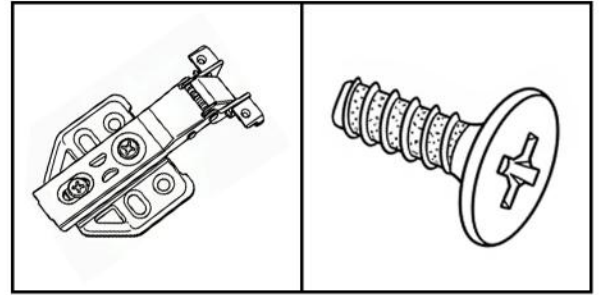


E

D


Use D to install E on the middle door.

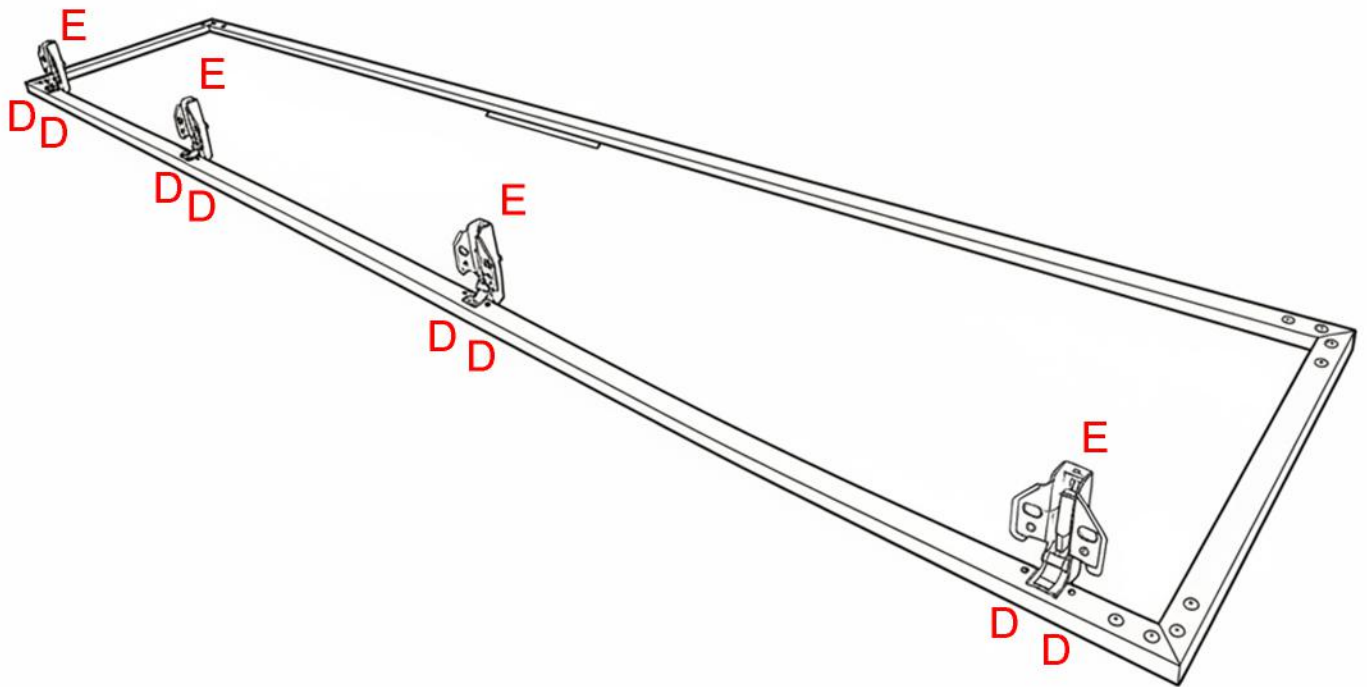

Step 12:

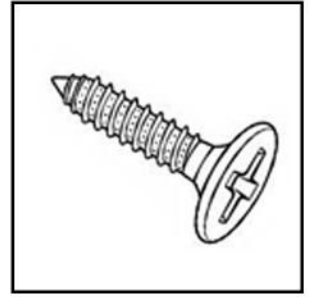

C

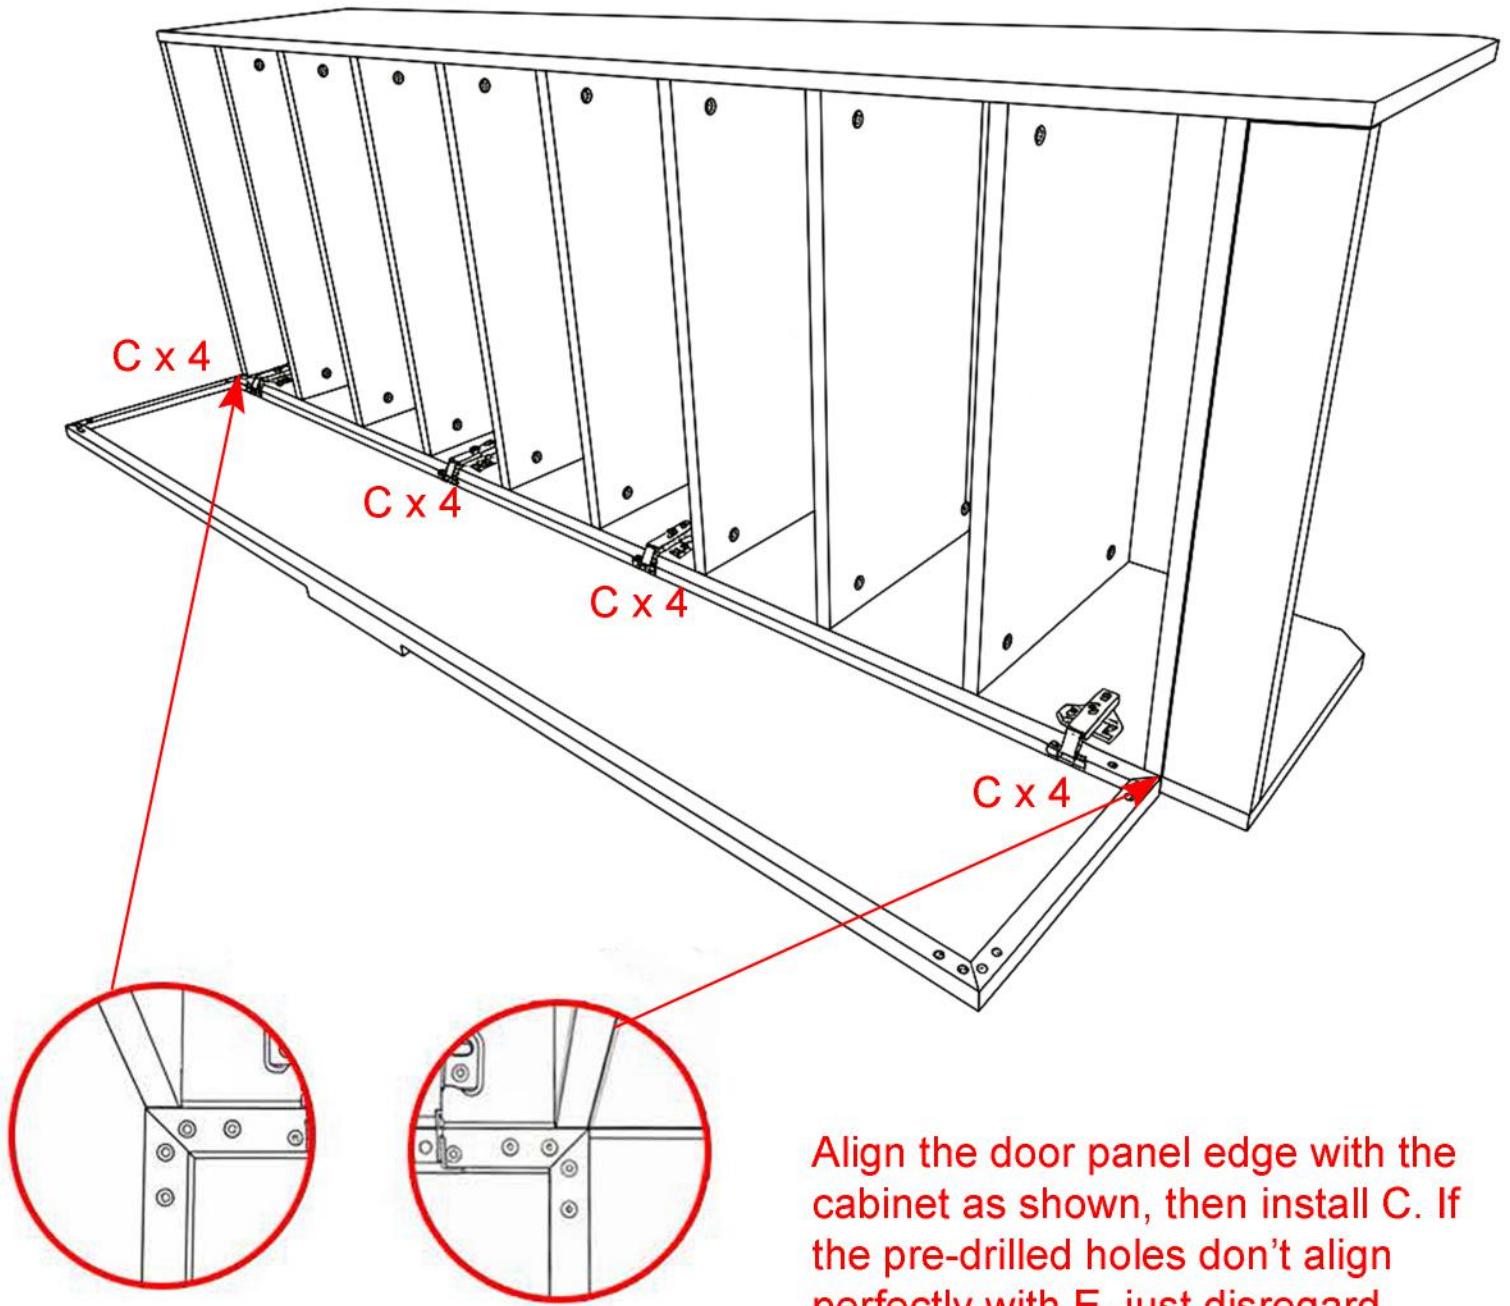

Align the door panel edge with the cabinet as shown, then install C. If the pre-drilled holes don't align perfectly with E, just disregard them. Repeat on both sides for the left and right doors.



Installation finished