


TV011-CAB

Installation Instruction

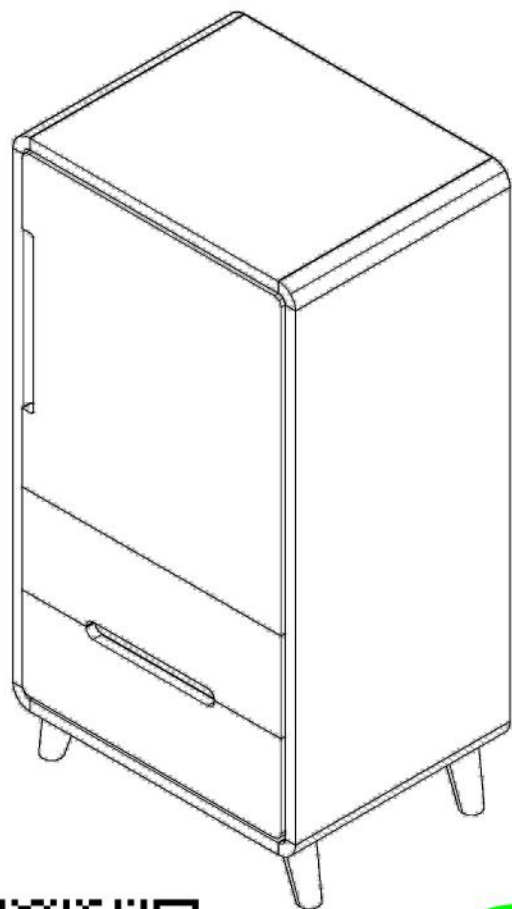

Scan the code to
purchase ES001



Please read this instruction manual carefully before installation and use.

Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:

1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

Hardware List

Accessory Appearance	Code	Dimensions	Numbers	Unit	Accessory Appearance	Code	Dimensions	Numbers	Unit
	A	Ø7*40mm	16	Piece		G	120mm ^{Height}	4	Piece
	B	Ø15*12mm	38	Piece		H		2	Piece
	C (with rubber plug)	Ø7*40mm	22	Piece		I	Ø8*40mm	4	Piece
	D	Ø3.5*14mm	28	Piece		J	Ø8*40mm	23	Piece
	E	Ø3.5*35mm	10	Piece		K	300mm ^{Length}	2	Pair
	F	Ø5*20mm	8	Piece		Non-slip pad		4	Piece





BoardMaterial List

Code	Dimensions	Numbers	Code	Dimensions	Numbers
1	380*30*30	4	7	232*1144*15	2
2	440*380*18	1	8	458*816*15	1
3	440*380*18	1	9	458*158*15	2
4	1120*380*18	2	10	115*300*15	4
5	464*335*15	1	11	409*115*15	2
6	464*335*15	2	12	419*292*8	2


Detailed description of the main components, please read carefully

H(Hinge) Installation Instructions

Install the hinge with screw **D**

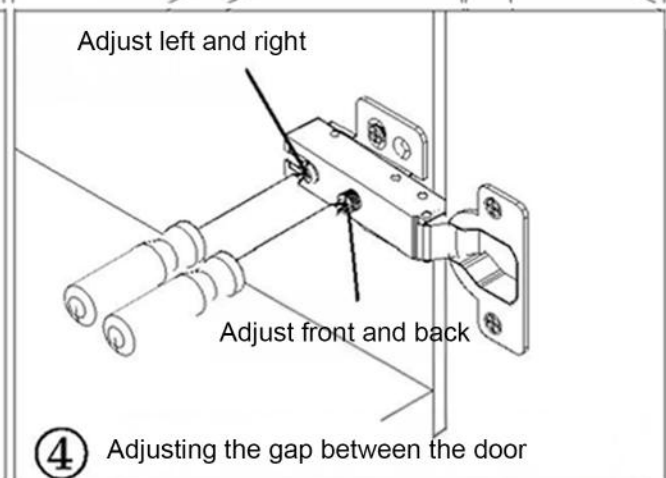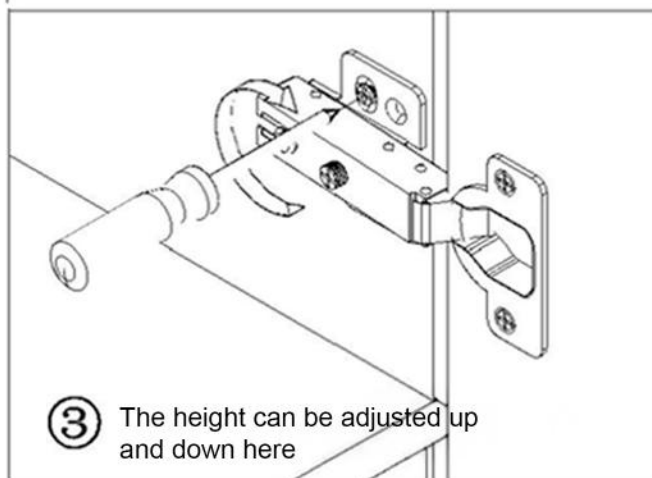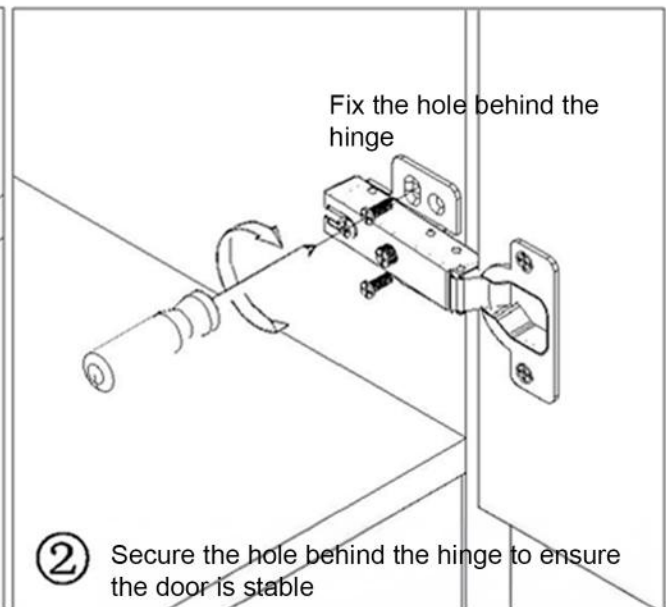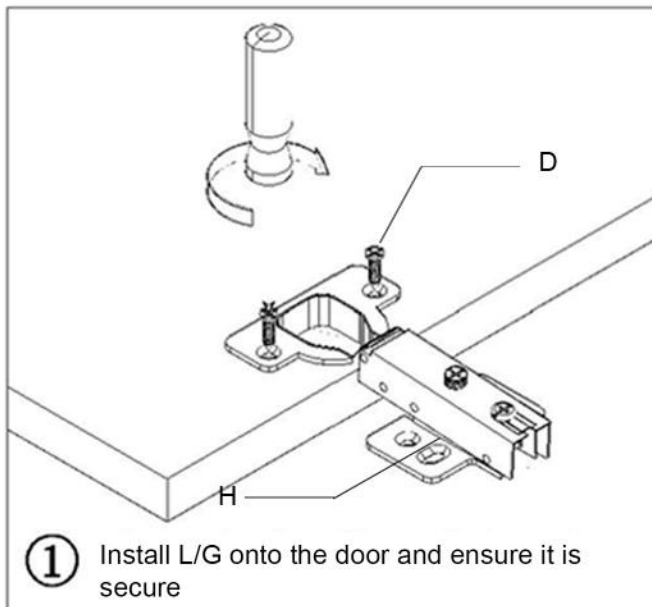

Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

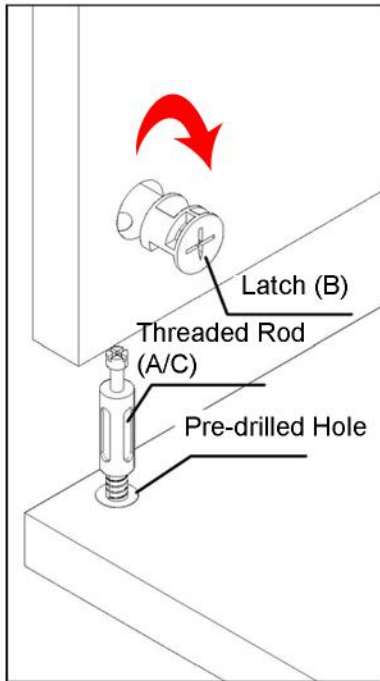

1. Screw the A/C (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed A/C into the corresponding hole of the other piece. Press B (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.

K (Sliding Rail) Installation Instructions


When installing K, use with screw D

1, Separate K (Sliding Rail)




The main body part

The pull-out part

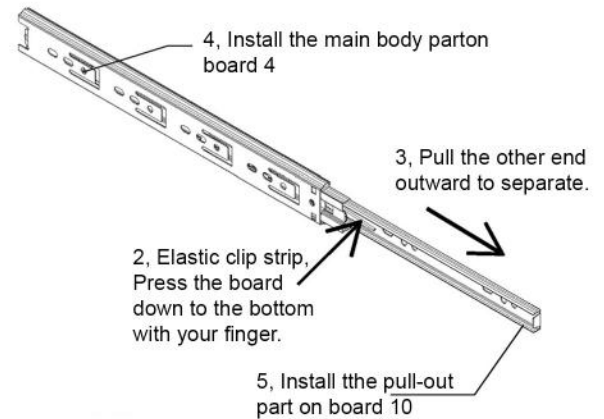


Step 1:

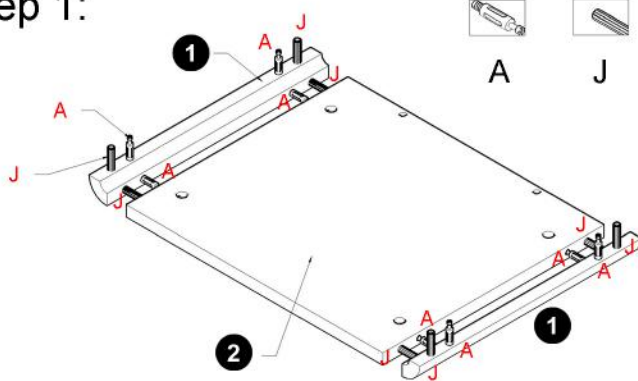


Note: This product includes two types of connecting screws. Use the standard black type A for all connections with Panel 1. For all other connections, use the orange type C with the rubber plug.


Step 2:

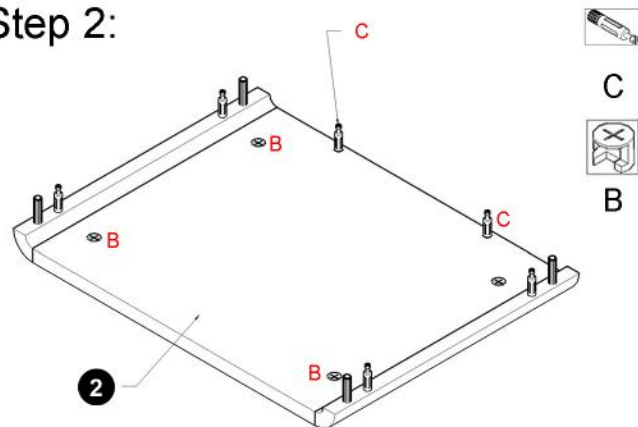

Step 3:

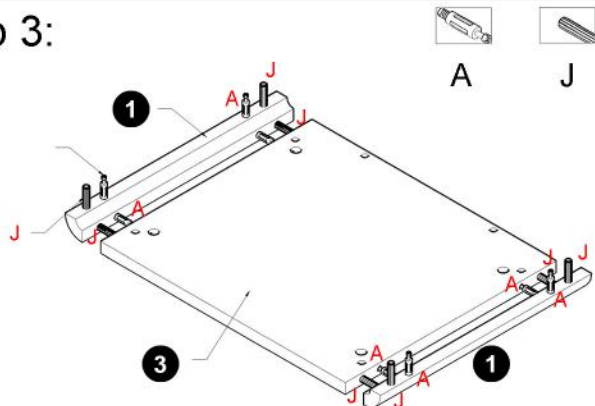


Step 4:

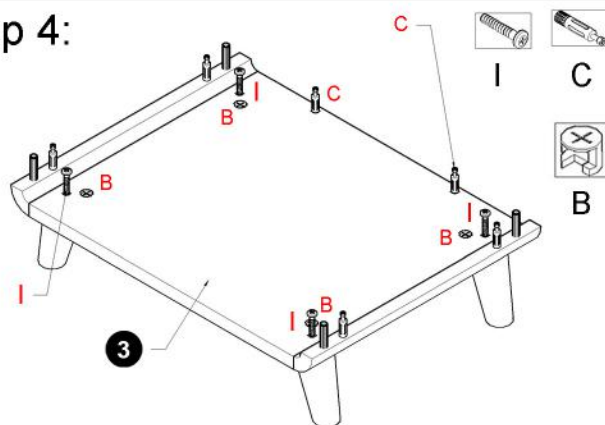


Note: The reserved holes on Panel 3 for part I may not be fully drilled through. It is recommended to use the ES001 electric screwdriver to assist in installing part I.

Step 5:

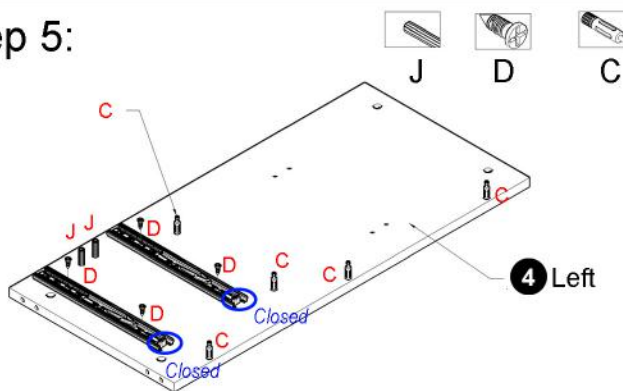


Install the K main body part using D. Make sure the blocked/closed side of the K part faces the back.

Step 6:

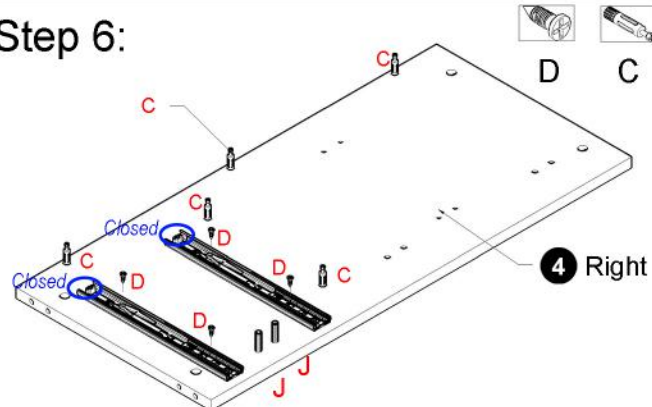


Repeat the same steps on the other side, keeping it symmetrical.

Step 7:

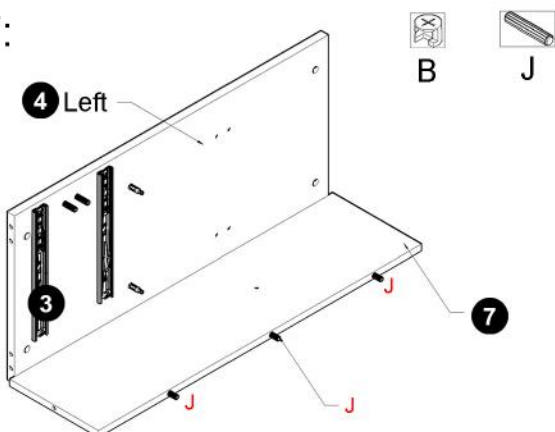


Secure from the back using part B.

Step 8:

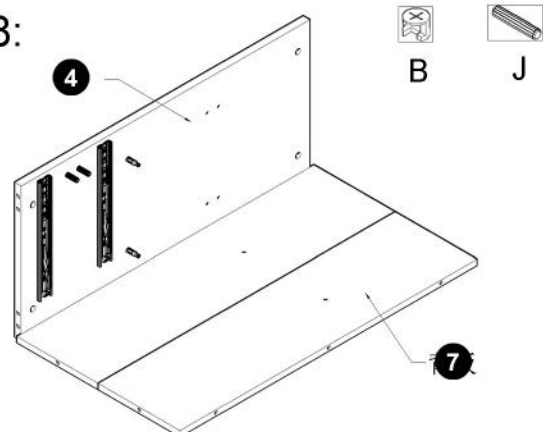


Connect the two No.7 panels.

Step 9:

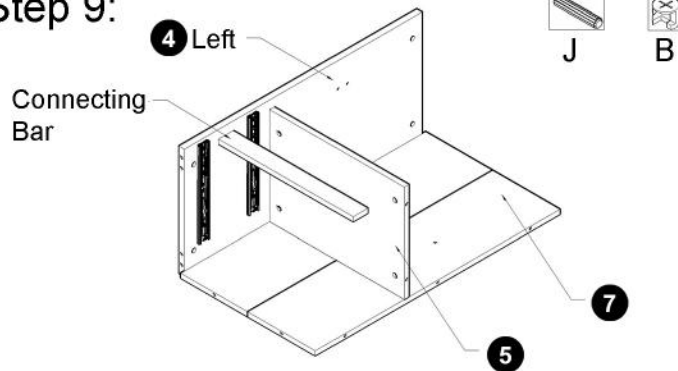


Join the corresponding holes of panels, and secure with B

Step 10:

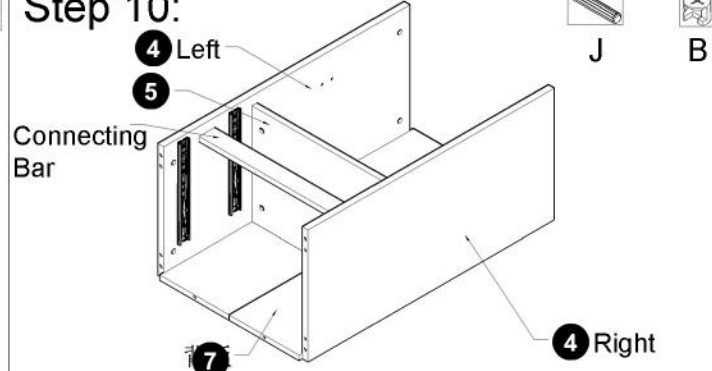


Join the corresponding holes of panels, and secure with B

Step 11:

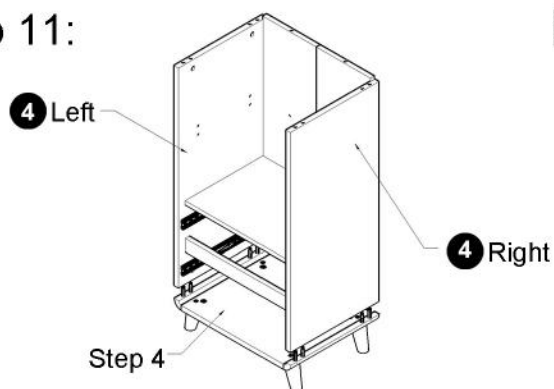


Secure all joints with B

Step 12:

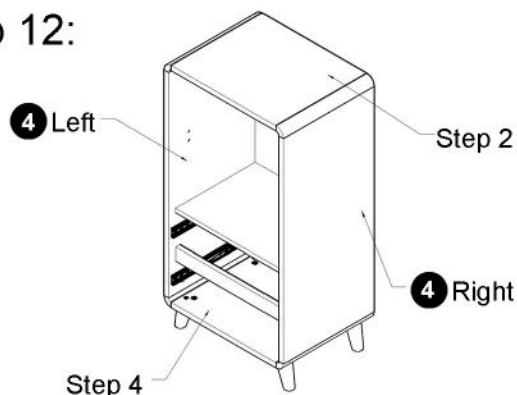


Secure all joints with B

Step 13:

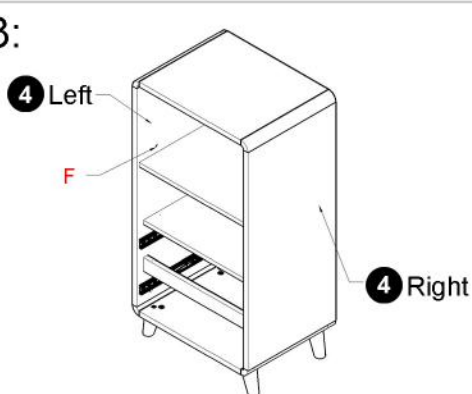


Step 14:

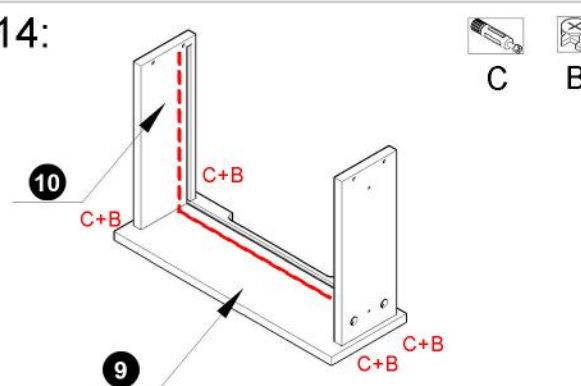


Note: The grooves on panel 10 must align with the grooves on panel 9, and secure all joints with B

Step 15:

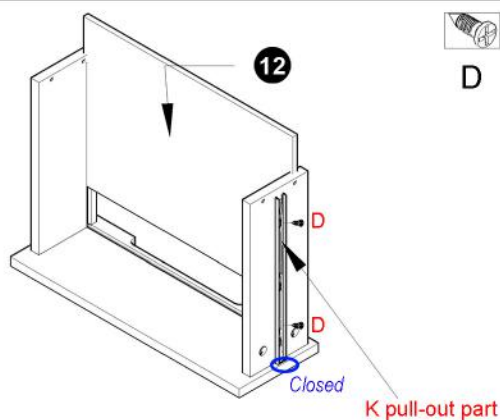


Insert panel 12 as indicated by the arrow. Position the pull out part of K on the outside of both panel 10s. Ensure the stopper side of K rests against panel 9

Step 16:

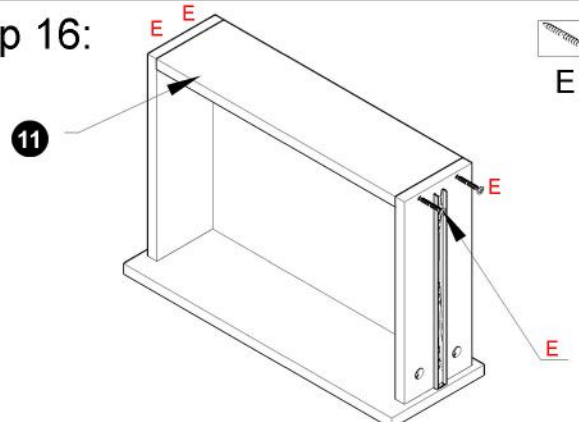


Step 17:

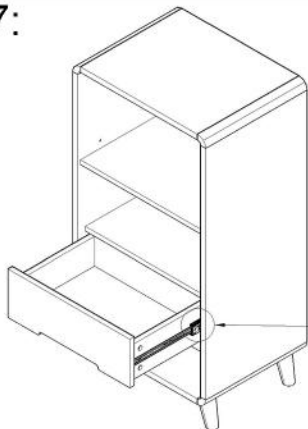


Pull the K part fixed to panels 4 to its full length, with the silver ball-bearing section at the front. Insert the small tracks on both sides of the drawer into the slots, then gently push to secure.

Step 18:

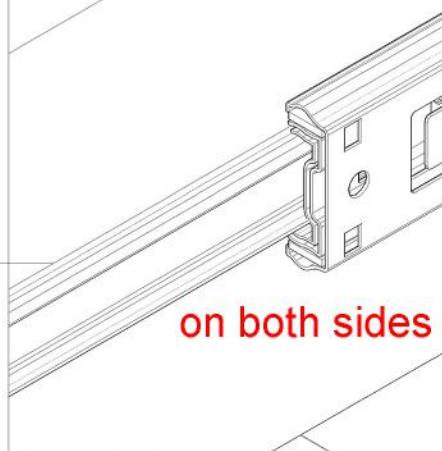


Step 19:

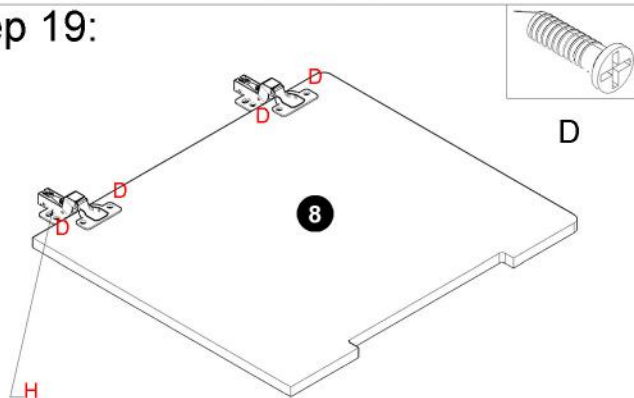

Install M onto panels 4 and 7, then place panels 9 and 10 onto M

Step 20:

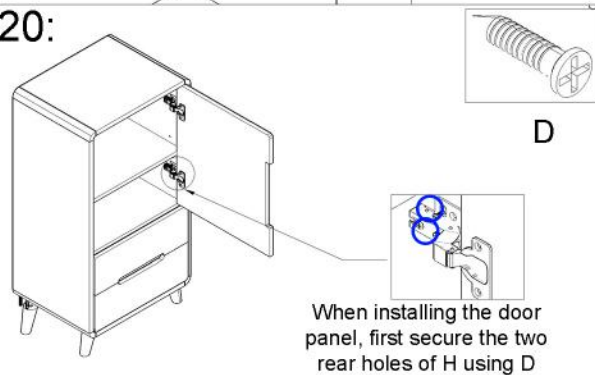

First, secure the rear two holes of H, then install the front two holes. Refer to the initial hinge installation instructions to adjust the door's height and gap.

Note: When installing H, if you encounter resistance while tightening the screws, stop immediately. Continuing to apply force may cause the threads to strip or damage the mechanism.

