

BAR003

Installation

Instruction



Please read this instruction manual carefully before installation and use.

Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:











1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.




Scan the code to purchase ES001

Hardware List

Accessory Appearance	Code	Accessory Appearance	Code
	A		F
	B		G
	C		H
	D		I
	E		J


Please have a small hammer ready (not included).

Step 1:

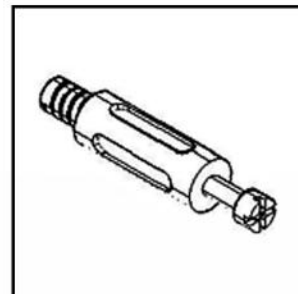


B


Down

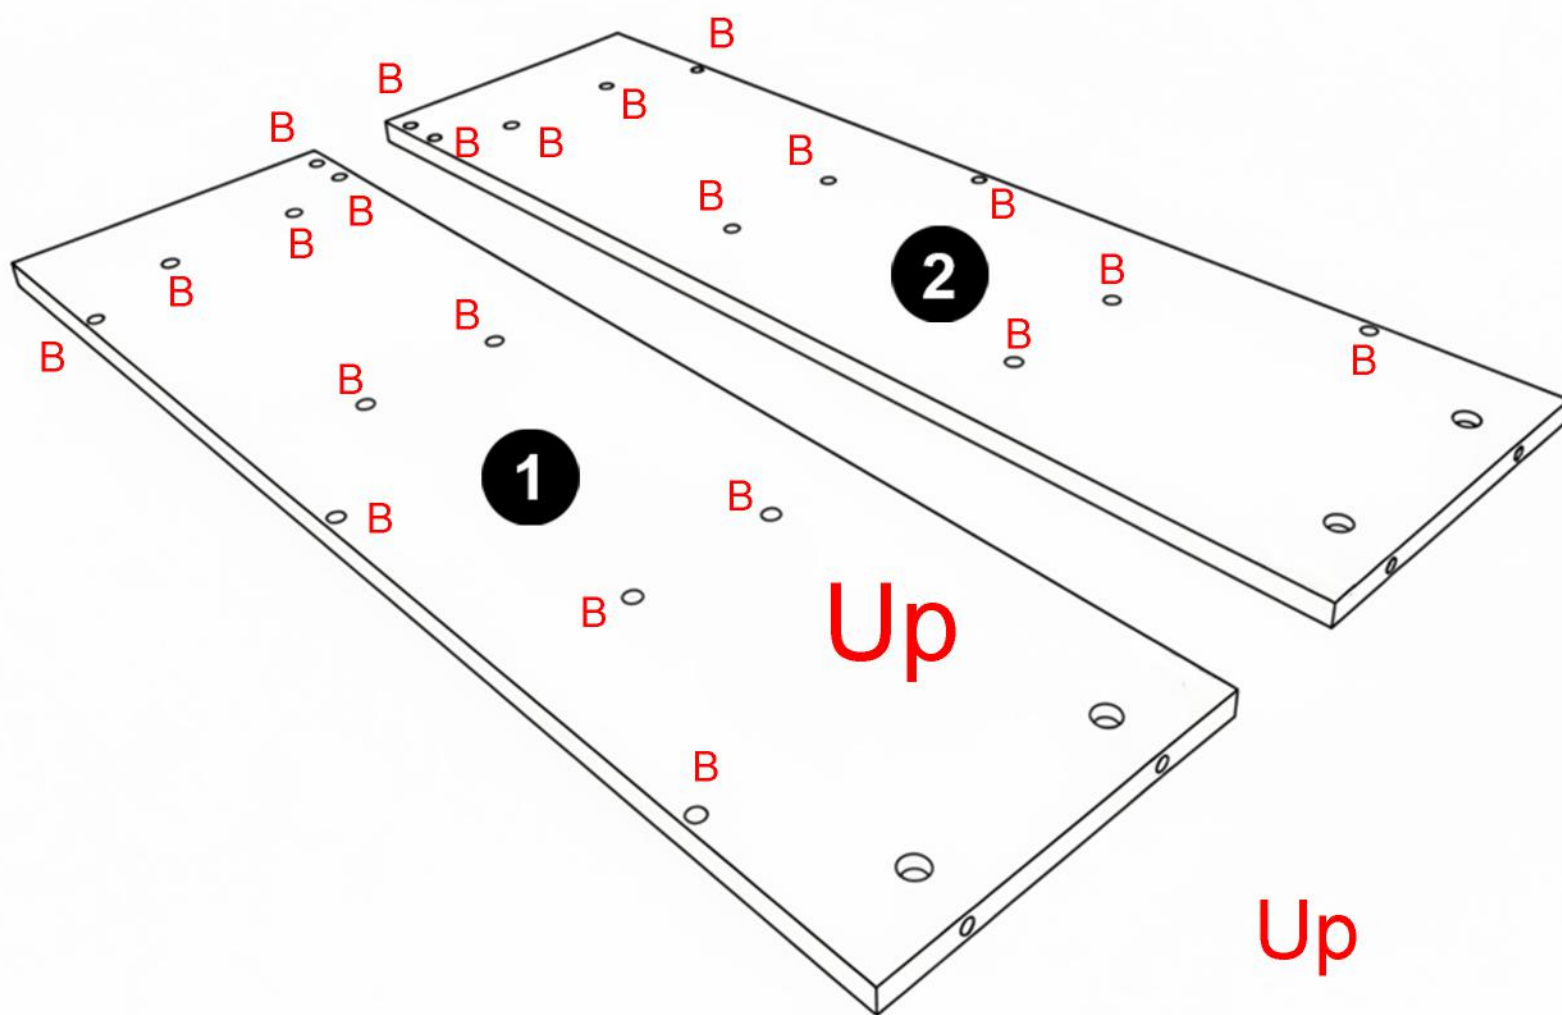


Step 2:

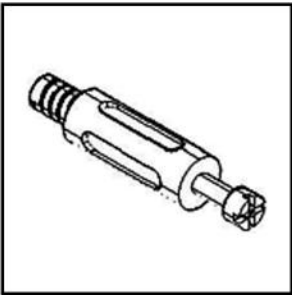


B

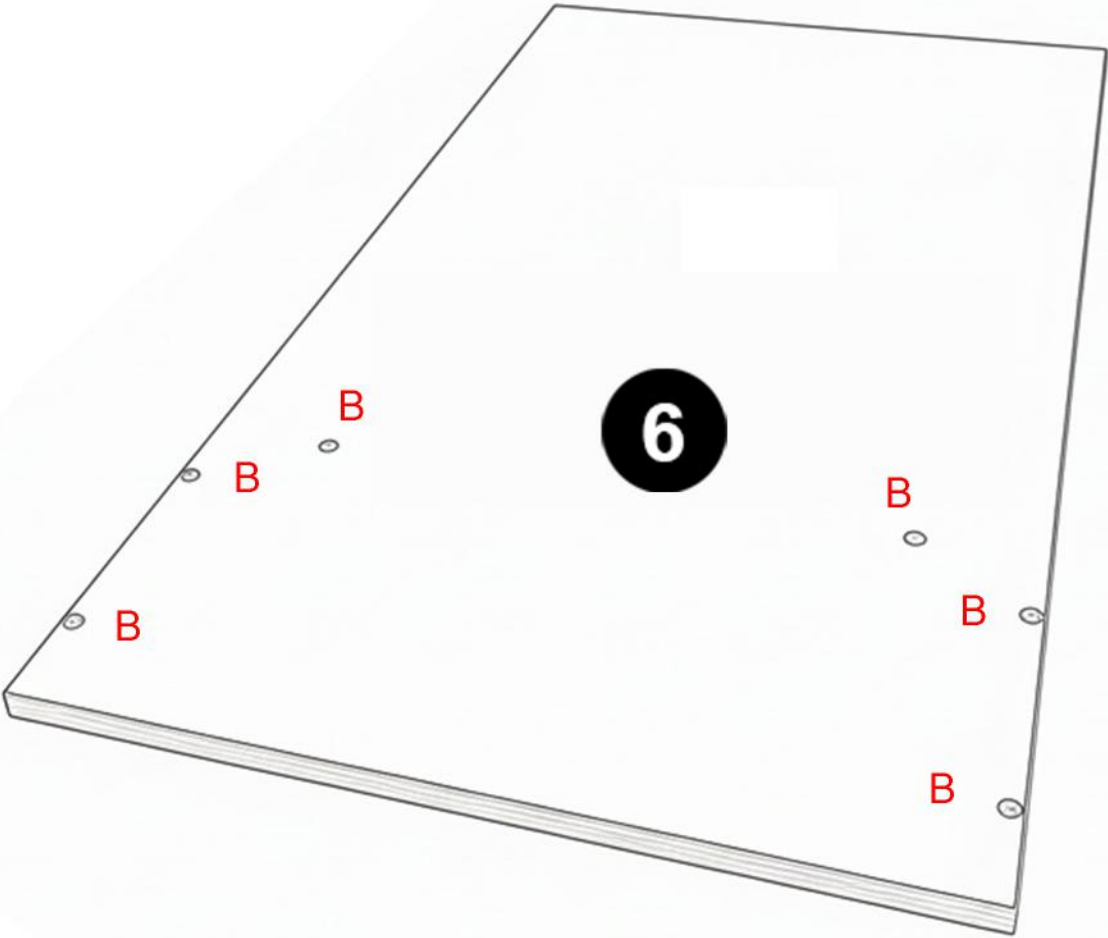


Step 3:

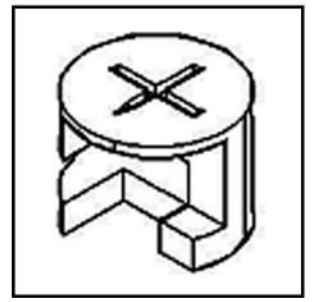

A

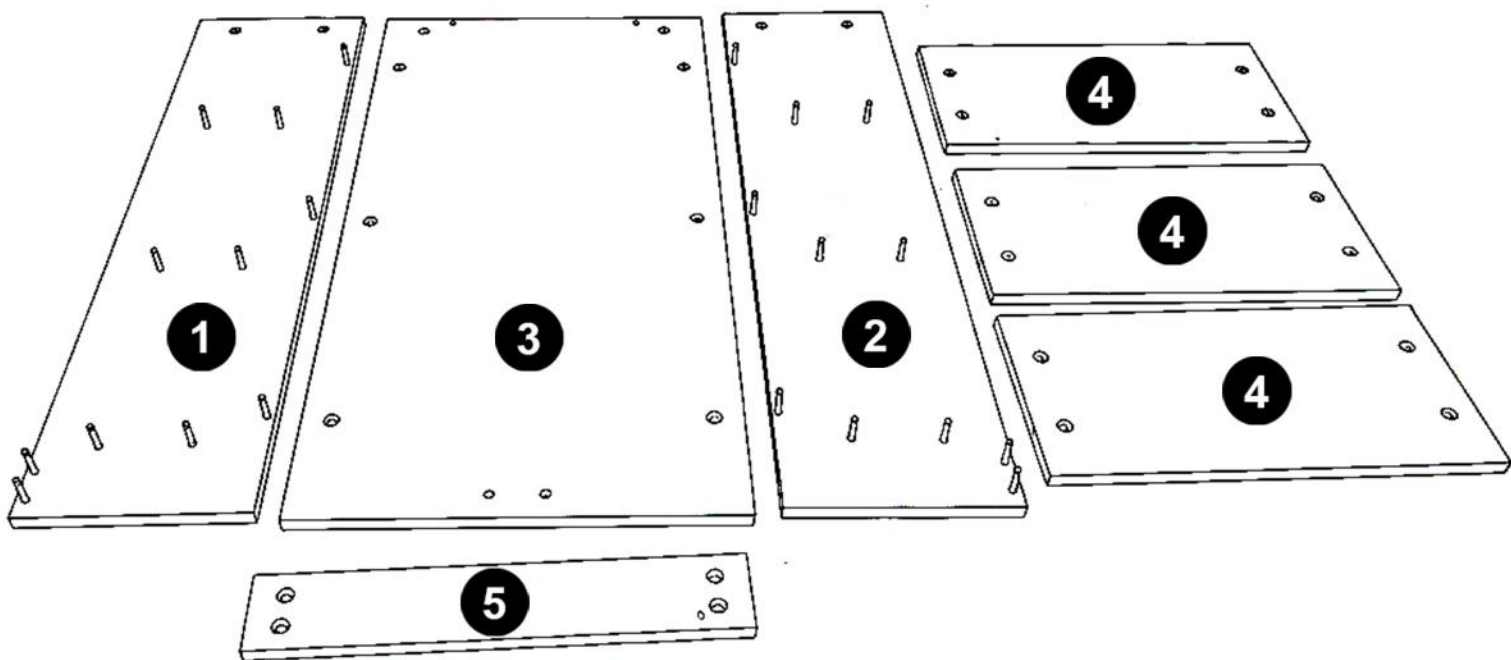


Step 4:

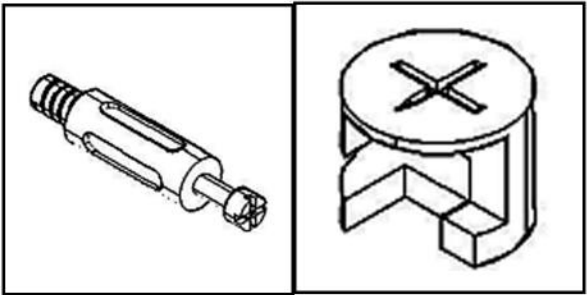


B


A

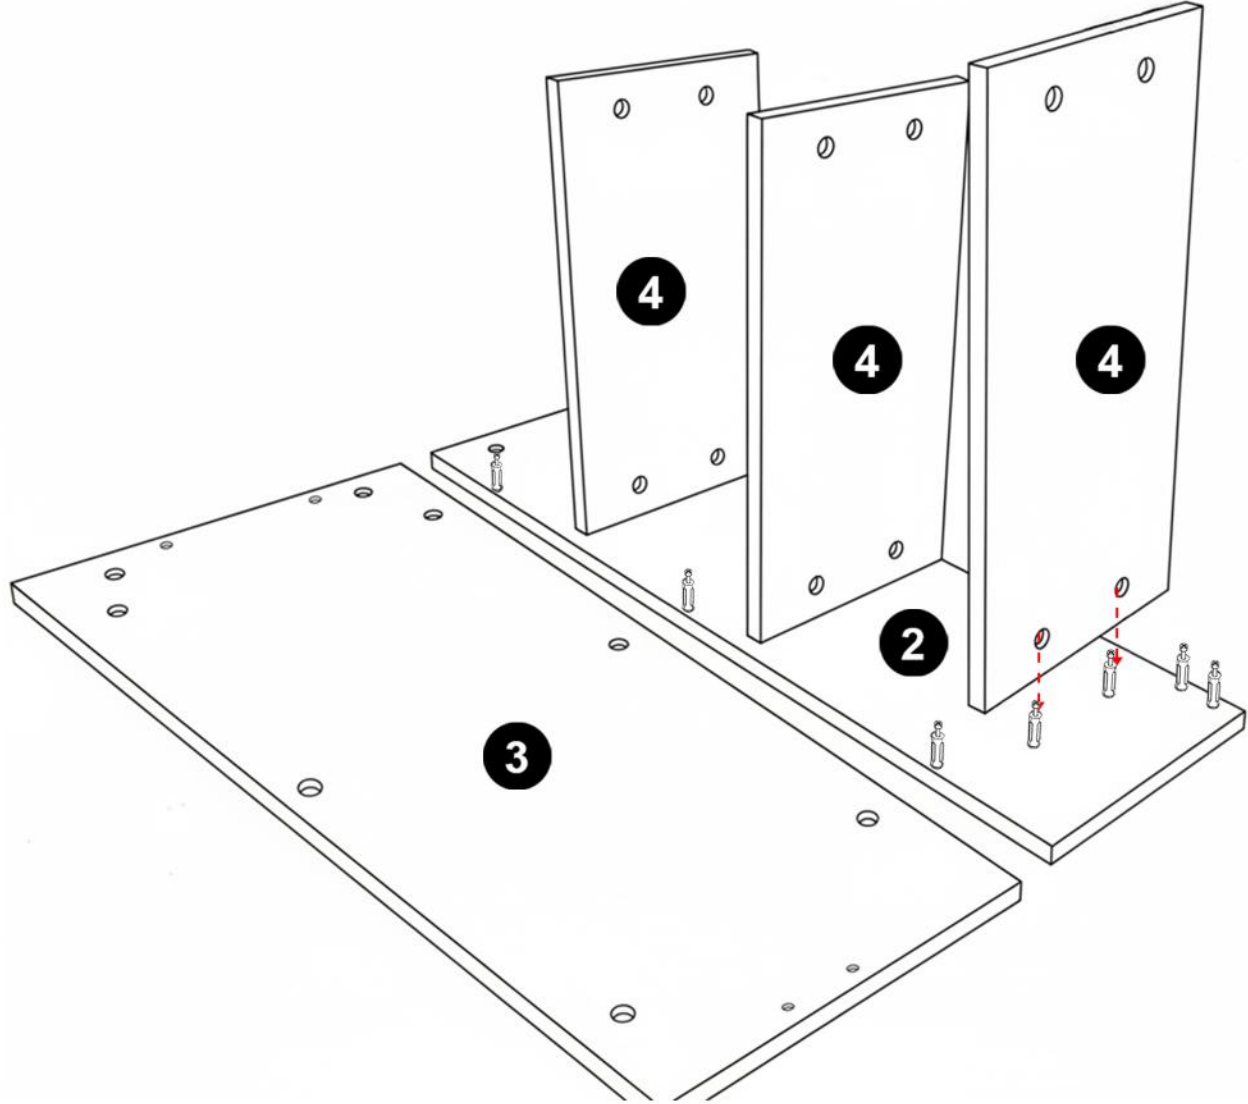

Step 5:

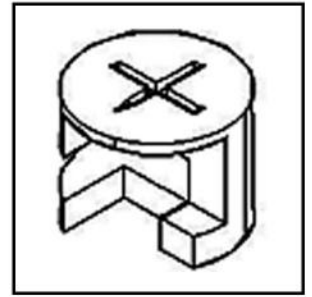


A

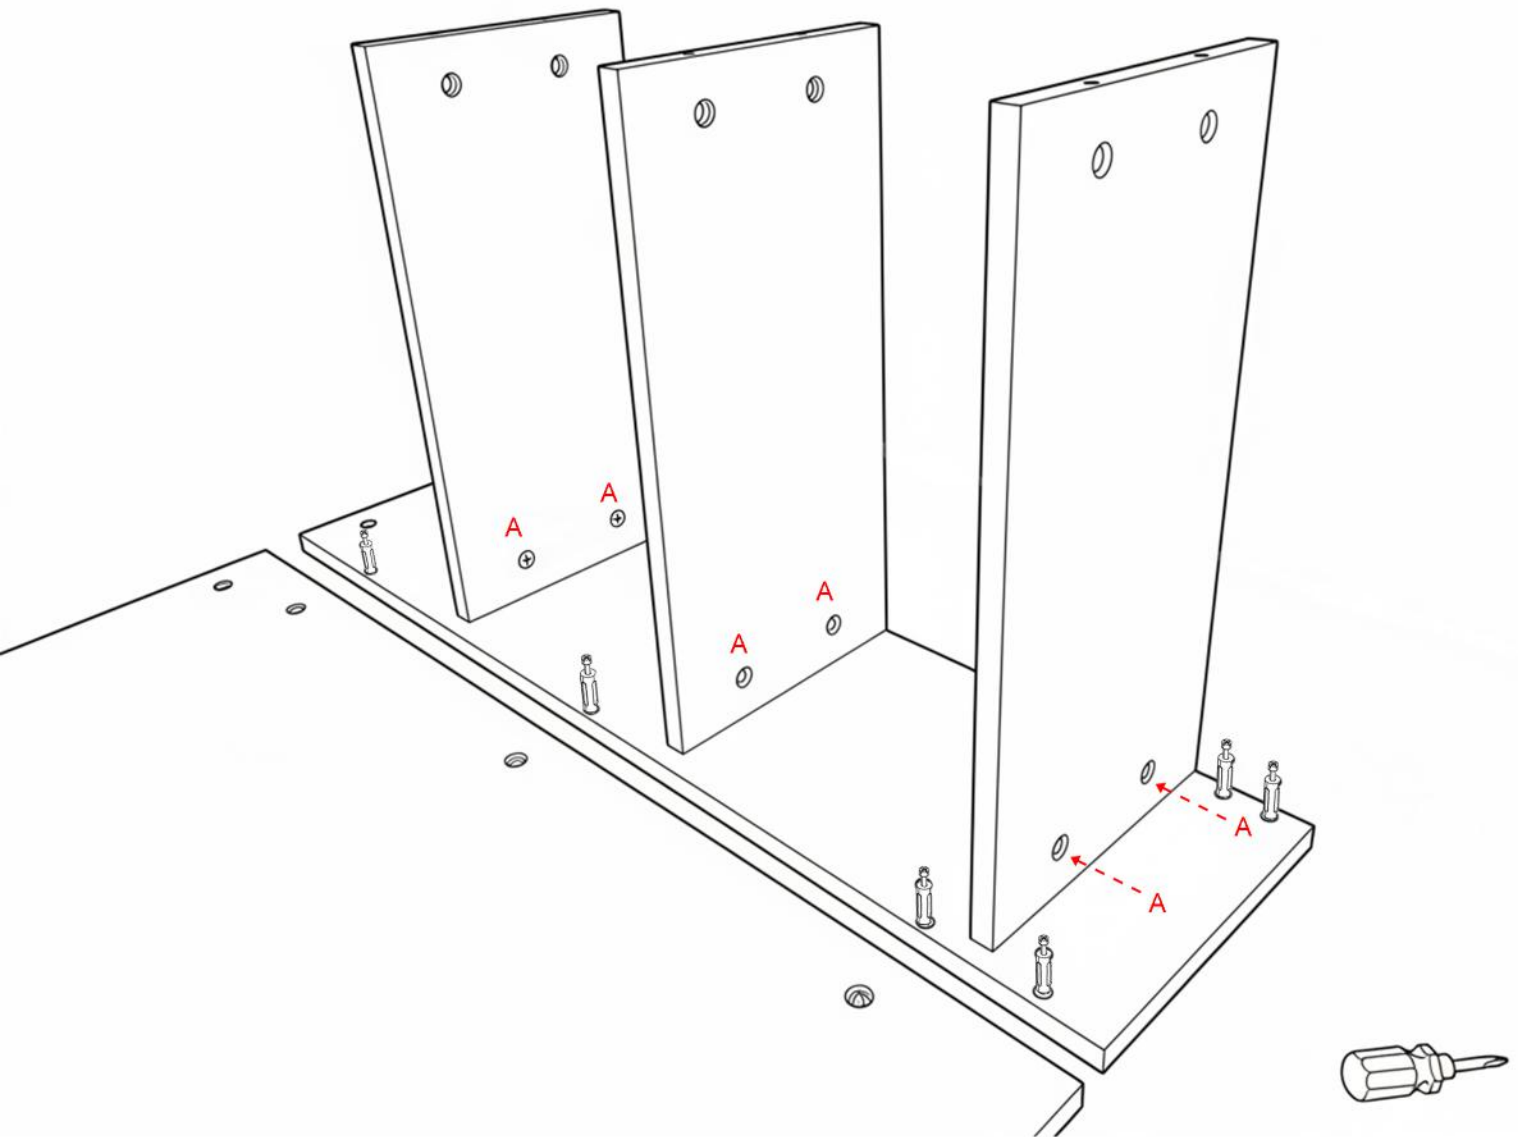


Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 6:

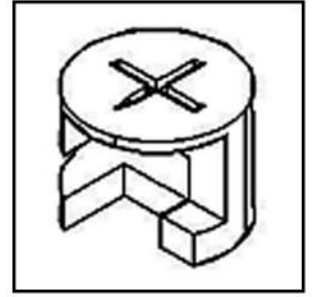


A

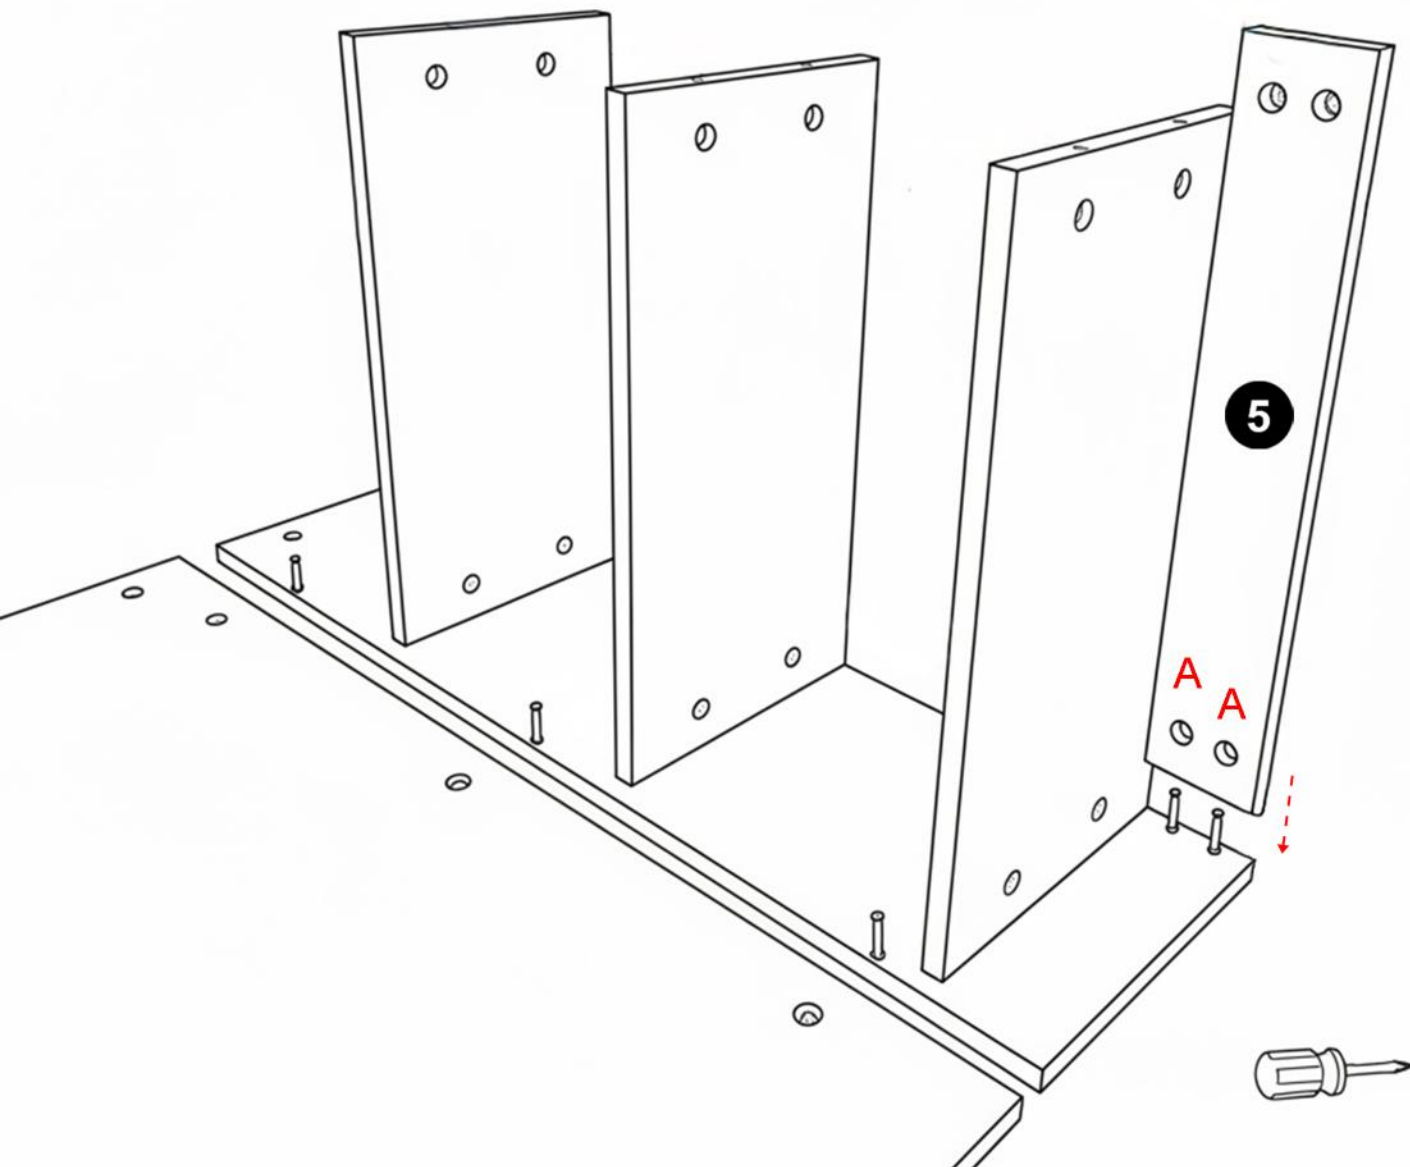


Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 7:

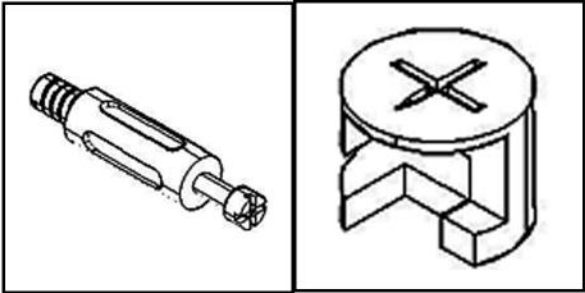


B

A

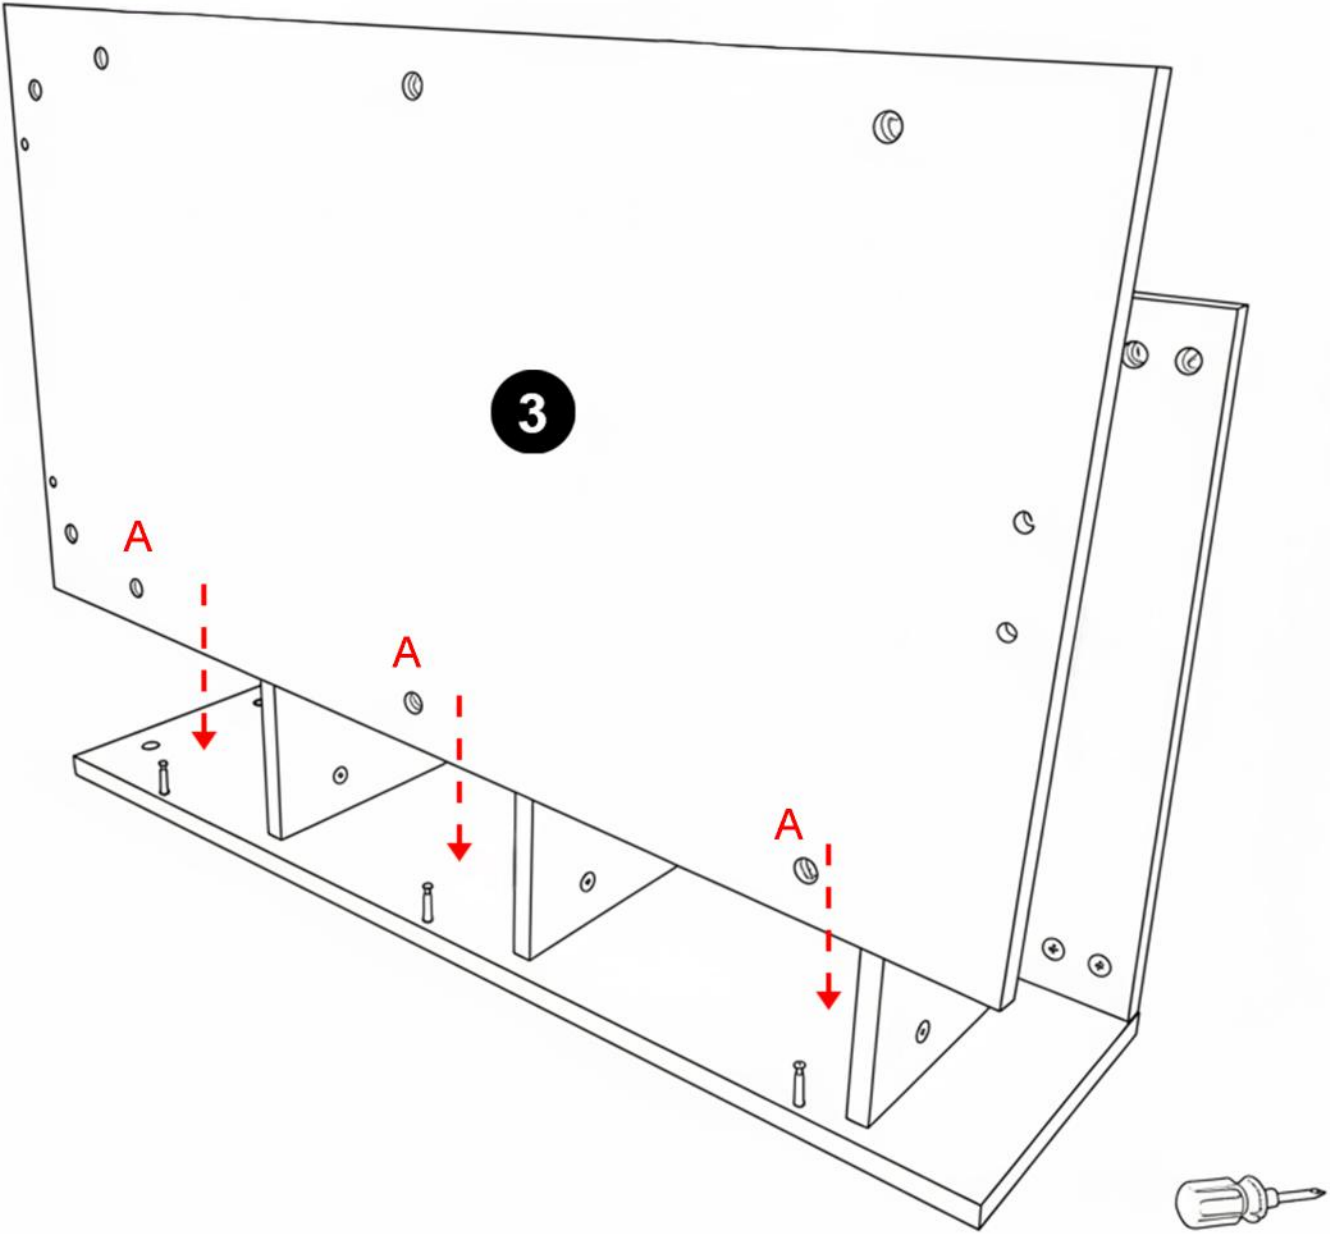


Step 8:

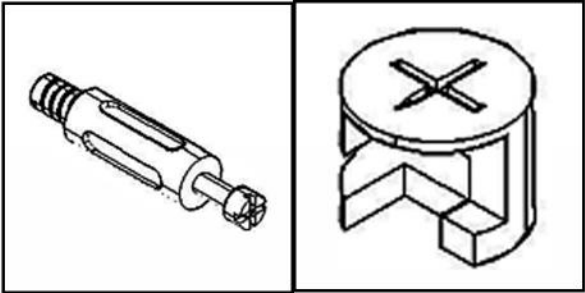


B


A

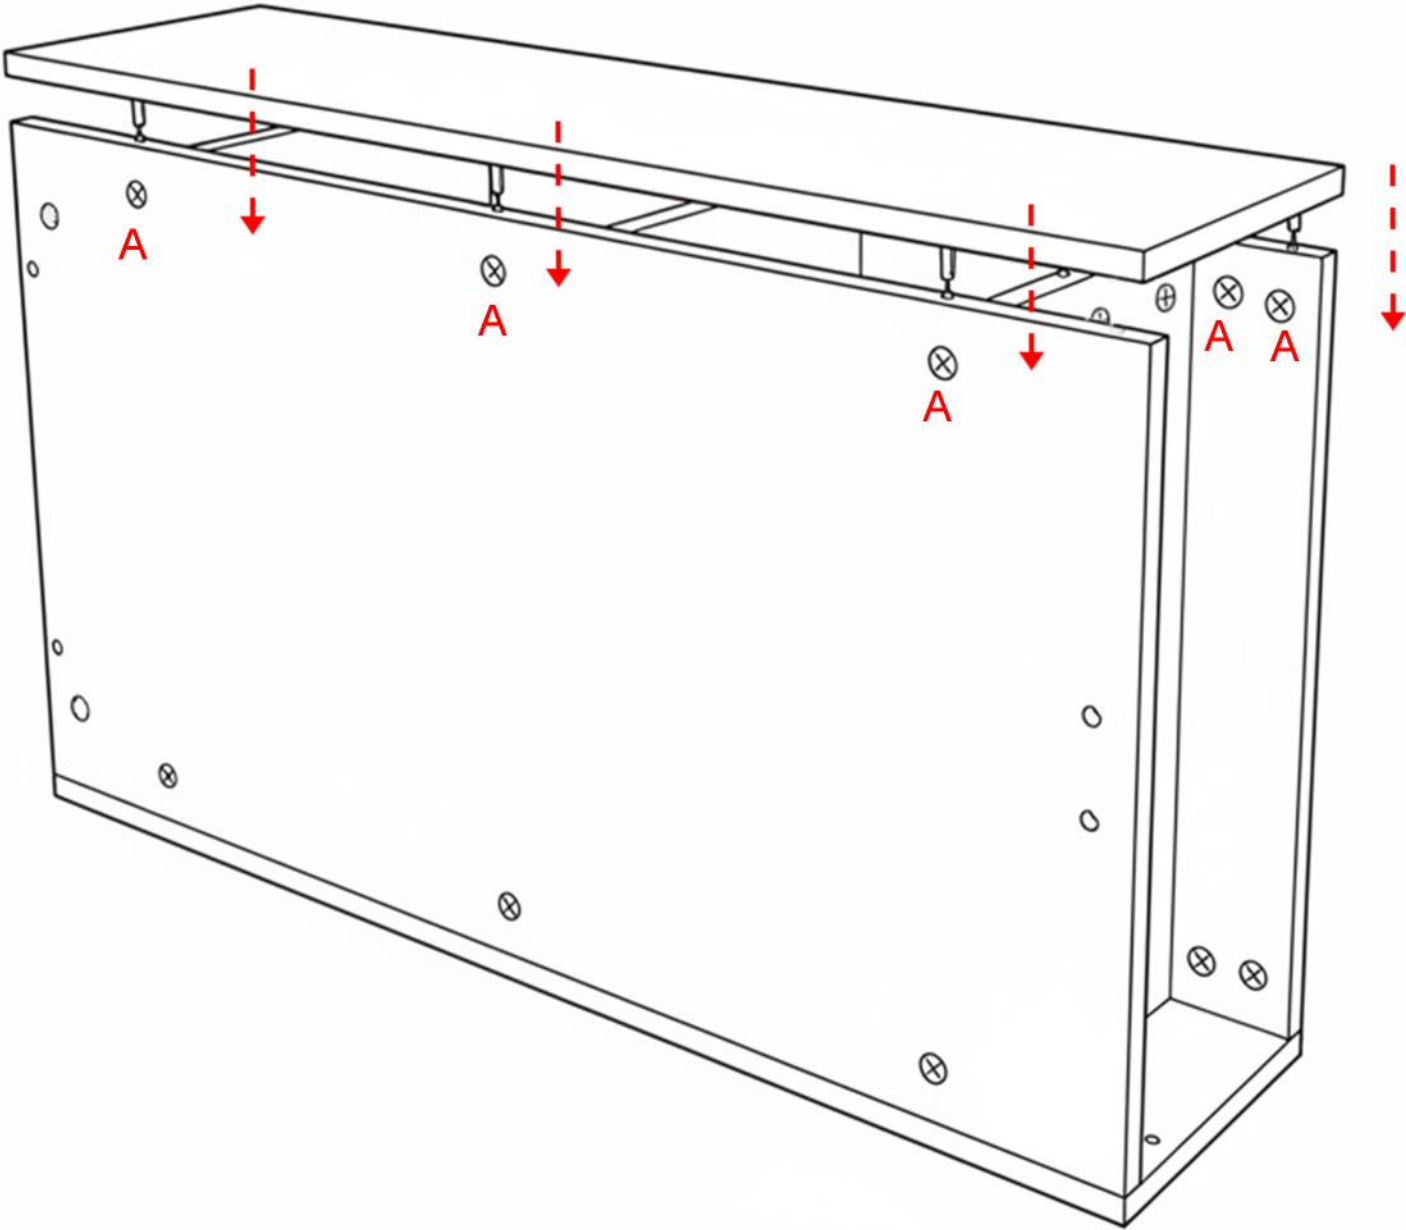

Step 9:


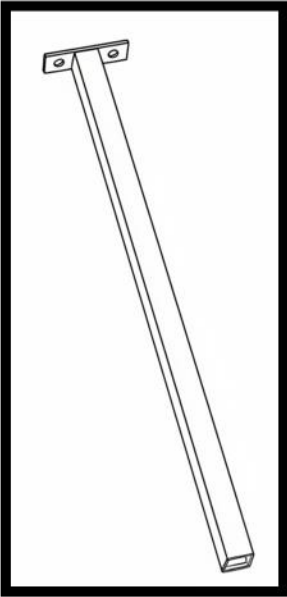


M1

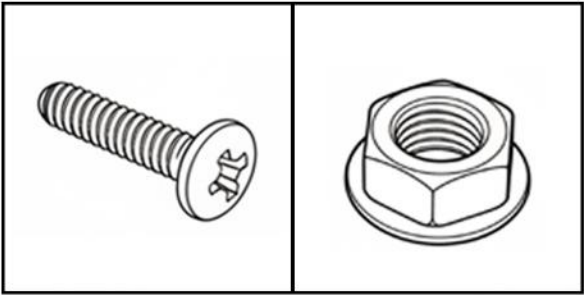


C


J

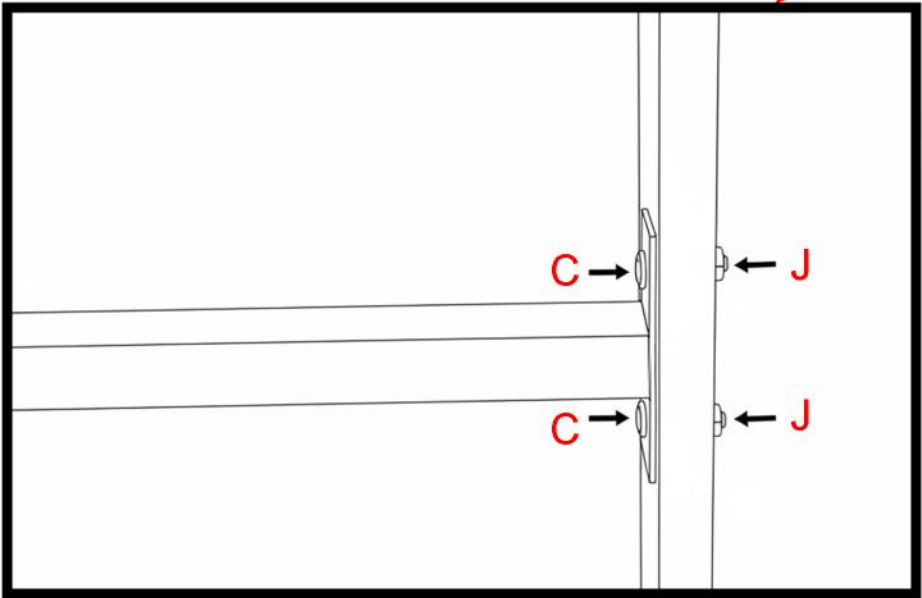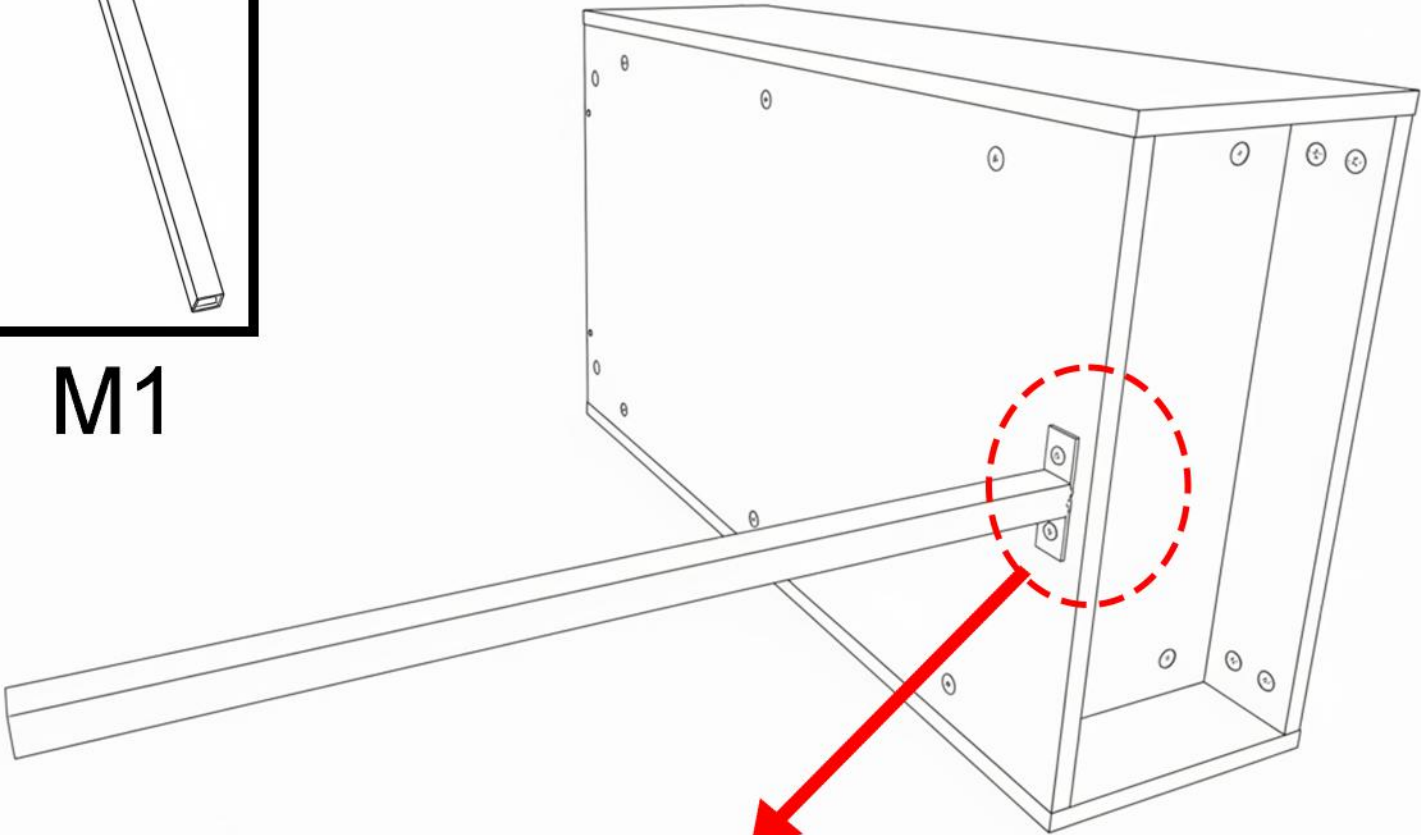

Step 10:

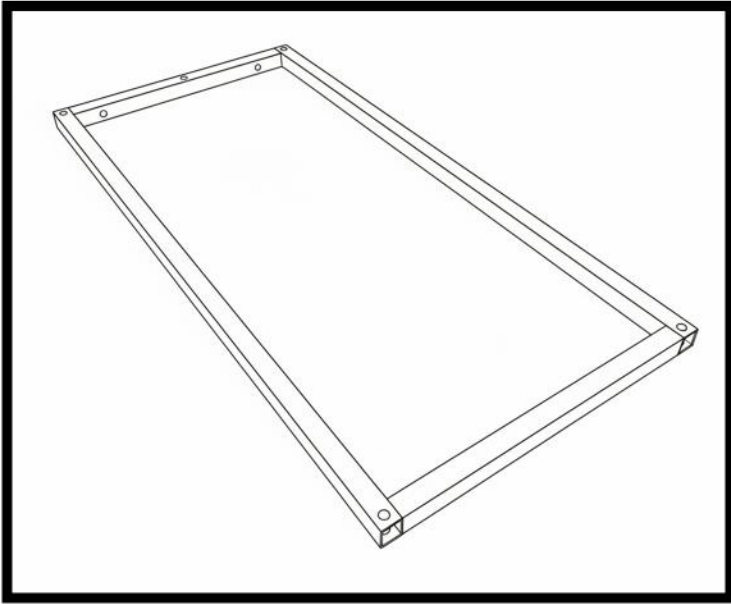


M2

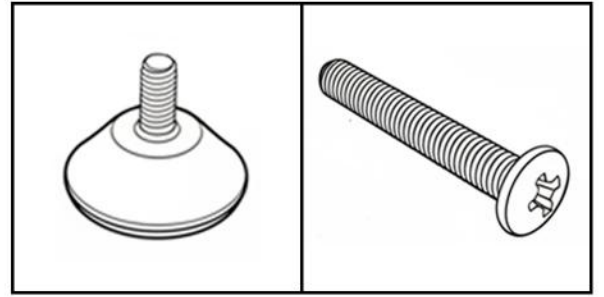


I


E

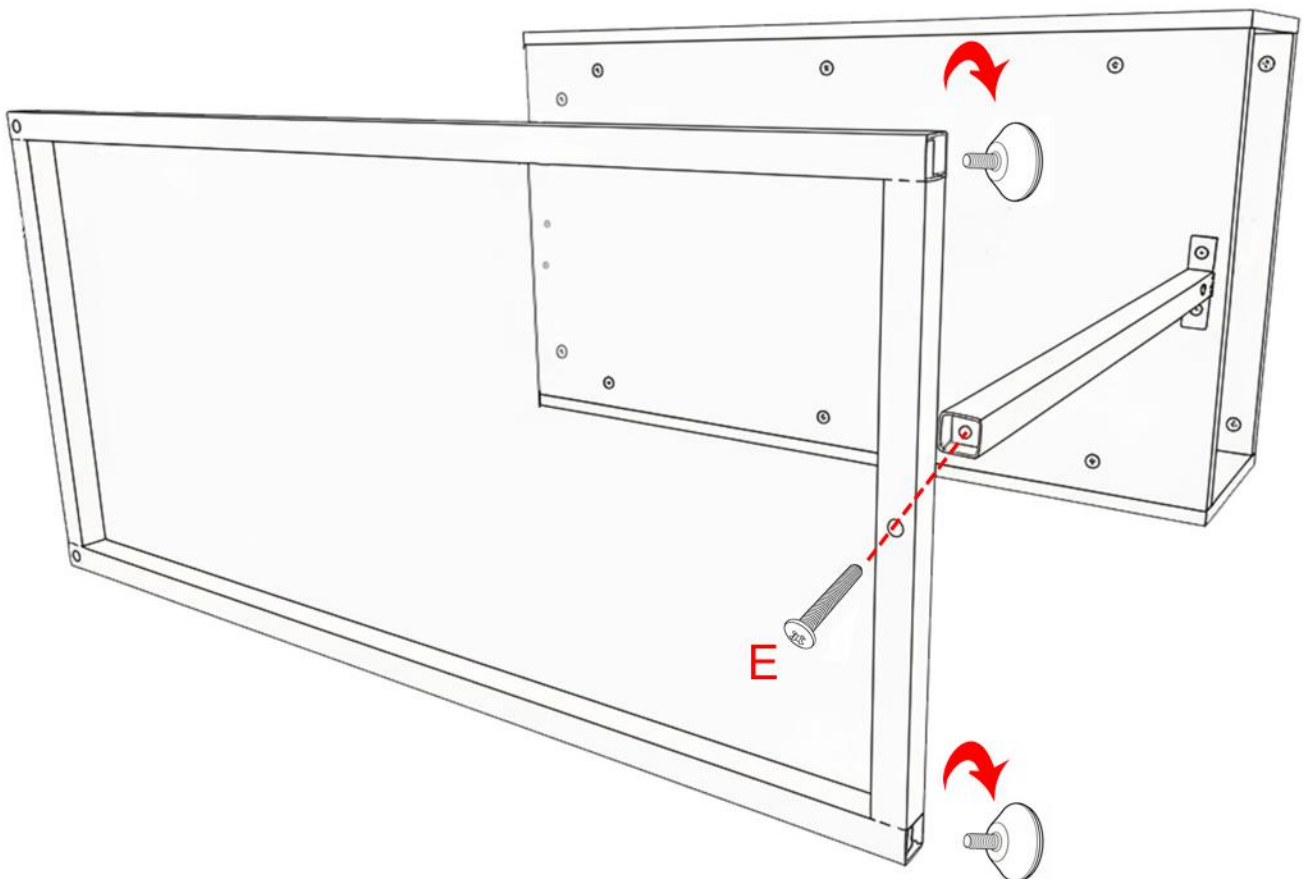


Step 11:

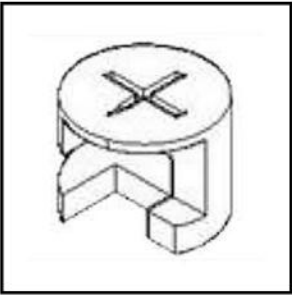

A

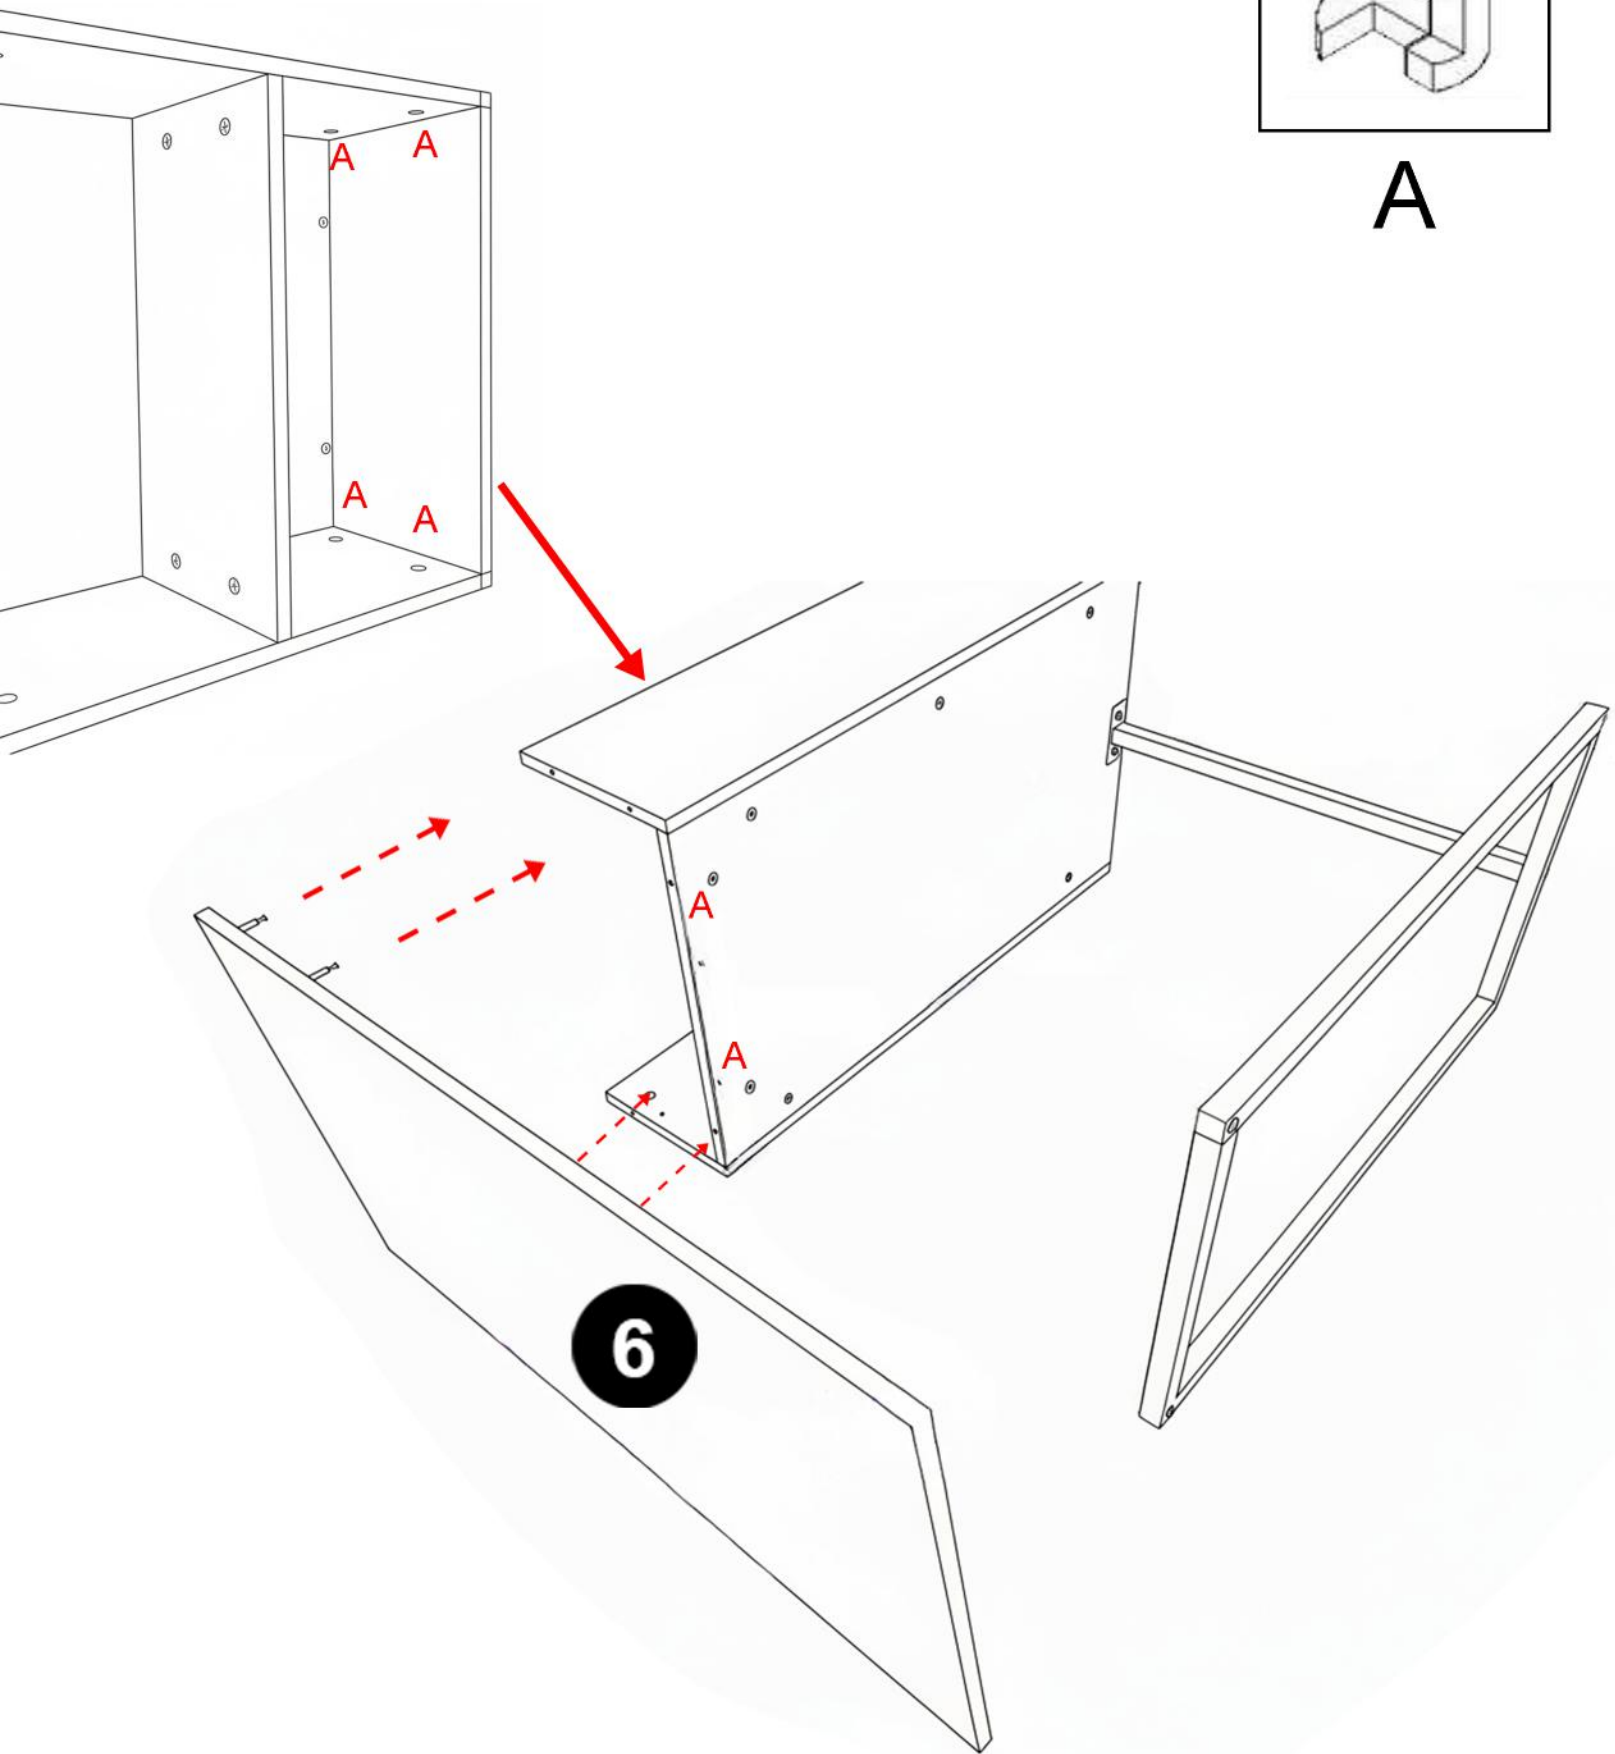



Step 12:

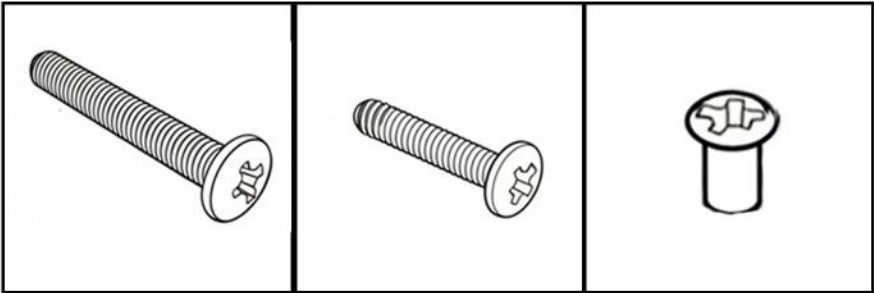


E

D


F

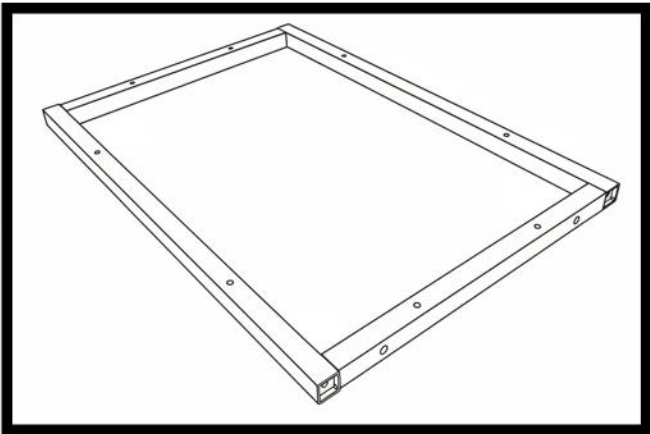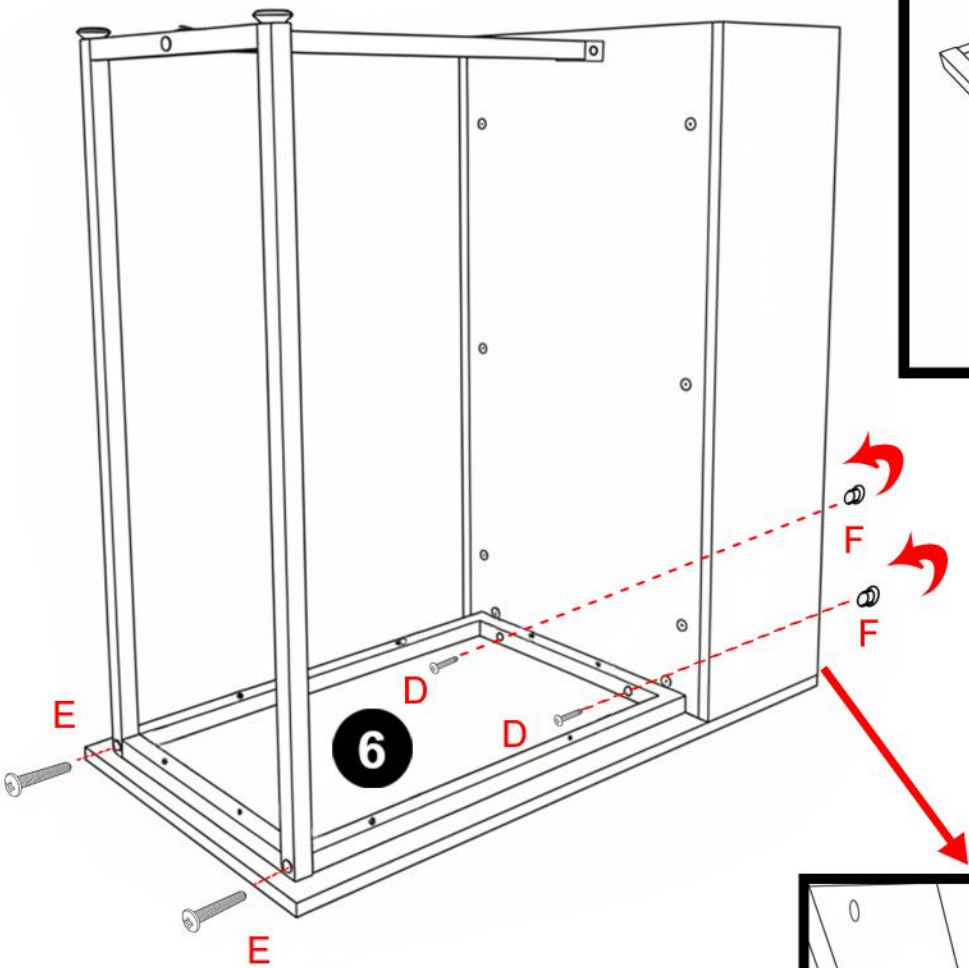


M3

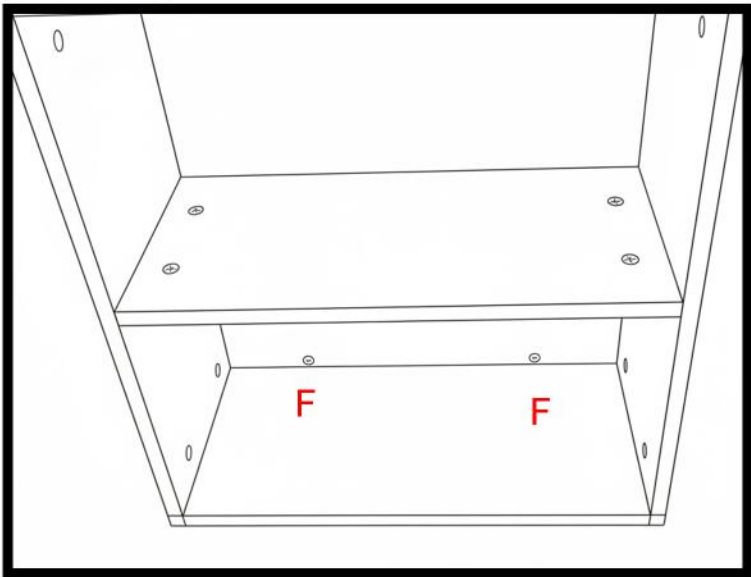

Step 13:

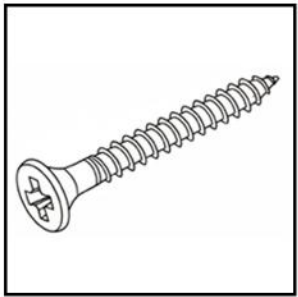


G


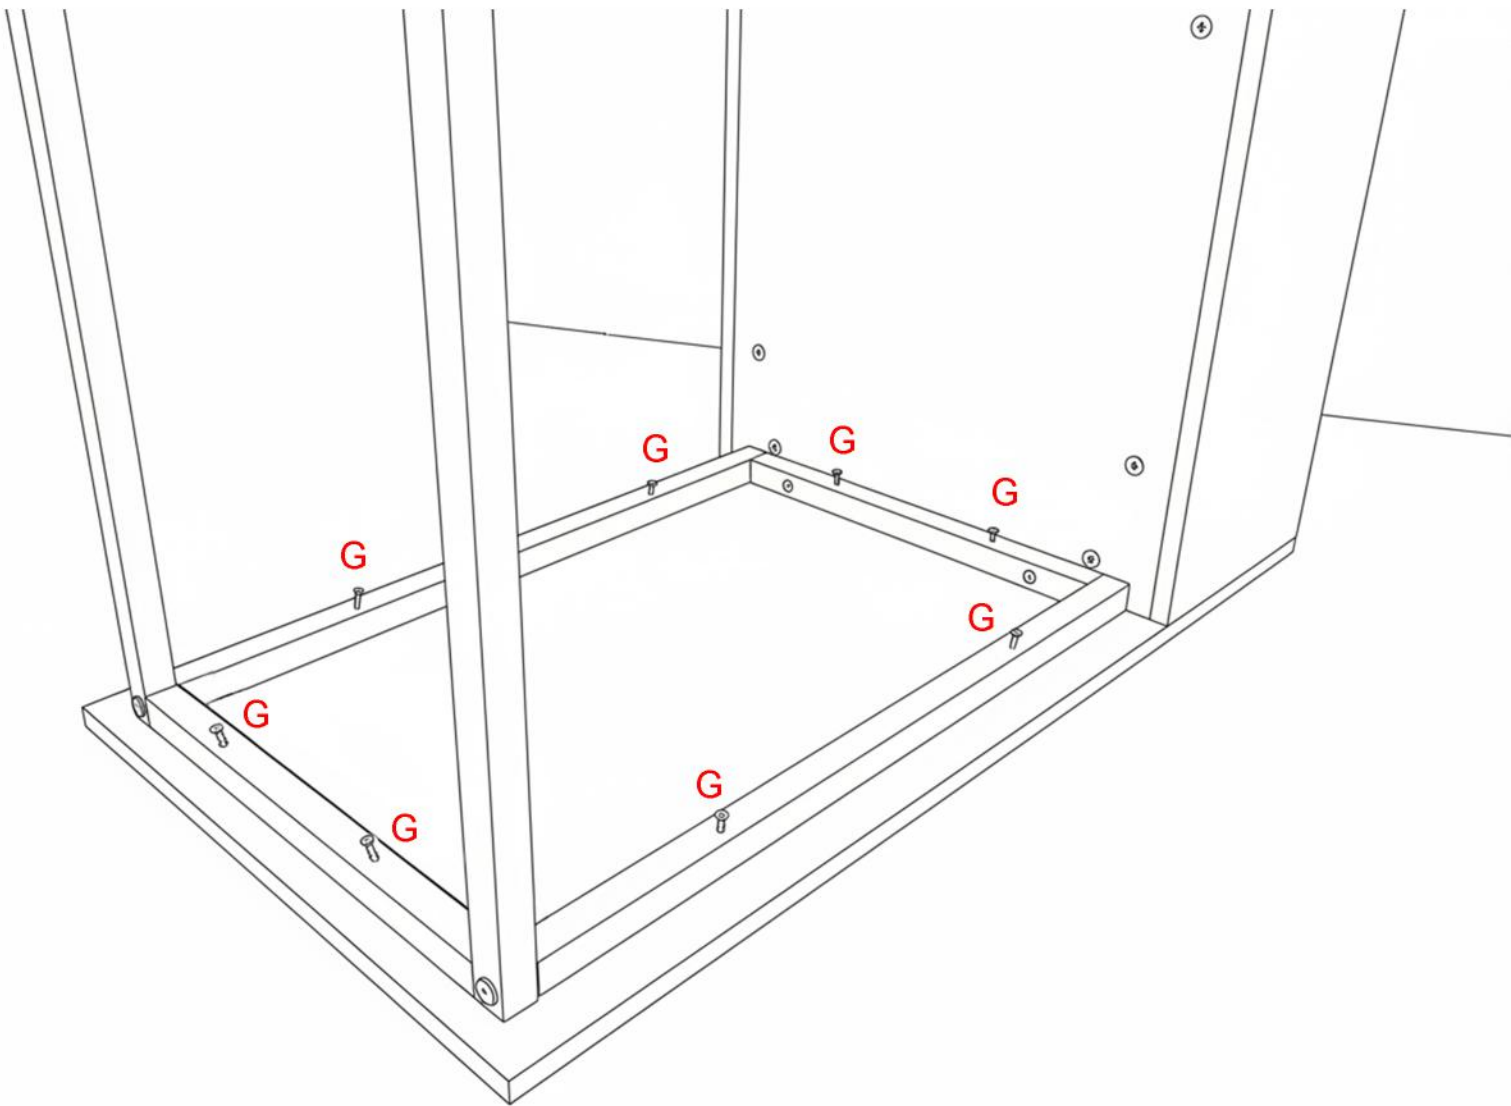


Step 14:



The black metal rods come in three sizes.
Each has an angled end—install them with
the narrower angled end facing up.

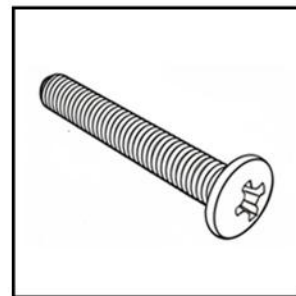


E

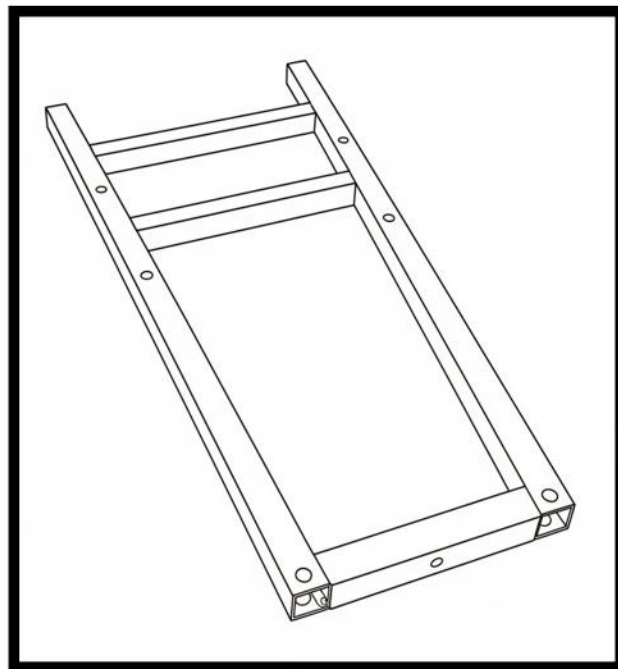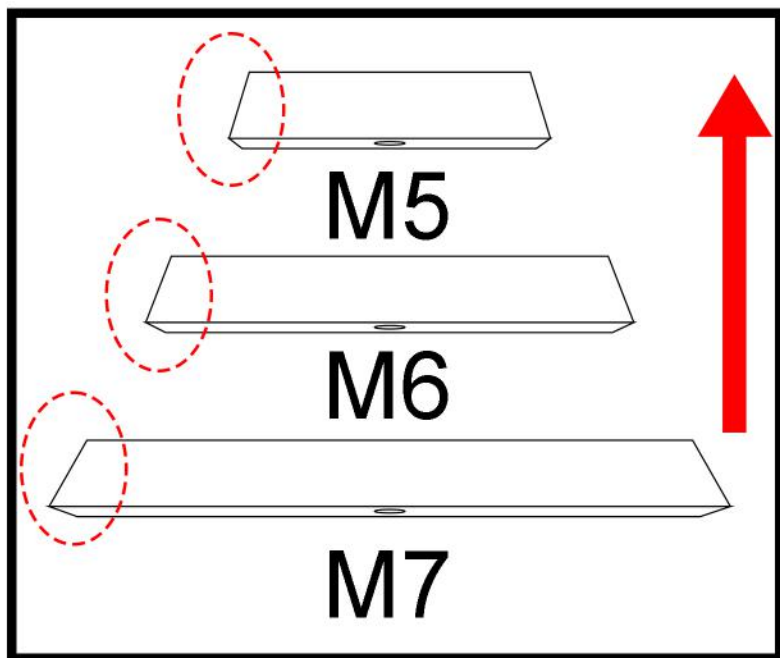


M4

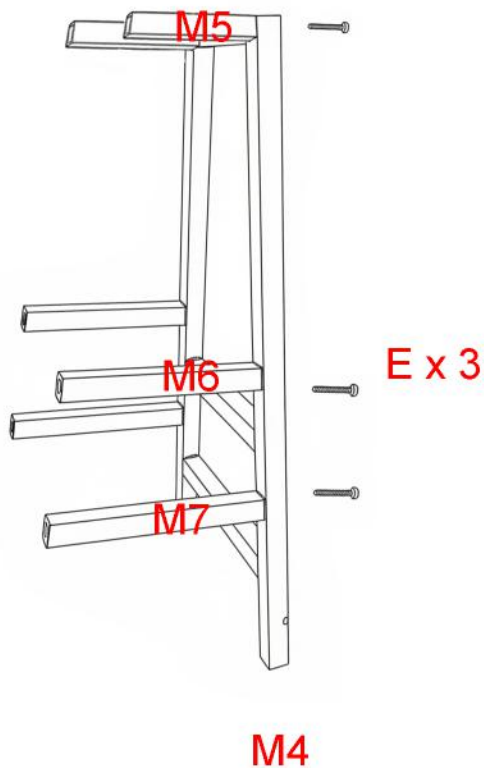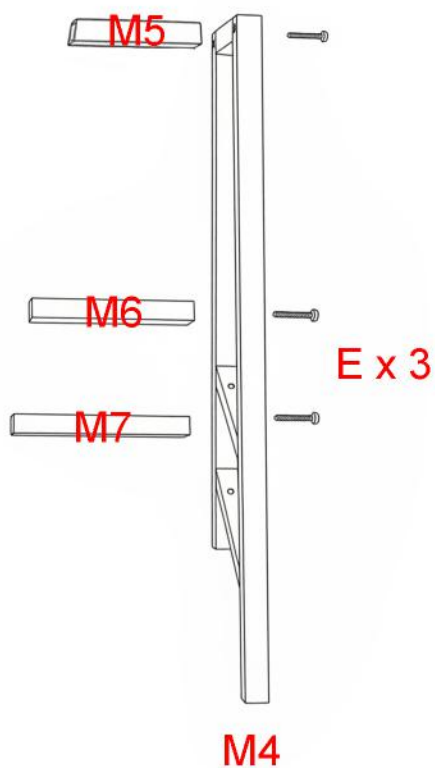

Step 14:

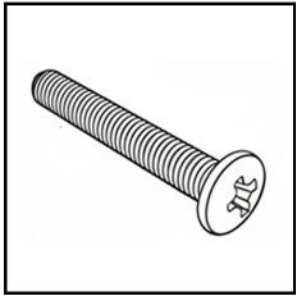

E

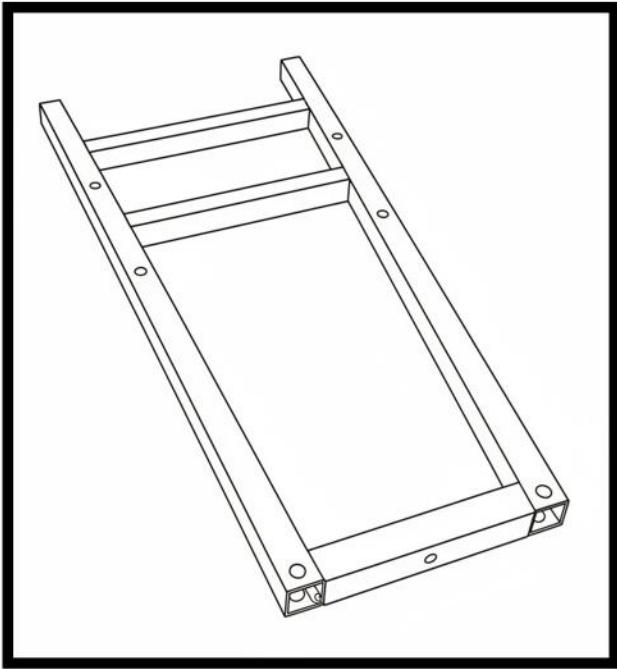

M4




M5



M6




M7

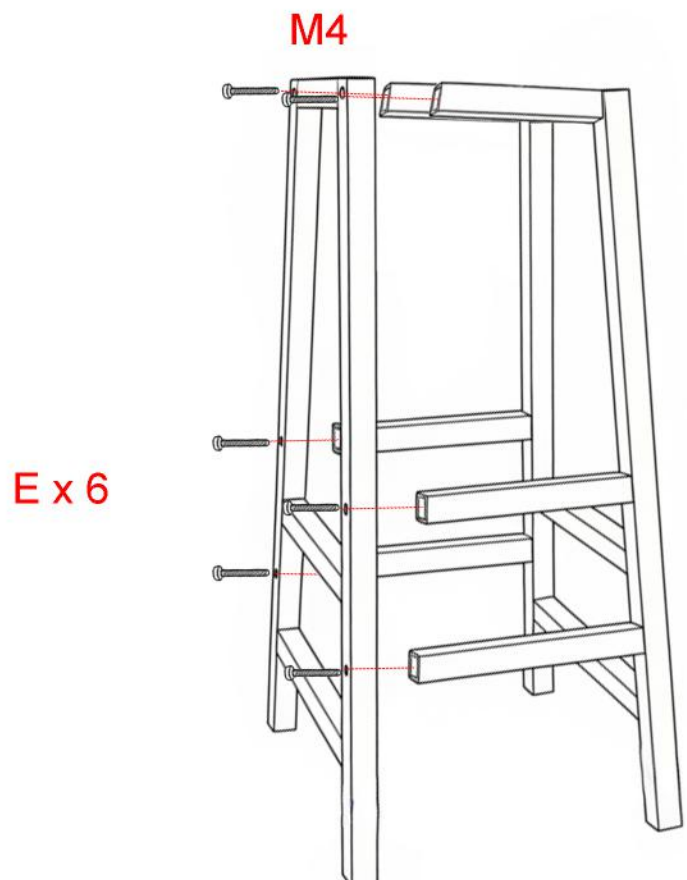




Step 15:

Use a small hammer to tap H into place (hammer not included).

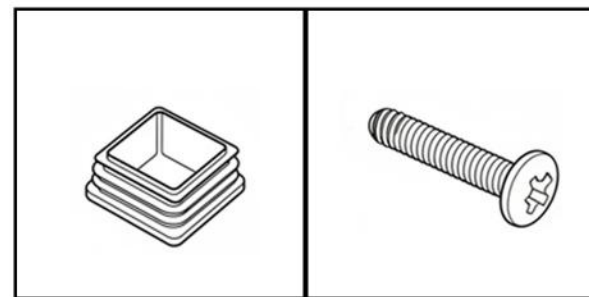

H

D

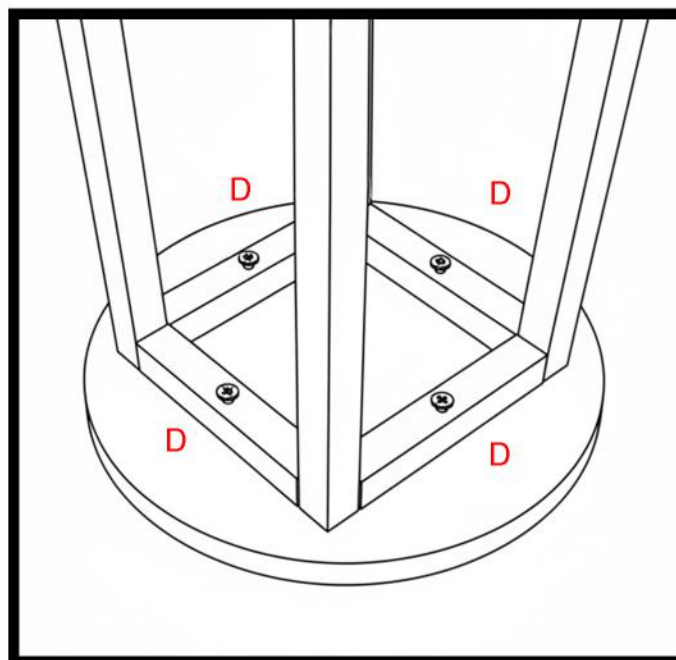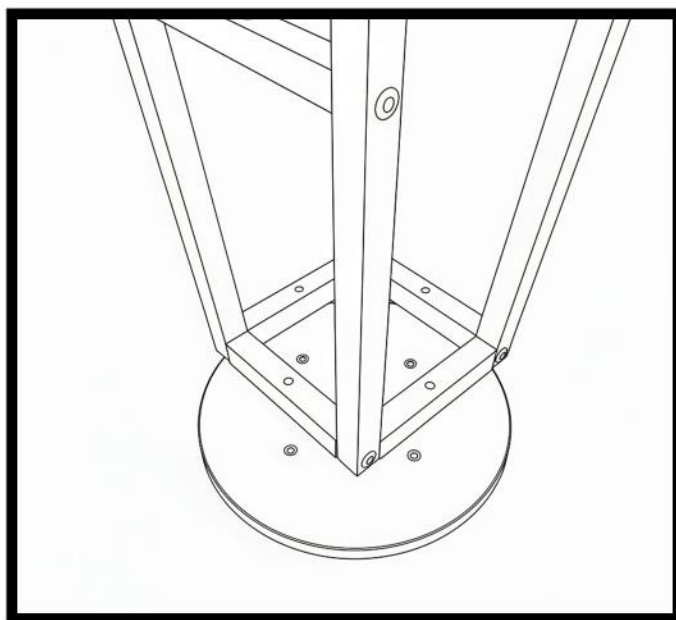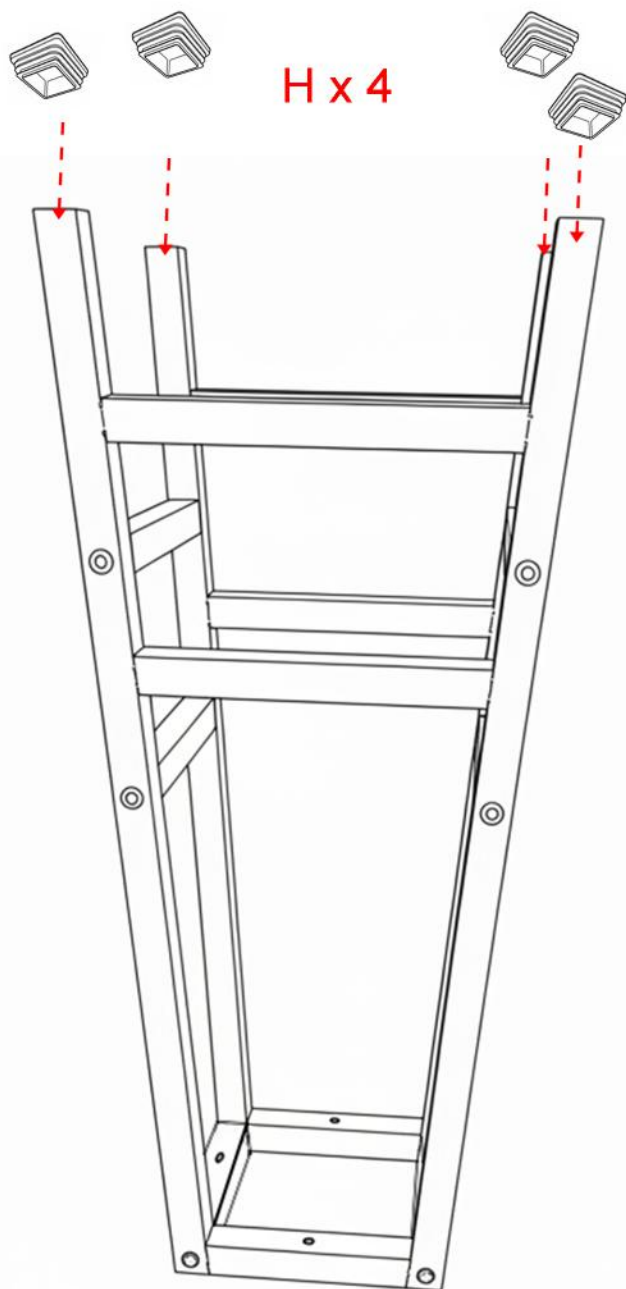



Installation finished