


SOCE055-3D

Installation Instruction

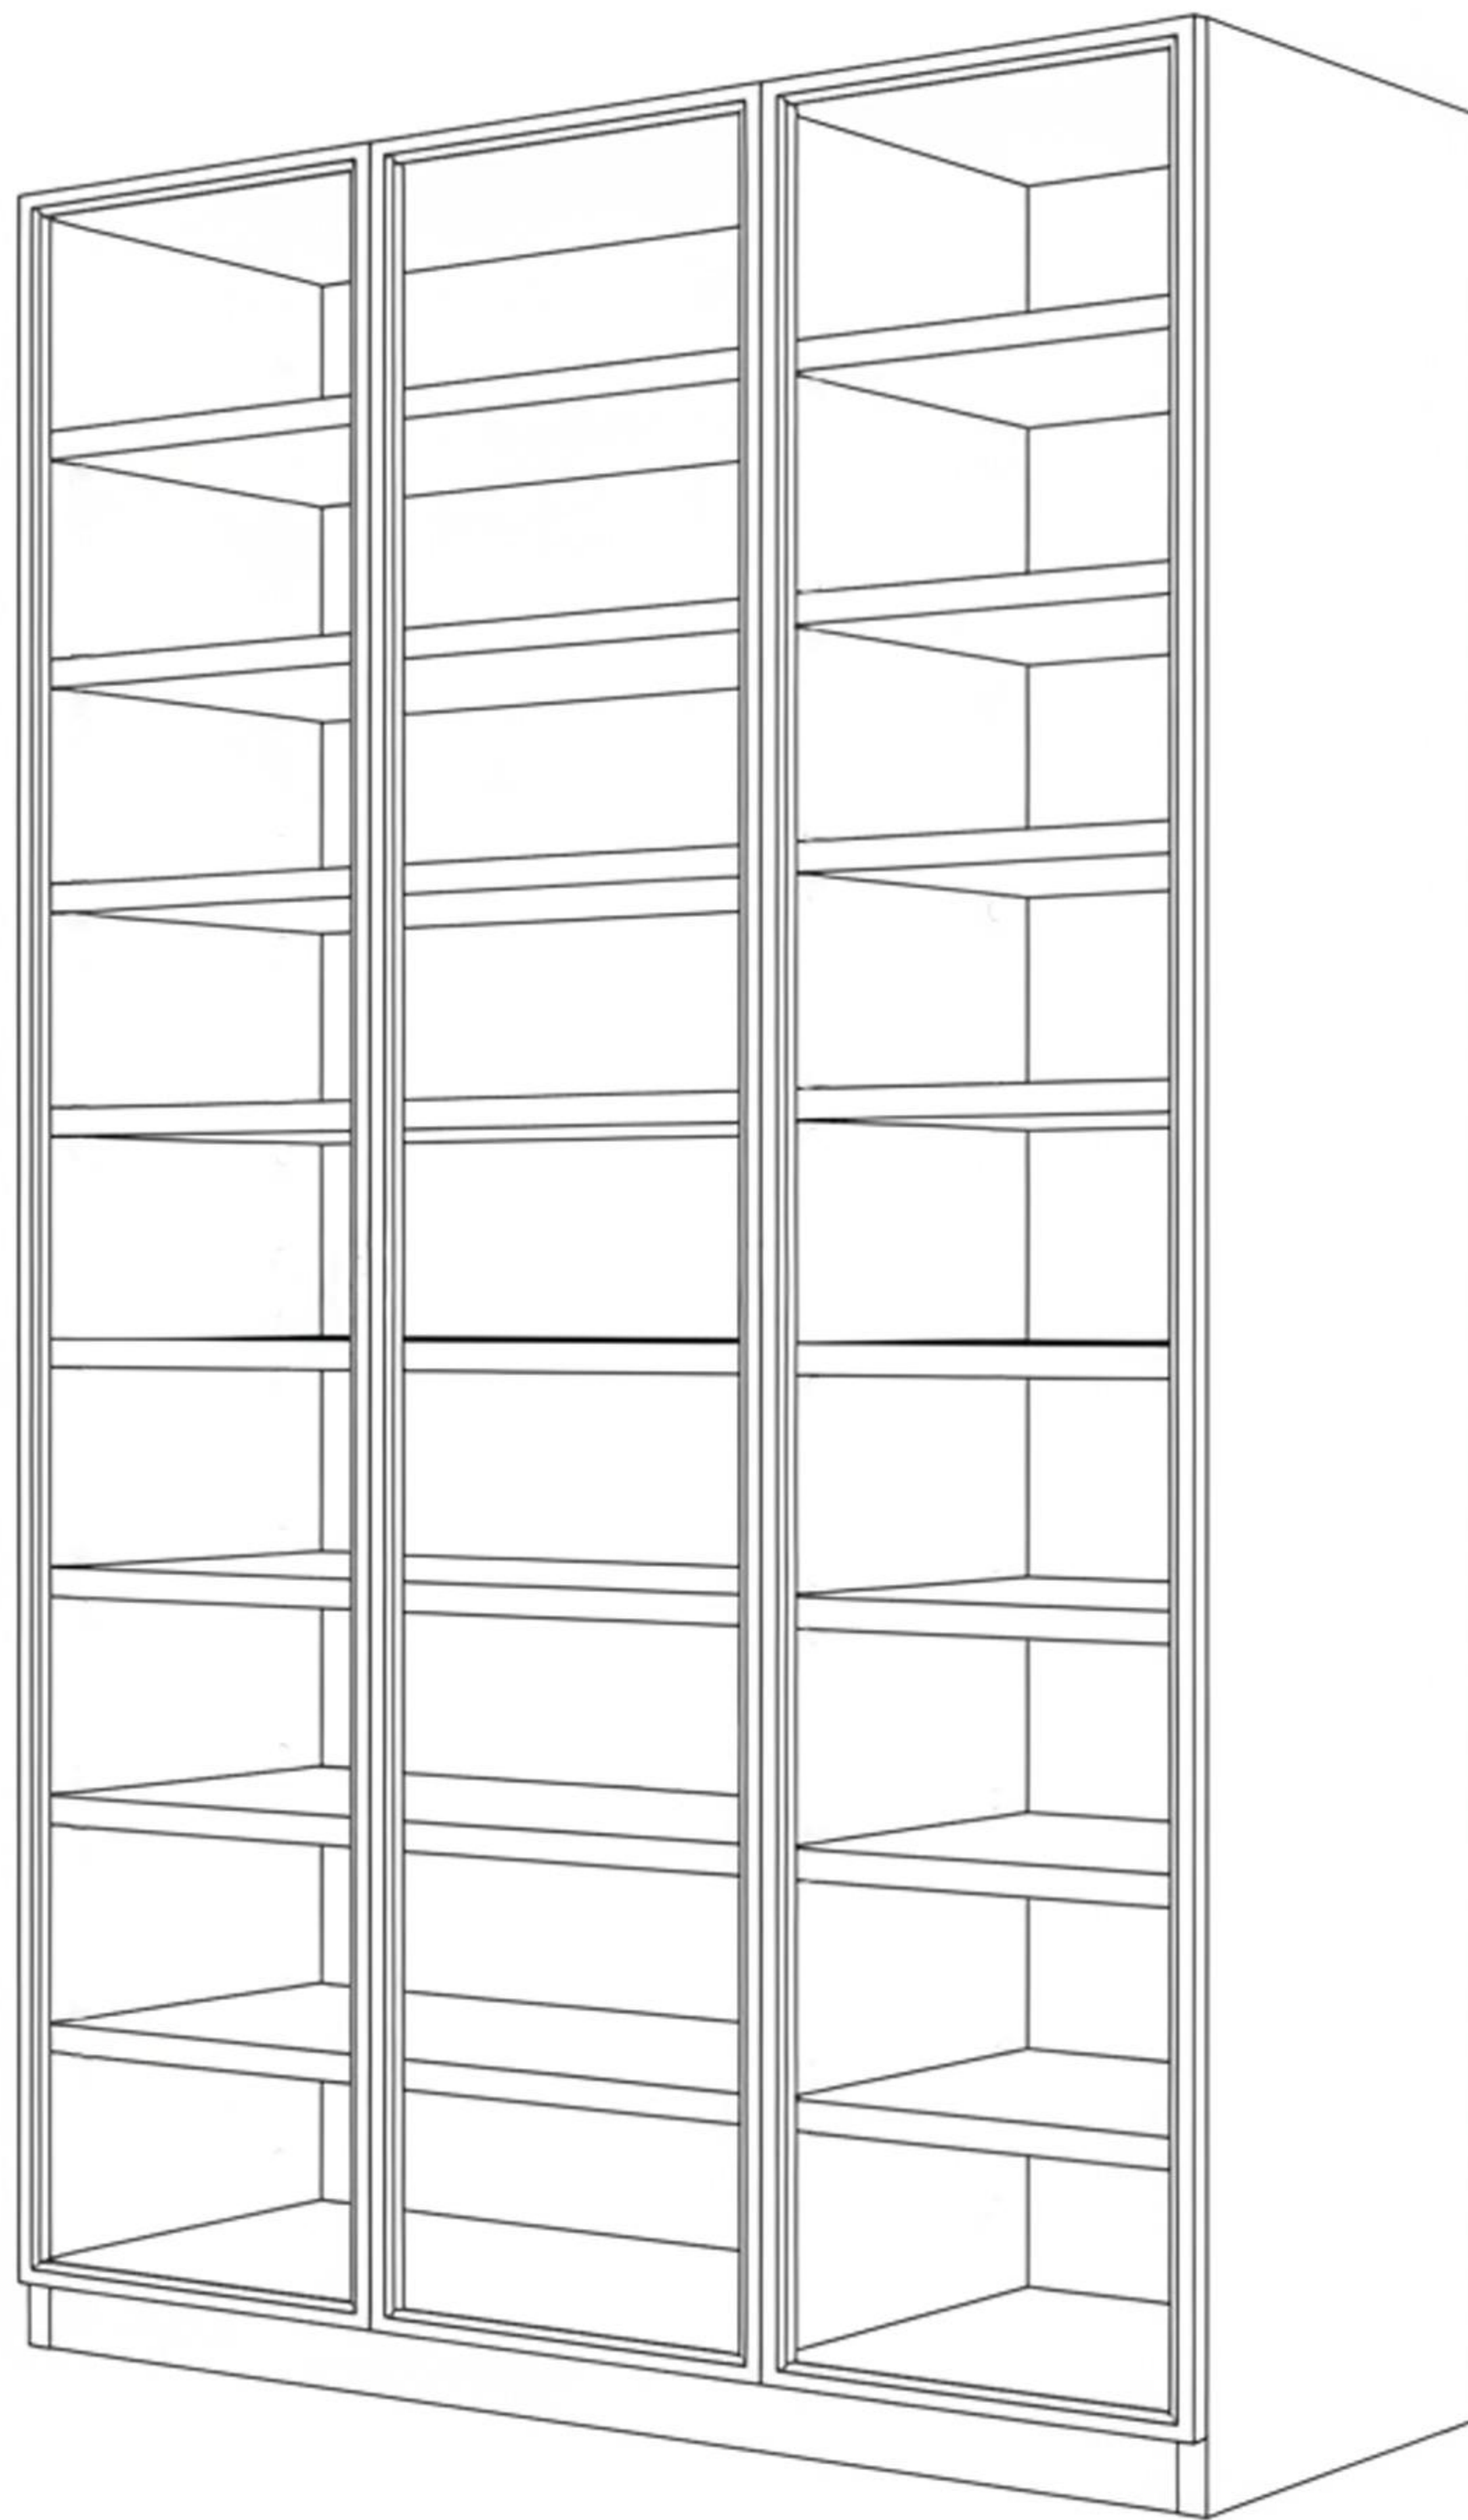

Please read this instruction manual carefully before installation and use.


Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:


1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

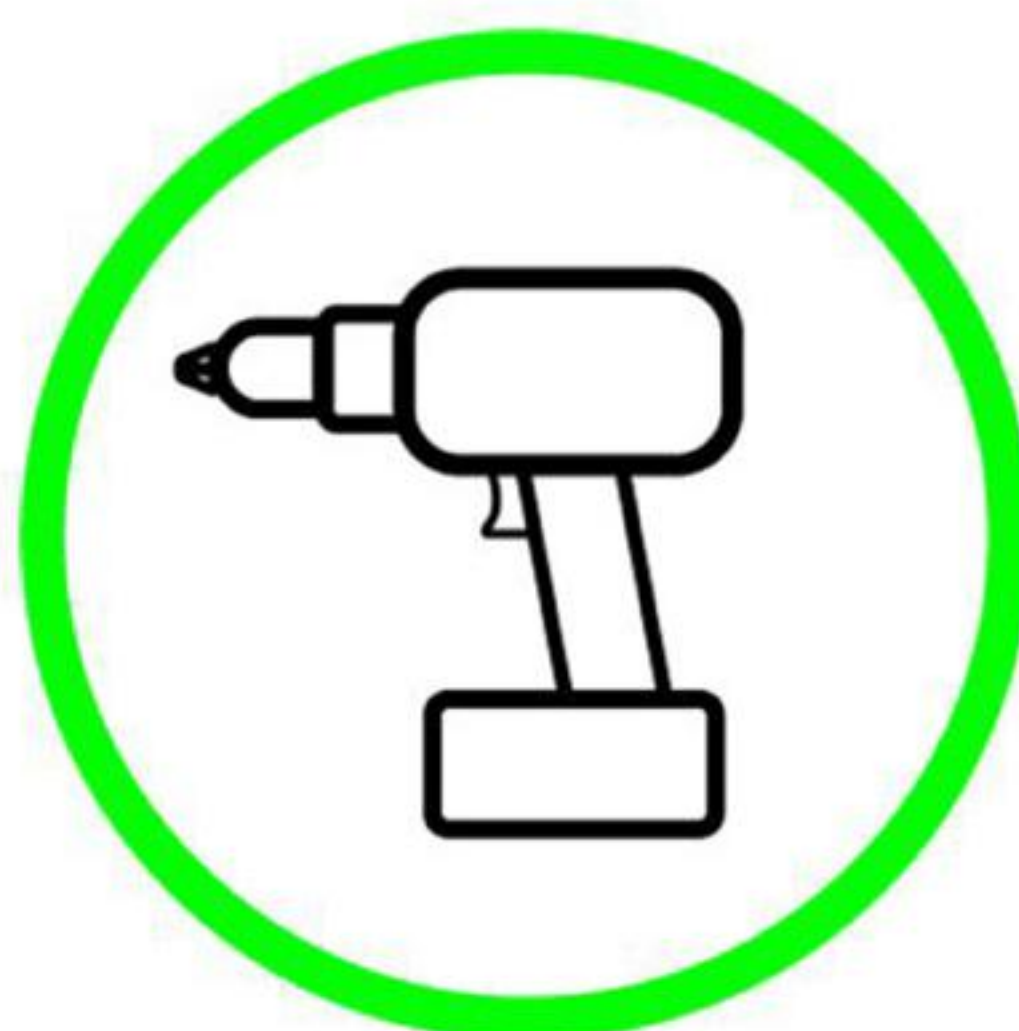

Scan the code to purchase ES001







CAUTION

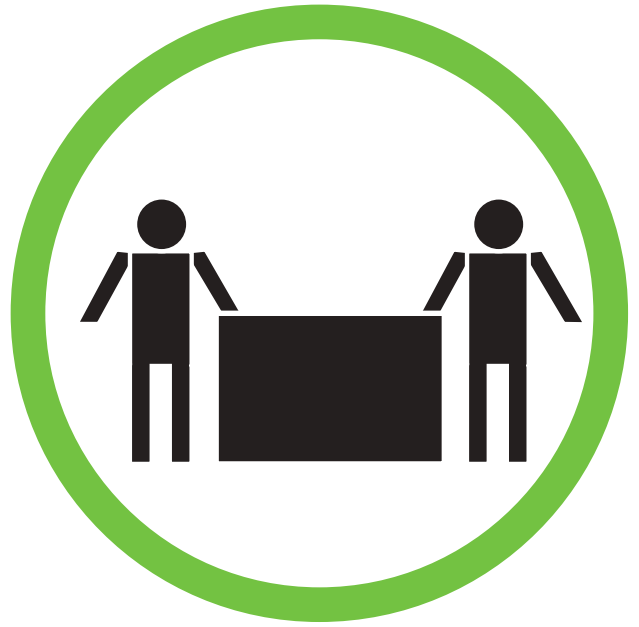

TWO PERSONS LIFT & INSTALLATION

Important: This product is oversized and heavy. For safe assembly and to avoid damage, at least two people are required. When flipping or moving the item, always lift carefully. Never drag, drop, or handle it roughly.


Hardware List

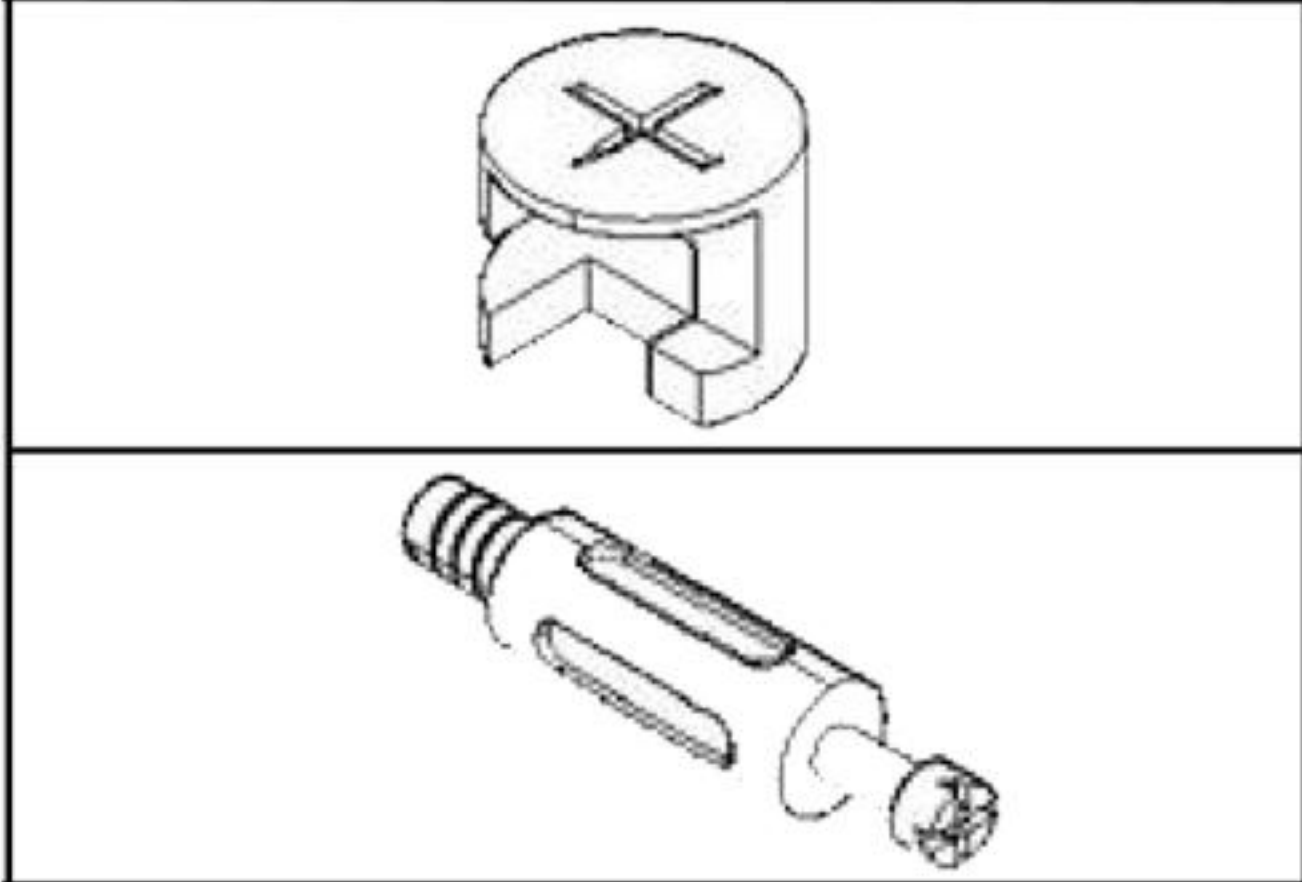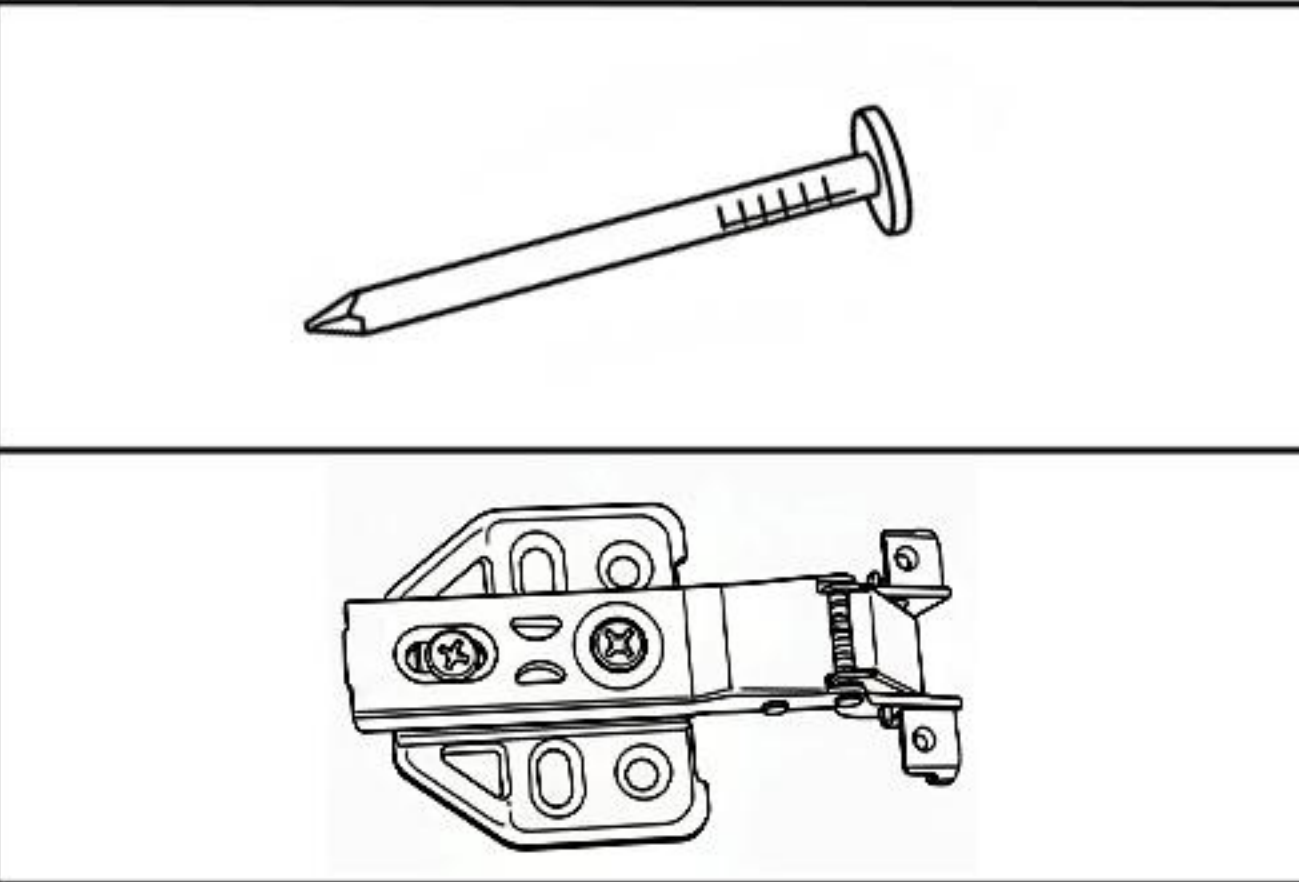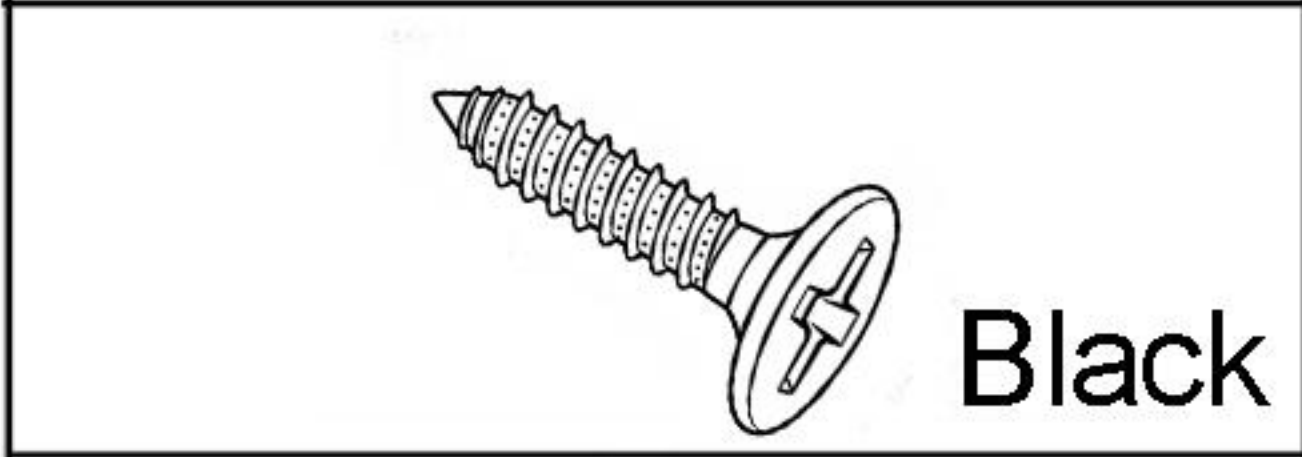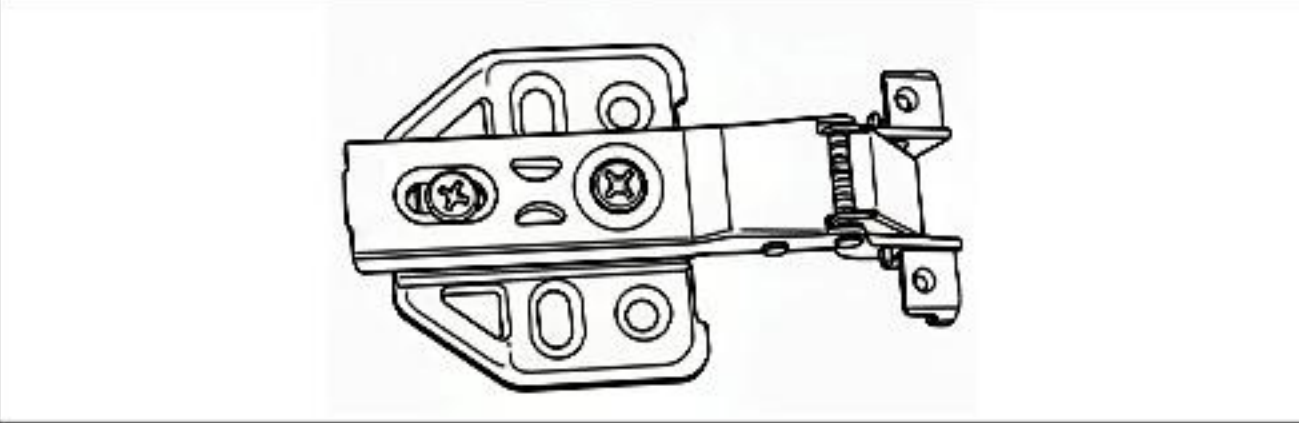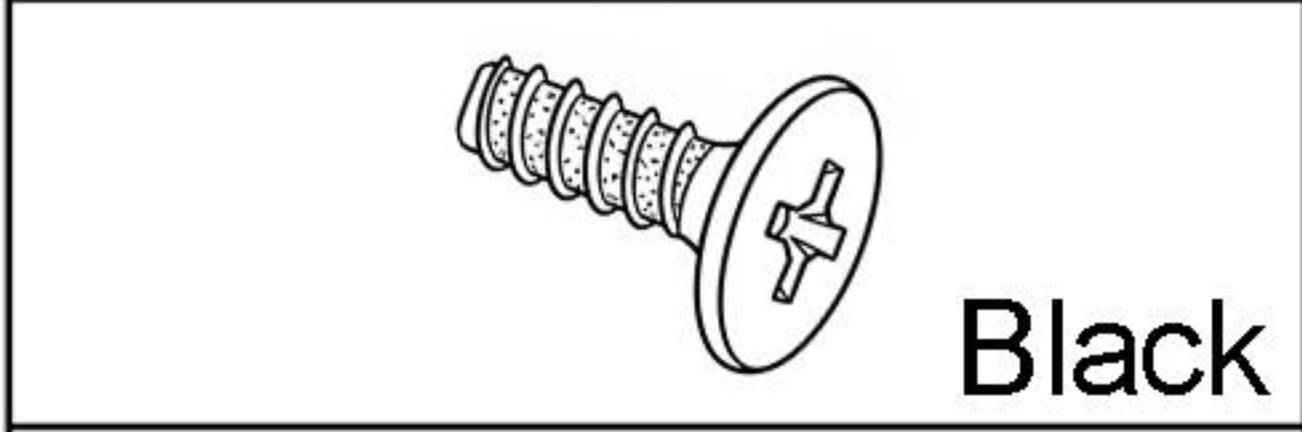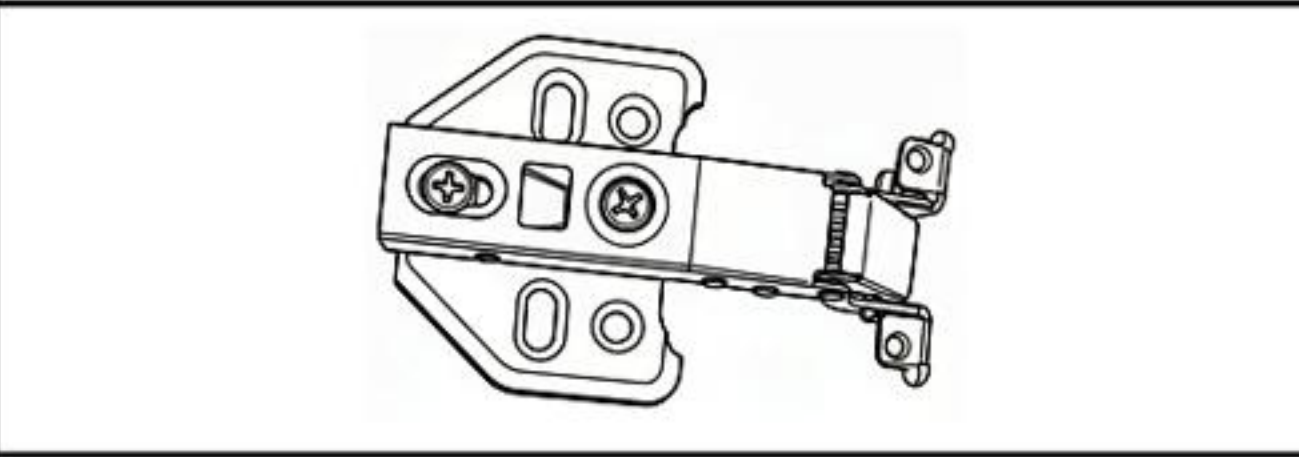Accessory Appearance	Code	Accessory Appearance	Code
	A		E
 Black	C	 Different hinge angles	F
 Black	D	 Different hinge angles	G

Detailed description of the main components, please read carefully


Hinge Installation Instructions

1.

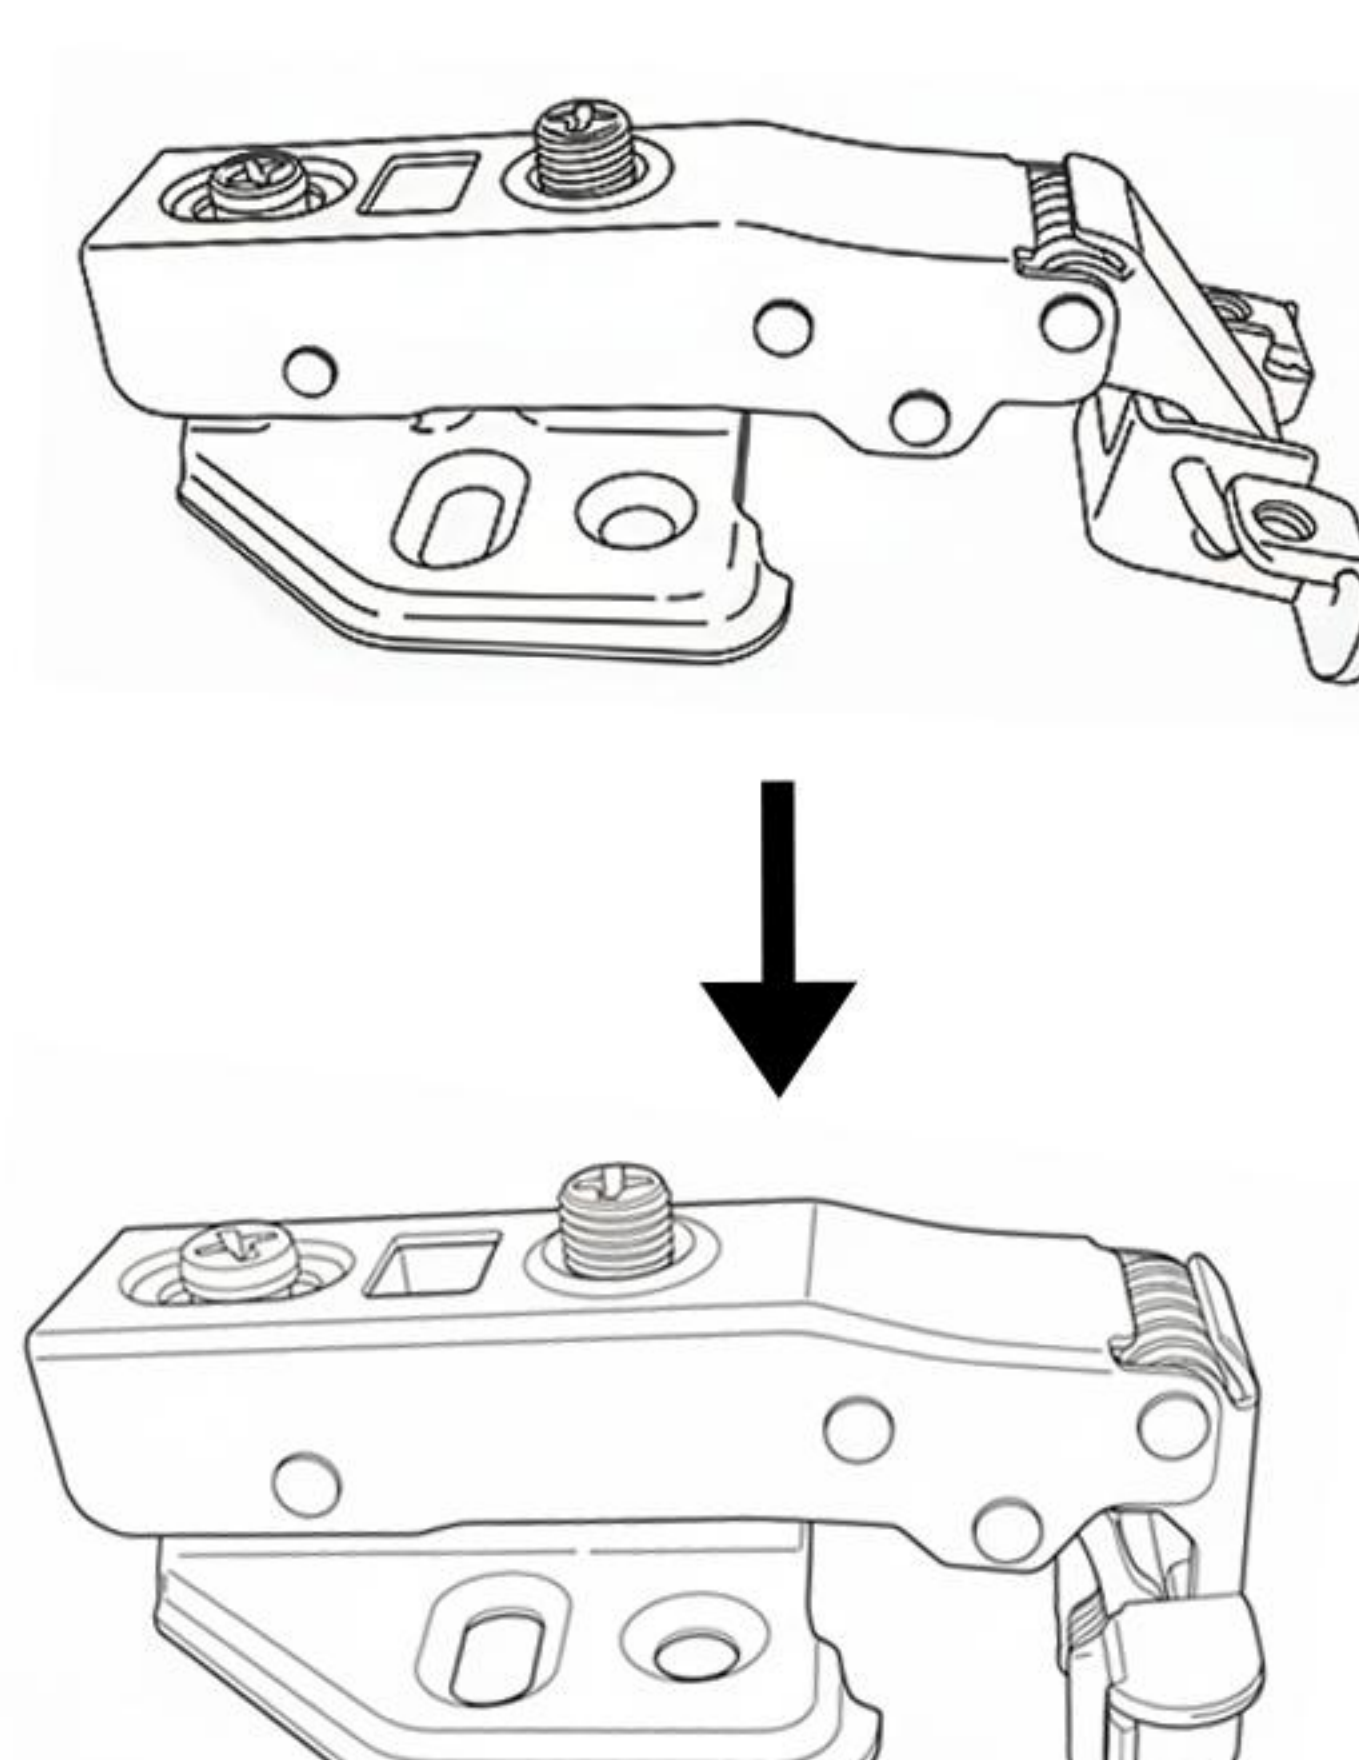


Fold the hinges F&G as shown in the diagram.

2.

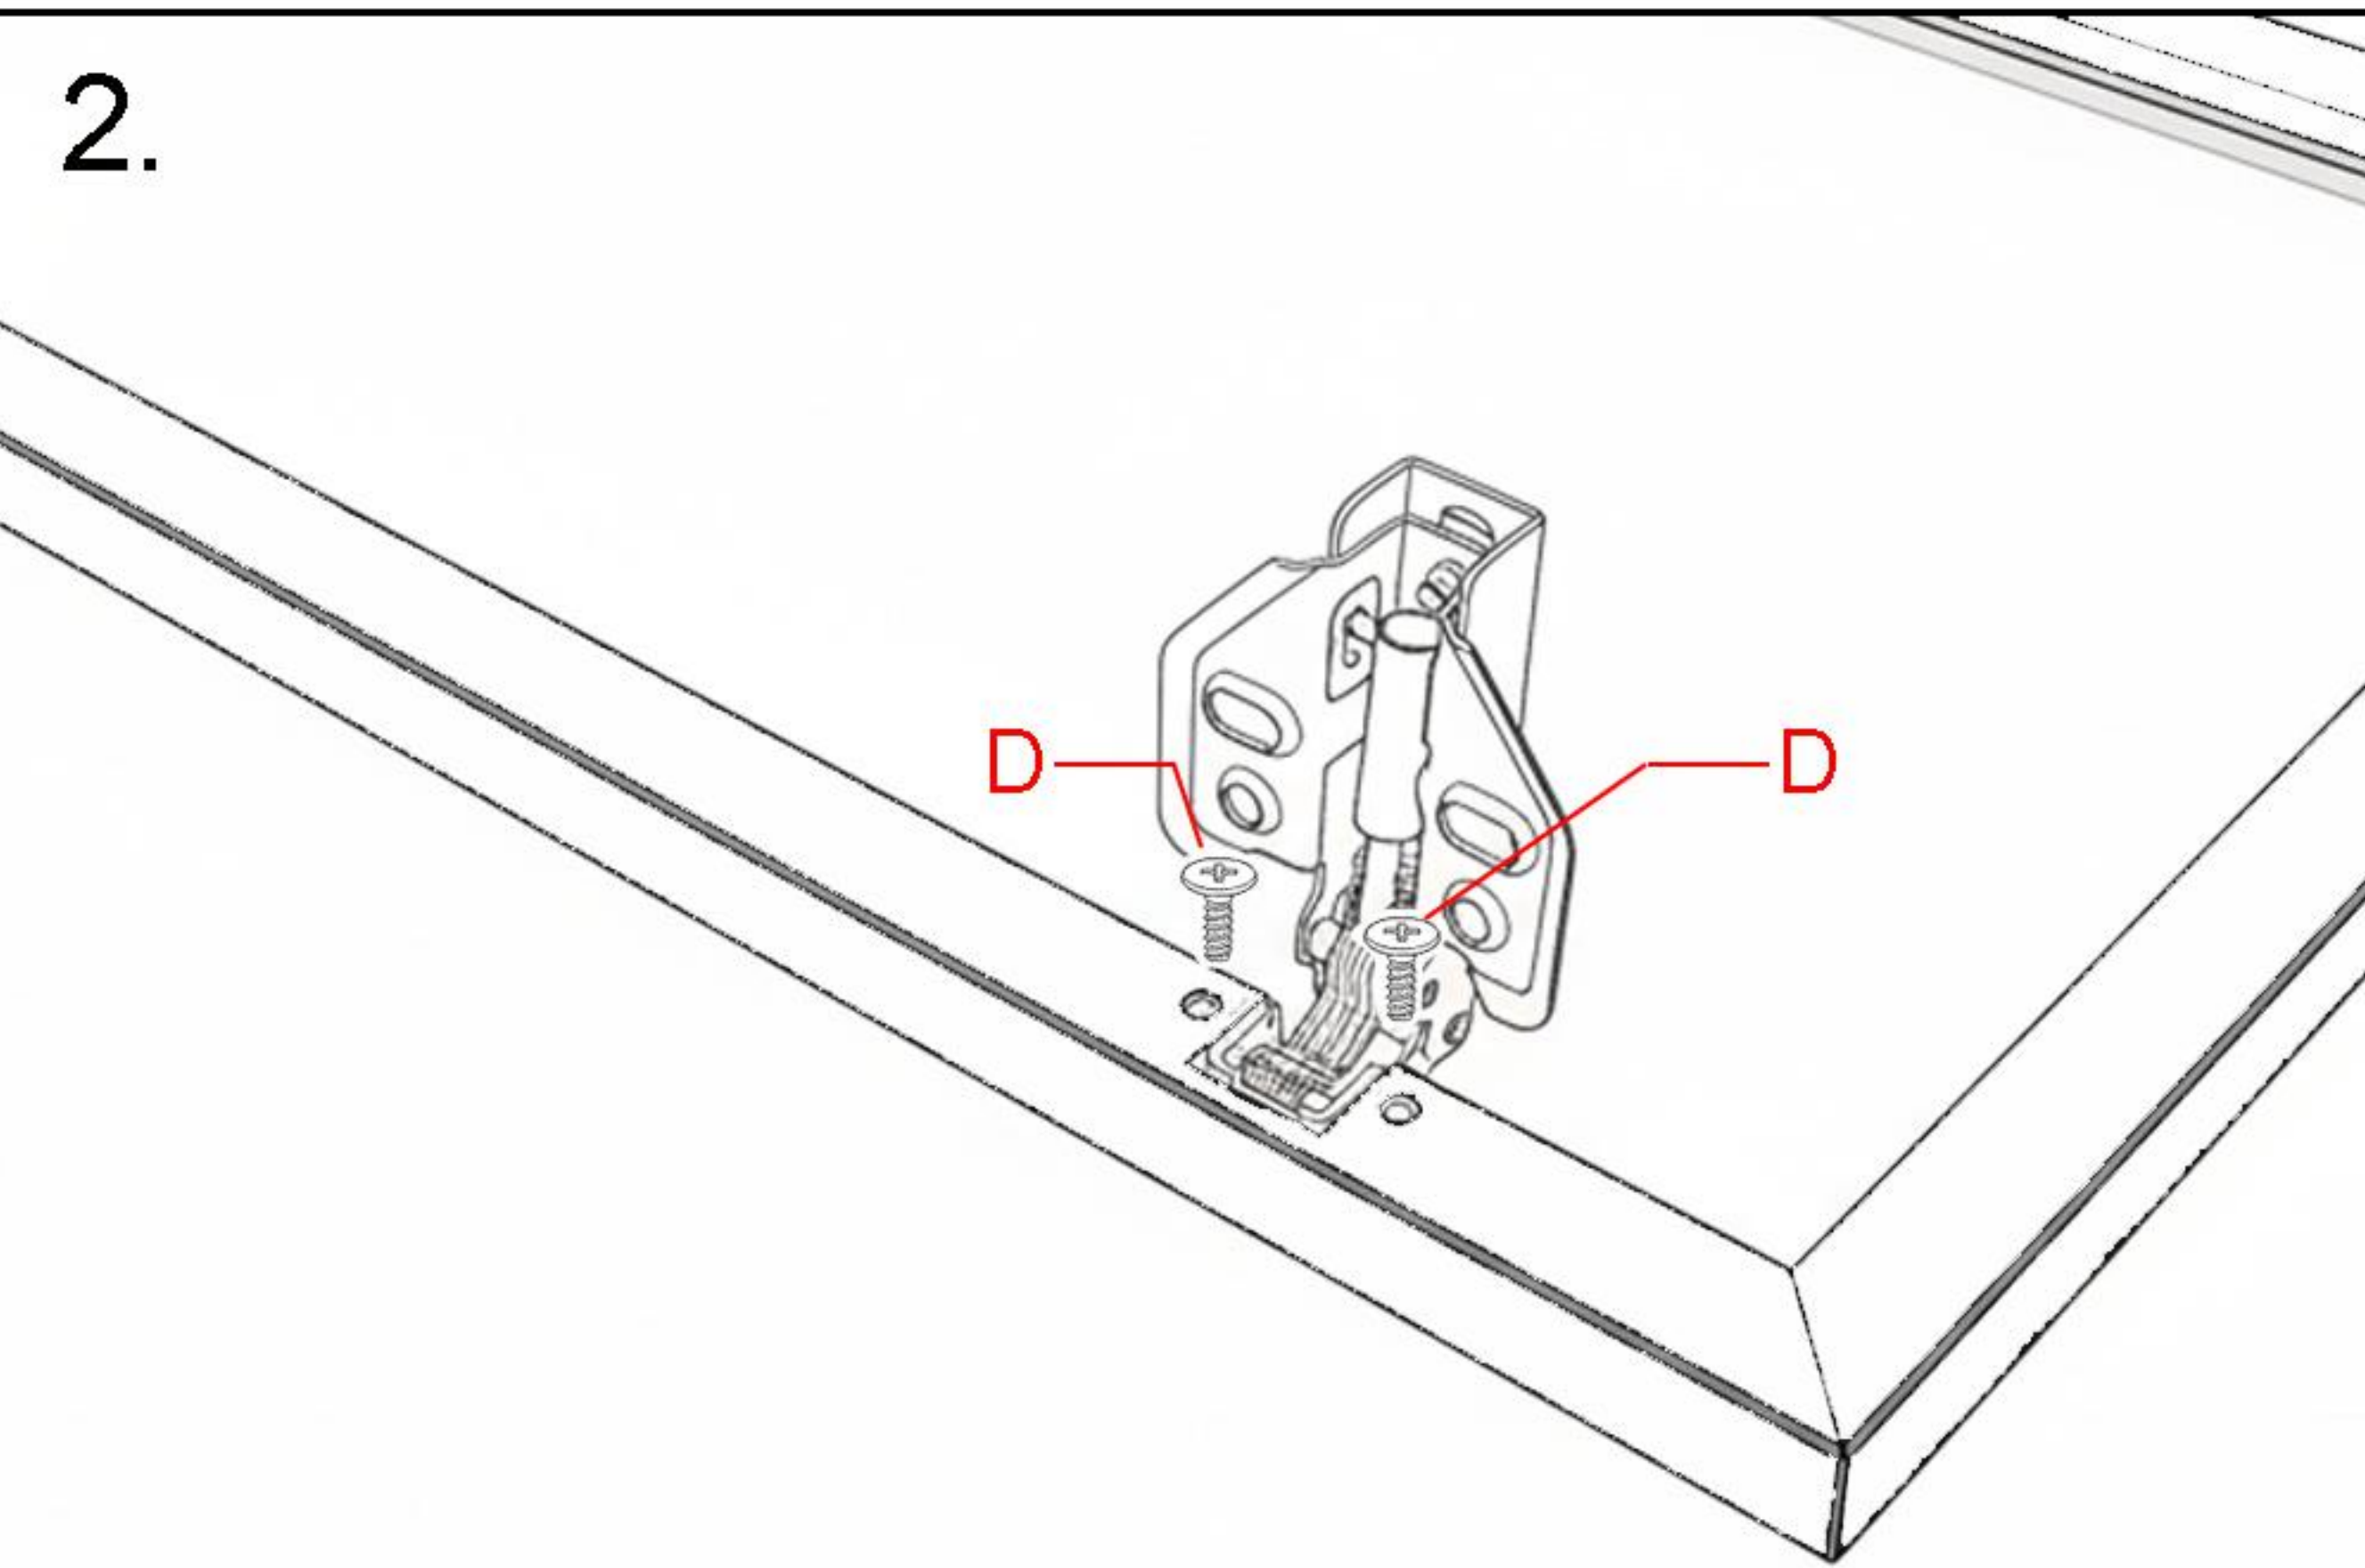


Install the hinge onto the door and ensure it is secure.

3.

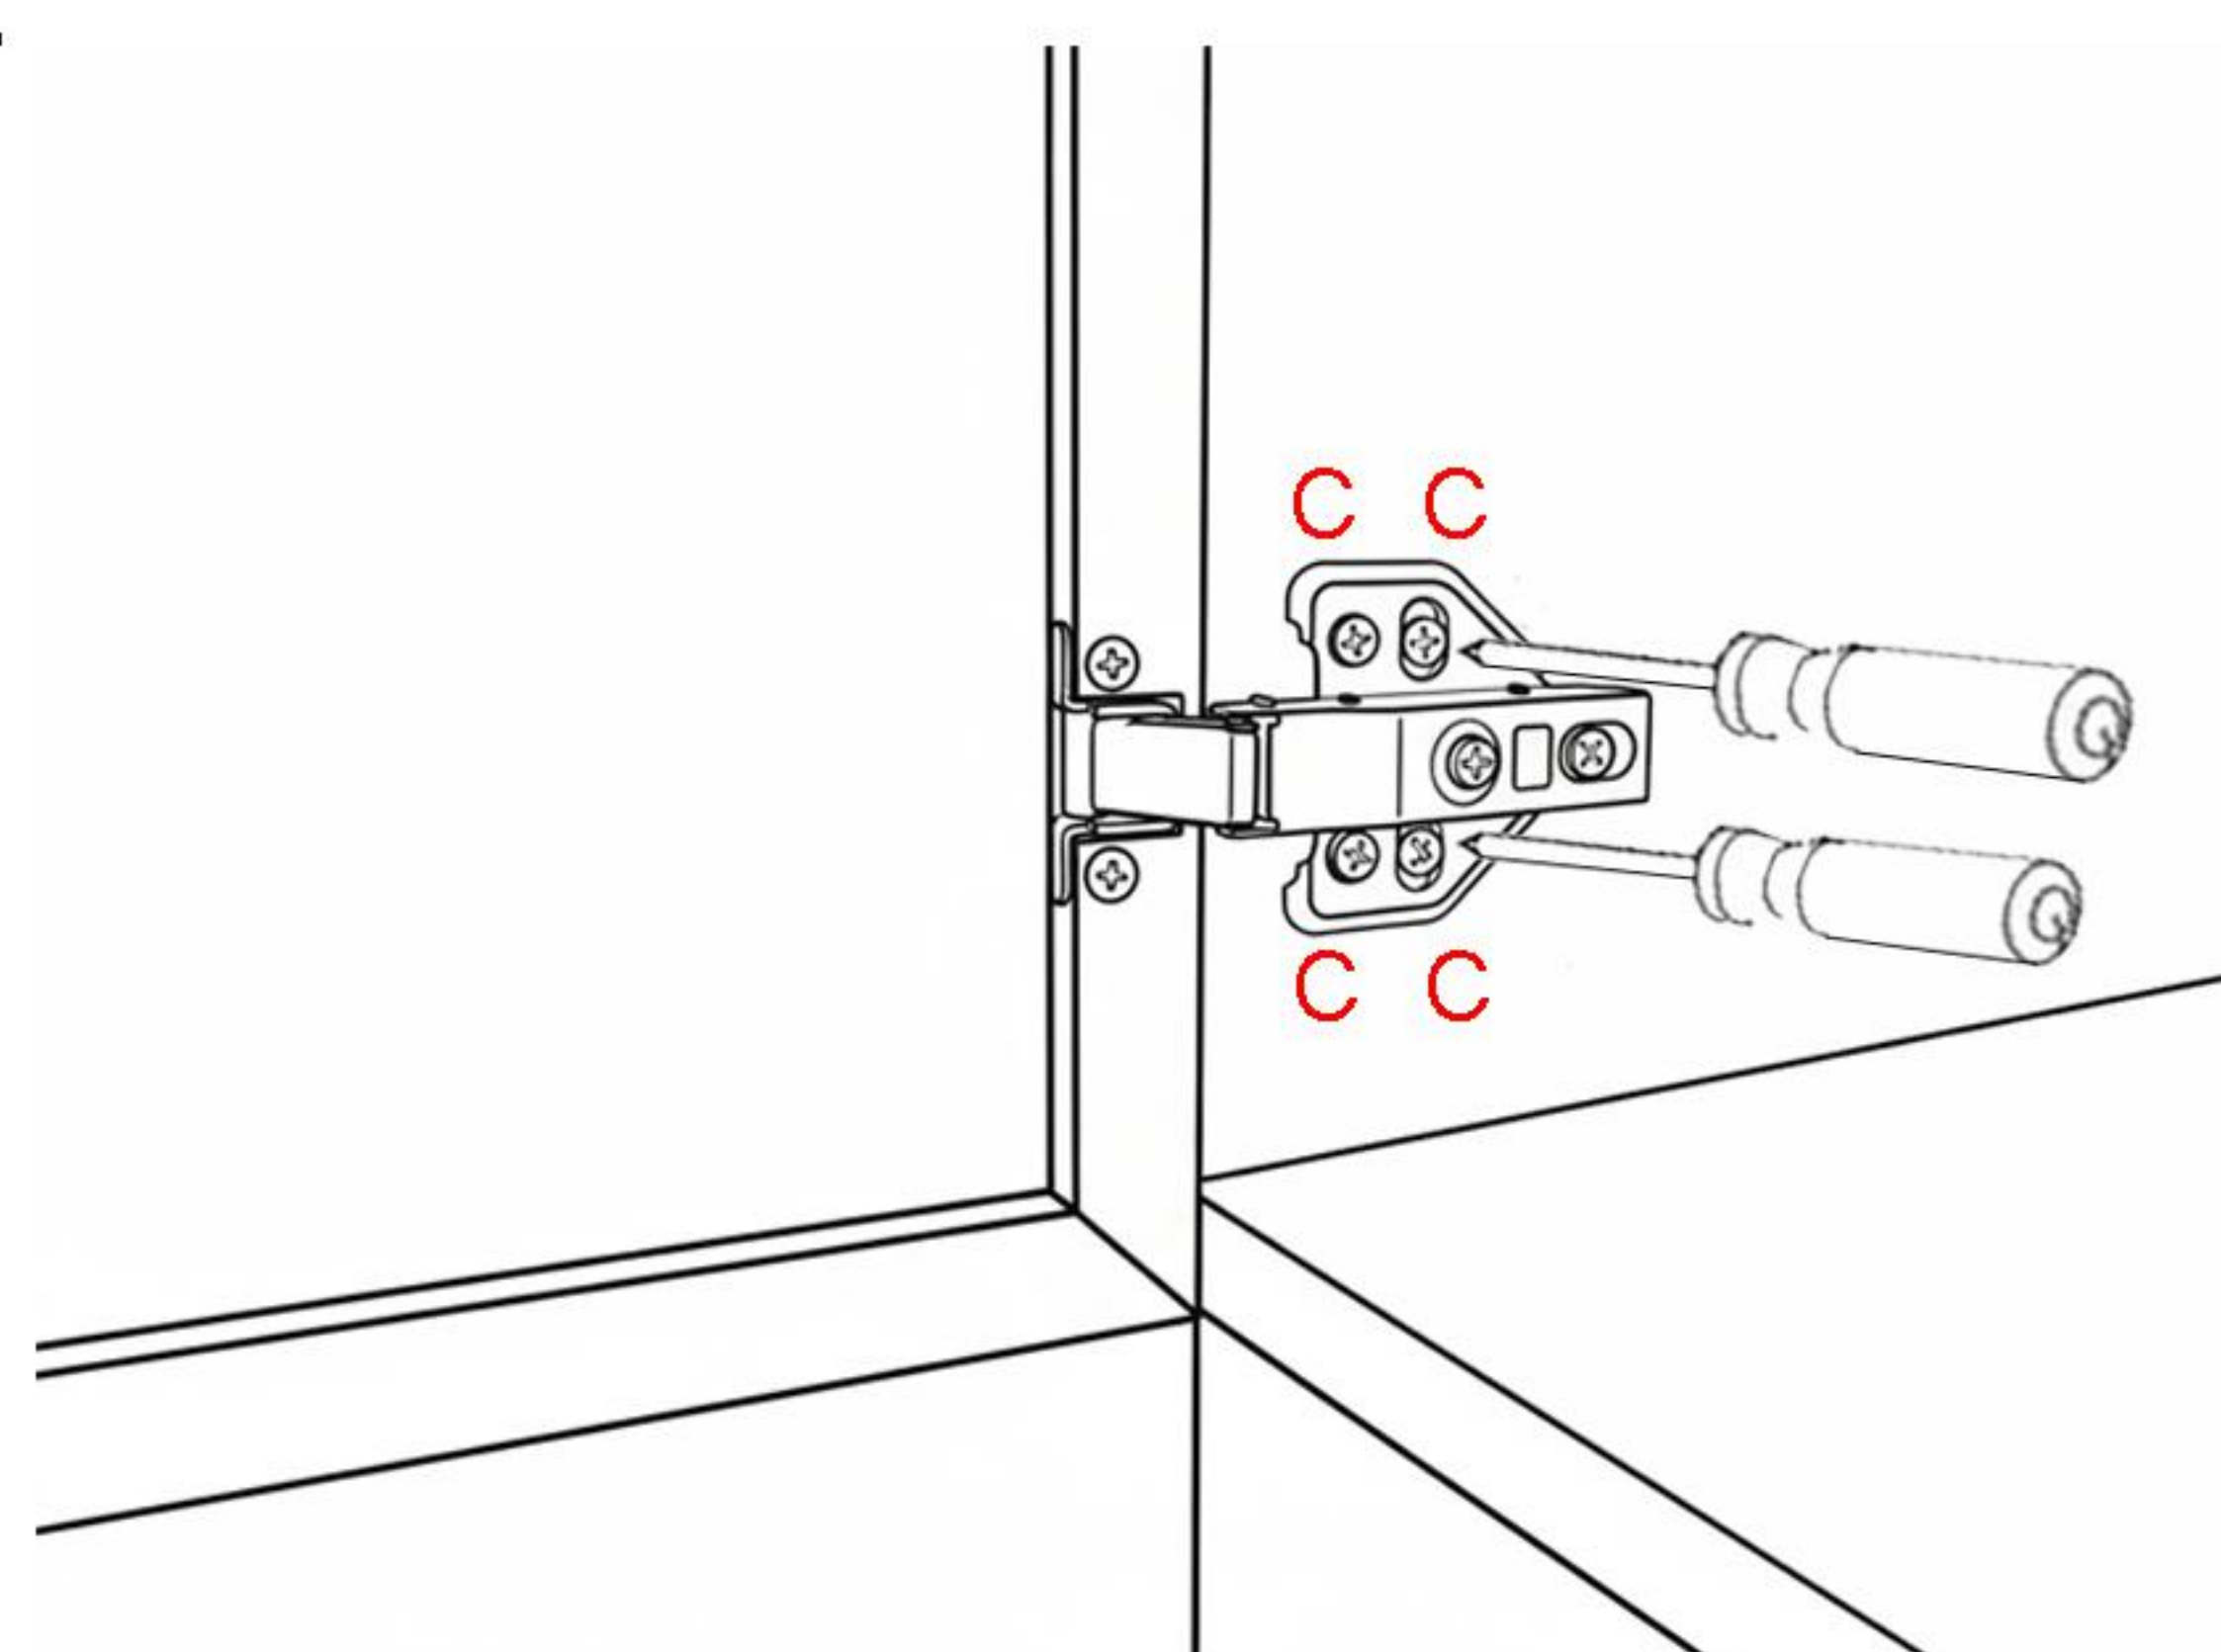


The height can be adjusted up and down here.

4.

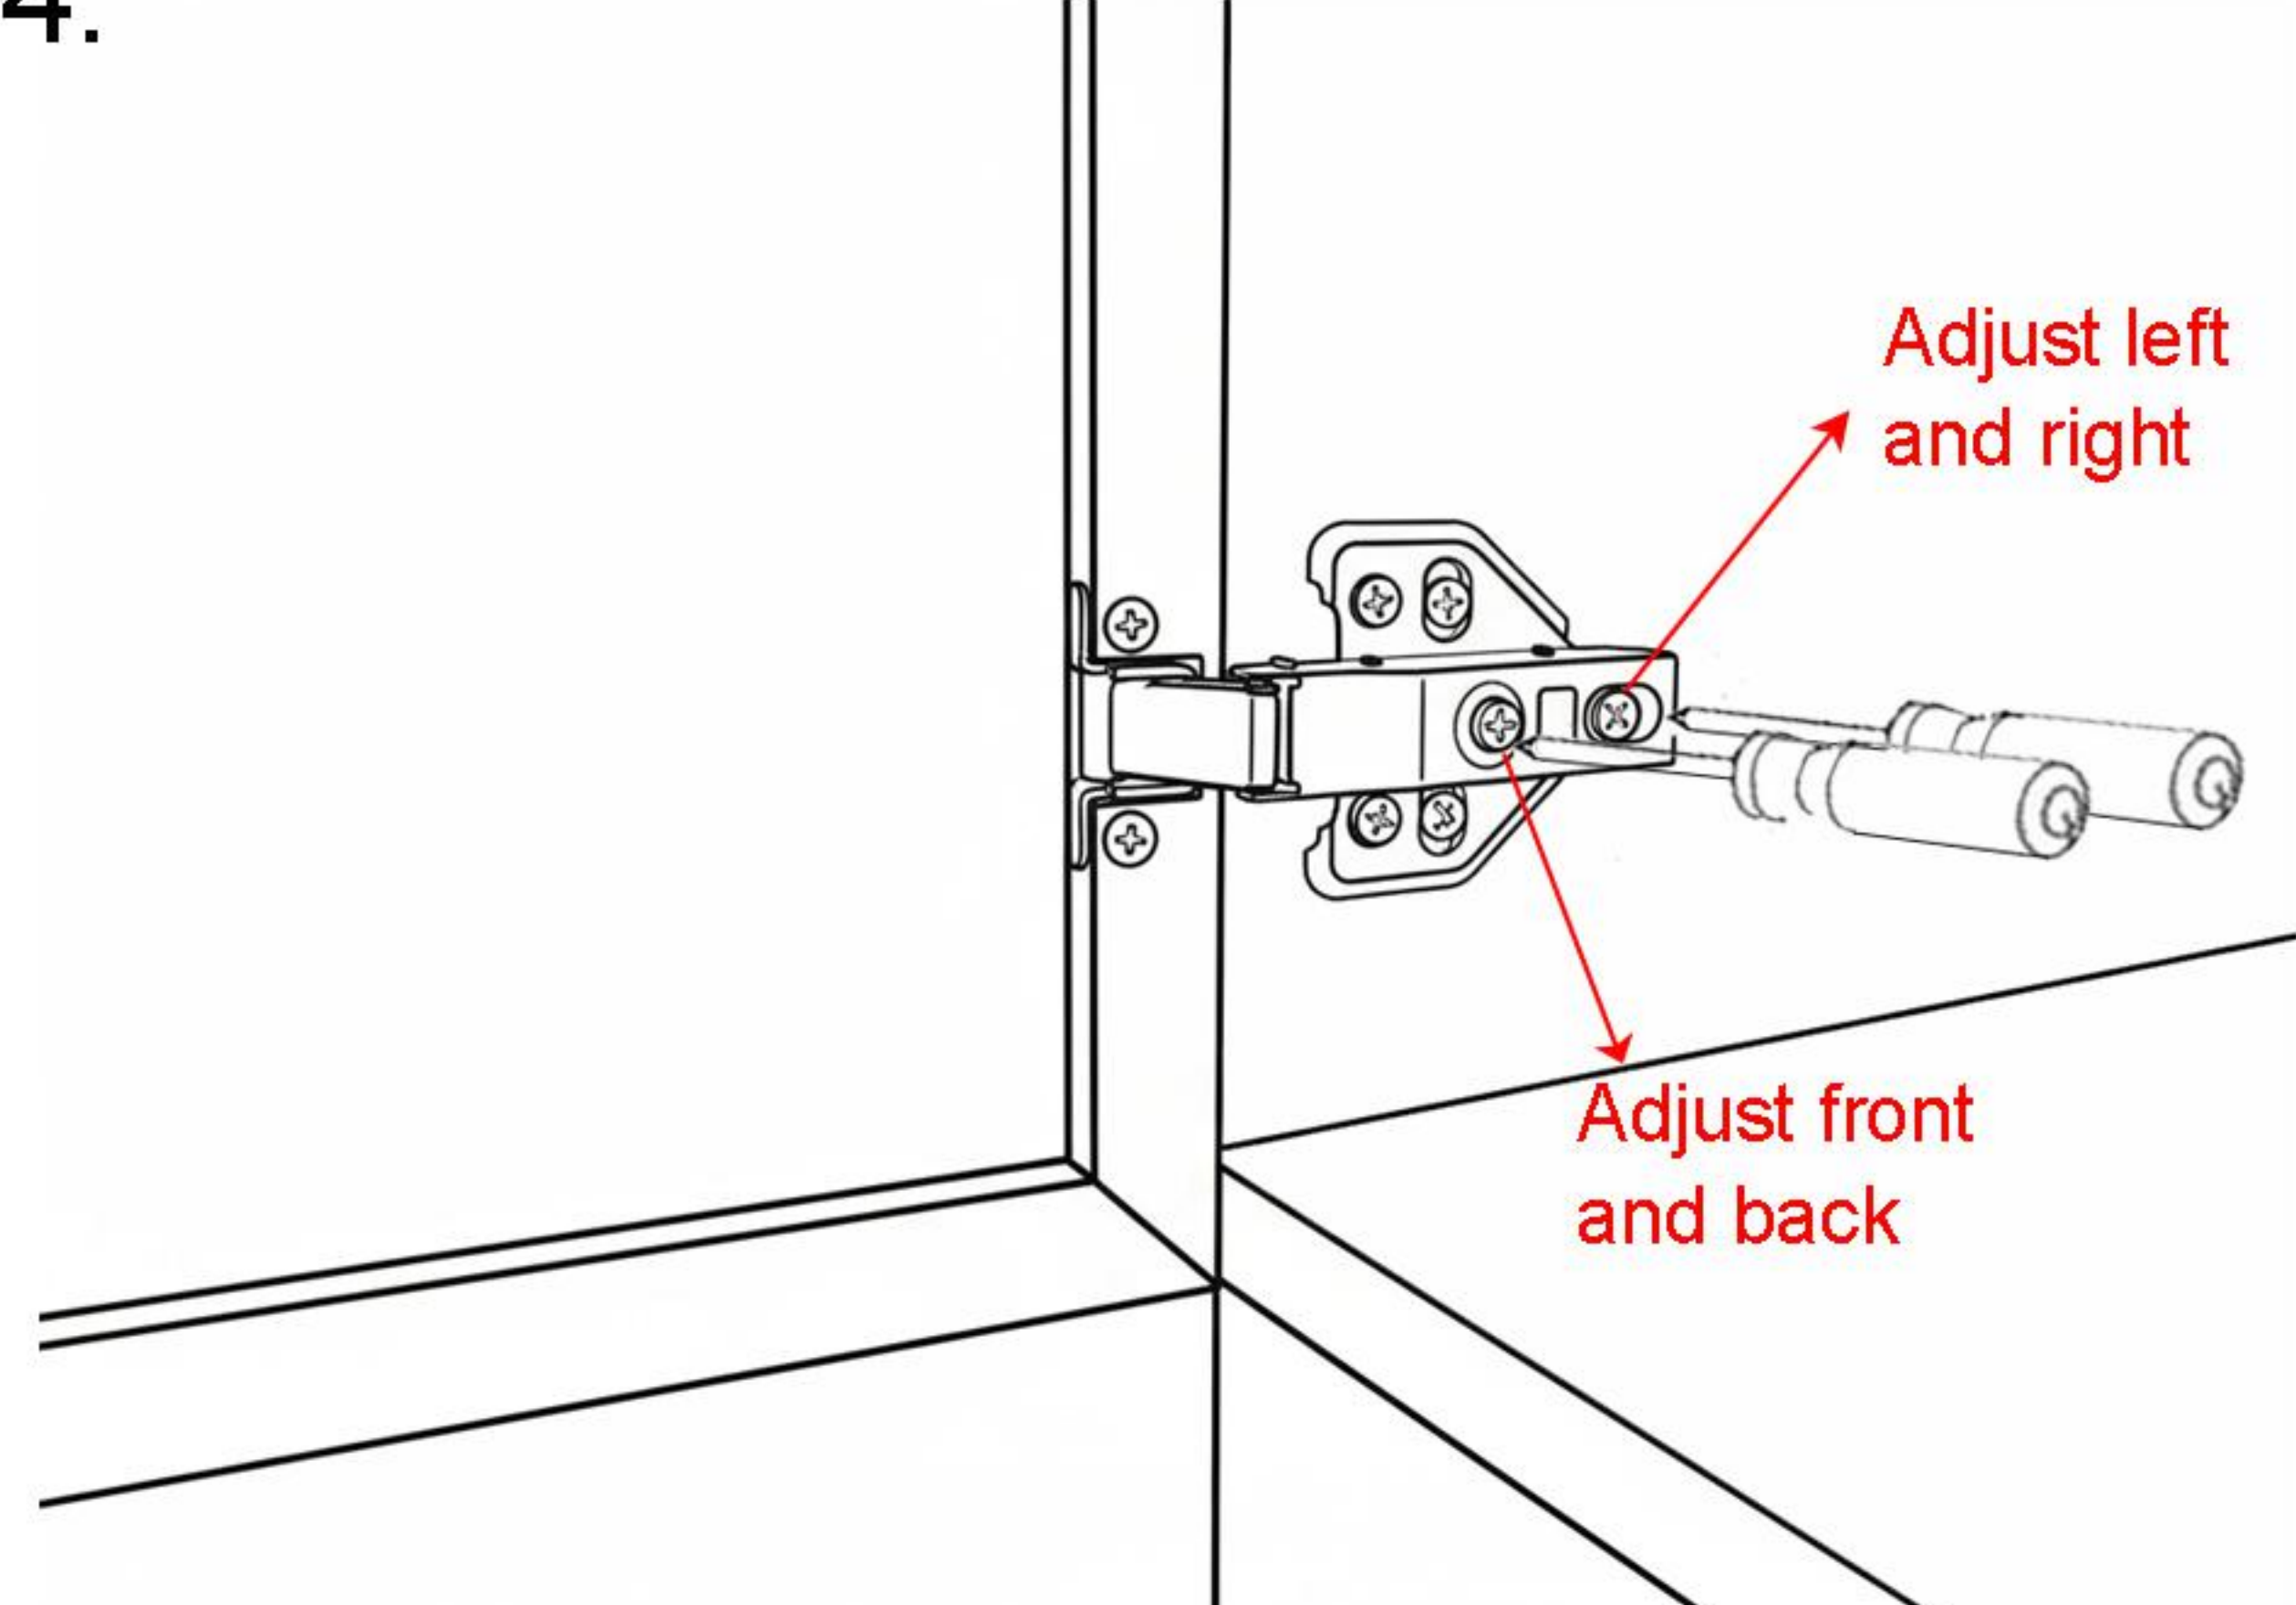


Adjusting the gap between the door.

Curved-arm hinge (F) vs. Straight-arm hinge (G)

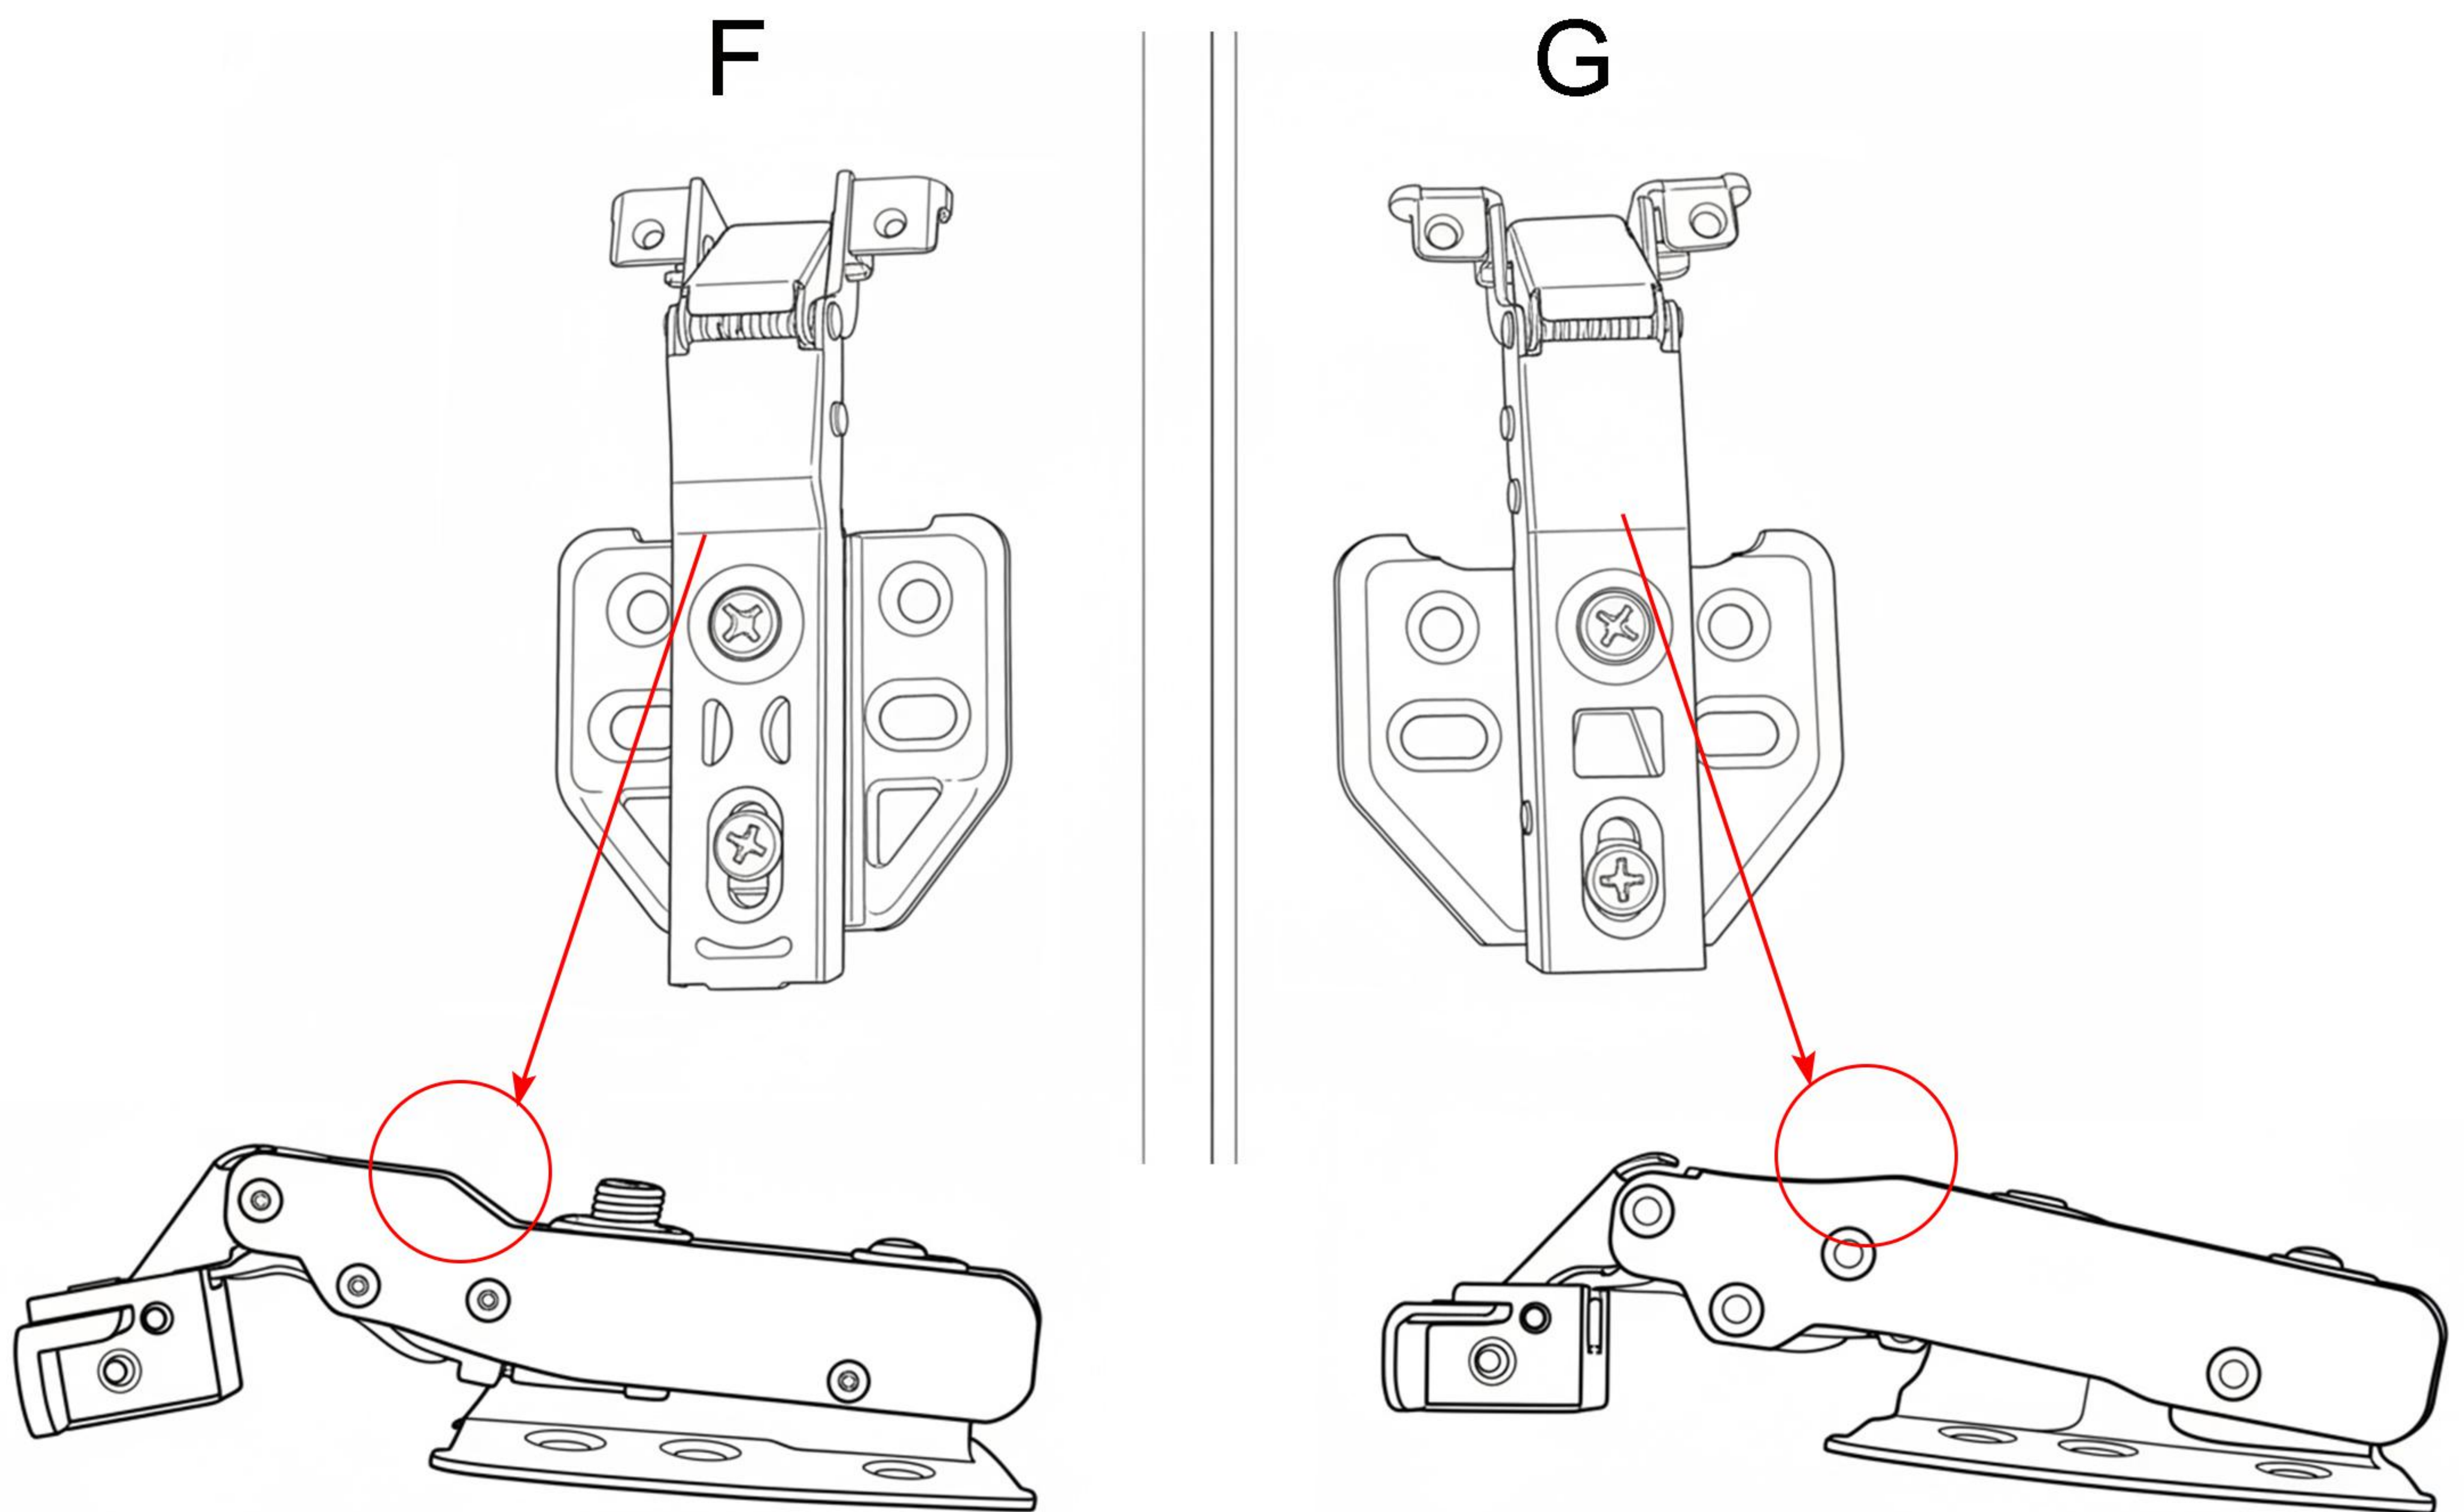


Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

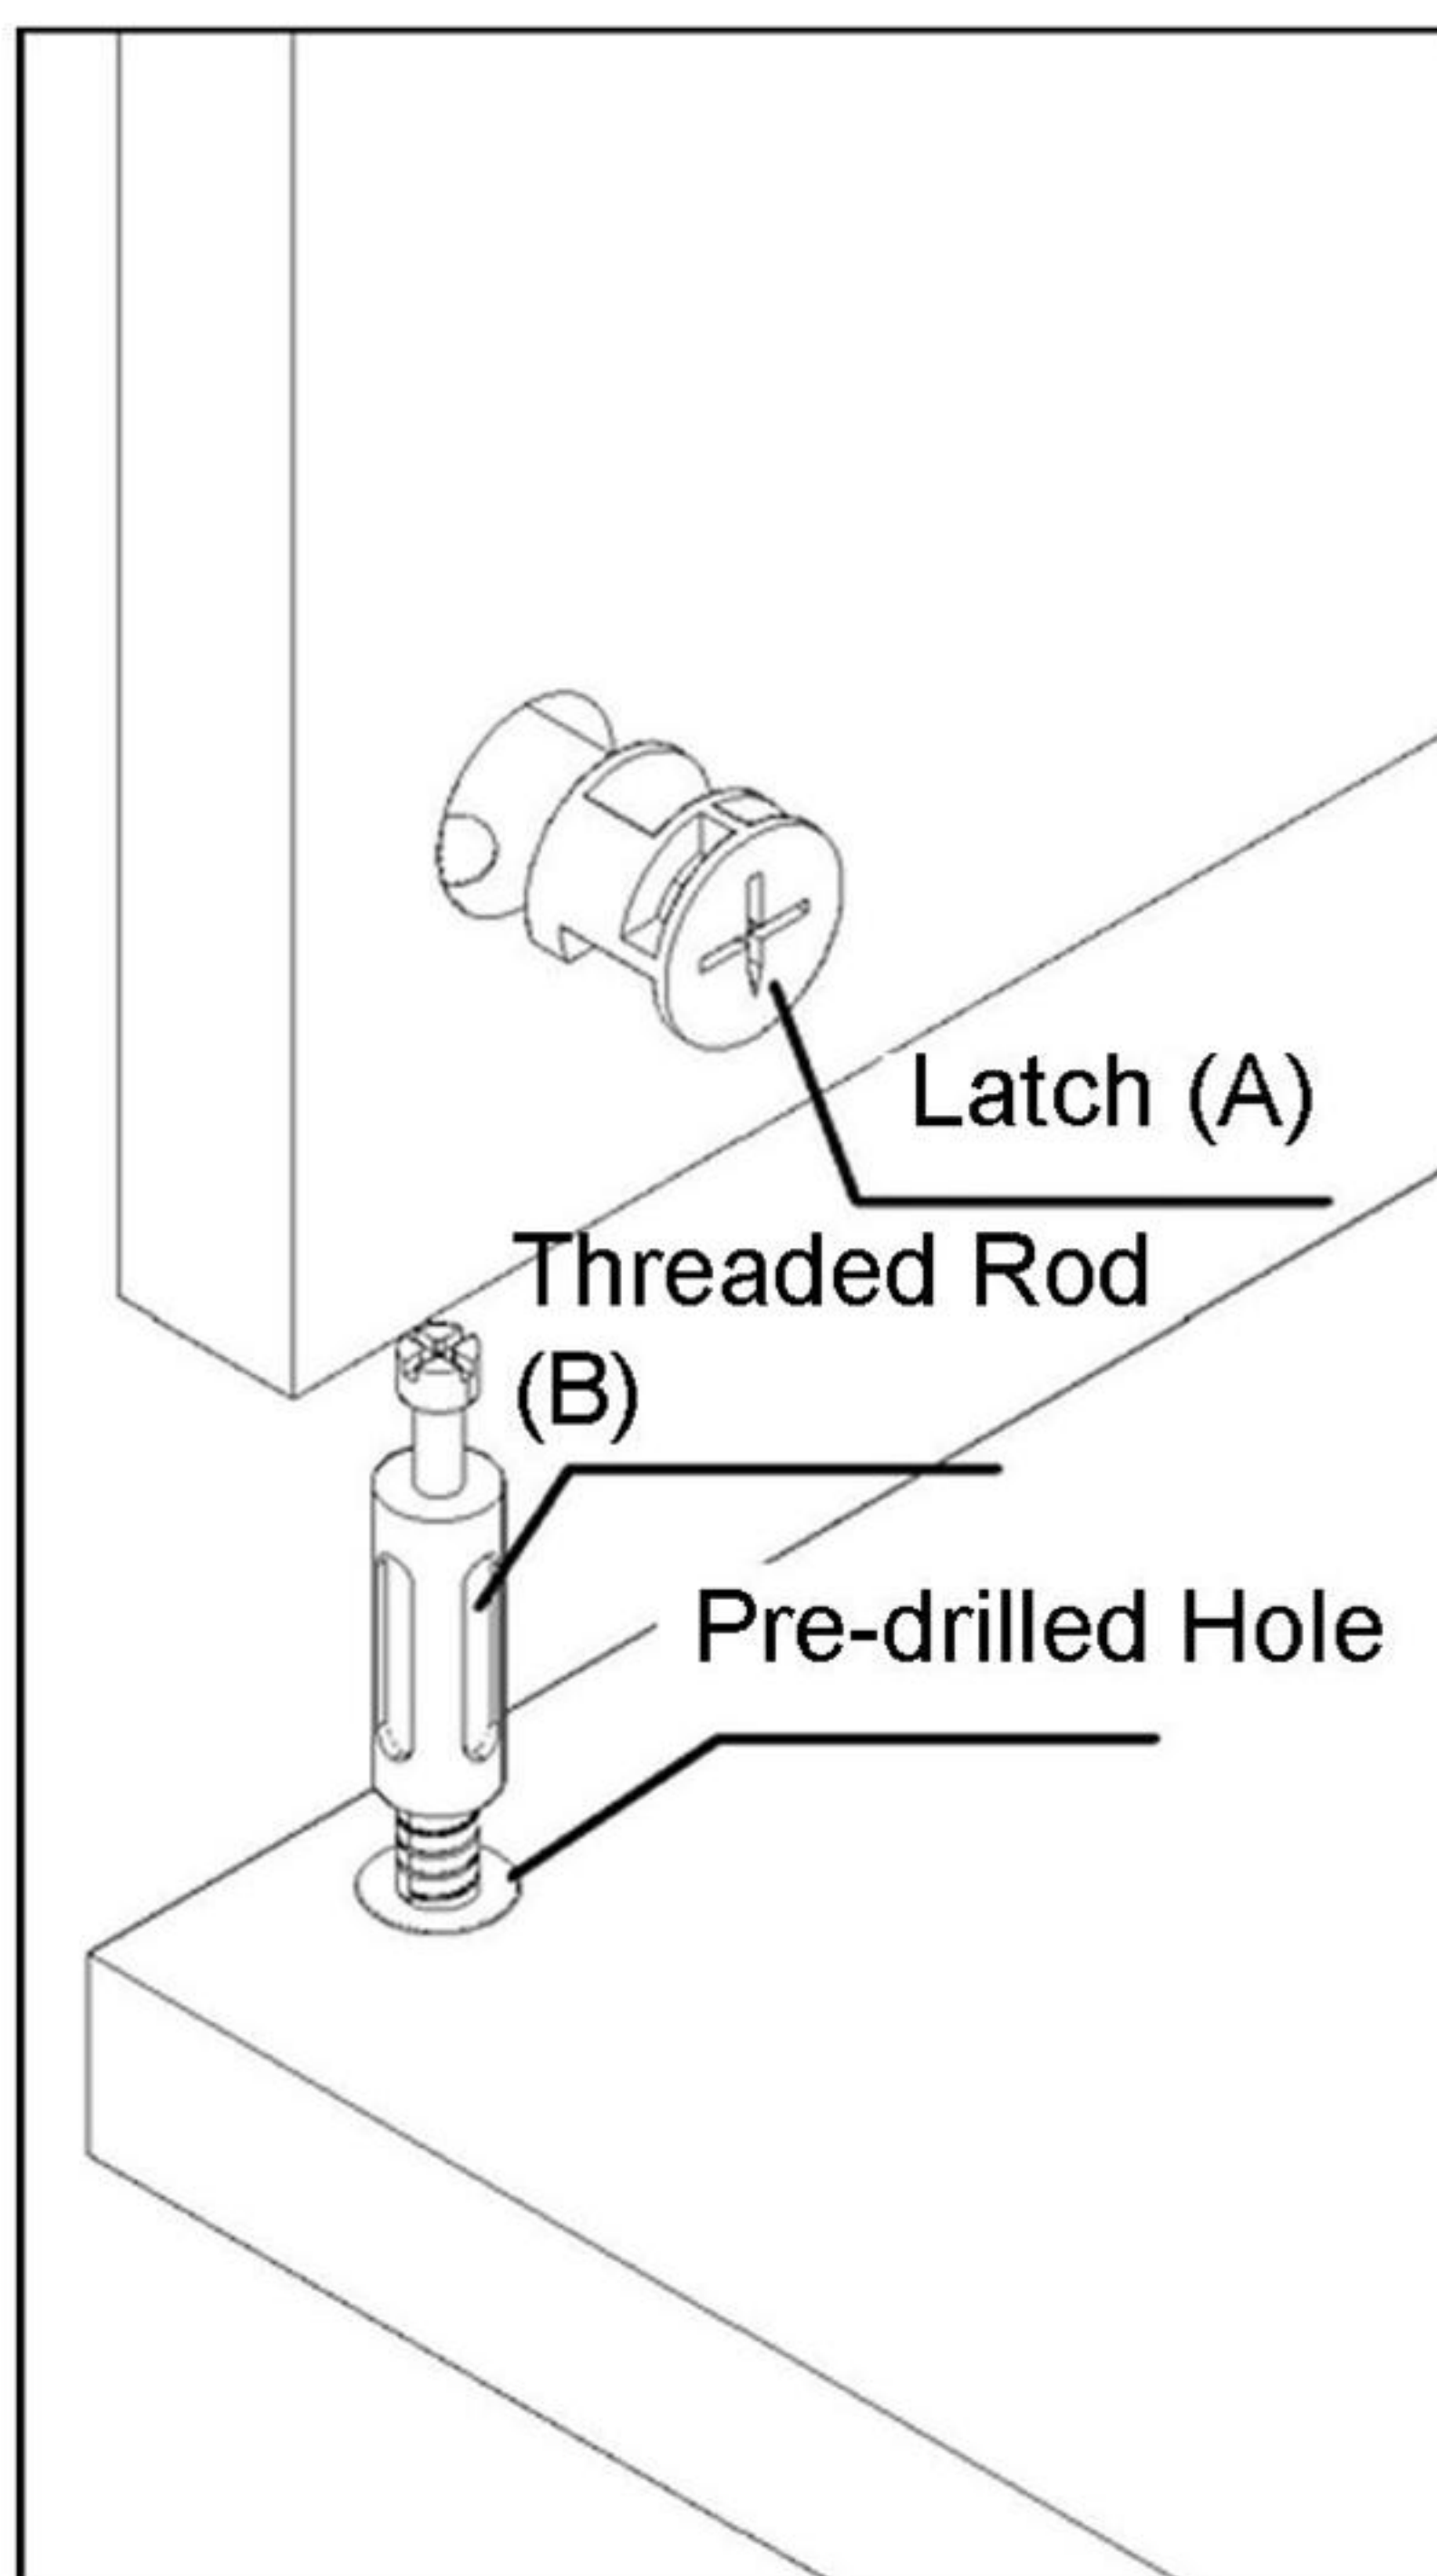


1. Screw the B (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed A into the corresponding hole of the other piece. Press A (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.




Step 1:

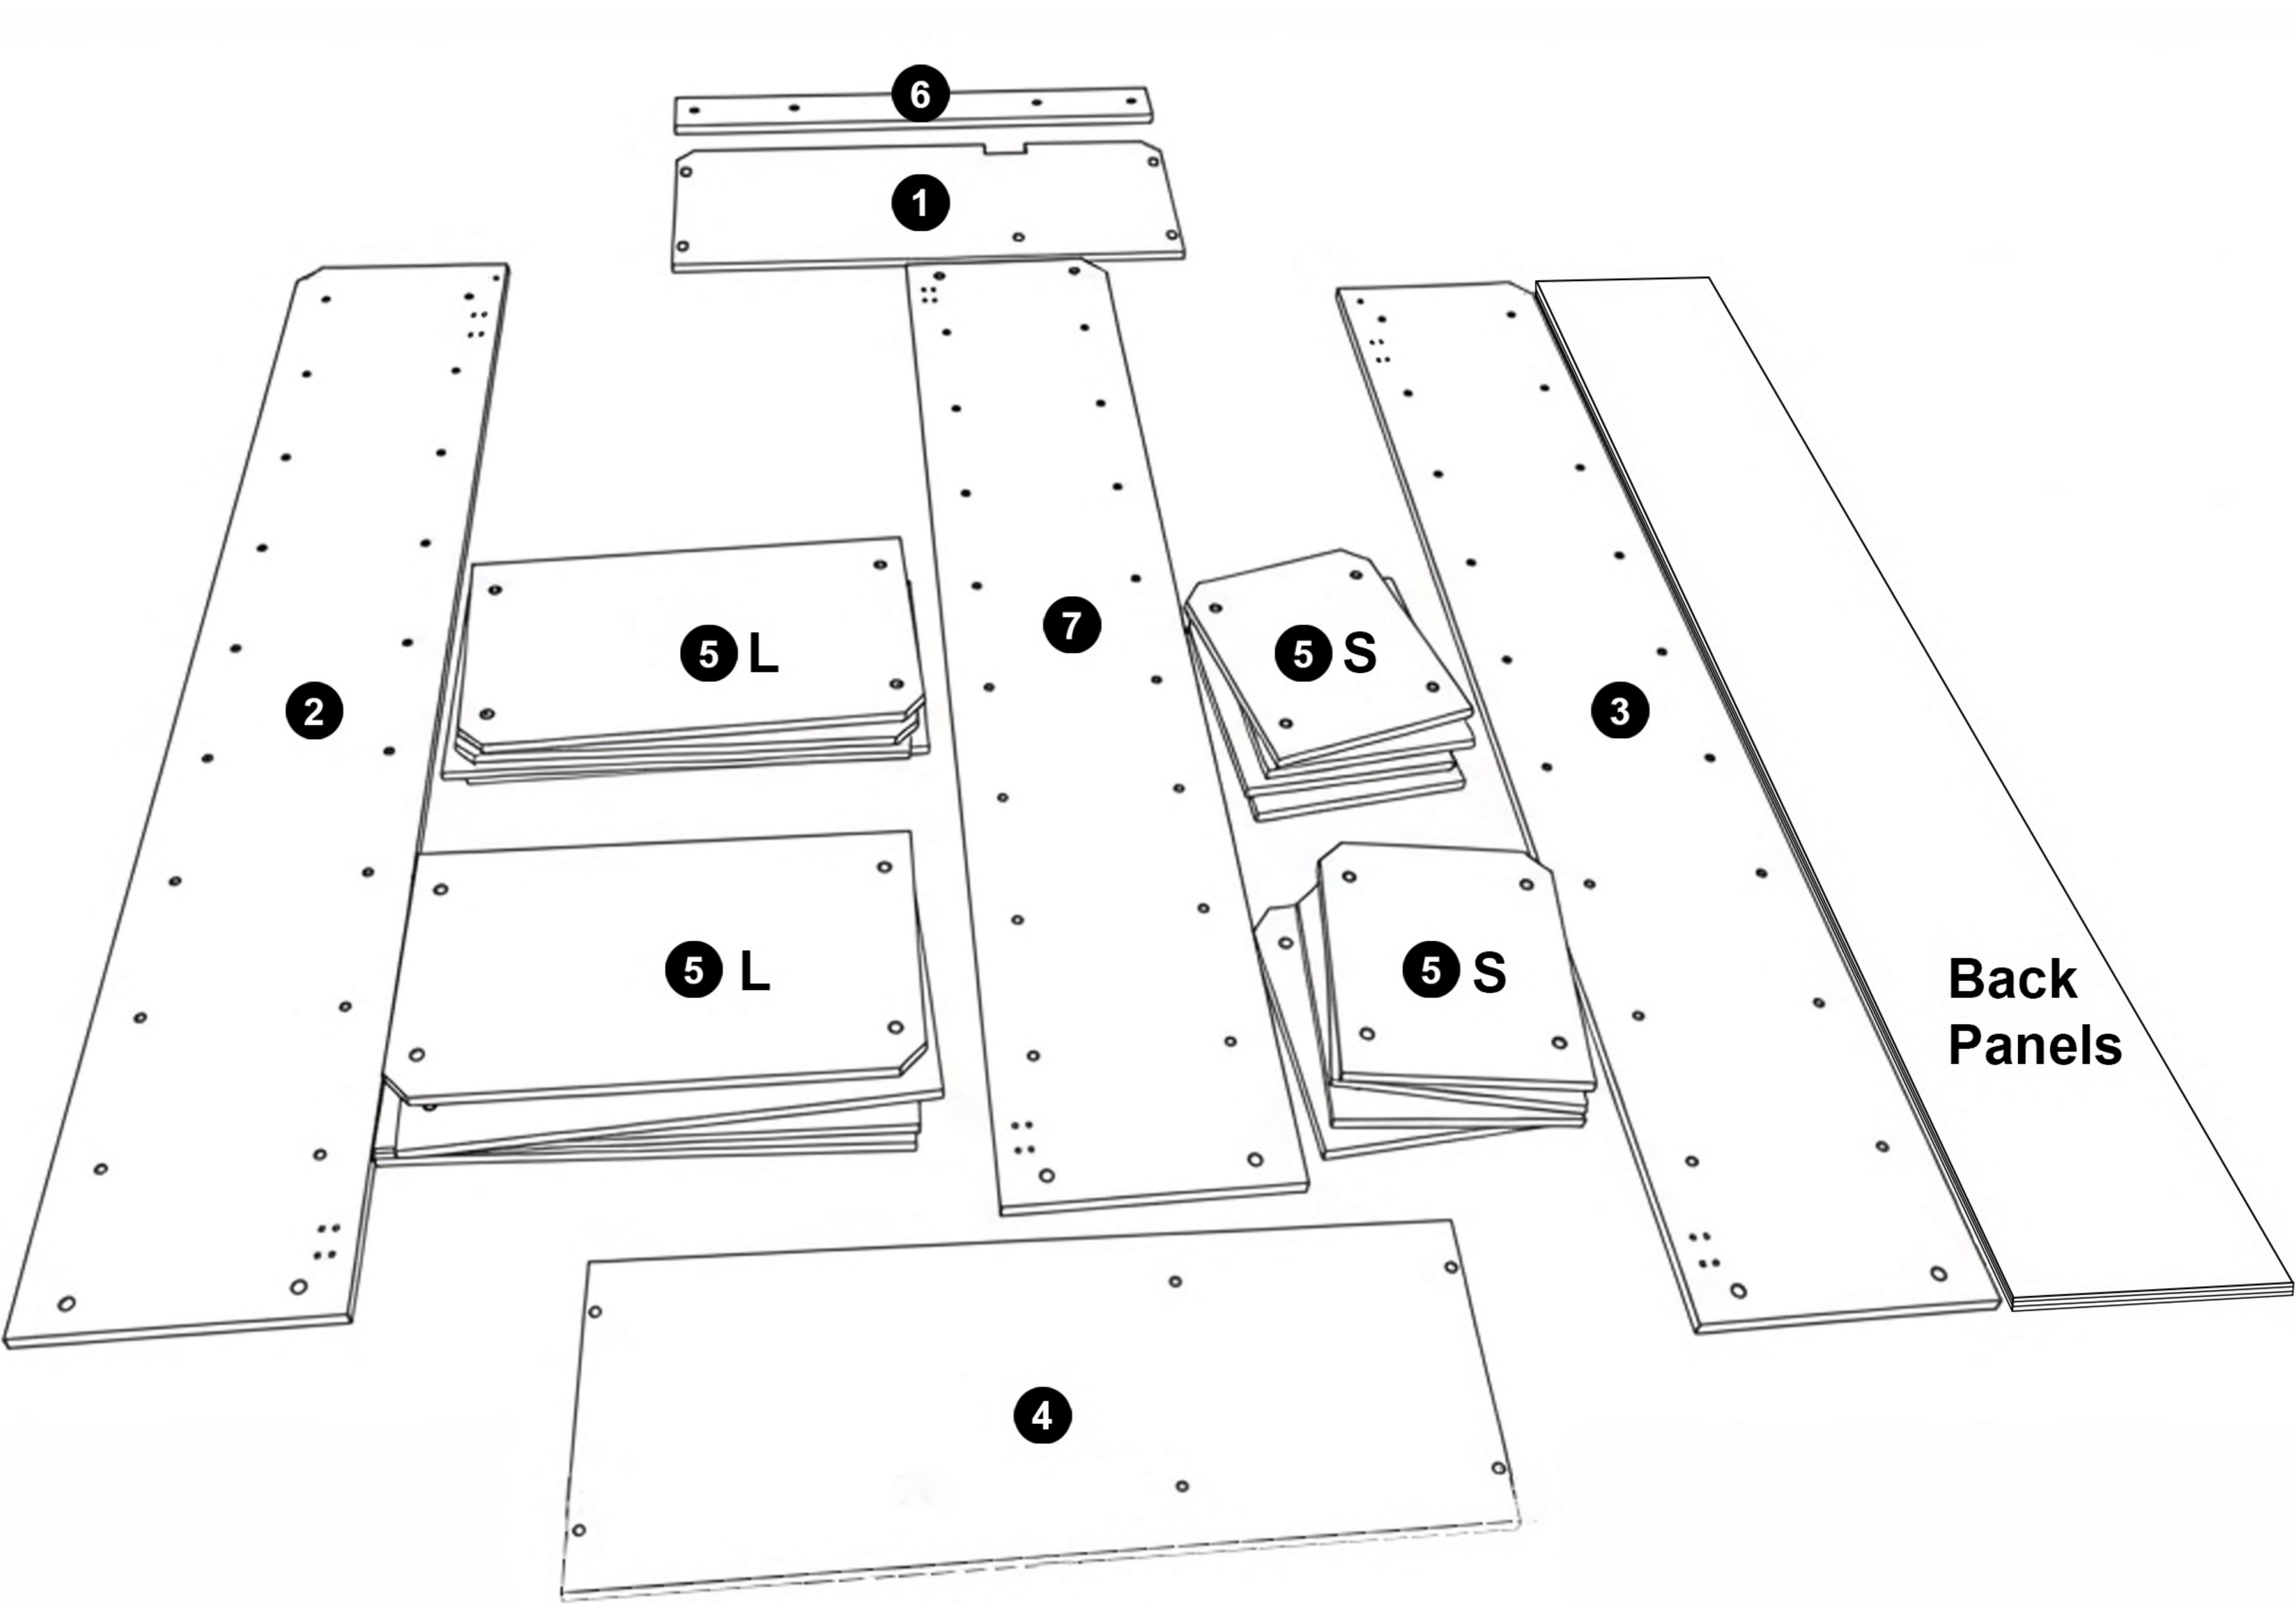

Step 2:

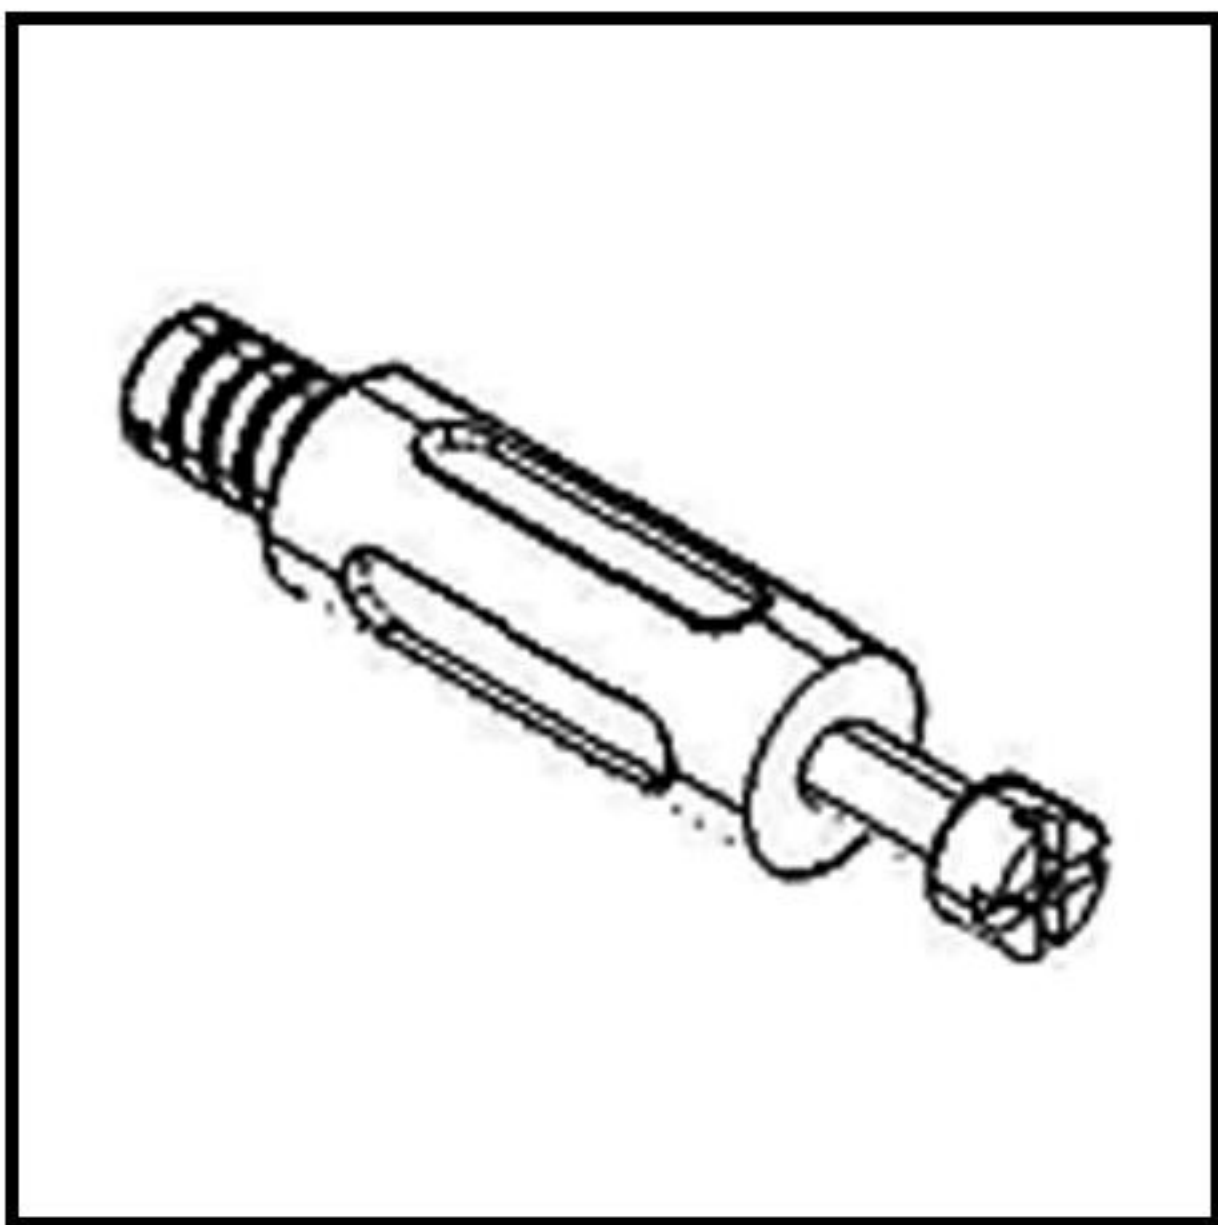


B

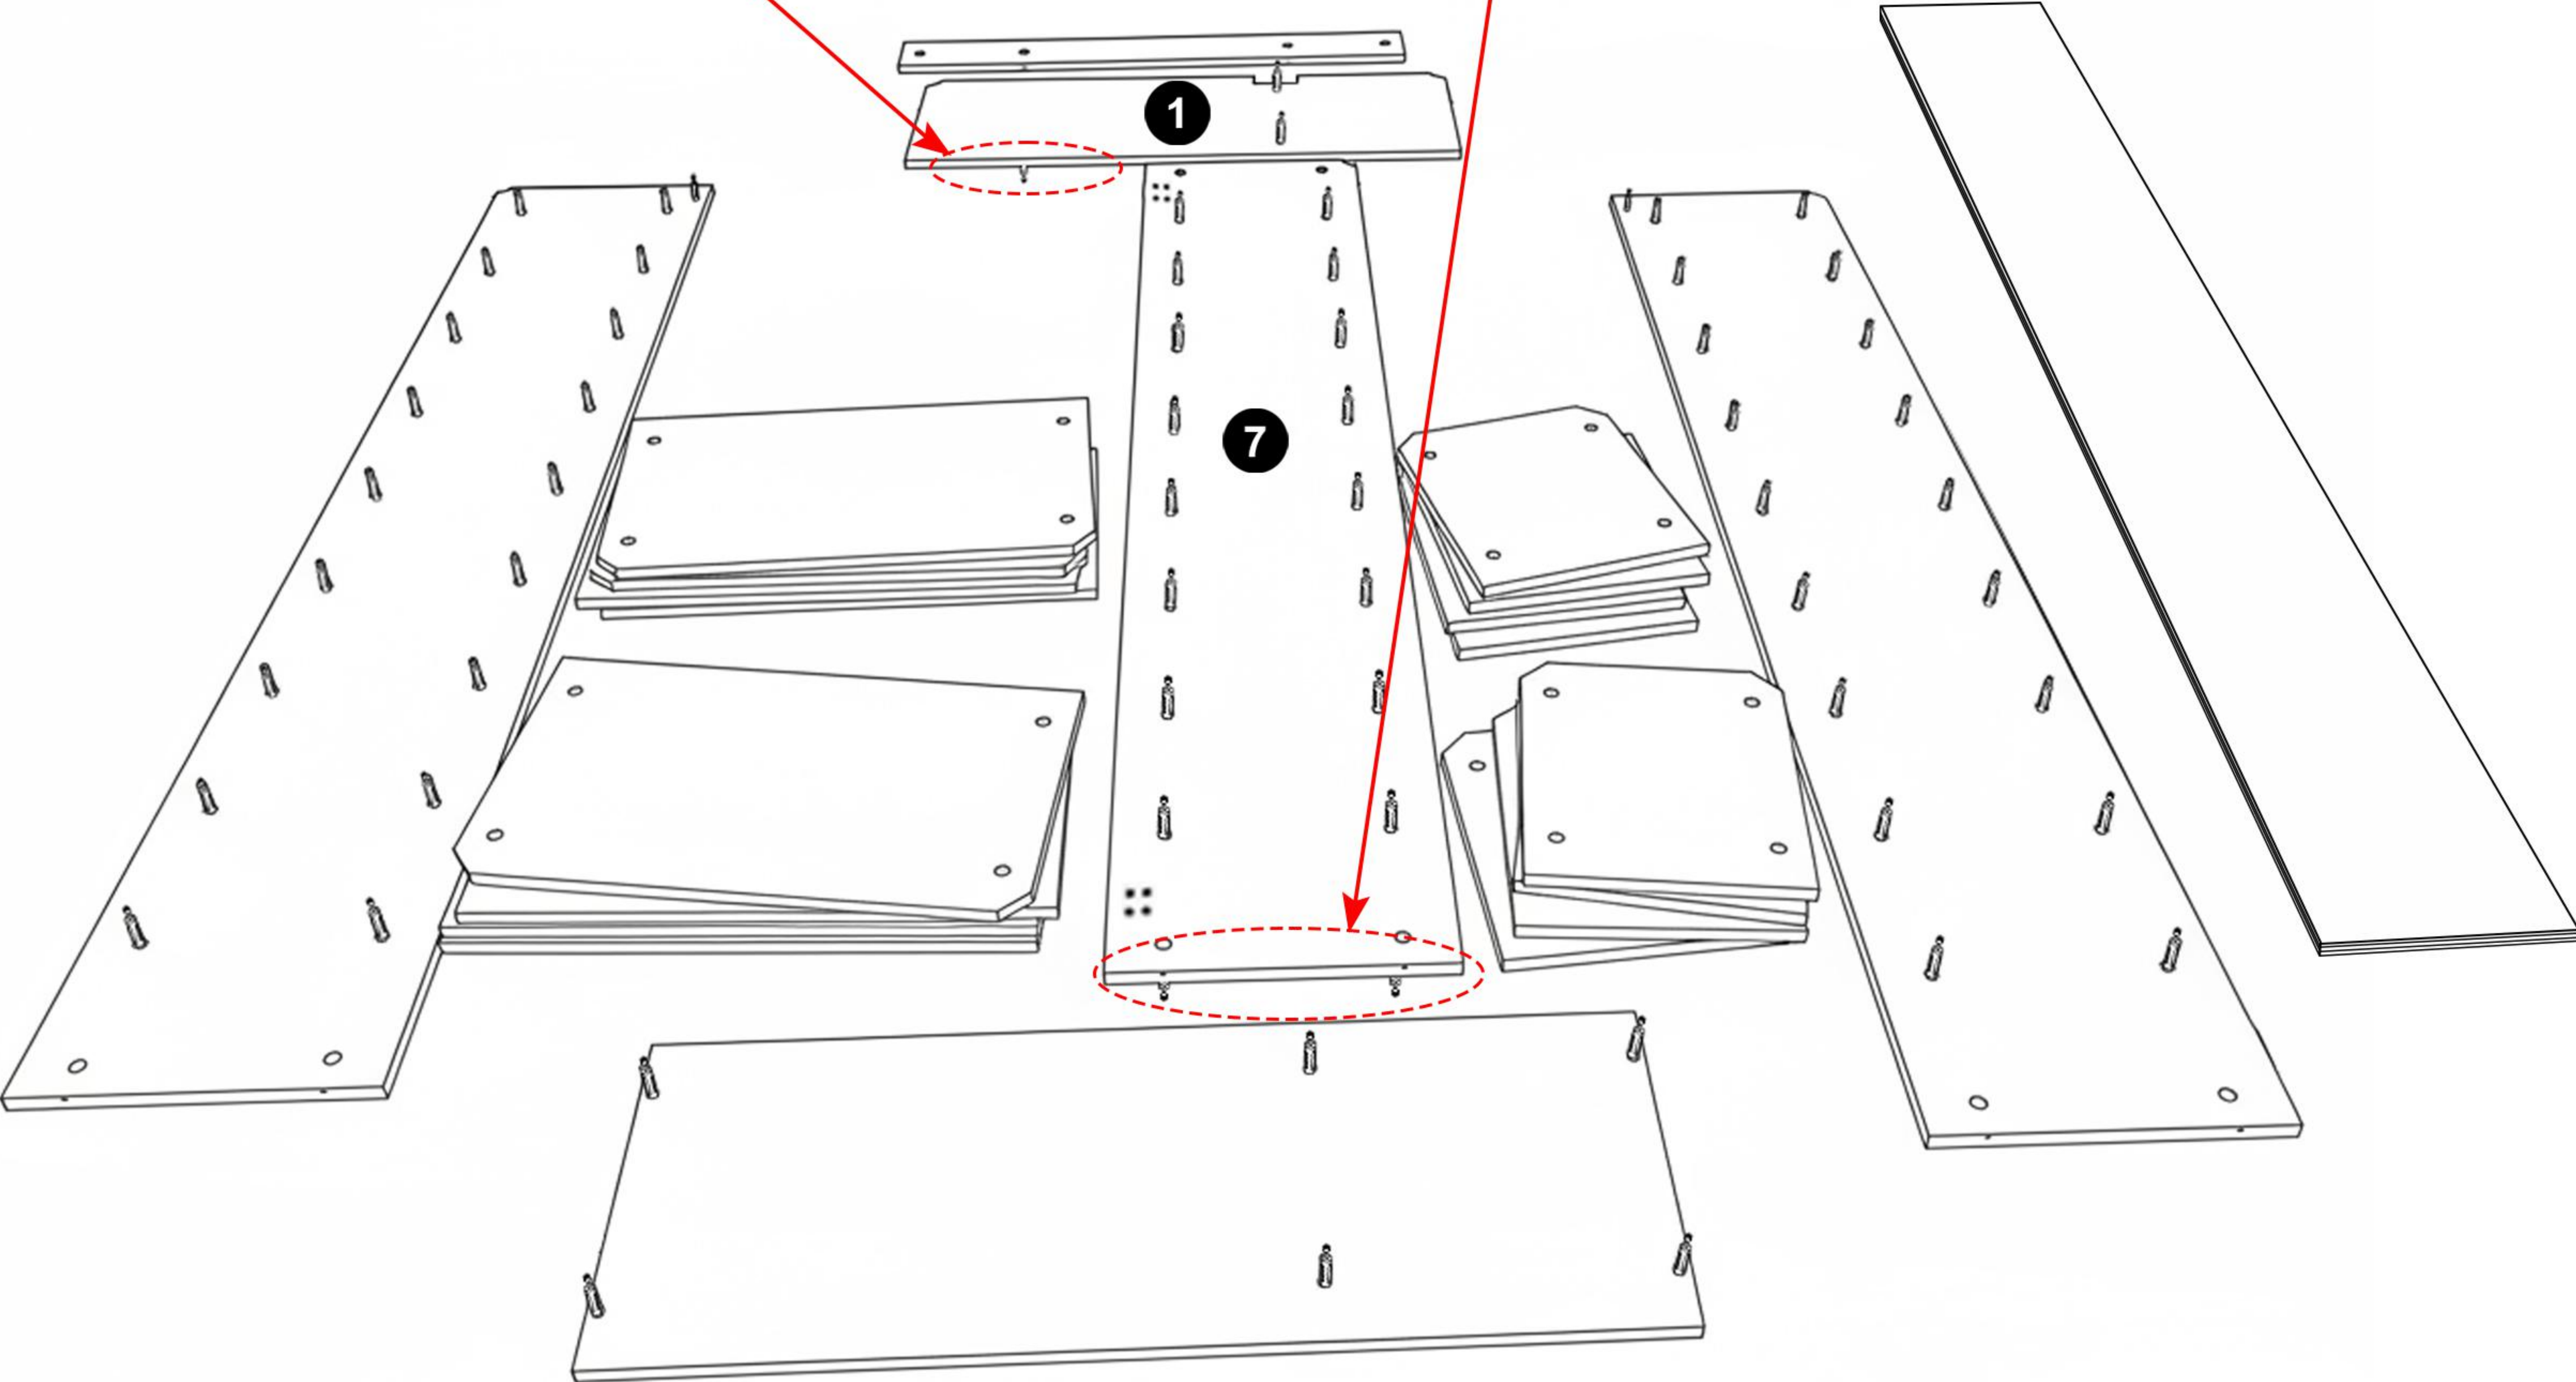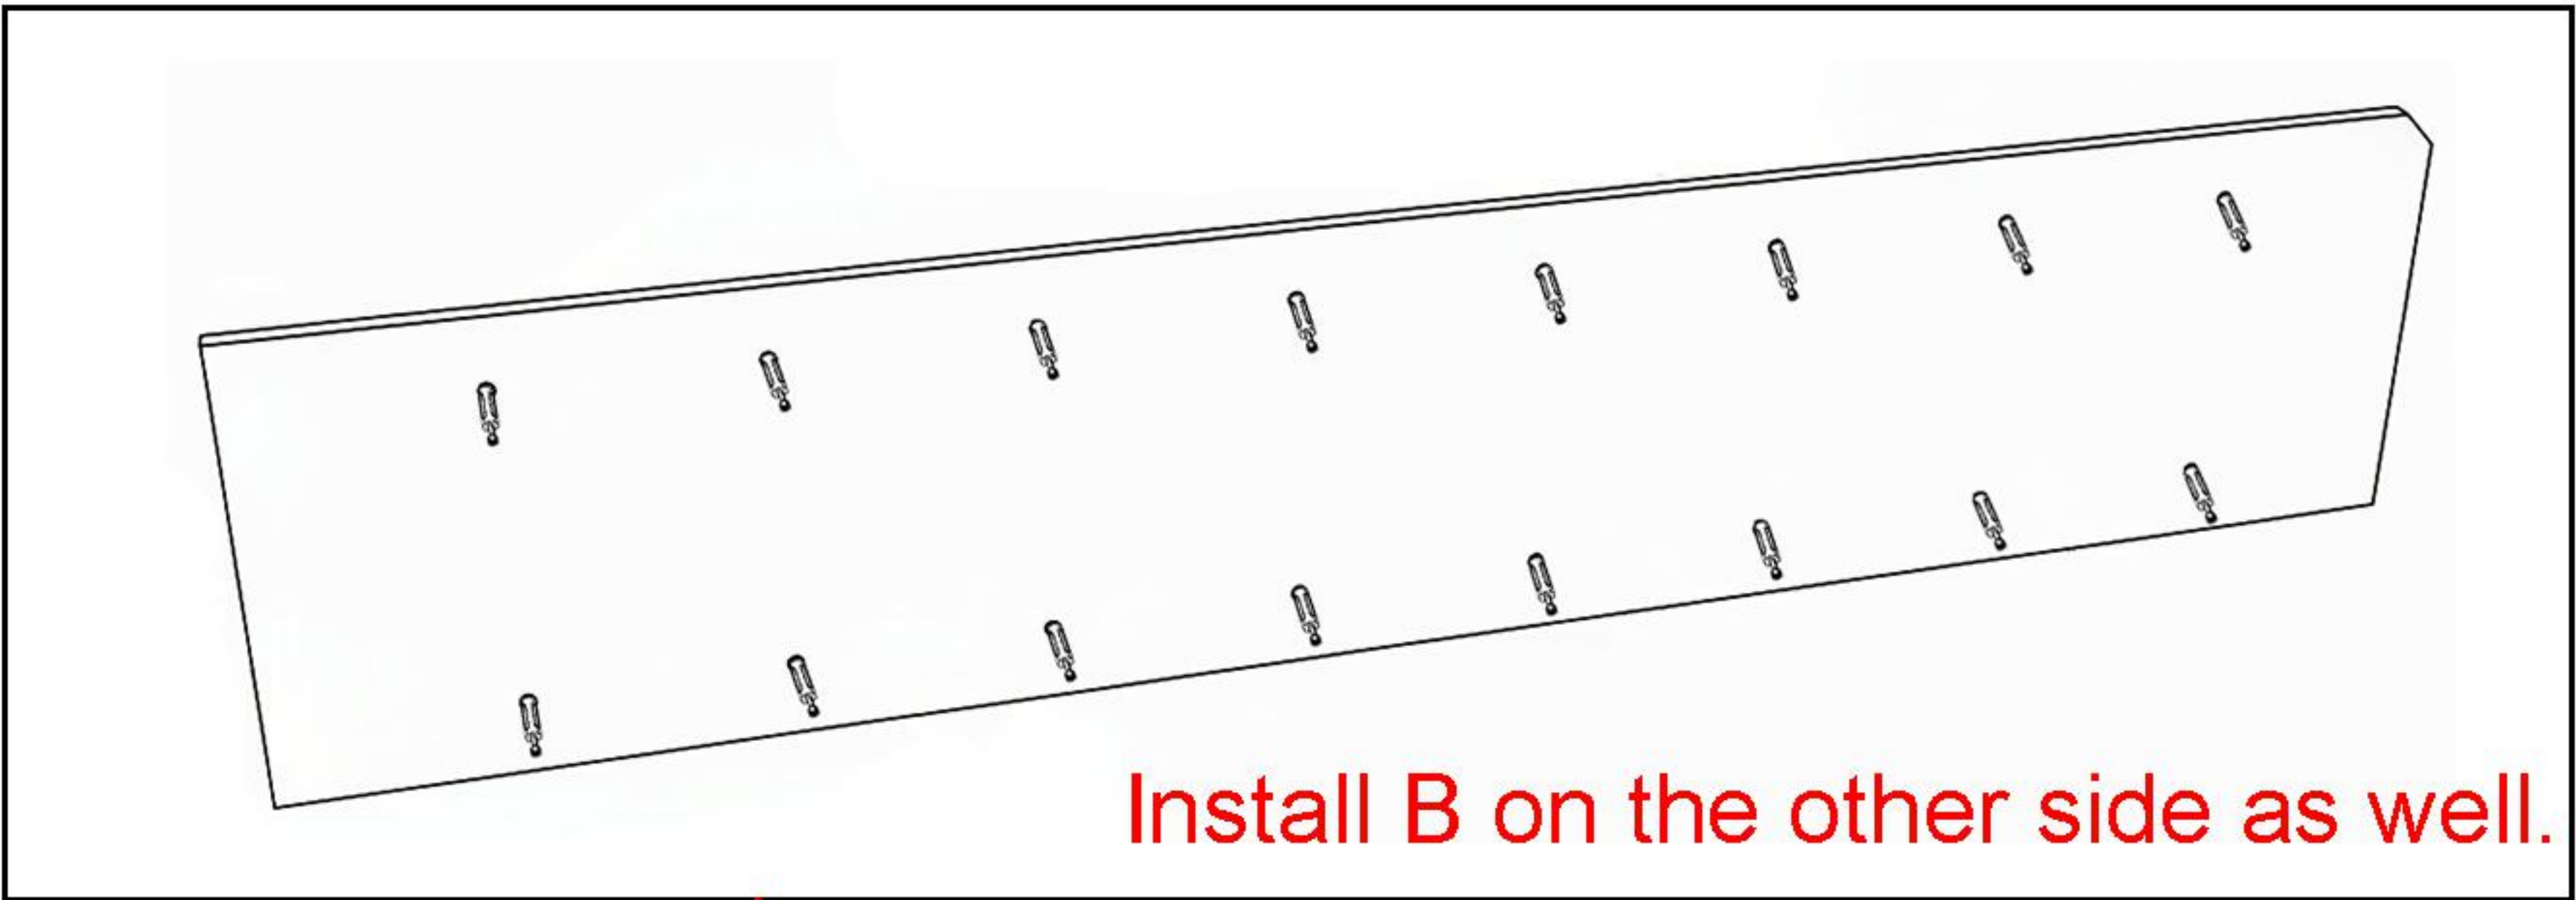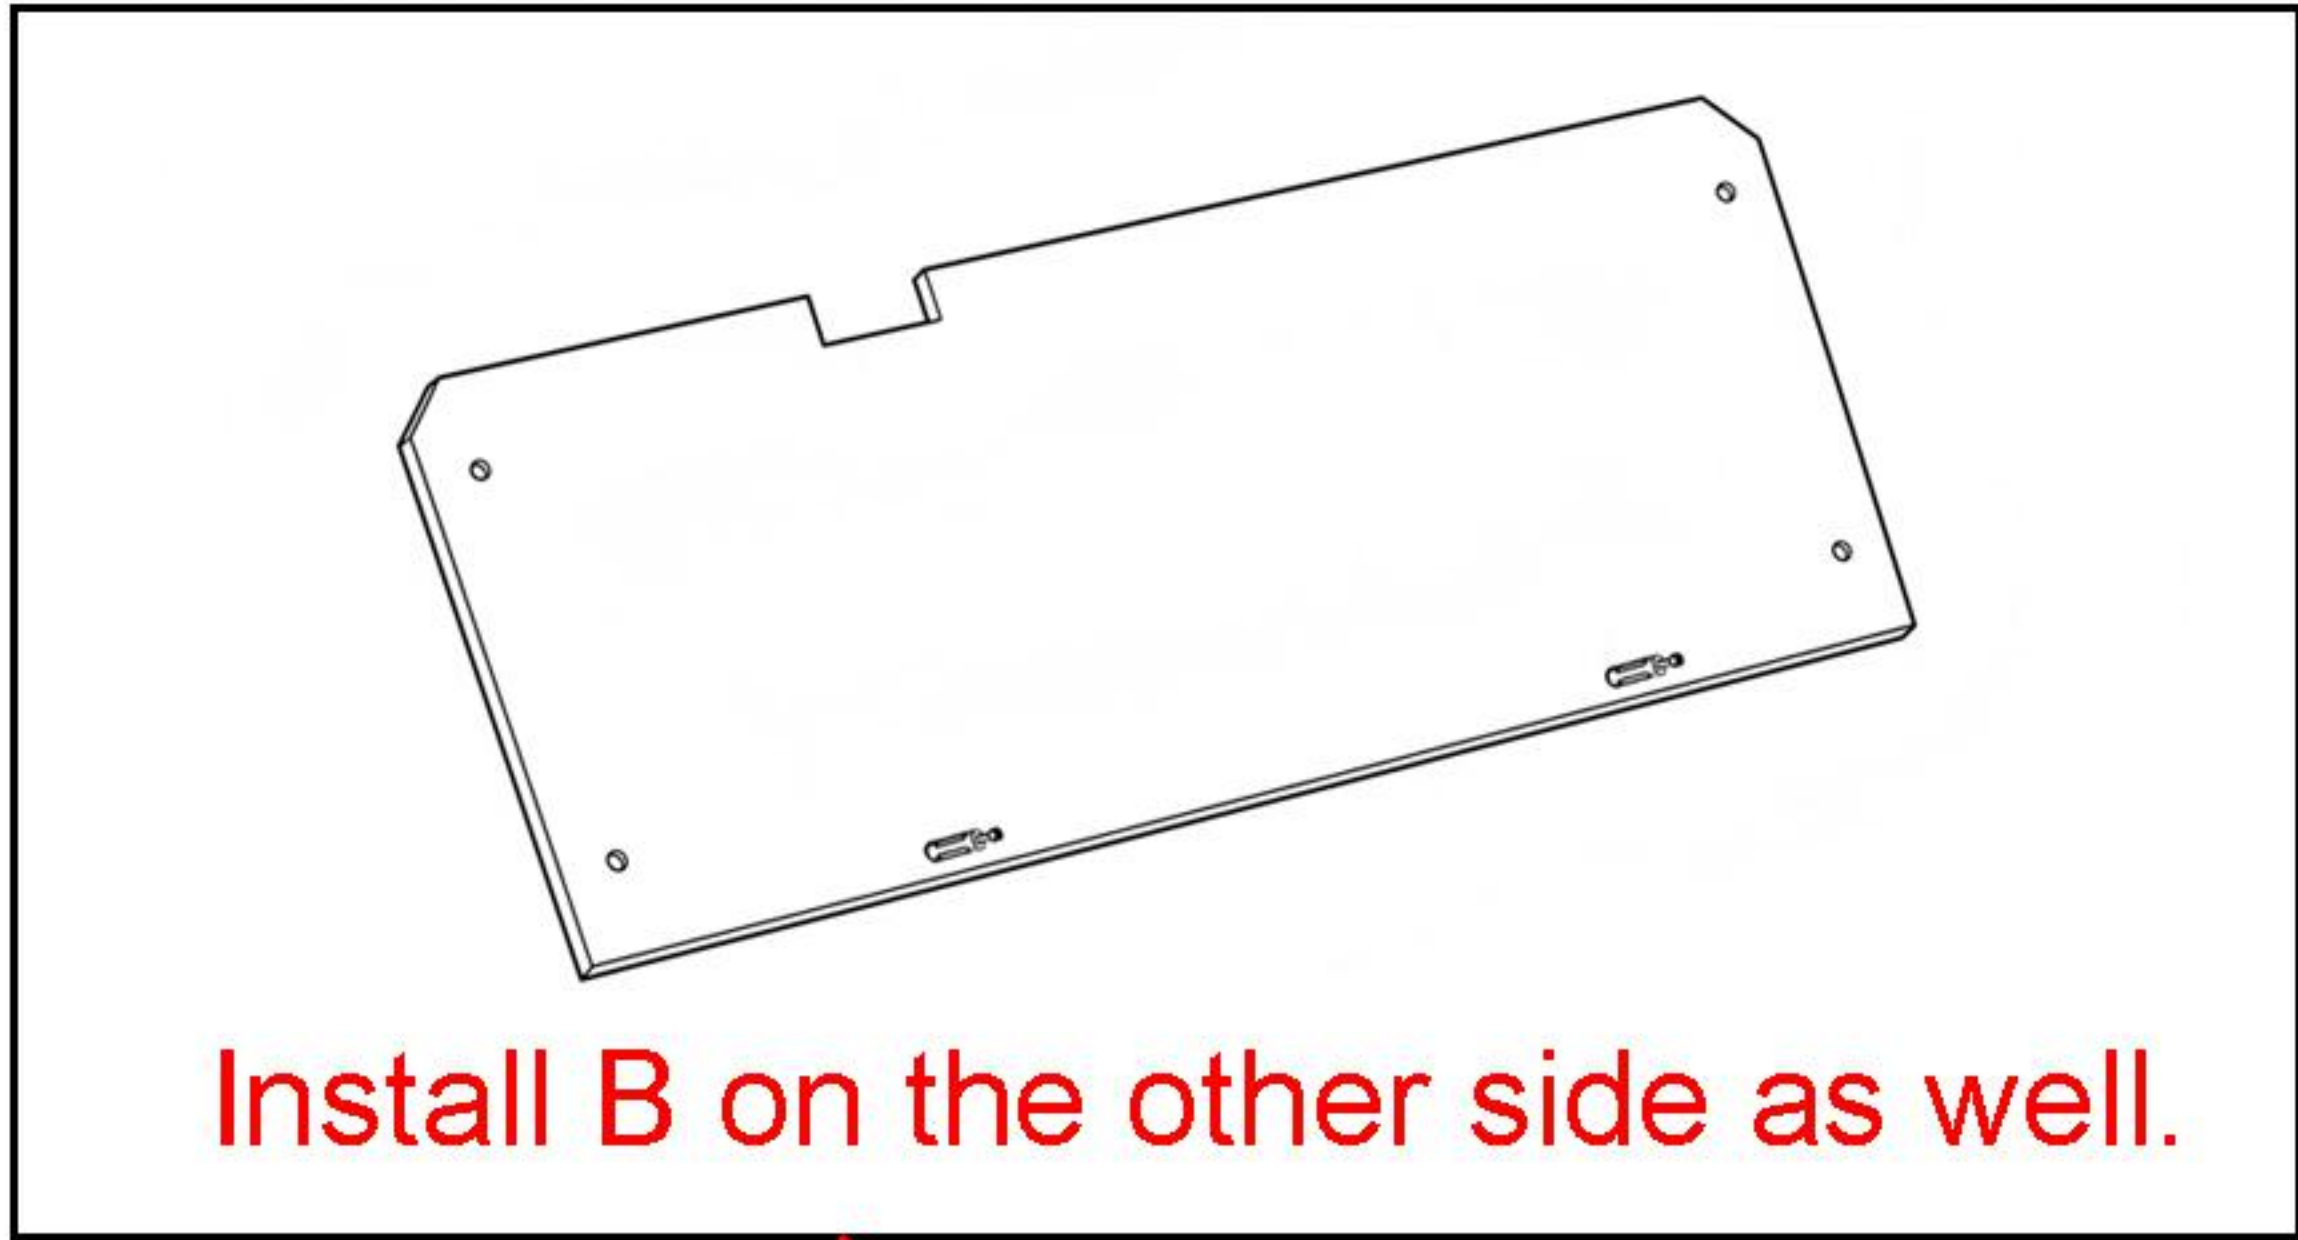


Screw B into all positions with white inserts. Note: Panels No.1 and No.7 also need B installed on the reverse side.

Step 3:

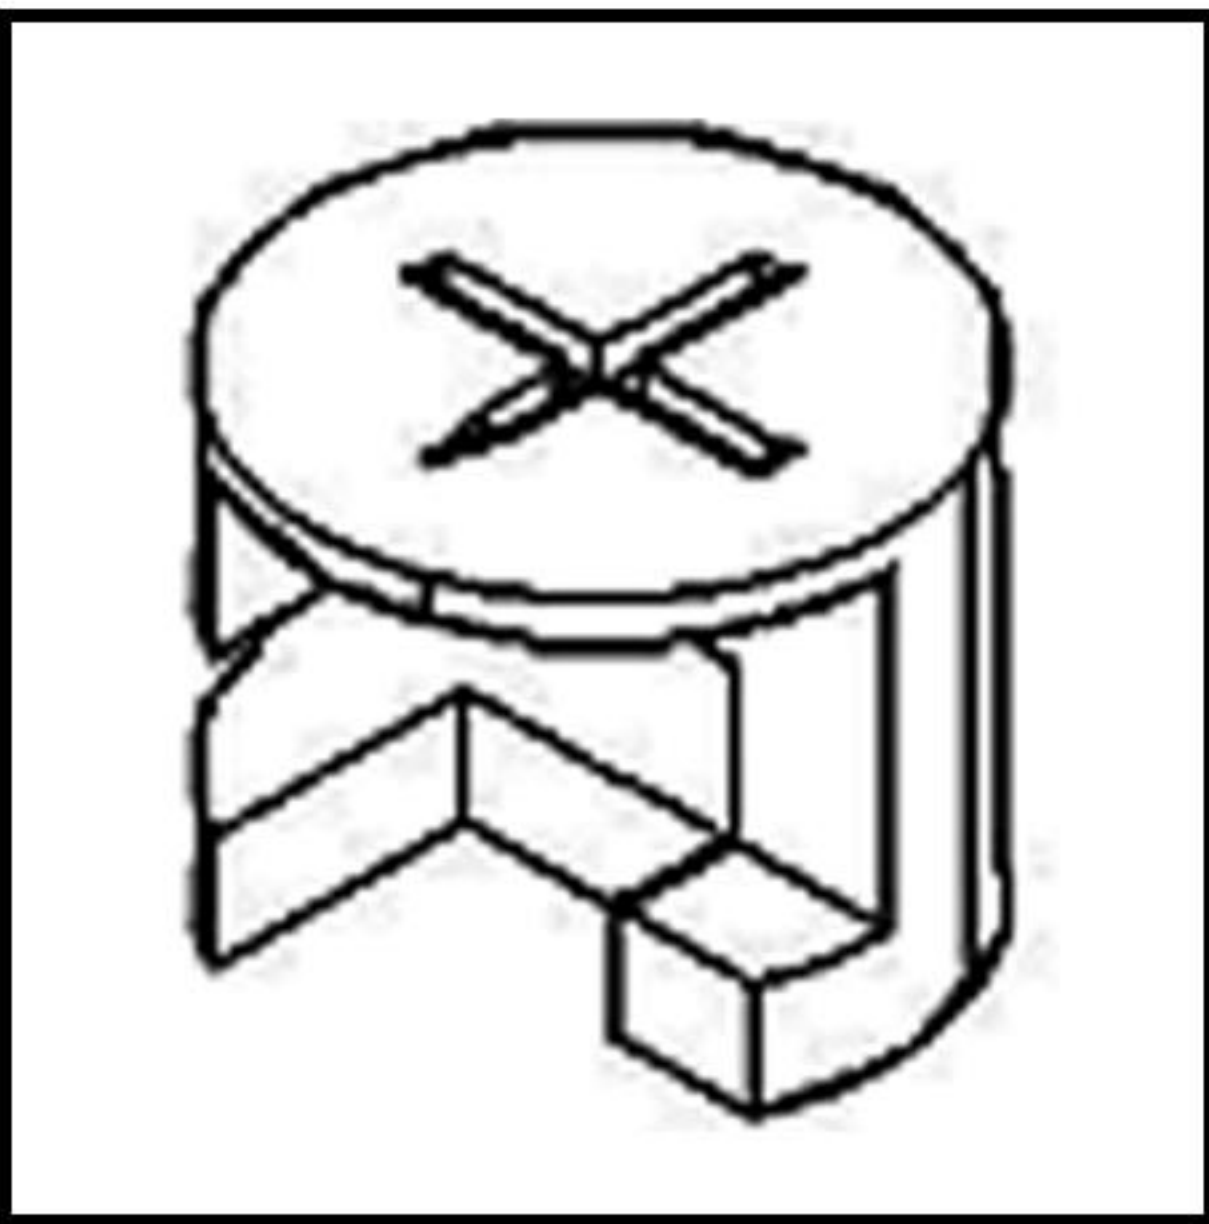


A

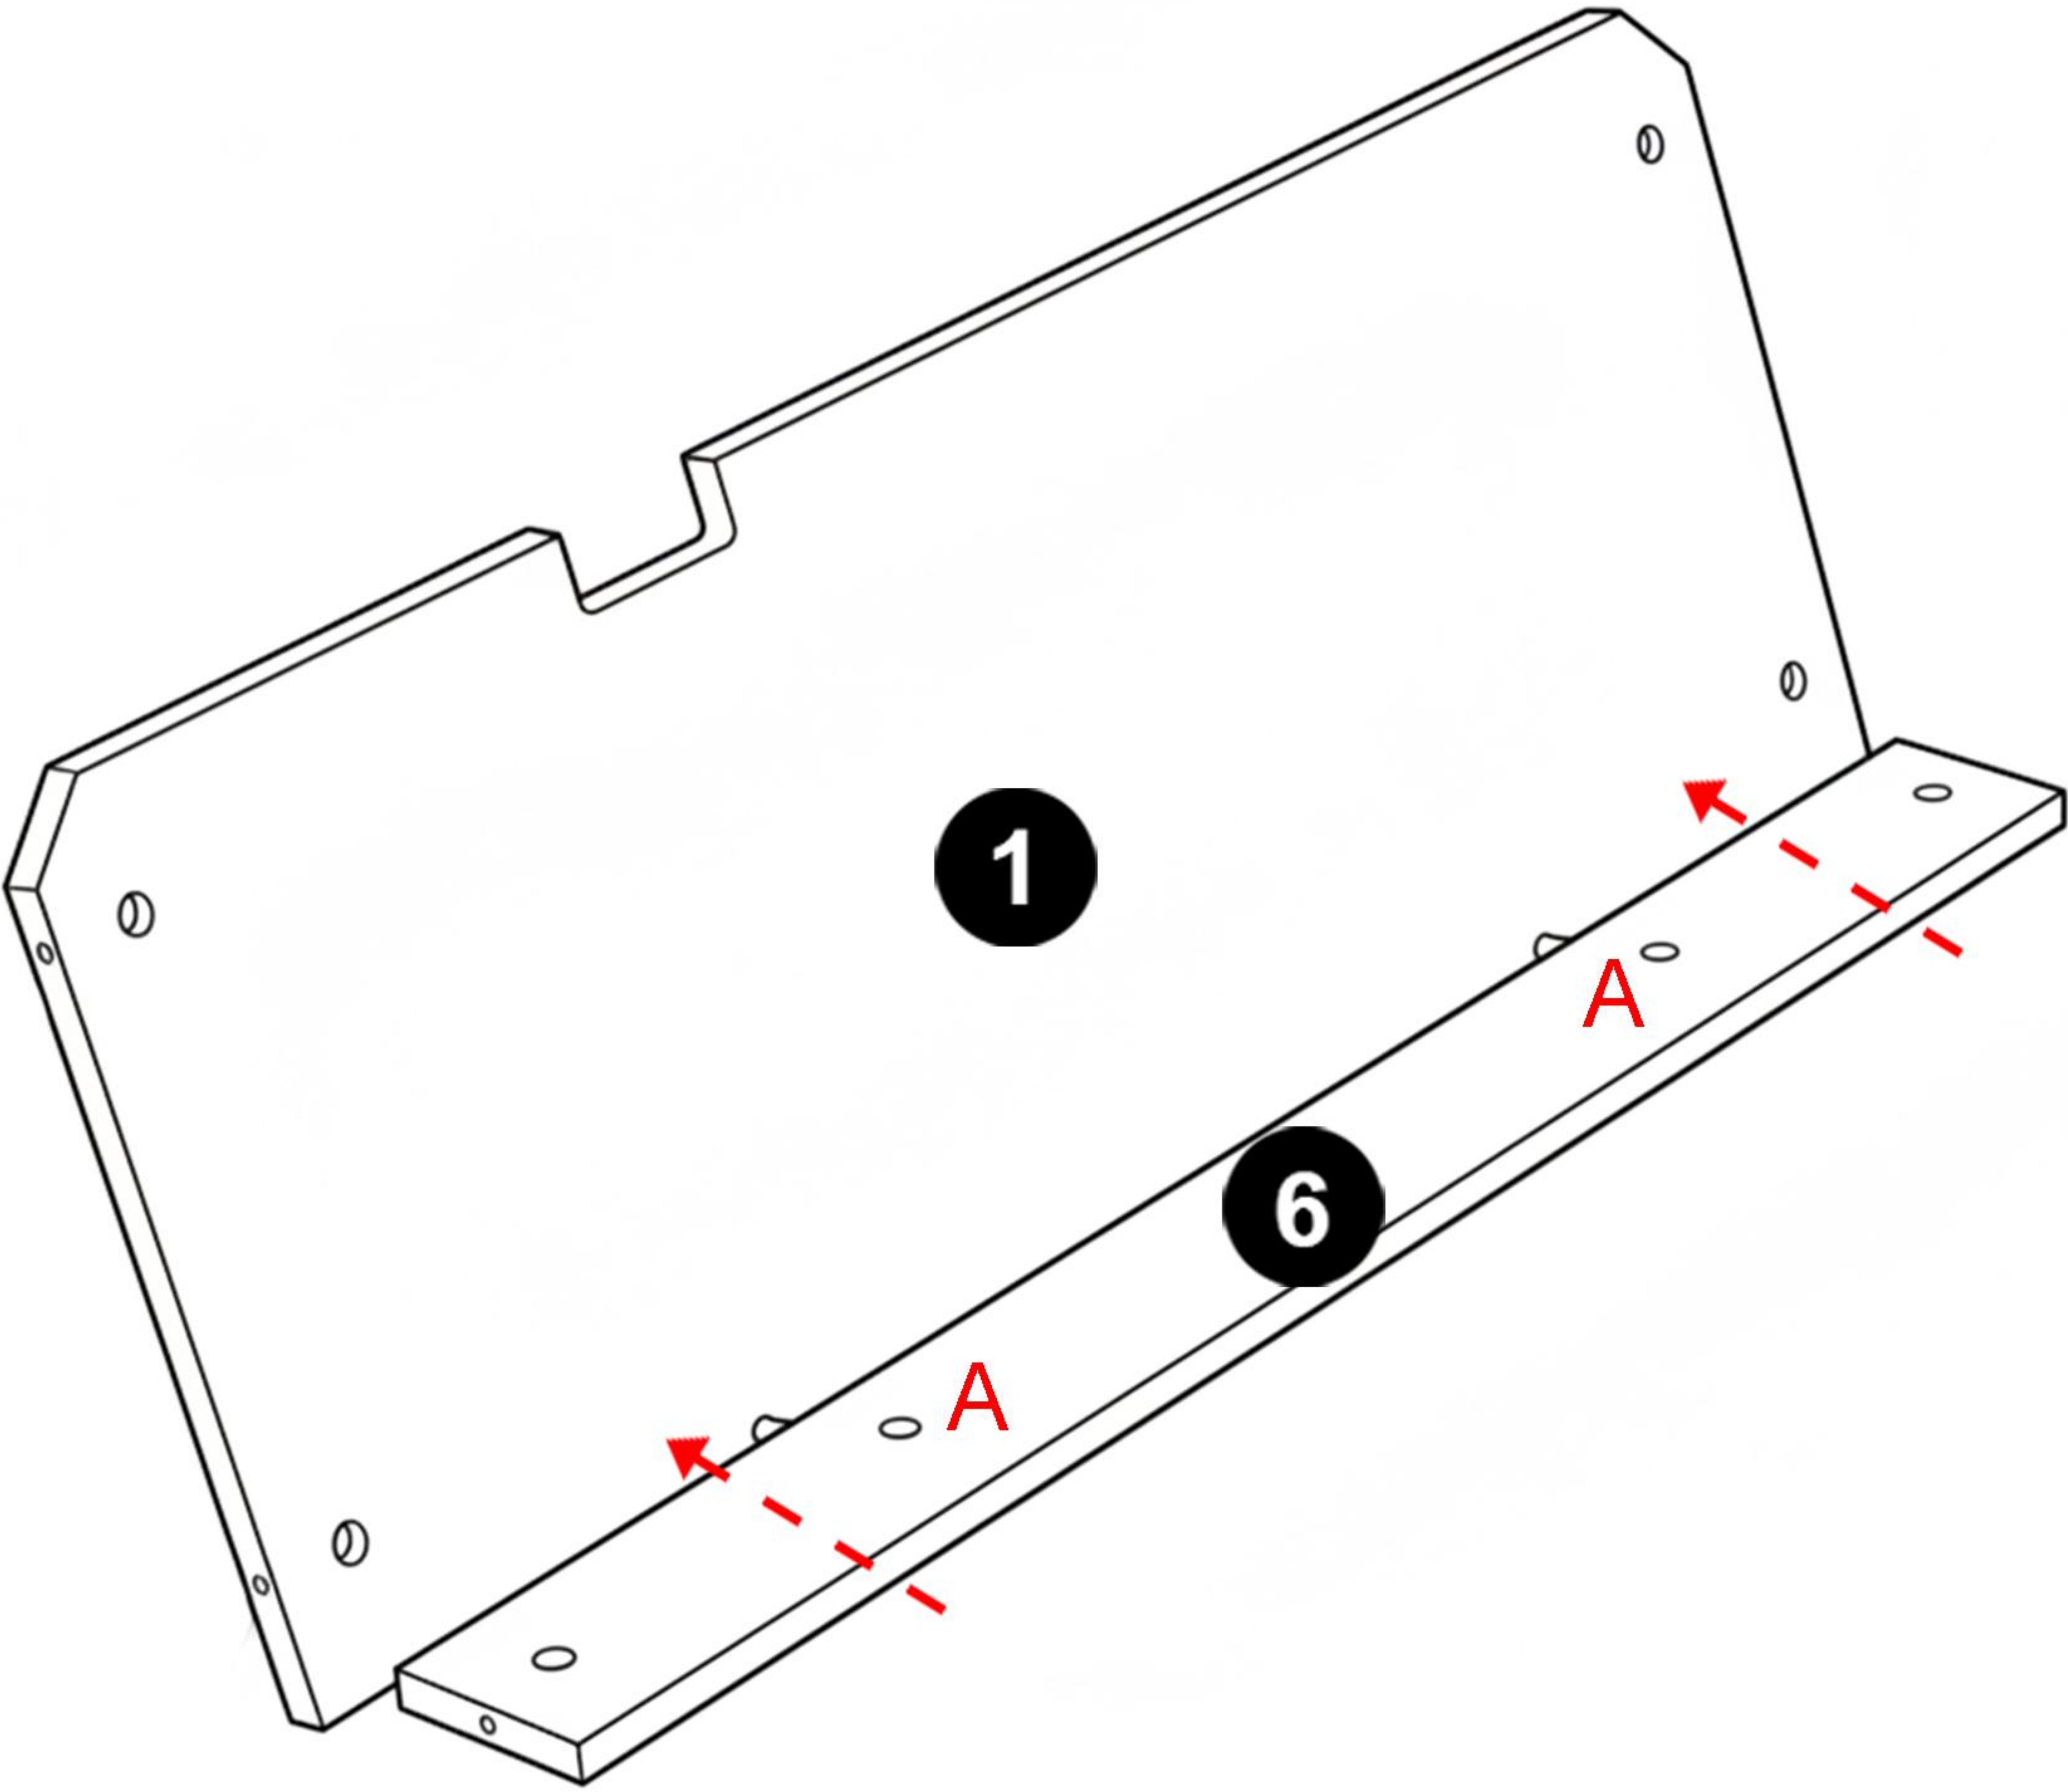



Step 4:

Align the beveled side of Panel No.7 upward to fit into the groove of Panel No.1.

Align the grooved side of Panel No.1 with Panel No.7 for assembly.

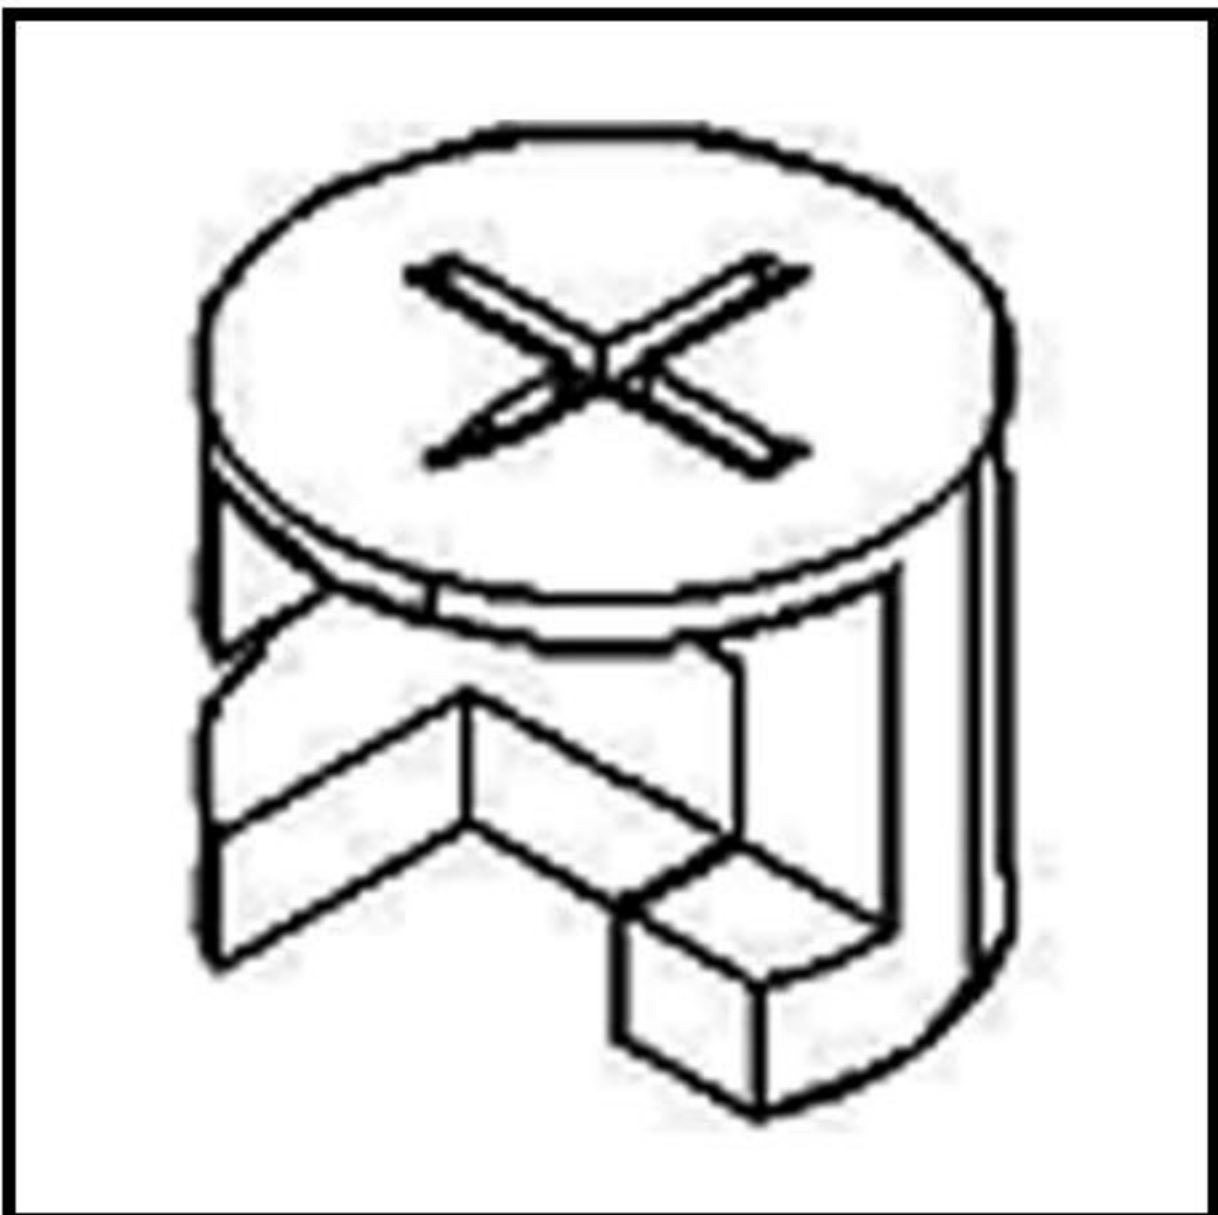


A

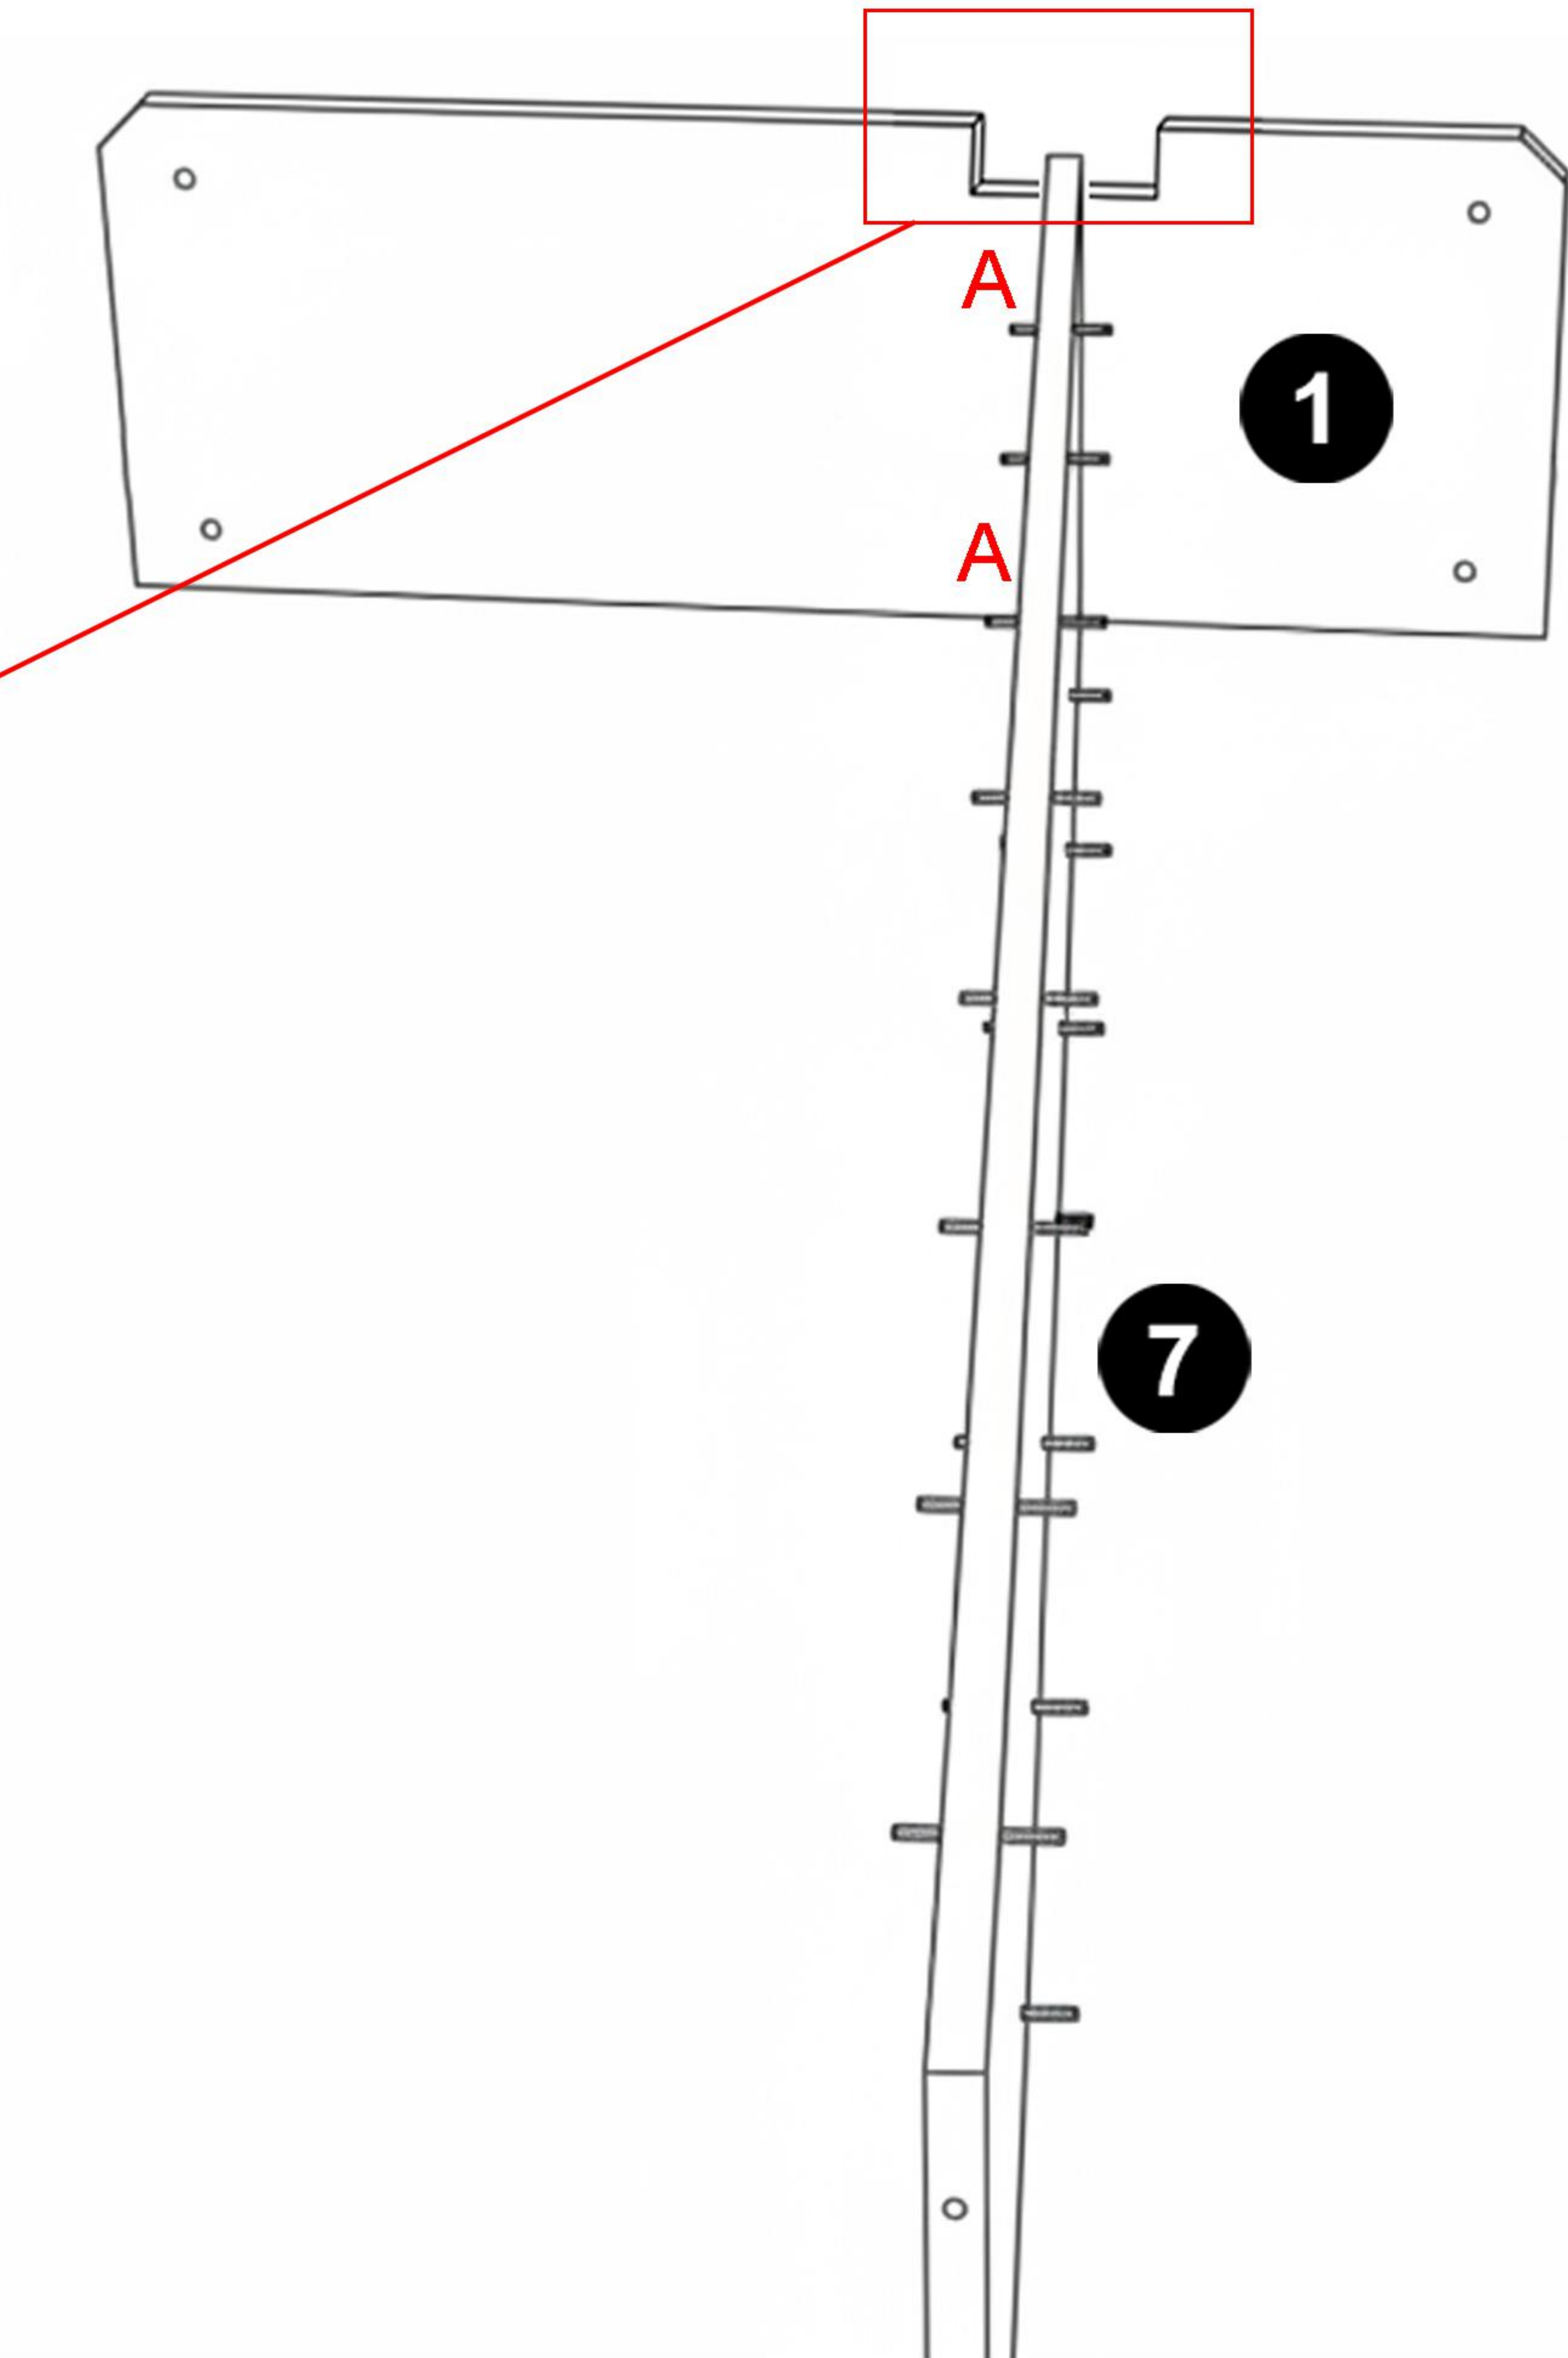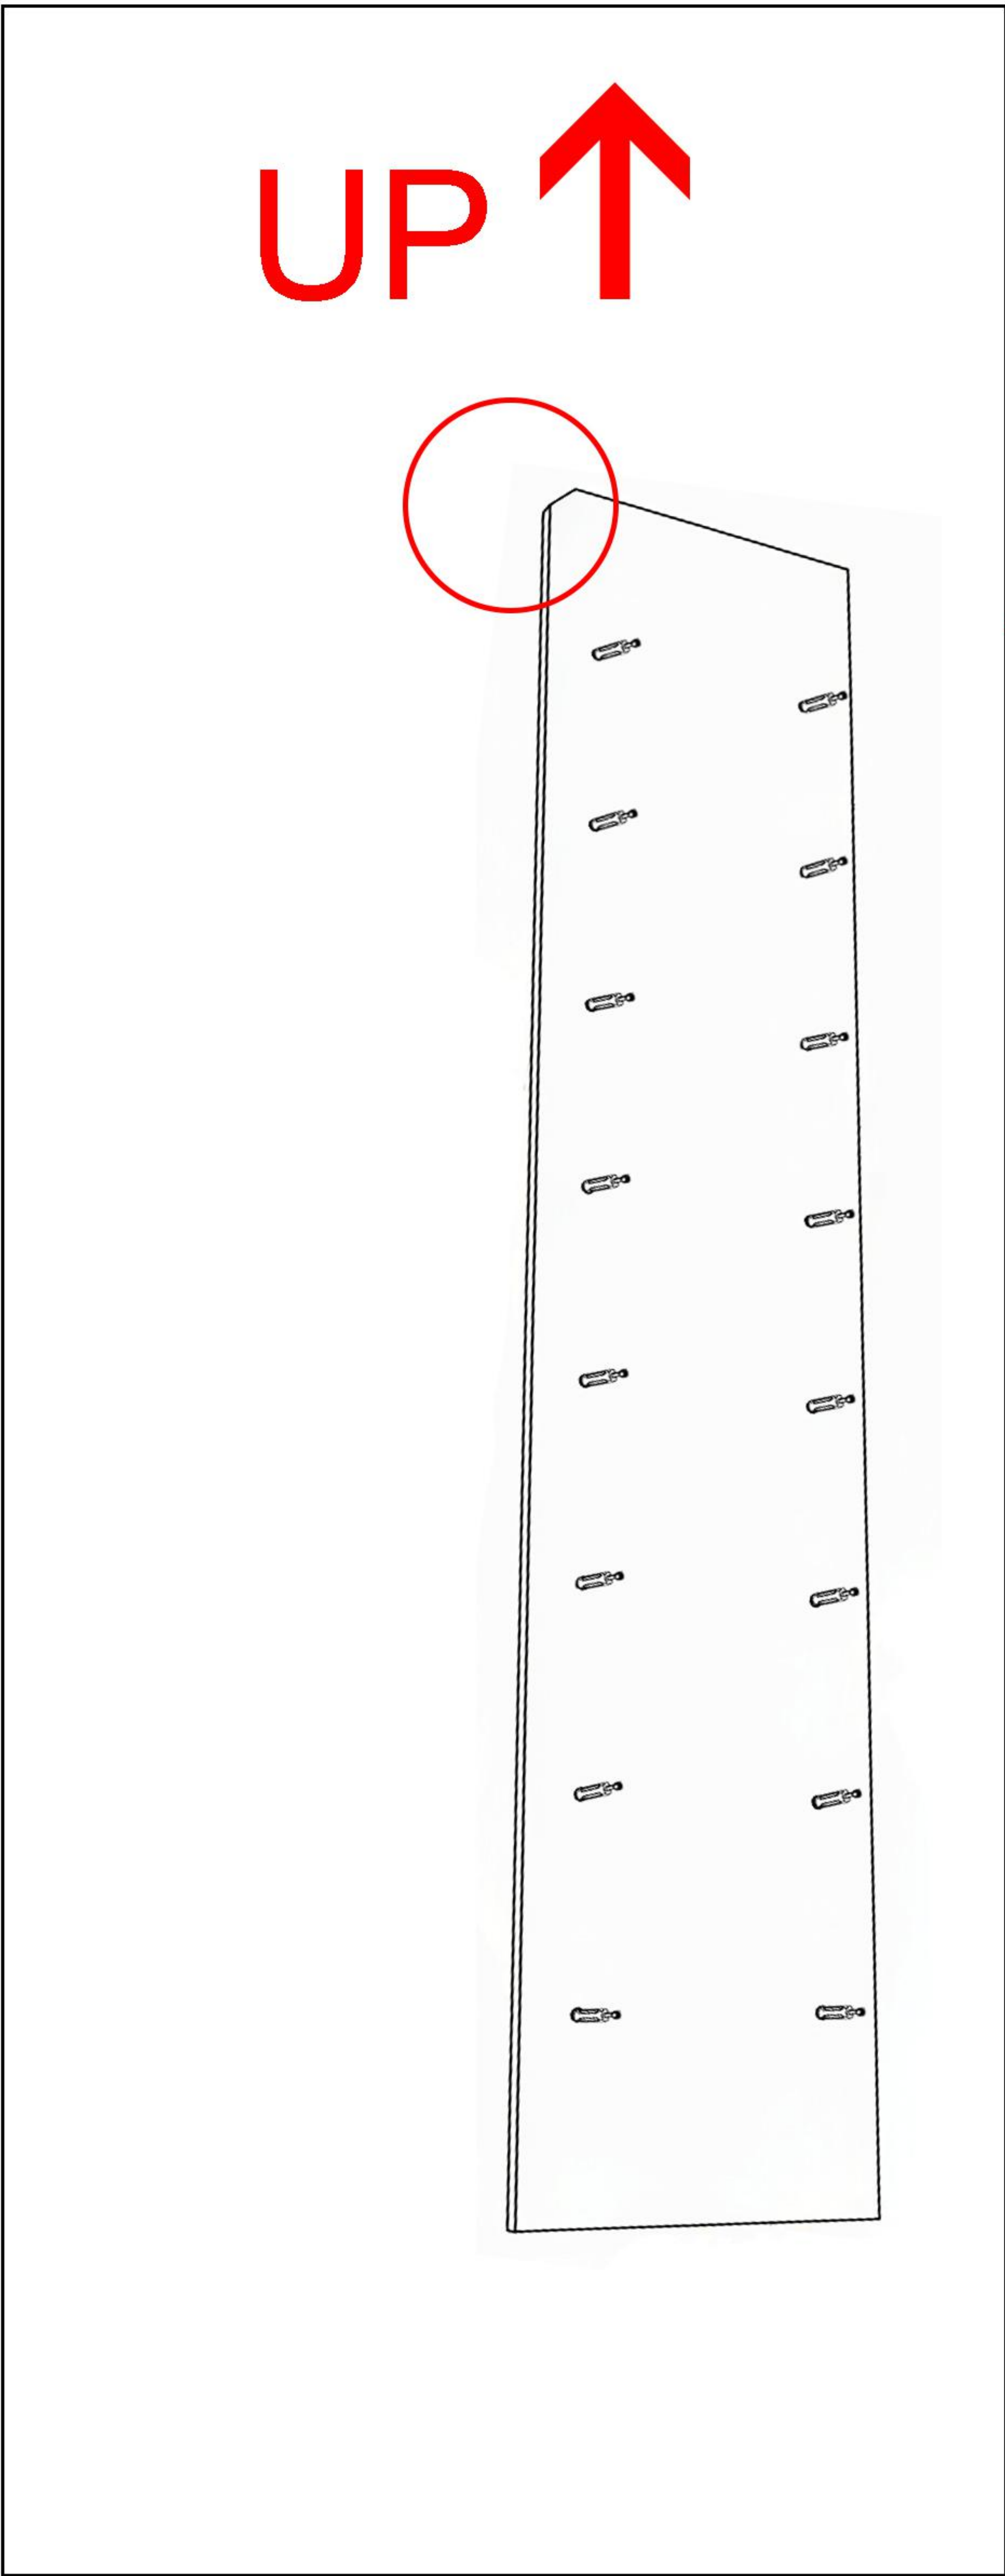


Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 5:

Install 5 Large. Note: The beveled edges should all face the back of the cabinet. The back is currently facing up—make sure all directions stay consistent.

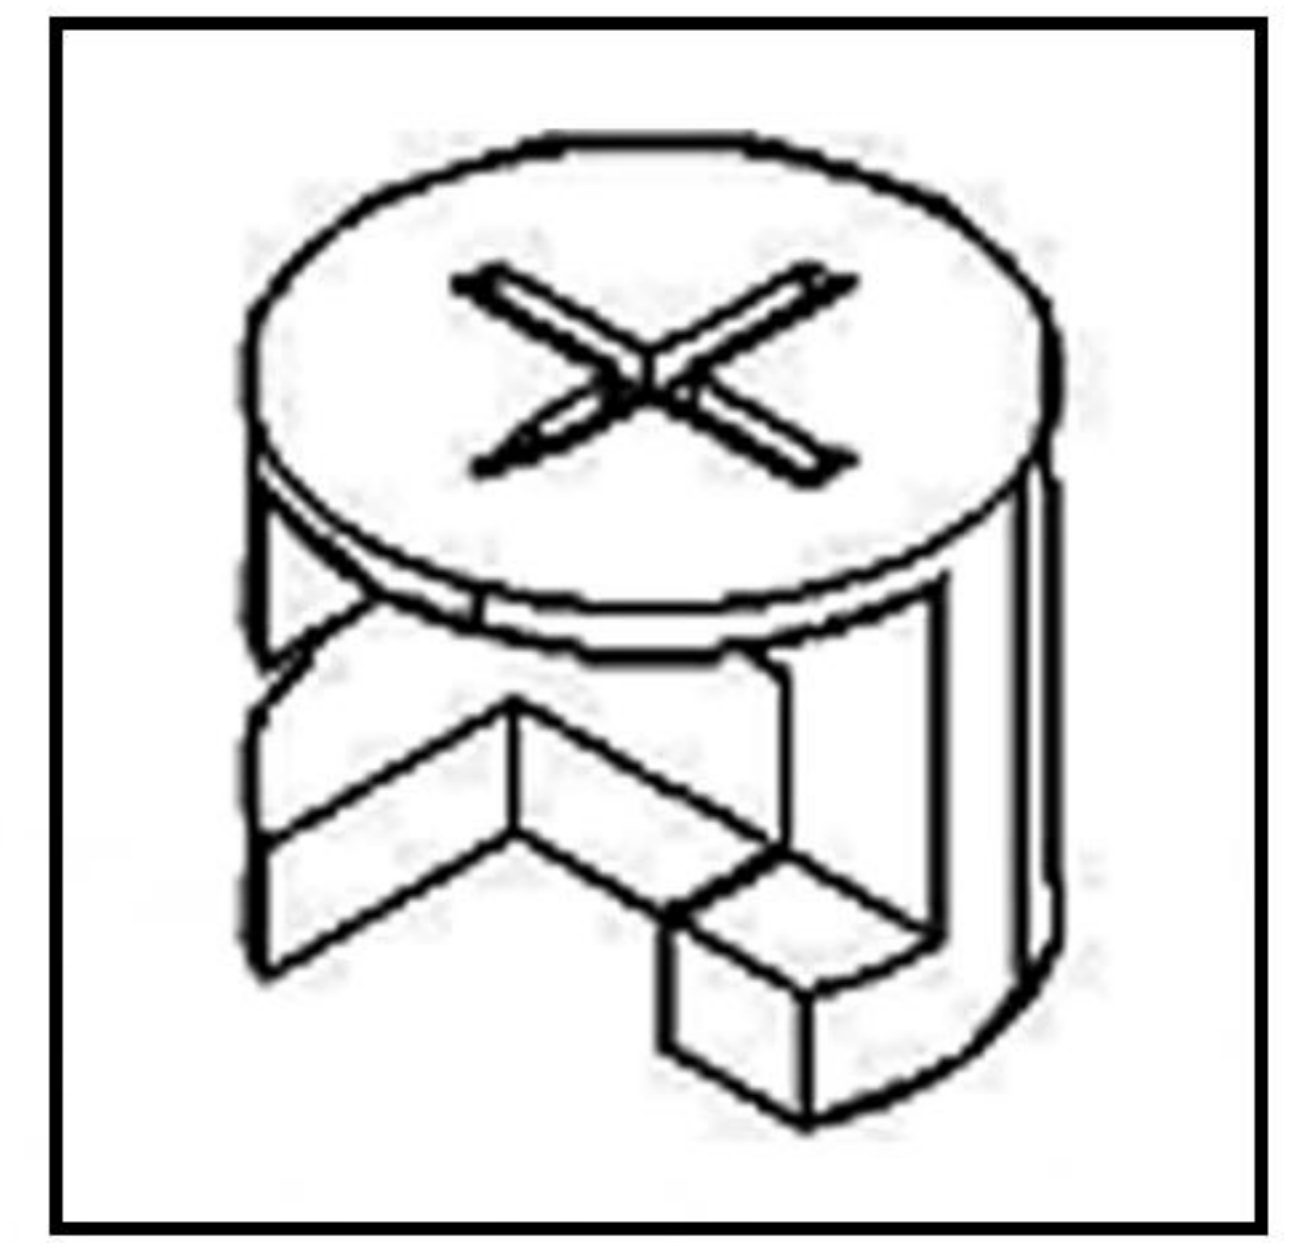


A

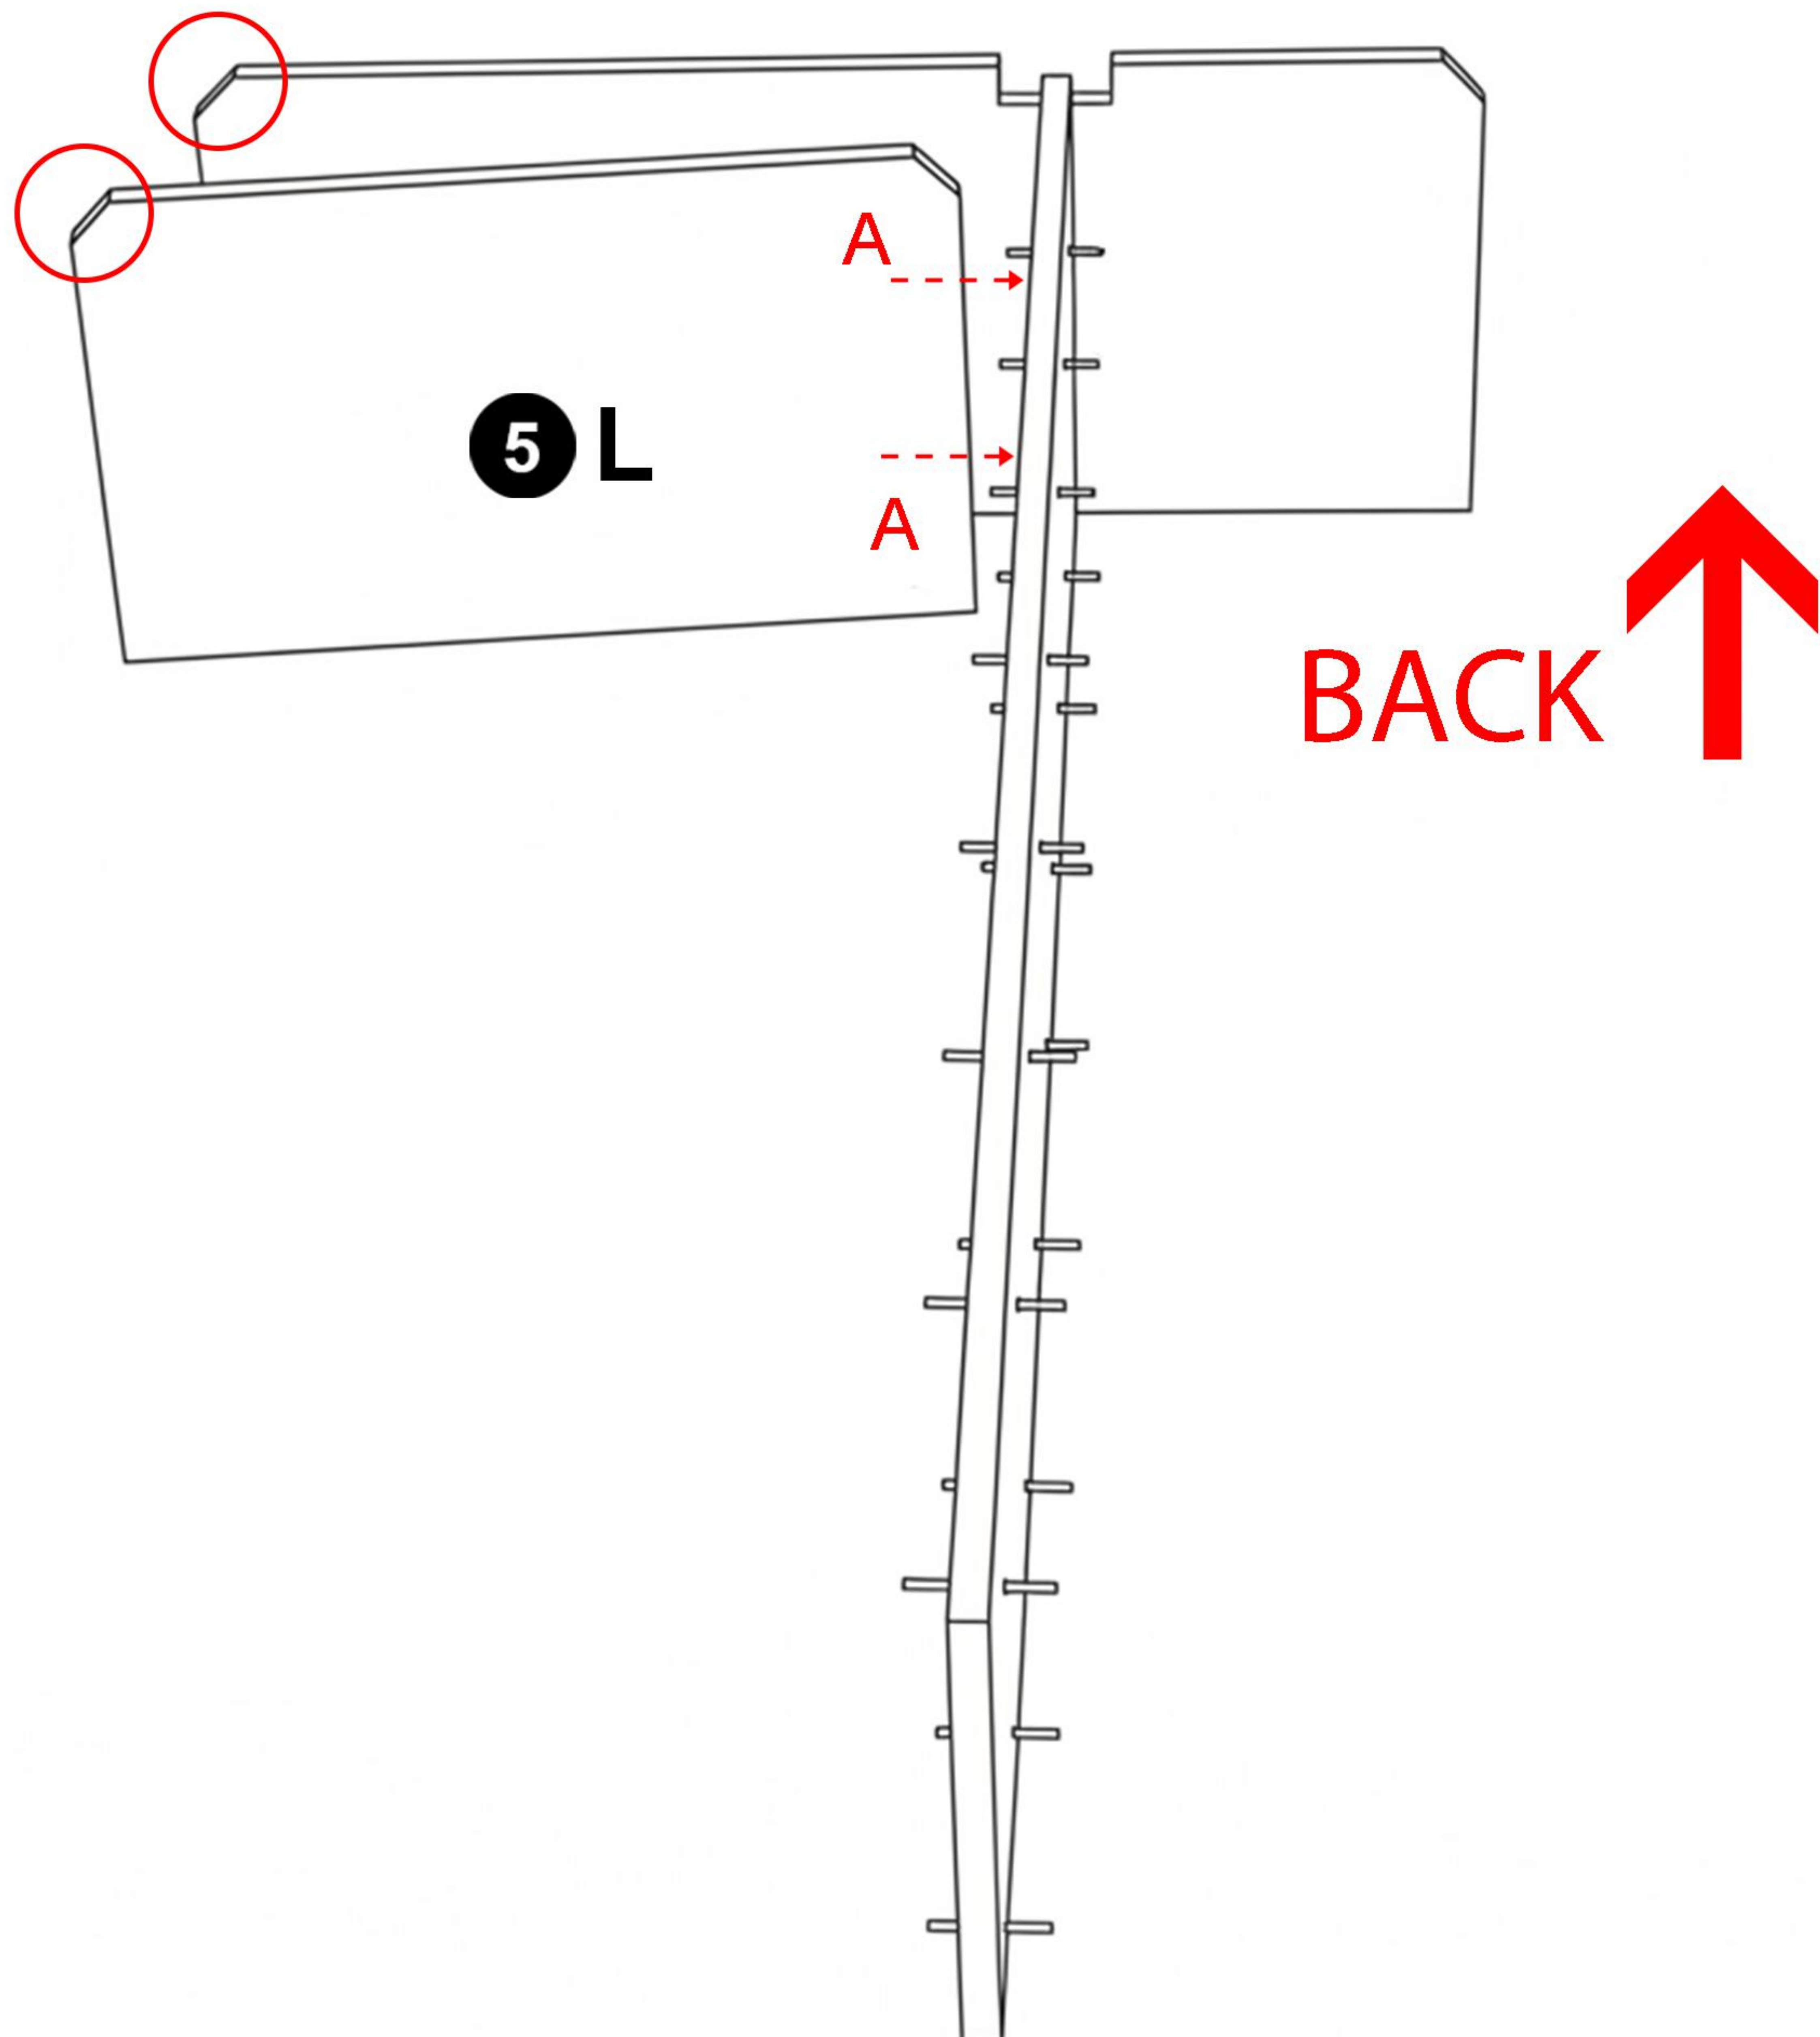


Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 6:

Install 5 Small. Note: The beveled edges should all face the back of the cabinet. The back is currently facing up—make sure all directions stay consistent.

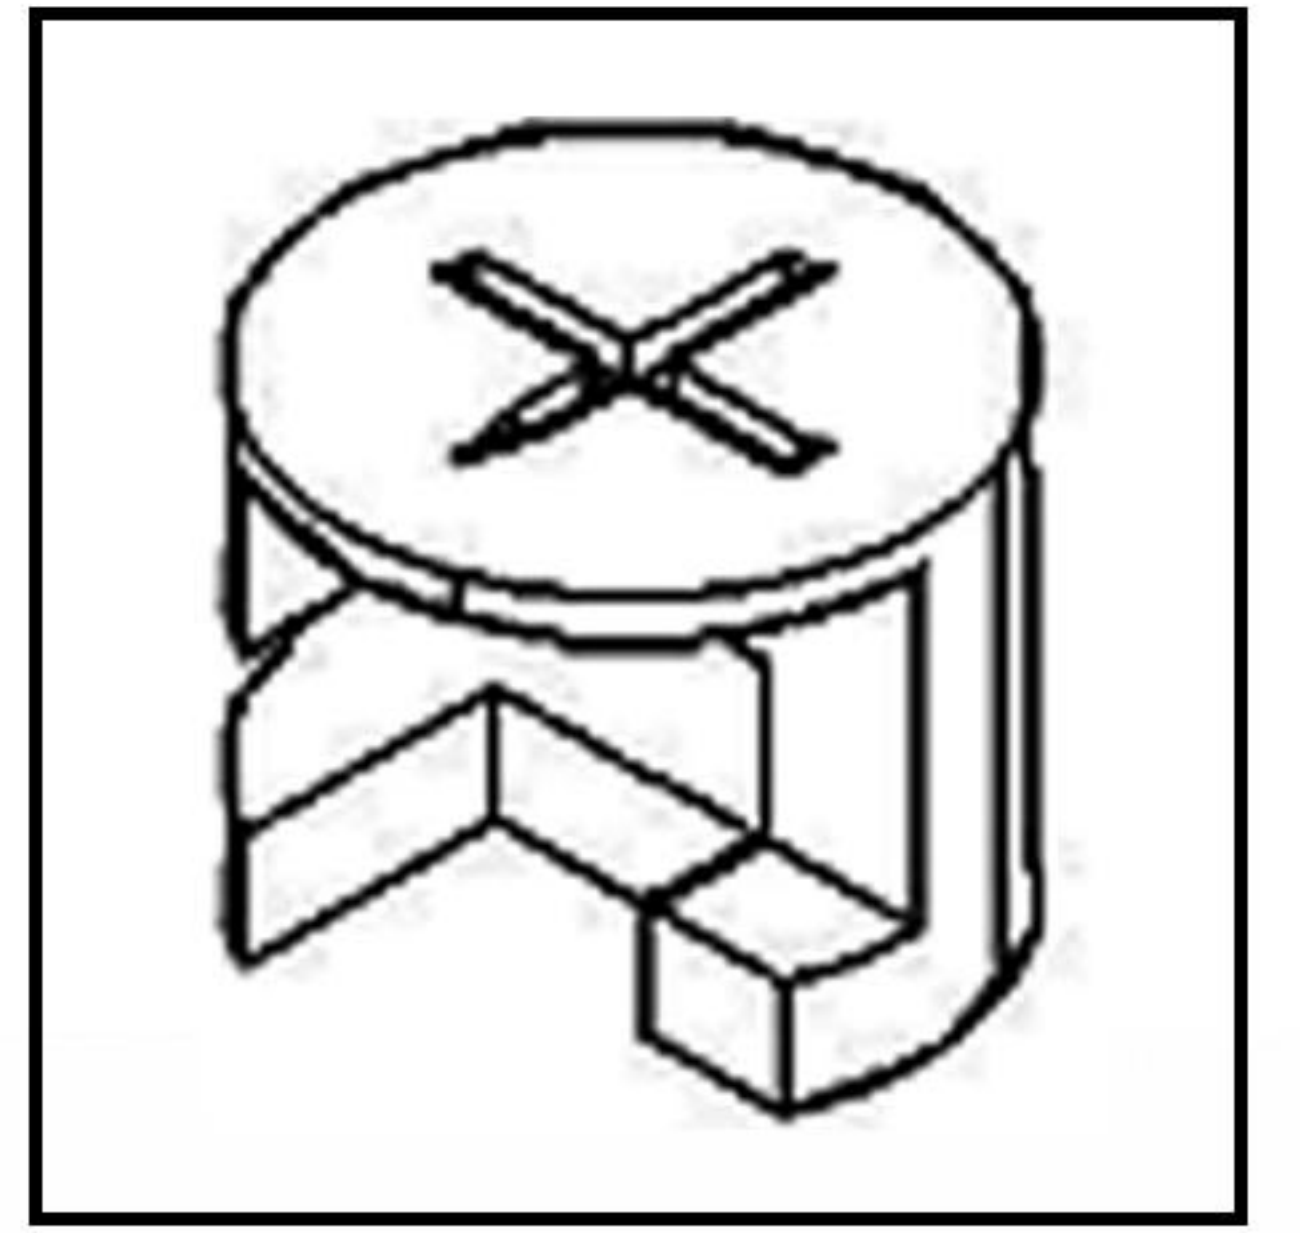


A

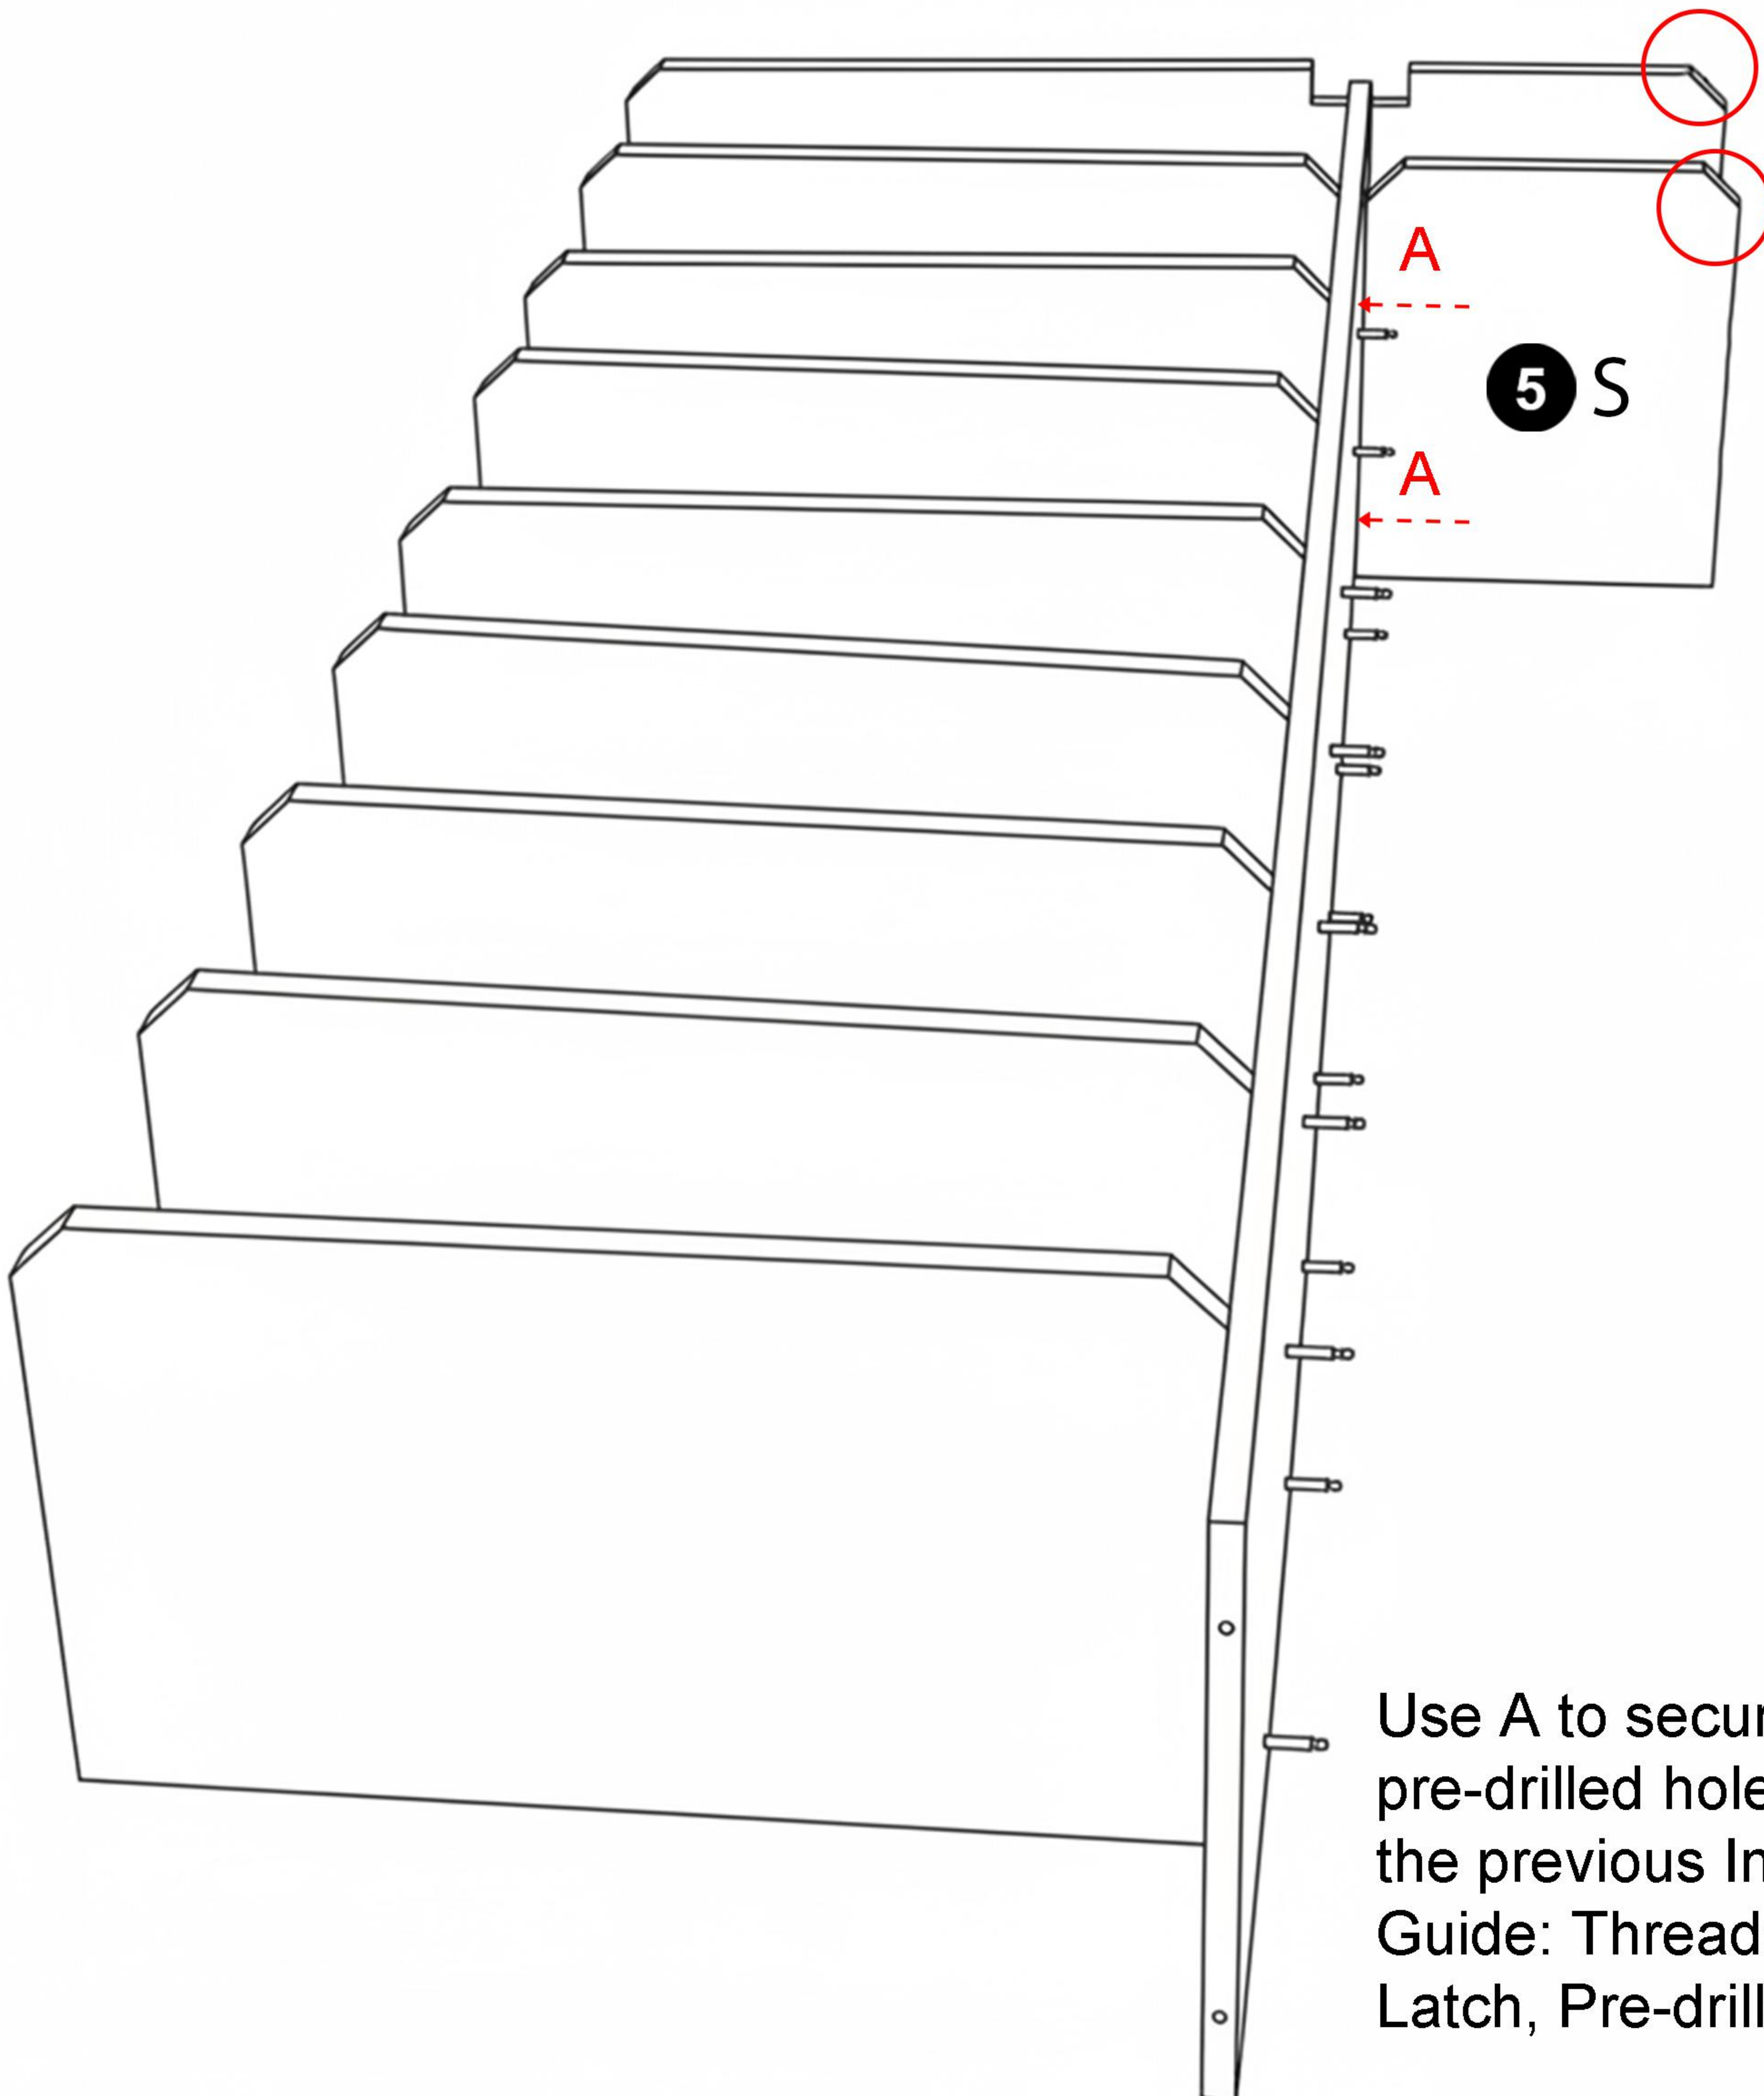

Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.


Step 7:

Install 3. Note: The beveled edges should all face the back of the cabinet. The back is currently facing up—make sure all directions stay consistent.

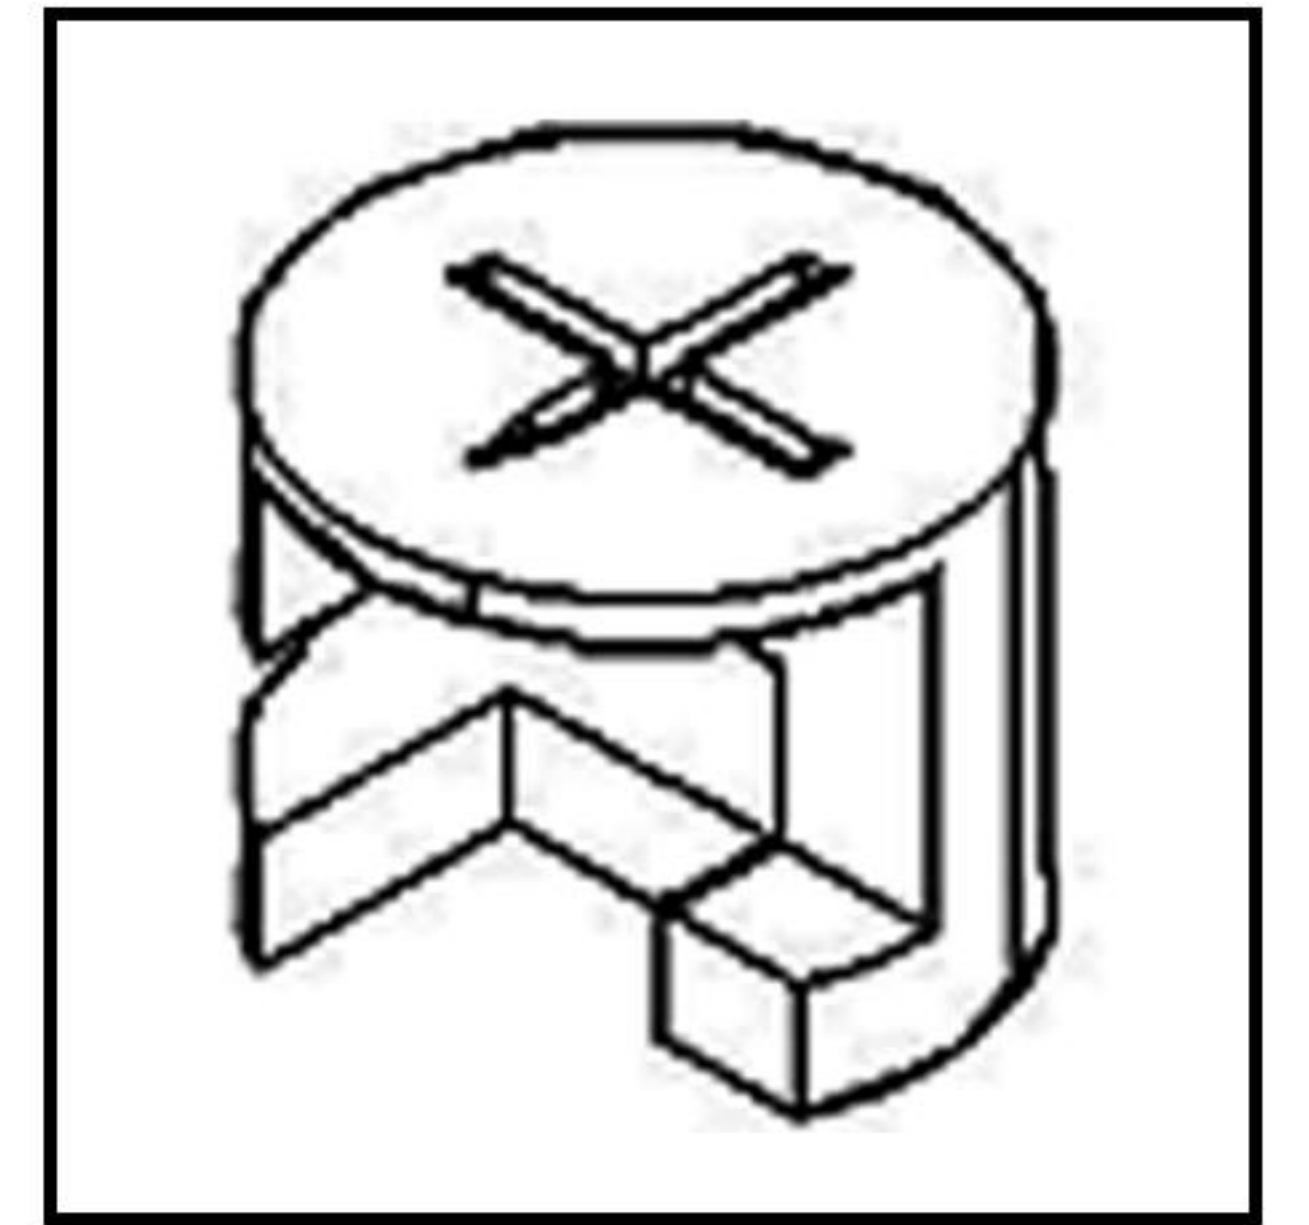

A

Bottom

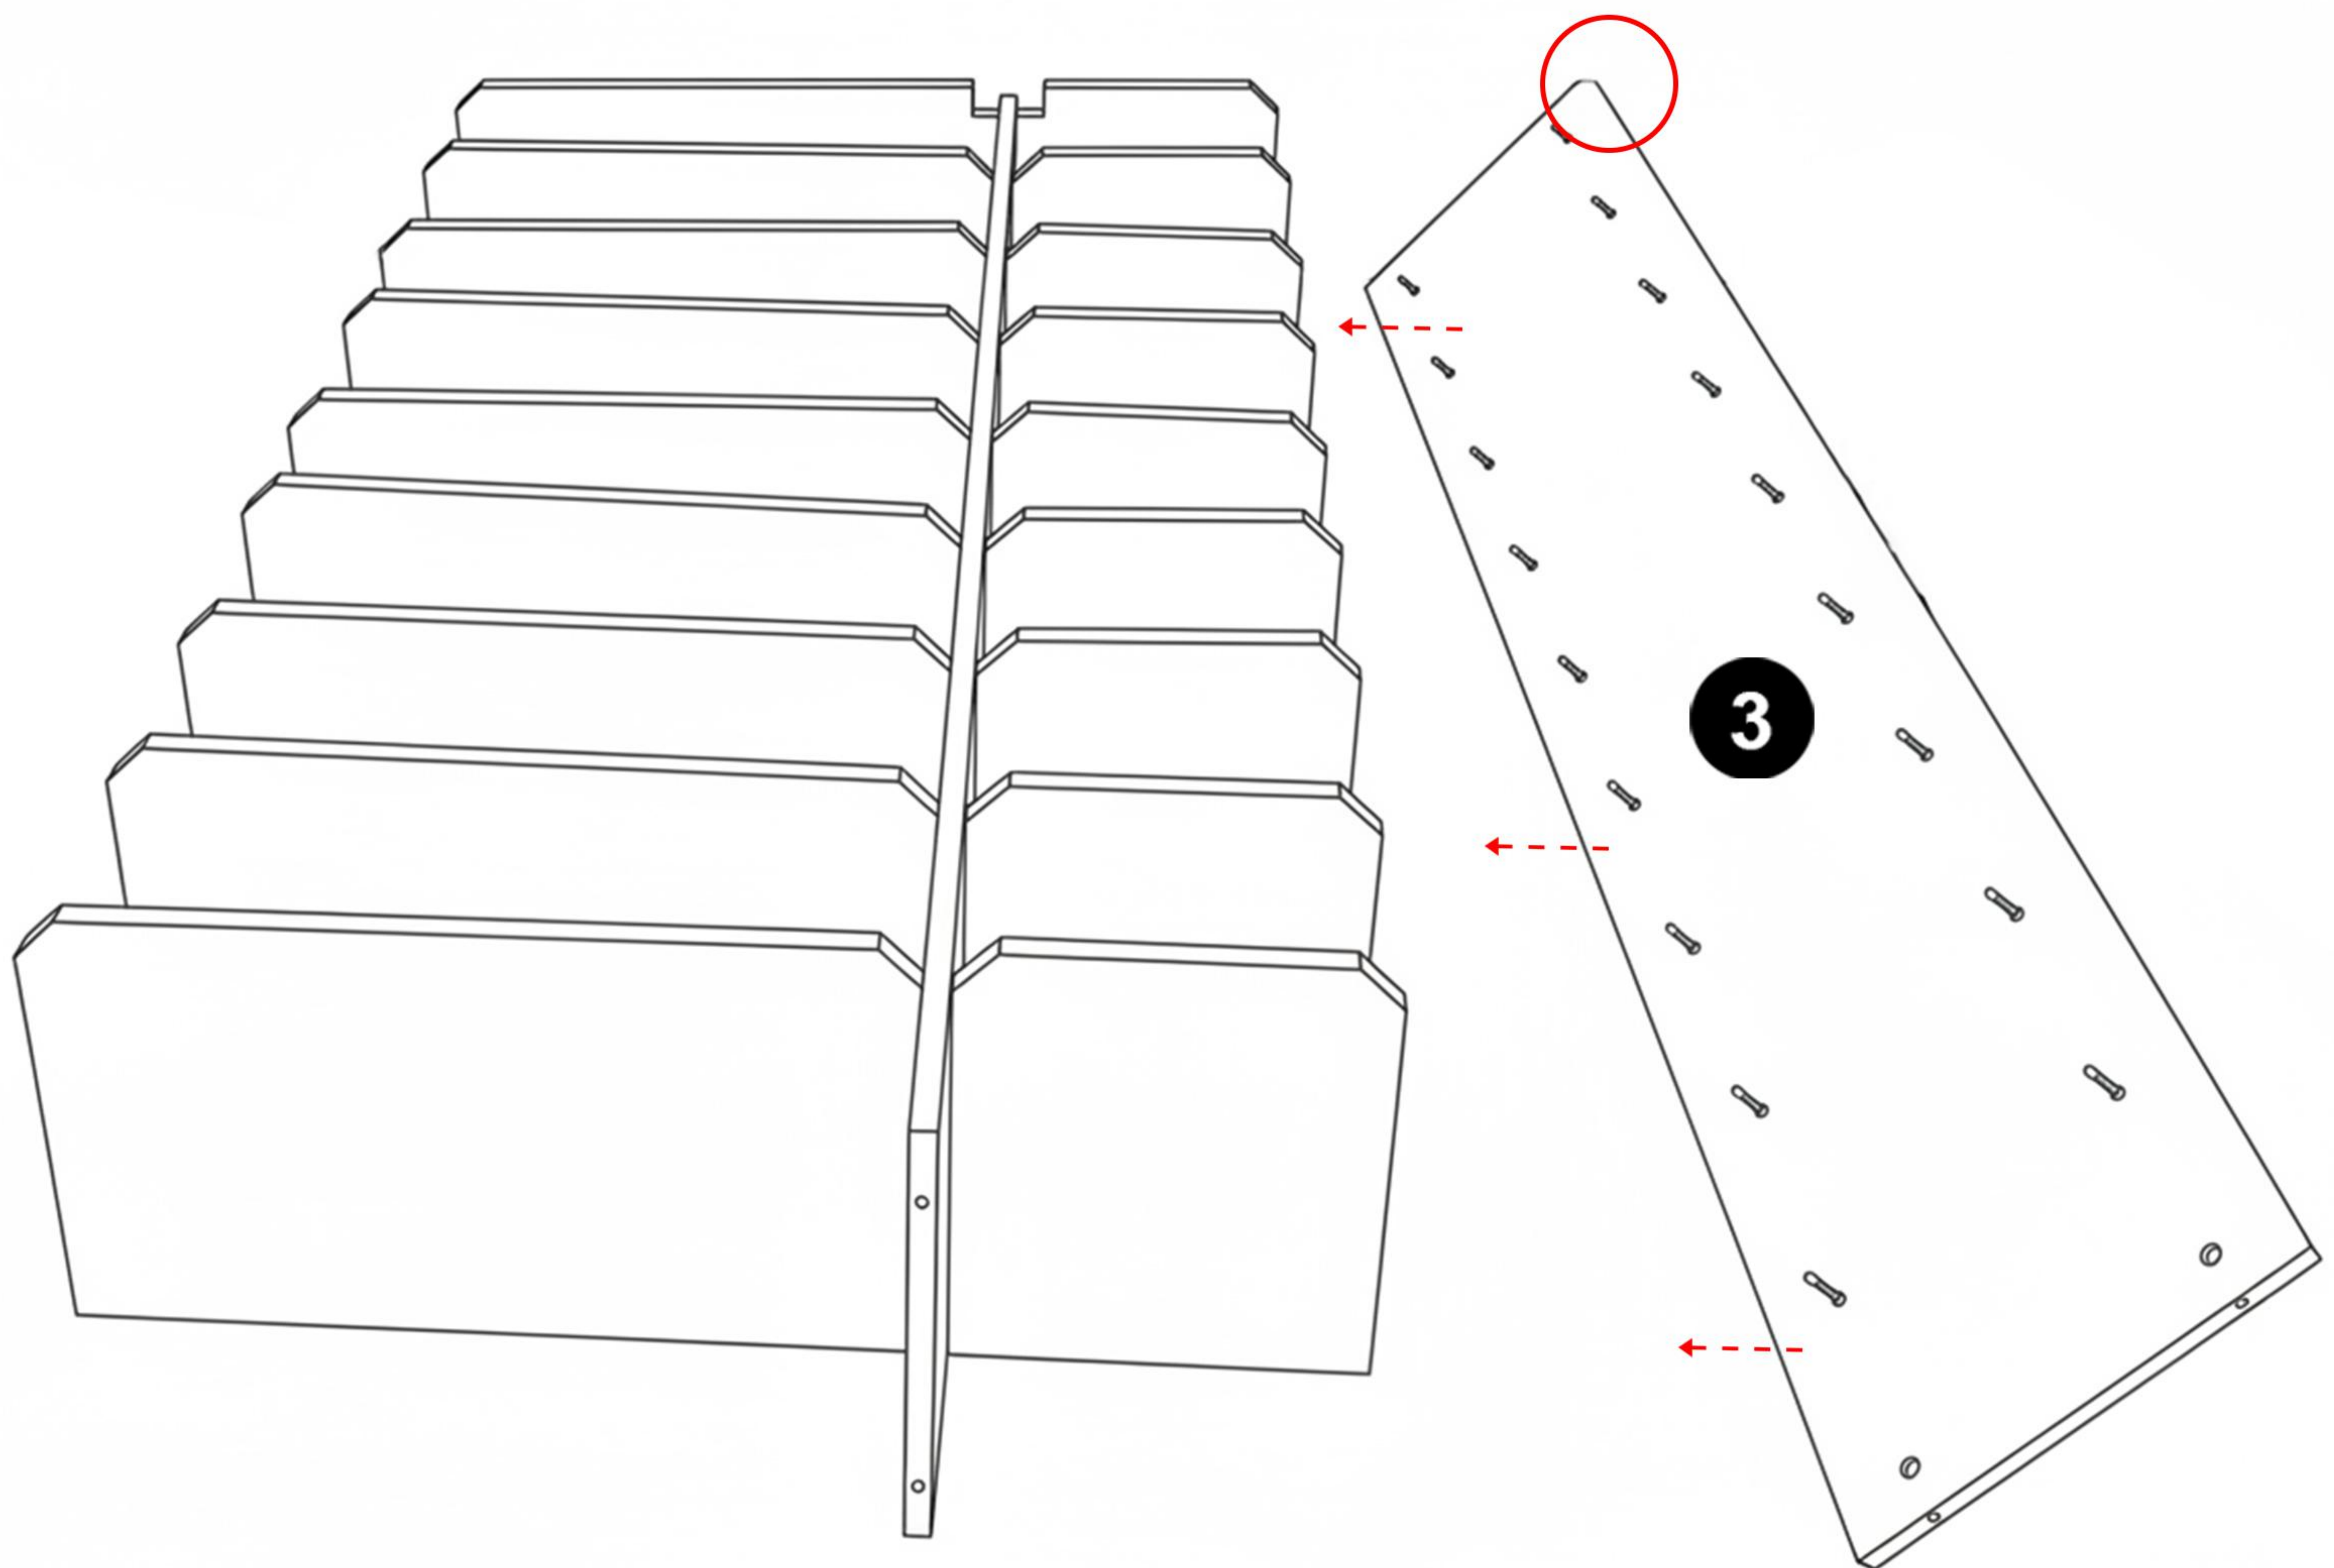


Top


Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 8:

Install 2. Note: The beveled edges should all face the back of the cabinet. The back is currently facing up—make sure all directions stay consistent.

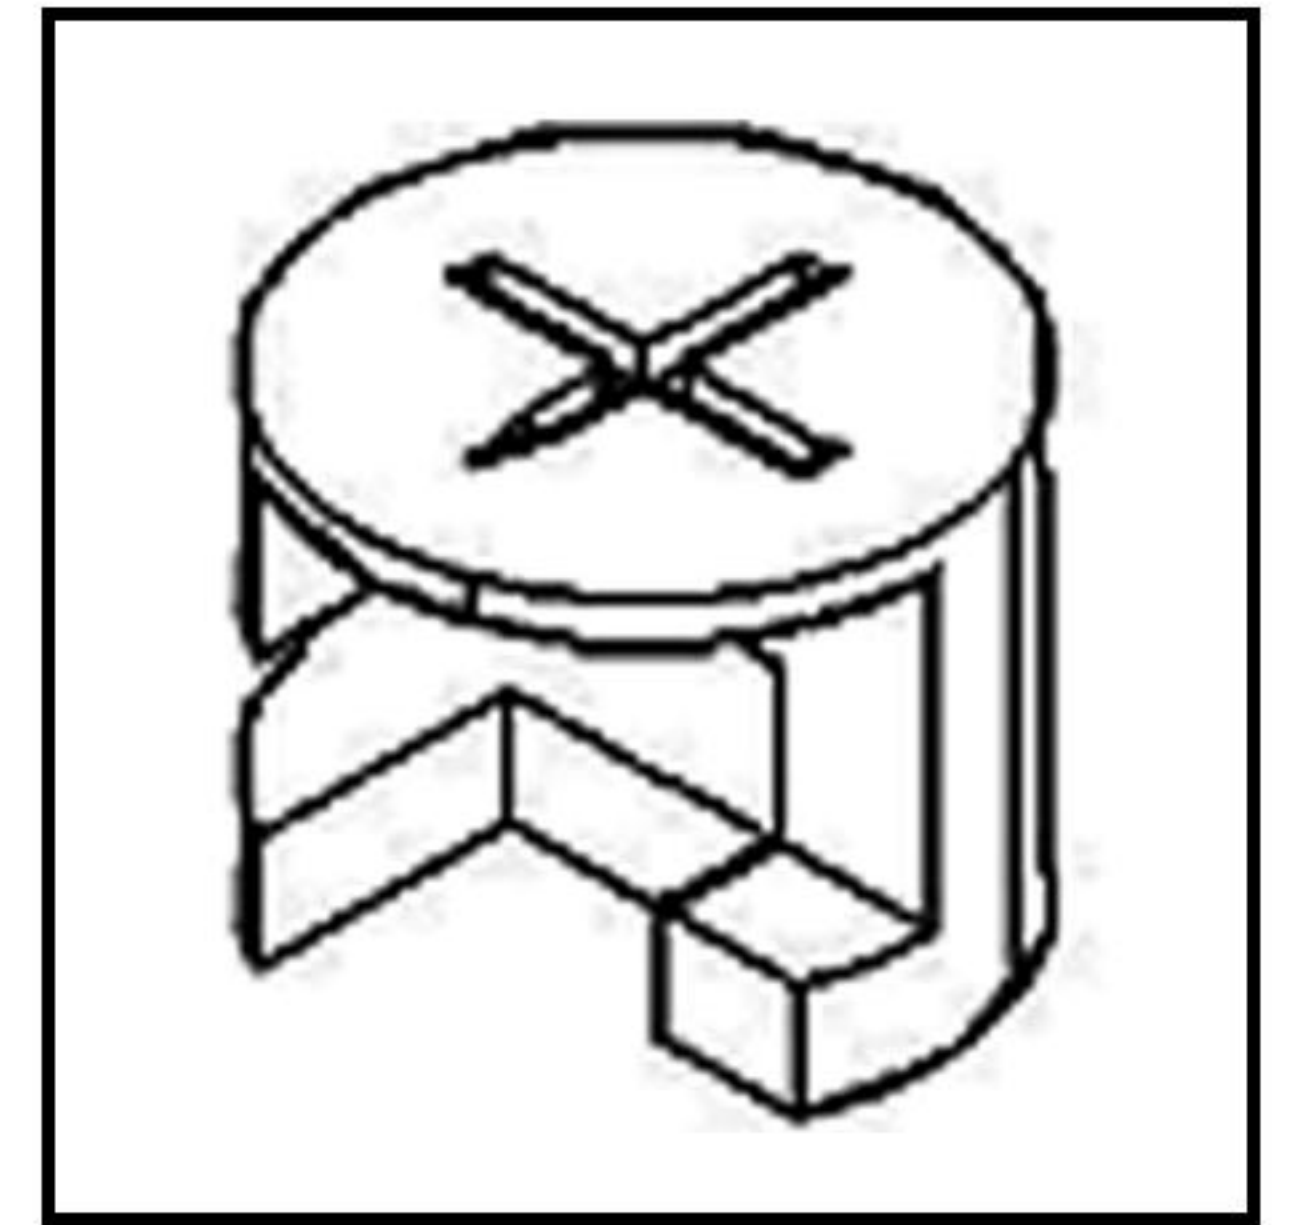


A

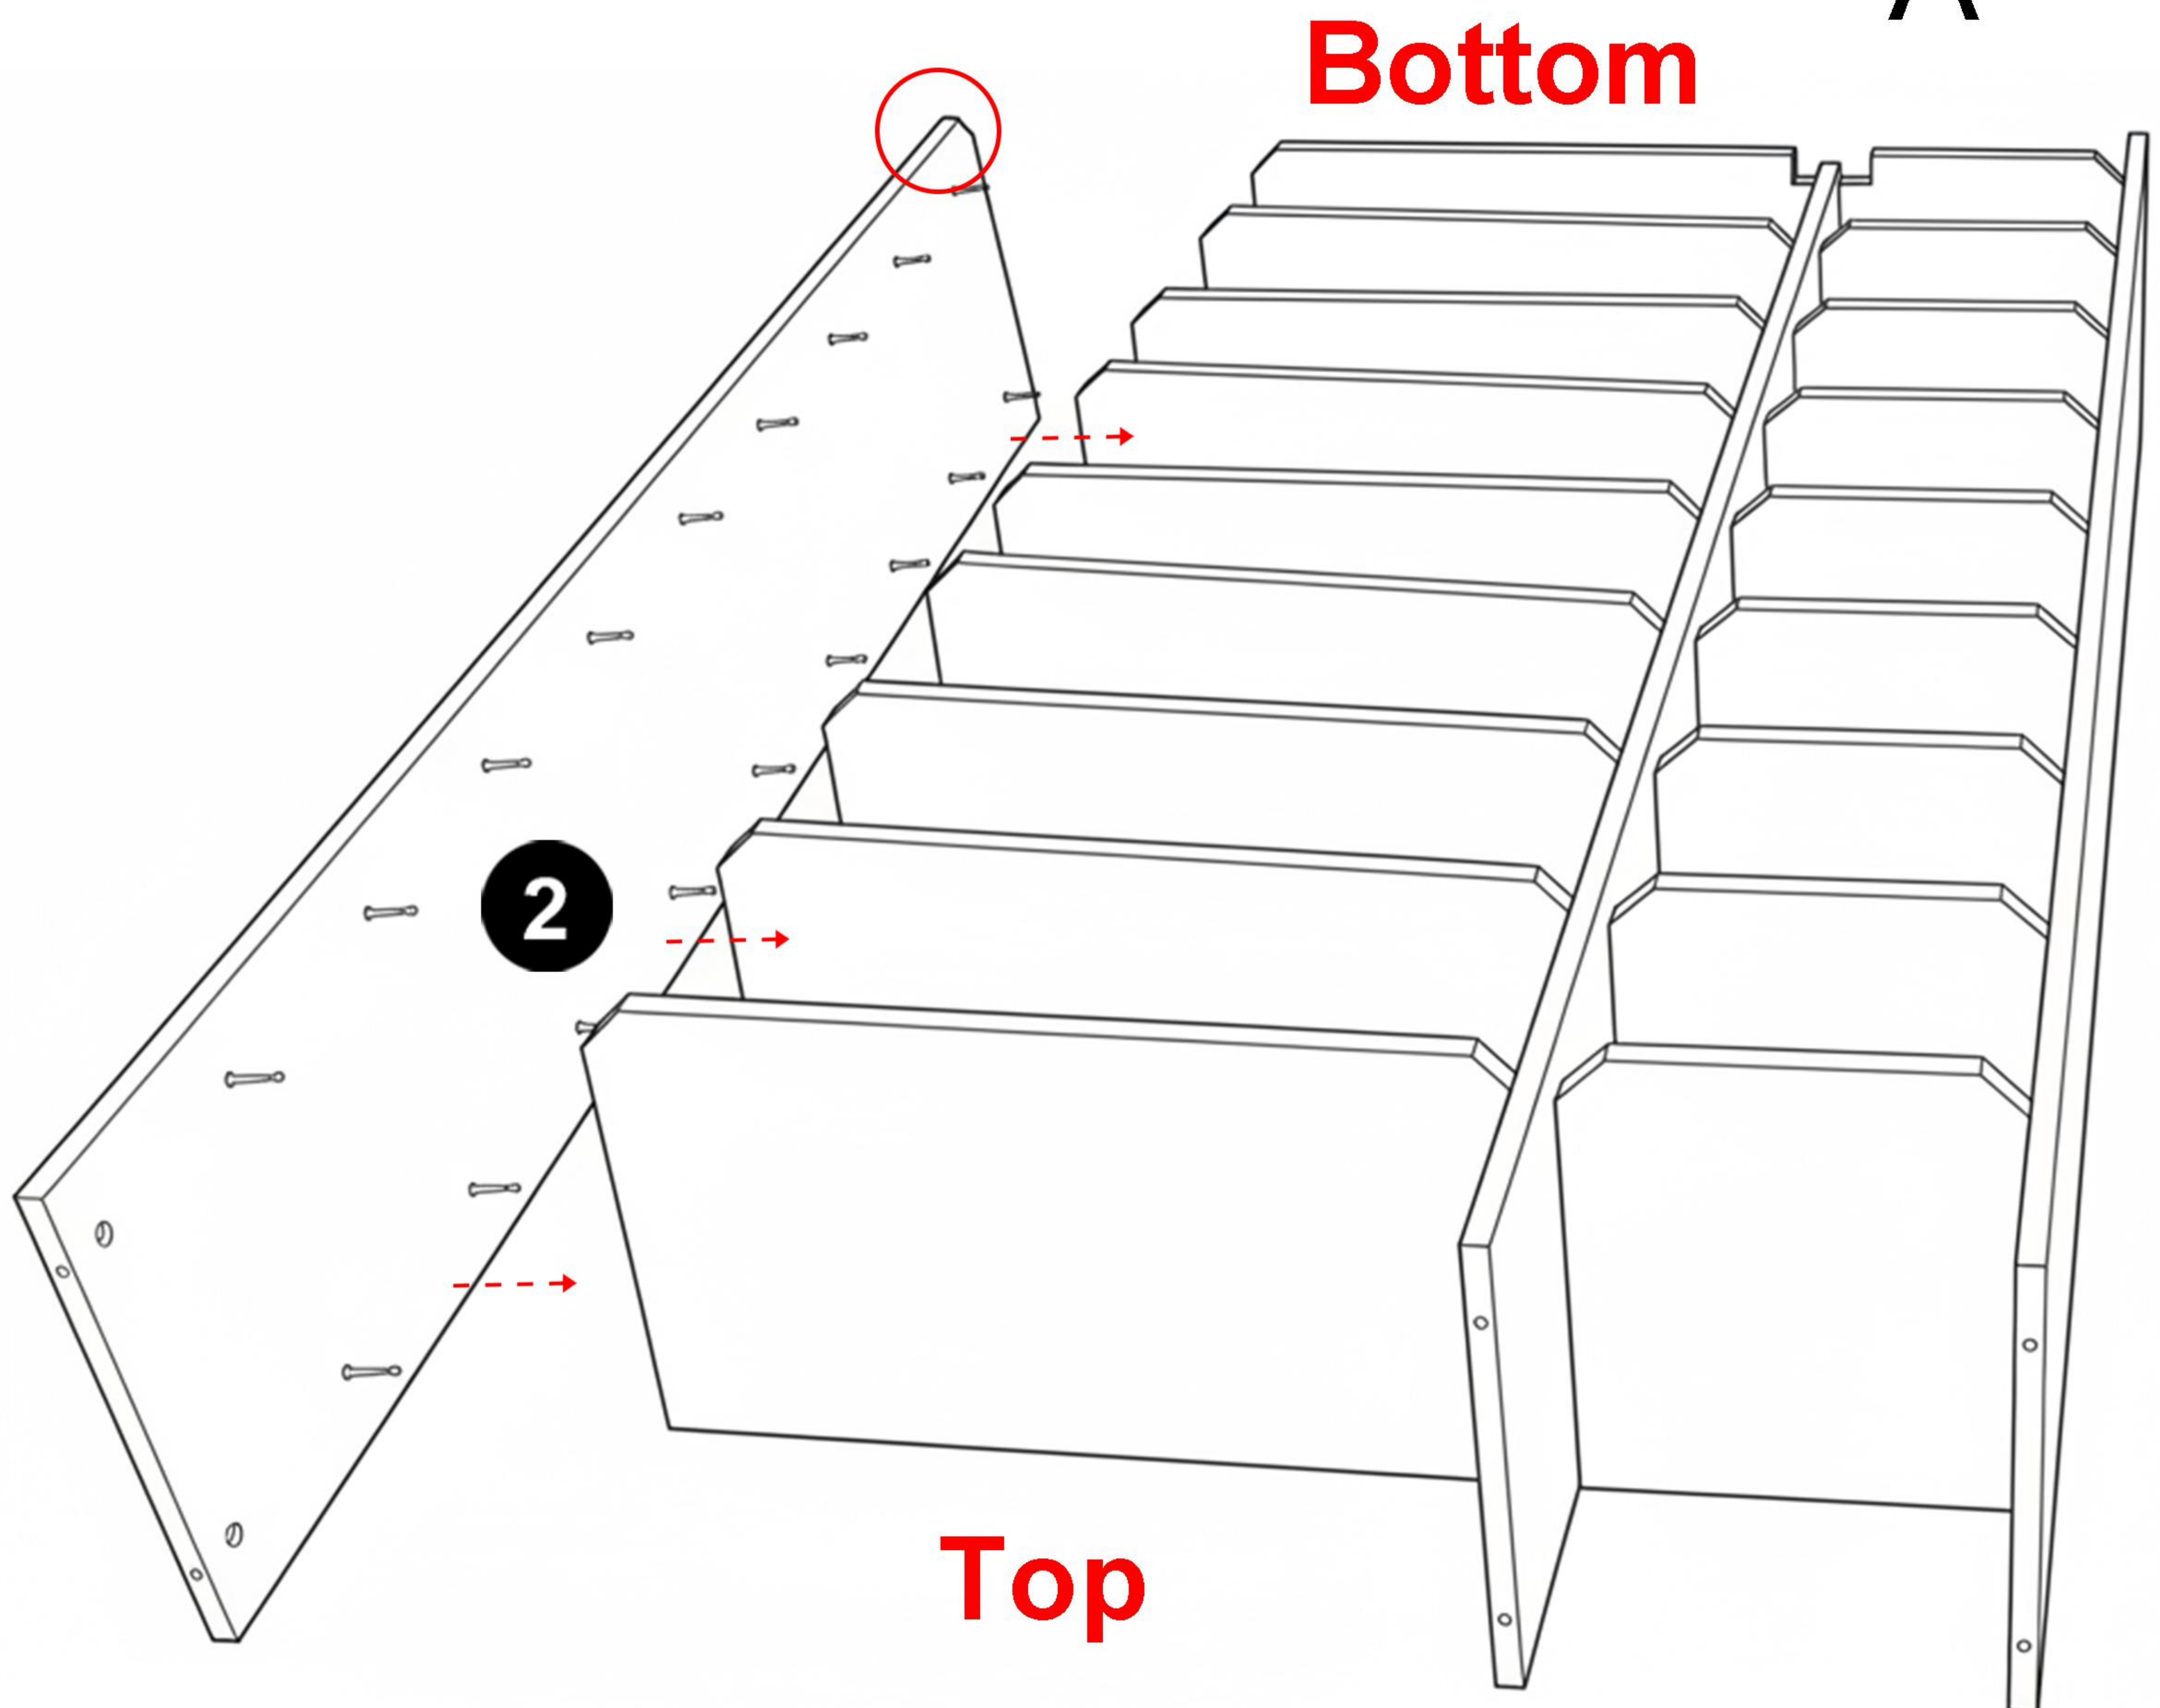


Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

Step 9:

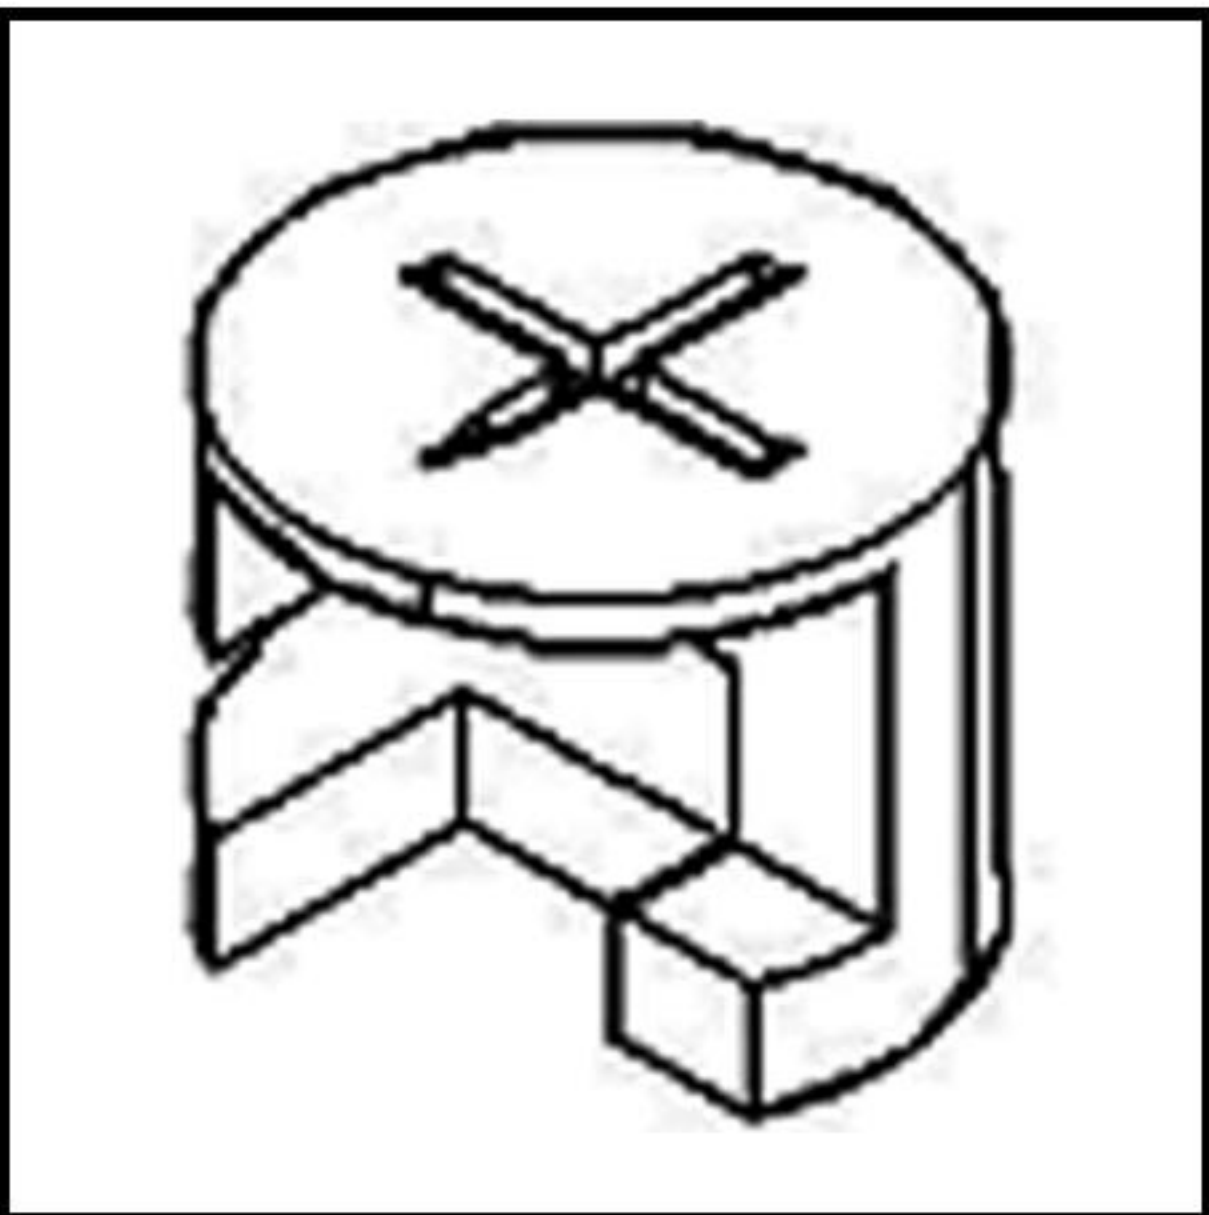


A

Use A to secure all large pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

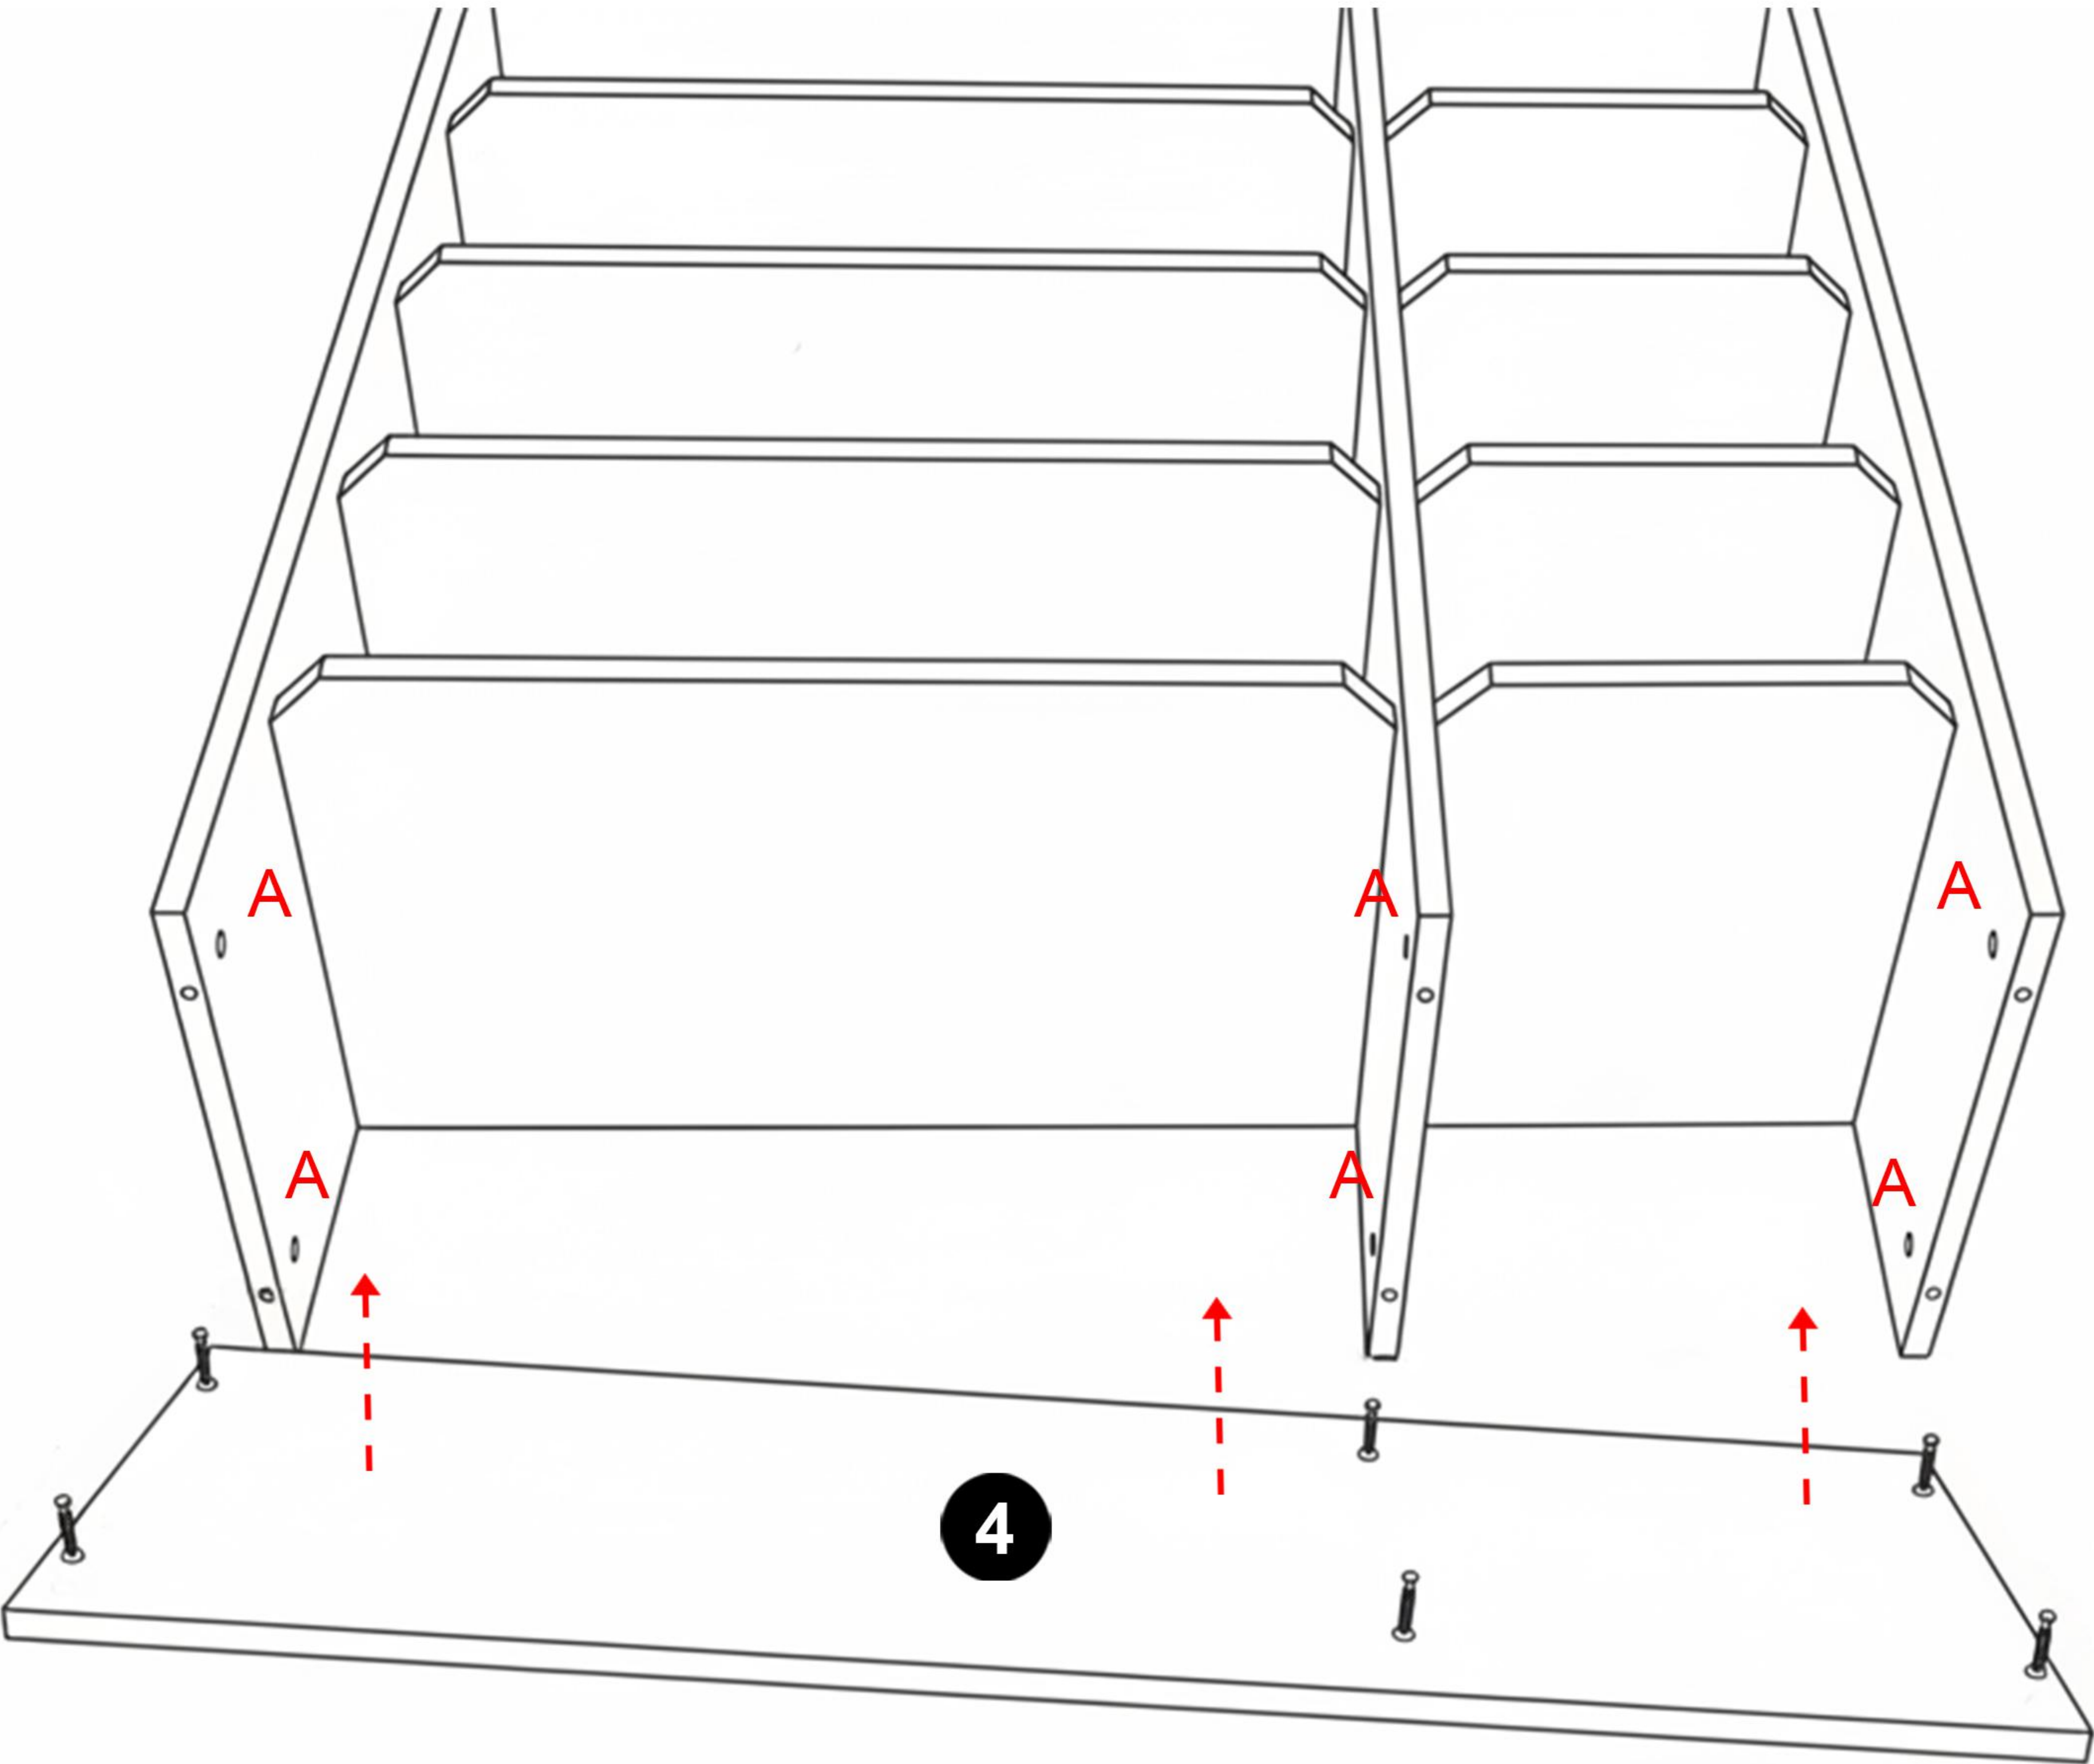

Top


Step 10:

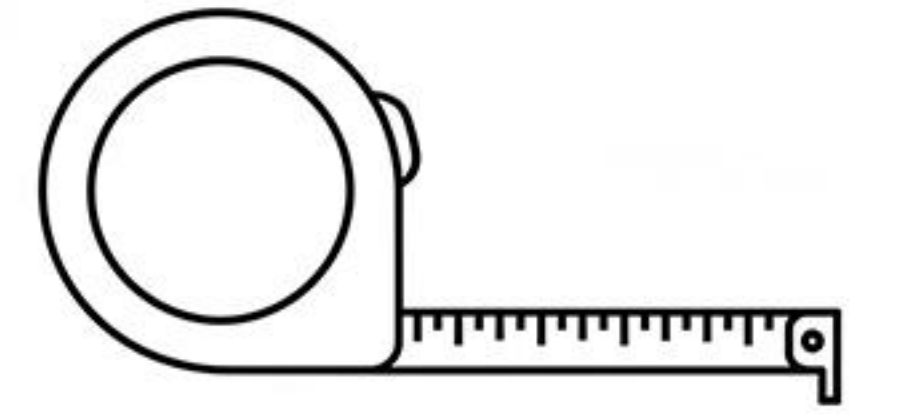


**Ruler not
included**

Use a ruler to measure the diagonals on the back. If both measurements are the same, the cabinet is square and you can continue assembly. If they differ:


- 1, Check if any panels are installed incorrectly or reversed.
- 2, Ensure all panels are tightly connected and properly aligned.
- 3, Make sure all A fittings are fully tightened.
- 4, Gently adjust the cabinet by pushing it into alignment.

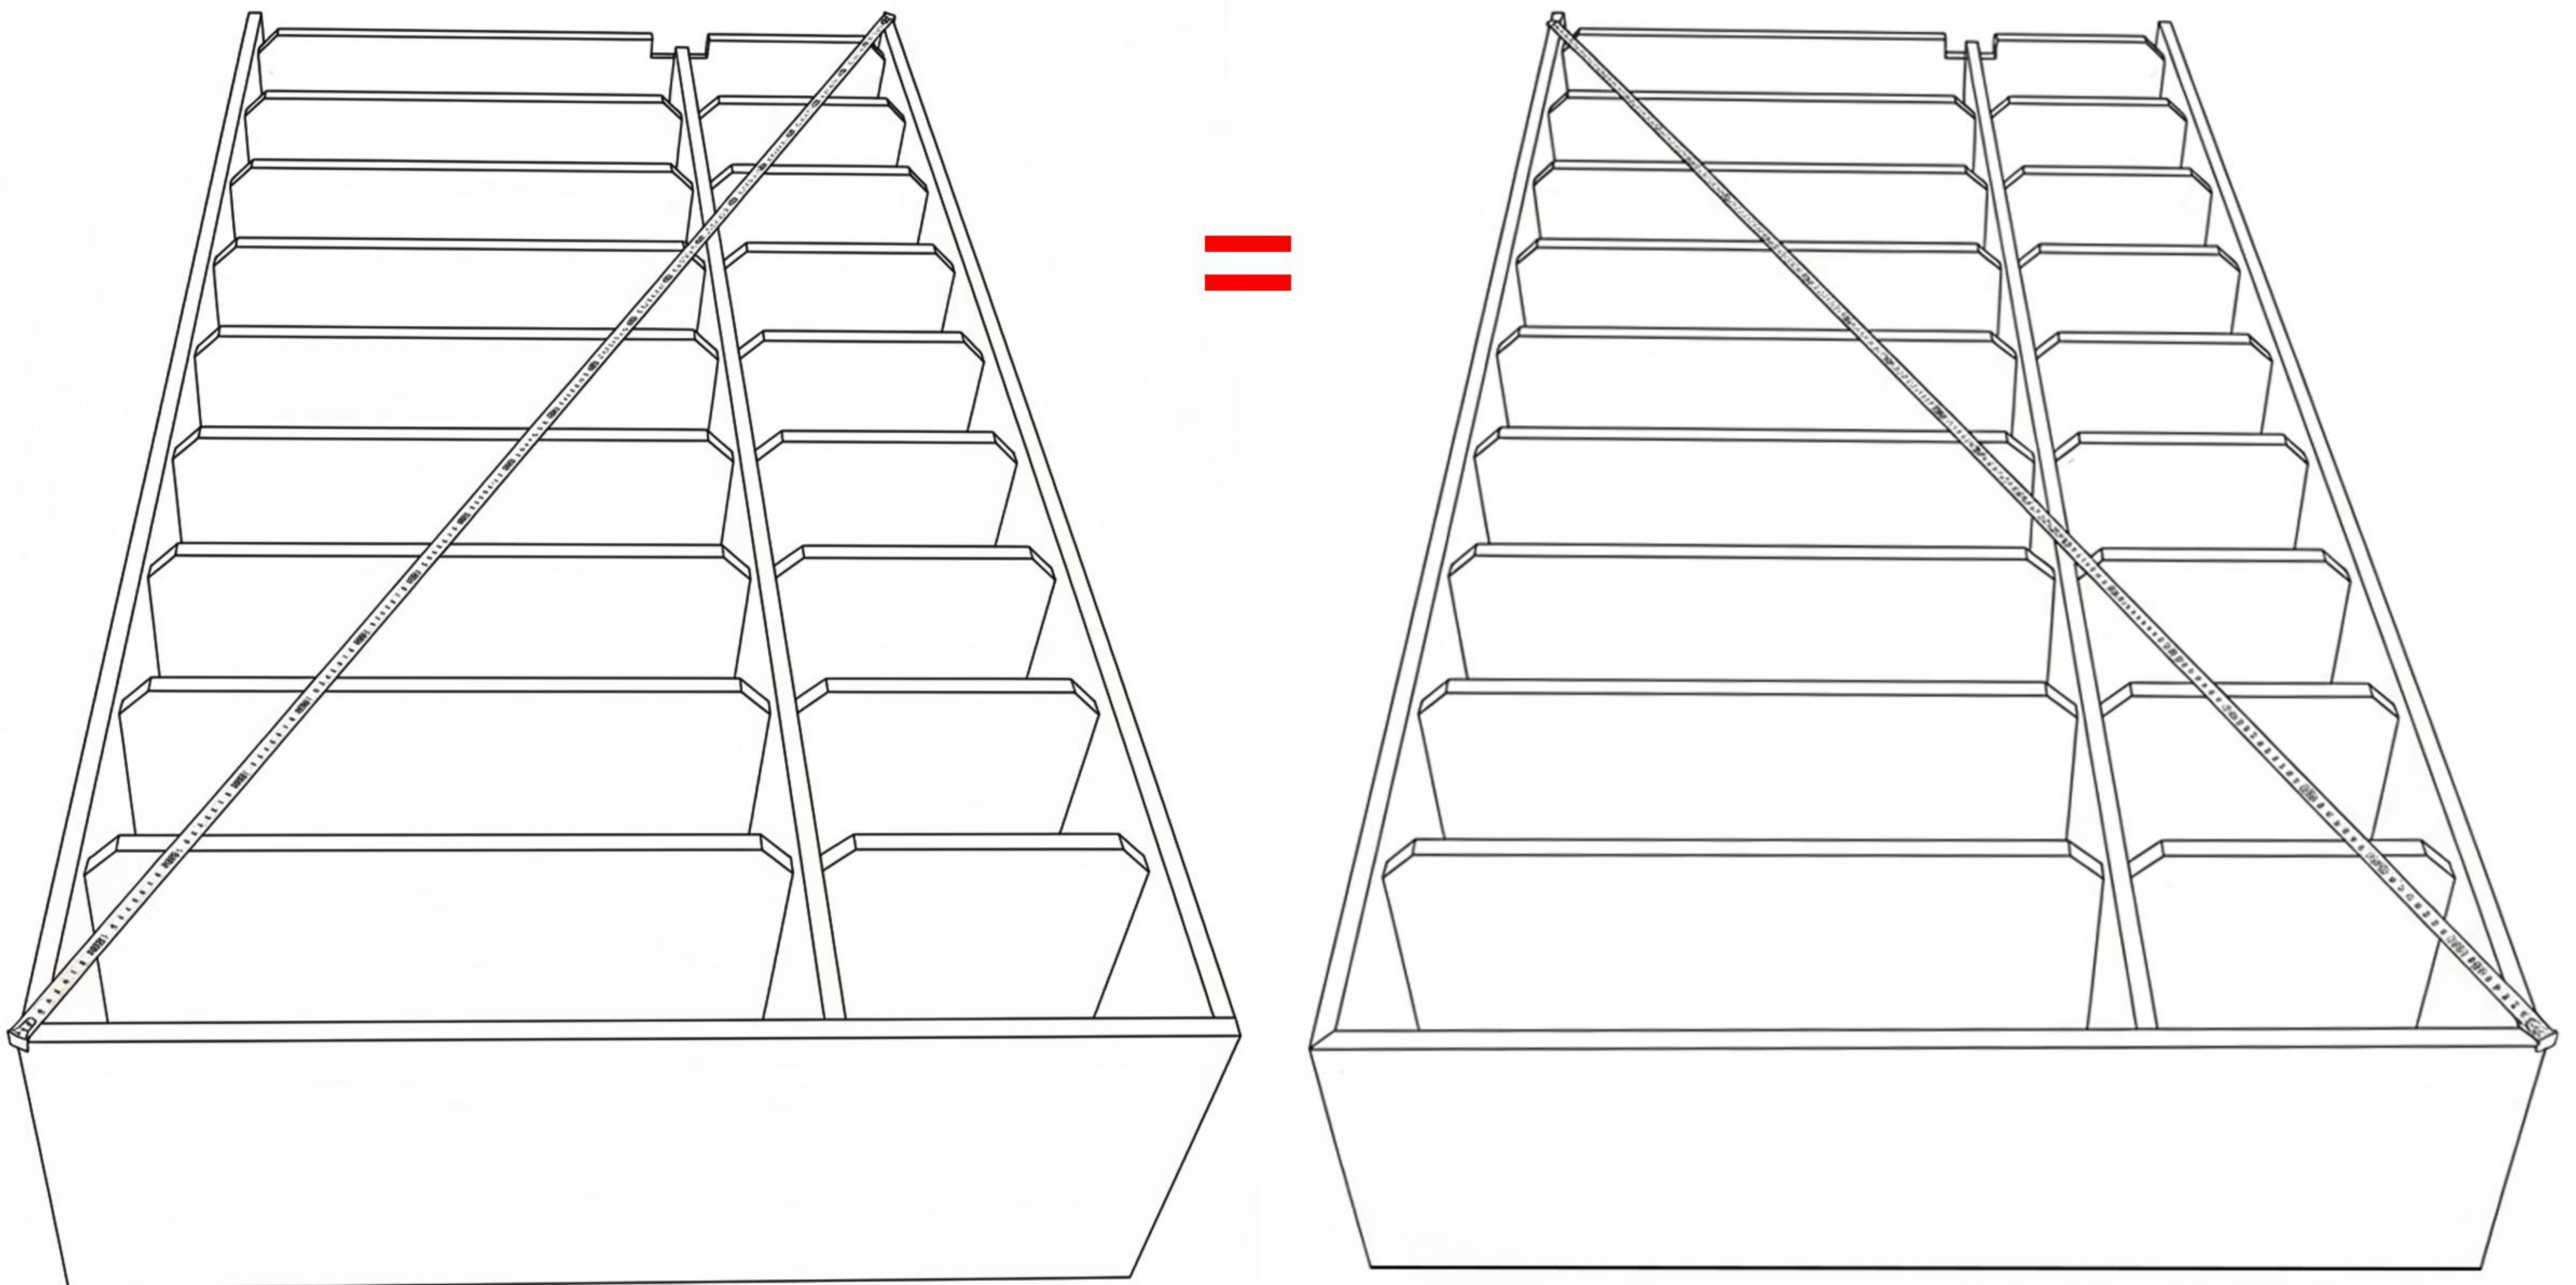

Step 11:

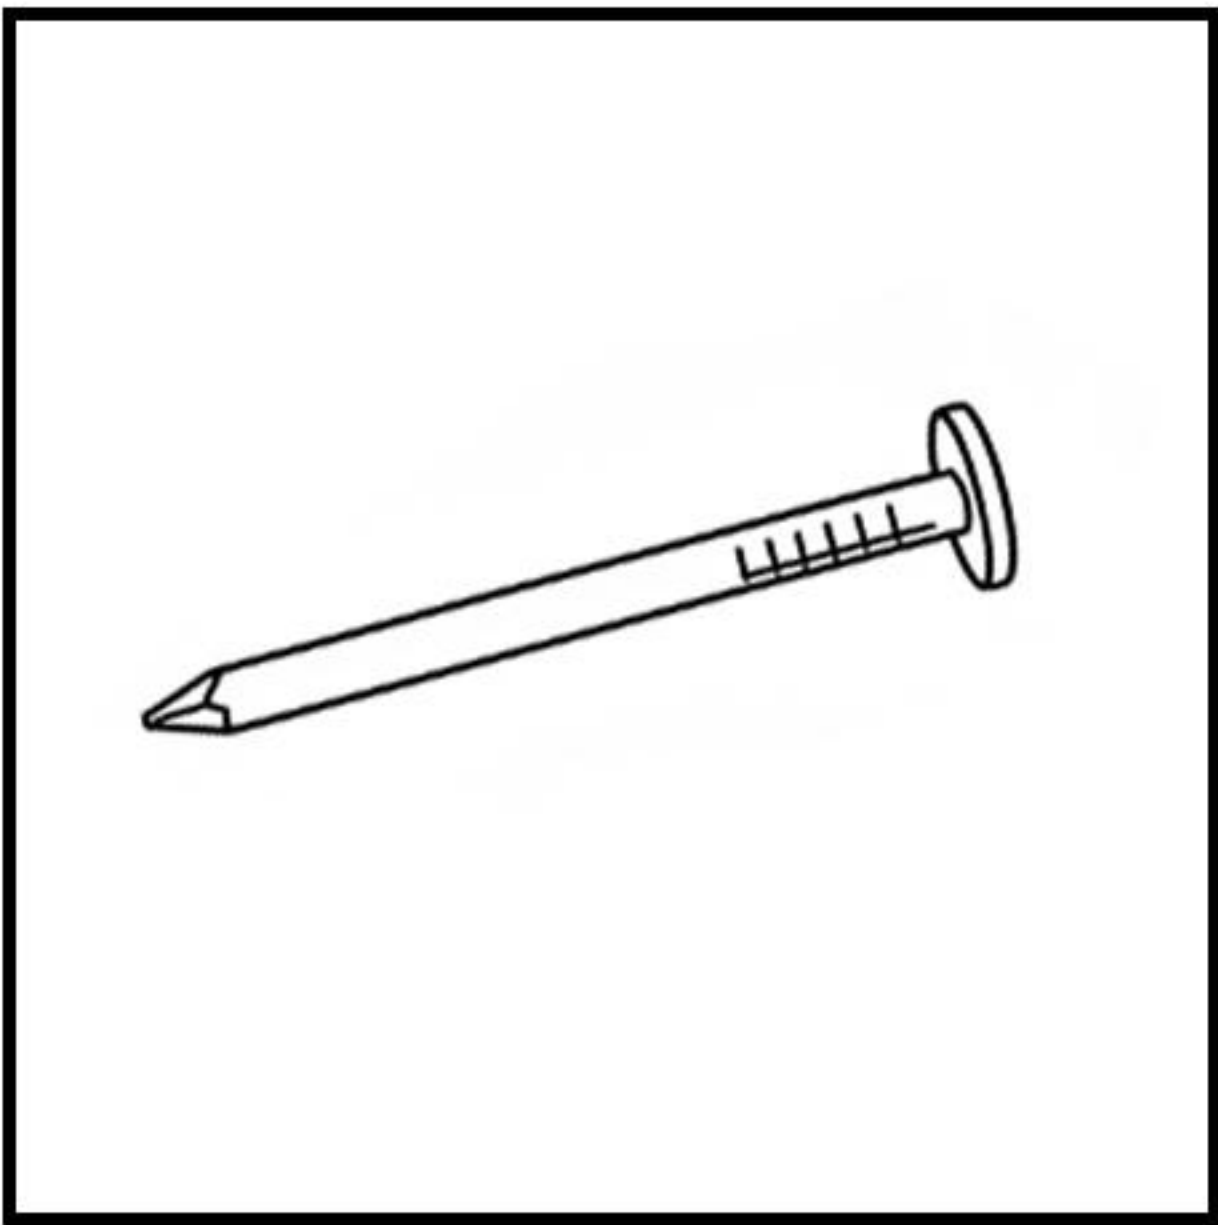


E

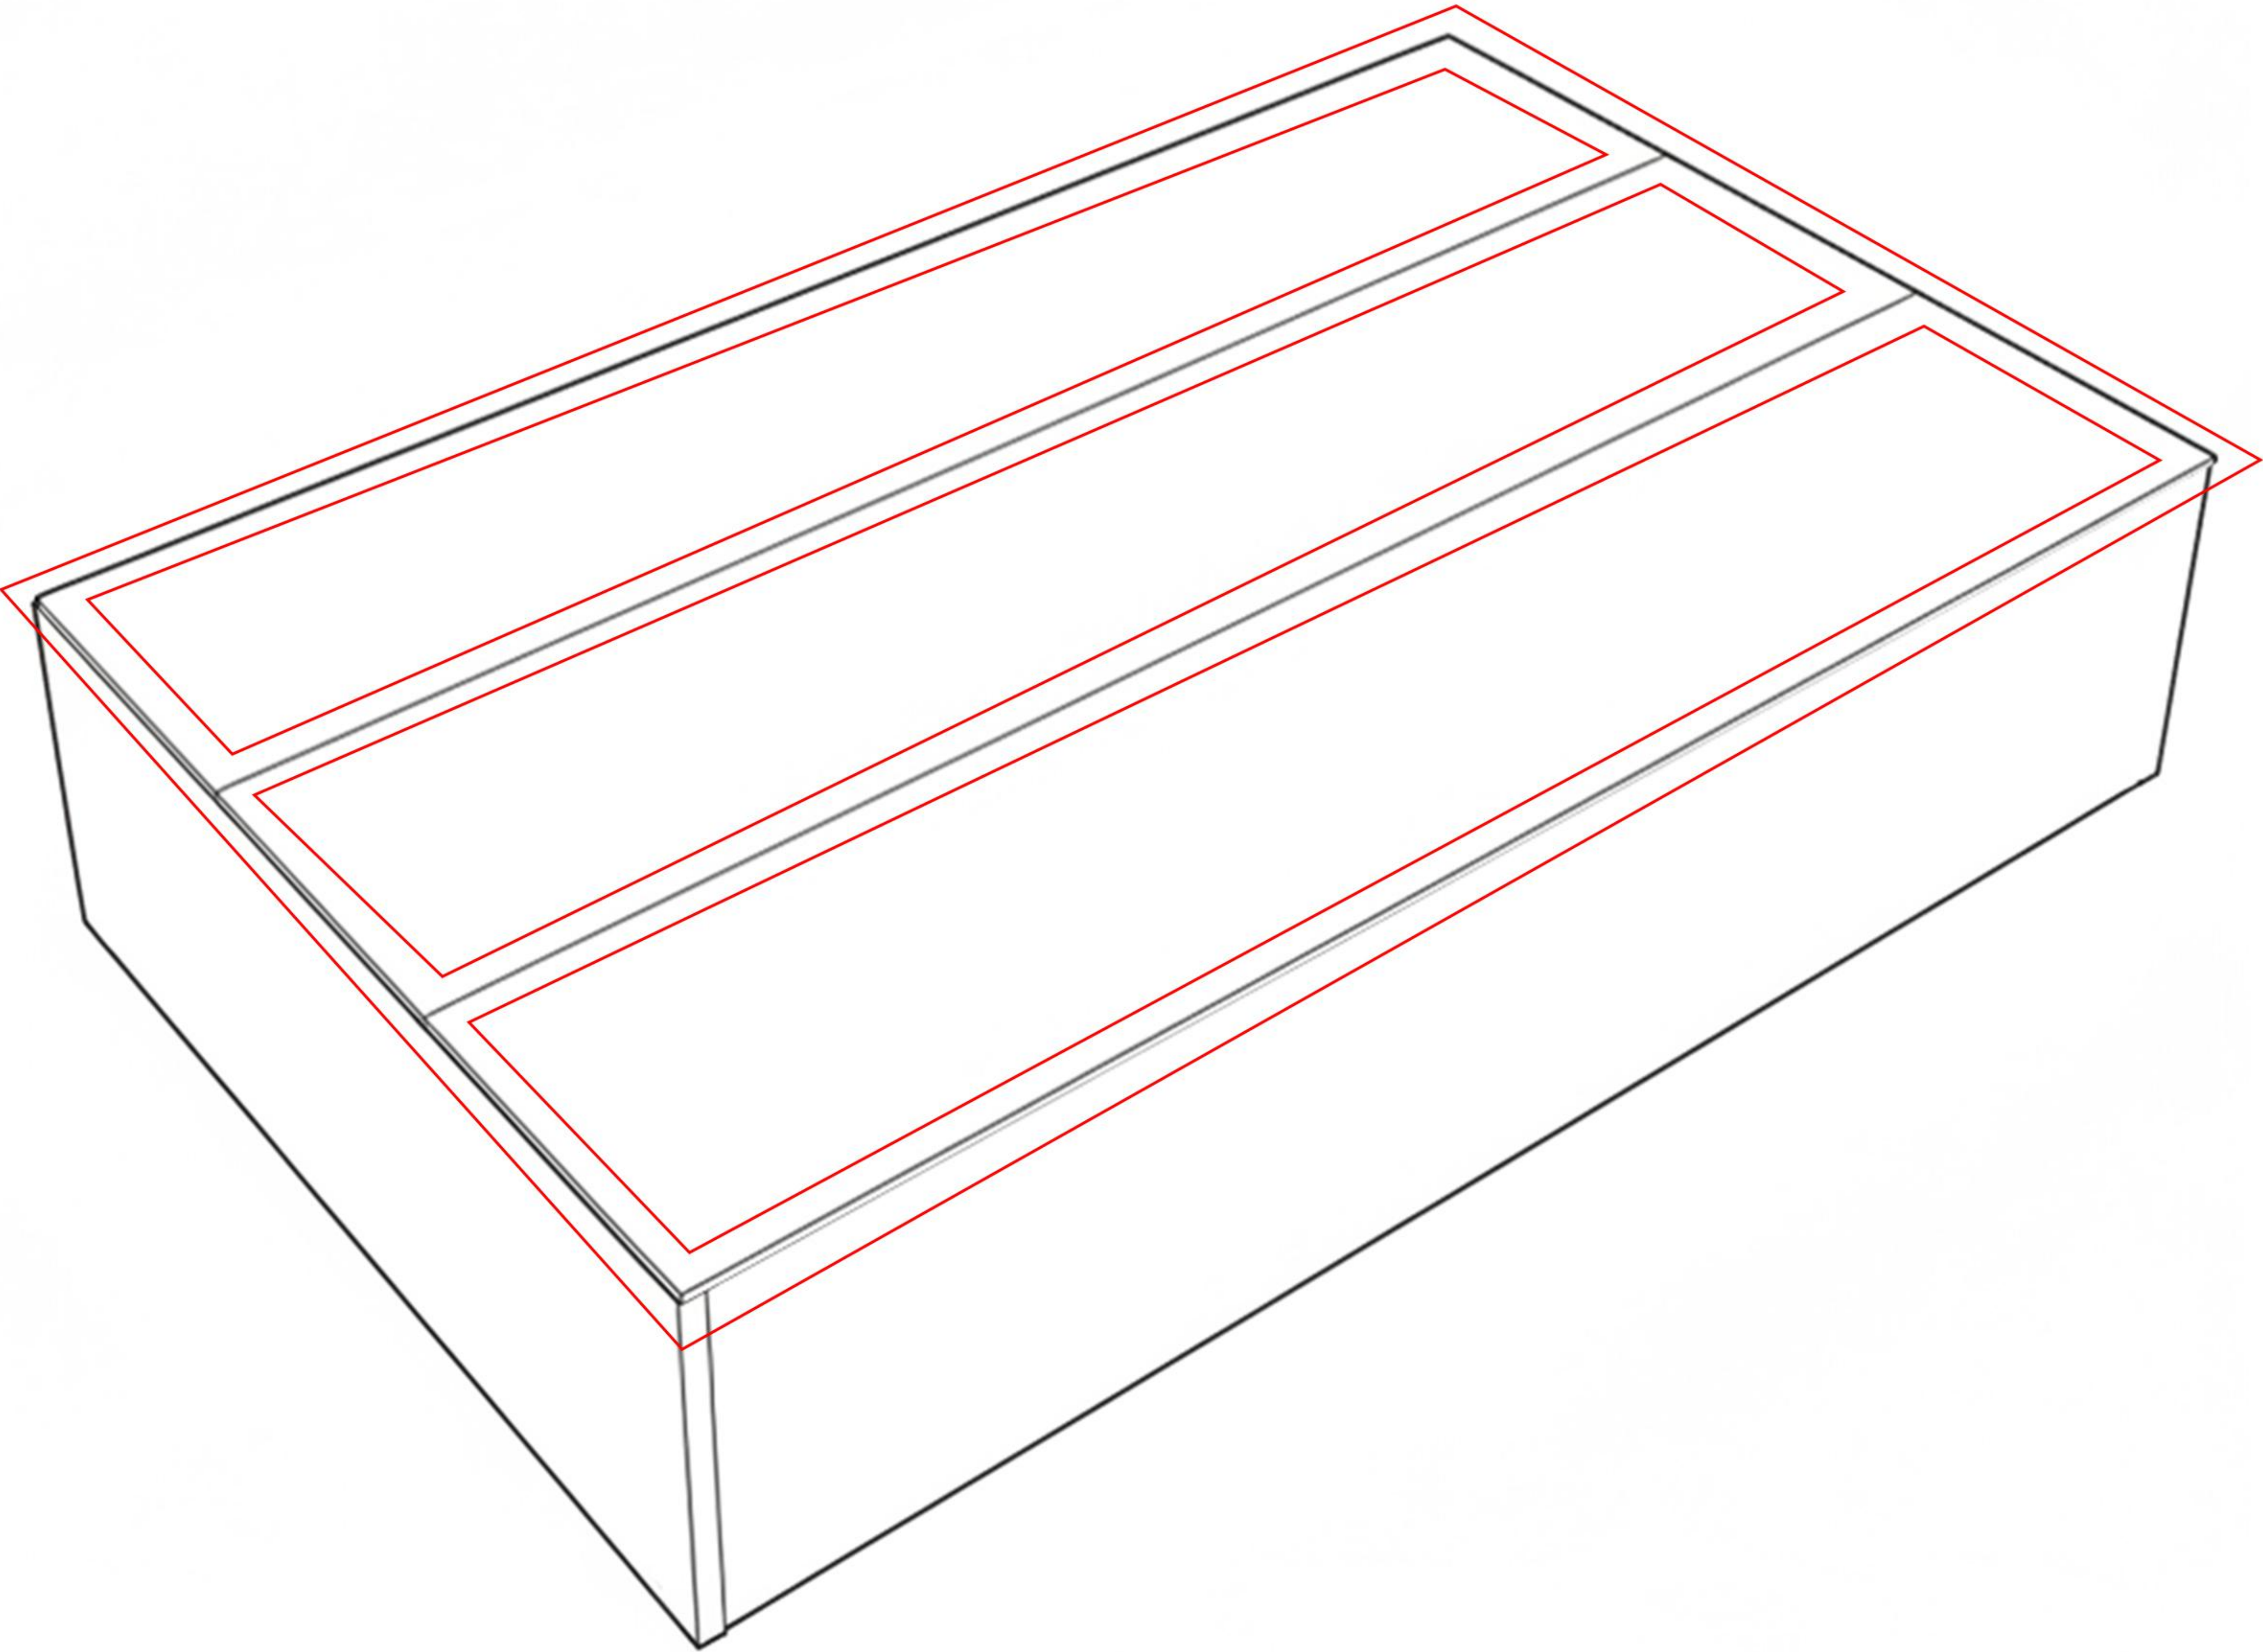


Use F to secure the back panel. A small hammer is required (not included).

Step 12:

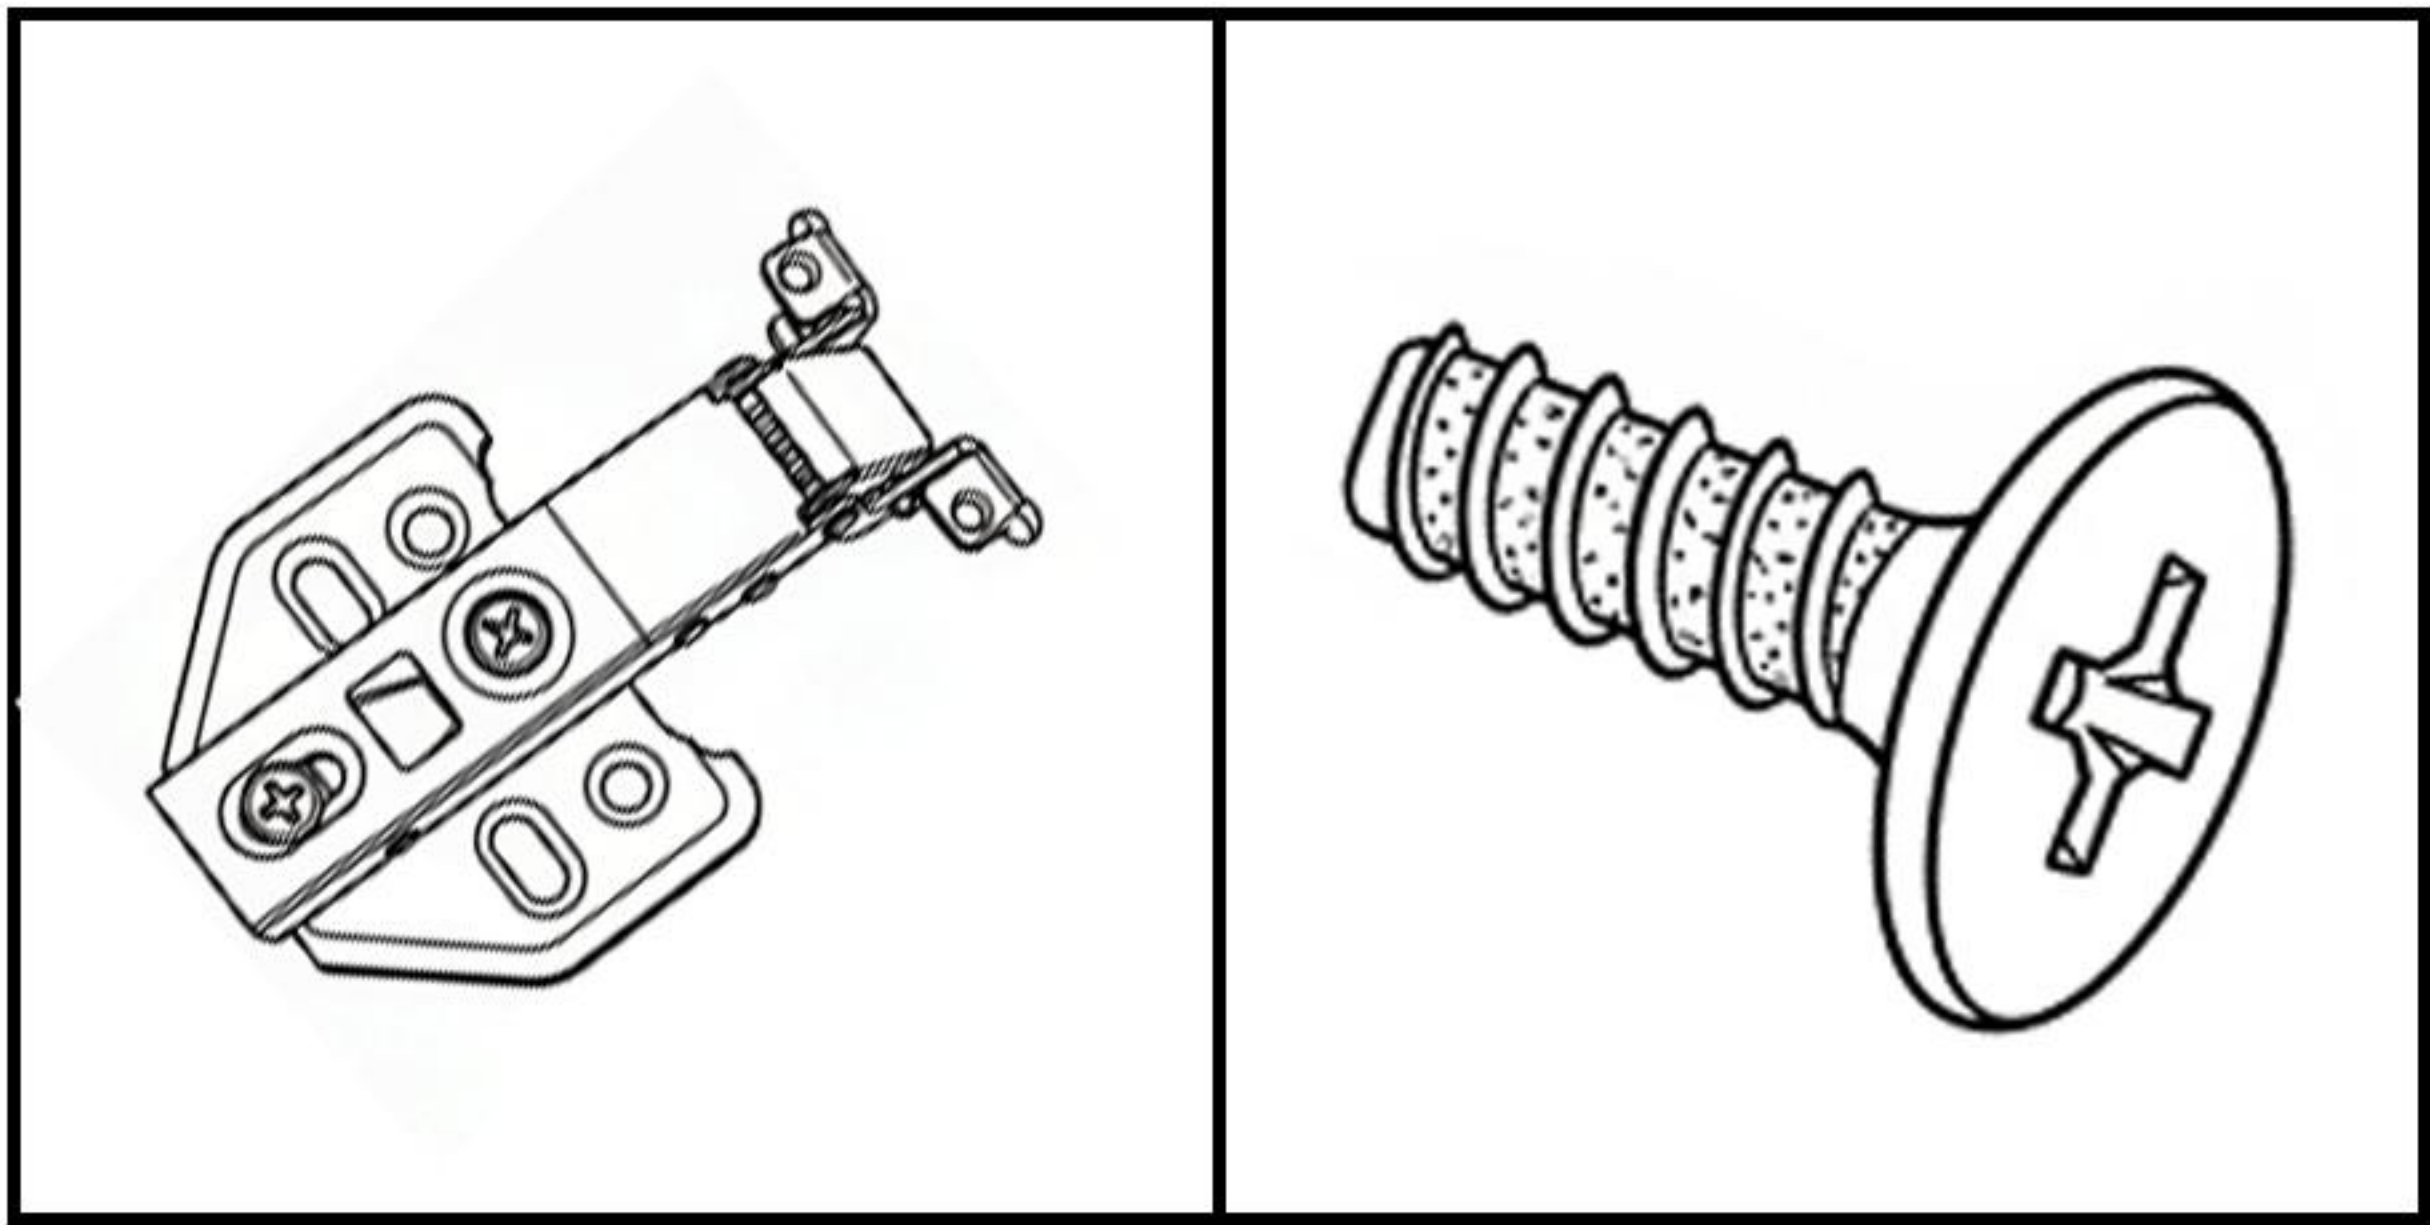


G


D

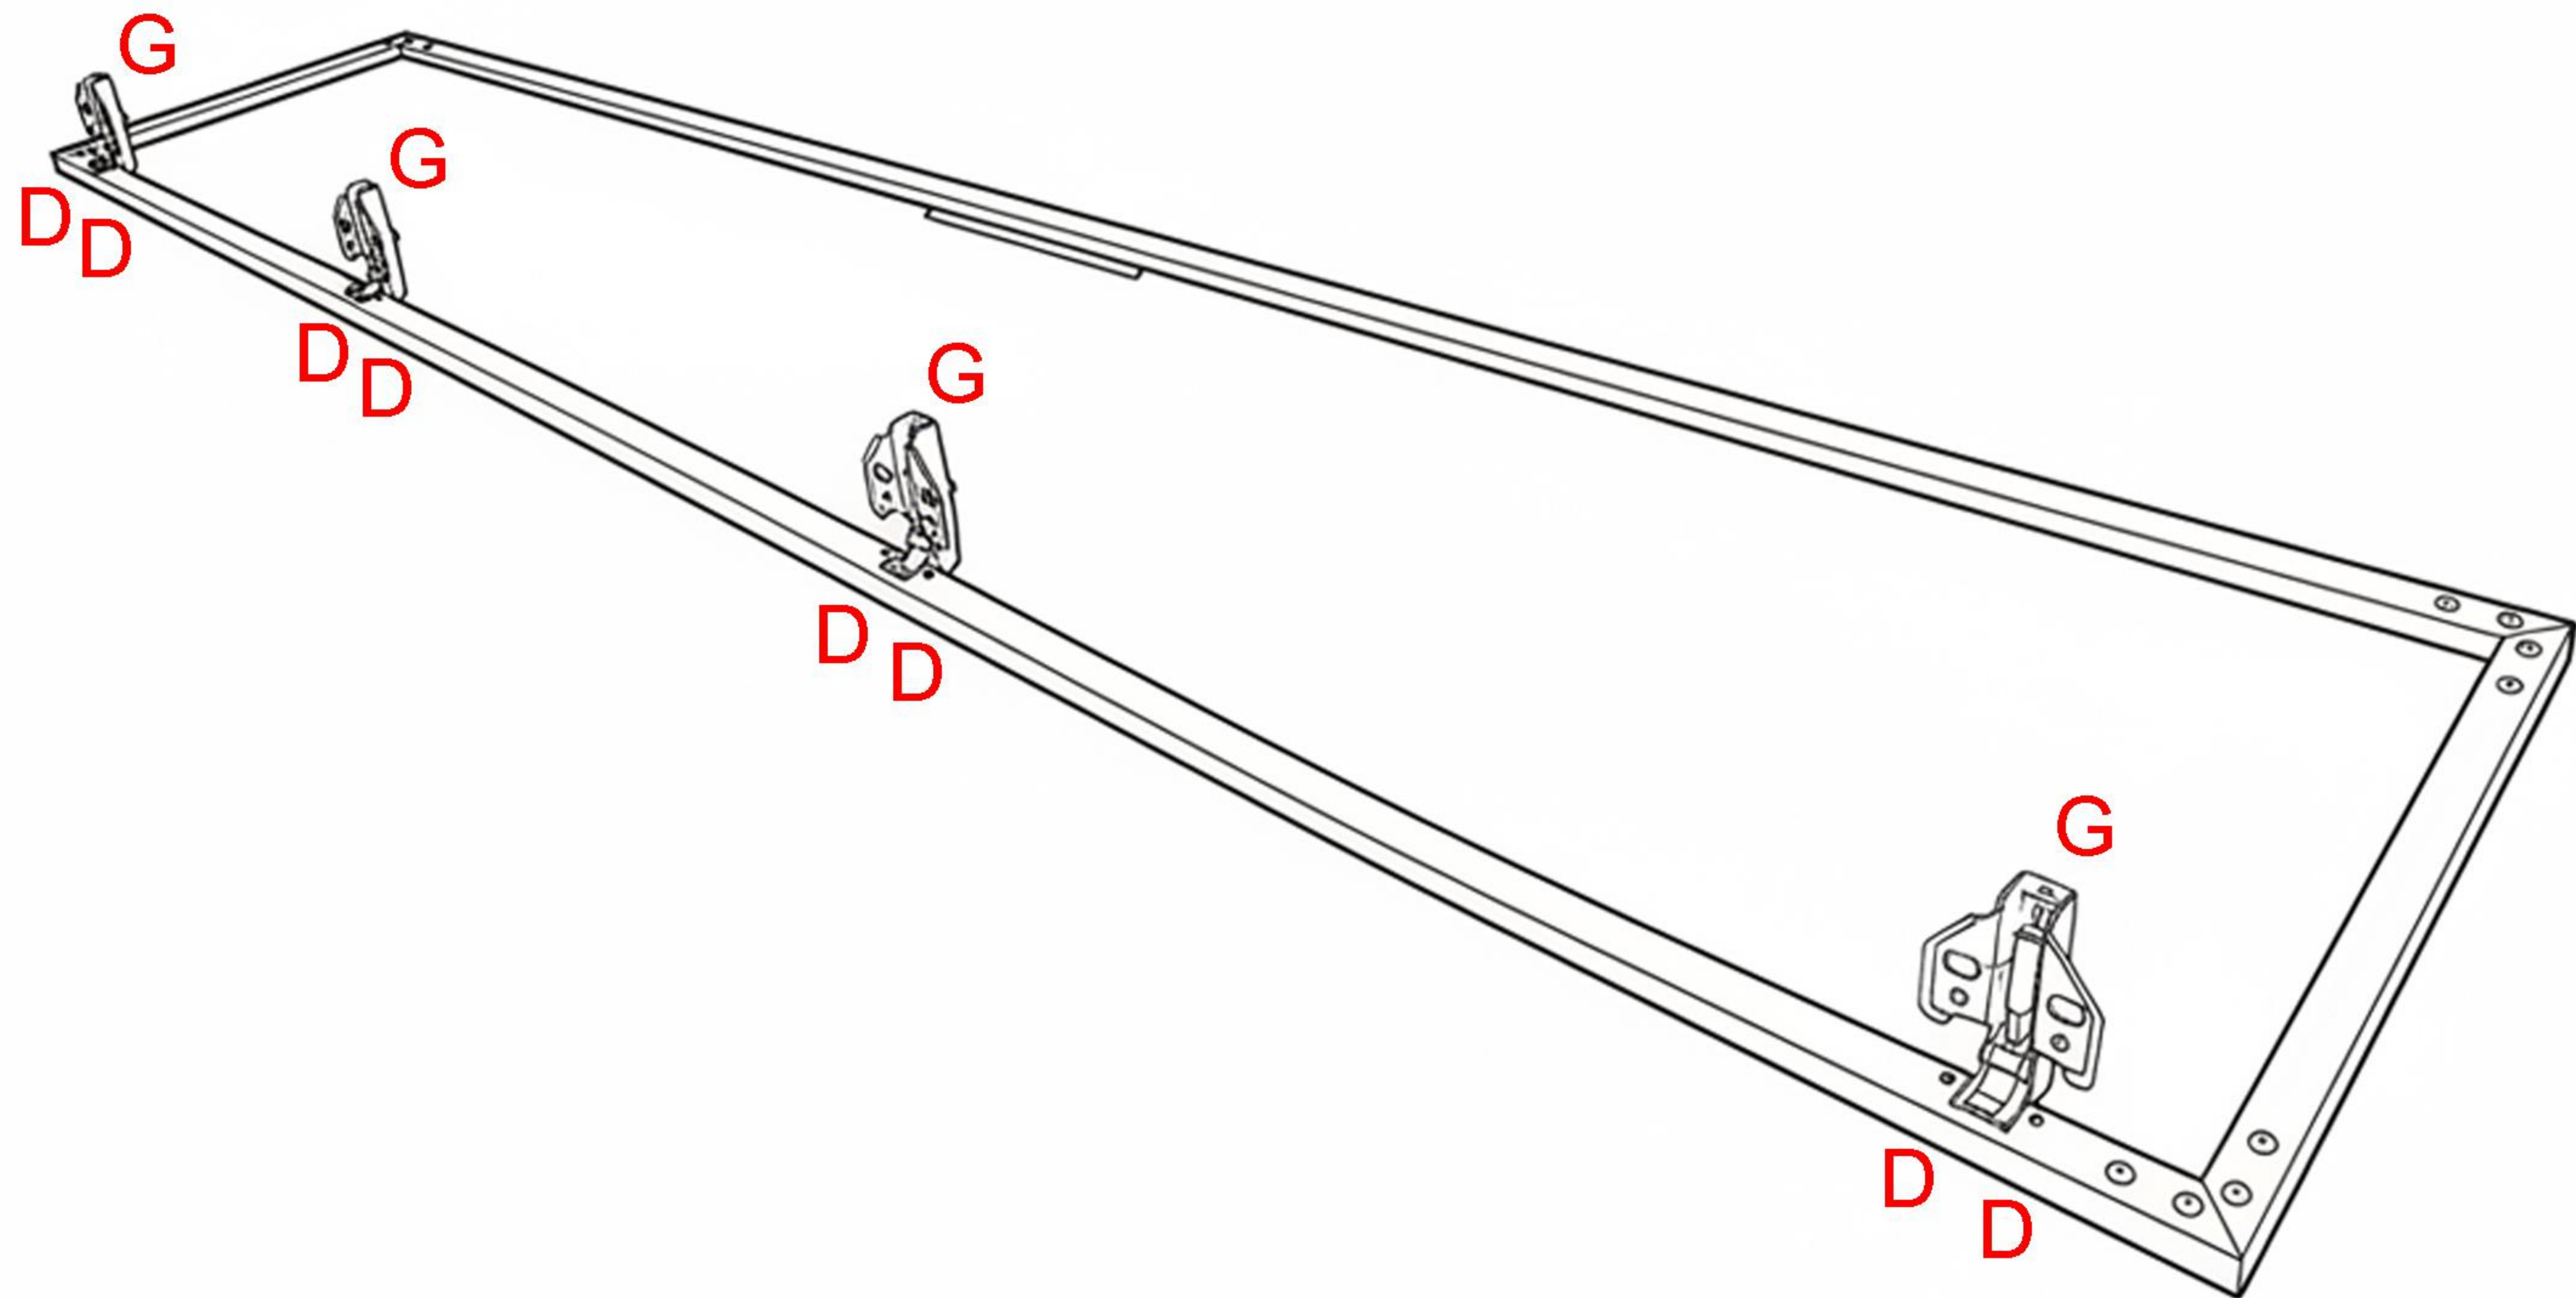

Use D to install G on both the left and right doors.

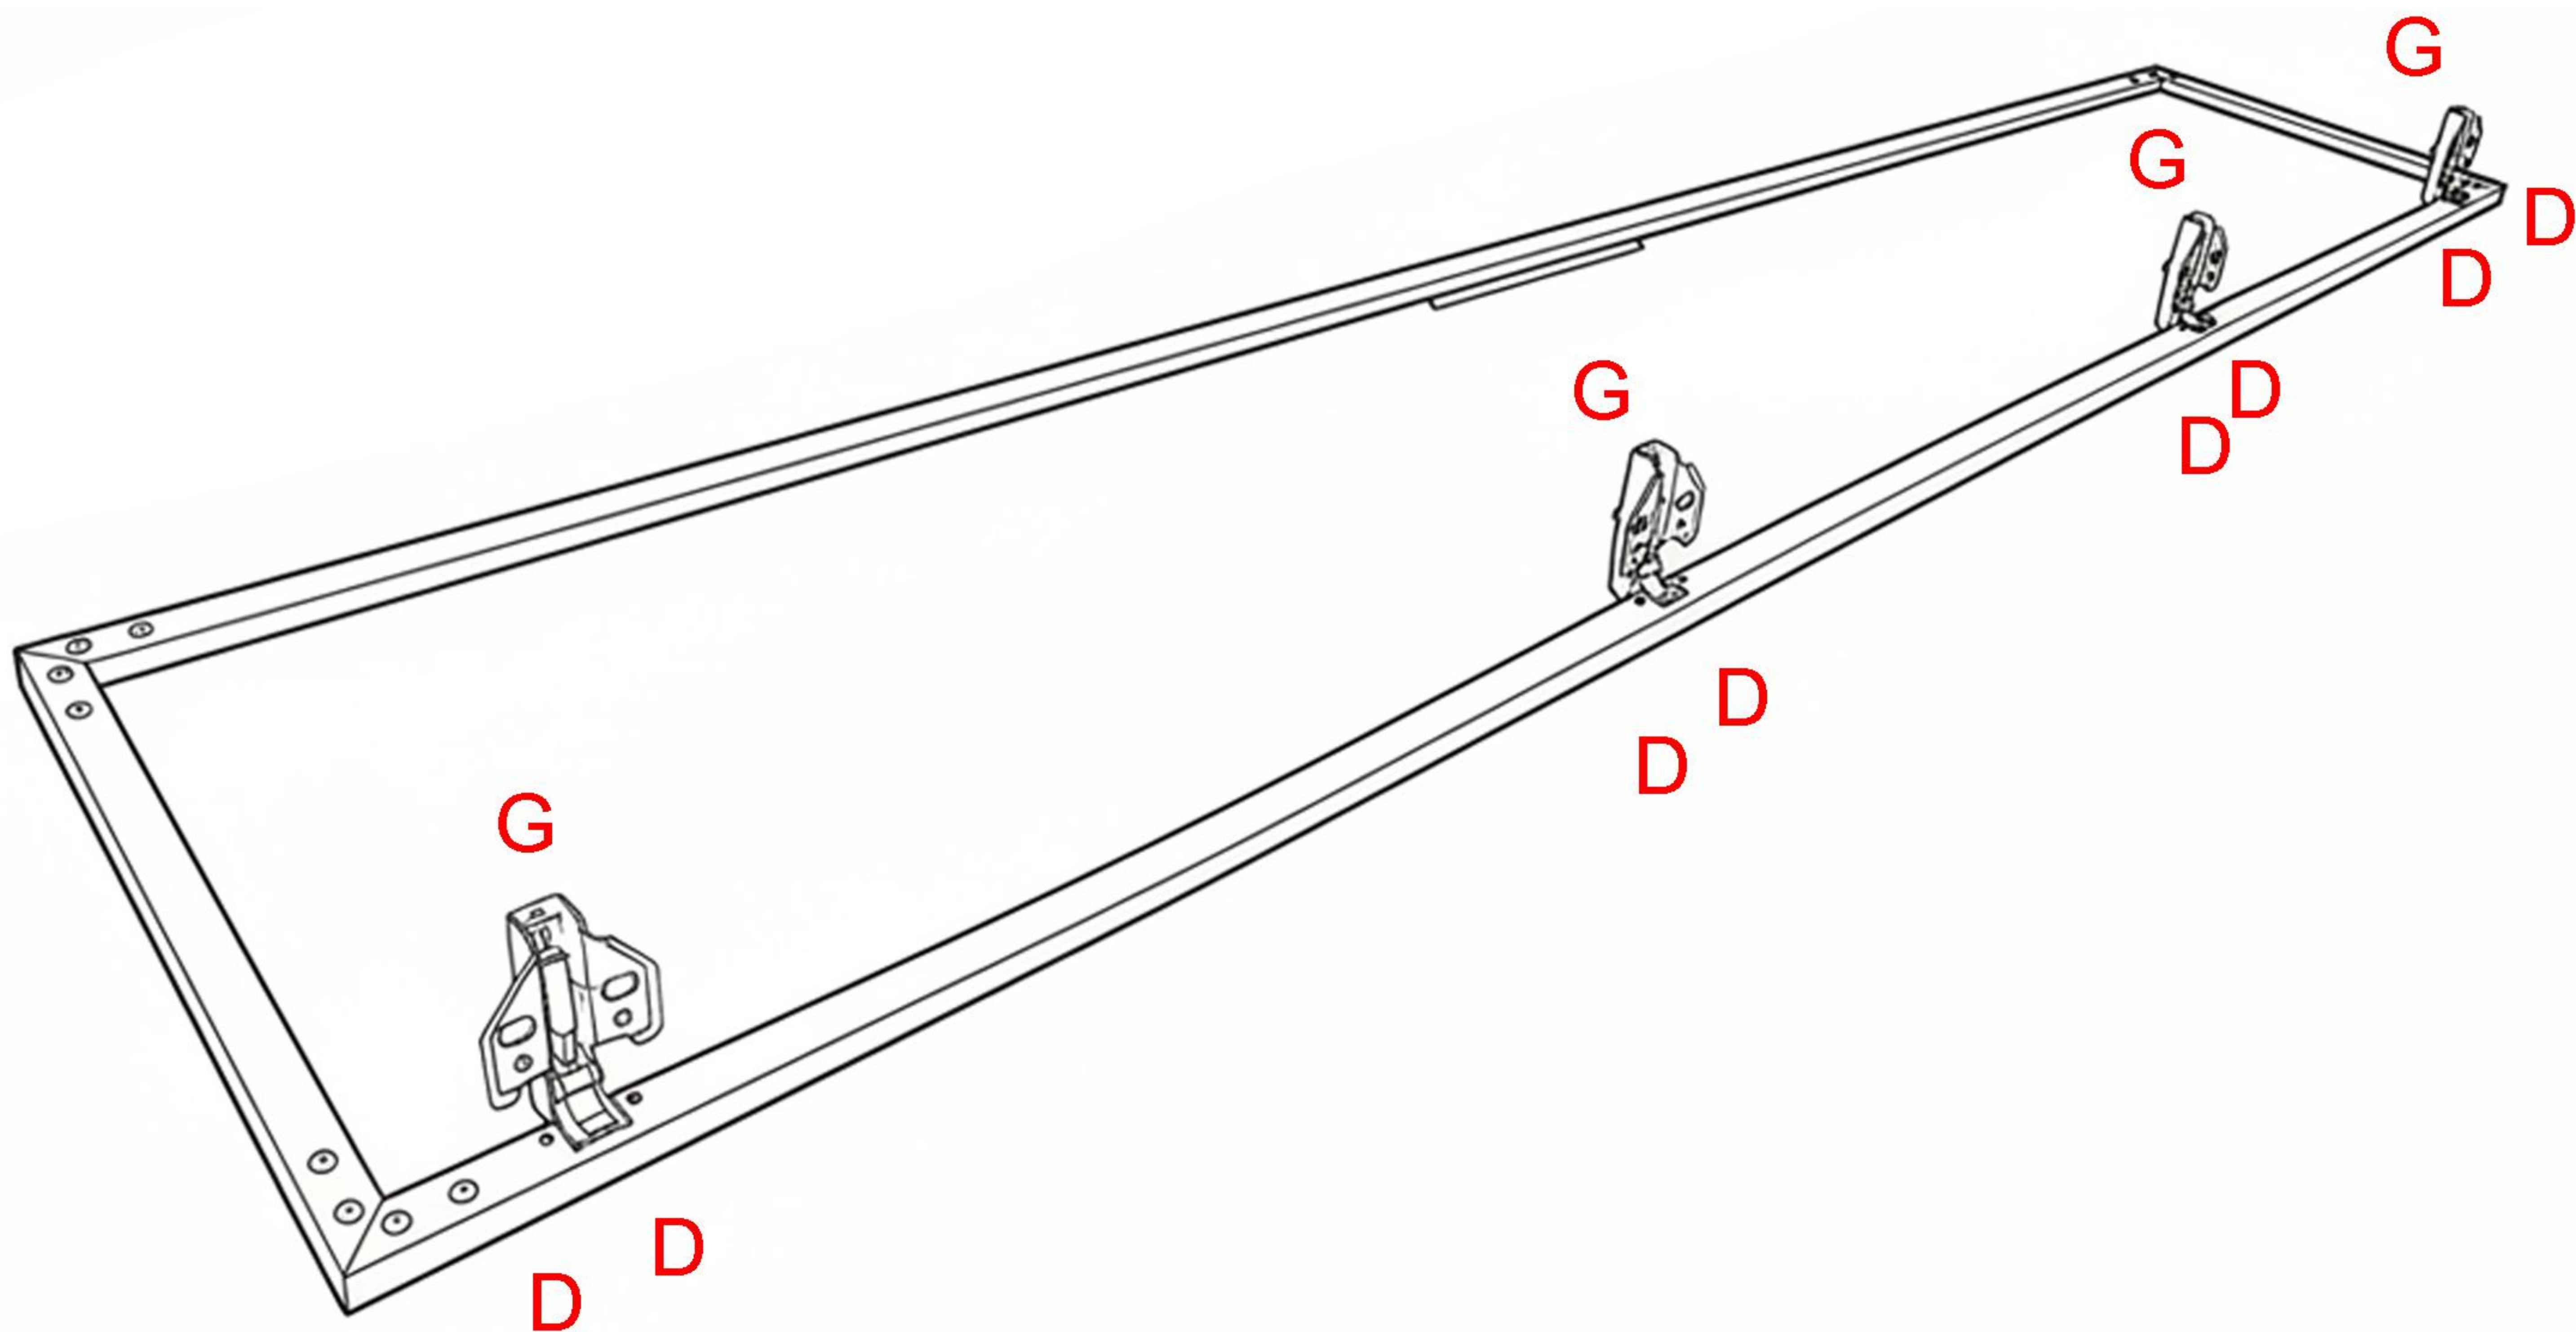


Step 13:

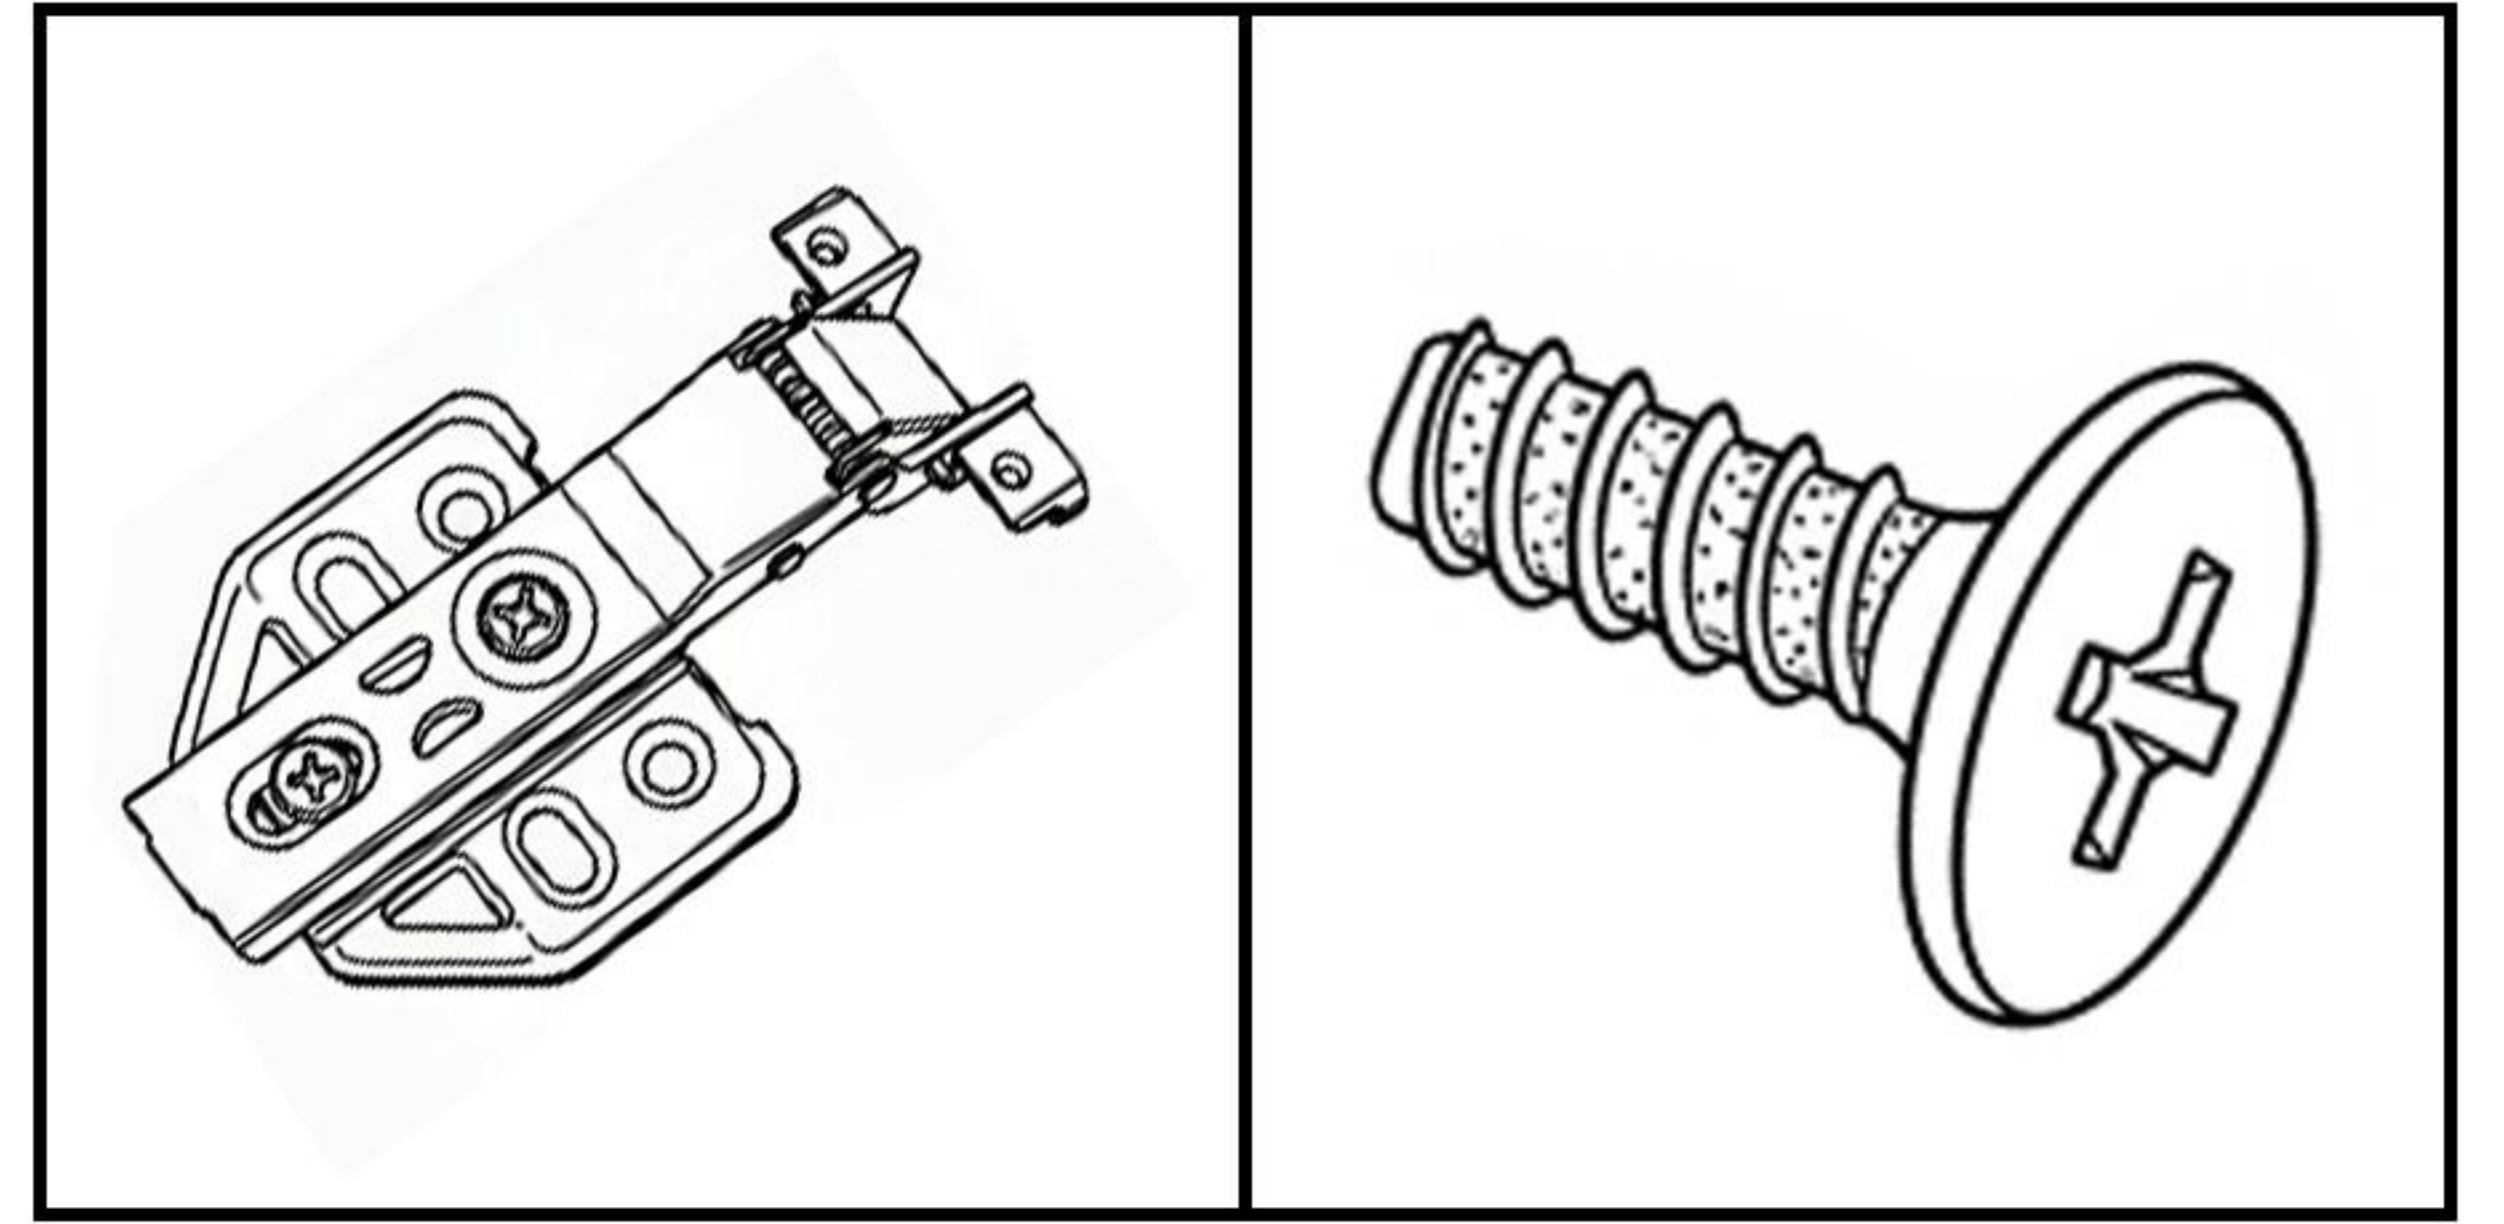


F

D




Use D to install F on the middle door.

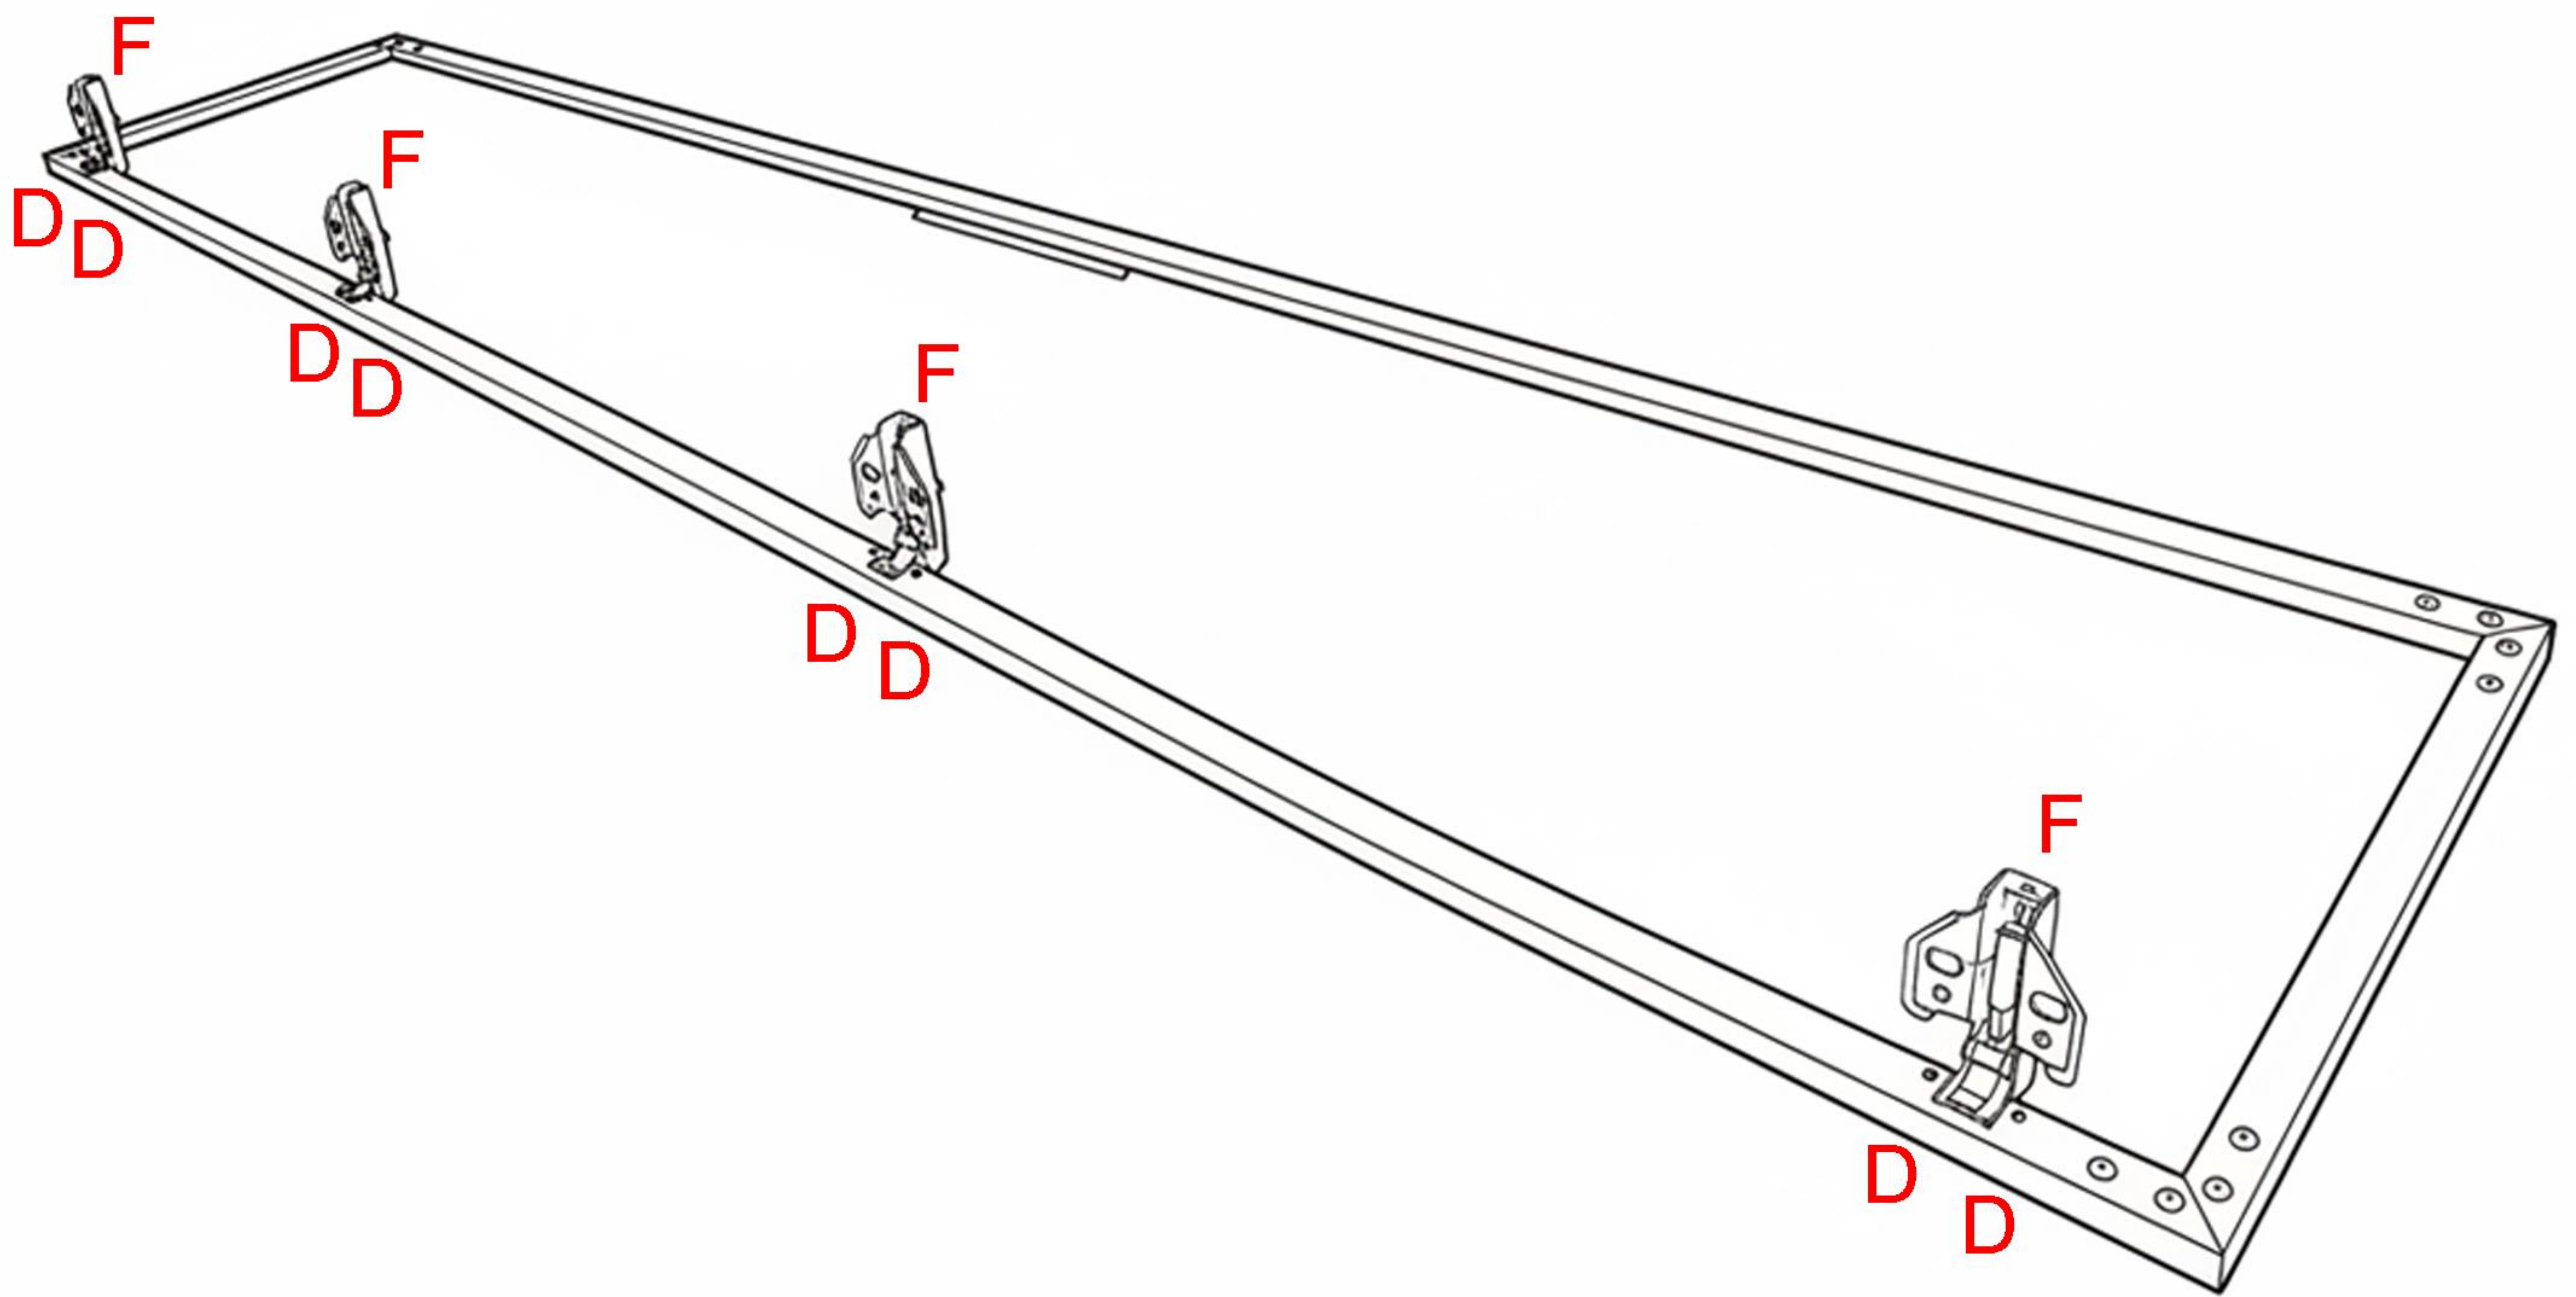

Step 14:

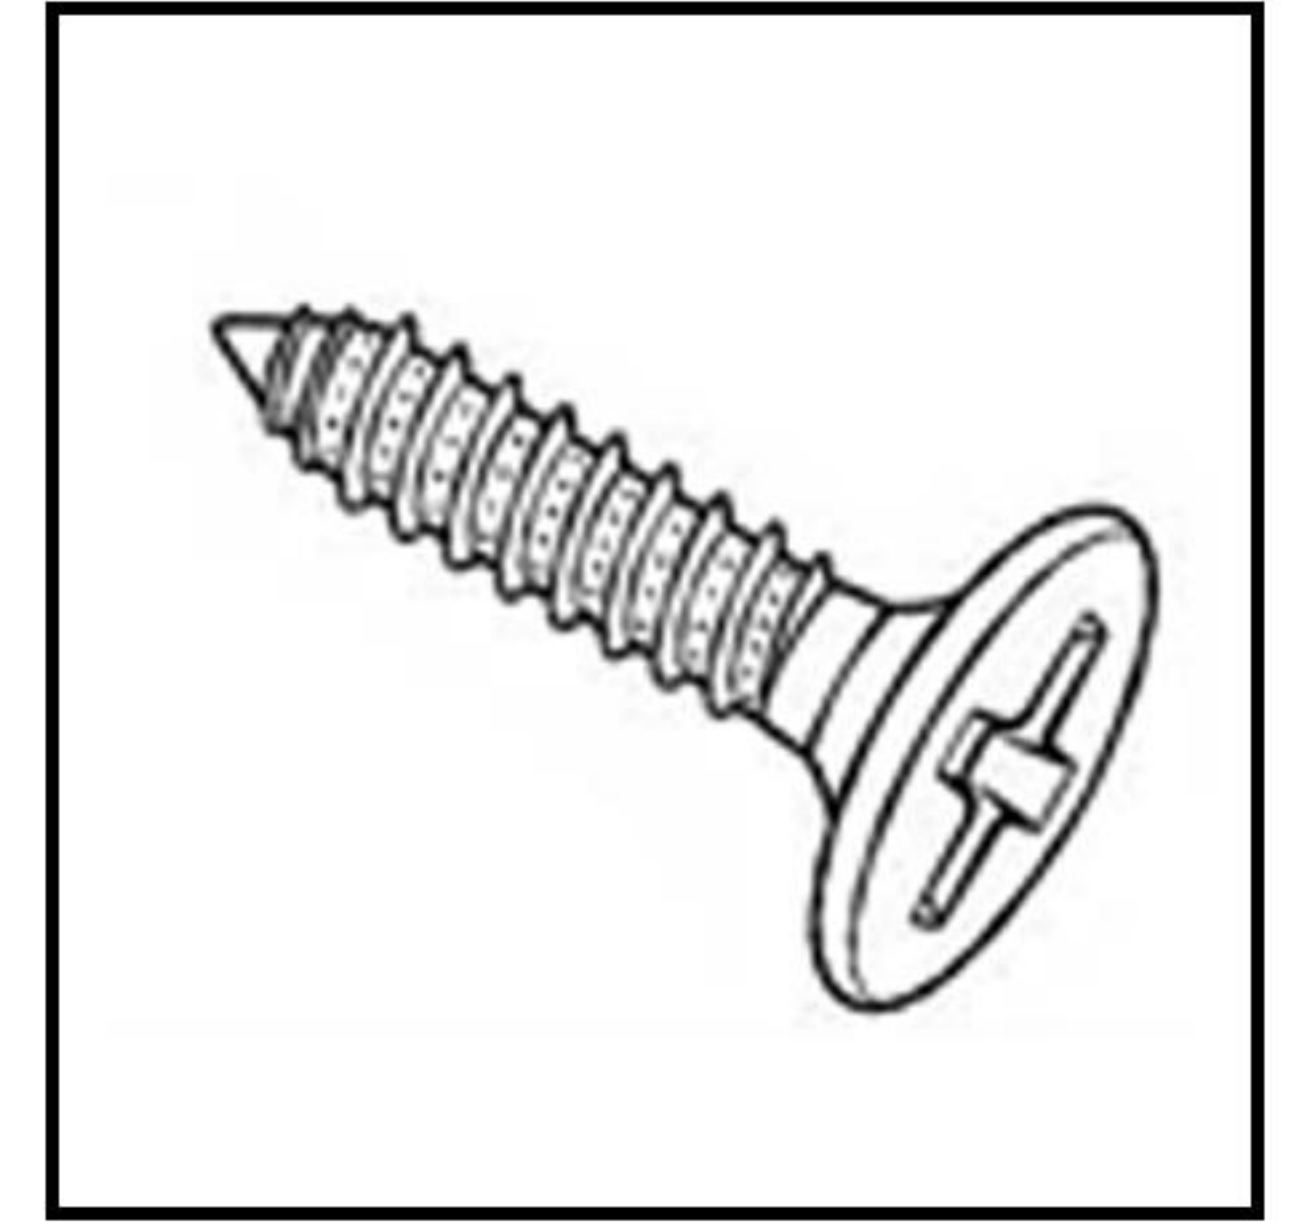


C

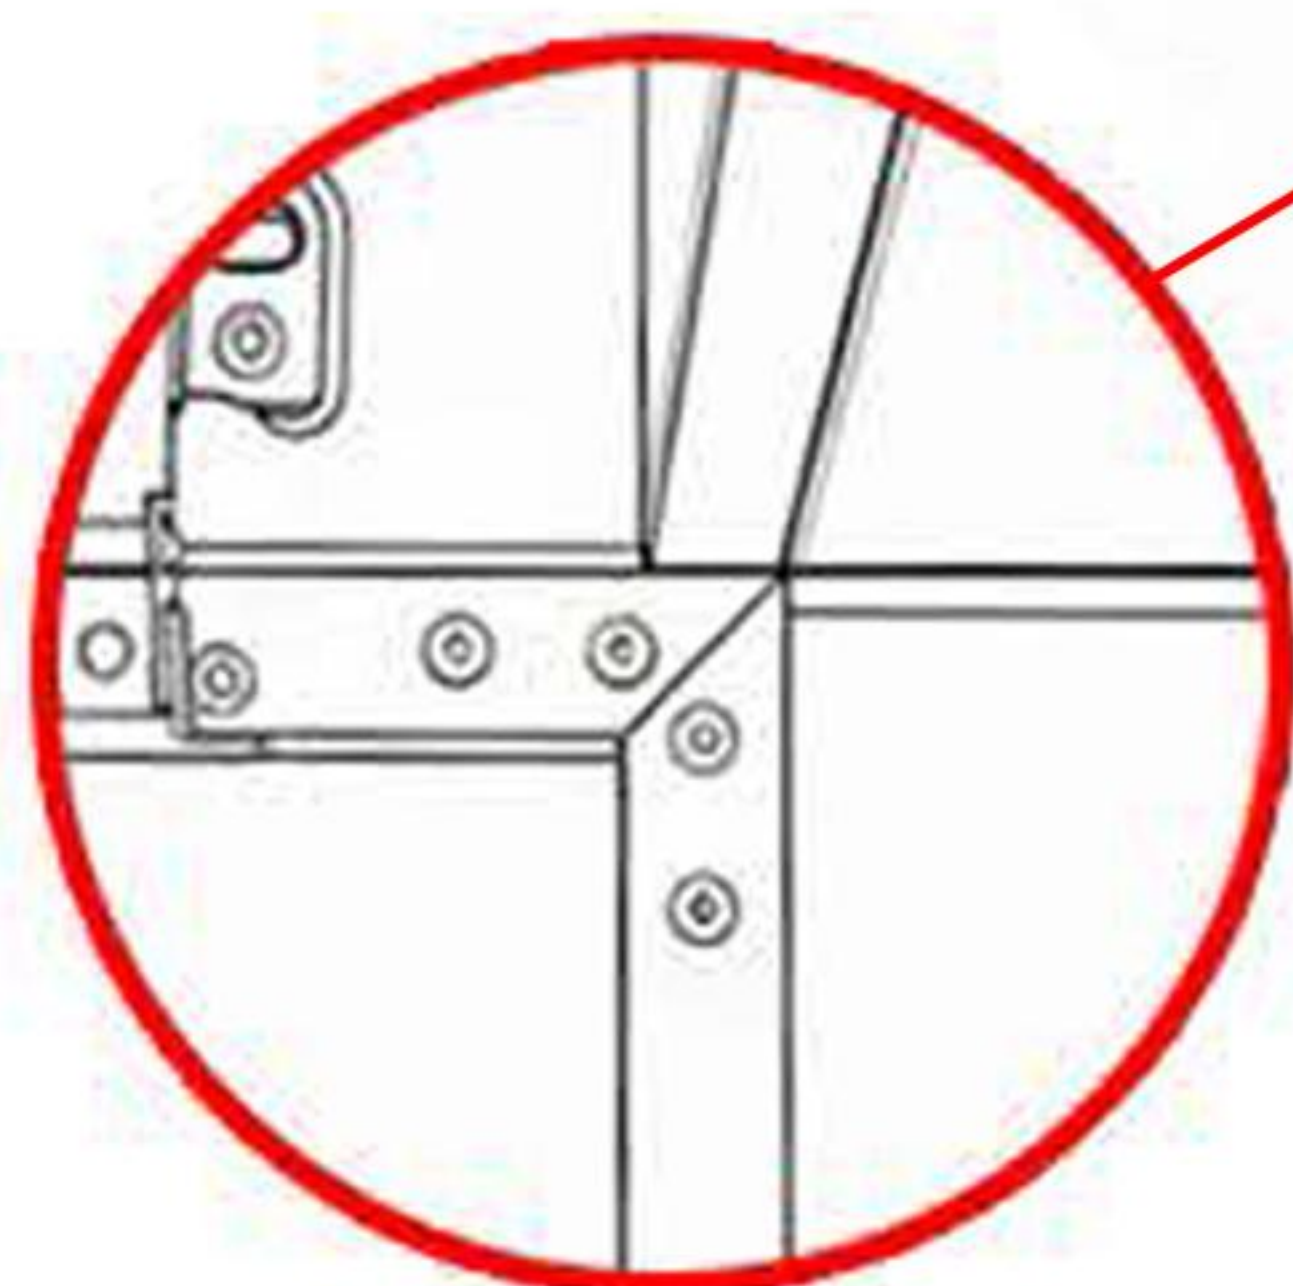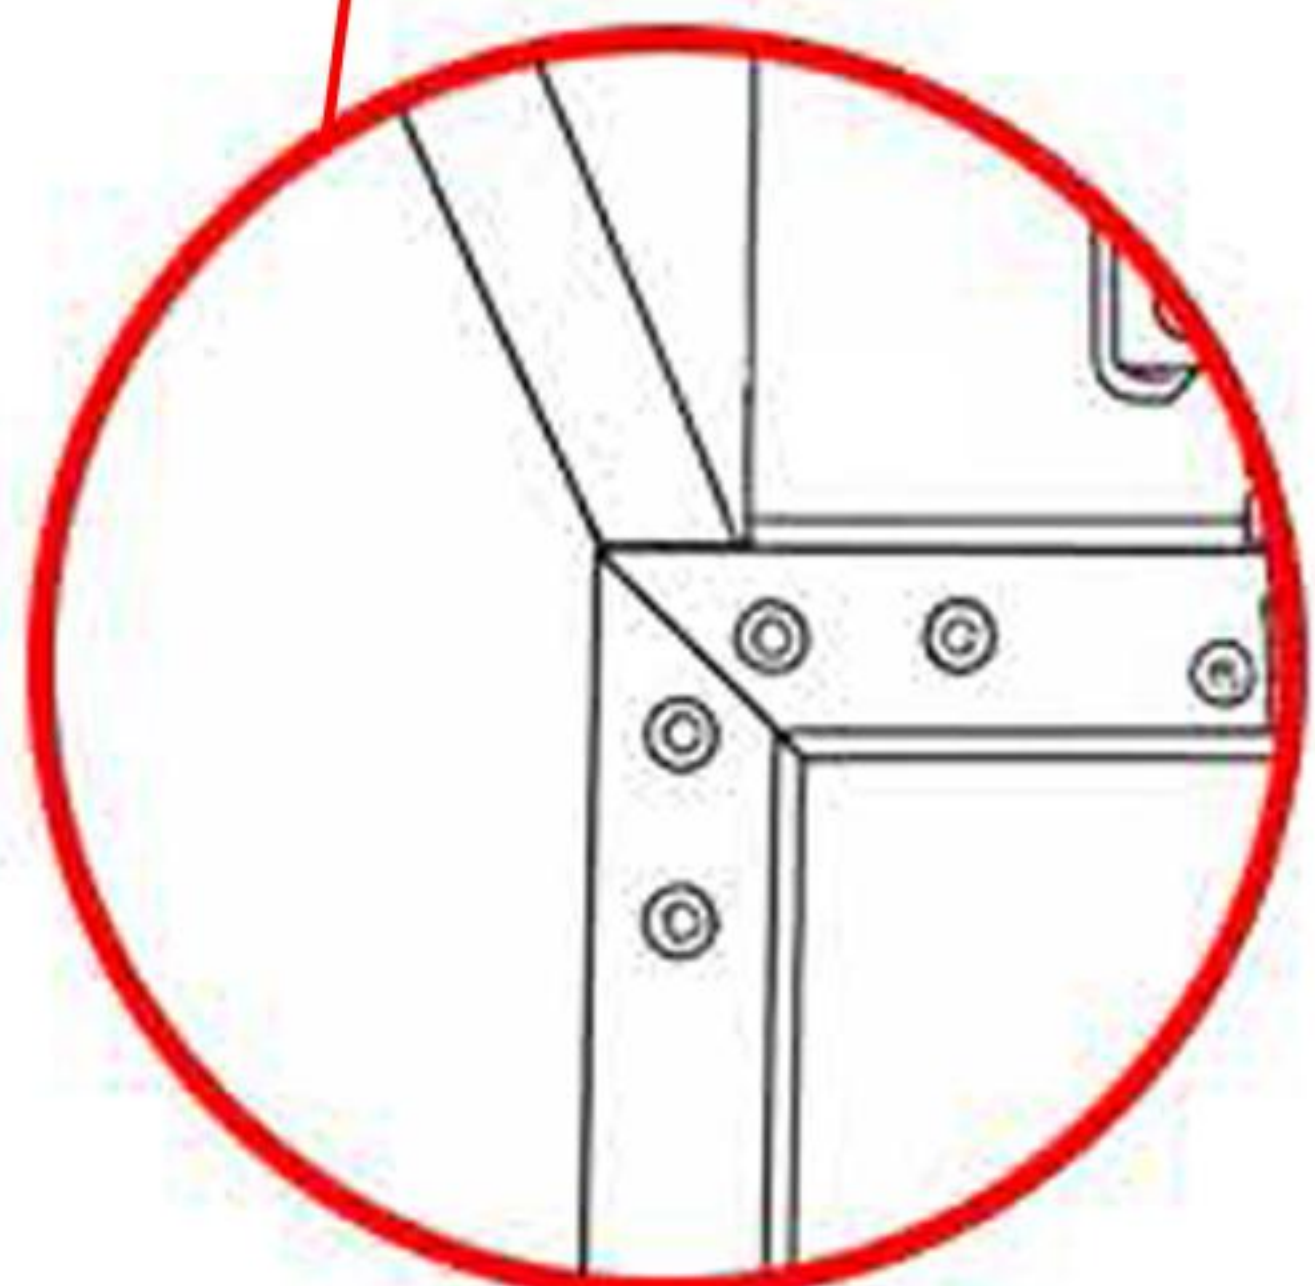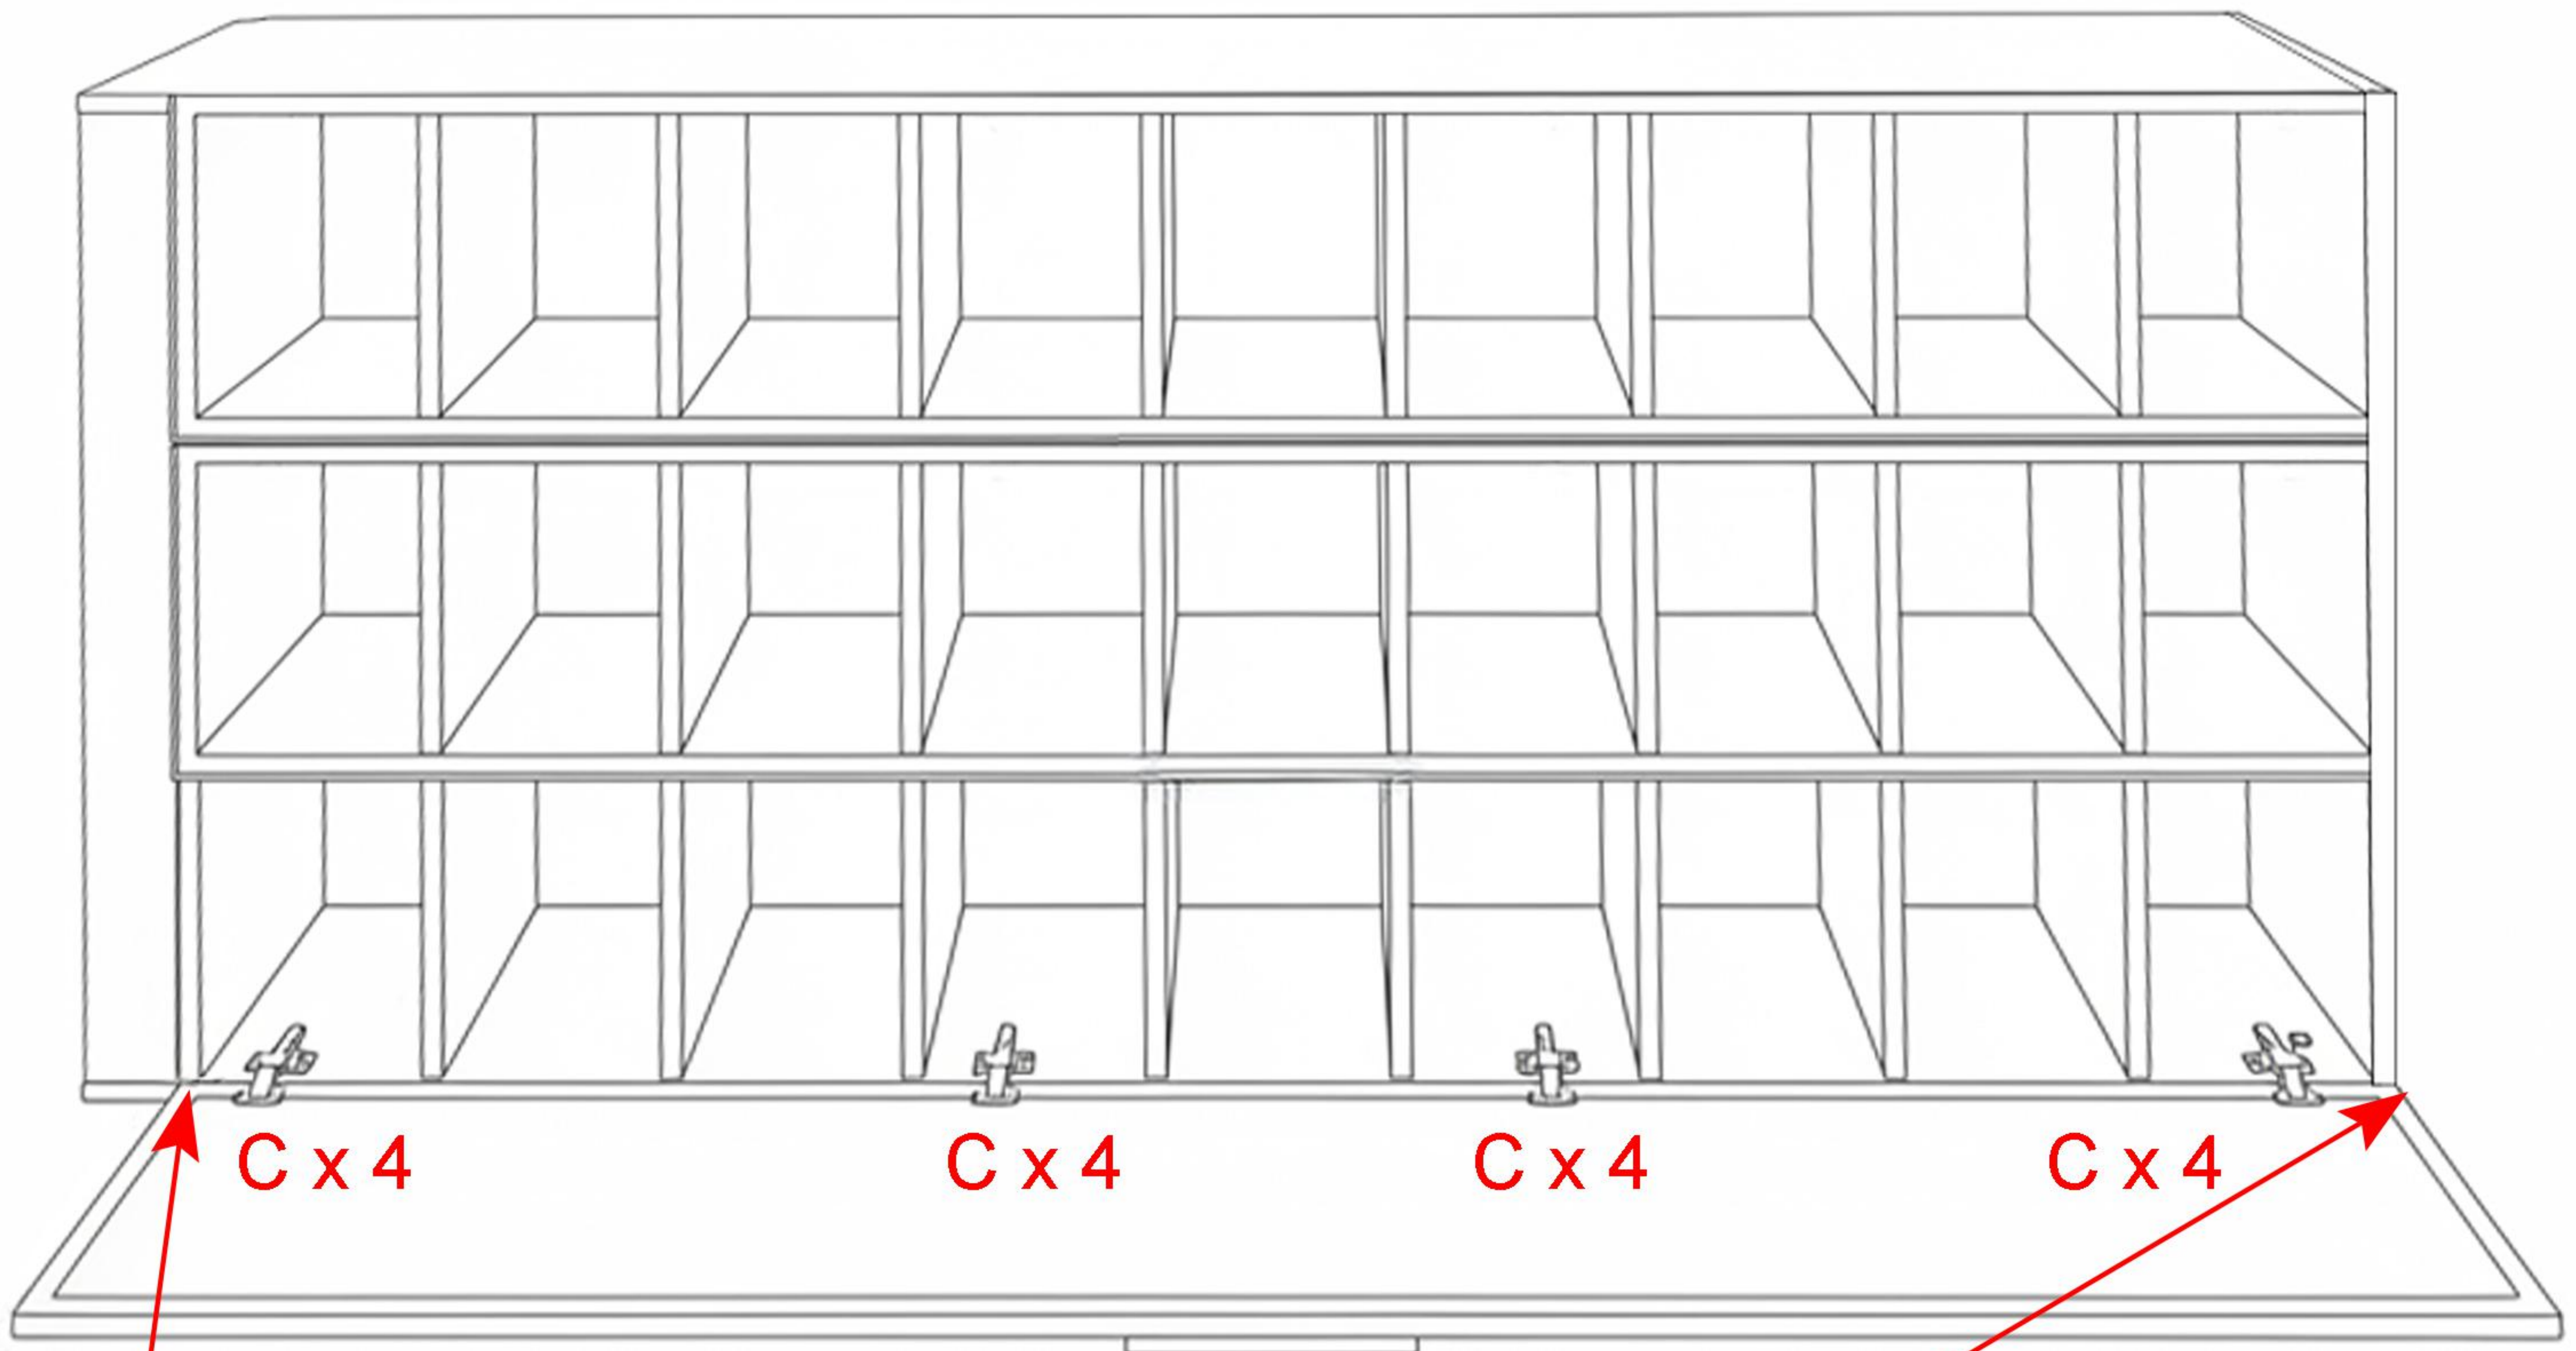

Align the door panel edge with the cabinet as shown, then install C. If the pre-drilled holes don't match C exactly, just disregard them.


Step 15:

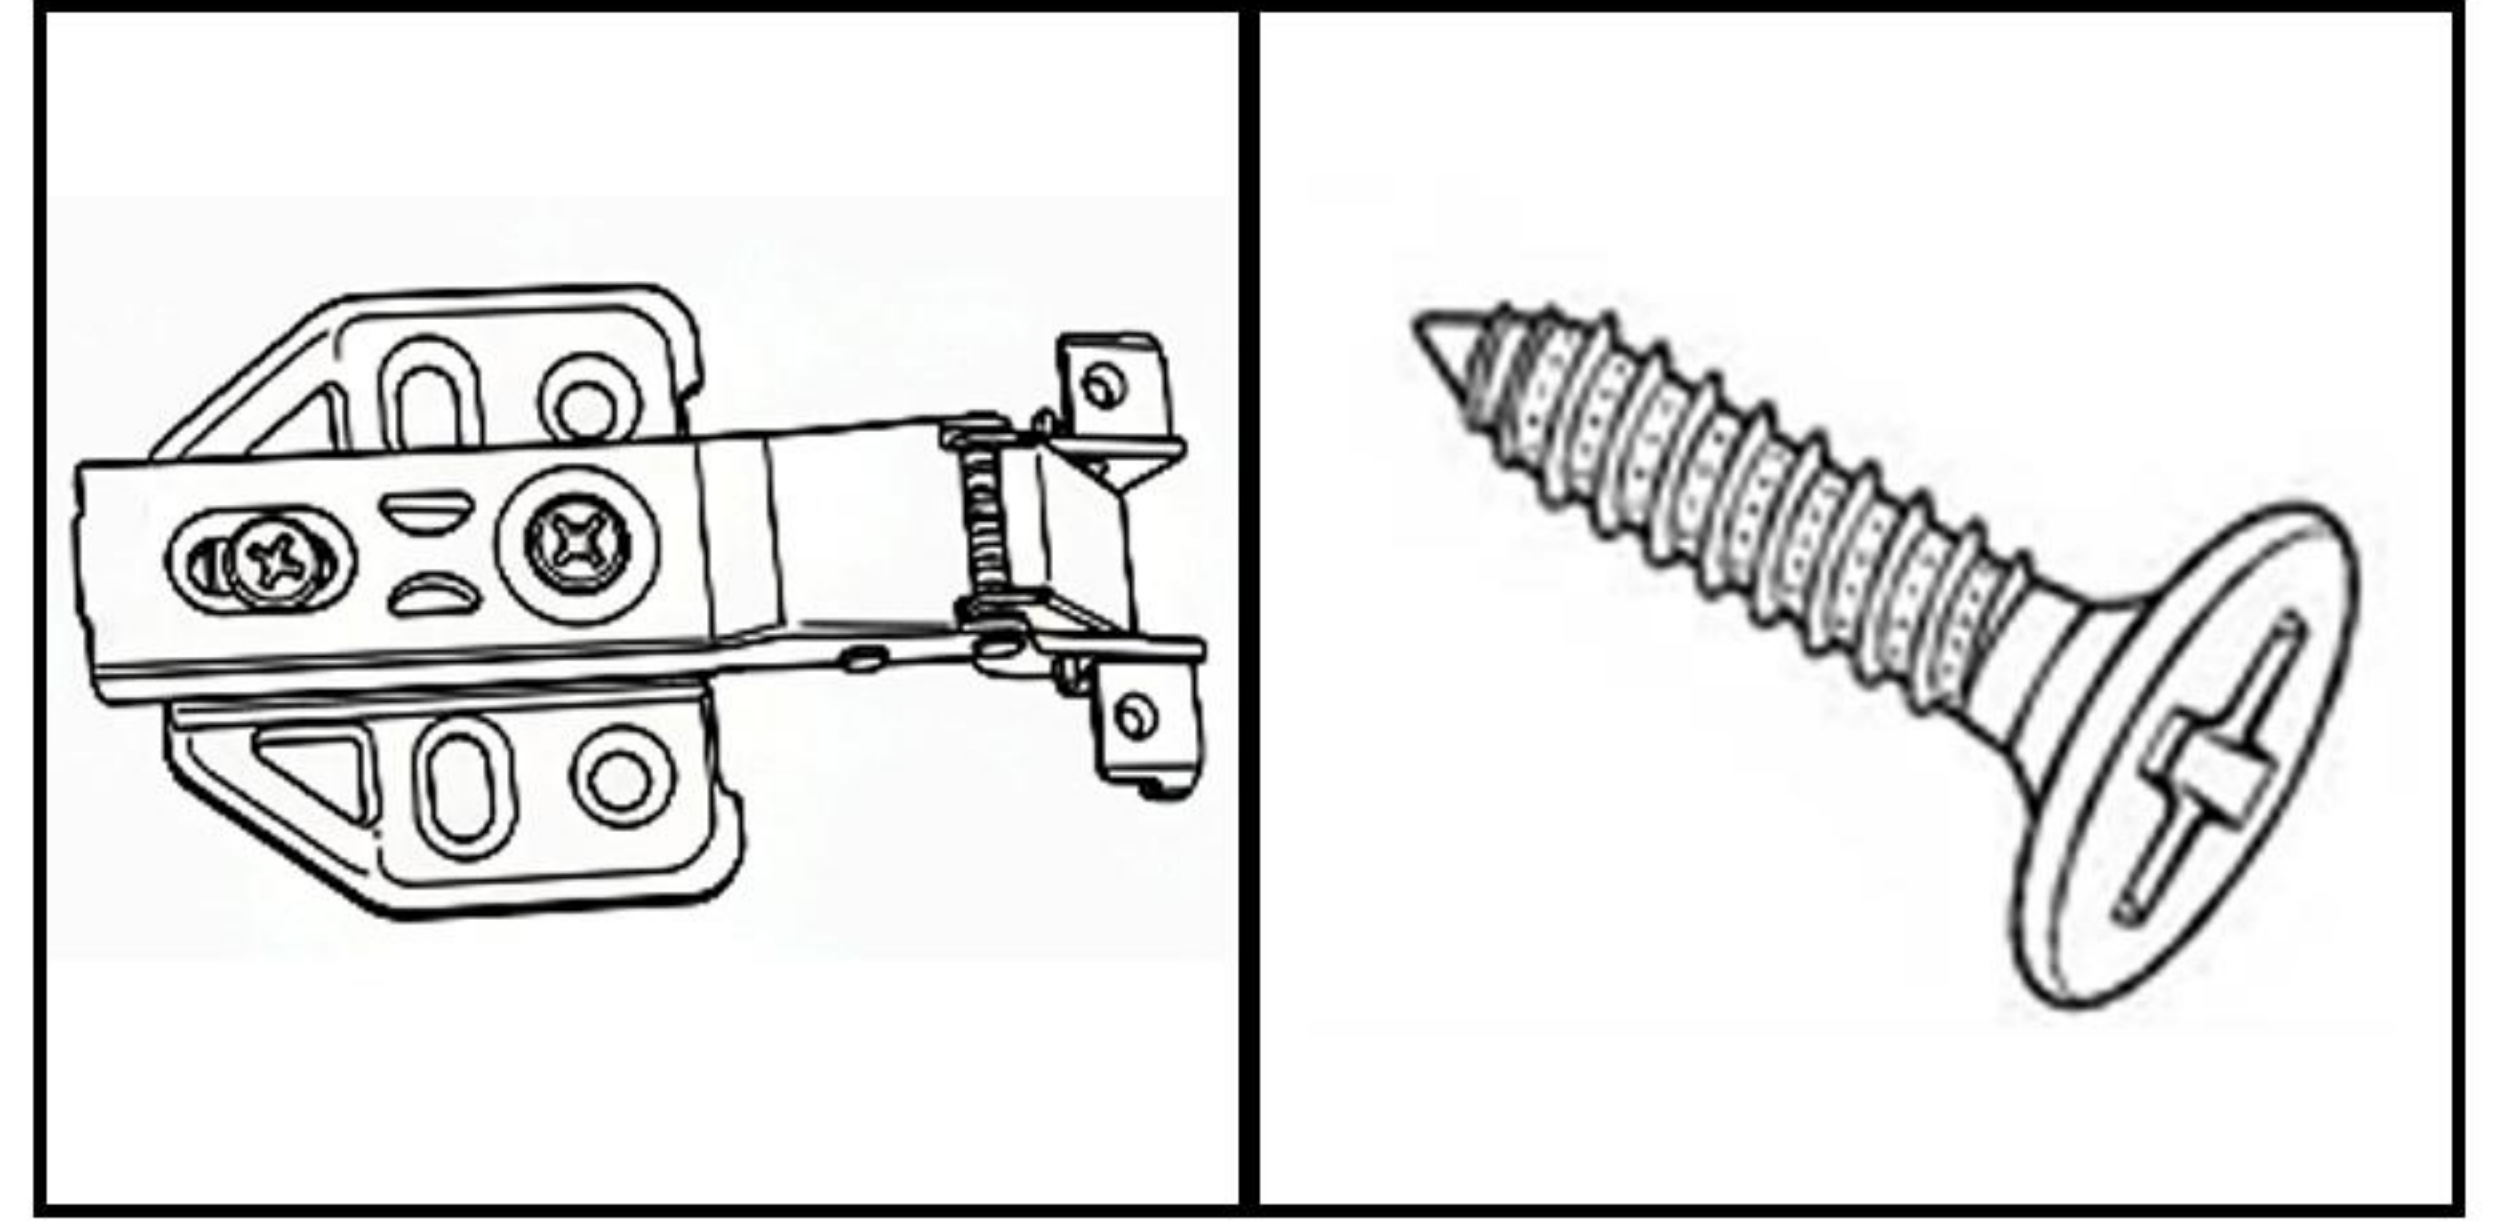

F


C

Use F (curved-arm hinge) for the middle door.

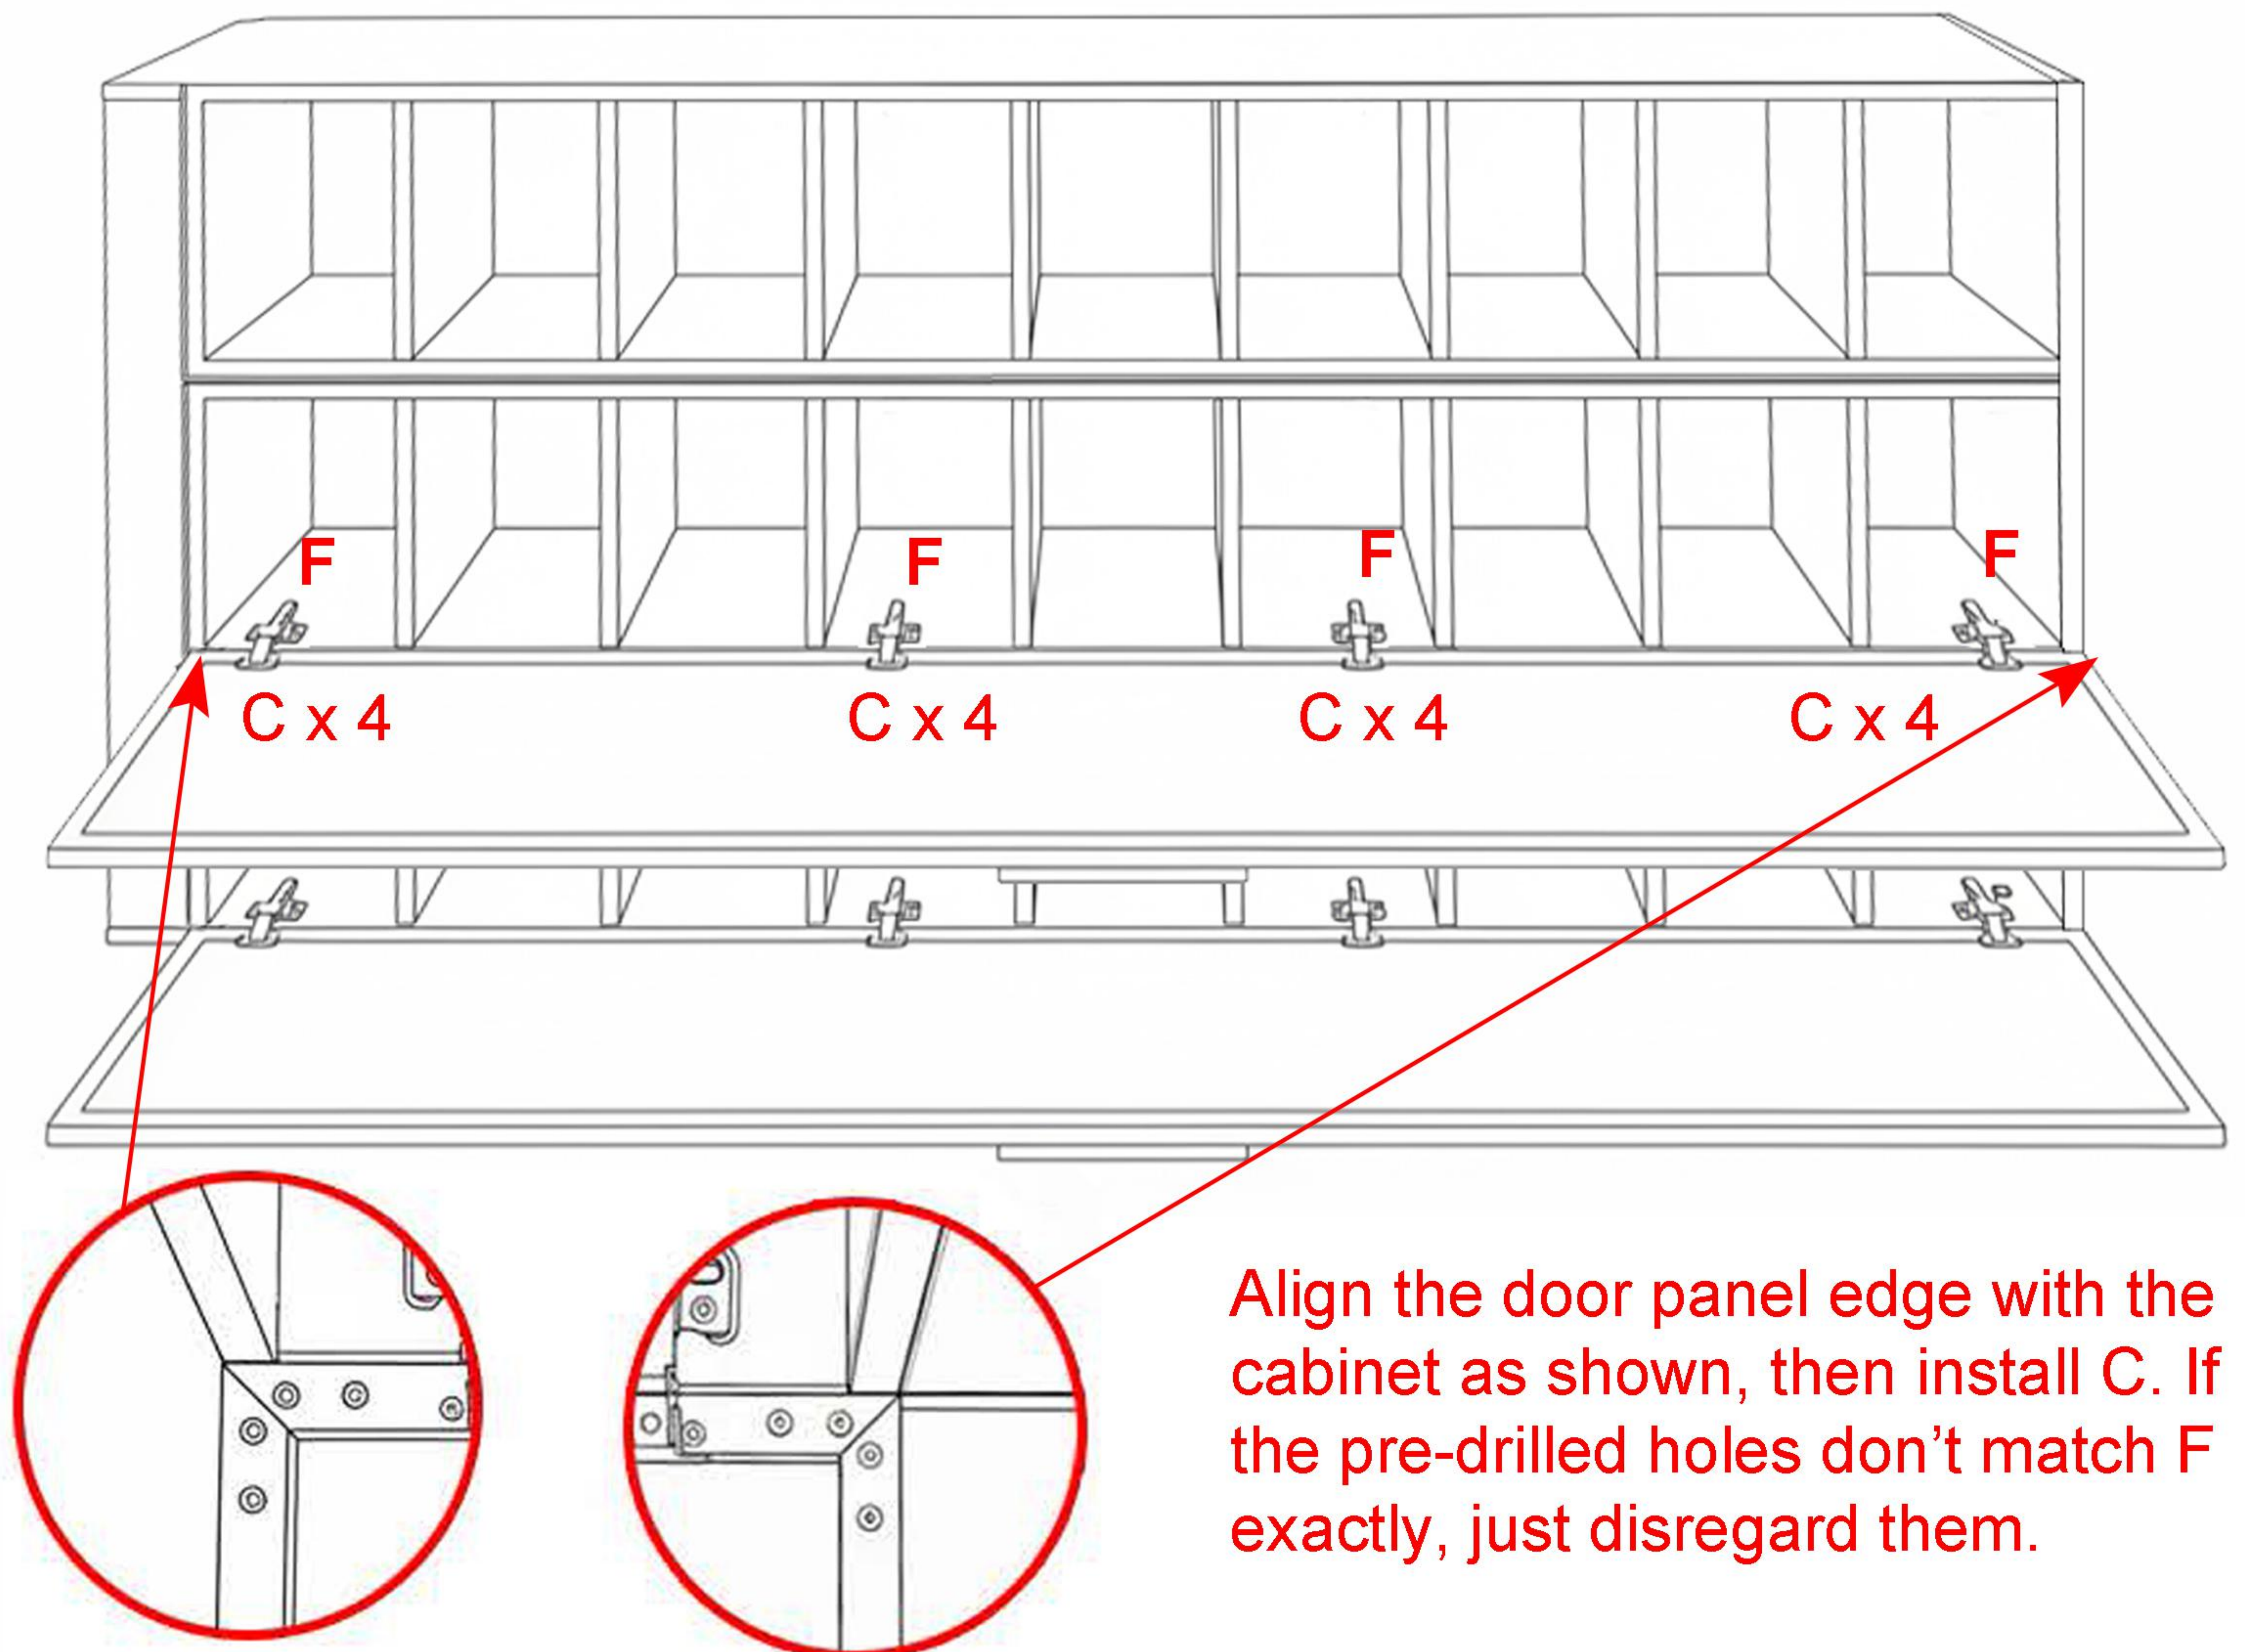





Align the door panel edge with the cabinet as shown, then install C. If the pre-drilled holes don't match F exactly, just disregard them.

Step 16:

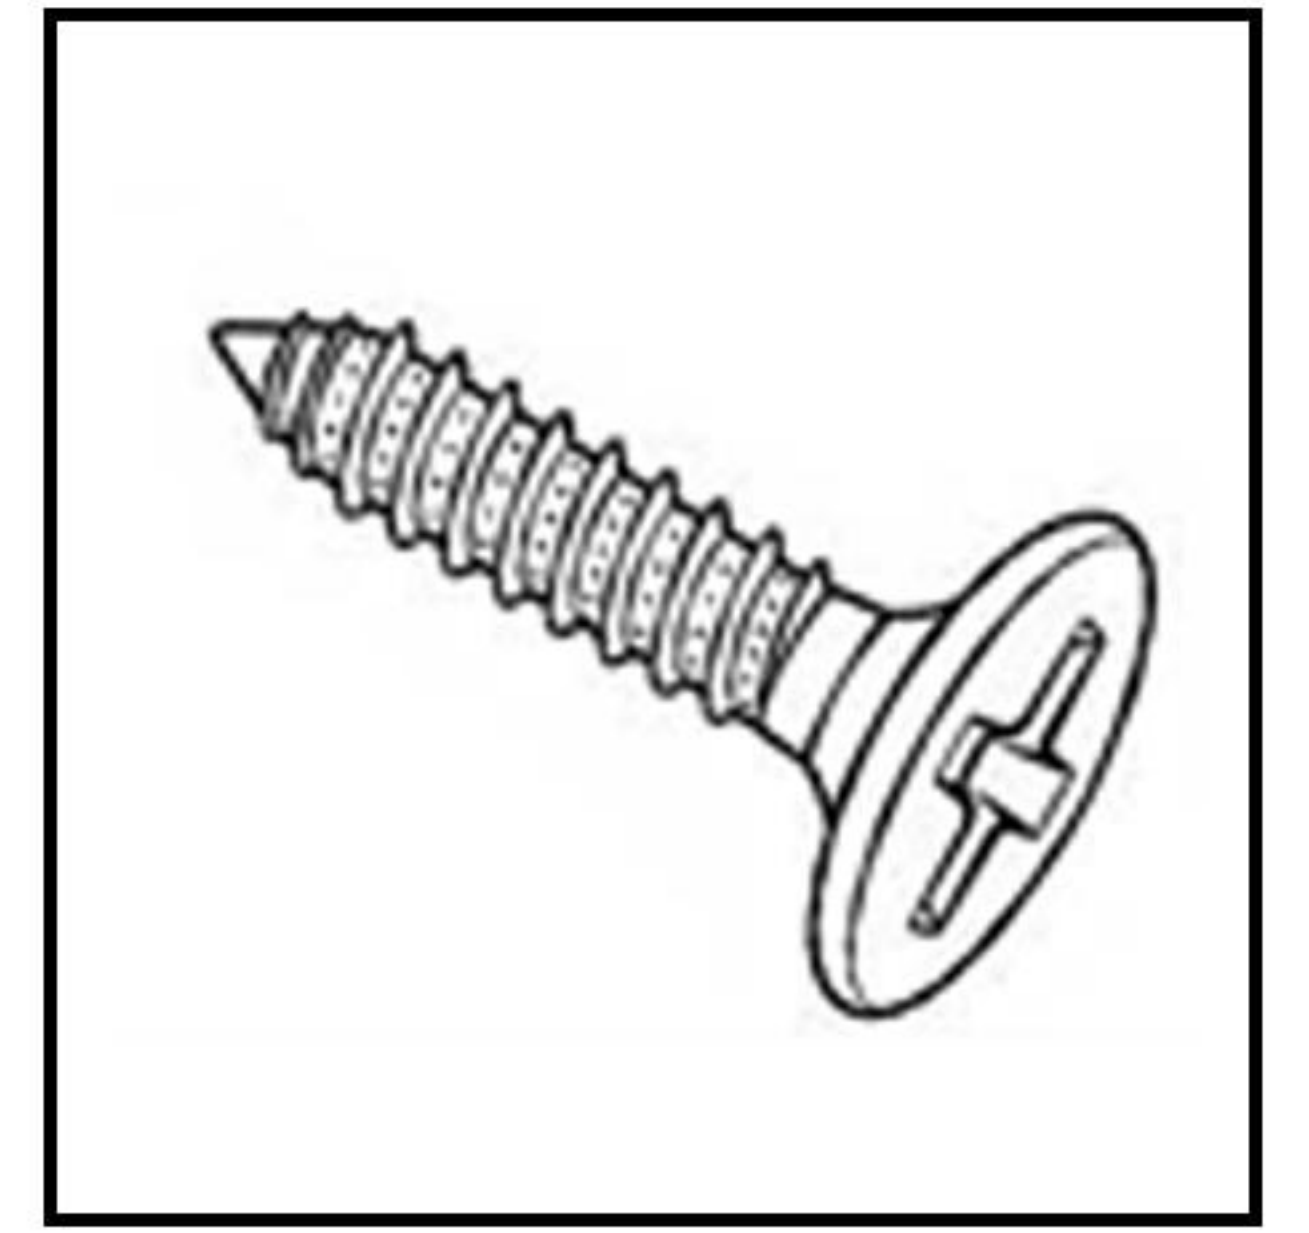

C

Flip the cabinet to install the door on the other side.

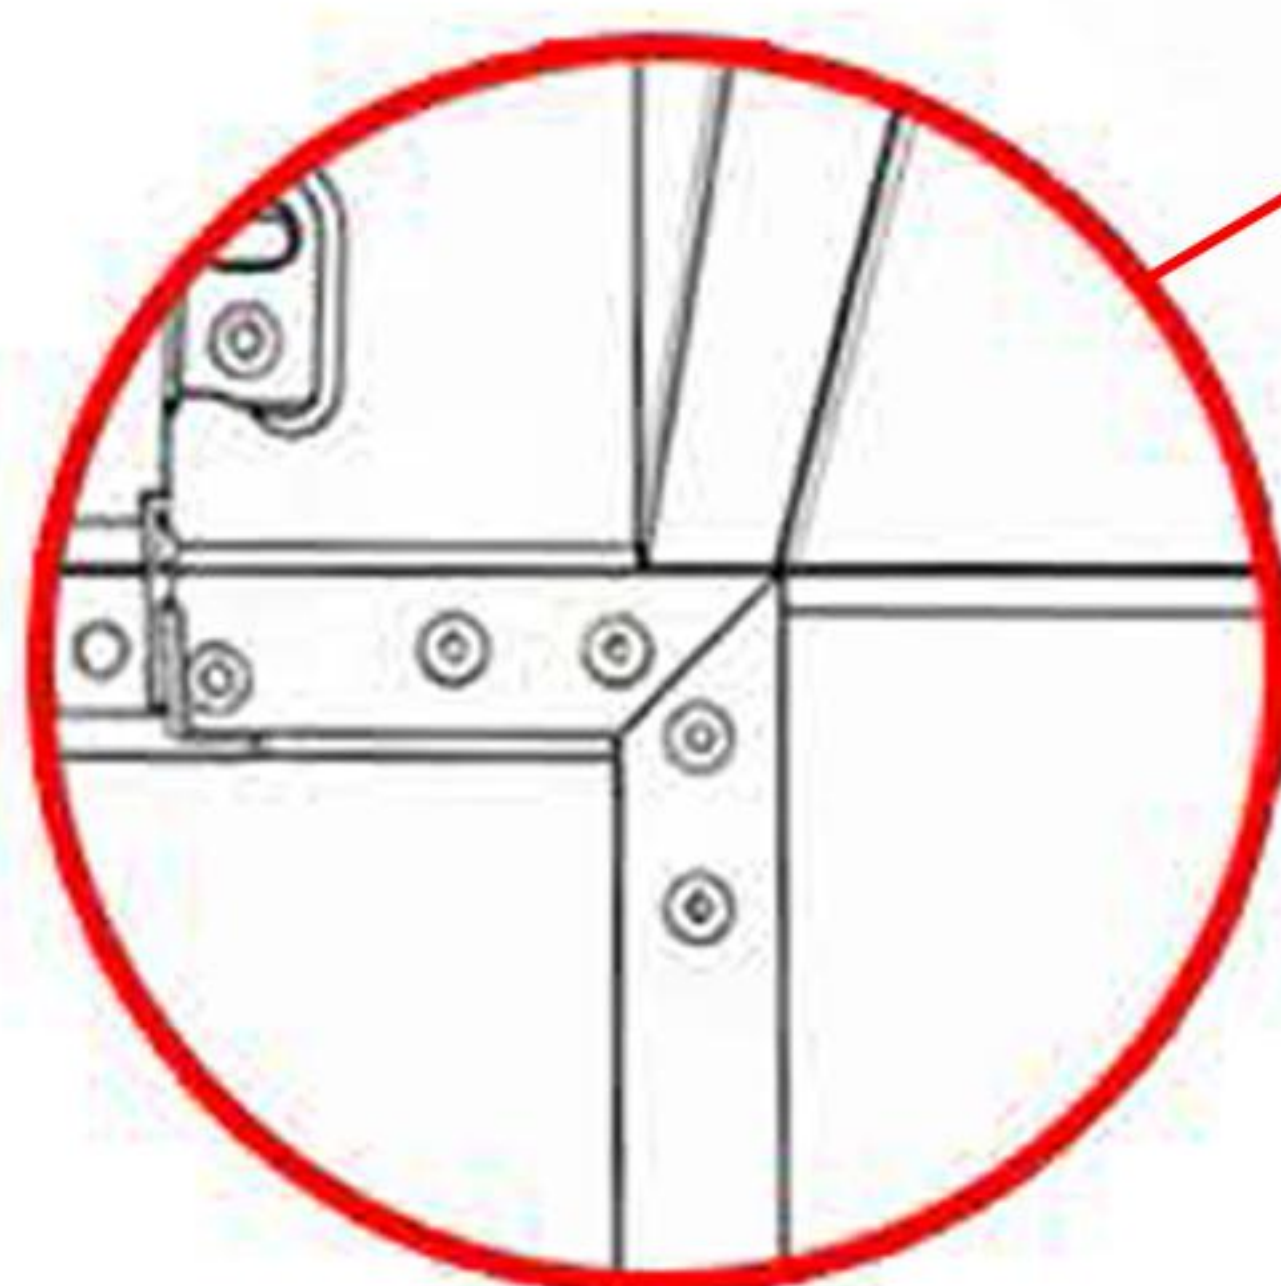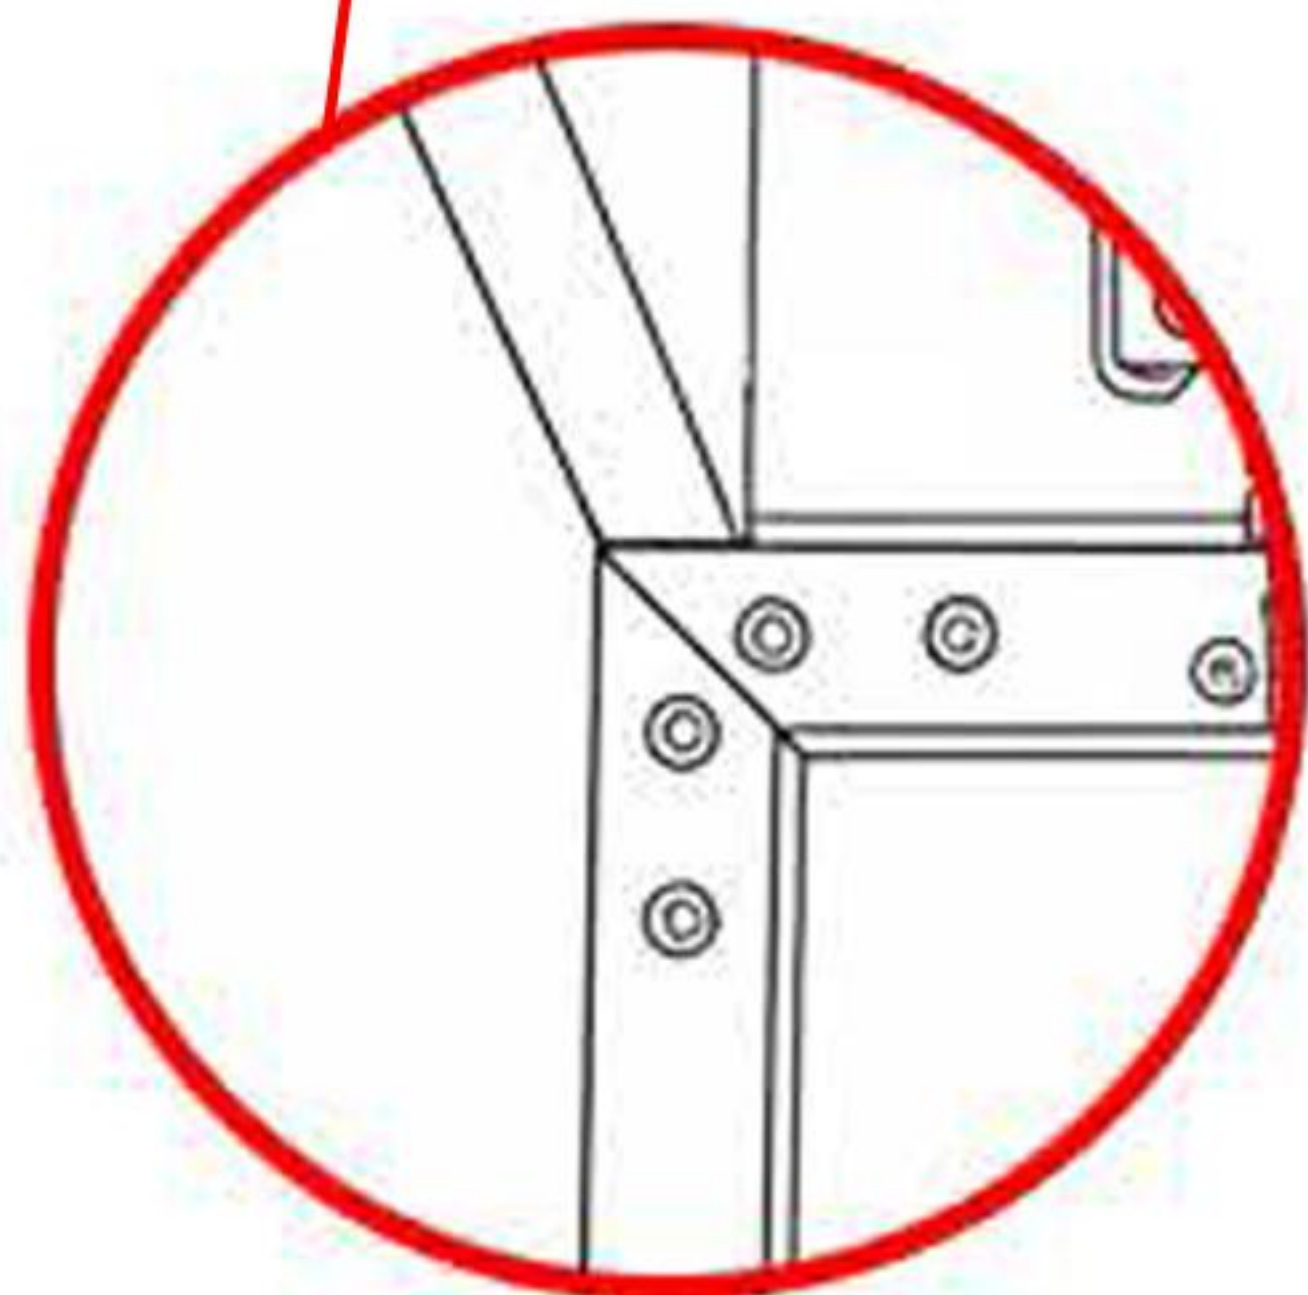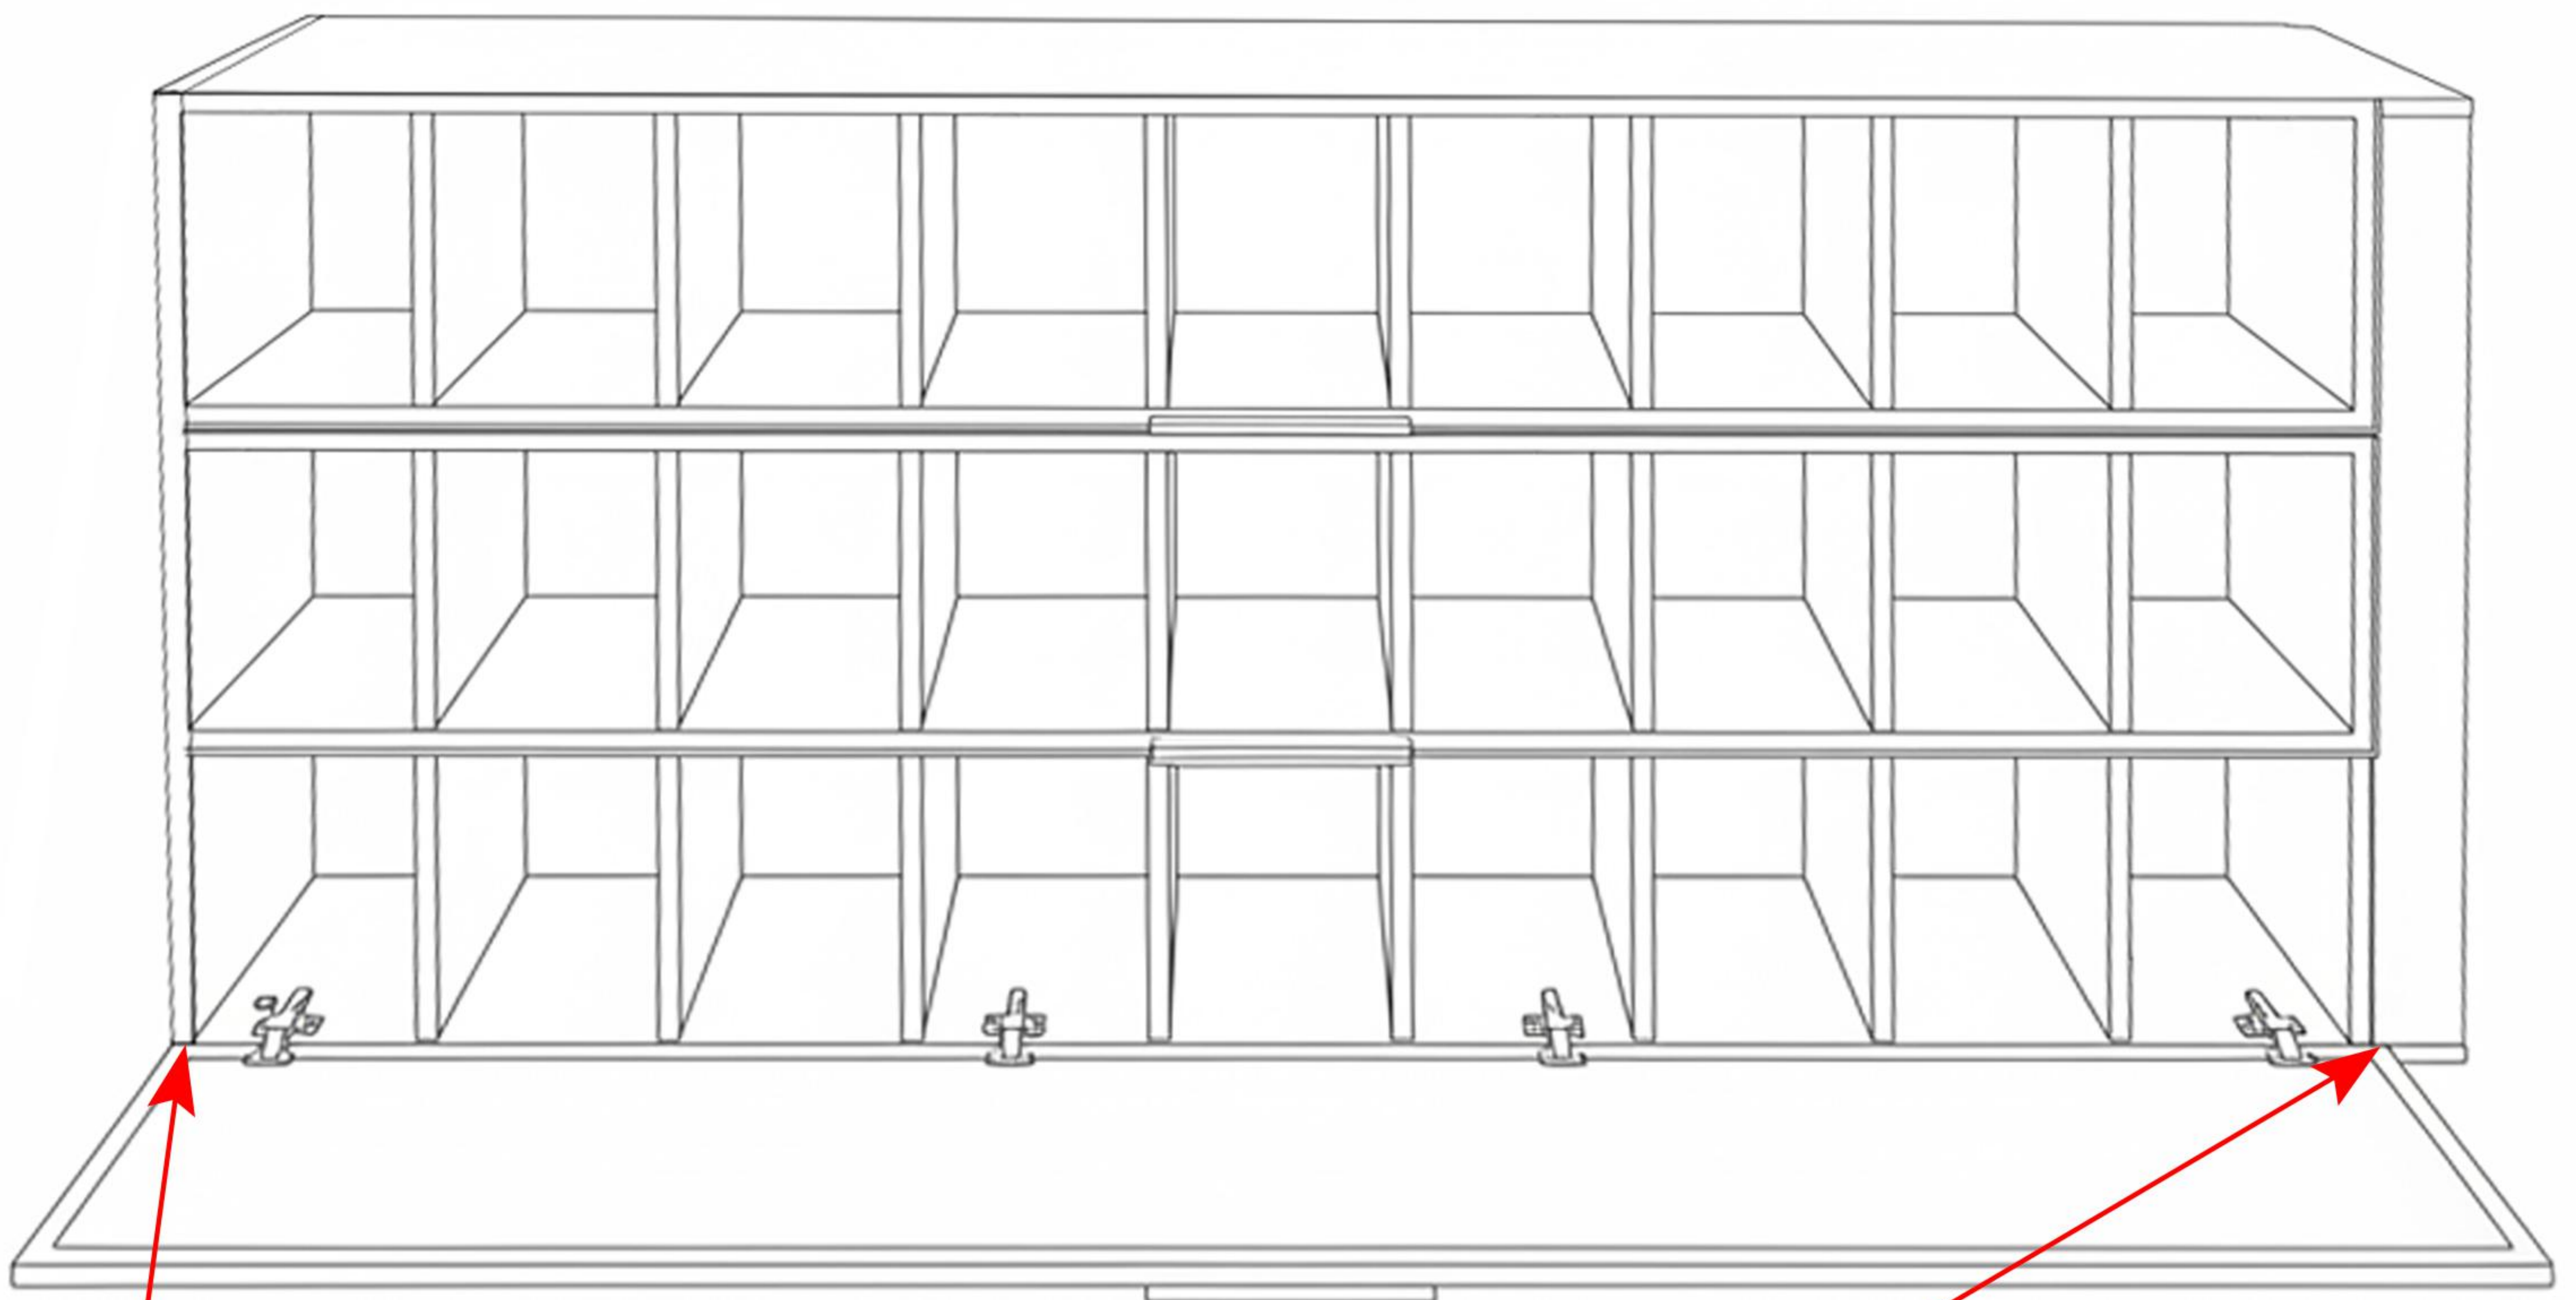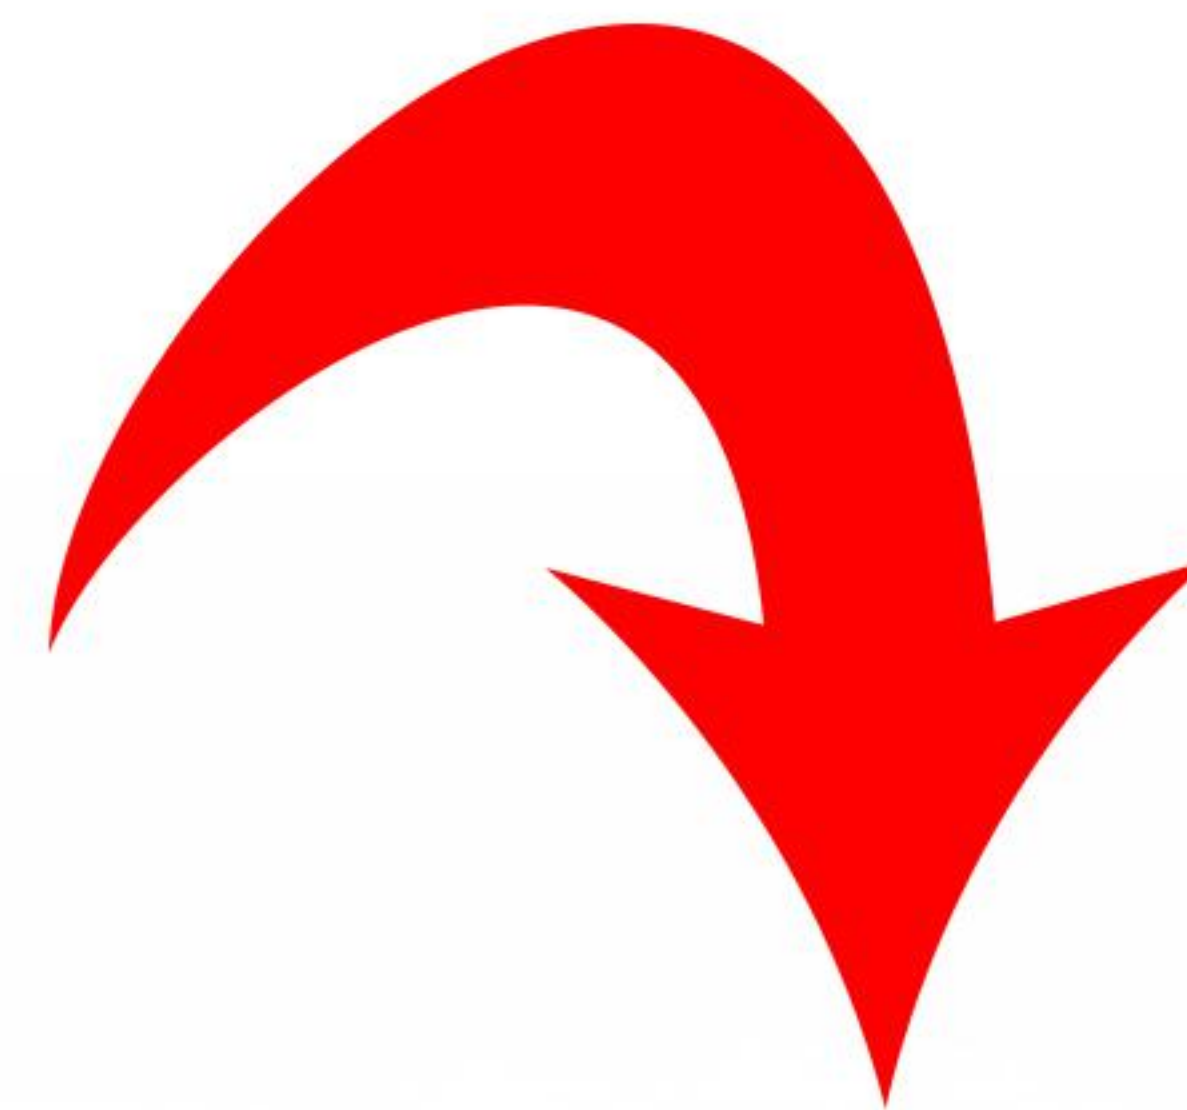

Align the door panel edge with the cabinet as shown, then install C. If the pre-drilled holes don't match G exactly, just disregard them.

Step 17:



Installation finished