



# WCK021-106CM

## Installation Instruction

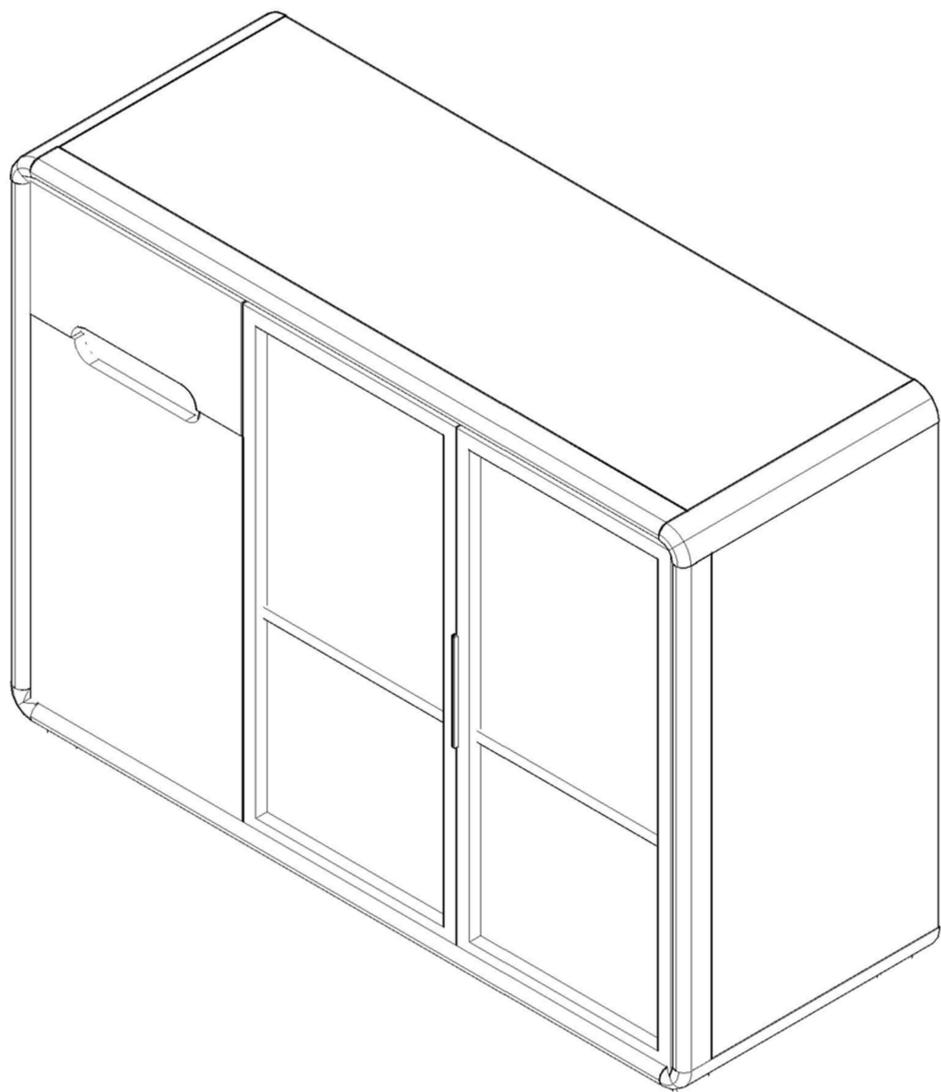

Scan the code to purchase ES001

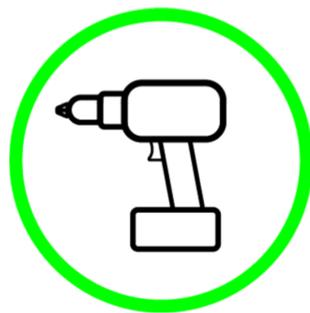

Please read this instruction manual carefully before installation and use.

### Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

### Precautions after assembly:

1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

**NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.**

### Hardware List


| Accessory Appearance | Code | Dimensions | Numbers | Unit  | Accessory Appearance | Code | Dimensions | Numbers | Unit  |
|----------------------|------|------------|---------|-------|----------------------|------|------------|---------|-------|
|                      | A    | ∅7*40mm    | 45      | Piece |                      |      |            |         |       |
|                      | B    | ∅15*12mm   | 45      | Piece |                      | K    | Metal      | 4       | Piece |
|                      | C    | ∅5*15mm    | 14      | Piece |                      | L    | ∅5*15mm    | 15      | Piece |
|                      | D    | ∅12*10mm   | 14      | Piece |                      | M    | ∅6*35mm    | 10      | Piece |
| Blue                 | E    | ∅3.5*12mm  | 10      | Piece |                      | N    | ∅8*40mm    | 45      | Piece |
|                      | F    | ∅3.5*35mm  | 10      | Piece |                      | O    | ∅6*40mm    | 4       | Piece |
|                      | G    | ∅3.5*40mm  | 4       | Piece |                      |      |            |         |       |
| Golden               | H    | ∅3.5*14mm  | 25      | Piece |                      | Q    | 300mm      | 1       | Pair  |
|                      | I    | ∅7*38mm    | 2       | Piece |                      | R    | Difference | 2       | Piece |
| Black                | T    |            | 8       | Piece |                      | S    |            | 10      | Piece |

## BoardMaterial List

| Code | Dimensions(mm) | Numbers | Code | Dimensions(mm) | Numbers |
|------|----------------|---------|------|----------------|---------|
| ①    | 987.5*43*24    | 2       | ⑪    | 1013*354.5*12  | 2       |
| ②    | 685*43*24      | 2       | ⑫    | 995*58.5*23    | 1       |
| ③    | 401*38*38      | 4       | ⑬    | 995*58.5*23    | 1       |
| ④    | 985*355*23     | 1       | ⑭    | 244.5*58.5*23  | 2       |
| ⑤    | 985*355*23     | 1       | ⑮    | 334*178.5*15   | 1       |
| ⑥    | 682.5*355*23   | 2       | ⑯    | 300*116*15     | 2       |
| ⑦    | 710.5*351*15   | 1       | ⑰    | 268*116*15     | 1       |
| ⑧    | 321*60*15      | 1       | ⑱    | 280*294*4      | 1       |
| ⑨    | 674*346.5*15   | 2       | ⑲    | 335*706*19.5   | 2       |
| ⑩    | 319.5*346.5*15 | 1       | ⑳    | 334*522.5*15   | 1       |

**Detailed description of the main components, please read carefully**

### R (Hinge) Installation Instructions Install the hinge with screw H

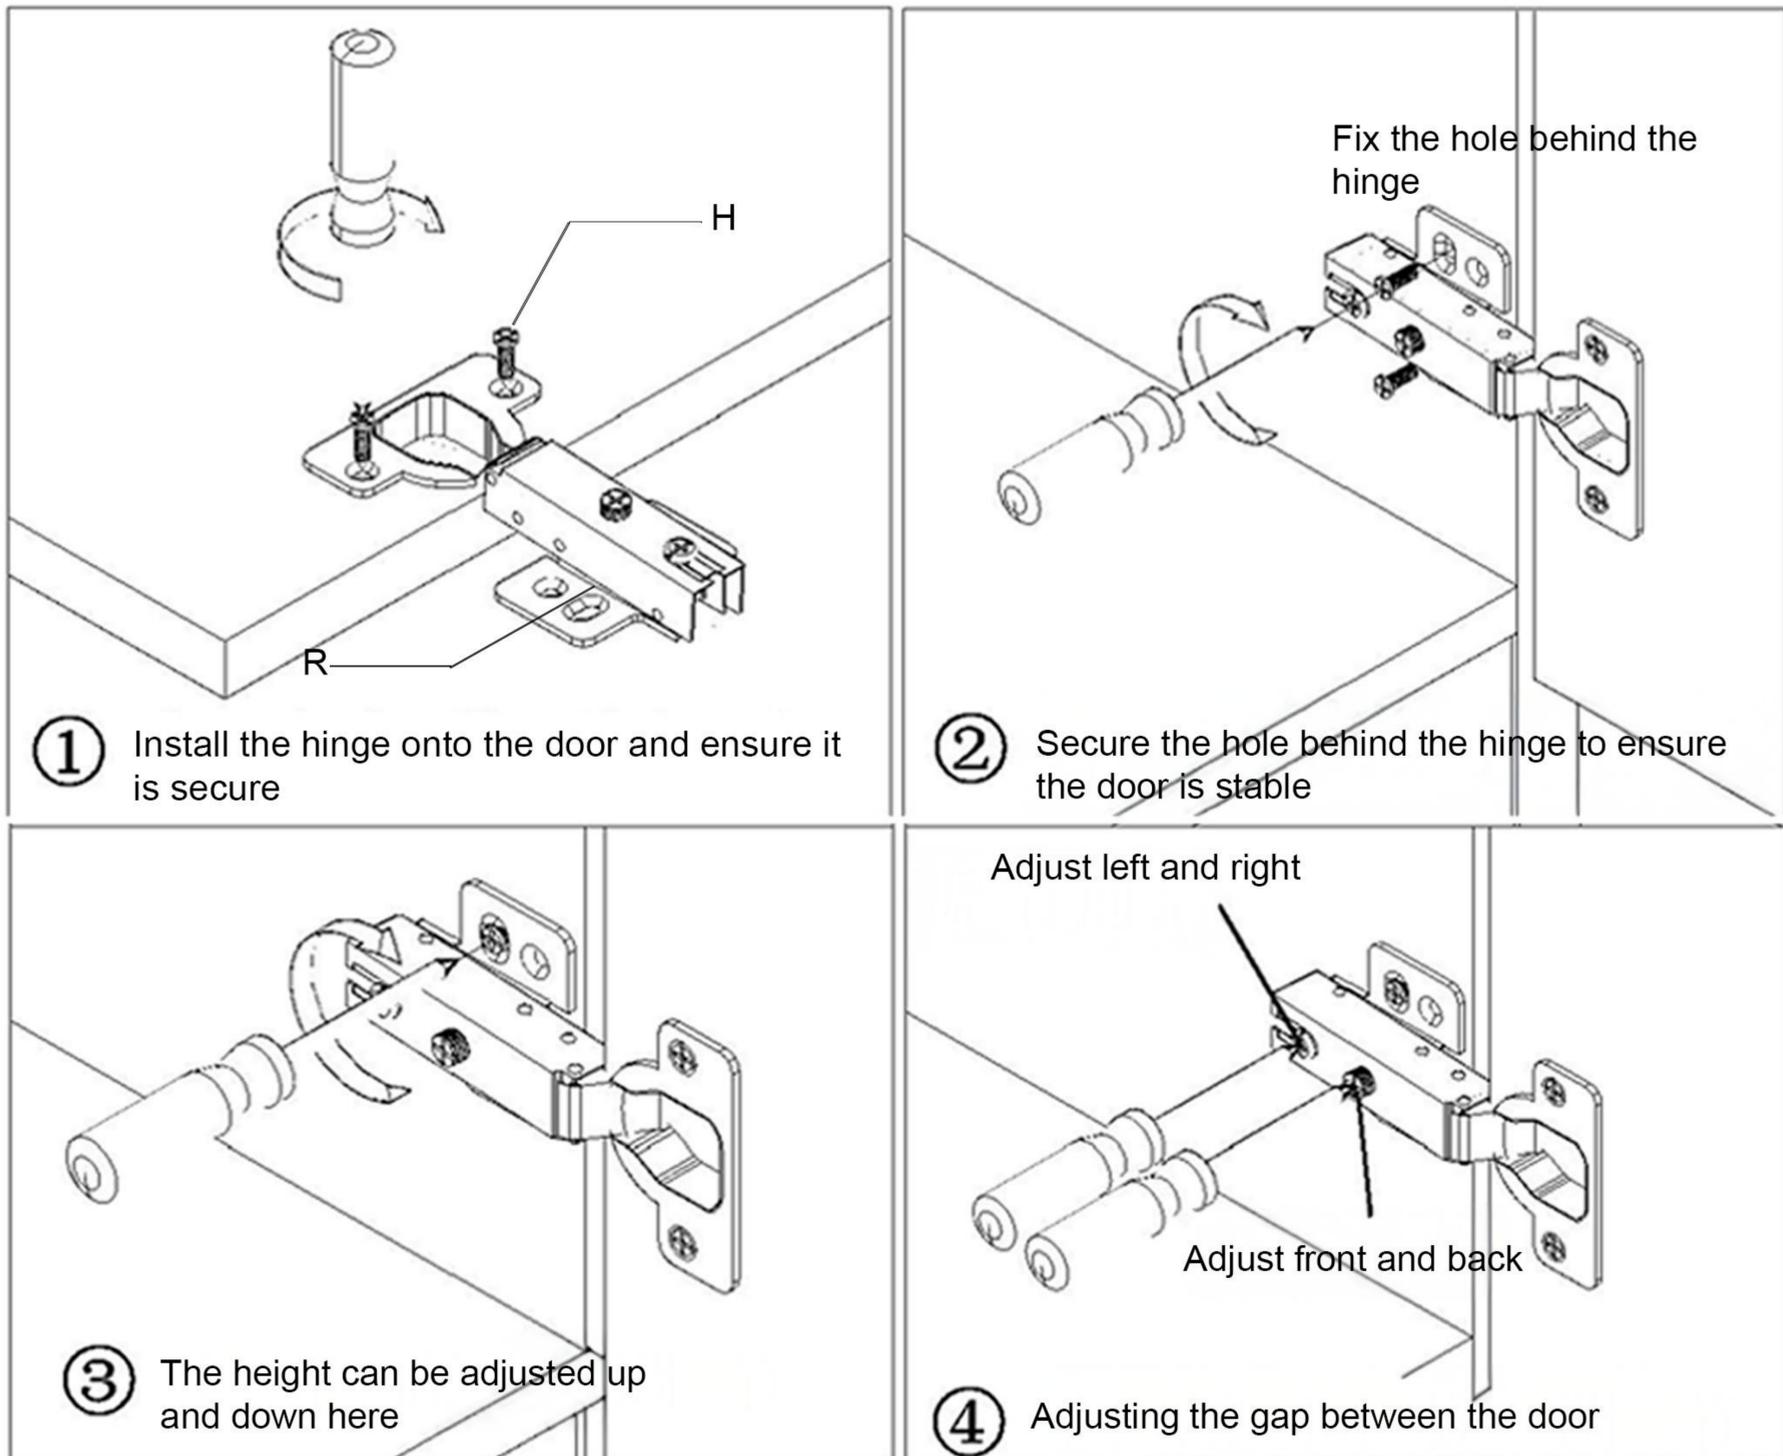


Detailed description of the main components, please read carefully

### K (Hinge) Installation Instructions


Install the hinge with screw H

1.

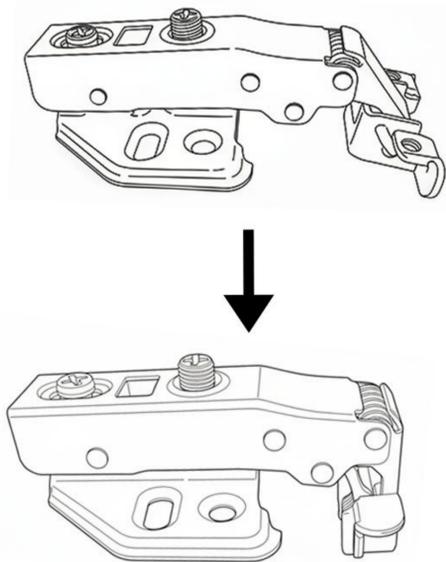


Fold the hinges as shown in the diagram.

2.

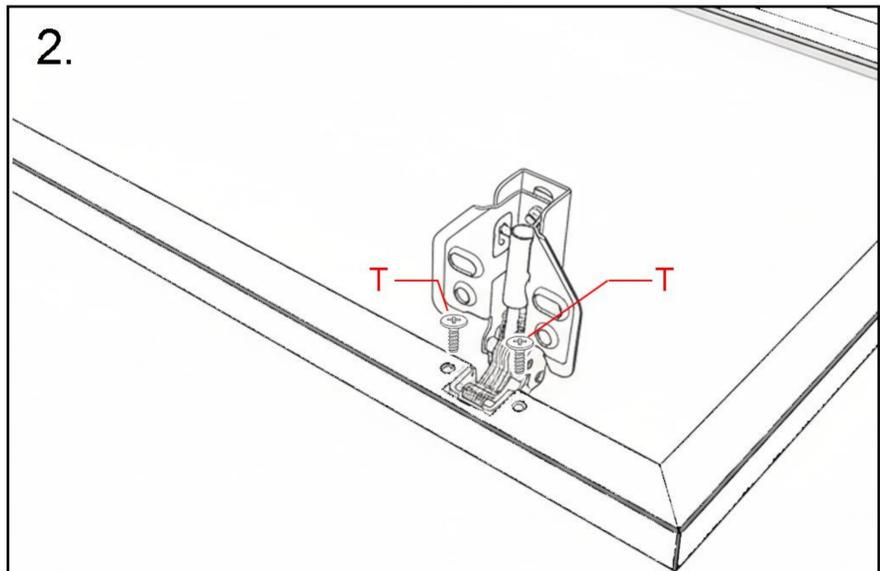


Install the hinge onto the door and ensure it is secure.

3.

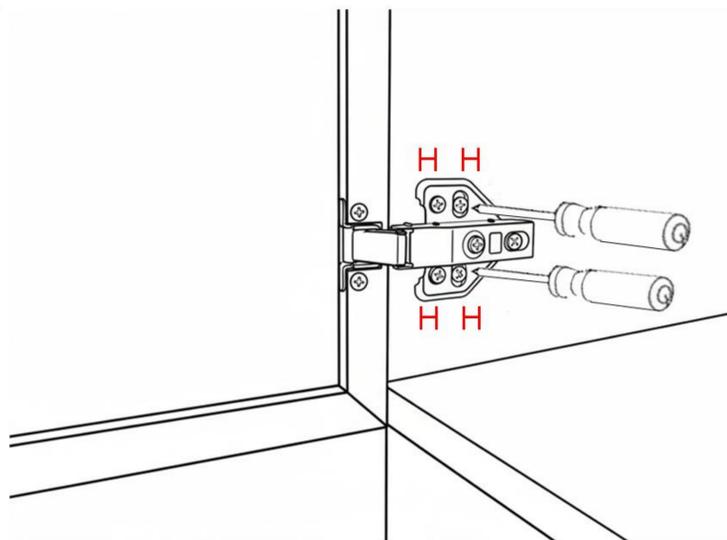

The height can be adjusted up and down here.


4.

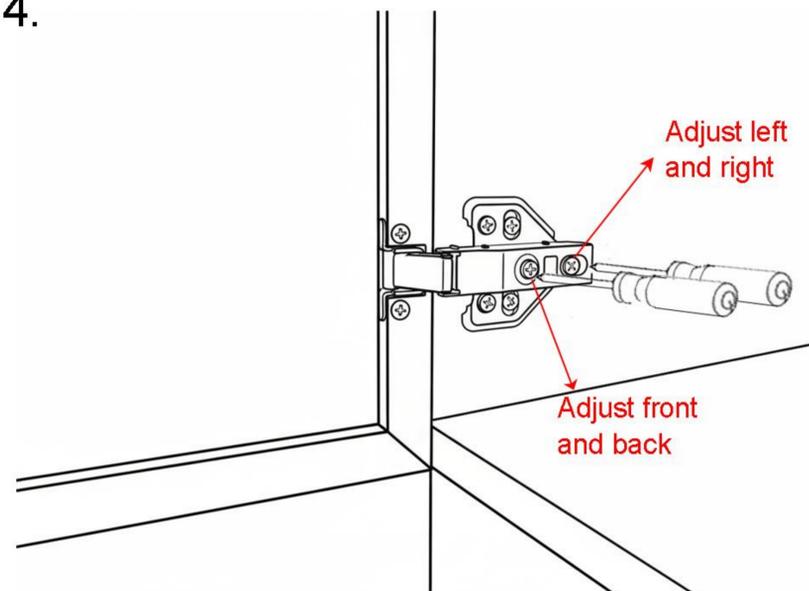

Adjusting the gap between the door.

## Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

A + B is large, C + D is small

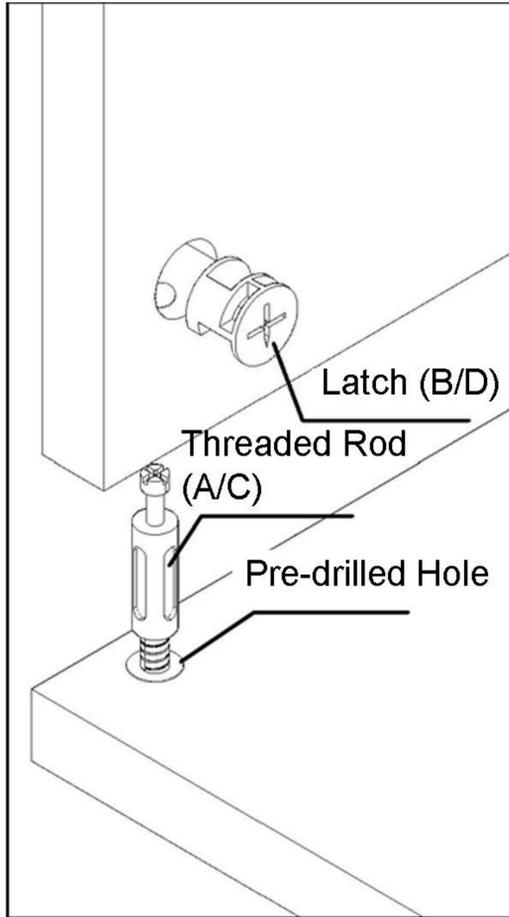

1. Screw the A/C (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed A/C into the corresponding hole of the other piece. Press B/D (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.

## Q (Sliding Rail) Installation Instructions


When installing Q, use with screw E

1, Separate Q (Sliding Rail)





The main body part

The pull-out part

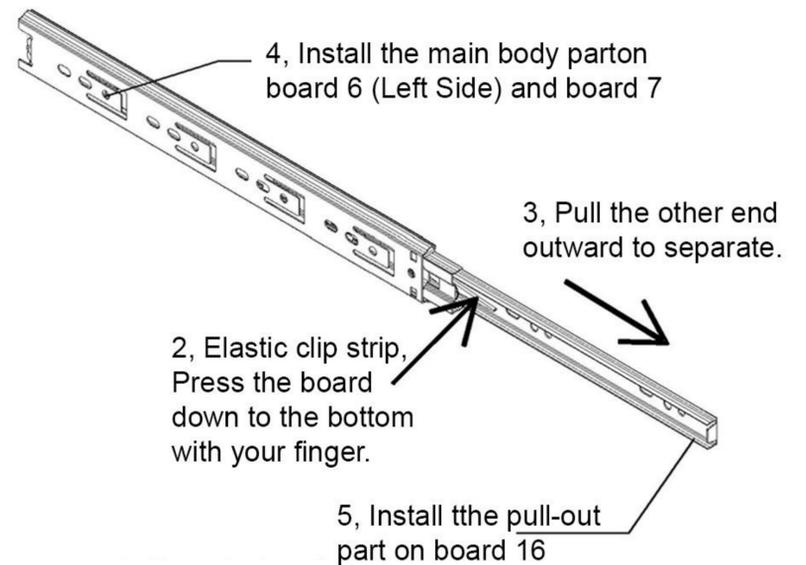


# Step 1:

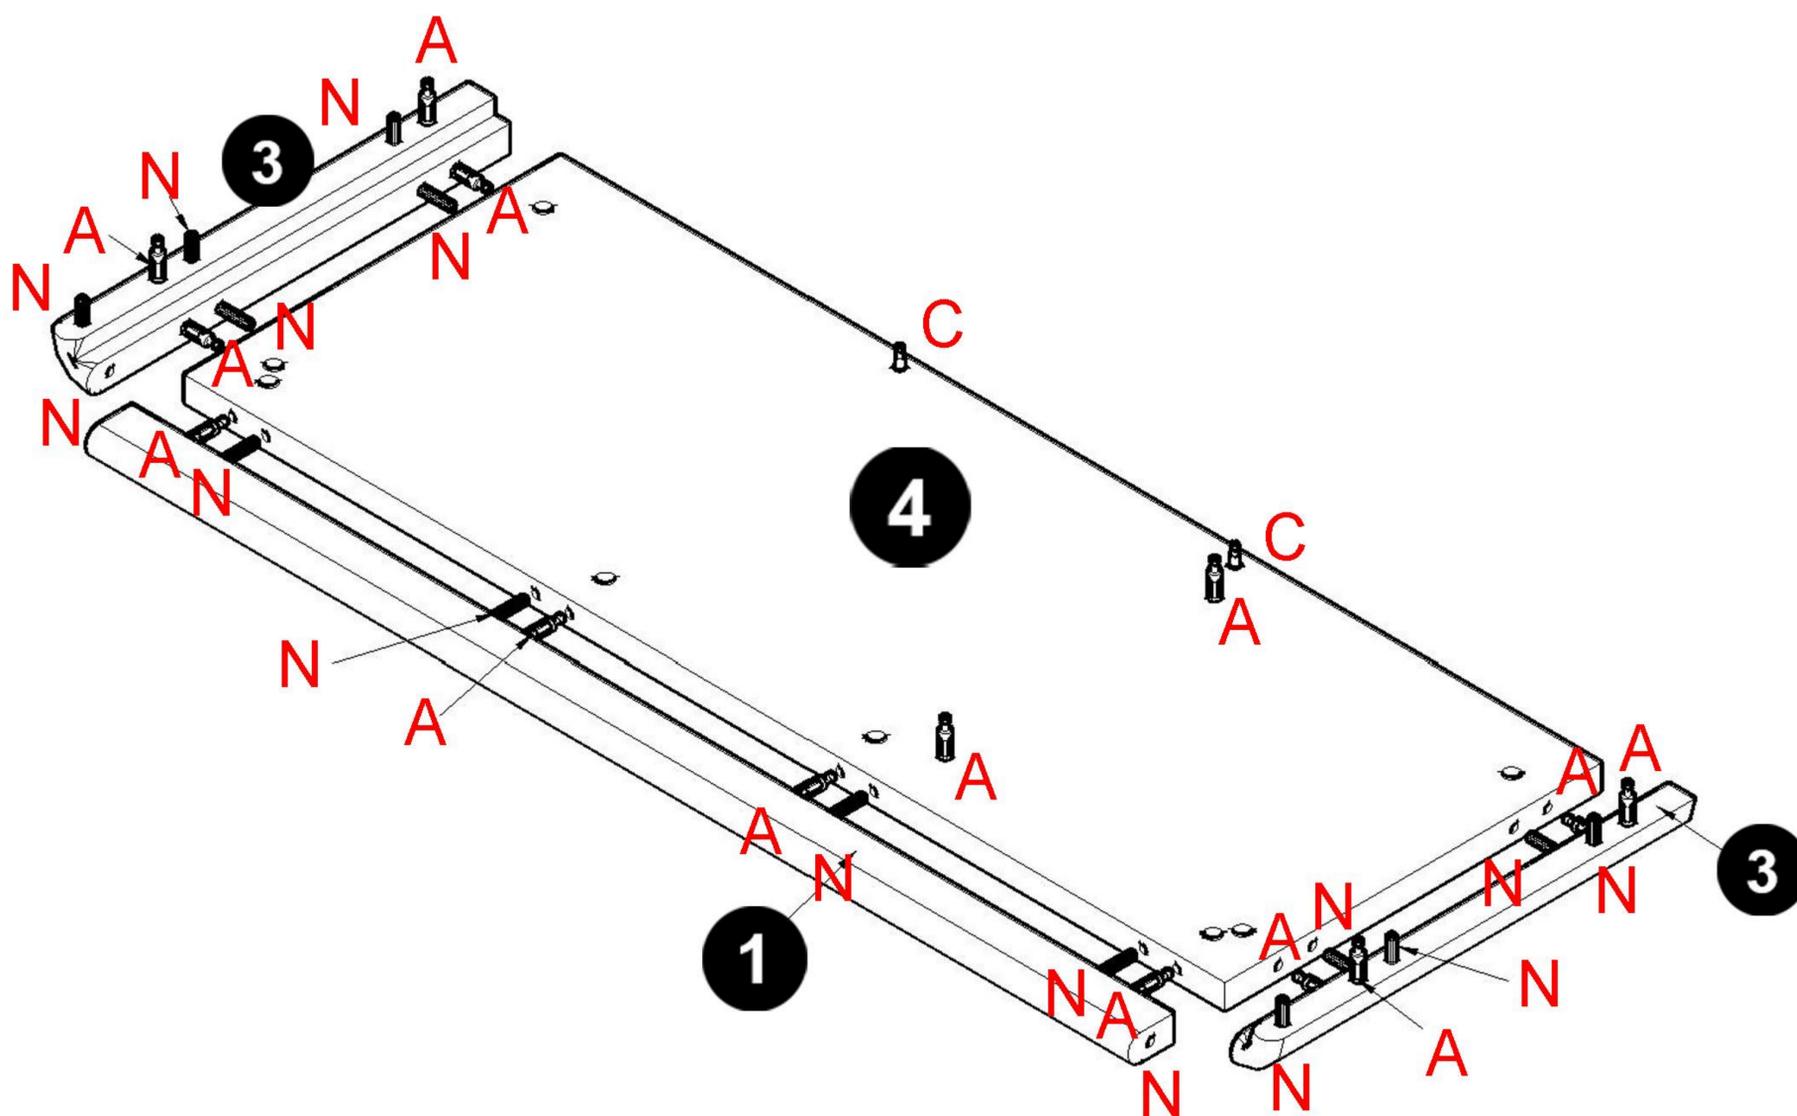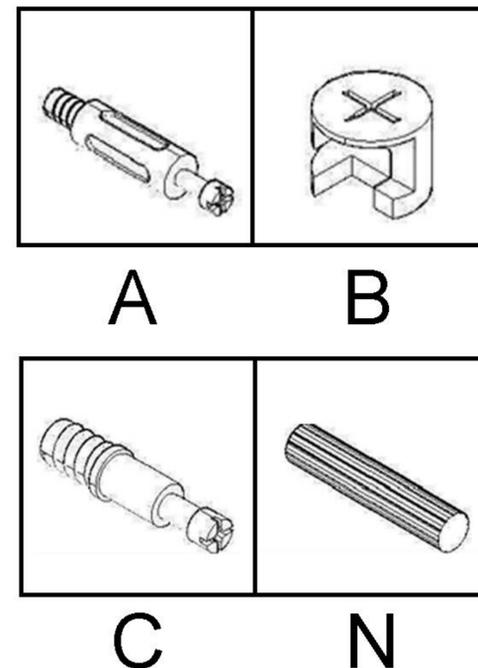


Use B to secure pre-drilled holes. Refer to the previous Installation Guide: Threaded Rod, Latch, Pre-drilled Hole.

# Step 2:

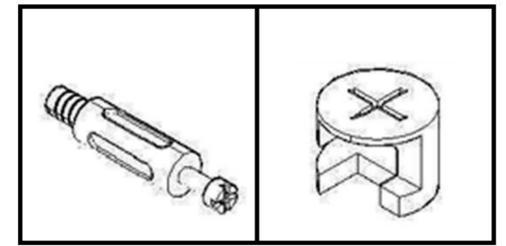


A

B

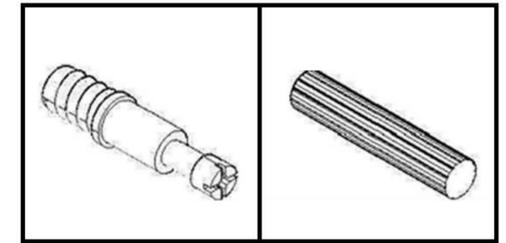

C


N

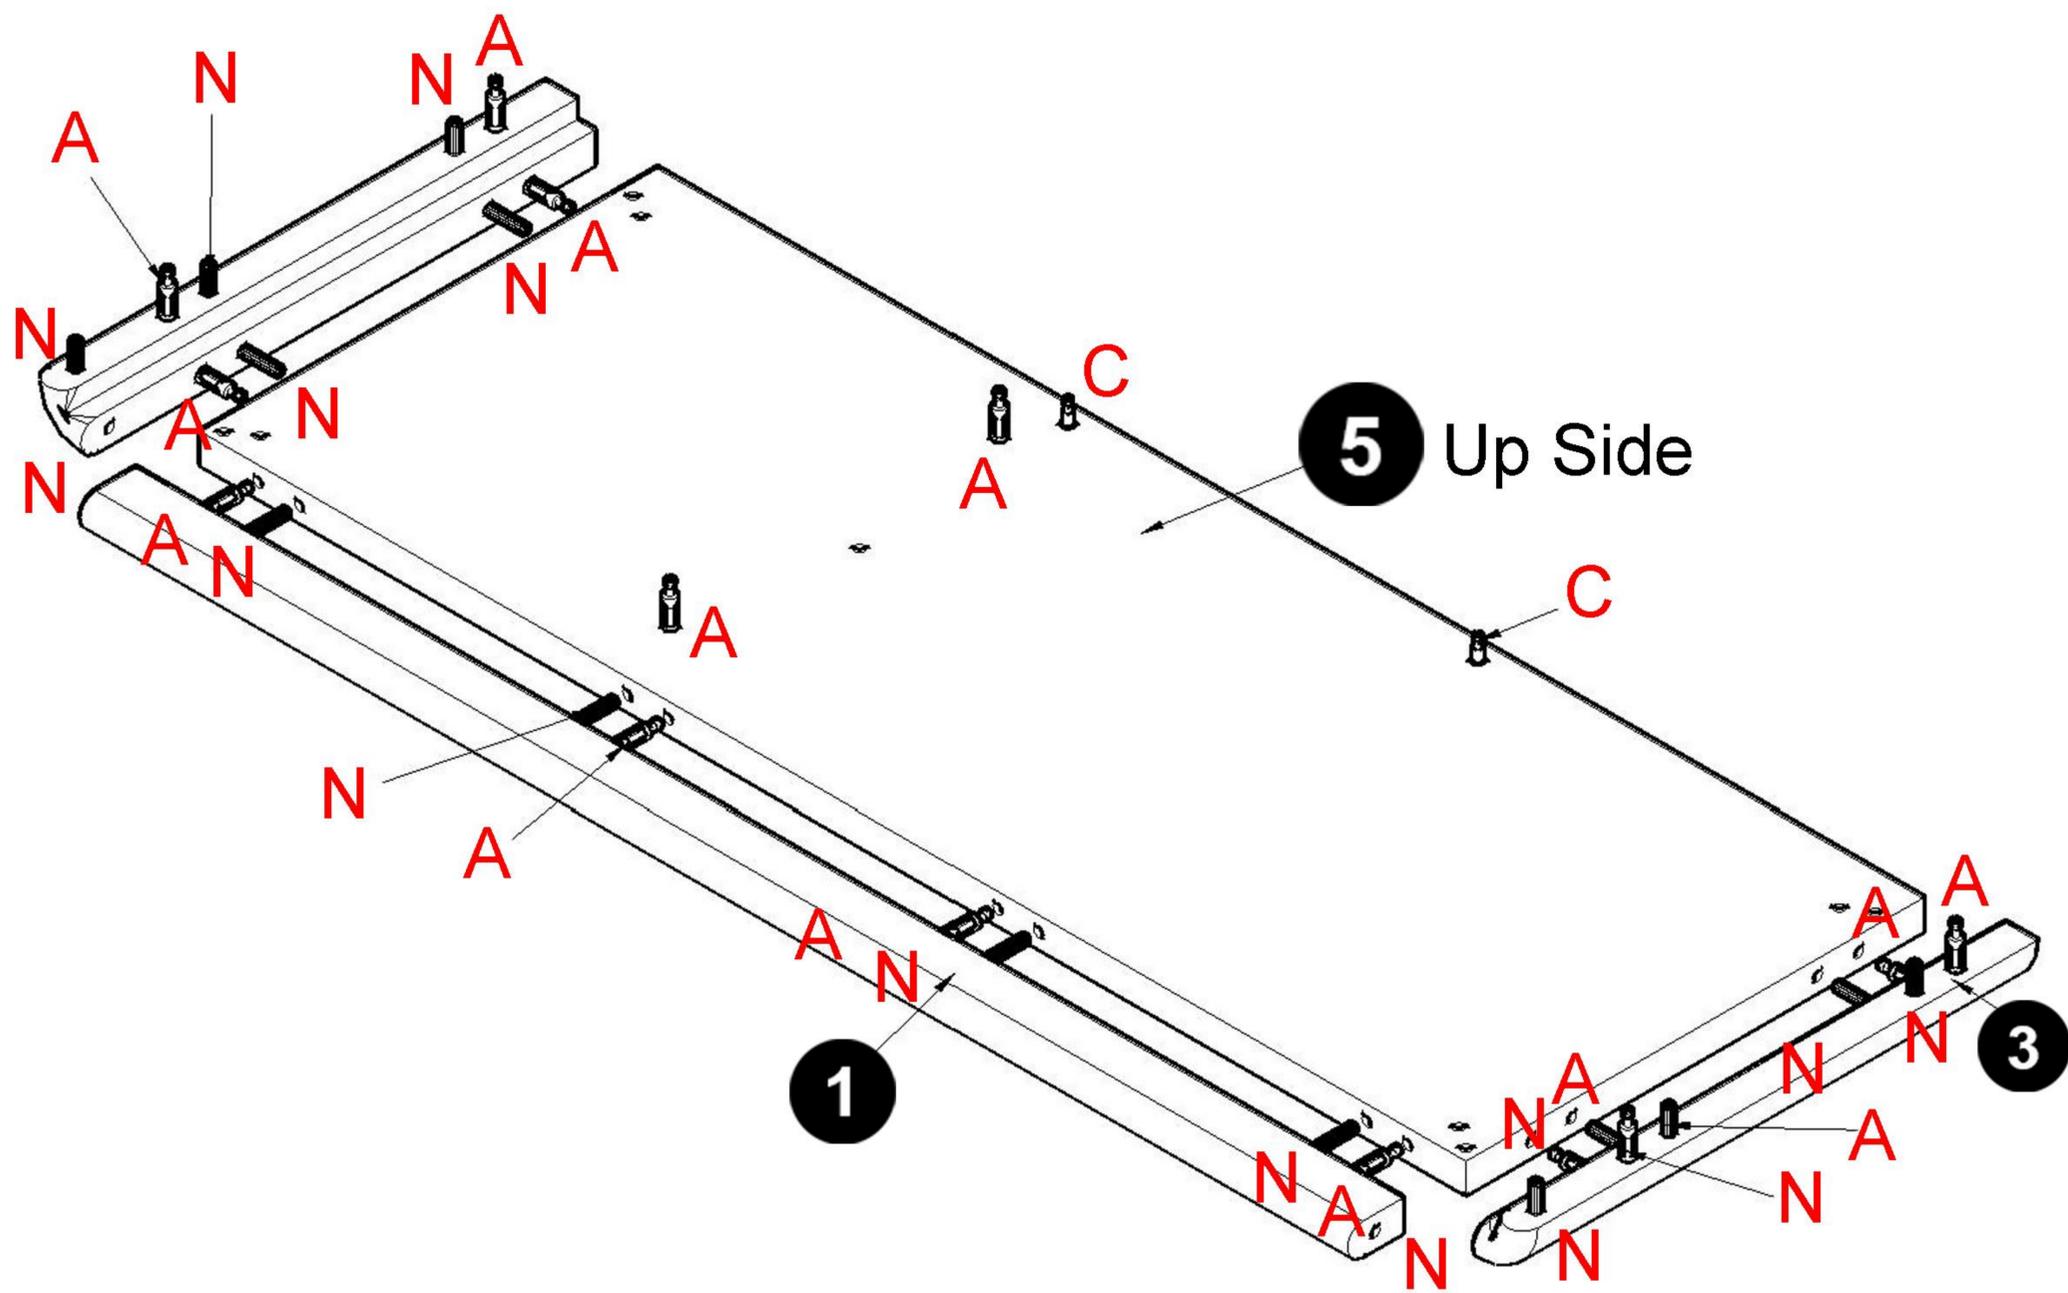

Secure with B




# Step 4:

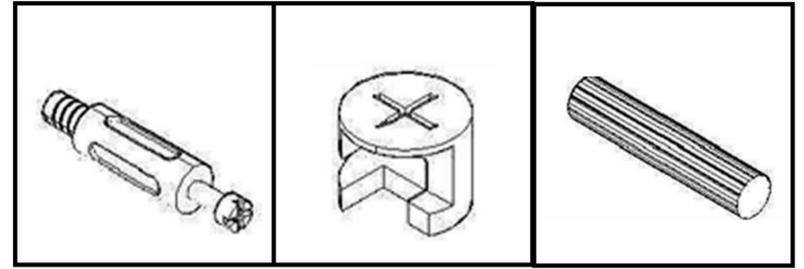

A

B

N


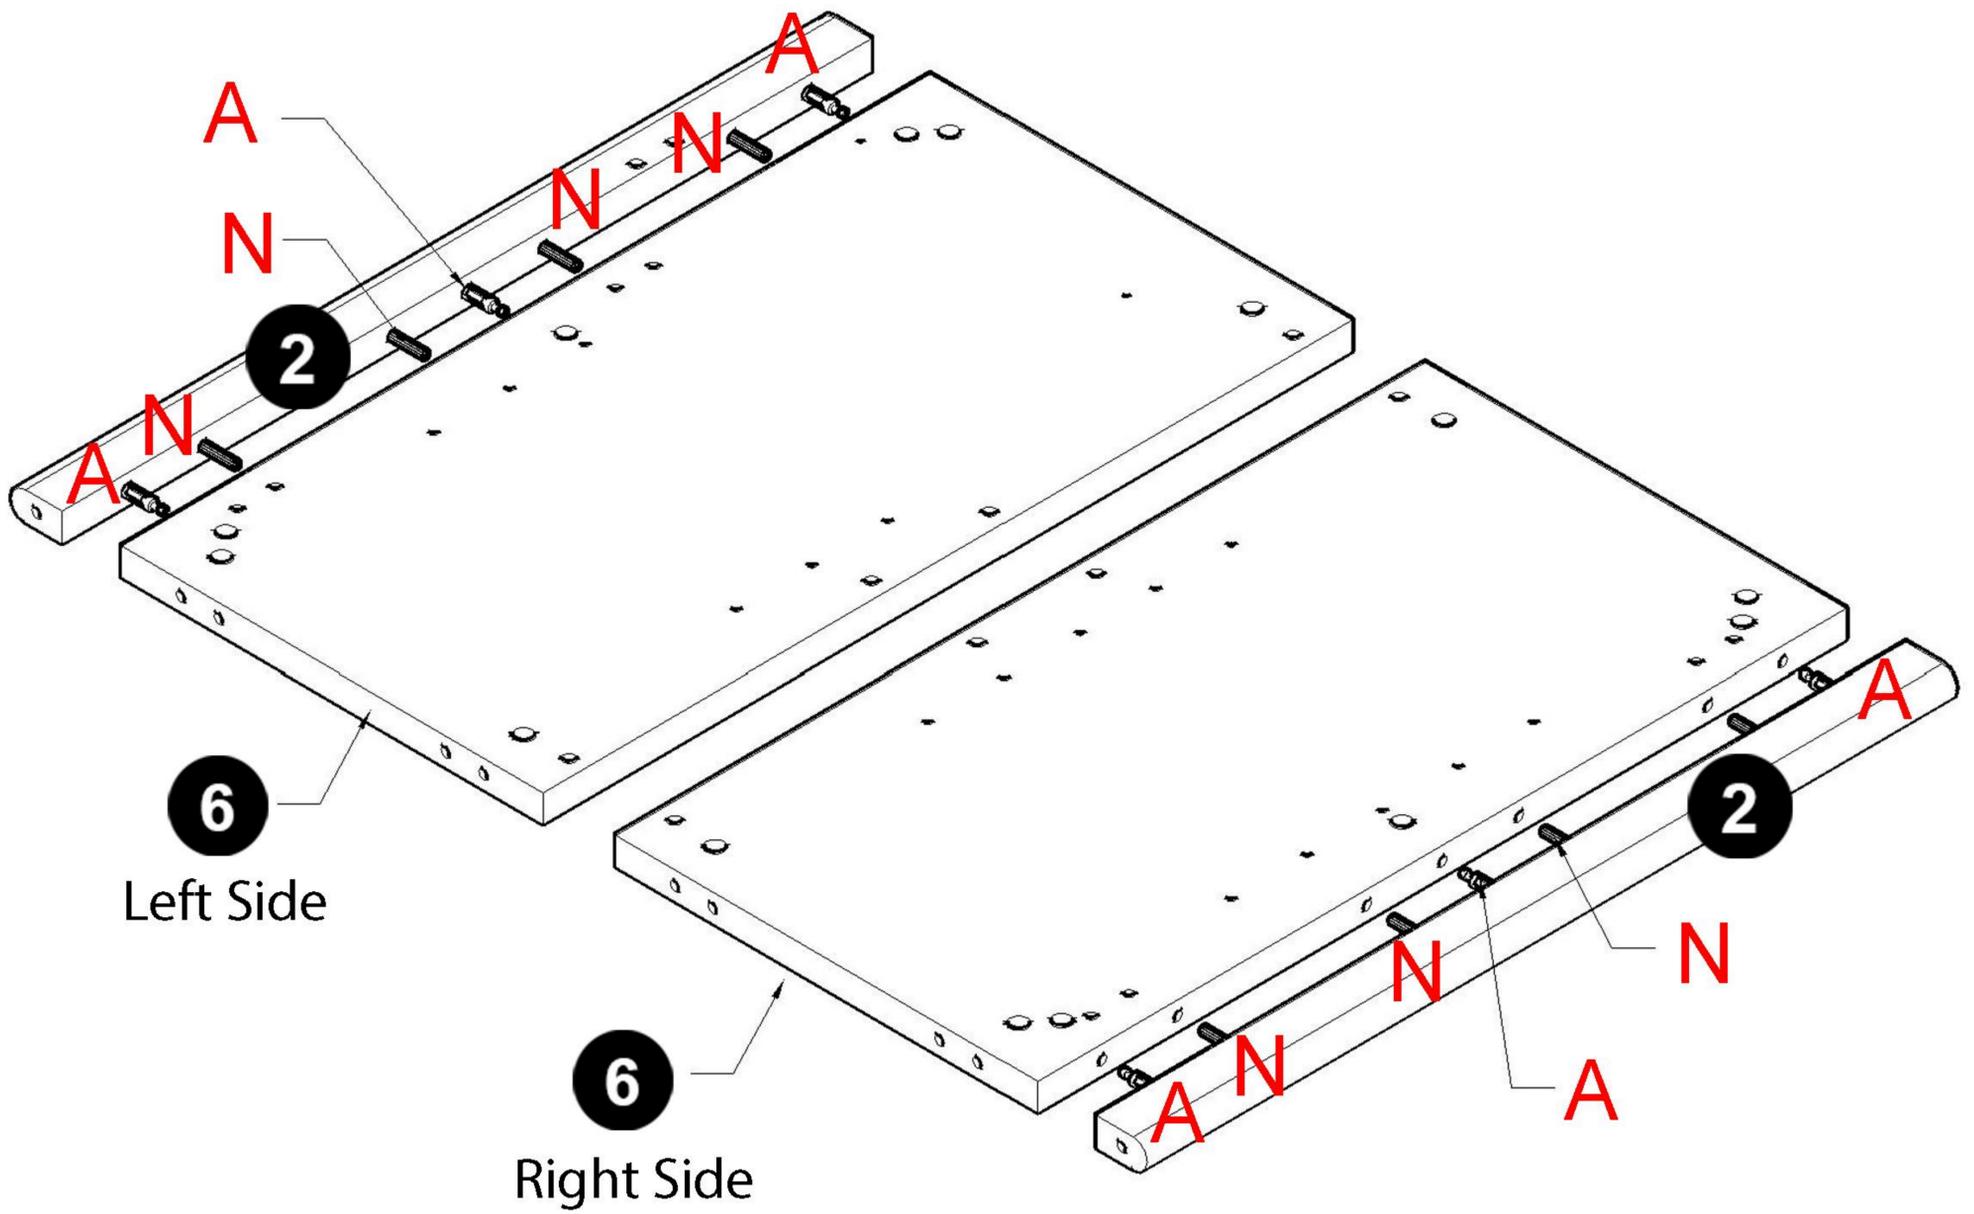


Left Side


Right Side

Secure with B

# Step 5:

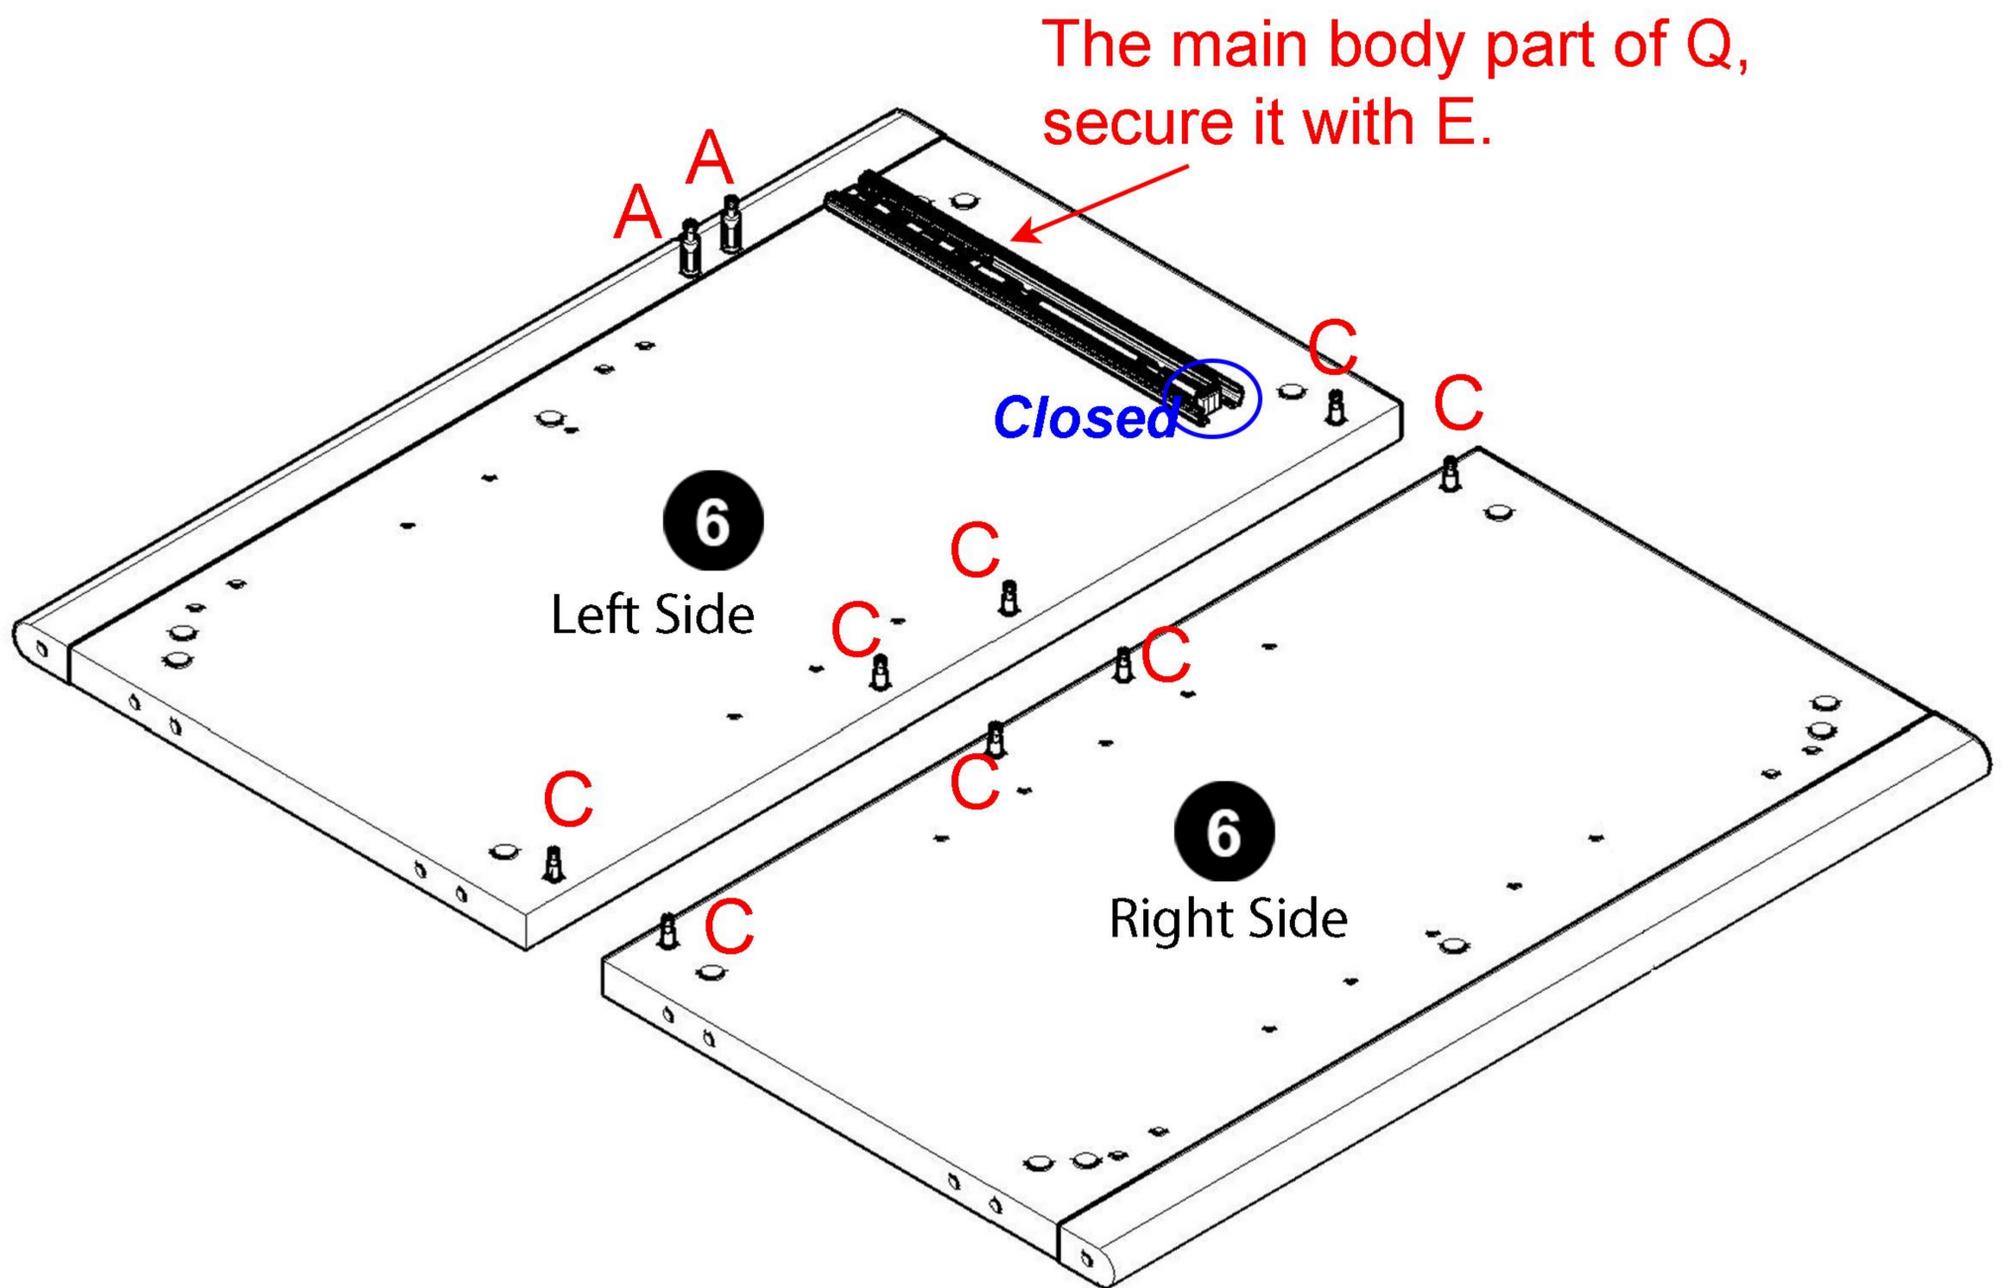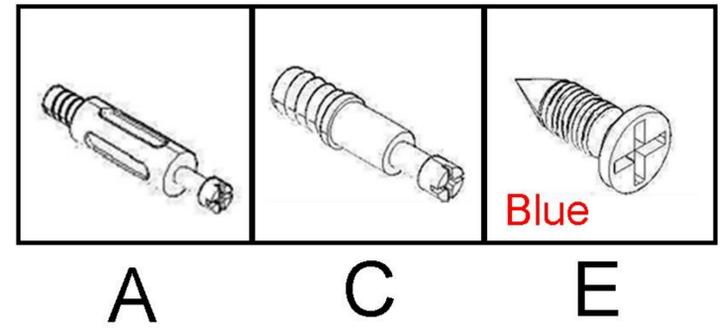


# Step 6:

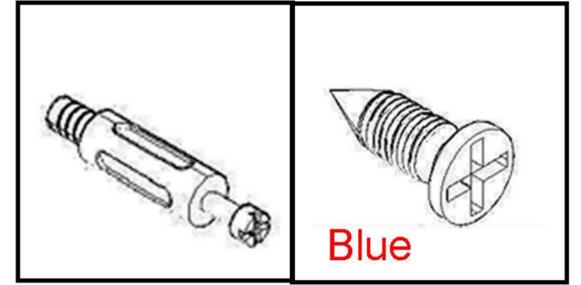



A

E


The main body part of Q, secure it with E.

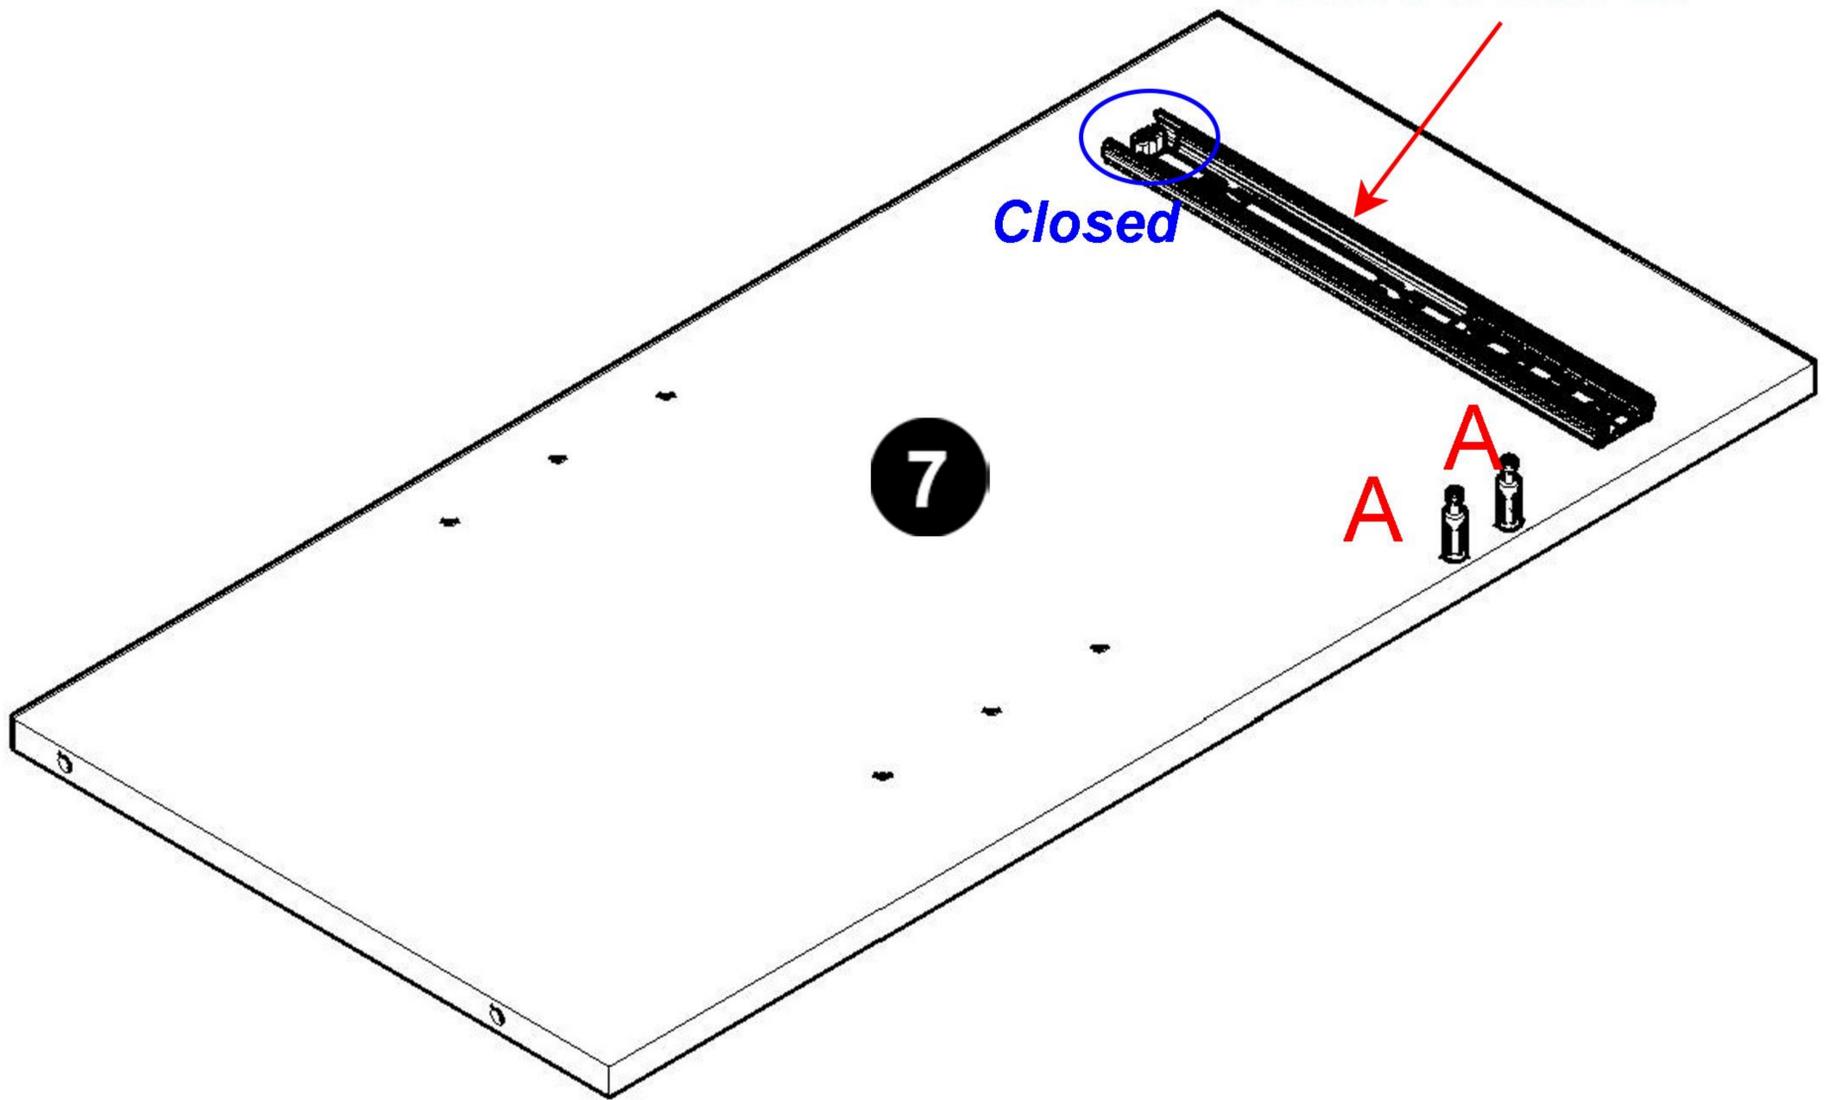

# Step 7:

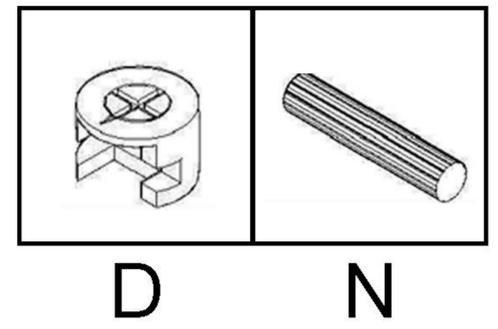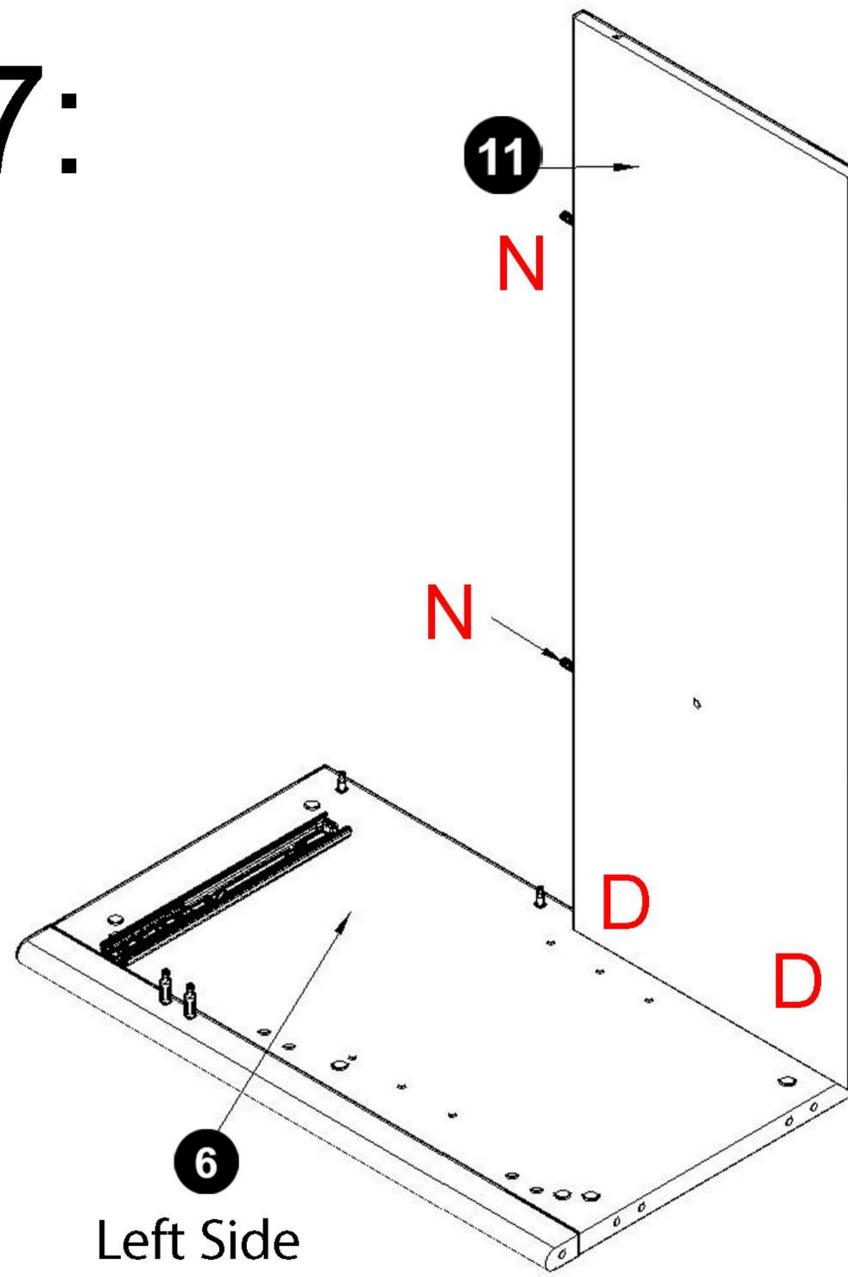


Secure with D

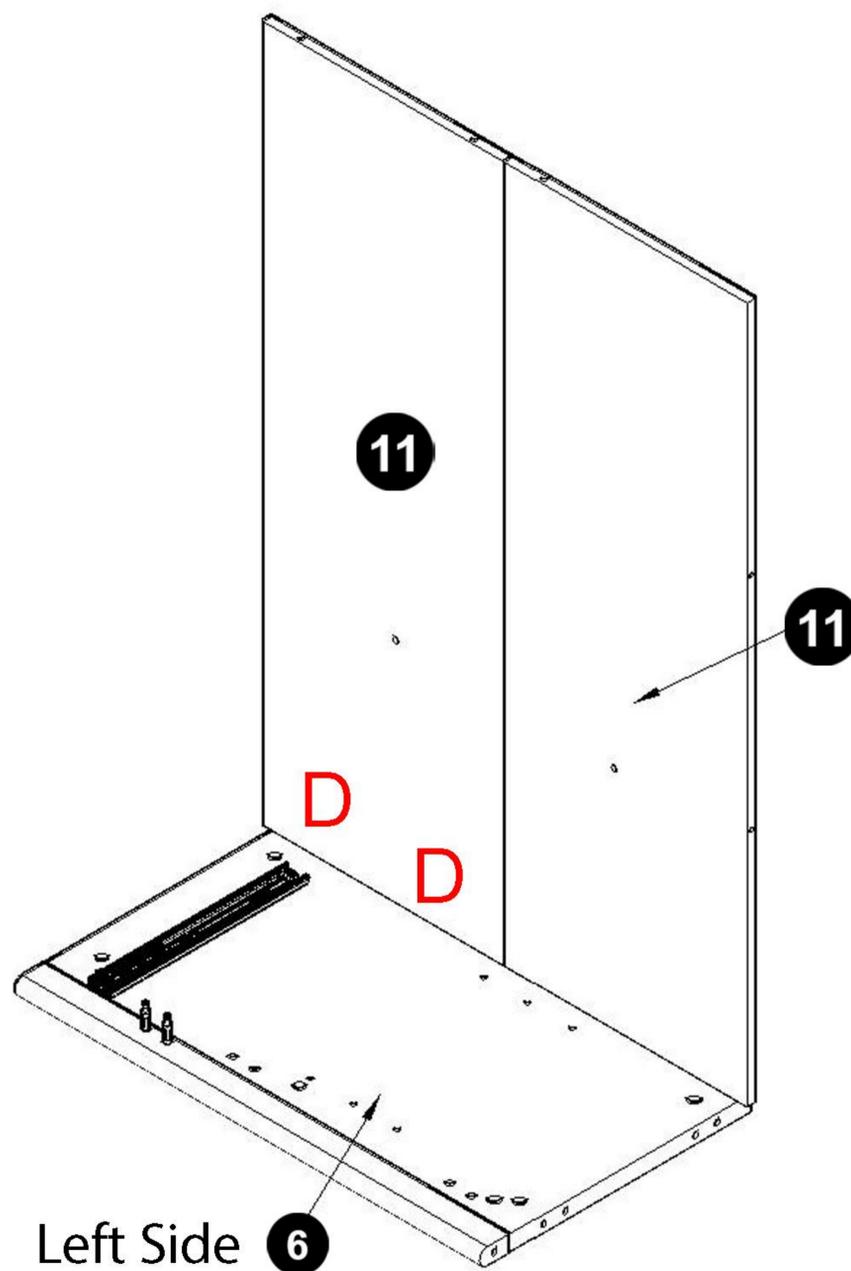


Use N to connect panels 11

# Step 8:


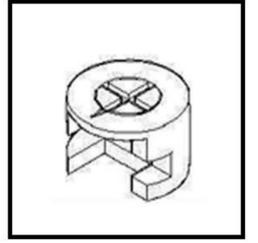


D

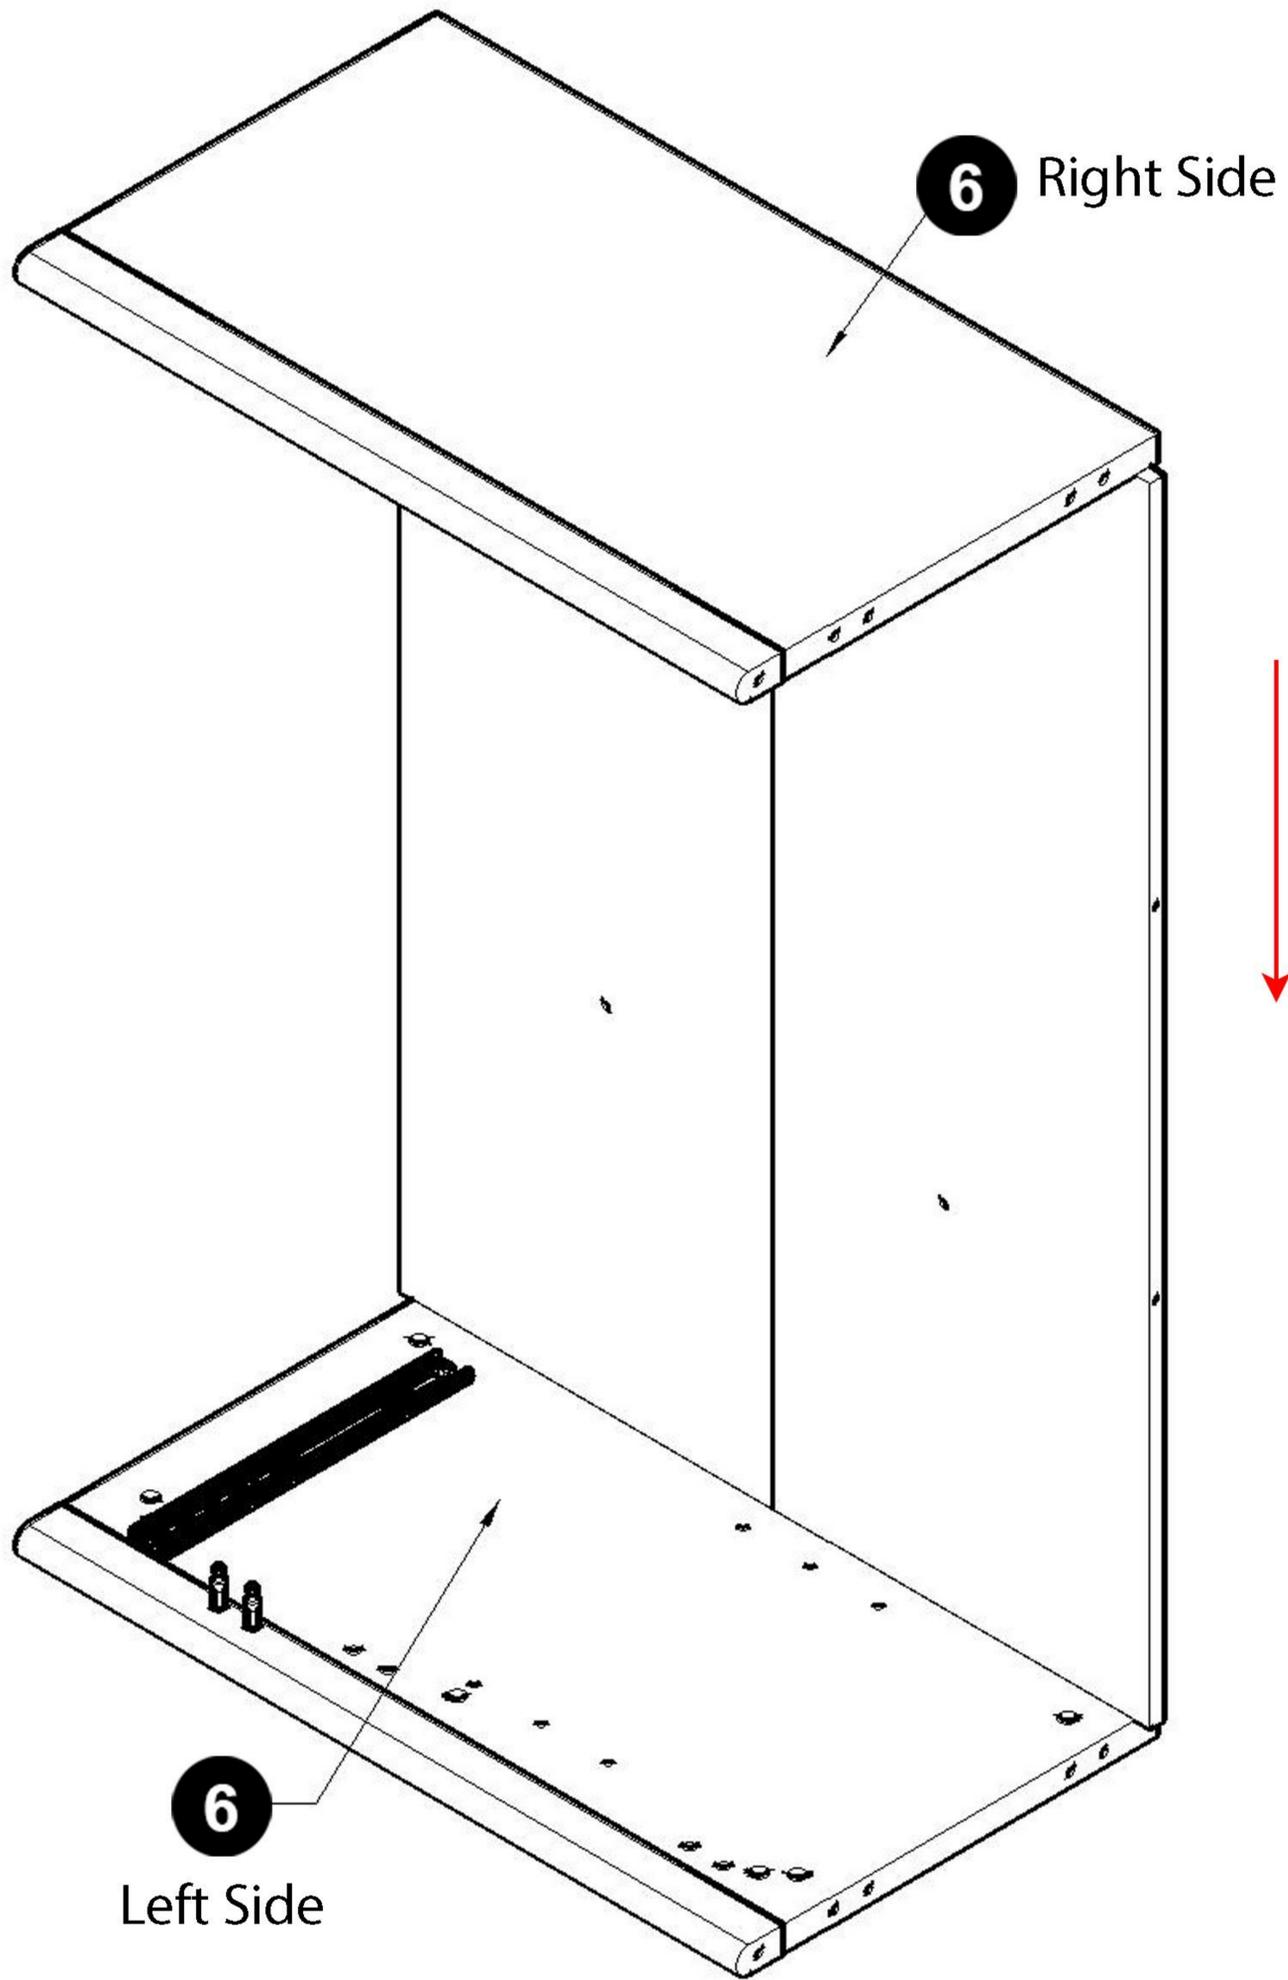


Secure with D

# Step 9:

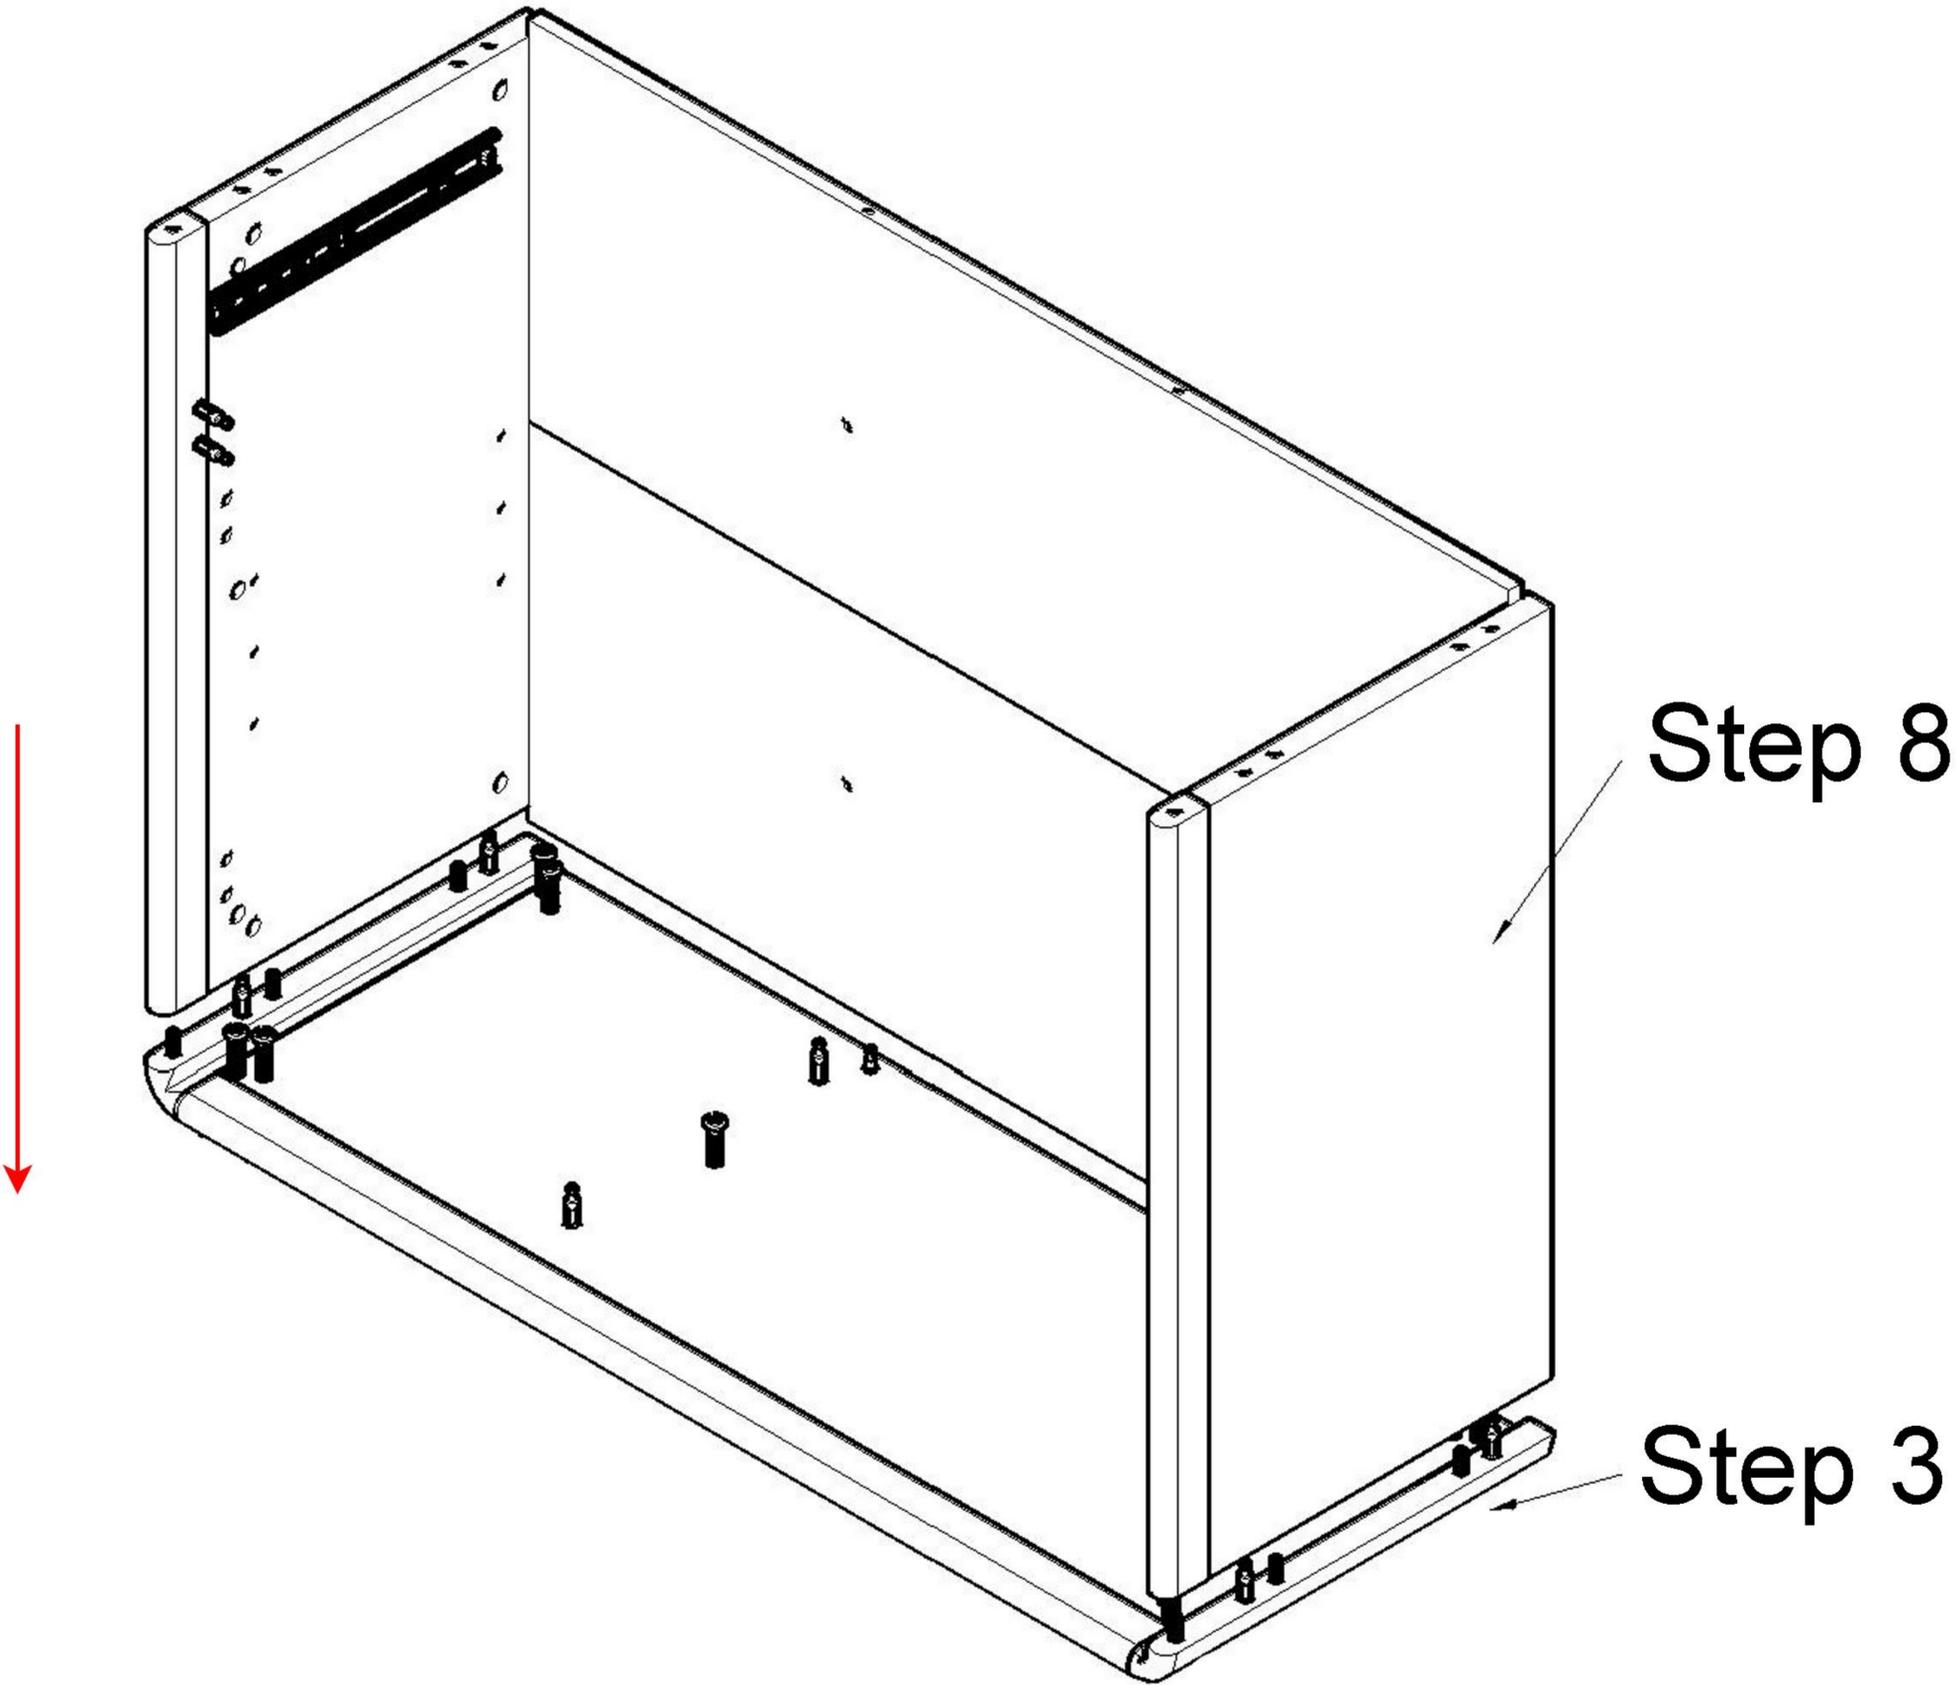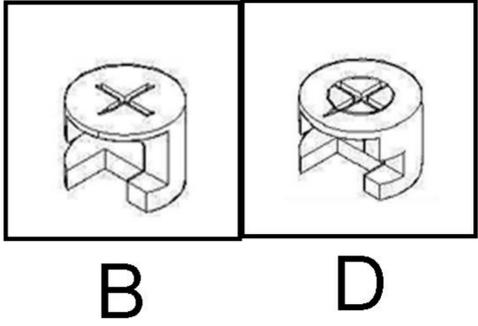


Secure with B and D

# Step 10:


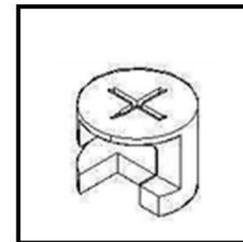


**B**

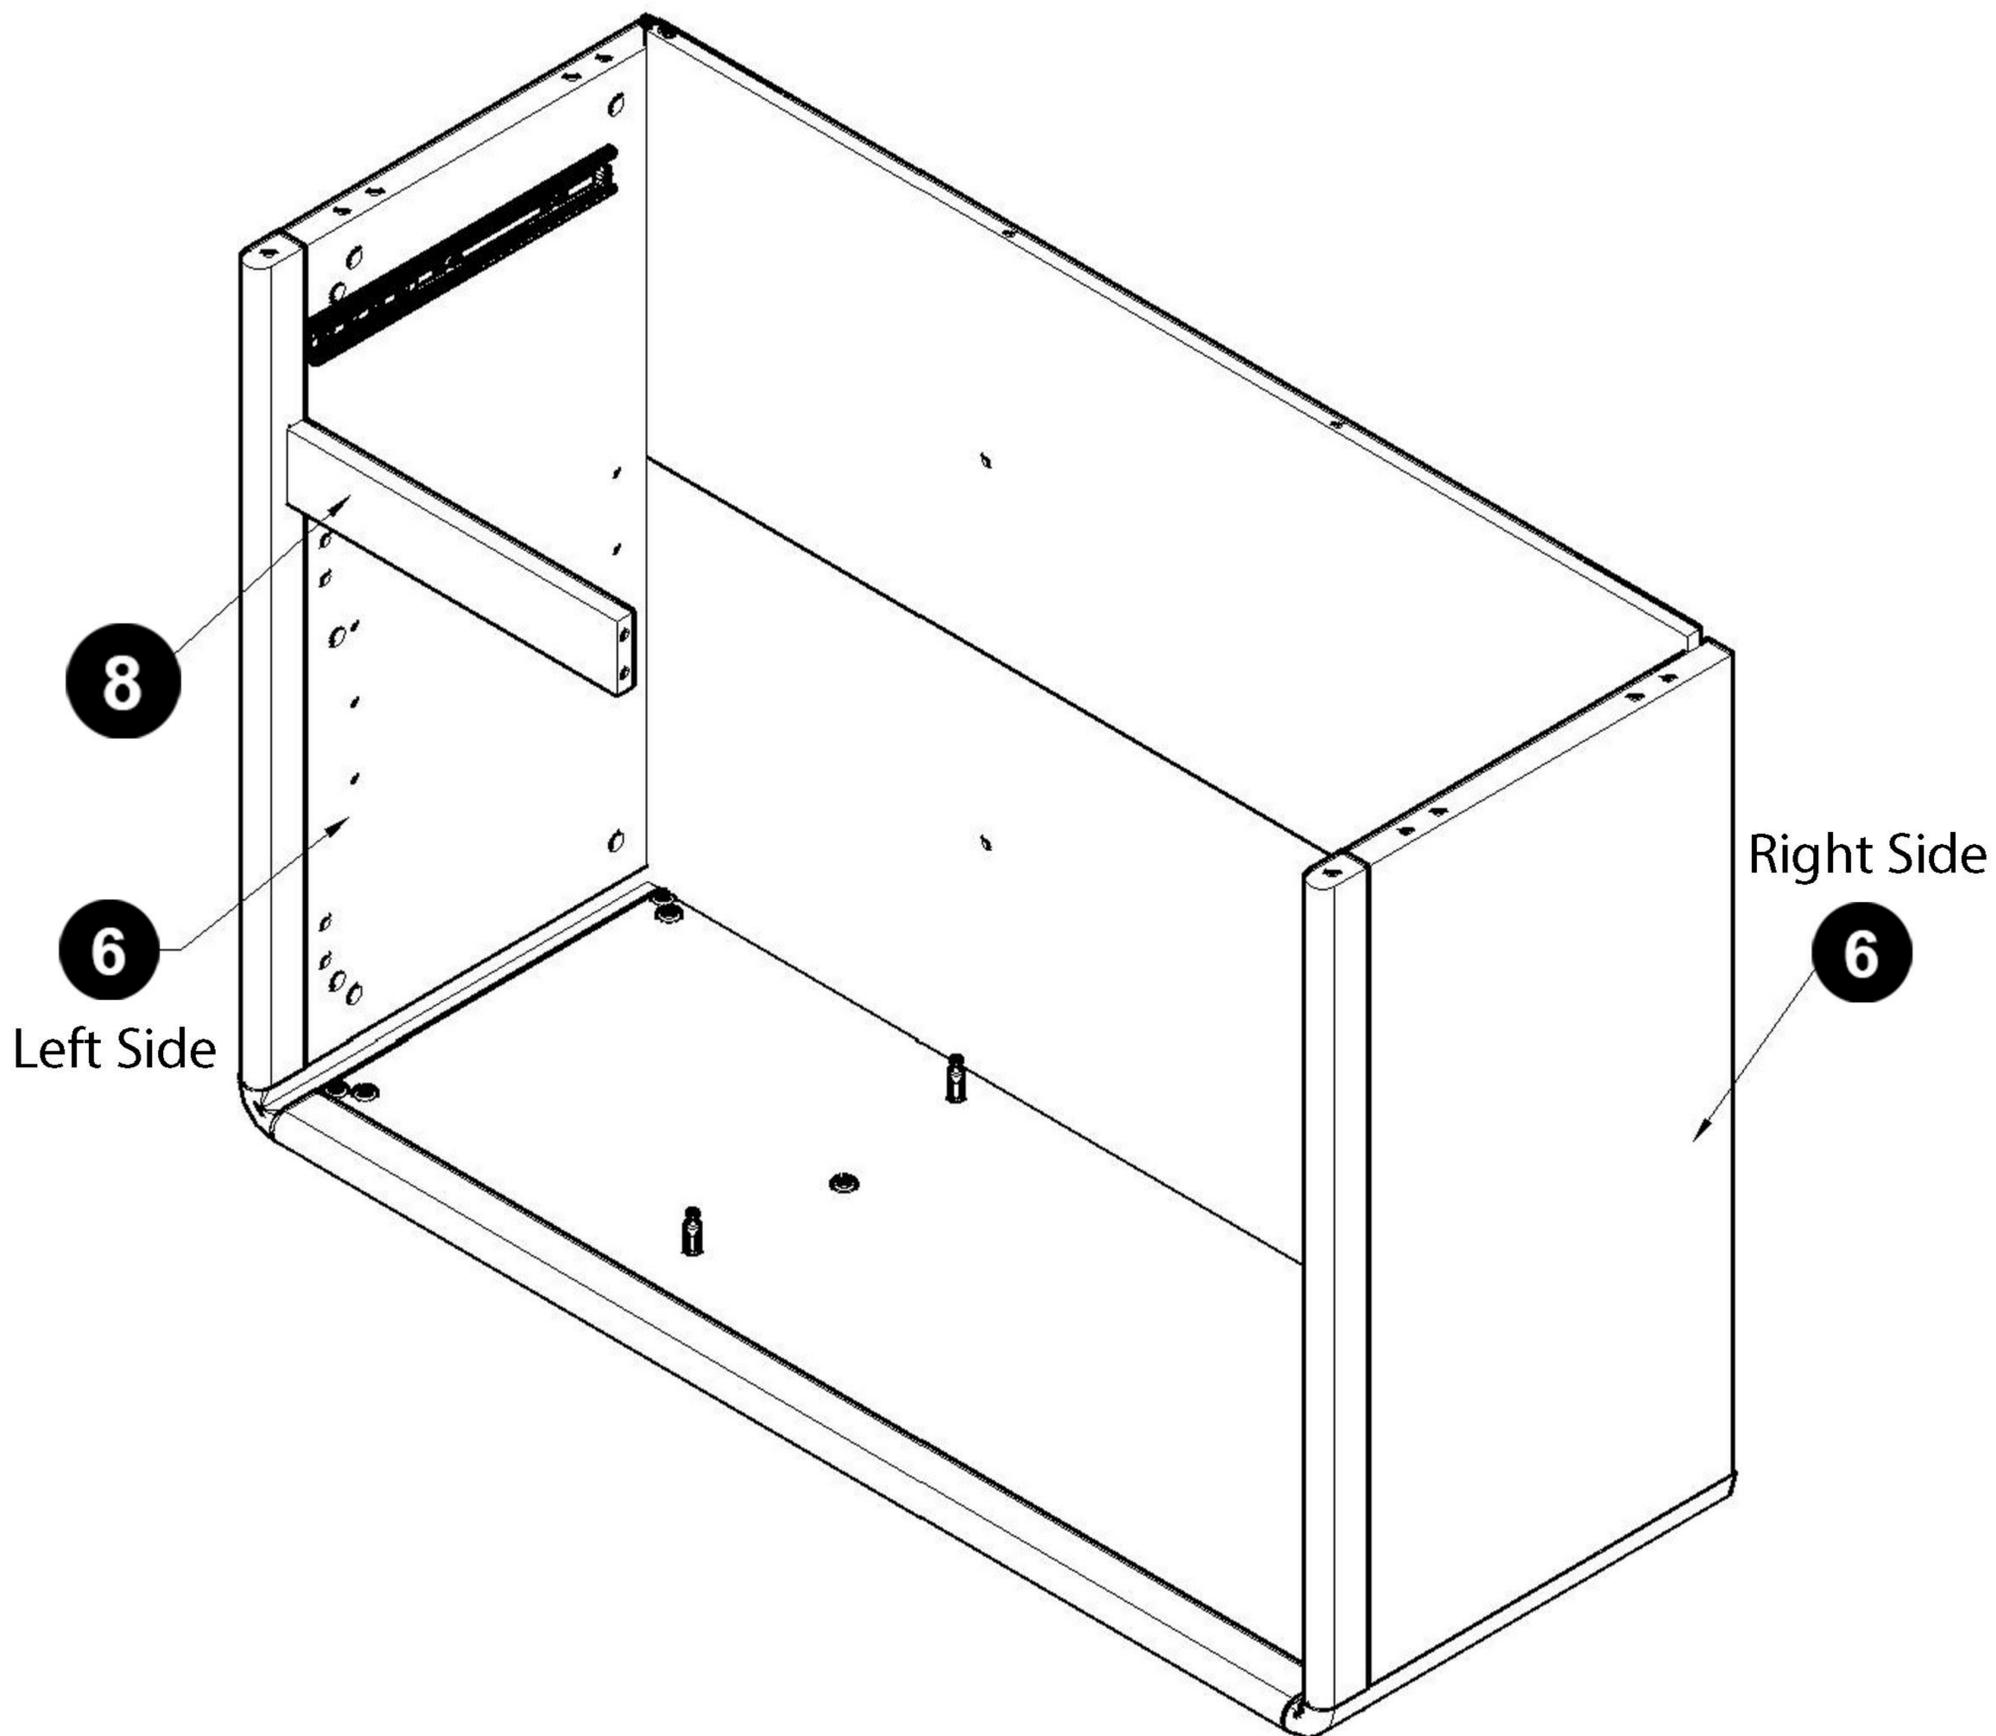



Secure with B

# Step 11:

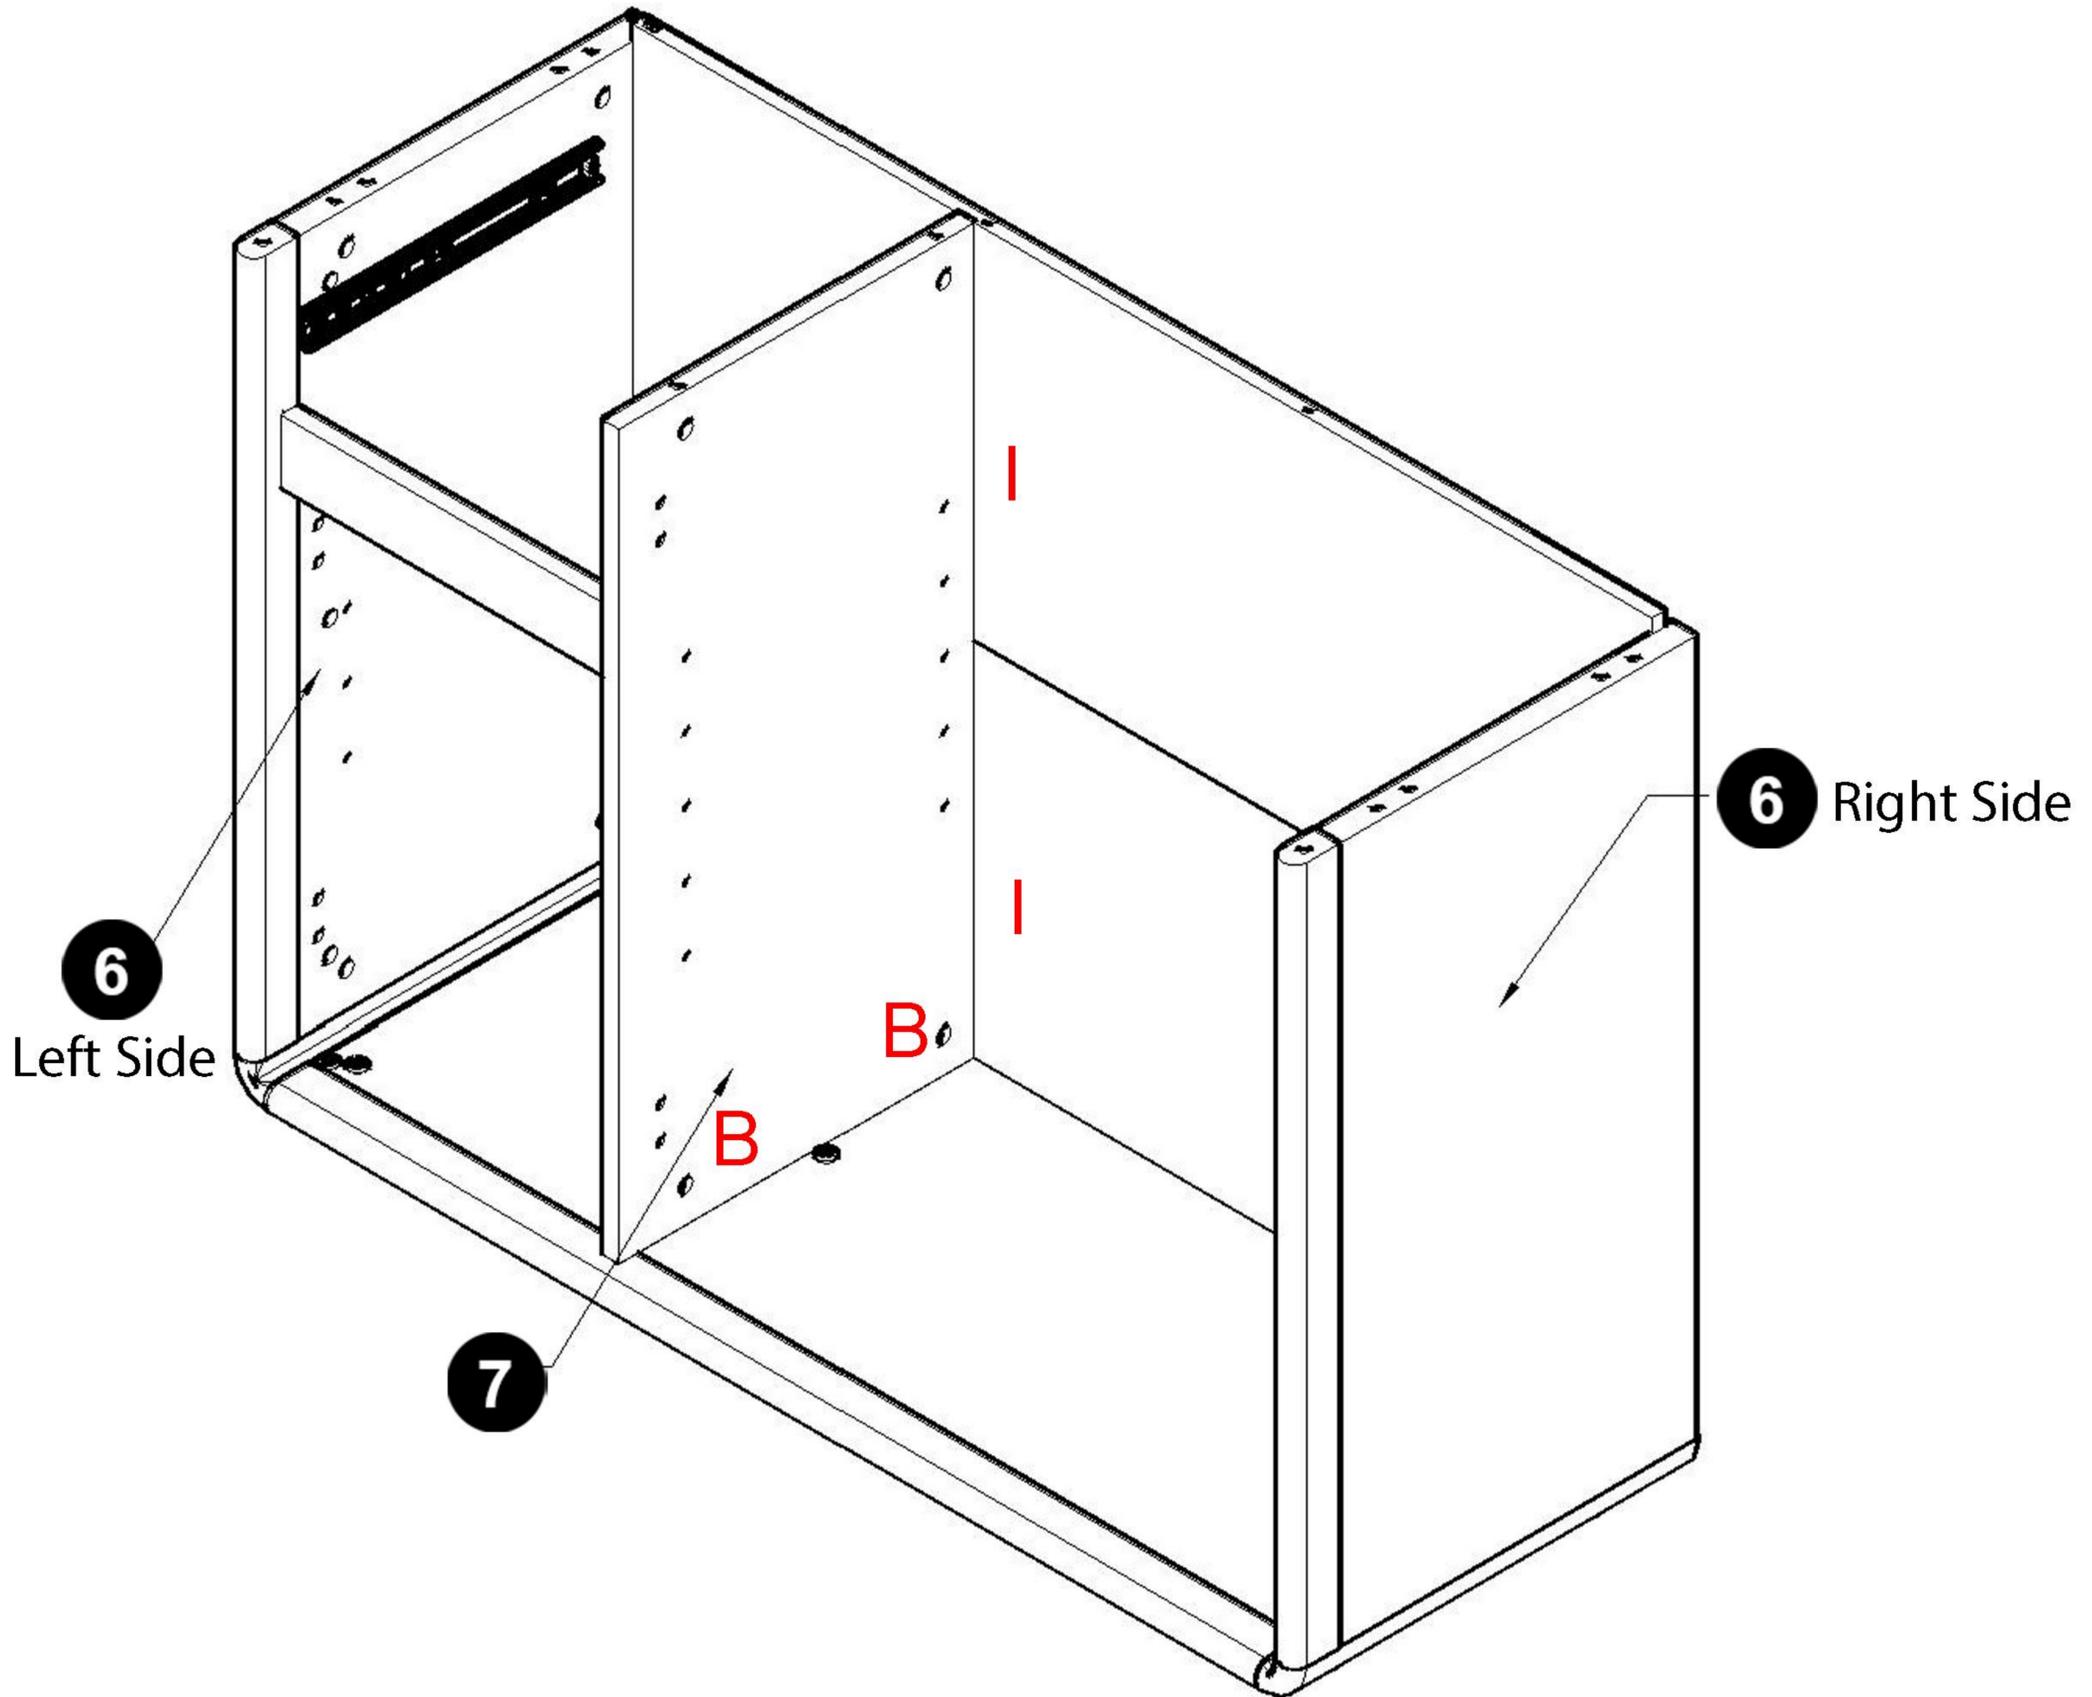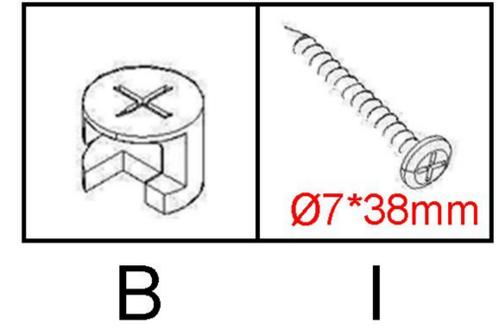

Connect panel 7 to the existing component and secure it with B. Use I to pass through the back panels 11 and secure panel 7.

# Step 12:

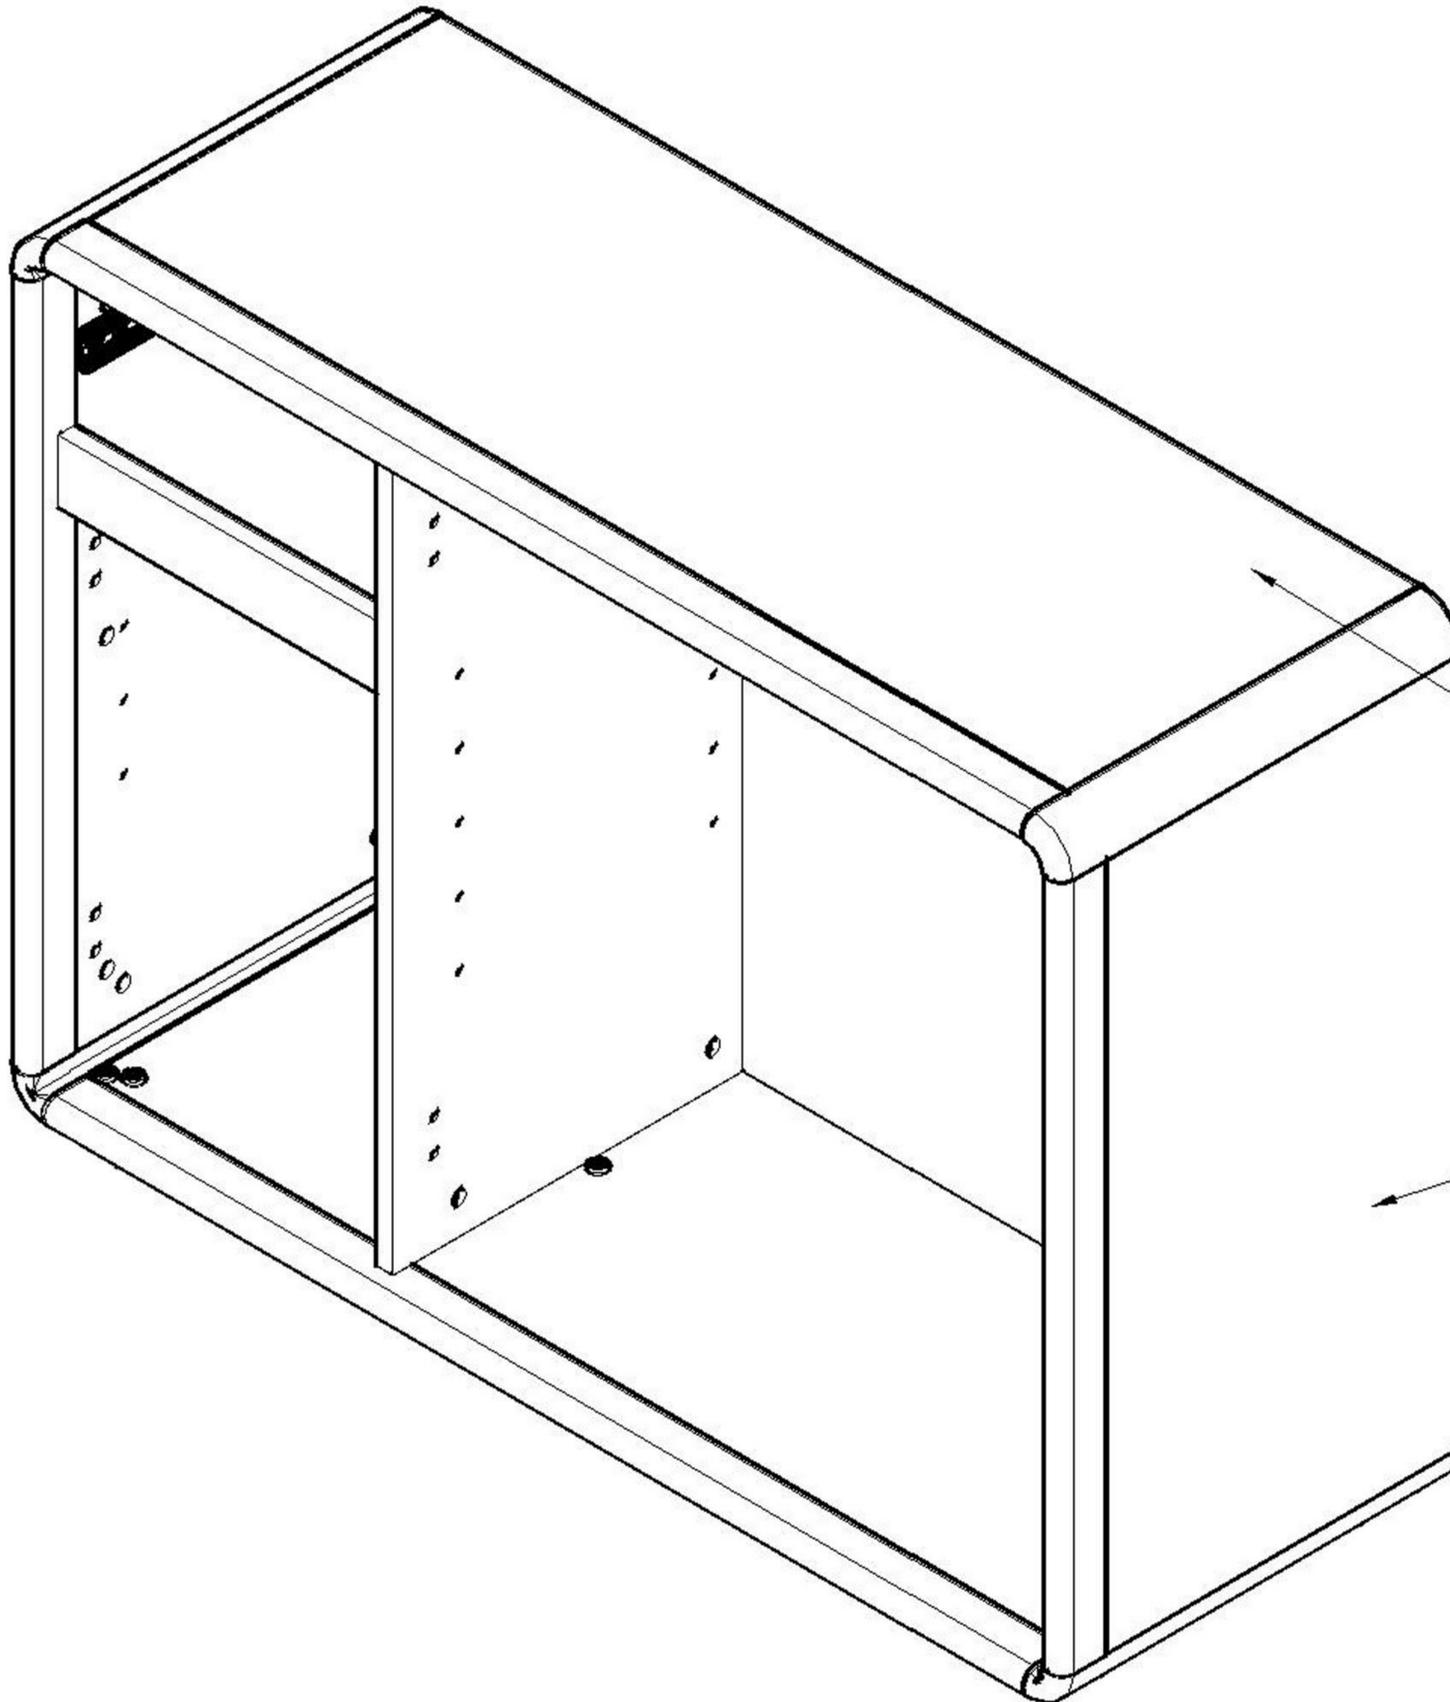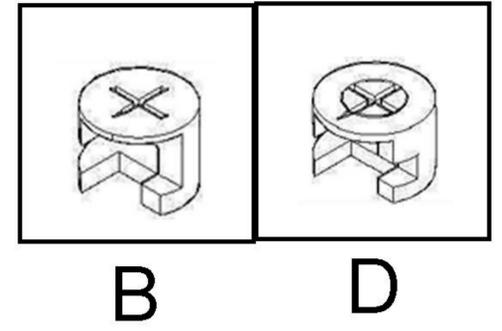


Step 1

Step 11


Secure with B and D

# Step 13:


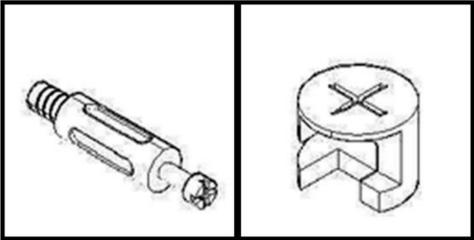


A

B

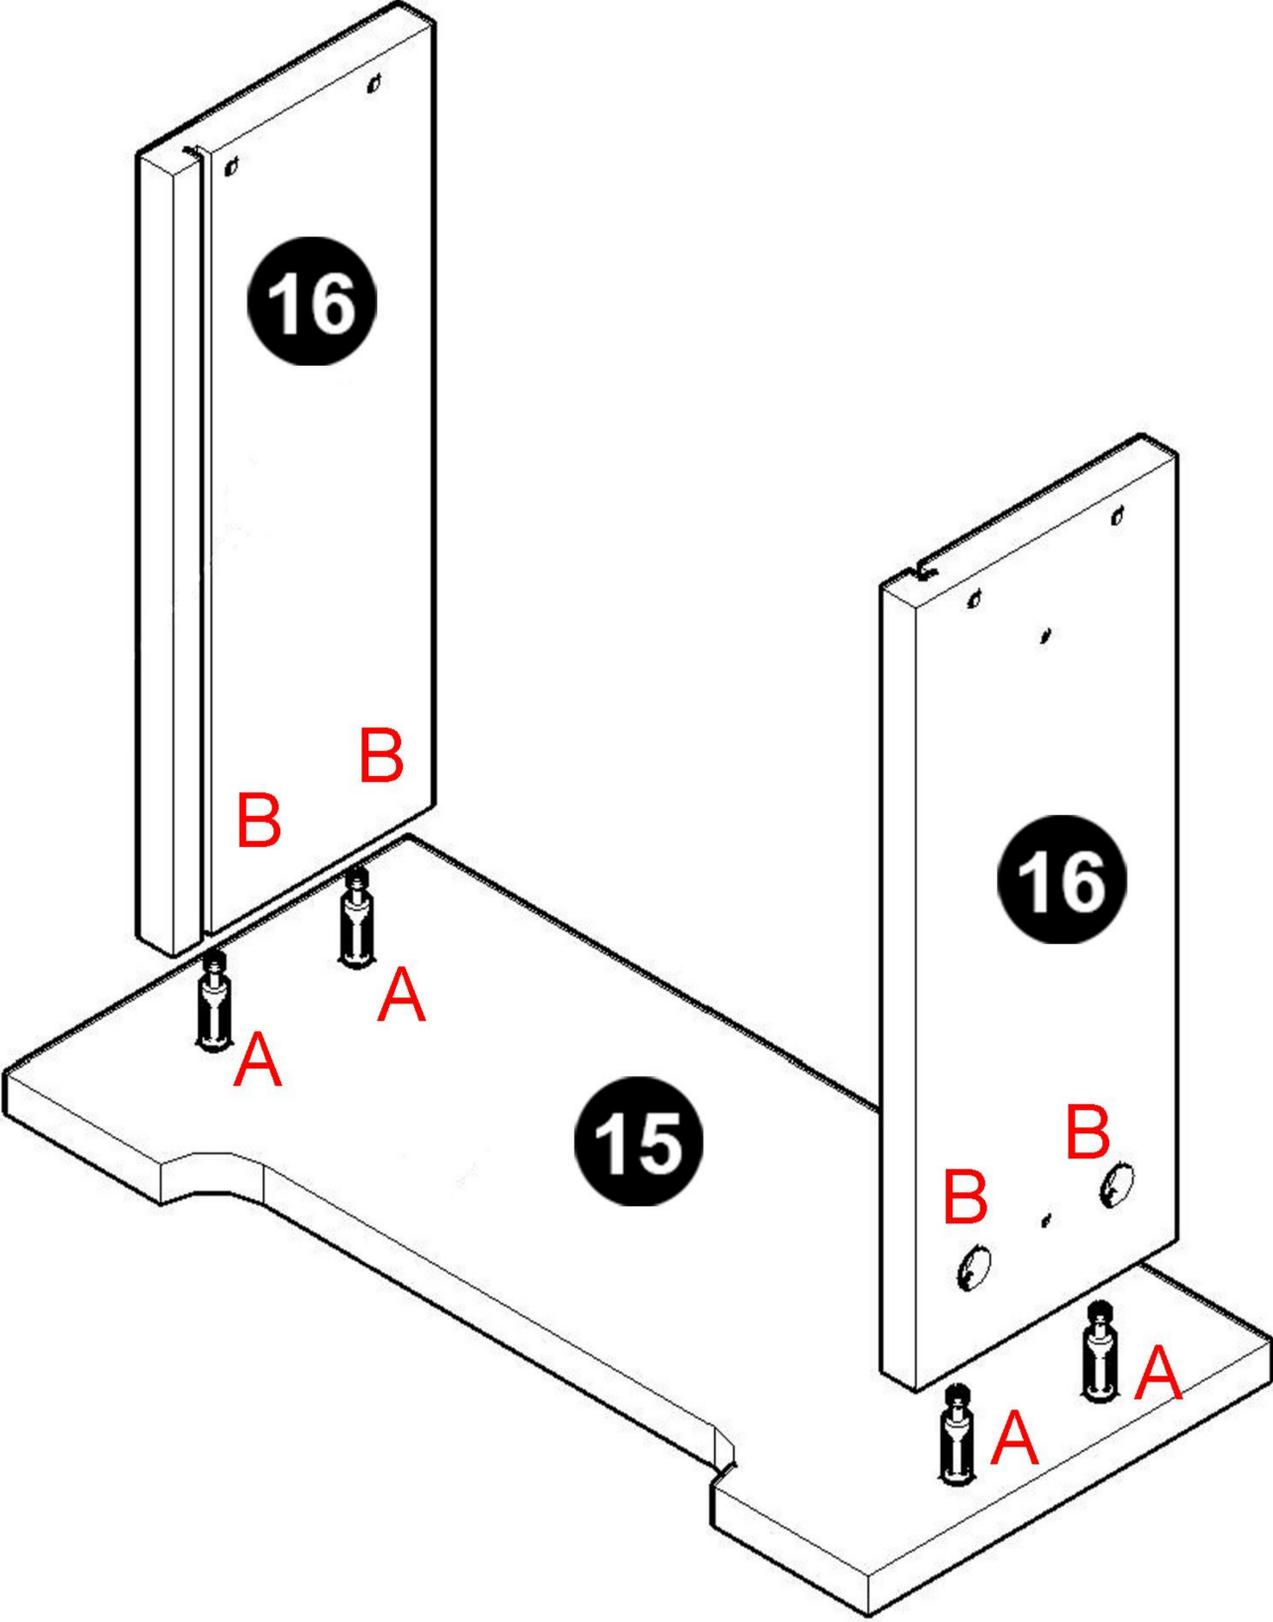

# Step 14:

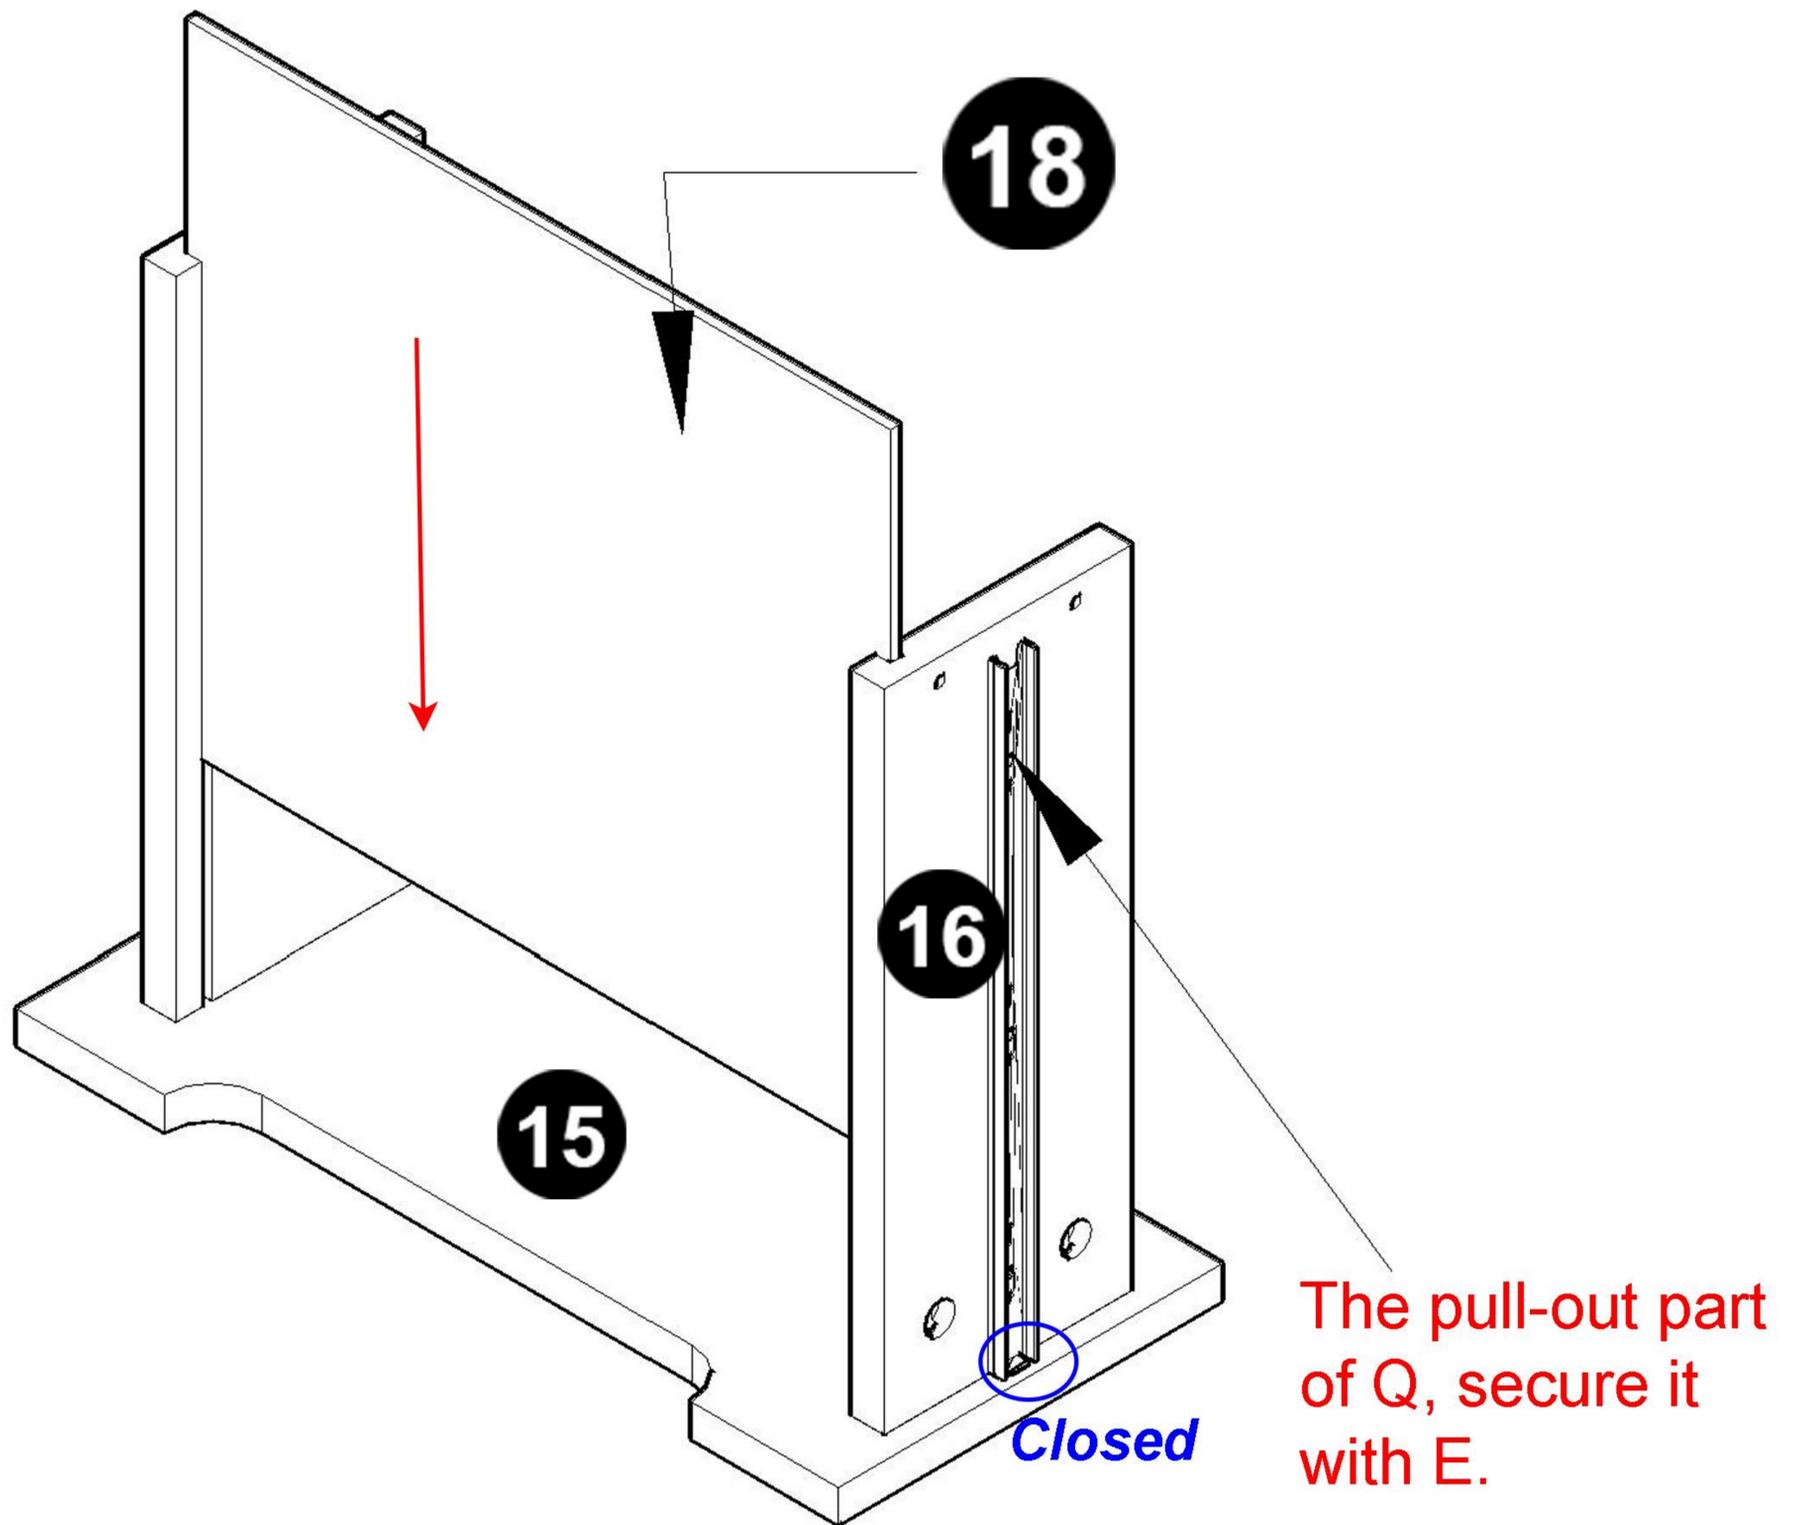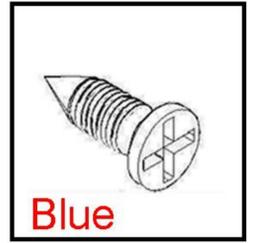


Note: The Q pull-out part should be positioned with the closed side close to panel 15



# Step 15:



G

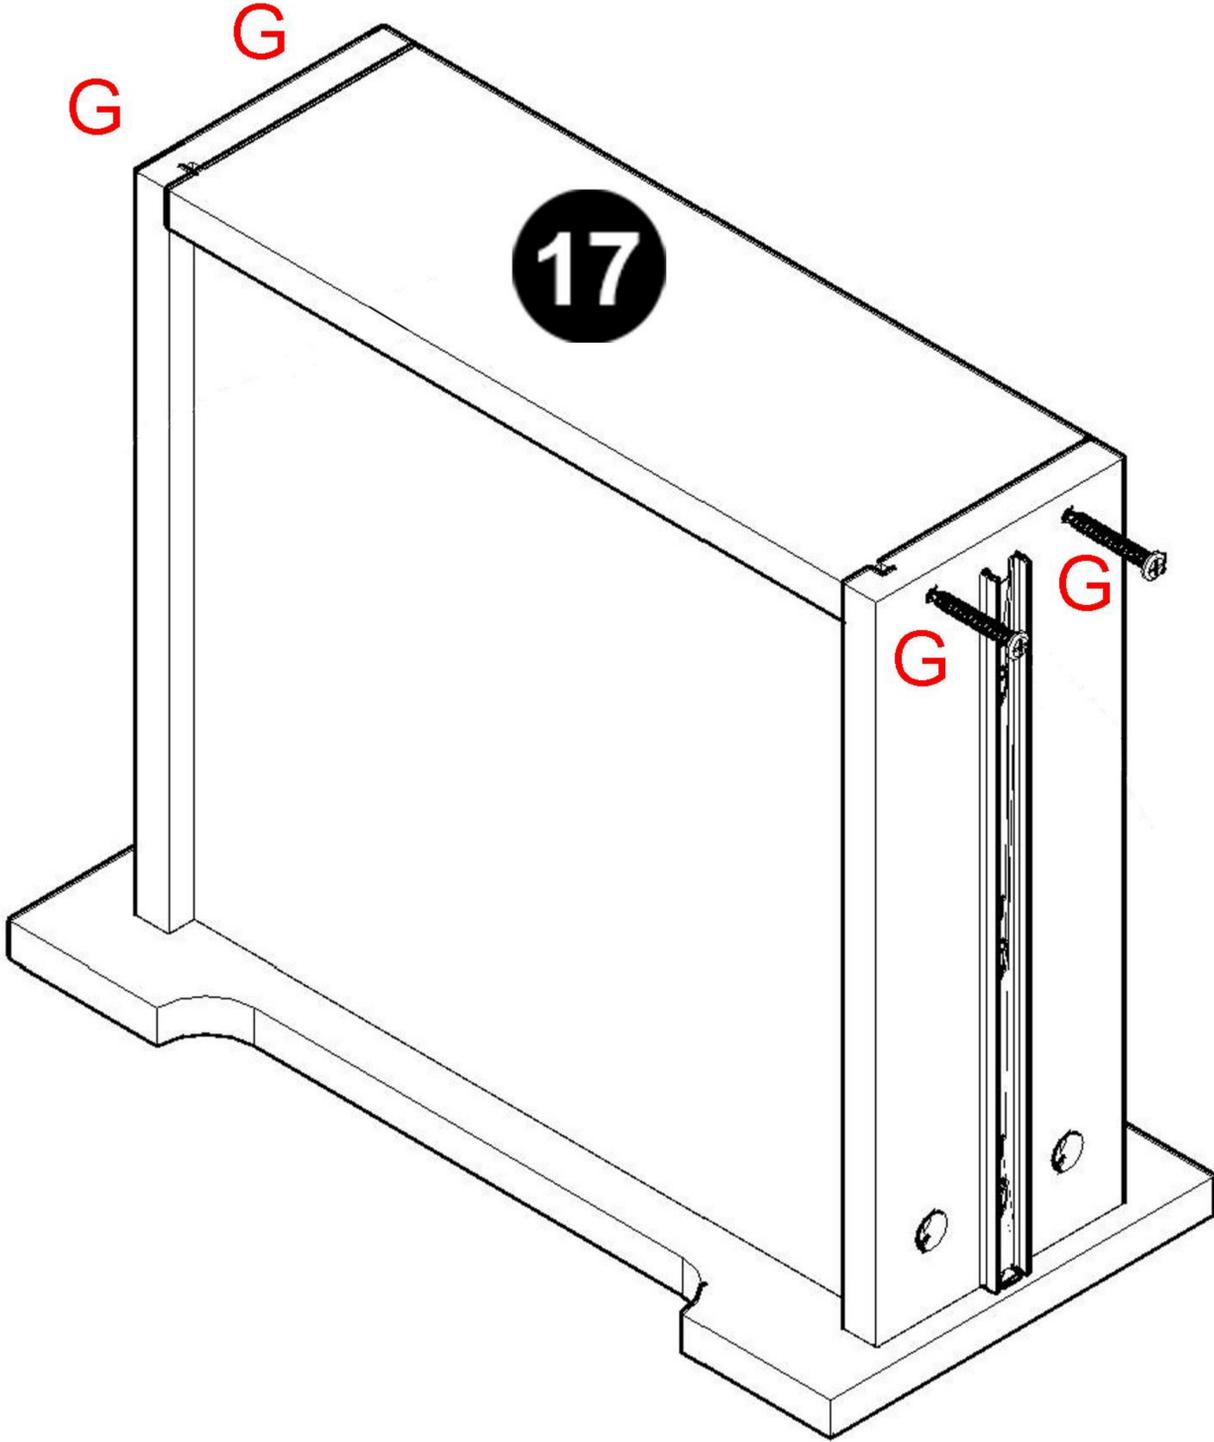


# Step 16:

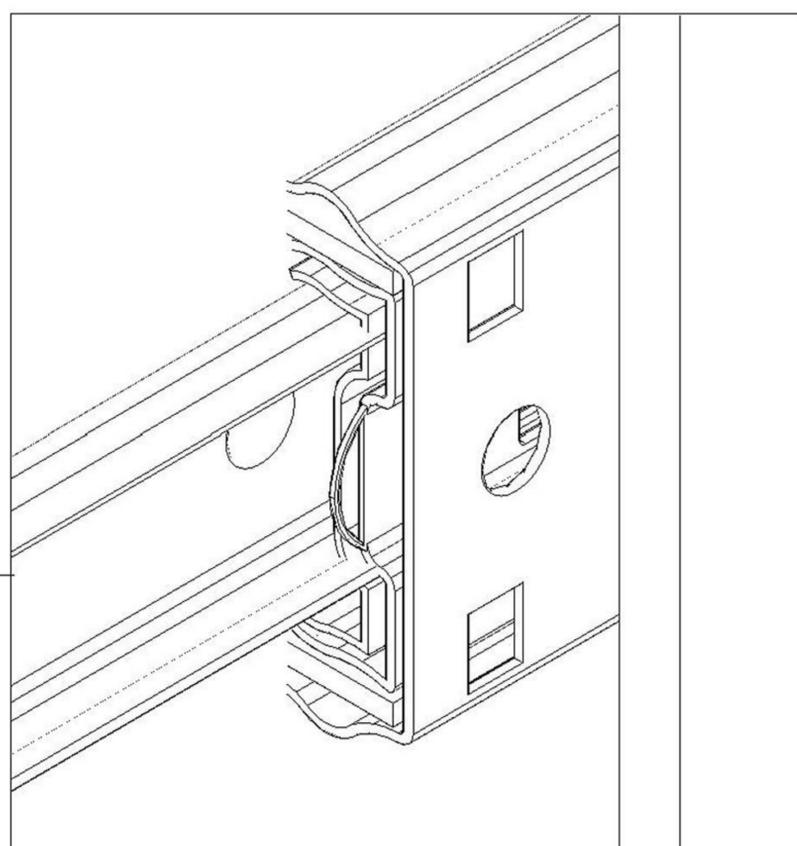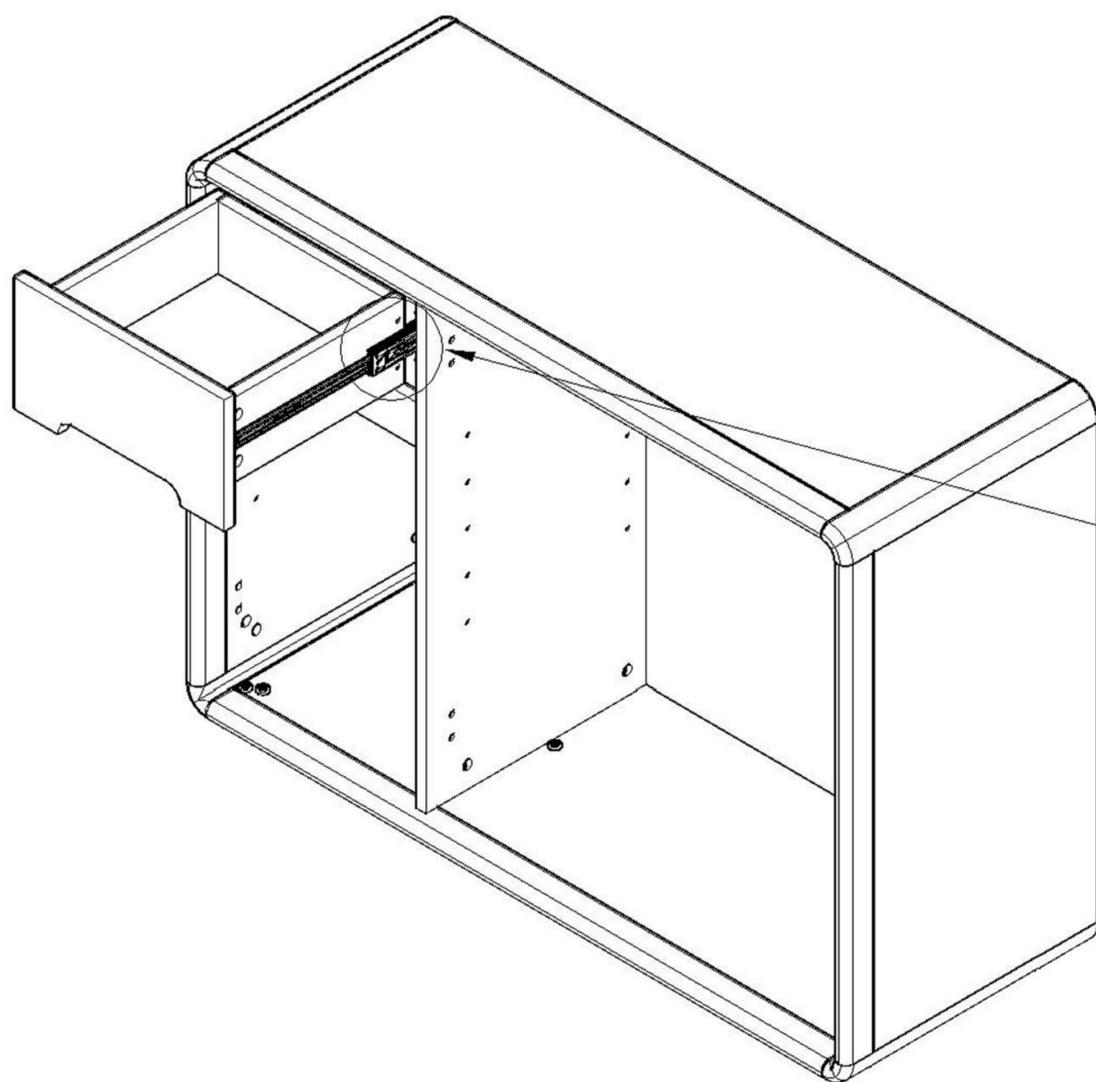


Insert into the slots  
on both sides  
simultaneously

# Step 17:


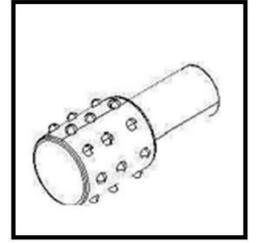


L

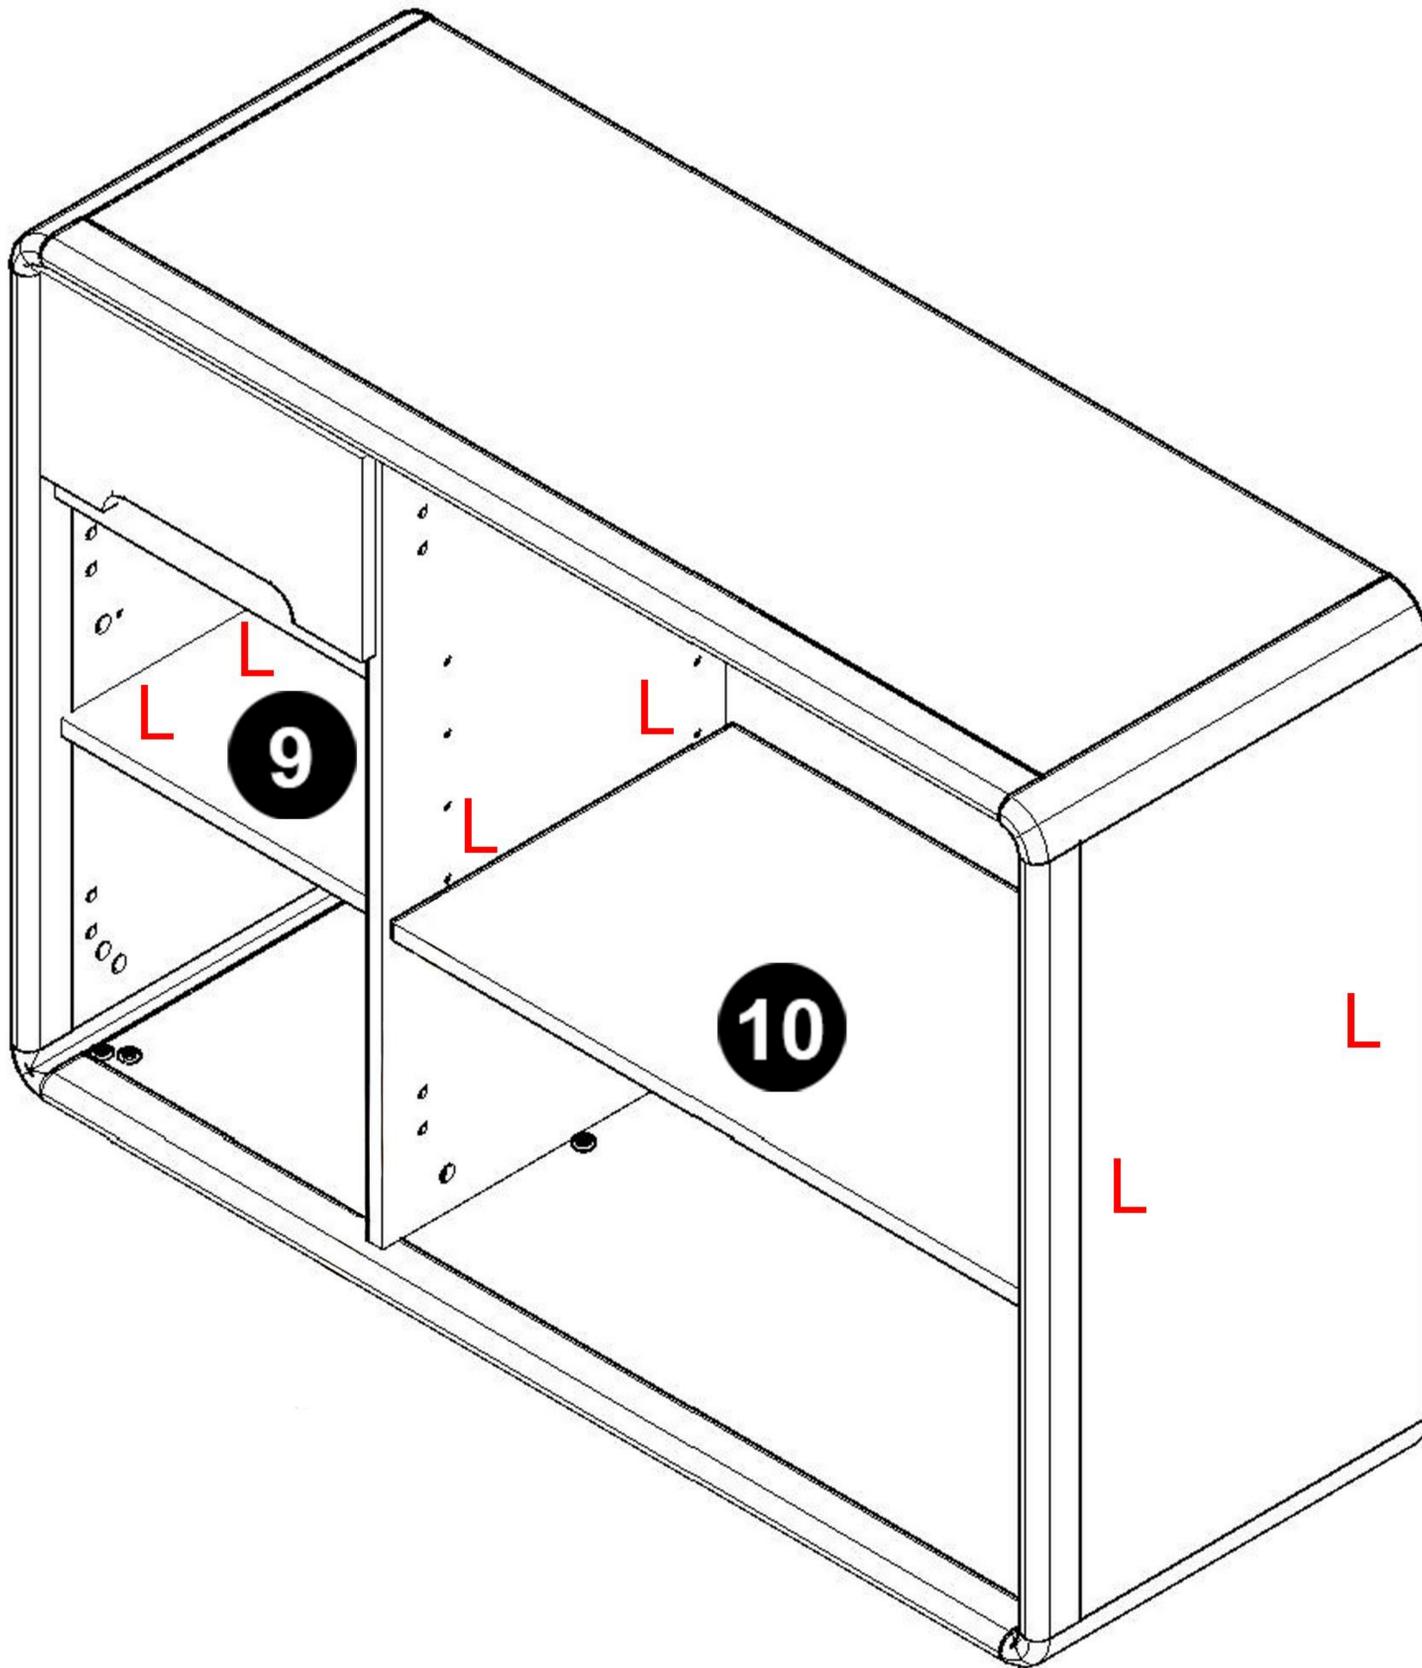


Install L on the pre-drilled holes in panels 6 and 7, and then place panels 9 and 10 on top of the fixed L as needed




# Step 18:

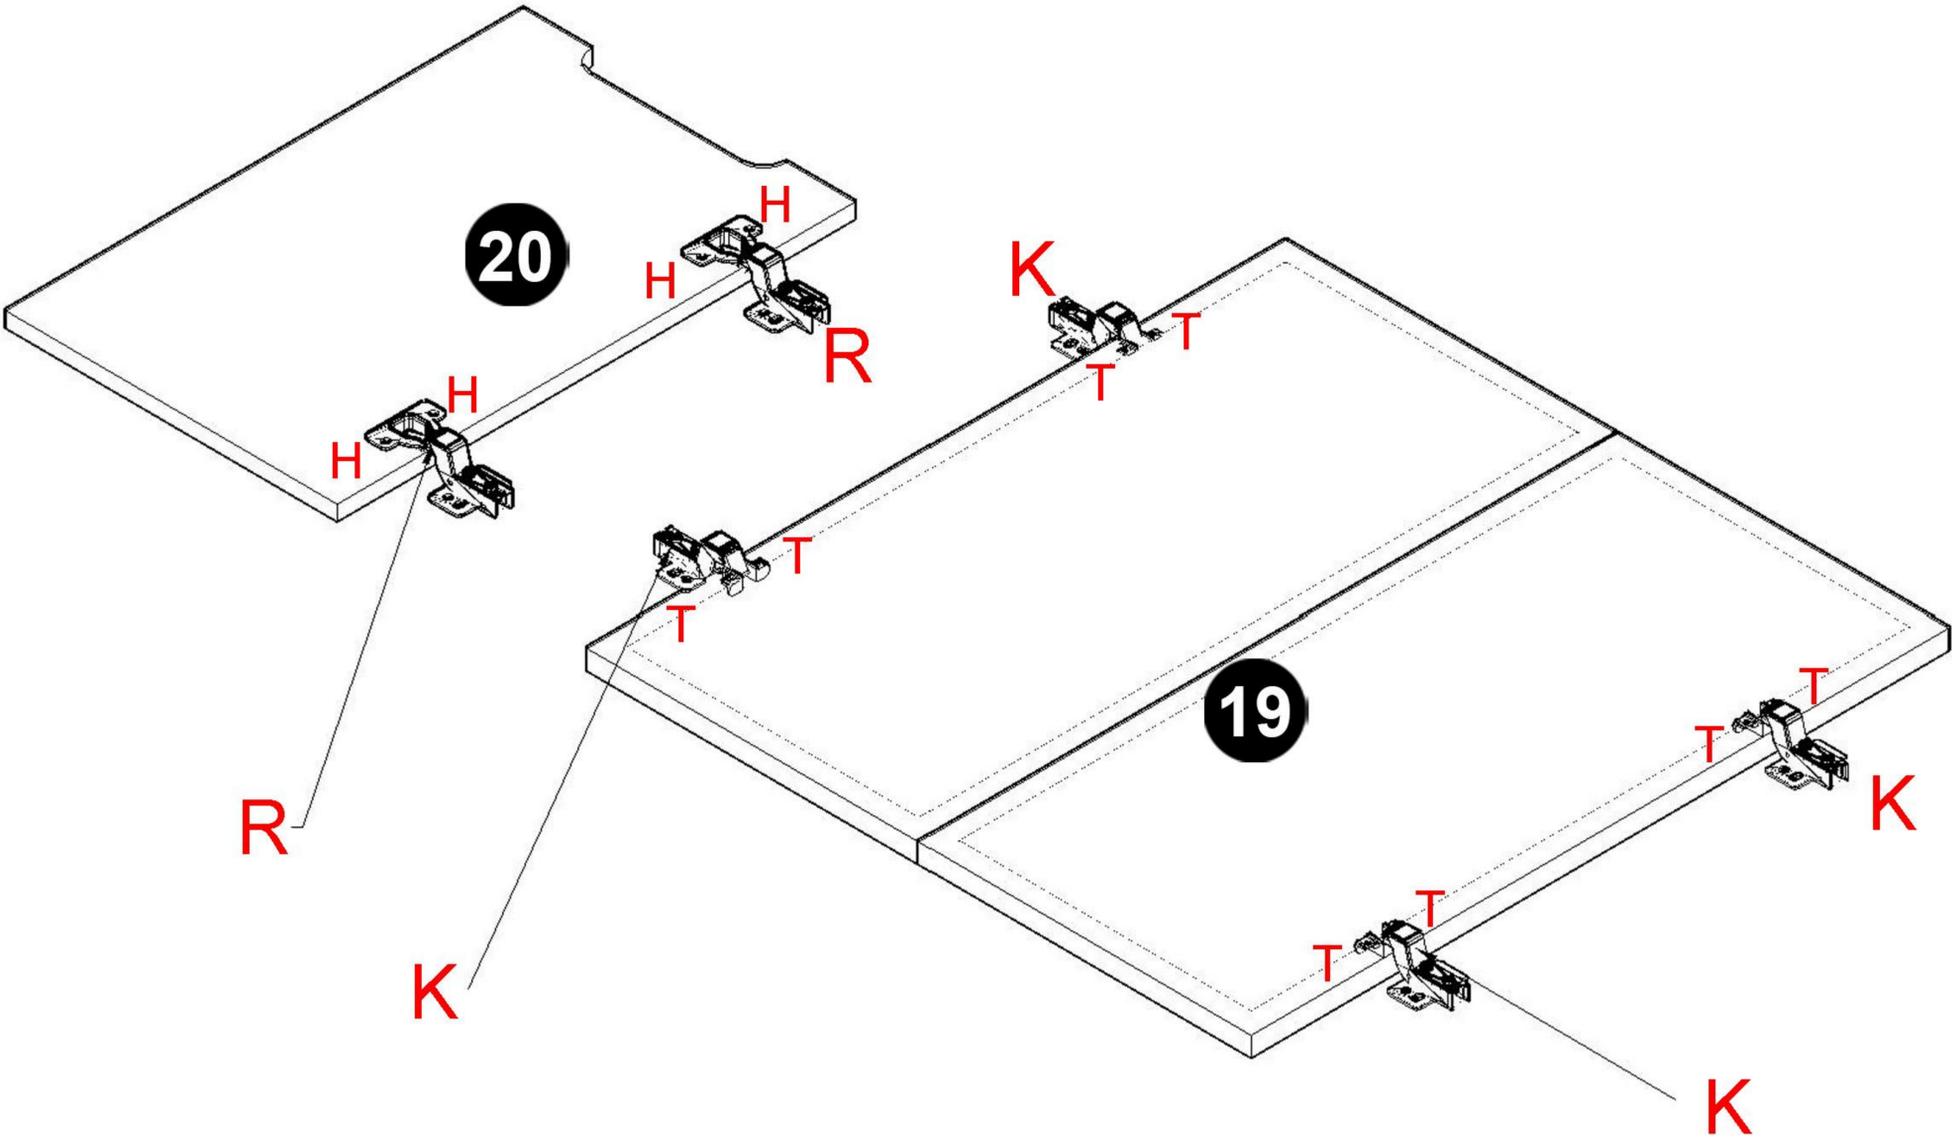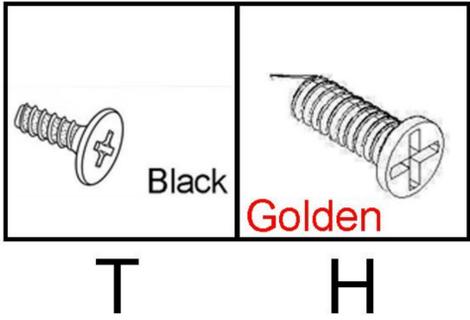


# Step 19:

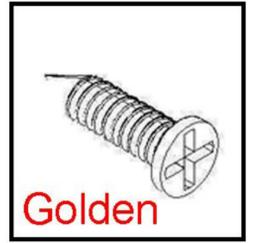

H

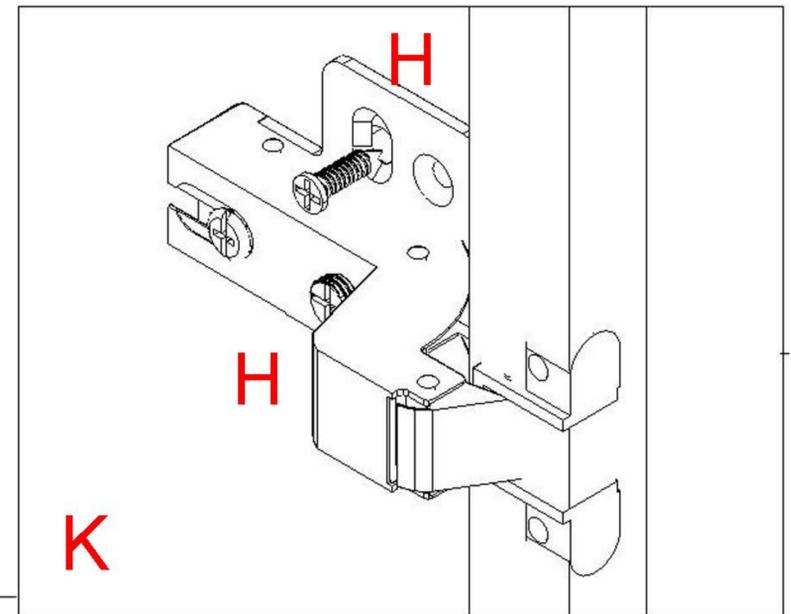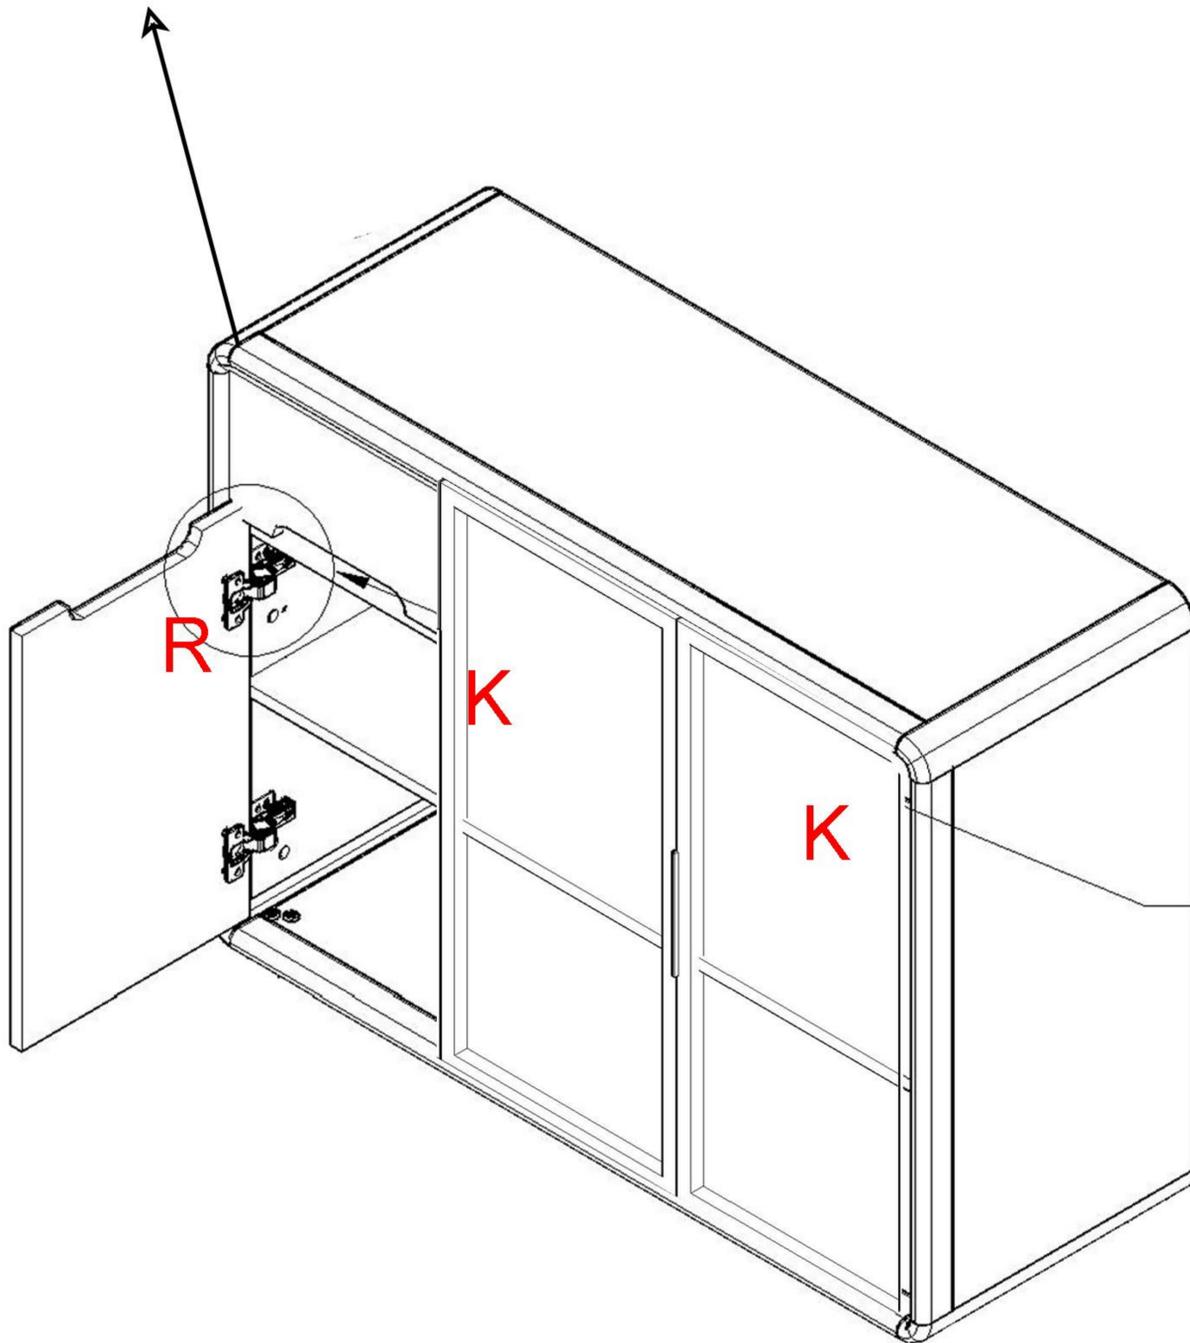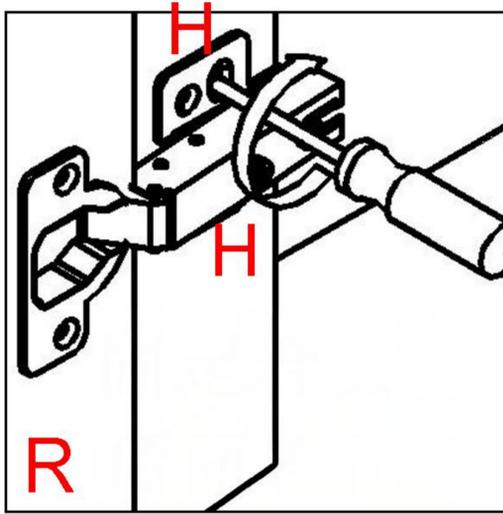

Refer to the previous Installation Guide: Hinge Installation Instruction

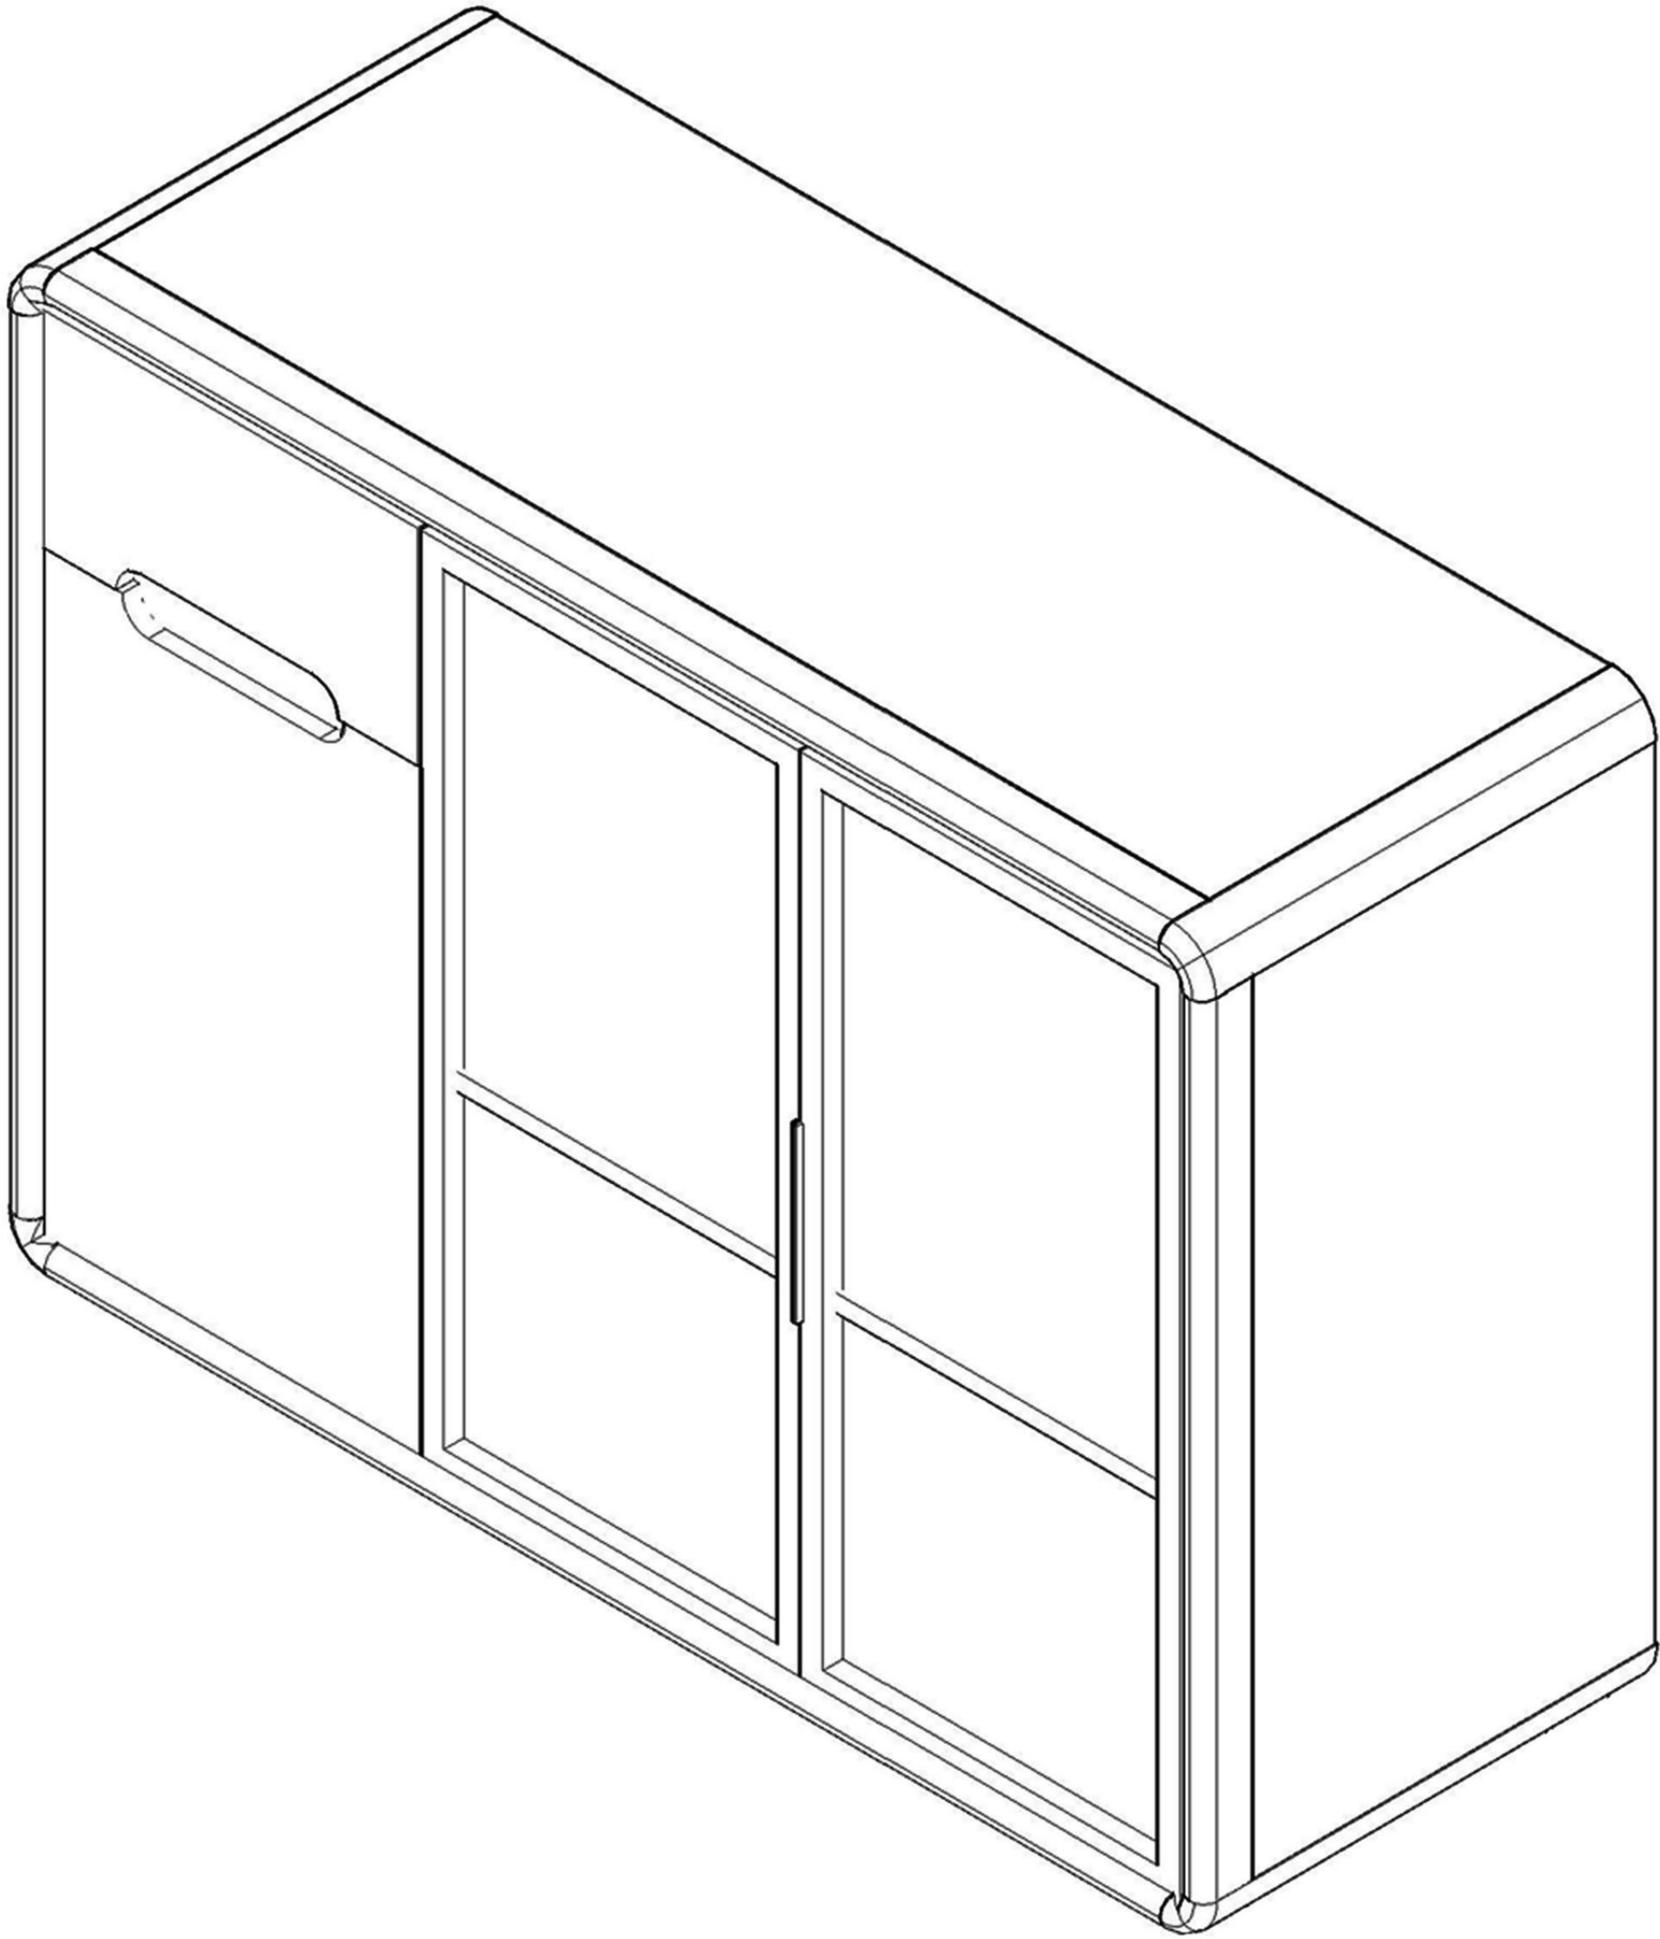

Installation Finished