

TS001


Installation Instructions

Name	Illustration	Pcs
Large Partition		1
Small Partition		2
Upper Bracket		2
Lower Bracket		2


Name	Illustration	Pcs
Crossbar		7
Foot Pad Screw Cover		4
Screw		14
Foot Pads		4
Upper Bracket Cap		2
Fixed Sticker		2
Sticker		2
Screwdriver		1

Installation Steps

1. Take the upper bracket, lower bracket and upper bracket cap to complete the brackets on both sides and assemble them as shown in the figure.

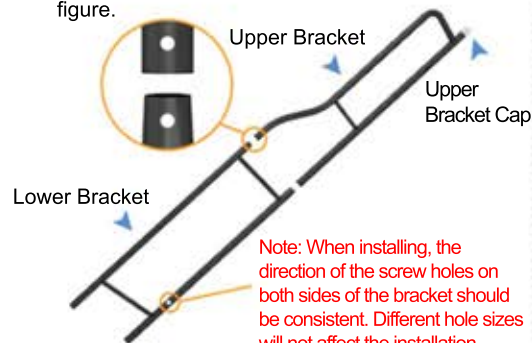


2. Take the screws and crossbars and assemble as shown in the figure

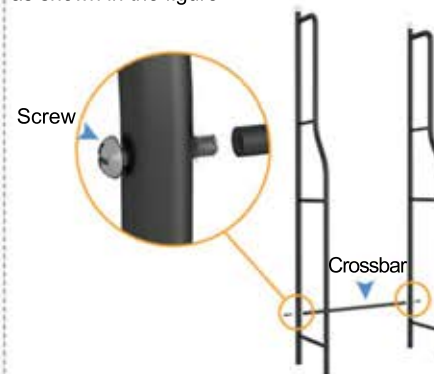


3. Repeat step 2 to complete the installation of all crossbars



4. Take the foot pad screw cap and press it into the hole of the bottom steel pipe. Then take the foot pad and screw it into the foot pad screw cap. Assemble as shown in the figure.

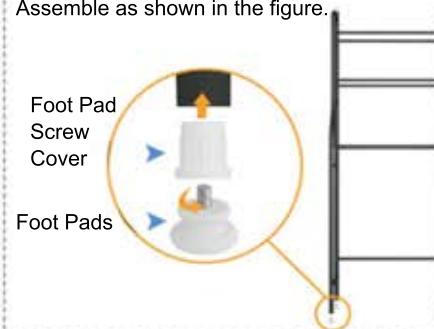

5. Take the large partition and small partition and assemble them as shown in the figure

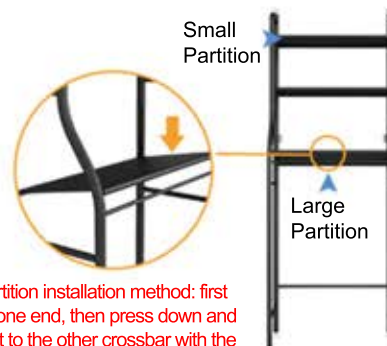

6. Take the fixing sticker and 3M adhesive and stick them on the wall. Then snap the toilet rack in place and the assembly is complete.

