

# SOCE059-40

## Installation Instruction


Please read this instruction manual carefully before installation and use.

### Assembly notes:

1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

### Precautions after assembly:



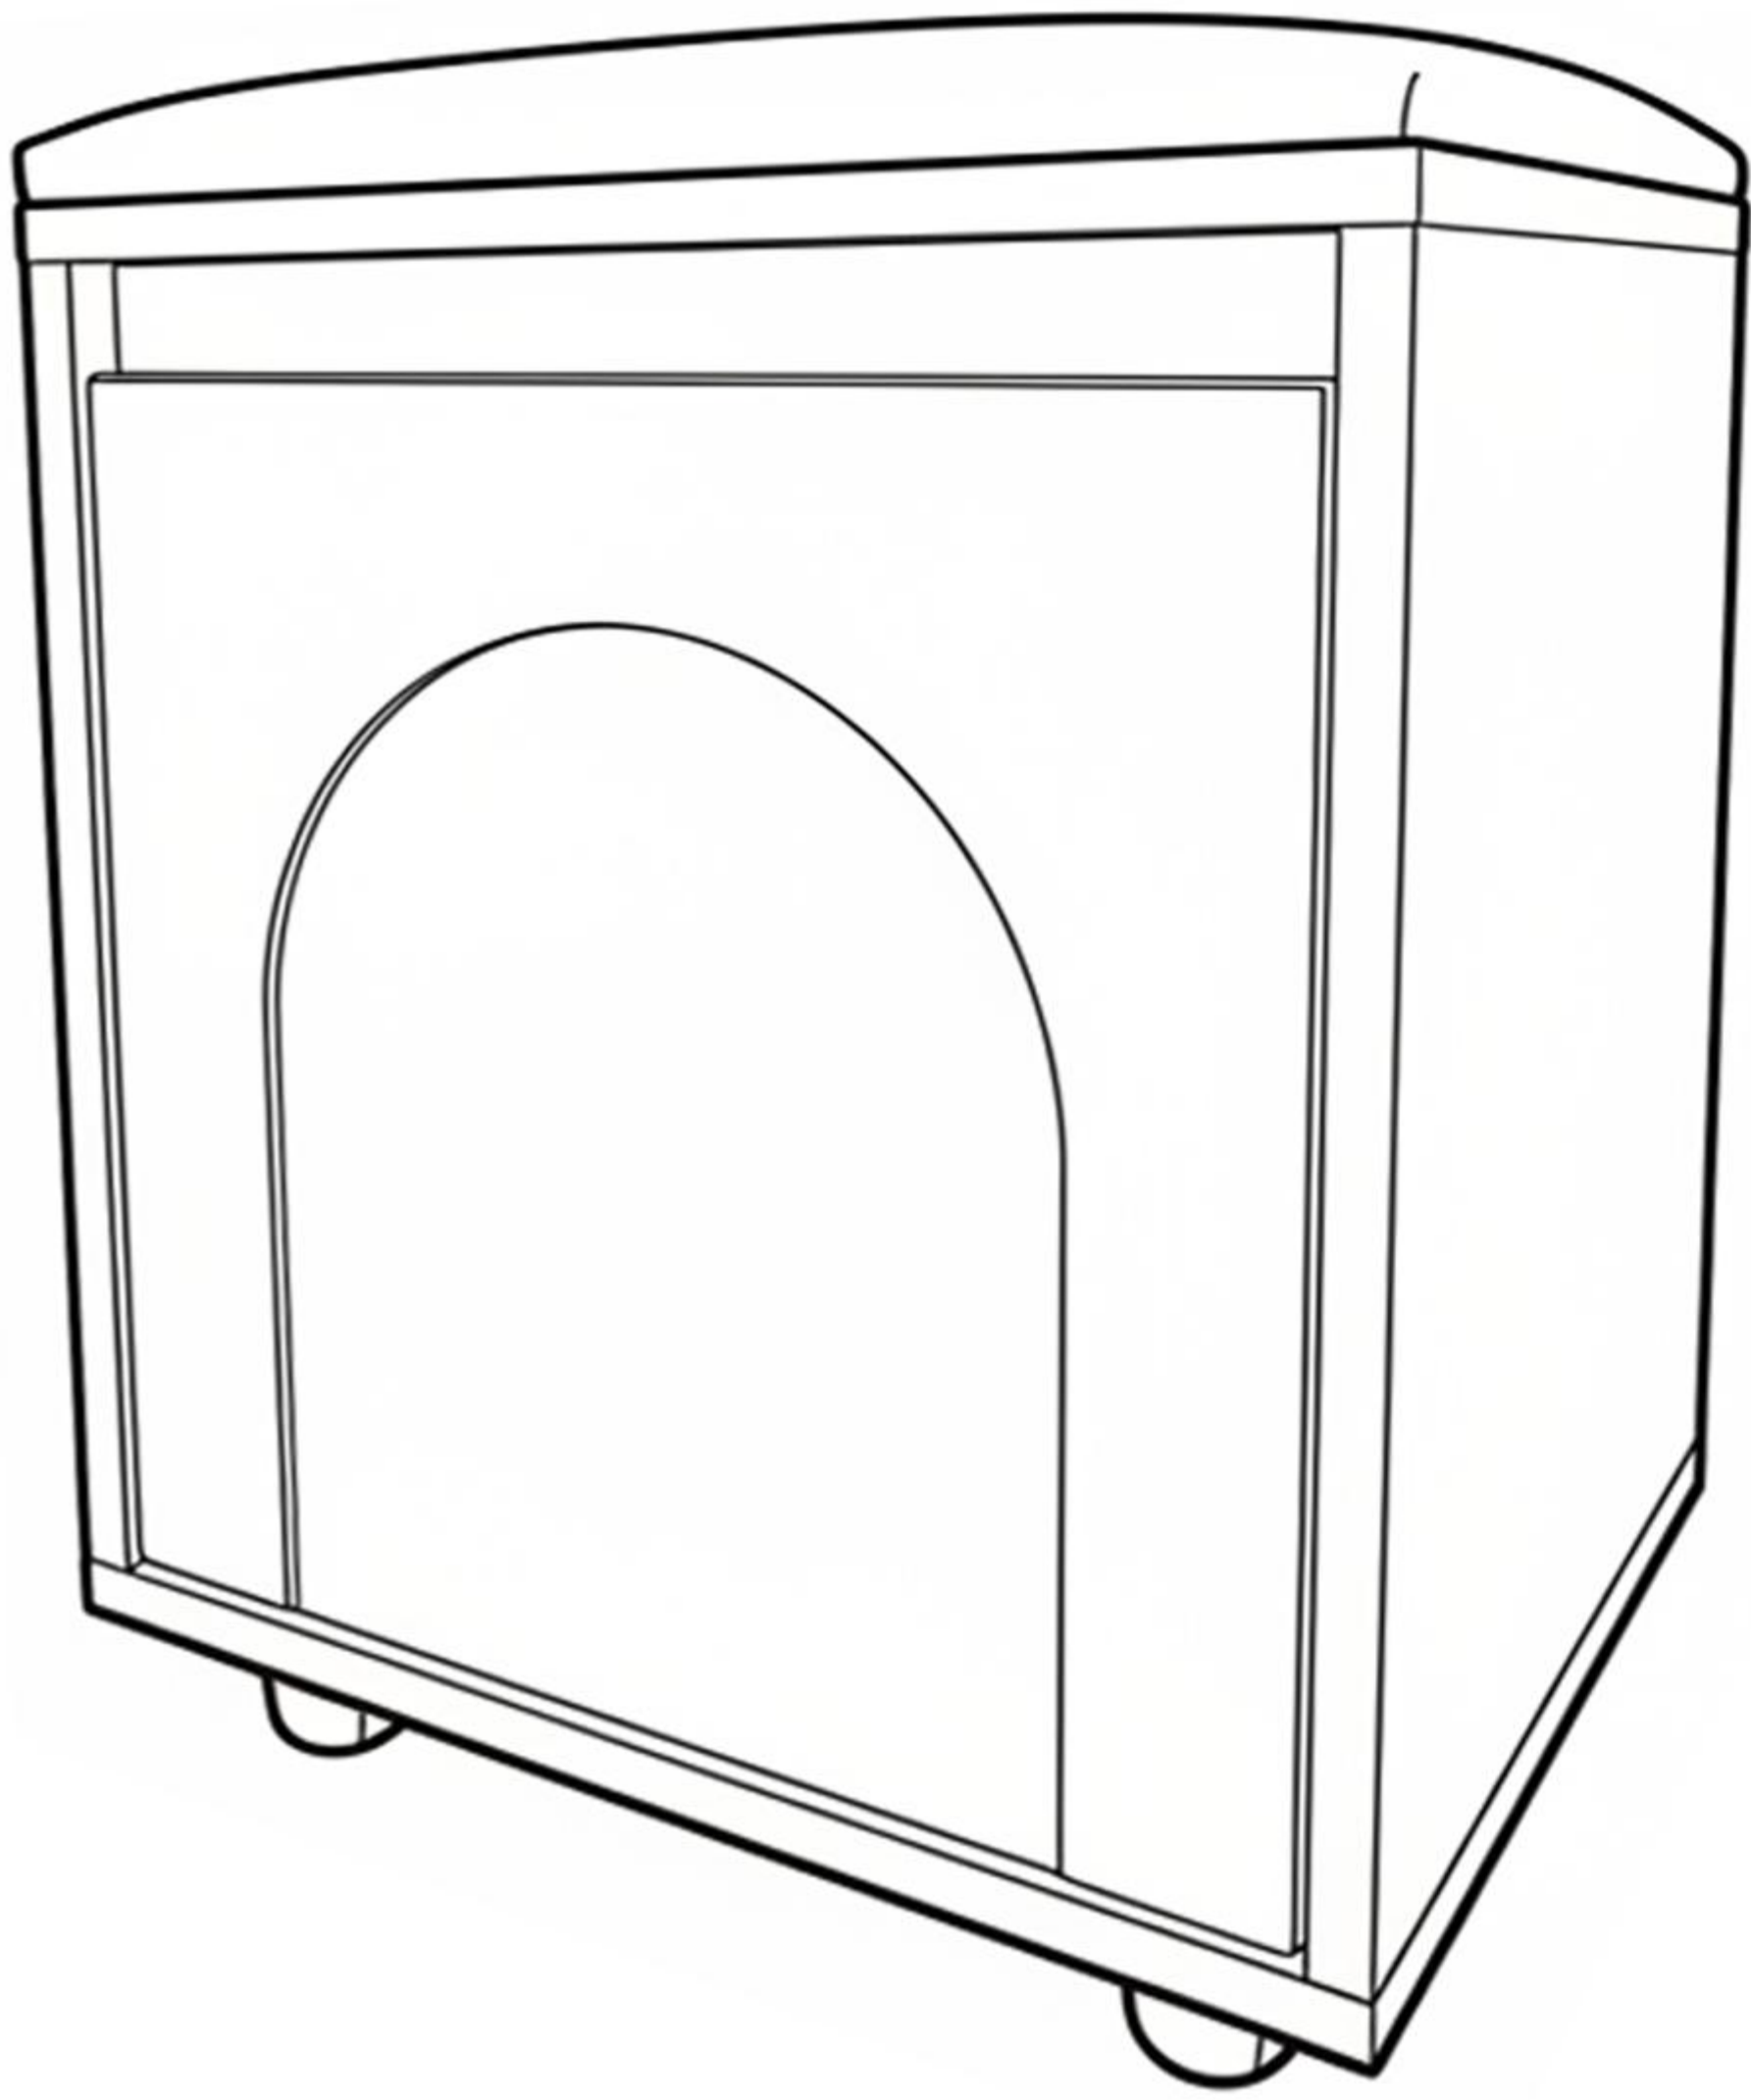




1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.



**NOTE:** Please be sure to use a manual screwdriver and refrain from using an electric drill.

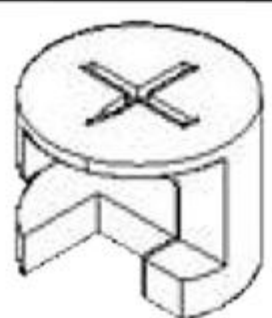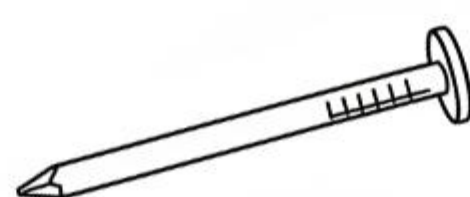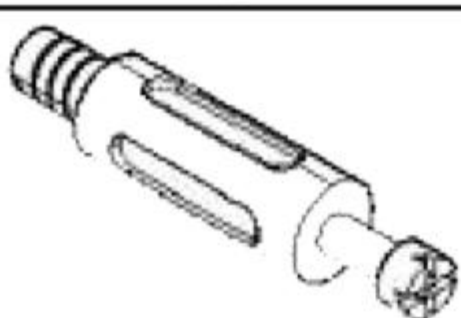


# Hardware List

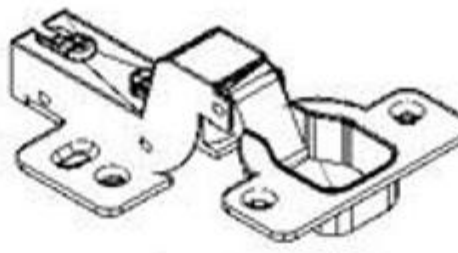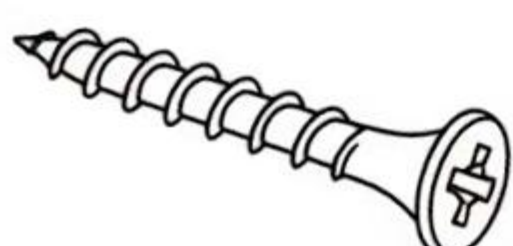Accessory Appearance	Code	Accessory Appearance	Code
	A		E
	B		F
	C		G
	D		

**Detailed description of the main components, please read carefully**


## G (Hinge) Installation Instructions

Install the hinge with screw C

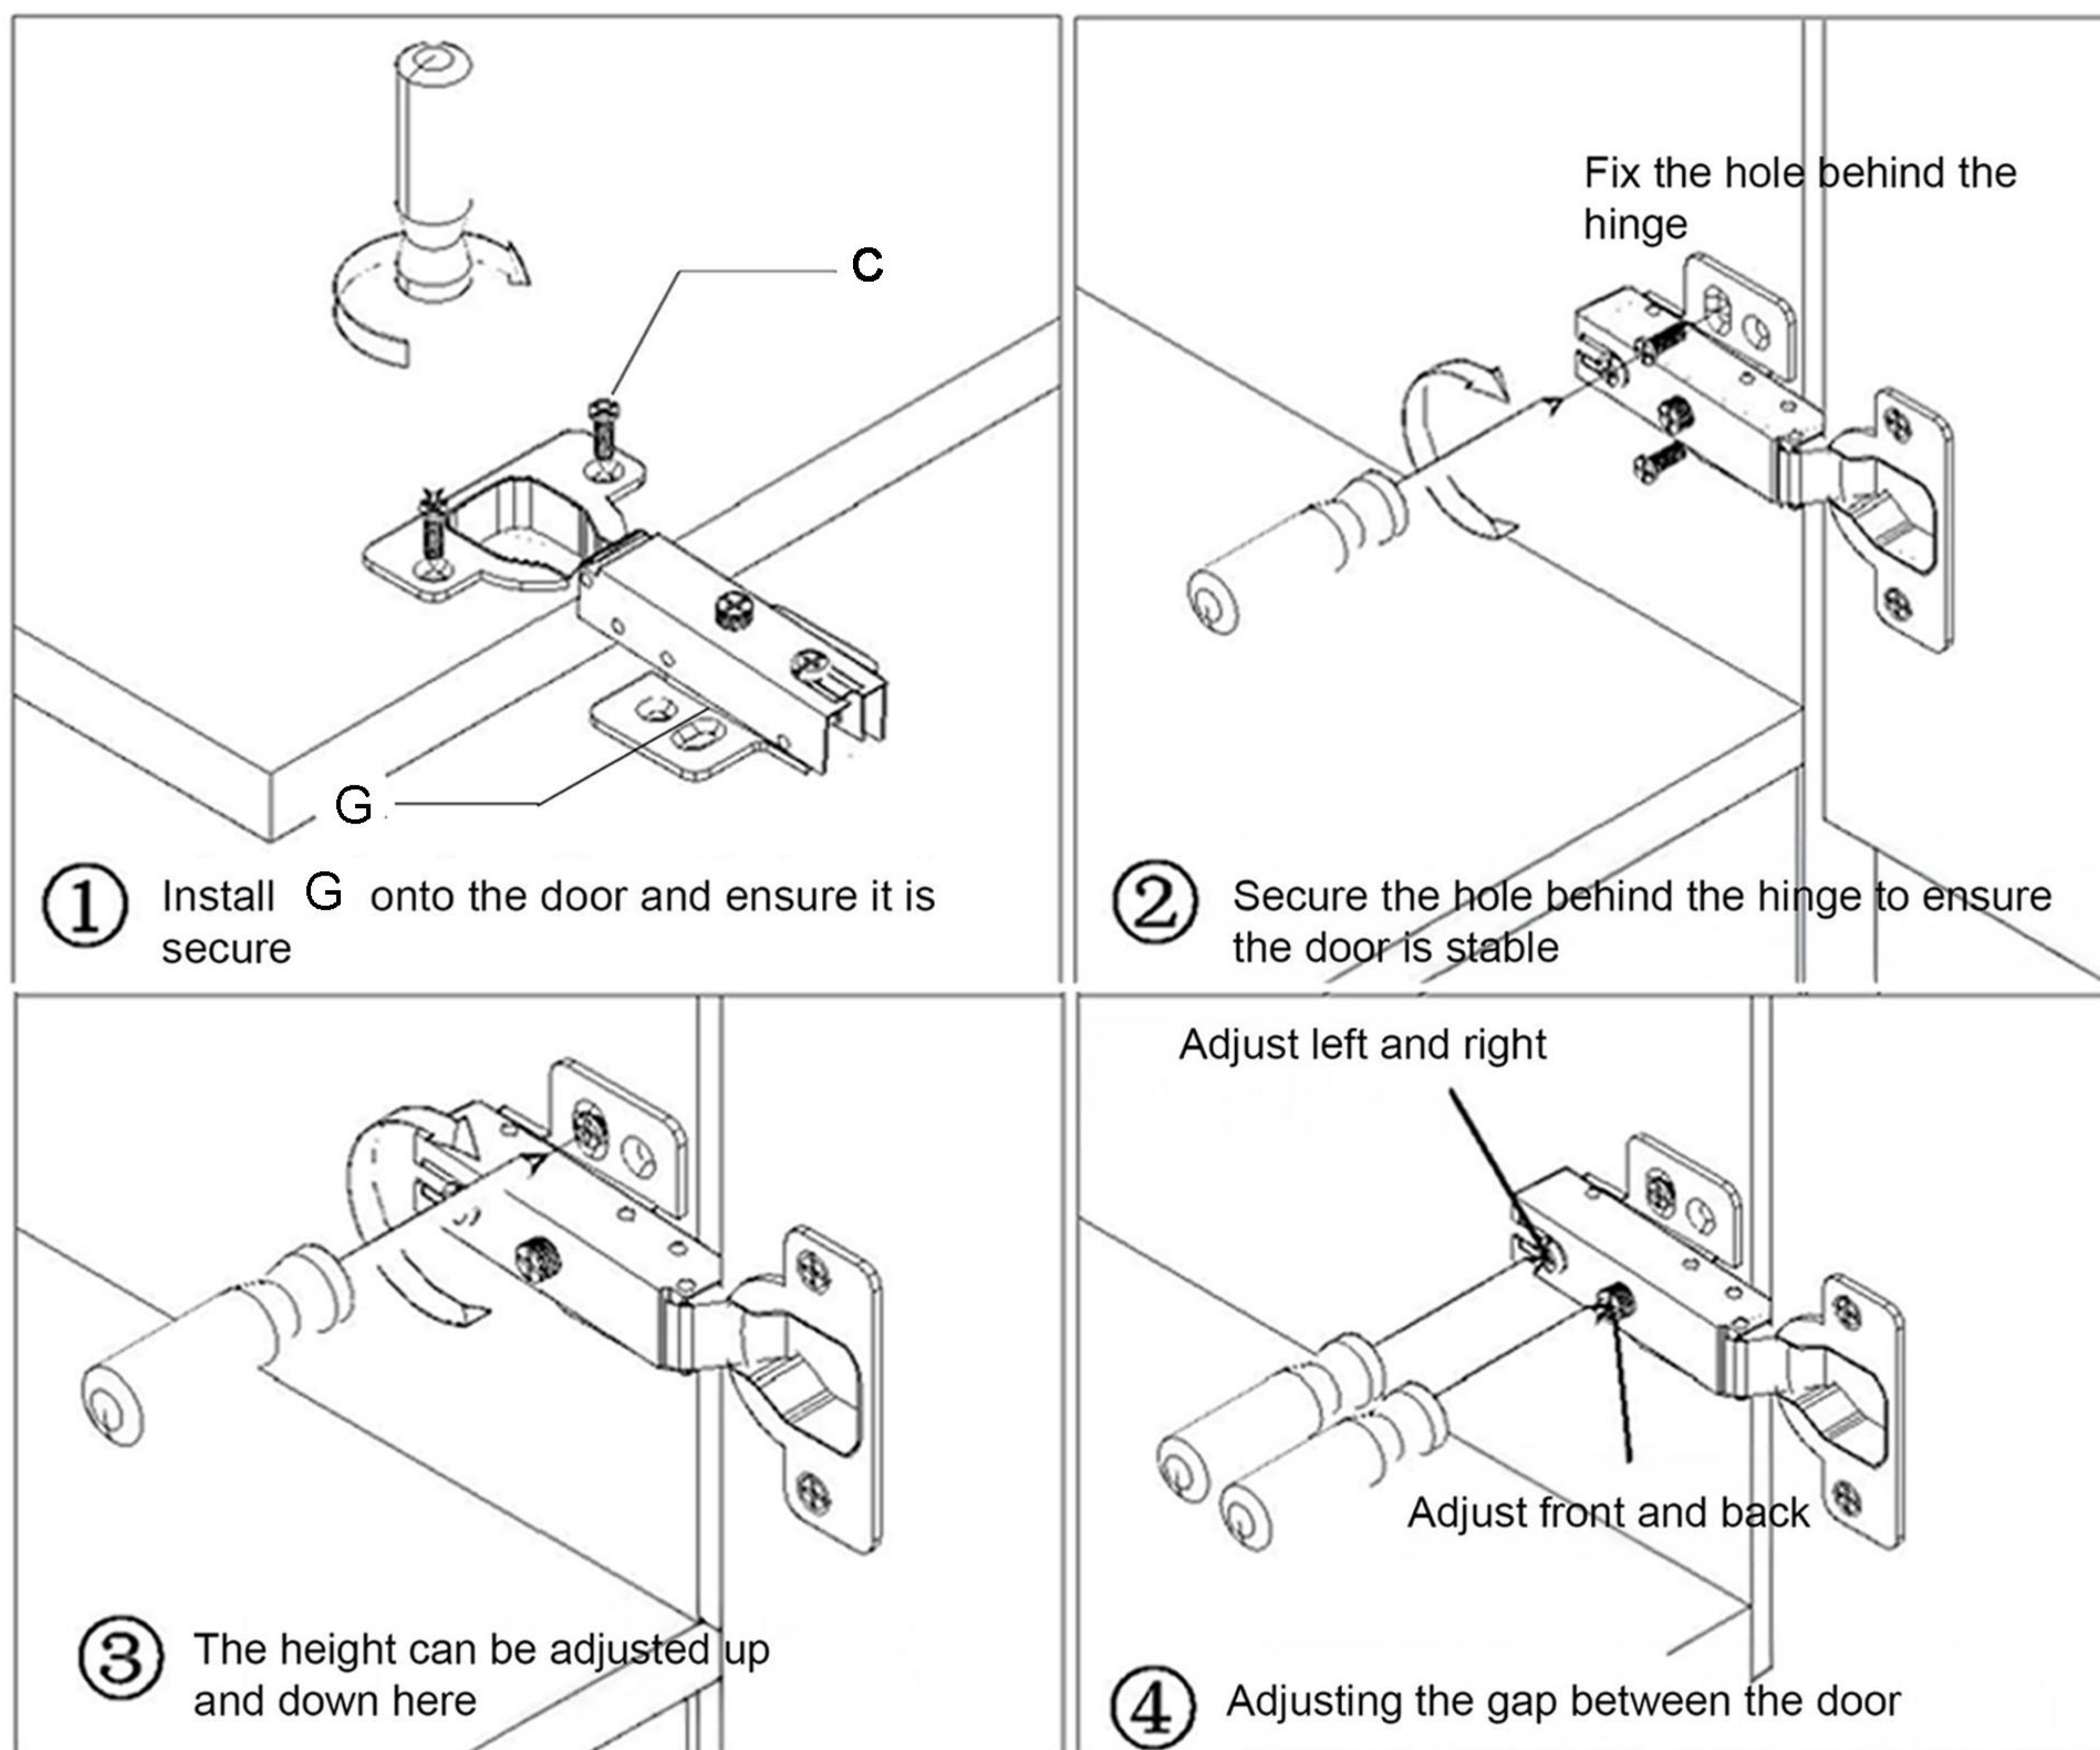




## Installation Guide: Threaded Rod, Latch, Pre-drilled Hole

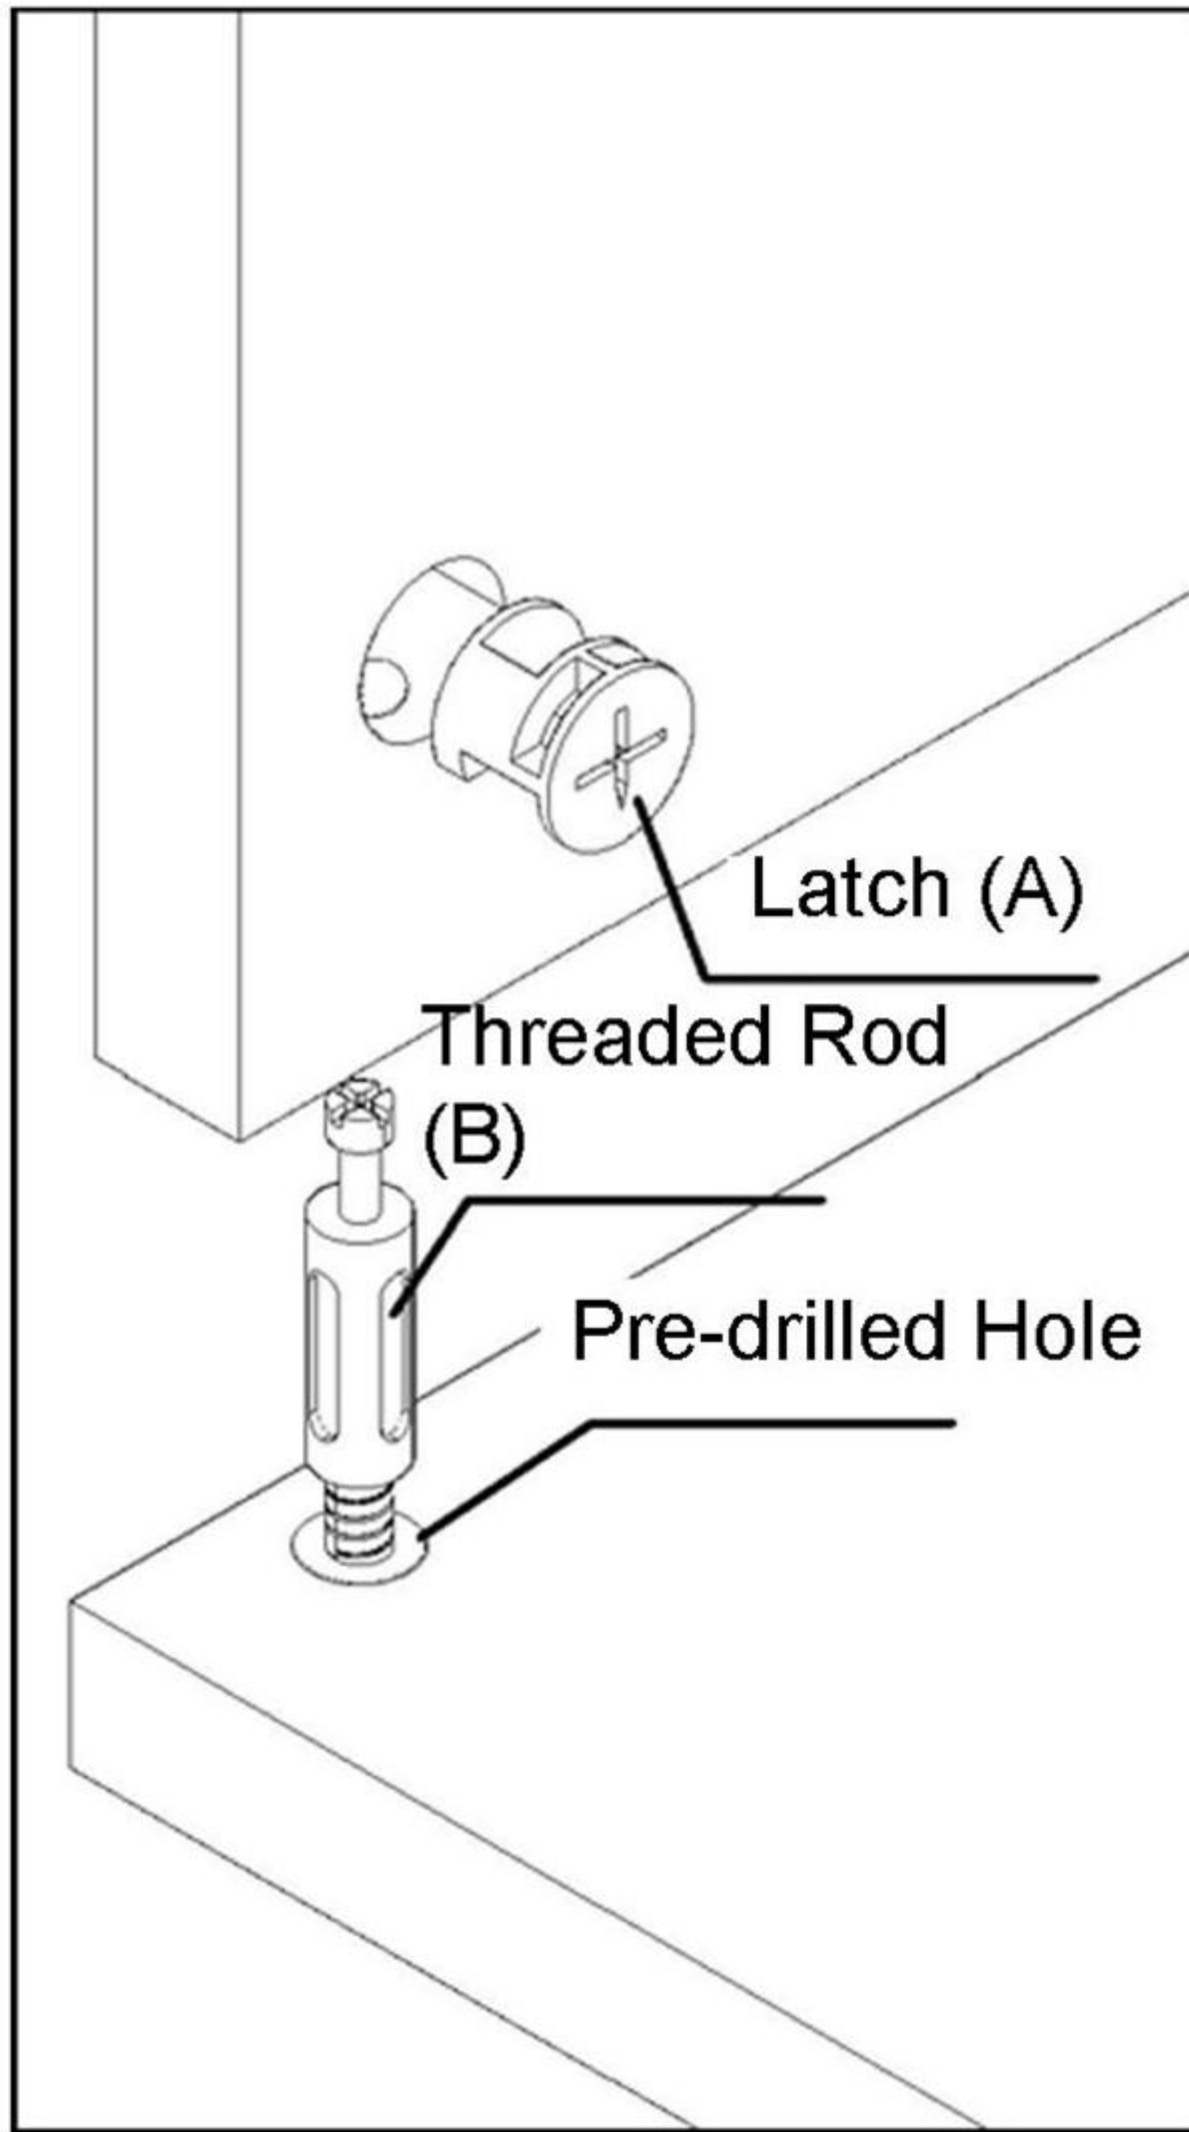


1. Screw the B (Threaded Rod) into the Pre-drilled Hole
2. Insert the installed A into the corresponding hole of the other piece. Press A (Latch) into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.




# Step 1

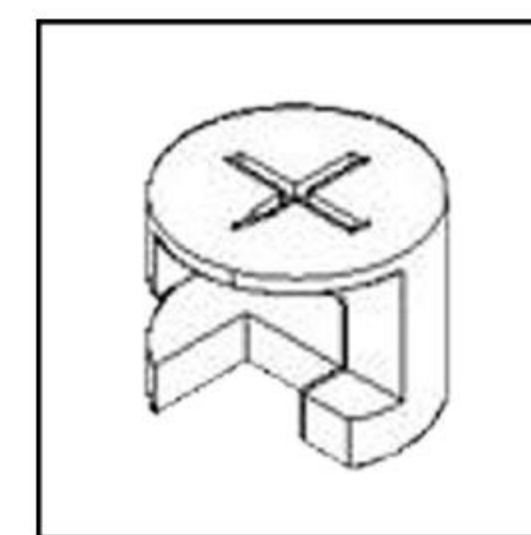

A

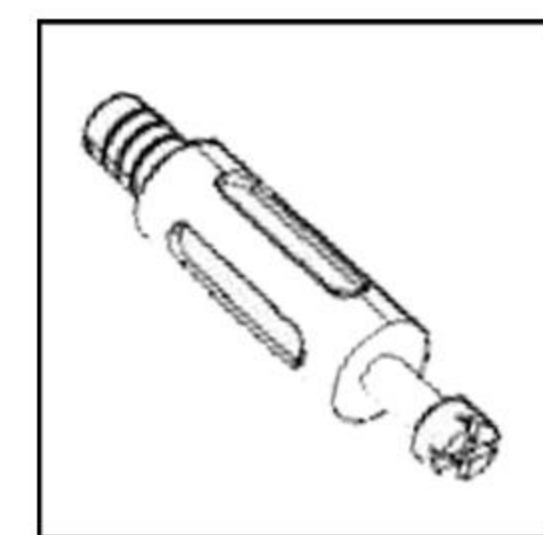

B

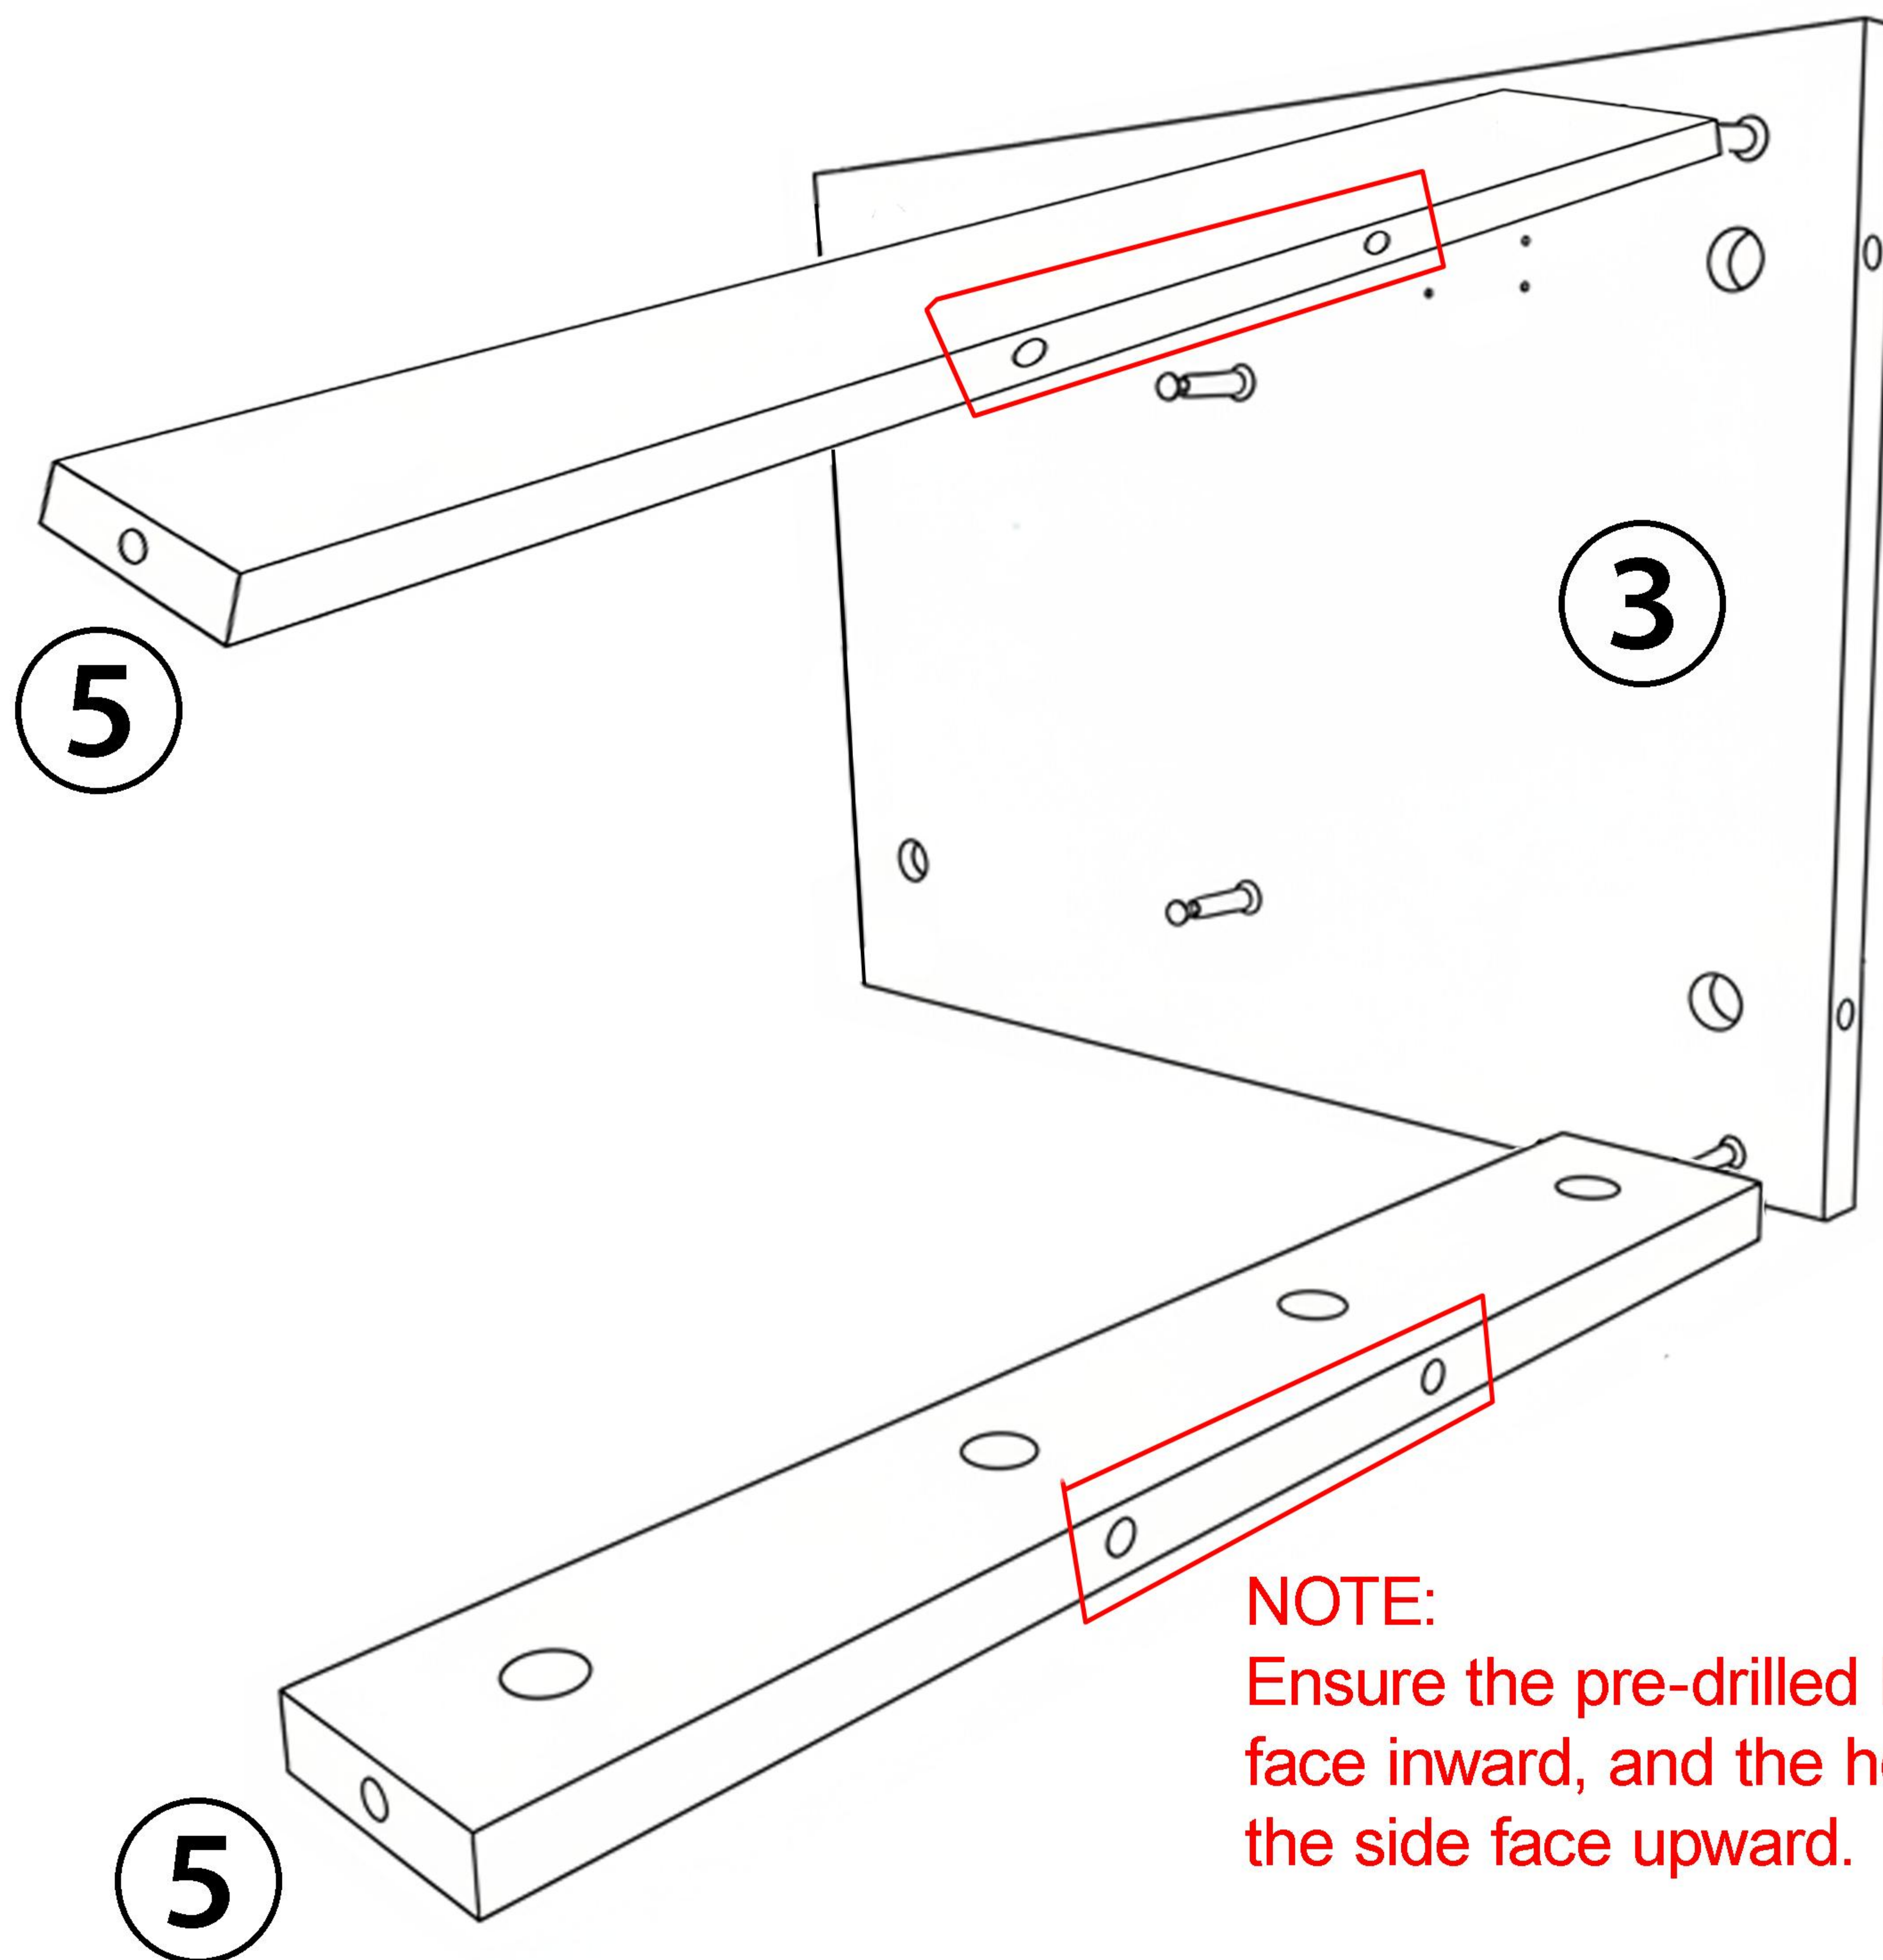


**NOTE:**  
Ensure the pre-drilled holes  
face inward, and the holes on  
the side face upward.

Install B into all white pre-installed holes on panel 3 and 5. Connect them and using A to lock.




# Step 2

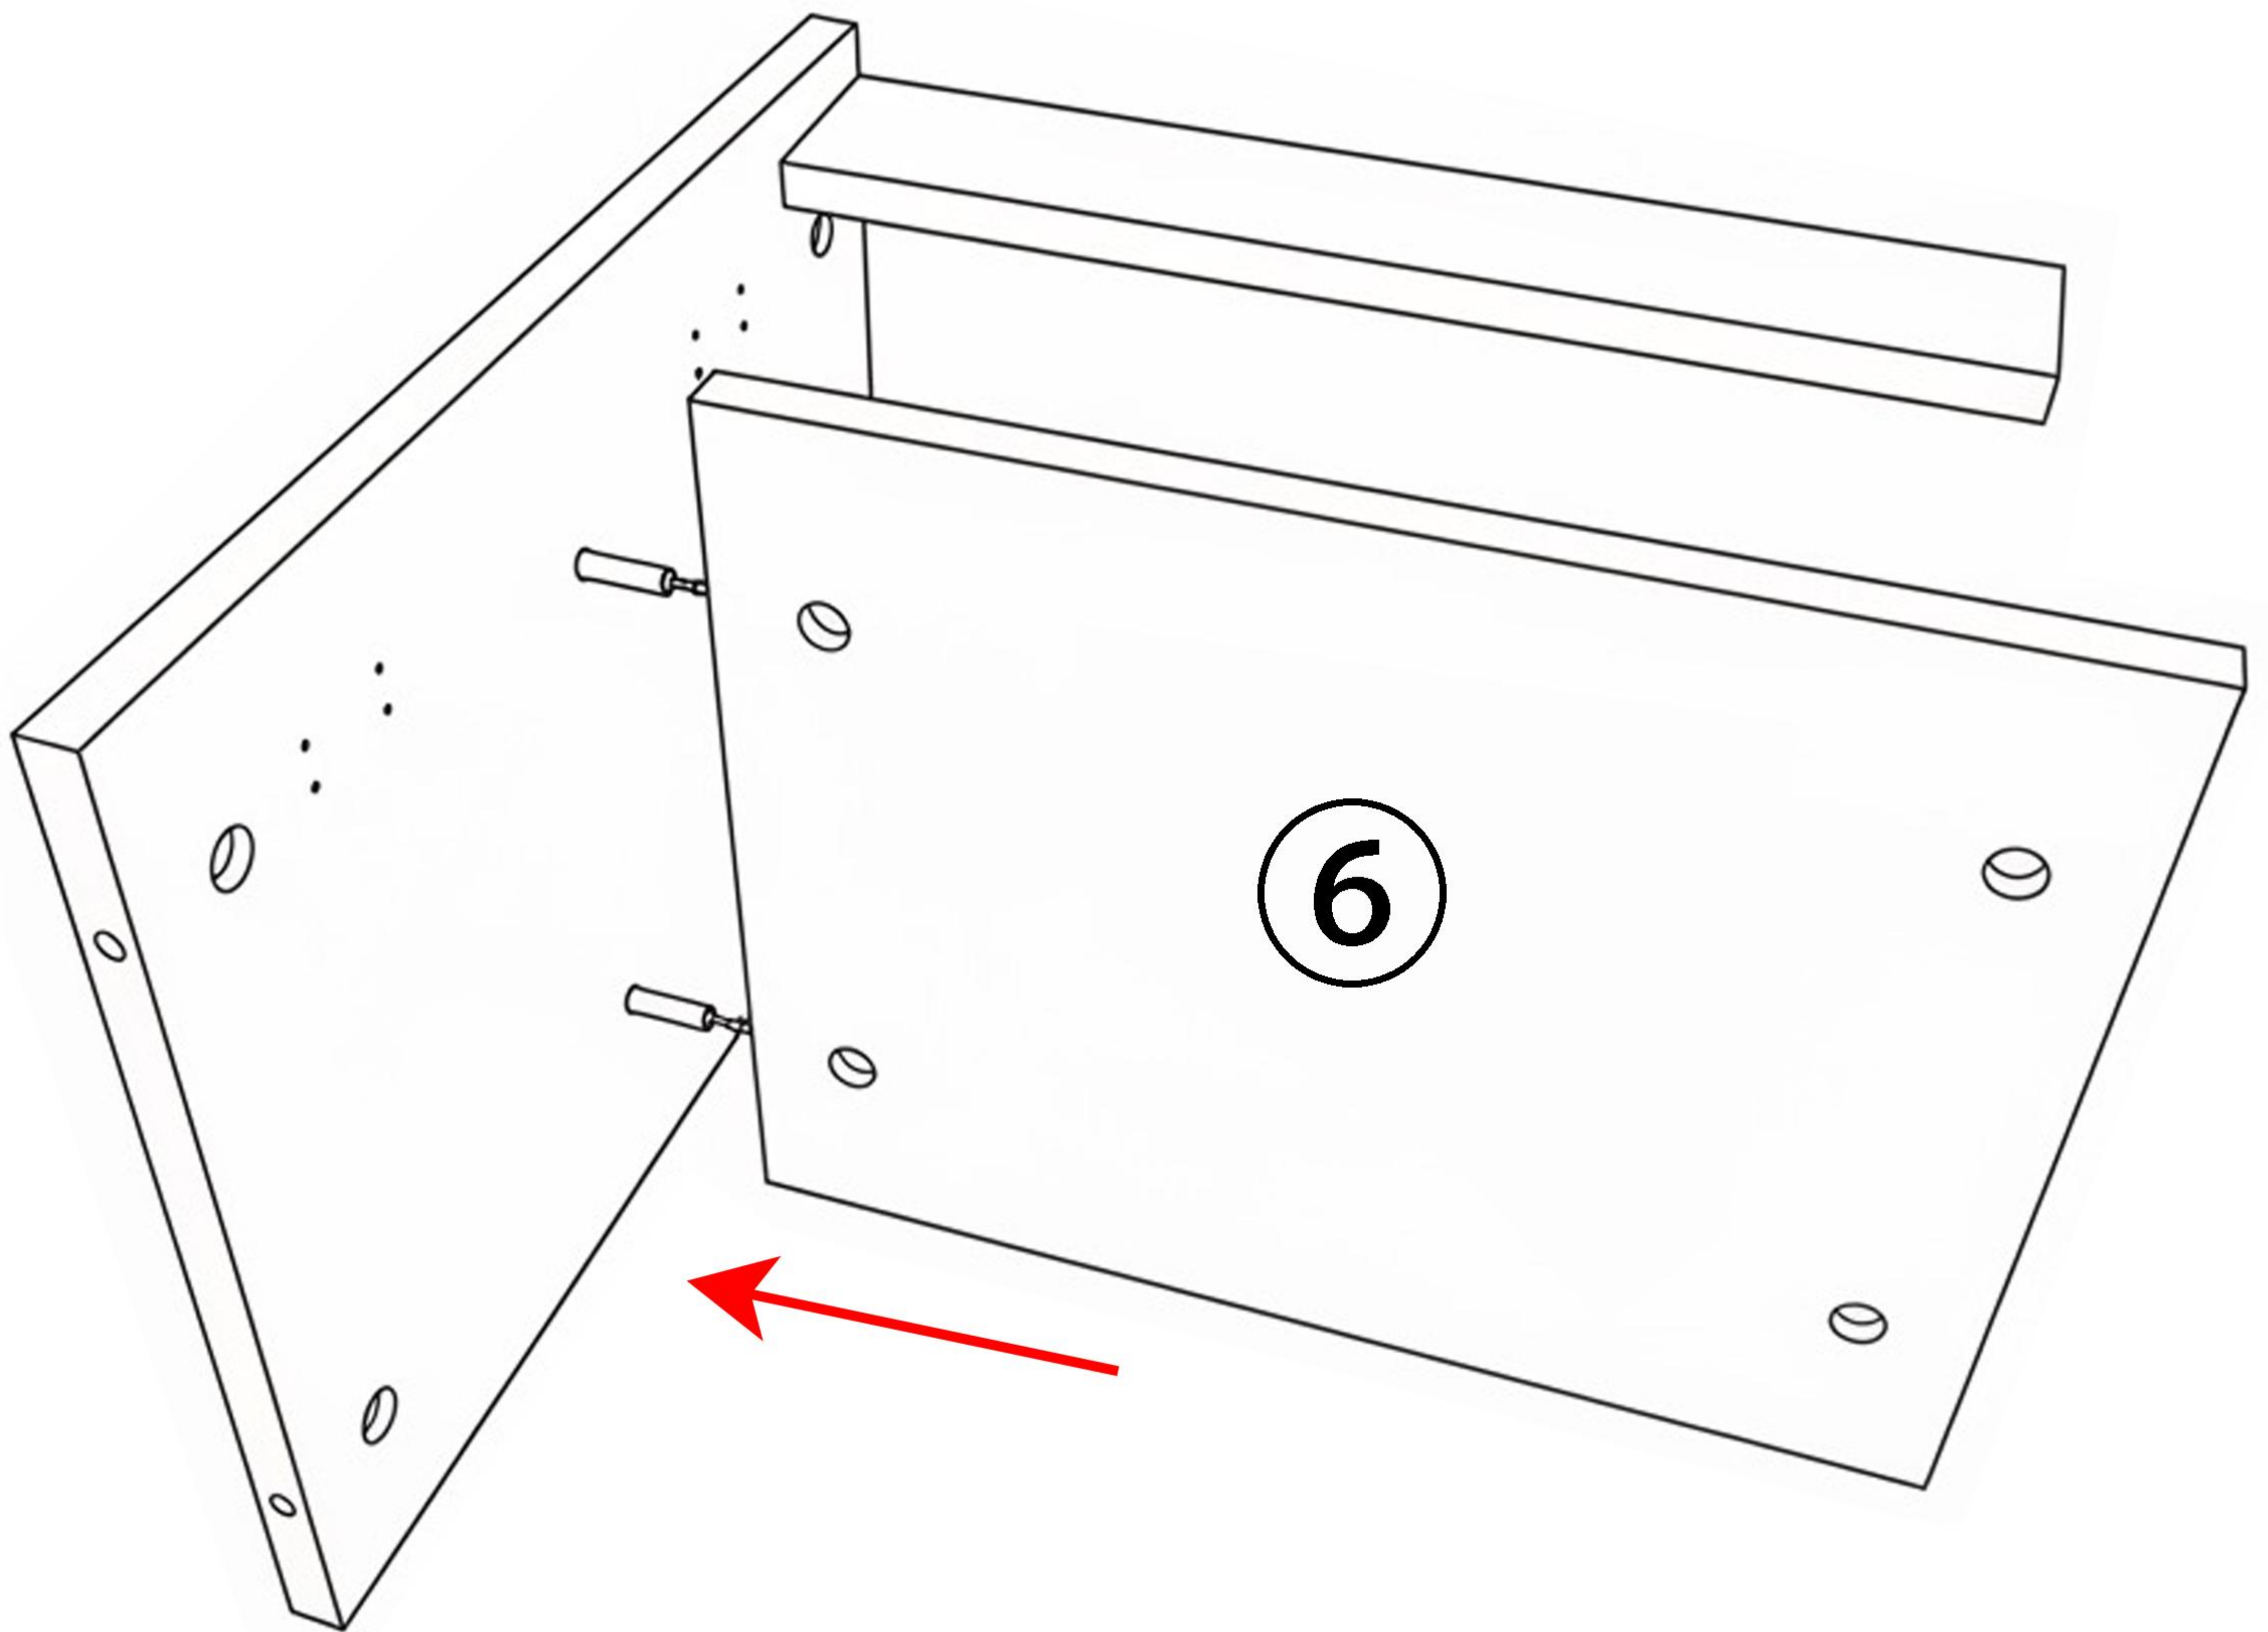

Using A to lock


# Step 3

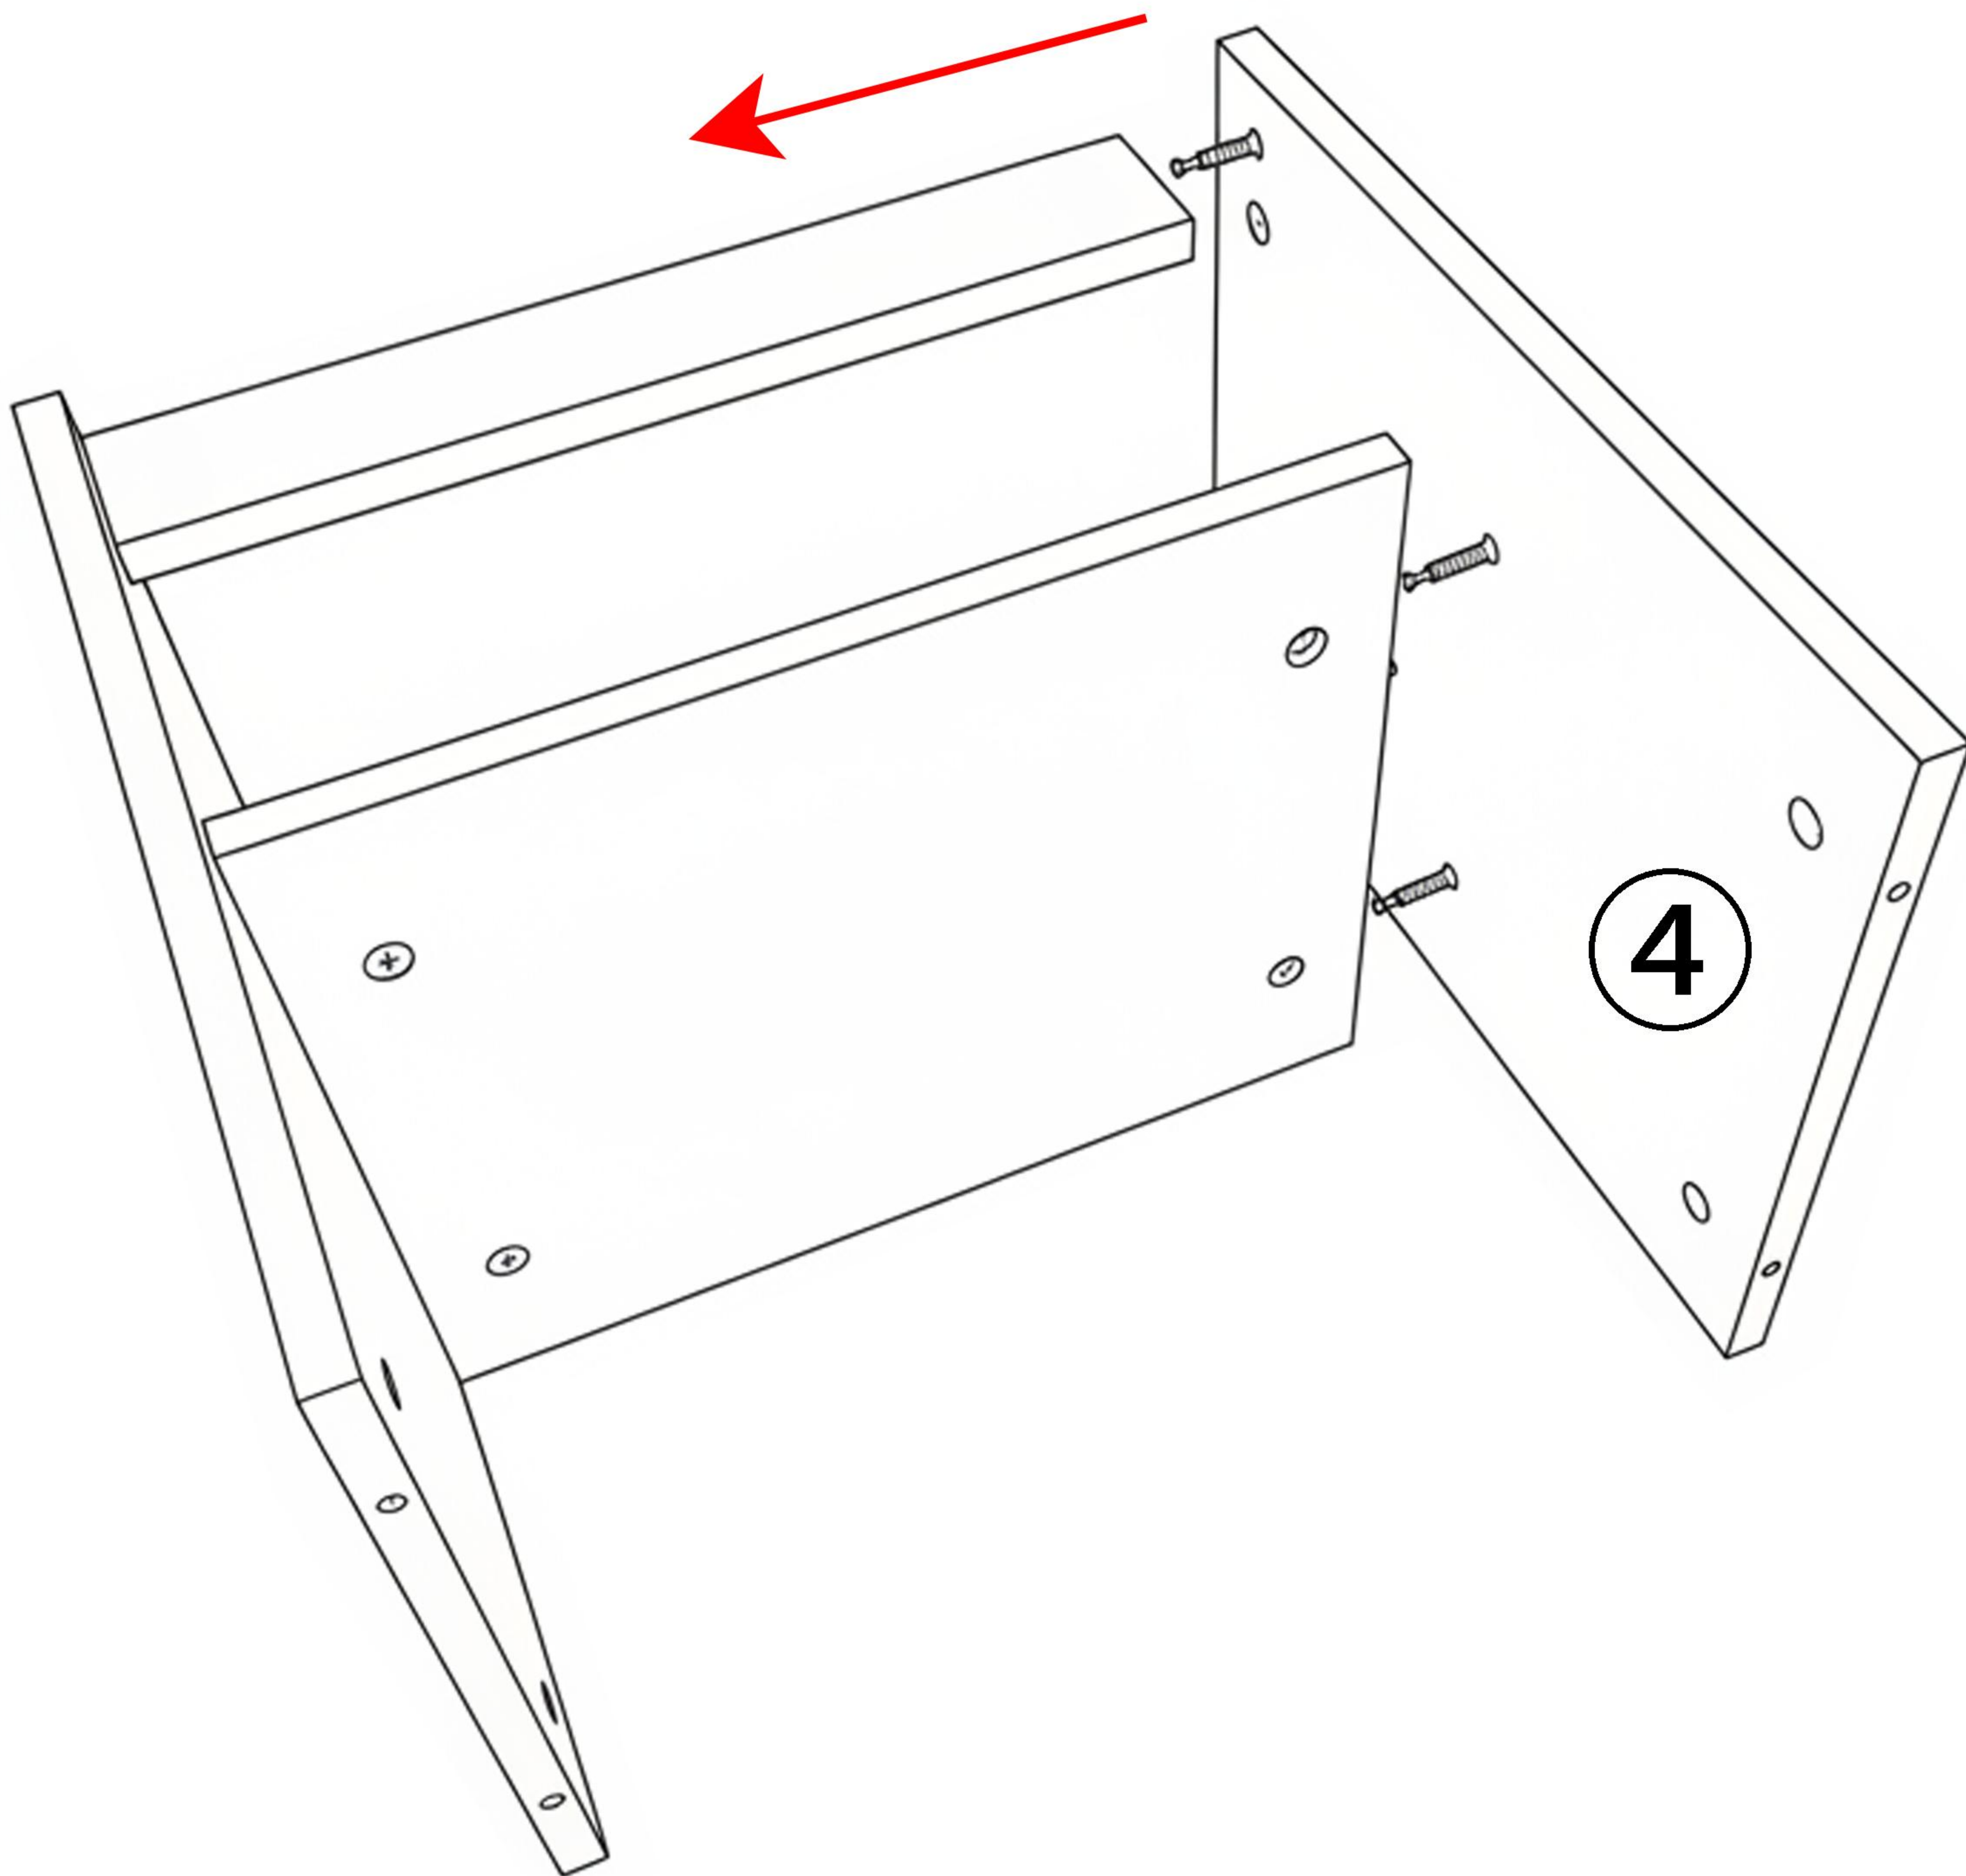



Using A to lock




# Step 4

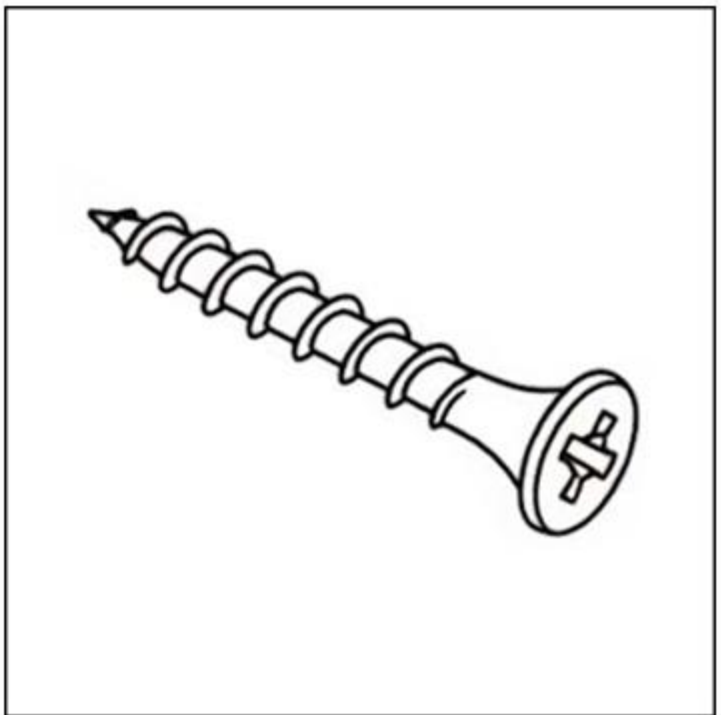

D

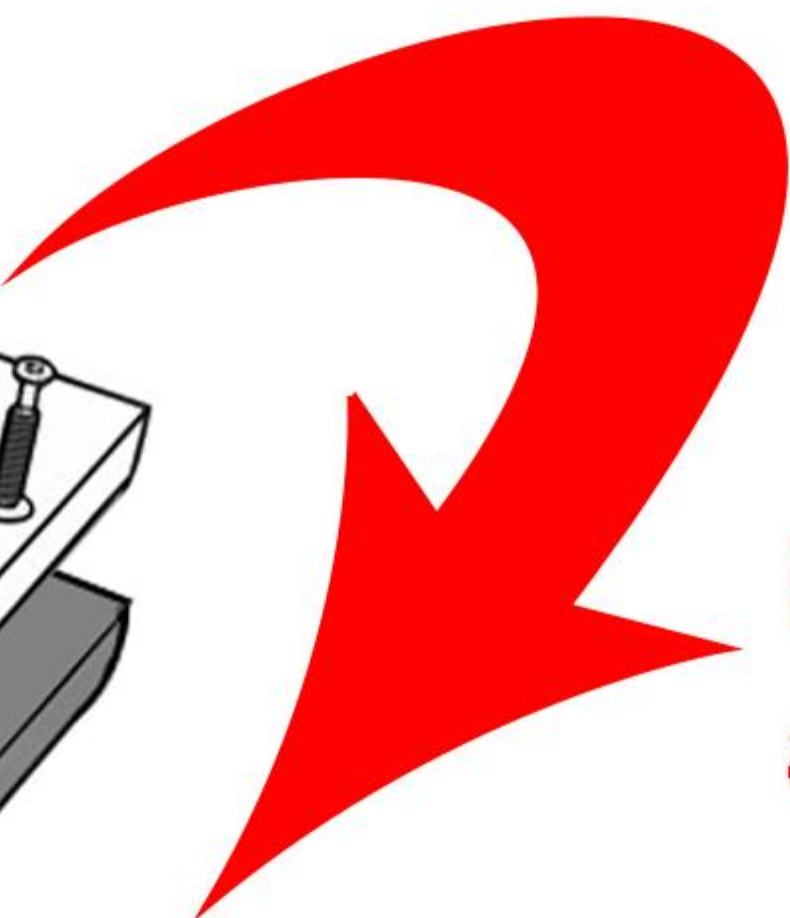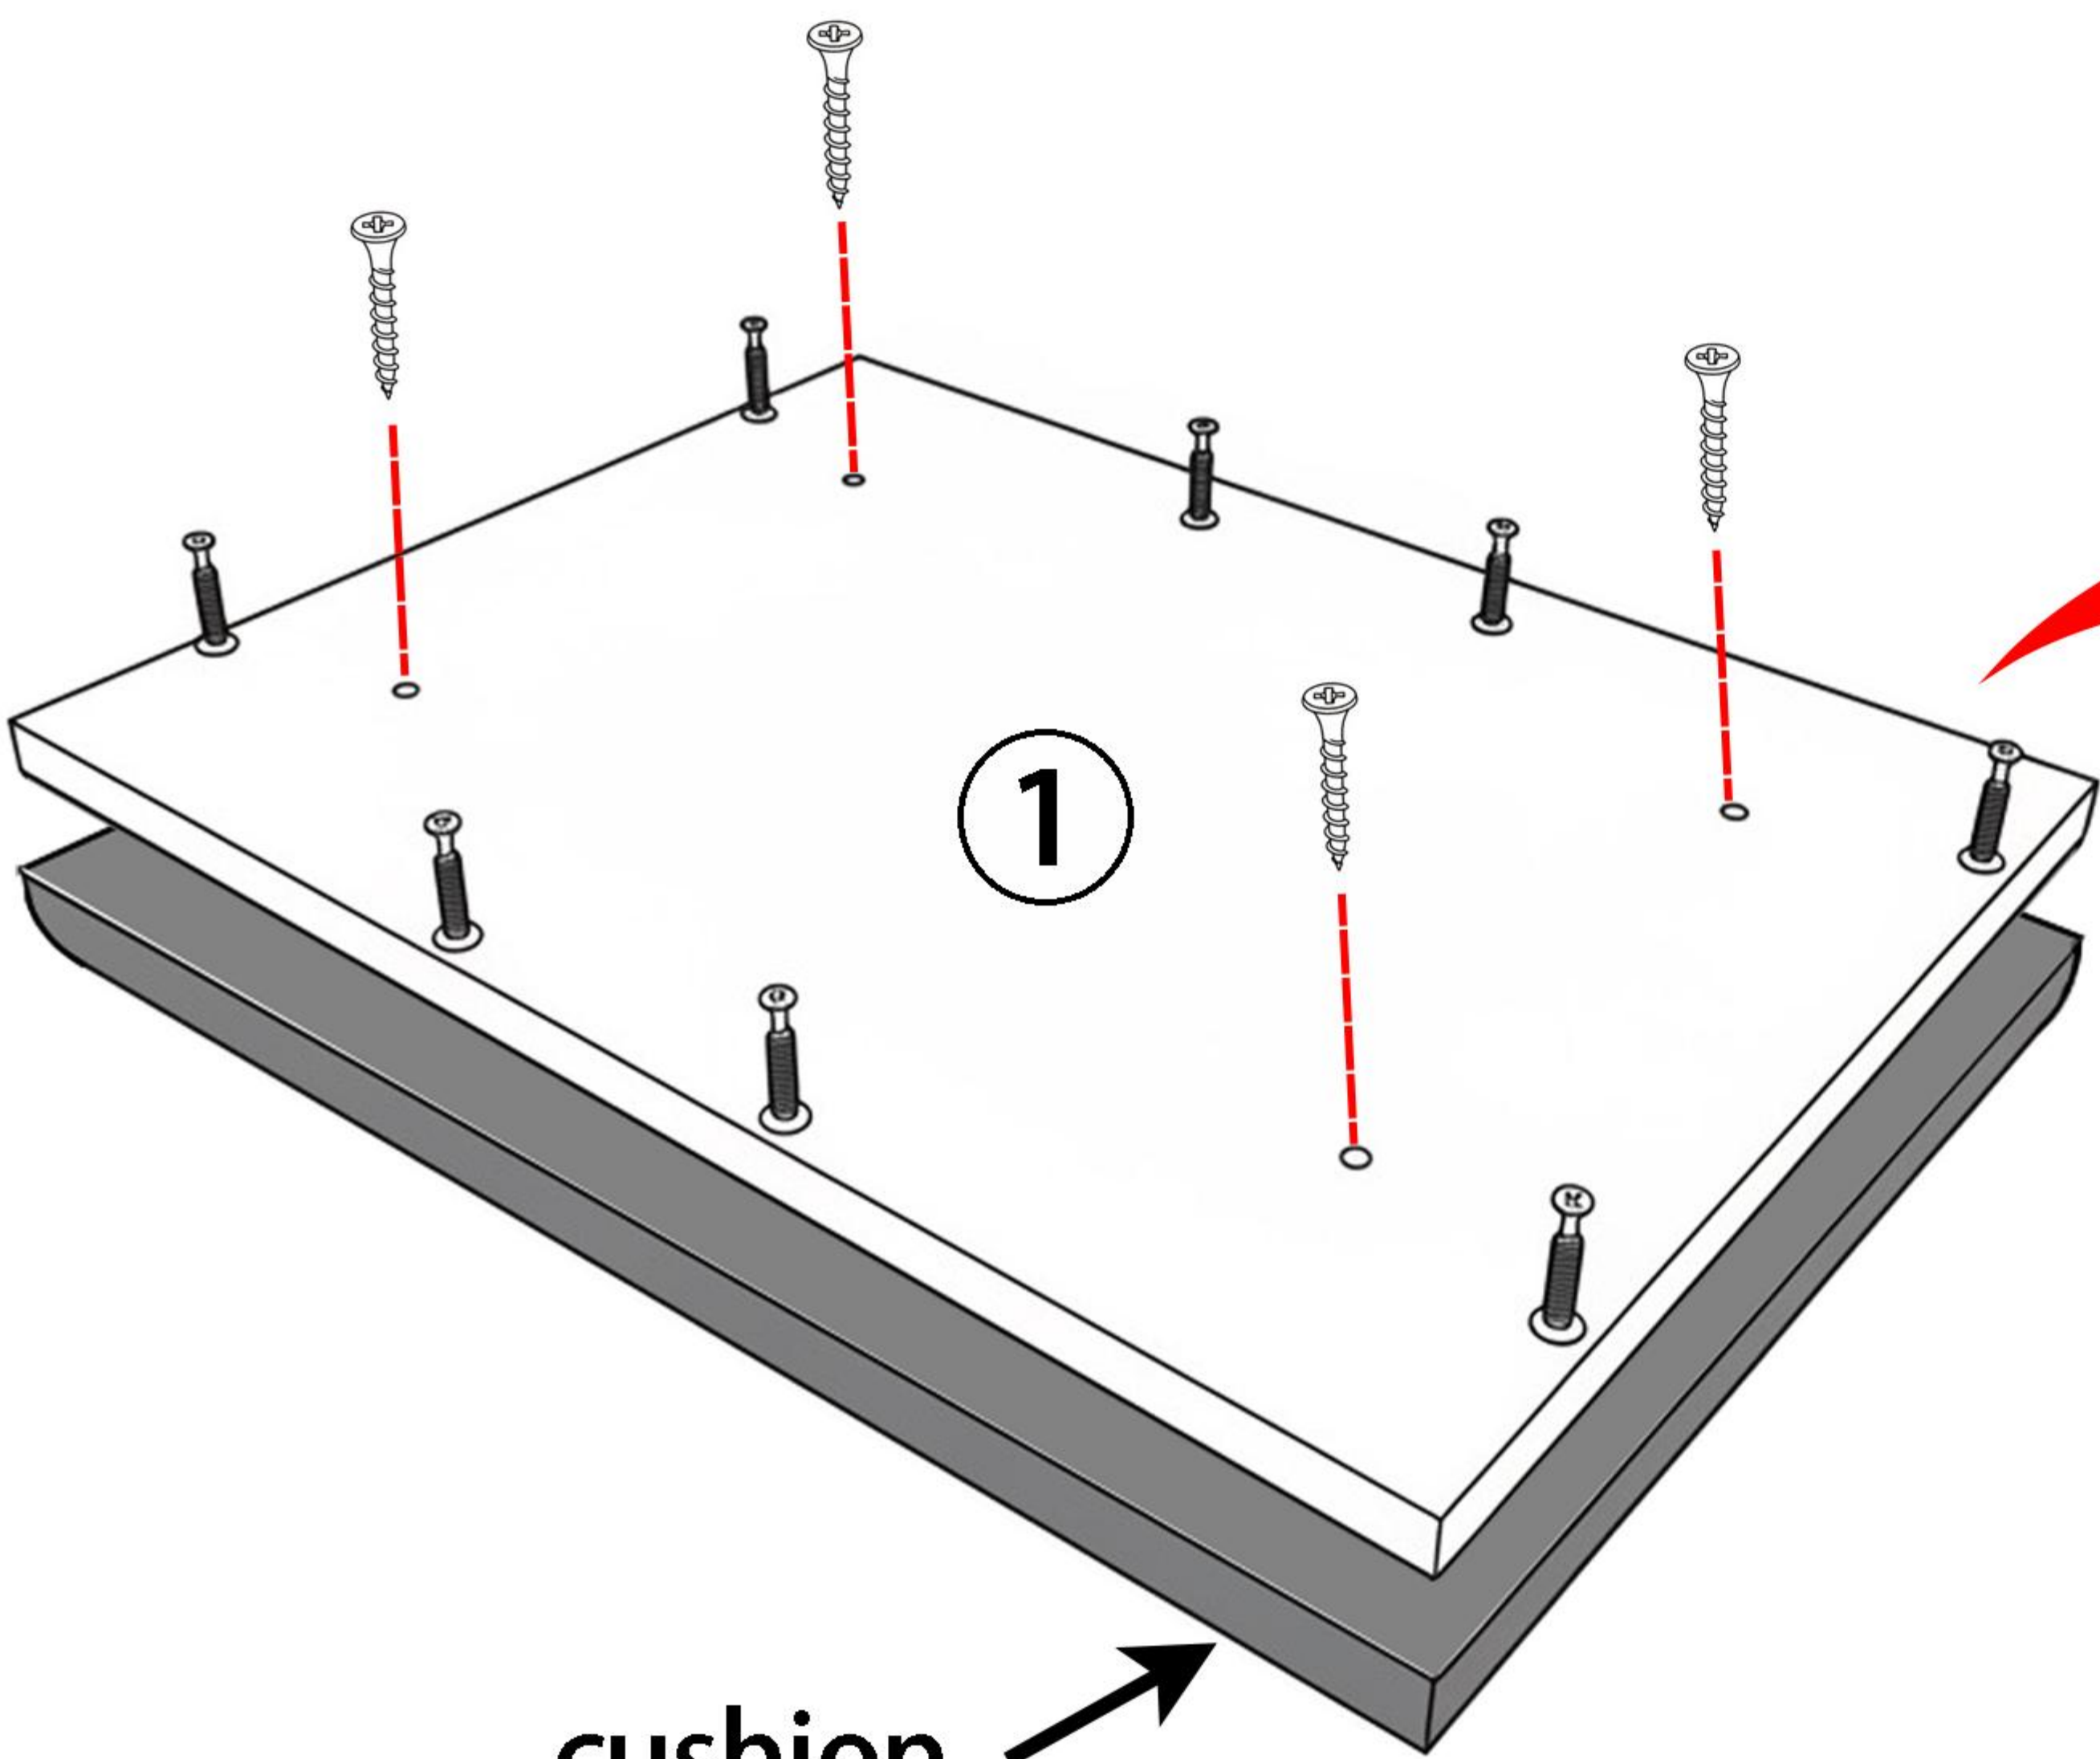


Flip the unit over  
after installing

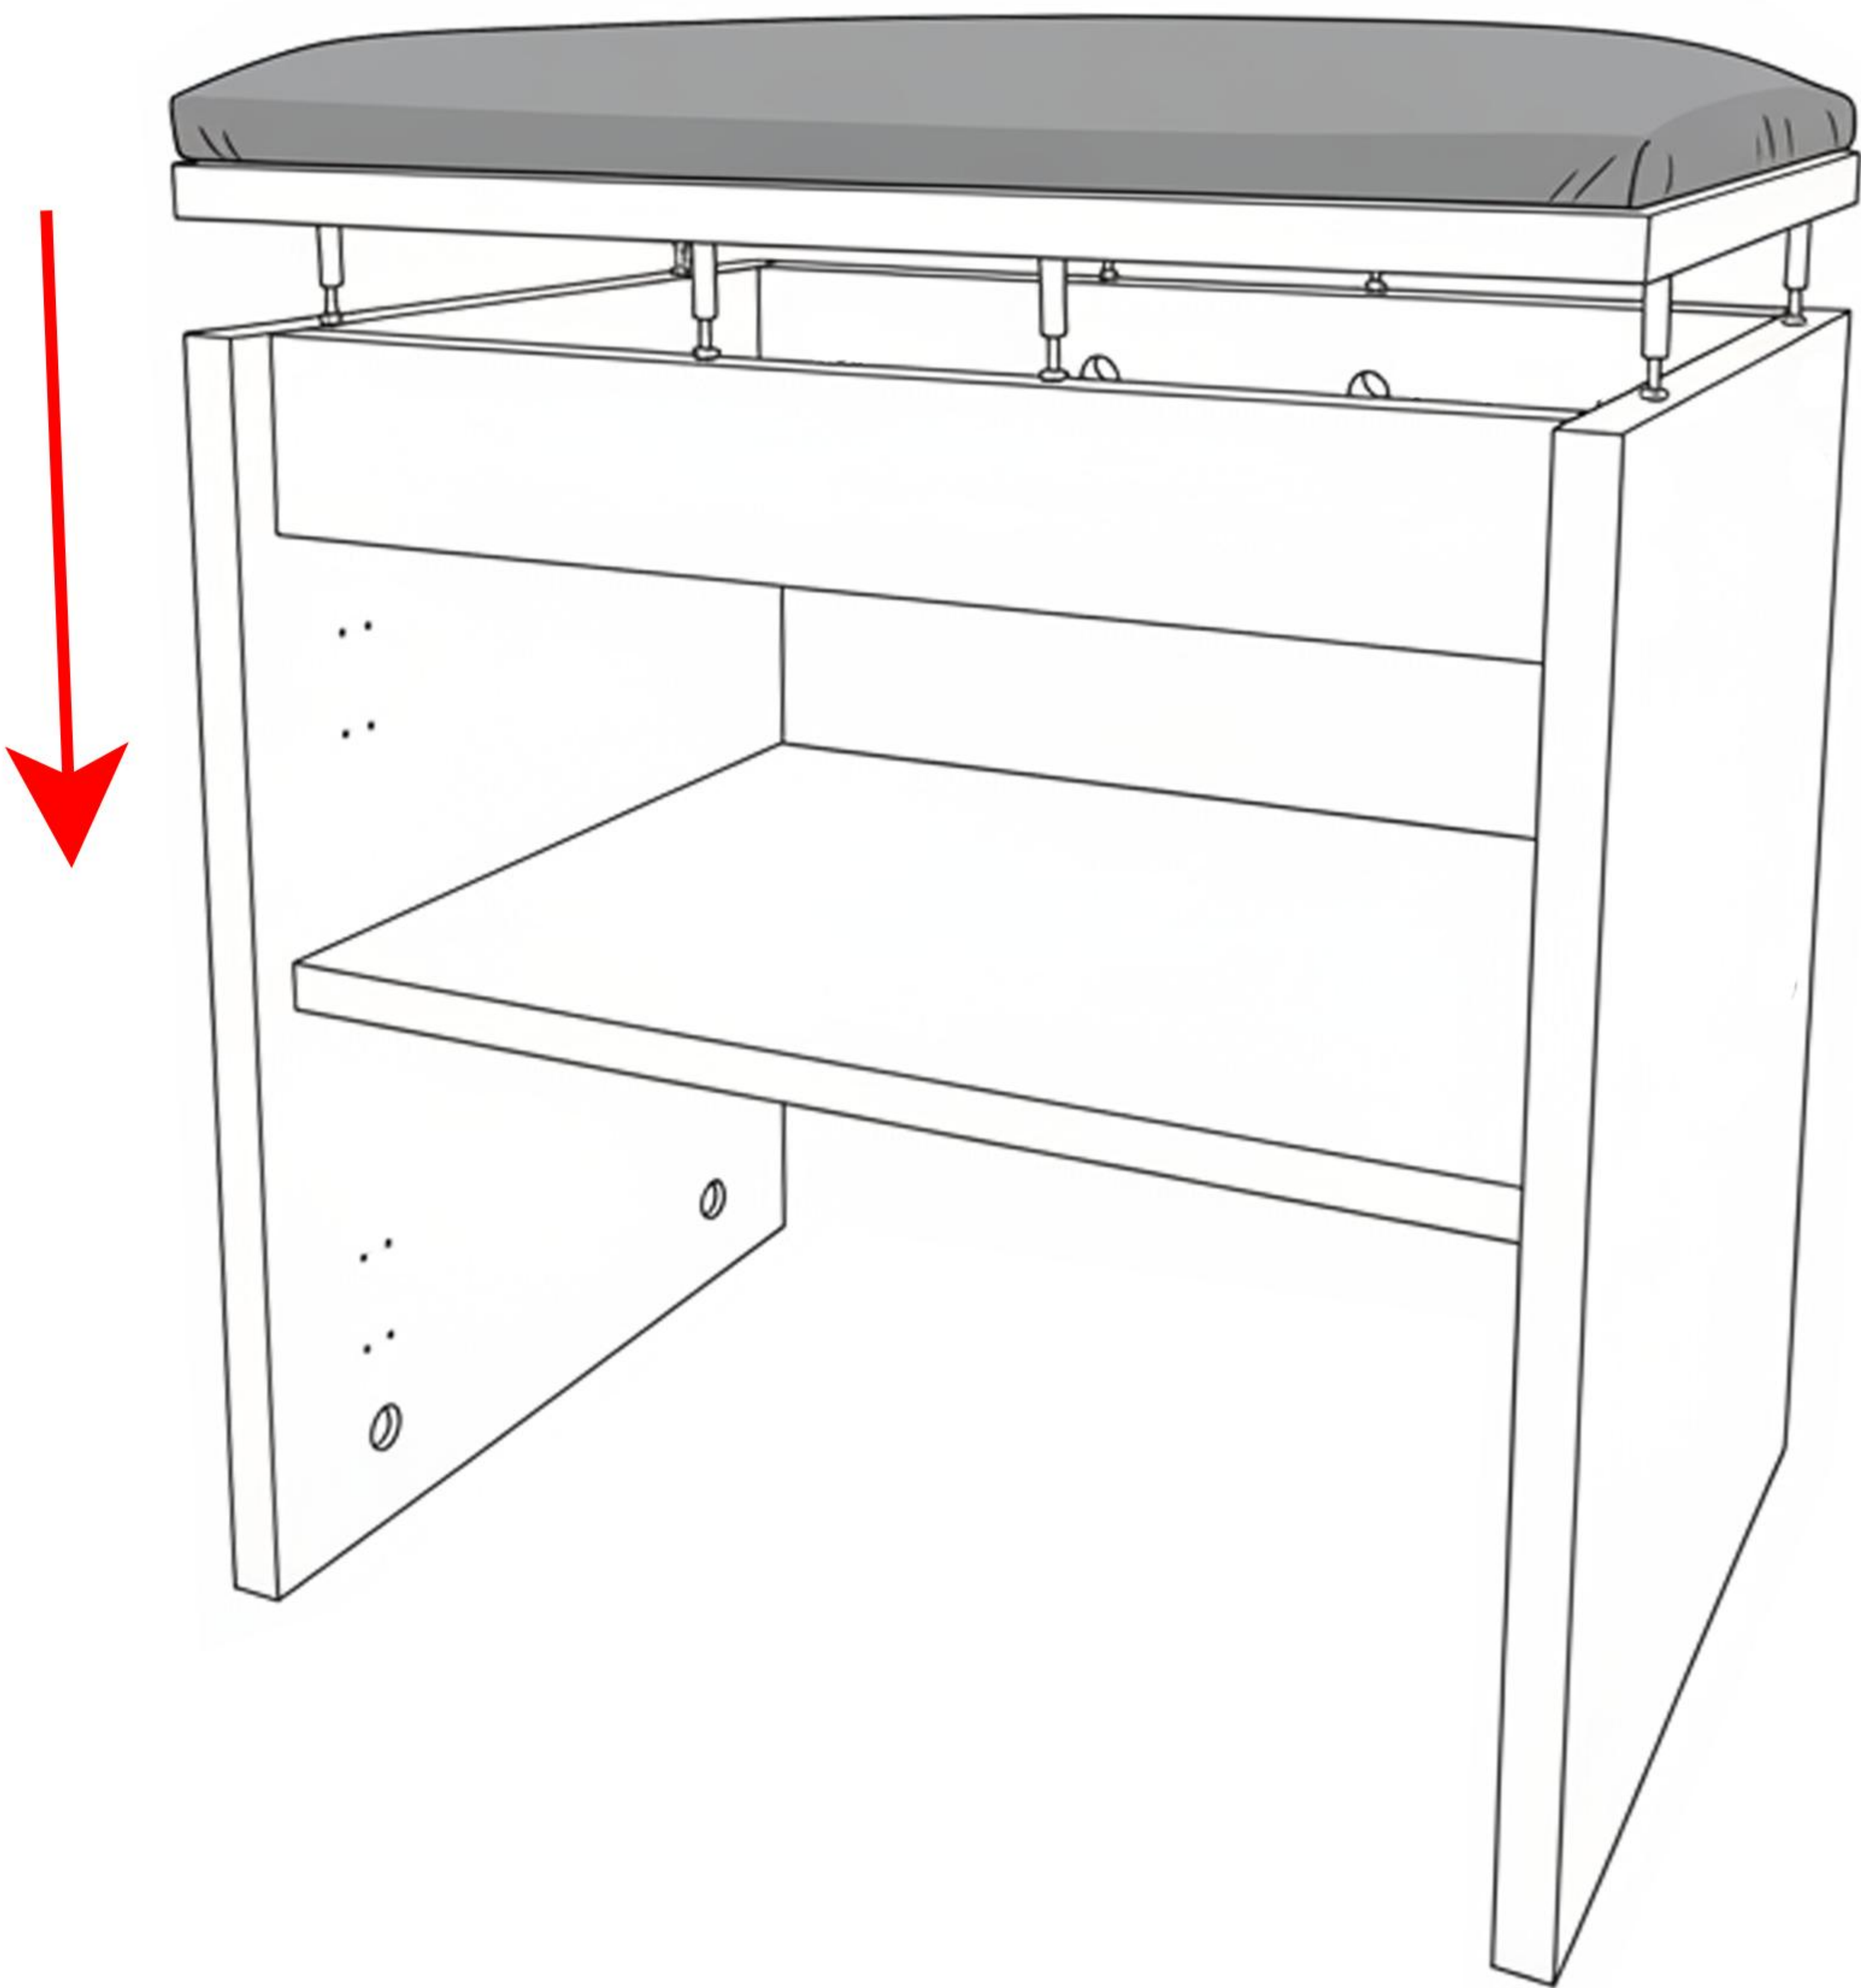



Connect the combinations, using A to lock.



# Step 5

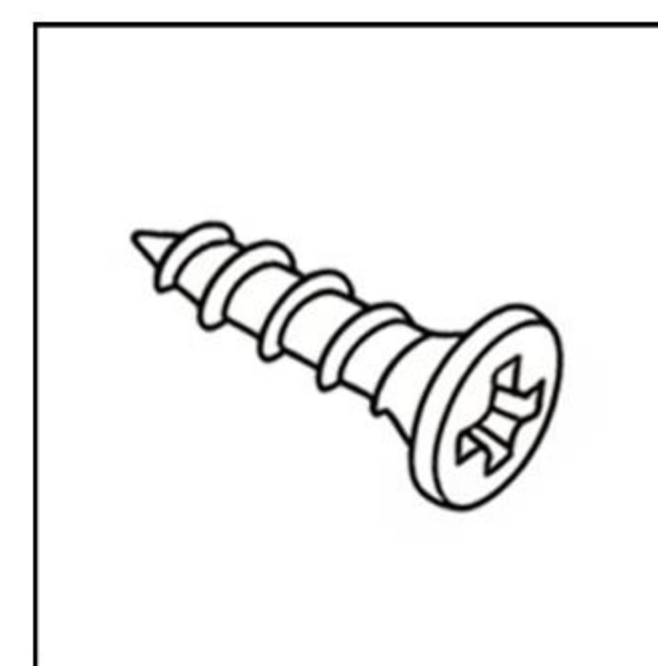


C

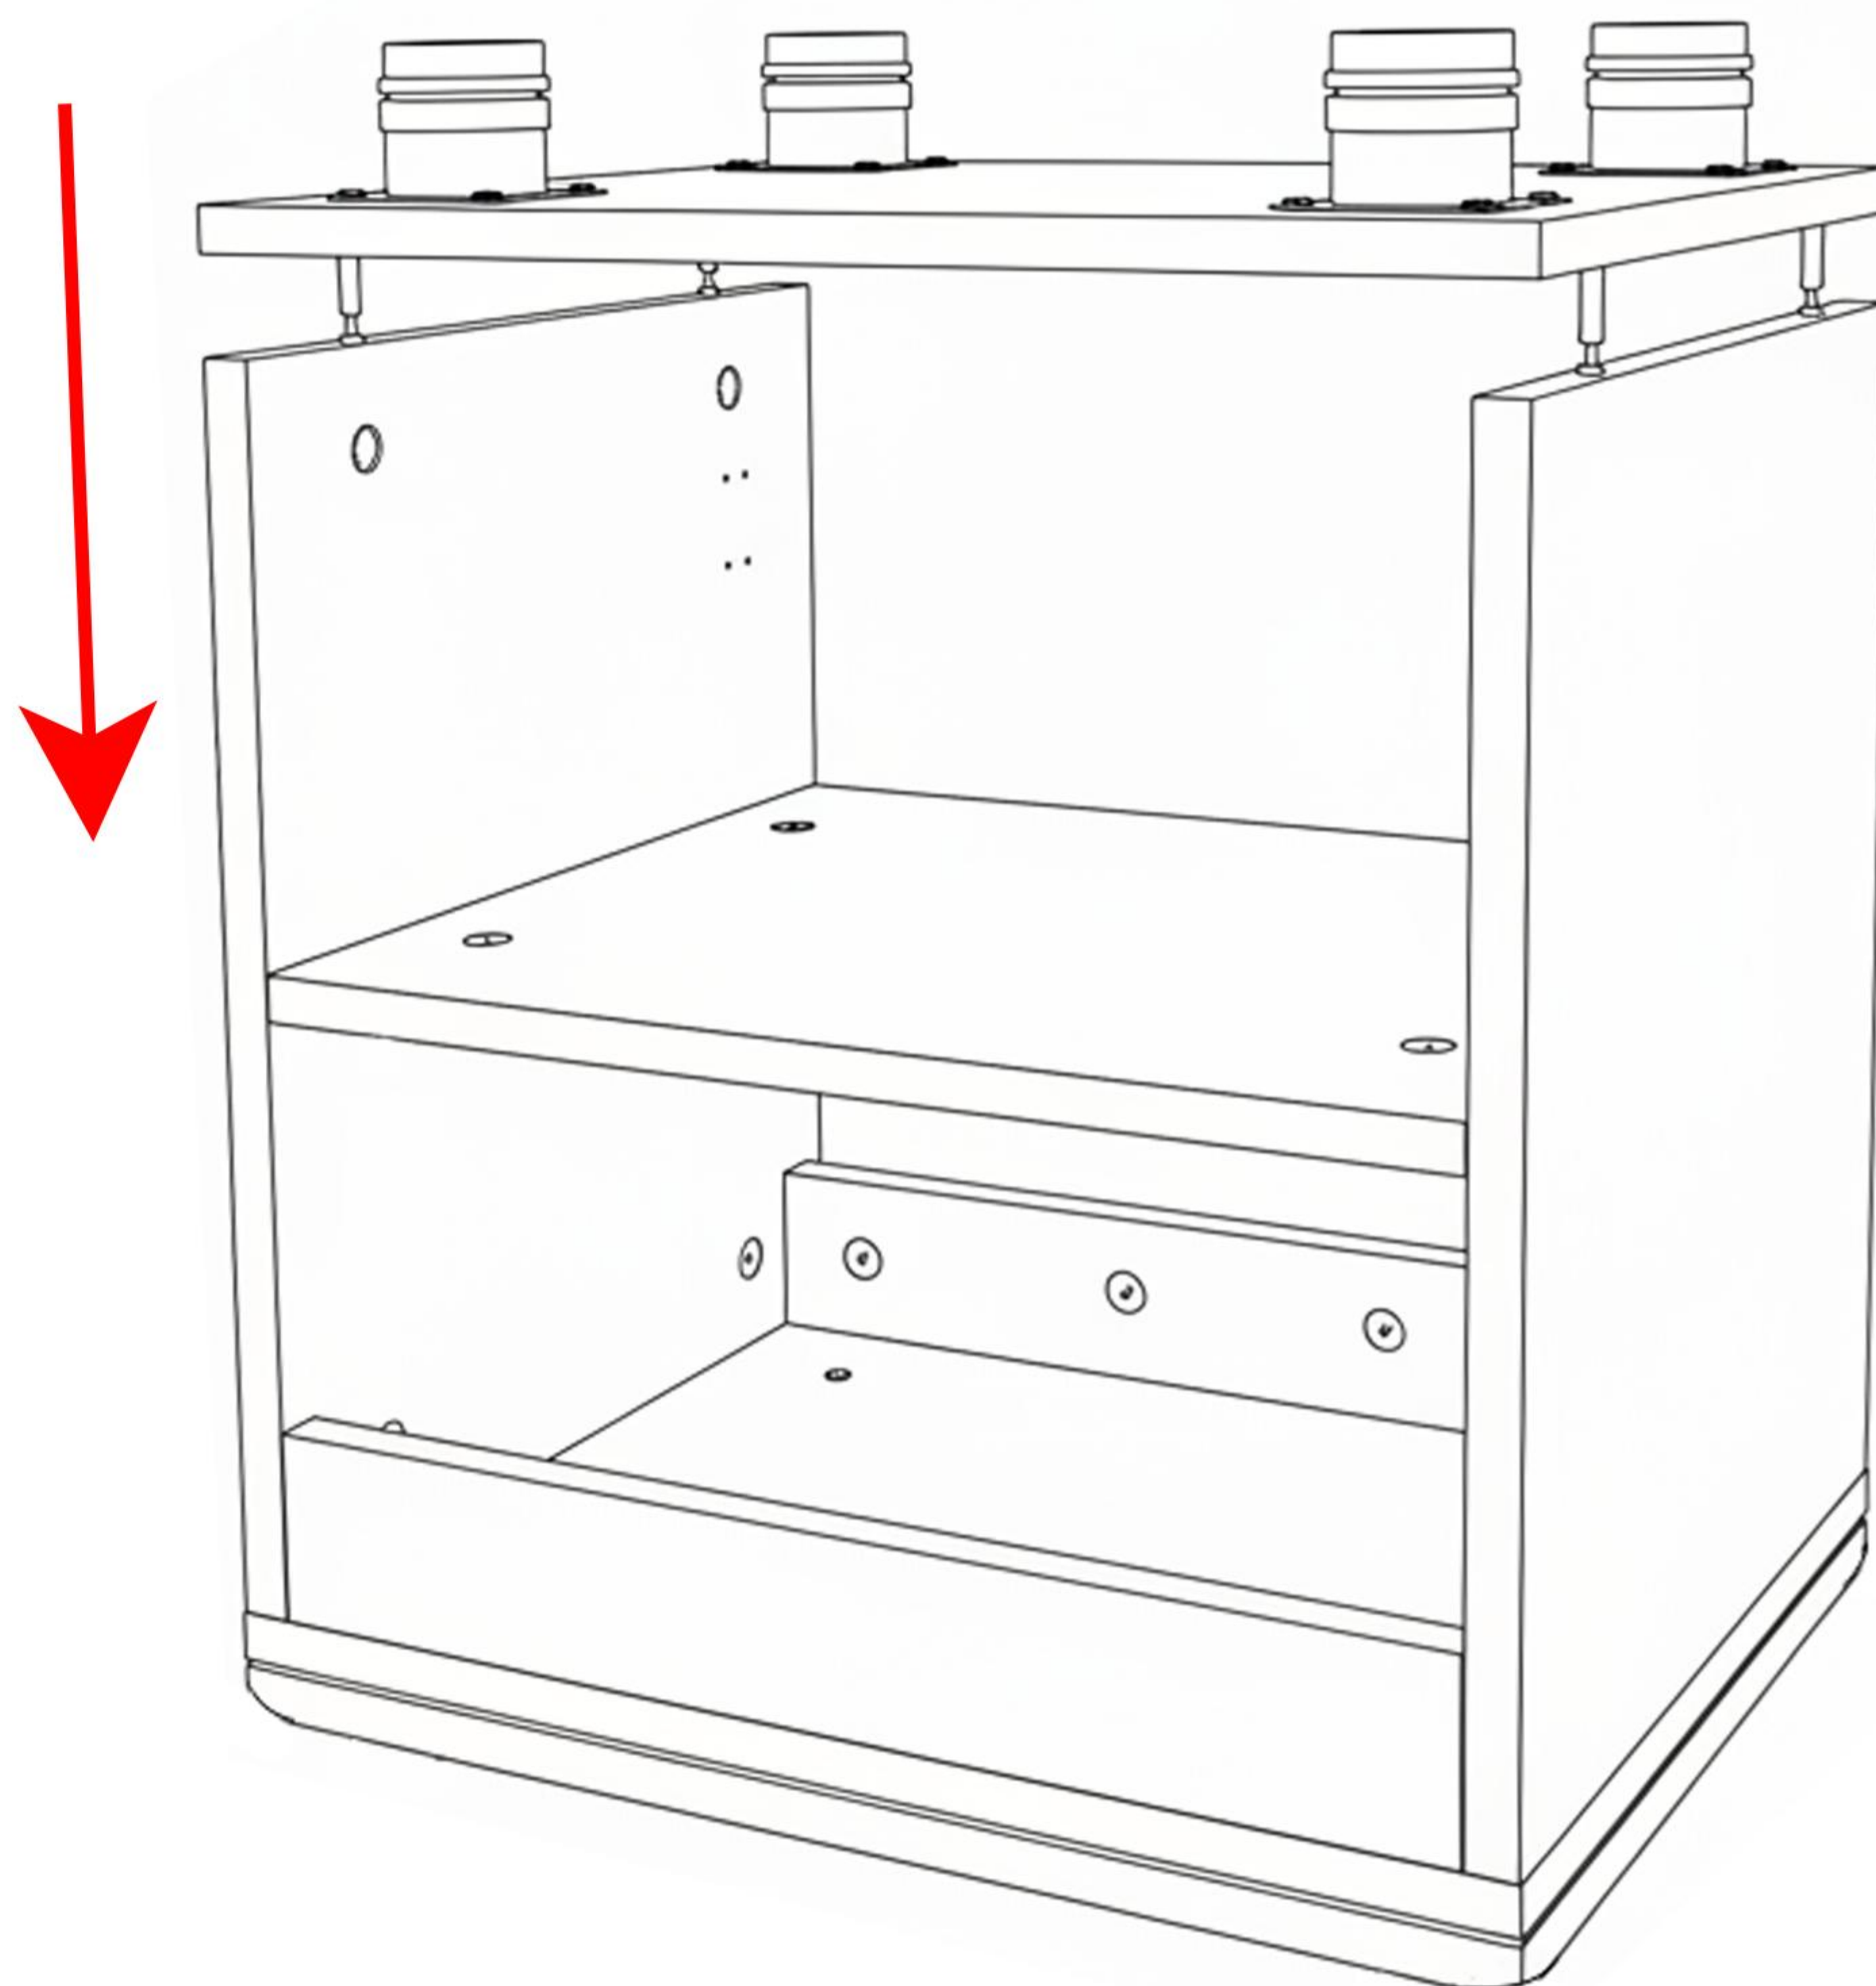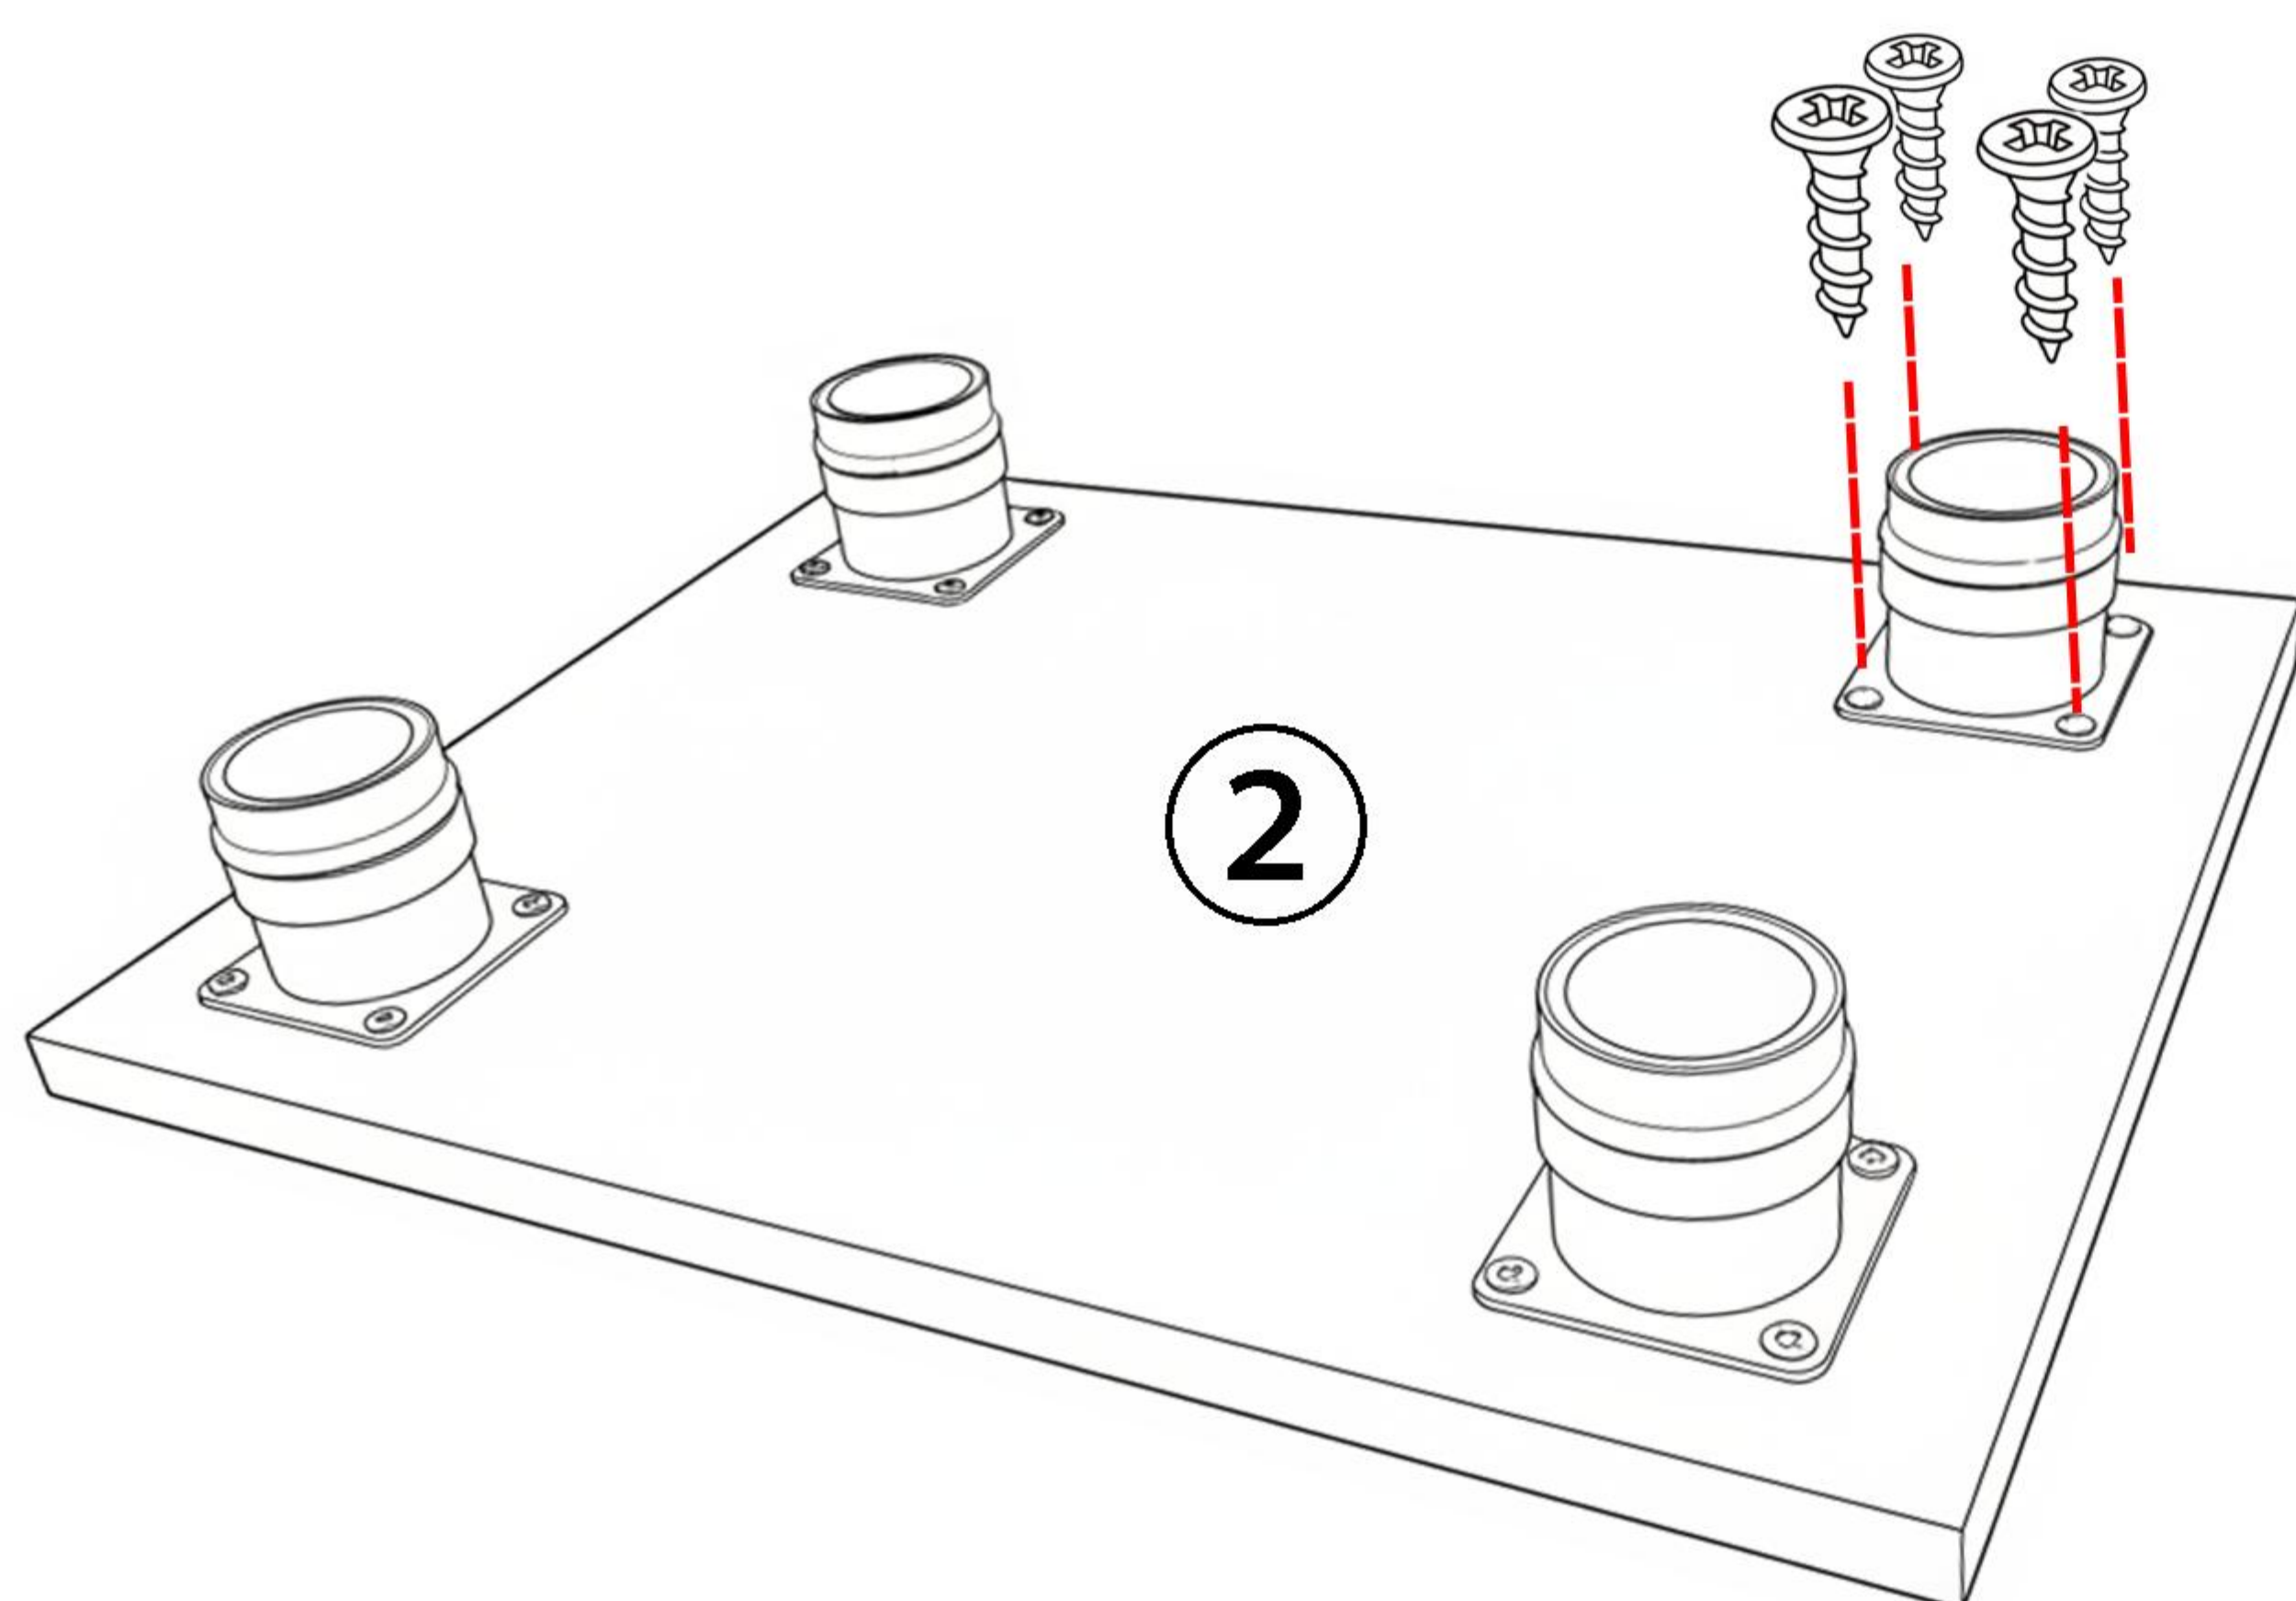


Connect the combinations, using A to lock.




# Step 6

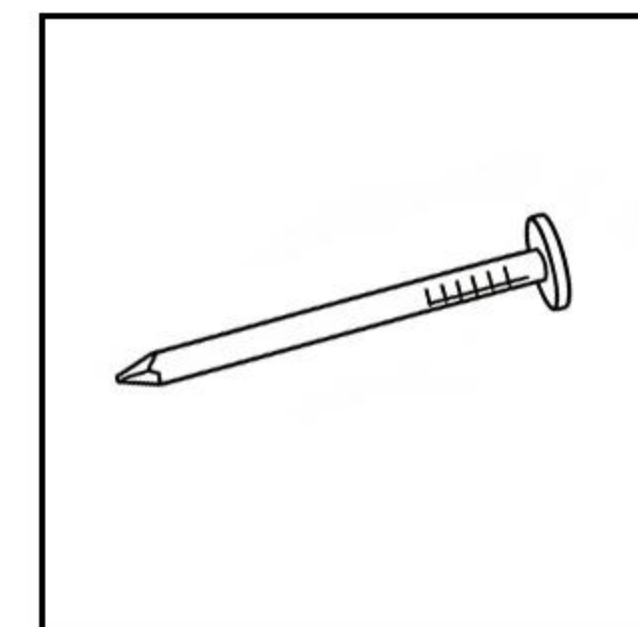

E

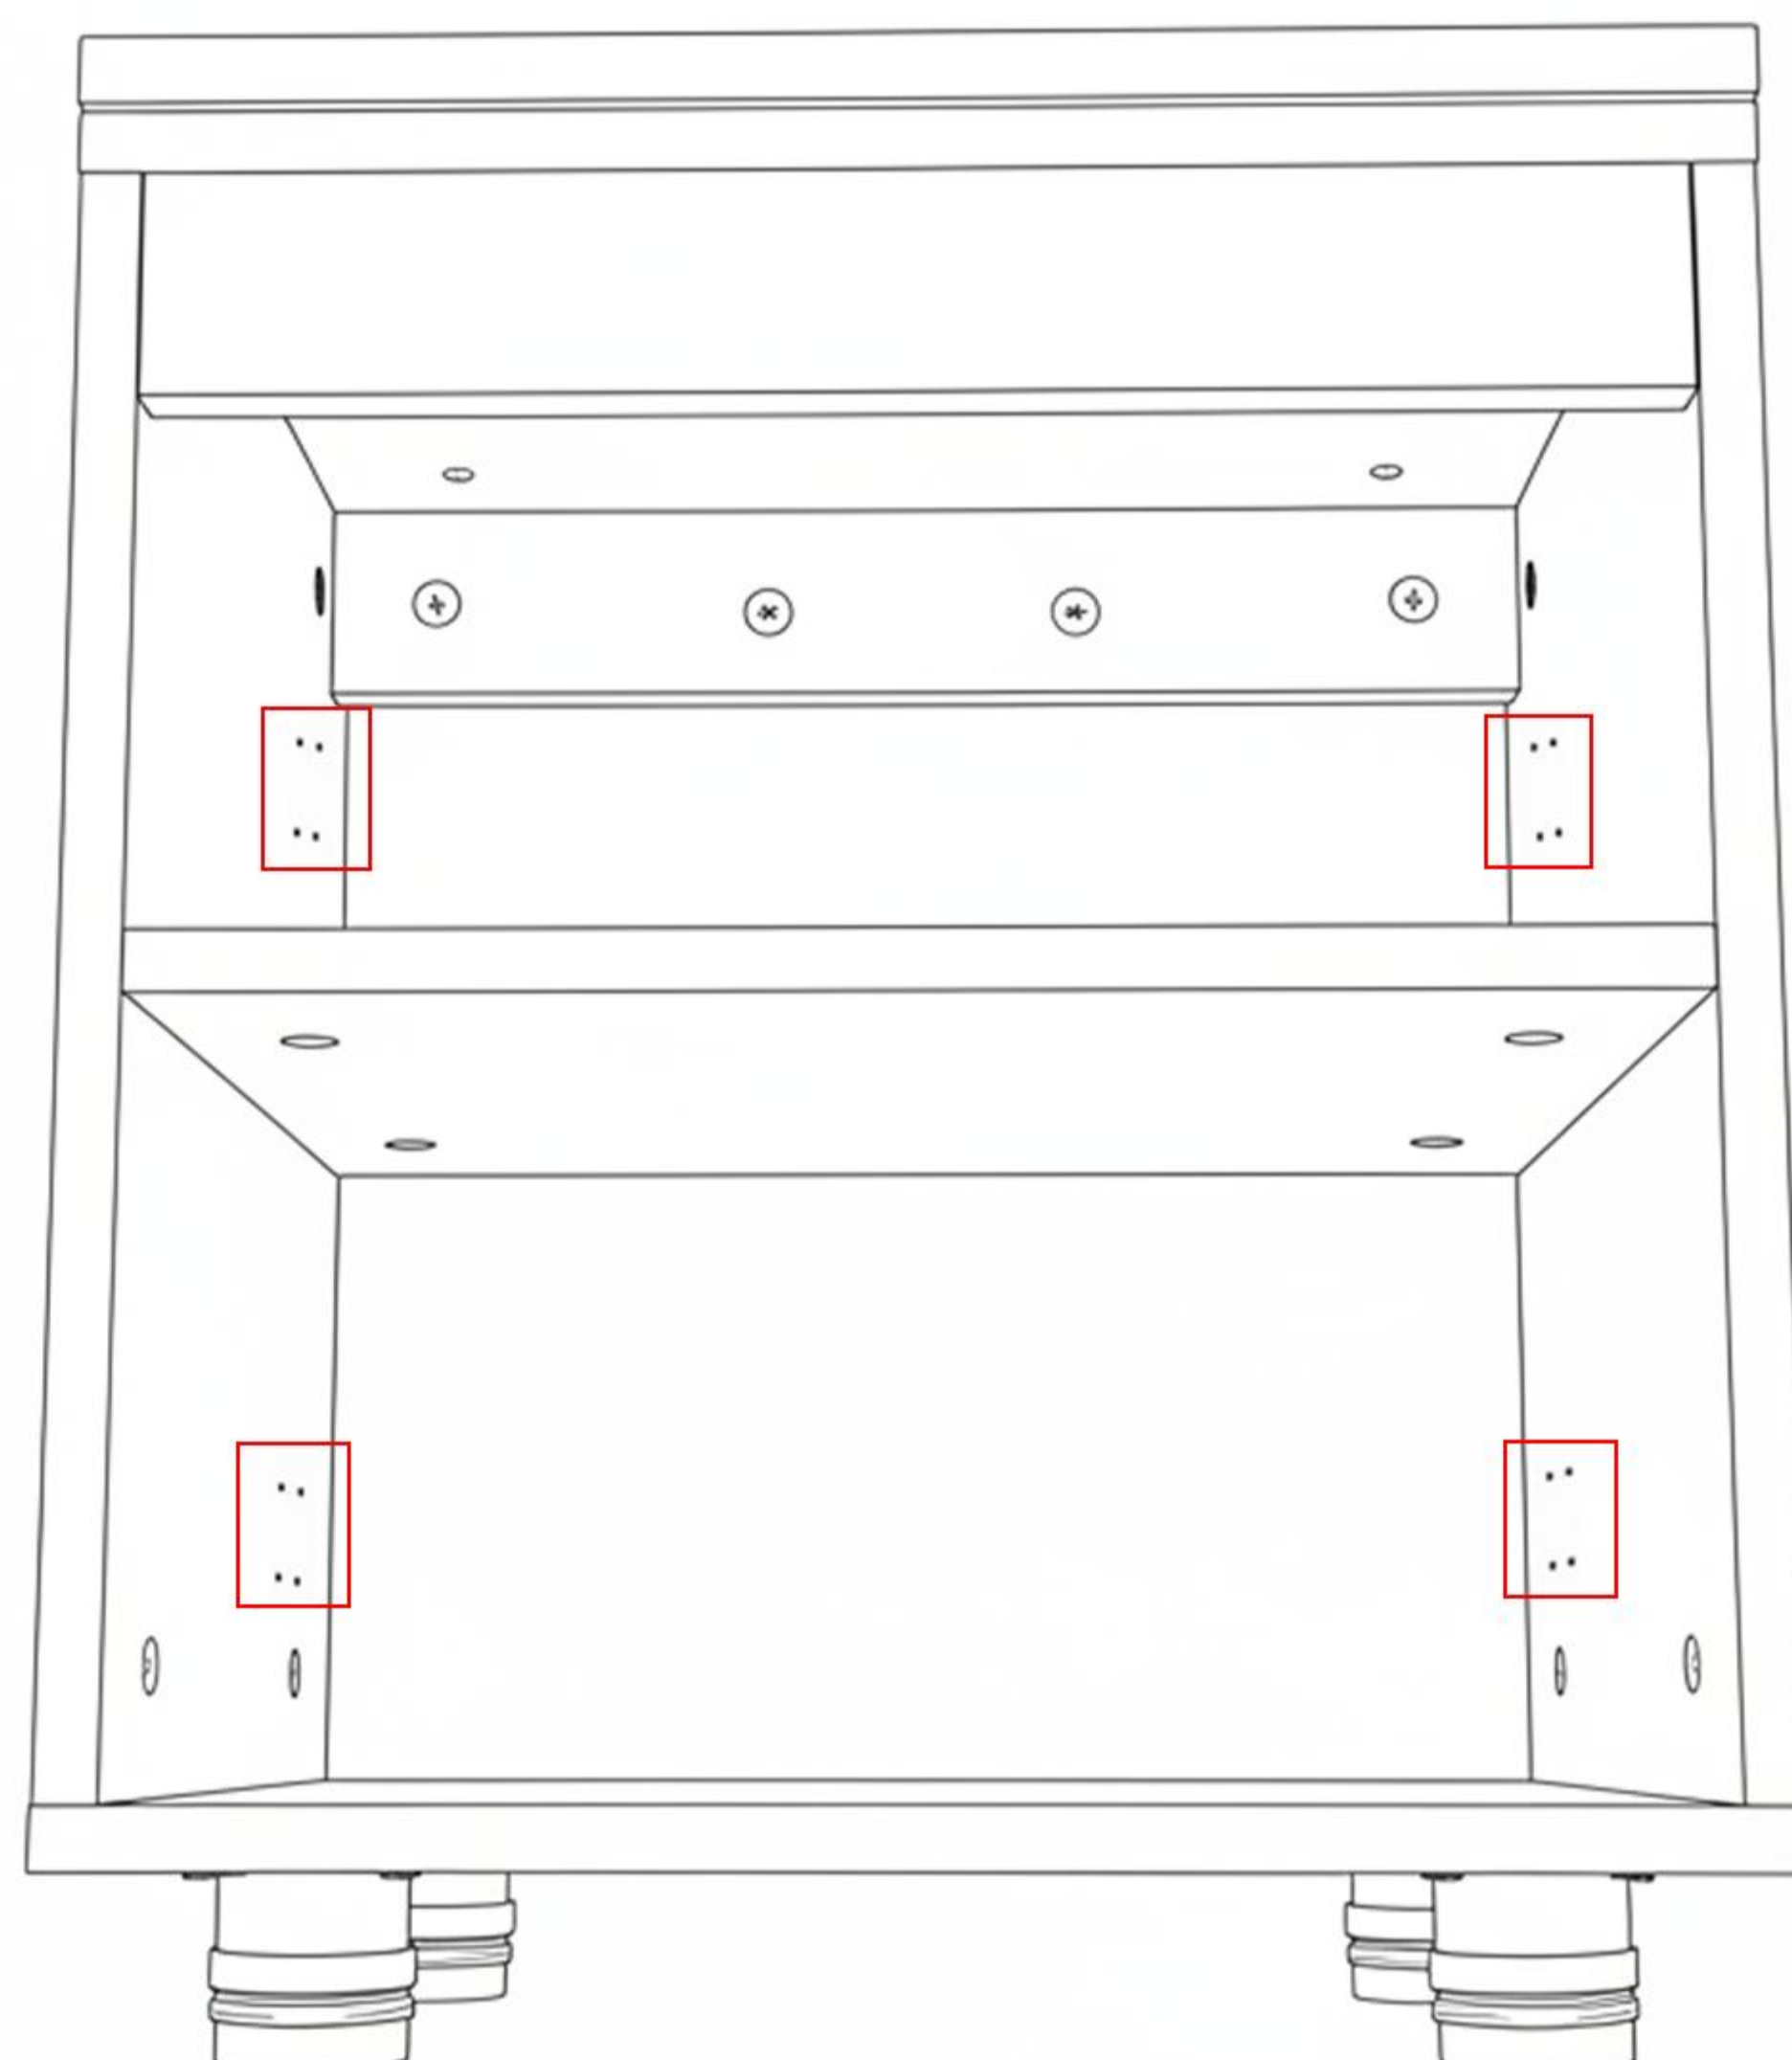


Ensure the sides with pre-drilled holes face downward.

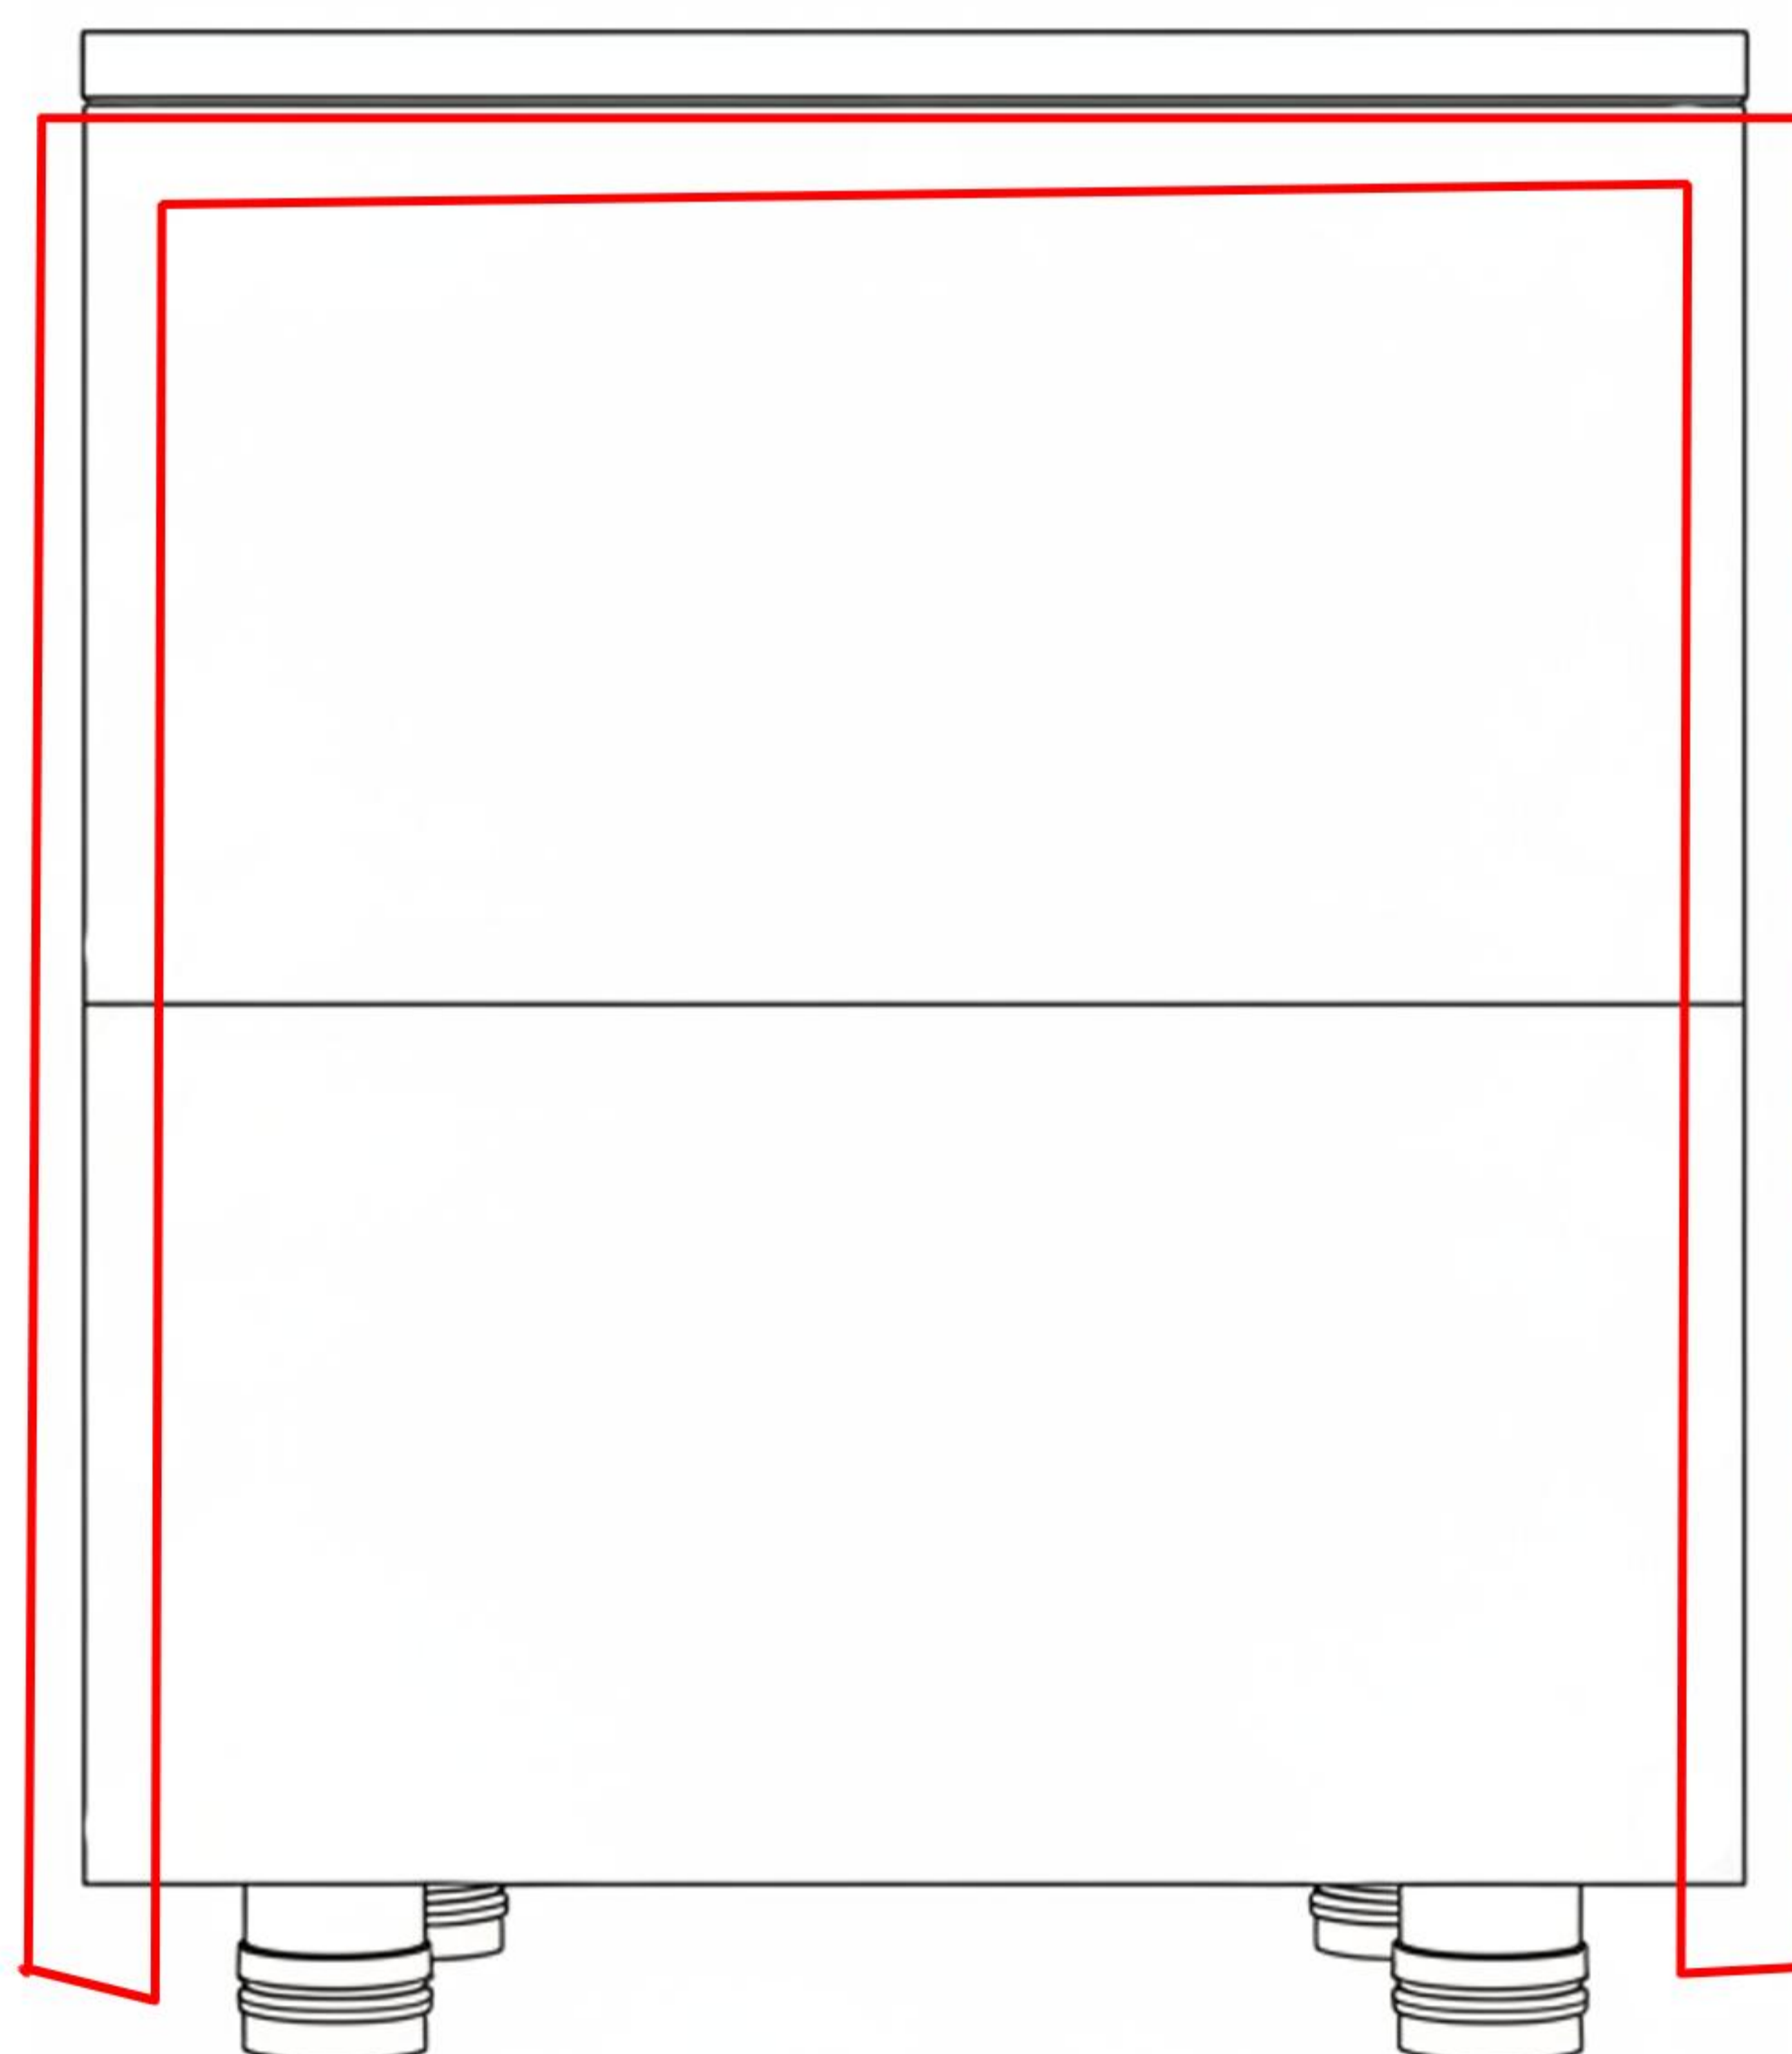


Place all back panels, use E to secure them to the frame.



# Step 7

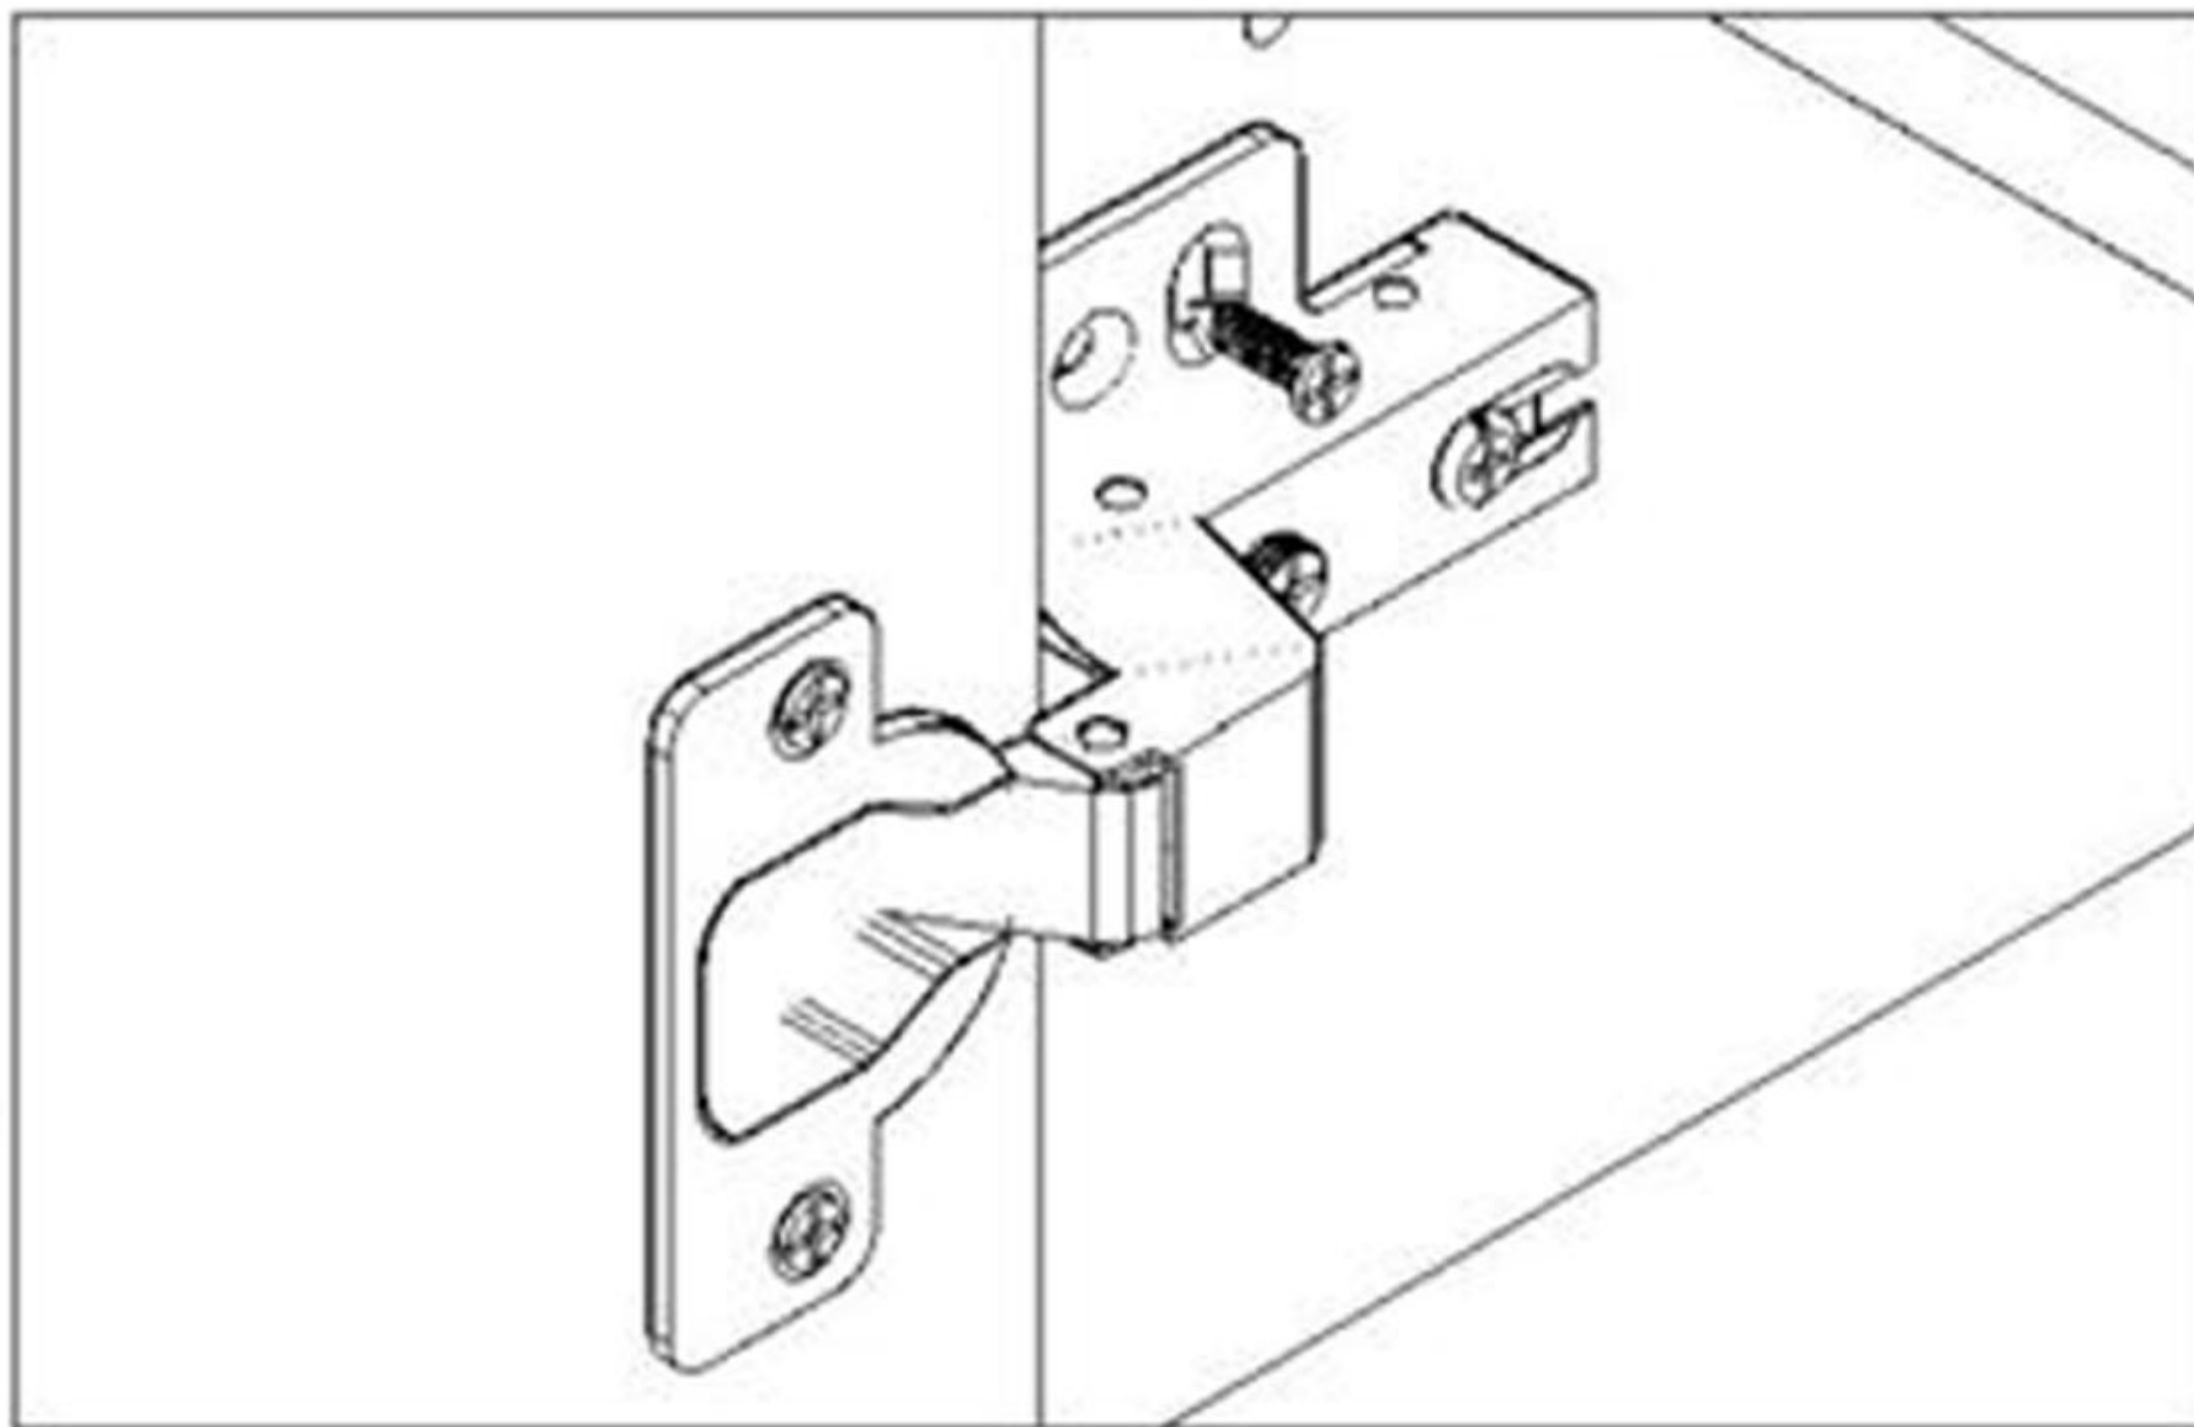

When installing the door panel, first secure the two rear holes of the hinge with C

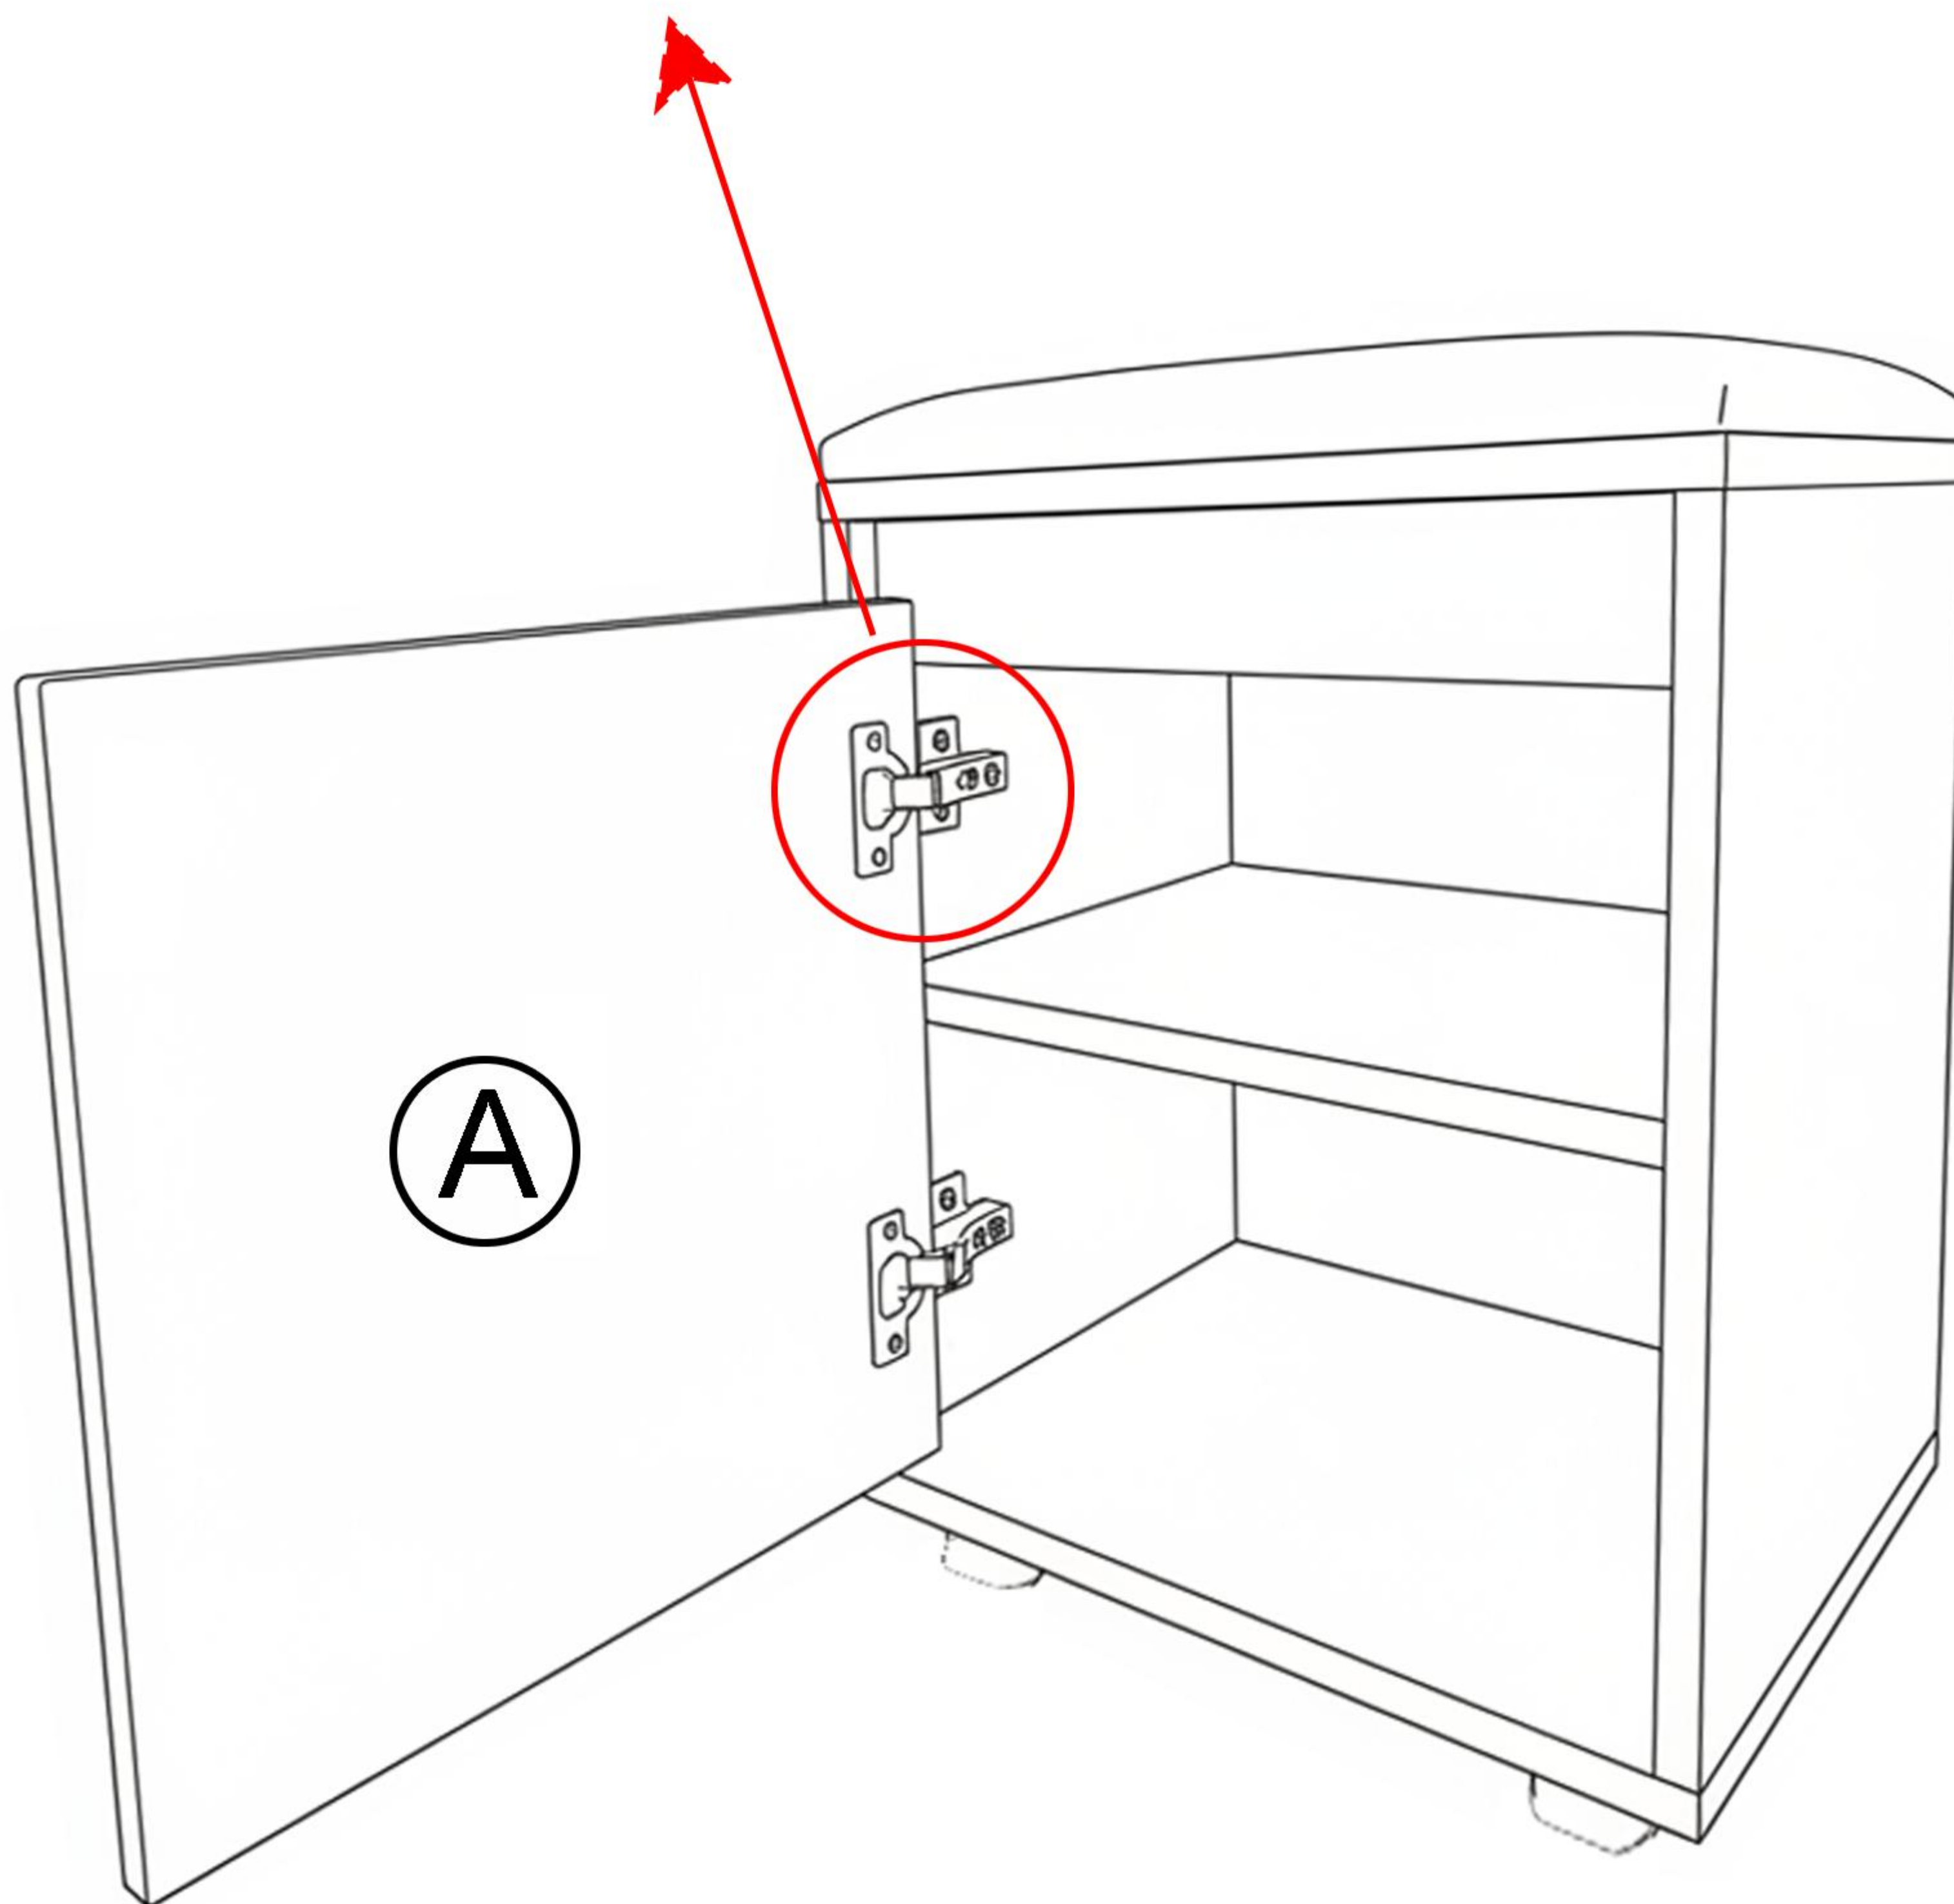

Align the hinge with the upper holes, fix it first, then install the lower hinge. If the lower holes are misaligned, adjust as needed. Refer to the initial hinge installation instructions to adjust the door's height and gap.