


DR021

Installation Instruction

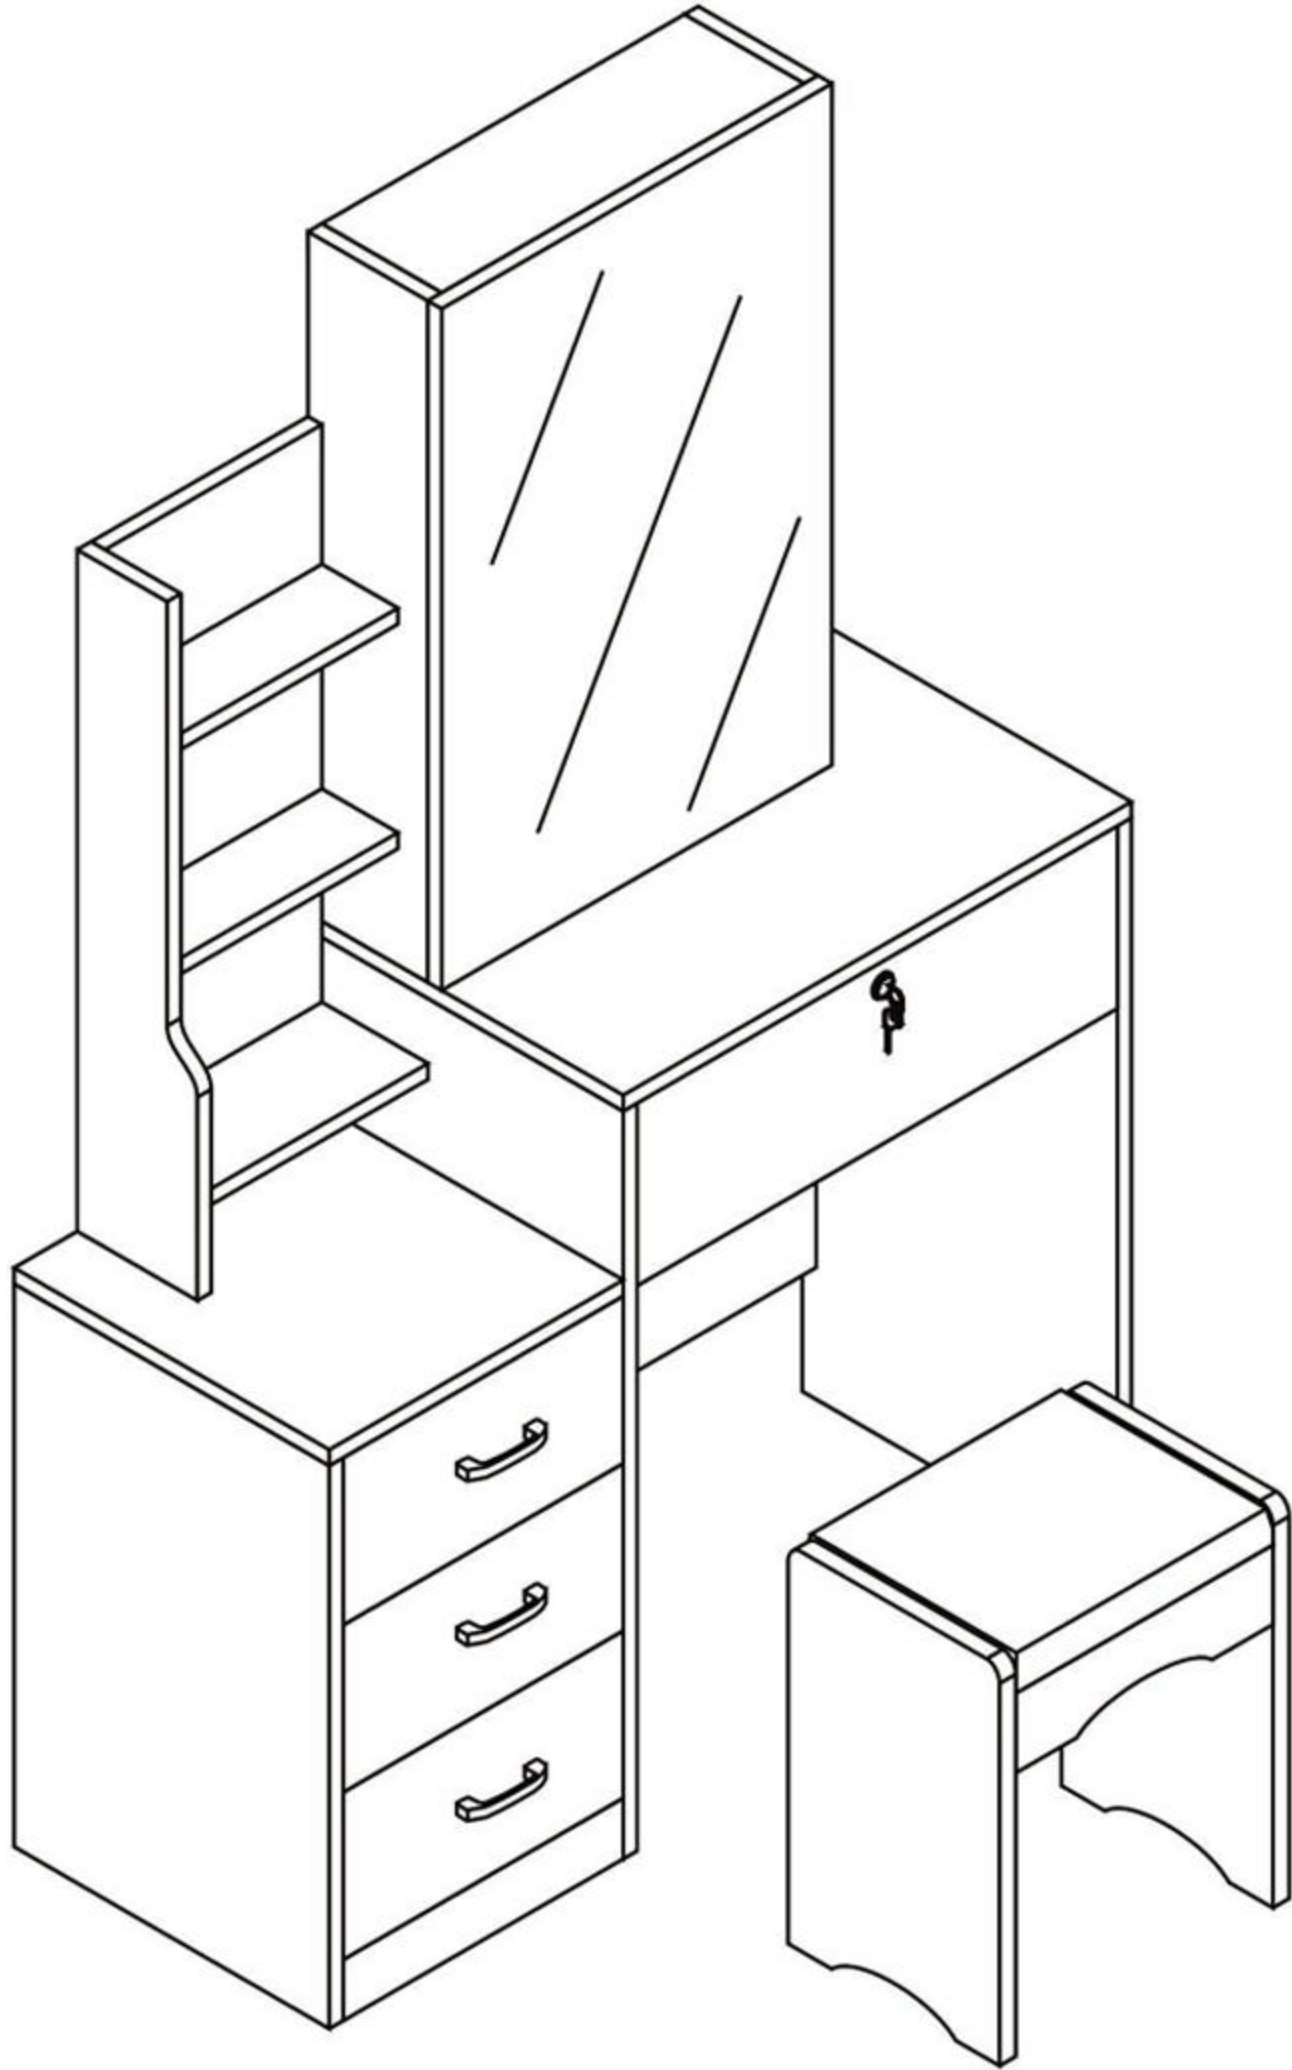

Scan the code to purchase ES001



Please read this instruction manual carefully before installation and use.

Assembly notes:





1. First, make sure that all panels and parts are not damaged or missing.
2. During the installation process, be careful not to bump or scratch the panel surface.
3. Please read the instructions carefully before installation and install in order.
4. Please use each screw accessory strictly according to the instructions.
5. The slide needs to be split into two parts when in use. For the splitting method, see the slide instructions.
6. Please keep the packaging box in case of any problems. You can check the product model and production batch number printed on the outside of the packaging box.

Precautions after assembly:


1. After installation, check whether all parts are installed and the locks are locked.
2. Check the overall stability of the cabinet to see if there is any vibration.
3. When using the lock, do not use excessive force to avoid damage to the lock. Just turn it clockwise until it cannot turn.

NOTE: ES001 - 3 Speed Portable Cordless Electric Screwdriver is highly recommended for installation.

Hardware List

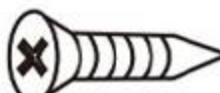
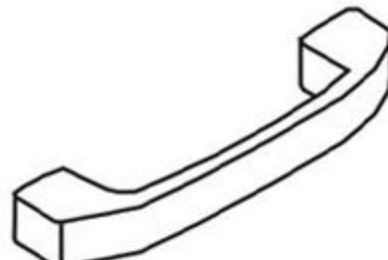
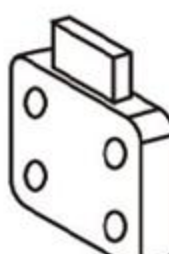
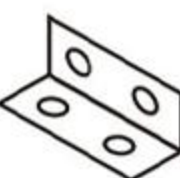
A	B	C	D	E	
					
F	H	J	K	L	M
 x8		 x2		 	

Parts List

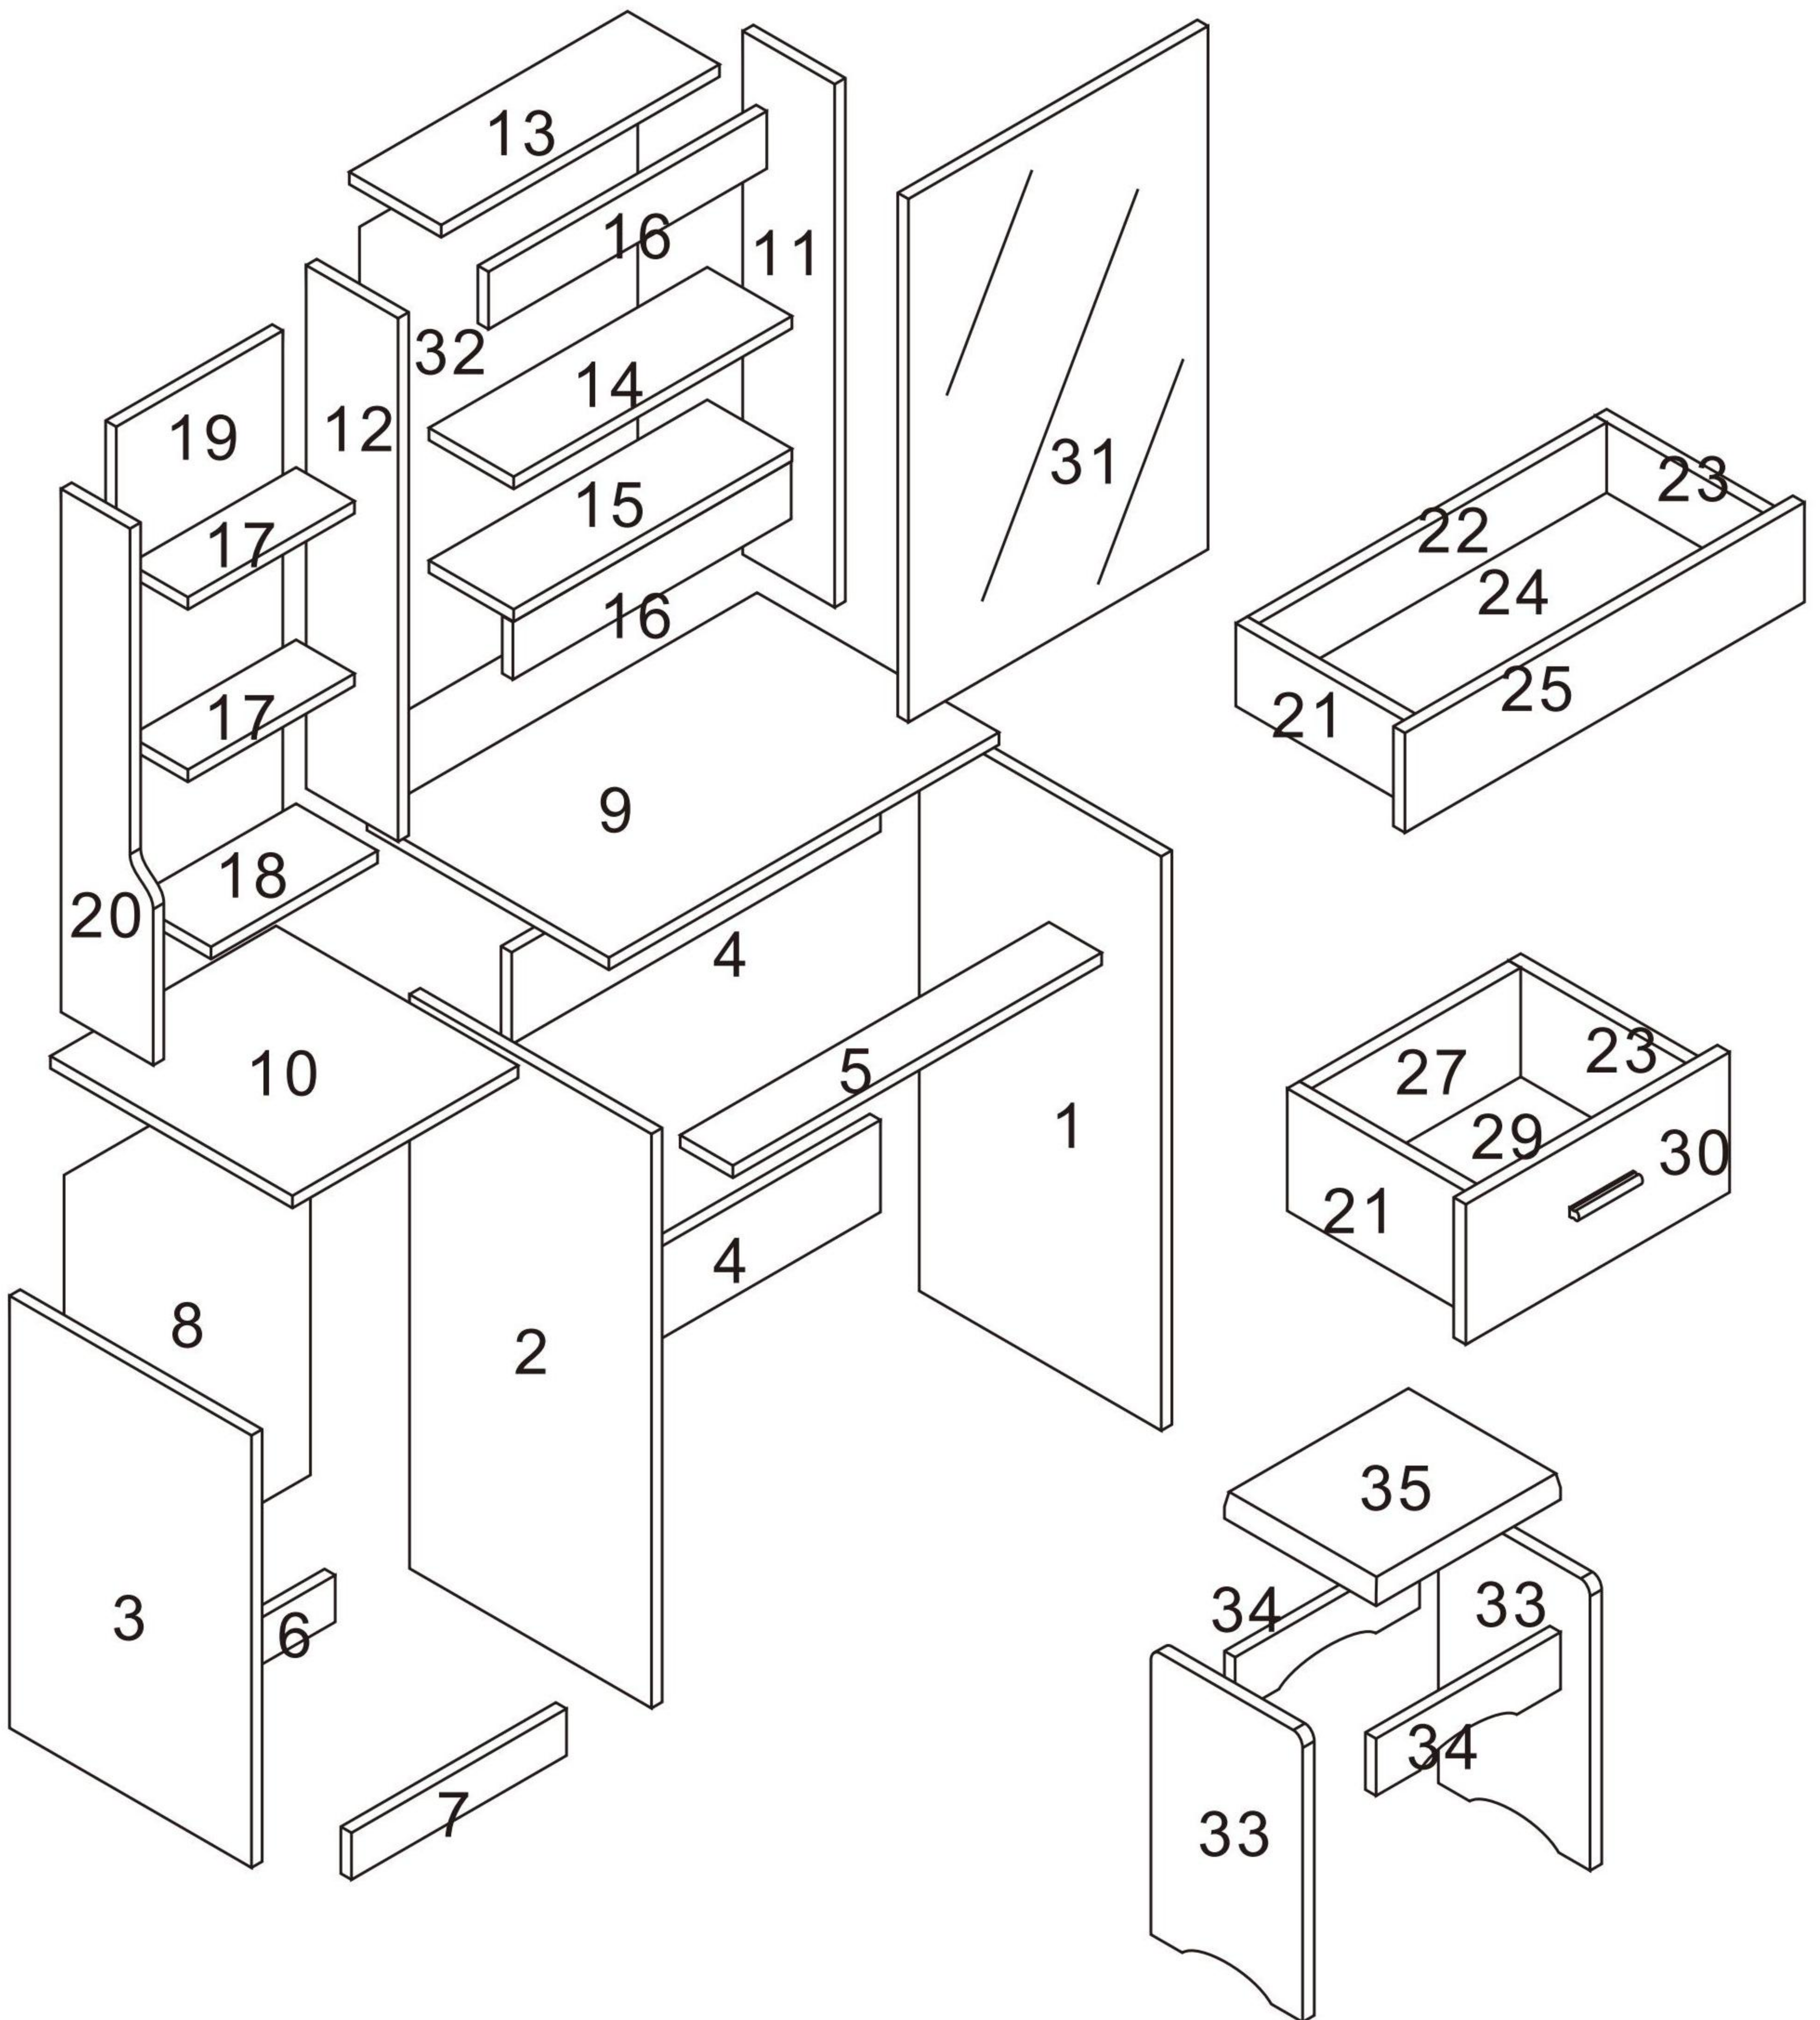


F&J (Sliding Rail) Installation Instructions with screw C

1, Separate **F&J** (Sliding Rail)

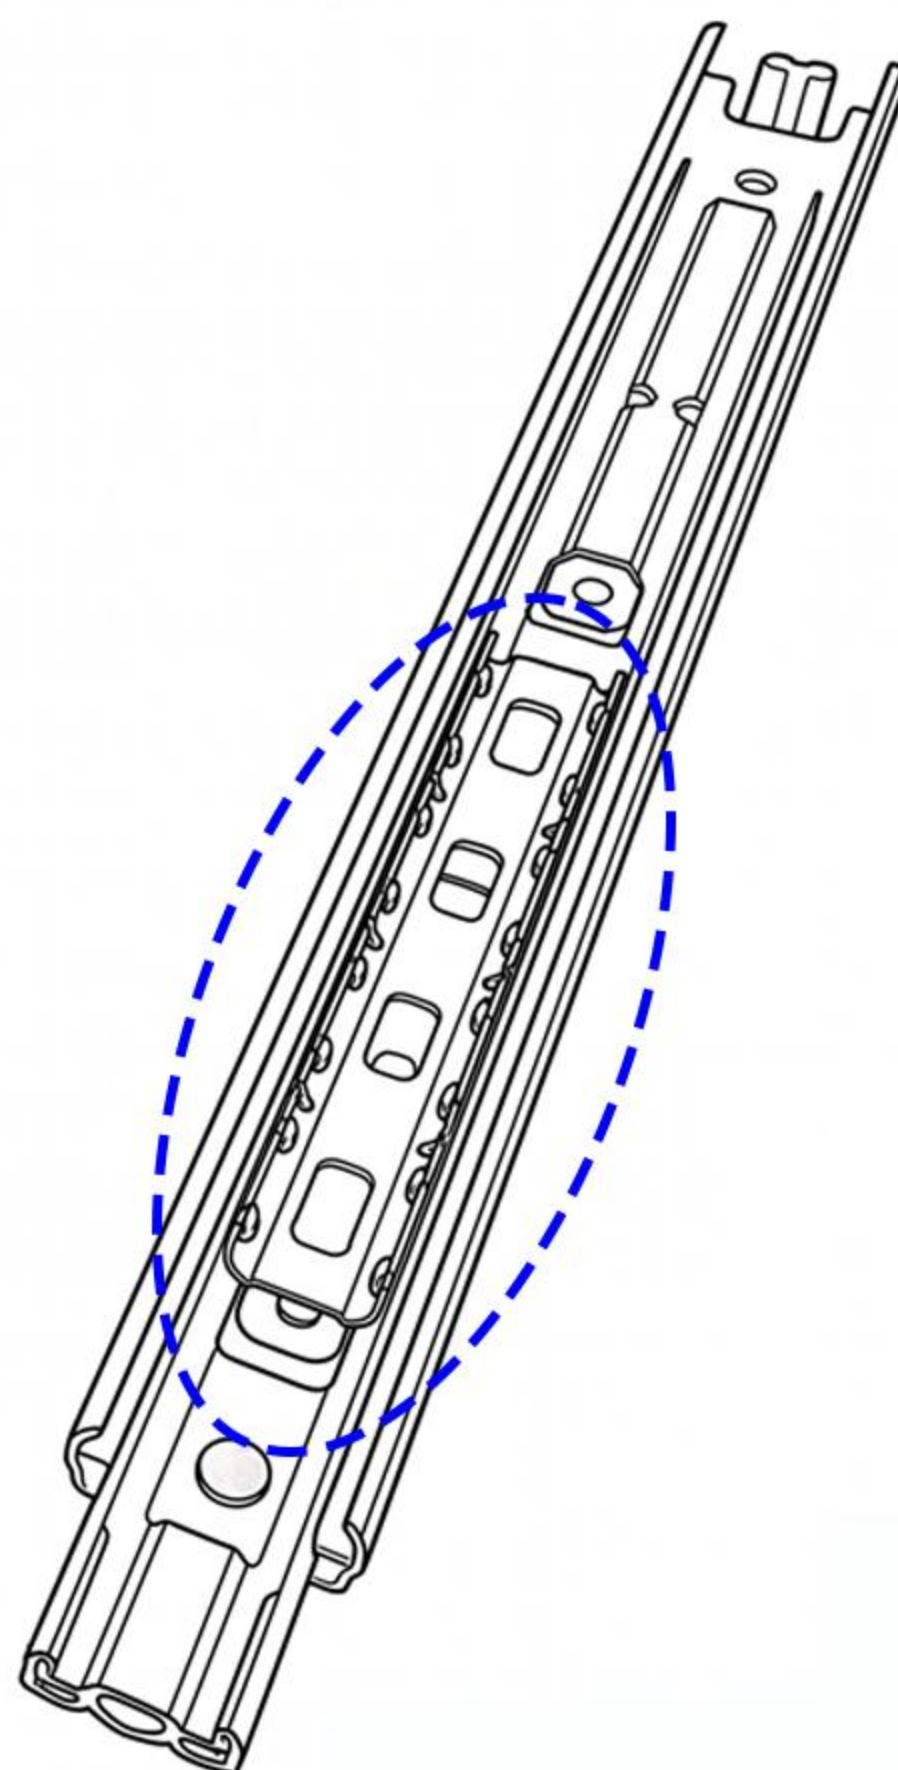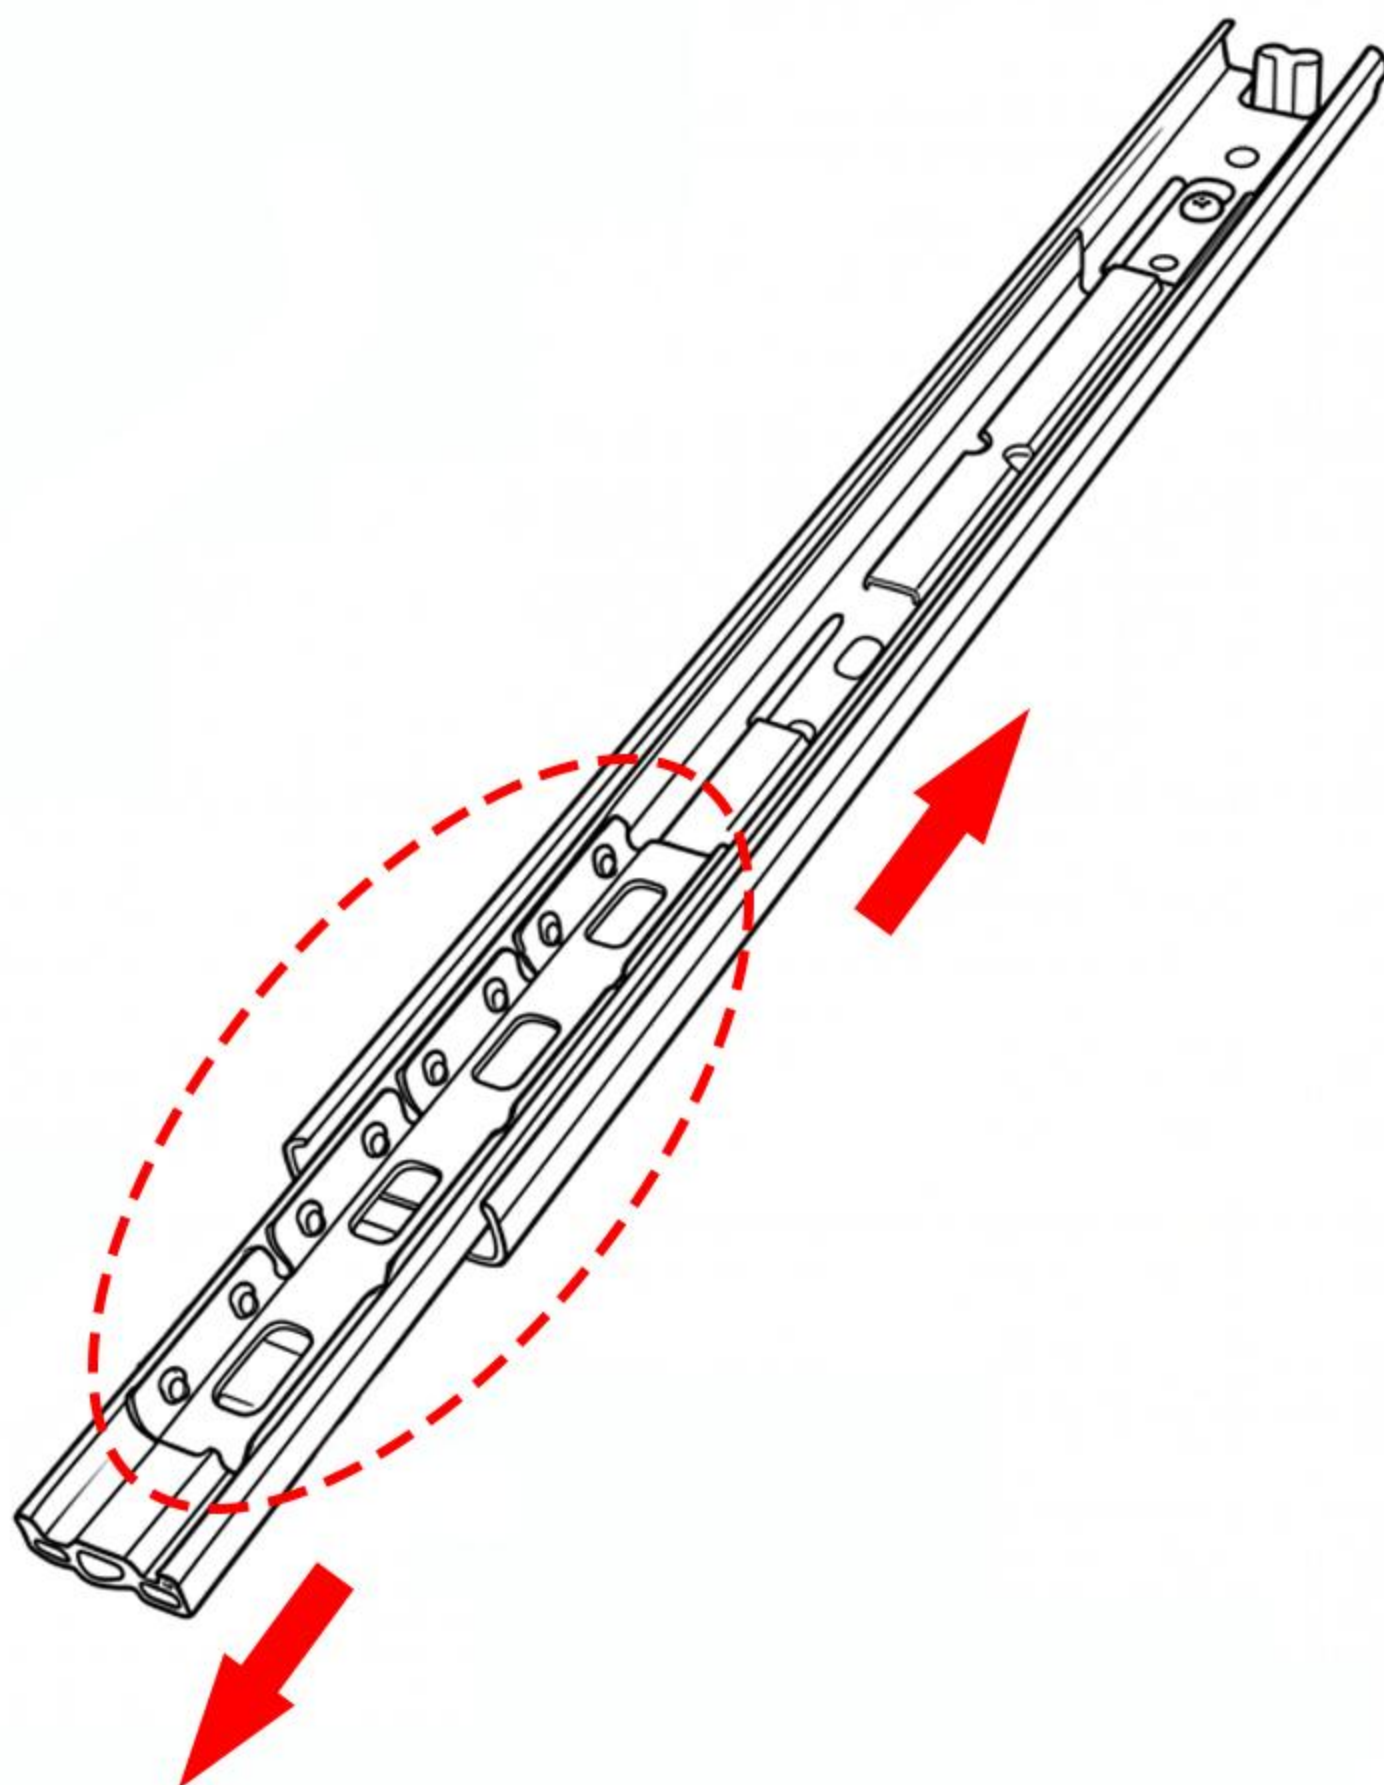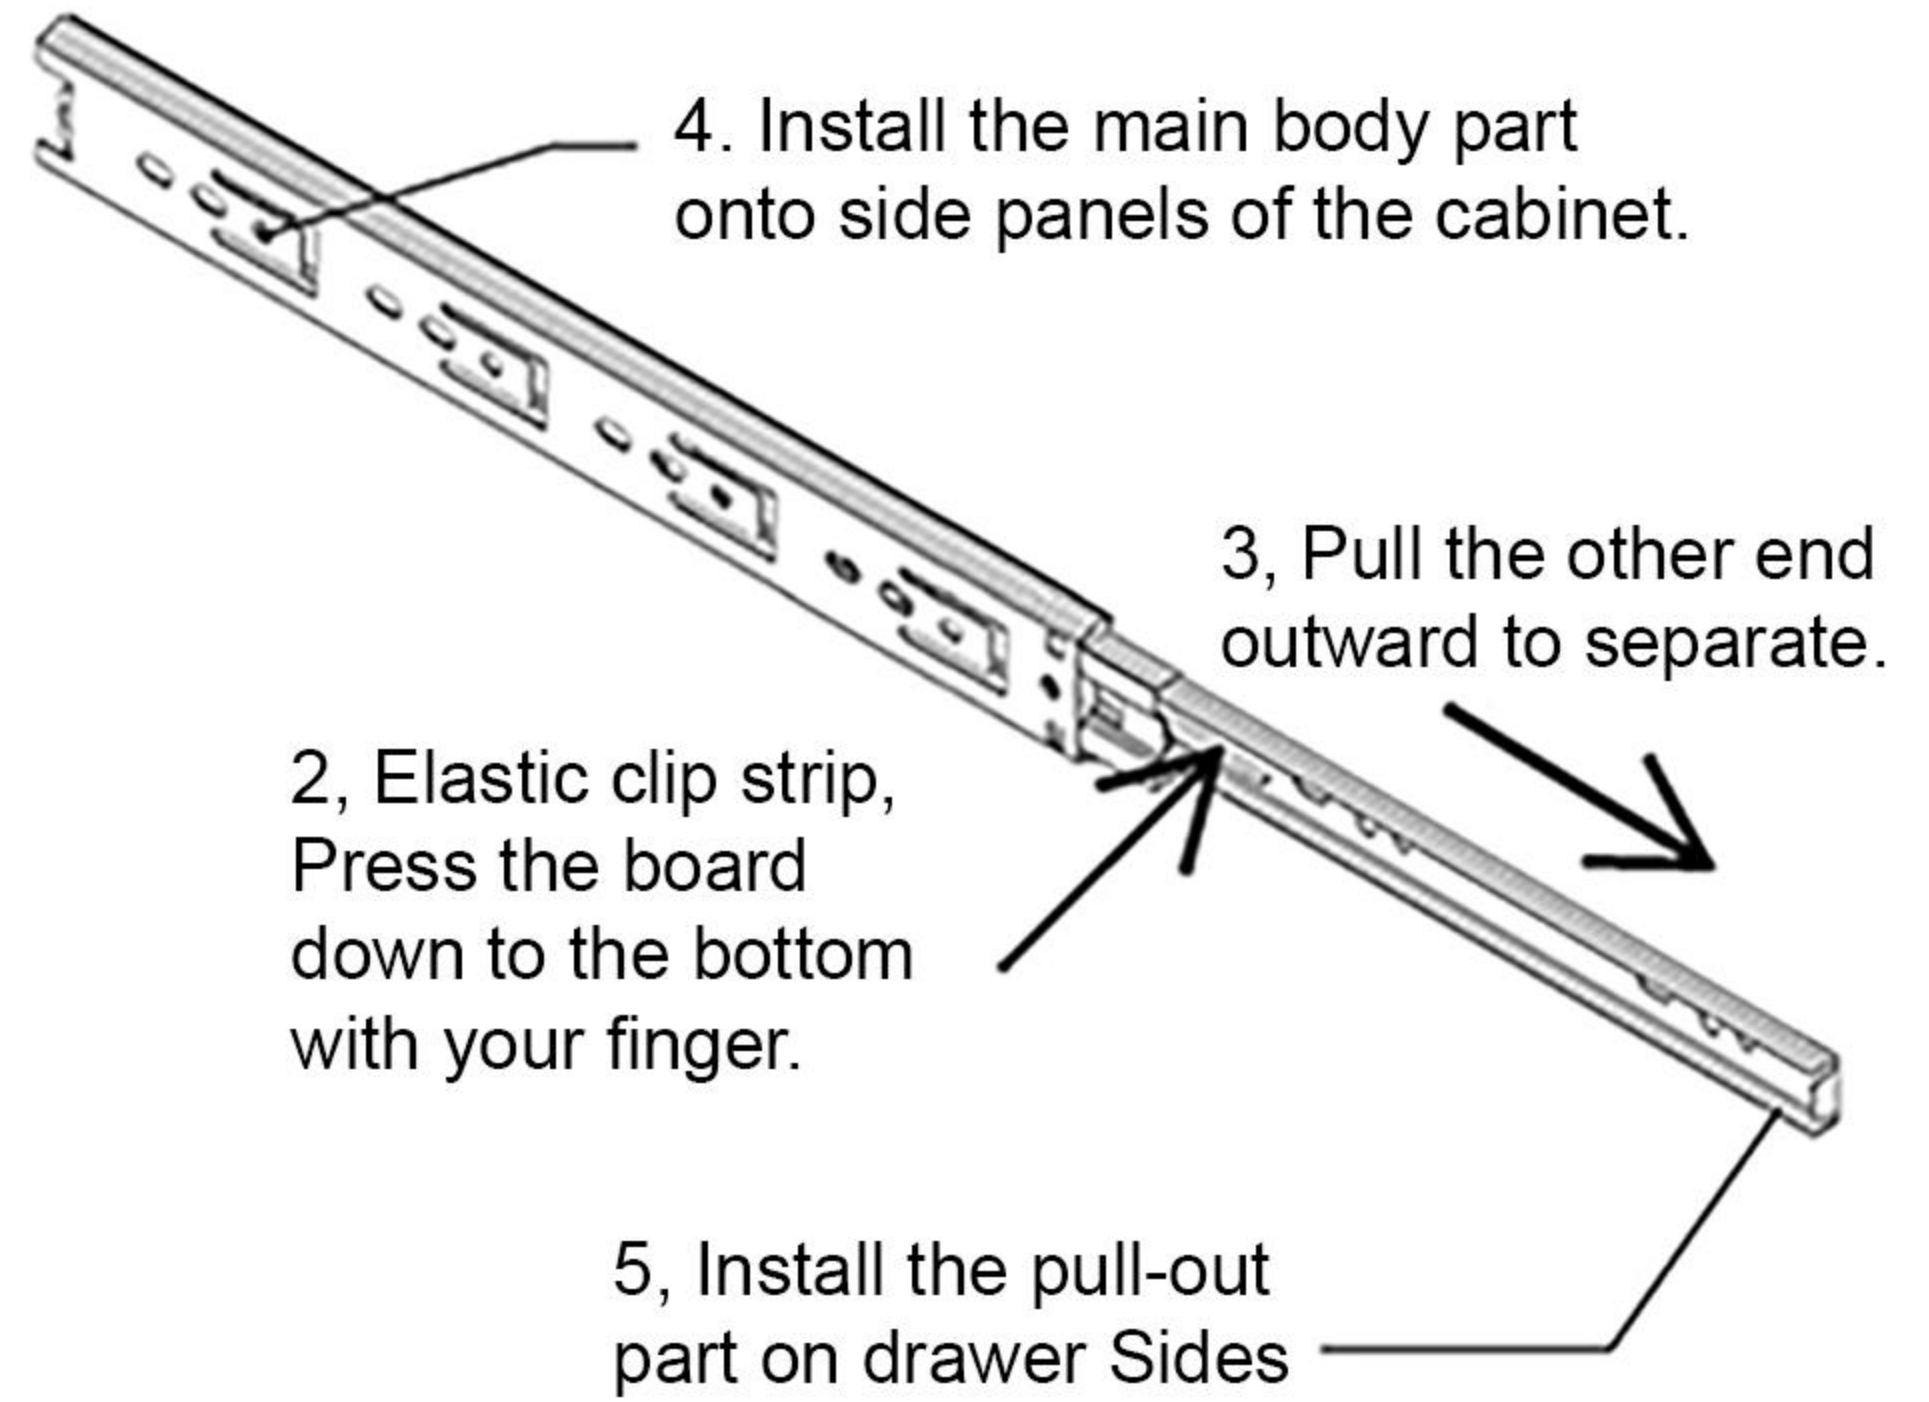
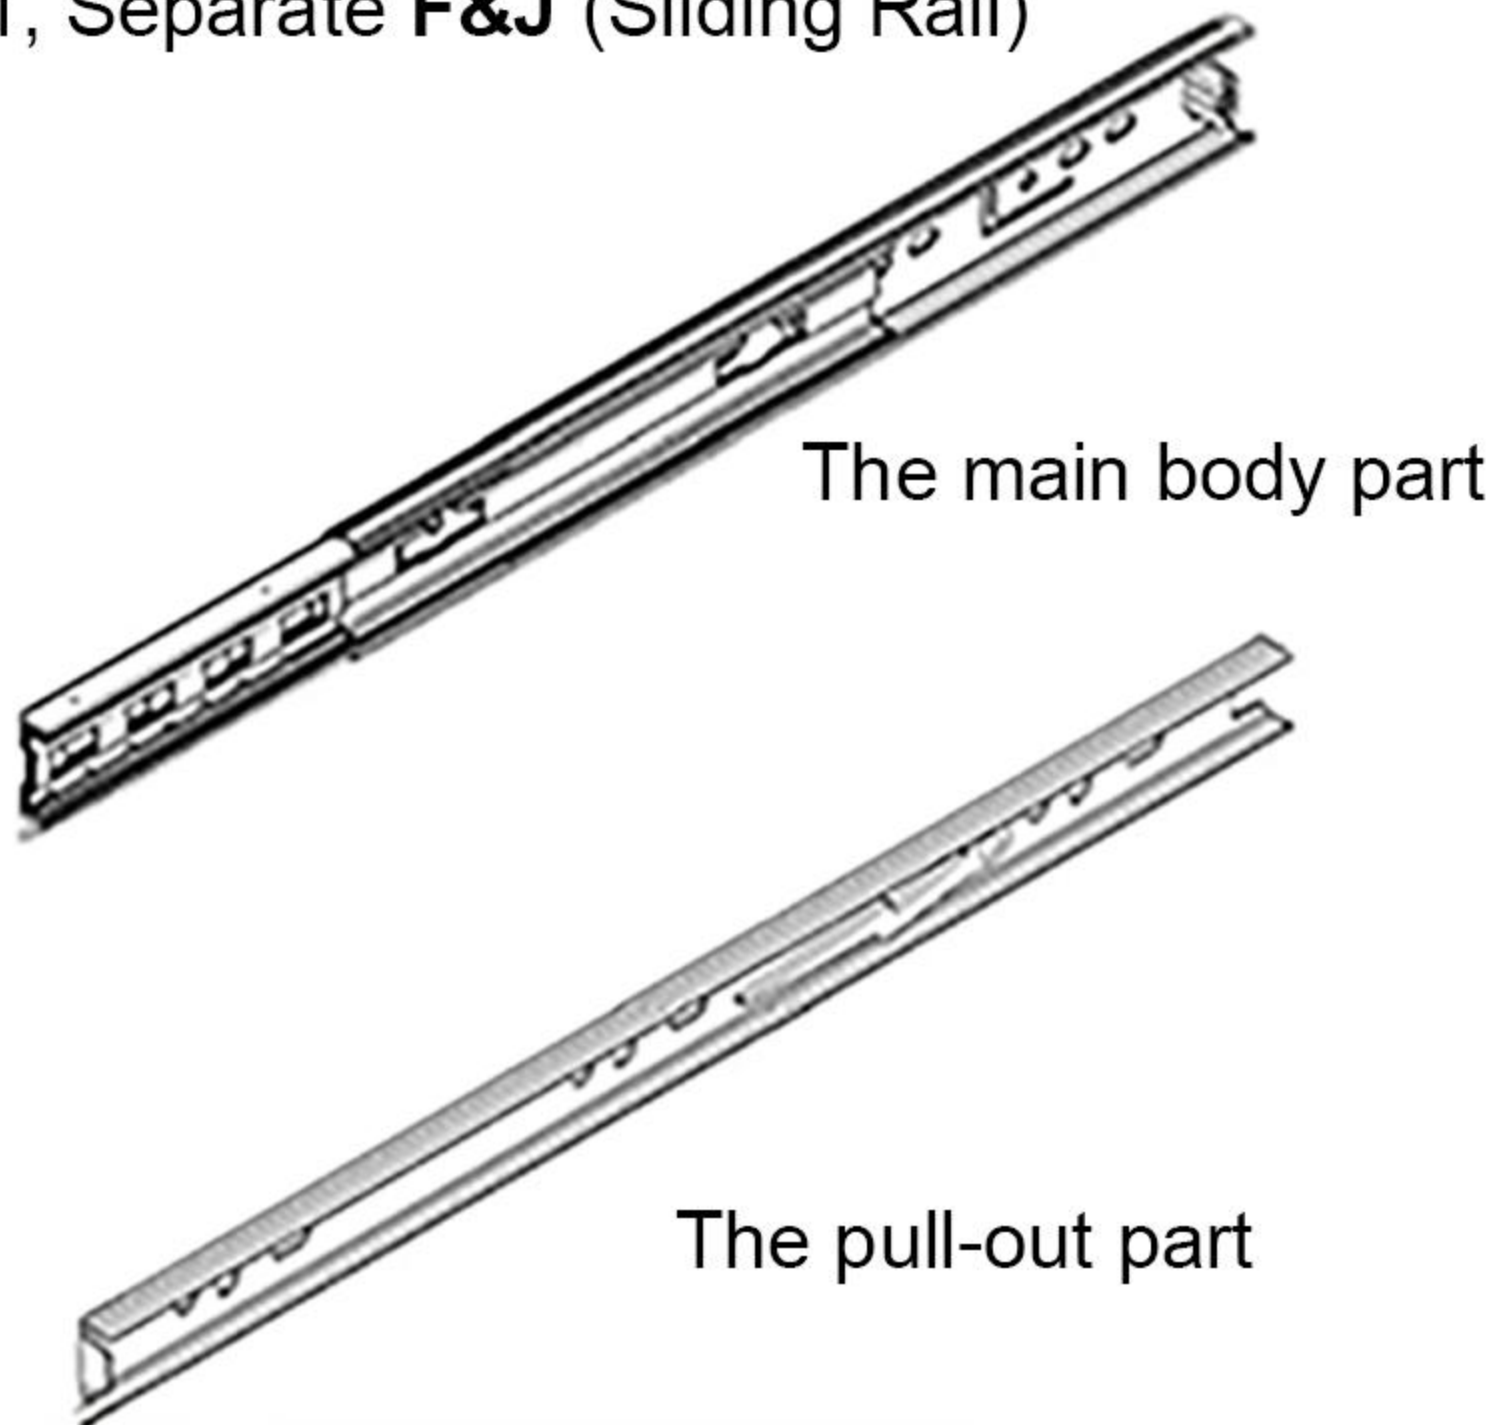


The metal plate between the main body parts F and J can slide to allow for easier installation.

2-in-1 Assembly Instructions (B)

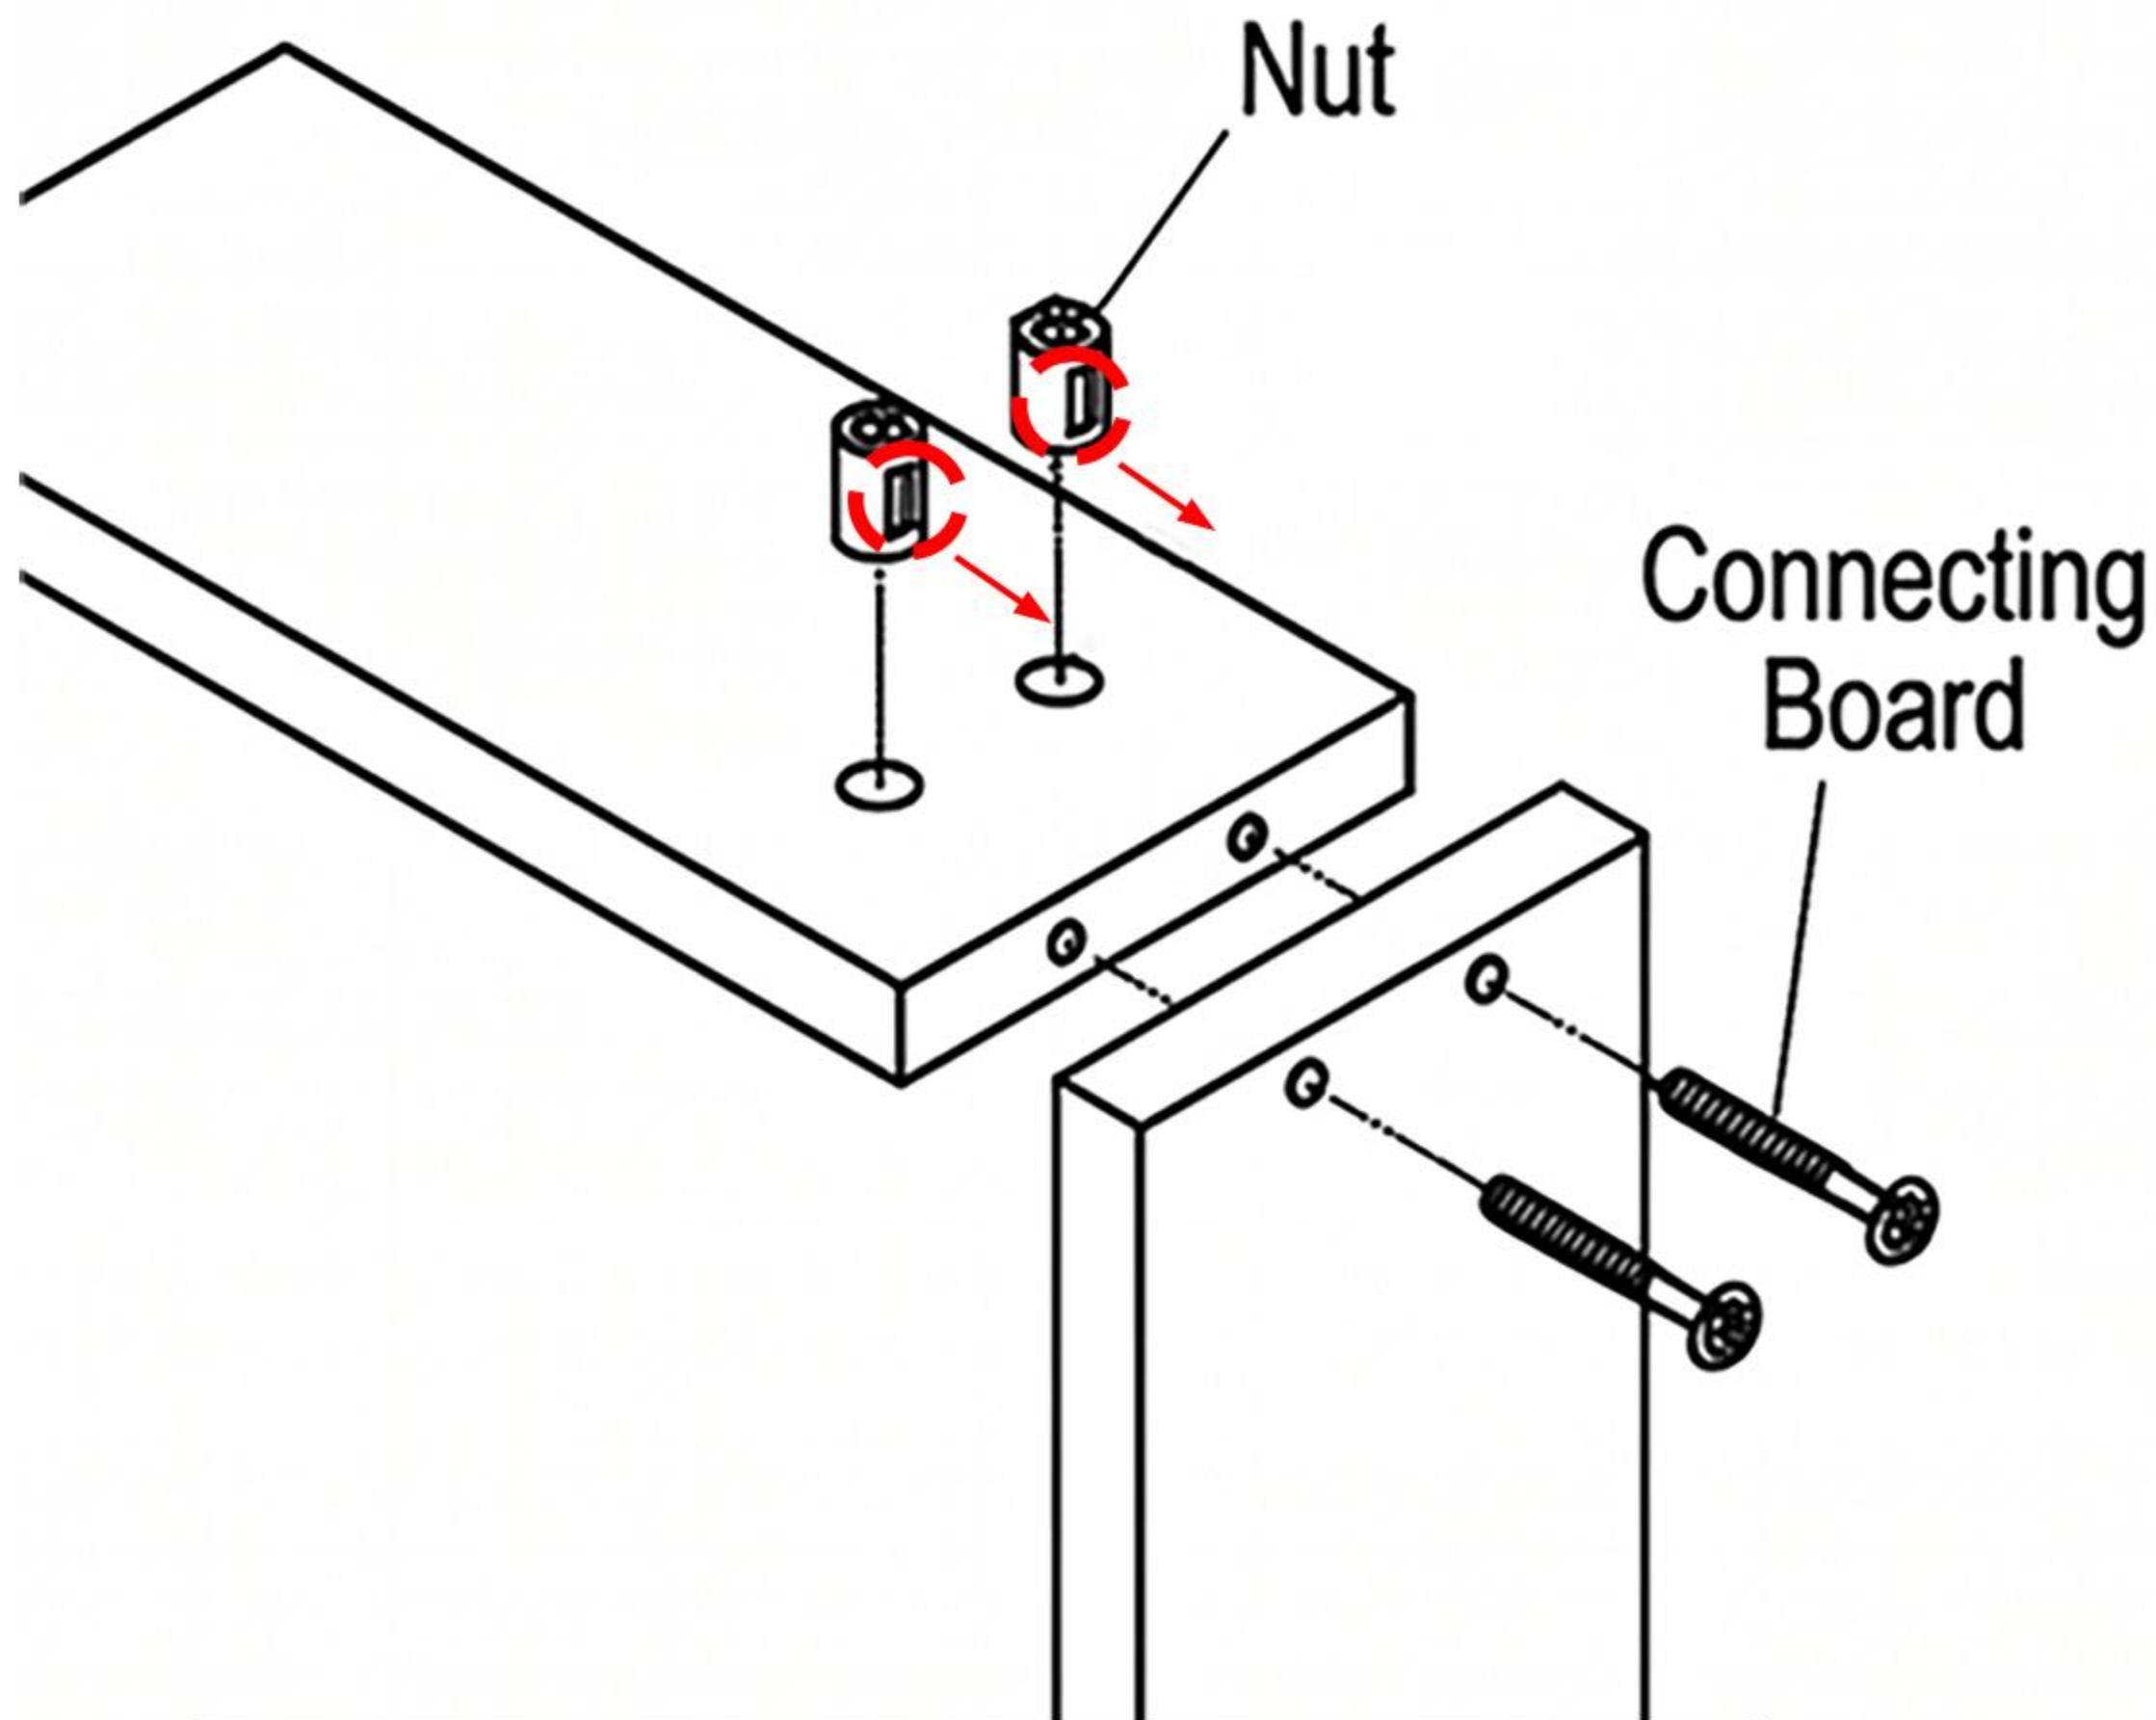


1. Insert the rubber nut into the large hole.
2. Align the side hole of the insert with the screw hole.
3. Insert the long screw through the side hole.
4. Tighten the screw until secure.

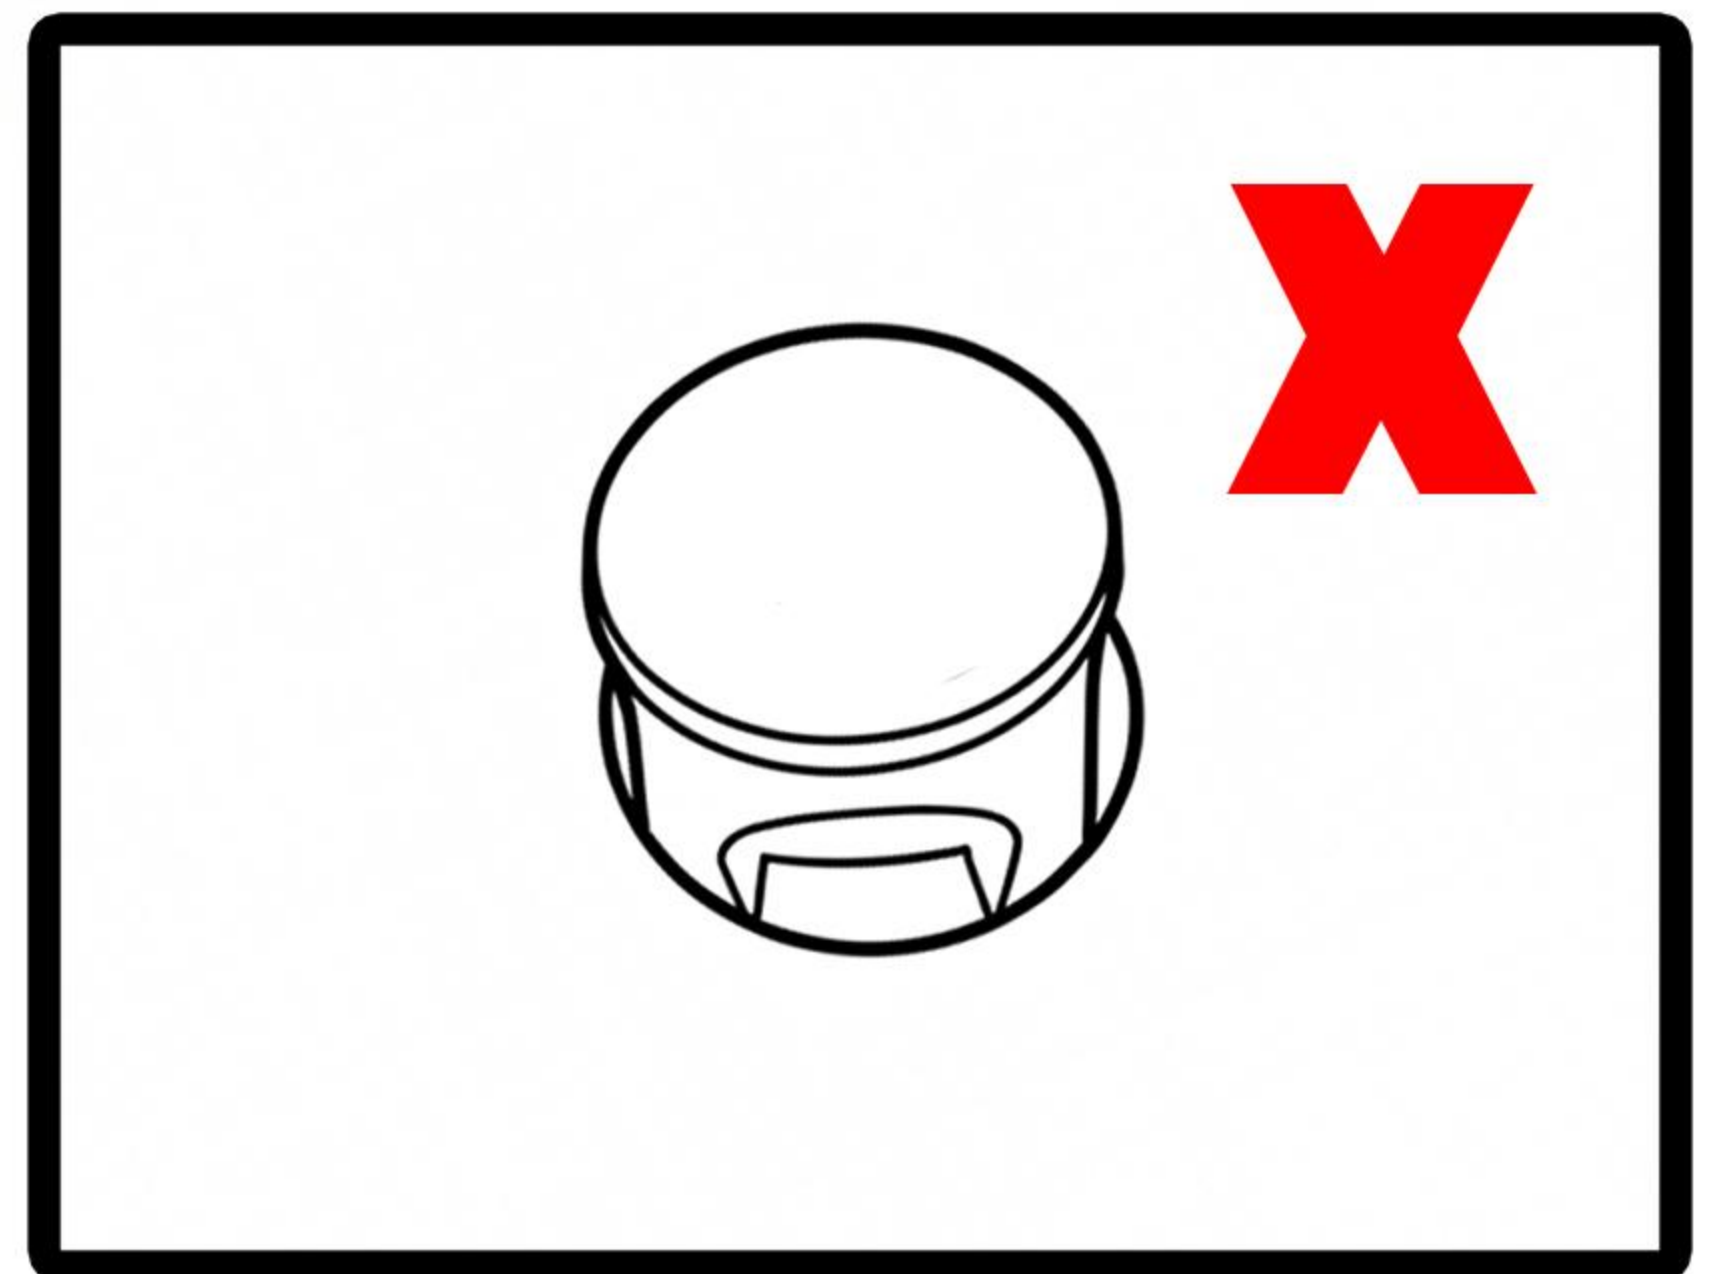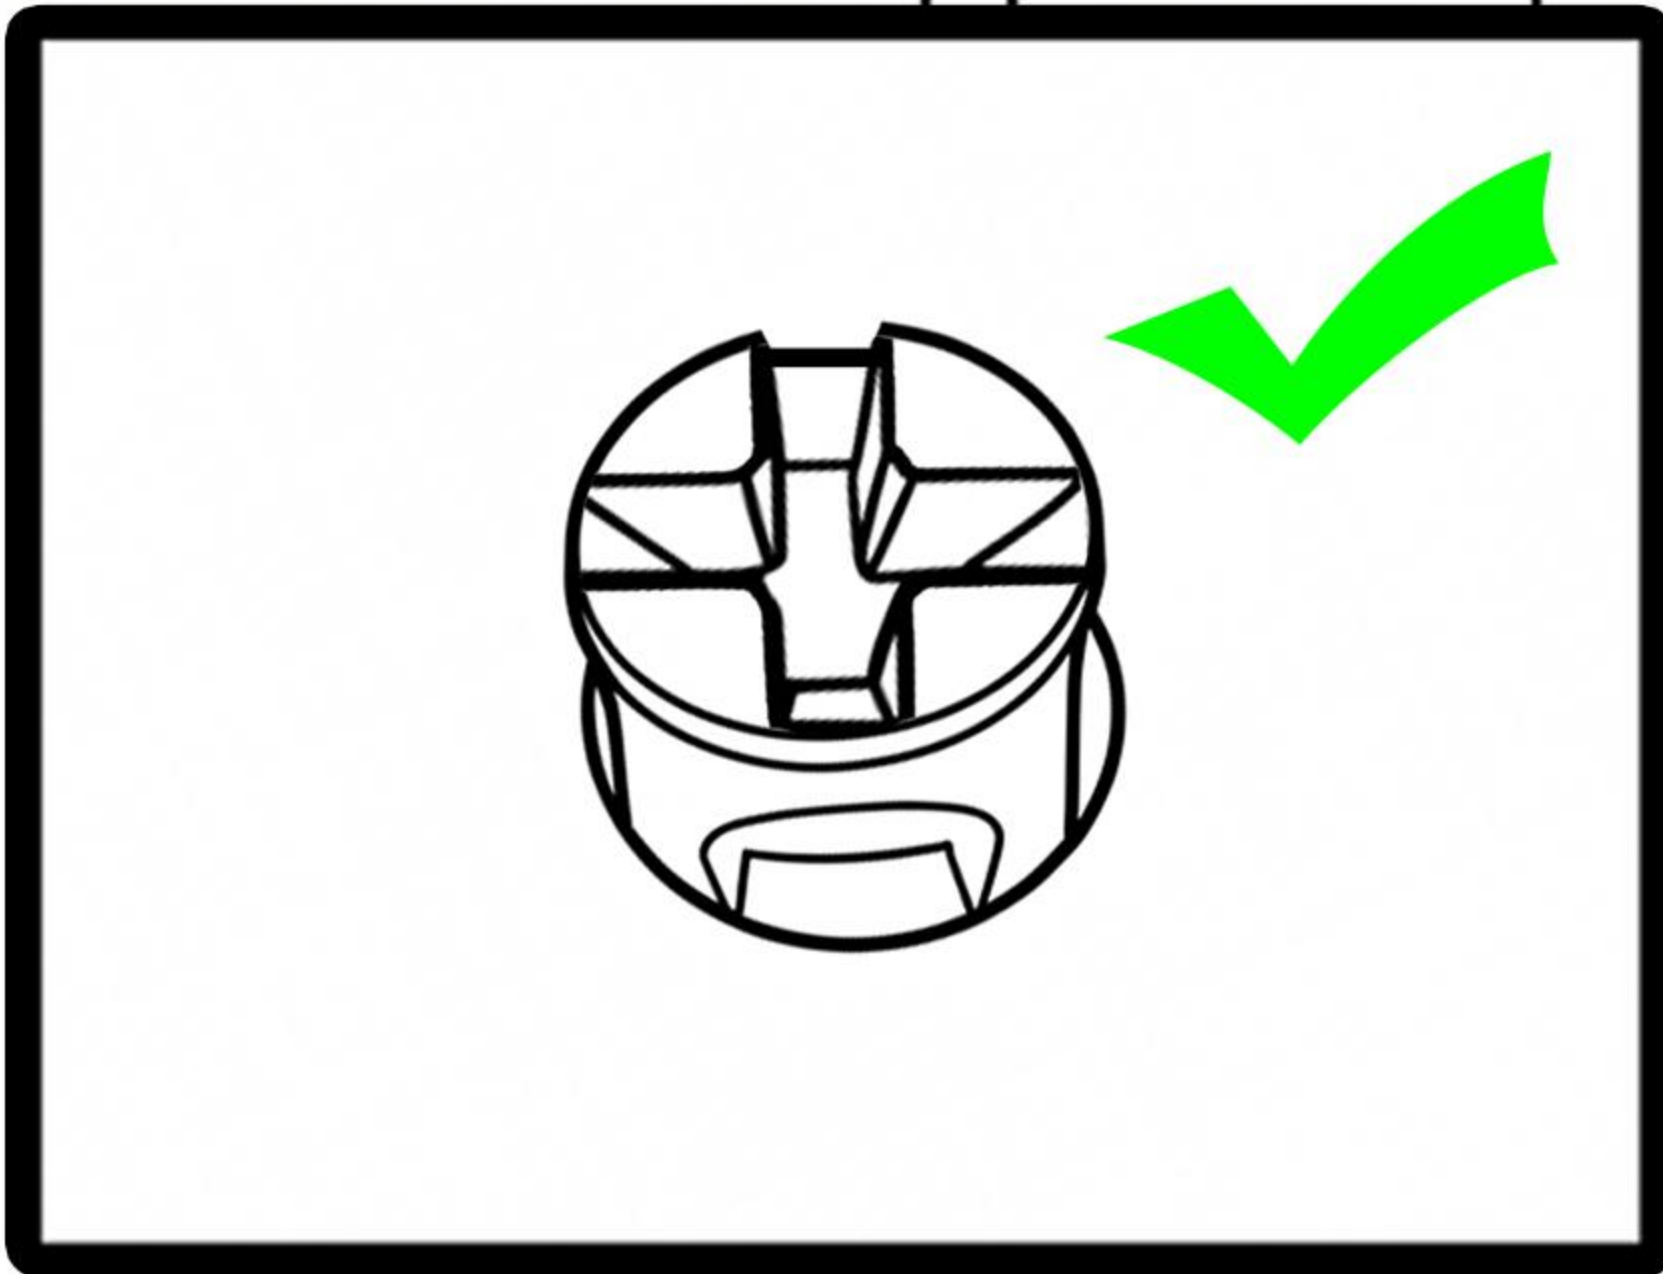

IMPORTANT ORIENTATION

Make sure the cross (+) slot on the rubber nut is facing up / outward.
If not aligned first, it cannot be adjusted later.

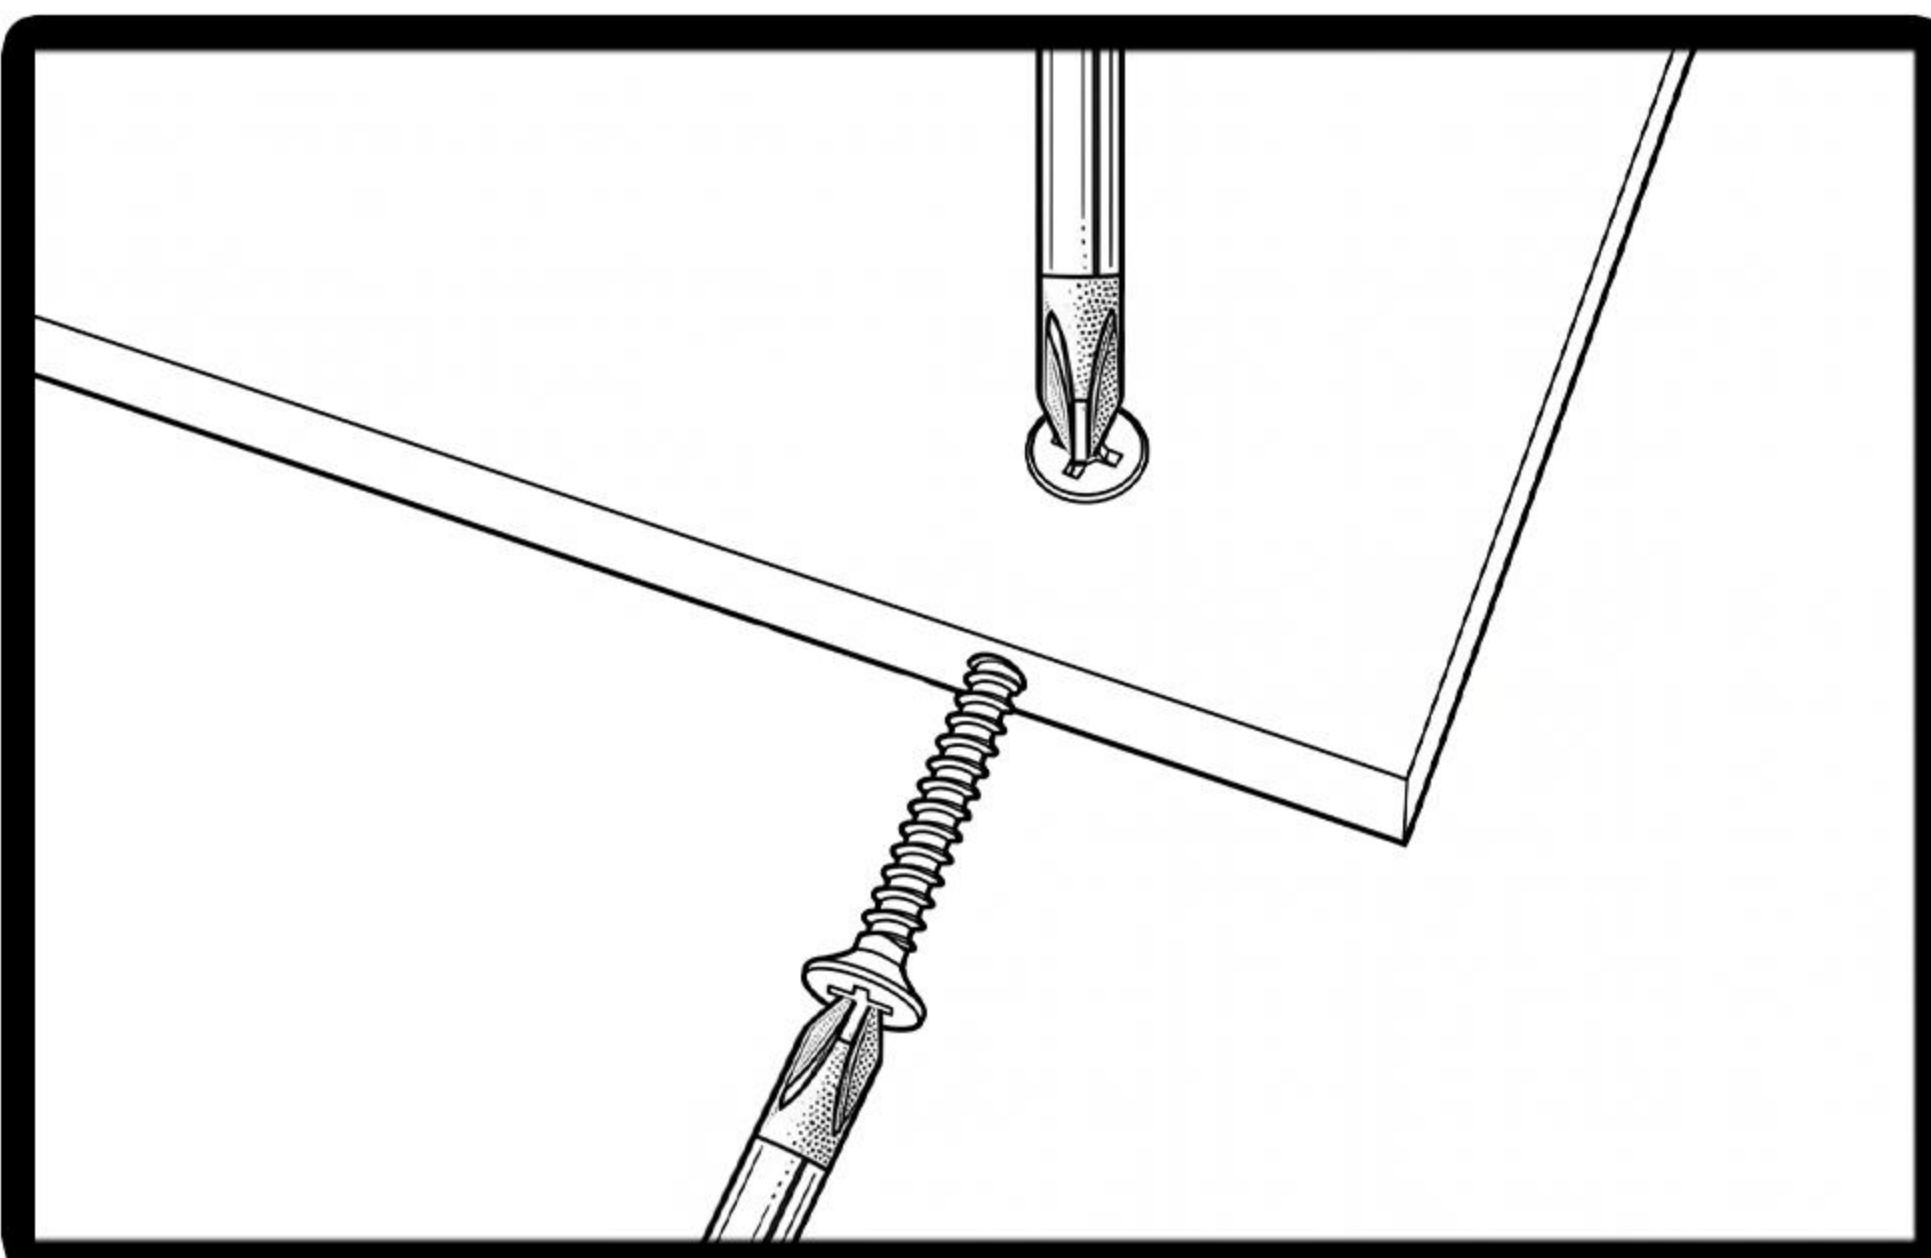




Tip

If the insert rotates, hold it in place with a screwdriver while tightening the screw with another screwdriver.

Important

Make sure the insert is fully seated.
Do not overtighten.






Installation Guide: Threaded Rod, Latch, Pre-drilled Hole (A+B)

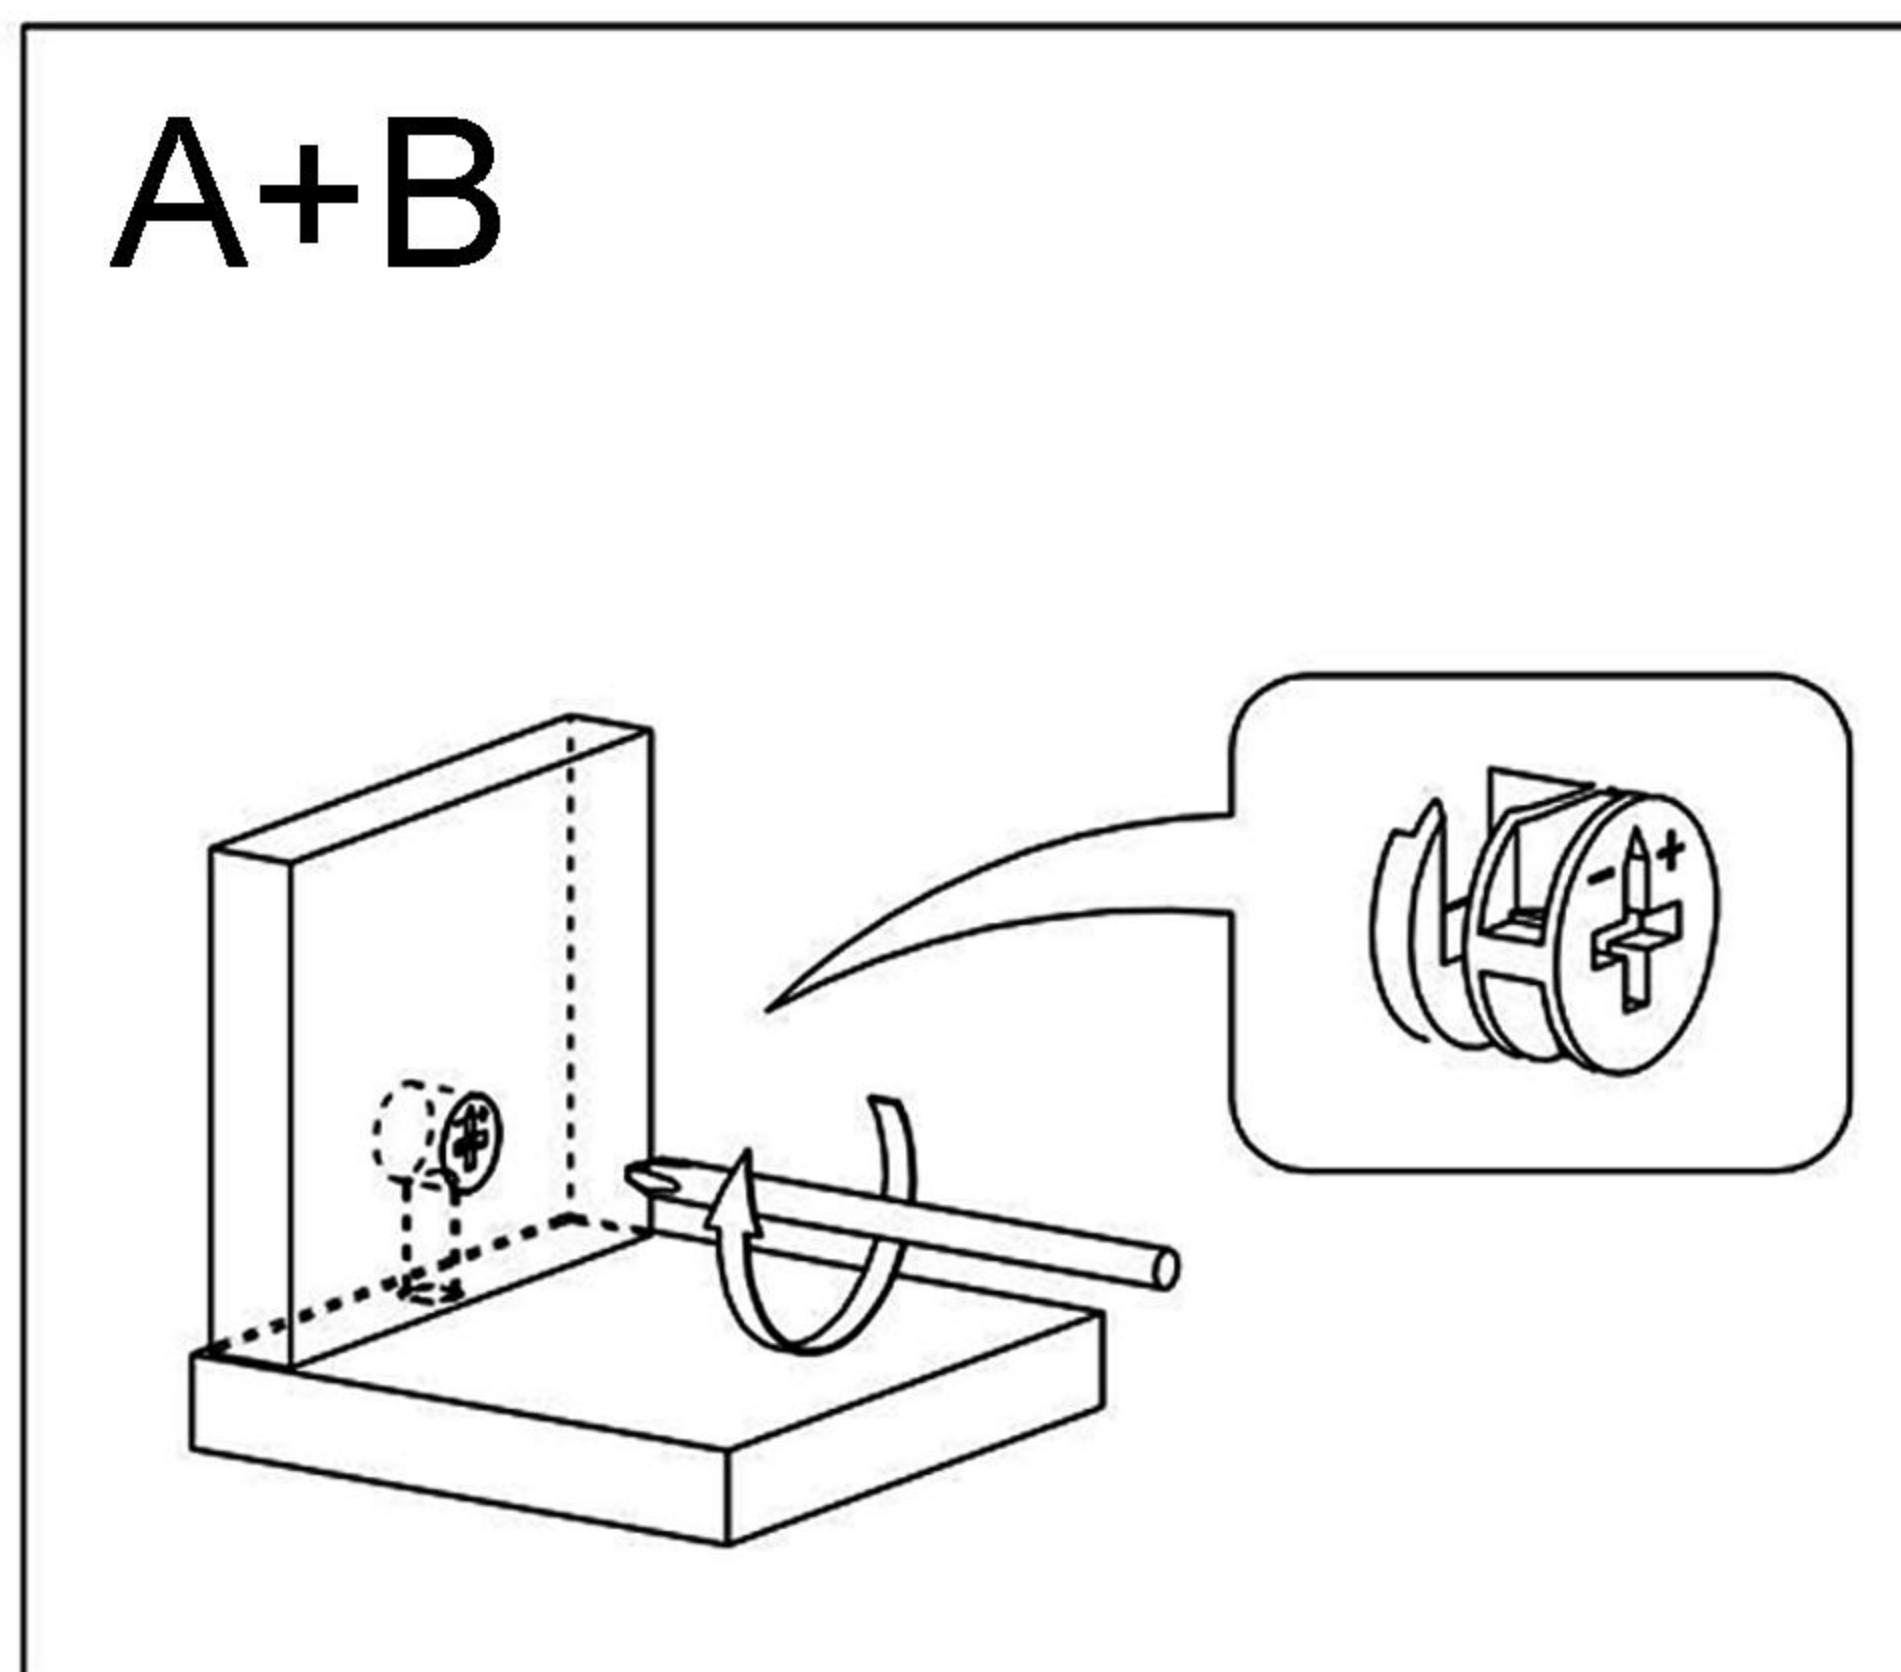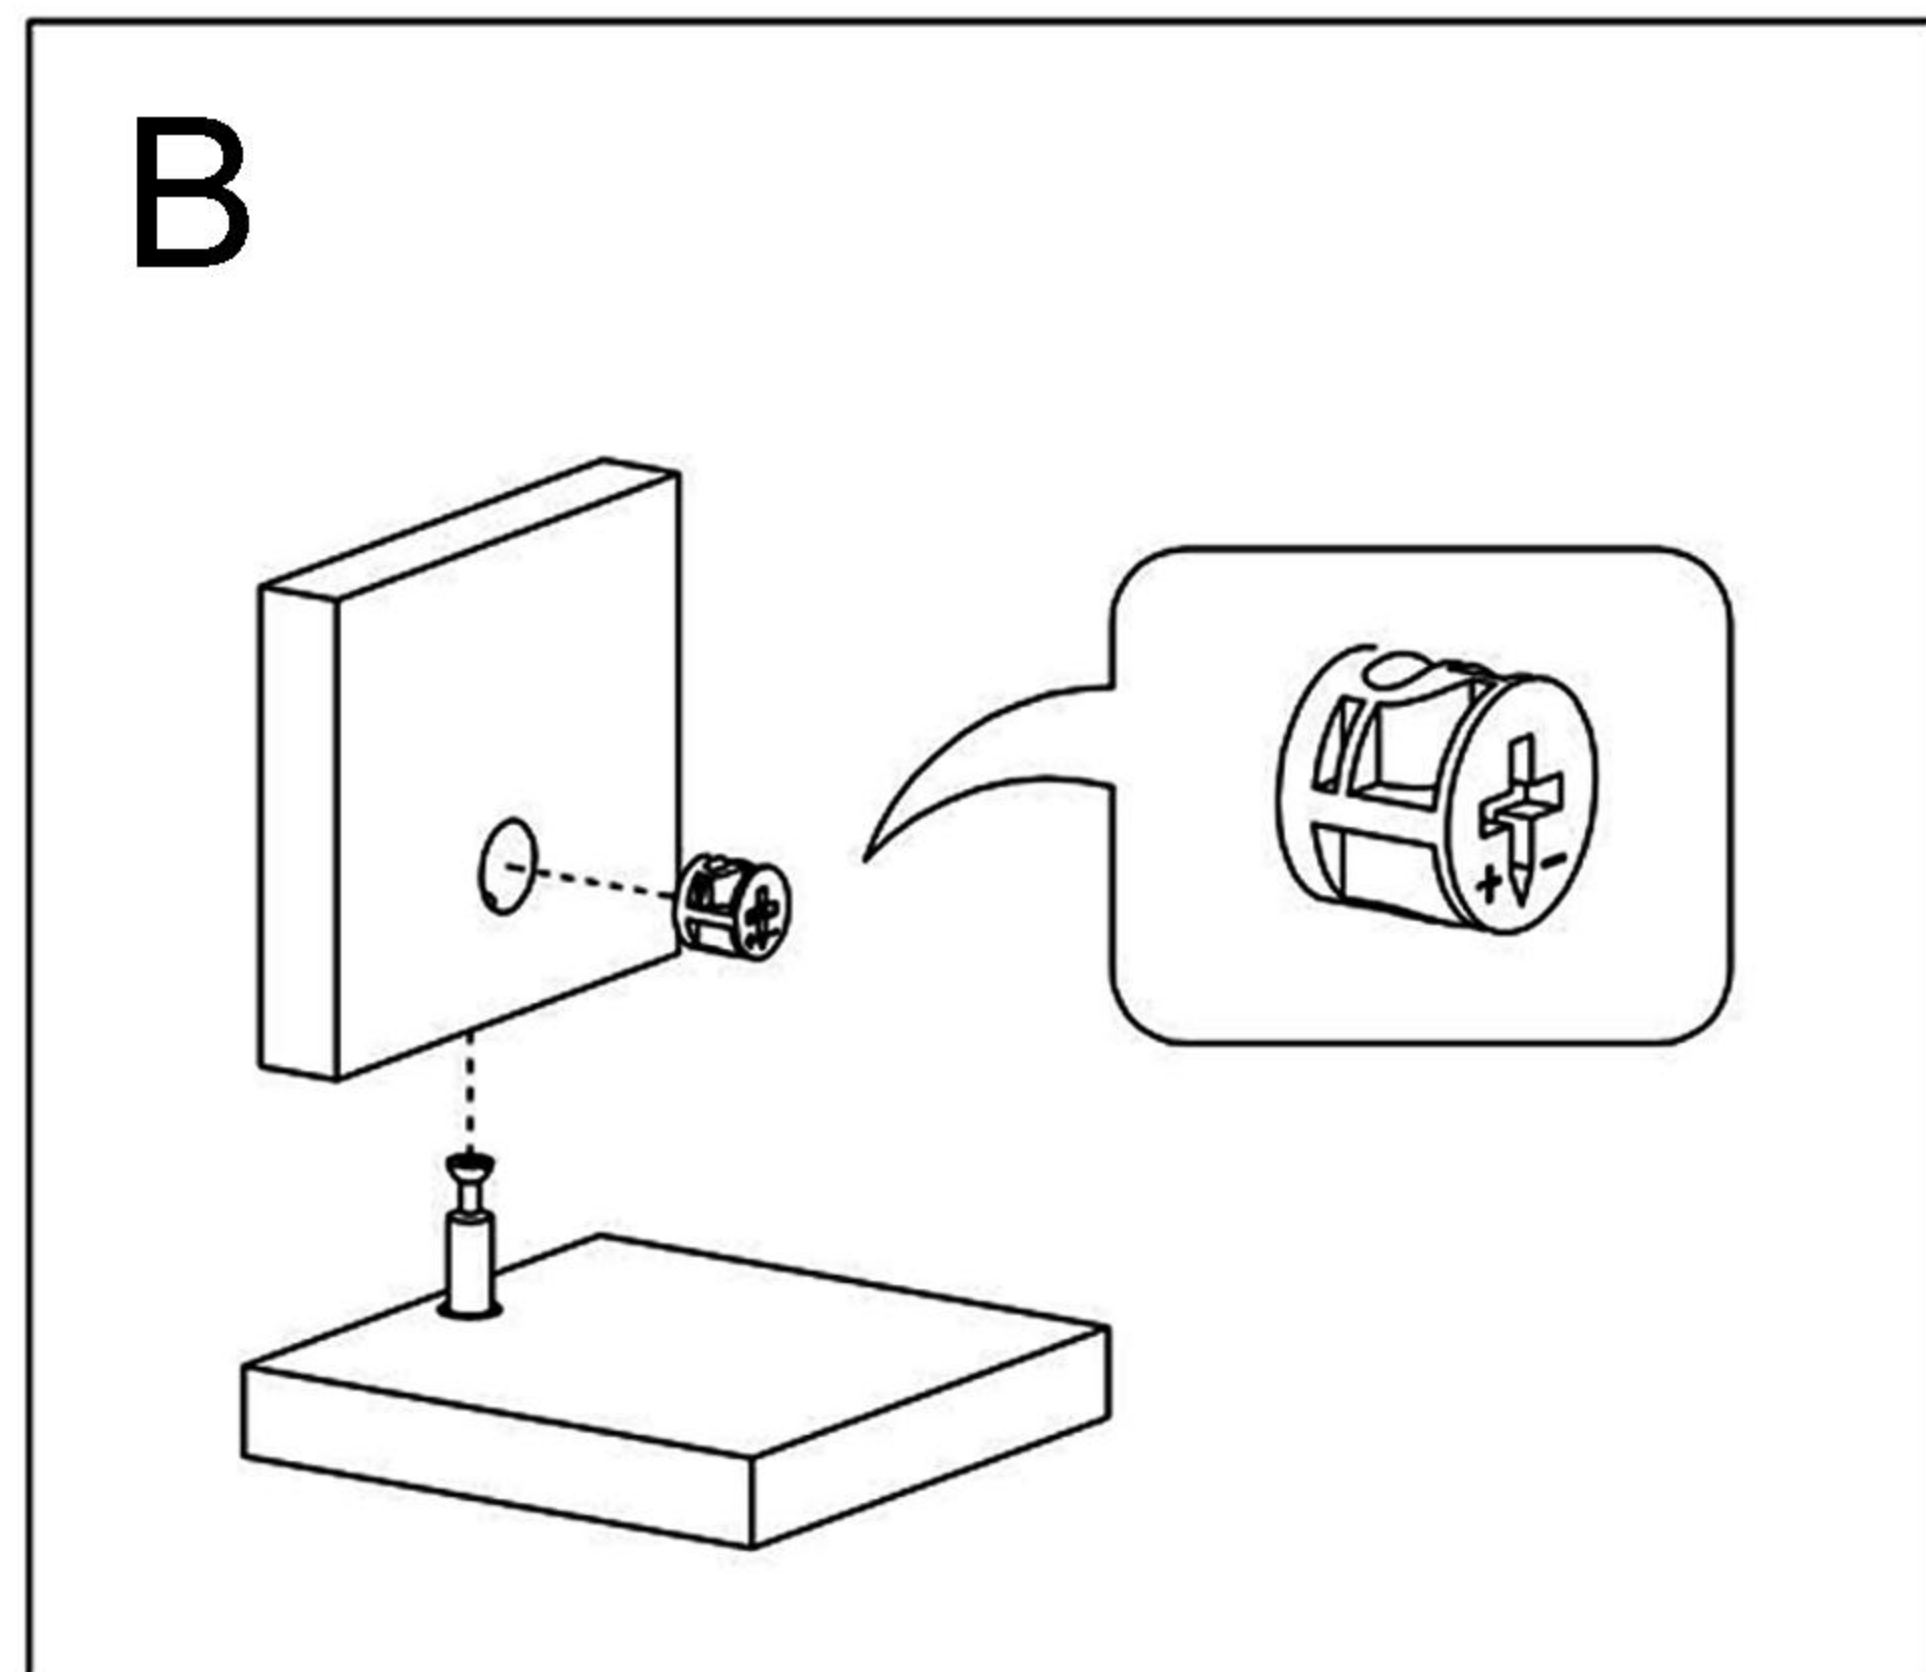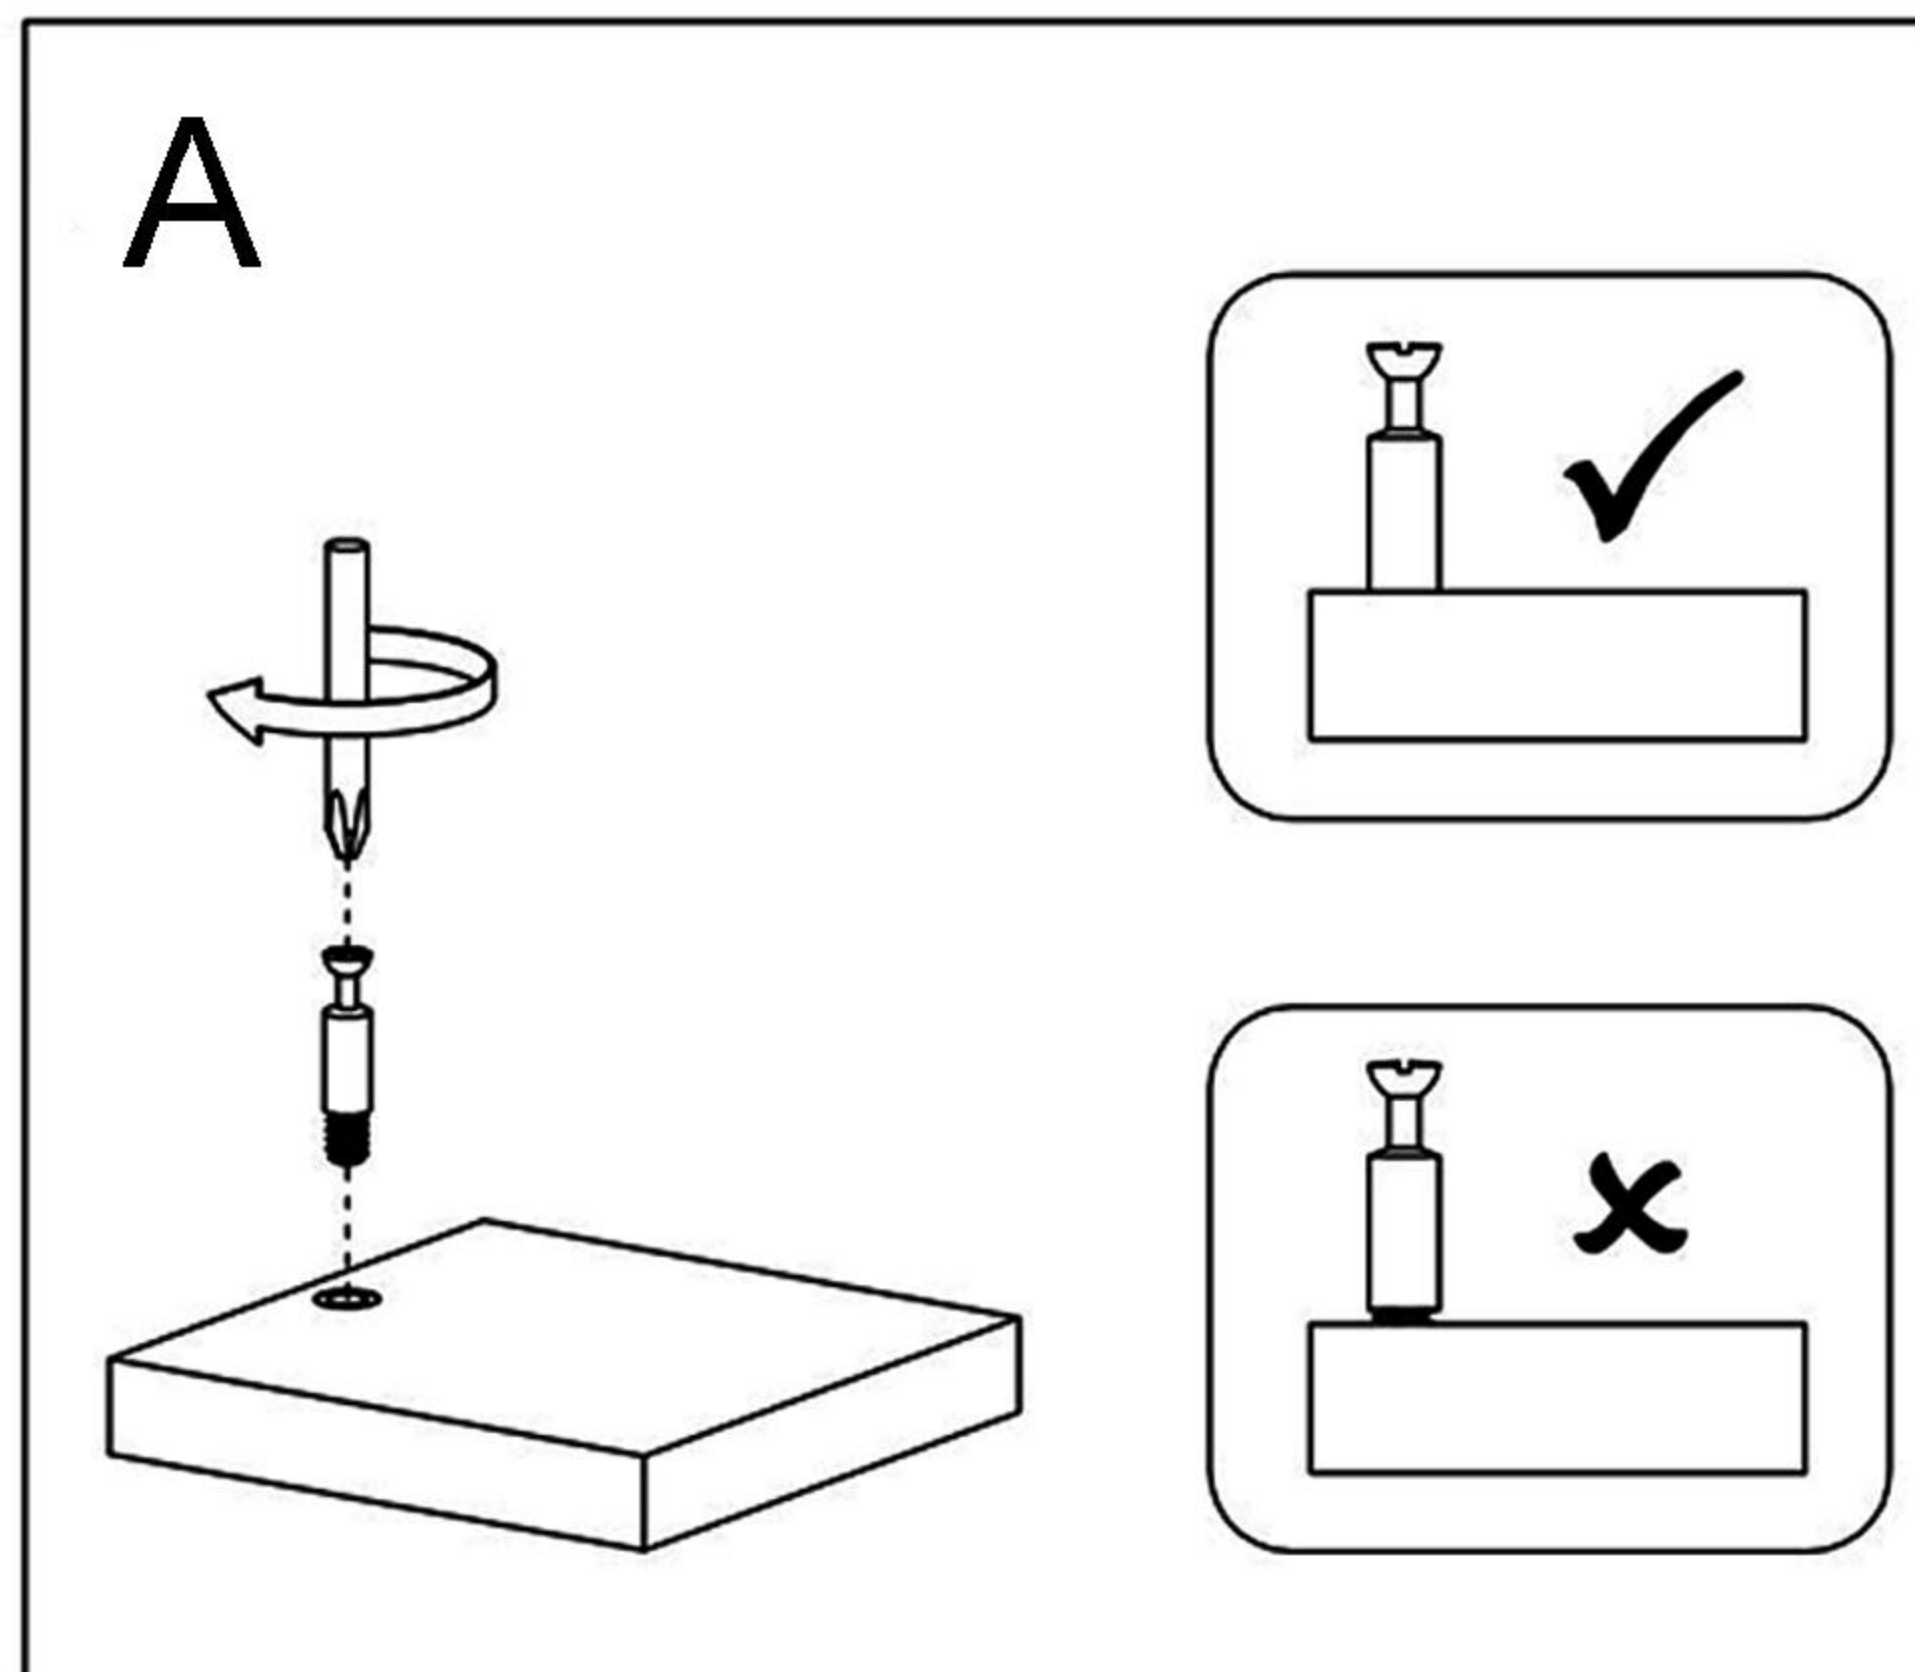


1. Screw the Threaded Rod into the Pre-drilled Hole
2. Insert the installed Threaded Rod into the corresponding hole of the other piece. Press Latch into the hole. Note that the cross arrow corresponds to the insertion direction of the Threaded Rod.
3. Use a cross screwdriver to tighten Latch clockwise. Be careful not to use excessive force.

Step 1:

Attach part F to the back of panel 2.

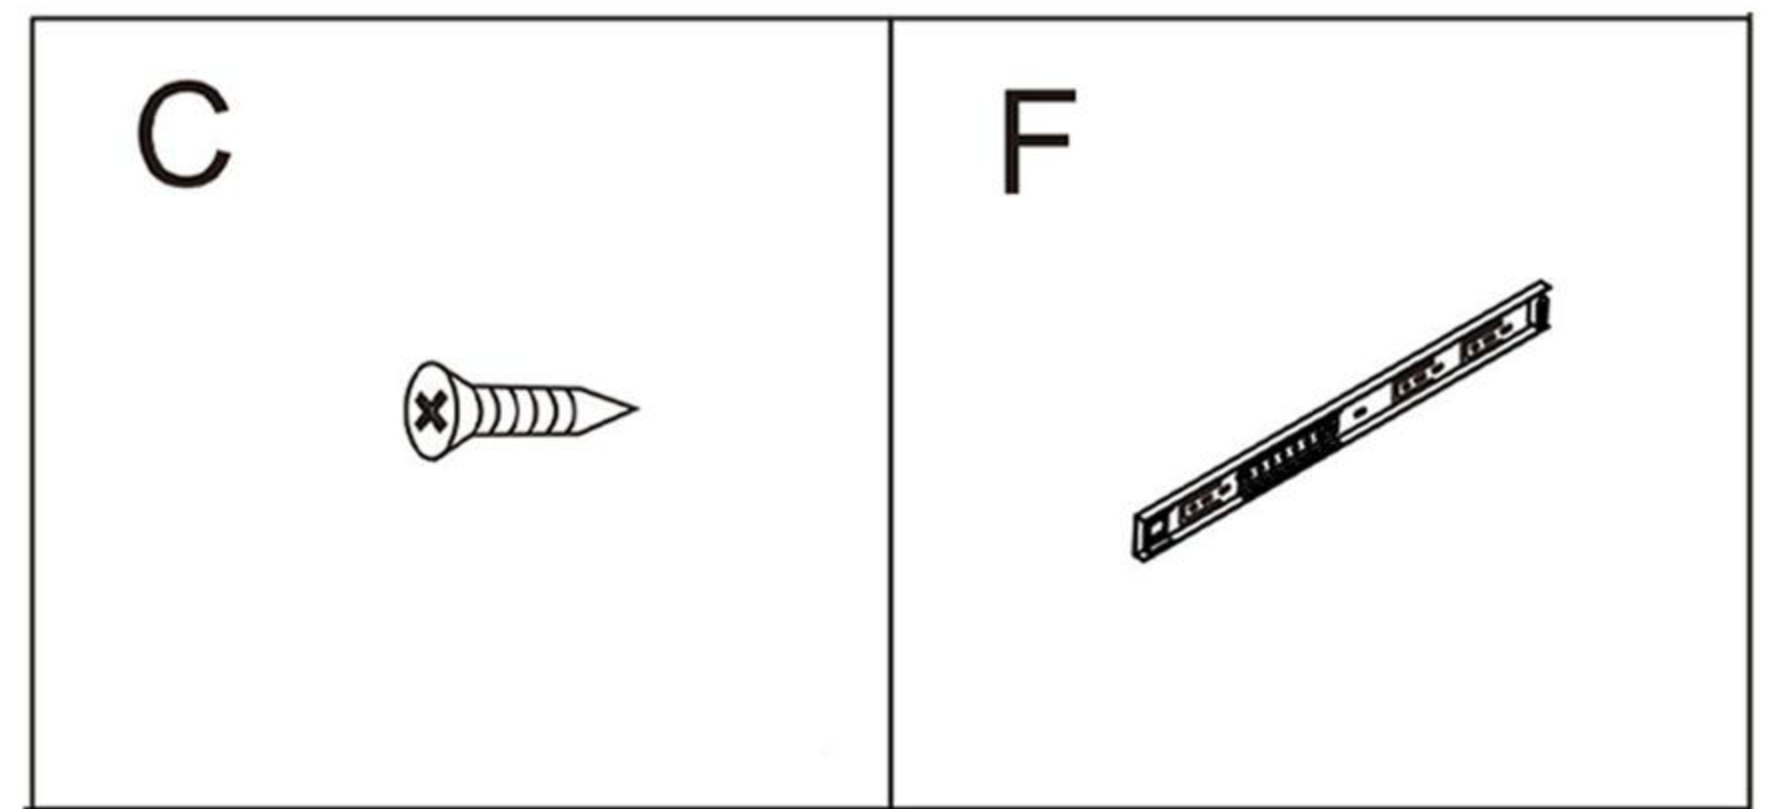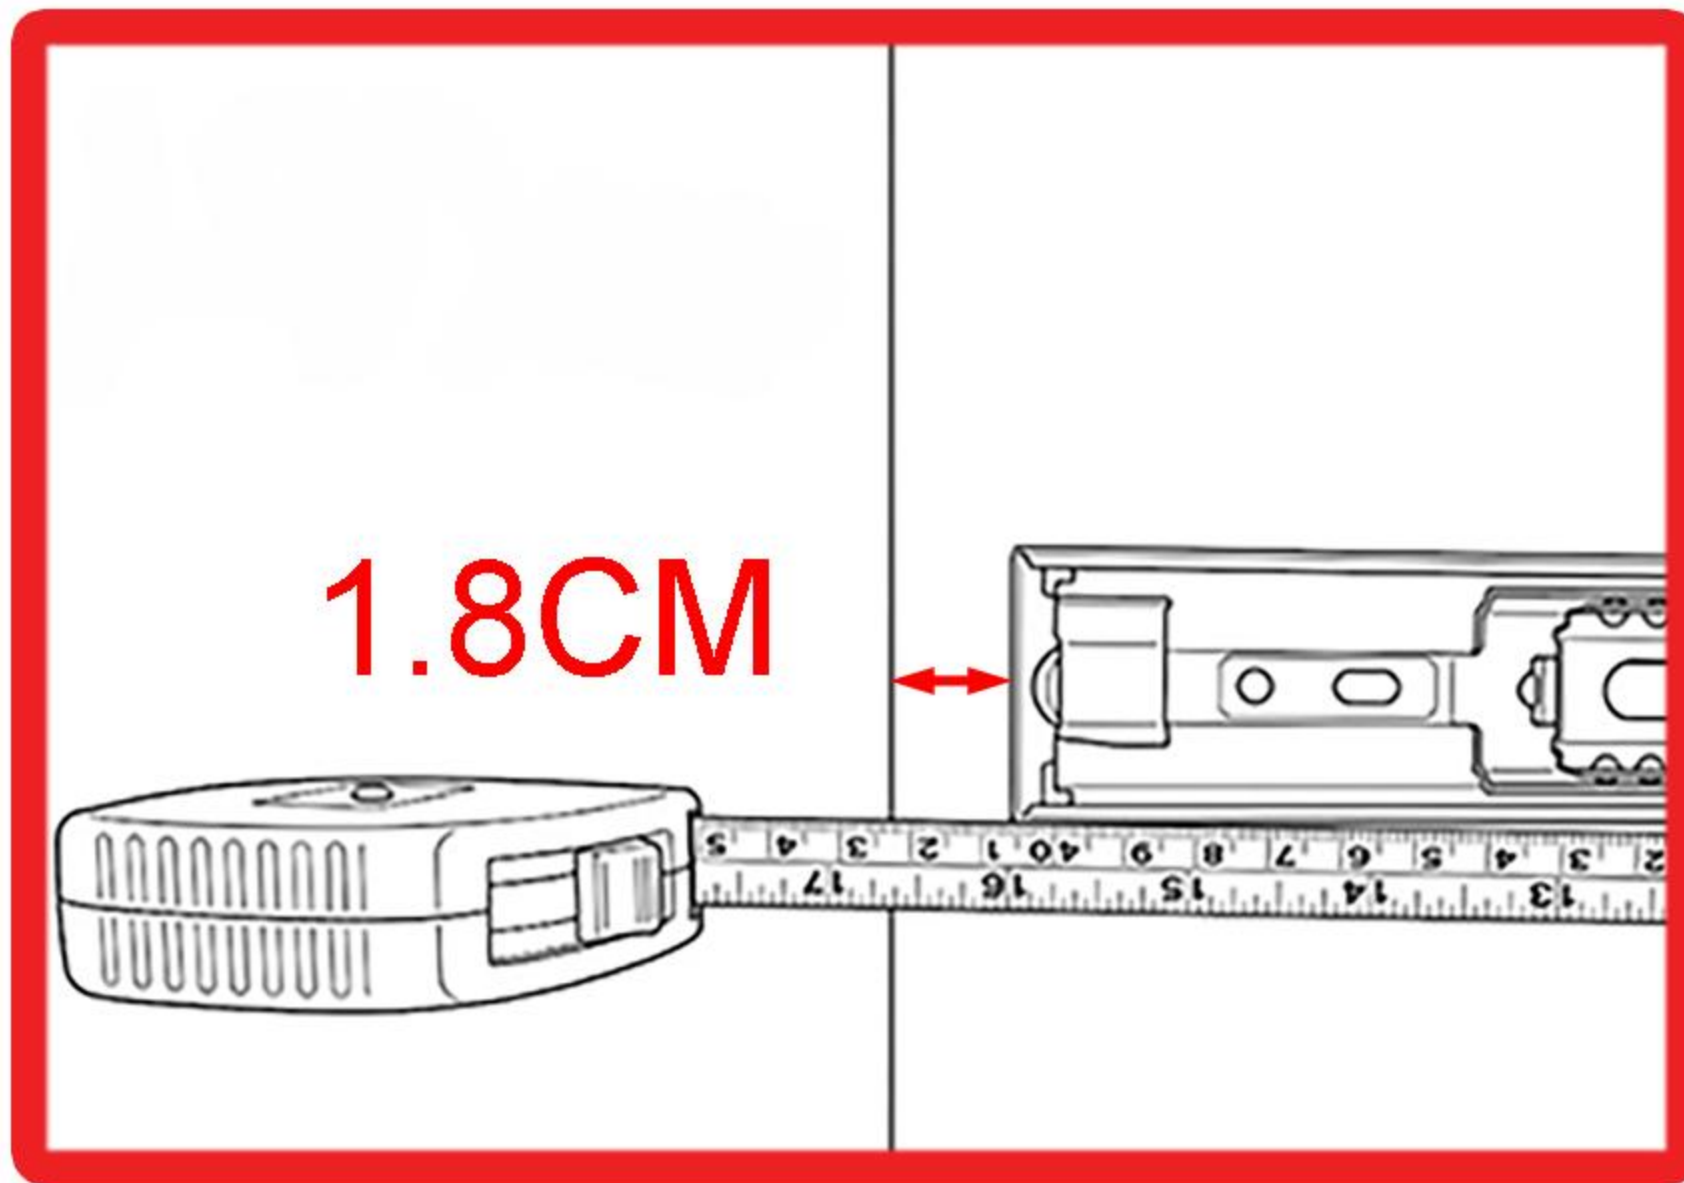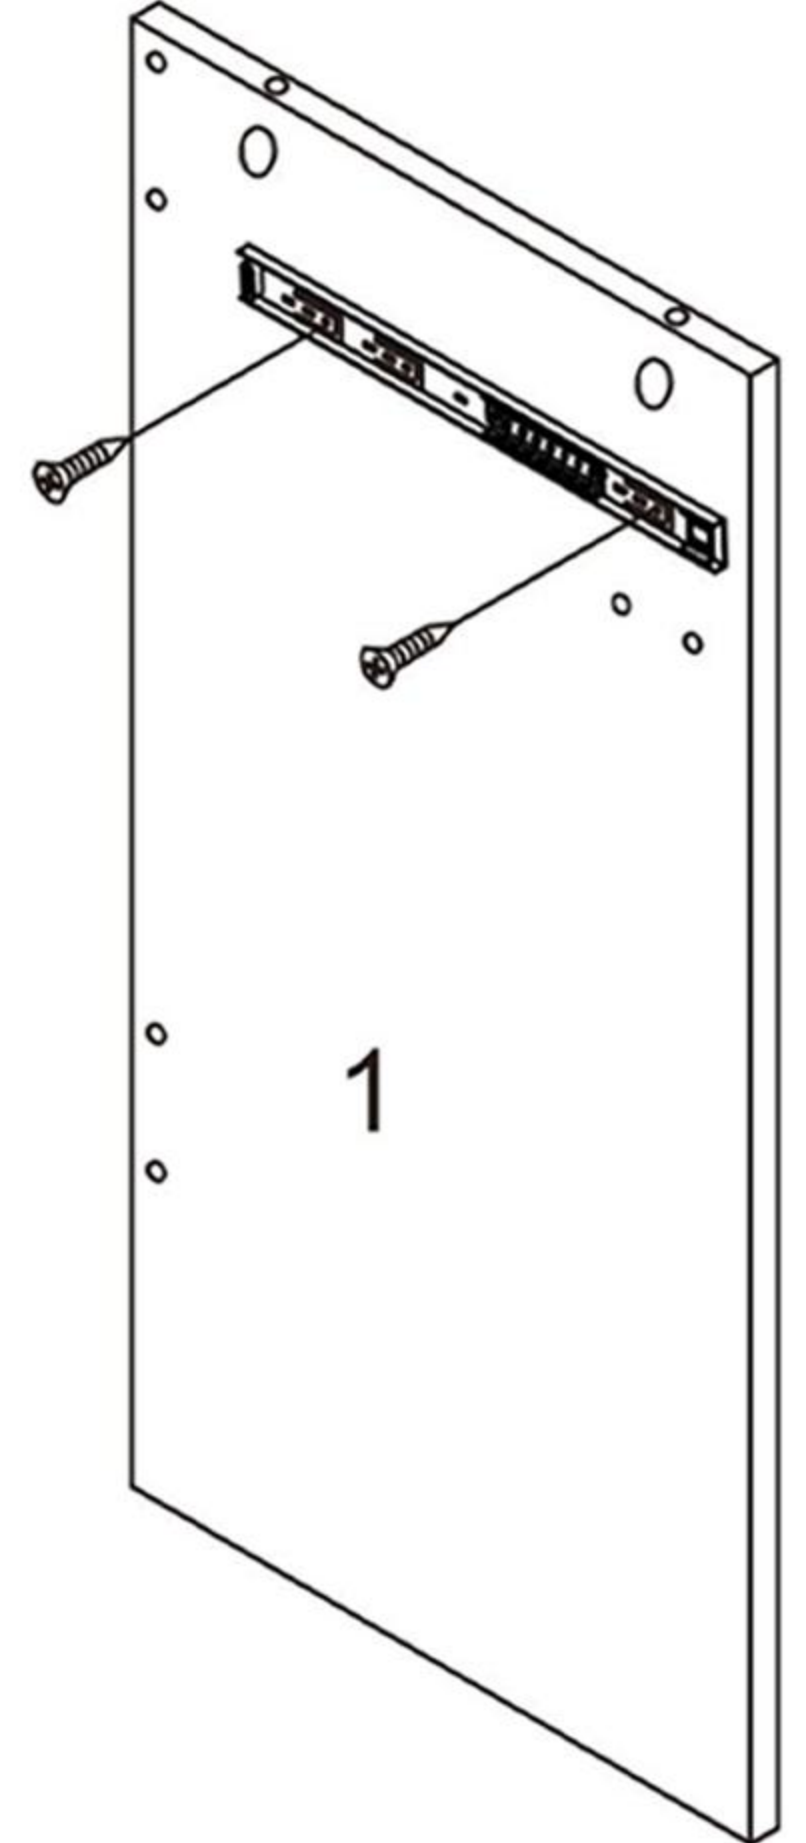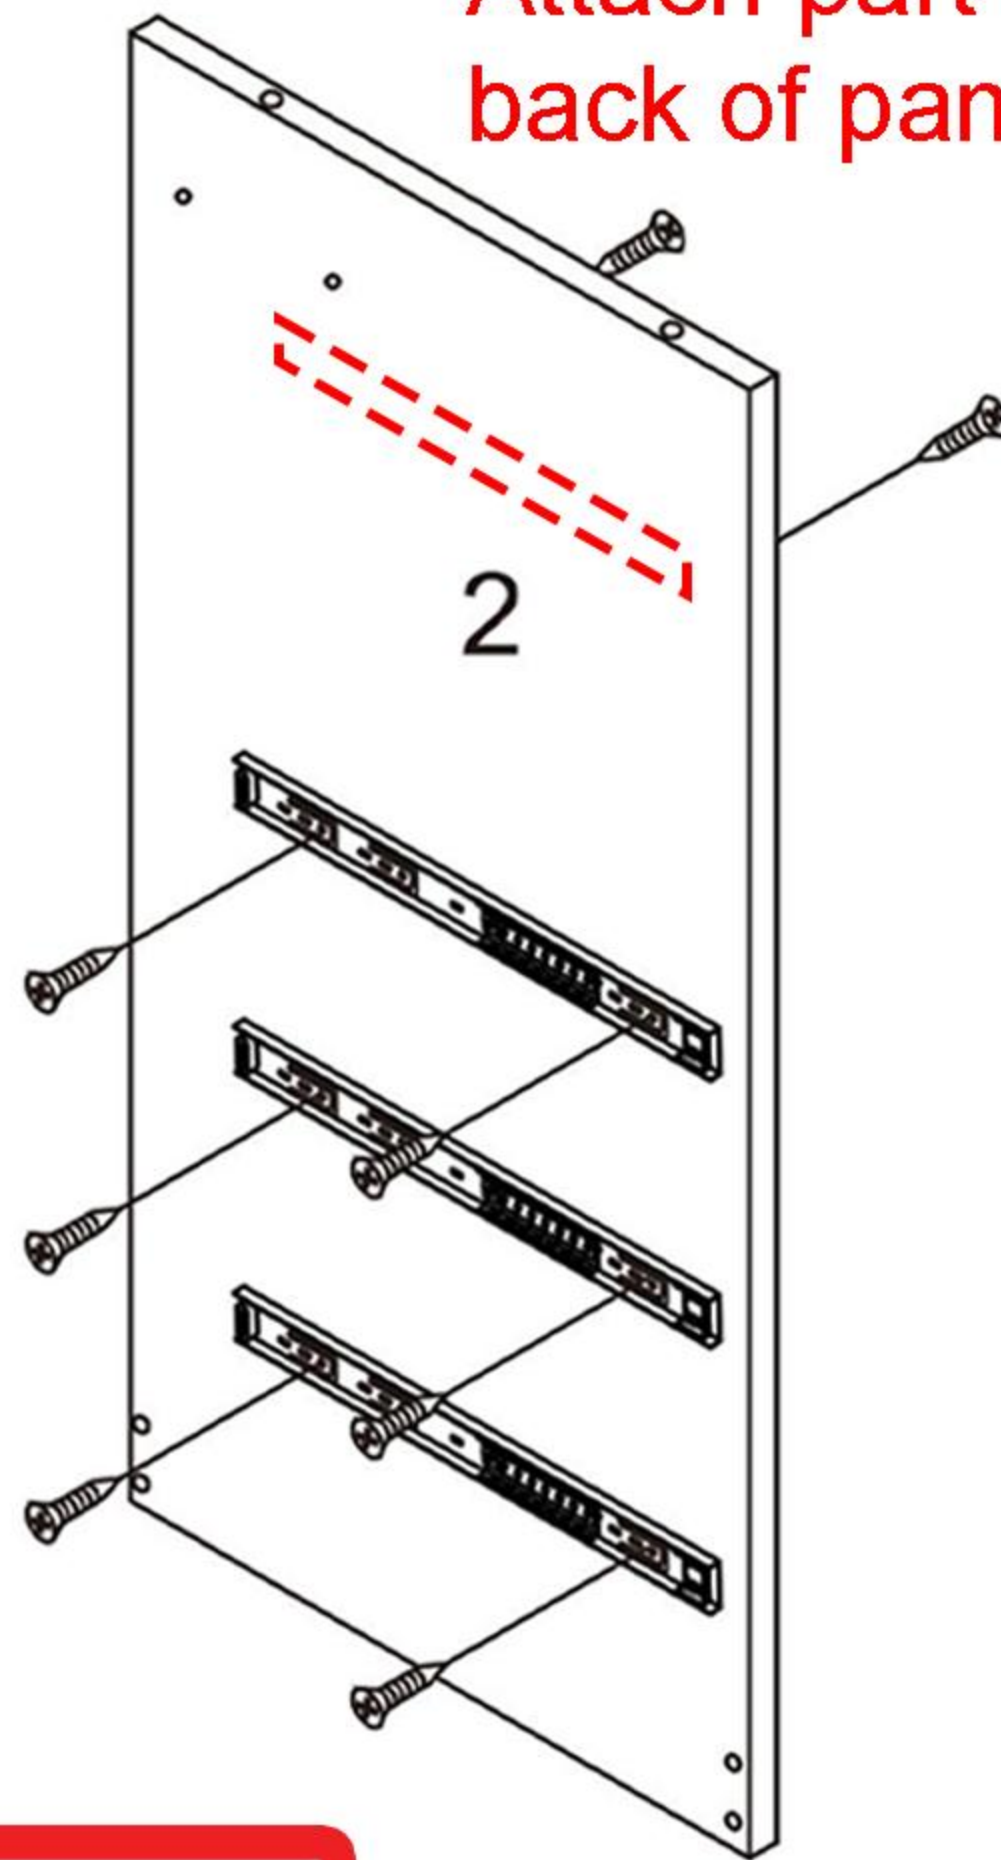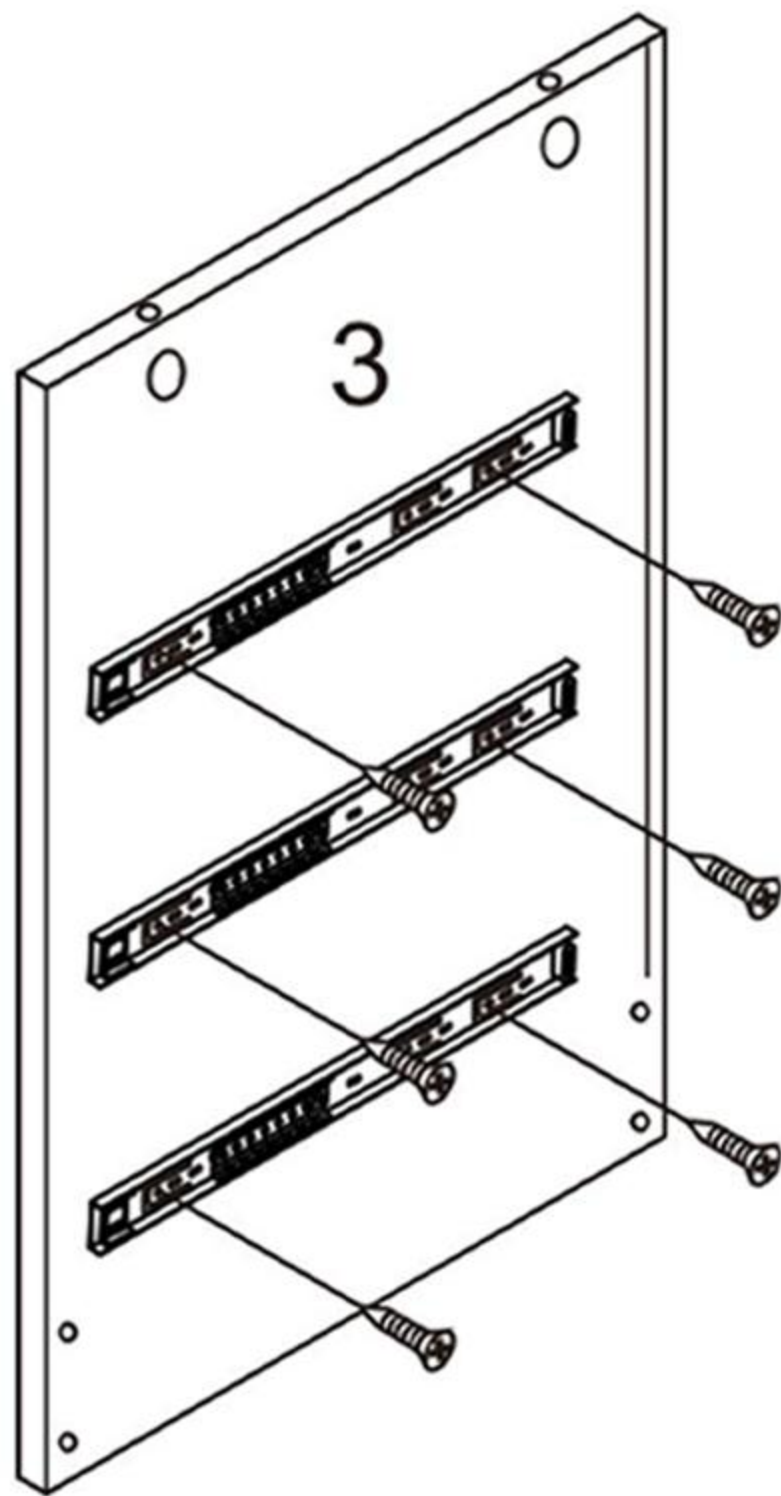



Install the E main body parts, leaving a 1.8cm gap from the edge.

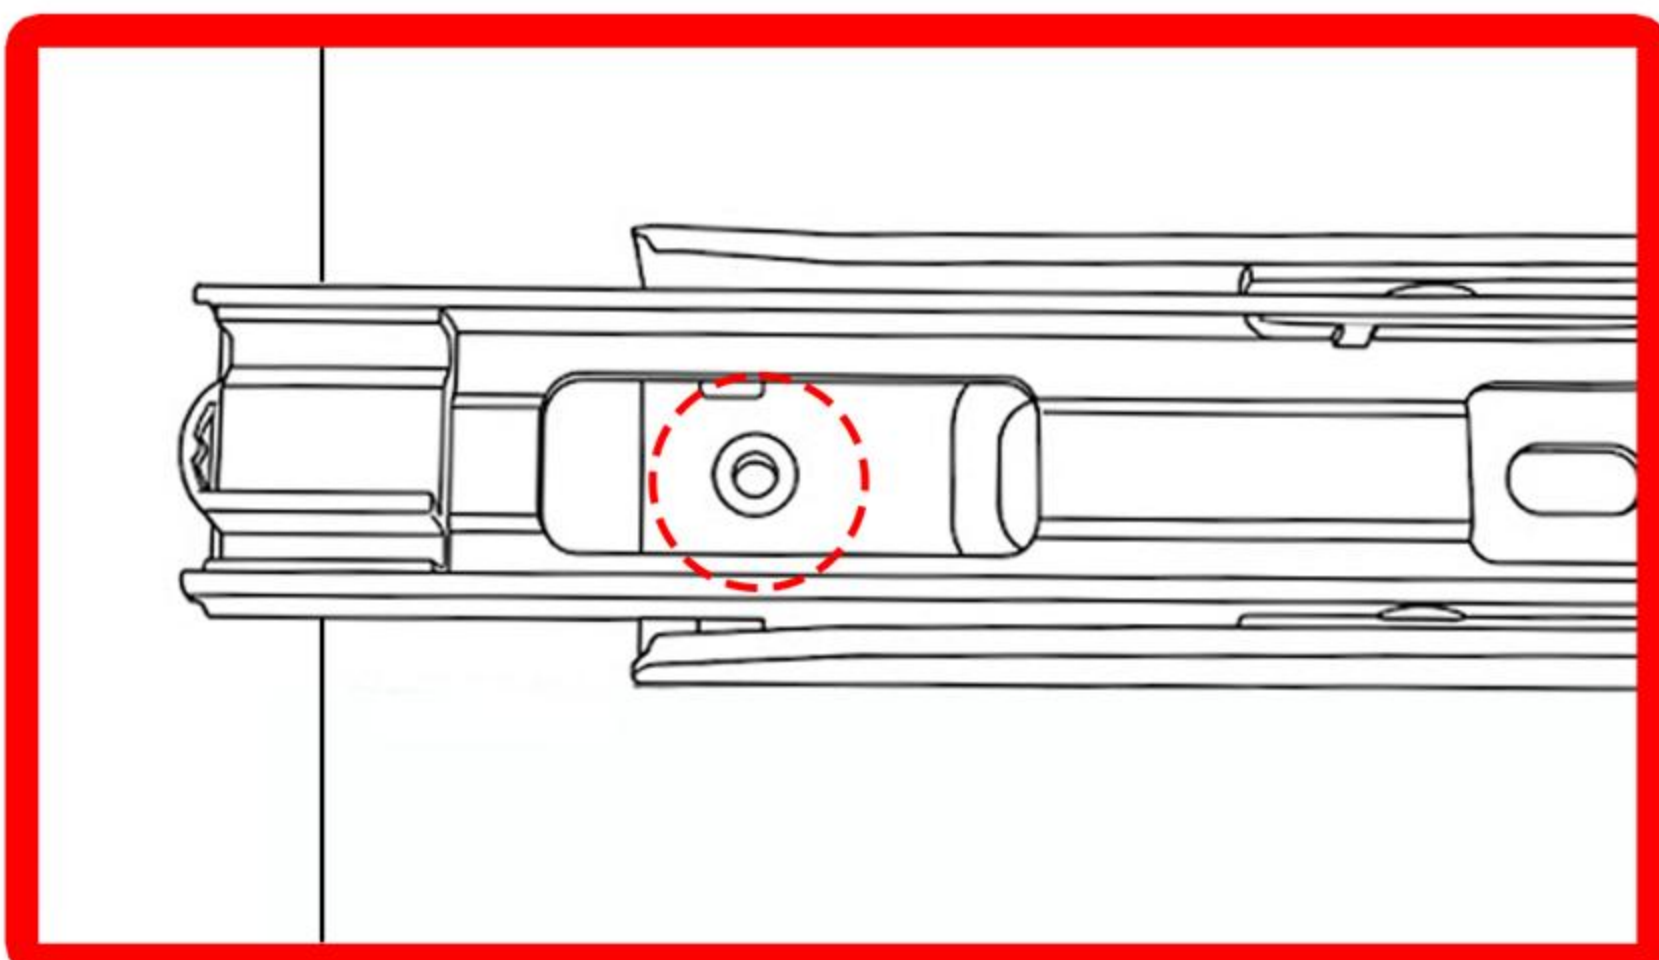


Slide the inner metal plate until the first hole on part F aligns with the first hole at the edge of the panel.

Step 2:

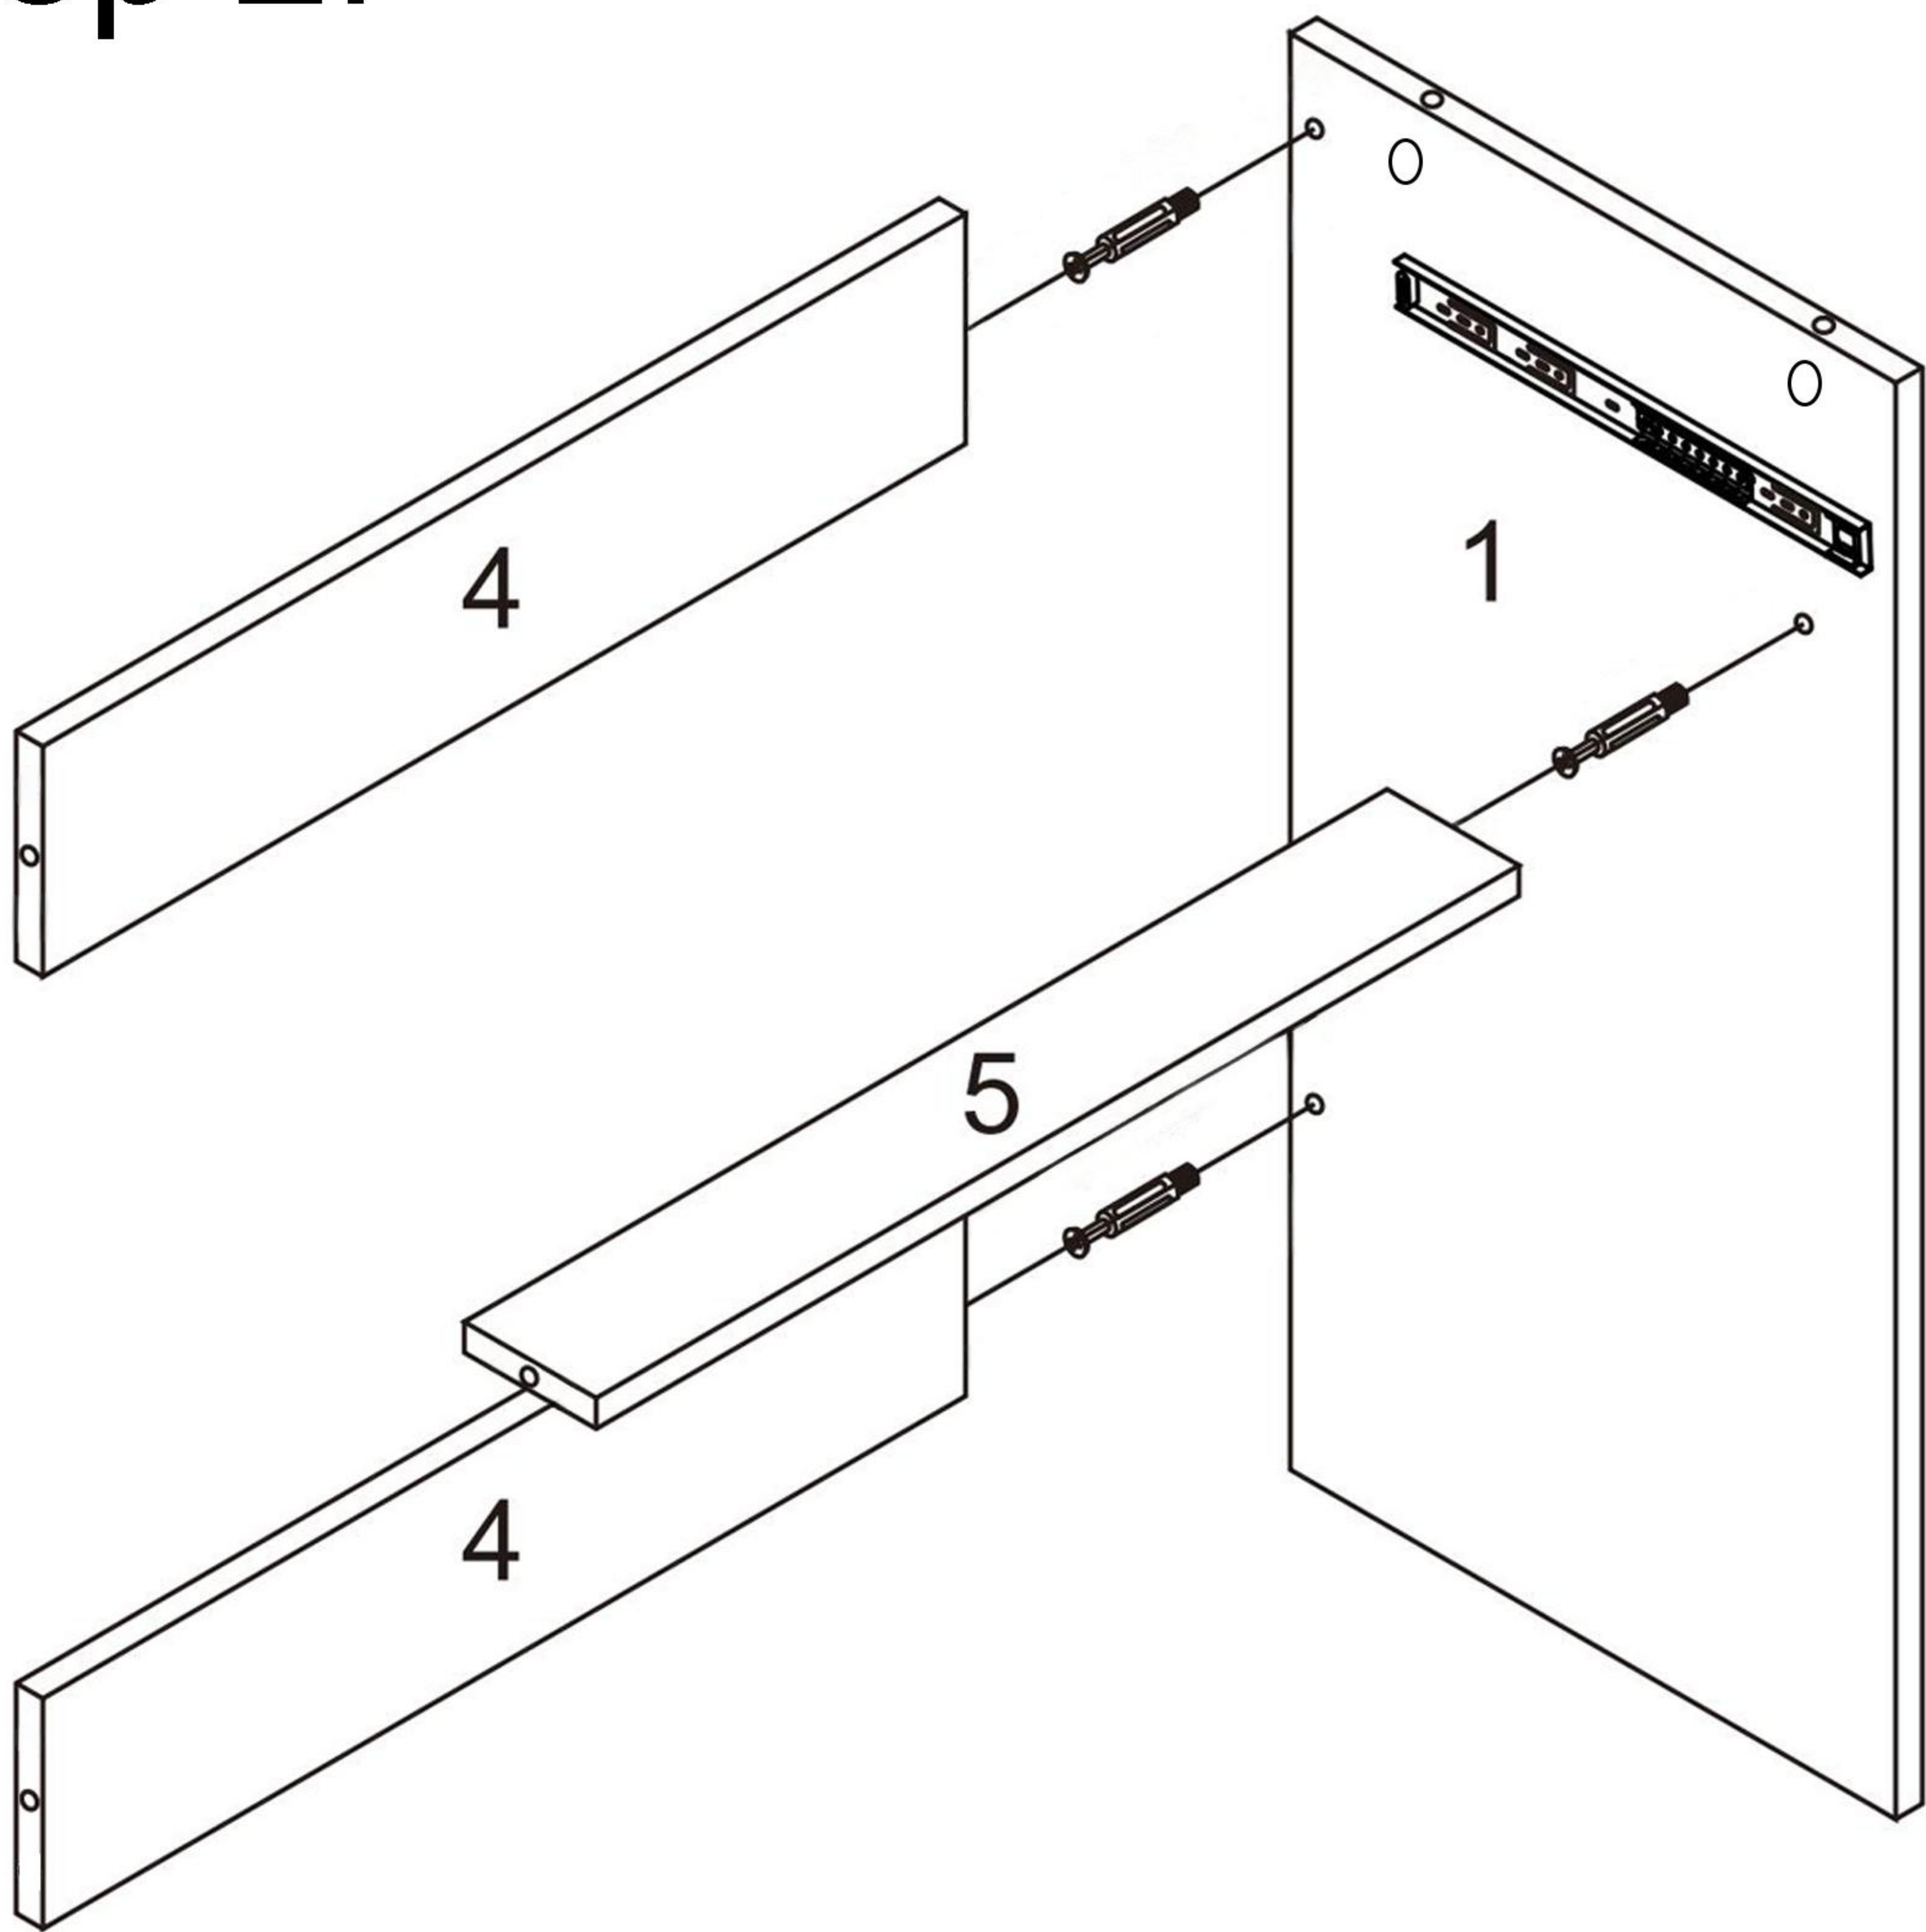

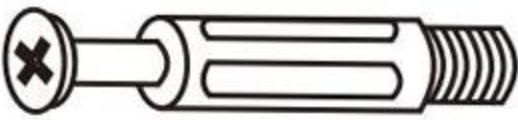A	B
	

Step 3:

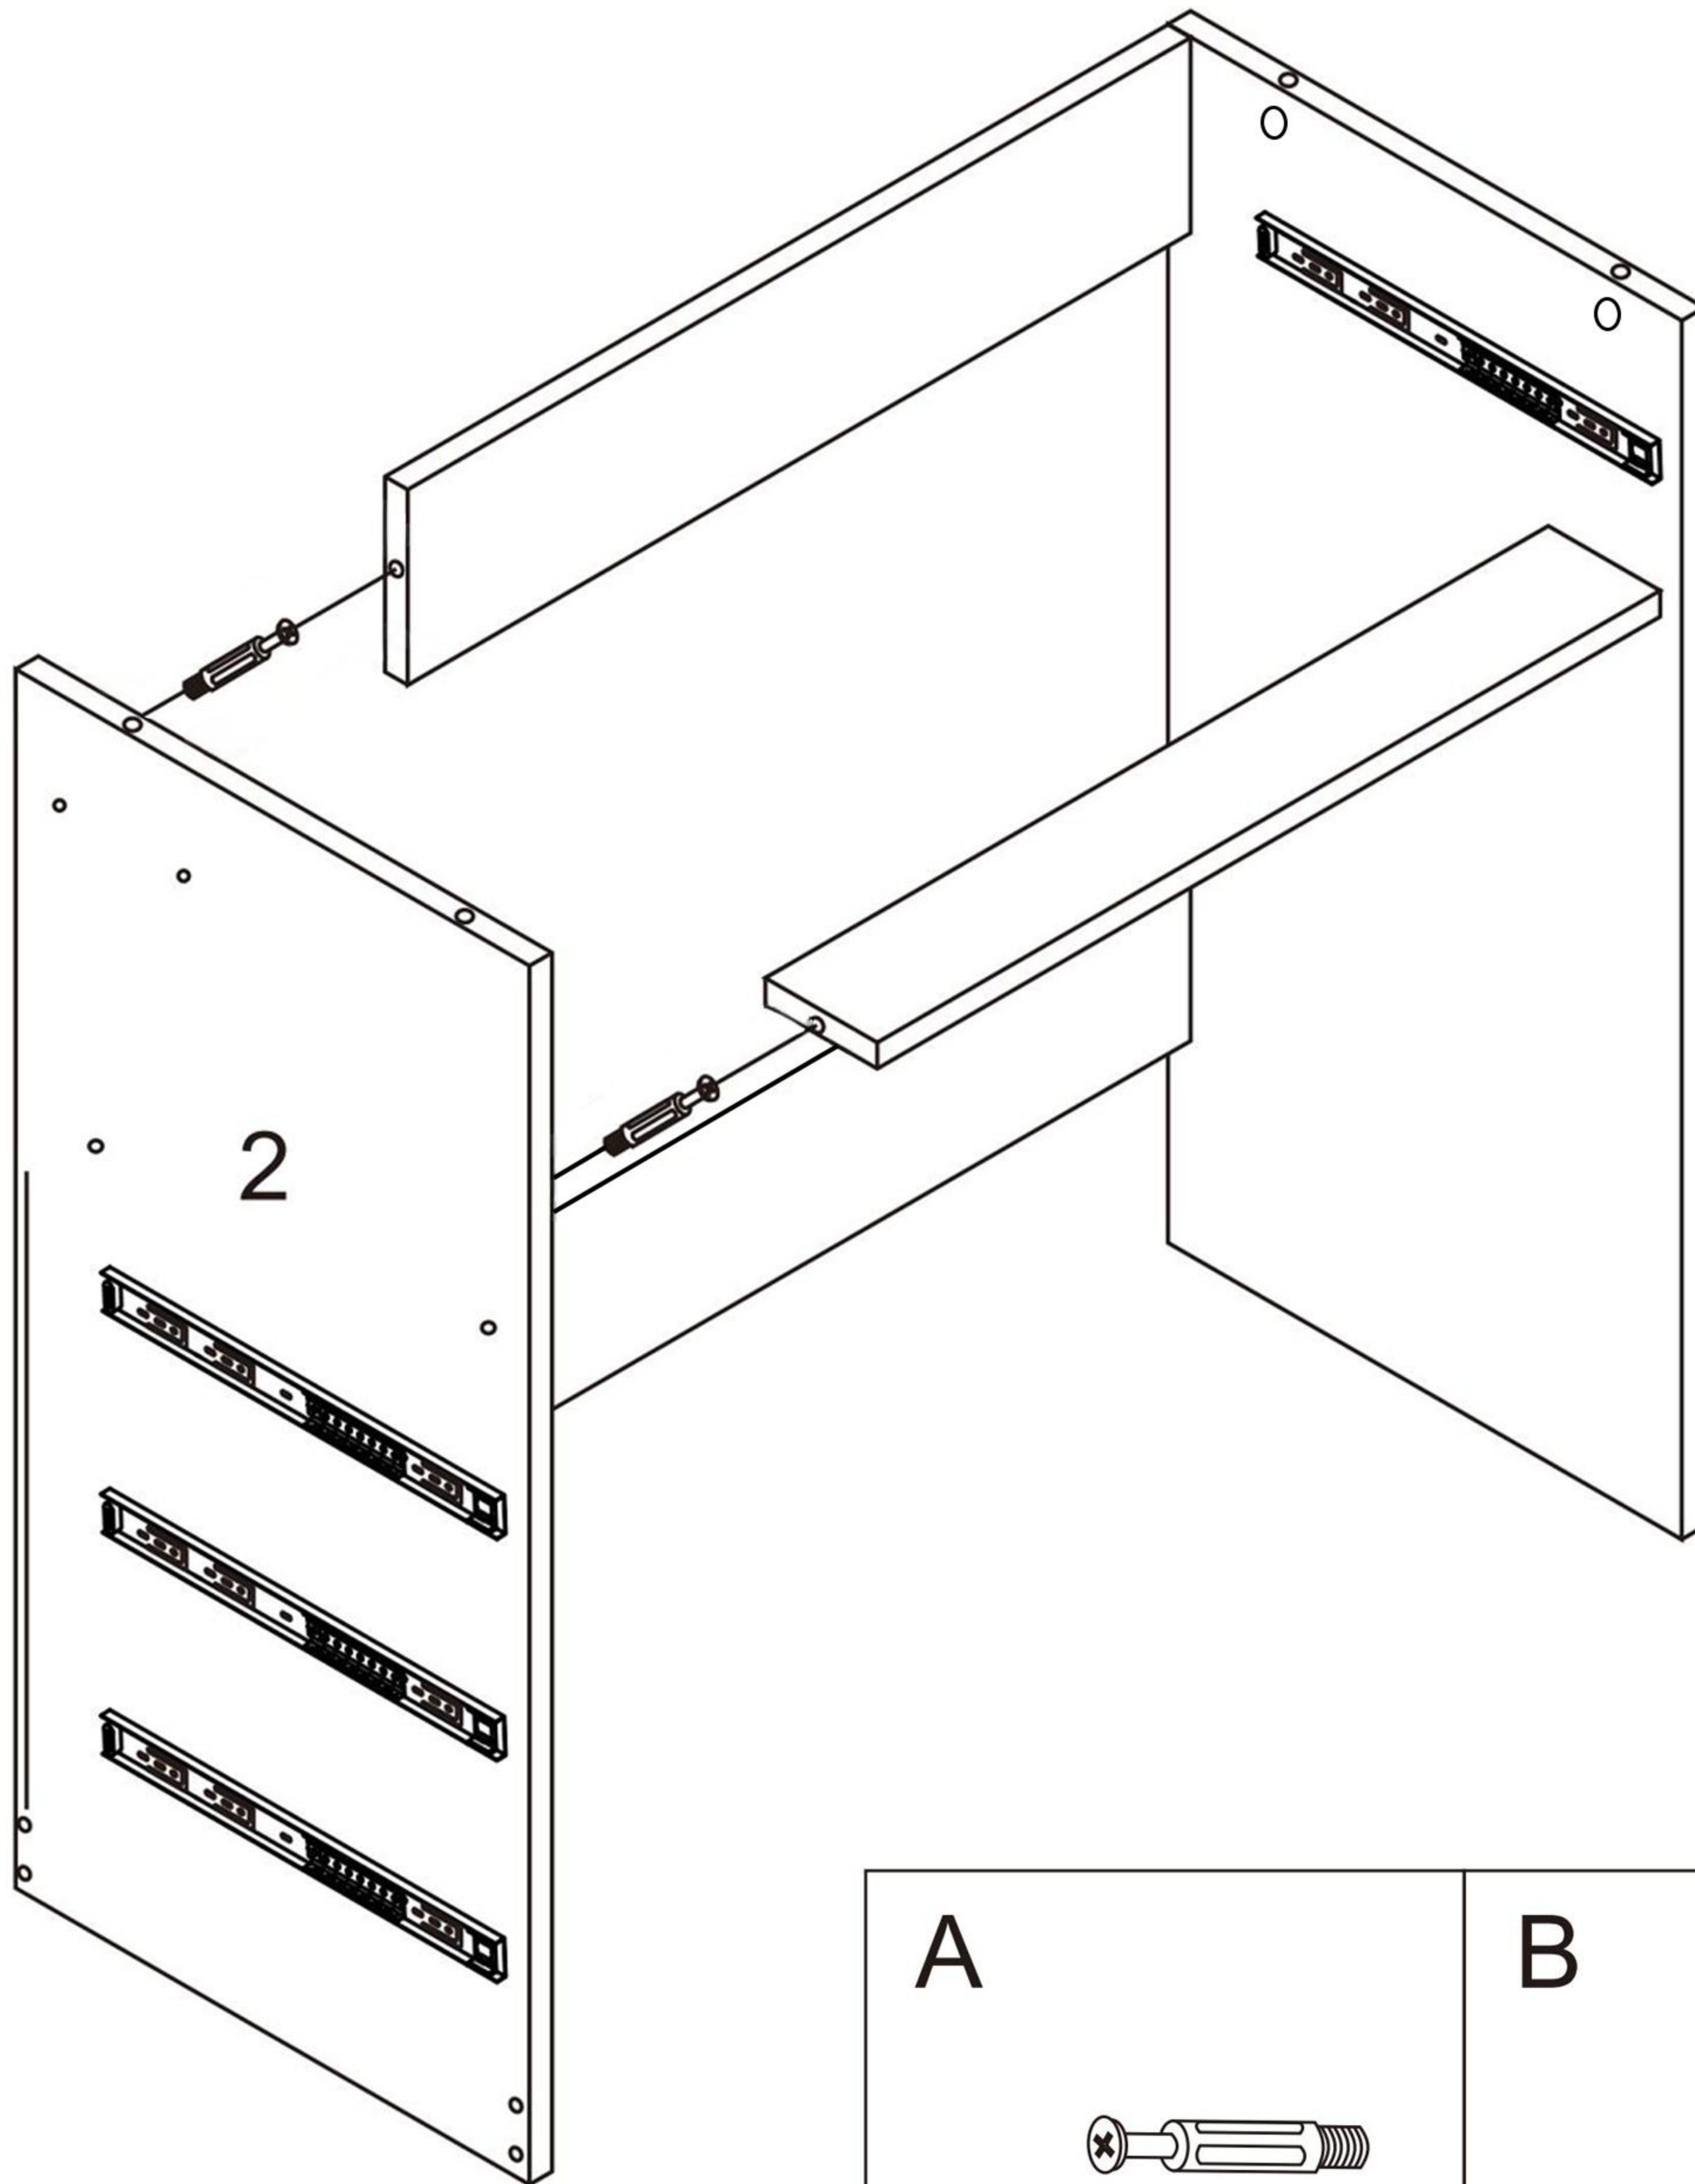


A



B



Step 4:

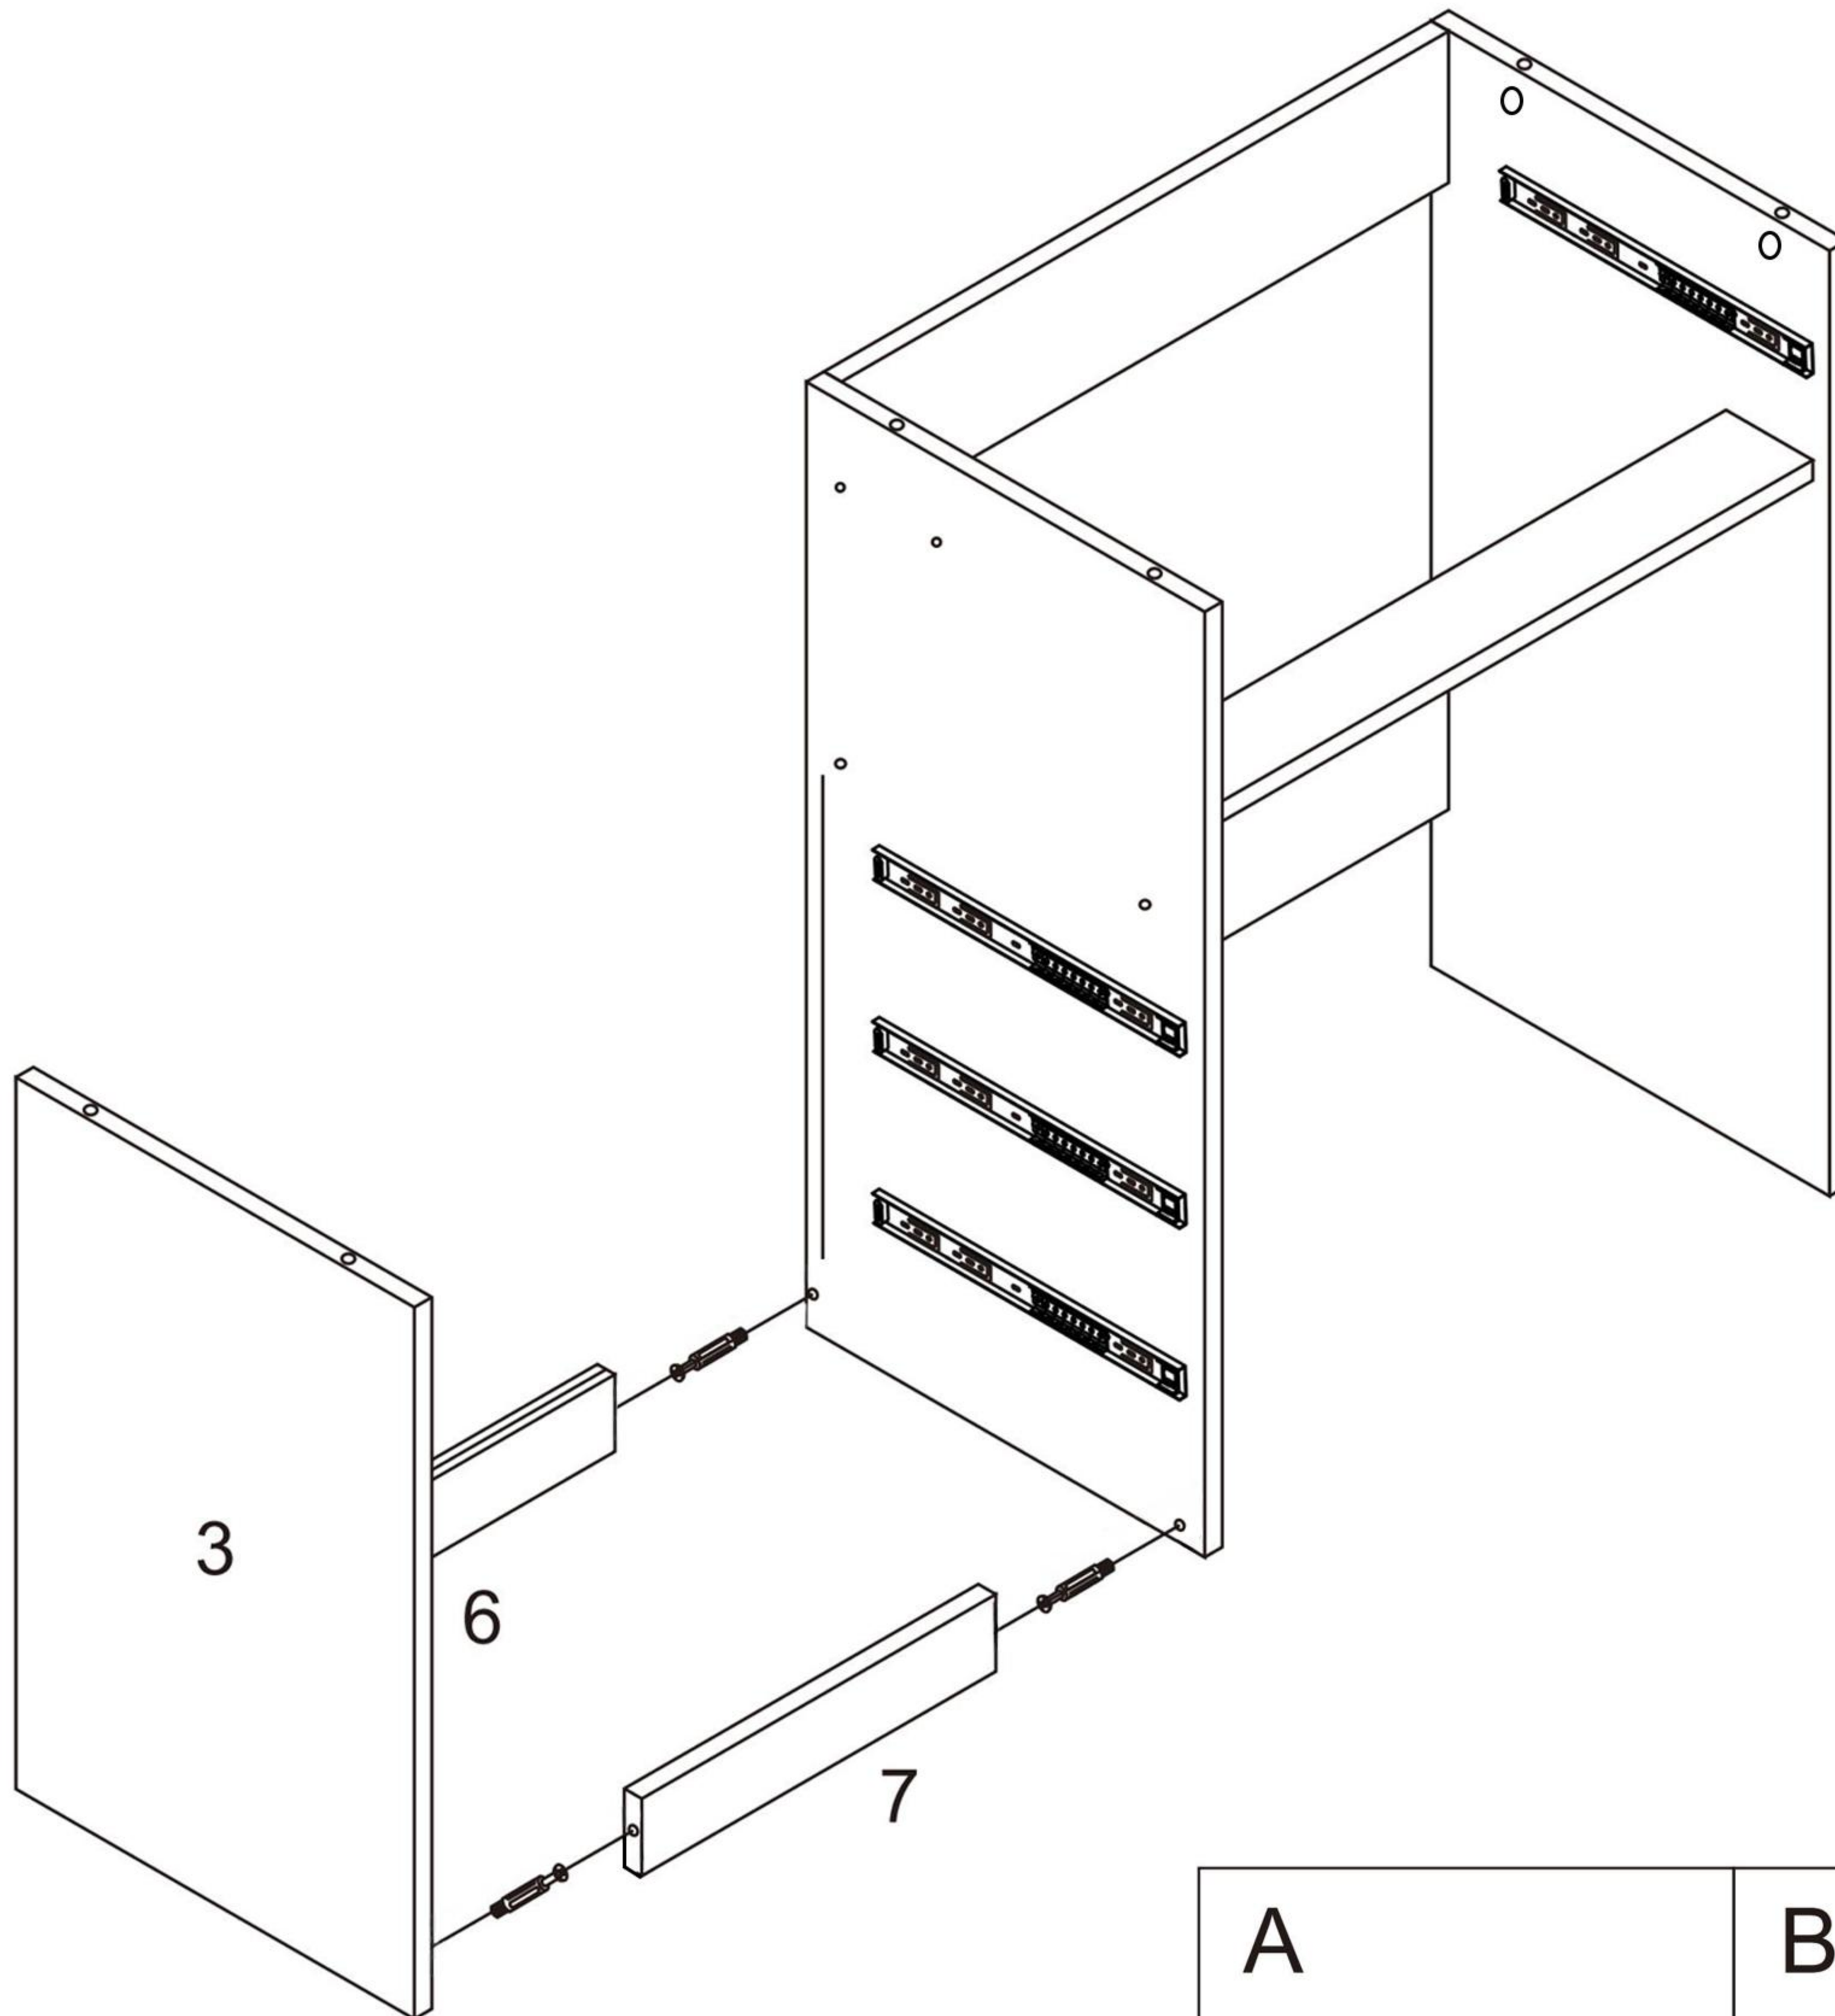


A




B




Step 5:

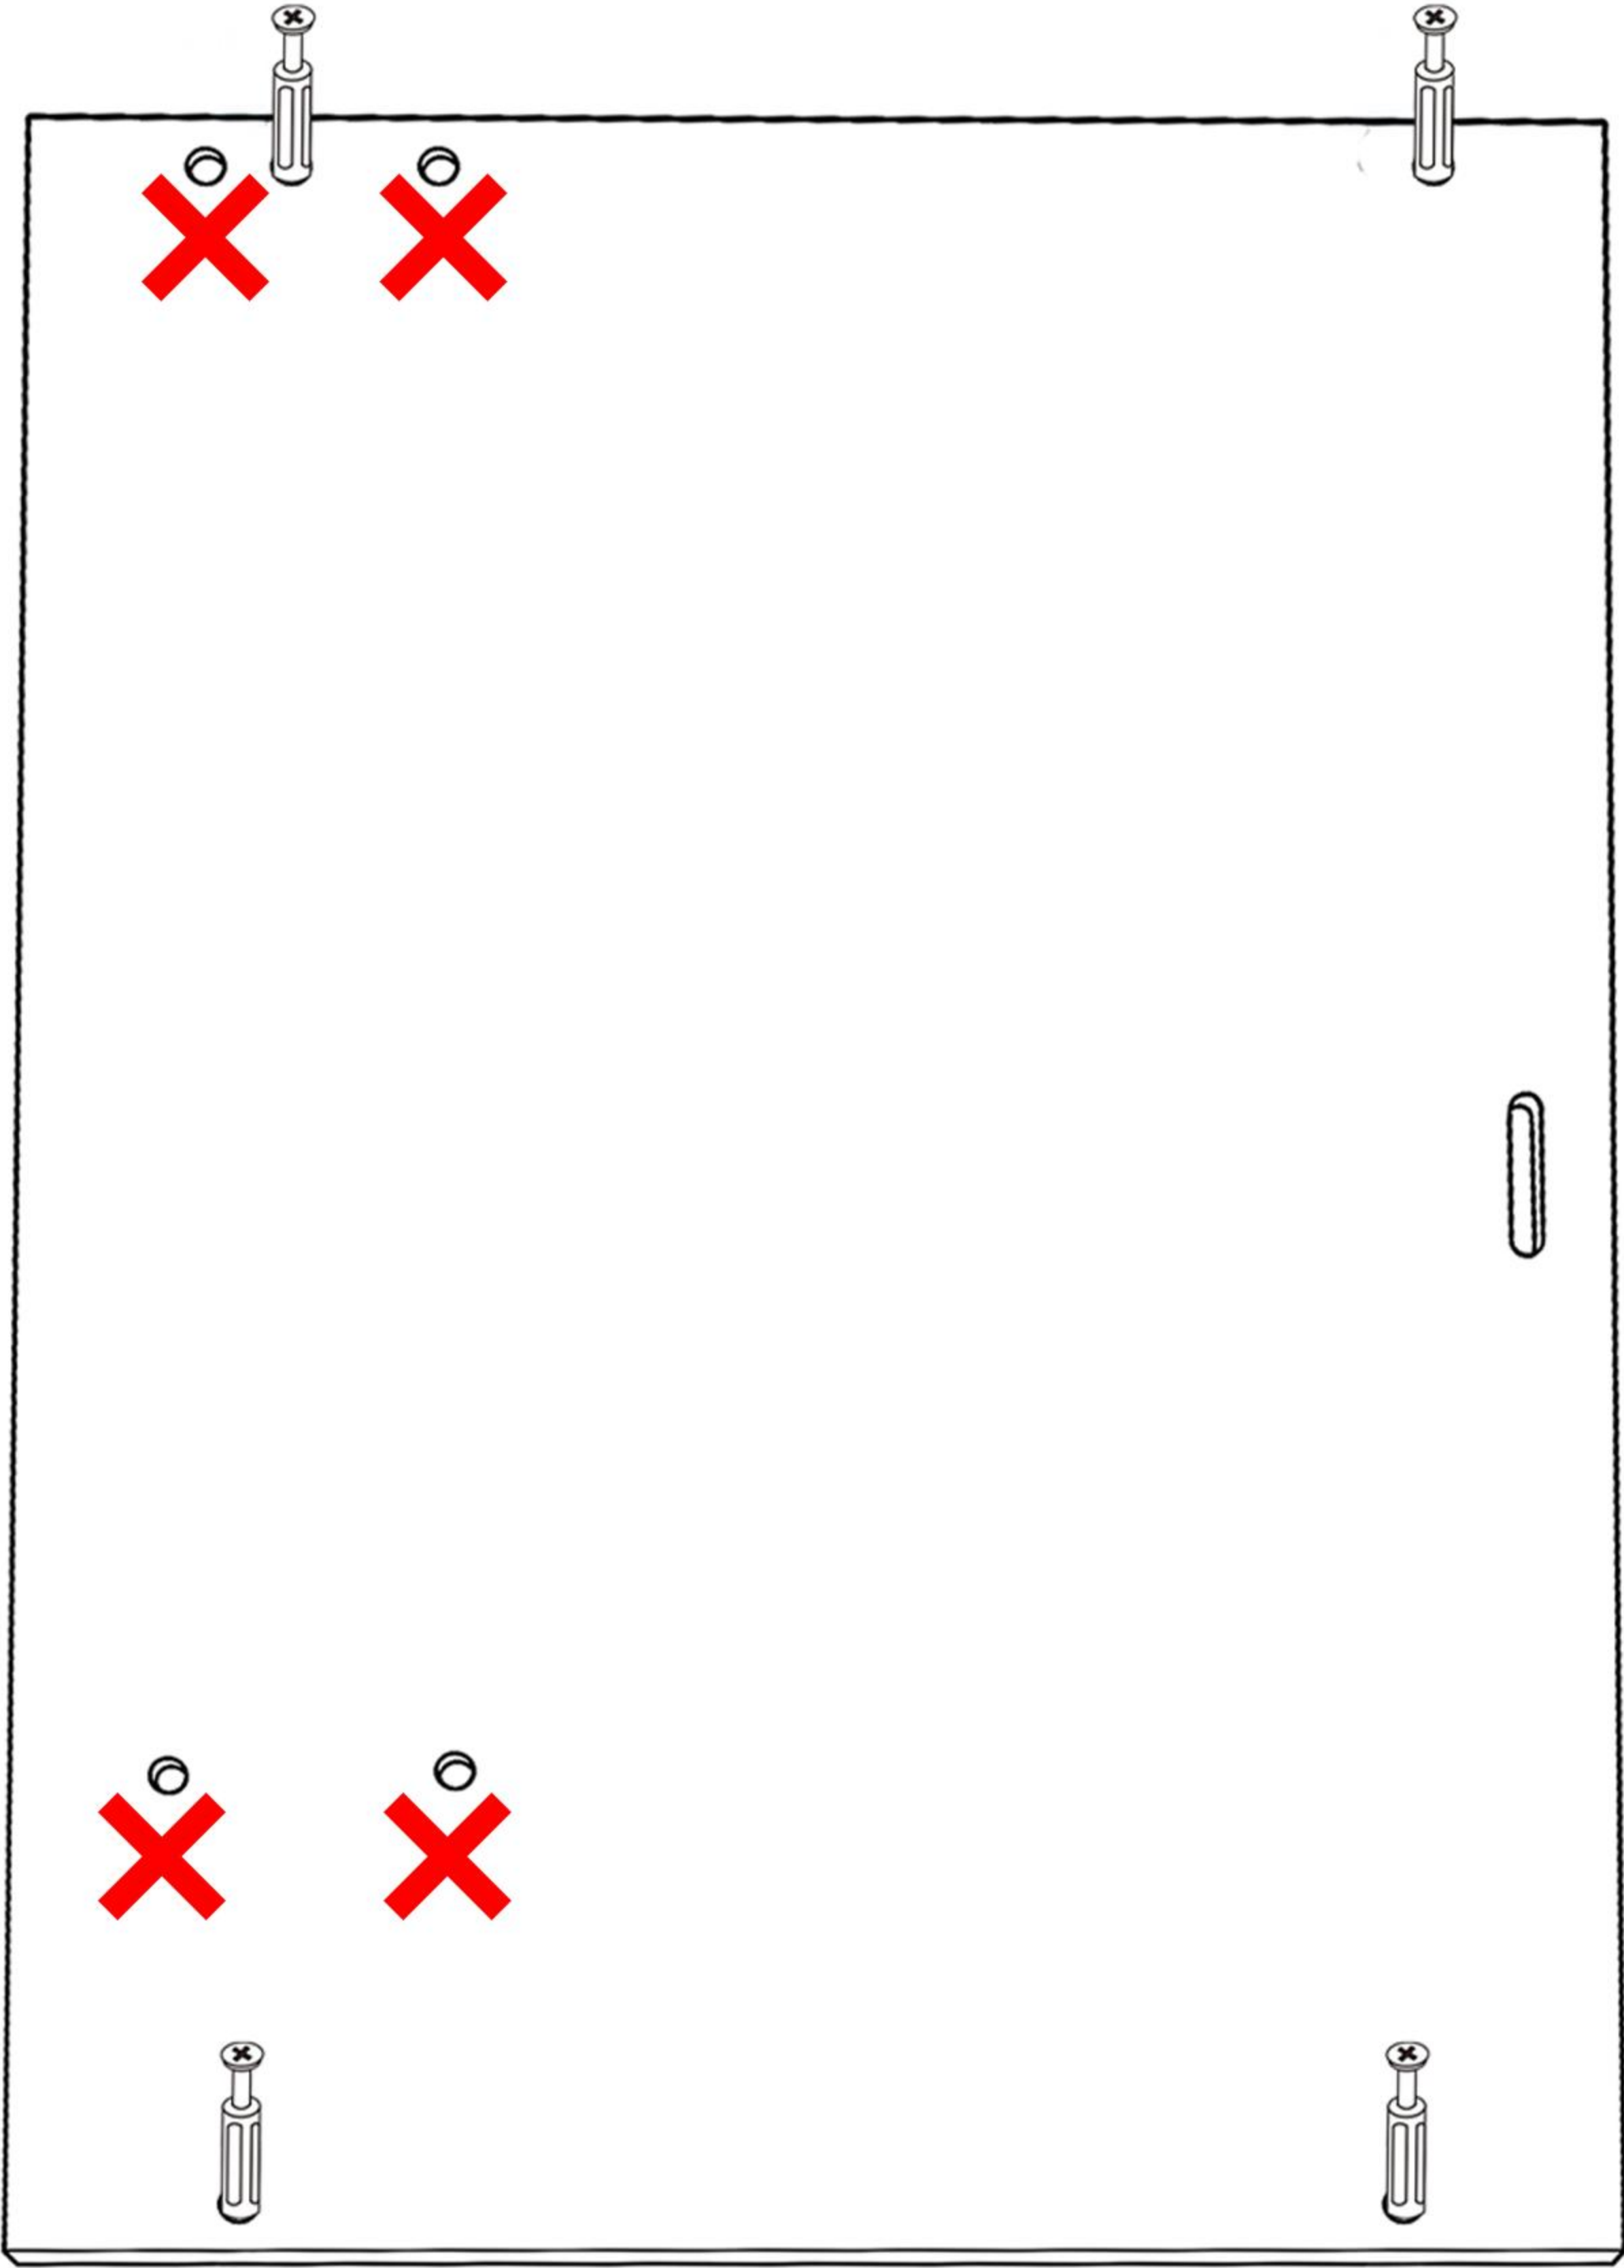

Side A of Panel No.9


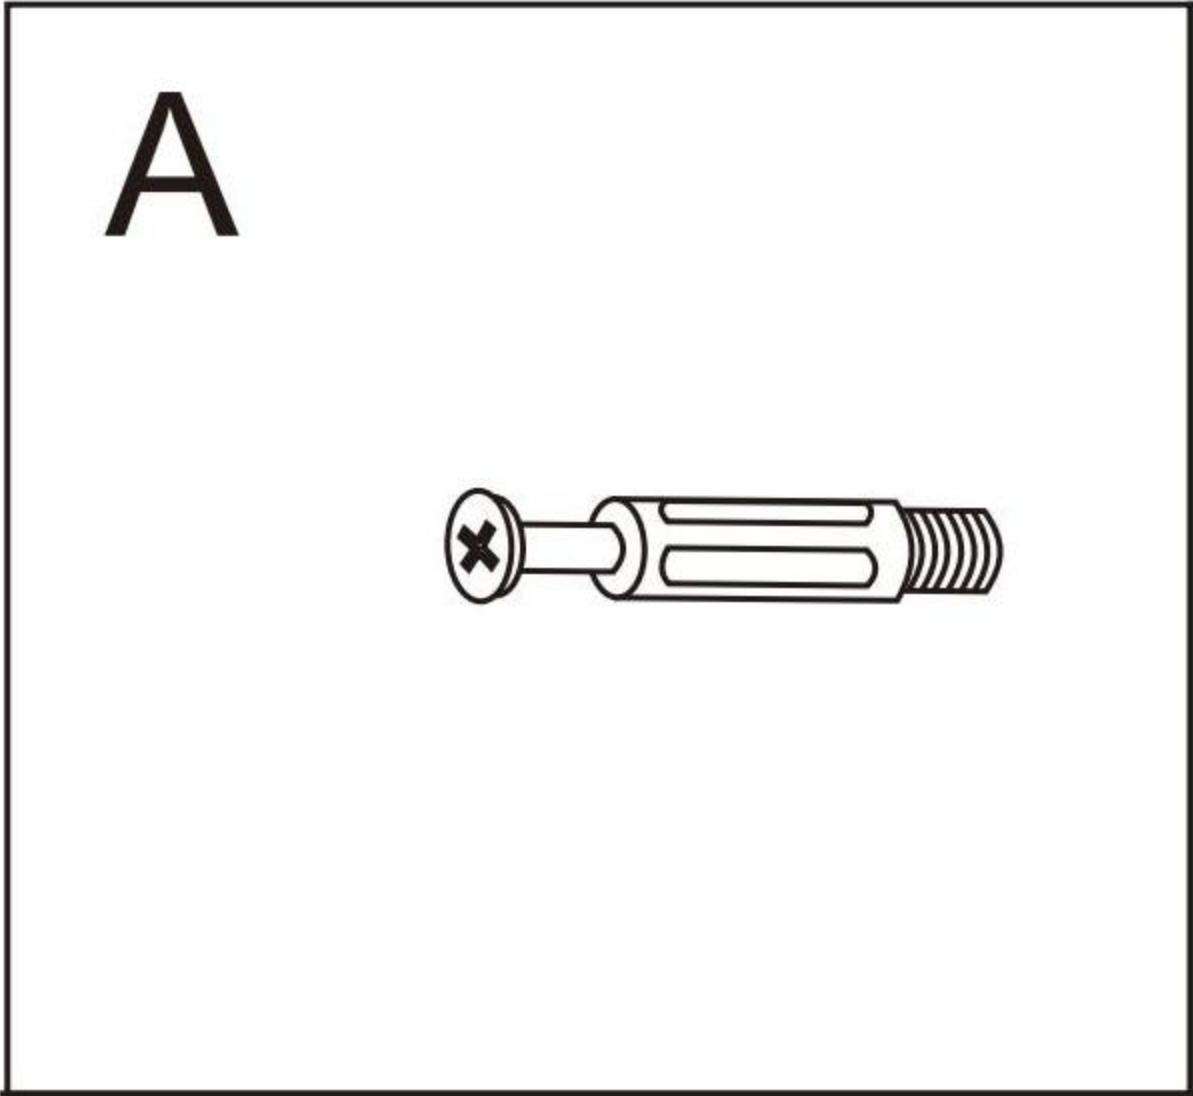


Step 6:

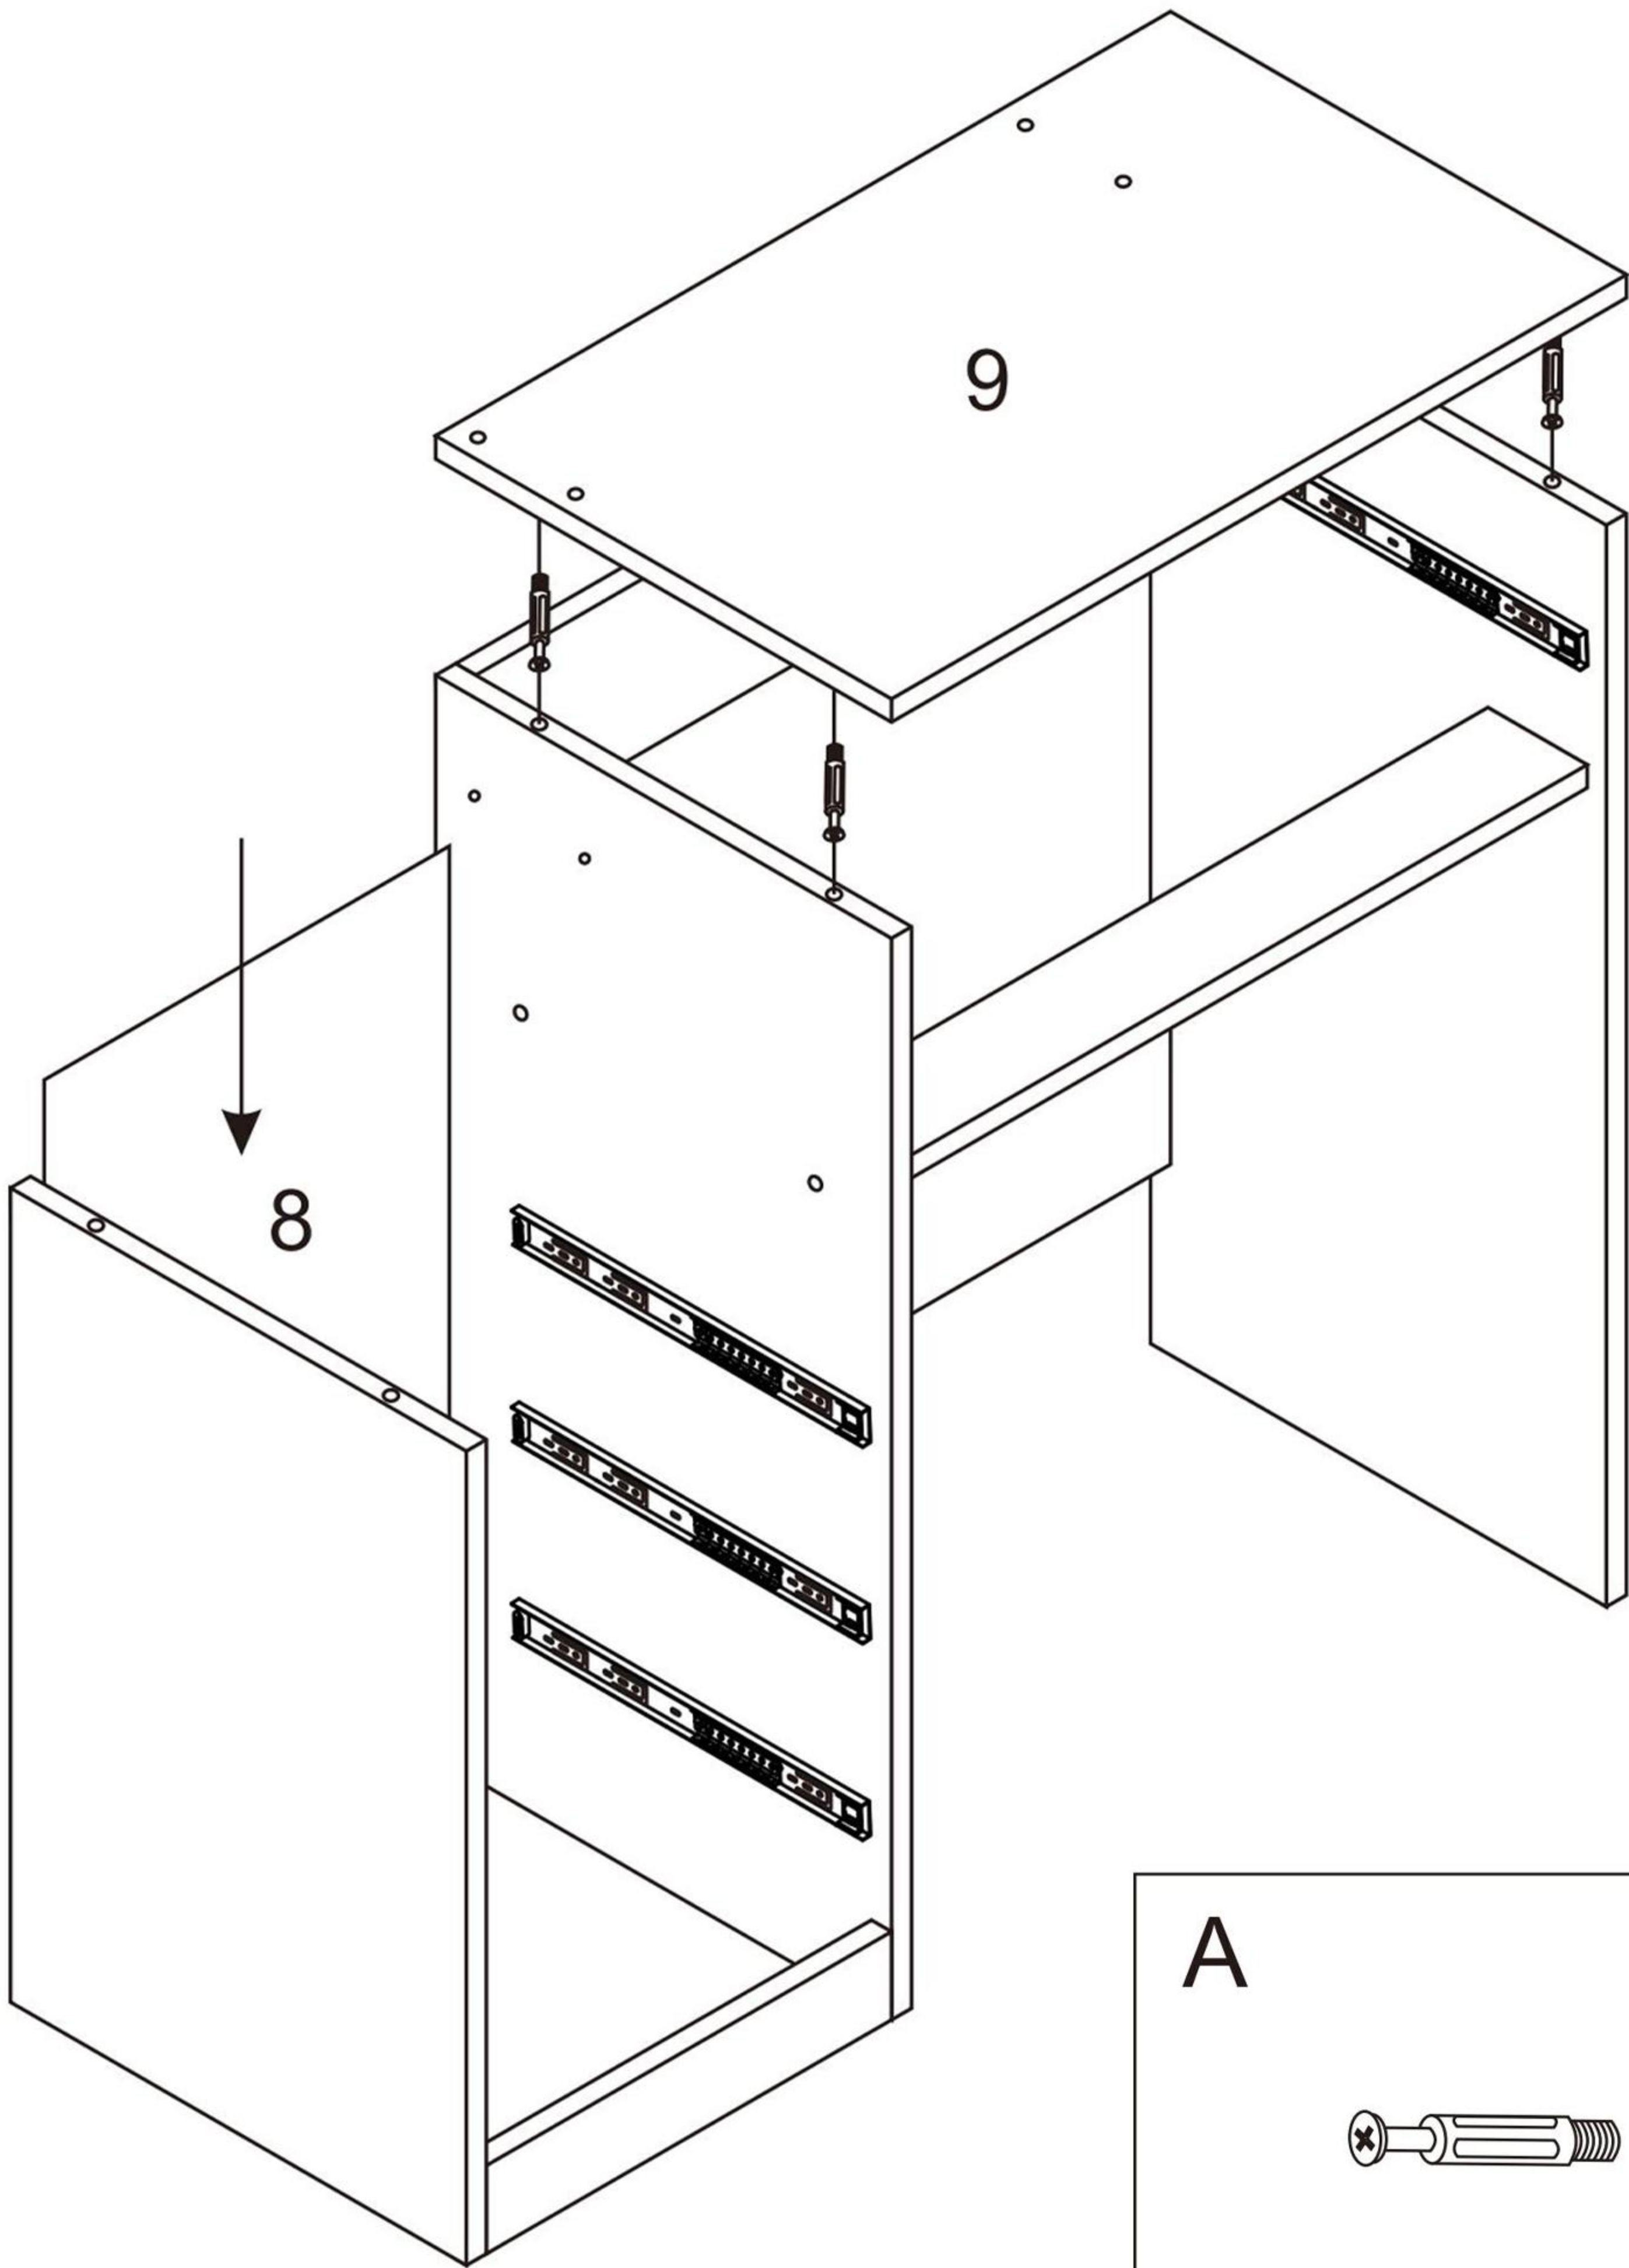


A	B
	

Step 7:

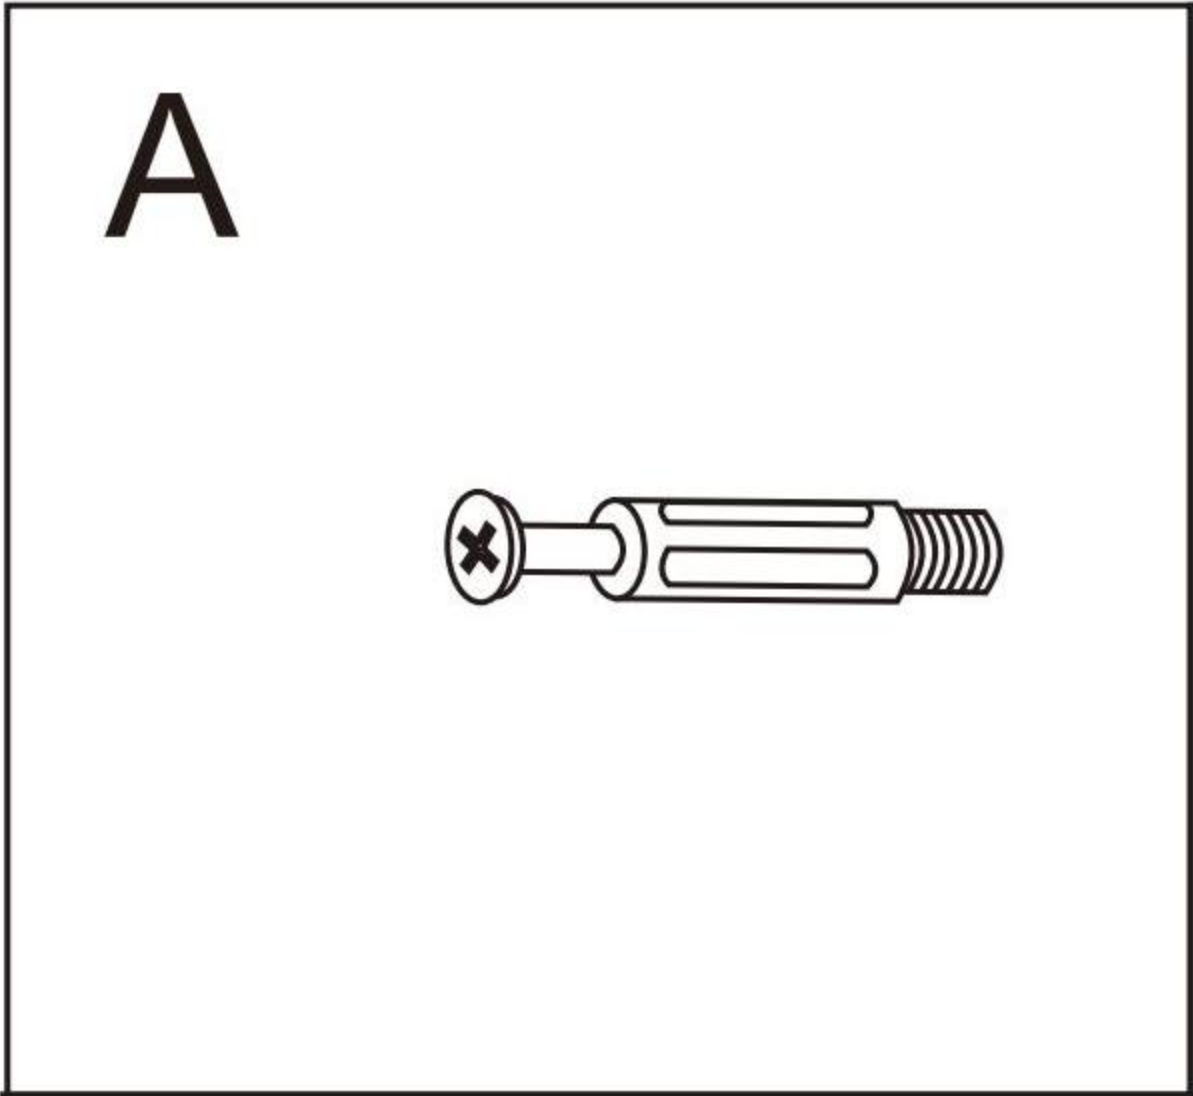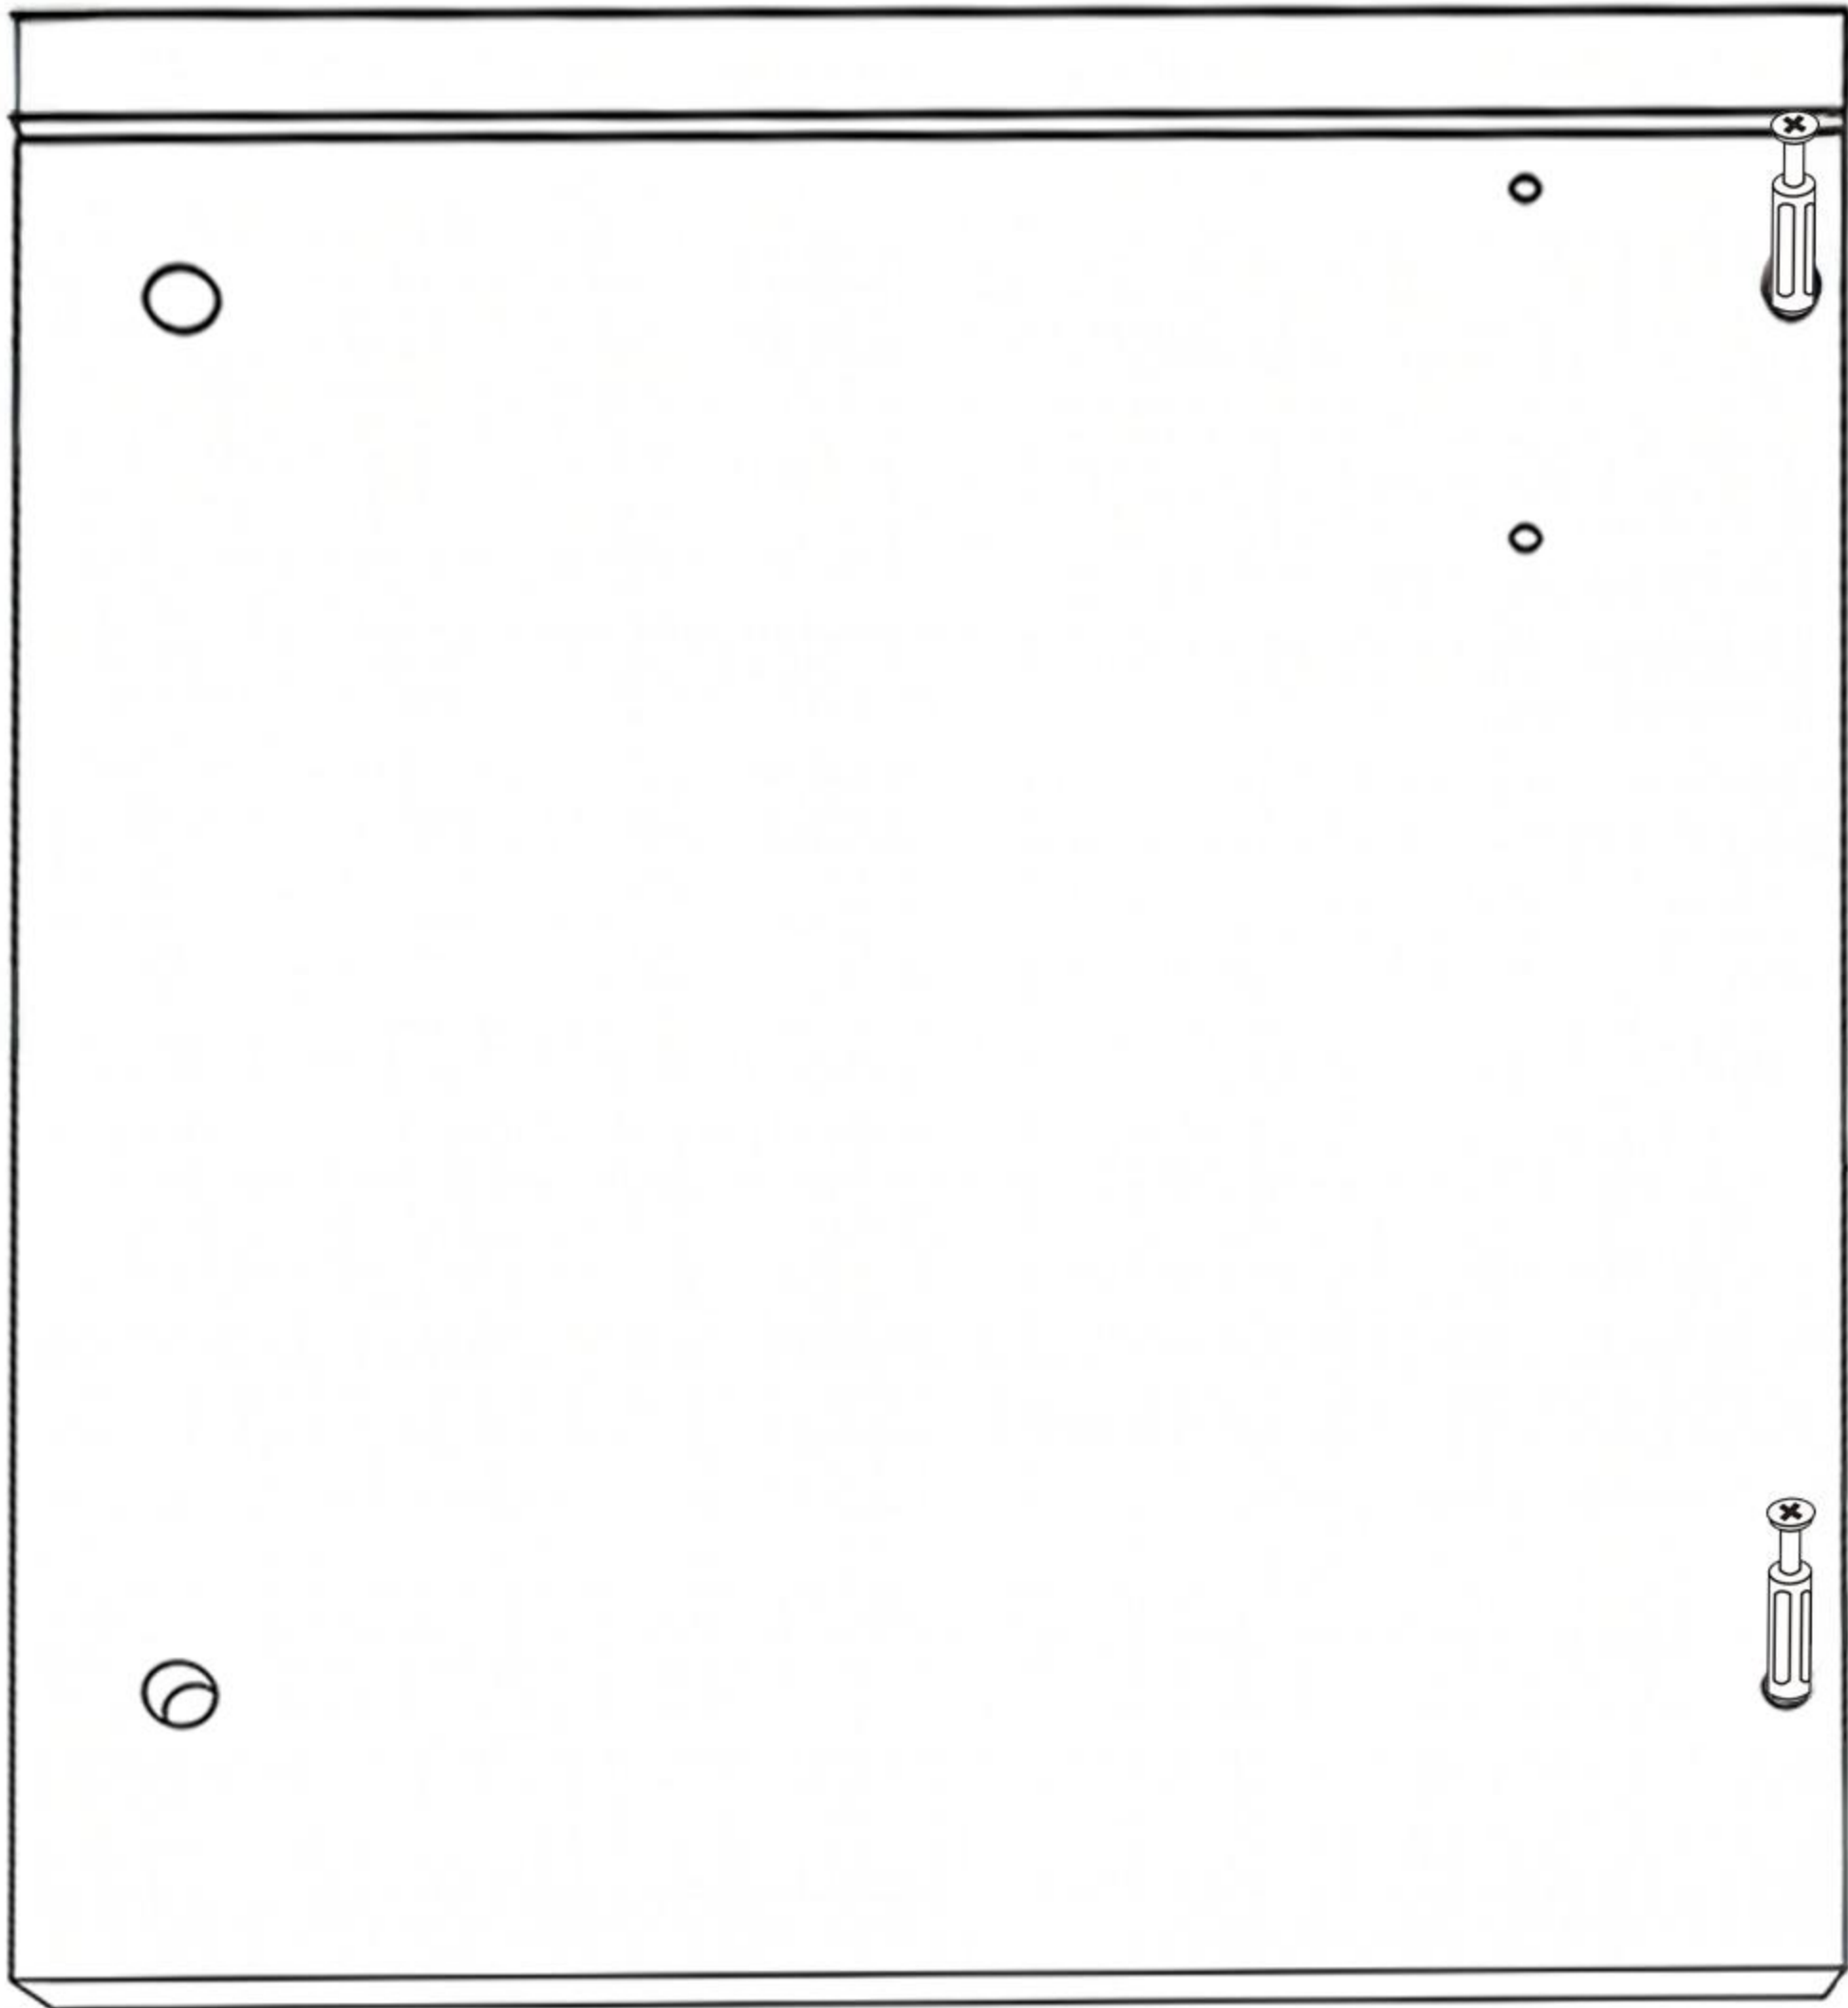



Step 8:

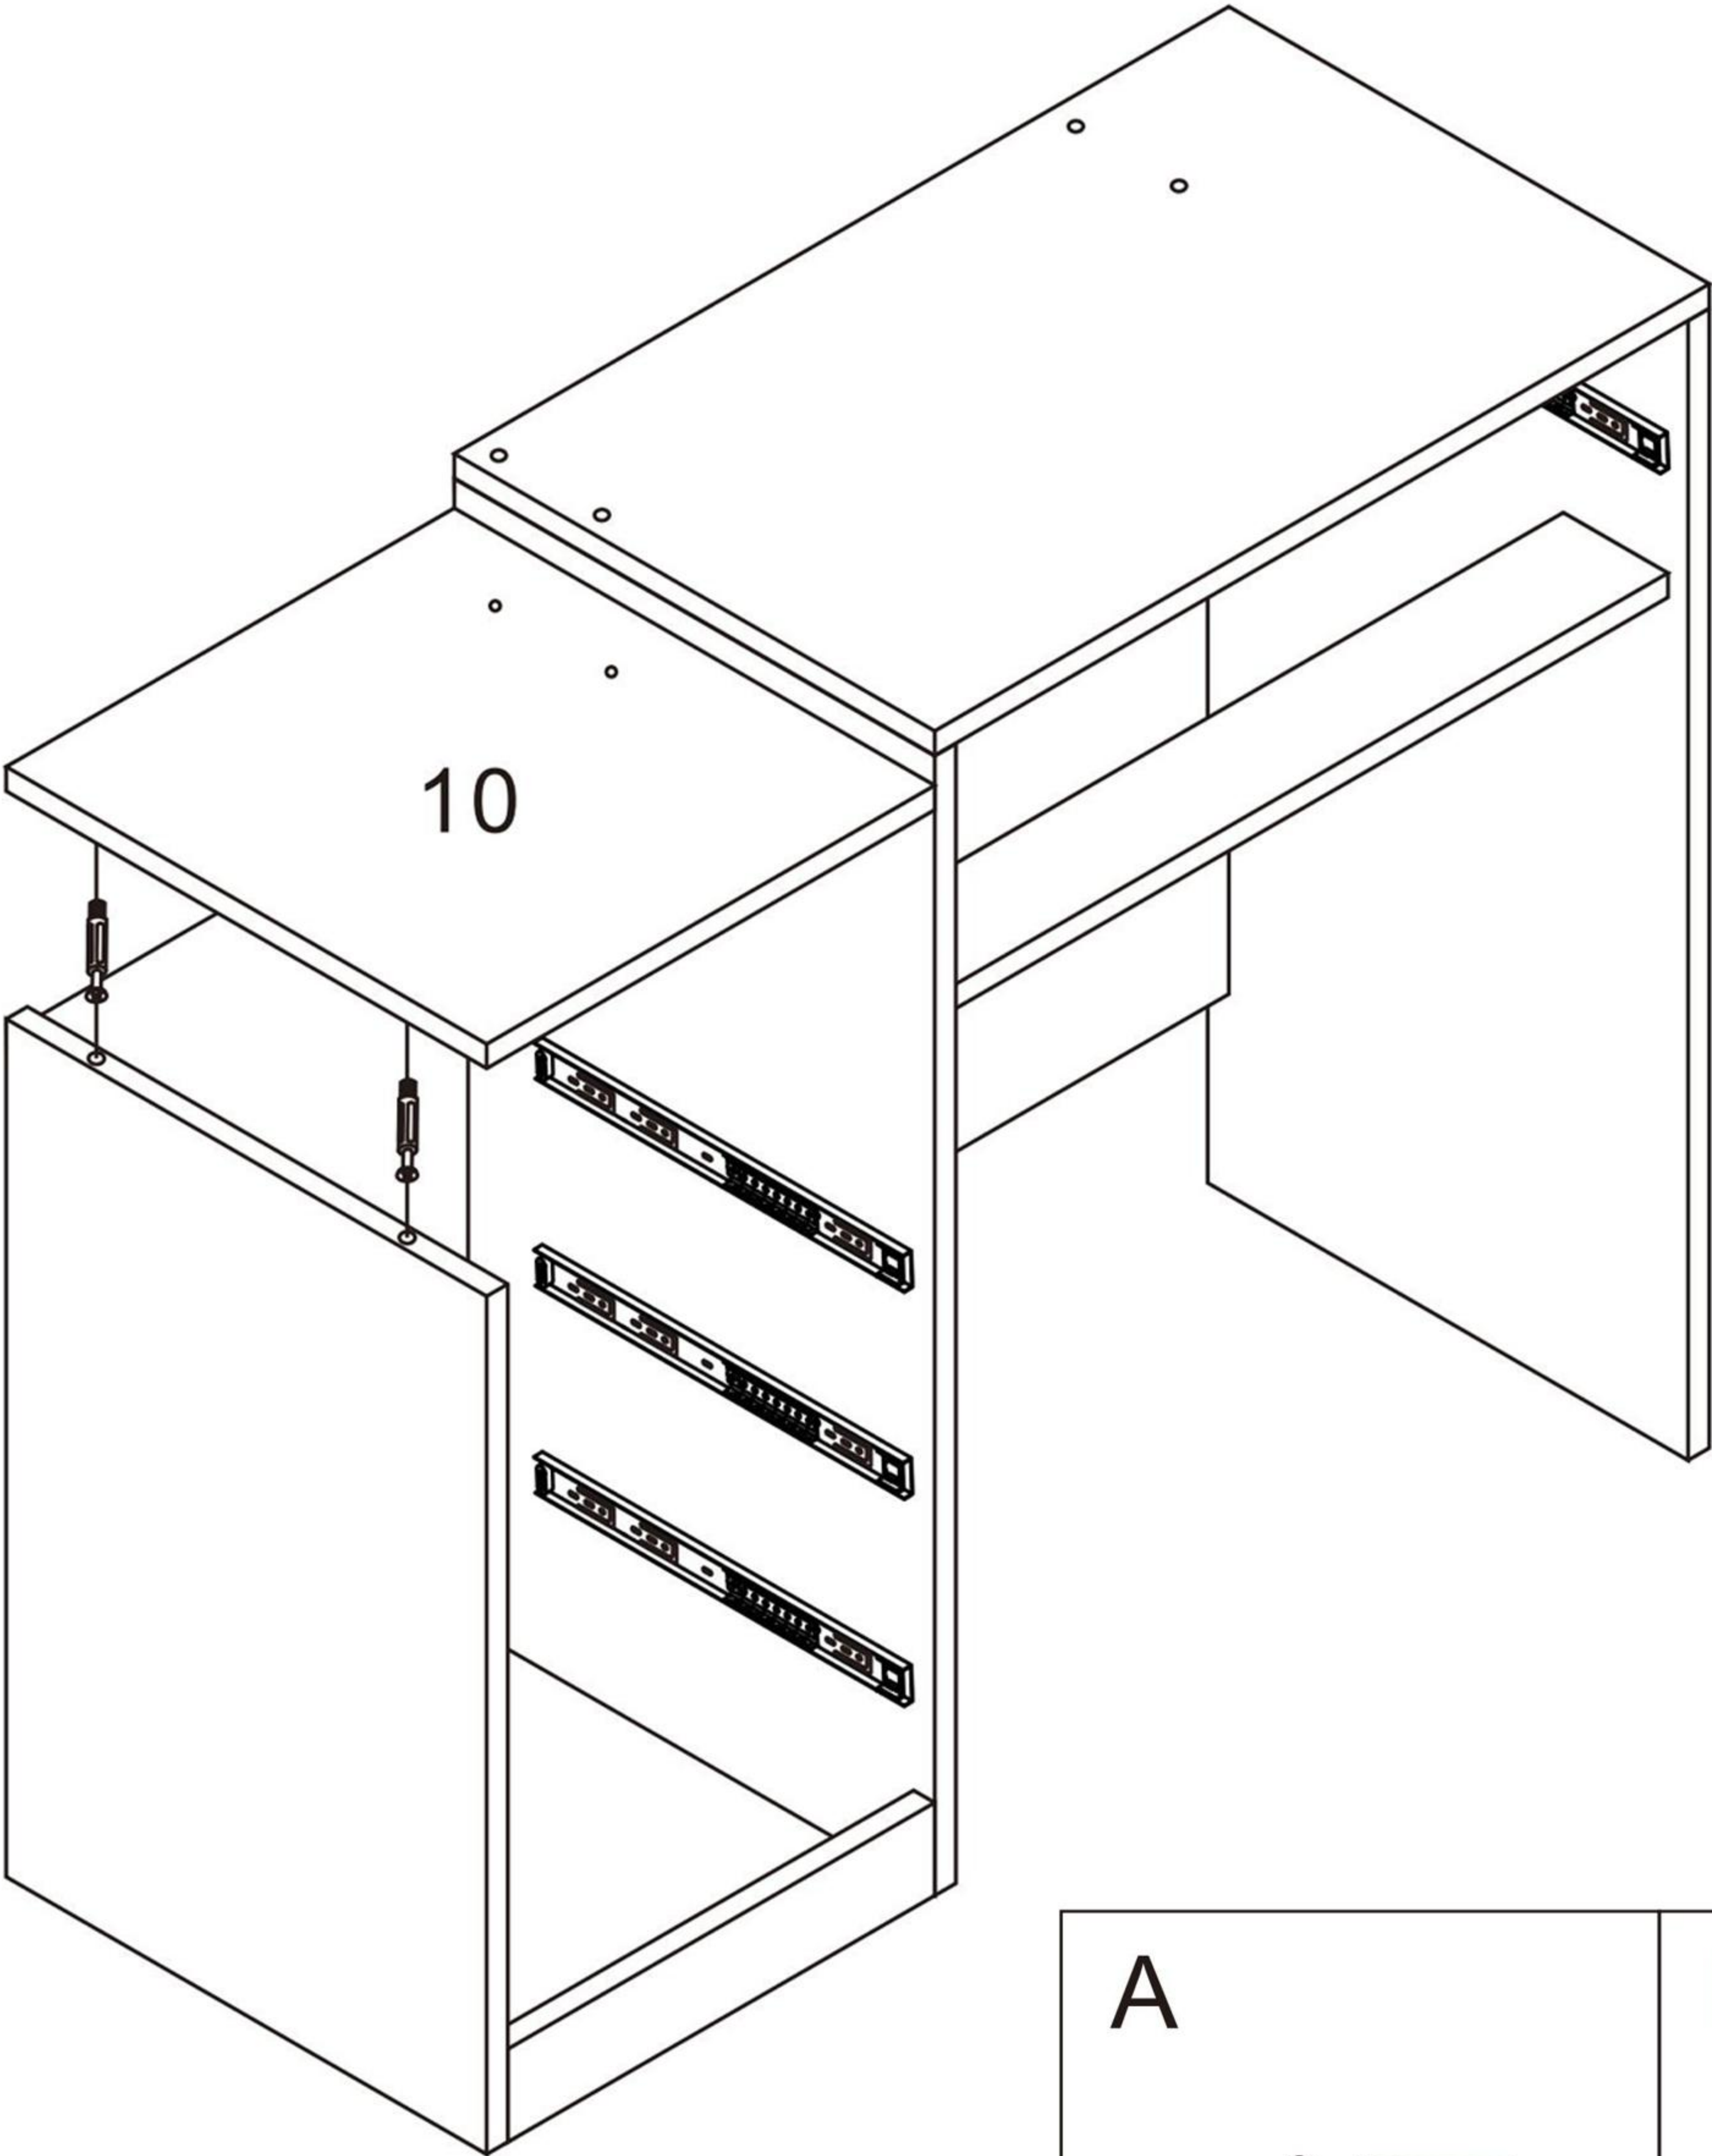


A	B
	
x4	x4



Step 9:

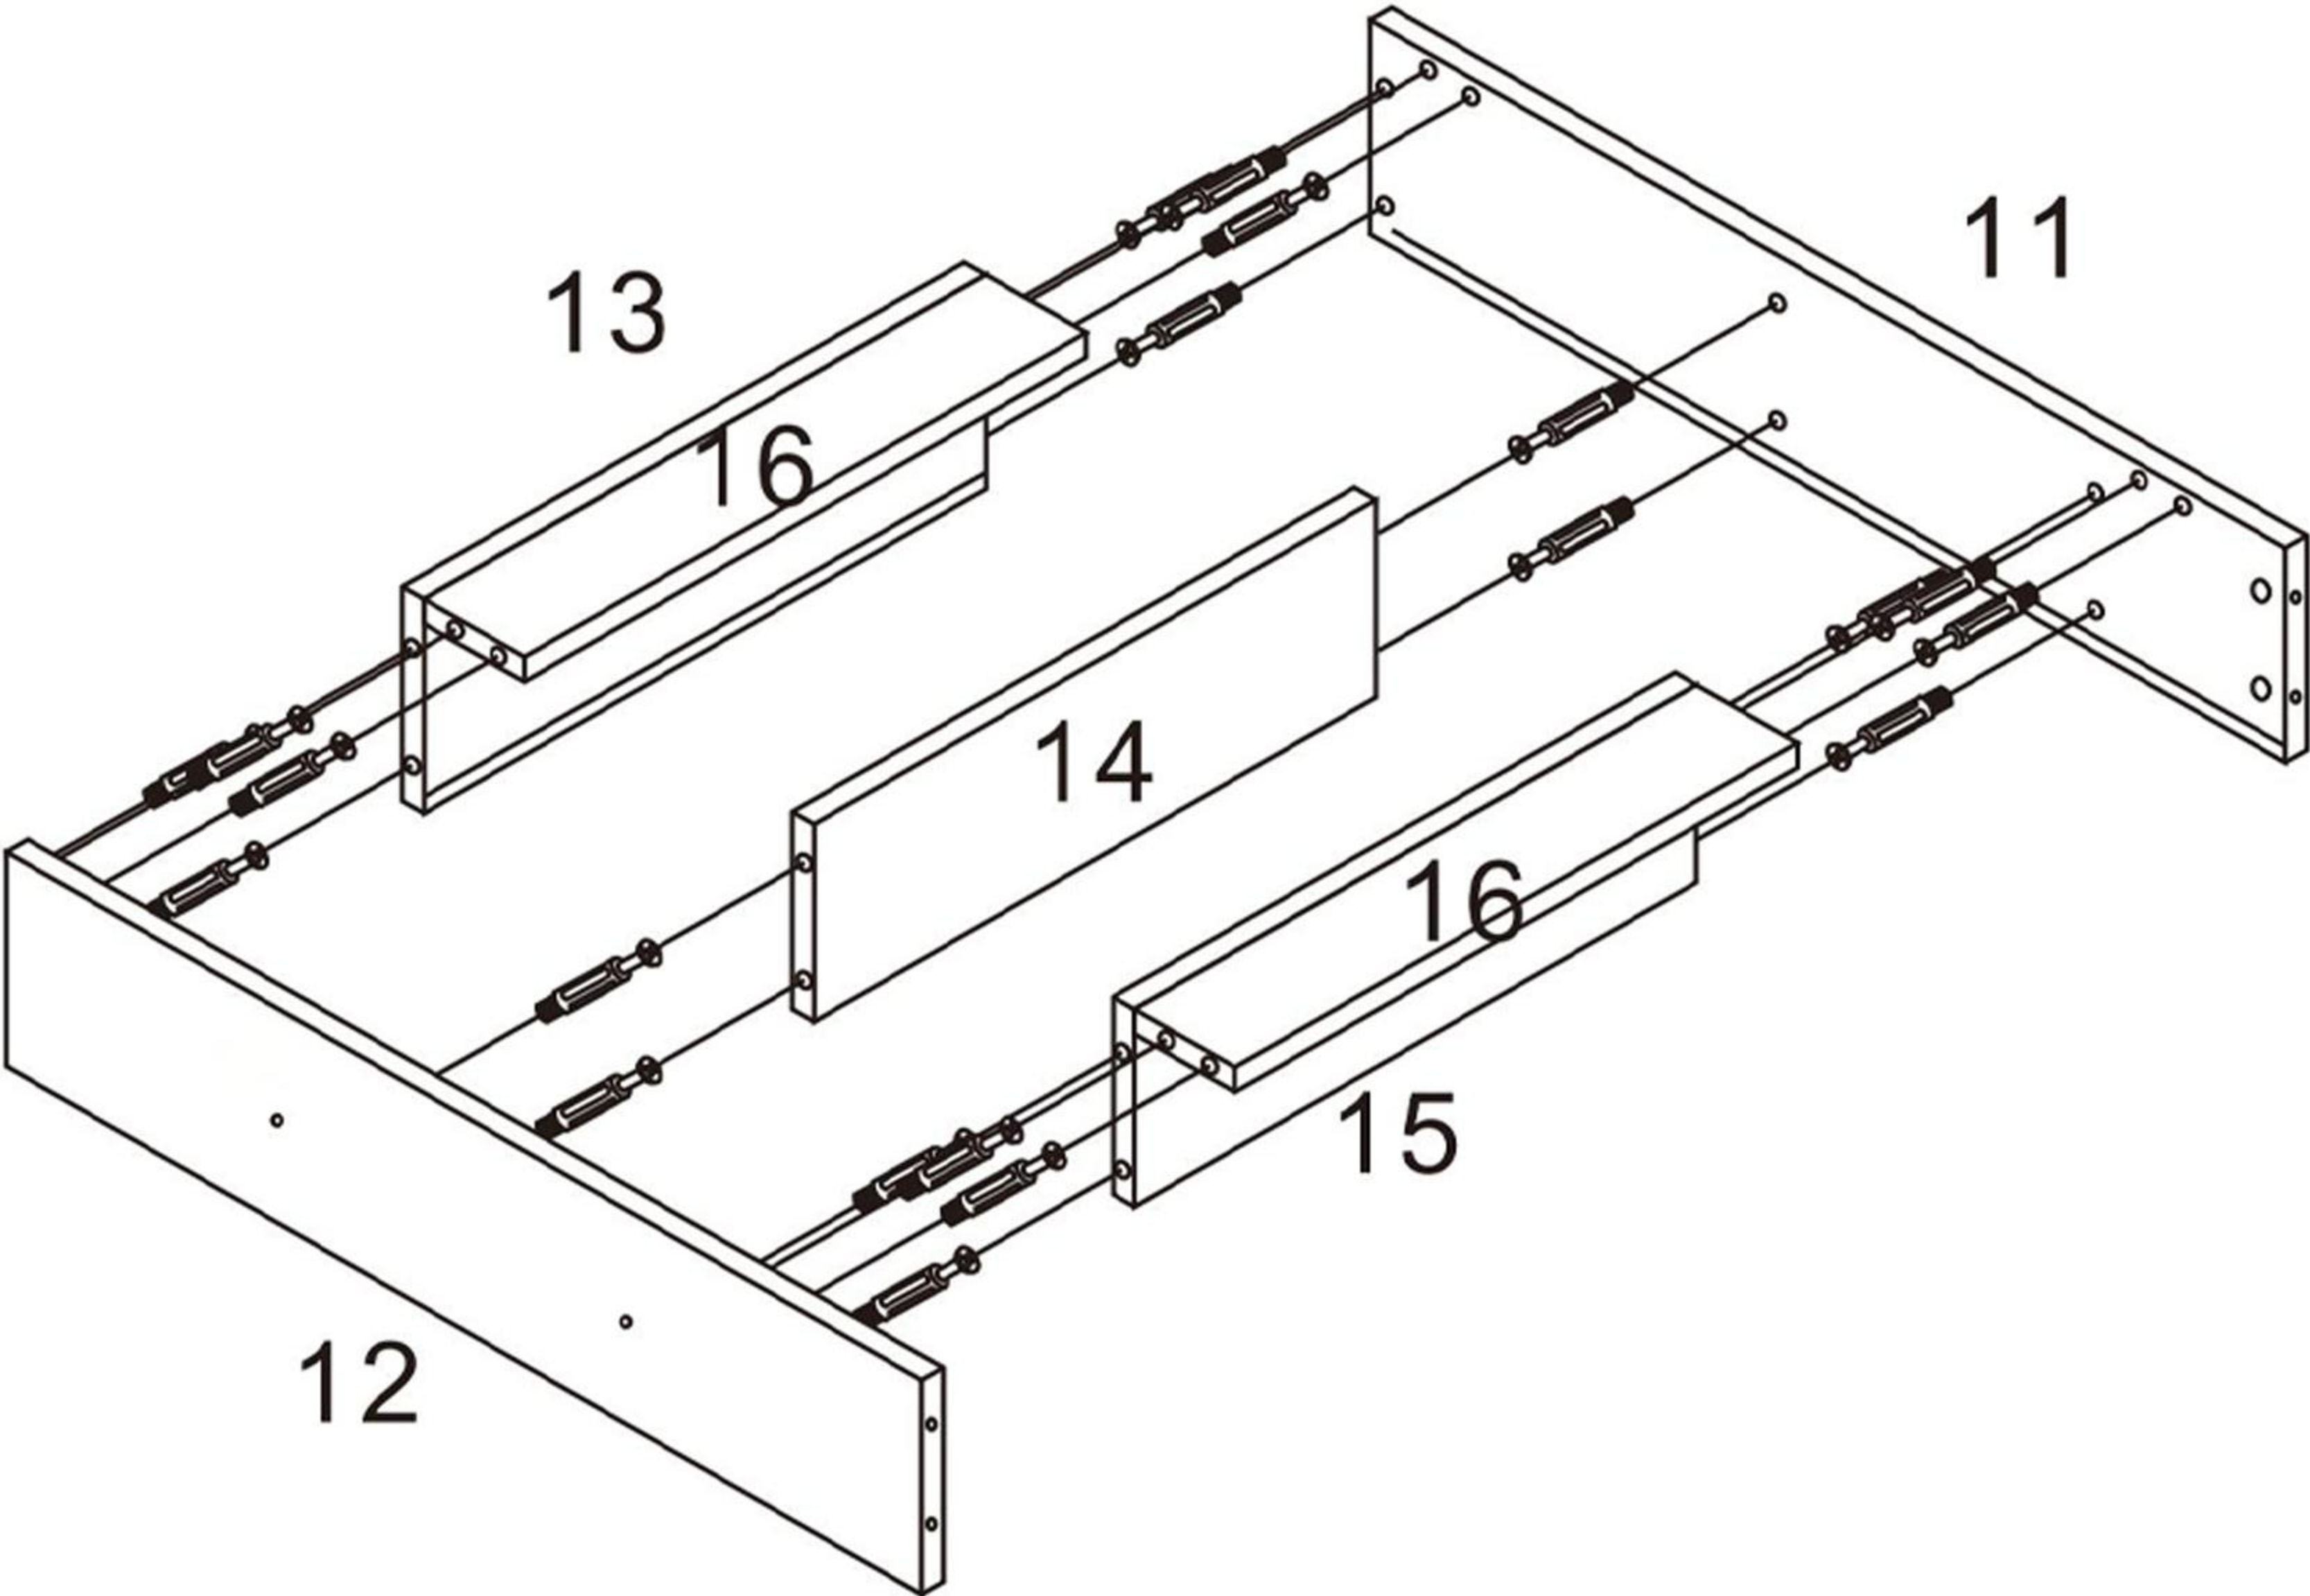

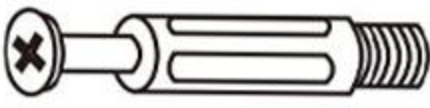
A	B
 x20	 x20

Step 10:

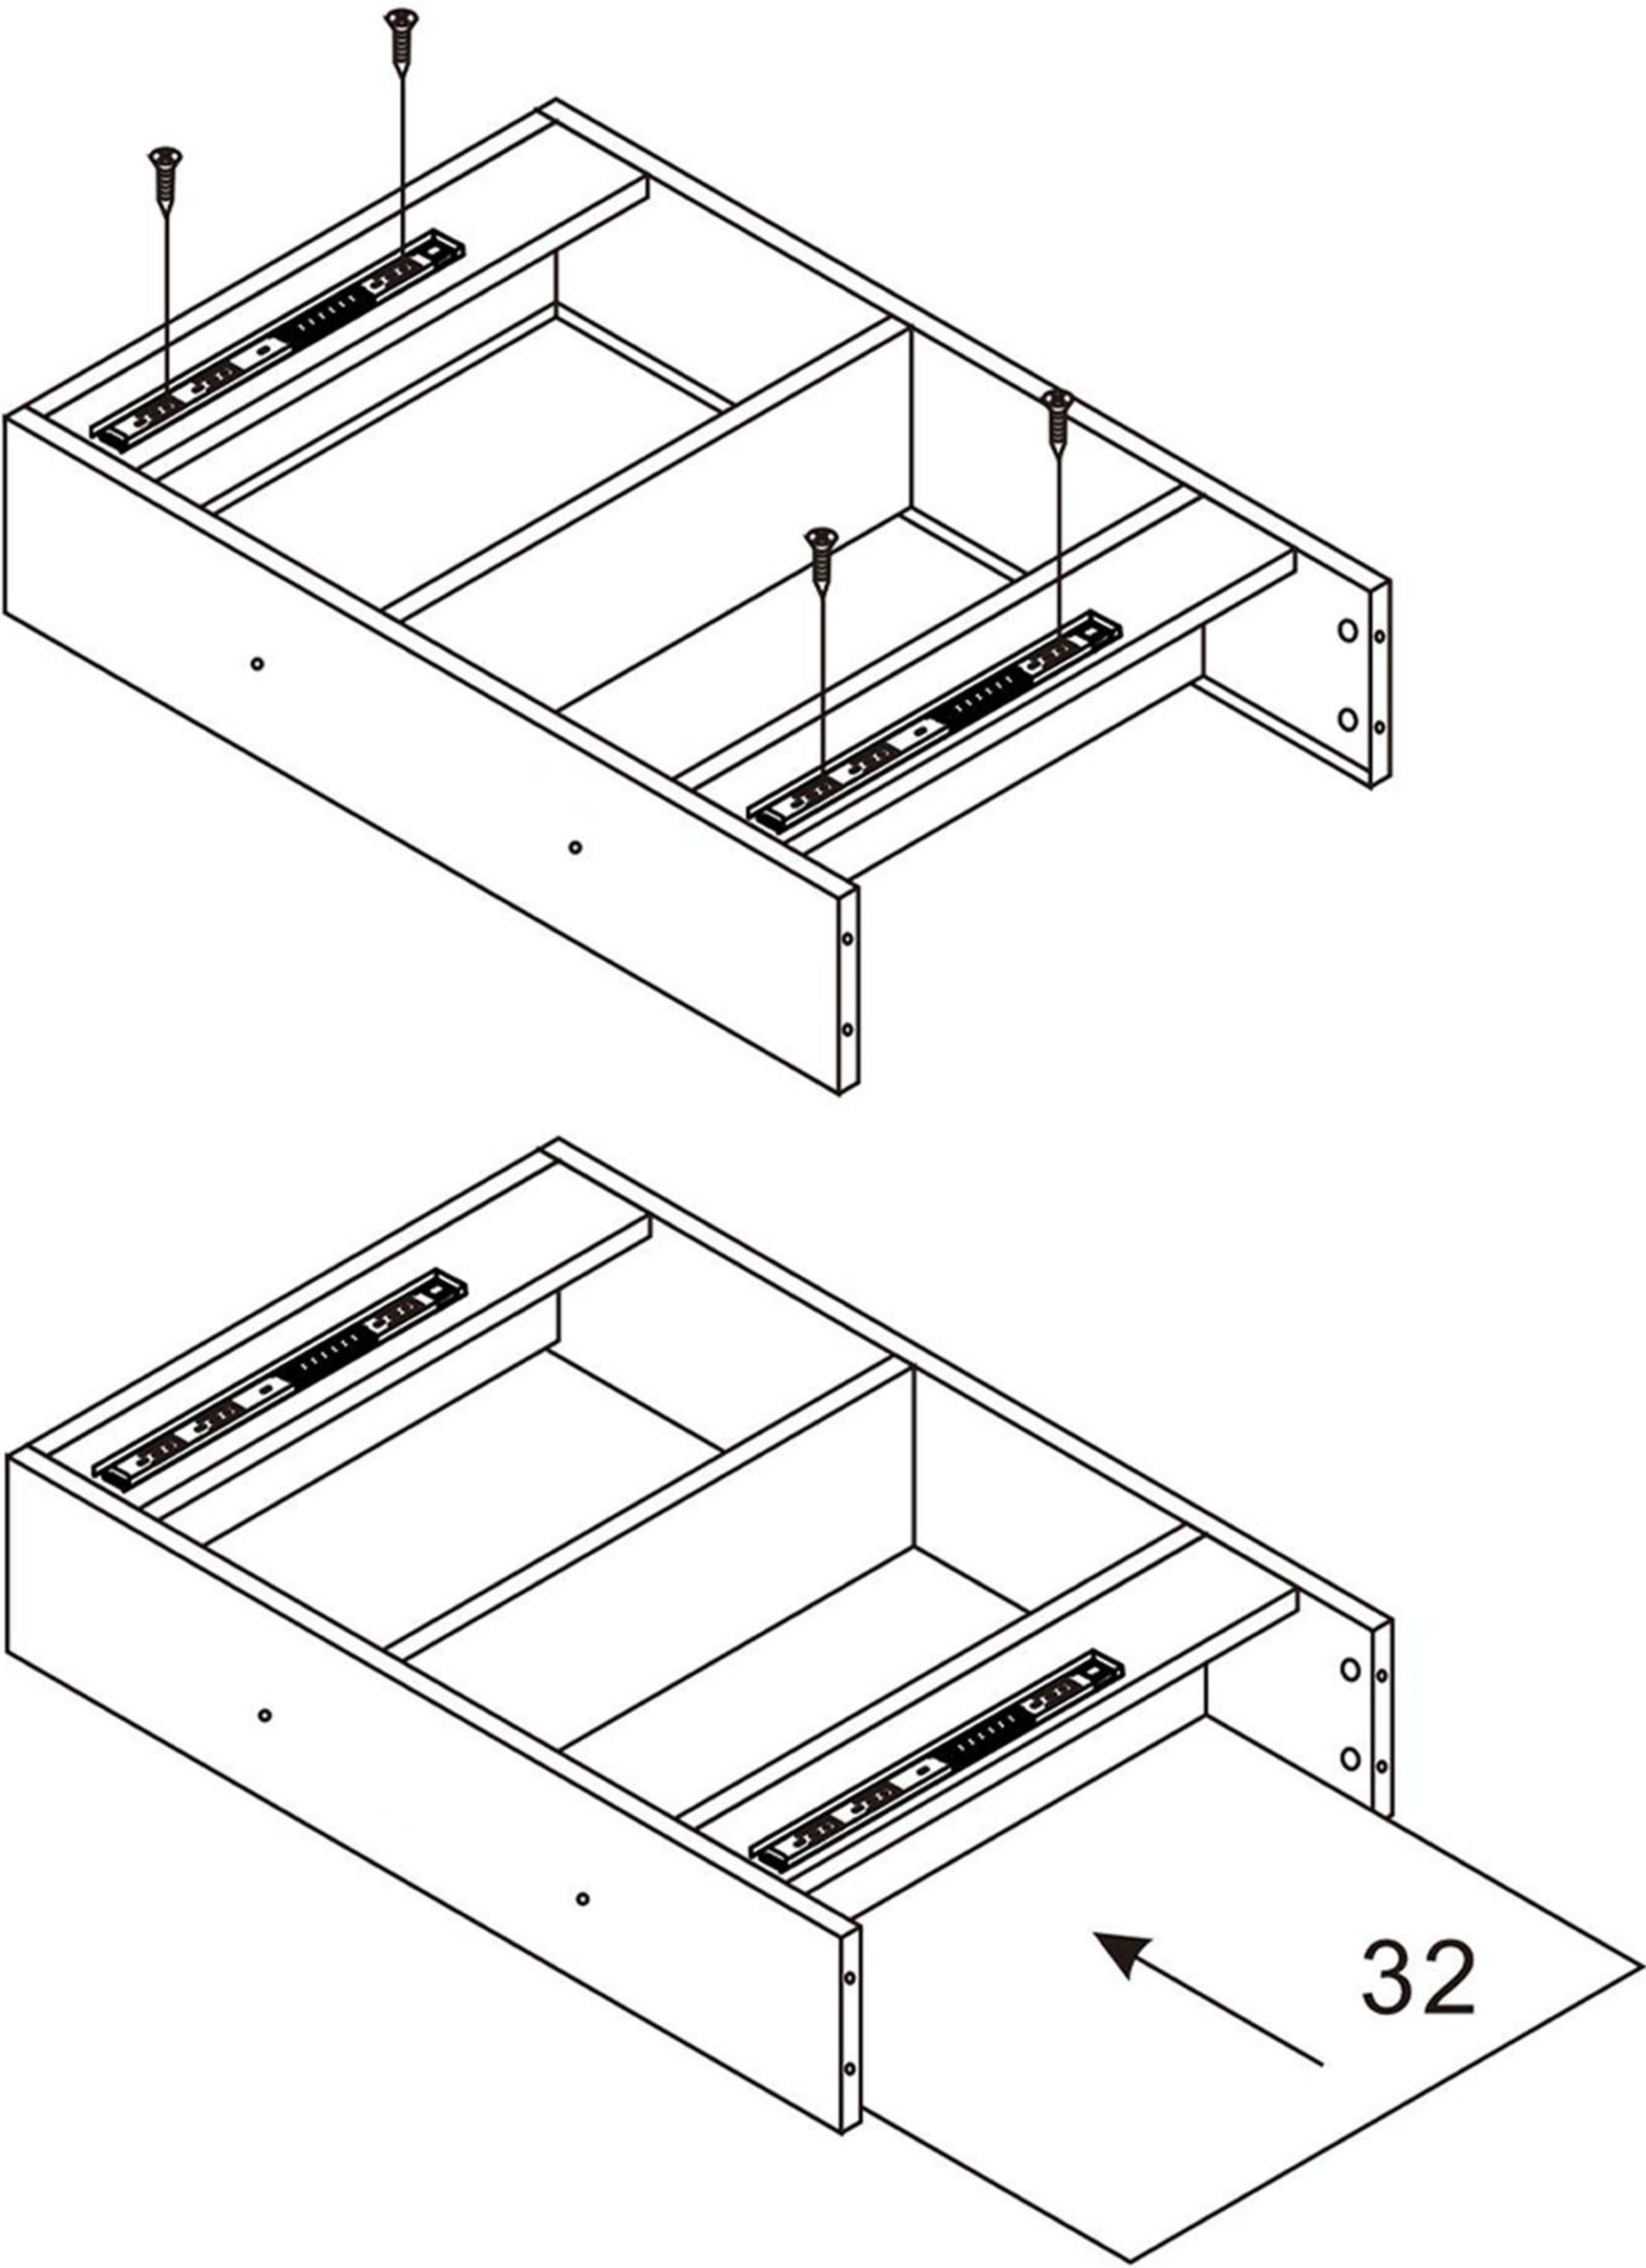

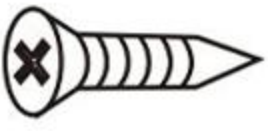
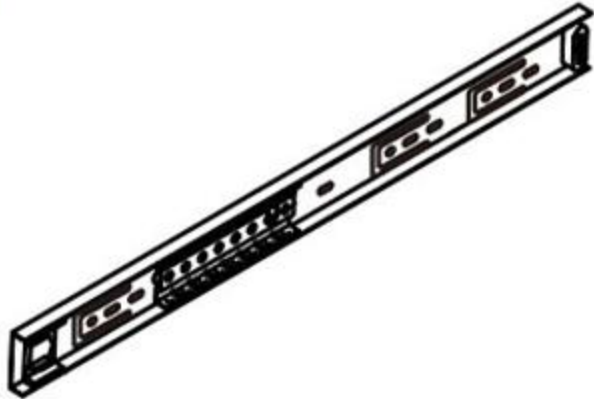
C	J	A	B
			


Step 11:

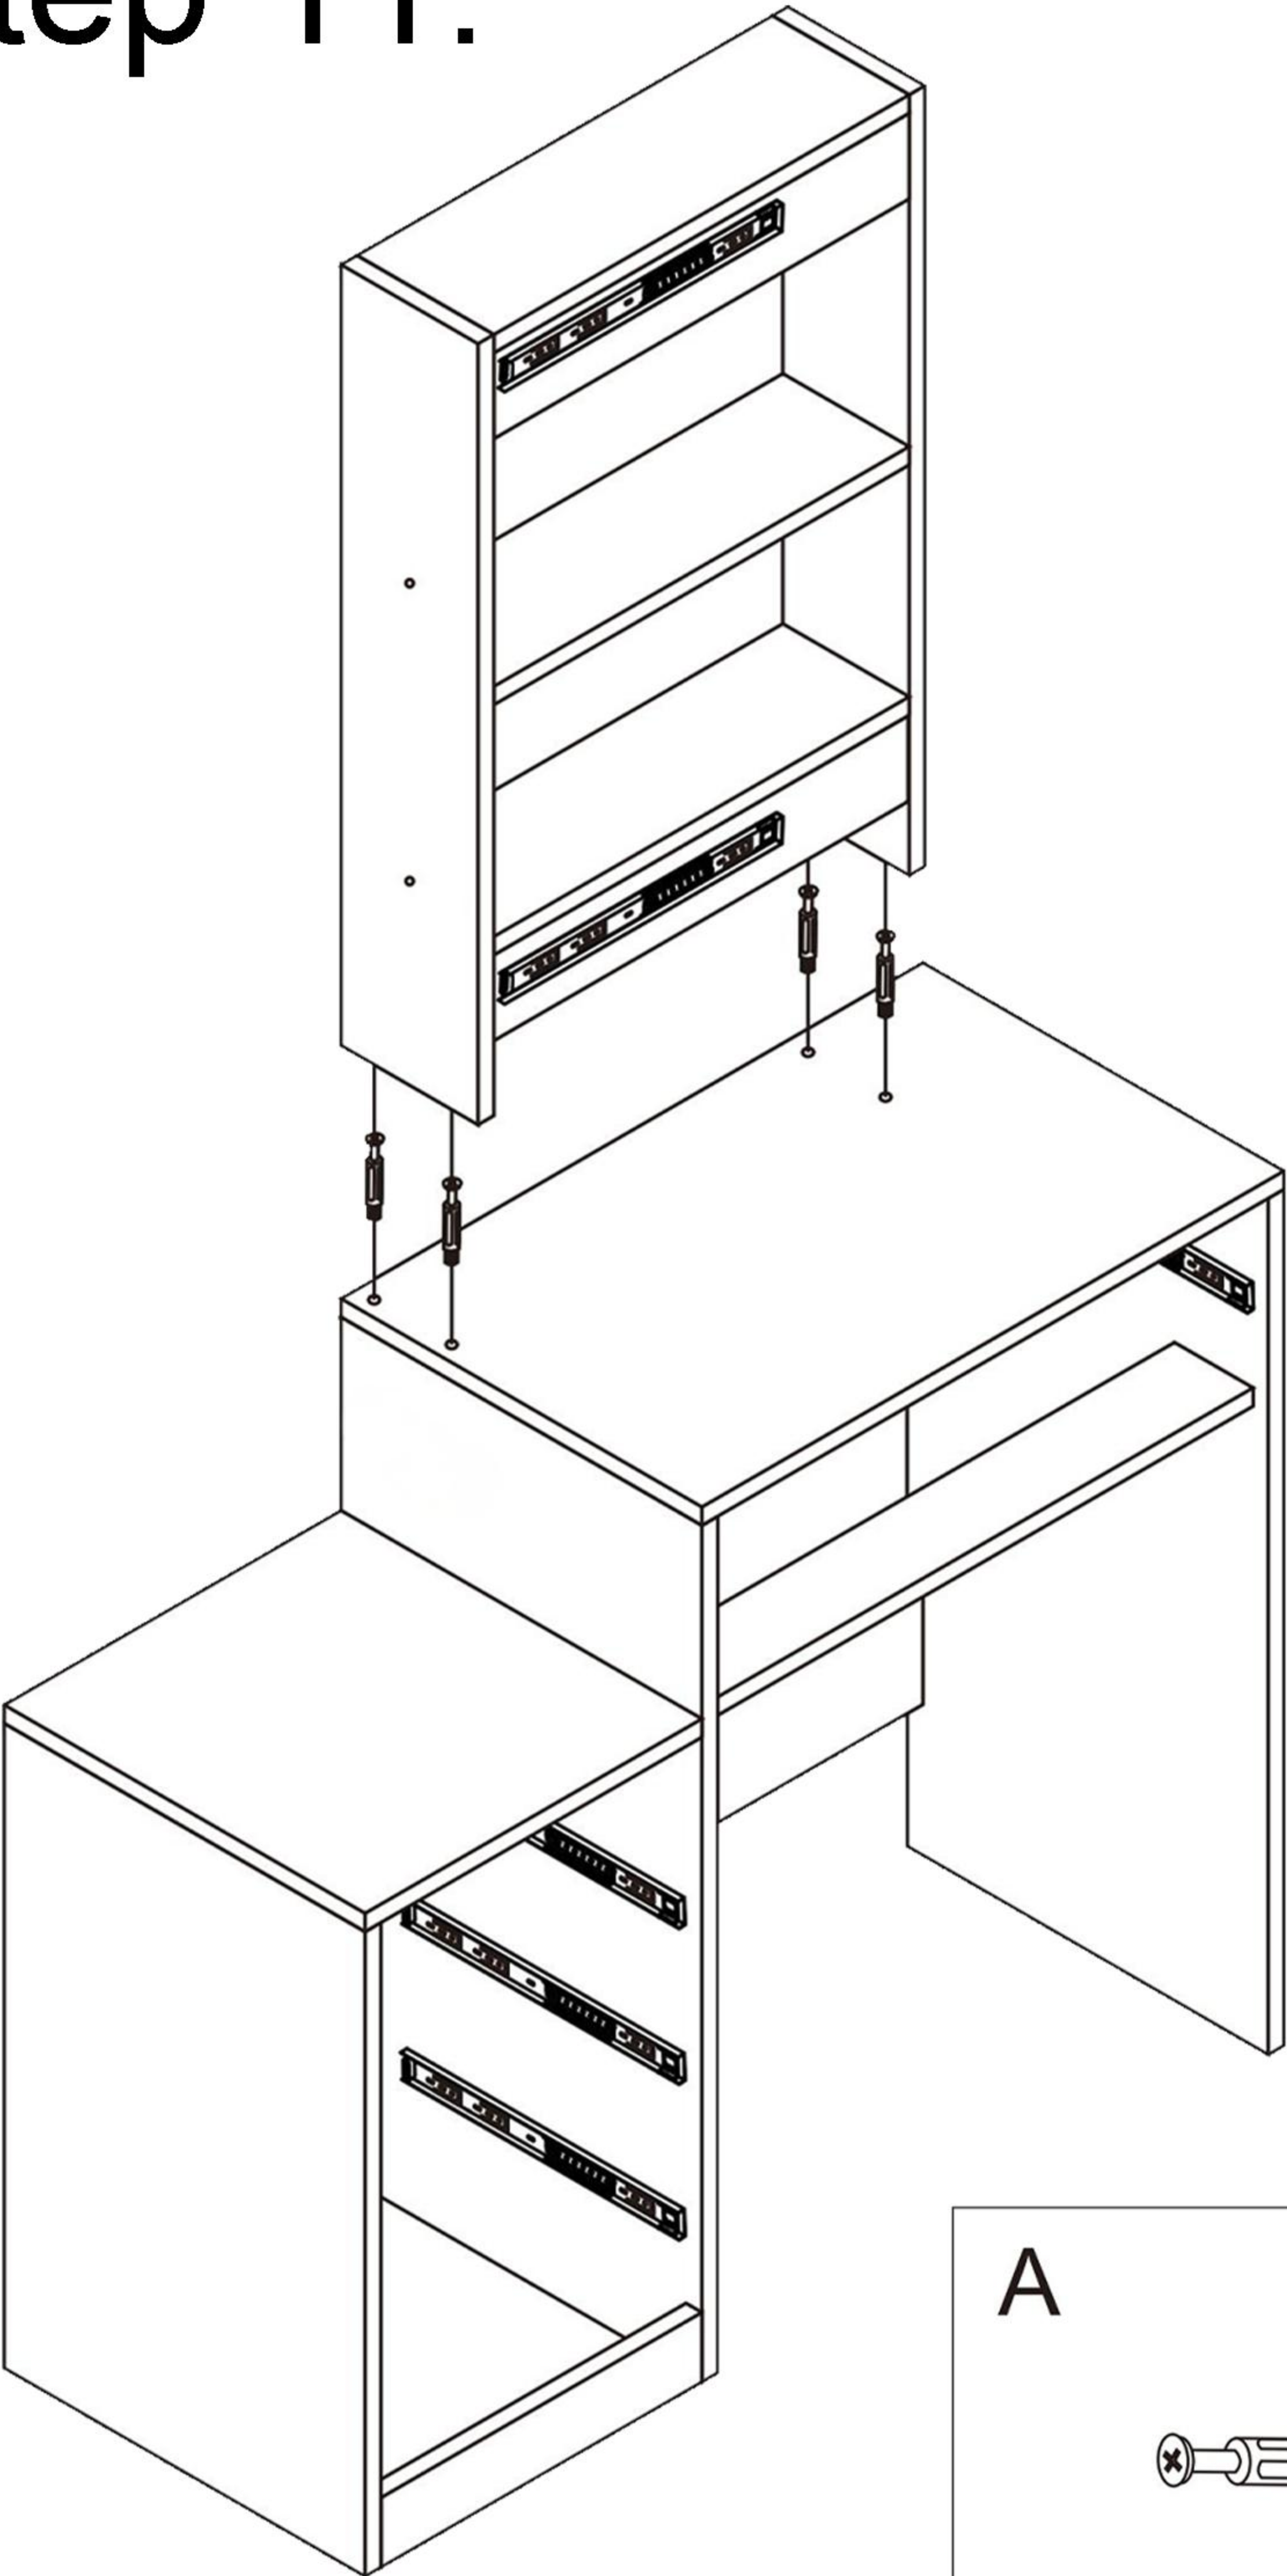


A	B
 x4	 x4

Step 12:

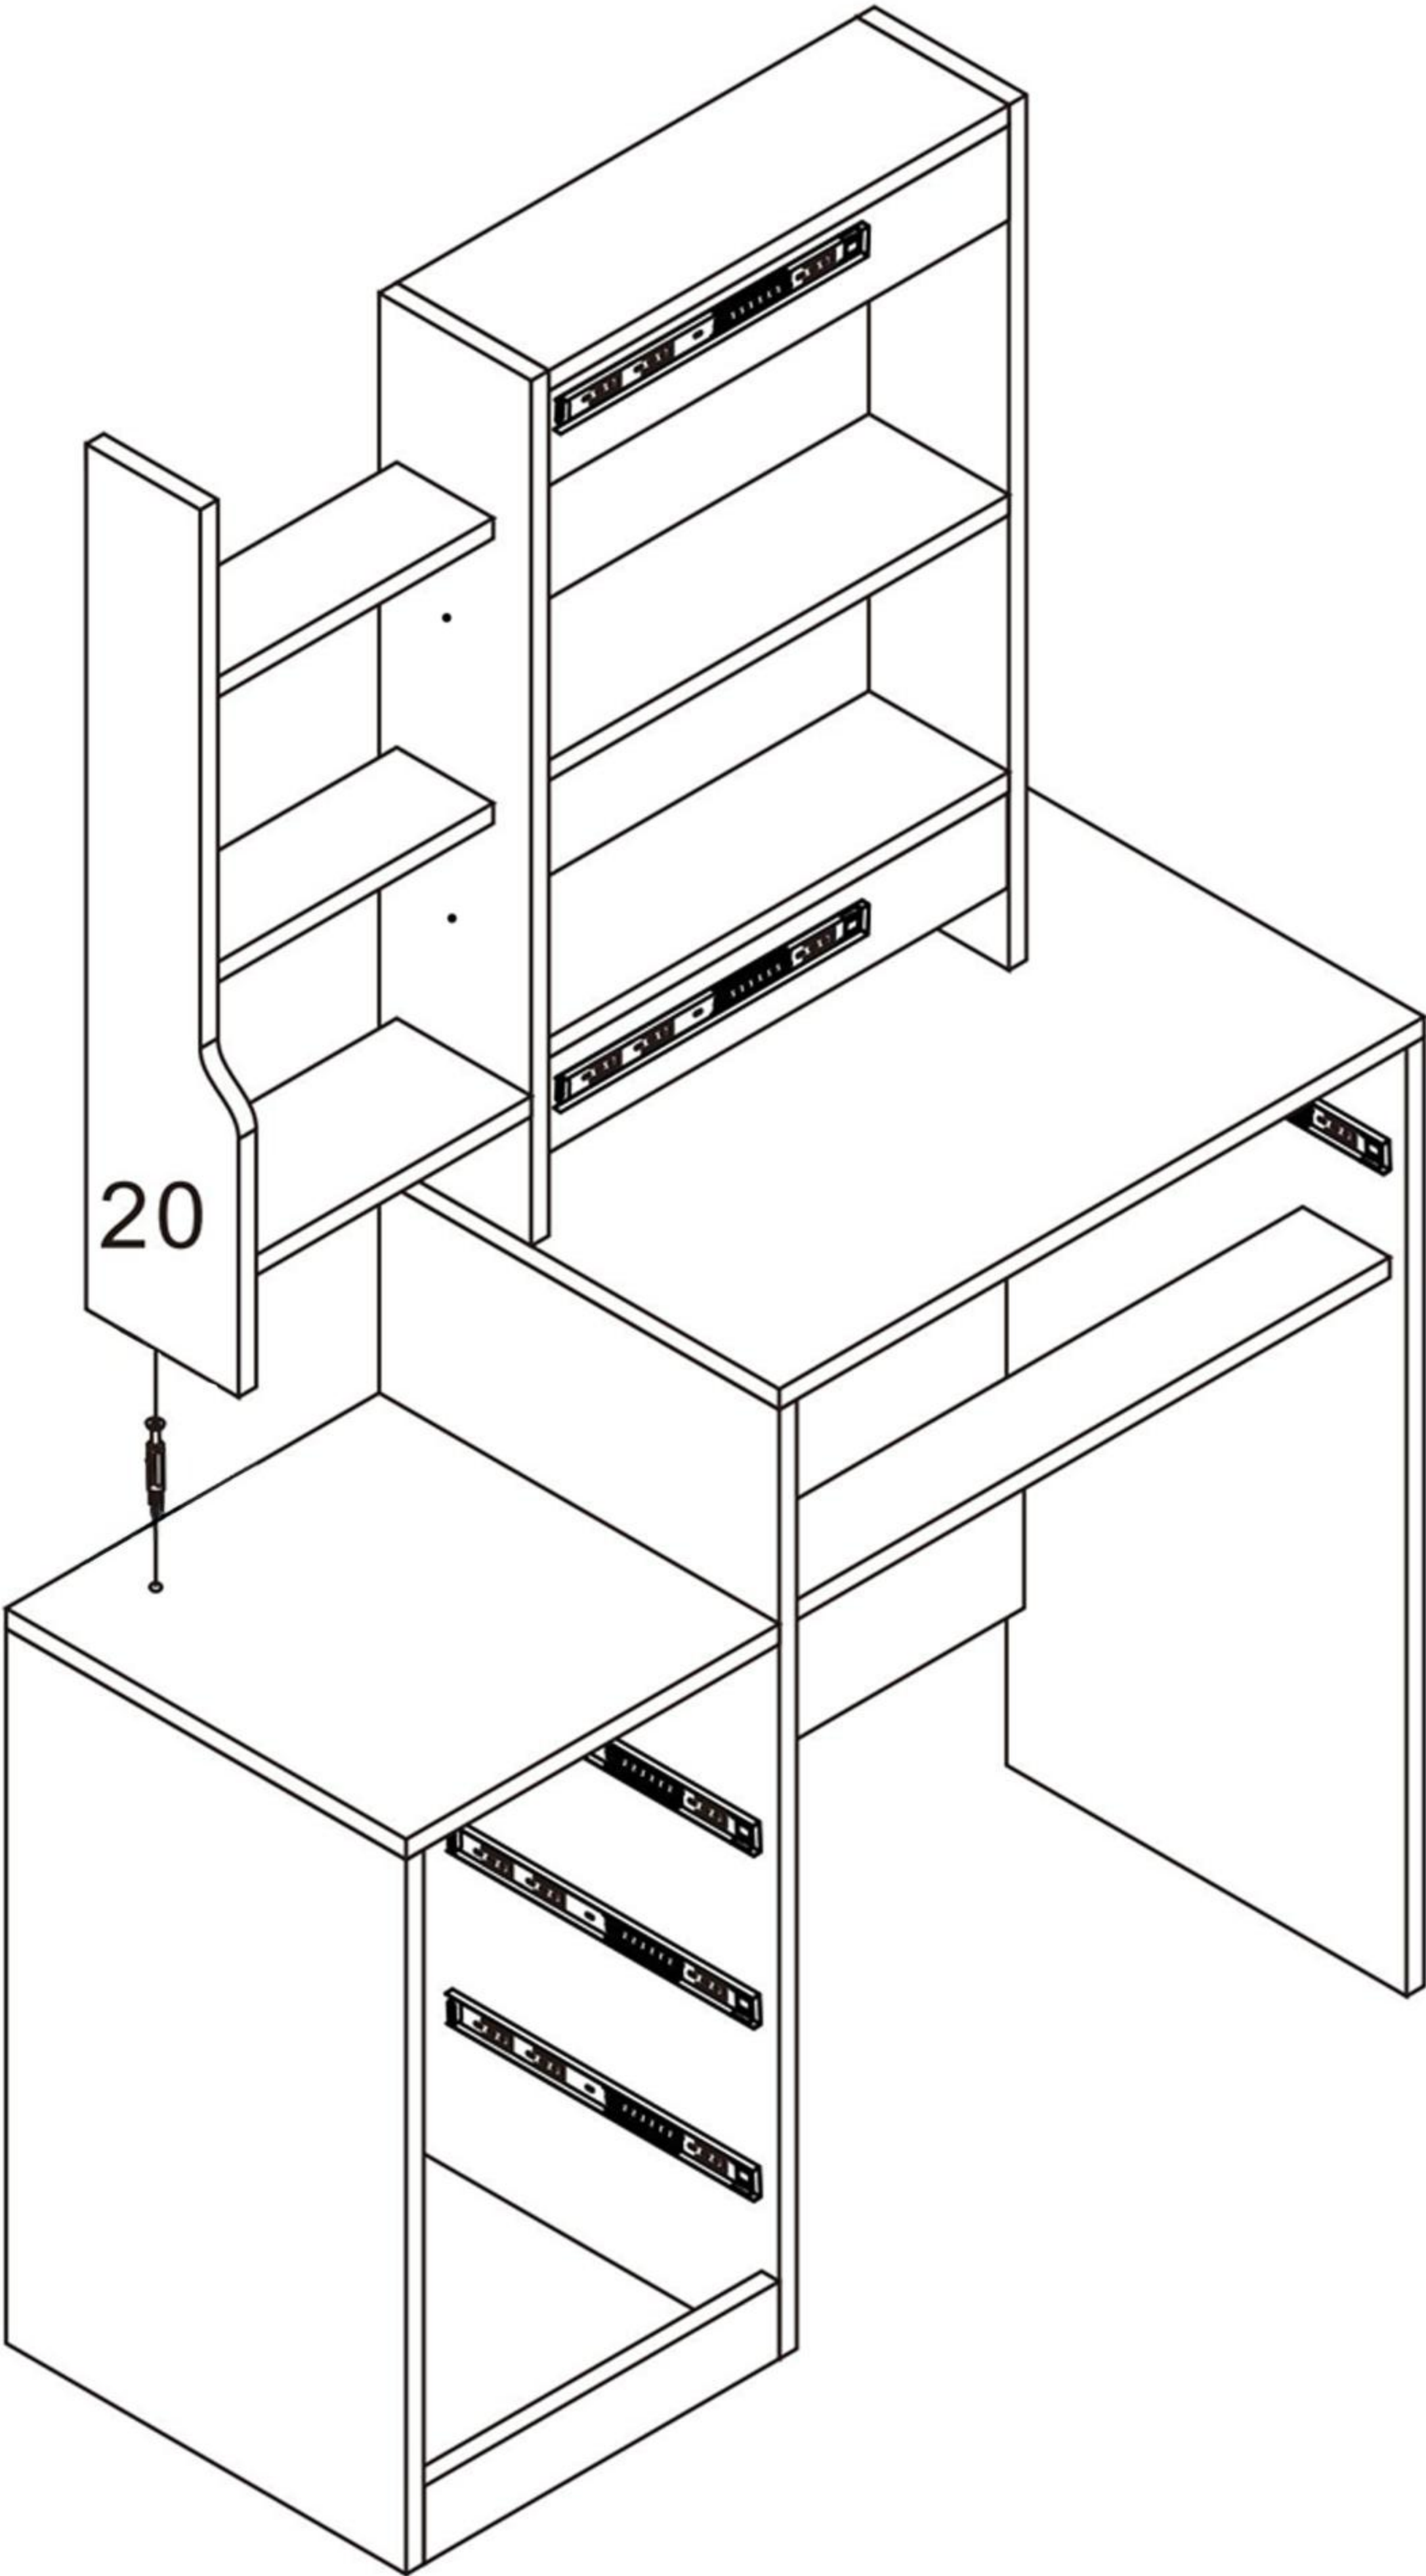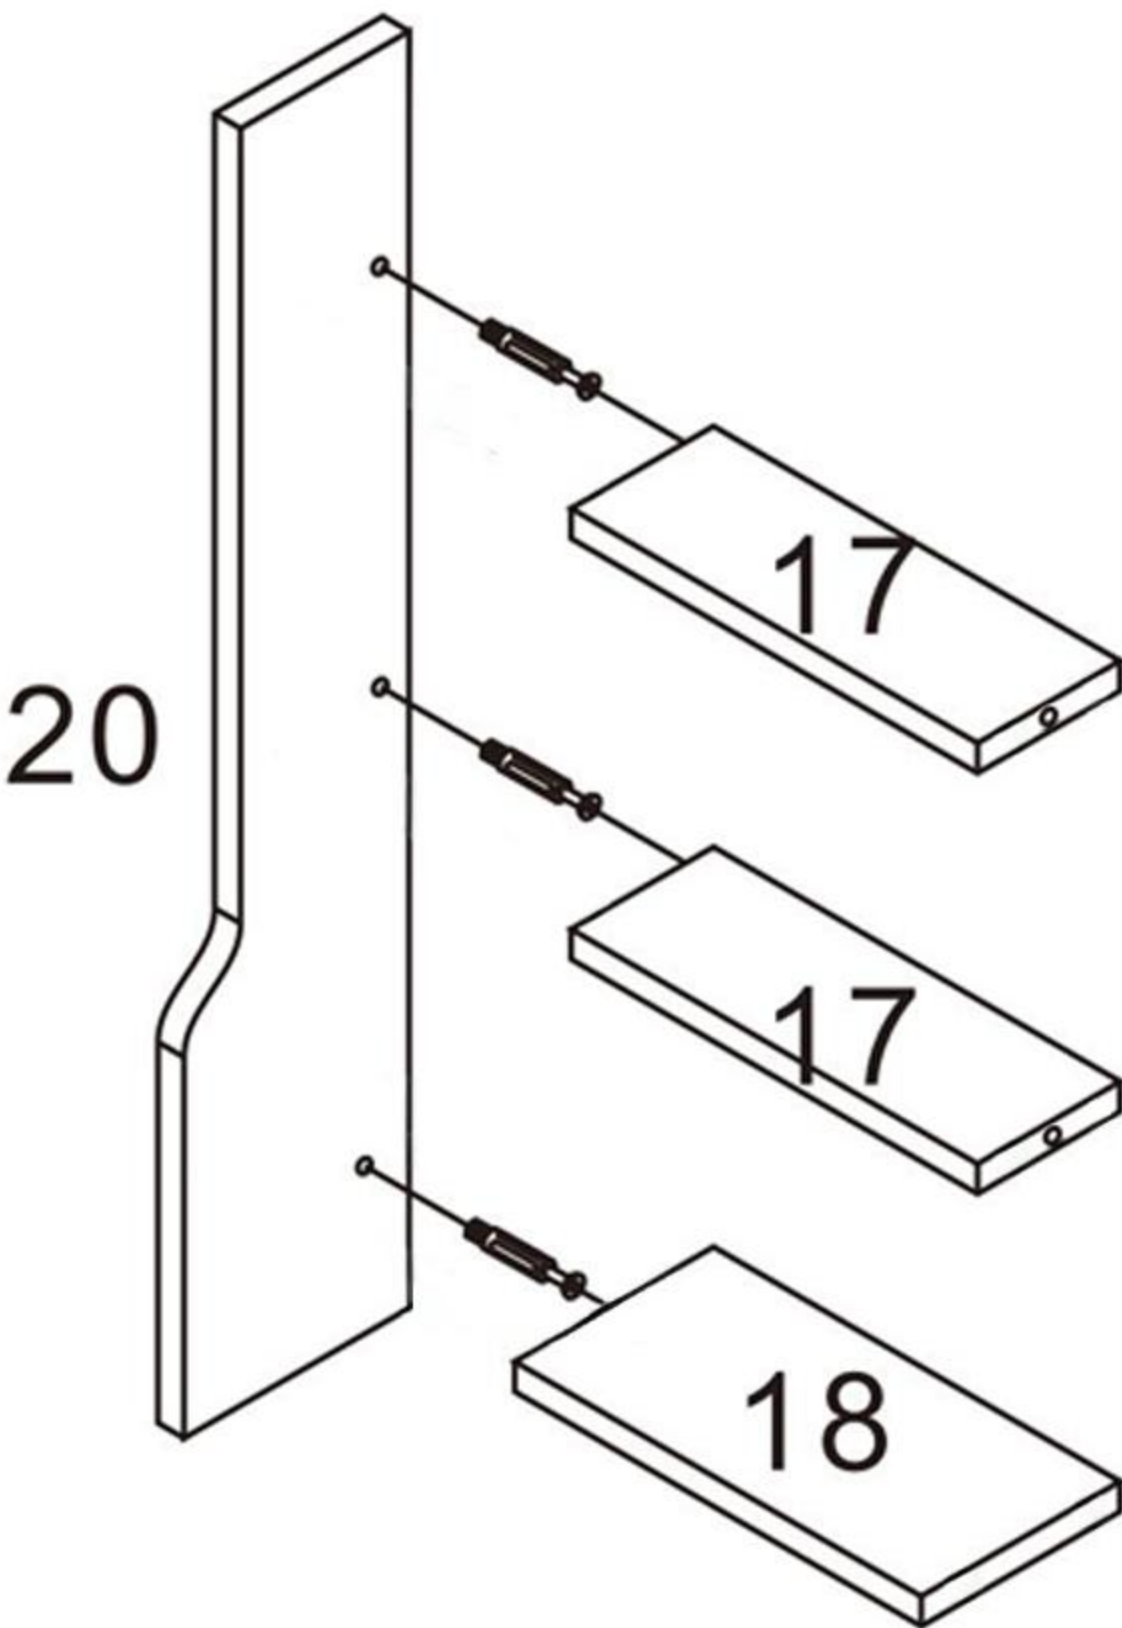

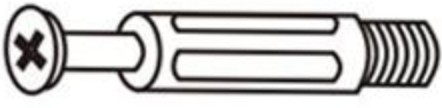A	B
 x14	 x14

Step 13:

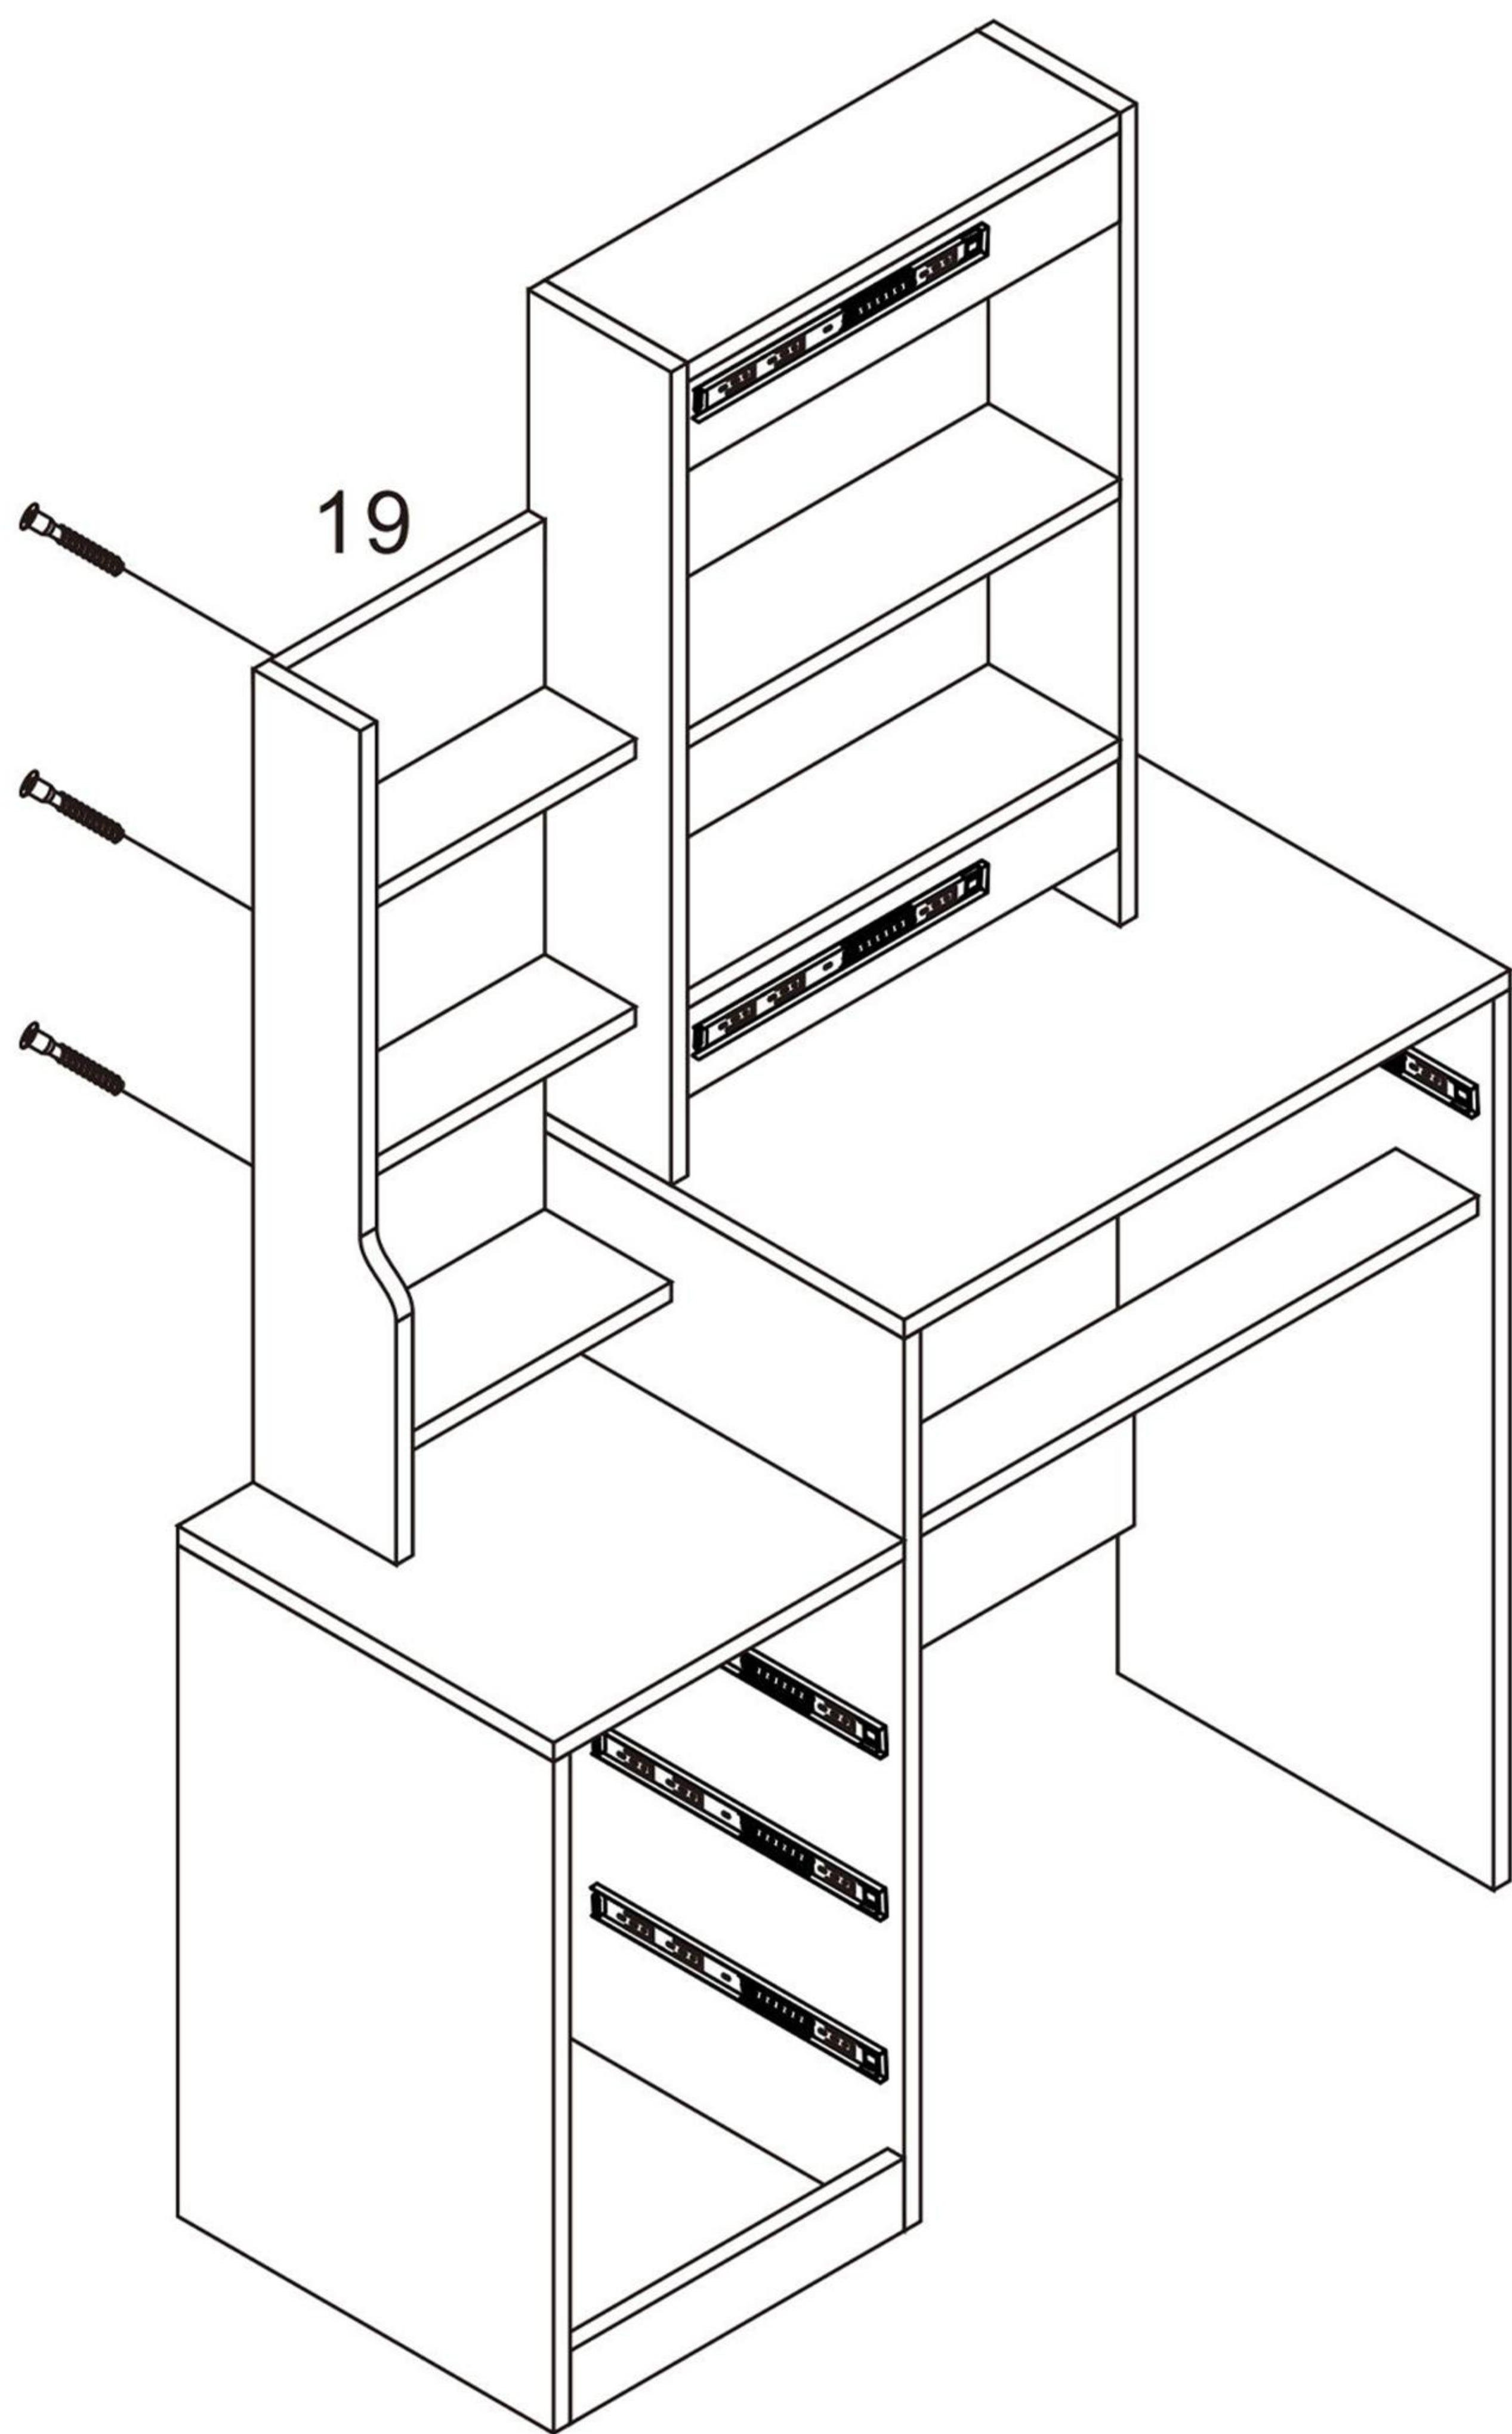



H




x3

Step 14:

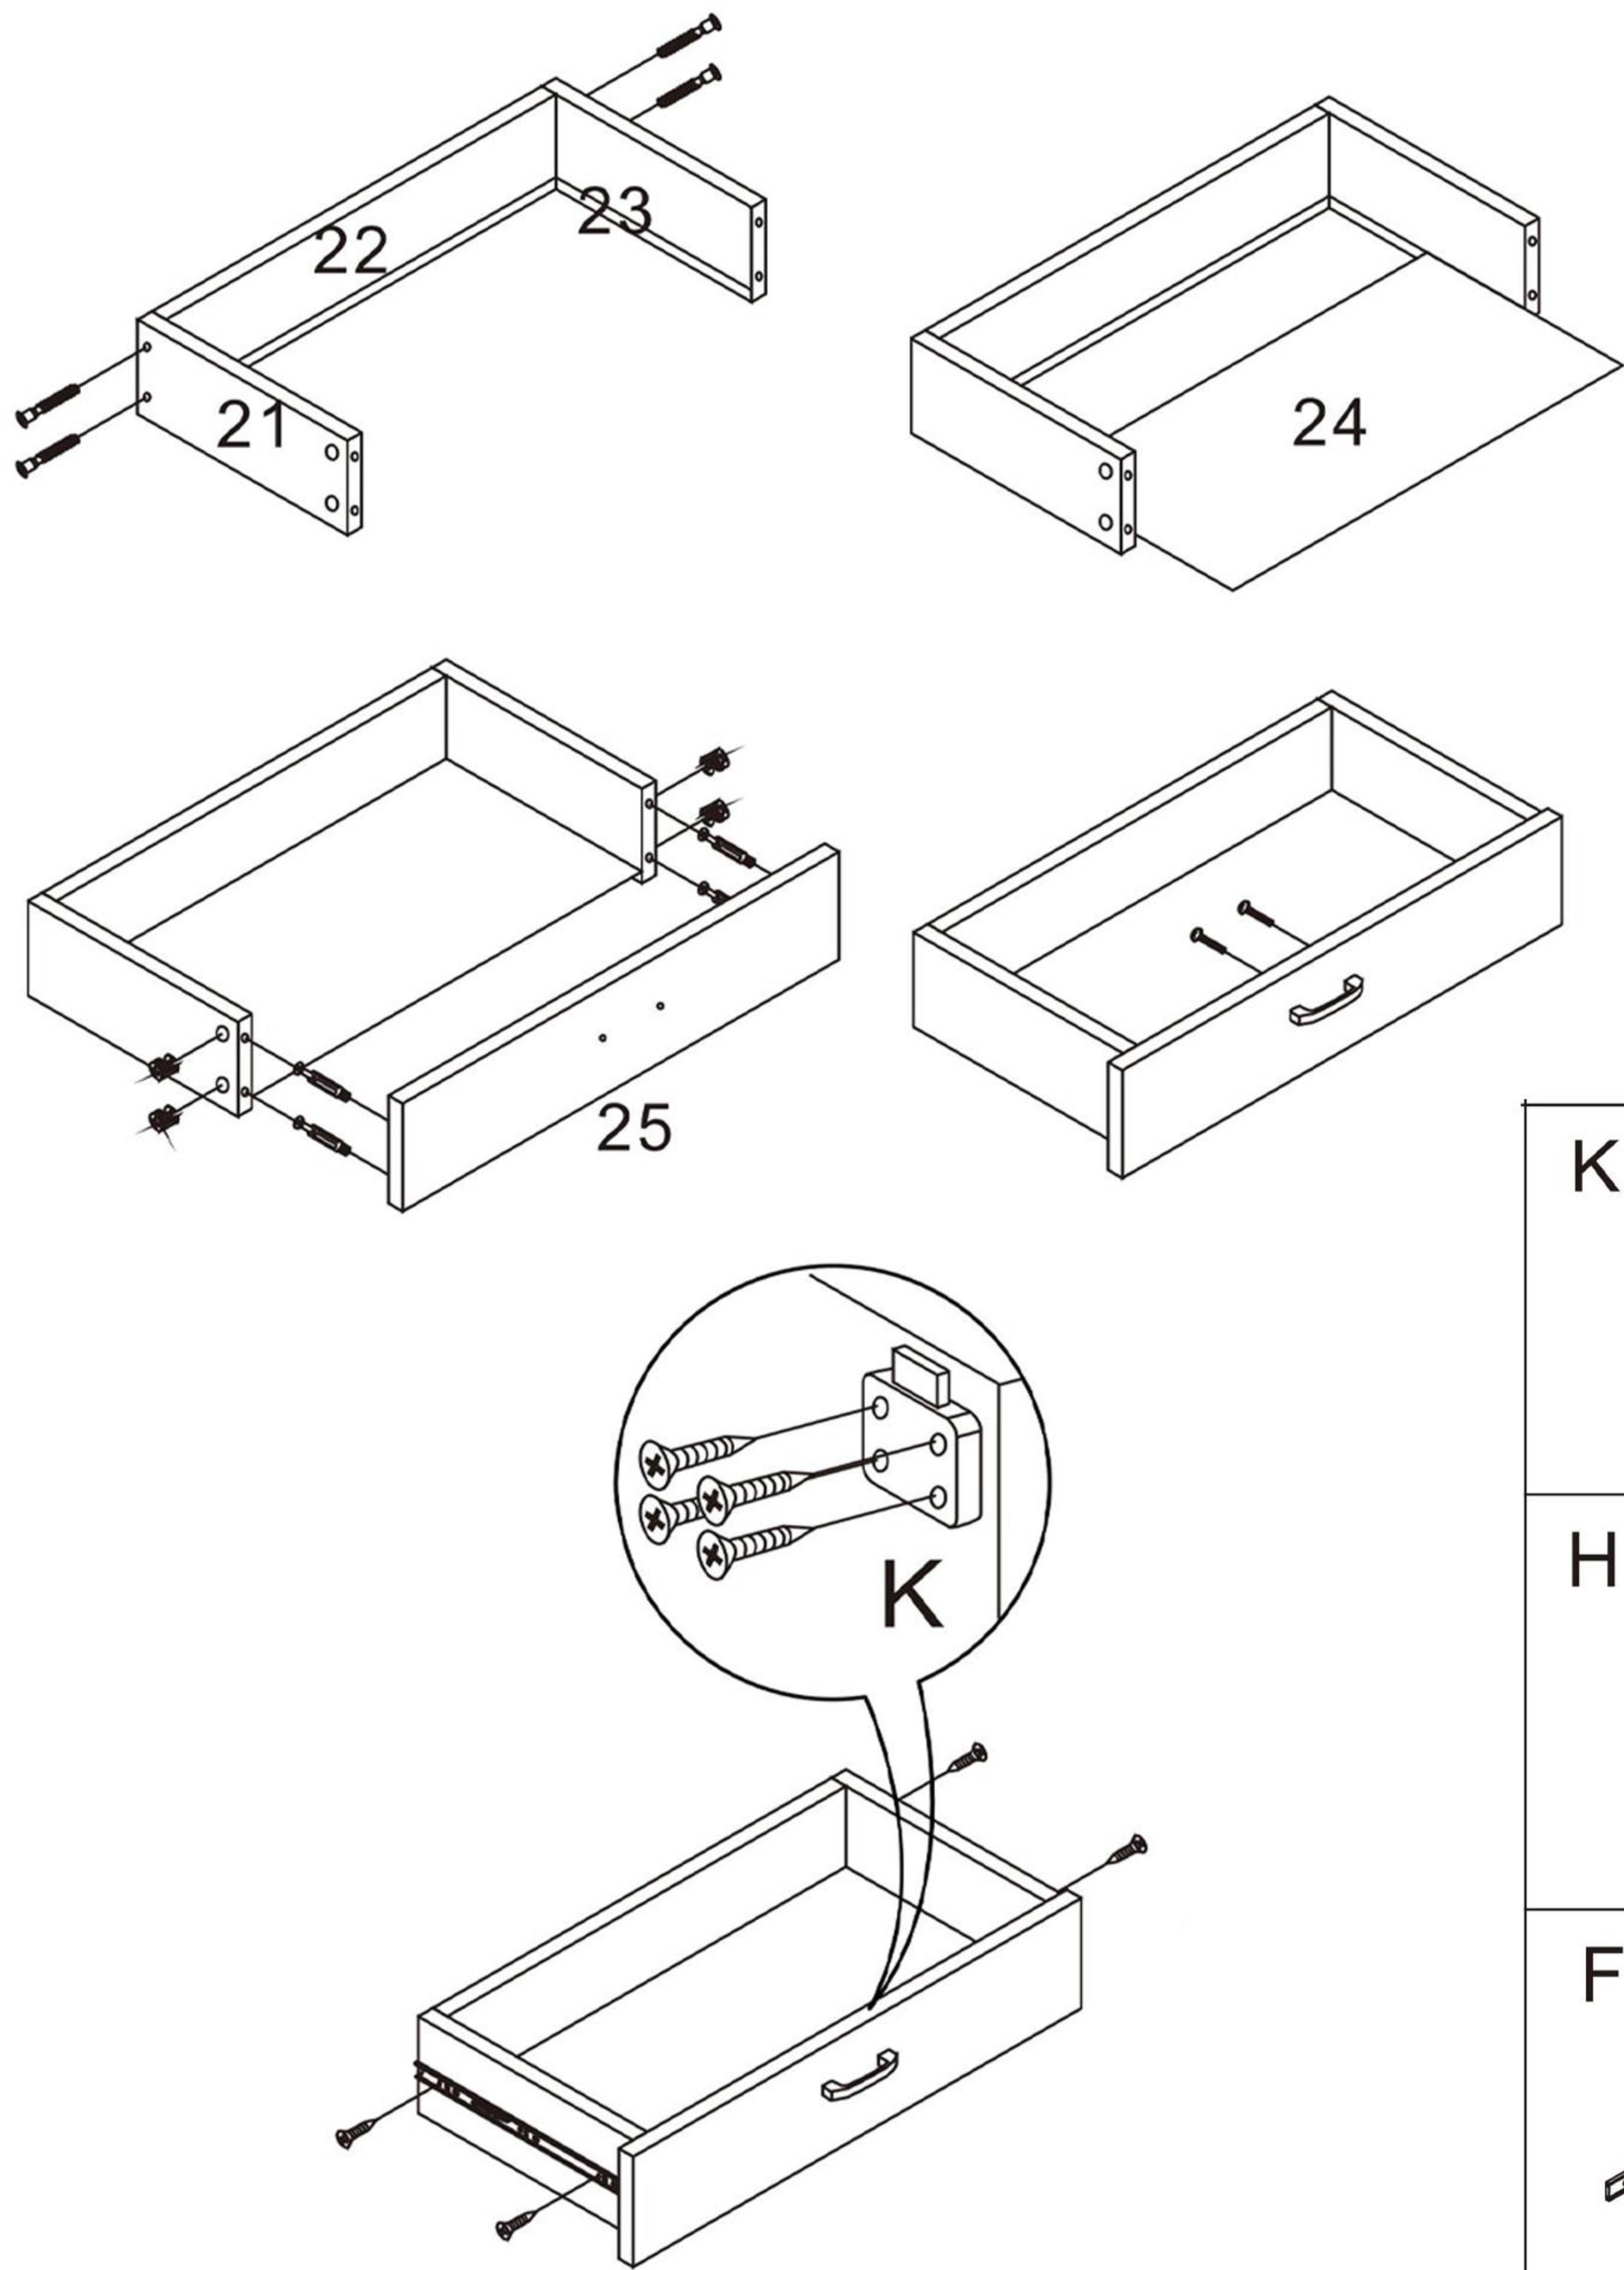



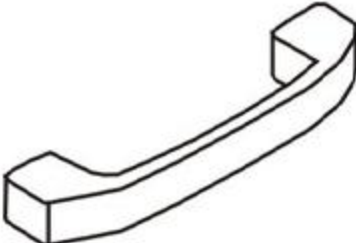
A	B	C	D	E
				
x4	x4	x8	x2	x1

Step 15:

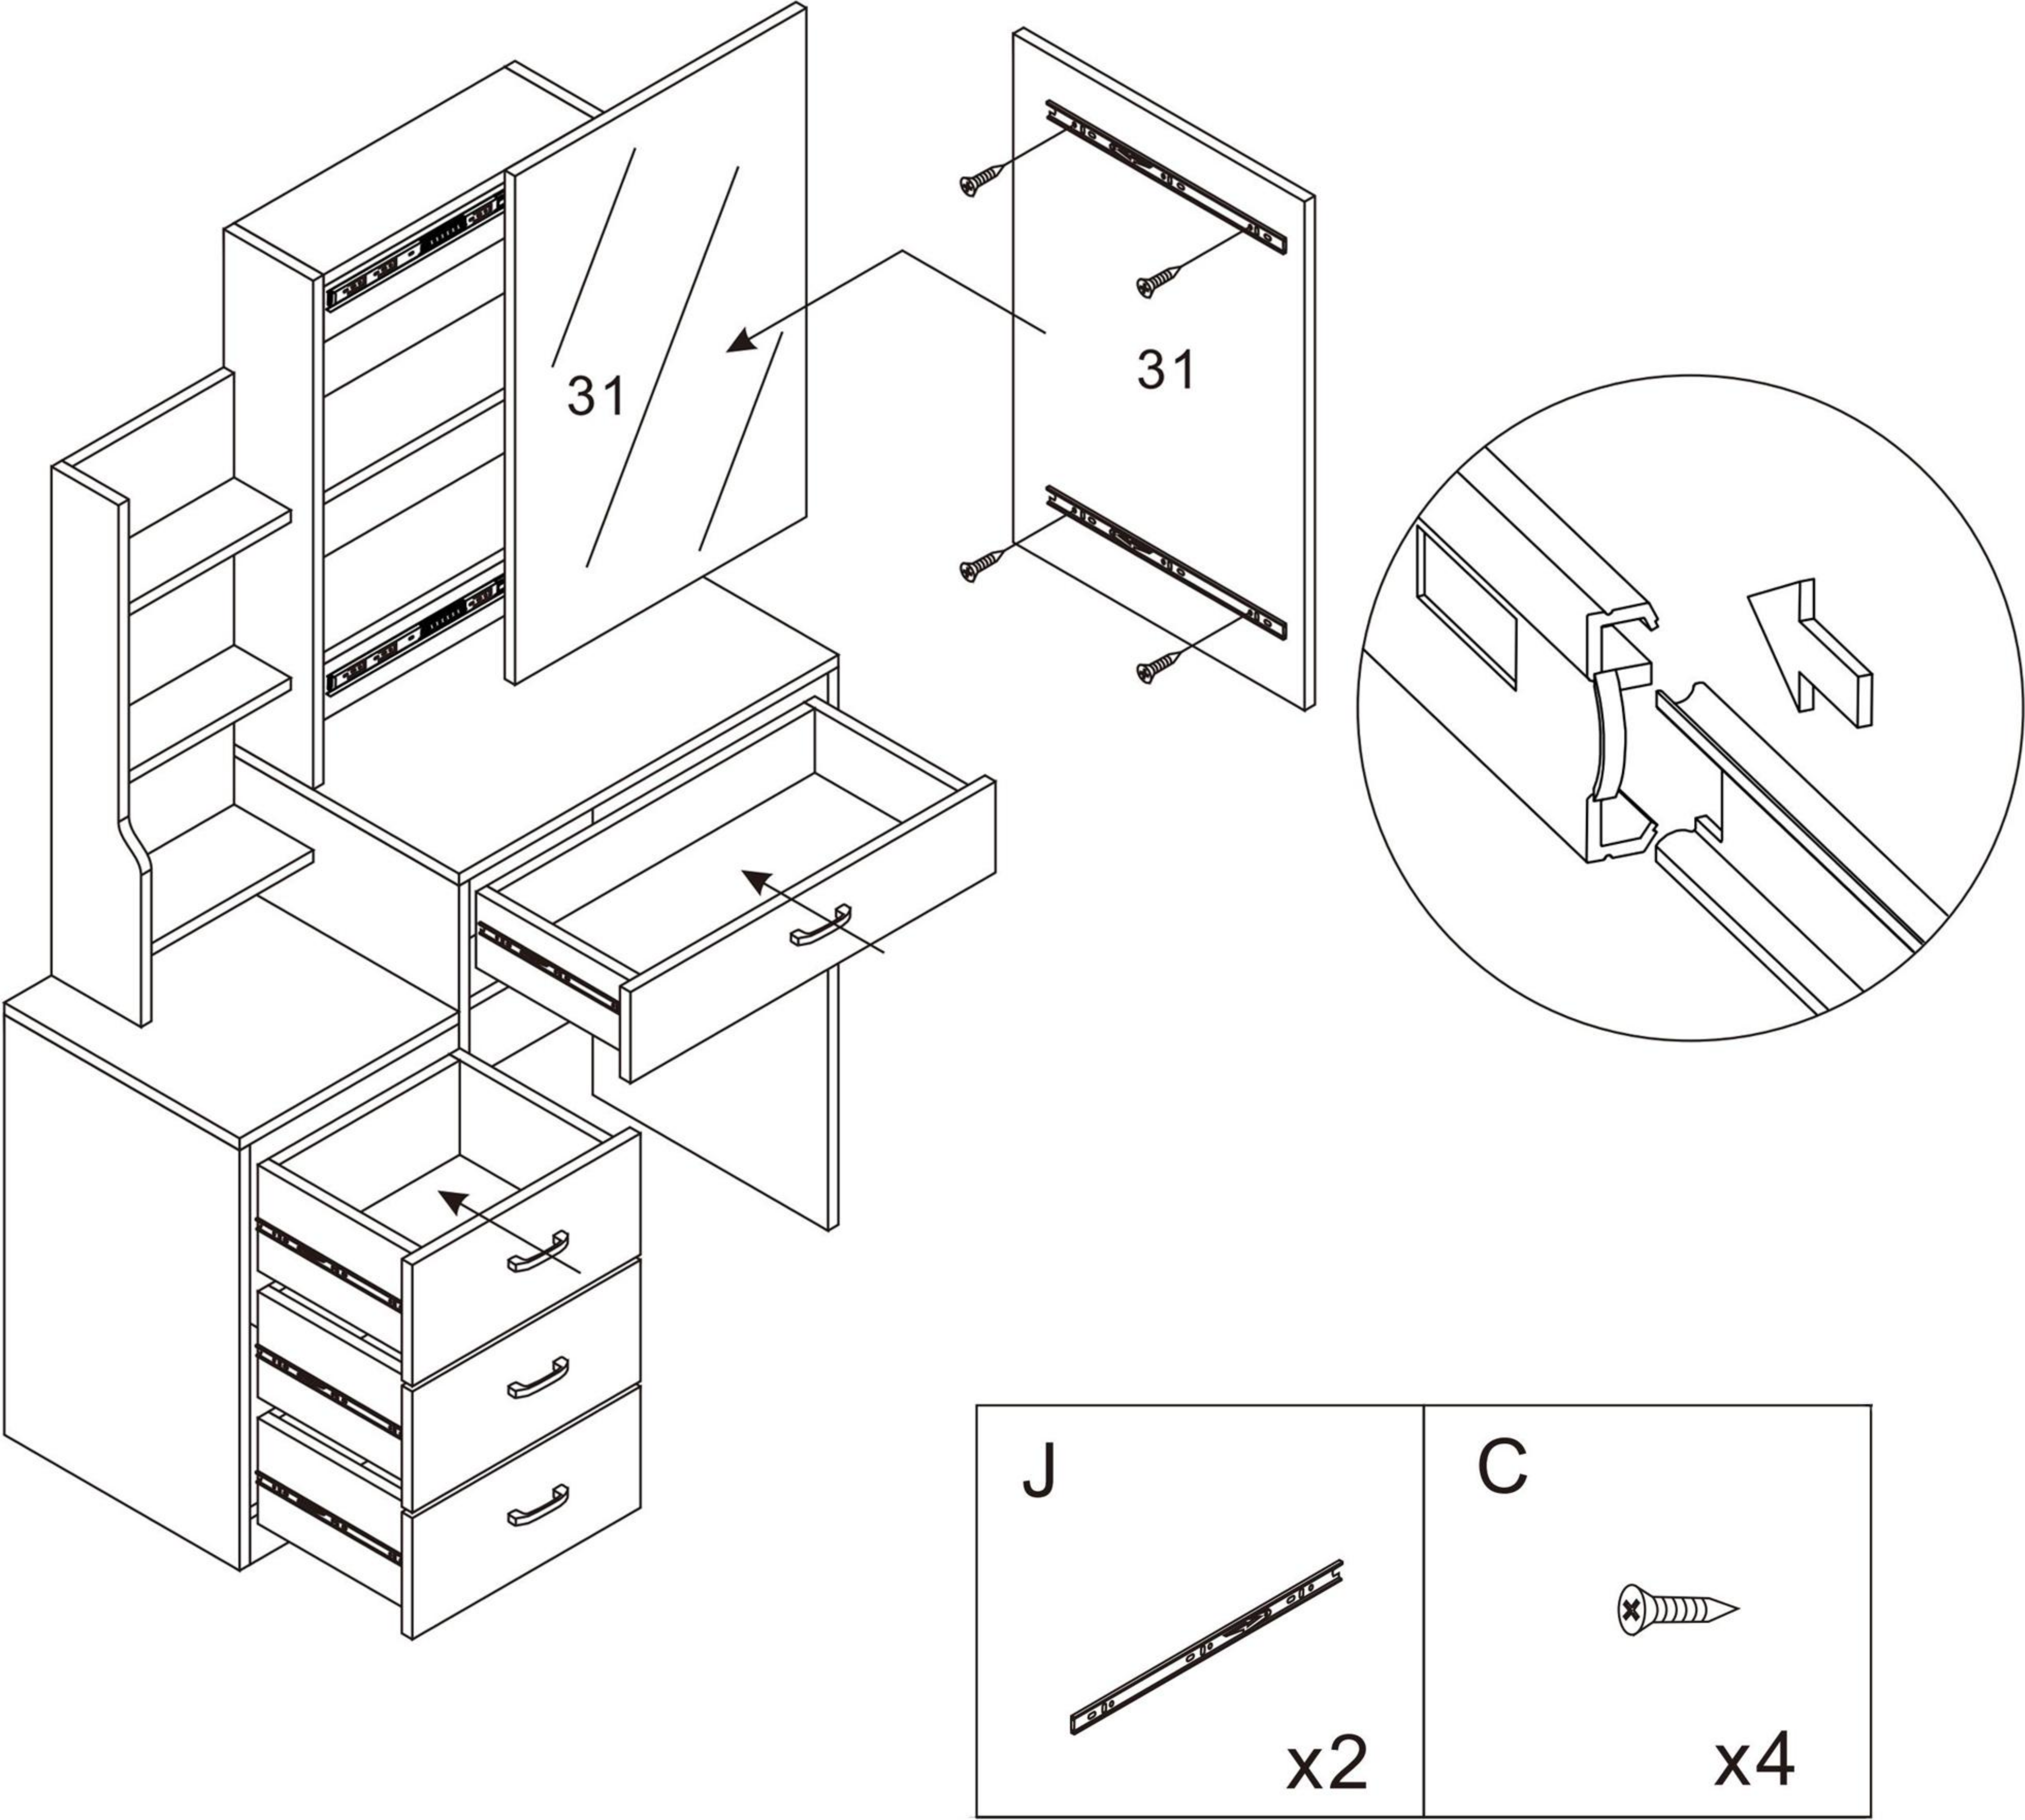

Step 16:

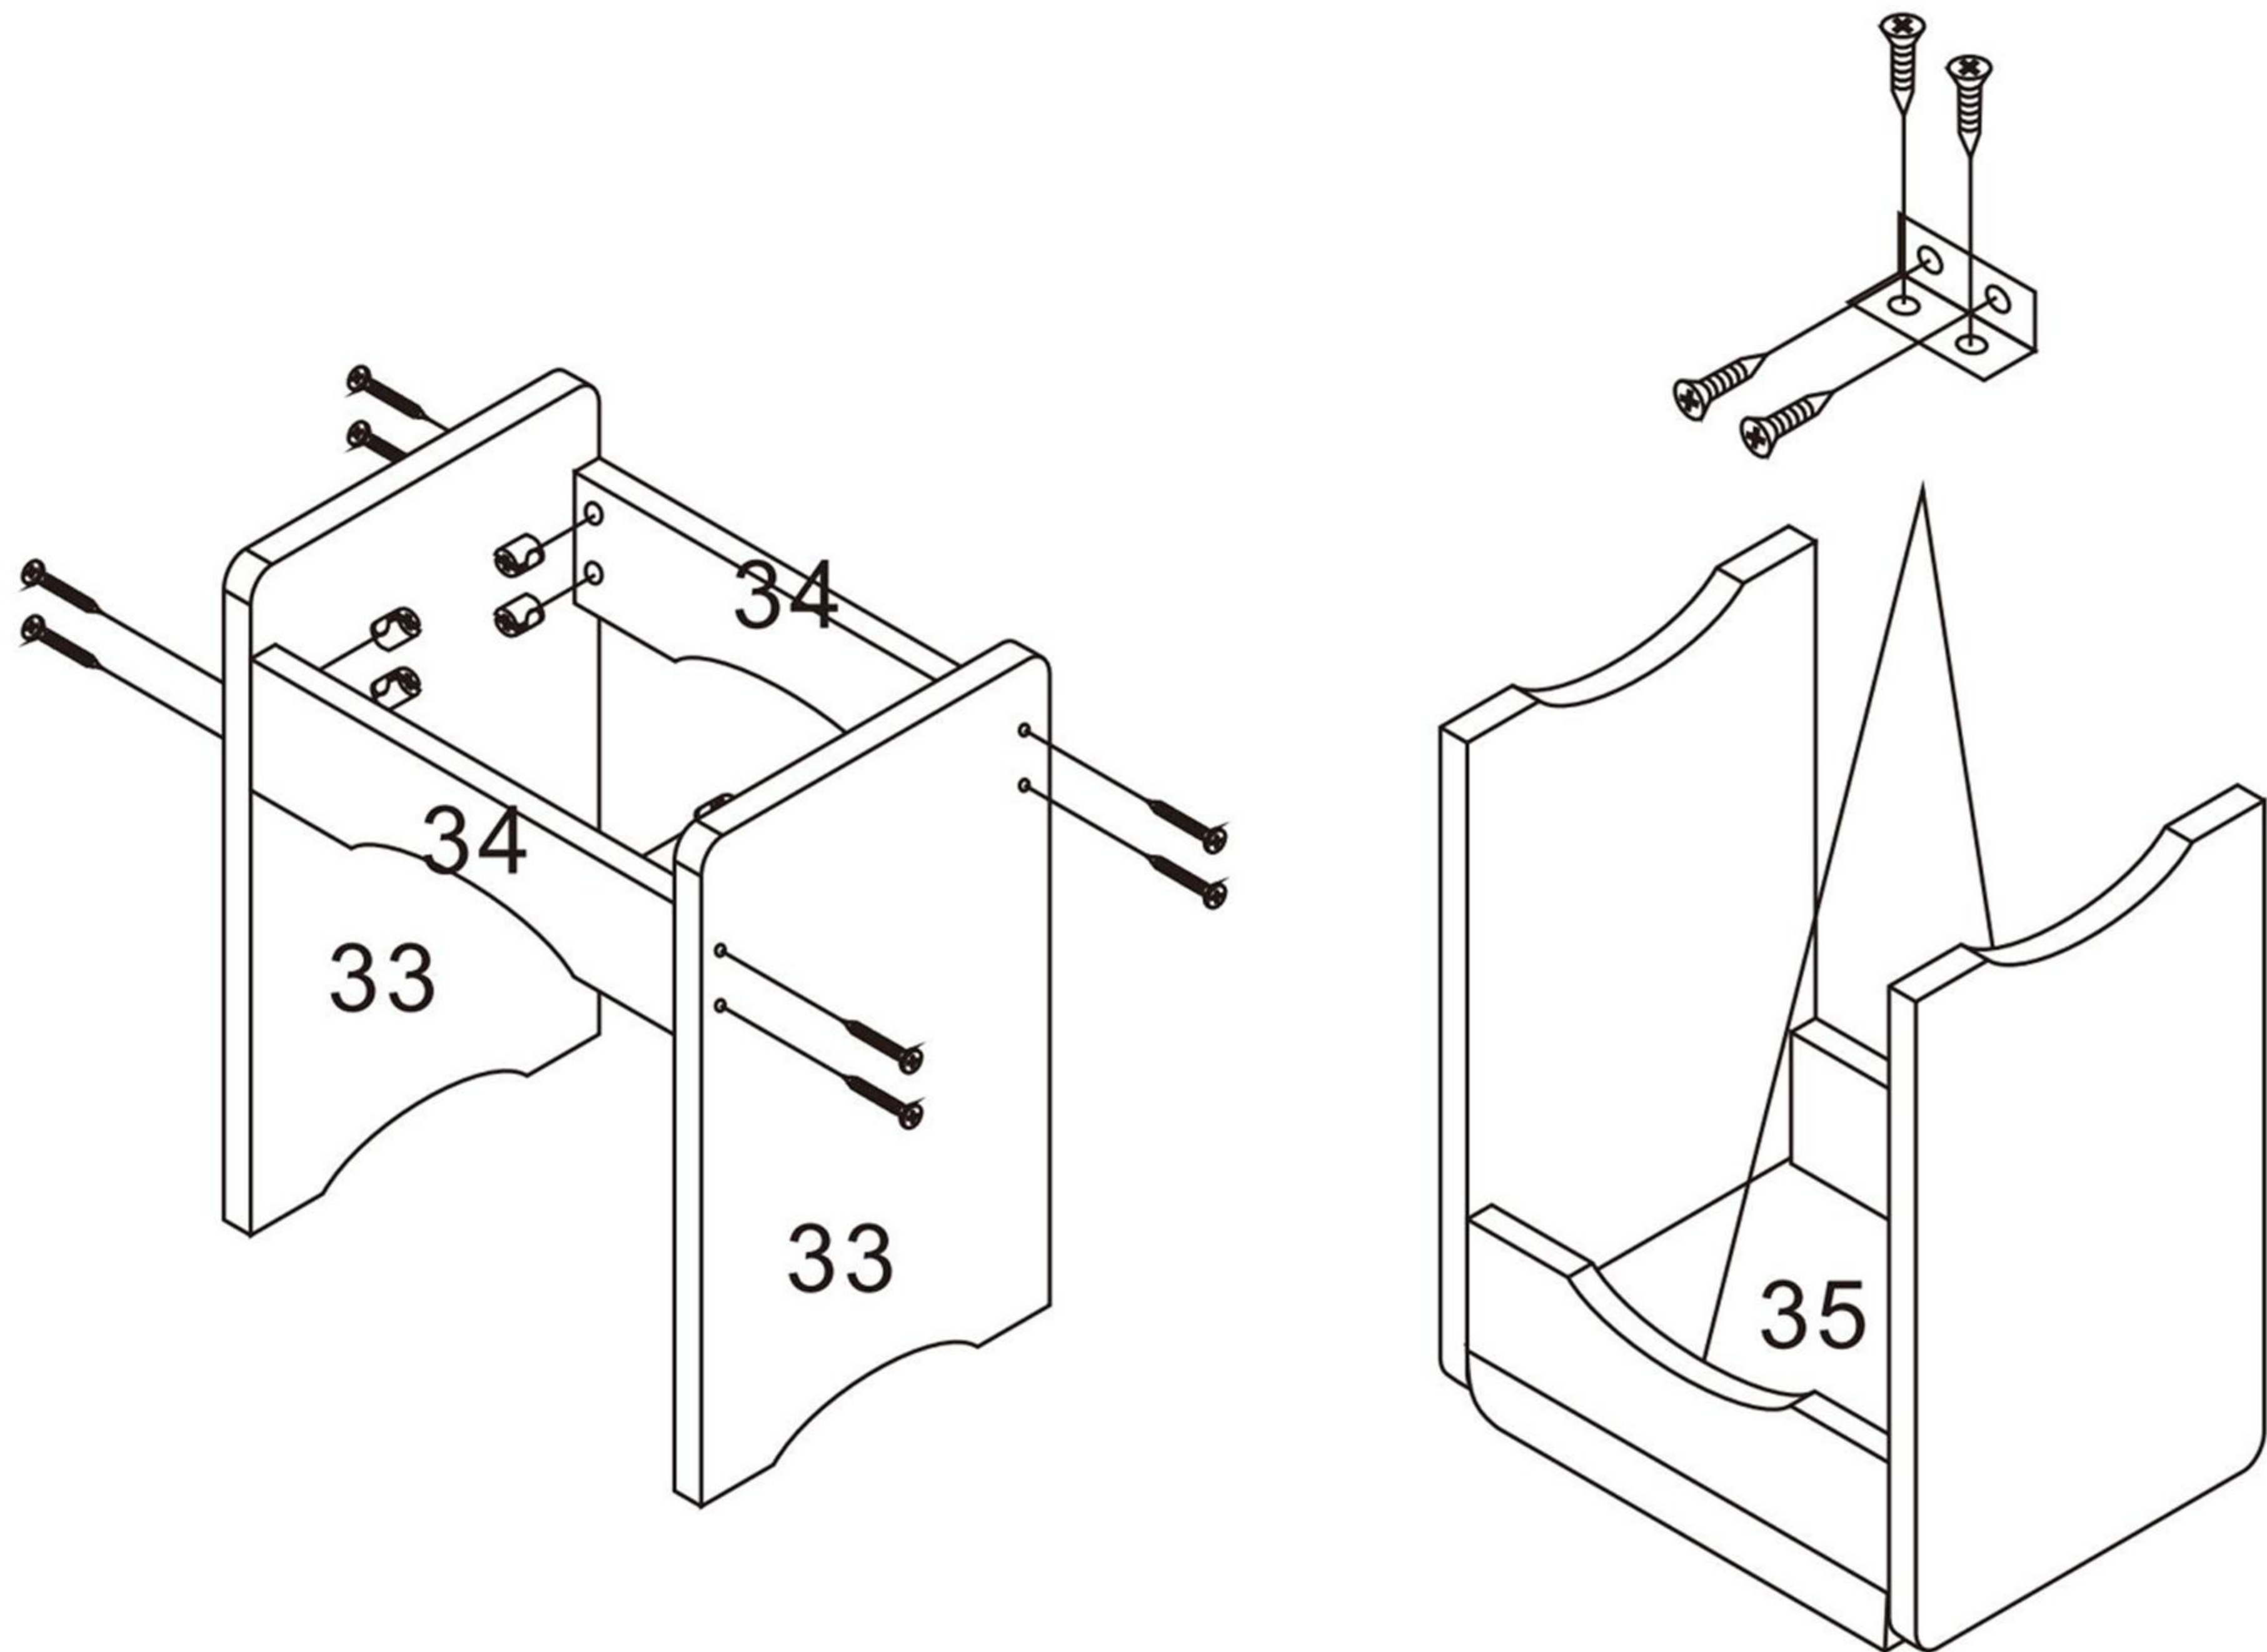

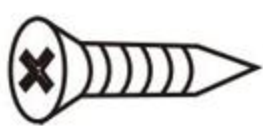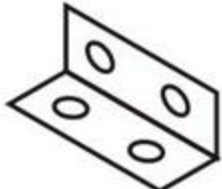C	L	M
		
x8	x8	x2

Installation Finished

